



Parts Manual

Compressor Model

10 / 425-W-CU

LOXAM

Code: A



Ingersoll Rand Company
P.O. Box 868
501 Sanford Ave
Mocksville, NC 27028 USA

Book: 23045438 01/07
Revised (09-12)

Doosan purchased Bobcat Company from Ingersoll-Rand Company in 2007. Any reference to Ingersoll-Rand Company or use of trademarks, service marks, logos, or other proprietary identifying marks belonging to Ingersoll-Rand Company in this manual is historical or nominative in nature, and is not meant to suggest a current affiliation between Ingersoll-Rand Company and Doosan Company or the products of either.

TABLE OF CONTENTS

Parts Manual

TITLE	PAGE
PARTS LIST - FRAME ASSEMBLY	7
Frame Assembly	8
Running Gear Assembly	9
Running Gear Assembly	10
Running Gear Assembly	11
Steerman Running Gear Assembly	12
Steerman Running Gear Assembly	13
Steerman Running Gear Assembly	14
Engine Assembly	15
Exhaust Assembly	16
Cold Start	17
Cold Start	18
Replenishment Oil Tank Piping	19
Air End Assembly	20
Air End Coupling and Mounting	21
Air End Inlet Valve	22
Air End - 1st Stage Inlet	23
Air End Tubing and Fittings	24
Air End Tubing and Fittings	25
Air End Tubing and Fittings	26
Load Cylinder Piping (Optional Quick Response)	27
Load Cylinder Piping (Standard)	28
Air End Breather Assembly	29
Air End Tubings and Fittings	30
Air End Piping Assembly	31
Air End Piping	33
Air End Piping	34
Air End Piping	35
Air End Piping	37
Air End Piping	38
Air End Piping	40
Condensate Burn-Off Piping	42
Air End Cooling Assembly	43
Air End Coolers	44
Air End Coolers	45
Engine Radiator	46
Engine Cooling Piping	47
Engine Charge Air Cooler and Mounting	48
Air Intake Assembly	50
Engine Air Intake	51
Engine Air Intake	52
Air End Air Intake	53
Air Intake Acoustic Assembly	54
Engine Air Intake Acoustics	55
Air End Air Intake Acoustics	56
Fuel Tank Assembly	57
Fuel Tank	58
Fuel Tank	59
Fuel Tank Filler	60
Fuel Tank	61
Fuel Tank	62
Fuel Piping	63
Fuel Piping	64
Water Filter Assembly	65

TABLE OF CONTENTS

Parts Manual

TITLE	PAGE
Hydraulic Fan Assembly	66
Hydraulic Fan Assembly	67
Hydraulic Tank Assembly	68
Hydraulic Piping	69
Hydraulic Piping	71
Battery and Mounting	72
Instrument / Control Panel Assembly	73
Instrument / Control Panel Mounting	74
Instrument / Control Panel Mounting	75
Instrument / Control Panel Mounting	76
Controller Assembly	77
Electrical Components Location	78
Electrical Components Location	79
Electrical Components Location	80
Electrical Components Location	81
Electrical Components Location	82
Electrical Components Location	83
Electrical Components Location	83
Electrical Components Location	85
Control Panel Located Devices	86
Enclosure Located Devices	87
Hydraulic Tank Located Devices	88
Engine Located Devices	89
Radiator Located Devices	90
Air End Located Devices	92
Cooler Located Devices	94
Frame Located Devices	96
Frame Located Devices	97
Frame Located Devices	98
Frame Located Devices	99
Enclosure Top Panels	100
Enclosure Front Panels	101
Enclosure Side Panels	102
Enclosure Rear Panels	103
Enclosure Side Panels	104
Enclosure Internal Panels	105
Side Foam	106
Side Foam	107
Front and Rear Foam	108
Top Foam	109
Inside Baffle Foam	110
Safety Decal Location	111
Decal Location	112
Exterior Decal Location	113
Decal Location	114

SCHEMATICS 115

NHP1500 Control System	117
Schematic	118
Schematic	119
Control Panel	120
J1939 Network Cable	121
Control Panel Harness	122

TABLE OF CONTENTS
Parts Manual

TITLE	PAGE
Fuse Box Harness	123

*****Always use Ingersoll Rand Replacement parts!*****



General Information

General Information

General

This publication, which contains an illustrated parts breakdown, has been prepared as an aid in locating those parts which may be required in the maintenance of the unit. All of the compressor parts, listed in the parts breakdown, are manufactured with the same precision as the original equipment. For the greatest protection always insist on genuine Ingersoll Rand Company parts for your compressor.

NOTICE

Ingersoll Rand Company can bear no responsibility for injury or damages resulting directly from the use of non-approved repair parts.

Ingersoll Rand Company service facilities and parts are available worldwide. There are Ingersoll- Rand Company Construction Equipment Group Sales Offices and authorized distributors located in the principal cities of the United States. In Canada our customers are serviced by the Canadian Ingersoll Rand Company, Limited. There are also Ingersoll Rand International autonomous companies and authorized distributors located in the principal cities throughout the free world.

Special order parts may not be included in this manual. Contact the Mocksville Parts Department with the unit serial number for assistance with these special parts.

Description

illustrated parts breakdown illustrates and lists the assemblies, subassemblies and detailed which make up this particular machine. This the standard models and the more popular that are available.

A series of illustrations show each part distinctly and in cation relative to the other parts in the assembly.

A series of illustrations show each part distinctly and in location relative to the other parts in the assembly. The part number, the description of the part and the quantity of parts required are shown on each illustration or on adjacent page. The quantities specified are the number of parts used per one assembly and are not necessarily the total number of parts used in the machine. Where no quantity is the is assumed to be one.

Each description of a part is based upon the "noun first" method, i.e., the identifying noun or item name is always the first part of the description. The noun name is generally followed by a single descriptive modifier. The descriptive modifier may be followed by words or abbreviations such as upper, lower, inner, outer, front, rear, RH, LH, etc. when they are essential.

In referring to the rear, the front or to either side of the unit, always consider the drawbar end of the unit as the front. Standing at the rear of the unit facing the drawbar (front) will determine the right and left sides.

Fasteners

Both SAE/inch, Isometric hardware have been used in the design and assembly of these units. In the disassembly and reassembly of parts, extreme care must be taken to avoid damaging threads by the use of wrong fasteners. In order to clarify the proper usage and for exact replacement parts, all standard fasteners have been identified by part number, size and description. This will enable a customer to obtain fasteners locally rather than ordering from the factory. These parts are identified in tables that will be found at the rear of the parts illustrations. Any fastener that has not been identified by both part number and size is a specially engineered part that must be ordered by part number to obtain the exact replacement part.

Markings and Decals

NOTICE

Do not paint over safety warnings or instructional decals. If safety warning decals become illegible, immediately order replacements from the factory.

Part numbers for original individual decals and their mounting locations are shown within Parts List Section. These are available as long as a particular model is in production.

Afterwards, service sets of exterior decals and current production safety warning decals are available. Contact the Product Support Group at Mocksville for your particular needs and availability.

How to Use Parts List

- a. Locate the area or system of the compressor in which the desired part is used and find illustration page number.
- b. Locate the desired part on the illustration by visual identification and make note of part number and description.

How to Order

The satisfactory ordering of parts by a purchaser is greatly dependent upon the proper use of all available information.

In order that all avoidable errors may be eliminated, the following instructions are offered as a guide to the purchaser when ordering replacement parts:

- a. Always specify the model number of the unit as shown on the general data decal attached to the unit.
- b. Always specify the serial number of the unit. **THIS IS IMPORTANT.** The serial number of the unit will be found stamped on a plate attached to the unit. (The serial number on the unit is also permanently stamped in the metal of the frame side rail.)
- c. Always specify the number of the parts list publication.
- d. Always specify the quantity of parts required.
- e. Always specify the part number, as well as the description of the part, or parts, exactly as it is given on the parts list illustration.

In the event parts are being returned to your nearest sales office, autonomous company or authorized distributor, for inspection or repair, it is important to include the serial number of the unit from which the parts were removed.

Air End Exchange Program

 
Ingersoll Rand offers an airend exchange program to benefit users.

Consult the Ingersoll Rand representative for details.




Parts List - Frame Assembly

Frame Assembly

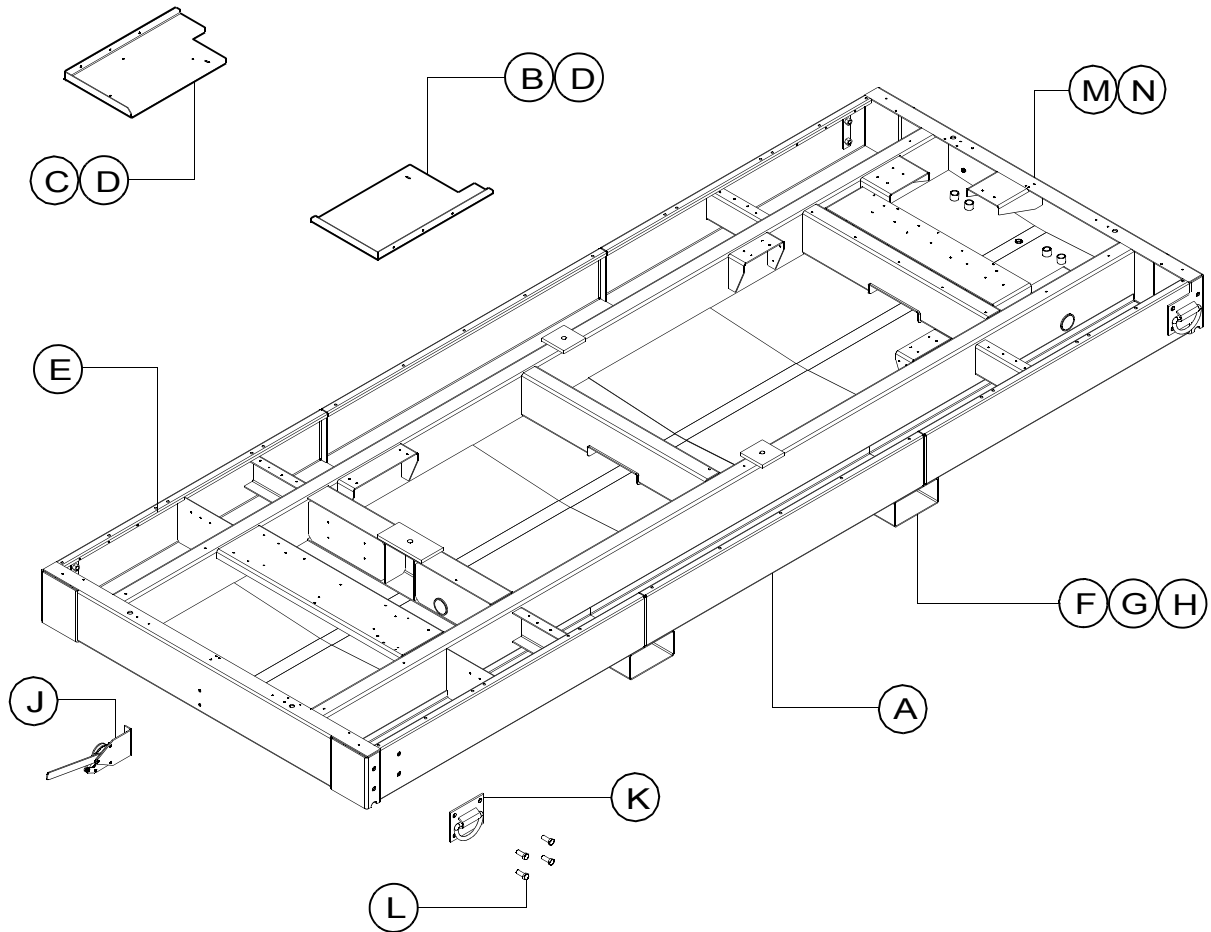


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	22977771	Frame Assembly	1	
B	54631684	Plate, R.H. Cover	1	
C	54631676	Plate, L.H. Cover	1	
D	35279025	Screw	*	
E	54631668	Support, Plate	2	
F	54500798	Tube, Forklift	2	
G	36763670	Screw	8	
H	54676796	Washer	8	
J	22992259	Bracket, Parking Brake Acuator	1	
K	22593412	Weldment, D-ring	4	
L	35375377	Bolt	16	
M	22996227	Ladder, Step	1	
N	36880995	Screw	4	

 Steerman Running Gear Assembly

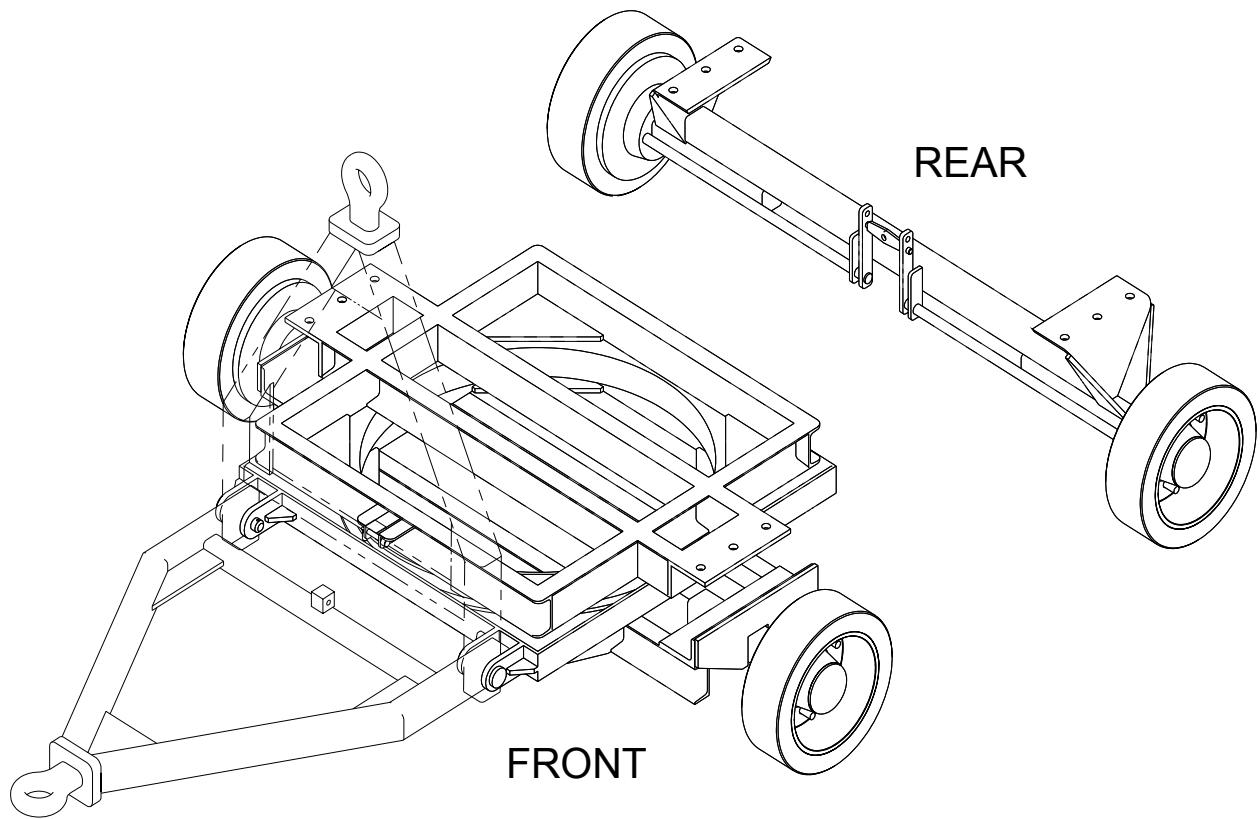


Steerman Running Gear Assembly

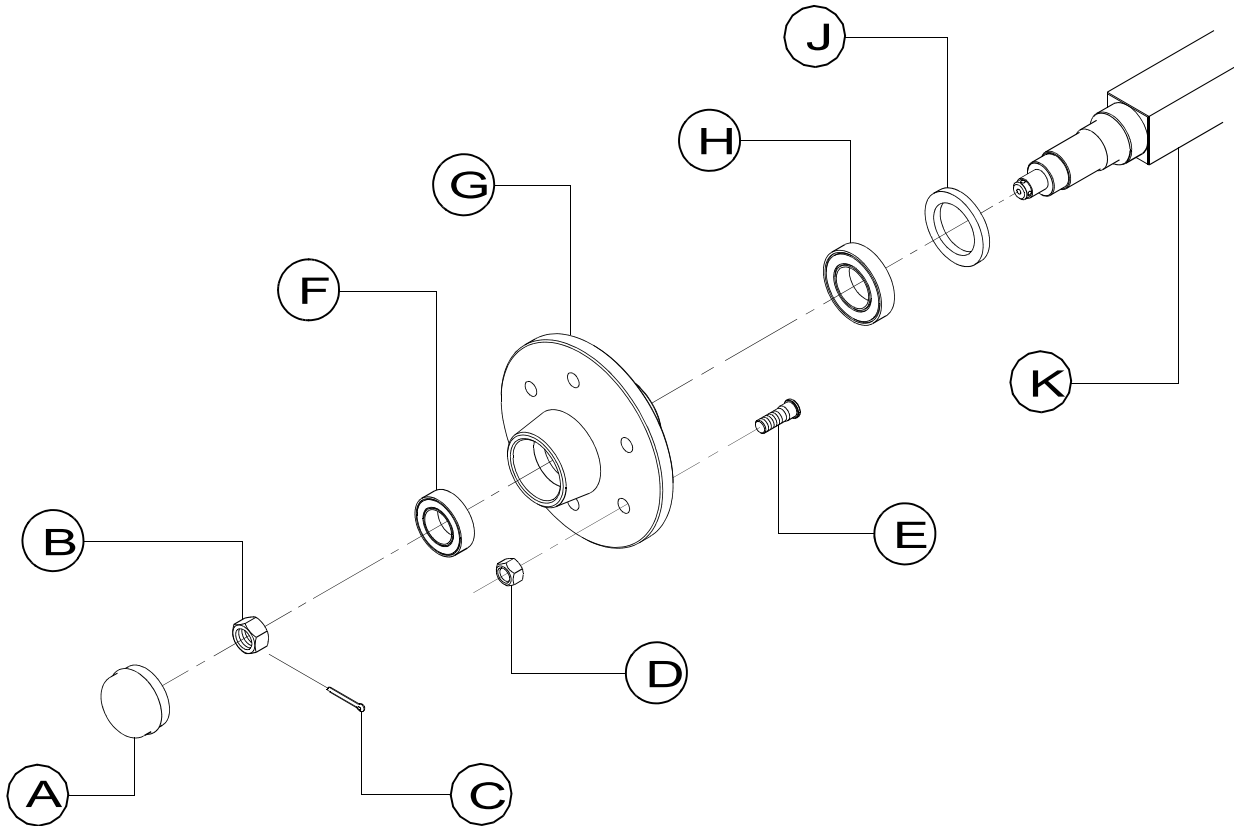 


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
Front Axle Parts List				
A	23021140	Cap, Hub	2	
B	23021157	Nut, Hub	2	
C	23021132	Pin, Cotter	2	
D	23021124	Nut, Wheel	12	
E	23021108	Stud	12	
F	23021165	Bearing, Outer Taper Roller	2	
G	23021116	Hub	2	
H	23021090	Bearing, Inner Roller	2	
J	23021082	Seal, Grease	2	
K	23021074	Axle	1	
	23021181	Wheel and Tire Assembly	2	

 Steerman Running Gear Assembly

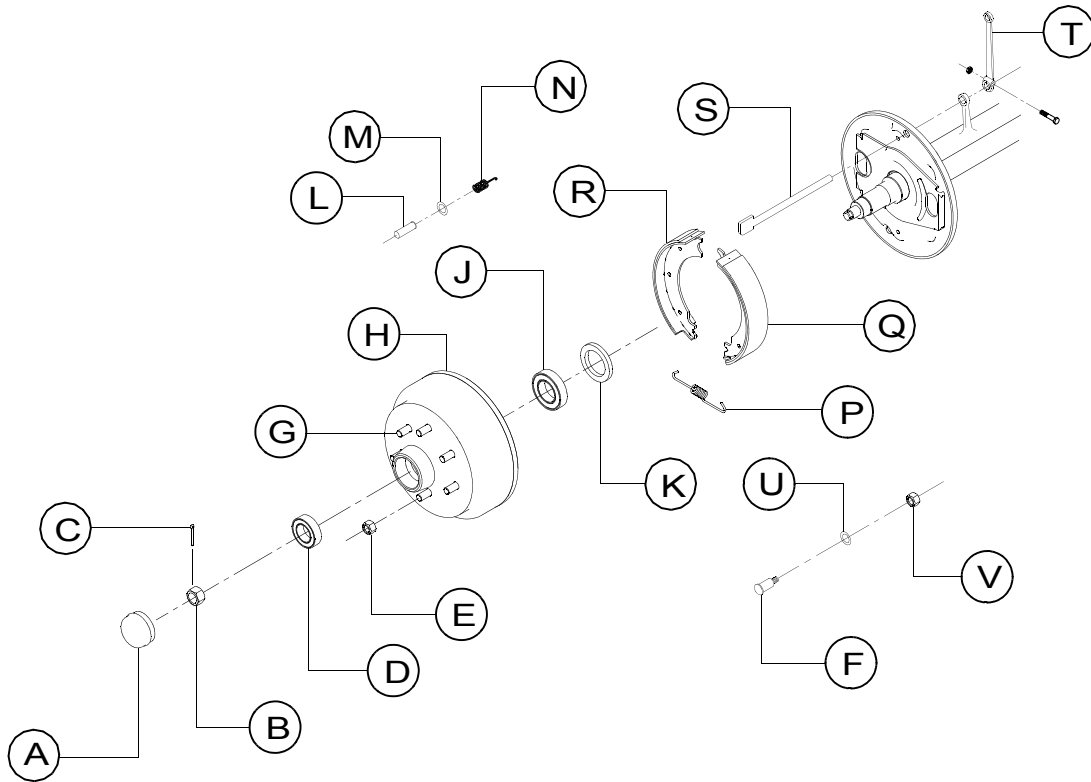


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
Rear Axle Parts List				
A	23021140	Cap, Hub	2	
B	23021157	Nut, Hub	2	
C	23021132	Pin, cotter	2	
D	23021272	Bearing, Outer Taper Roller	2	
E	23021124	Nut, Wheel	12	
F	23021306	Pin, Pivot	2	
G	23021108	Stud, Wheel	12	
H	23021280	Hub, Brake Drum	2	
J	23021264	Bearing, Inner Taper Roller	2	
K	23021298	Seal, Grease	2	
L	23021256	Pin, Brake Shoe Centering	4	
M	23021249	Disc, Retaining	4	
N	23021231	Spring	4	
P	23021314	Spring, Brake Shoe Return	2	
Q	23021215	Shoe, Right Brake	2	
R	23021223	Shoe, Left Brake	2	
S	23021207	Shaft, Cam	2	
T	23021199	Lever, Brake	1	
U	23021322	Washer, Spring	2	
V	23021330	Nut, Pivot Pin	2	
	23021348	Cable, Hand Brake	1	
	23021355	Lever, Hand Brake	1	

 Engine Assembly

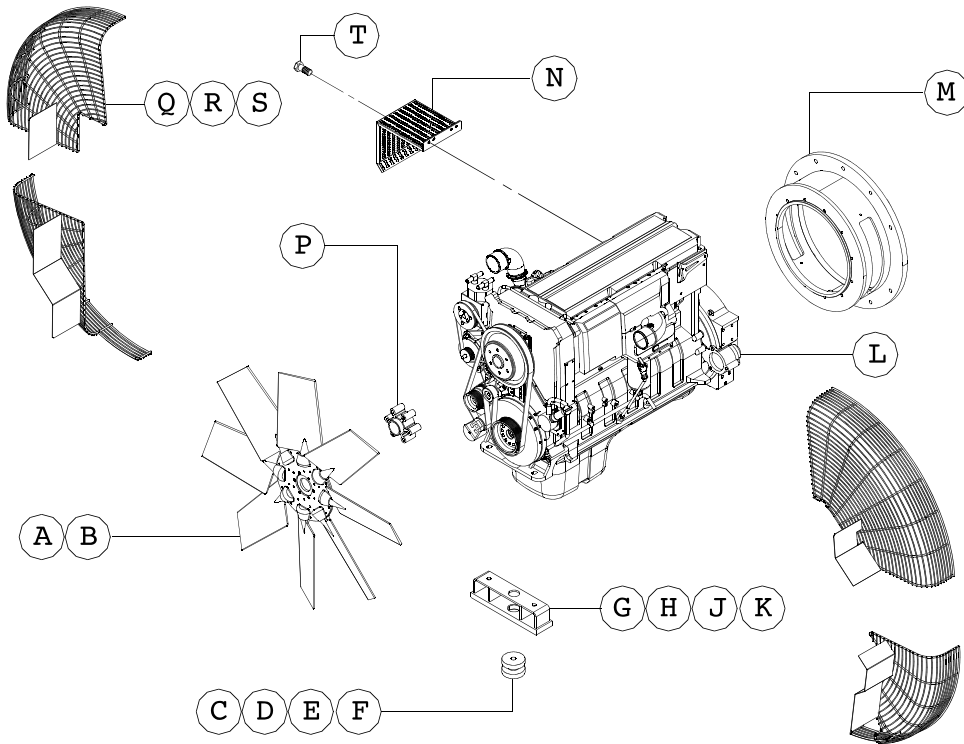


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	36884047	Fan, 54 inch	1	
B	95104303	Screw	6	
C	36921302	Mount, Rubber	1	
D	54610621	Washer	1	
E	54720768	Screw	1	
F	51206787	Nut	1	
G	36921492	Mount, Engine	1	
H	36763670	Screw	2	
J	95935011	Washer	2	
K	35297340	Nut	2	
L	22648430	Engine	1	
M	54592951	Adapter, Air End	1	
N	54687322	Guard, Turbo	1	
P	54409339	Spacer, Fan	1	
Q	22244206	Guard, Fan	1	
R	35279025	Screw	8	
S	36898096	Screw	2	
T	36879492	Screw	2	
	54604343	Pump, Hydraulic	1	
	54662028	Filter, Engine Oil	1	
	54662036	Filter, Engine Fuel	1	
	54662051	Filter, Engine Coolant	1	
	22928873	Belt, Engine Fan	1	
	22065916	Belt, Alternator	1	

 Exhaust Assembly

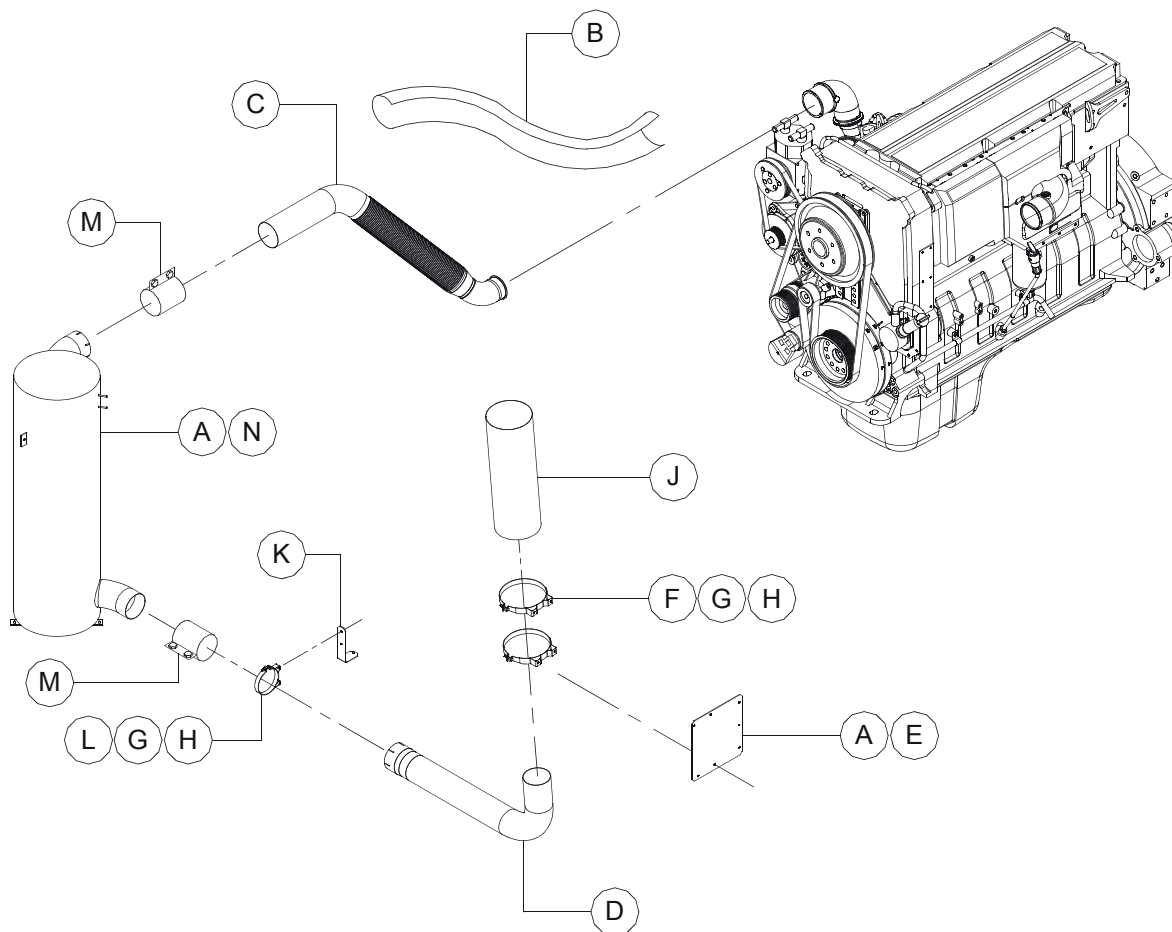

ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	35279025	Screw	8	
B	54662010	Insulation, Exhaust	1	
C	22883920	Pipe, Flex Turbo	1	
D	54648209	Pipe, Exhaust	1	
E	54656624	Plate, Support	1	
F	36787026	Clamp, Band	2	
G	36889608	Screw	4	
H	36881886	Nut	4	
J	36787034	Tube, Exhaust	1	
K	54656632	Bracket, Support	1	
L	35303361	Clamp, Band	1	
M	36799807	Clamp, Seal	2	
N	22979603	Muffler, Stainless Steel	1	

 
Cold Start

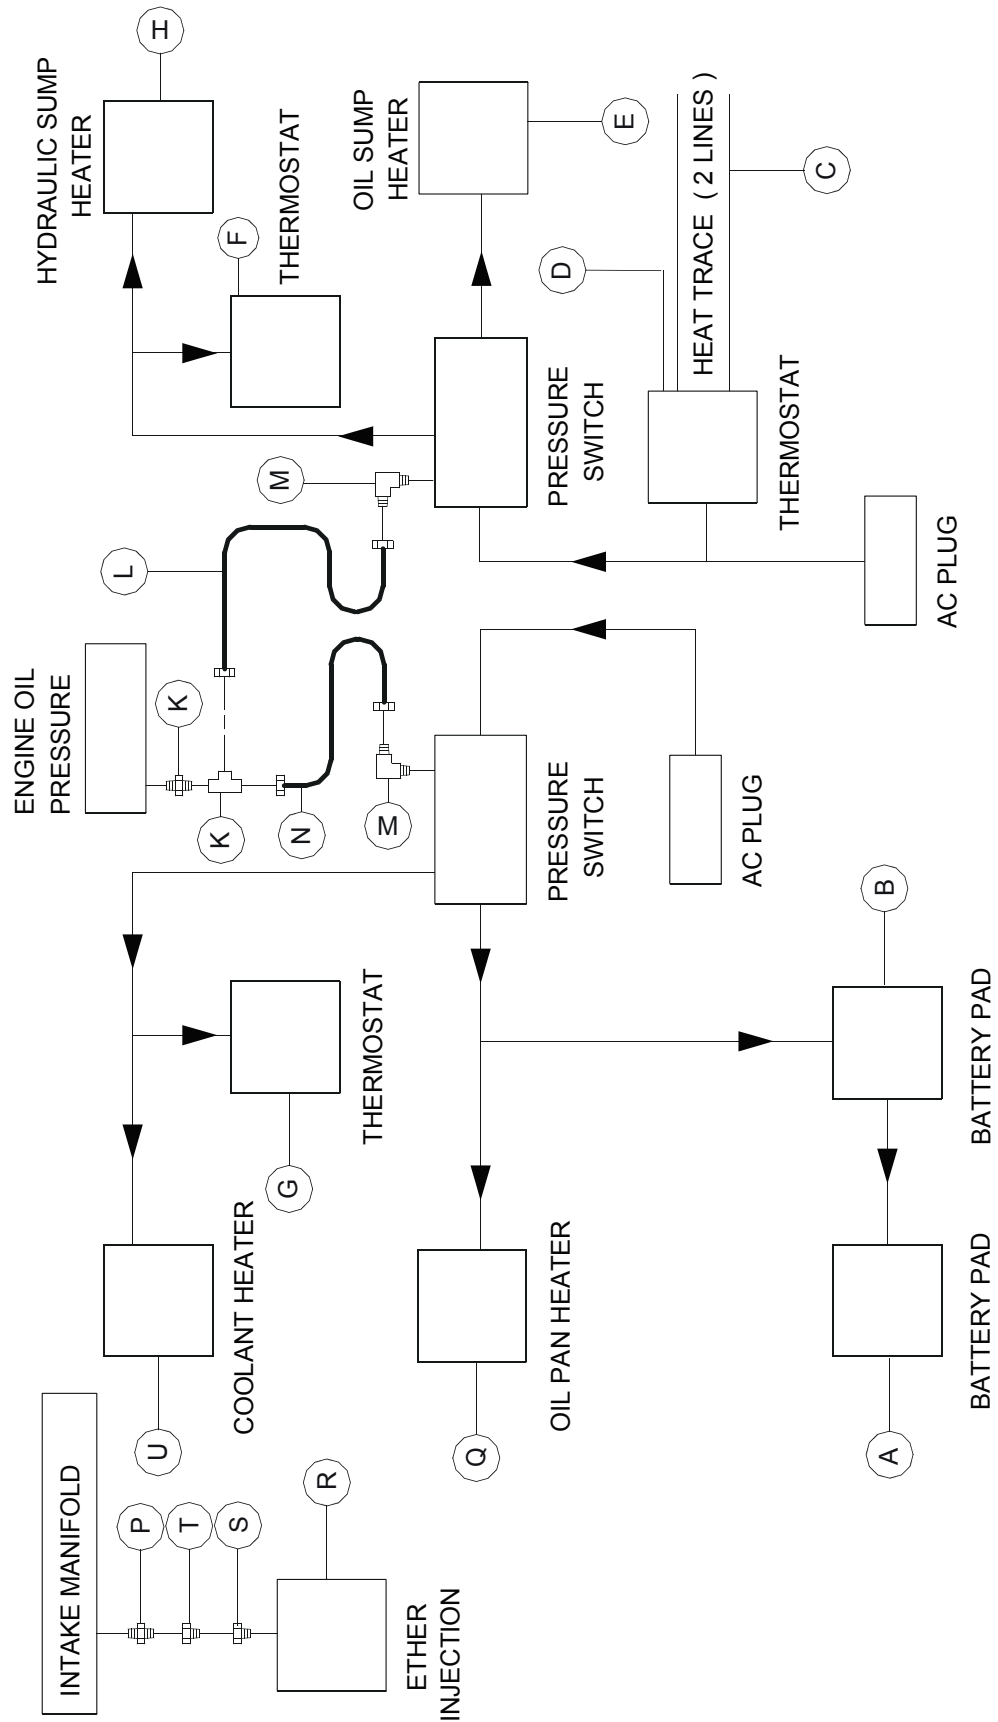

Cold Start



ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	36920346	Heater, Battery Pad (1 Lead)		
B	36920338	Heater, Battery Pad (2 Leads)		
C	22079693	Harness, Heat Trace Thermostat		
D	22079701	Heat Trace Assembly		
E	54671607	Heater, Air End Oil Sump		
F	36858751	Well, Hydraulic Thermostat		
G	54480298	Well, Engine Thermostat		
H	54464631	Heater, Hydraulic Reservoir		
J	95419073	Tee		
K	54720719	Adapter		
L	35284520	Hose Assembly		
M	35283464	Elbow		
N	54718929	Hose Assembly		
P	54720719	Adapter		
Q	54464623	Heater, Engine Oil Pan		
R	35357052	Ether Kit		
S	35602812	Atomizer, Ether		
T	95930301	Bushing		
U	54758404	Heater, Engine Coolant		
	54464664	Harness, Engine Heaters		
	54464672	Harness, Air End Heaters		
	54464607	Engine Cold Start Heater Assembly		
	54464615	Air End Cold Start Heater Assembly		

 Replenishment Oil Tank Piping

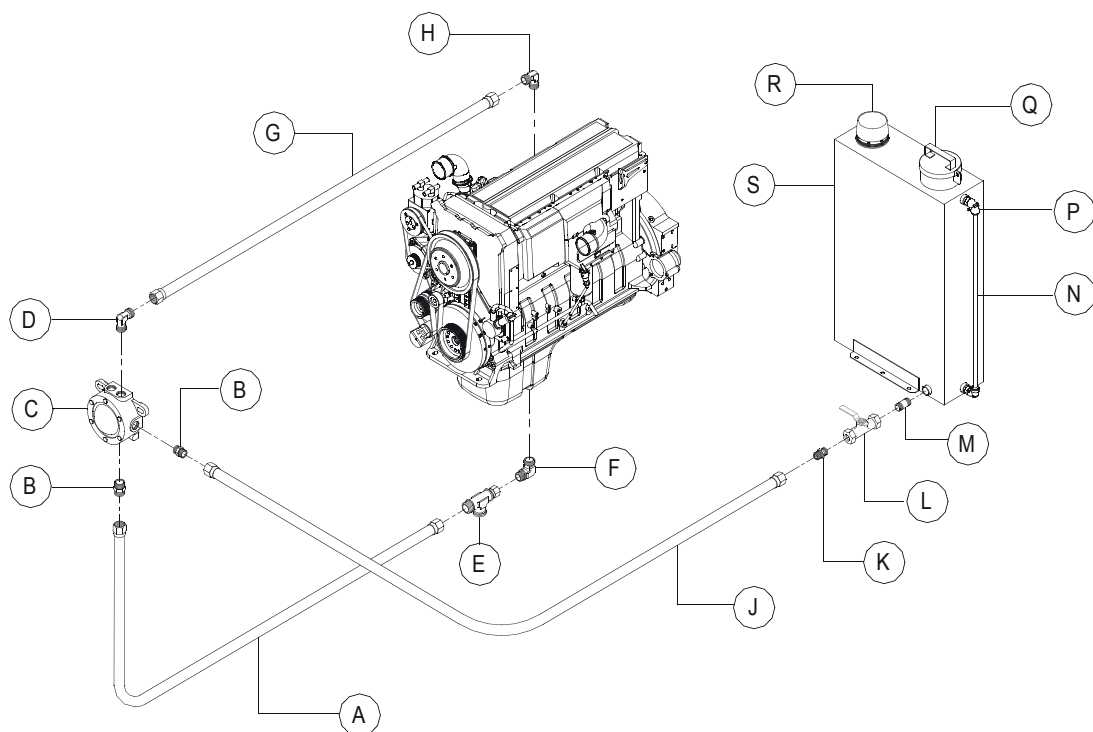


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	35289503	Hose Assembly	1	
B	35286426	Connector	1	
C	22053235	Sensor, Murphy	1	
D	35309210	Elbow	1	
E	95951646	Tee	1	
F	22063937	Elbow	1	
G	35252782	Hose Assembly	1	
H	22063945	Elbow	1	
J	35310234	Hose Assembly	1	
K	35286426	Connector	1	
L	35581792	Valve, Ball	1	
M	95934279	Nipple	1	
N	22050926	Tube	1	
P	54627799	Elbow	2	
Q	36845014	Cap, Filler	1	
R	43205384	Cap, Filler	1	
S	22424279	Tank, Oil	1	

  Air End Assembly

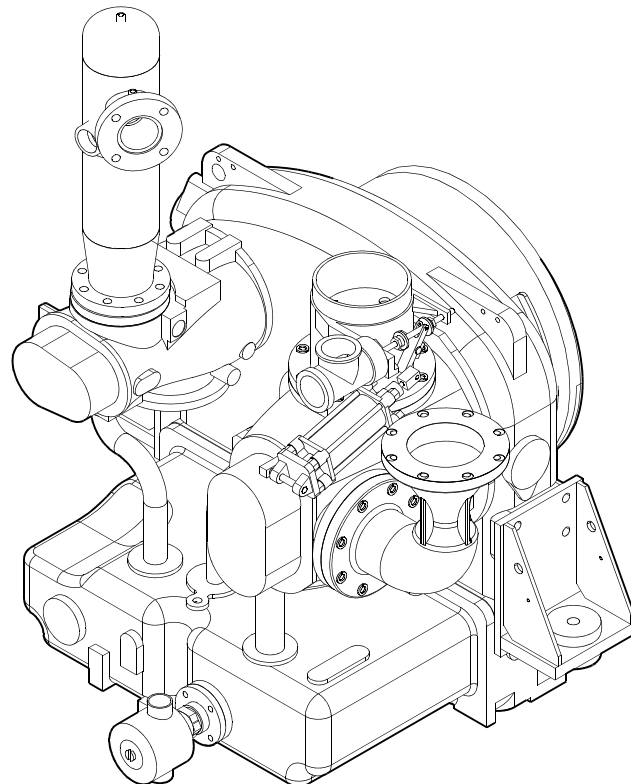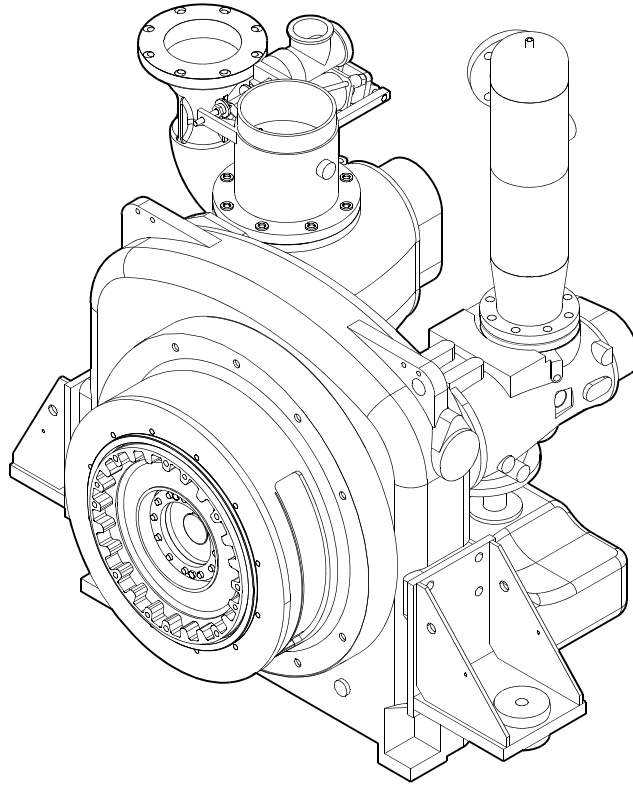


Air End Coupling and Mounting

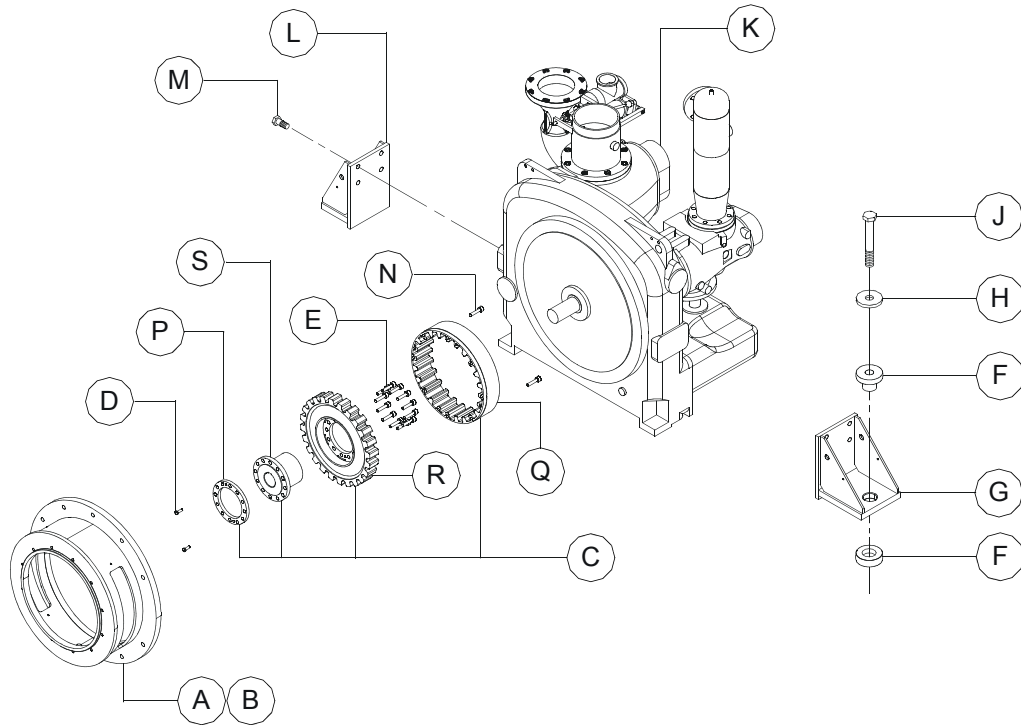 


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	54592951	Adapter, Air End	1	
B	39179072	Screw	10	
C	54740691	Air End Coupling Assembly	1	
D	35271154	Screw	2	
E	96725130	Screw	12	
F	36921302	Mount, Rubber	2	
G	36921351	Mount, L.H. Air End	1	
H	54610621	Washer	2	
J	54720768	Bolt	2	
K	54434147	Air End Assembly	1	
	39330741	Low Pressure Air End Assembly	1	
	39330758	High Pressure Air End Assembly	1	
L	36923886	Mount, R.H. Air End	1	
M	35375377	Screw	8	
N	95104303	Bolt	8	
P	54758305	Spacer, Coupling	1	
Q	54758297	Ring, Outer	1	
R	54758263	Ring, Inner	1	
S	54758271	Bushing, Split	1	
	54690102	Adapter, Cover	2	
	35279025	Screw	4	
	39213442	Oil Pump Kit	1	
	54432612	Gear Set	1	

 Air End Inlet Valve

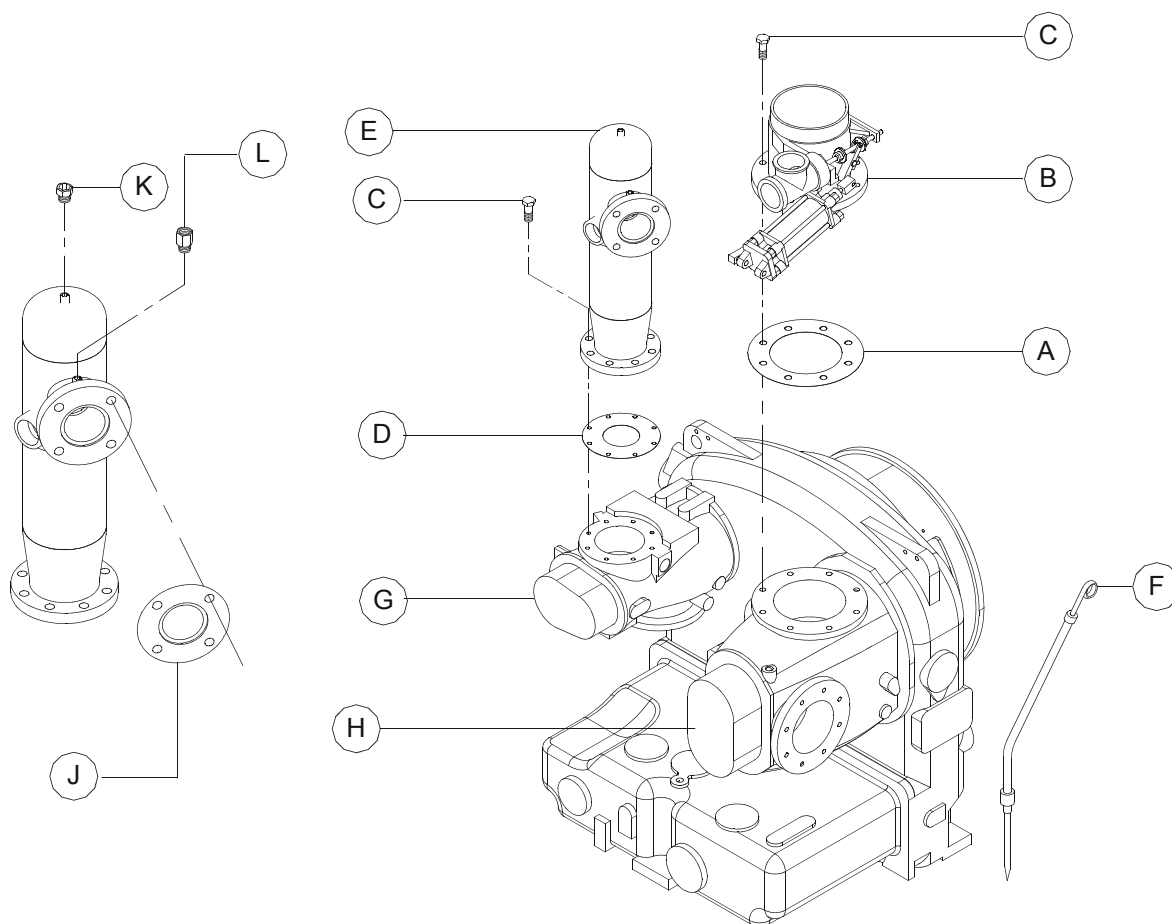


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	39330279	Gasket	1	
B	39911110	Valve, Air Inlet	1	
C	39179072	Screw	16	
D	39330303	Gasket	1	
E	22233258	Silencer, Second Stage	1	
F	54579057	Oil Dip Stick Assembly	1	
G	39330758	Air End, High Pressure	1	
H	39330741	Air End, Low Pressure	1	
	39213442	Kit, Oil Pump	1	
	54656657	Pump, Oil	1	
	54628151	Coupler, Oil Pump	1	
	39925425	Driver, Oil Pump	1	
	54432612	Set, Gear	1	
J	39330287	Gasket	1	
K	95252409	Plug	1	
L	95371829	Bushing, Reducing	1	

 Air End - 1st Stage Inlet

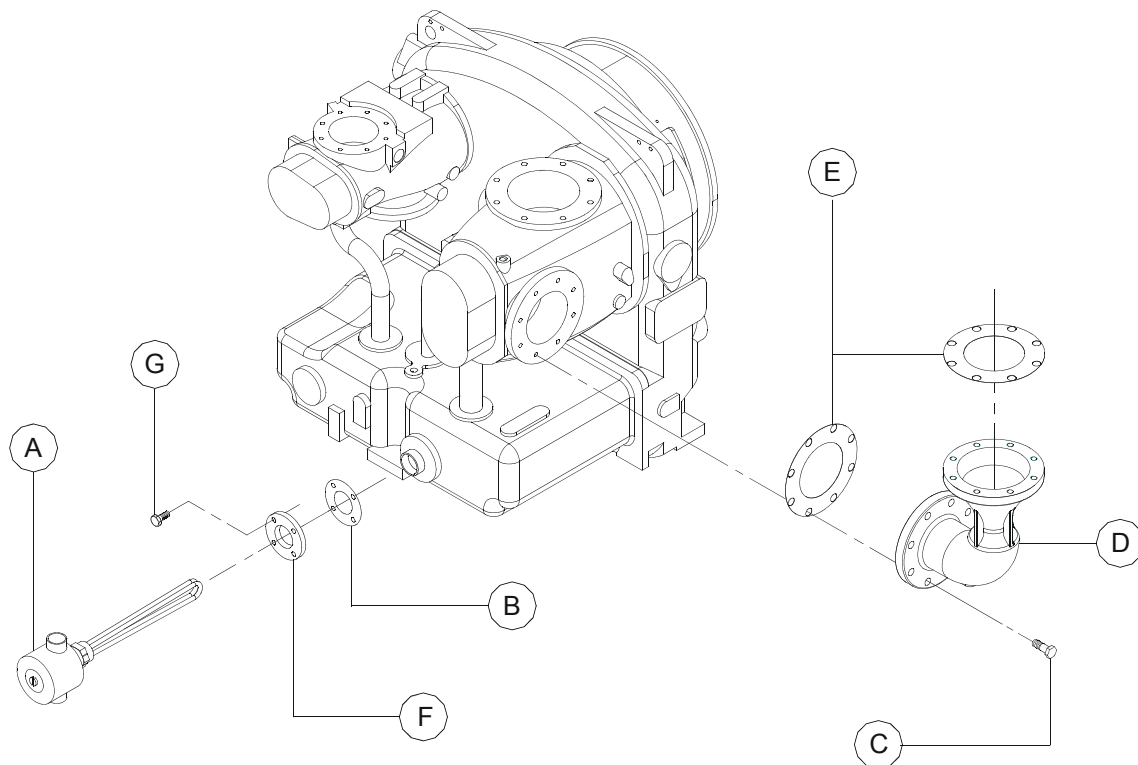


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	54671607	Heater, Sump	1	120 Volt
	54678941	Heater, Sump	1	240 Volt
B	39497904	Gasket, Heater	1	
C	39179072	Screw	8	
D	39913124	Venturi, First Stage	1	
E	39464433	Gasket	1	
F	39497912	Plate	1	
G	36877793	Screw	4	

 Air End Tubing and Fittings

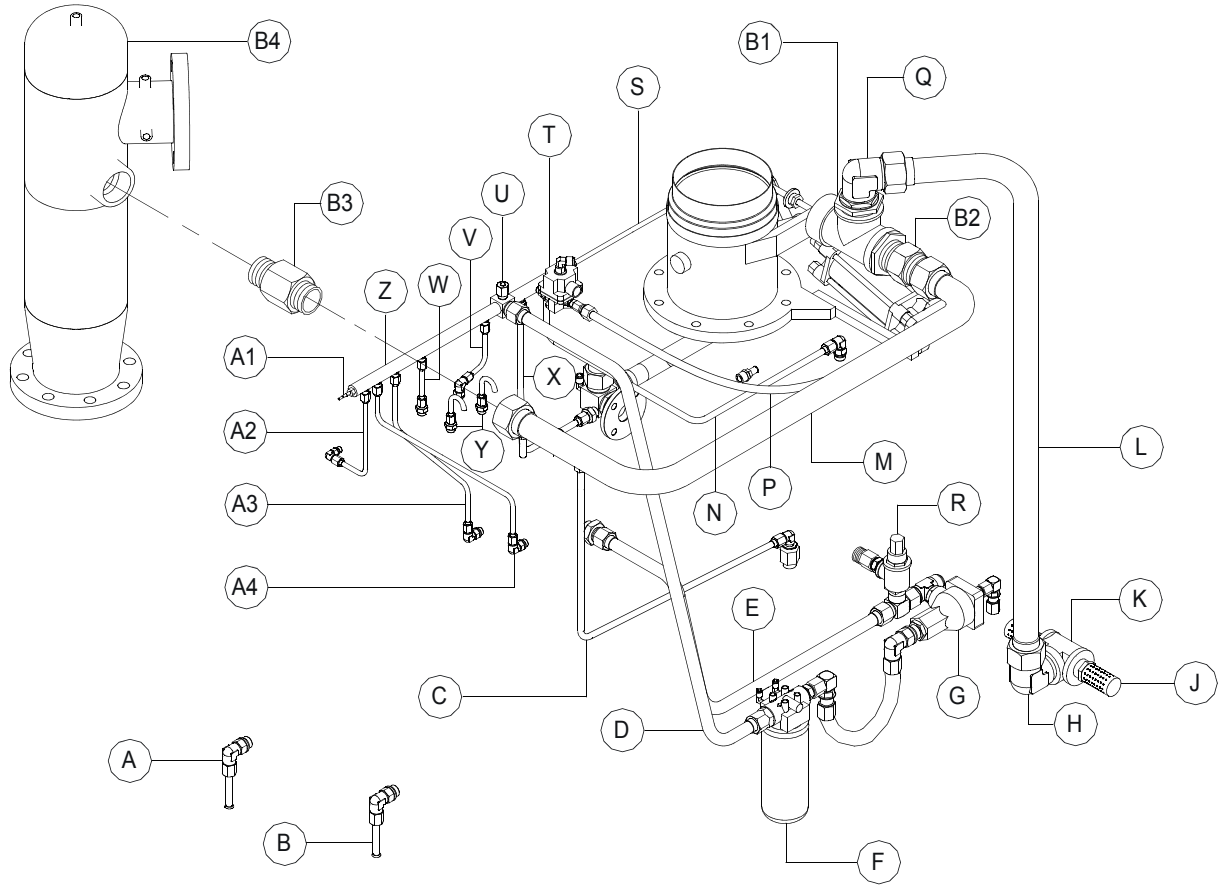


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	39172994	Elbow	7	
B	54606603	Tube	2	
C	39914270	Tube	1	
D	39914254	Tube	1	
E	22087118	Tube	1	
F	39911615	Element, Filter	1	
	39871165	Head, Filter	1	
G	39467634	Valve, Temperature	1	
H	95937678	Elbow	1	
J	39309547	Muffler	2	
K	95937678	Tee	1	
L	54519186	Tube	1	
M	22235204	Tube	1	
N	39914221	Tube	1	
P	35282987	Hose	1	
	35279926	Elbow (To Cylinder)	1	
Q	39140512	Elbow	3	
	39313598	Bushing	1	
R	39167119	Valve	1	Continued.....

 Air End Tubing and Fittings

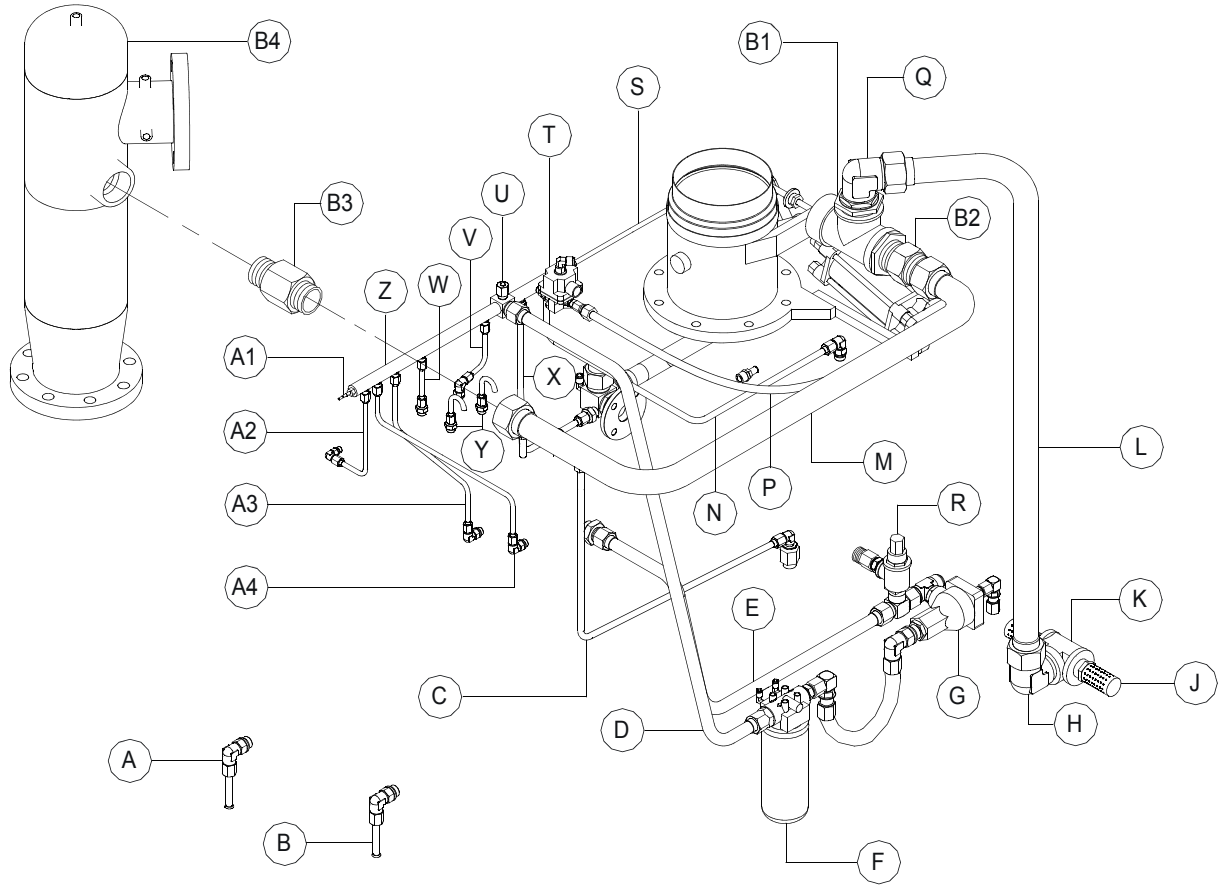


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
S	39914247	Tube	1	Continued
	39172952	Elbow	1	
T	54512611	Valve, Solenoid	1	
U	35313428	Cap	1	
V	39914189	Tube	1	
	39172994	Elbow	1	
W	39914171	Tube	1	
	39173042	Adapter	1	
X	39914239	Tube	1	
Y	39311923	Tube	2	
	39173042	Adapter	1	
Z	39913827	Manifold, Tube	1	
A1	54557087	Sensor	1	
A2	39914197	Tube	1	
A3	39914205	Tube	1	
A4	39914213	Tube	1	
A5	39172945	Connector	1	
A6	95937512	Connector	1	
A7	39172994	Elbow	2	Continued.....

 Air End Tubing and Fittings

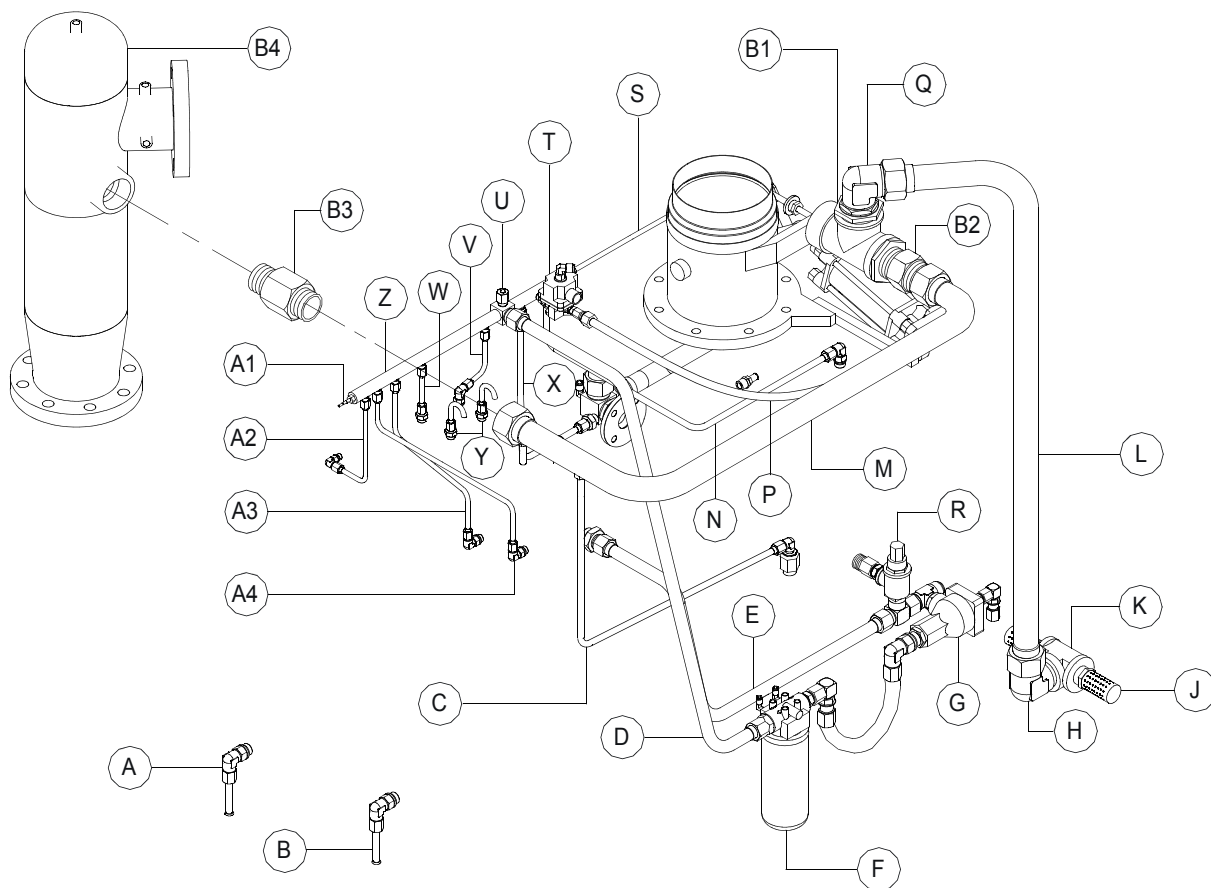


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A8	39172952	Elbow	1	Continued
A9	35284082	Adapter	2	
B1	39313598	Bushing	1	
	39310396	Elbow (Out of Stage 2)	1	
	39914270	Tube (Stage 2, Drain to Sump)	1	
	39485255	Elbow (Manifold Oil Dump)	1	
	39583927	Elbow (To Sump)	1	
	95953956	Bushing (Bushing to Bushing)	1	
	39175187	Bushing (To Sump)	1	
	35279926	Elbow (Elbow to Manifold)	1	
B2	95985578	Connector	1	
B3	95937561	Connector	1	
B4	22233258	Silencer, Second Stage	1	

 Load Cylinder Piping (Optional Quick Response)

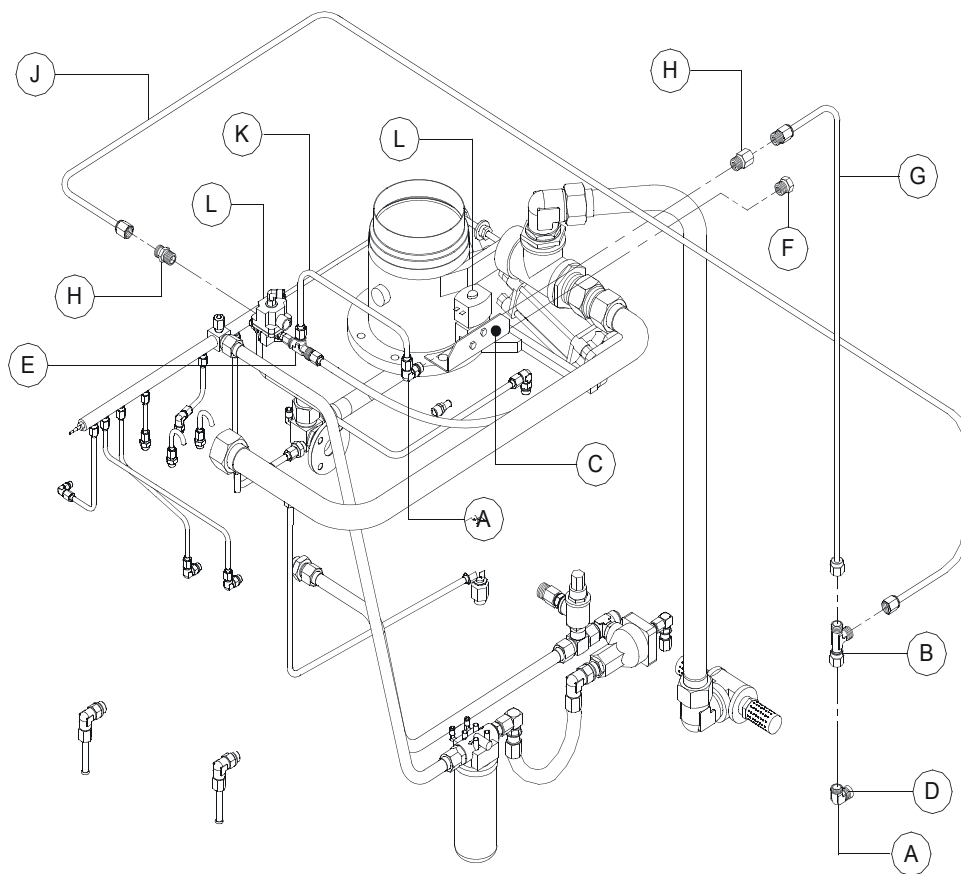


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	35279934	Elbow	1	
B	95415667	Tee	1	
C	22437016	Bracket, Solenoid Valve	1	
D	*	To Sump	*	
E	35283050	Tee	1	
F	95033593	Plug	1	
G	35310994	Tube	1	
H	35284082	Adapter	1	
J	54718432	Tube	1	
K	35282979	Tube	1	
L	54512611	Valve, Solenoid	1	

 Load Cylinder Piping (Standard)

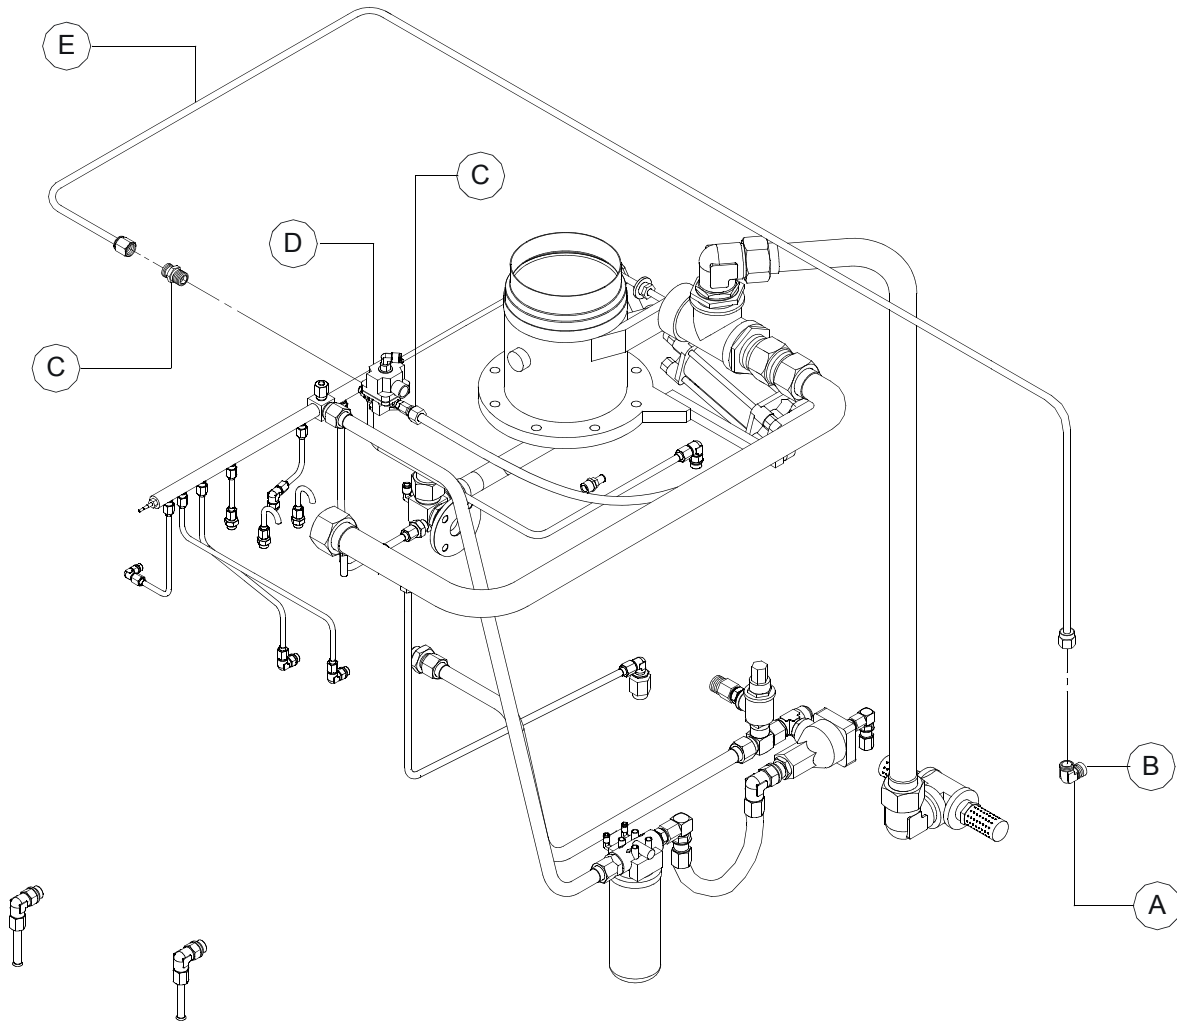


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	35279934	Elbow	1	
B	*	To Elbow in Sump	*	
C	35284082	Adapter	1	
D	54512611	Valve, Solenoid	1	
E	54718432	Hose Assembly	1	

 Air End Breather Assembly

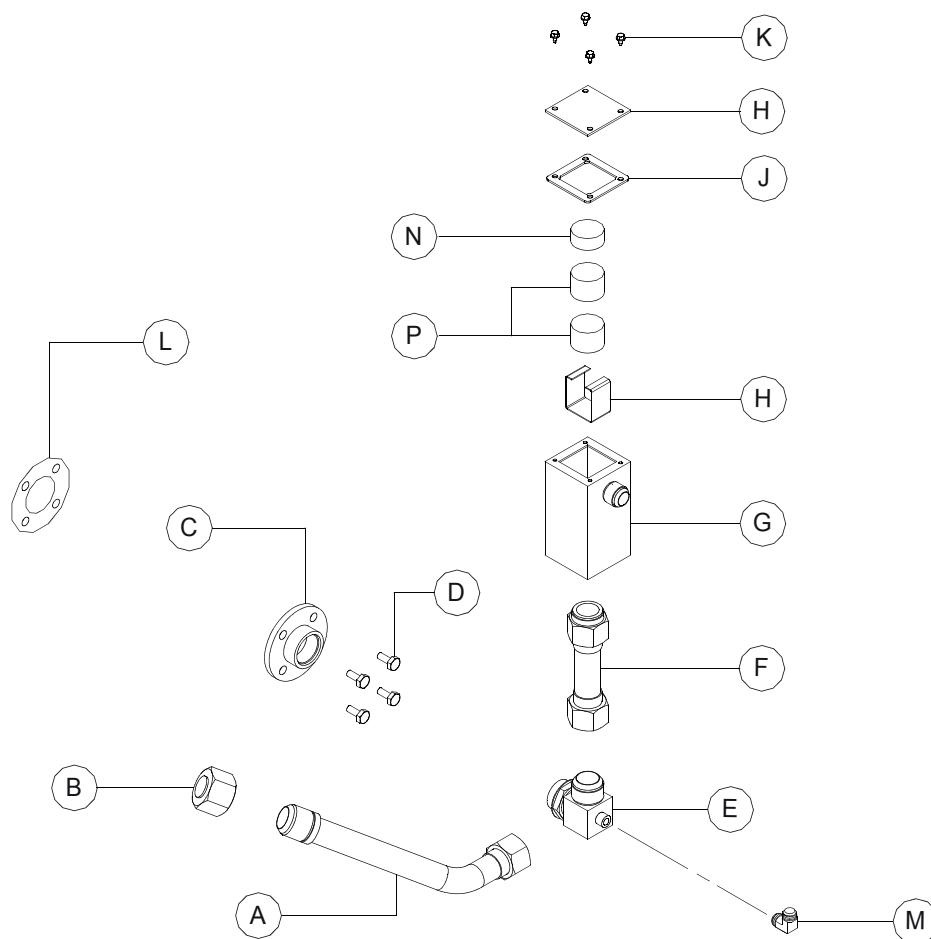


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	39917323	Tube Assembly	1	
B	95972873	Nut, Tube	1	
C	39497003	Flange, Mounting	1	
D	39173463	Screw	4	
E	39590542	Manifold	1	
F	39917315	Tube Assembly	1	
G	39560180	Box, Breather	1	
H	39489646	Cover Assembly	1	
J	39491741	Gasket	1	
K	39133145	Screw	4	
L	39464367	Gasket	1	
M	35279934	Elbow	1	
N	40068371	Element, Foam	1	
P	40068389	Element, Metallic	2	

 Air End Tubings and Fittings

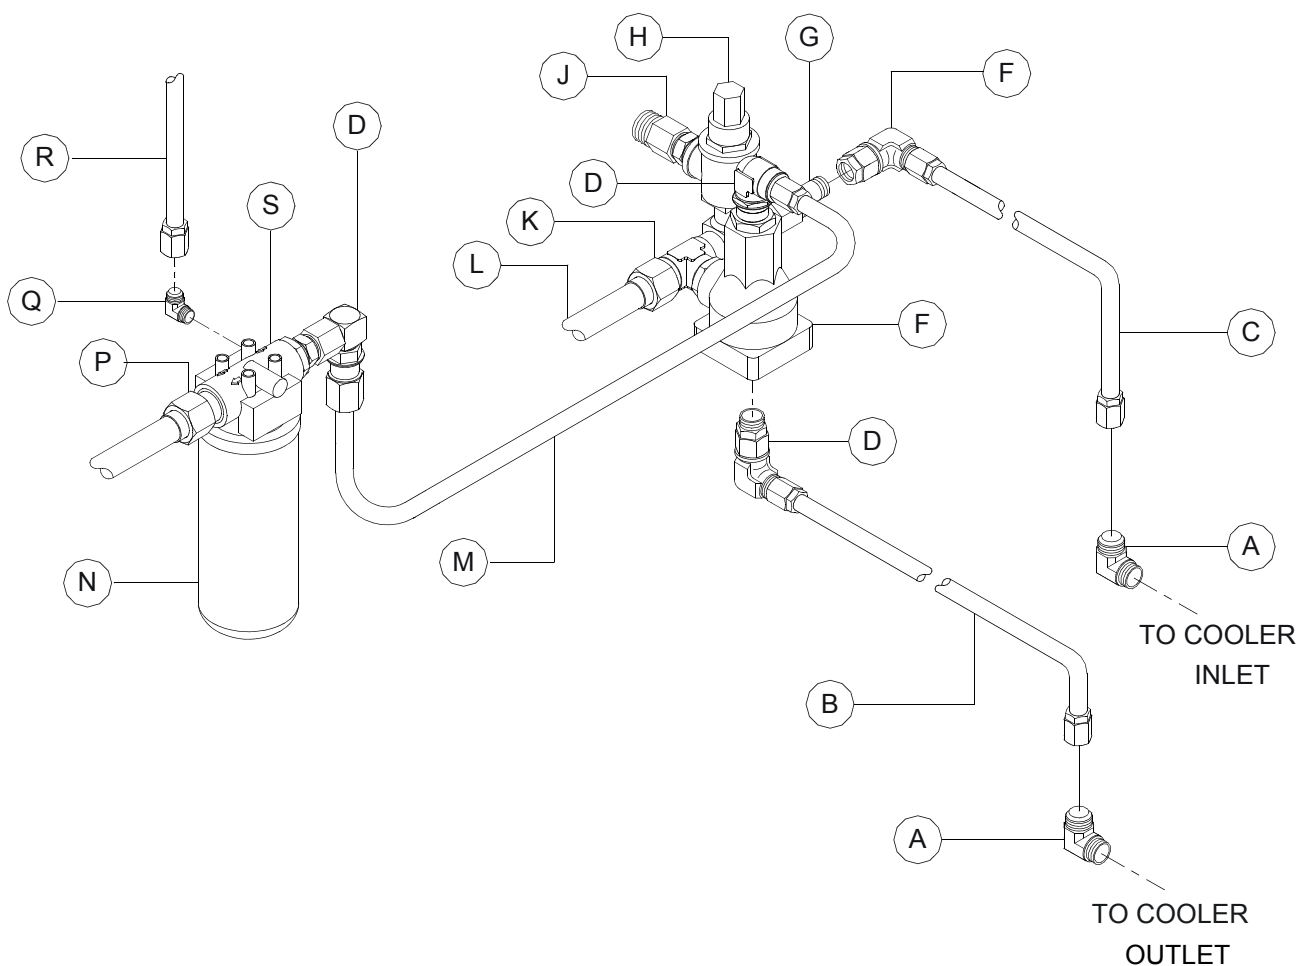


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	95368890	Elbow	1	
B	54718739	Hose Assembly	1	
C	35118272	Hose Assembly	1	
D	35291384	Elbow	1	
E	39467634	Valve, Temperature	1	
F	35292051	Elbow	1	
G	39591565	Tee	1	
H	39167119	Valve, Pump Bypass	1	
J	95937512	Connector	1	
K	95947636	Tee	1	
L	22087118	Hose Assembly	1	
M	36792000	Hose Assembly	1	
N	39911615	Element	1	
P	95955993	Connector	1	
Q	35306687	Elbow	1	
R	35284520	Hose Assembly	2	
S	39871165	Head, Filter	1	

 Air End Piping Assembly

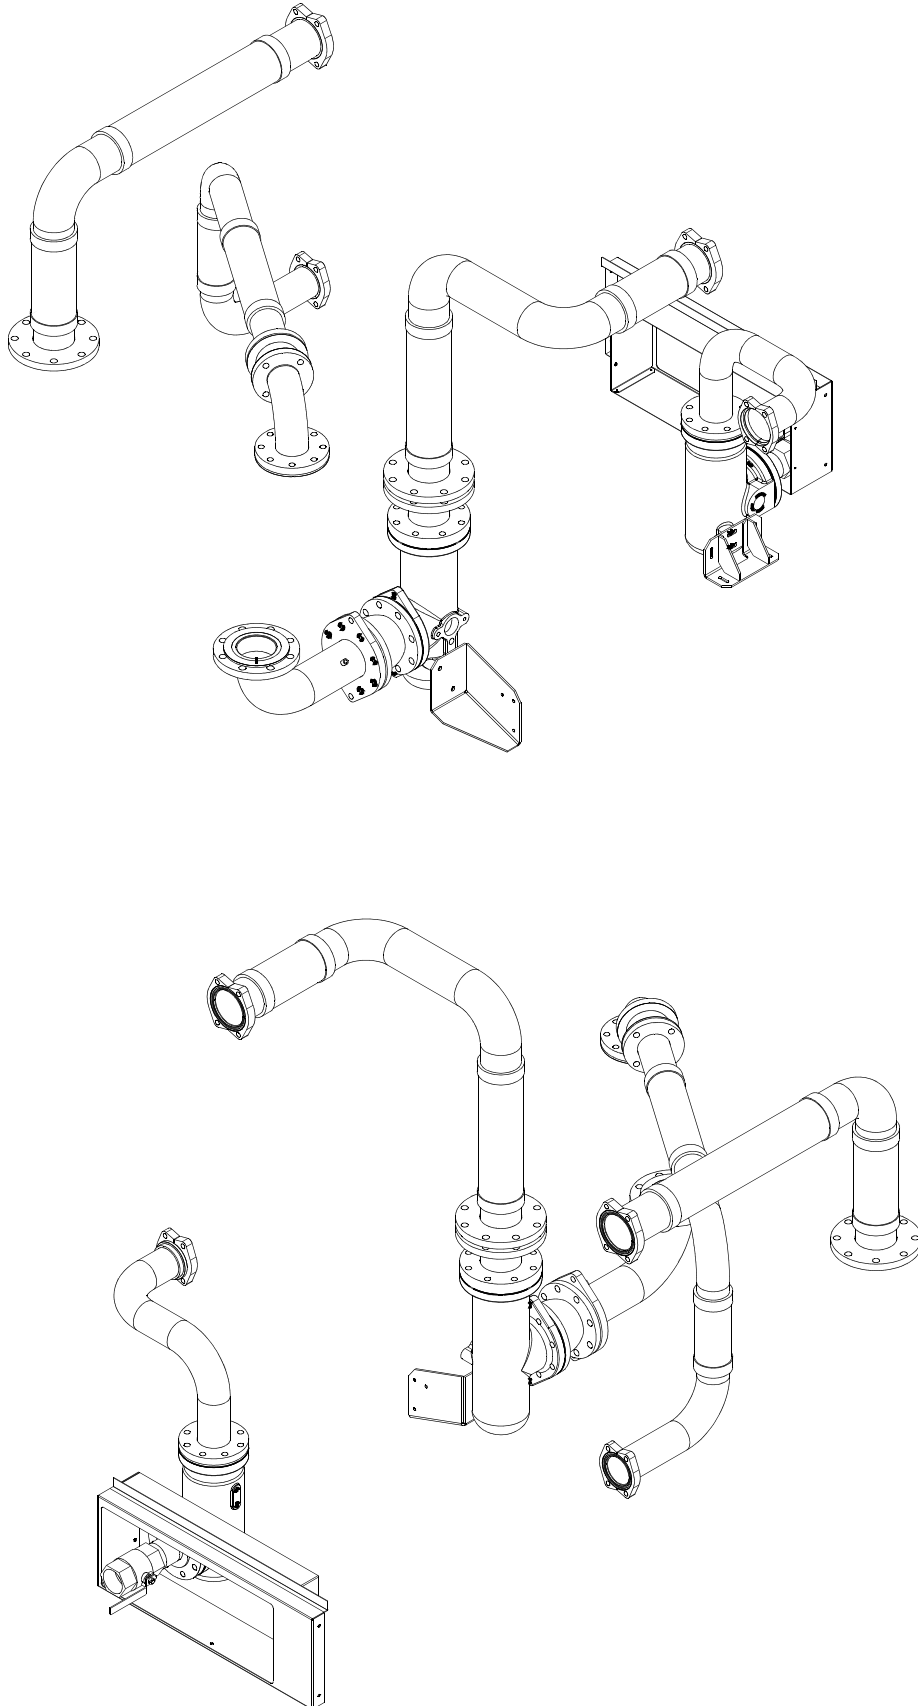


Air End Piping

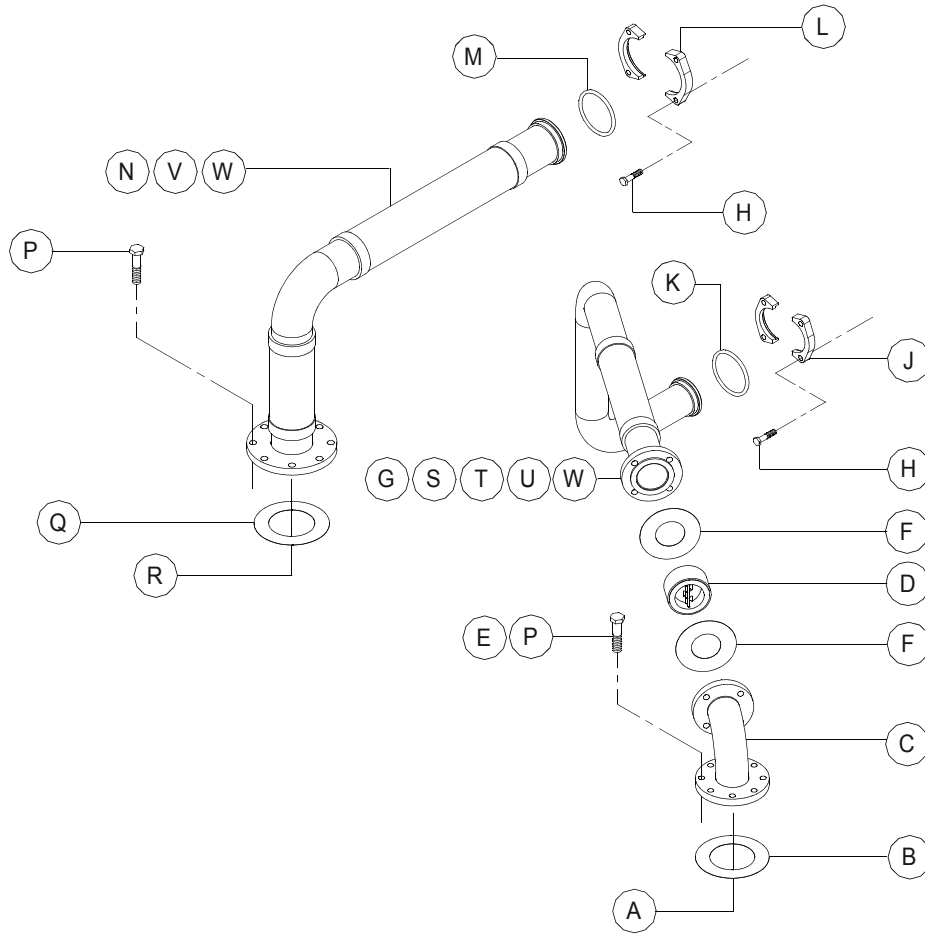 


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A		To Top of Venturi on 2nd Stage Air End		
B	39330295	Gasket	1	
C	36922938	Tube, 2nd Stage Outlet	1	
D	22884423	Valve, Check	1	
E	95934170	Screw	7	
F	39330287	Gasket	1	
G	54620588	Tube, After cooler Inlet	1	
H	95060745	Screw	*	
J	39481593	Flange, Split	2	
K	39188479	O-Ring	1	
L	95985735	Flange, Split	2	
M	95060745	O-Ring	1	
N	54534847	Tube, Intercooler Inlet	1	
				Continued.....

 Air End Piping

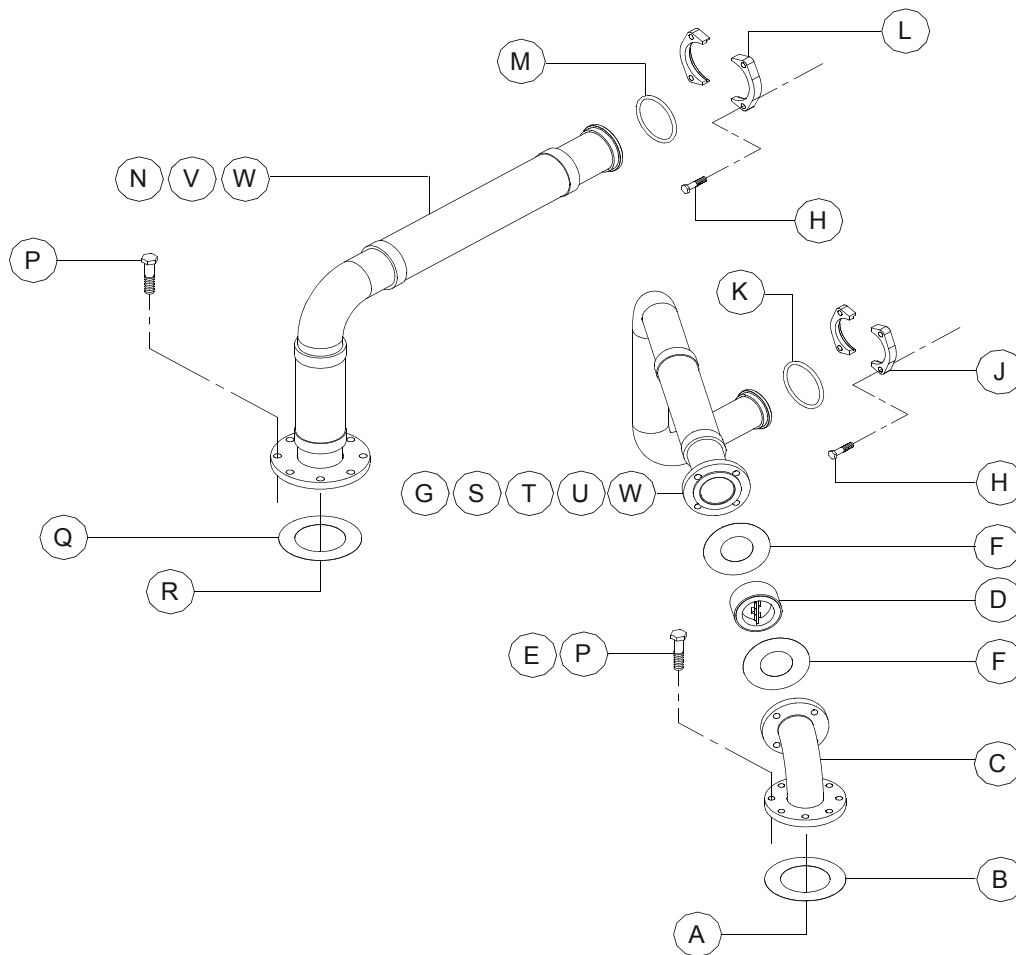


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
P	95035465	Screw	*	Continued
Q	39330303	Gasket	1	
R	*	To 2nd Stage Air End Inlet	*	
S	96721659	Screw	4	
T	36879211	Nut	4	
U	54719752	Insulation, 2nd Stage	1	
V	54719745	Insulation, Intercooler In	1	
W	54721105	Wire, Stainless Steel	1	
	54719737	Insulation, Venturi	1	
	54719729	Insulation, 1st Stage	1	
	54662010	Insulation, Exhaust Pipe	1	

ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES

 
**Assembly
Part Number
54719760**

 
Air End Piping

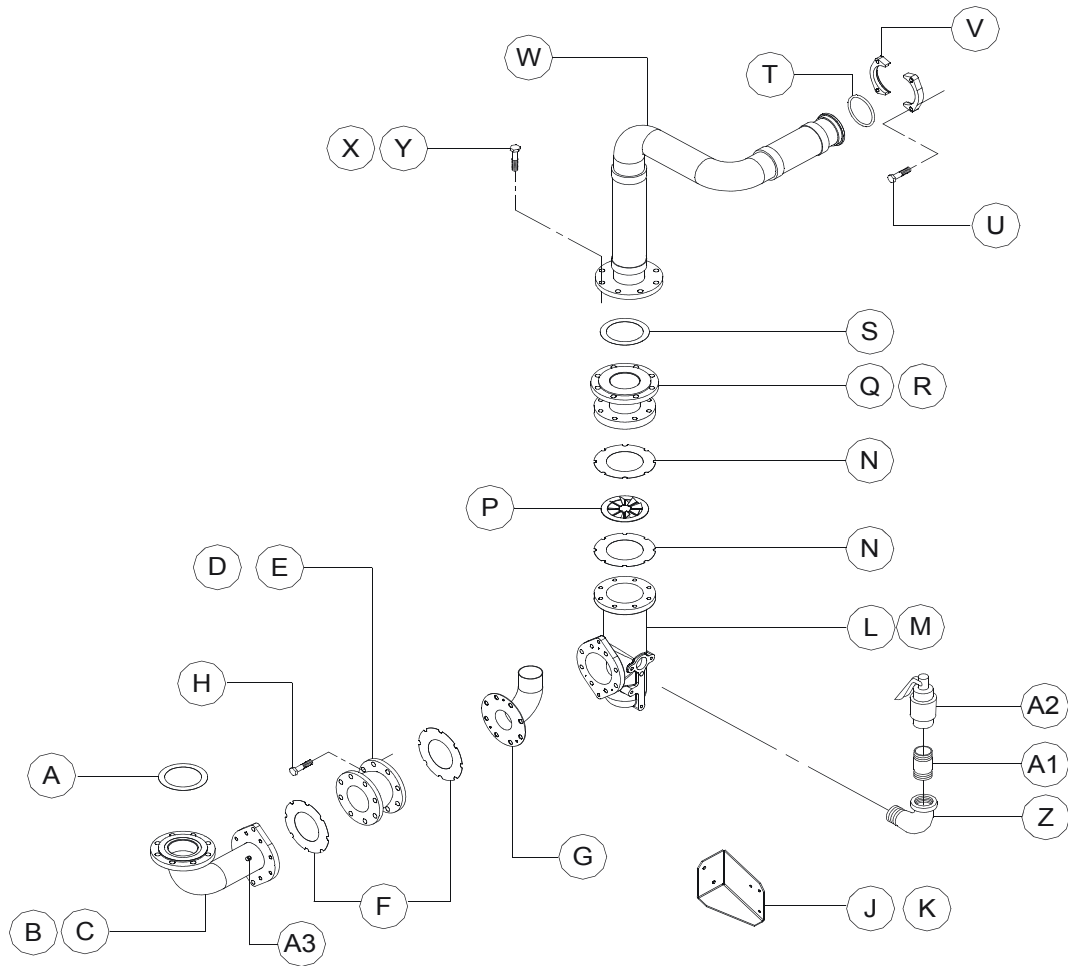

ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	39464425	Gasket	1	
B	54597745	Tube, 2nd Stage Inlet	1	
C	39179072	Screw	8	
D	39912795	Joint, Pipe	1	
E	95934386	Screw	8	
F	39487426	Gasket	1	
G	39913025	Tube Assembly	1	
H	35356039	Screw	8	
J	54379649	Bracket, Water Separator	1	
K	36889608	Screw	3	
L	39915087	Separator, Water	1	
M	95934634	Screw, Mounting	2	
N	39330253	Gasket	1	
P	54362819	Element	1	


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
				<i>Continued.....</i>

 Air End Piping

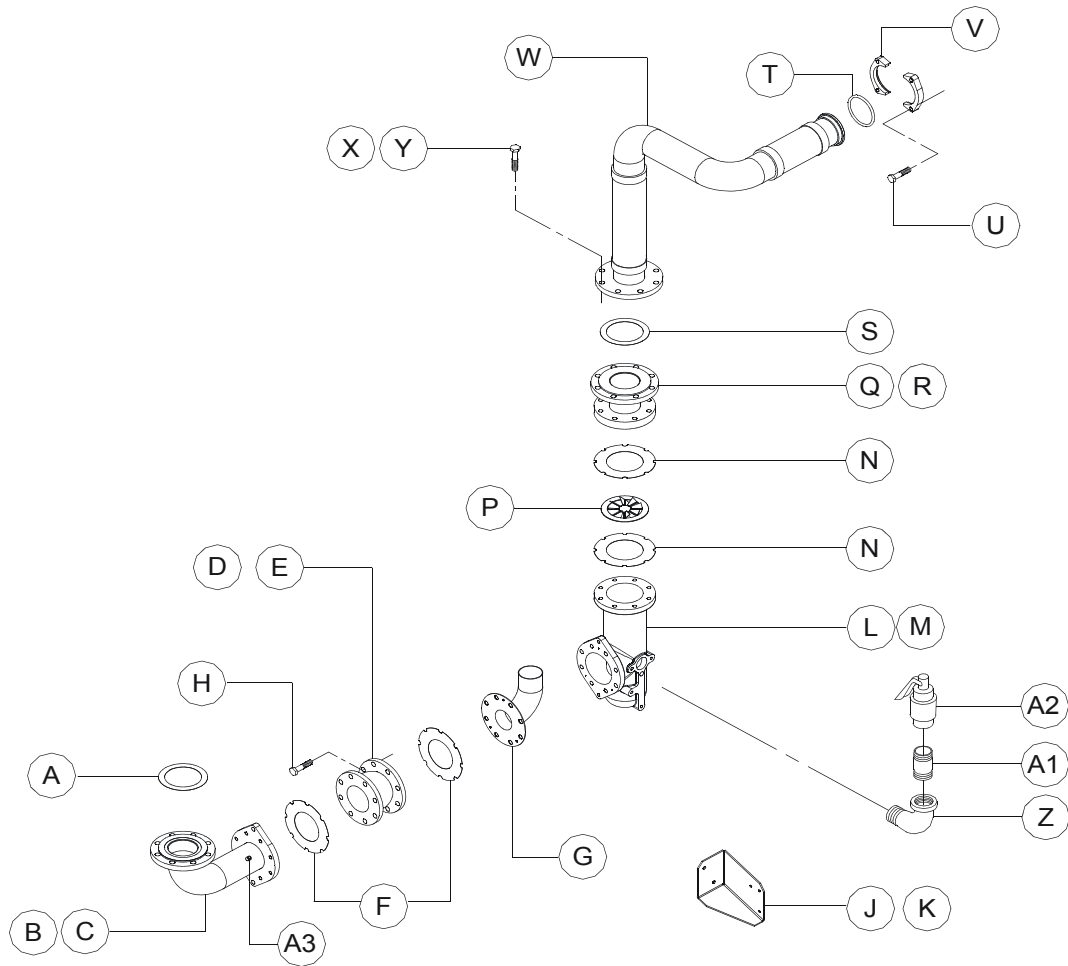


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
Q	54380449	Tube, Water Separator	1	Continued.....
R	95934170	Screw	8	
S	39464425	Gasket	1	
T	95060745	O-Ring	1	
U	95930723	Screw	4	
V	95985735	Flange, Split	2	
W	54597737	Tube, Intercooler Outlet	1	
X	95934253	Screw	8	
Y	95922928	Nut	8	
Z	95946281	Elbow	1	
AI	95953808	Nipple	1	
A2	39918214	Valve, Safety	1	
A3	54557087	Rtd (RT-2)	1	

 Air End Piping

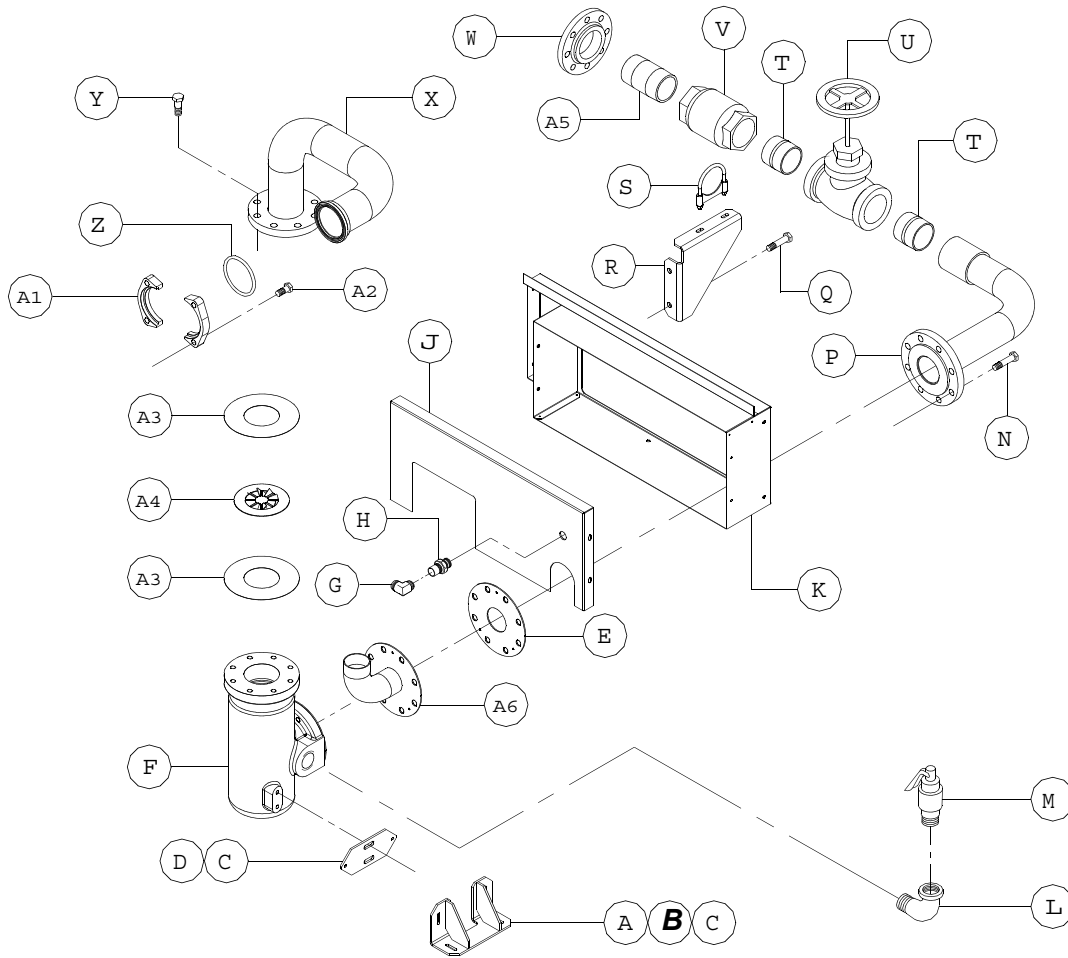

ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	54688163	Bracket Water Separator	1	
B	95934642	Screw	2	
C	35279025	Screw	6	
D	54688171	Plate, Mounting	1	
E	39925532	Gasket	1	
F	39928007	Separator, Water	1	
G	35290352	Elbow	1	
H	95365151	Fitting, Bulkhead	1	
J	22994446	Cover, End Panel	1	
K	22994438	Panel, Lower Rear End	1	
L	95953311	Elbow	1	
M	39918206	Valve, Safety	1	
N	95930723	Screw	8	
P	22563050	Tube, After Cooler Outlet	1	
Q	36879492	Screw	2	
R	22564579	Bracket, Tube Support	1	
S	36782027	Clamp	1	
				Continued.....

 Air End Piping


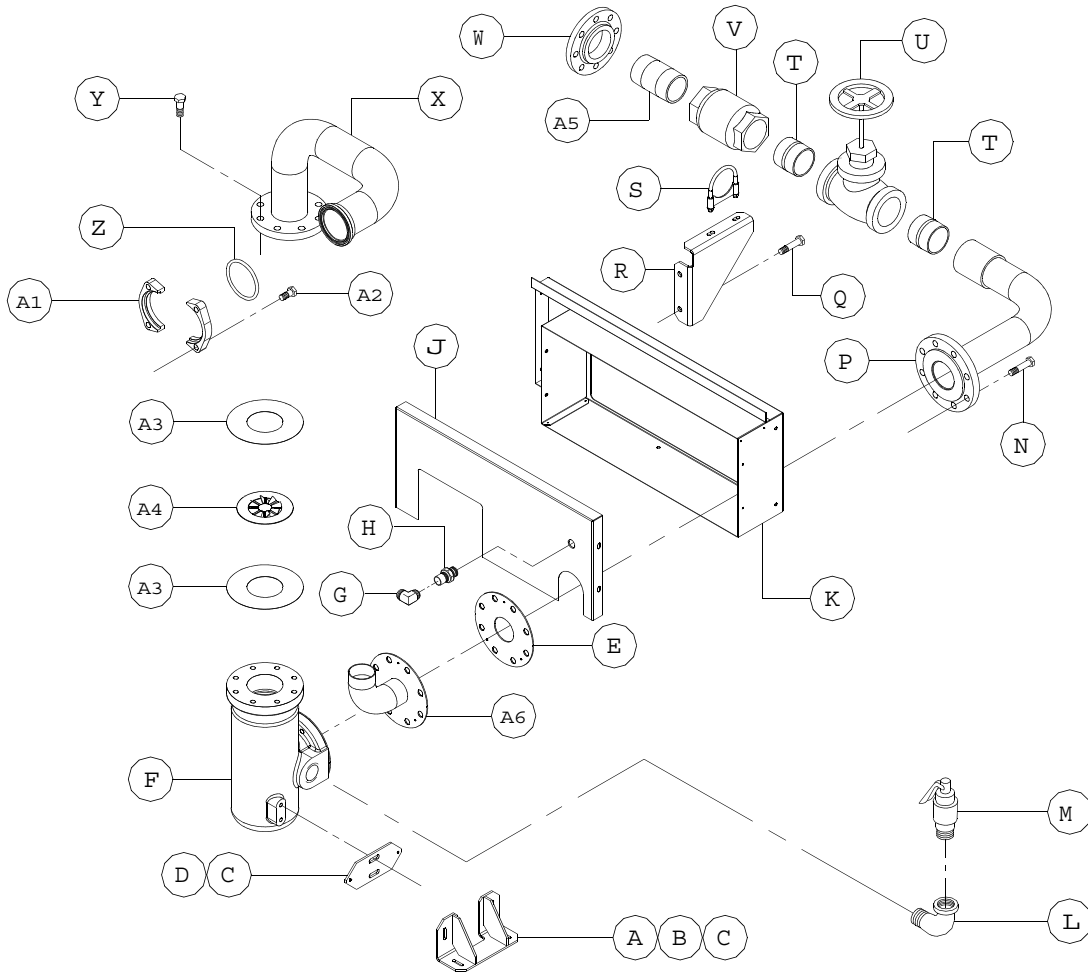


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
T	95965844	Nipple	2	Continued
U	22563456	Valve, Globe	1	
V	36777597	Valve, Check	1	
W	22564074	Flange	1	
X	54383468	Tube, After Cooler Outlet	1	
Y	95934170	Screw	8	
Z	39188479	O-ring	1	
A1	39481593	Flange, Split	2	
A2	95930723	Screw	4	
A3	39487434	Gasket	1	
A4	39891171	Filter	1	
A5	95991097	Nipple	1	
A6	39890926	Tube Assembly	1	


Condensate Burn-Off Piping

ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	35248145	Valve, Check		
B	35248319	Orifice		.094
C	36841526	Heater, 24 Volt		
D	95954194	Tee		
E	95944575	Nipple		
F	36842318	Valve, Solenoid		
G	35279934	Elbow		
H	22928212	Hose Assembly		
J	95940748	Bushing		
K	36844579	Strainer		
L	95944666	Elbow		
M	39915087	Separator, Interstage		
N	22928220	Hose Assembly		
P	36842318	Valve, Solenoid		
Q	37081528	Orifice		.063
R	36844579	Strainer		
S	95953618	Nipple		
T	95300943	Elbow		
U	95245353	Bushing		
V	39928007	Separator, Discharge		

  Air End Cooling Assembly

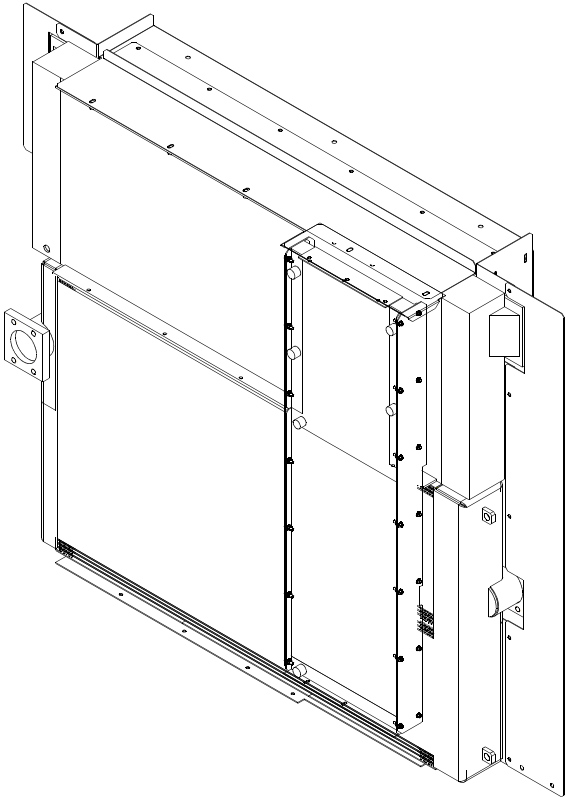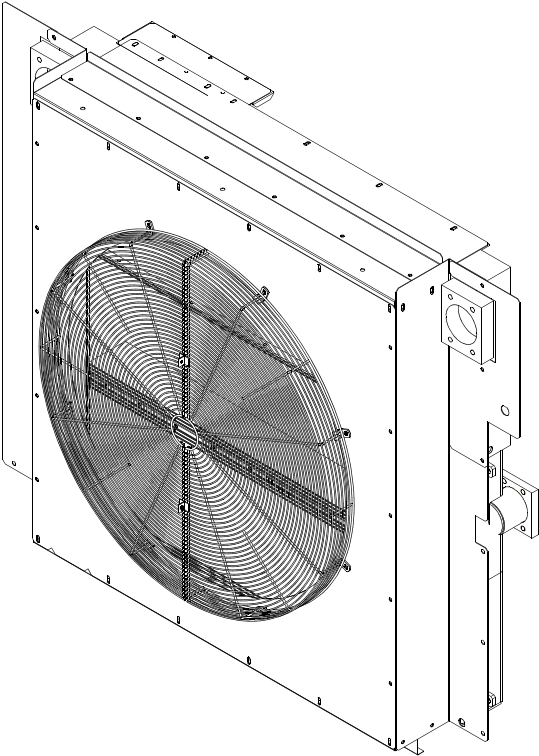


Air End Coolers

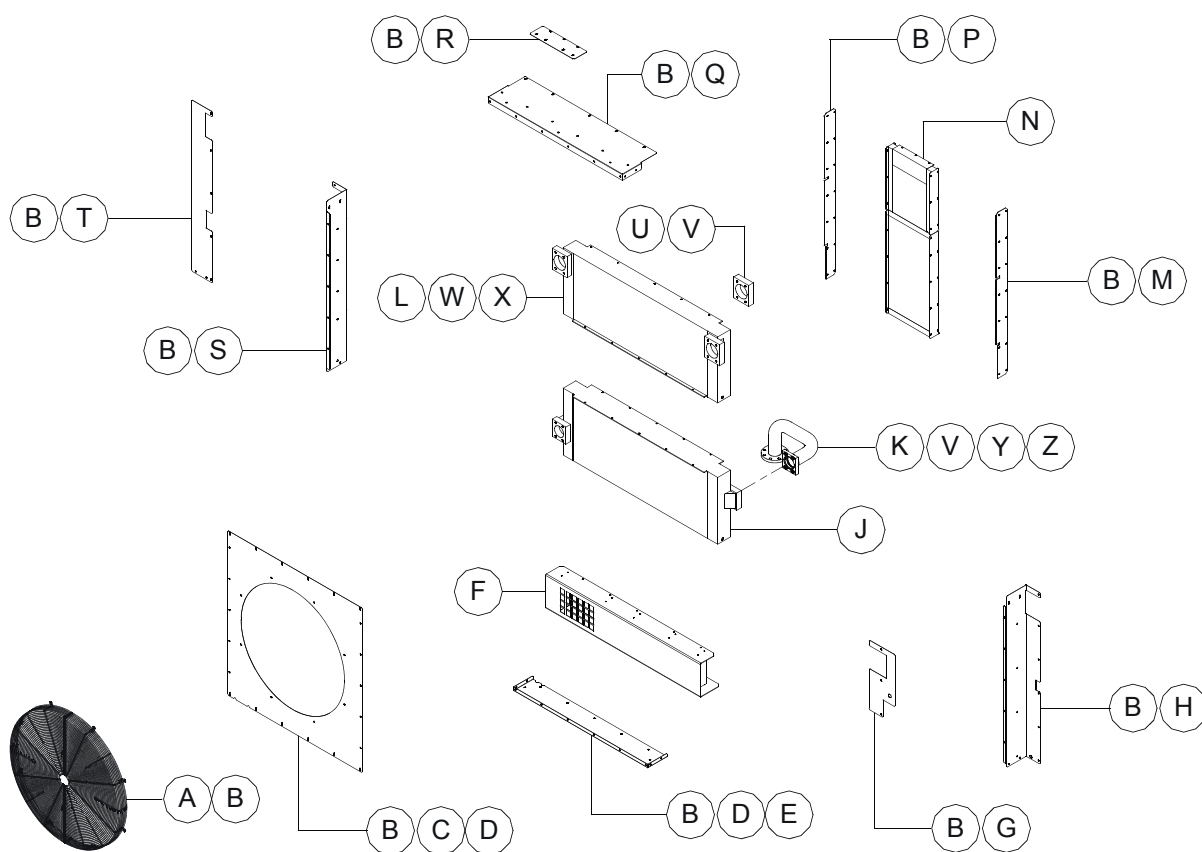 


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	54672688	Guard Fan	1	
B	35279025	Screw	*	
C	54406715	Orifice, Fan	1	
D	36895746	Nutsert	*	
E	54407549	Shroud, Bottom	1	
F	54638135	Support, Cooler (Not Required for Stainless Steel After cooler)	1	
G	54416037	Bracket, Shroud	1	
H	54407564	Shroud, L.H.	1	
J	54637236	After cooler, Aluminum	1	
	54584594	After cooler, Stainless Steel	1	
K	54672746	Tube, Aluminum	1	
	54383468	Tube, Stainless Steel	1	
L	54550827	Intercooler, Air End	1	
M	54673553	Support, Dual Cooler	1	
				Continued.....

 Air End Coolers

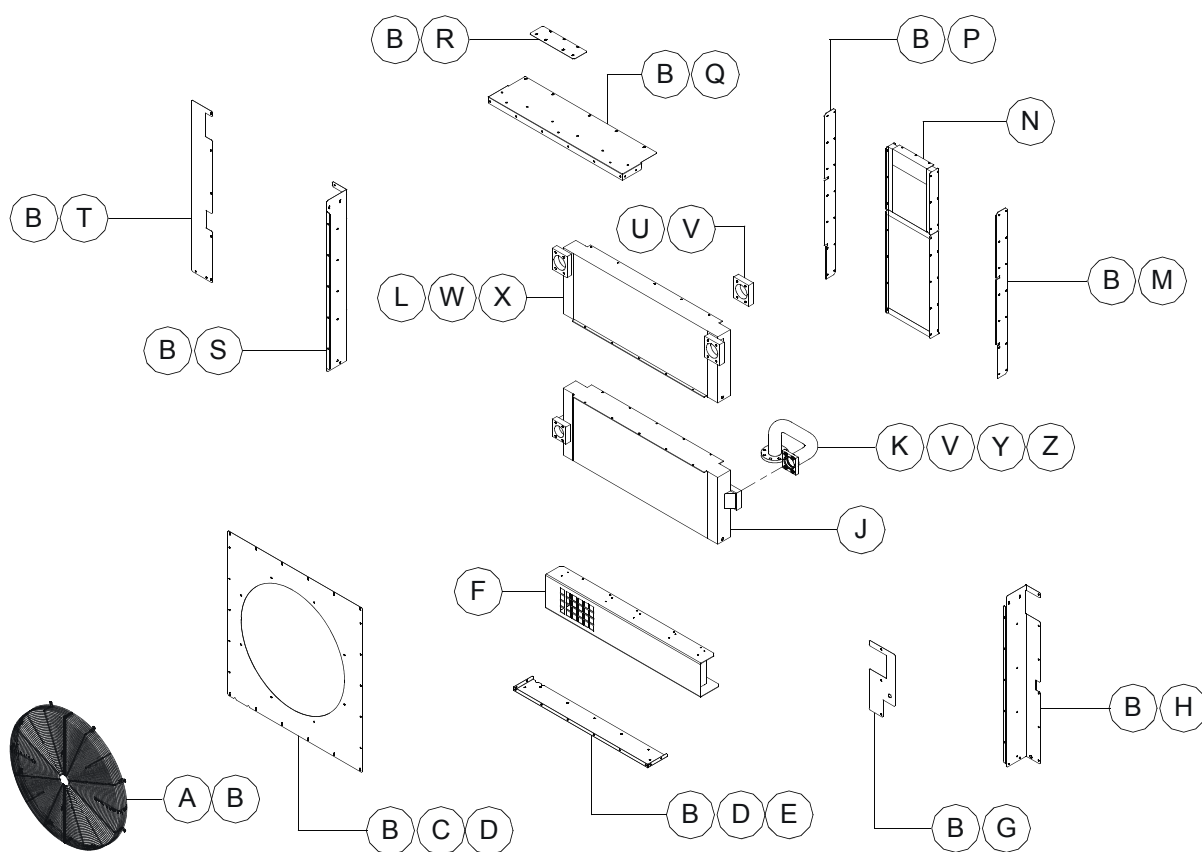


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
N	54543343	Cooler, Dual	1	Continued
P	54673553	Support, Dual Cooler	1	
Q	54407523	Shroud, Top	1	
R	54642368	Plate, Cooler	1	
S	54407556	Shroud, R.H. Inside	1	
T	54416029	Shroud, R.H. Outside	1	
U	54745559	Flange	1	
V	39188479	O-Ring	2	
W	36889608	Screw	10	
X	36881886	Nut	10	
Y	39481593	Clamp	2	
Z	95930723	Screw	4	

 Engine Radiator

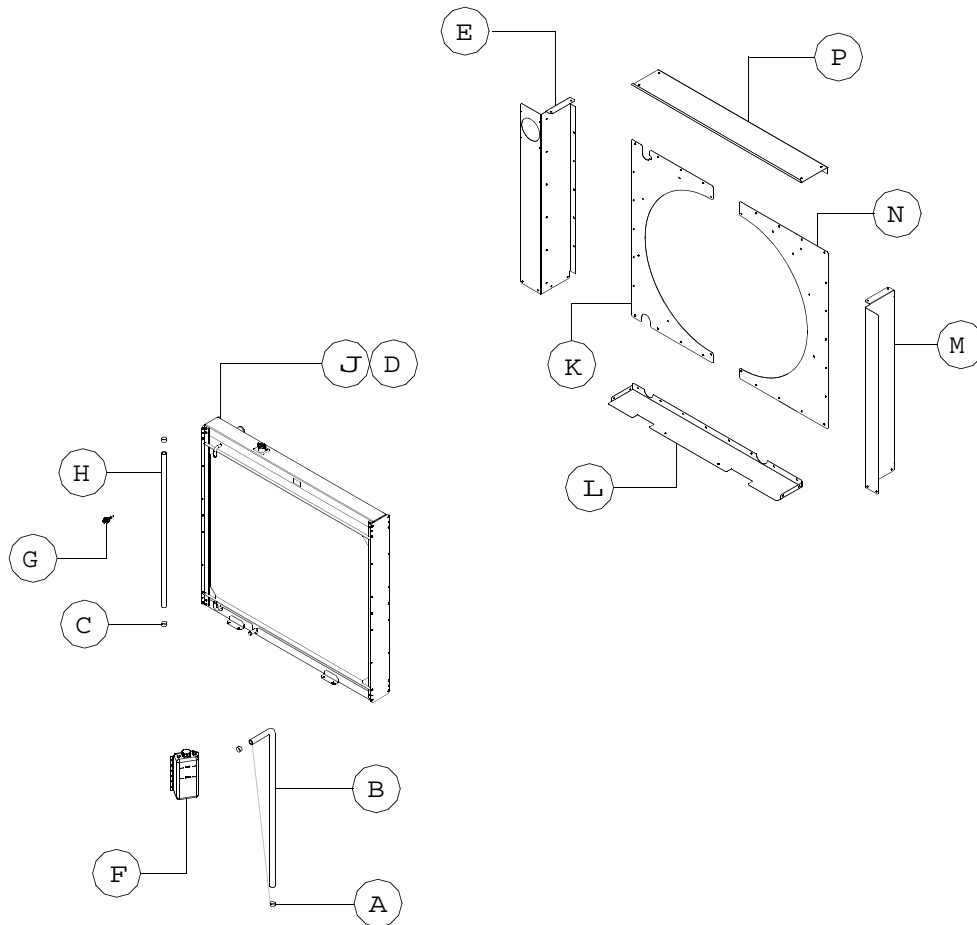


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	95235131	Clamp	2	120"
B	35360775	Tubing	1	
C	95220851	Clamp	2	
D	35279025	Screw		
E	54421730	Shroud, R.H.	1	As Required
F	36845600	Bottle, Coolant Recovery	1	
G	54404280	Sender	1	
H	35286327	Hose, Rubber	1	
J	22878482	Radiator	1	56"
K	54427810	Orifice, R.H. Fan	1	
L	54421714	Shroud, Bottom	1	
M	54421722	Shroud, L.H.	1	
N	22885263	Orifice, L.H. Fan	1	
P	54421706	Shroud, Top	1	
	54474572	Probe, Low Water	1	

 Engine Cooling Piping

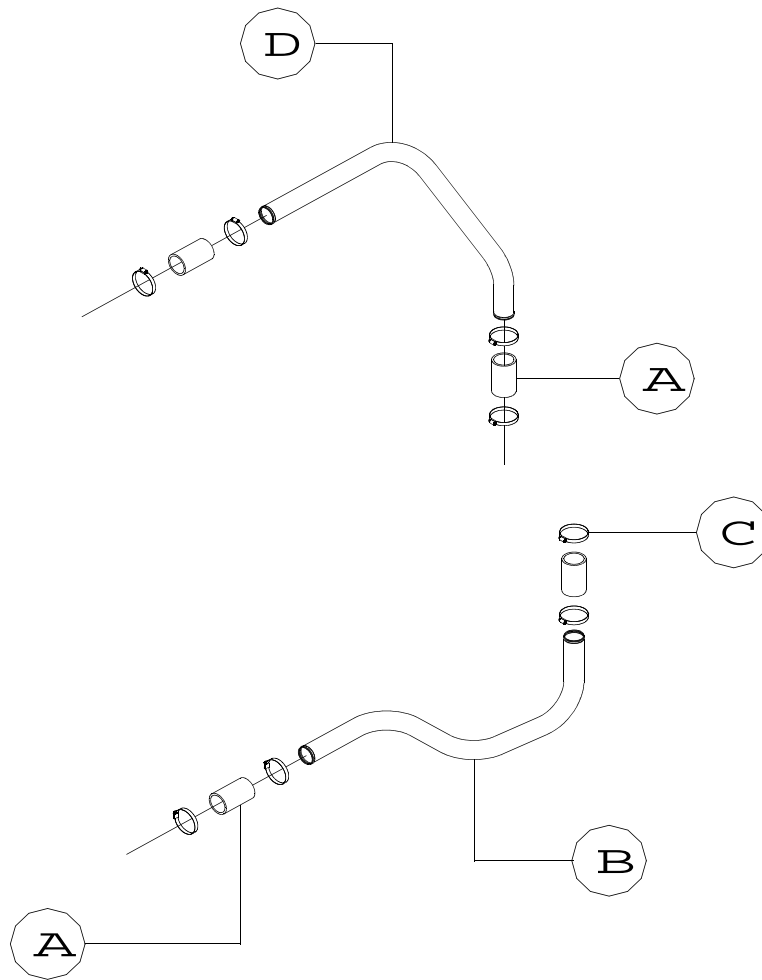

ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	35330570	Connector, Rubber	4	
B	54454251	Tube, Lower Radiator	1	
C	31497357	Clamp	8	
D	22901276	Tube, Upper Radiator	1	

 
Engine Charge Air Cooler and Mounting

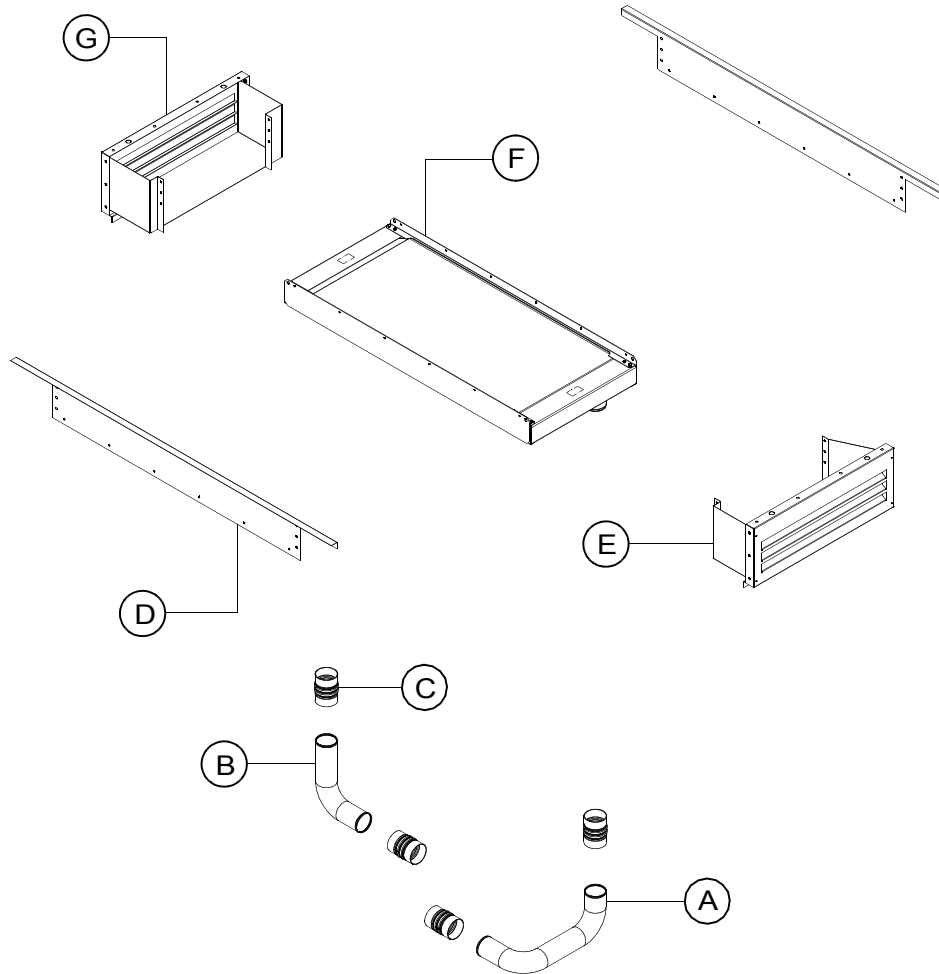

ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	22883912	Tube, Turbo Outlet	1	
B	22903728	Tube, Engine Inlet	1	
C	54422522	Hose, Rubber Connector	4	
D	22979934	Panel, Cooler side	2	
E	22990352	Vent, Curbside	1	
F	22891865	Assembly, Cooler	1	
G	22990360	Vent, Streetside	1	


Air Intake Assembly

 (AIR END)

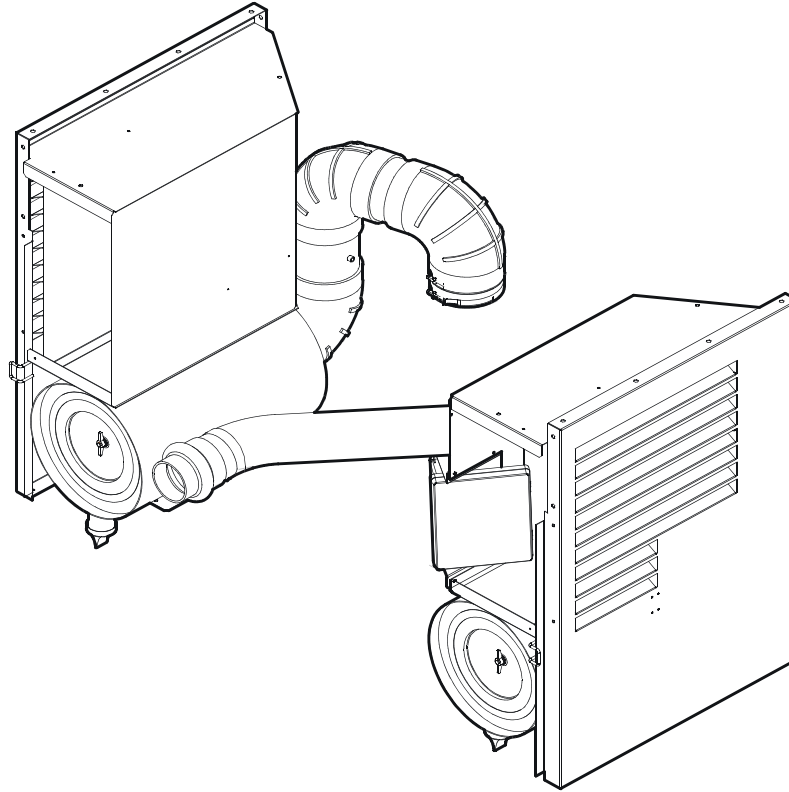


(ENGINE)

 (ENGINE)

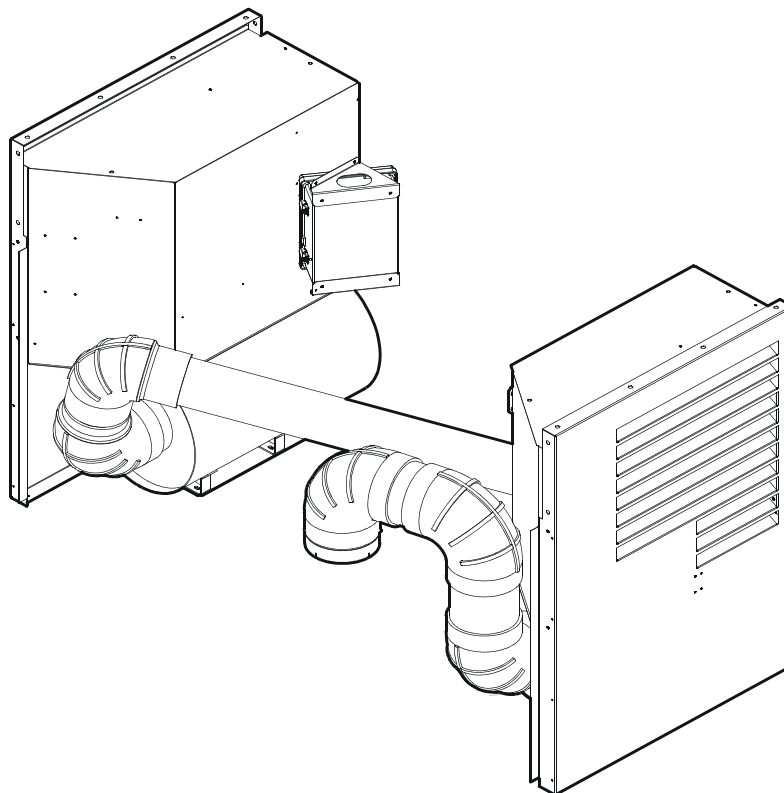


(AIR END)

 Engine Air Intake

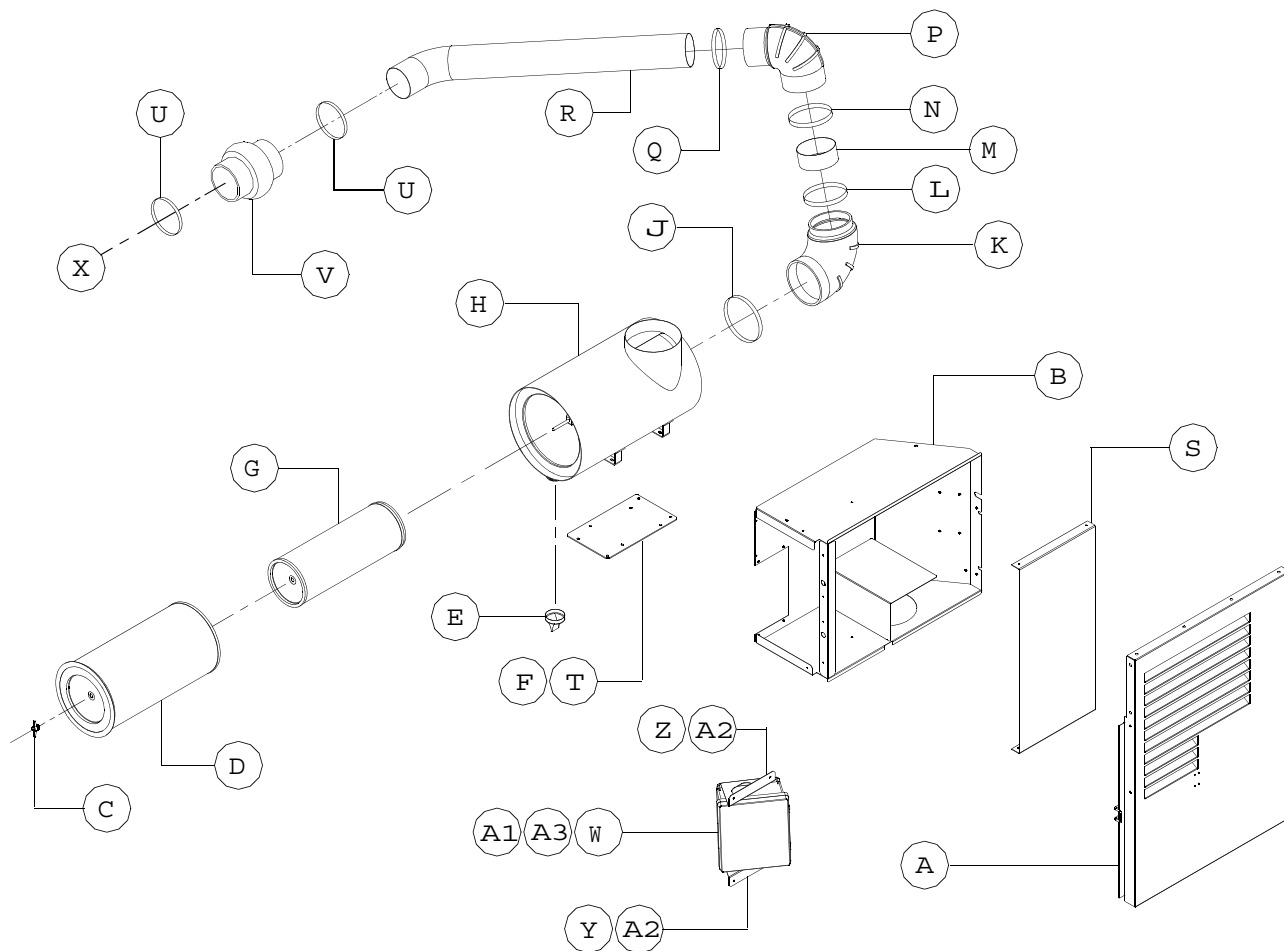


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	22991400	Intake Grill, Street Side	1	
B	22979793	Intake Housing, Street Side	1	
C	35388982	Nut Wing	1	
D	36864361	Element, Primary	1	
E	36867778	Valve, Evacuator	1	
F	54631338	Plate, Mounting	1	
G	36864379	Element, Safety	1	
H	54625926	Housing, Air Cleaner	1	
J	35119858	Clamp	1	
K	36759025	Elbow, Rubber	1	
L	35119858	Clamp	1	
M	35112648	Tubing	1	
N	35119858	Clamp	1	
P	35315894	Elbow, Rubber	1	
Q	35123496	Clamp	1	
R	54674007	Tube	1	
				Continued

 Engine Air Intake

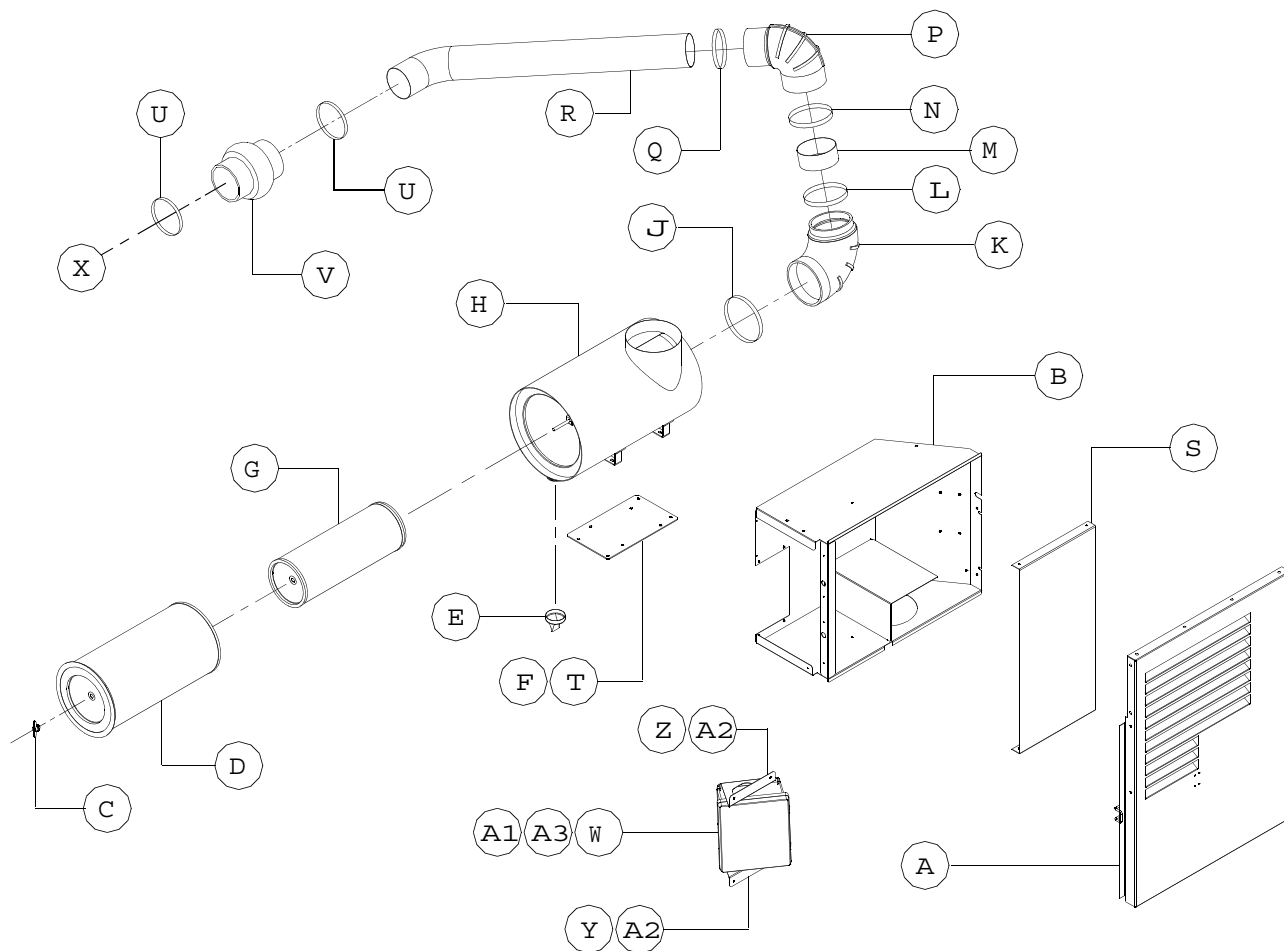

ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
S	22979785	Baffle, Vertical	1	Continued.....
T	35279025	Screw	4	
U	35123496	Clamp	2	
V	35114537	Hose, Hump	1	
W	36898104	Nut	4	
X	*	To Engine Turbo		
Y	54656533	Bracket, Bottom	1	
Z	54656525	Bracket, Top	1	
Al	54631312	Box, Power Distributor (Fuse)	1	
A2	35300771	Screw	4	
A3	36898096	Screw	4	
A4	36898104	Nut	4	

 
Air End Air Intake

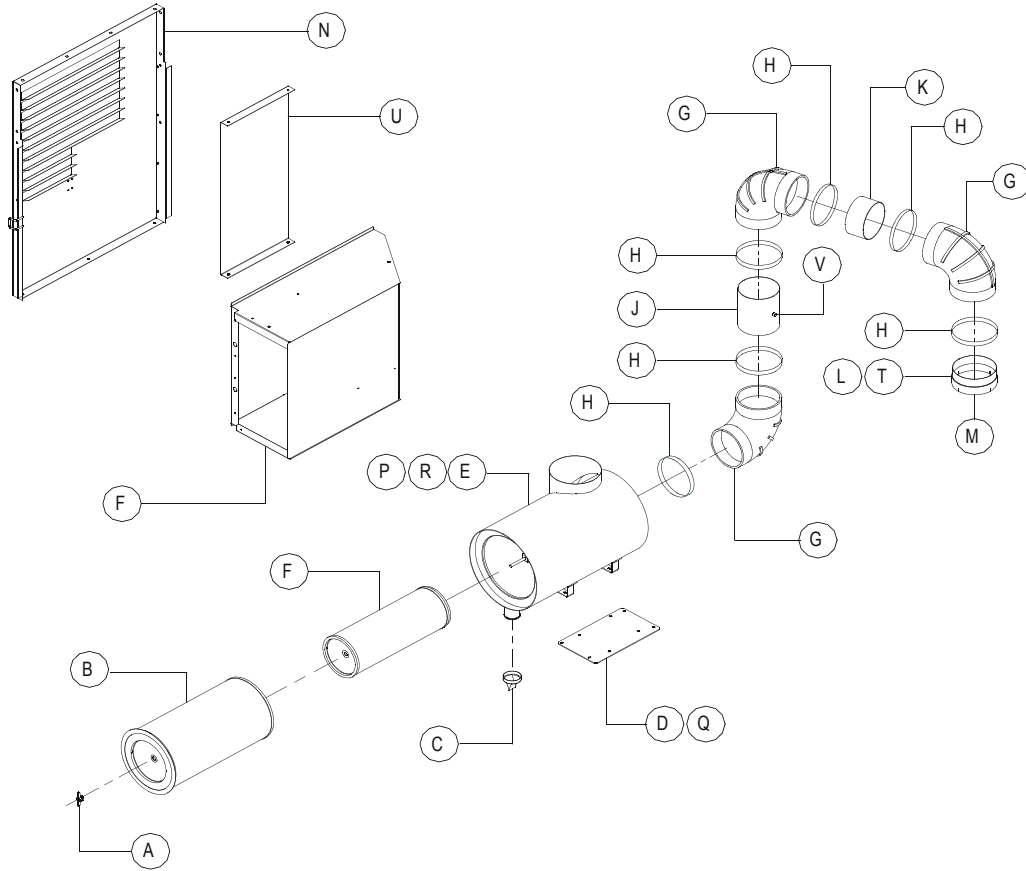


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	35388982	Nut, Wing	1	
B	36864361	Element, Primary	1	
C	36867778	Valve, Evacuator	1	
D	54631338	Plate, Mounting	1	
E	36864379	Element, Safety	1	
F	22979801	Intake Housing, Curb Side	1	
G	35120211	Elbow, Rubber	3	
H	35129071	Clamp	6	
J	54638143	Tube	1	
K	35300110	Tube	1	
L	39919352	Tube, Adapter	1	
M	*	To Air End Intake	*	
N	22991384	Intake Grill, Curb Side	1	
P	36864346	Housing, Air Cleaner	1	
Q	35279025	Screw	1	
R	35376953	Screw	1	
S	36879195	Nut	1	
T	39919360	Gasket	1	
U	22979785	Baffle, Vertical	1	
V	54557095	Thermister (RT-6)		

Air Intake Acoustic Assembly

 
(AIR END)

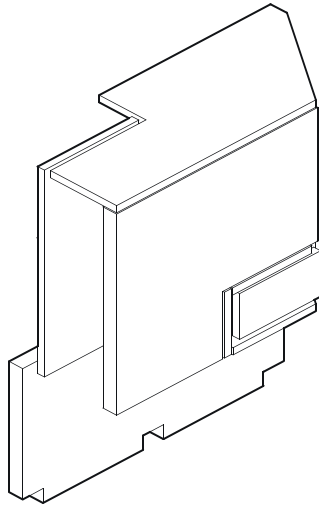


(ENGINE)

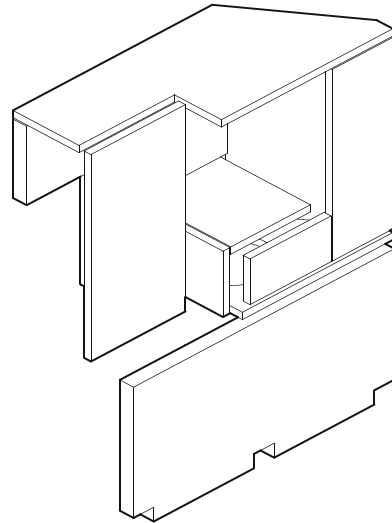 


(ENGINE)

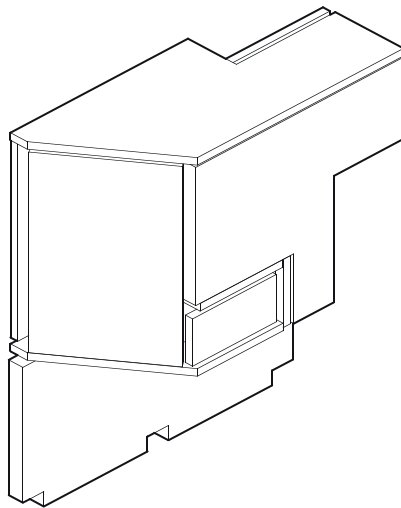 

(AIR END)

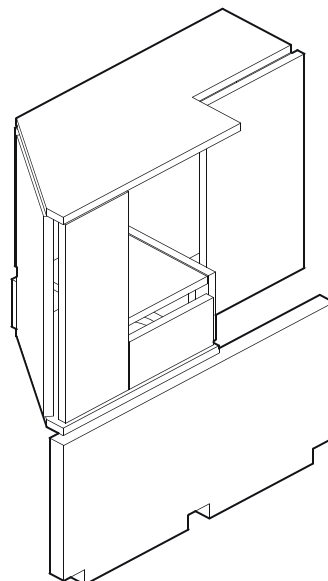 


Engine Air Intake Acoustics

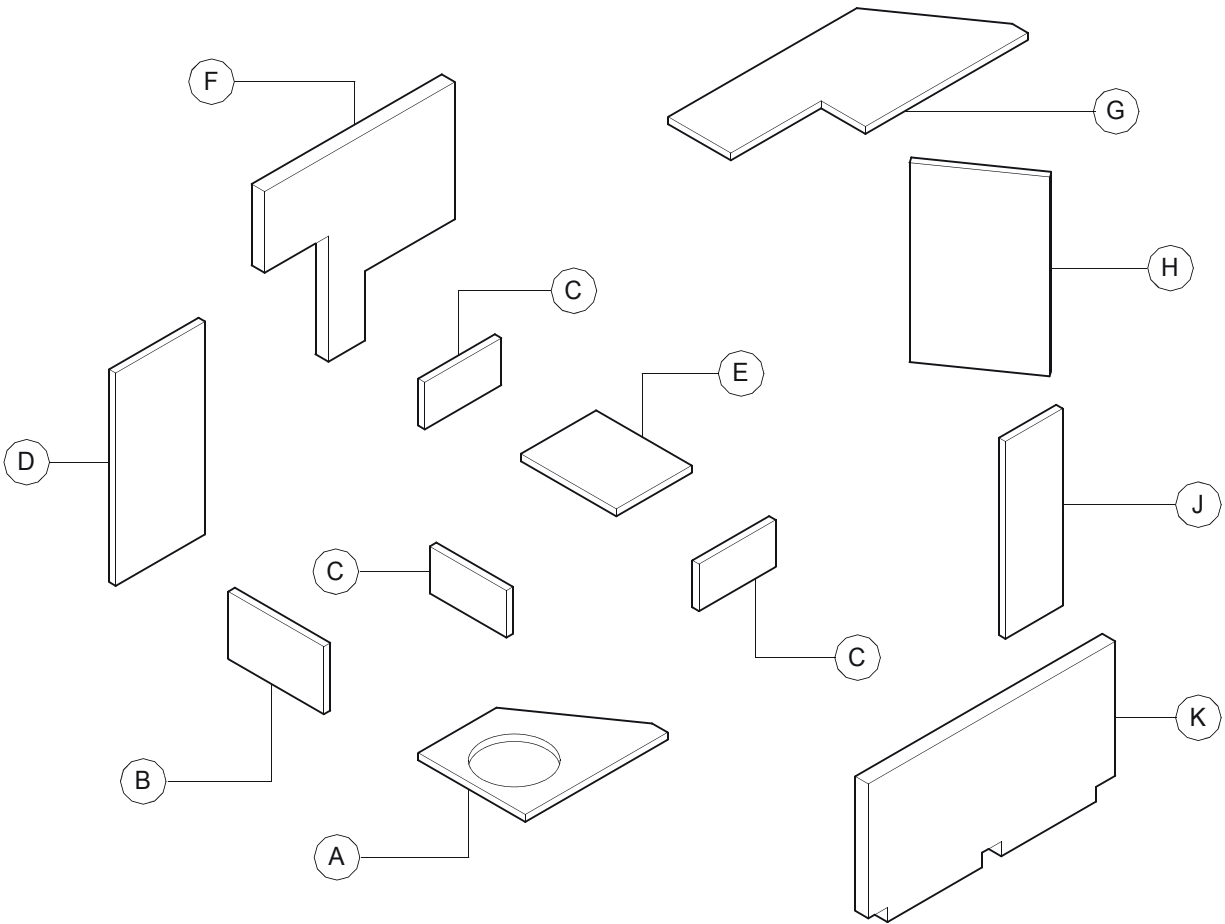 


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	54659289	Foam, Engine Air Intake (Bottom)	1	
B	54659271	Foam, Intake (Side)	1	
C	54659255	Foam, Intake Box	3	
D	54659222	Foam, Intake (Rear)	1	
E	54659263	Foam, Intake Box (Top)	1	
F	54659339	Foam, Intake Rear	1	
G	54659305	Foam, Intake (Top)	1	
H	54659347	Foam, Intake (Side)	1	
J	54659248	Foam, Intake (Side)	1	
K	54659230	Foam, Intake (Front)	1	

 Air End Air Intake Acoustics

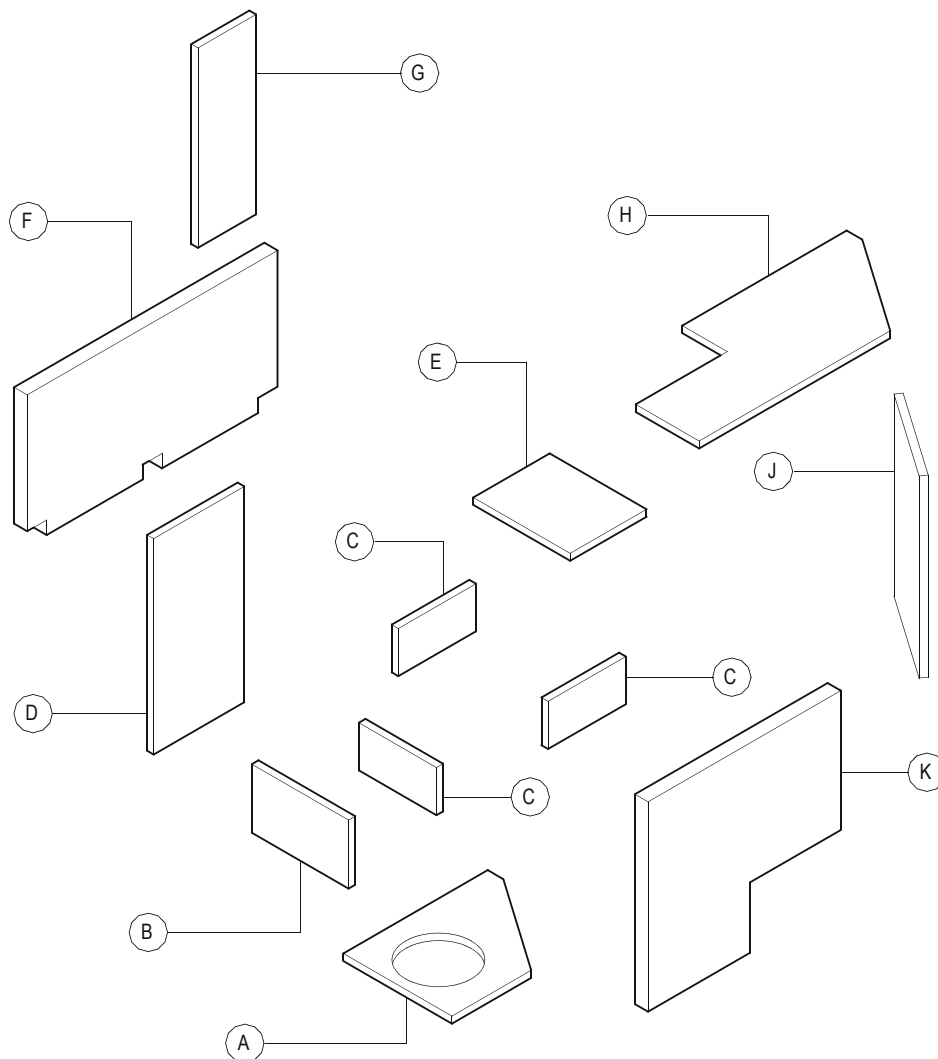


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	54659297	Foam, Air End Air Intake (Bottom)	1	
B	54659271	Foam, Intake (Side)	1	
C	54659255	Foam, Intake Box	3	
D	54659222	Foam, Intake (Rear)	1	
E	54659263	Foam, Intake Box (Top)	1	
F	54659230	Foam, Intake Rear	1	
G	54659248	Foam, Intake (Front)	1	
H	54659313	Foam, Intake (Top)	1	
J	54659347	Foam, Intake (Side)	1	
K	54659321	Foam, Intake (Rear)	1	

 Fuel Tank Assembly

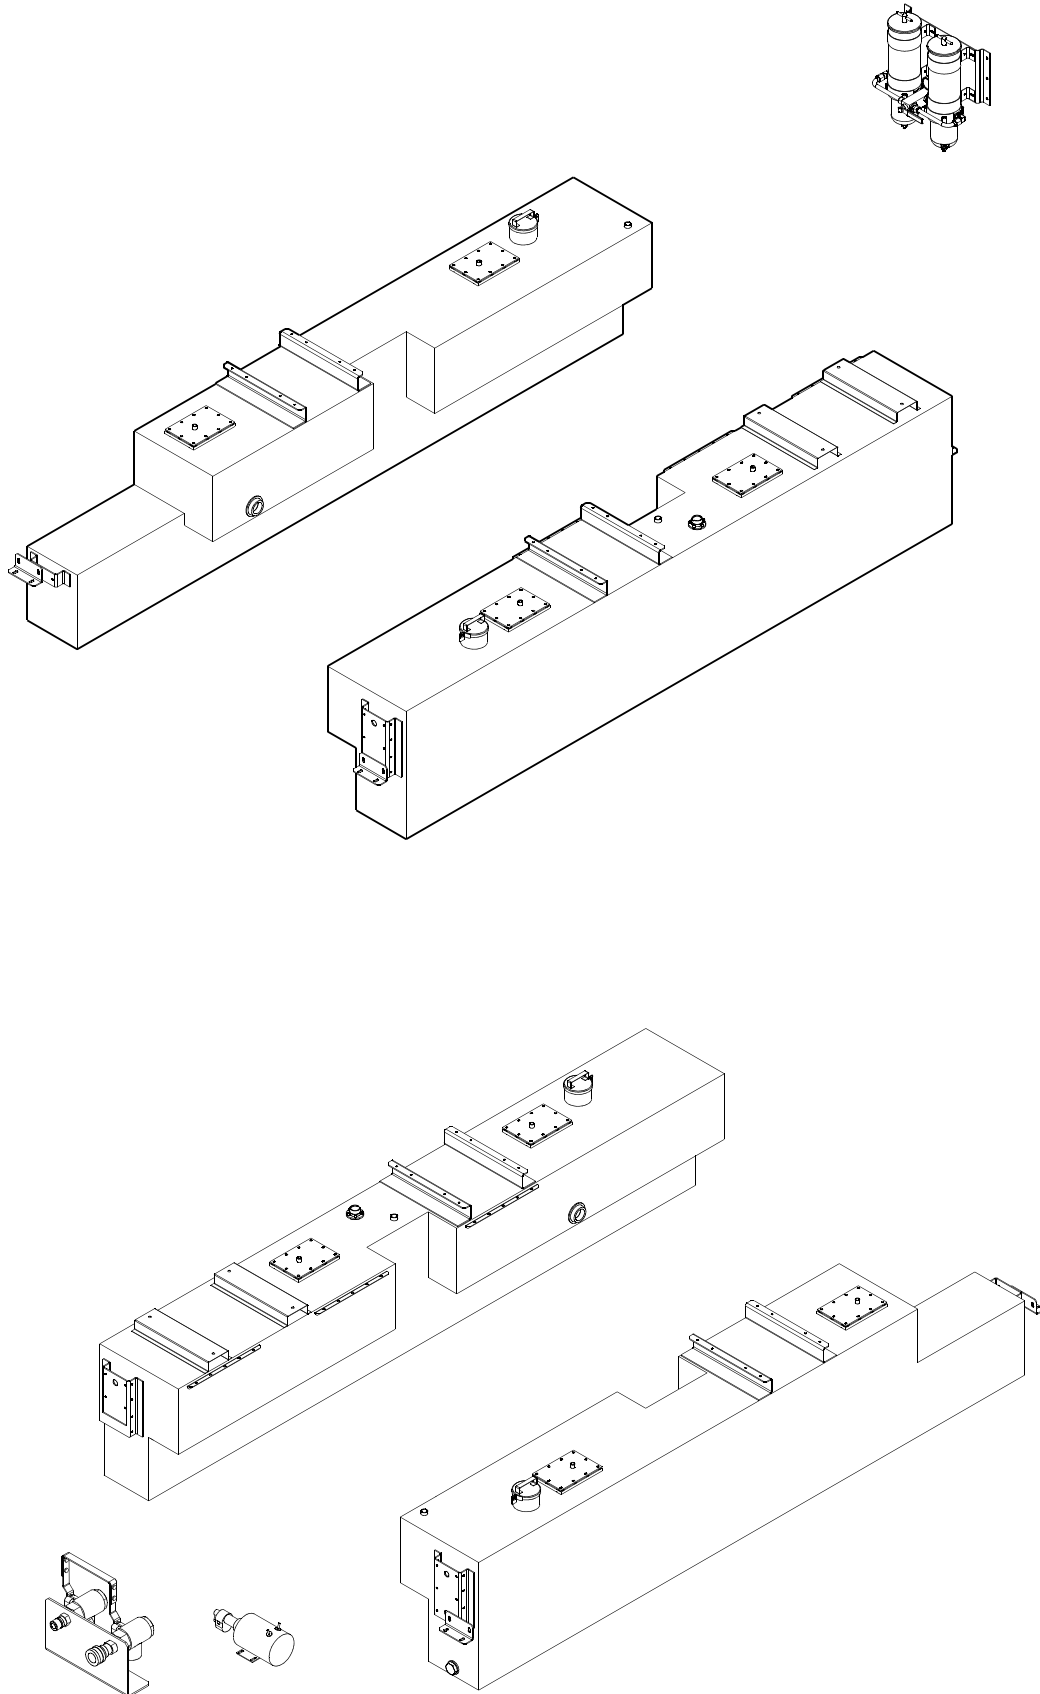


Fuel Tank

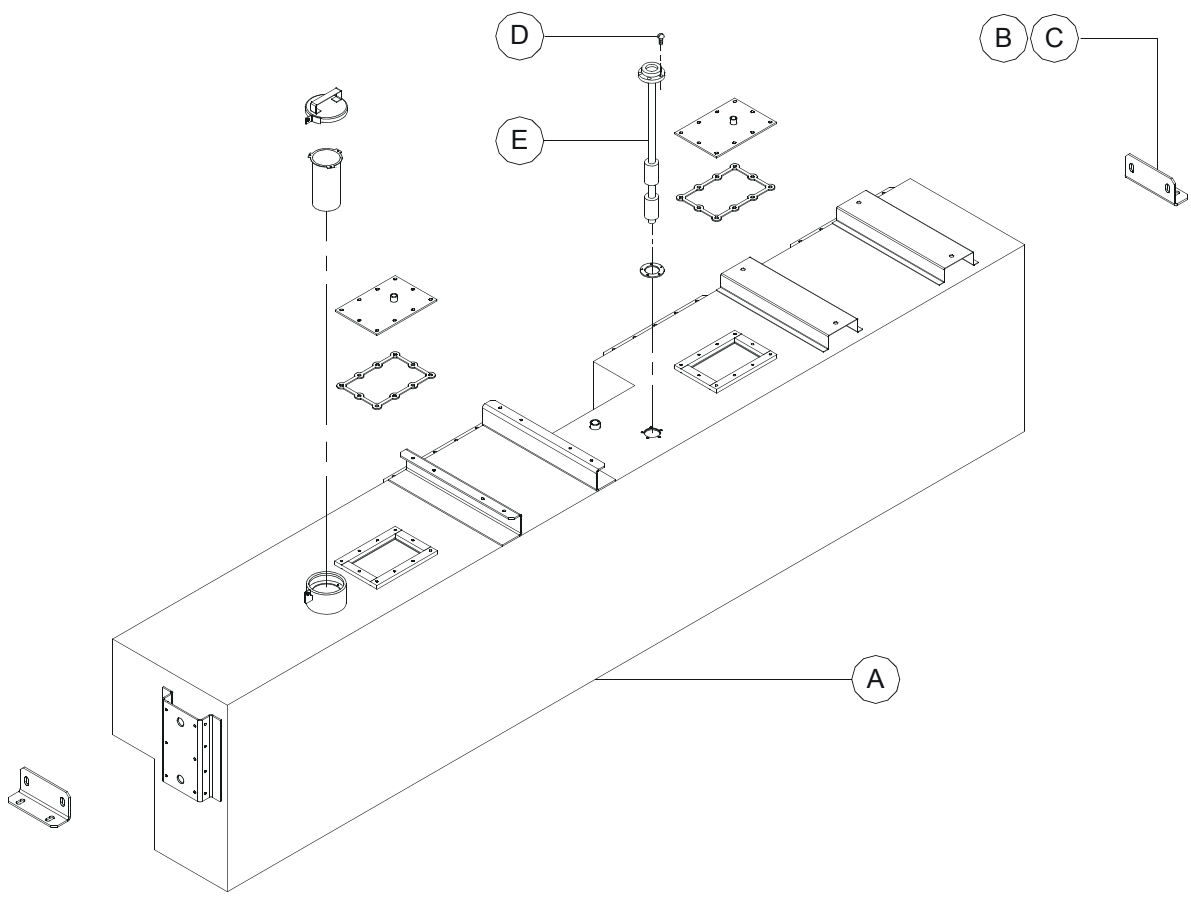 


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	54377585	Tank, Fuel	1	
B	54381769	Bracket, Mounting	2	
C	35279025	Screw	8	
D	36842102	Screw	5	
E	36876845	Sender, Fuel	1	

 Fuel Tank

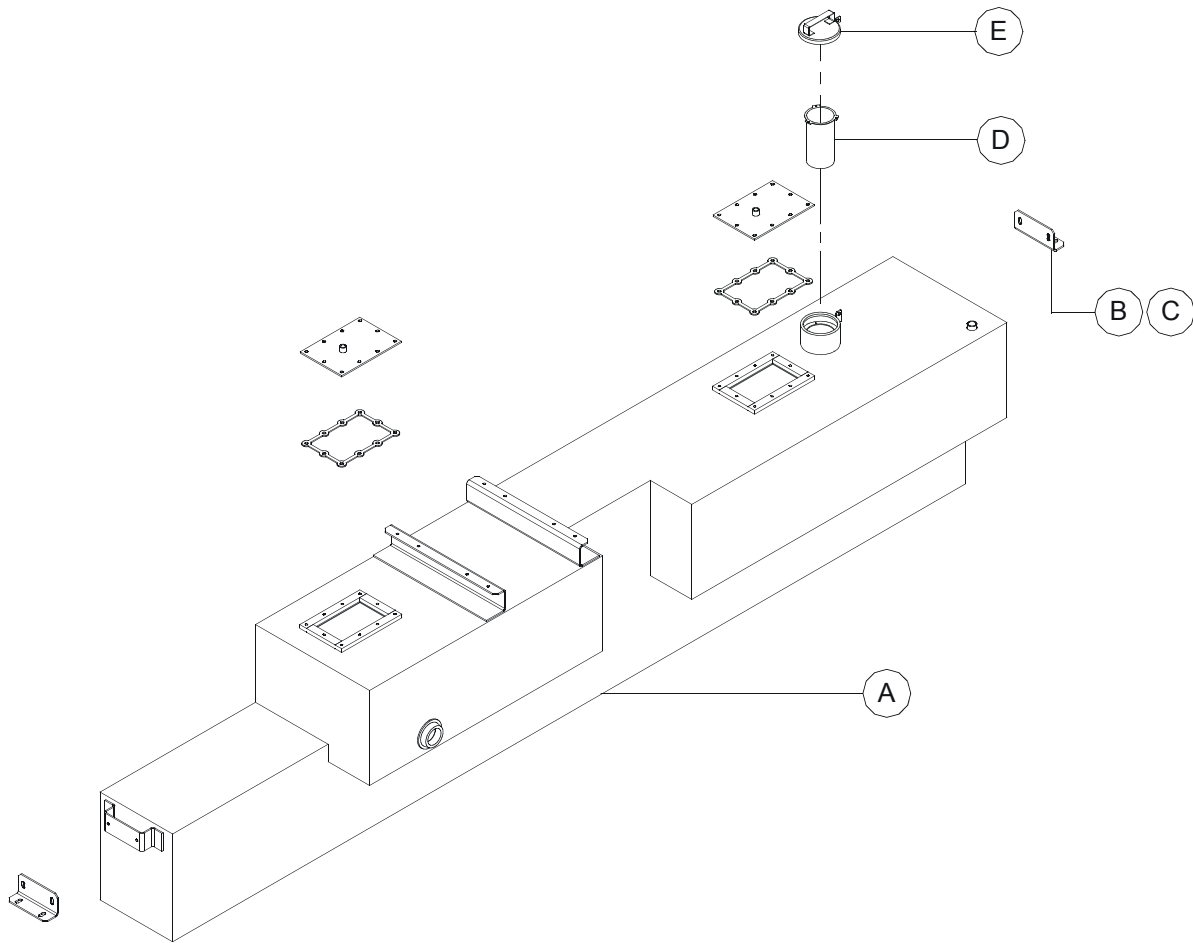


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	54381793	Tank, Fuel	1	
B	54381769	Bracket, Mounting	2	
C	35279025	Screw	8	
D	36845022	Strainer	1	
E	36845014	Cap, Fuel	1	

 Fuel Tank Filler

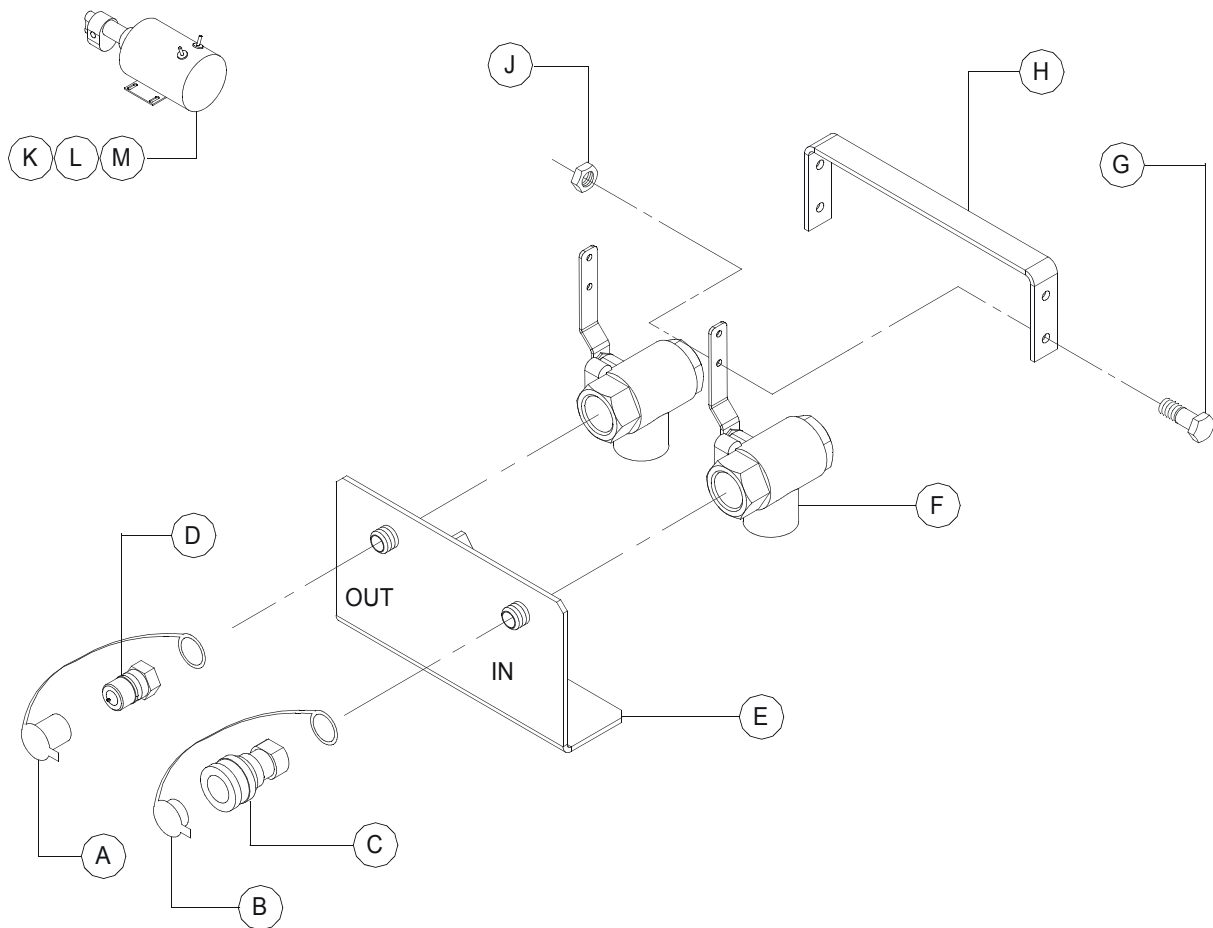


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	54720222	Plug, Dust	1	
B	54720230	Plug, Dust	1	
C	54489109	Connector	1	
D	54489125	Coupler	1	
E	22979587	Bracket, Fuel Coupler	1	
F	54726575	Valve, 3-Way	2	
G	36898096	Bolt	4	
H	54720248	Lever, Valve	1	
J	36898104	Nut	4	
K	54661962	Fuel Pump Assembly	1	
L	54728605	Motor, Fuel Pump	1	
M	54728639	Head, Fuel Pump	1	

 Fuel Tank

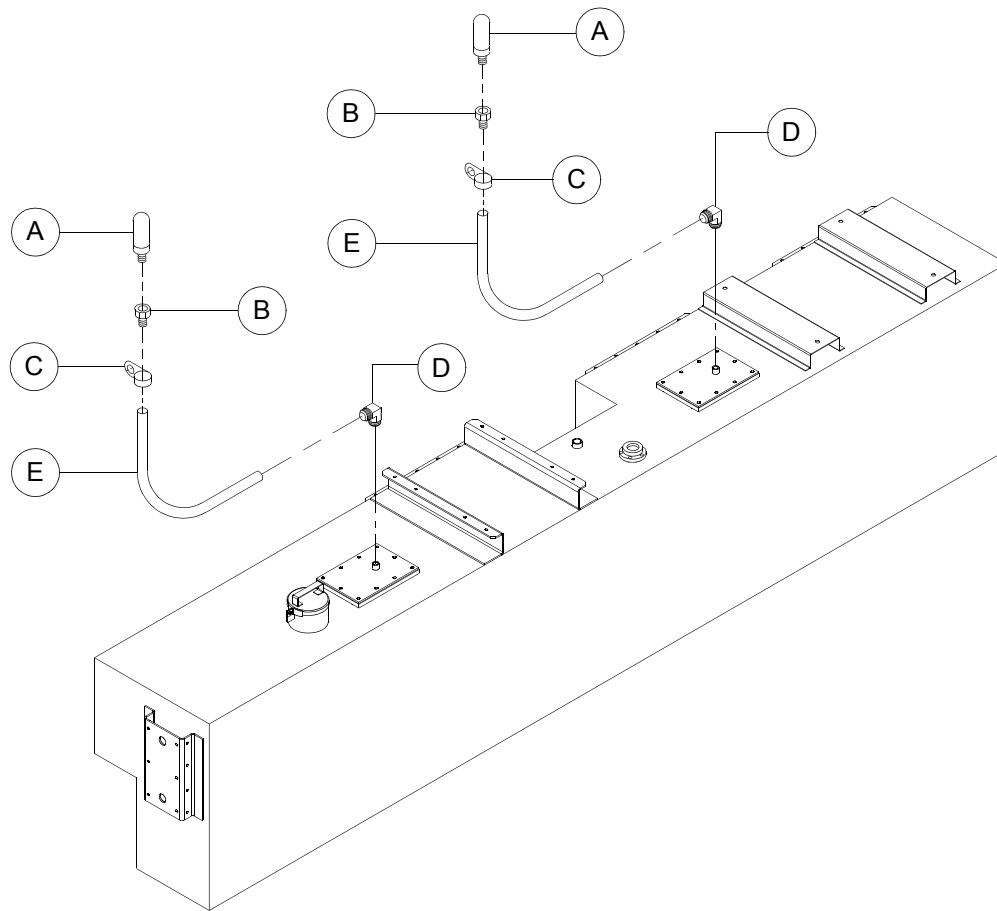


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	35369354	Elbow	1	
B	35356484	Tubing	1	
C	35253038	Clamp	1	
D	35369339	Connector	1	
E	35322395	Silencer	1	

 Fuel Tank

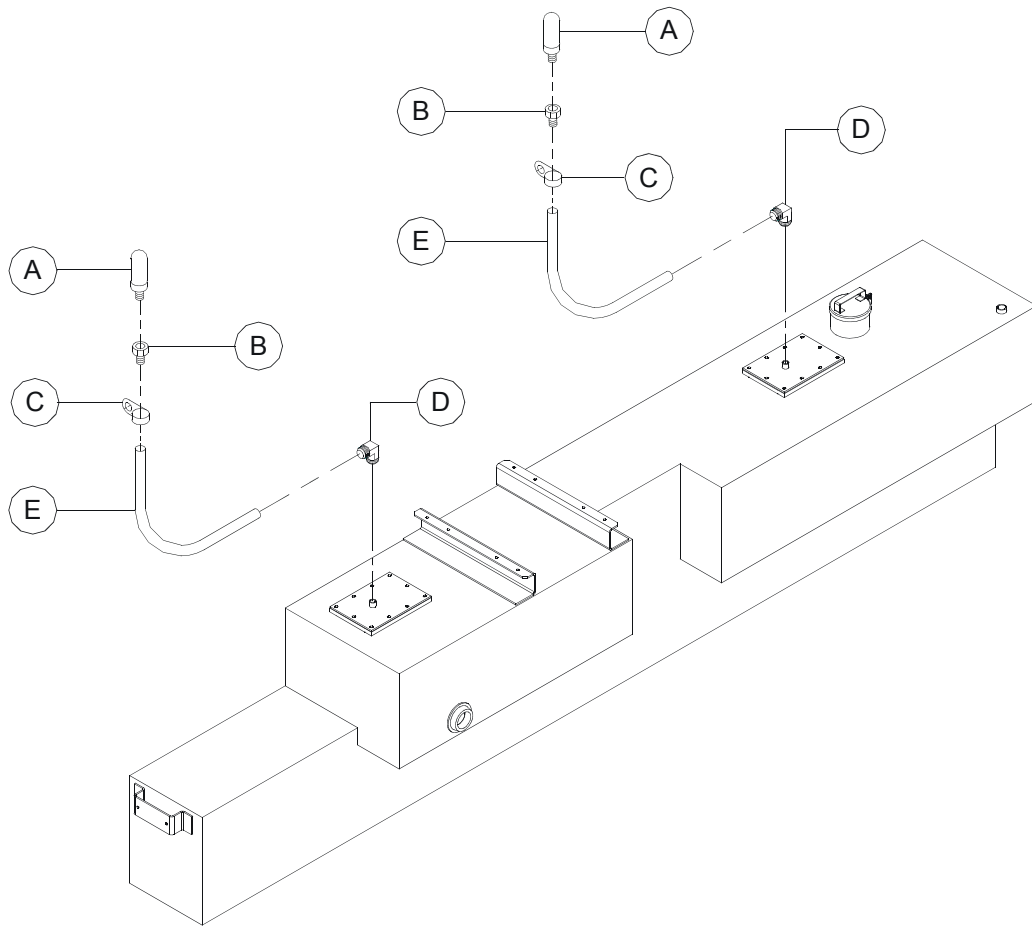

ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	35369354	Elbow	1	
B	35356484	Tubing	1	
C	35253038	Clamp	1	
D	35369339	Connector	1	
E	35322395	Silencer	1	

 
Fuel Piping

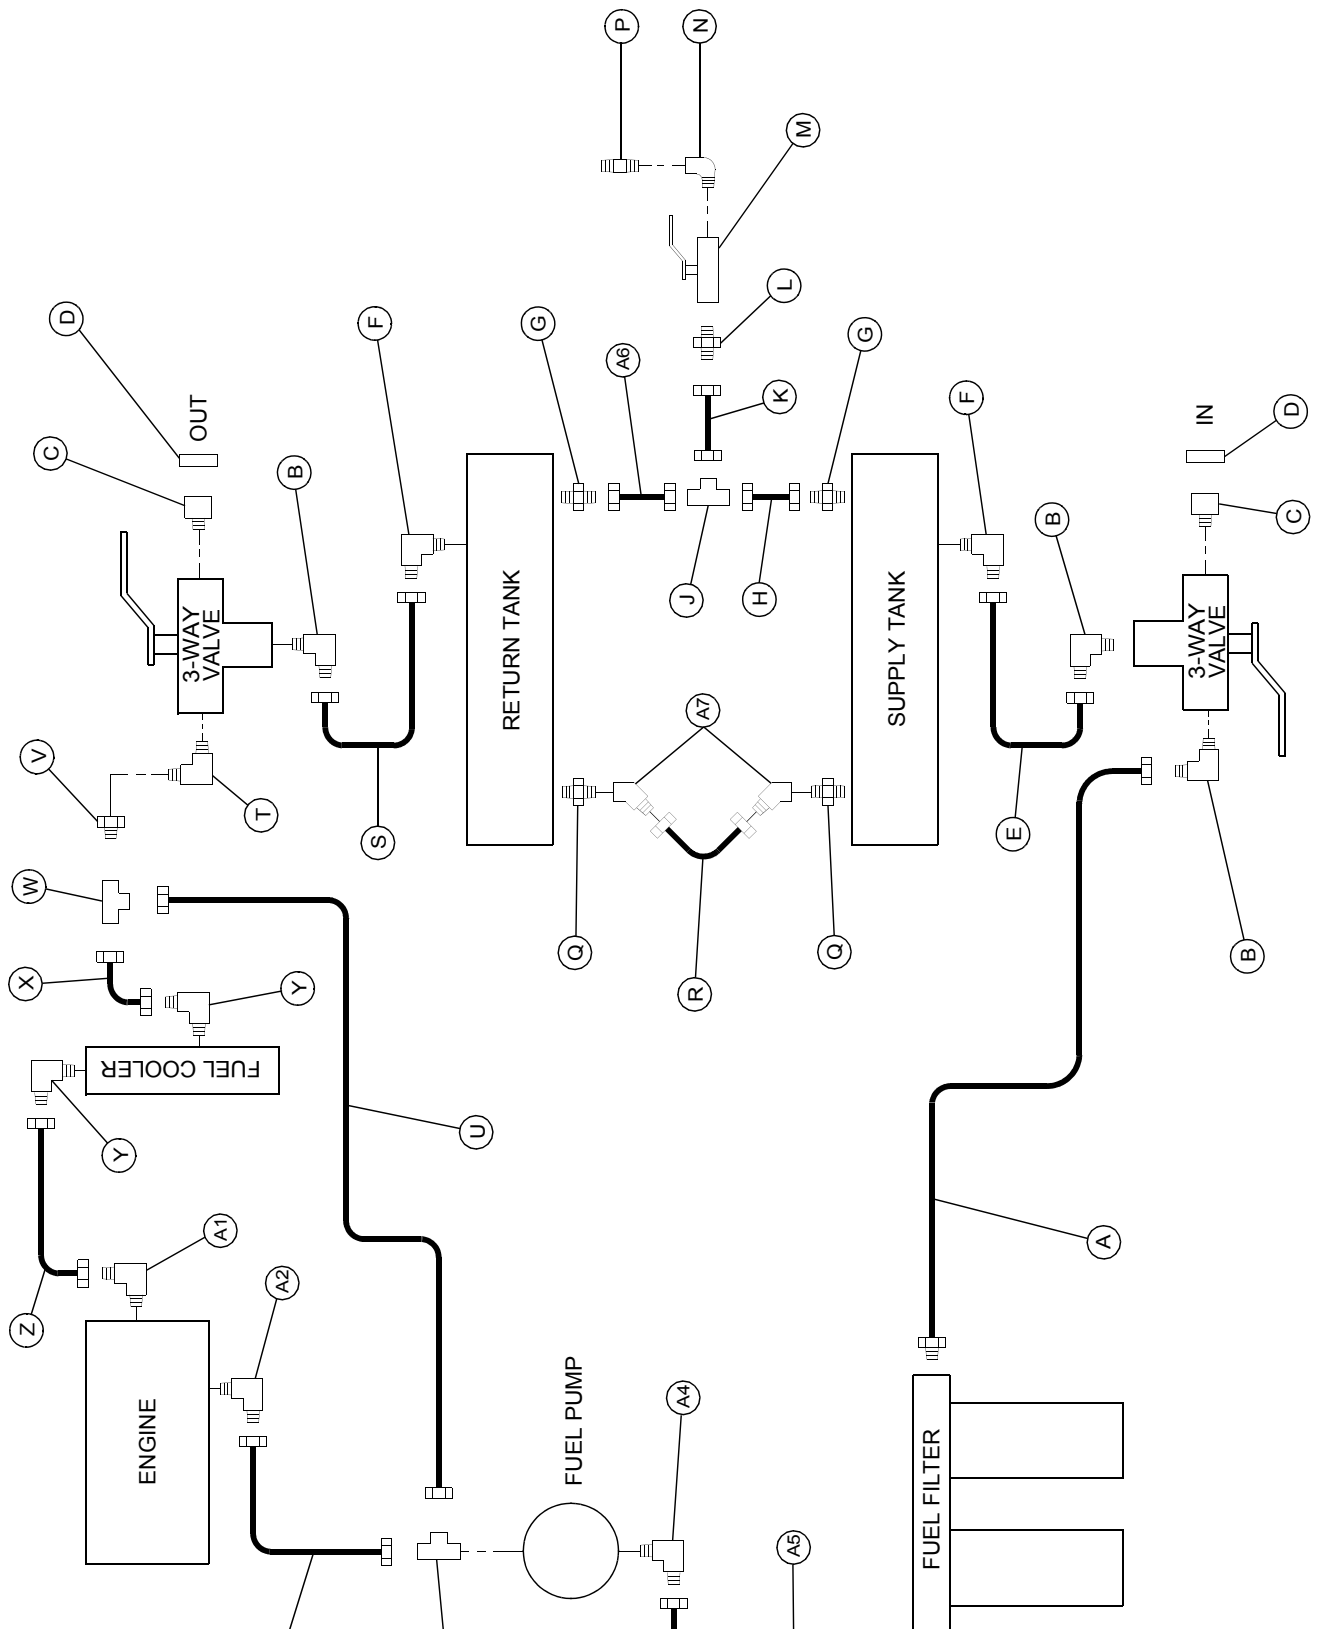

Fuel Piping



ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	35291863	Hose Assembly		
B	95937637	Elbow		
C	54489125	Coupler		
D	54720230	Plug, Dust		
E	35286939	Hose Assembly		
F	35286756	Elbow		
G	36846061	Adapter		
H	36792018	Hose Assembly		
J	95774220	Tee		
K	54718747	Hose Assembly		
L	95328761	Adapter		
M	35576123	Valve, Ball		
N	95928180	Elbow		
P	95946117	Nipple		
Q	35335124	Adapter		
R	54718754	Hose Assembly		
S	54718887	Hose Assembly		
T	95928172	Elbow		
U	54718655	Hose Assembly		
V	95953956	Bushing		
W	35315977	Tee		
X	54718861	Hose Assembly		
Y	95992863	Elbow		
Z	54718853	Hose Assembly		
AI	35287911	Elbow		
A2	35305648	Elbow		
A3	54718846	Hose Assembly		
A4	35286525	Elbow		
A5	35291863	Hose Assembly		
A6	35142199	Hose Assembly		
A7	95871448	Elbow, 45		

 Water Filter Assembly

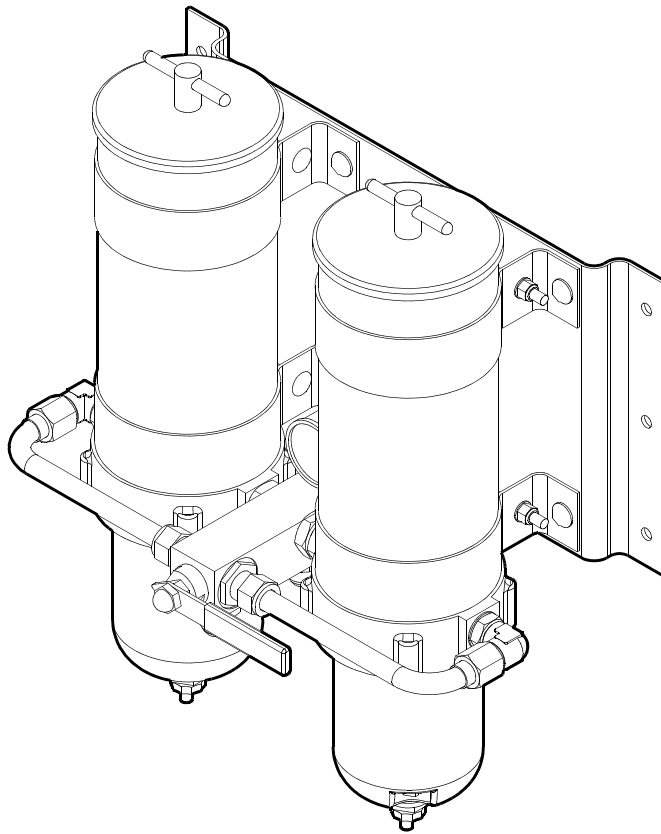


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	54661582	Filter Assembly	1	24 Volt / 300 Watt
B	54726971	Gauge, Vacuum	1	
C	54726965	Heaters	2	
D	54661590	Elements, Replacement Items B, C, and D Included with Assembly	2	

  Hydraulic Fan Assembly

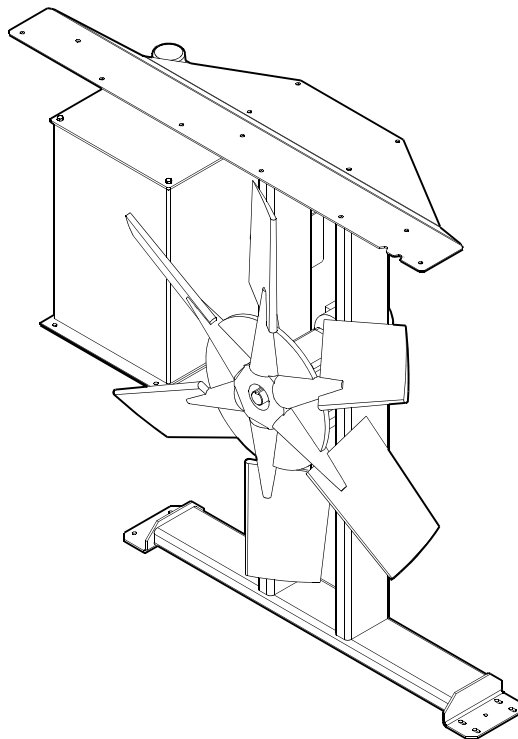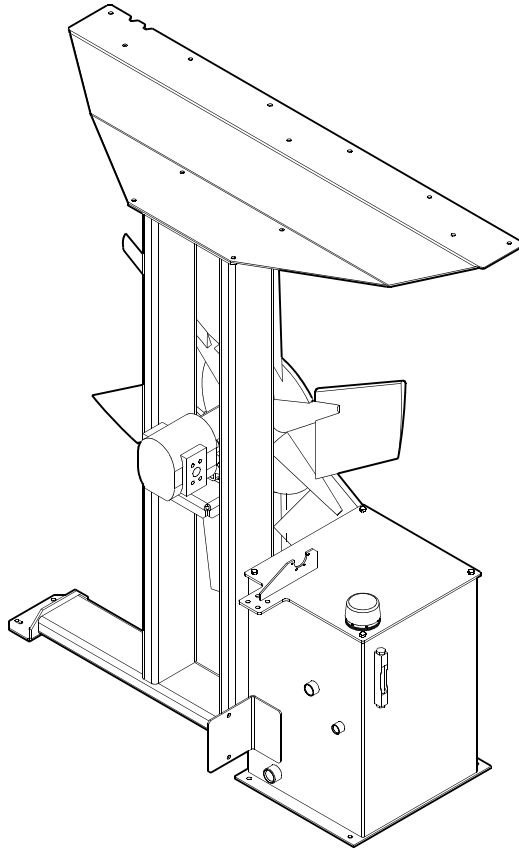


Hydraulic Fan Assembly

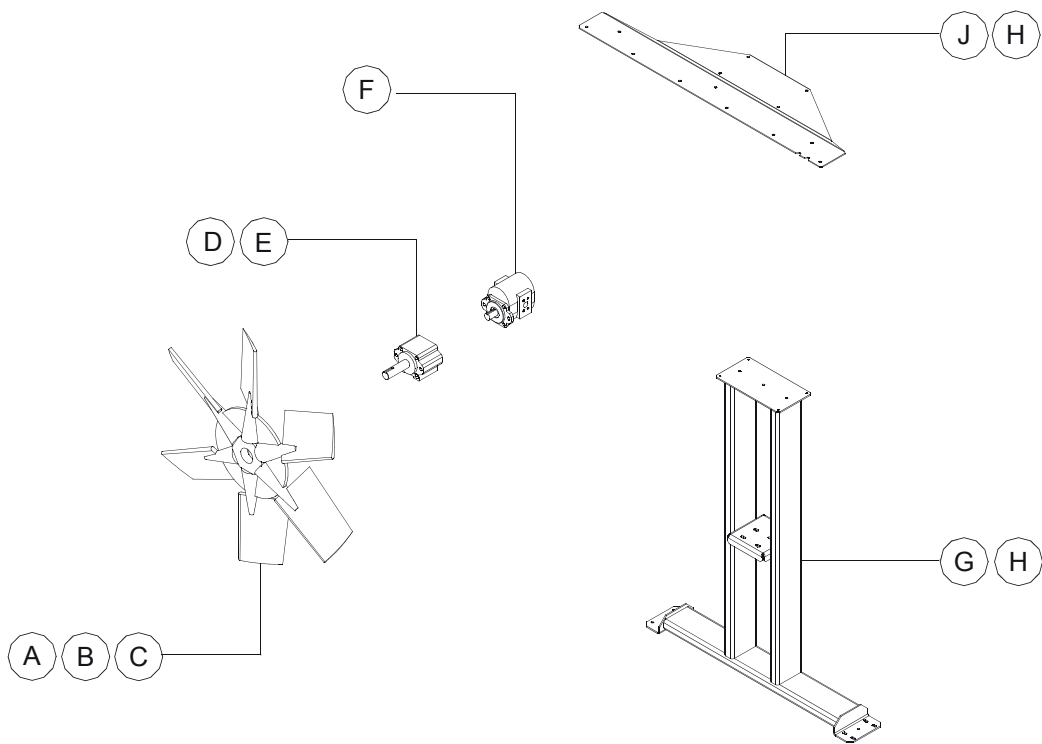 

ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	54721188	Fan	1	
B	36863389	Bushing, Fan	1	
C	35321421	Key, Bushing	1	
D	43205327	Adapter, Overhung Load	1	
E	95955548	Screw	2	
F	54661442	Motor, Hydraulic Fan	1	
G	54597588	Support, Hydraulic Fan	1	
H	35279025	Screw	*	
J	54601620	Plate, Top	1	

 
Hydraulic Tank Assembly

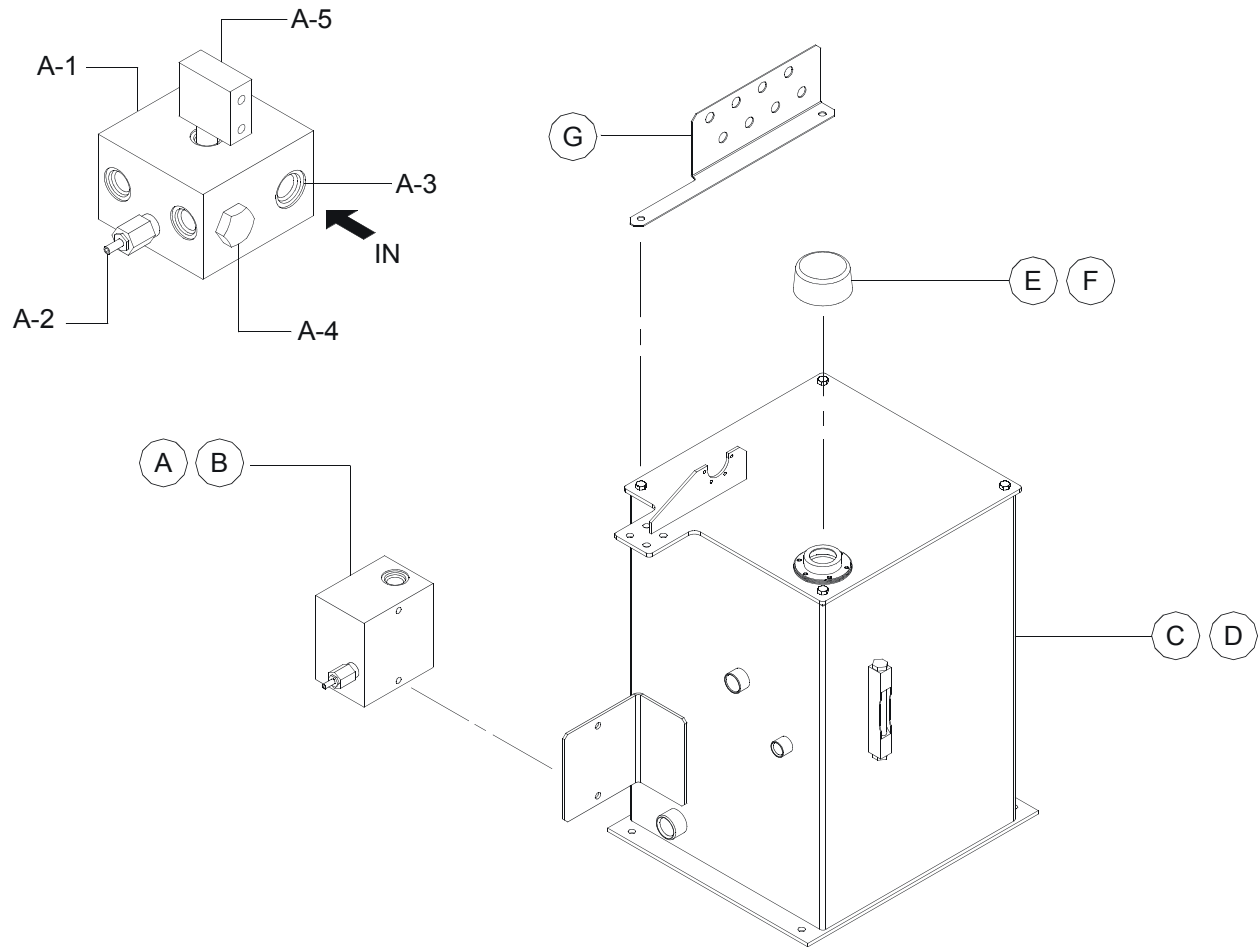

ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	54603865	Relief Valve Assembly	1	
A-1	54631924	Block, Relief Valve	1	
A-2	54661517	Cartridge, Adjustable Relief	1	
A-3	54661525	Cartridge, Check Valve	1	
A-4	54661541	Valve, Check	1	
A-5	54661509	Valve, Proportional	1	
	35279827	Elbow	1	
	35367846	Nut, Swivel	1	
	54661574	Isolator, Needle Valve Gauge	1	
	54661566	Gauge, 0-3000 PSI	1	
B	95934618	Screw	2	
C	54457072	Tank Assembly	1	
D	35279025	Screw	4	
E	43205384	Cap	1	
F	43205392	Gasket	1	
G	54576327	Bracket, Transducer	1	

**Not
Illustrated**

 
Hydraulic Piping

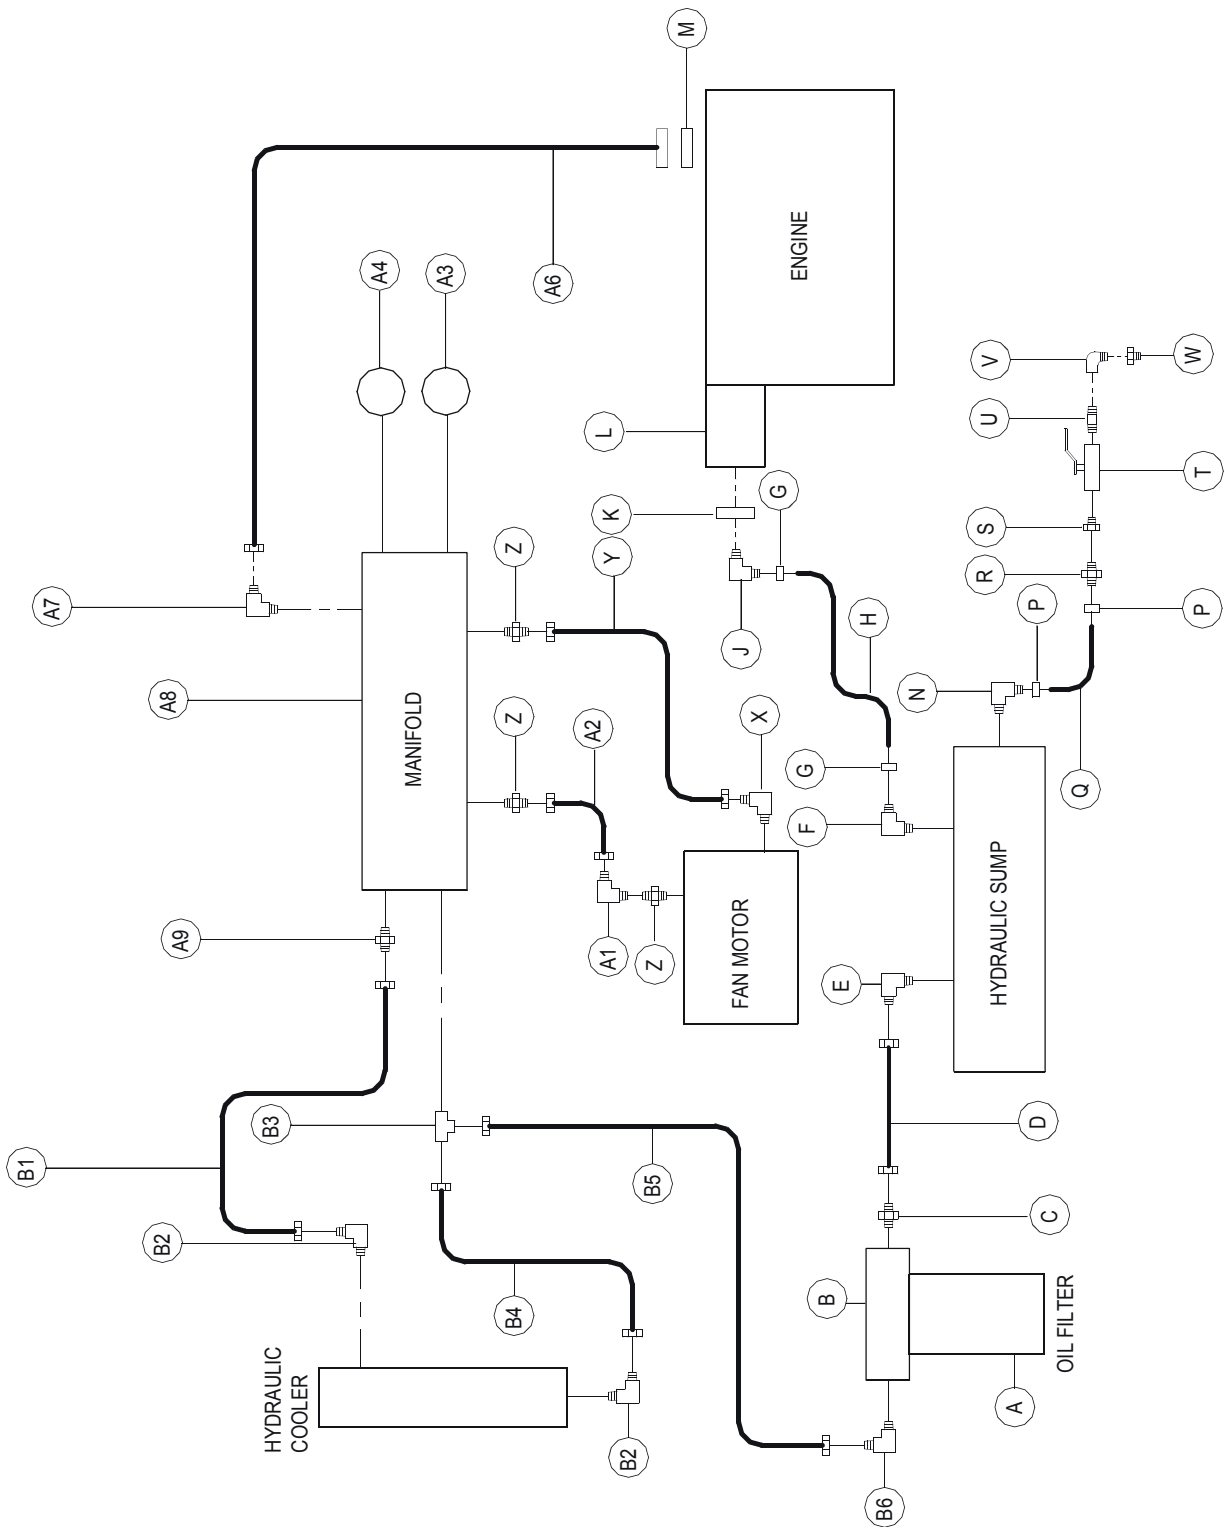

Hydraulic Piping


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	39911615	Element, Filter		
B	39871165	Head, Filter		
C	95356978	Connector		
D	54718697	Hose Assembly		
E	95219853	Elbow		
F	54603733	Elbow		
G	54603816	Clamp		
H	54603790	104" Hose		
J	54603782	Elbow		
K	54603758	Flange, Split		
L	54604343	Pump, Hydraulic		
M	54603766	Flange, Split		
N	35366665	Elbow		
P	95220844	Clamp		
Q	35326578	96" Hose		
R	35326560	Adapter		
S	95953949	Bushing		
T	35576115	Valve, Ball		
U	95647939	Nipple		
V	95928172	Elbow		
W	95944617	Bushing		
X	35291384	Elbow		
Y	54718705	Hose Assembly		
Z	95955993	Connector		
A1	35292051	Elbow		
A2	54718705	Hose Assembly		
A3	54661509	Valve, Proportional		
A4	54661566	Gauge		
A5	54661574	Isolator		
A6	54718721	Hose Assembly		
A7	35291384	Elbow		
A8	54603865	Manifold		
A9	35295880	Connector		
B1	54718788	Hose Assembly		
B2	35294750	Elbow		
B3	35332030	Tee		
B4	54718762	Hose Assembly		
B5	54718689	Hose Assembly		
B6	59798322	Elbow		

 Battery and Mounting

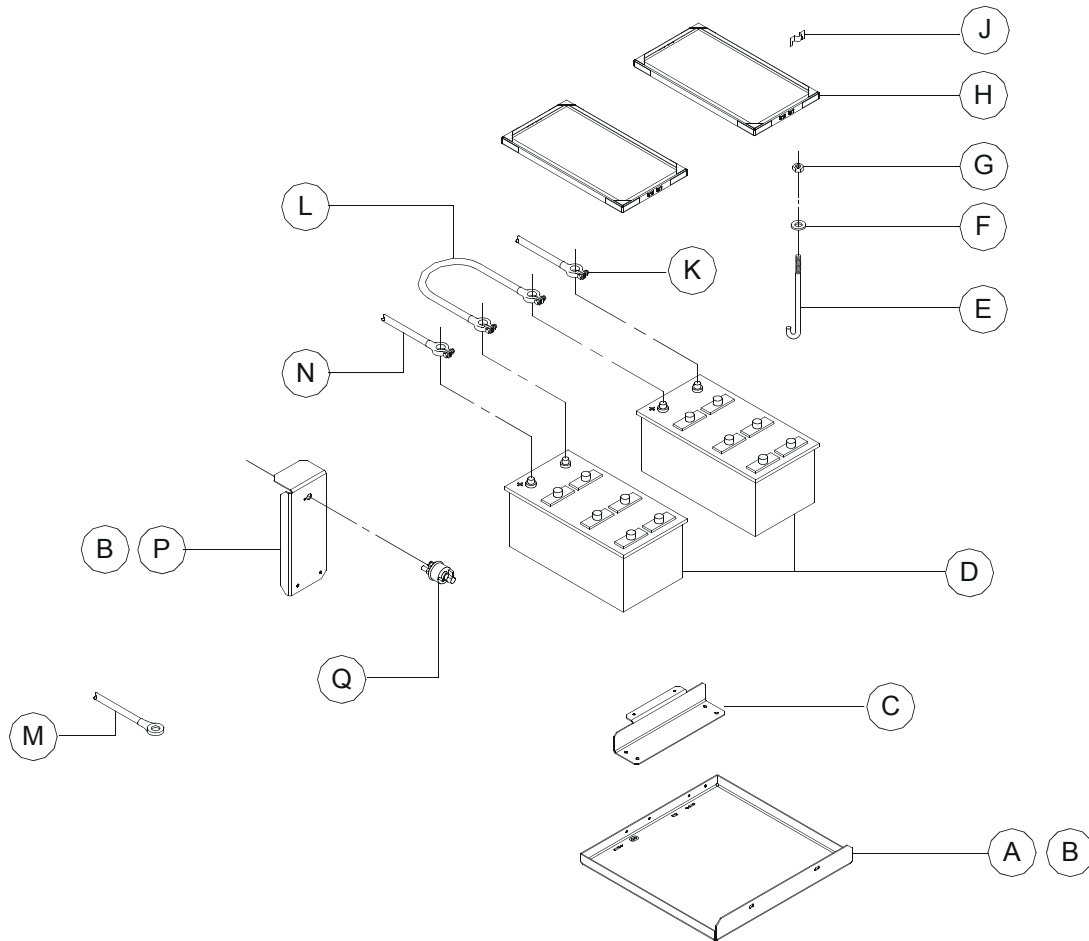


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	54618640	Tray, Battery	1	
B	35279025	Screw	*	
C	54619952	Support, Tray	1	
D	35225788	Battery	2	
E	36860005	J-Bolt	4	
F	95935029	Washer	4	
G	35144492	Nut	4	
H	35562156	Hold-Down, Battery	2	
J	35108216	Clip	4	
K	54511258	Cable, Negative	1	
L	35128982	Cable, Jumper	1	
M	54511274	Cable, Positive	1	
N	54511282	Cable, Disconnect Switch	1	
P	54690789	Bracket, Master Disconnect Switch	1	
Q	36896975	Switch, Master Disconnect	1	
	54511241	Ground Strap From Starter	1	
	35293075	Ground Strap to RH of Engine	1	

 Instrument / Control Panel Assembly

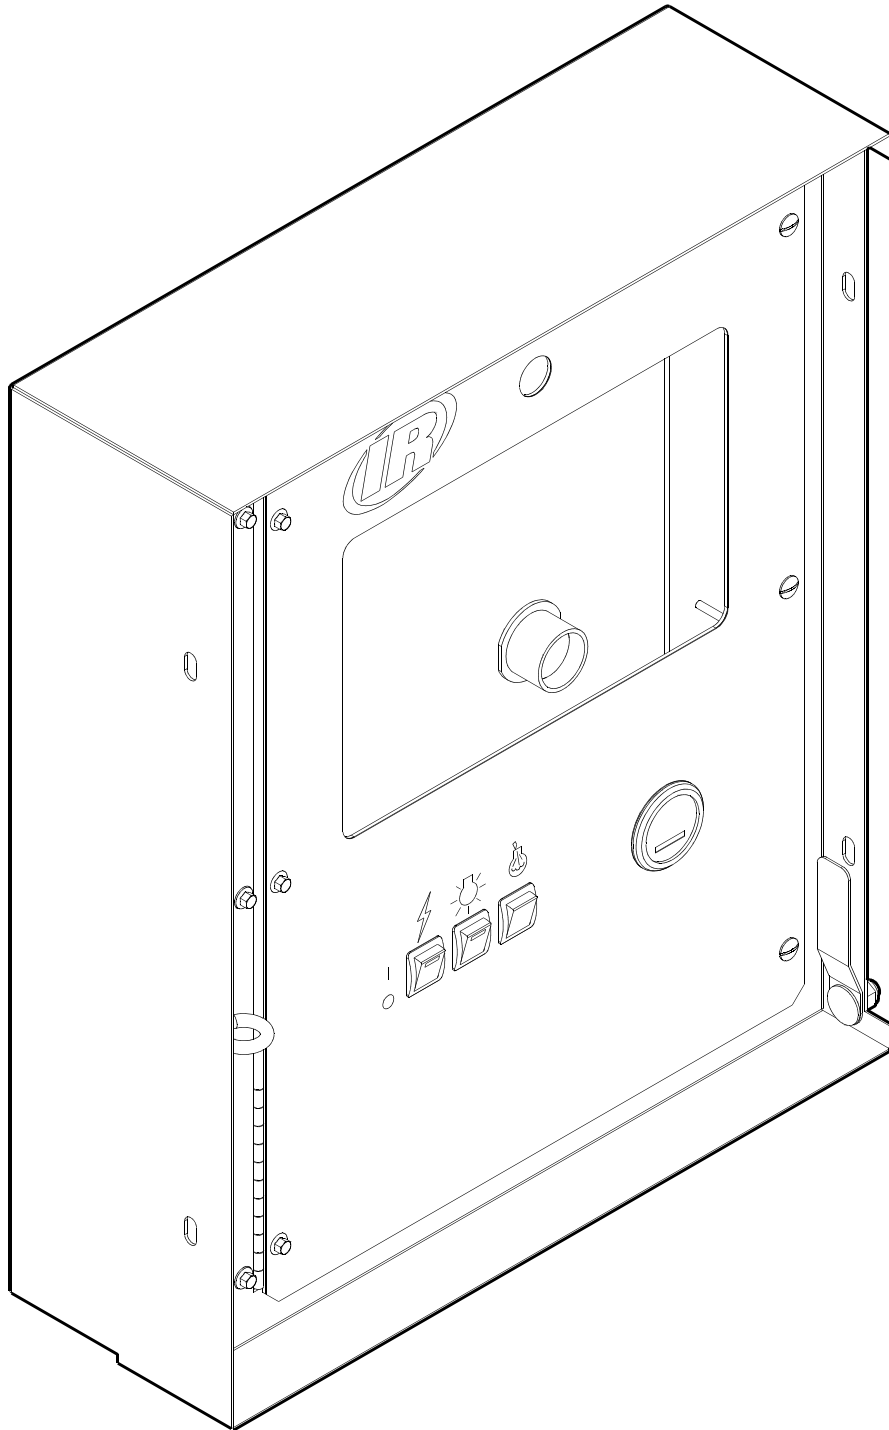


Instrument / Control Panel Mounting

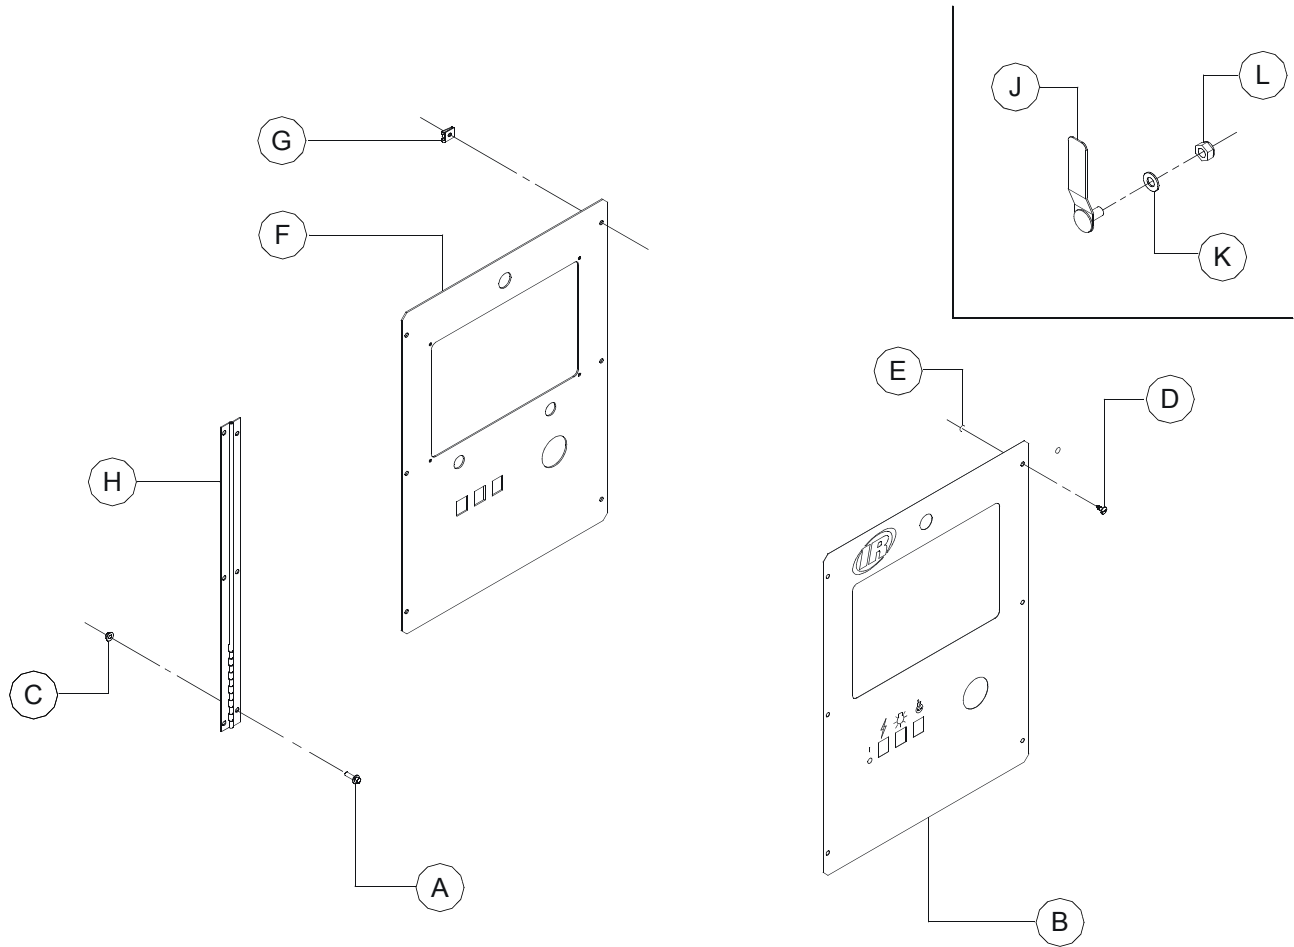 


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	36898096	Screw	6	
B	54631767	Laminate, Control Panel	1	
C	36898104	Nut	6	
D	36844124	Screw	3	
E	35369180	Retainer	3	
F	54631908	Panel, Control / Instrument	1	
G	35314582	Fastener	3	
H	36840908	Hinge	1	
J	35603349	Latch	1	
K	95935037	Washer	2	
L	35273366	Nut	1	

 Instrument / Control Panel Mounting

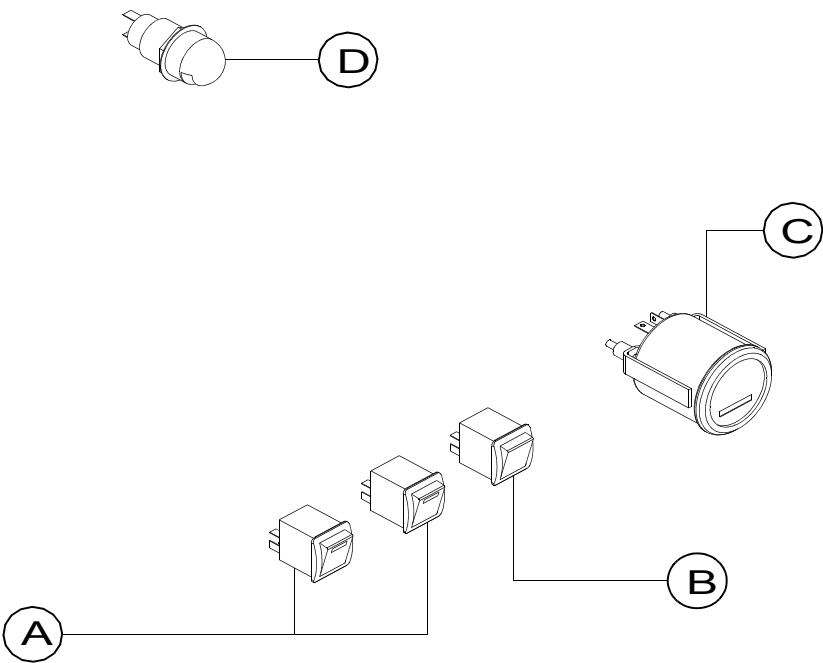


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	54475686	Switch, Rocker	2	
B	54475777	Switch, Rocker	1	
C	36841245	Hourmeter	1	
D	36841252	Light, Control Panel	1	

 Instrument / Control Panel Mounting

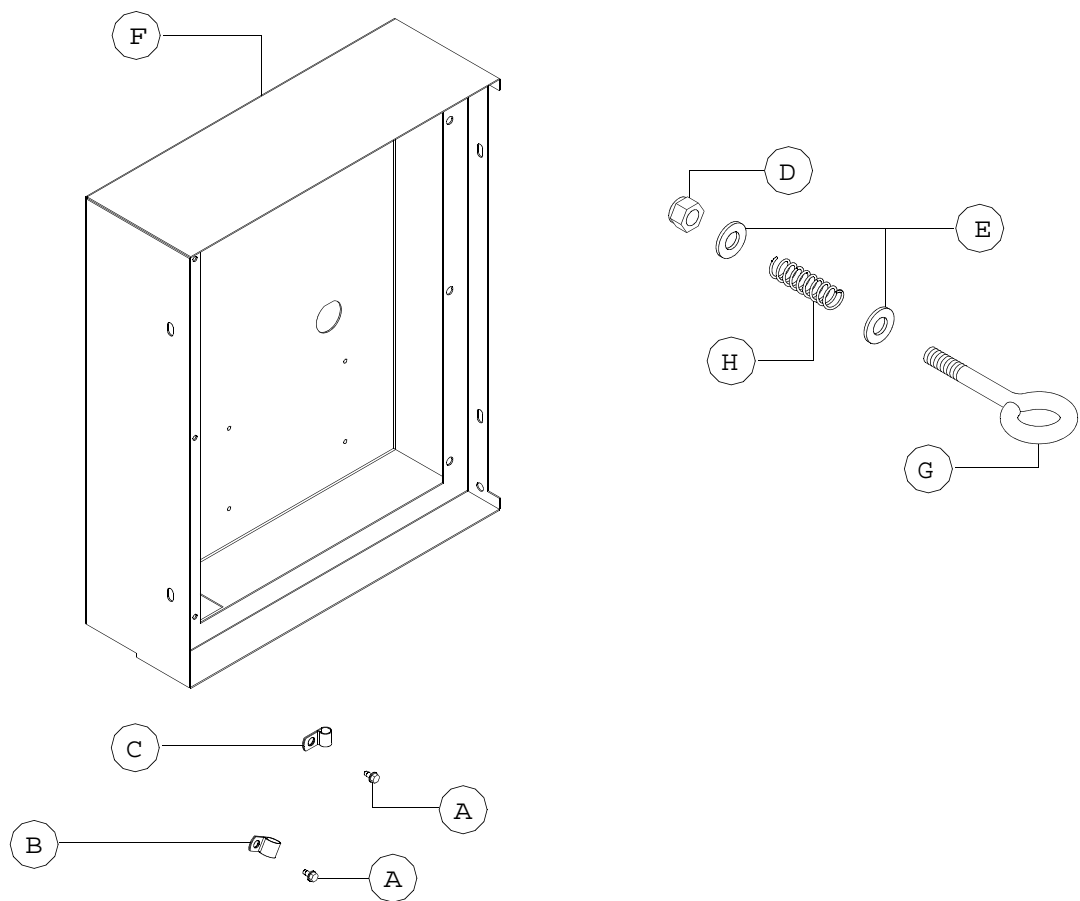



ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	36797652	Screw	6	
B	35225077	Clamp	1	
C	35225093	Clamp	1	
D	95923314	Nut	1	
E	95934998	Washer	1	
F	54621552	Box, Control Panel	1	
G	35327303	Bolt, Eye	1	
H	35327311	Spring	1	

 Controller Assembly

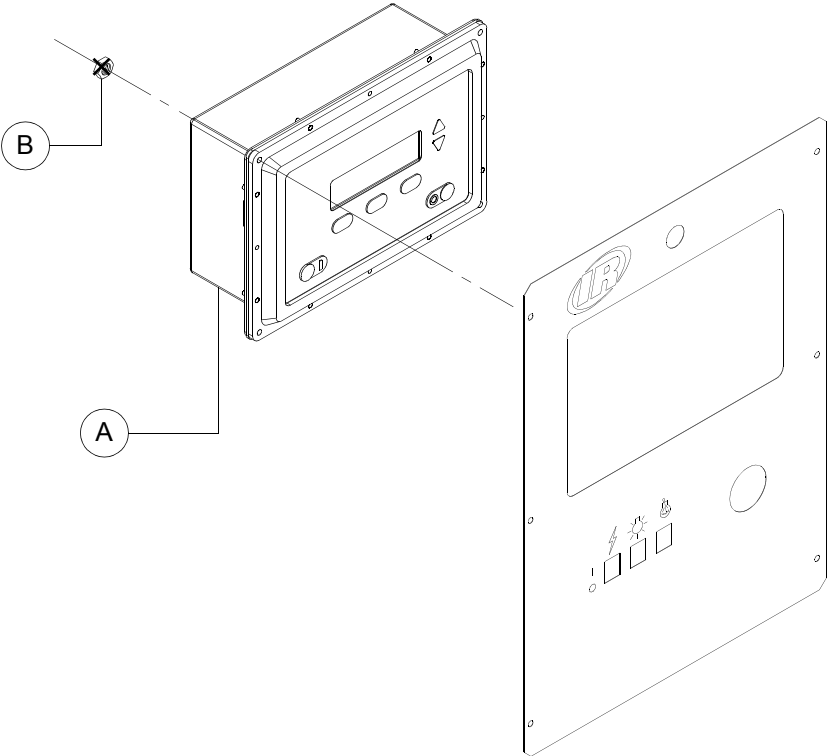


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	54441753	Controller	1	
B	95928800	Nut	4	

  Electrical Components Location

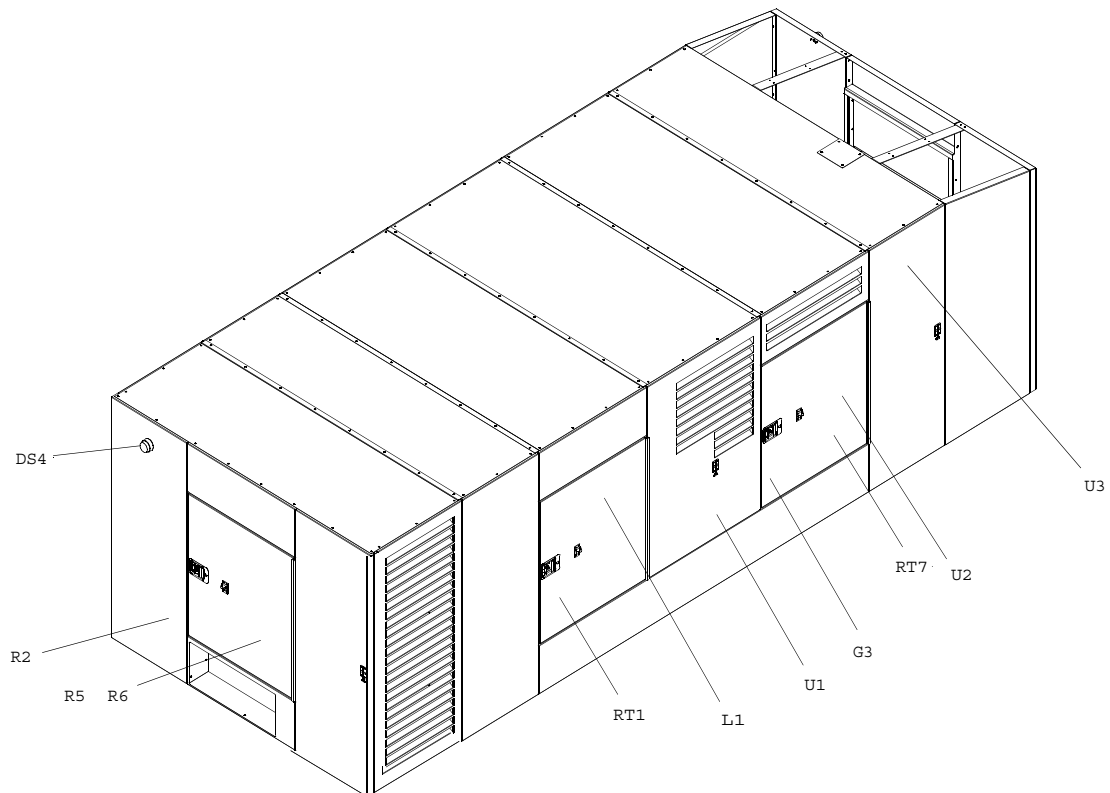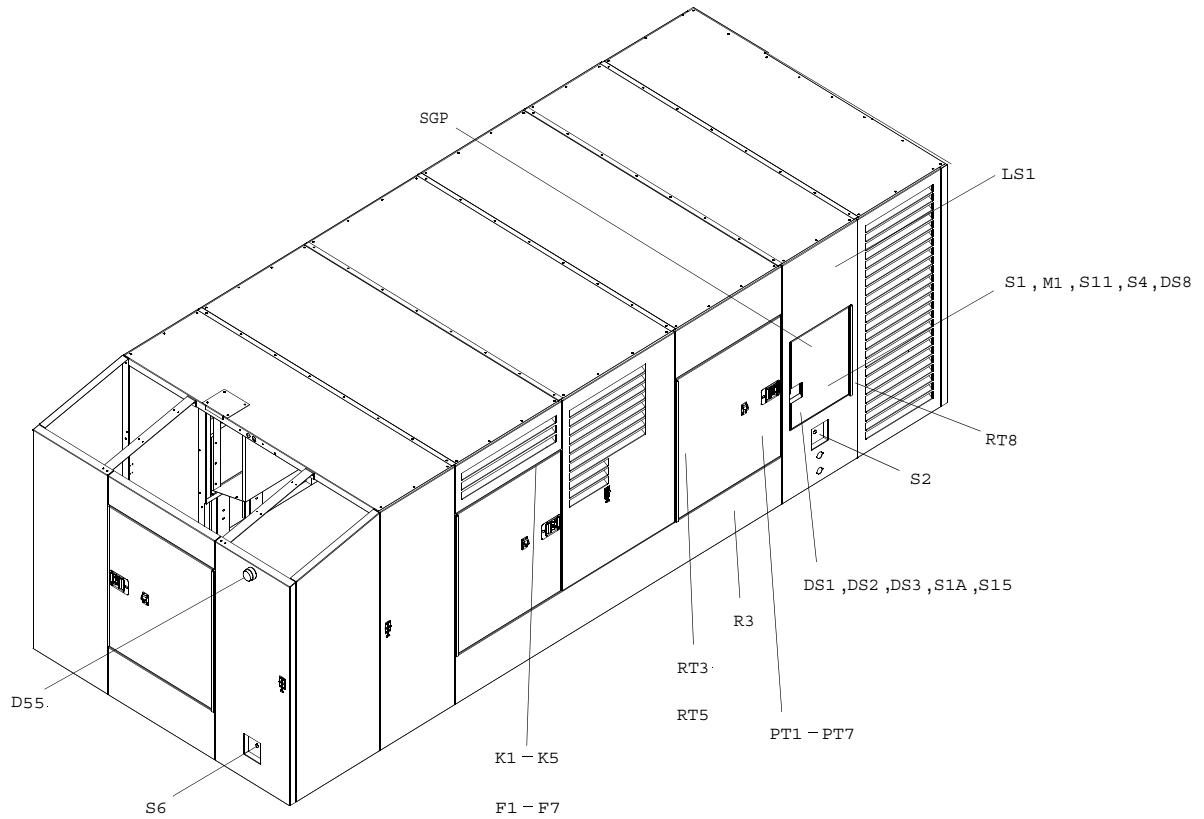


Electrical Components Location

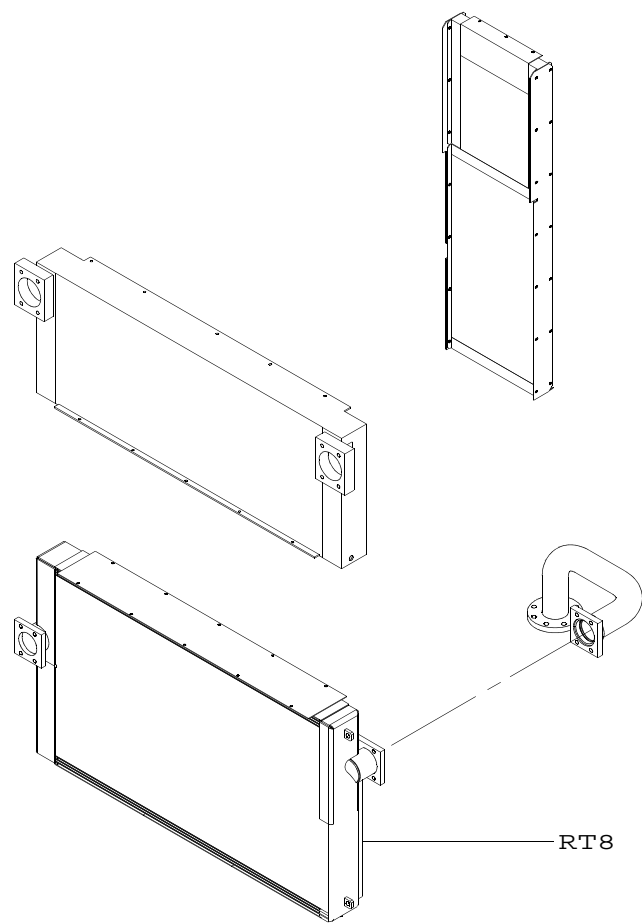 


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
RT8	54557087	Sensor	1	

 Electrical Components Location

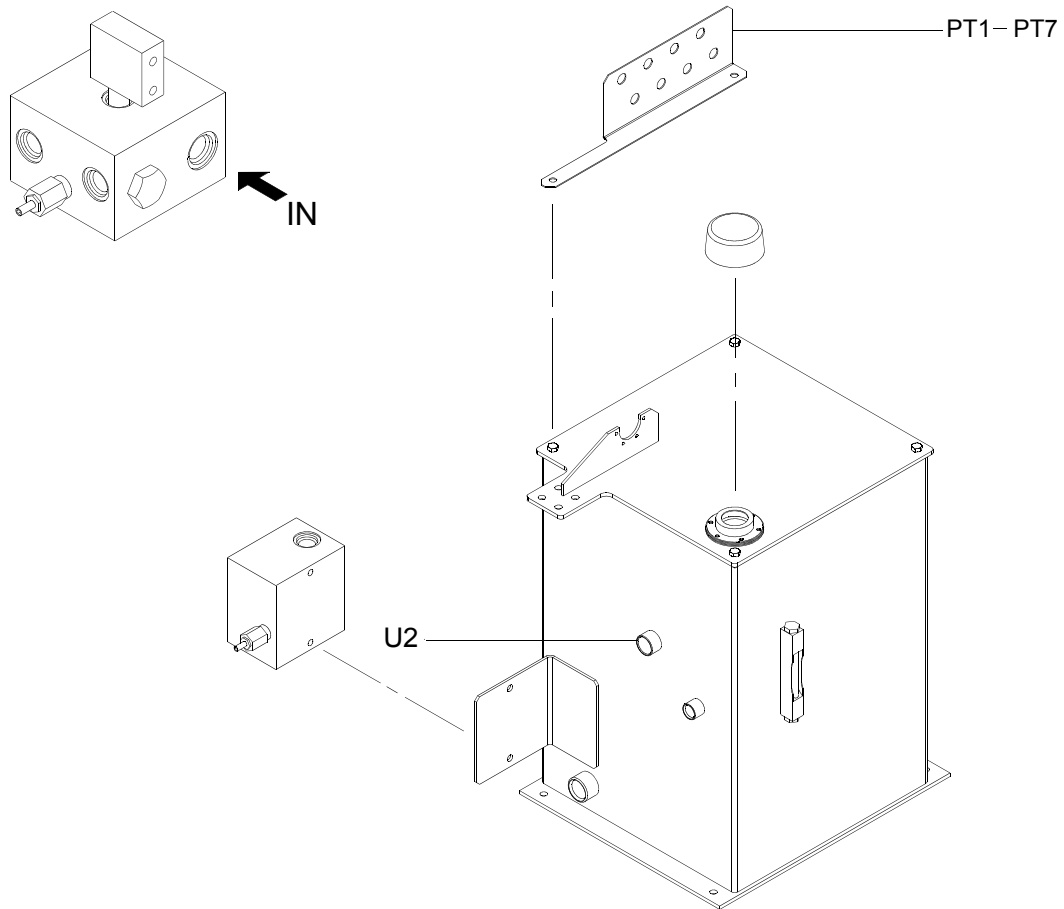


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
PT1	54757232	Transducer, 0-30 Vacuum	1	
PT2	36920825	Transducer, 0-100 Vacuum	1	
PT3	54496773	Transducer, 0-225 Vacuum	1	
PT4	54496773	Transducer, 0-225 Vacuum	1	
PT5	36920825	Transducer, 0-100 Vacuum	1	
PT6	36920825	Transducer, 0-100 Vacuum	1	
PT7	54496773	Transducer, 0-225 Vacuum	1	
U2	54581327	Transducer, Level	1	

 Electrical Components Location

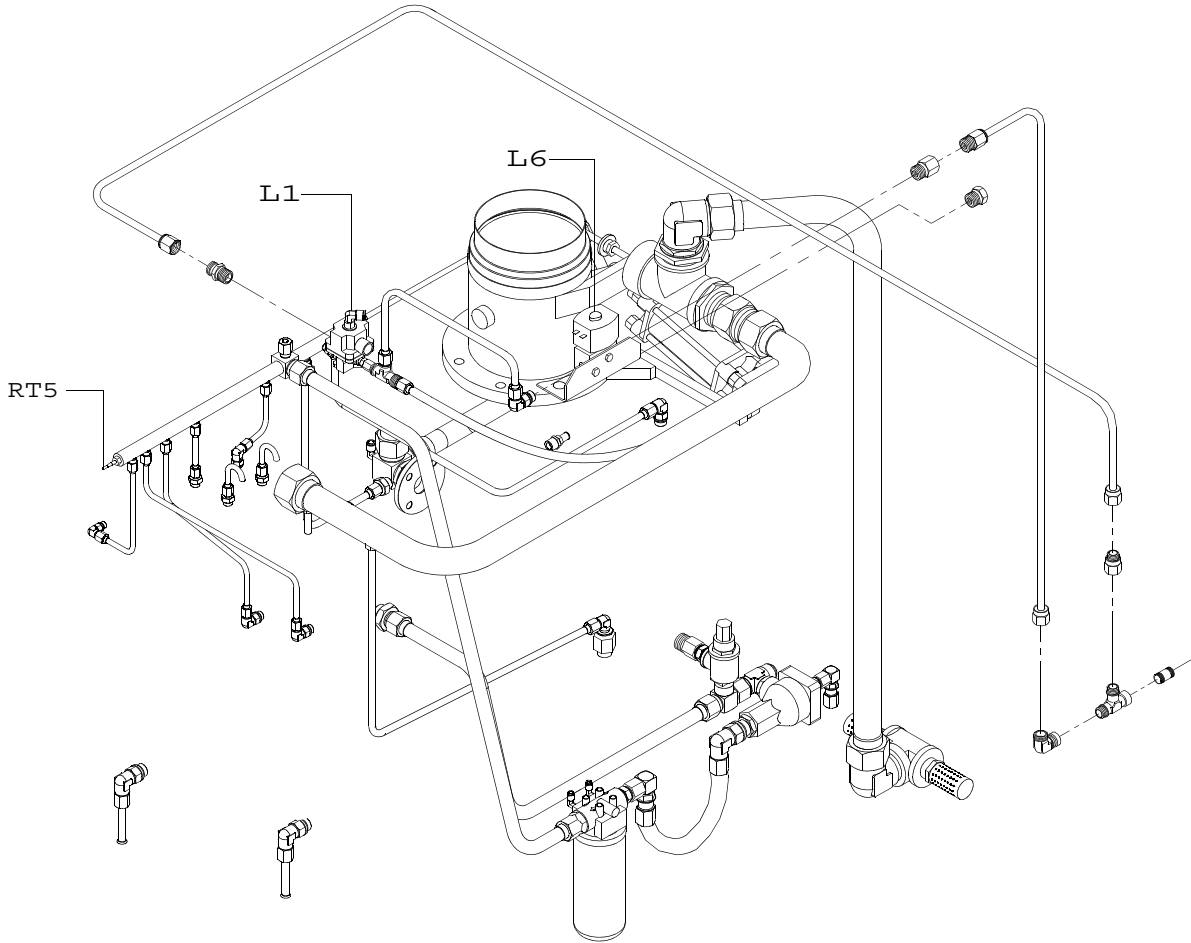


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
L1	54512611	Valve, Solenoid	1	
L6	54512611	Valve Solenoid (with Option)	1	
RT5	54557087	Sensor	1	

 Electrical Components Location

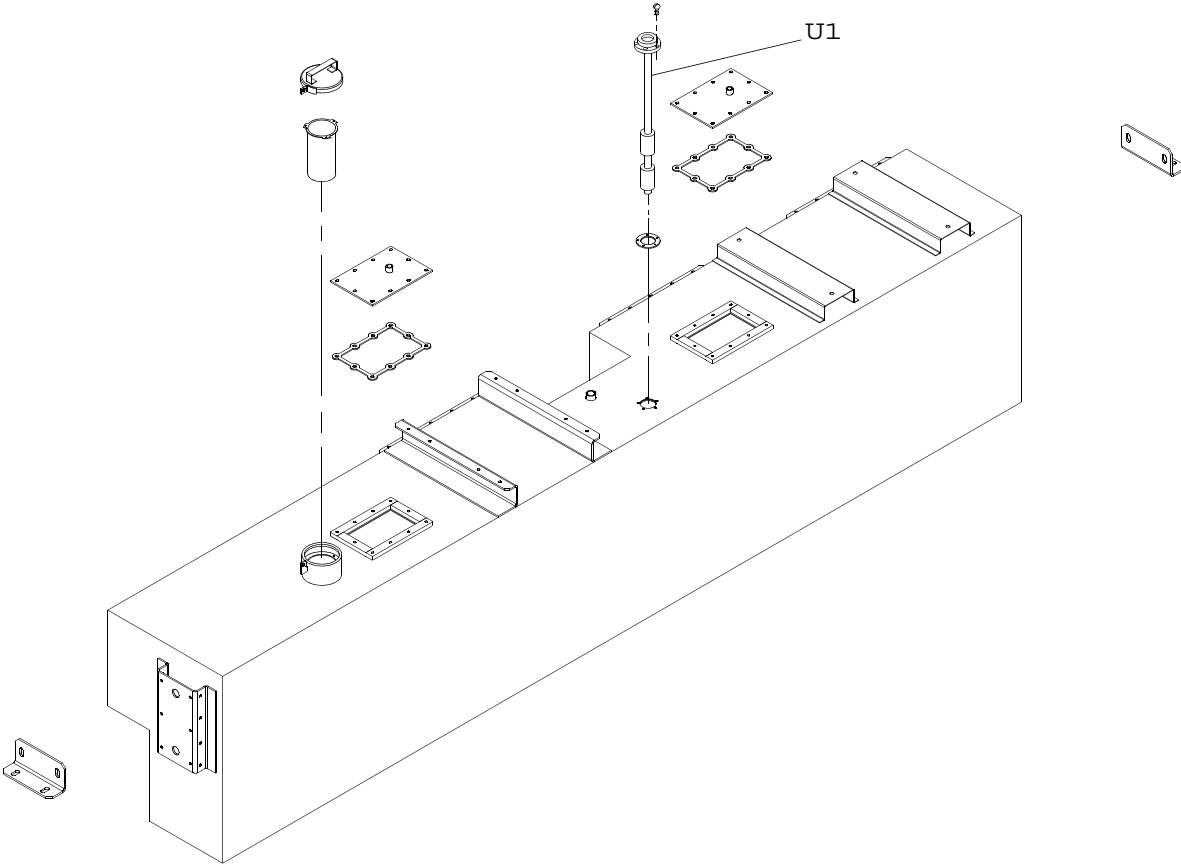

ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
U1	36876845	Sender, Fuel	1	

 Electrical Components Location

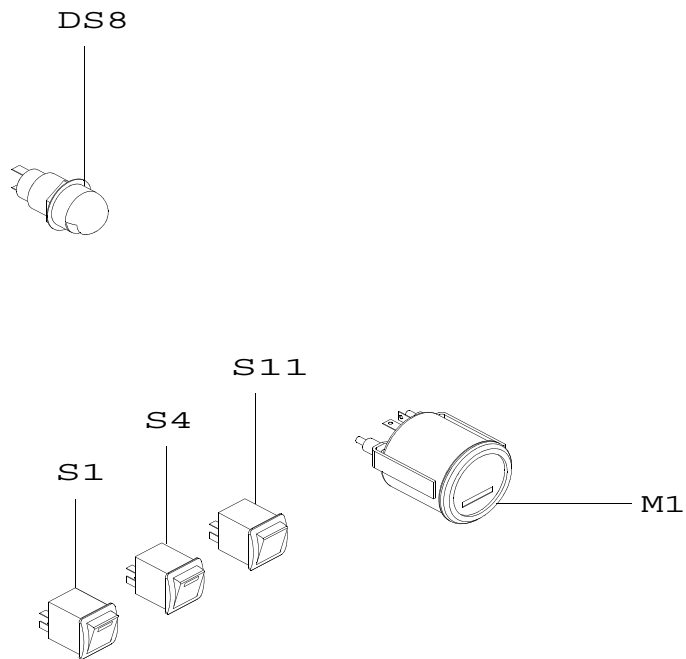


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
DS8	36841252	Light, Control Panel	1	
M1	36841245	Hourmeter	1	
S1	54475686	Switch, Rocker	1	
S4	54475686	Switch, Rocker	1	
S11	54475777	Switch, Rocker	1	

Electrical Components Location

AIR END

RT3

 
RT1

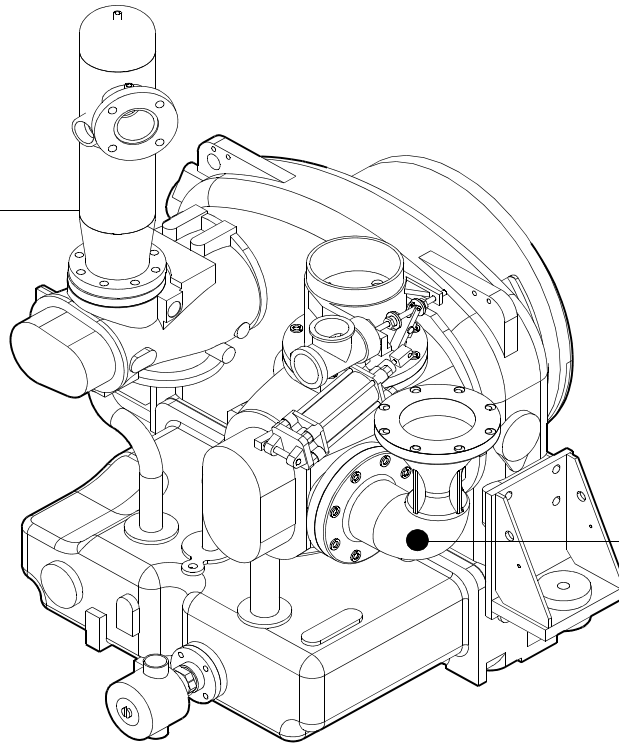


ENGINE

G3

 RT7

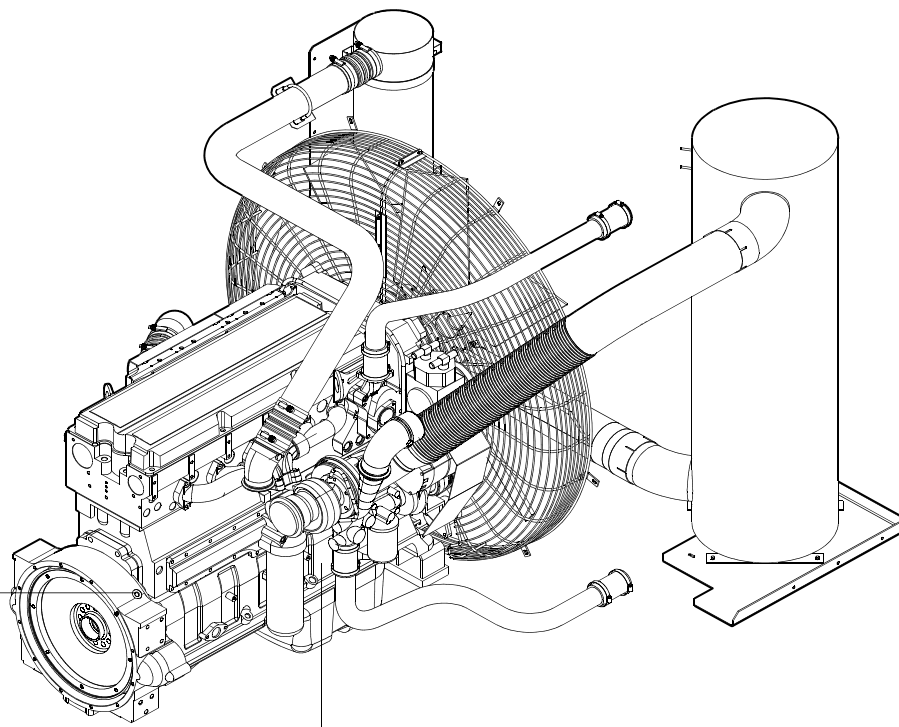

Electrical Components Location

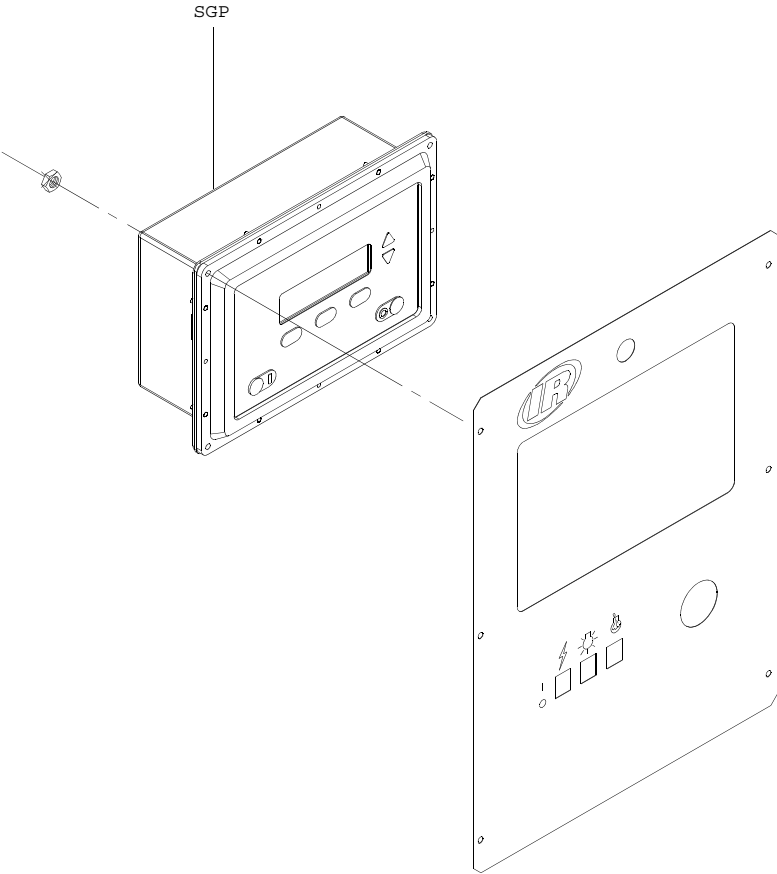 

ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
SGP	54441753	Controller	1	

Control Panel Located Devices

ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
S1, S4	54475686	Rocker Switch, Lighted		
S11	54475777	Rocker Switch, Momentary		
M1	36841245	Hourmeter		
	54441753	SGP Controller		
DS8	36841252	Panel, Light		
	35290089	Panel Light Bulb		
W2	54597497	Wiring Harness		
		Engine Diagnostic Panel:		
S14	54615091	Toggle Switch SPST		
S15	54615109	Toggle Switch SPST Momentary		
DS1	54615067	Red Lamp Indicator		
DS2	54615083	Amber Indicator Lamp		
DS3	54615075	Blue Indicator Lamp		

Enclosure Located Devices

ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
DS4, DS5 S2,S6 LS1	54477286 54494778 36785145	Strobe Light Estop Button Alarm Horn		

Hydraulic Tank Located Devices

ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
PT1	54496757	HG Vacuum Transducer		0-30 Inch.
PT2	36920825	Pressure Transducer		0-100 PSIG
PT3	54496773	Pressure Transducer		0-225 PSIG
PT4	54496773	Pressure Transducer		0-225 PSIG
PT5	36920825	Pressure Transducer		0-100 PSIG
PT6	36920825	Pressure Transducer		0-100 PSIG
PT7	54496773	Pressure Transducer		0-225 PSIG
U2	54581327	Level Transducer		

Engine Located Devices

ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
RT7	54557987	RTD		100 OHM
	35293075	Starter Ground Strap		
G3	36785319	Magnetic Pickup		

Radiator Located Devices

ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
U3	54474572	Coolant Level Switch		

Air End Located Devices

ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
L1, L6	54512611	Inlet Solenoid		
L2, L3	36842318	Condensate Solenoids		
RT1	54557087	RTD		100 OHM
RT2	54557087	RTD		100 OHM
RT3	54557087	RTD		100 OHM
RT4	54557087	RTD		100 OHM
RT5	54557095	Thermister		10K OHM
RT6	54557095	Thermister		10K OHM

Cooler Located Devices

ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
RT8	54557087	RTD		100 0HM

Frame Located Devices

ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
S8	36896975	Battery Disconnect Switch		
	35128982	Battery Jumper Cable		
	54658331	Positive Battery Cable		
	54511282	Positive Battery Jumper Cable		
	54658323	Negative Battery Cable		
	54511241	Frame Ground Strap		
U1	36842011	Fuel Level Sender		
D1-D6	35376169	Diode		
W1	22079180	Chassis Harness		
		Power Distribution Box:		
	54631312	Power Distribution Box (Includes W-3 Harness)		
D1	35376169	Diode		
K1	35577873	Auxiliary Start Relay		
K2	36892362	Relay, SPDT		24 Volt DC
K3	36892362	Relay, SPDT		24 Volt DC
K4	36892362	Relay, SPDT		24 Volt DC
K5	36892362	Relay, SPDT		24 Volt DC
F1,F2, F3	22071591	Fuse, 10amp		
F4	36793651	Fuse 25amp		
F5,F6, F7	22071575	Fuse 15amp		

Frame Located Devices

ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
S8	36896975	Battery Disconnect Switch		
	35128982	Battery Jumper Cable		
	54658331	Positive Battery Cable		
	54511282	Positive Battery Jumper Cable		
	54658323	Negative Battery Cable		
	54511241	Frame Ground Strap		
U1	36842011	Fuel Level Sender		
D1-D6	35376169	Diode		
W1	22079180	Chassis Harness		
		Power Distribution Box:		
	54631312	Power Distribution Box (Includes W-3 Harness)		
D1	35376169	Diode		
K1	35577873	Auxiliary Start Relay		
K2	36892362	Relay, SPDT		24 Volt DC
K3	36892362	Relay, SPDT		24 Volt DC
K4	36892362	Relay, SPDT		24 Volt DC
K5	36892362	Relay, SPDT		24 Volt DC


Frame Located Devices

ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
S8	36896975	Battery Disconnect Switch		
	35128982	Battery Jumper Cable		
	54658331	Positive Battery Cable		
	54511282	Positive Battery Jumper Cable		
	54658323	Negative Battery Cable		
	54511241	Frame Ground Strap		
U1	36842011	Fuel Level Sender		
D1-D6	35376169	Diode		
W1	54631791	Chassis Harness		
W4	54631809	Alarm Harness		
		Power Distribution Box:		
	54631312	Power Distribution Box (Includes W-3 Harness)		
D1	35376169	Diode		
F1,F2,F3	22071519	10 AMP		
F4	36793651	25 AMP		
F5,F6,F7	22071517	15 AMP		
K1	35577873	Auxillary Start Relay		
K2	36892362	Relay, SPDT		24 Volt DC
K3	36892362	Relay, SPDT		24 Volt DC
K4	36892362	Relay, SPDT		24 Volt DC
K5	36892362	Relay, SPDT		24 Volt DC

Frame Located Devices


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
S8	36896975	Battery Disconnect Switch		
	35128982	Battery Jumper Cable		
	54658331	Positive Battery Cable		
	54511282	Positive Battery Jumper Cable		
	54658323	Negative Battery Cable		
	54511241	Frame Ground Strap		
U1	36842011	Fuel Level Sender		
D1 - D6	35376169	Diode		
W1	22079180	Chassis Harness		
		Power Distribution Box:		
	54631312	Power Distribution Box (Includes W-3 Harness)		
D1	35376169	Diode		
F1,F2,F3	22071591	10 AMP		
F4	36793651	25 AMP		
F5, F6, F7	22071575	15 AMP		
K1	35577873	Auxillary Start Delay		
K2	36892362	Relay, SPDT		24 Volt DC
K3	36892362	Relay, SPDT		24 Volt DC
K4	36892362	Relay, SPDT		24 Volt DC
K5	36892362	Relay, SPDT		24 Volt DC

 Enclosure Top Panels

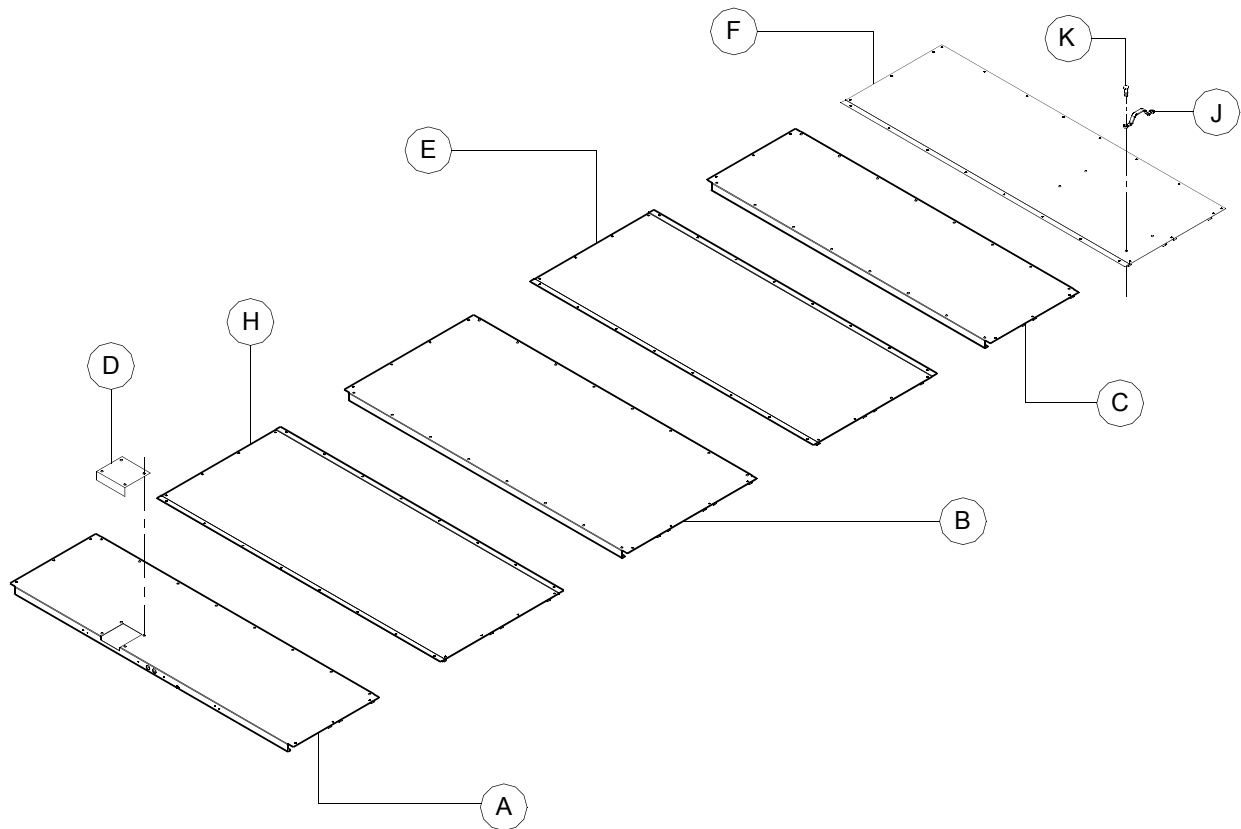


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	22979355	Panel, Front Top	1	As Required
B	22979371	Panel, 3rd Top	1	
C	22979389	Panel, 5th Top	1	
D	22979405	Cover, Radiator Fill	1	
E	22979363	Panel, 4th Top	1	
F	22979397	Panel, Rear Top	1	
G	36889608	Screw, Top Panel		
H	22990303	Panel, 2nd Top	1	
J	35130707	Hand Hold	2	
K	36889608	Screw	4	

 Enclosure Front Panels

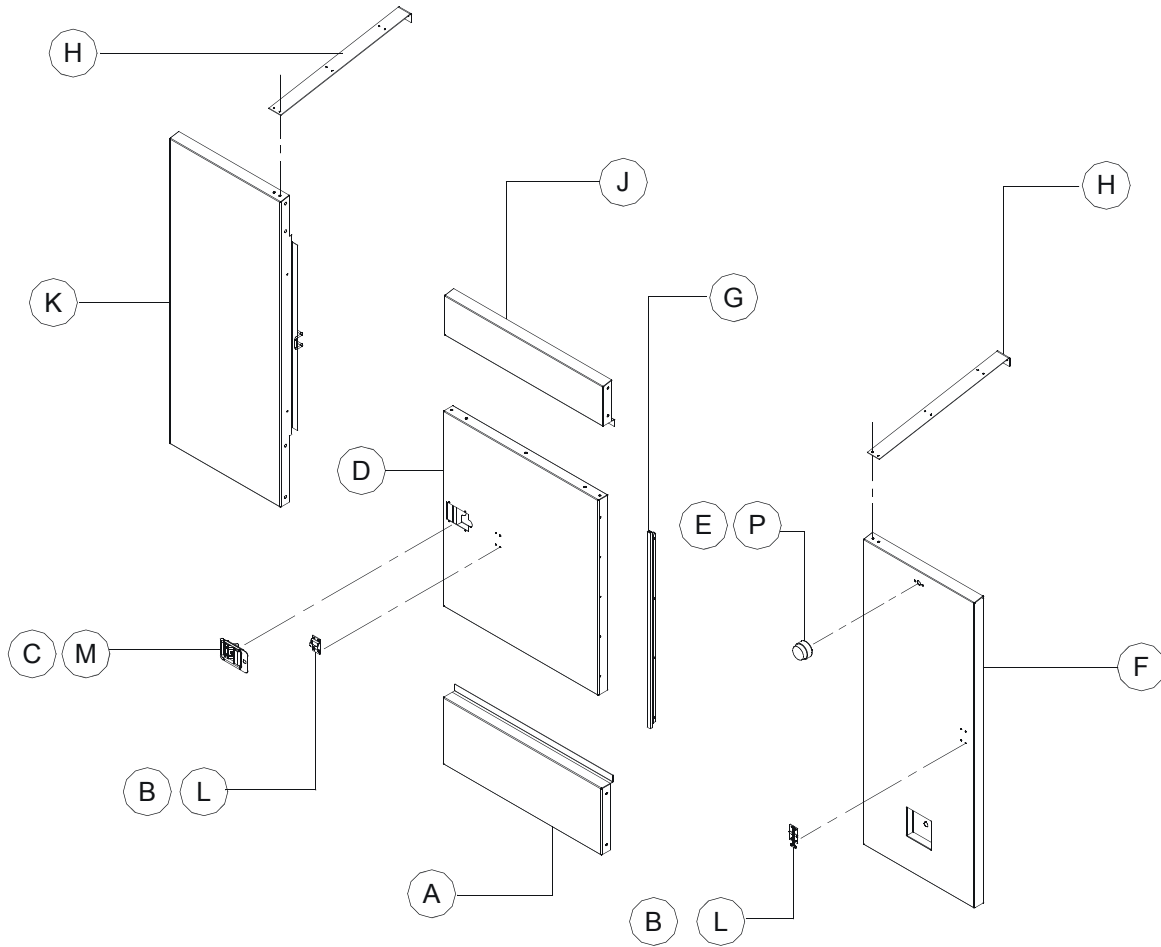


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	22979413	Panel, Front Bottom	1	
B	54485404	Latch, Tee	1	
C	36793602	Latch, Slam	1	
D	22979348	Door, Front	1	
E	54477286	Light, Amber Warning	1	
F	22979421	Panel, Street Side Front	1	
G	54373113	Hinge, Door	1	
H	22979553	Strap, Support	2	
J	22979439	Panel, Front Top	1	
K	22979447	Panel, Curb Side Front	1	
L	36843282	Rivet	8	
M	36794816	Rivet	4	
N	35279025	Screw	*	
P	96702055	Screw	4	

 Enclosure Side Panels

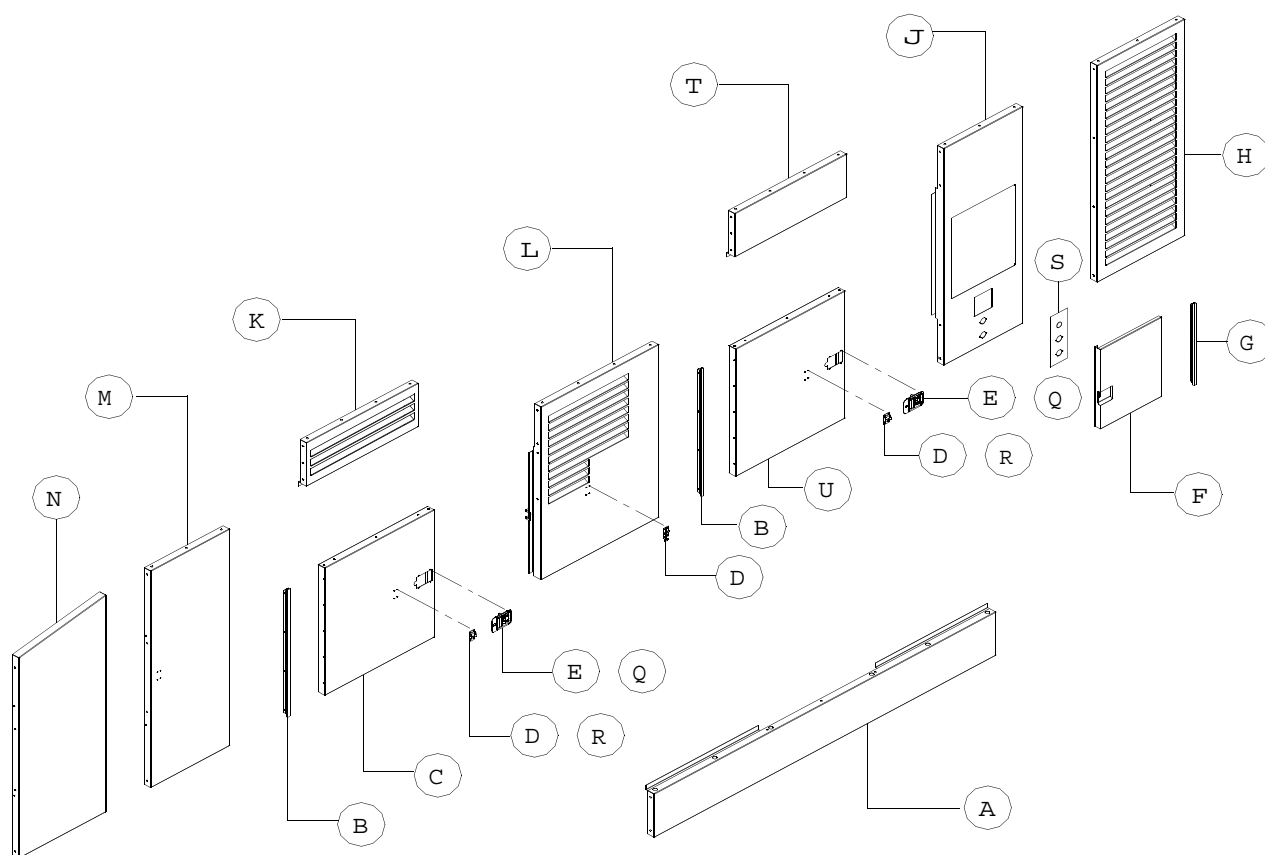


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	22979454	Panel, Bottom Center	1	240 Volt / 50 Hz
B	54373113	Hinge, Door	1	
C	22979348	Door, Street Side	1	
D	54485404	Latch, Tee	1	
E	36793602	Latch, Slam	1	
F	22979462	Door, Control Panel	1	
G	54623889	Hinge, Door	1	
H	22979470	Panel, Rear Grill	1	
J	22979488	Panel, Control Door	1	
K	22990360	Vent, CAC Air Inlet	1	
L	22991400	Panel, Center Grill	1	
M	22991434	Panel, Second Front	1	
N	22979504	Panel, Front Side	1	
P	35279025	Screw	*	
Q	36794816	Rivet	8	
R	36843282	Rivet	12	
S	22979512	Plate, Receptacle	1	
T	22979637	Panel, Top Door	1	
U	22981286	Door, Literature Pouch	1	
	39249875	Seal, Door (Around Edge of Each Door)		

 Enclosure Rear Panels

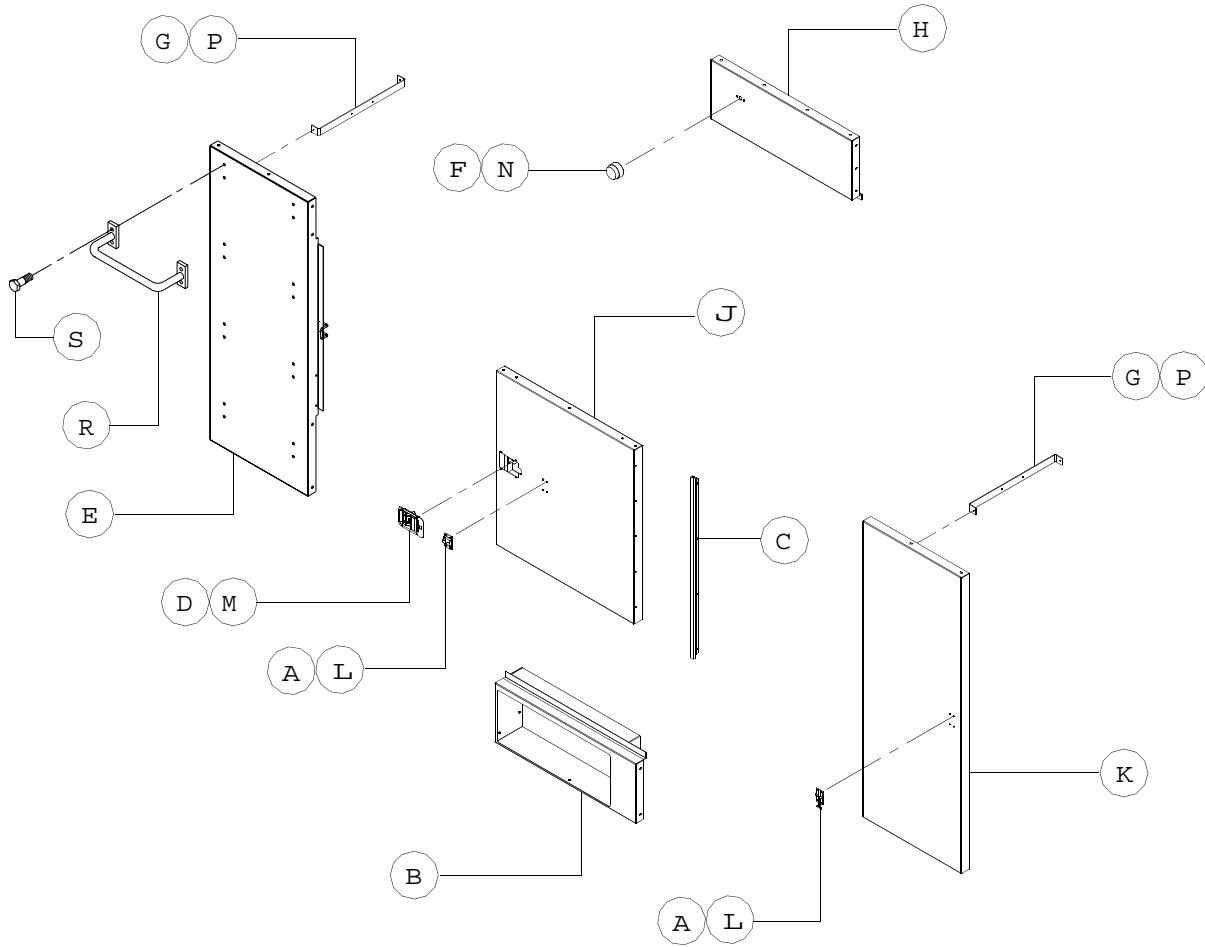


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	54485404	Latch, Tee	1	
B	22994438	Panel, Service Access	1	
C	54373113	Hinge, Door	1	
D	36793602	Latch, Slam	1	
E	22994412	Panel, Street Side Rear	1	
F	54477286	Light, Amber Warning	1	
G	54430855	Strap, Rear Support	1	
H	22994420	Panel, Rear Middle Top	1	
J	22979348	Door, Rear	1	
K	22994404	Panel, Curb Side Rear	1	
L	36843282	Rivet	8	
M	36794816	Rivet	4	
N	96702055	Screw	2	
P	36797652	Screw	4	
Q	35279025	Screw	*	
R	22996227	Ladder, Step	4	
S	36880995	Screw	16	

 Enclosure Side Panels

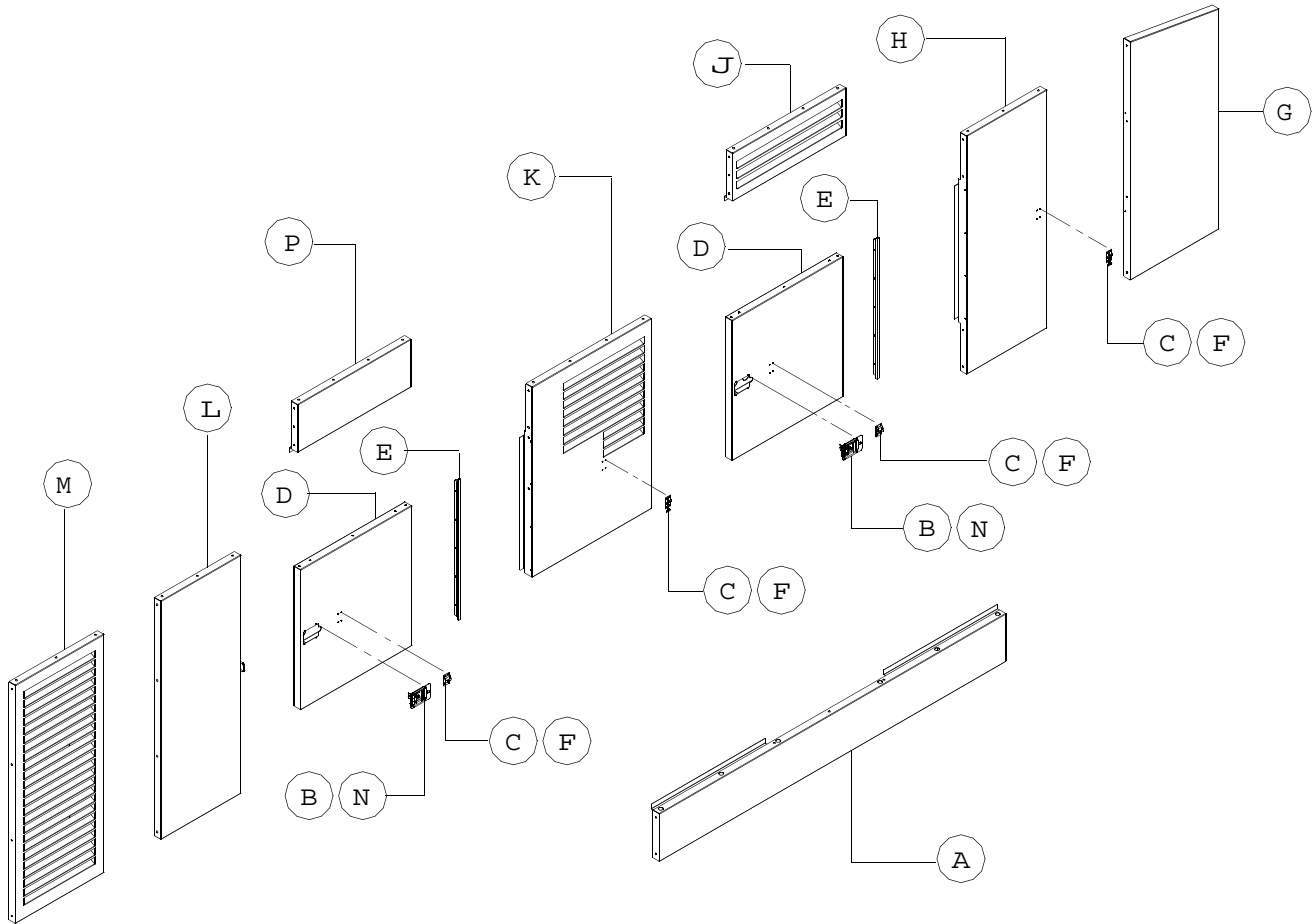


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	22979454	Panel, Bottom Center	1	
B	36793602	Latch, Slam	1	
C	54485404	Latch, Tee	1	
D	22979348	Door, Side	2	
E	54373113	Hinge, Door	1	
F	36843282	Rivet	12	
G	22979629	Panel, Curb Side Front	1	
H	22991442	Panel, Curb Side Second	1	
J	22990352	Vent, CAC Air Inlet	1	
K	22991384	Panel, Center Grill	1	
L	22979652	Panel, Rear Side	1	
M	22979470	Panel, Rear Grill	1	
N	36794816	Rivet	8	
P	22979637	Panel, Top Door	1	

 Enclosure Internal Panels

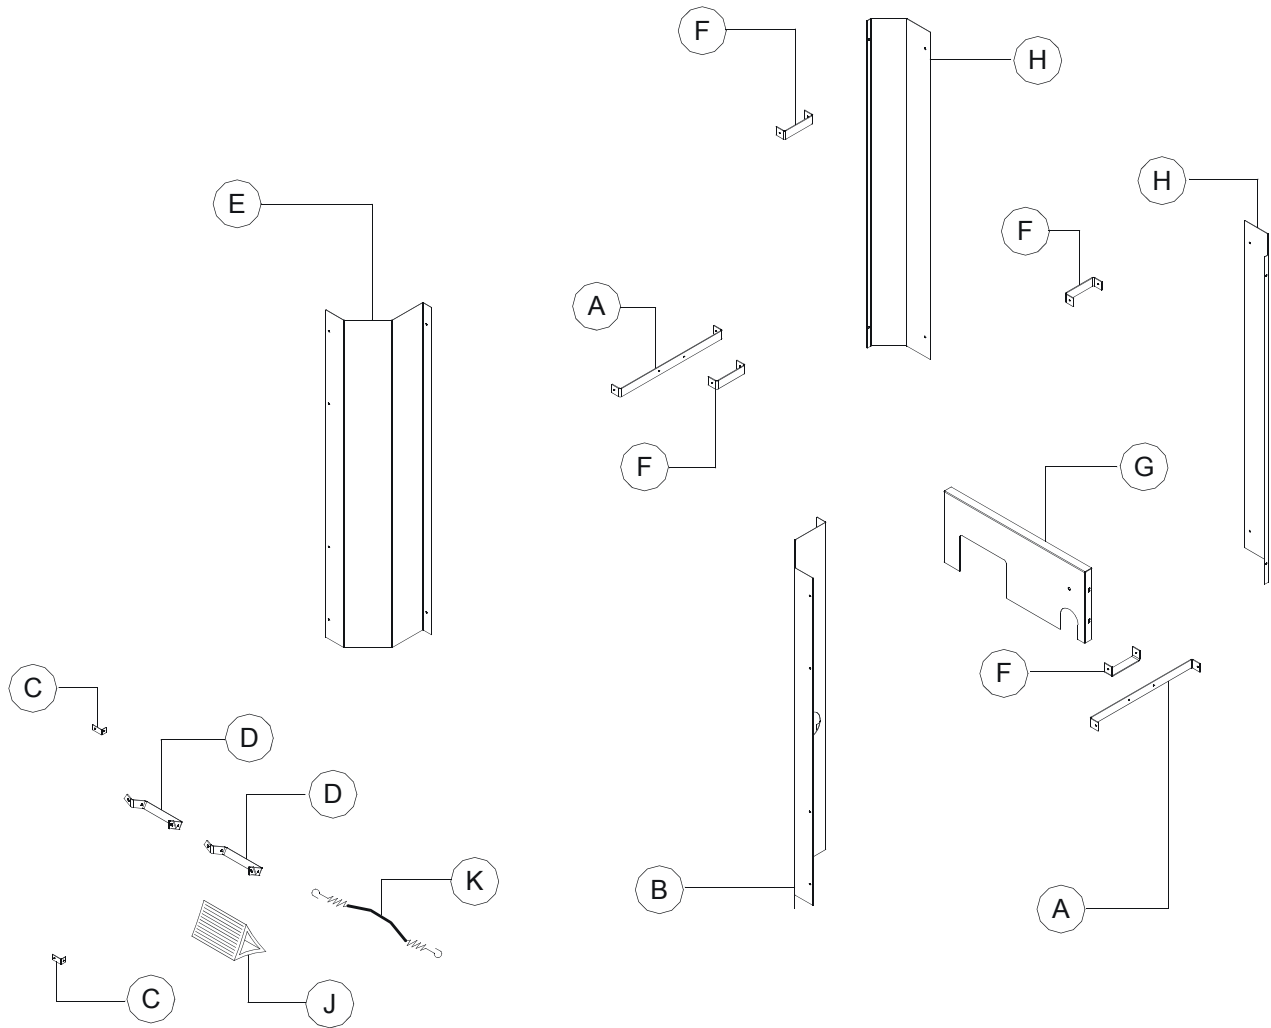


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	23040843	Bracket, Support	1	
B	23040850	Baffle, Street Side Intake	1	
C	54656269	Strap, Front Foam	1	
D	35603661	Bracket, Wheel Chock	1	
E	23040868	Baffle, Curb Side Intake	1	
F	23040876	Support, Intake	1	
G	22994446	Cover, Intake	1	
H	23040884	Baffle, Rear Intake	1	
J	35603190	Chock, Wheel	2	
K	35333830	Strap, Wheel Chock	2	

 Side Foam

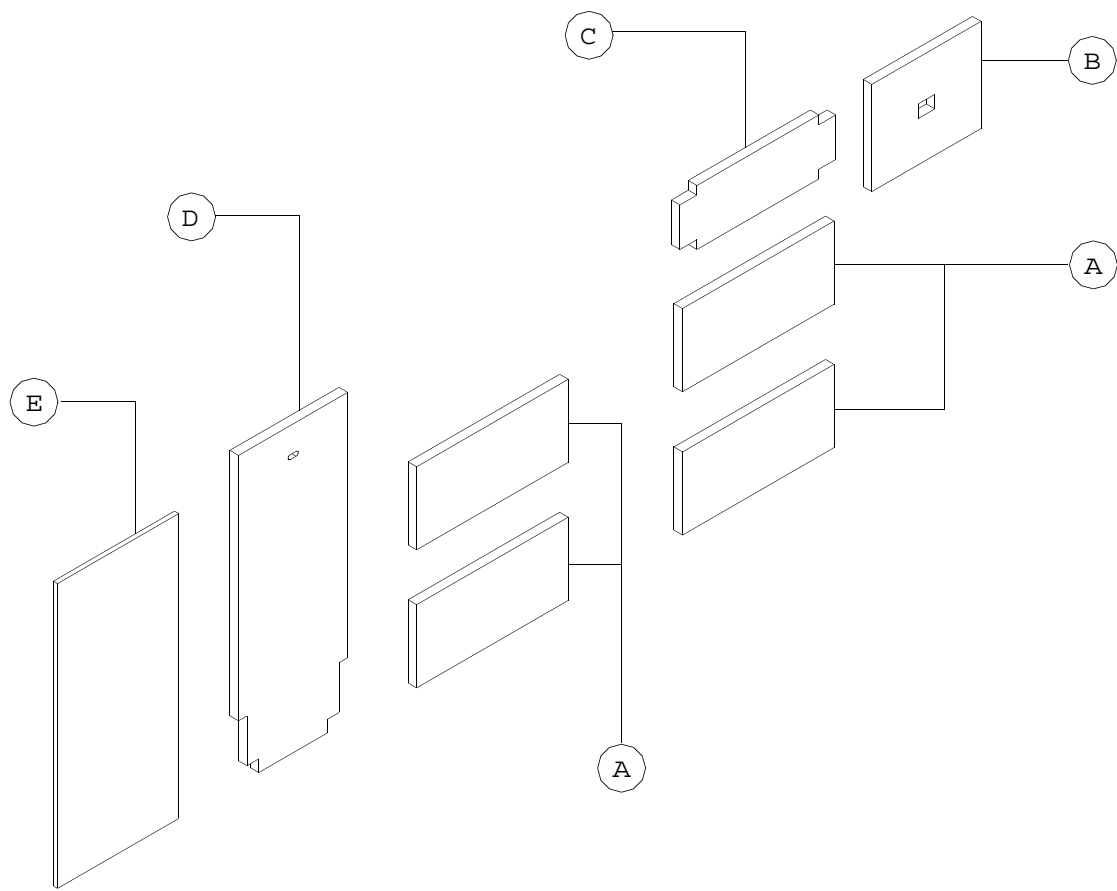


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	54659107	Foam, Door	1	
B	54659131	Foam, Above Control Panel	1	
C	54659099	Foam, Above Door	1	
D	54659040	Foam, Second Panel	1	
E	54652425	Fiberglass, Front Panel	1	

 Side Foam

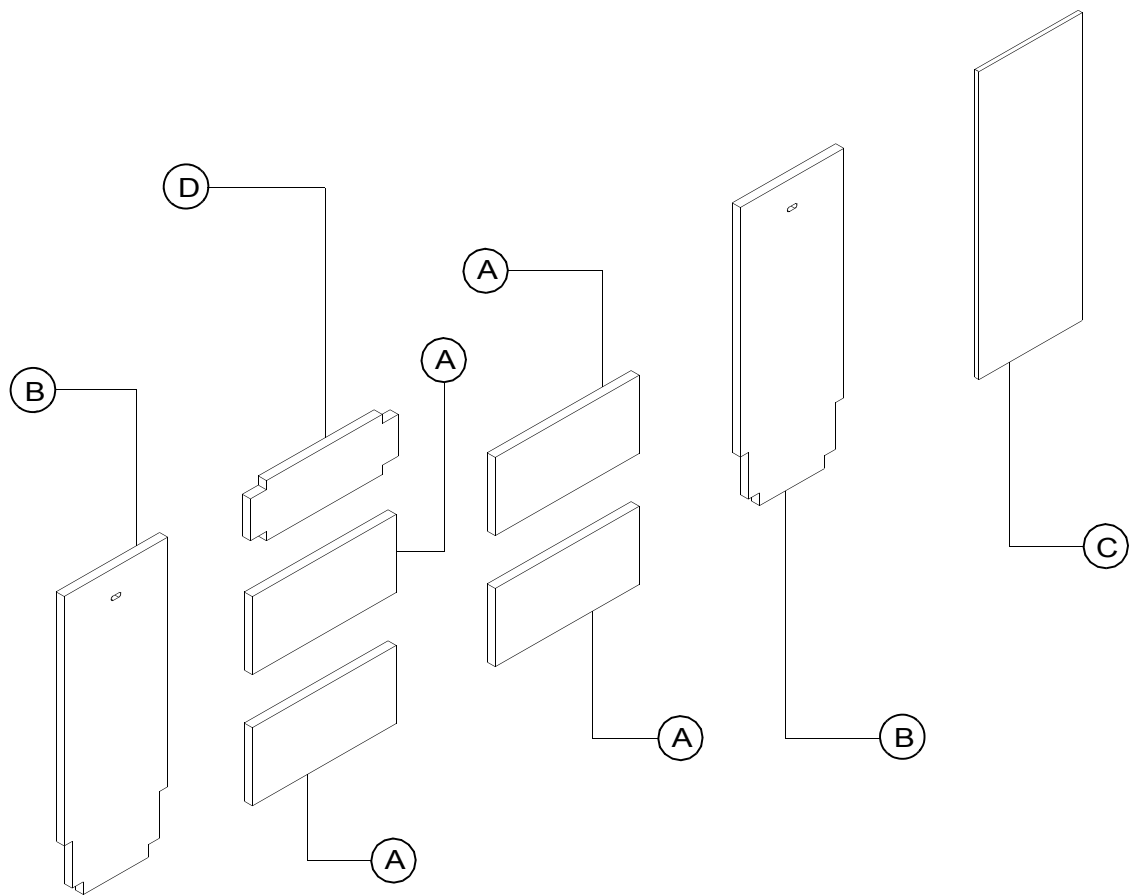


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	54659107	Foam, Door	1	
B	54659040	Foam, Side	1	
C	54652425	Fiberglass, Front Panel	1	
D	54659099	Foam, Above Door	1	

 Front and Rear Foam

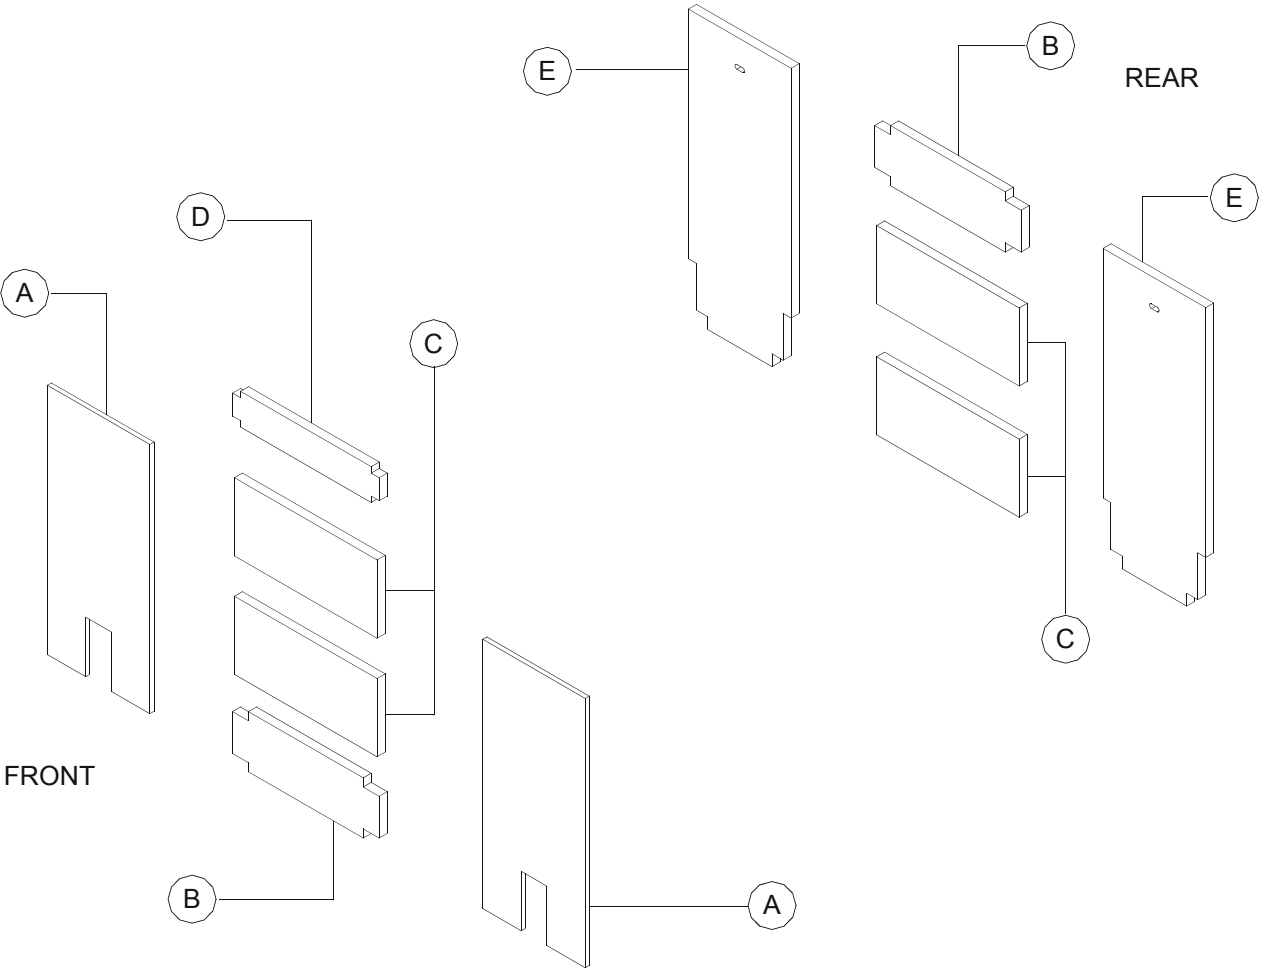


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	54652417	Fiberglass, Front Side	1	
B	54659099	Foam Bottom and Top Door	1	
C	54659107	Foam, Center Door	1	
D	54659115	Foam, Over Door	1	
E	54659040	Foam, Rear Side	1	

 Top Foam

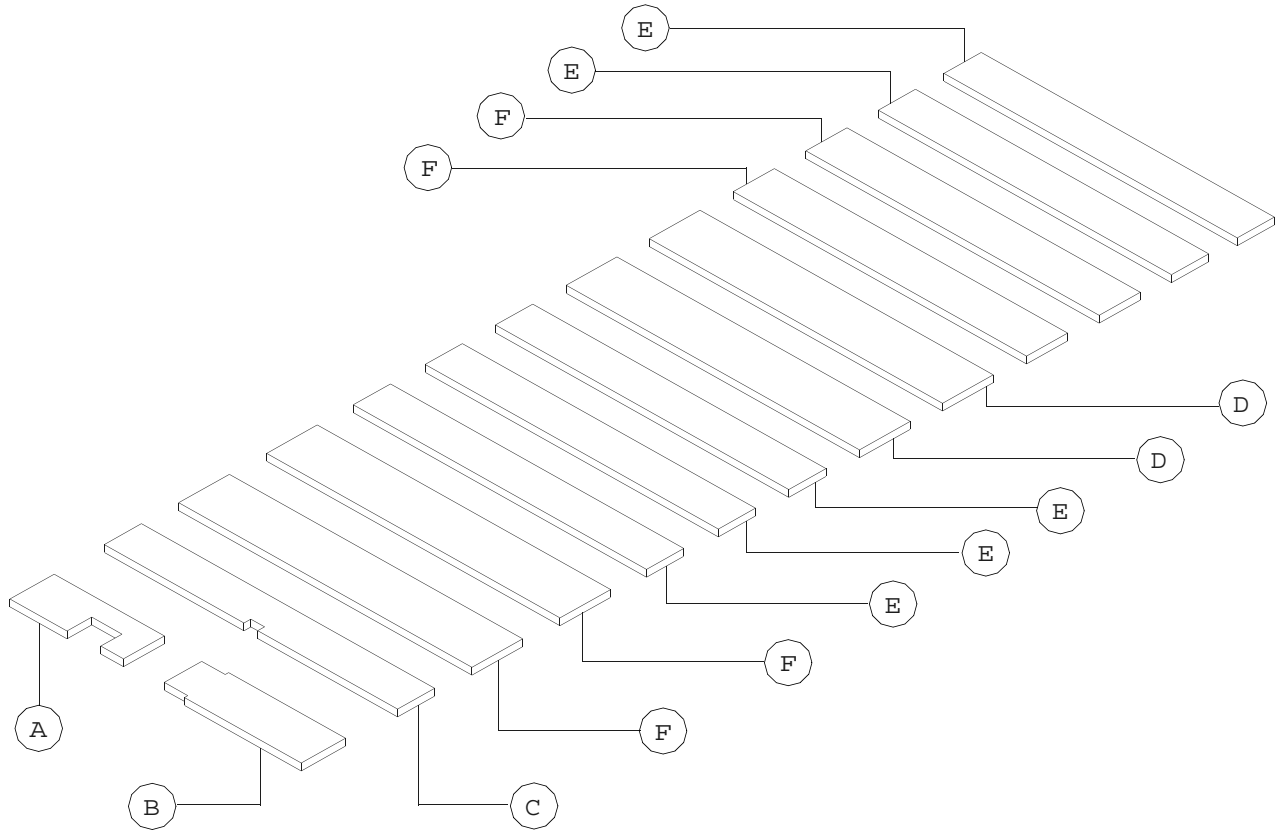


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	54659057	Foam, Curb Side Top	1	
B	54672274	Foam Street Side Top	1	
C	54672282	Foam, First Top	1	
D	54659081	Foam, 7th and 8th Top	1	
E	54659073	Foam, 4th, 5th, 6th, 11th and 12th Top	1	
F	54659123	Foam, 2nd, 3rd, 9th and 10th Top	1	

 Inside Baffle Foam

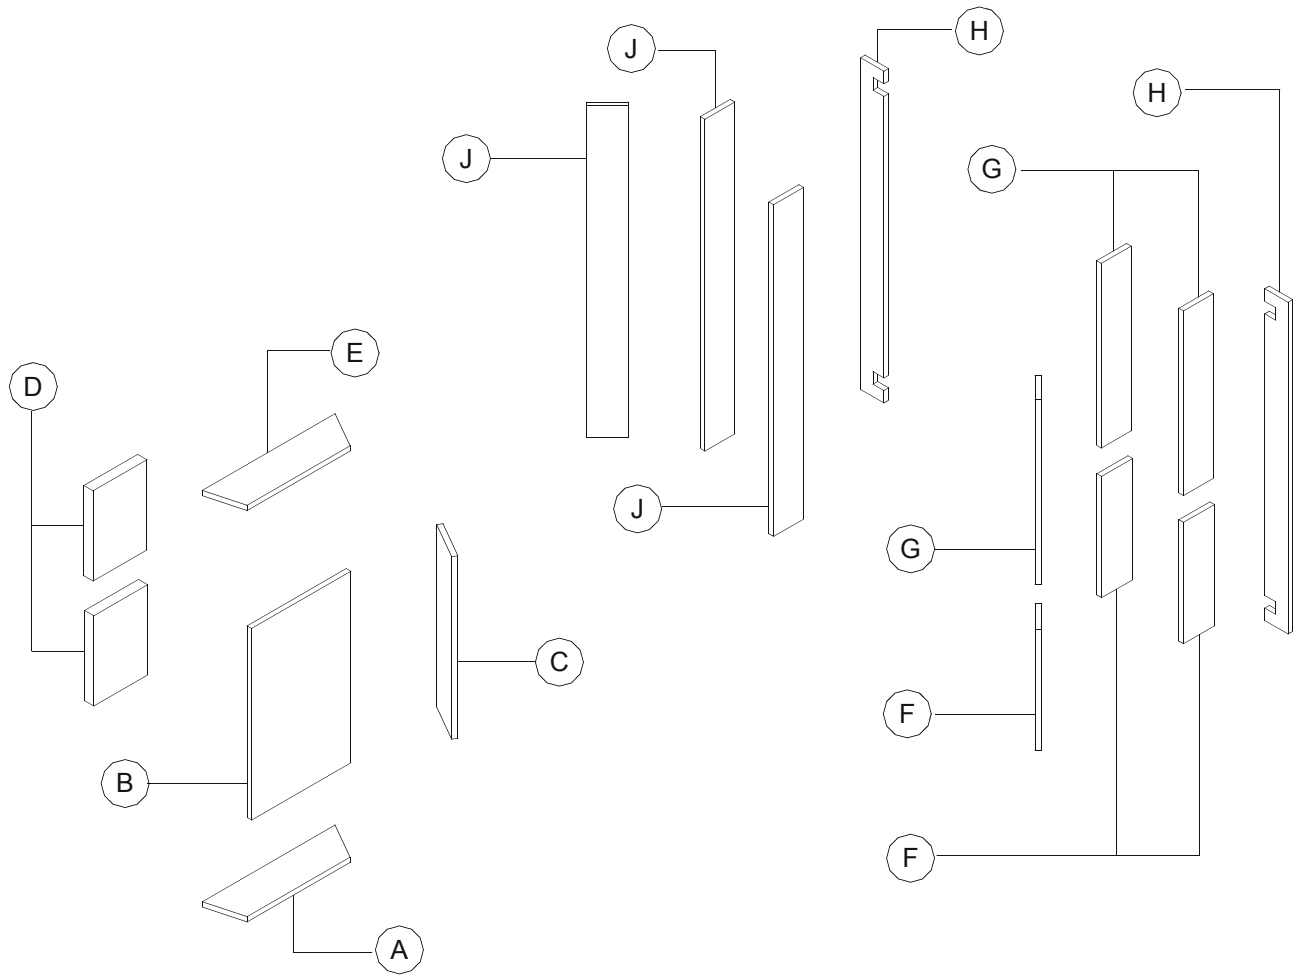

ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	54659206	Foam, Bottom Intake	1	
B	54659198	Foam, Back Intake	1	
C	54659032	Foam, Side Intake	1	
D	54659180	Foam, Inside Intake	1	
E	54659214	Foam, Top Intake	1	
F	54659164	Foam, Bottom Baffle	1	
G	54659156	Foam, Top Baffle	1	
H	54659172	Foam, Rear Baffle	1	
J	54659149	Foam, Curb Side Baffle	1	

 
Safety Decal Location

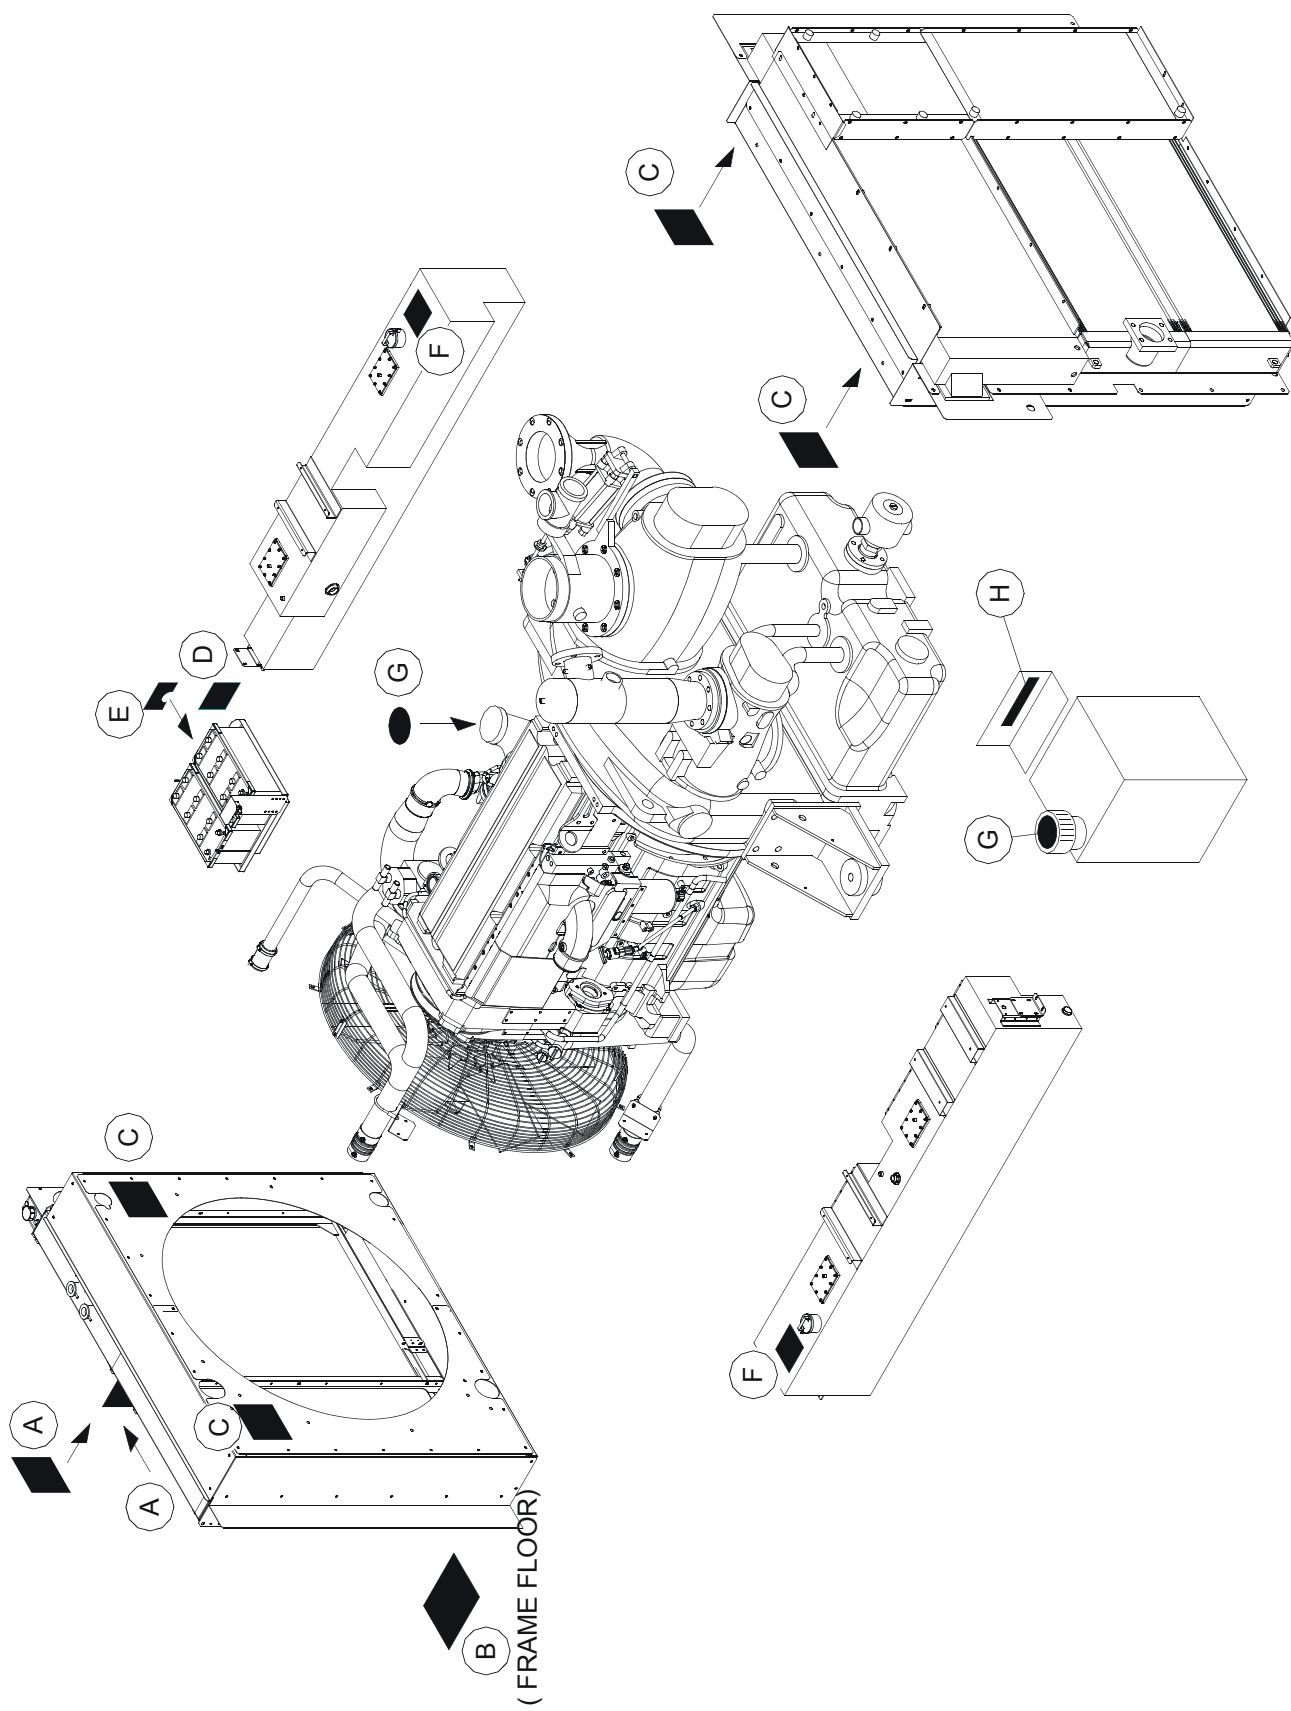

Decal Location

ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	54604962	Coolant Fill Decal	2	G
B	54568761	Hot Pressurized Fluid Decal		E
C	54568779	Rotating Fan Decal	4	B
D	54568753	Combustible Gas Decal	*	C
E	54642327	Battery Disconnect Decal		54642327
F	54625207	Diesel Fuel Decal	2	H
G	54604970	Oil Fill Plug Decal	2	54604970
H	54686852	Transducer Location Decal	*	54686852

 Exterior Decal Location

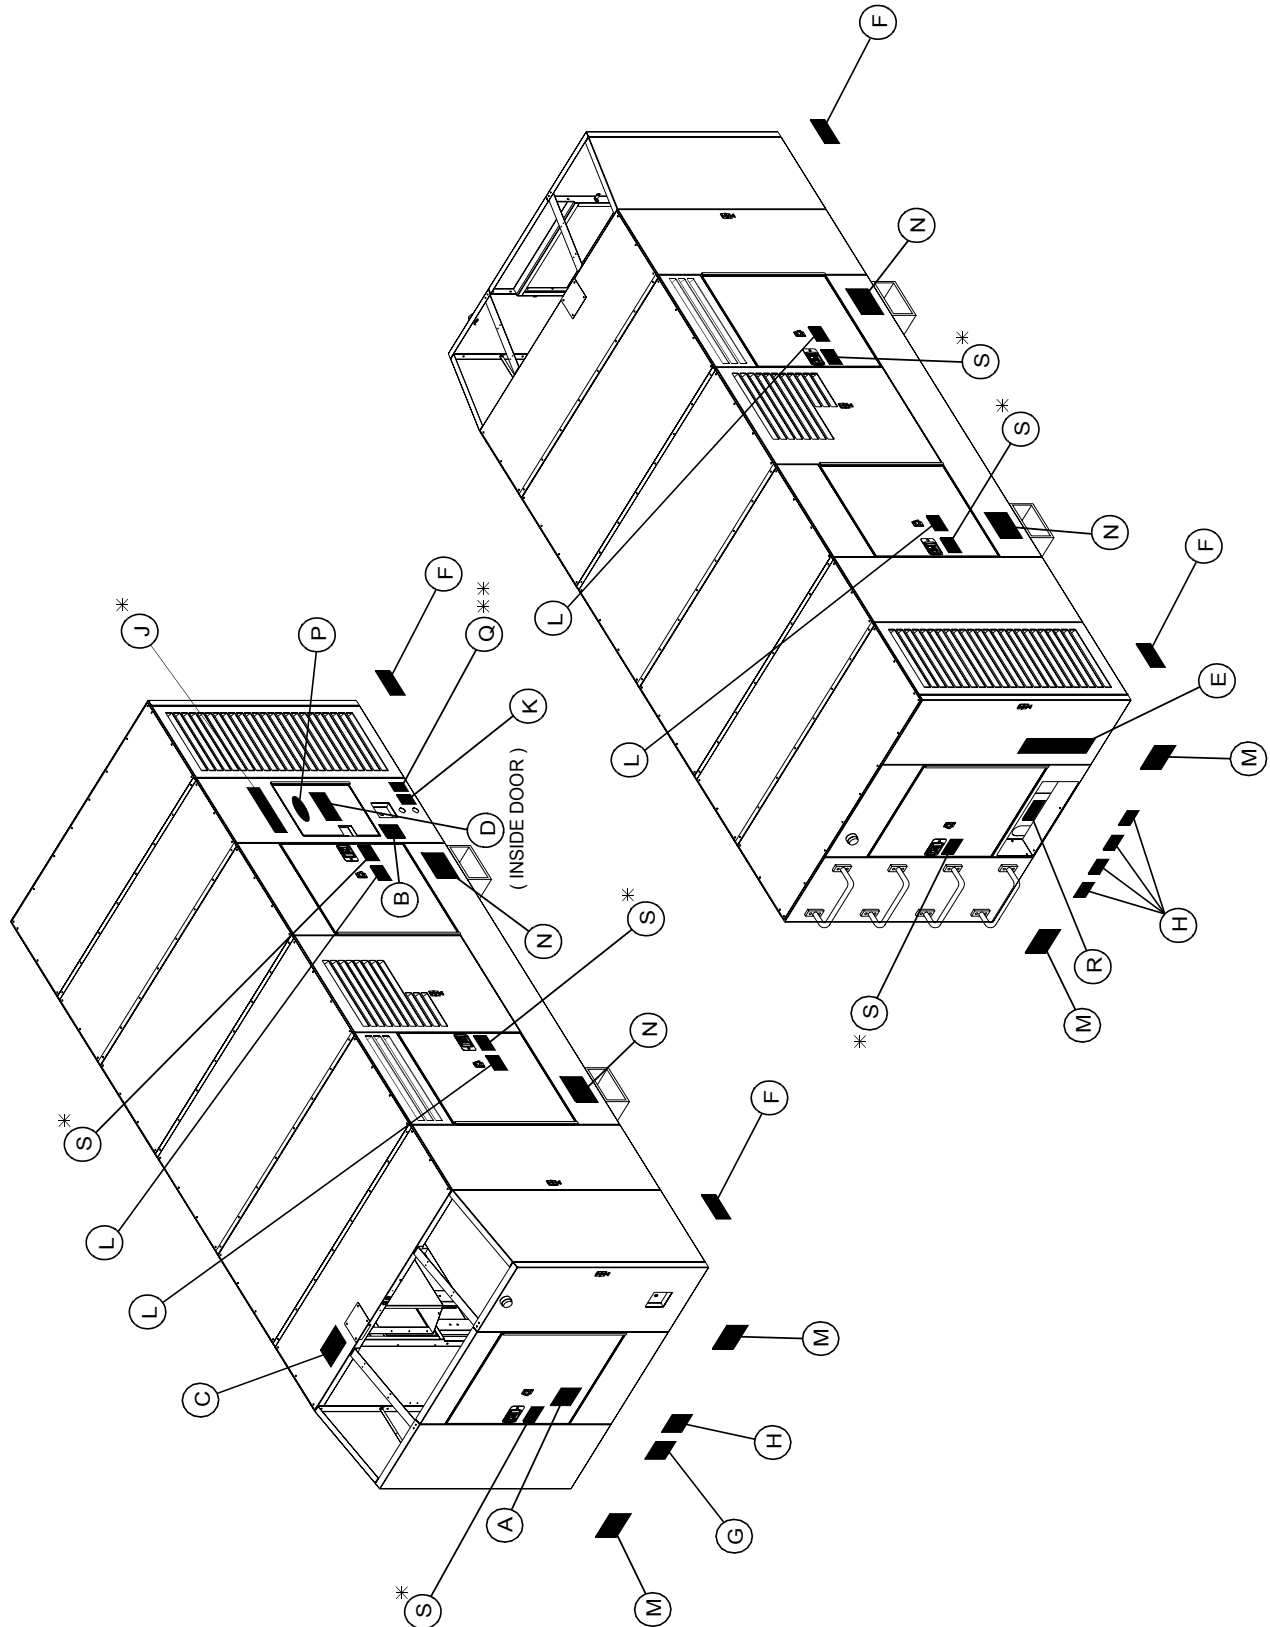

Decal Location


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	54604988	Door Under Pressure Decal	*	D
B	54568787	No Unauthorized Modifications Decal	*	N/A
C	54568761	Hot Pressurized Fluid Decal	*	E
D	54652532	Operating Instructions Decal	*	54652532
E	54629944	3-Part Danger / Warning Decal	*	J
F	54699400	Lift Point Decal	4	A
G	54699392	Towing Speed Decal	*	K
H	54629977	Central Drain Decal	*	54629977
J	36511244	Autostart Decal	*	36511244
K	54749171	AC Heater Decal	*	54749171
L	22928816	Door Closed When Engine Running Decal	4	P
M	54749205	No Weld Decal	4	M
N	54749213	Fork Tube Pockets Decal	4	N
P	54640024	I-R Genuine Parts Decal	*	54640024
**Q	54749155	Battery Charger Decal	*	54749155
R	54625207	Diesel Fuel Decal	*	H
S	54687777	Autostart Warning Decal	6	L
		* Autostart Option Only		
		** Battery Charger Option Only		



Schematics

*****Always use Ingersoll Rand Replacement parts!*****

 
NHP1500 Control System

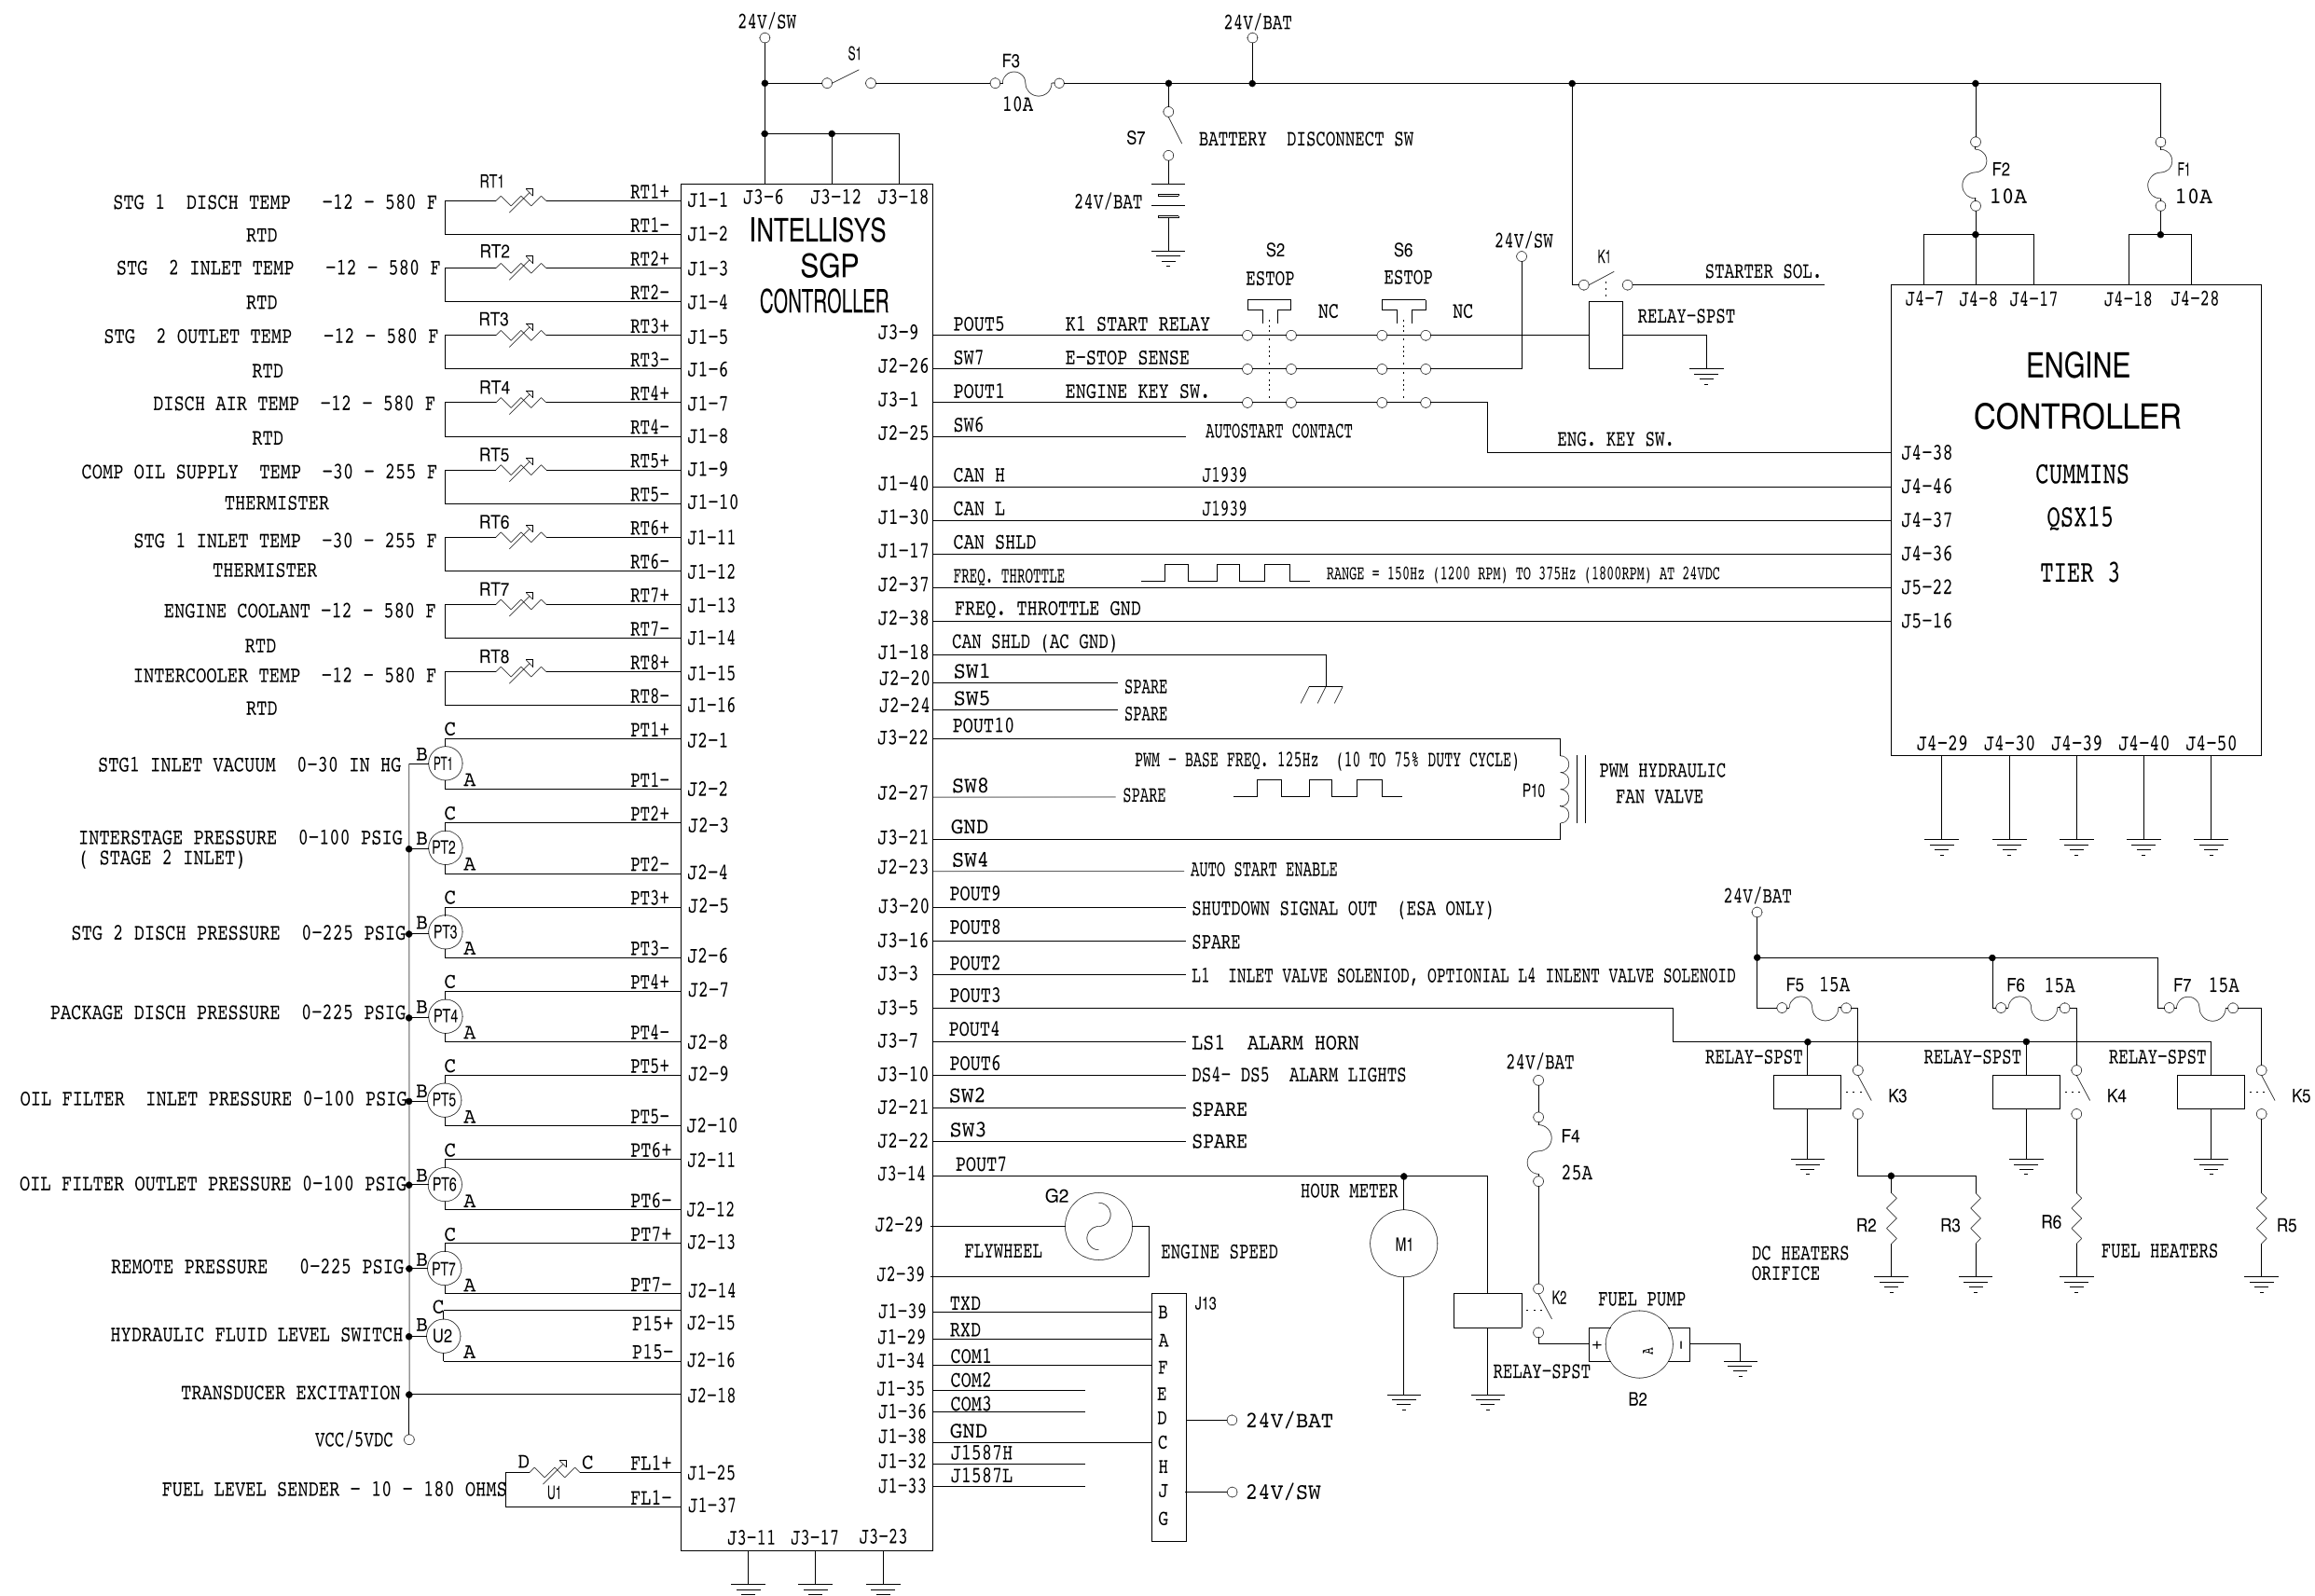

22426803_097_10/06_A

23045438

 
NHP1500 Control System

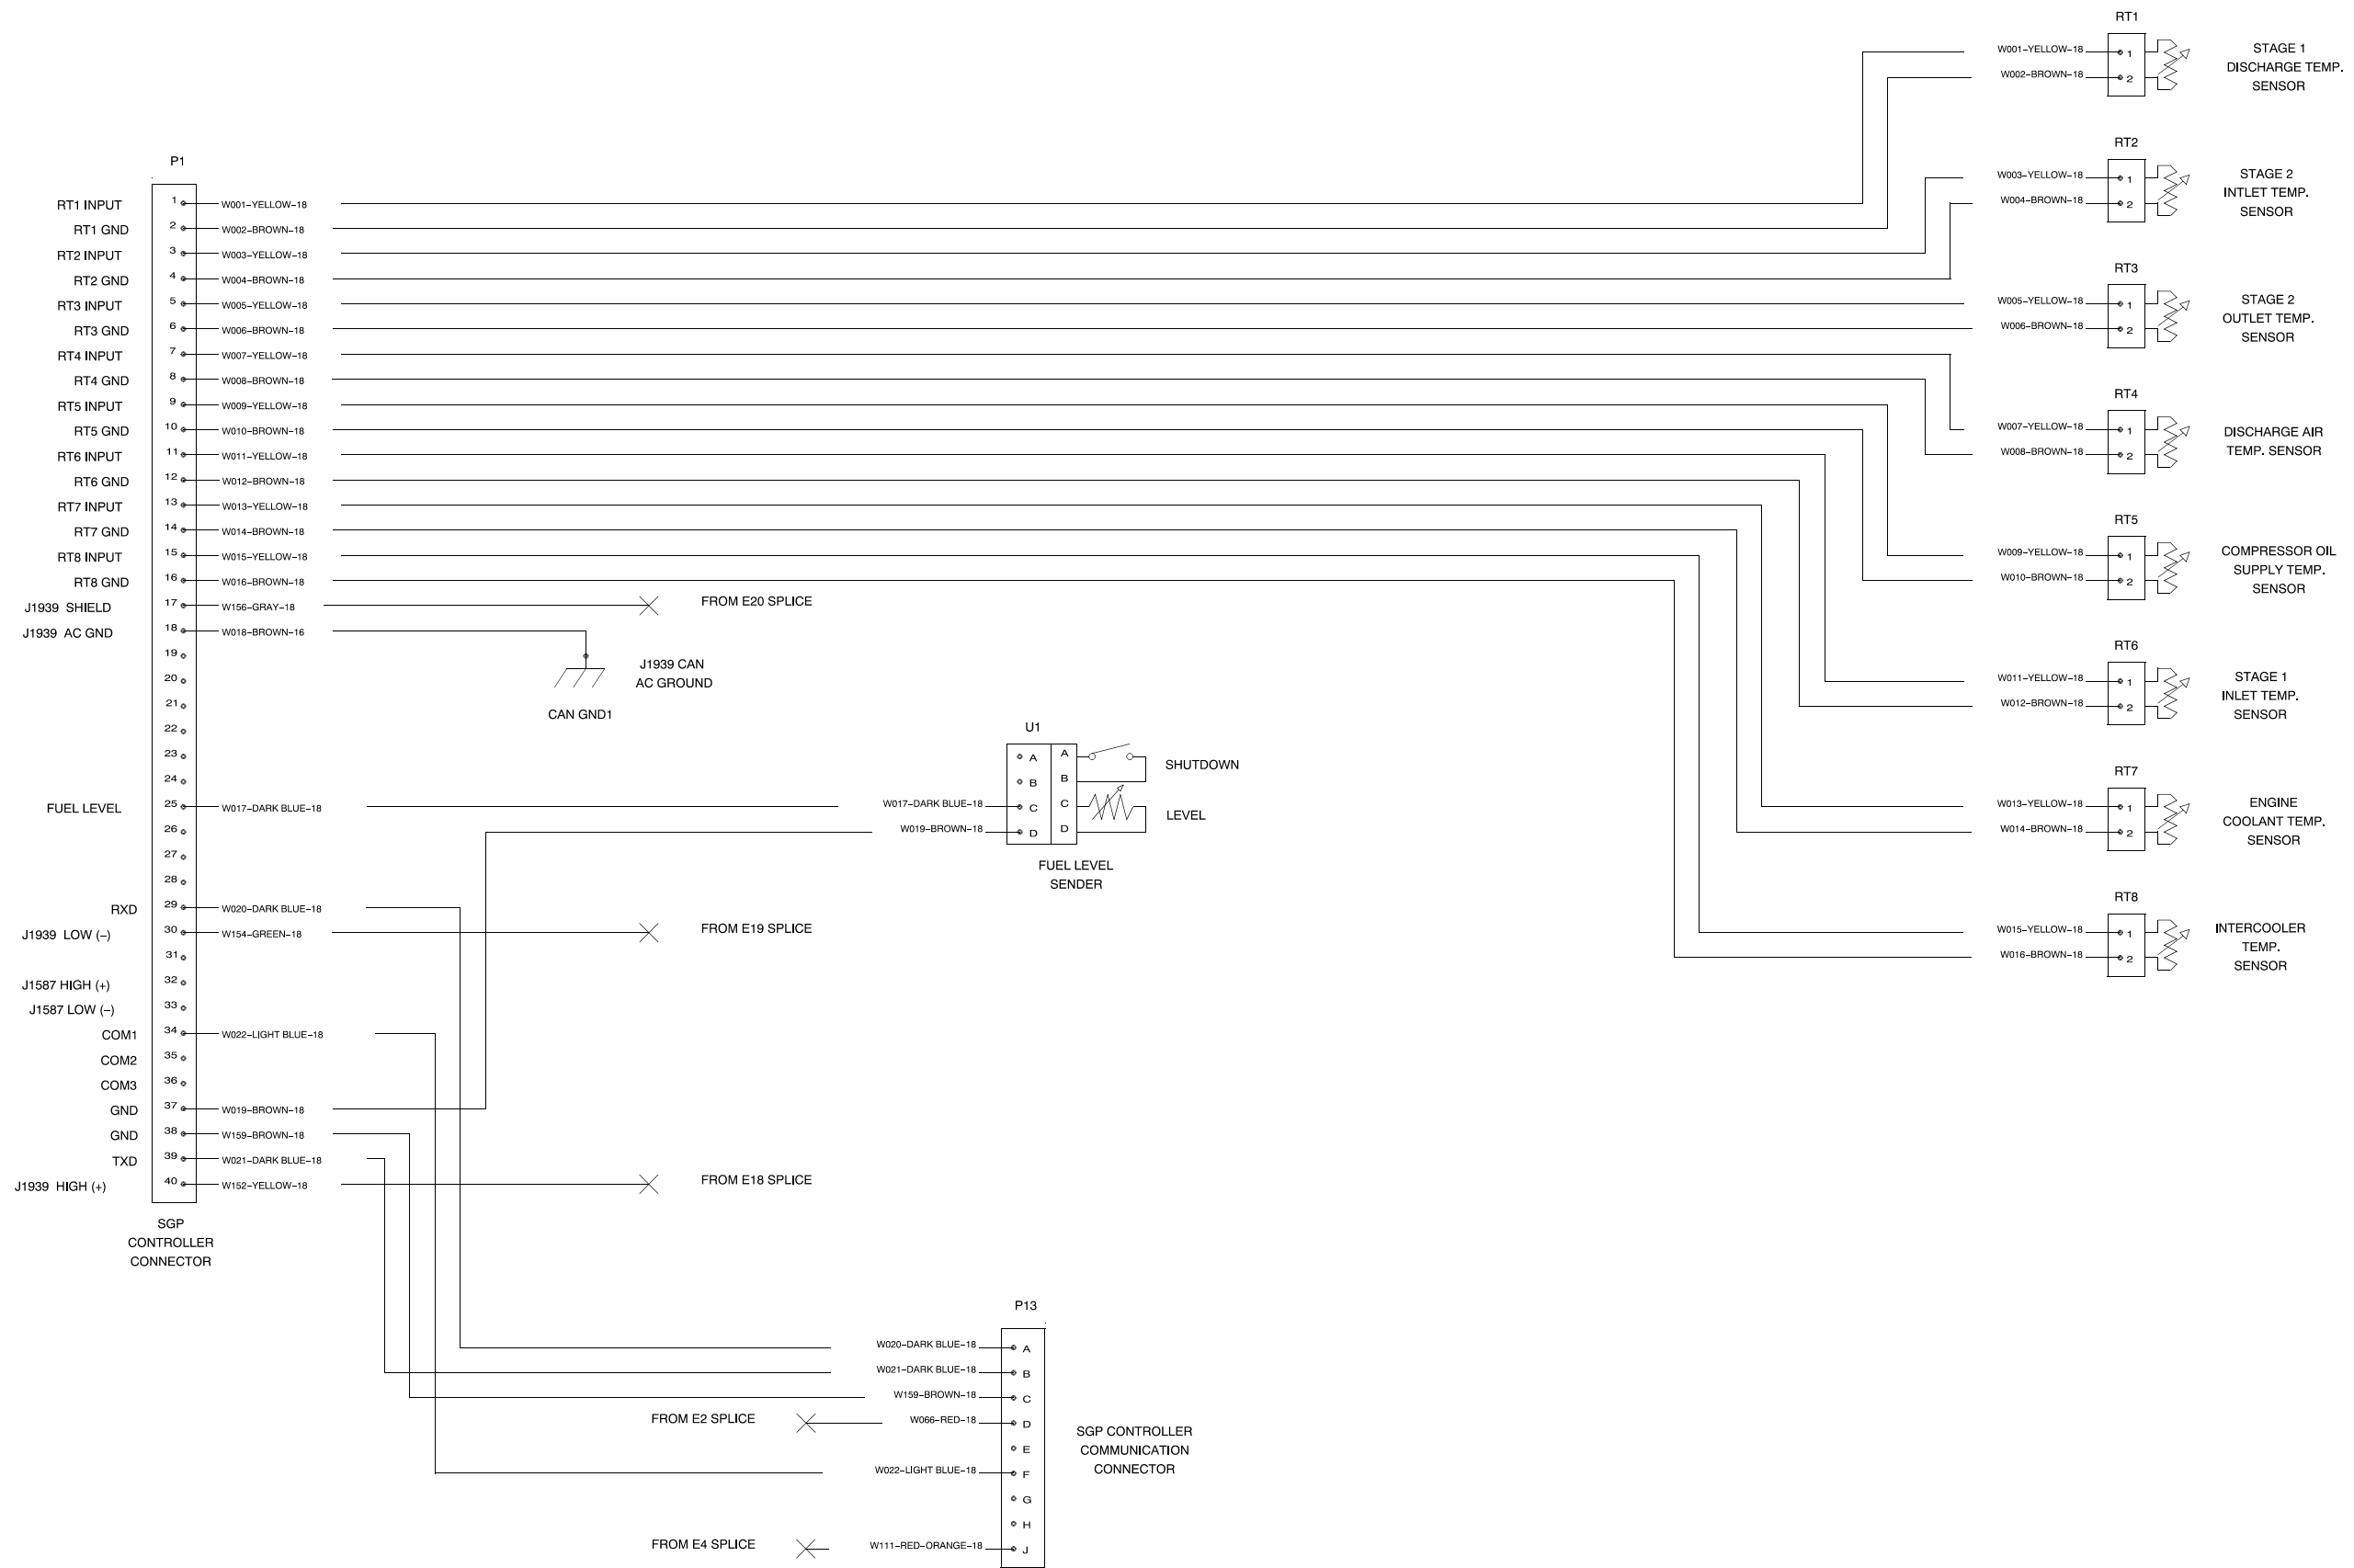

22426803_097_10/06_A

23045438

 
Schematic

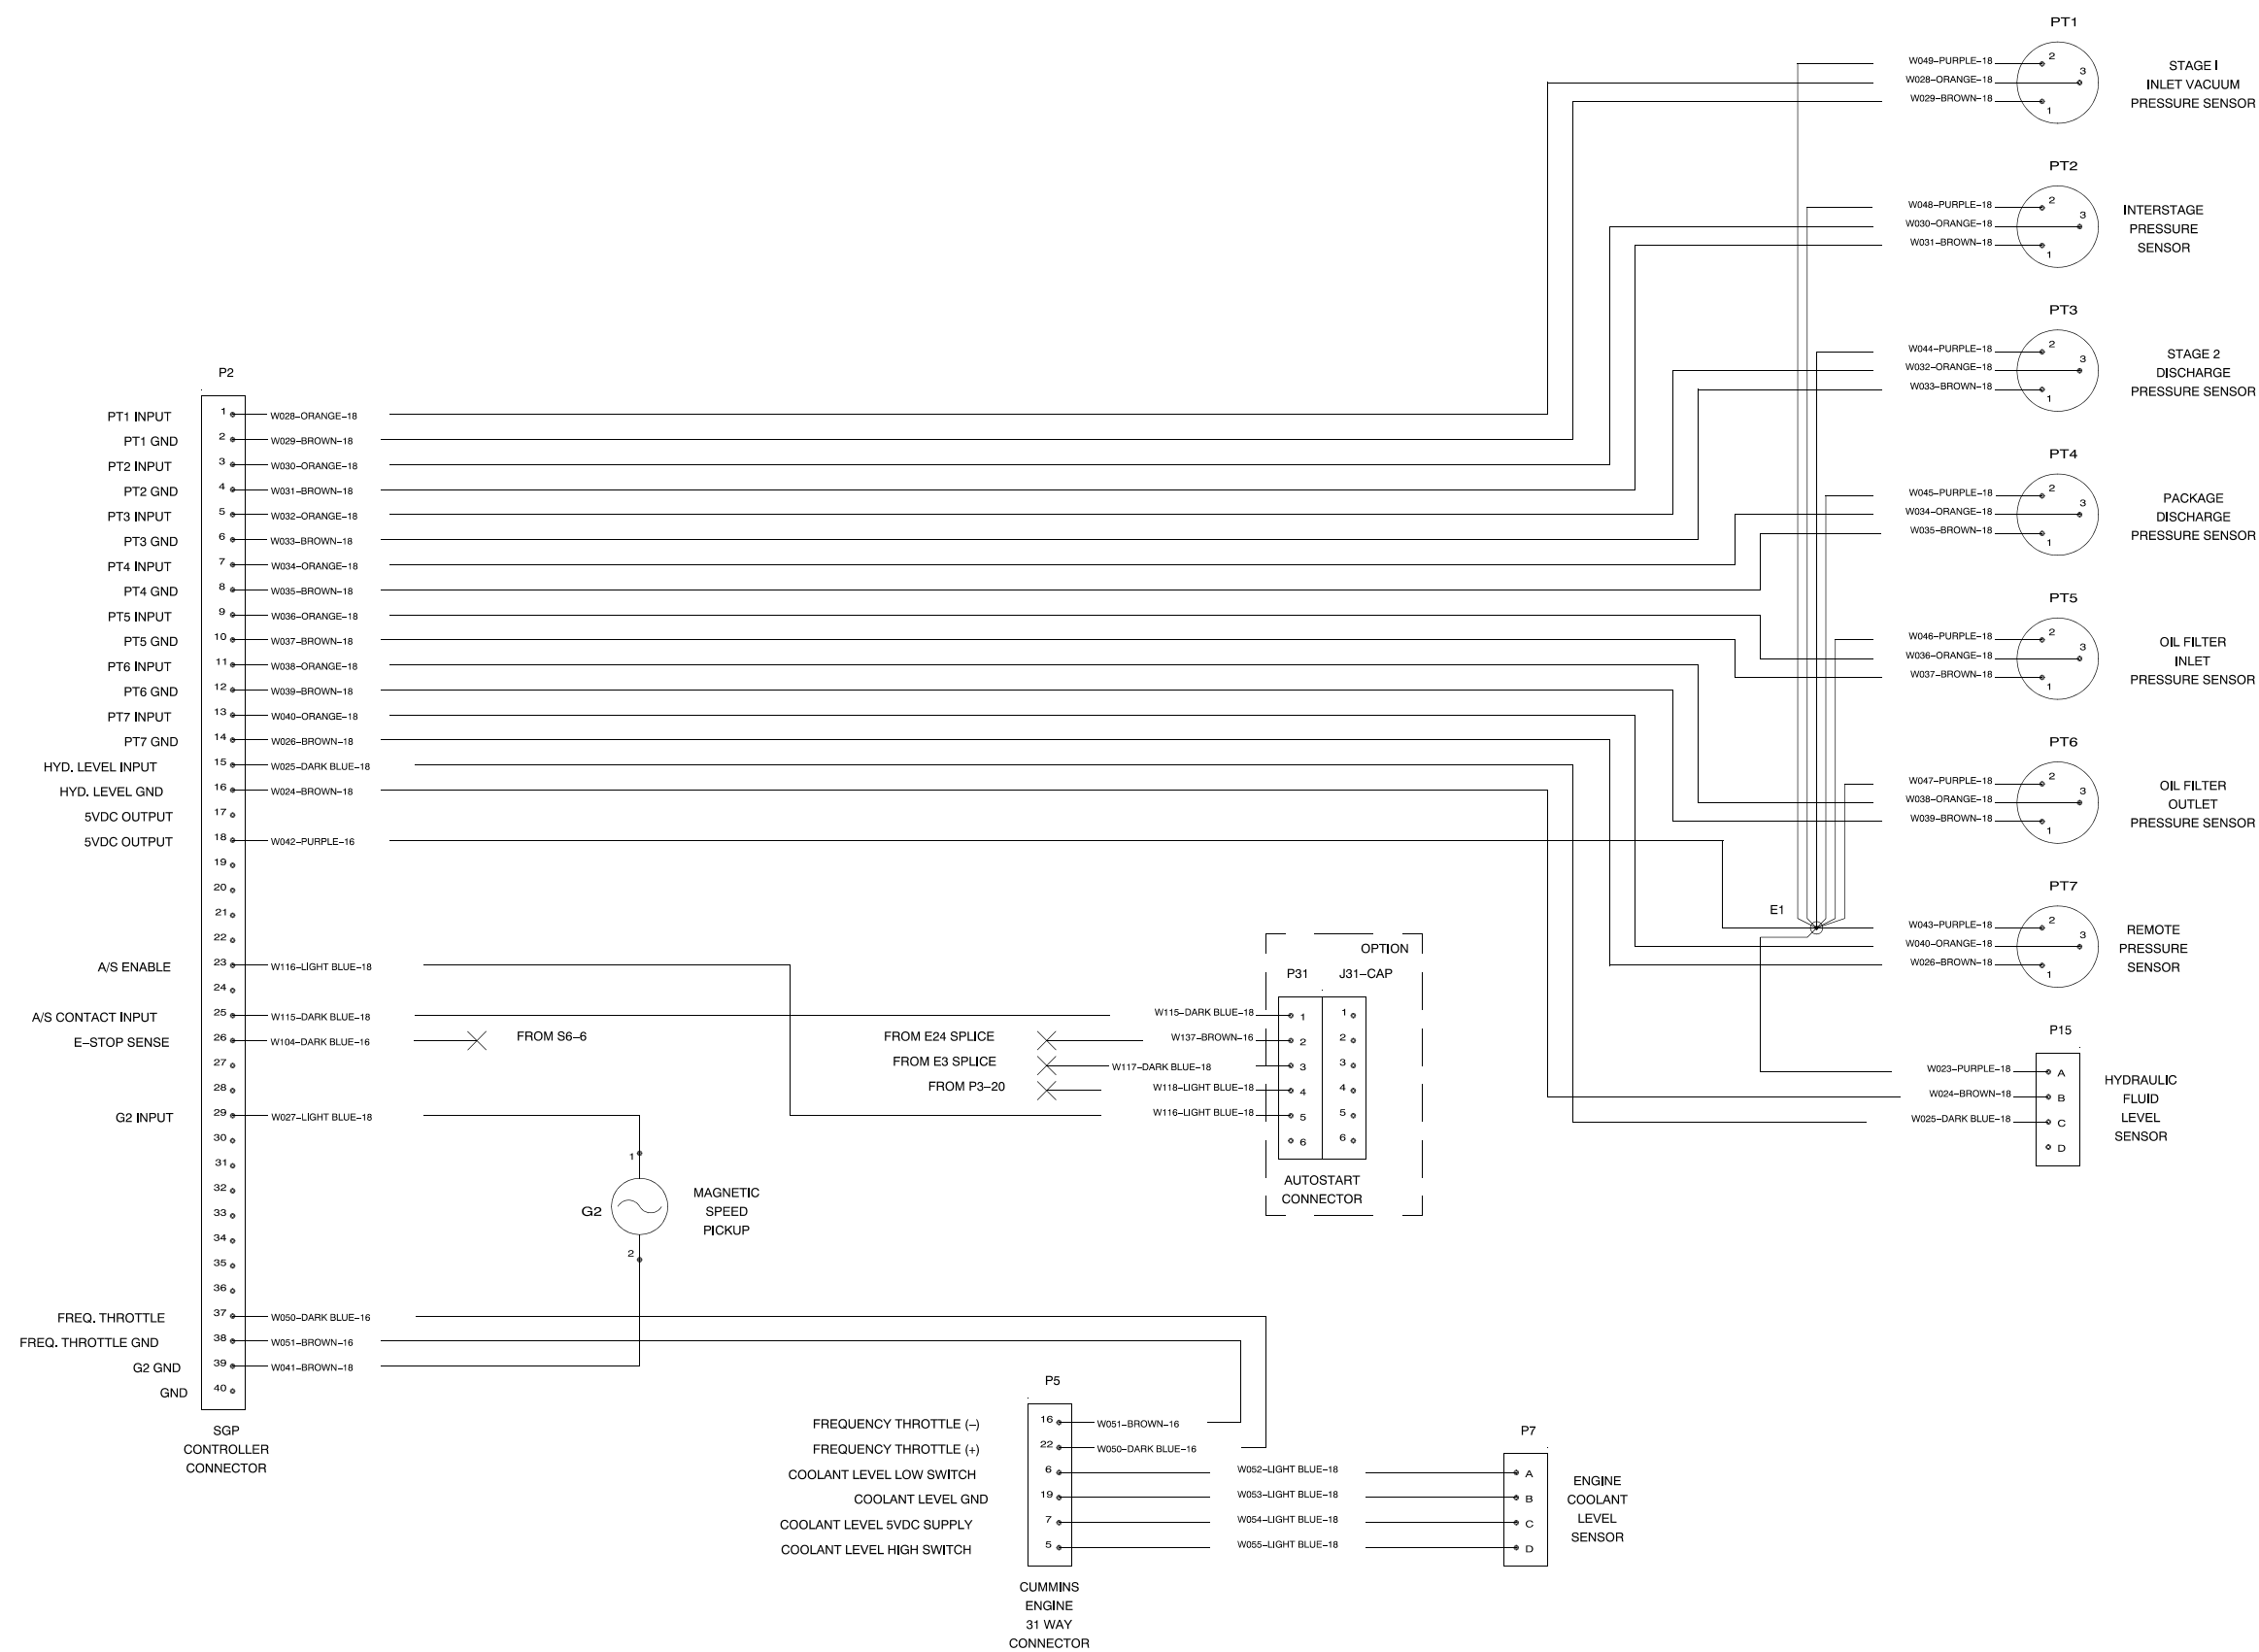

22426803_098_10/06_A

23045438

 
Schematic

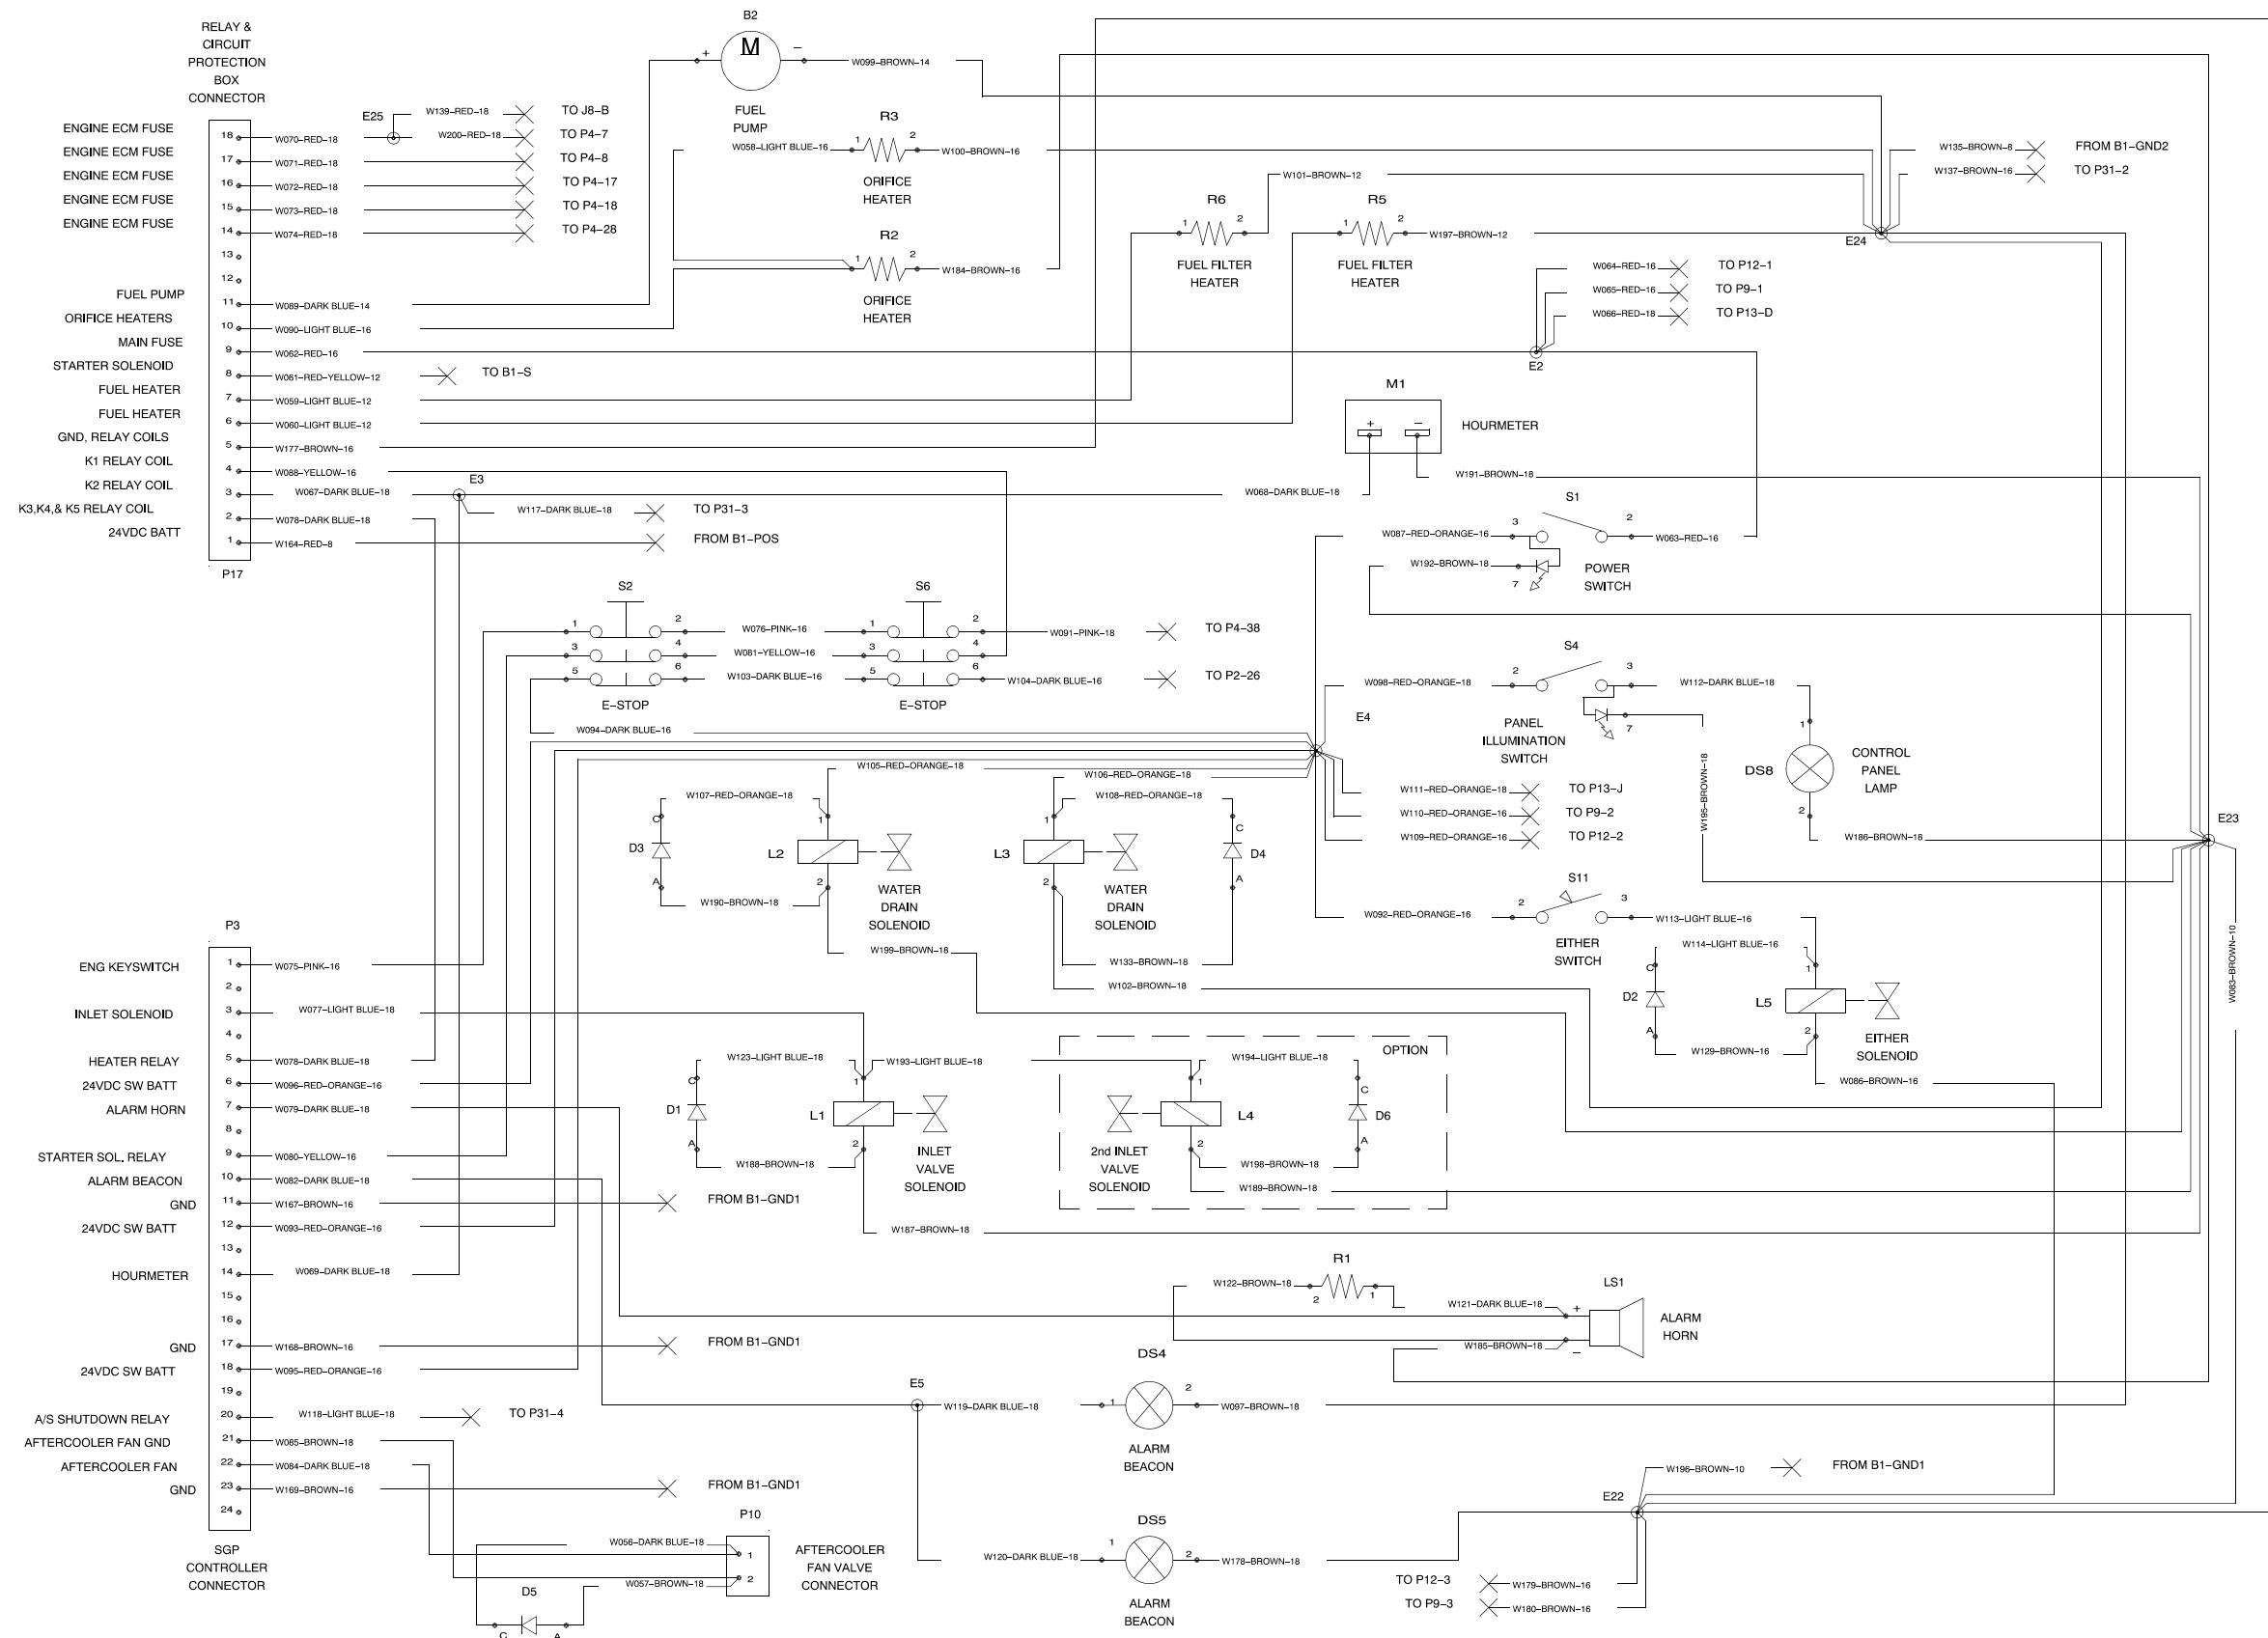

22426803_099_10/06_A

23045438

 
Control Panel

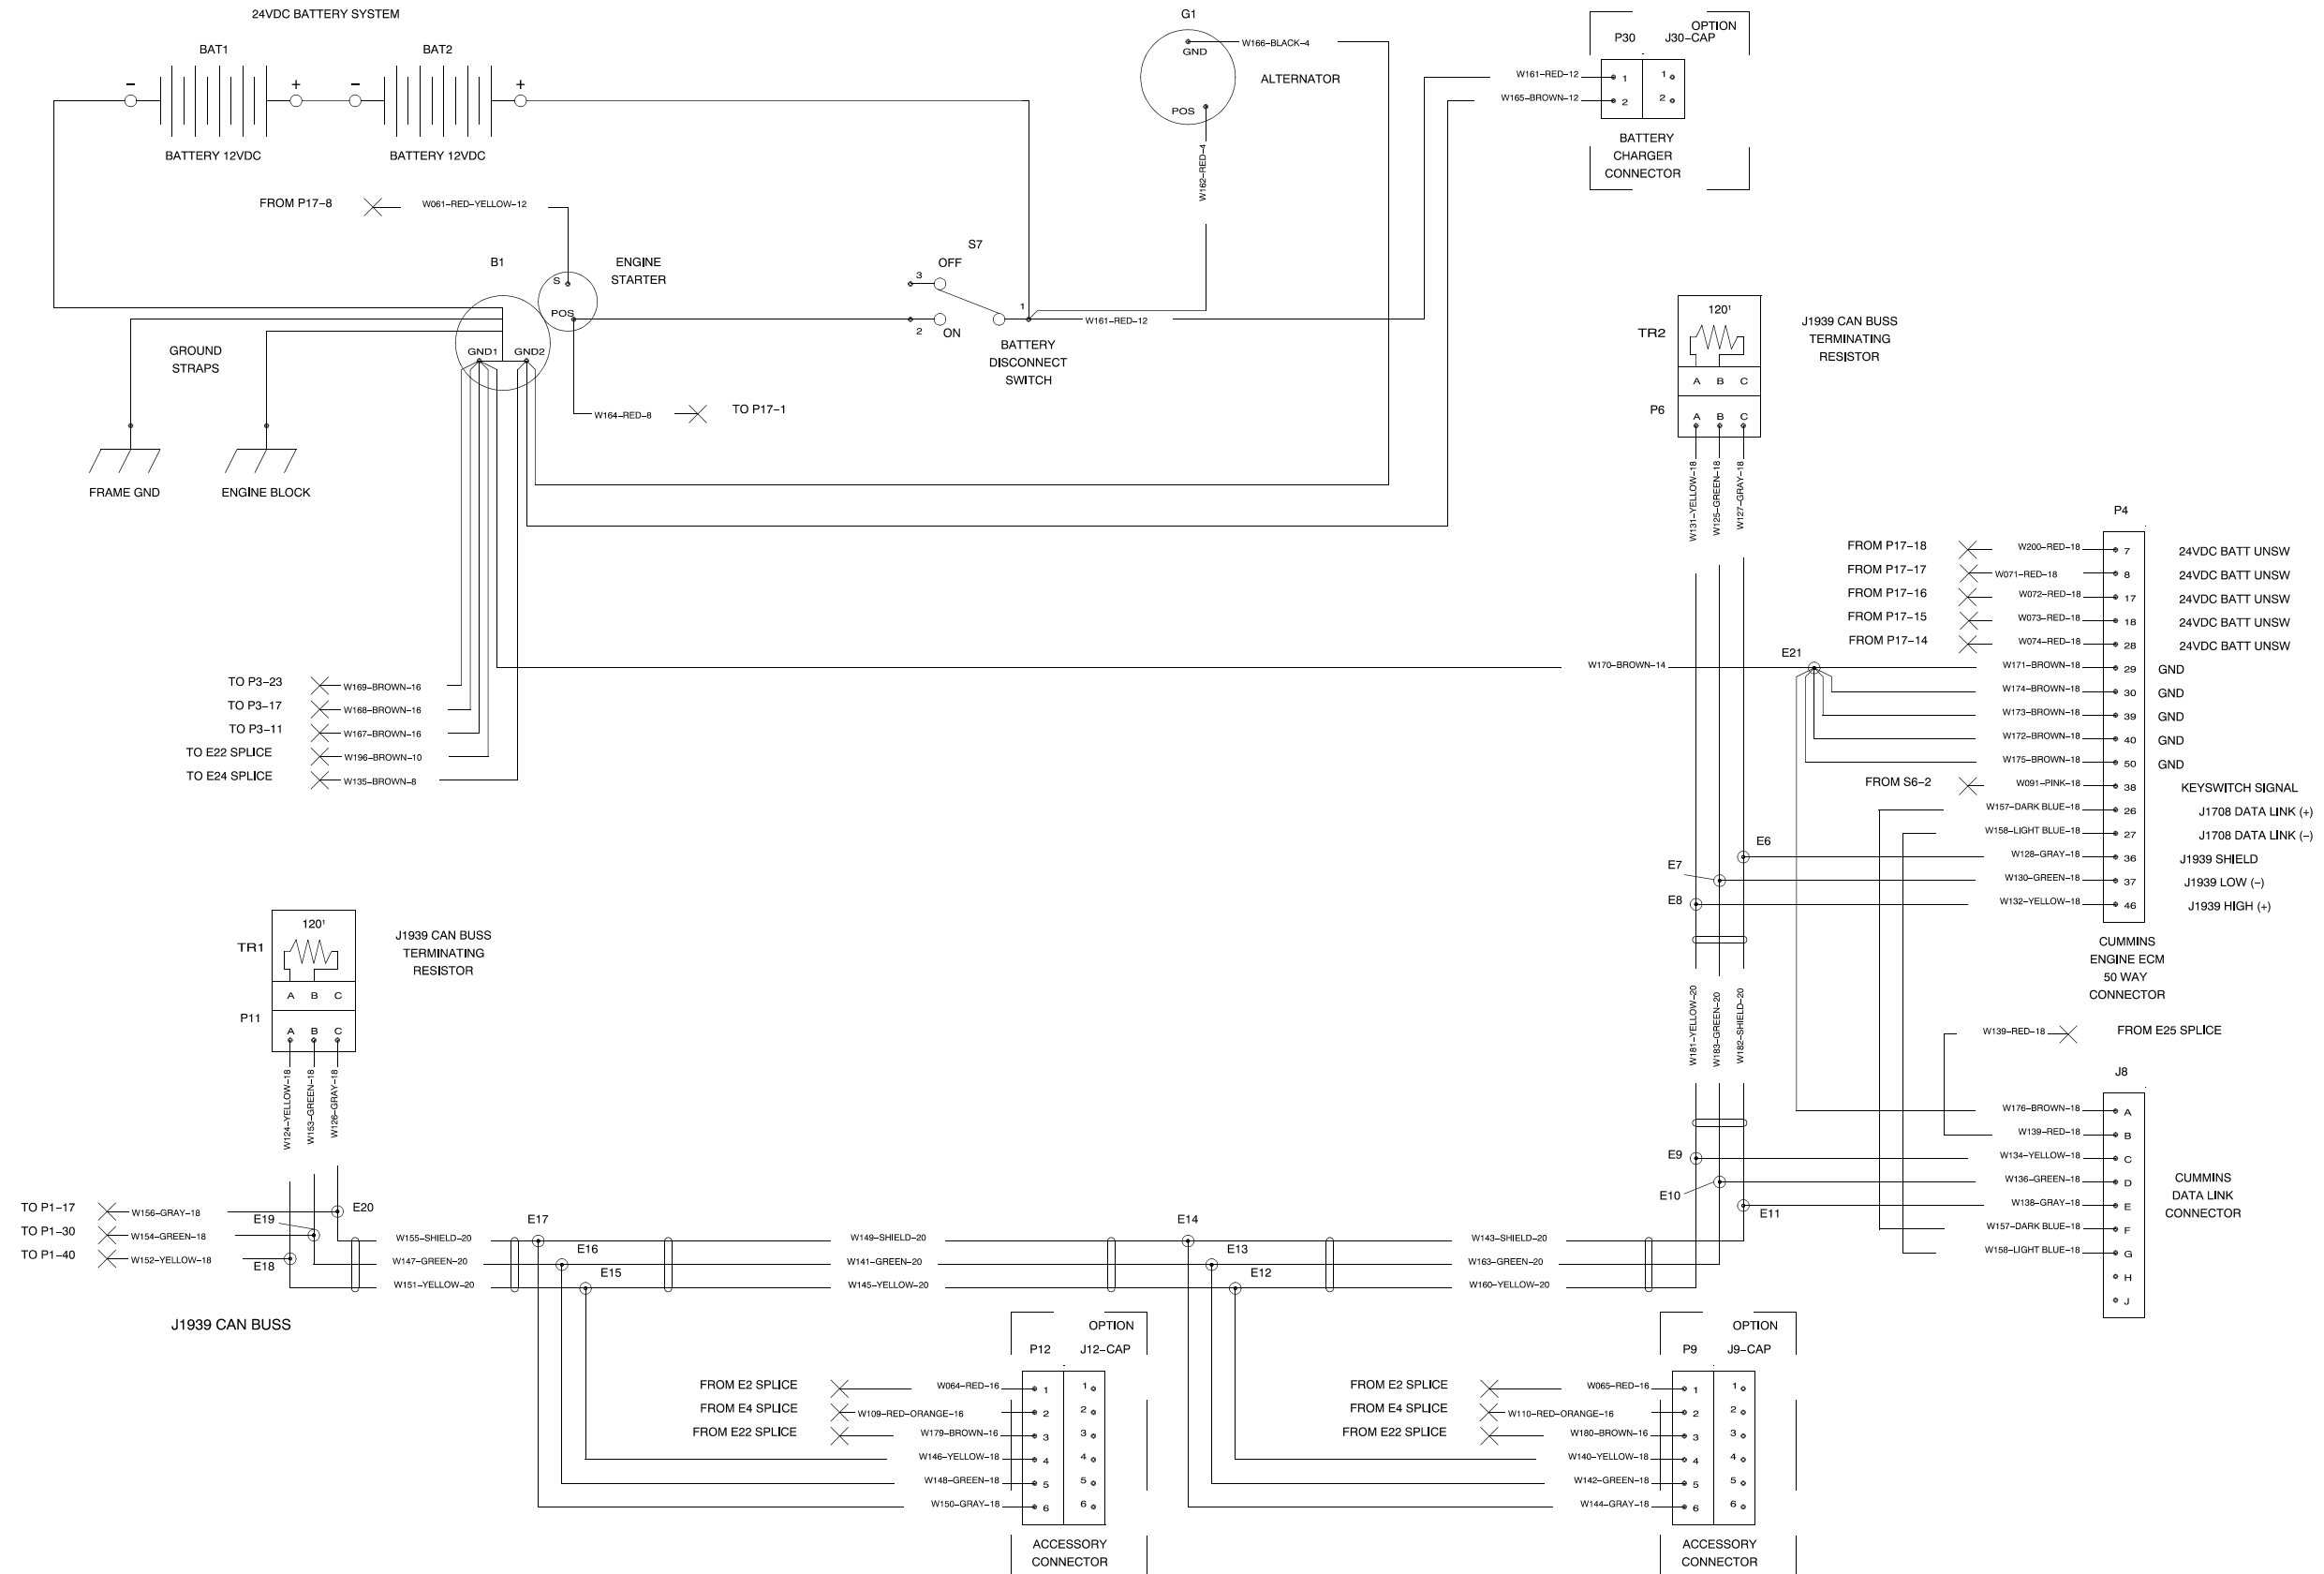

22426803_100_10/06_A

23045438

 W3



*****Always use Ingersoll Rand Replacement parts!*****

WORD INDEX

Symbols

* Autostart Option Only	114
* Included with Assembly	65
** Battery Charger Option Only	114

CPN

10 AMP	98, 99
104" Hose	71
15 AMP	98, 99
25 AMP	98, 99
3-Part Danger / Warning Decal	114
96" Hose	71

A

AC Heater Decal	114
Adapter	
Air End	15, 21
Cover	21
Overhung Load	67
After cooler	
Aluminum	44
Stainless Steel	44
Air End	
High Pressure	22
Low Pressure	22
Air End Assembly	21
Air End Cold Start Heater Assembly	18
Air End Coupling Assembly	21
Alarm Harness	98
Alarm Horn	87
Amber Indicator Lamp	86
Assembly	
Cooler	48
Atomizer	
Ether	18
Autostart Decal	114
Autostart Warning Decal	114
Auxiliary Start Relay	96, 97
Auxillary Start Delay	99
Auxillary Start Relay	98
Axle	13

B

Baffle	
Curb Side Intake	105
Rear Intake	105
Street Side Intake	105
Vertical	52, 53
Battery	72
Battery Charger Decal	114
Battery Disconnect Decal	112
Battery Disconnect Switch	96, 97, 98, 99
Battery Jumper Cable	96, 97, 98, 99
Bearing	
Inner Roller	13
Inner Taper Roller	14
Outer Taper Roller	13, 14

Belt

Alternator	15
Engine Fan	15

Block

Relief Valve	68
Blue Indicator Lamp	86

Bolt

Eye	76
-----------	----

Bottle

Coolant Recovery	46
------------------------	----

Box

Breather	29
Control Panel	76
Power Distributor (Fuse)	52

Bracket

Bottom	52
Fuel Coupler	60
Master Disconnect Switch	72
Mounting	58, 59
Shroud	44
Solenoid Valve	27
Support	16, 105
Top	52
Transducer	68
Water Separator	35
Wheel Chock	11, 105
Bracket Water Separator	38

Bushing

Fan	67
Reducing	22
Split	21
Bushing (Bushing to Bushing)	26
Bushing (To Sump)	26

C

Cable

Disconnect Switch	72
Hand Brake	14
Jumper	72
Negative	72
Positive	72

Cap

Filler	19
Fuel	59
Grease	9
Hub	13, 14

Cartridge

Adjustable Relief	68
Check Valve	68

Center Arm Assembly	10
---------------------------	----

Central Drain Decal	114
---------------------------	-----

Chassis Harness	96, 97, 98, 99
-----------------------	----------------

Chevron Decal	114
---------------------	-----

Chock

Wheel	11, 105
-------------	---------

Clamp

Band	16
Seal	16

WORD INDEX

Clip	72
Combustible Gas Decal	112
Condensate Solenoids	92
Cone	
Inner Bearing	9
Outer Bearing	9
Connector	
Rubber	47
Controller	77, 85
Coolant Fill Decal	112
Coolant Level Switch	90
Cooler	
Dual	45
Coupler	60, 64
Oil Pump	22
Cover	
End Panel	40
Intake	105
Radiator Fill	100
Cover Assembly	29
Cup	
Inner Bearing	9
Outer Bearing	9

D

Diesel Fuel Decal	112, 114
Diode	96, 97, 98, 99
Disc	
Retaining	14
Door	
Control Panel	102
Front	101
Rear	103
Side	104
Street Side	102
Door Closed When Engine Running Decal	114
Door Under Pressure Decal	114
Drawbar Assembly	10
Driver	
Oil Pump	22

E

Elbow	
45	64
Rubber	51, 53
Elbow (Elbow to Manifold)	26
Elbow (Manifold Oil Dump)	26
Elbow (Out of Stage 2)	26
Elbow (To Cylinder)	24
Elbow (To Sump)	26
Element	30, 35
Filter	24, 71
Foam	29
Metallic	29
Primary	51, 53
Safety	51, 53

Elements	
Replacement	65
Engine	15
Engine Cold Start Heater Assembly	18
Engine Diagnostic Panel	
	86
Estop Button	87
Ether Kit	18

F

Fan	67
54 inch	15
Fastener	74
Fiberglass	
Front Panel	106, 107
Front Side	108
Filter	40
Engine Coolant	15
Engine Fuel	15
Engine Oil	15
Filter Assembly	65
Fitting	
Bulkhead	40
Lube	10
Flange	38, 45
Mounting	29
Split	33, 37, 71
Flange Split	40

WORD INDEX

Foam	
2nd	
3rd	
9th and 10th Top	109
4th	
5th	
6th	
11th and 12th Top	109
7th and 8th Top	109
Above Control Panel	106
Above Door	106, 107
Air End Air Intake (Bottom)	56
Back Intake	110
Bottom Baffle	110
Bottom Intake	110
Center Door	108
Curb Side Baffle	110
Curb Side Top	109
Door	106, 107
Engine Air Intake (Bottom)	55
First Top	109
Inside Intake	110
Intake (Front)	55, 56
Intake (Rear)	55, 56
Intake (Side)	55, 56
Intake (Top)	56
Intake (Top)	55
Intake Box	55, 56
Intake Box (Top)	55, 56
Intake Rear	55, 56
Over Door	108
Rear Baffle	110
Rear Side	108
Second Panel	106
Side	107
Side Intake	110
Top Baffle	110
Top Intake	110
Foam Bottom and Top Door	108
Foam Street Side Top	109
Fork Tube Pockets Decal	114
Frame Assembly	8
Frame Ground Strap	96, 97, 98, 99
Front Axle Assembly	10
Front Axle Parts List	13
Front Hub Assembly	9
Fuel Level Sender	96, 97, 98, 99
Fuel Pump Assembly	60
Fuse	
10amp	96
Fuse 15amp	96
Fuse 25amp	96

G

Gasket	
Heater	23

Gauge	71
0-3000 PSI	68
Vacuum	65
Gear Set	21
Ground Strap From Starter	72
Ground Strap to RH of Engine	72
Guard	
Fan	15
Turbo	15
Guard Fan	44

H

Harness	
Air End Heaters	18
Engine Heaters	18
Heat Trace Thermostat	18
Head	
Filter	24, 30, 71
Fuel Pump	60
Heat Trace Assembly	18
Heater	
24 Volt	42
Air End Oil Sump	18
Battery Pad (1 Lead)	18
Battery Pad (2 Leads)	18
Engine Coolant	18
Engine Oil Pan	18
Hydraulic Reservoir	18
Sump	23
Heaters	65
HG Vacuum Transducer	88
High Pressure Air End Assembly	21
Hinge	74
Door	101, 102, 103, 104
Hold-Down	
Battery	72
Hose	
Hump	52
Rubber	46
Rubber Connector	48
Hot Pressurized Fluid Decal	112, 114
Hourmeter	75, 83, 86
Housing	
Air Cleaner	51, 53
Hub	13
Brake Drum	14

I

Inlet Solenoid	92
Insulation	
1st Stage	34
2nd Stage	34
Exhaust	16
Exhaust Pipe	34
Intercooler In	34
Venturi	34

WORD INDEX

Intake Grill	
Curb Side	53
Street Side	51
Intake Housing	
Curb Side	53
Street Side	51
Intercooler	
Air End	44
I-R Genuine Parts Decal	114
IR Swoosh Decal	114
Isolator	71
Needle Valve Gauge	68

J

J-Bolt	72
Joint	
Pipe	35

K

Key	
Bushings	67
Kit	
Oil Pump	22
Knuckle Assembly	
L.H.	10
R.H.	10

L

Laminate	
Control Panel	74
Latch	74
Pedal	10
Slam	101, 102, 103, 104
Tee	101, 102, 103, 104
Level Transducer	88
Lever	
Brake	14
Hand Brake	14
Valve	60
Lift Point Decal	114
Light	
Amber Warning	101, 103
Control Panel	75, 83
Low Pressure Air End Assembly	21
Lower Rear Panel Assembly	38

M

Magnetic Pickup	89
Manifold	29, 71
Tube	25
Motor	
Fuel Pump	60
Hydraulic Fan	67

Mount

Engine	15
L.H. Air End	21
R.H. Air End	21
Rubber	15, 21
Muffler	16, 24

N

Negative Battery Cable	96, 97, 98, 99
No Unauthorized Modifications Decal	114
No Weld Decal	114
Nut	
Hub	13, 14
Pivot Pin	14
Spindle	9
Swivel	68
Tube	29
Wheel	13, 14
Wing	53
Nut Wing	51
Nutsert	44

O

Oil Dip Stick Assembly	22
Oil Fill Plug Decal	112
Oil Free Air Decal	114
Oil Pump Kit	21
Operating Instructions Decal	114
Orifice	42
Fan	44
L.H. Fan	46
R.H. Fan	46

WORD INDEX

P

Panel	
2nd Top	100
3rd Top	100
4th Top	100
5th Top	100
Bottom Center	102, 104
Center Grill	102, 104
Control / Instrument	74
Control Door	102
Cooler side	48
Curb Side Front	101, 104
Curb Side Rear	103
Curb Side Second	104
Front Bottom	101
Front Side	102
Front Top	100, 101
Light	86
Rear Grill	102, 104
Rear Middle Top	103
Rear Side	104
Rear Top	100
Second Front	102
Service Access	103
Street Side Front	101
Street Side Rear	103
Top Door	102, 104
Panel Light Bulb	86
Pin	
Brake Shoe Centering	14
Cotter	9, 13
cotter	14
King	10
Pivot	14
Roll	10, 11
Spring	11
Pipe	
Exhaust	16
Flex Turbo	16
Plate	23
Cooler	45
L.H. Cover	8
Mounting	38, 51, 53
R.H. Cover	8
Receptacle	102
Support	16
Top	67
Plug	
Dust	60, 64
Positive Battery Cable	96, 97, 98, 99
Positive Battery Jumper Cable	96, 97, 98, 99
Power Distribution Box	96, 97, 98, 99
Power Distribution Box (Includes W-3 Harness)	96, 97, 98, 99
Pressure Transducer	88
Probe	
Low Water	46

Pump	
Hydraulic	15, 71
Oil	22

R

Radiator	46
Rear Axle Assembly	9
Rear Axle Parts List	14
Rear Hub Assembly	9
Red Lamp Indicator	86
Relay	
SPDT	96, 97, 98, 99
Relief Valve Assembly	68
Retainer	74
Ring	
Inner	21
Outer	21
Rocker Switch	
Lighted	86
Momentary	86
Rotating Fan Decal	112
RTD	89, 92, 94
Rtd (RT-2)	37

S

Screw	
Mounting	35
Top Panel	100
Seal	
Door (Around Edge of Each Door)	102
Grease	13, 14
Sender	46
Fuel	58, 82
Sensor	25, 79, 81
Murphy	19
Separator	
Discharge	42
Interstage	42
Moisture	38
Water	35, 38
Set	
Gear	22
SGP Controller	86
Shaft	
Cam	14
Shoe	
Left Brake	14
Right Brake	14
Shroud	
Bottom	44, 46
L.H.	44, 46
R.H.	46
R.H. Inside	45
R.H. Outside	45
Top	45, 46
Silencer	61, 62
Second Stage	22, 26

WORD INDEX

Spacer	
Coupling	21
Fan	15
Spring	
Brake Shoe Return	14
Starter Ground Strap	89
Strainer	42, 59
Strap	
Front Foam	105
Rear Support	103
Support	101
Wheel Chock	105
Straps	
Wheel Chock	11
Strobe Light	87
Stud	13
Wheel	9, 14
Support	
Cooler (Not Required for Stainless Steel After cooler)	44
Dual Cooler	44, 45
Hydraulic Fan	67
Intake	105
L.H.	11
Plate	8
R.H.	11
Rear Axle	9
Tray	72
Switch	
Master Disconnect	72
Rocker	75, 83
T	
Tank	
Fuel	58, 59
Oil	19
Tank Assembly	68
Thermister	92
Thermister (RT-6)	53
Tie Rod Assembly	10
To 2nd Stage Air End Inlet	34
To Air End Intake	53
To Elbow in Sump	28
To Engine Turbo	52
To Sump	27
To Top of Venturi on 2nd Stage Air End	33
Toggle Switch SPST	86
Toggle Switch SPST Momentary	86
Towing Speed Decal	114
Transducer	
0-100 Vacuum	80
0-225 Vacuum	80
0-30 Vacuum	80
Level	80
Transducer Location Decal	112
Tray	
Battery	72

Tube	19, 24, 25, 27, 51, 53
2nd Stage Inlet	35
2nd Stage Outlet	33
Adapter	53
After cooler Inlet	33
After cooler Outlet	40
Aluminum	44
Engine Inlet	48
Exhaust	16
Forklift	8
Intercooler Inlet	33
Intercooler Outlet	37
Lower Radiator	47
Stainless Steel	44
Turbo Outlet	48
Upper Radiator	47
Water Separator	37
Tube (Stage 2	
Drain to Sump)	26
Tube Assembly	29, 35, 38
Tubing	46, 51, 61, 62

V

Valve	24
3-Way	60
Air Inlet	22
Ball	19, 38, 64, 71
Check	33, 42, 68
Evacuator	51, 53
Proportional	68, 71
Pump Bypass	30
Safety	37, 40
Solenoid	25, 27, 28, 42, 81
Temperature	24, 30
Valve Solenoid (with Option)	81
Vent	
CAC Air Inlet	102, 104
Curbside	48
Streetside	48
Venturi	
First Stage	23

W

Washer	8, 9, 10, 15, 21, 72, 74, 76
Spindle	9
Spring	14
Well	
Engine Thermostat	18
Hydraulic Thermostat	18
Wheel and Tire Assembly	9, 13
Wire	
Stainless Steel	34
Wiring Harness	86

NUMERICAL INDEX

COMM.NO.	PAGE	COMM.NO.	PAGE	COMM.NO.	PAGE
*	27	23021082	13	35253038	61
.....	28	23021090	13		62
.....	34	23021108	13	35271154	21
.....	52		14	35273366	74
.....	53	23021116	13	35279025	8
*54661590	65	23021124	13		15
*54726965	65		14		16
*54726971	65	23021132	13		21
22050926	19		14		38
22053235	19	23021140	13		44
22063937	19		14		46
22063945	19	23021157	13		52
22065916	15		14		53
22071517	98	23021165	13		58
22071519	98	23021181	13		59
22071575	96	23021199	14		67
.....	99	23021207	14		68
22071591	96	23021215	14		72
.....	99	23021223	14		101
22079180	96	23021231	14		102
.....	97	23021249	14		103
.....	99	23021256	14	35279827	68
22079693	18	23021264	14	35279926	24
22079701	18	23021272	14		26
22087118	24	23021280	14	35279934	27
.....	30	23021298	14		28
22233258	22	23021306	14		29
.....	26	23021314	14		42
22235204	24	23021322	14	35281229	9
22244206	15	23021330	14	35281666	10
22424279	19	23021348	14	35281674	10
22437016	27	23021355	14	35281773	10
22620637	103	31497357	47	35282979	27
22620645	103	35108216	72	35282987	24
22620652	103	35112648	51	35283050	27
22620678	103	35114537	52	35283464	18
22648430	15	35118272	30	35284082	26
22878482	46	35119858	51		27
22883912	48	35120211	53		28
22883920	16	35123496	51	35284520	18
22884423	33		52		30
22885263	46	35128982	72	35286327	46
22891865	48		96	35286426	19
22892517	100		97	35286525	64
22892665	48		98	35286756	64
.....	102		99	35286939	64
22892731	48	35129071	53	35287911	64
22895452	48	35142199	64	35289503	19
.....	104	35144492	72	35290089	86
22901276	47	35225077	76	35290352	40
22903728	48	35225093	76	35291384	30
22928212	42	35225788	72		71
22928220	42	35248145	42	35291863	64
22928816	114	35248319	42	35292051	30
22928873	15	35252782	19		71
23021074	13				

NUMERICAL INDEX

COMM.NO.	PAGE	COMM.NO.	PAGE	COMM.NO.	PAGE
35293075	72	35577873	96	36843282	101
.....	89		97		102
35294750	71		98		103
35295880	71		99		104
35297340	15	35581792	19	36844124	74
35300110	53	35602812	18	36844579	42
35300771	52	35603190	11	36845014	19
35303361	16		105		59
35305648	64	35603349	74	36845022	59
35306687	30	35603661	11	36845600	46
35309210	19		105	36846061	64
35310234	19	35924256	100	36858751	18
35310994	27	36511244	114	36860005	72
35313428	25	36755718	38	36863389	67
35314582	74	36759025	51	36864346	53
35315894	51	36763670	8	36864361	51
35315977	64		9		53
35321421	67		15	36864379	51
35322395	61	36785145	87		53
.....	62	36785319	89	36867778	51
35326560	71	36787026	16		53
35326578	71	36787034	16	36876845	58
35327303	76	36792000	30		82
35327311	76	36792018	64	36877793	23
35330570	47	36793602	101	36879195	53
35332030	71		102	36879211	34
35333830	11		103	36879492	15
.....	105		104	36881886	16
35335124	64	36793651	96		45
35356039	35		98	36884047	15
35356484	61		99	36889608	16
.....	62	36794816	101		35
35357052	18		102		45
35360080	9		103		100
35360098	9		104	36892362	96
35360775	46	36797652	76		97
35366665	71		103		98
35367846	68	36799807	16		99
35369180	74	36840908	74	36895746	44
35369339	61	36841245	75	36896975	72
.....	62		83		96
35369354	61		86		97
.....	62	36841252	75		98
35375377	21		83		99
35376169	96		86	36898096	15
.....	97	36841526	42		52
.....	98	36842011	96		60
.....	99		97		74
35376953	53		98	36898104	52
35388982	51		99		60
.....	53	36842102	58		74
35562156	72	36842318	42	36920338	18
35576115	71		92	36920346	18
35576123	64			36920825	80
					88

NUMERICAL INDEX

COMM.NO.	PAGE	COMM.NO.	PAGE	COMM.NO.	PAGE
36921302	15	39330279	22	39915087	35
.....	21	39330287	22		42
36921351	21		33	39917315	29
36921492	15	39330295	33	39917323	29
36922185	8	39330303	22	39918206	40
36922938	33		34	39918214	37
36923886	21	39330741	21	39919352	53
36924009	101		22	39919360	53
36924017	101	39330758	21	39925425	22
36924058	102		22	39925532	38
.....	104	39464367	29	39928007	38
36924066	101	39464425	35		42
36924074	102		37	40068371	29
.....	104	39464433	23	40068389	29
36924090	104	39467634	24	43205327	67
36924132	104		30	43205384	19
36924140	102	39481593	33		68
36924157	104		40	43205392	68
36924165	102		45	51206787	15
36924199	100	39485255	26	54362819	35
36924207	100	39487426	35	54373113	101
36924215	100	39487434	40		102
36924223	100	39489646	29		103
36924231	100	39491741	29		104
36924249	101	39497003	29	54377585	58
36924280	102	39497904	23	54379649	35
.....	104	39497912	23	54380449	37
37081528	42	39560180	29	54381769	58
39133145	29	39583927	26		59
39140512	24	39590542	29	54381793	59
39167119	24	39591565	30	54383468	40
.....	30	39871165	24		44
39172945	25		30	54385752	9
39172952	25		71	54404280	46
.....	26	39890926	38	54406715	44
39172994	24	39891171	40	54407523	45
.....	25	39911110	22	54407549	44
39173042	25	39911615	24	54407556	45
39173463	29		30	54407564	44
39175187	26		71	54409339	15
39179072	21	39912795	35	54416029	45
.....	22	39913025	35	54416037	44
.....	23	39913124	23	54421706	46
.....	35	39913827	25	54421714	46
39188479	33	39914171	25	54421722	46
.....	40	39914189	25	54421730	46
.....	45	39914197	25	54422522	48
39213442	21	39914205	25	54424114	11
.....	22	39914213	25	54424569	11
39249875	102	39914221	24	54427810	46
39309547	24	39914239	25	54430855	103
39310396	26	39914247	25		105
39311923	25	39914254	24	54432612	21
39313598	24	39914270	24		22
.....	26		26	54434147	21
39330253	35				

NUMERICAL INDEX

COMM.NO.	PAGE	COMM.NO.	PAGE	COMM.NO.	PAGE
54441753	77	54512611	25	54615752	16
.....	85		27	54618640	72
.....	86		28	54619952	72
54454103	60		81	54620588	33
54454251	47		92	54621552	76
54457072	68	54519186	24	54621560	102
54461736	101	54534847	33	54623889	102
54464607	18	54543343	45	54625207	112
54464615	18	54550827	44		114
54464623	18	54557087	25	54625926	51
54464631	18		37	54627799	19
54464664	18		79	54628151	22
54464672	18		81	54629944	114
54474572	46		92	54629977	114
.....	90		94	54630181	114
54475686	75	54557095	53	54631312	52
.....	83		92		96
.....	86	54557987	89		97
54475777	75	54568753	112		98
.....	83	54568761	112		99
.....	86		114	54631338	51
54477286	87	54568779	112		53
.....	101	54568787	114	54631668	8
.....	103	54576327	68	54631676	8
54480298	18	54579057	22	54631684	8
54483722	101	54581327	80	54631767	74
.....	102		88	54631791	98
.....	103	54584594	44	54631809	98
.....	104	54592951	15	54631908	74
54485404	101		21	54631924	68
.....	102	54597497	86	54637236	44
.....	103	54597588	67	54638135	44
.....	104	54597737	37	54638143	53
54489109	60	54597745	35	54638333	114
54489125	60	54601620	67	54640024	114
.....	64	54603733	71	54642327	112
54494778	87	54603758	71	54642368	45
54496757	88	54603766	71	54648209	16
54496773	80	54603782	71	54652417	108
.....	88	54603790	71	54652425	106
54500798	8	54603816	71		107
54511241	72	54603865	68	54652532	114
.....	96		71	54656194	51
.....	97	54604343	15		102
.....	98		71	54656202	53
.....	99	54604962	112		104
54511258	72	54604970	112	54656210	105
54511274	72	54604988	114	54656228	105
54511282	72	54606603	24	54656236	105
.....	96	54610621	15	54656244	105
.....	97		21	54656269	105
.....	98	54615067	86	54656491	51
.....	99	54615075	86	54656509	53
		54615083	86	54656517	52
		54615091	86		53
		54615109	86	54656525	52

NUMERICAL INDEX

COMM.NO.	PAGE	COMM.NO.	PAGE	COMM.NO.	PAGE
54656533	52	54661442	67	54677257	9
54656624	16	54661509	68	54677265	9
54656632	16		71	54678941	23
54656657	22	54661517	68	54686852	112
54658323	96	54661525	68	54687322	15
.....	97	54661541	68	54687777	114
.....	98	54661566	68	54688163	38
.....	99		71	54688171	38
54658331	96	54661574	68	54690102	21
.....	97		71	54690755	38
.....	98	54661582	65	54690771	40
.....	99	54661962	60		105
54659032	110	54662010	16	54690789	72
54659040	106		34	54699392	114
.....	107	54662028	15	54699400	114
.....	108	54662036	15	54718432	27
54659057	109	54662051	15		28
54659073	109	54671607	18	54718655	64
54659081	109		23	54718689	71
54659099	106	54672274	109	54718697	71
.....	107	54672282	109	54718705	71
.....	108	54672324	114	54718721	71
54659107	106	54672688	44	54718739	30
.....	107	54672746	44	54718747	64
.....	108	54673553	44	54718754	64
54659115	108		45	54718762	71
54659123	109	54674007	51	54718788	71
54659131	106	54676622	10	54718846	64
54659149	110	54676648	9	54718853	64
54659156	110	54676663	10	54718861	64
54659164	110	54676689	9	54718887	64
54659172	110	54676705	9	54718929	18
54659180	110	54676747	9	54719729	34
54659198	110		11	54719737	34
54659206	110	54676762	9	54719745	34
54659214	110		11	54719752	34
54659222	55	54676796	8	54720222	60
.....	56		10	54720230	60
54659230	55	54676804	10		64
.....	56	54676812	10	54720248	60
54659248	55	54676820	10	54720719	18
.....	56	54676838	10	54720768	15
54659255	55	54676853	9		21
.....	56	54676879	9	54721105	34
54659263	55	54676903	10	54721188	67
.....	56	54676929	11	54726575	60
54659271	55	54676945	11	54728605	60
.....	56	54677166	10	54728639	60
54659289	55	54677174	9	54728654	38
54659297	56	54677182	9	54737820	102
54659305	55	54677190	9	54737838	102
54659313	56	54677208	9	54737846	102
54659321	56	54677216	9	54740691	21
54659339	55	54677224	9	54745559	45
54659347	55	54677232	9	54749155	114
.....	56	54677240	9	54749171	114

NUMERICAL INDEX

COMM.NO.	PAGE	COMM.NO.	PAGE	COMM.NO.	PAGE
54749205	114	95937512	25		
54749213	114		30		
54757232	80	95937561	26		
54758263	21	95937637	64		
54758271	21	95937678	24		
54758297	21	95940748	42		
54758305	21	95944575	42		
54758404	18	95944617	71		
59798322	71	95944666	42		
95033593	27	95946117	64		
95035465	34	95946281	37		
95060745	33	95947636	30		
.....	37	95951646	19		
95104303	15	95953311	40		
.....	21	95953618	42		
95219853	71	95953808	37		
95220844	71	95953949	71		
95220851	46	95953956	26		
95235131	46		64		
95245353	42	95954194	42		
95252409	22	95955548	67		
95300943	42	95955993	30		
95328761	64		71		
95356978	71	95972873	29		
95365151	40	95985578	26		
95368890	30	95985735	33		
95371829	22		37		
95415667	27	95991105	38		
95419073	18	95992863	64		
95647939	71	96702055	101		
95774220	64		103		
95871448	64	96721659	34		
95922928	37	96725130	21		
95923314	76				
95928172	64				
.....	71				
95928180	64				
95928800	77				
95930301	18				
95930723	37				
.....	40				
.....	45				
95934170	33				
.....	37				
.....	40				
95934253	37				
95934279	19				
95934386	35				
95934618	68				
95934634	35				
95934642	38				
95934998	76				
95935011	15				
95935029	72				
95935037	74				

