

 


Portable Power

G20/30XW/XF-50Hz - G24/36XW/XF-60Hz

PARTS MANUAL

SERIAL No : G20XWNCJ500001->, G20XFNCJ500001->, G30XWNCJ500001->, G30XFNCJ500001->,
G24XWNCJ600001->, G24XFNCJ600001->, G36XWNCJ600001->, G36XFNCJ600001->.

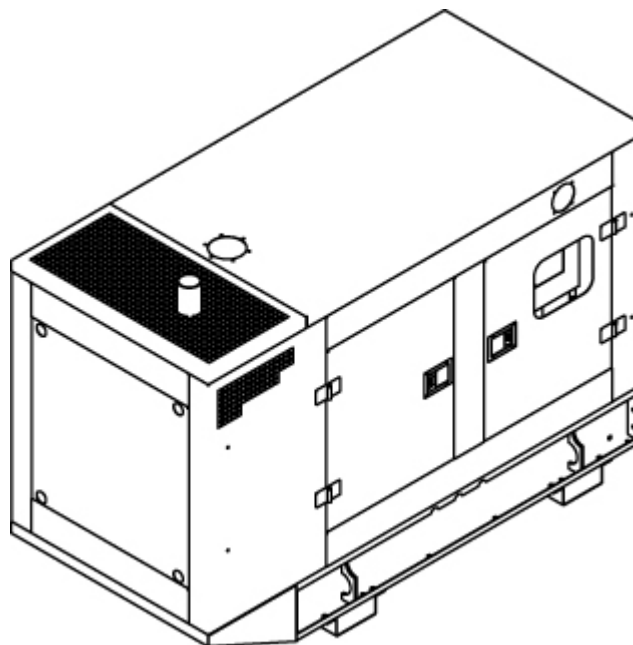



Portable Power

CONTENTS

MAIN FRAME

MAIN FRAME (G20/24)	2
MAIN FRAME (G30/36)	4
ENCLOSURE	6
DECALS AND DOCUMENTATION	8

ELECTRICAL SYSTEM

ALTERNATOR MOUNTING (G20/24)	10
ALTERNATOR S0L2-G1 SINGLE BEARING (G20/24)	12
ALTERNATOR MOUNTING (G30/36)	14
ALTERNATOR S0L2-G1 SINGLE BEARING (G30/36)	16
POWER PEDESTAL ASSEMBLY	18

POWER UNIT

EXHAUST SYSTEM	20
ENGINE ASSEMBLY (G20/24)	22
AIR INDUCTION SYSTEM (G20/24)	24
ALTERNATOR MOUNTING (G20/24)	26

CONTENTS

CRANK SHAFT & PISTON ASSEMBLY (G20/24)	28
CYLINDER BLOCK (G20/24)	30
CYLINDER HEAD (G20/24)	32
CYLINDER HEAD COVER (G20/24)	36
FAN ASSEMBLY (G20/24)	38
FLYWHEEL/HOUSING/REAR END OIL SEAL (G20/24)	40
FUEL INJECTION EQUIPMENT (G20/24)	42
JOINTS AND GASKETS (G20/24)	46
LUBRICATING OIL FILTERS (G20/24)	48
LUBRICATING OIL PUMP (G20/24)	50
LUBRICATING OIL SUMP (G20/24)	52
ROCKER SHAFT ASSEMBLY (G20/24)	54
STARTER MOTOR (G20/24)	56
TIMING GEAR & CAMSHAFT	

CONTENTS

(G20/24)	58
WATER PUMP ASSEMBLY (G20/24)	62
AIR CLEANER INSTALLATION (G20/24)	64
COOLING SYSTEM (G20/24)	66
ENGINE INSTALLATION (G20/24)	68
FUEL SYSTEM (G20/24)	70
SENSOR INSTALLATION (G20/24)	72
SOLENOID INSTALLATION (G20/24)	74
ENGINE ASSEMBLY (G30/36)	76
AIR INDUCTION & EXHAUST SYSTEM (G30/36)	78
ALTERNATOR AND SUPPORT (G30/36)	80
CRANK SHAFT ASSEMBLY (G30/36)	82
CYLINDER BLOCK (G30/36)	84
CYLINDER HEAD (G30/36)	

CONTENTS

.....	86
CYLINDER HEAD COVER (G30/36)	90
FAN AND FAN DRIVE (G30/36)	92
FLYWHEEL, FLYWHEEL HSG. AND REAR END OIL SEAL (G30/36)	94
FUEL INJECTION EQUIPMENT (G30/36)	96
JOINTS AND GASKETS (G30/36)	100
LUBRICATING OIL FILTER (G30/36)	102
LUBRICATING OIL PUMP (G30/36)	104
LUBRICATING OIL SUMP (G30/36)	106
MOUNTING ENGINE SUPPORT (G30/36)	108
ROCKER SHAFT ASSEMBLY (G30/36)	110
STARTER MOTOR (G30/36)	112
TIMING GEAR & CAMSHAFT (G30/36)	114
WATER PUMP ASSEMBLY (G30/36)	118

CONTENTS

AIR CLEANER INSTALLATION (G30/36)	120
COOLING SYSTEM INSTALLATION (G30/36)	122
ENGINE INSTALLATION (G30/36)	124
EXHAUST INSTALLATION (G30/36)	126
FUEL SYSTEM INSTALLATION (G30/36)	128

MAINTENANCE ITEMS


CLASS 1 MAINTENANCE AND REPAIR ITEMS (G20/24)	130
CLASS 2 EXTENDED DOWNTIME PREVENTION (G20/24)	132
CLASS 1 MAINTENANCE AND REPAIR ITEMS (G30/36)	134
CLASS 2 EXTENDED DOWNTIME PREVENTION (G30/36)	136

INDEXES	1
Numerical Index	1
Word Index	1

CONTENTS

G20/30XW/XF-50Hz - G24/36XW/XF-60Hz_46717264_A_03/18

 
MAIN FRAME
(G20/24)

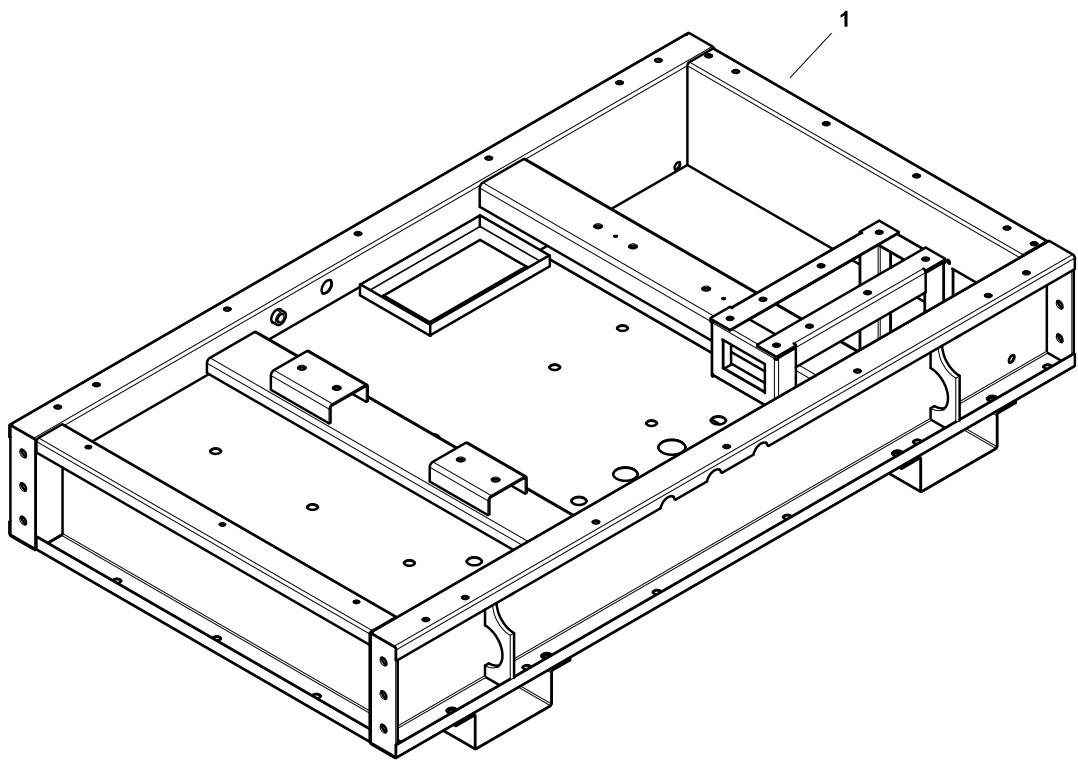

MAIN FRAME (G20/24)	
------------------------	--

[illegible]

 
MAIN FRAME
(G30/36)

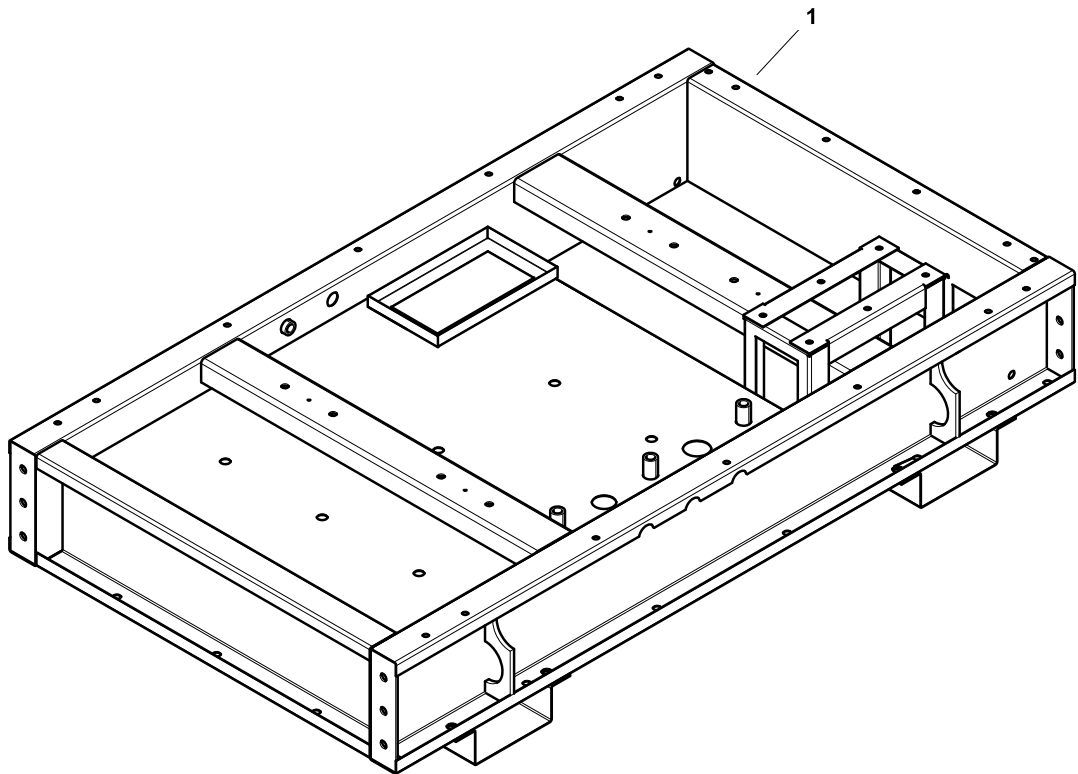

MAIN FRAME (G30/36)	
------------------------	--

[illegible]

 ENCLOSURE

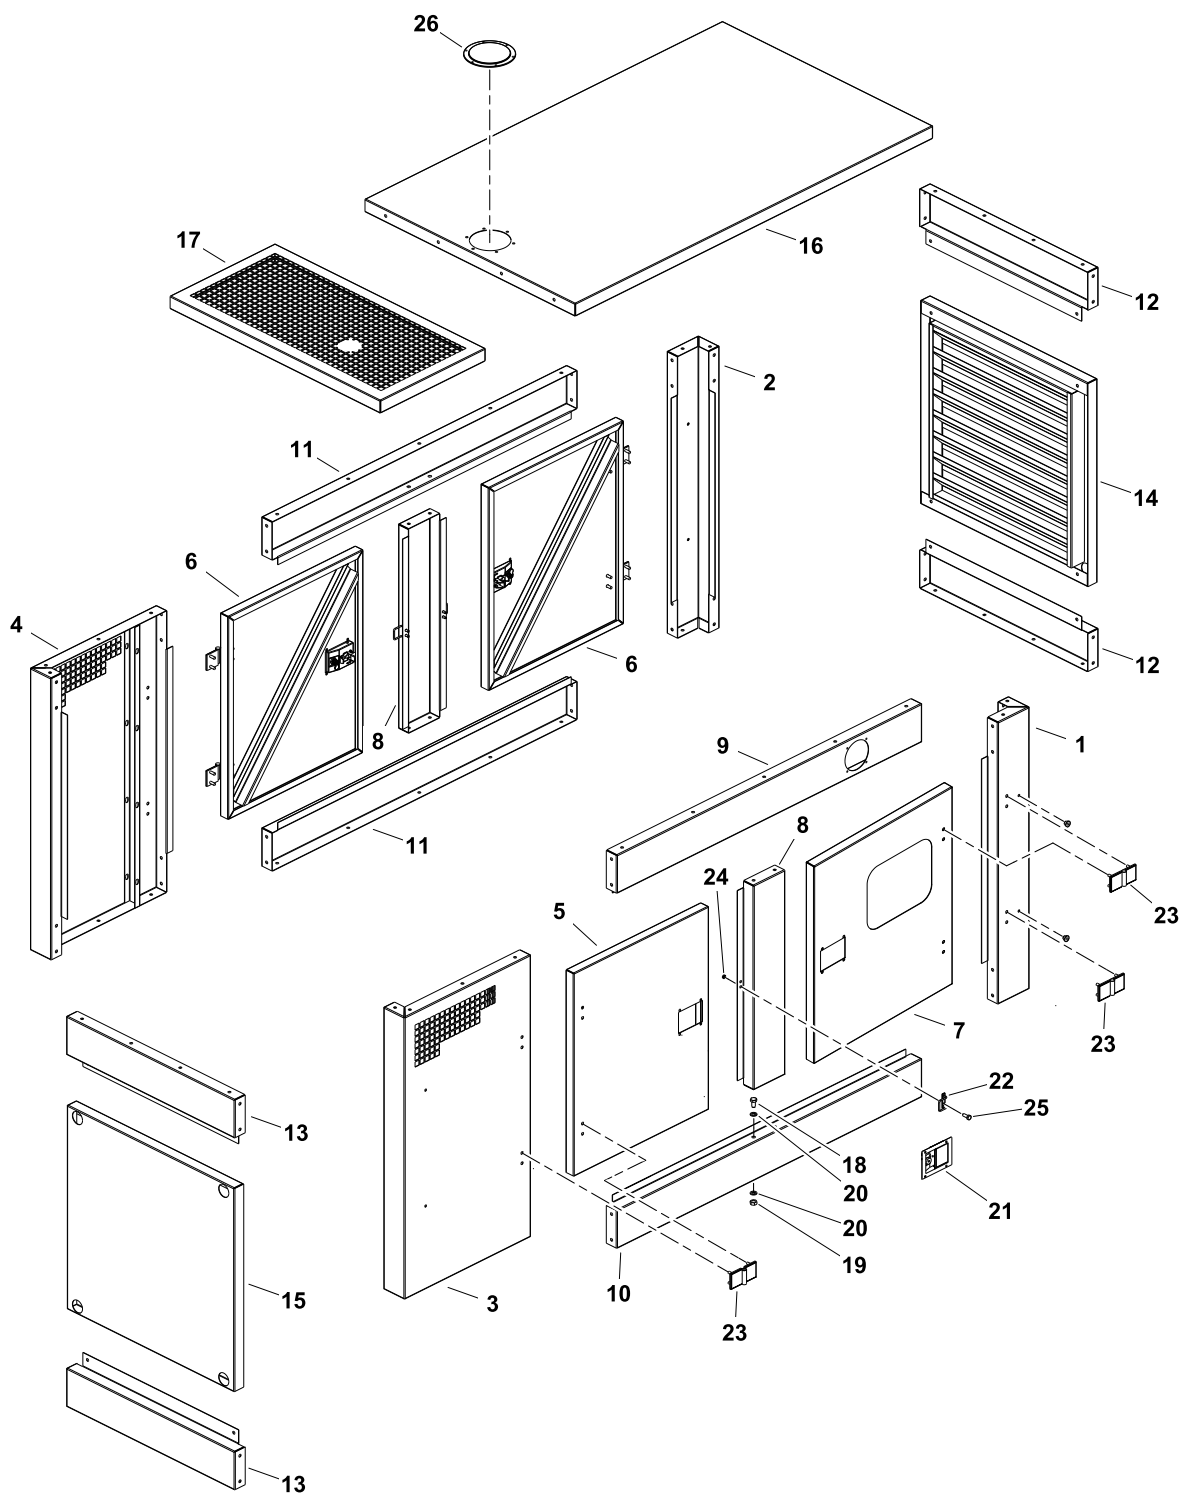

ENCLOSURE

Item	Part Number	Description	Remarks	Serial Number	Qty
1	46717238	PANEL, LH CORNER, ALT SIDE			1
2	46717280	PANEL, RH CORNER, ALT SIDE			1
3	46717239	PANEL, LH CORNER, RAD SIDE			1
4	46717281	PANEL, RH CORNER, RAD SIDE			1
5	46717270	DOOR, BARE LH			1
6	46717271	DOOR, BARE RH			2
7	46716449	CUTOUT DOOR, PANEL			1
8	46717294	JOINT, VERT LH/RH			2
9	46717232	JOINT, LH HORIZ EMERGENCY			1
10	46717233	JOINT, LH HORIZ			1
11	46717234	JOINT, RH HORIZ			2
12	46717231	HORIZONTAL, ALTERNATOR SIDE			2
13	46717235	RADIATOR, SIDE HORIZ			2
14	46716571	FRAME, LOUVER ASSY ALT SIDE			1
15	46716572	FRAME, RADIATOR SIDE COVER			1
16	46717282	ROOF, ALT SIDE			1
17	46717283	ROOF, RAD SIDE			1
18	46721259	BOLT M8 X 25 LG HEX GI			170
19	46721260	NUT M8			170
20	46721261	WASHER FLAT M8 GI			340
21	46706518	LATCH			1
22	46706654	ZINC PLATED STEEL STRIKER			1
23	46706653	ZINC ALLOY HINGE 120X60MM BLACK			2
24	46717245	NUT M6			6
25	46716436	BOLT M6 X 20 LG HEX GI			2
26	46706638	RADIATOR COVER -MODEL AMRC 130			1
#	46706613	FOAM BULK	L2000 X W1200MM X/40MM -32KG/M3		1
#	46706621	FOAM BULK	L 2000 X W1600MM X/40MM -70KG/M3		1

4 — **G20XF**

11 — **G20XW**

20 — **G24XF**

 
 
24 — **G24XW**

25 — **G30XF**

26 — **G30XW**

27 — **G36XF**

28 — **G36XW**


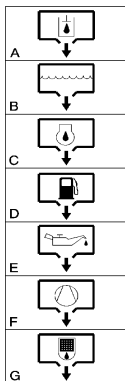



23 — **DoosanPortablePower.eu**



21 — **DOOSAN**

1 — **DOOSAN**

   2 — **DoosanPortablePower.eu**

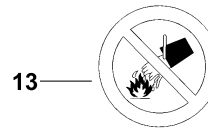


18

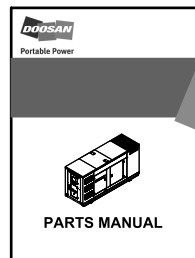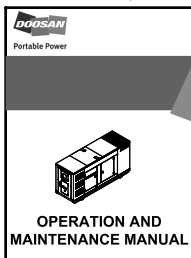  

DECALS AND DOCUMENTATION

Item	Part Number	Description	Remarks	Serial Number	Qty
1	46573921	DECAL, DOOSAN LOGO			2
2	46656744	DECAL, WEB SITE			1
3	46573860	DECAL, DOOSAN TRI-COLOUR 12"			1
4	46721848	DECAL, MODEL NUMBER	20XF		1
5	46573859	DECAL, DOOSAN TRI-COLOUR 8"			1
6	92930593	DECAL, ELECTRIC SHOCK			5
7	92867449	DECAL, REFER TO HANDBOOK			1
8	93171254	DECAL, DIESEL FUEL SYMBOL			1
9	54629977	DECAL, ISO CENTRAL DRAIN			1
10	23047624	DECAL, COOLANT LEVEL			1
11	46718025	DECAL, MODEL NUMBER	20XW		2
12	92867530	DECAL, HOT SURFACE ISO			4
13	23047566	DECAL, NO WATER			2
14	93171288	DECAL, COOLANT FILL			1
15	92912559	DECAL, EARTH WARNING			2
16	23047582	DECAL, WARNING			2
17	93171262	DECAL, LIFT HERE			4
18	46717252	MANUAL, OPERATION MAINTENANCE			1
19	46717264	MANUAL, PARTS			1
20	46721850	DECAL, MODEL NUMBER	24XF		1
21	46715886	DECAL, DOOSAN LOGO			2
22	54642327	DECAL, BATTERY DISCONNECT			1
23	46715887	DECAL, WEB SITE WHITE			1
24	46718028	DECAL, MODEL NUMBER	24XW		2
25	46721852	DECAL, MODEL NUMBER	30XF		1
26	46718027	DECAL, MODEL NUMBER	30XW		2
27	46721854	DECAL, MODEL NUMBER	36XF		1
28	46718029	DECAL, MODEL NUMBER	36XW		2

 
ALTERNATOR MOUNTING (G20/24)

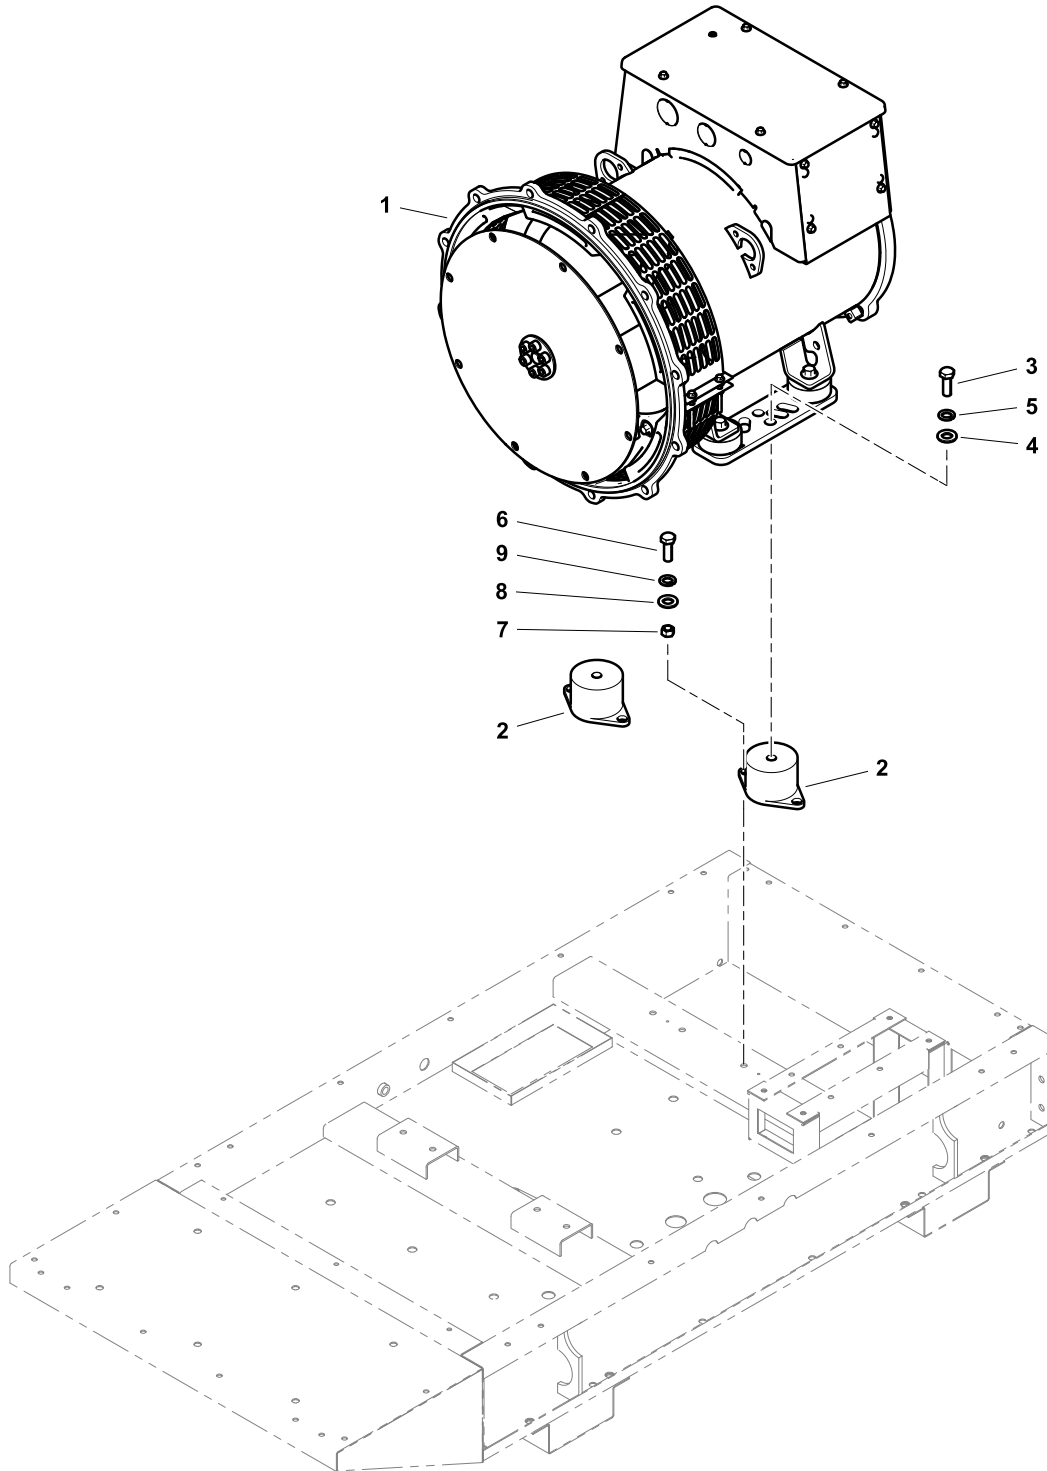

ALTERNATOR MOUNTING (G20/24)

[illegible]

 
ALTERNATOR S0L2-G1 SINGLE BEARING (G20/24)
--

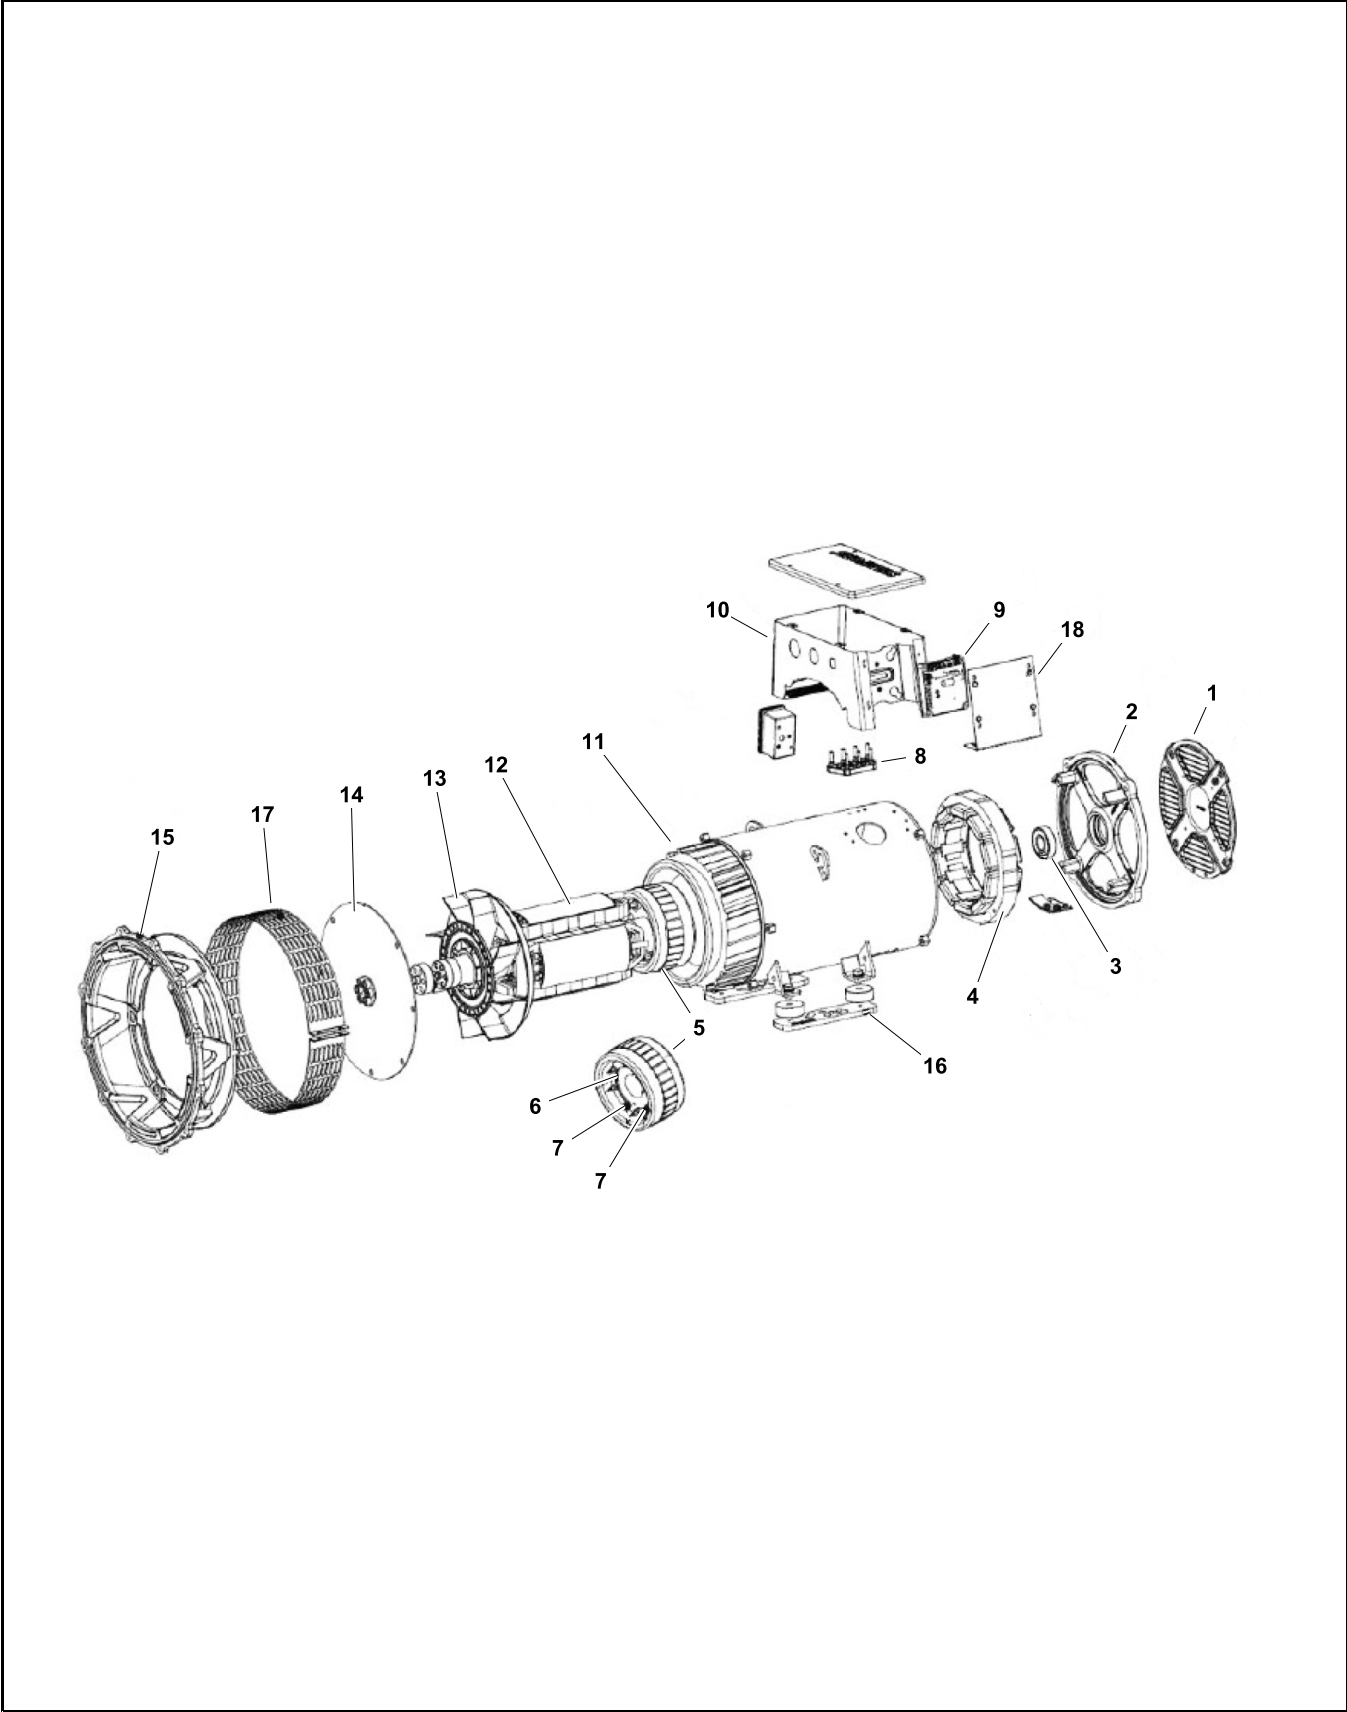

**ALTERNATOR S0L2-G1 SINGLE BEARING
(G20/24)**

[illegible]

 
ALTERNATOR MOUNTING (G30/36)

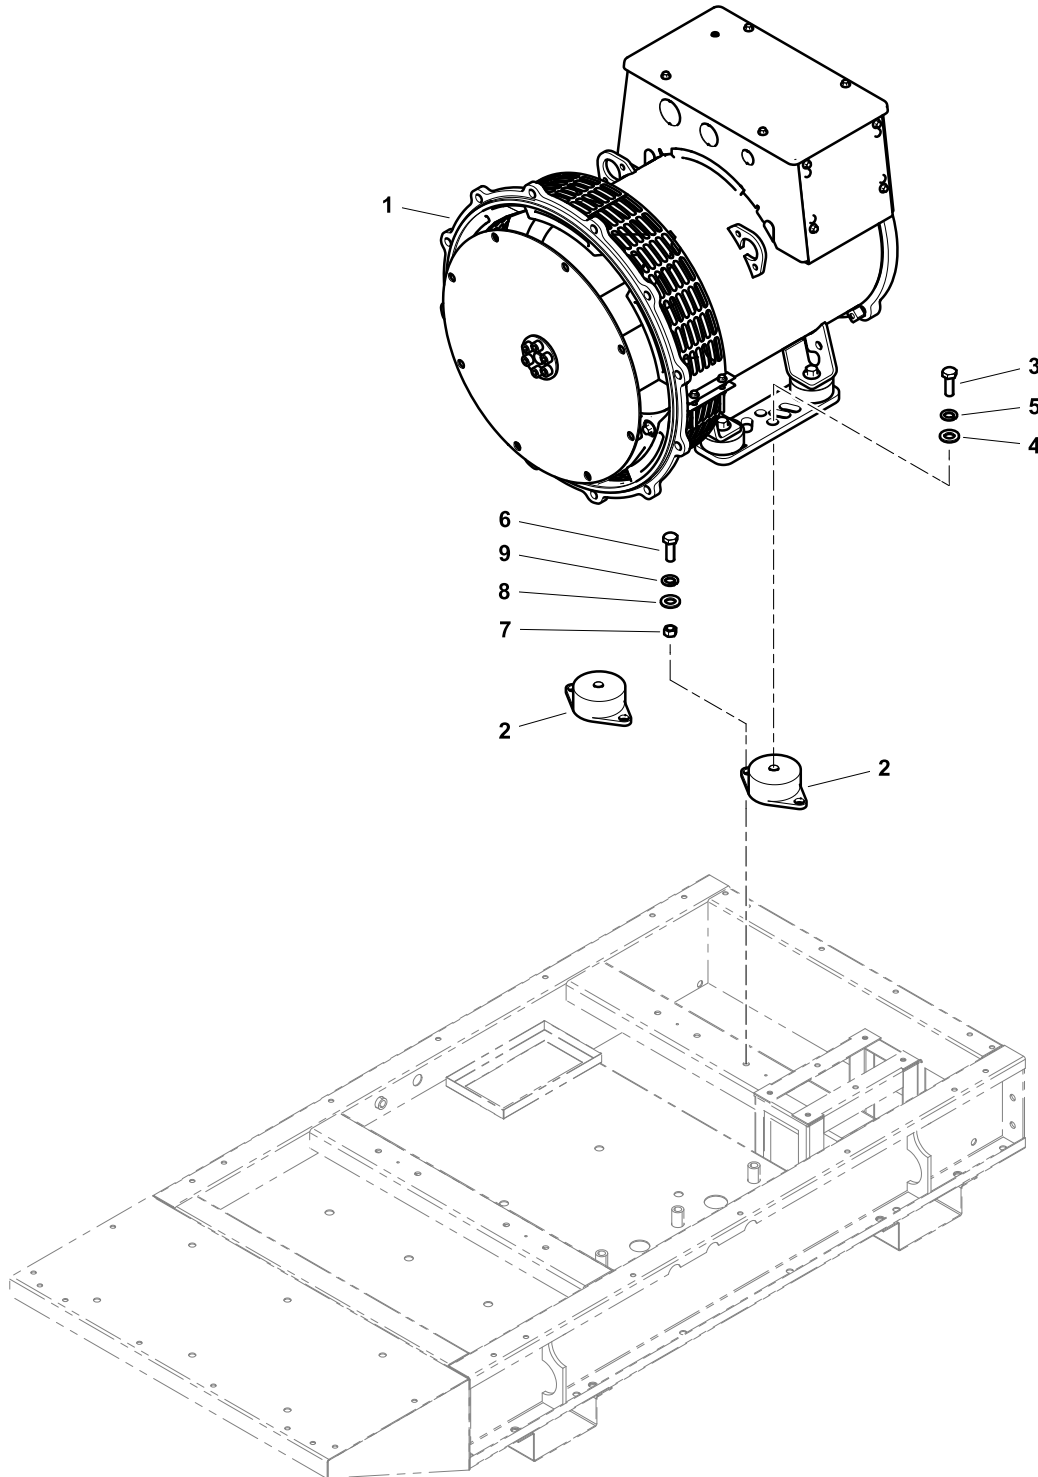

ALTERNATOR MOUNTING (G30/36)

[illegible]

 
ALTERNATOR S0L2-G1 SINGLE BEARING (G30/36)

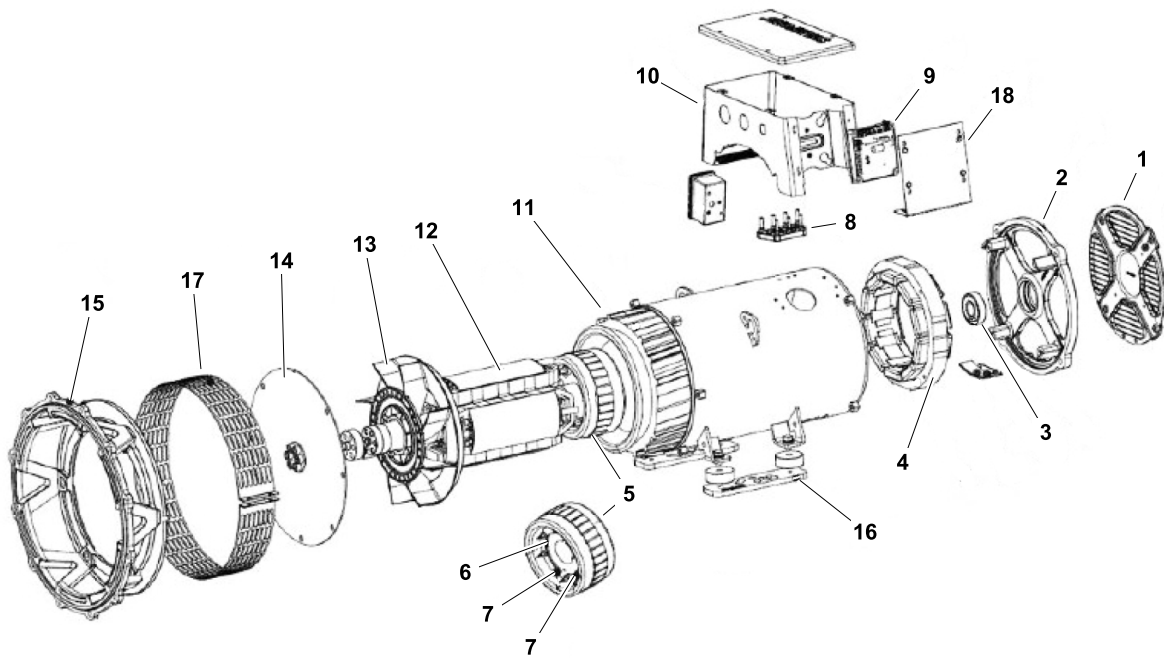

**ALTERNATOR S0L2-G1 SINGLE BEARING
(G30/36)**

[illegible]

 
POWER PEDESTAL ASSEMBLY

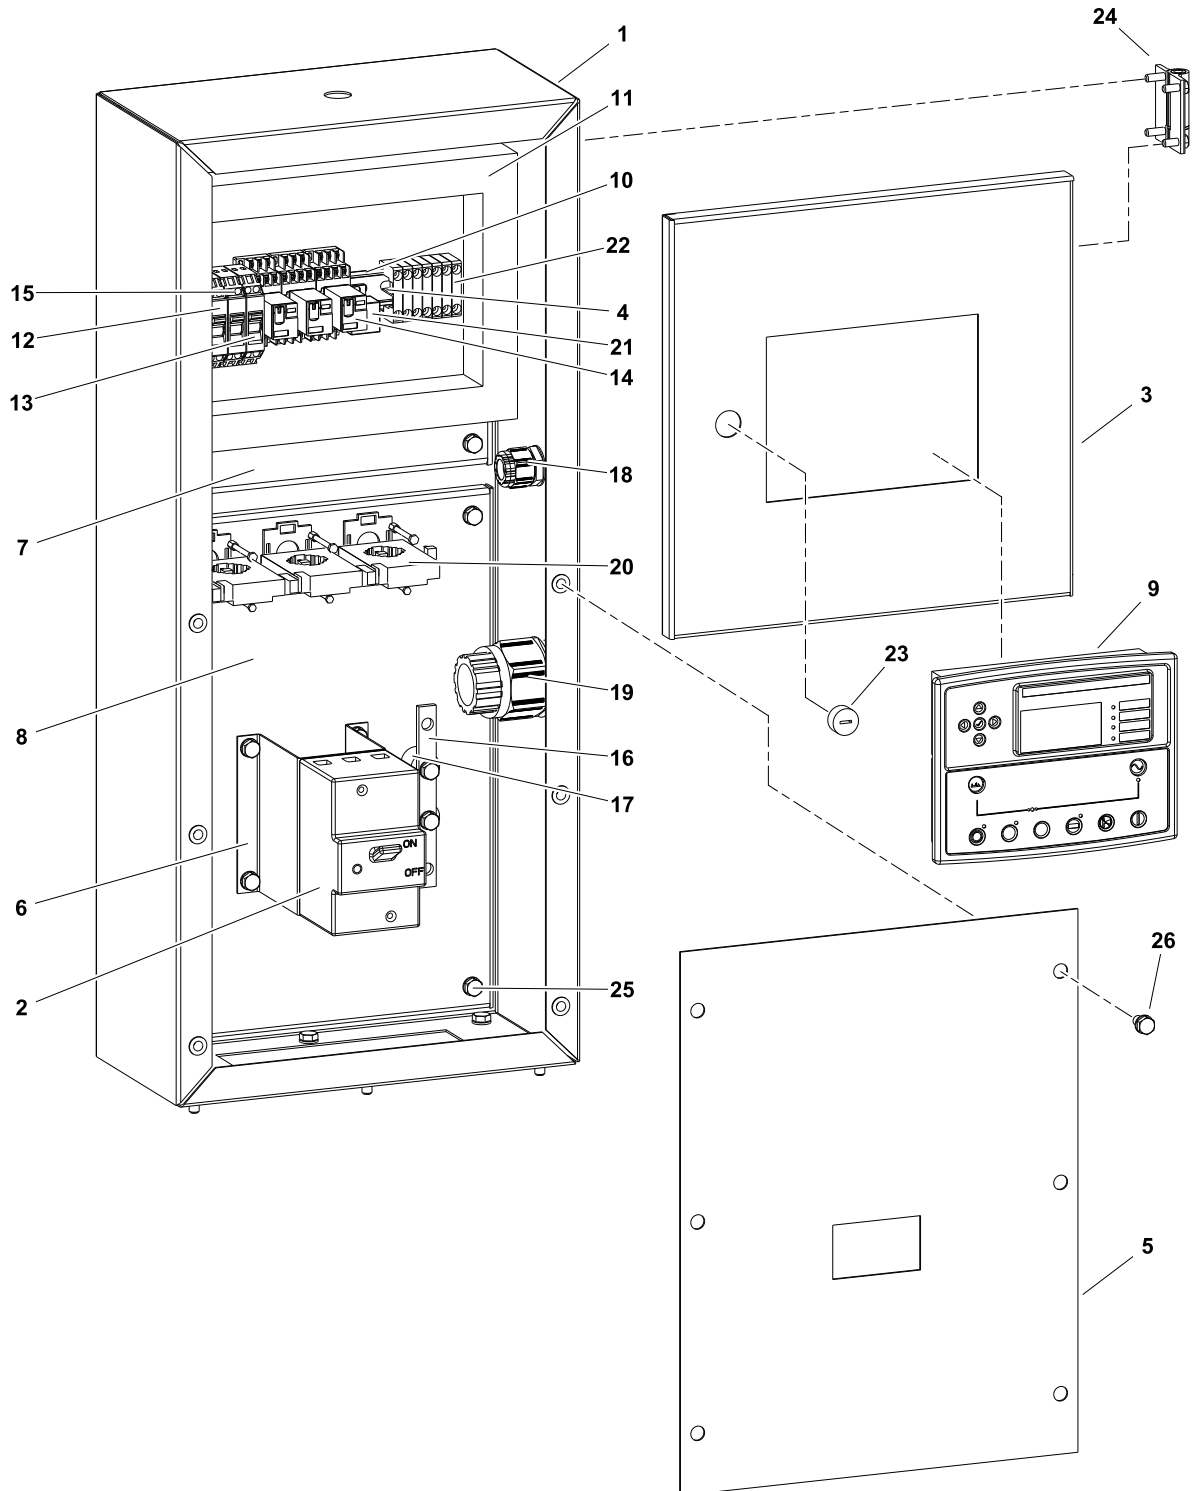

POWER PEDESTAL ASSEMBLY

Item	Part Number	Description	Remarks	Serial Number	Qty
1	46717262	PANEL, CONTROL			3
2	46716439	CIRCUIT BREAKER	G20/24 32A TP - 400V, 480V, 380V		1
2	46716440	CIRCUIT BREAKER	G30/36 50A TP - 400V, 480V, 380V		1
2	46730725	CIRCUIT BREAKER	G24 63A TP - 220V		1
2	46716441	CIRCUIT BREAKER	G36 100A TP - 220V		1
3	46716452	DOOR, CONTROL			1
4	46717291	WIRE TERMINAL BLOCK STOPPER			2
5	46716442	COVER PLATE, BREAKER			1
6	46717225	BRACKET, BREAKER GI MOUNTING			1
7	46717227	BOX, CONTROL PANEL GI MOUNTING			1
8	46717226	BOX, BREAKER GI MOUNTING			1
9	46706537	CONTROLLER, DIGITAL DSE 6010			1
10	46721250	DIN RAIL	Lenght 0.3m		1
11	46721251	TRUNKING	25X40 mm		1
12	46706563	FUSE CYLINDRICAL	10X38 20A		1
13	46706564	FUSE CYLINDRICAL	10X38 2A		3
14	46706643	RELAY	12VDC		3
15	46706560	FUSE CARRIER			4
16	46706649	TINNED COPPER BUS BAR	20X5MM - Length 0.3m		1
17	46719980	BUSBAR INSULATOR CONICAL	30X6MM		2
18	46719985	CABLE GLAND PVC			1
19	46719986	CABLE GLAND PVC			2
20	46706536	CURRENT TRANSFORMER	100/5A		3
21	46719987	RELAY	12V DC 40A (FOR FUEL)		1
22	46719988	WIRE TERMINAL BLOCK	2.5MM		8
23	46706619	LOCKABLE KNOB	WITH LATCH AND KEY		1
24	46706618	HINGES BLACK			2
25	46716428	BOLT	M6 X 15 LG HEX GI		16
26	46719990	BOLT	M8 X 30 LG HEX GI		16

 
EXHAUST SYSTEM

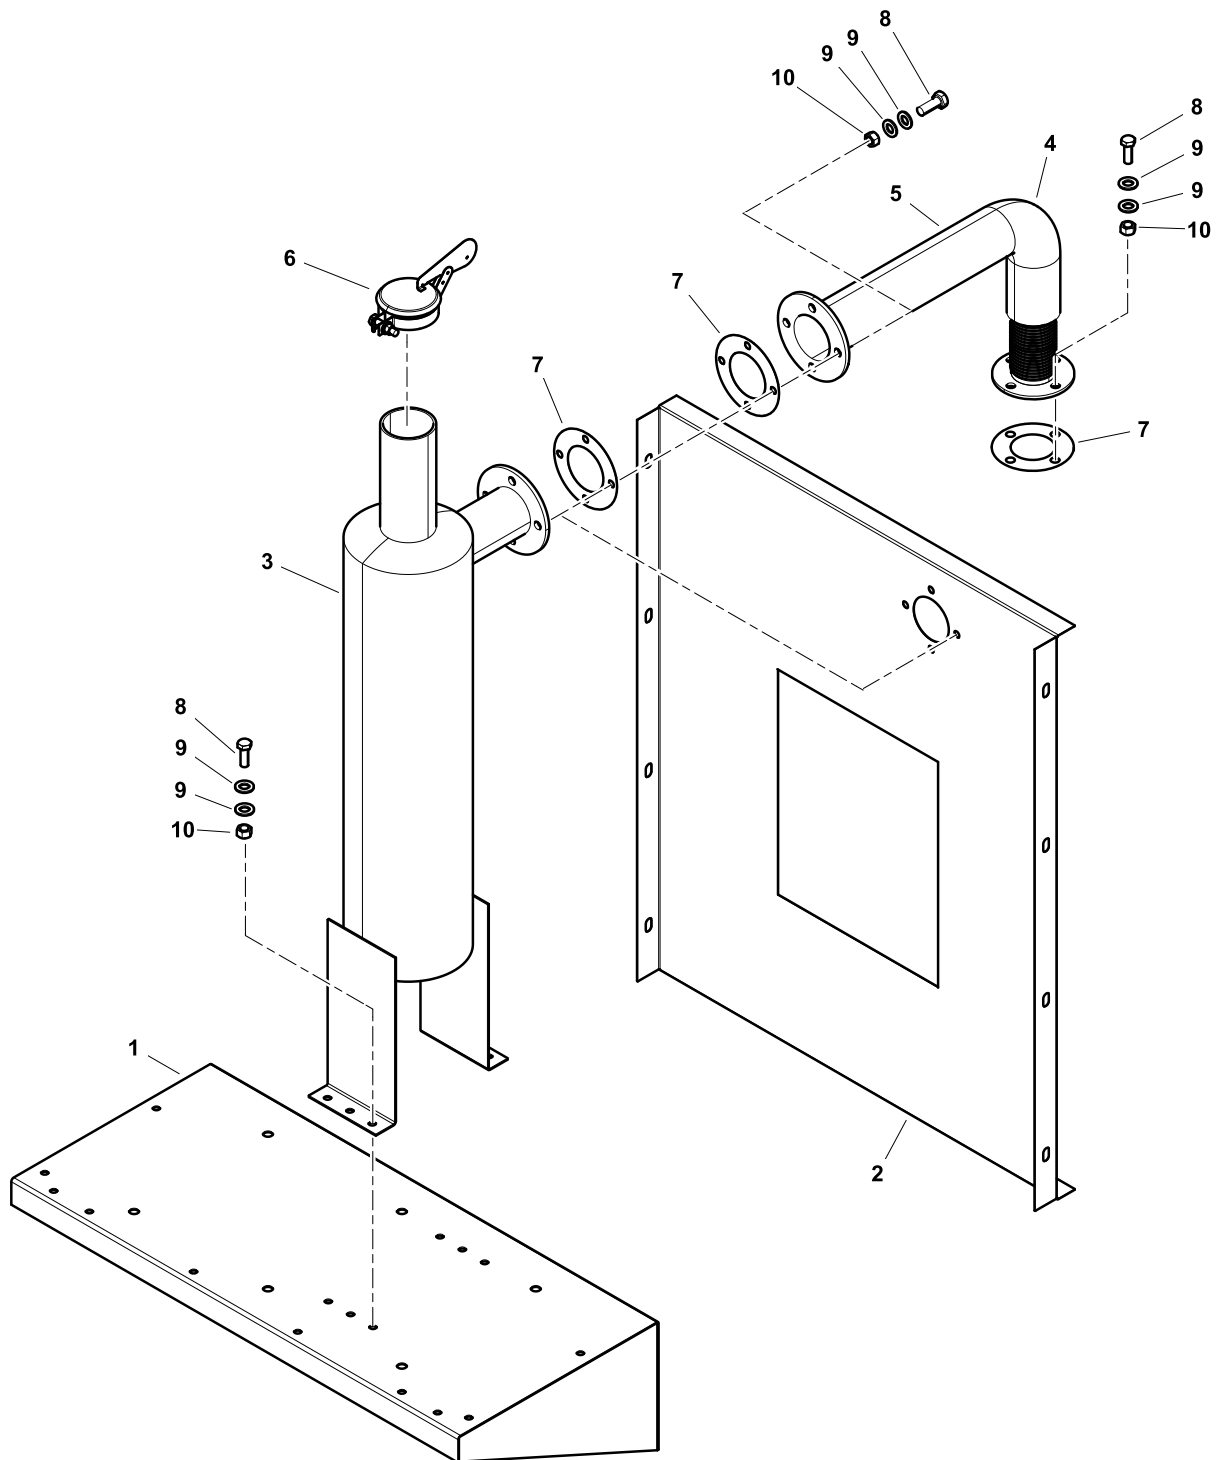

EXHAUST SYSTEM	
----------------	--

[illegible]

 
ENGINE ASSEMBLY (G20/24)

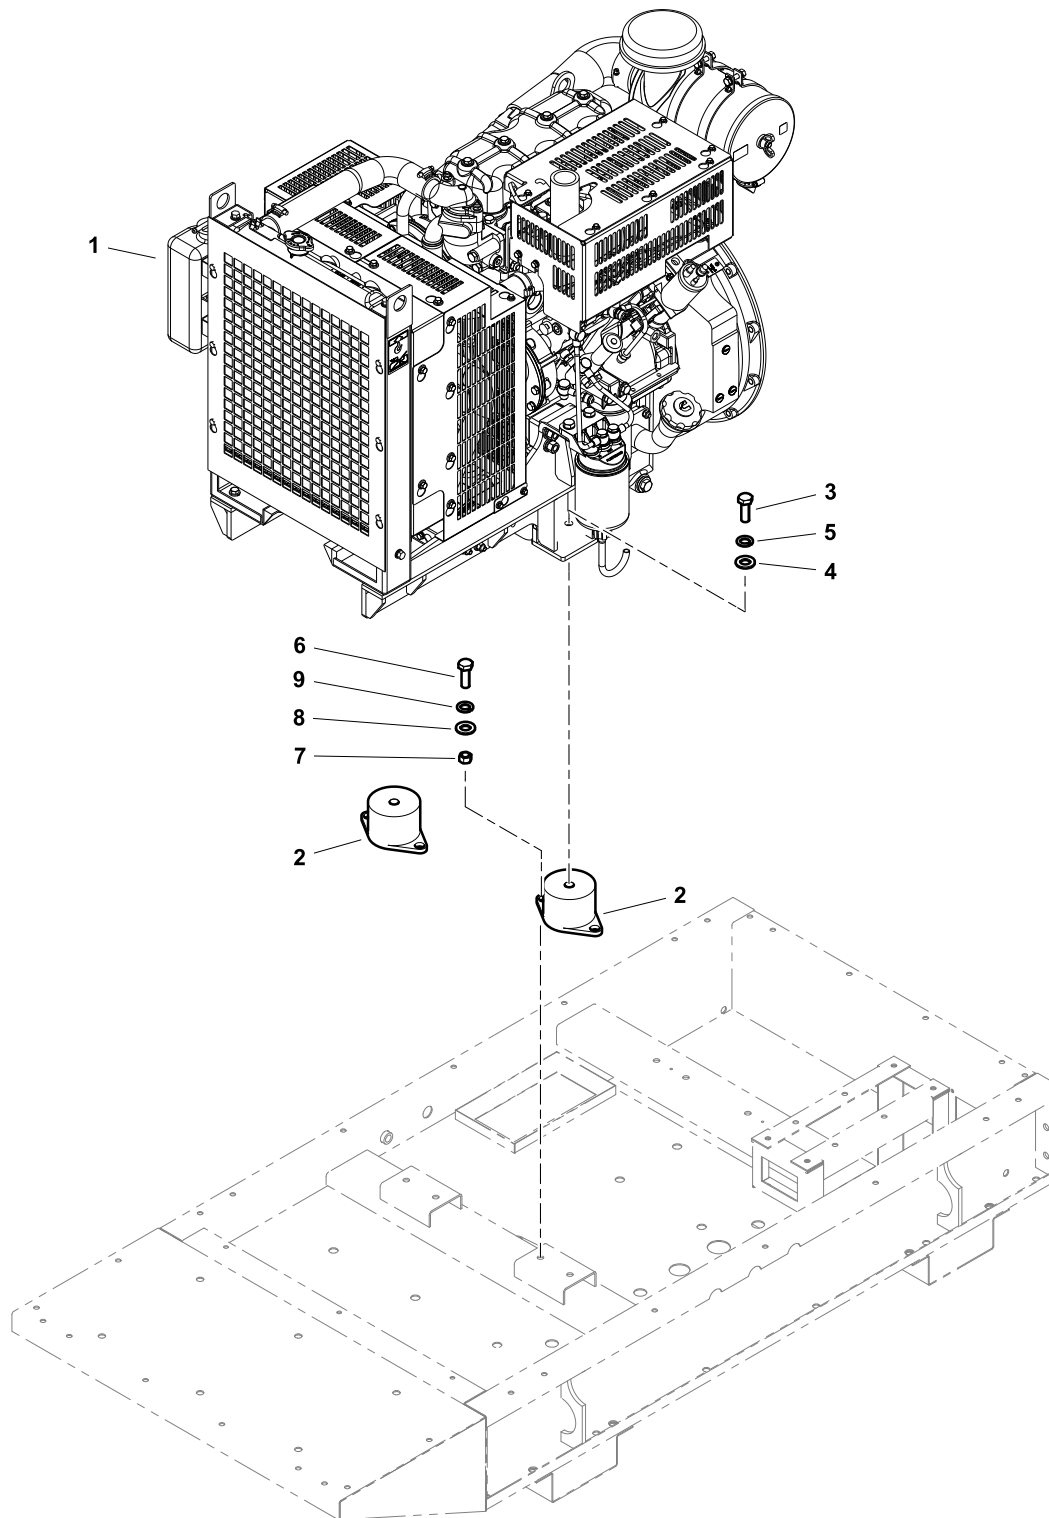

ENGINE ASSEMBLY (G20/24)

[illegible]

 
AIR INDUCTION SYSTEM (G20/24)

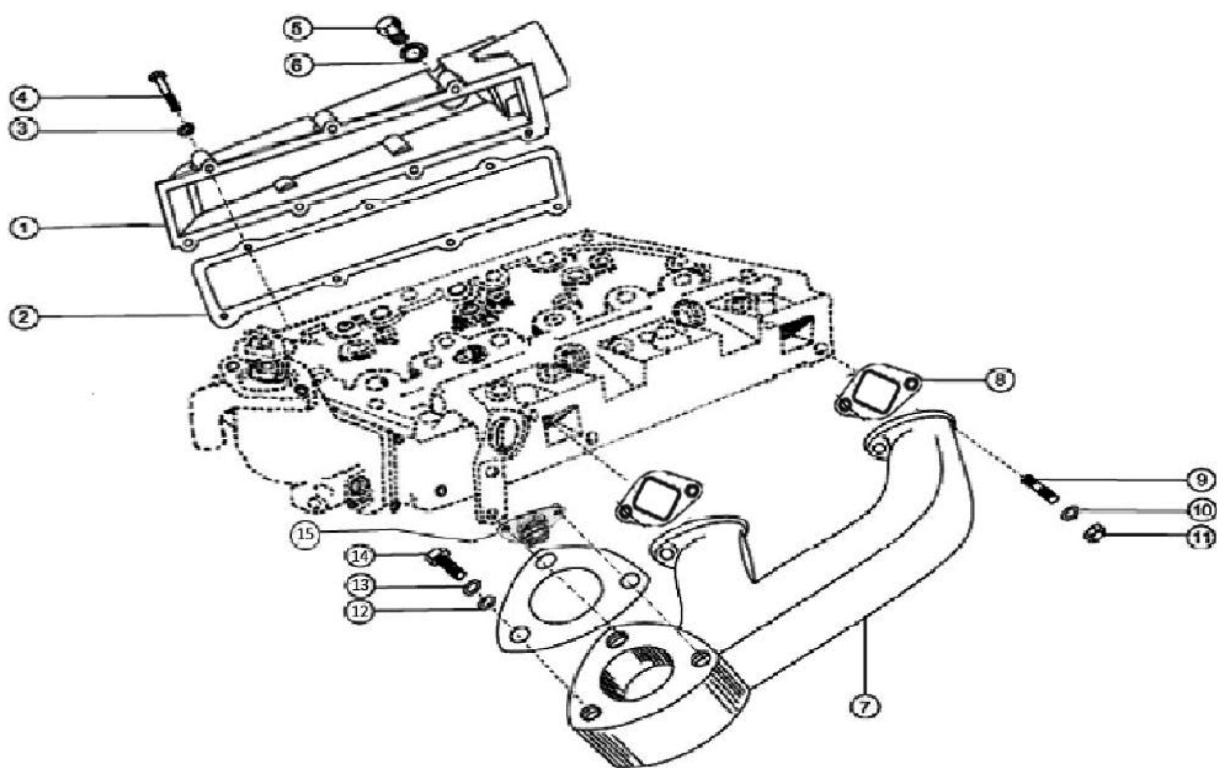

AIR INDUCTION SYSTEM (G20/24)

[illegible]

 
ALTERNATOR MOUNTING (G20/24)

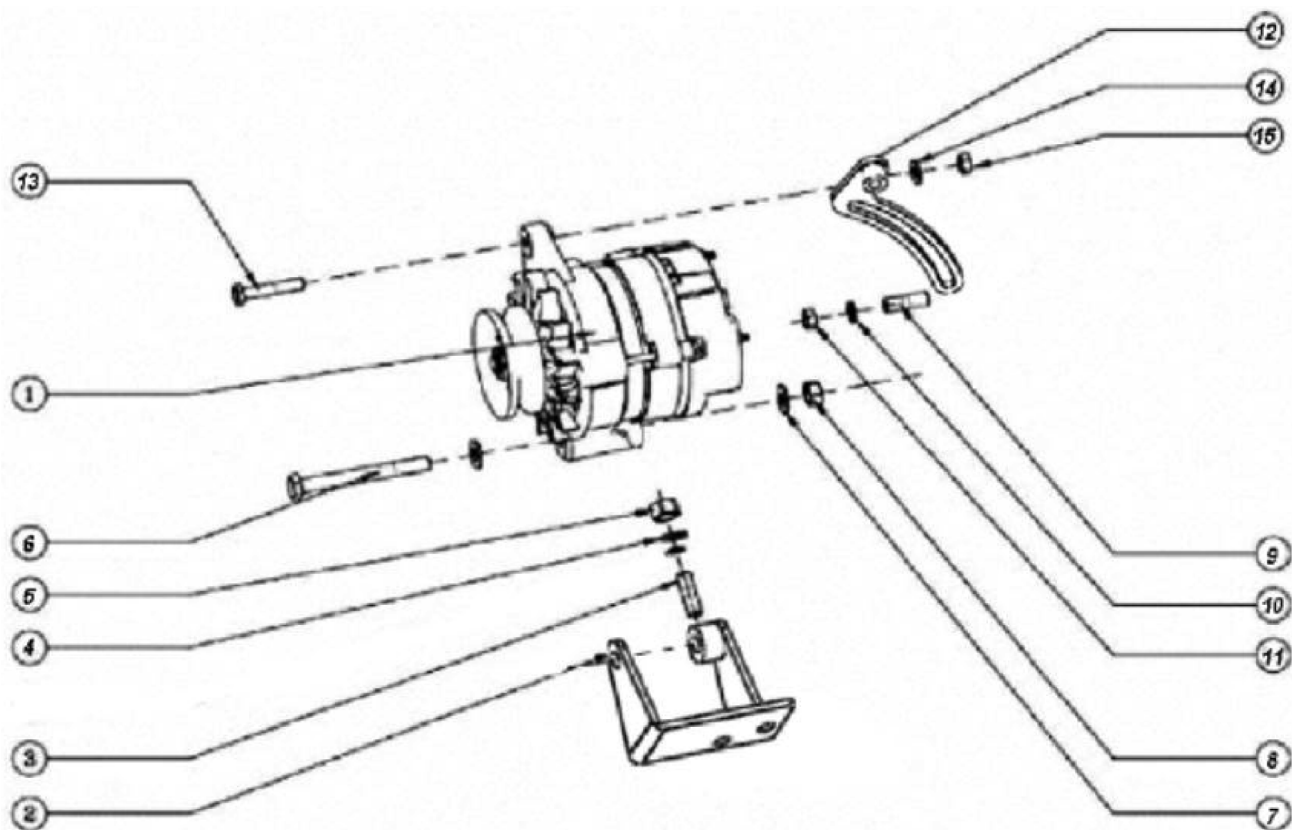

ALTERNATOR MOUNTING (G20/24)

[illegible]

 
CRANK SHAFT & PISTON ASSEMBLY (G20/24)

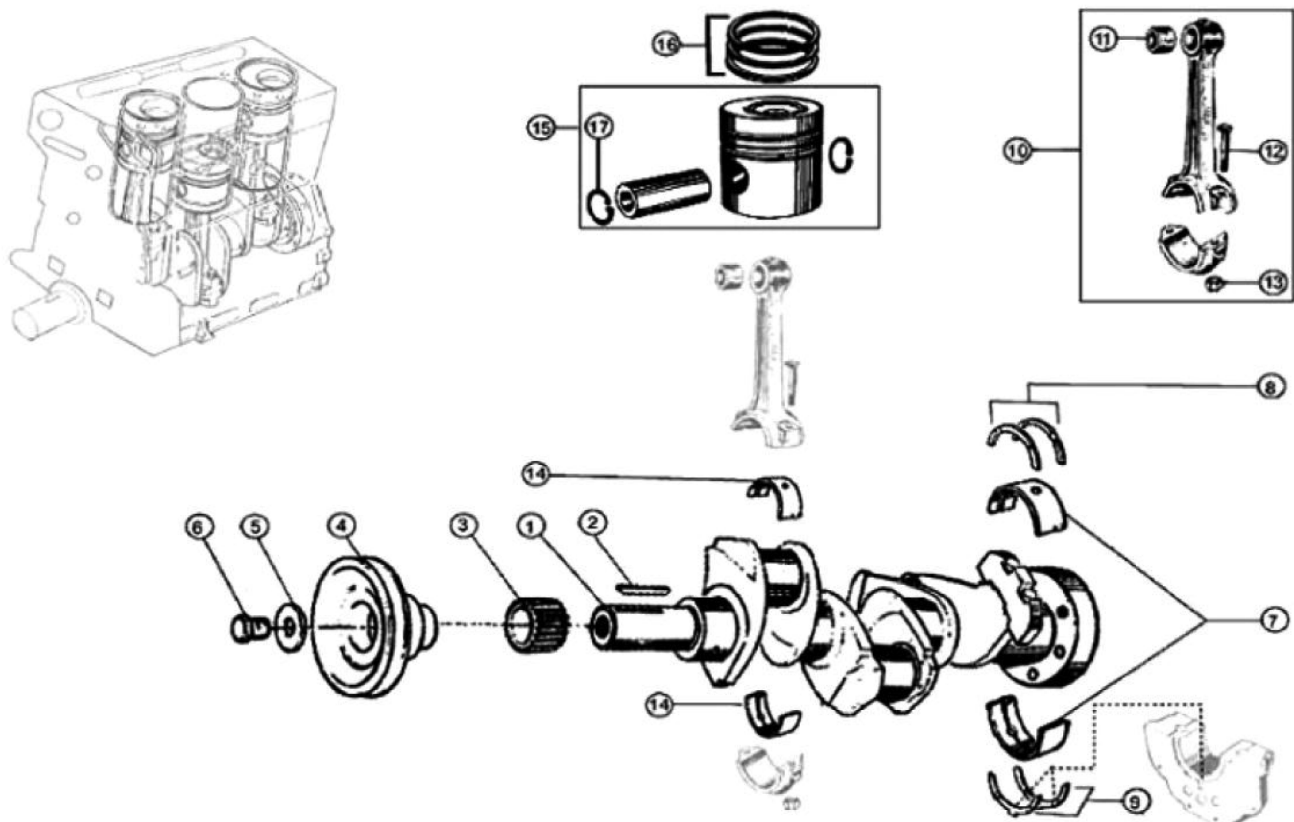

CRANK SHAFT & PISTON ASSEMBLY (G20/24)

[illegible]


CYLINDER BLOCK (G20/24)	
----------------------------	--

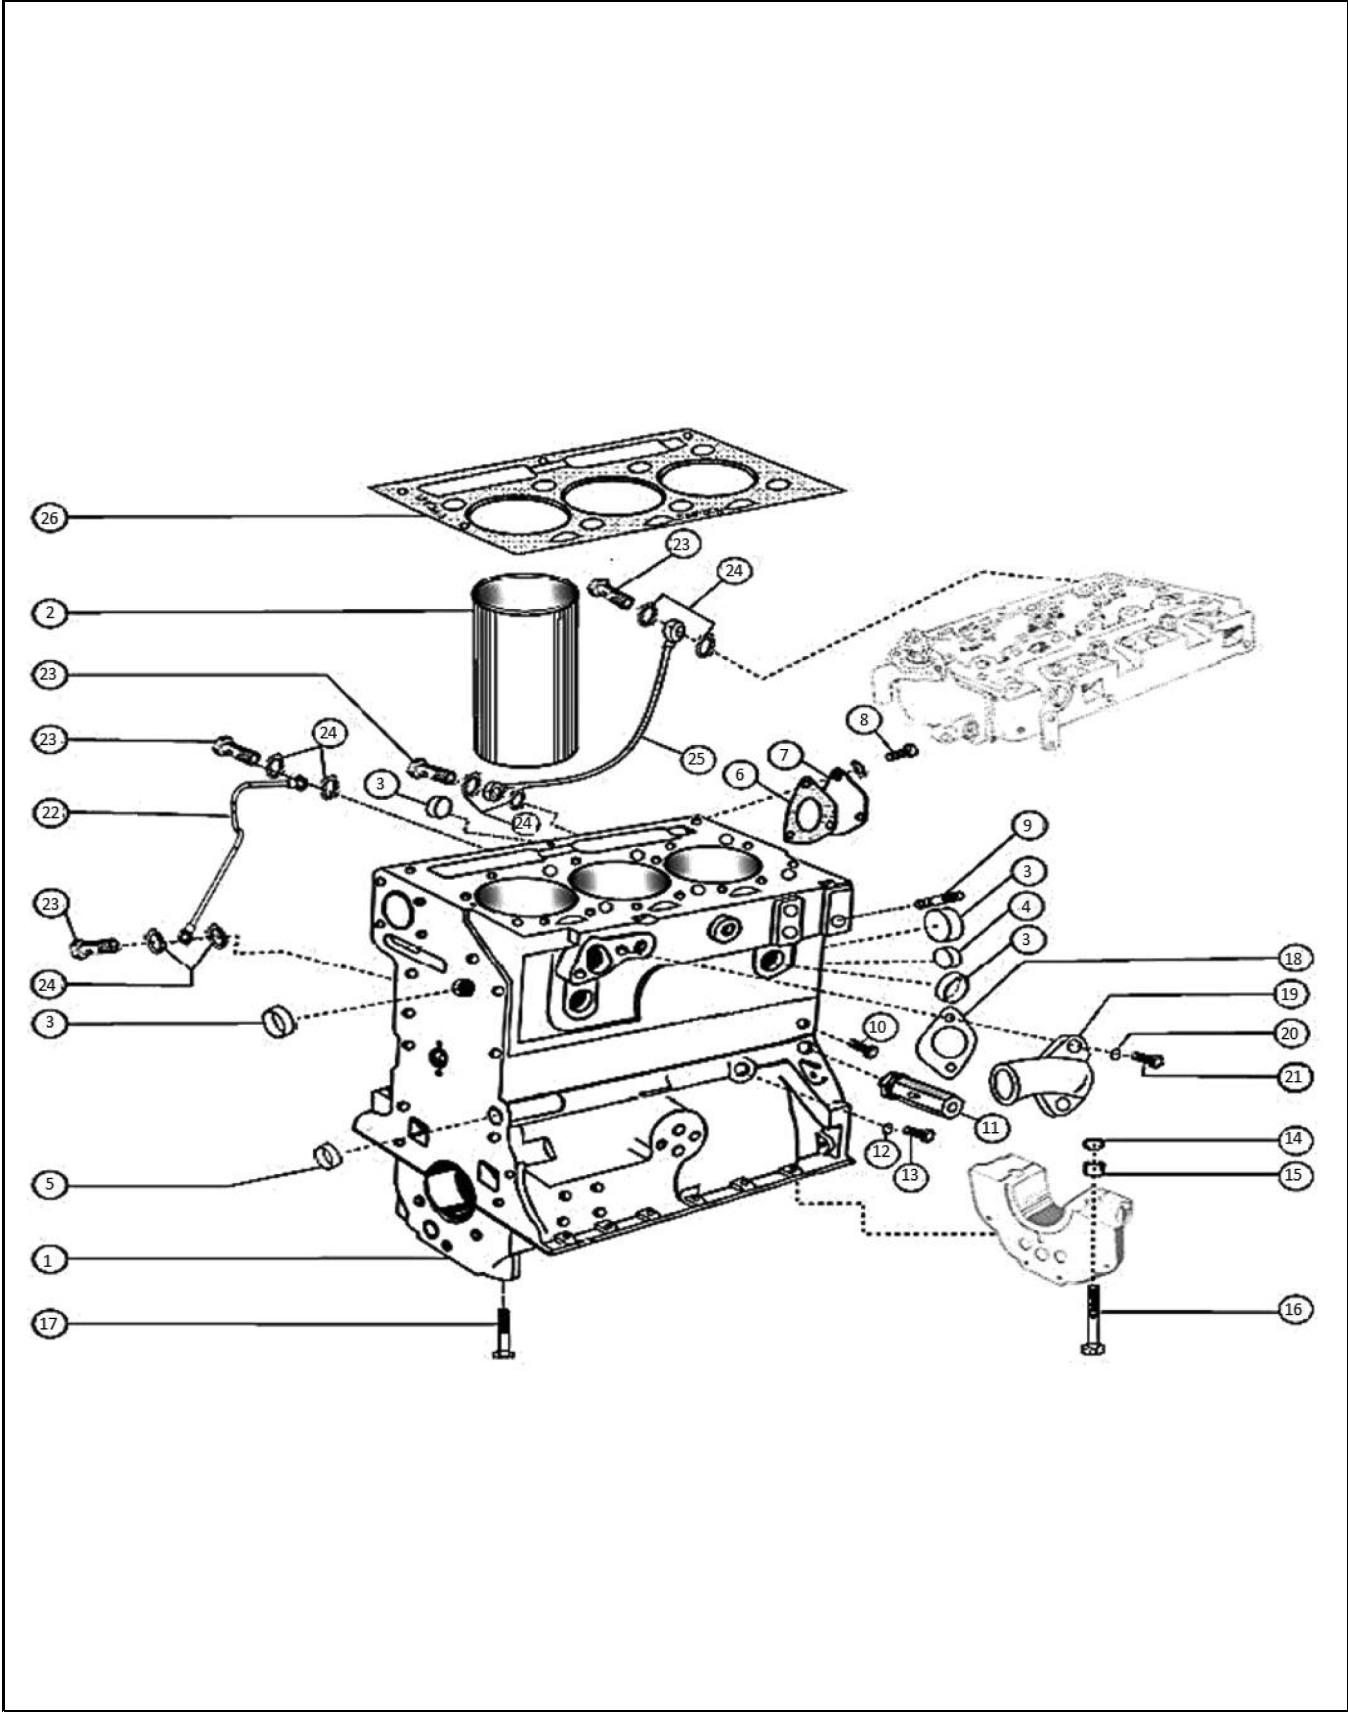 

CYLINDER BLOCK (G20/24)

Item	Part Number	Description	Remarks	Serial Number	Qty
1	46722711	CYLINDER BLOCK ASSEMBLY			1
2	46717144	LINER-CYLINDER BLOCK			3
3	46722690	PLUG-CYLINDER BLOCK WATER JACKET			5
4	46722689	PLUG-CYLINDER BLOCK WATER RAIL			1
5	46722687	PLUG-CYLINDER BLOCK PRESSURE RAIL FRONT AND REAR			2
6	46703620	JOINT-TACHOMETER BLANKING PLATE			1
7	46727461	PLATE-TACHOMETER DRIVE BLANKING			1
8	46716989	FLANGED BOLT			2
9	46722780	STUD-CYLINDER BLOCK			1
10	46716893	DRAIN PLUG-CYLINDER BLOCK			1
11	46716530	ADAPTOR-LUBRICATING OIL PRESSURE GAUGE			1
12	46722816	WASHER-PIPE CYLINDER BLOCK TO FUEL INJECTION PUMP			1
13	46716744	BANJO BOLT-CYLINDER BLOCK TO FUEL INJECTION			1
14	46716482	'O' RING-REAR BEARING CAP THIMBLE			2
15	46722791	THIMBLE-CRANKSHAFT BEARING CAP LOCATING			8
16	46722748	SETSCREW-MAIN BEARING CAP TO CYLINDER BLOCK-REAR CAP			2
17	46722753	SETSCREW-BEARING CAP TO CYLINDER BLOCK			6
18	46717121	JOINT-CYLINDER BLOCK WATER INLET CONNECTION			1
19	46716812	CONNECTION-CYLINDER BLOCK WATER INLET			1
20	46722824	WASHER-WATER INLET CONNECTION SETSCREW			2
21	46716986	FLANGED BOLT	(PRE-COATED)		1
22	46727456	PIPE-PRESSURE RAIL TO CAM CHAMBER ASSEMBLY			1
23	46716744	BANJO-BOLT			4
24	46722816	WASHER-BANJO-BOLT			8
25	46722671	PIPE-CAM CHAMBER TO CYLINDER HEAD ASSEMBLY			1
26	46703599	GASKET-CYLINDER HEAD			1

 
CYLINDER HEAD (G20/24)

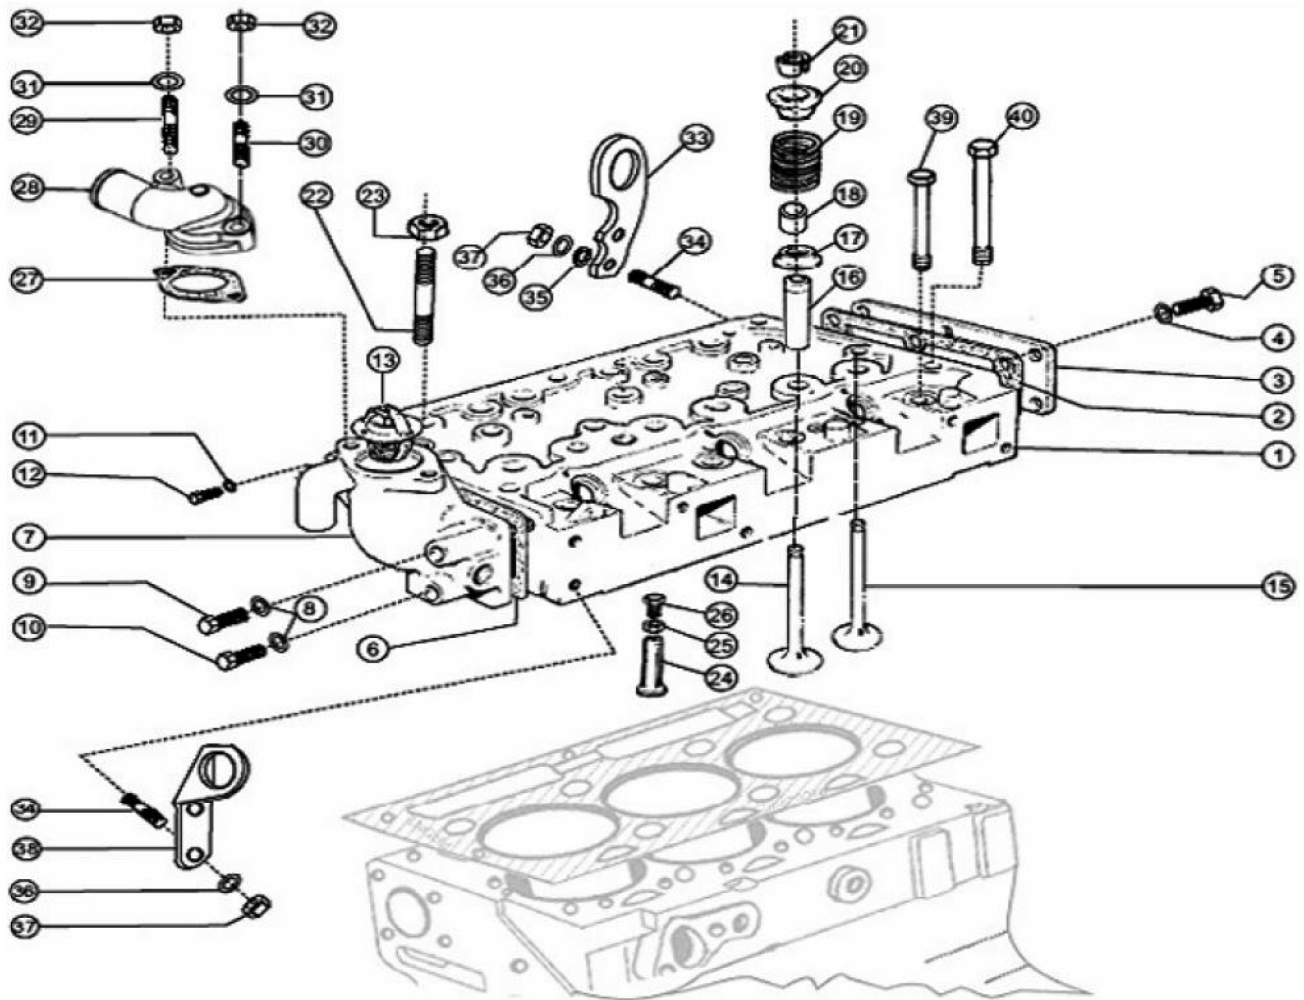

CYLINDER HEAD (G20/24)

Item	Part Number	Description	Remarks	Serial Number	Qty
1	46716640	CYLINDER HEAD ASSEMBLY			1
1	46716644	CYLINDER HEAD ASSEMBLY MAJOR KIT			1
2	46703603	JOINT-CYLINDER HEAD REAR END COVER PLATE			1
3	46722685	PLATE-CYLINDER HEAD REAR END COVER			1
4	46703632	WASHER SPRING			6
5	46703620	SETSCREW-CYLINDER HEAD REAR AND COVERPLATE RETAINING			6
6	46703602	JOINT-CYLINDER HEAD WATER OUTLET BODY			1
7	46716760	BODY-CYLINDER HEAD WATER OUTLET			1
8	46705661	WASHER SPRING-WATER OUTLET BODY TO CYLINDER HEAD SETSCREW			2
9	46722752	SETSCREW-CYLINDER HEAD TO WATER OUTLET BODY			1
10	46722751	SETSCREW WATER OUTLET BODY TO CYLINDER HEAD			1
11	46705661	WASHER SPRING-OUTLET BODY TO CYLINDER HEAD SETSCREW			2
12	46716986	FLANGED BOLT			1
13	46703628	THERMOSTAT			1
14	46722802	VALVE INLET			3
15	46722795	VALUE EXHAUST			3
16	46717047	GUIDE-EXHAUST AND INLET VALVE			6
17	46722821	WASHER-INLET & EXHAUST VALVE SPRING LOCATING			6
18	46722729	SEAL-VALVE STEM			6
19	46722720	SPRING-EXHAUST & INLET VALVE			6
20	46716788	CAP-VALVE SPRING			6
21	46716818	COTTER-VALVE SPRING			6
22	46722782	STUD-CYLINDER BLOCK TO CYLINDER HEAD RHS HOLE			3
23	46722664	NUT-CYLINDER HEAD RETAINING			3
24	46722788	TAPPET			6
25	46717154	LOCKNUT - TAPPET ADJUSTING SCREW			6
26	46722718	SCREW-TAPPET ADJUSTING			6
27	46703602	JOINT-WATER OUTLET CONNECTION TOP			1
28	46716815	CONNECTION - CYLINDER HEAD WATER OUTLET			1
29	46714043	STUD-WATER OUTLET CONNECTION			1
30	46714042	STUD-WATER OUTLET CONNECTION			1

 
CYLINDER HEAD (G20/24)

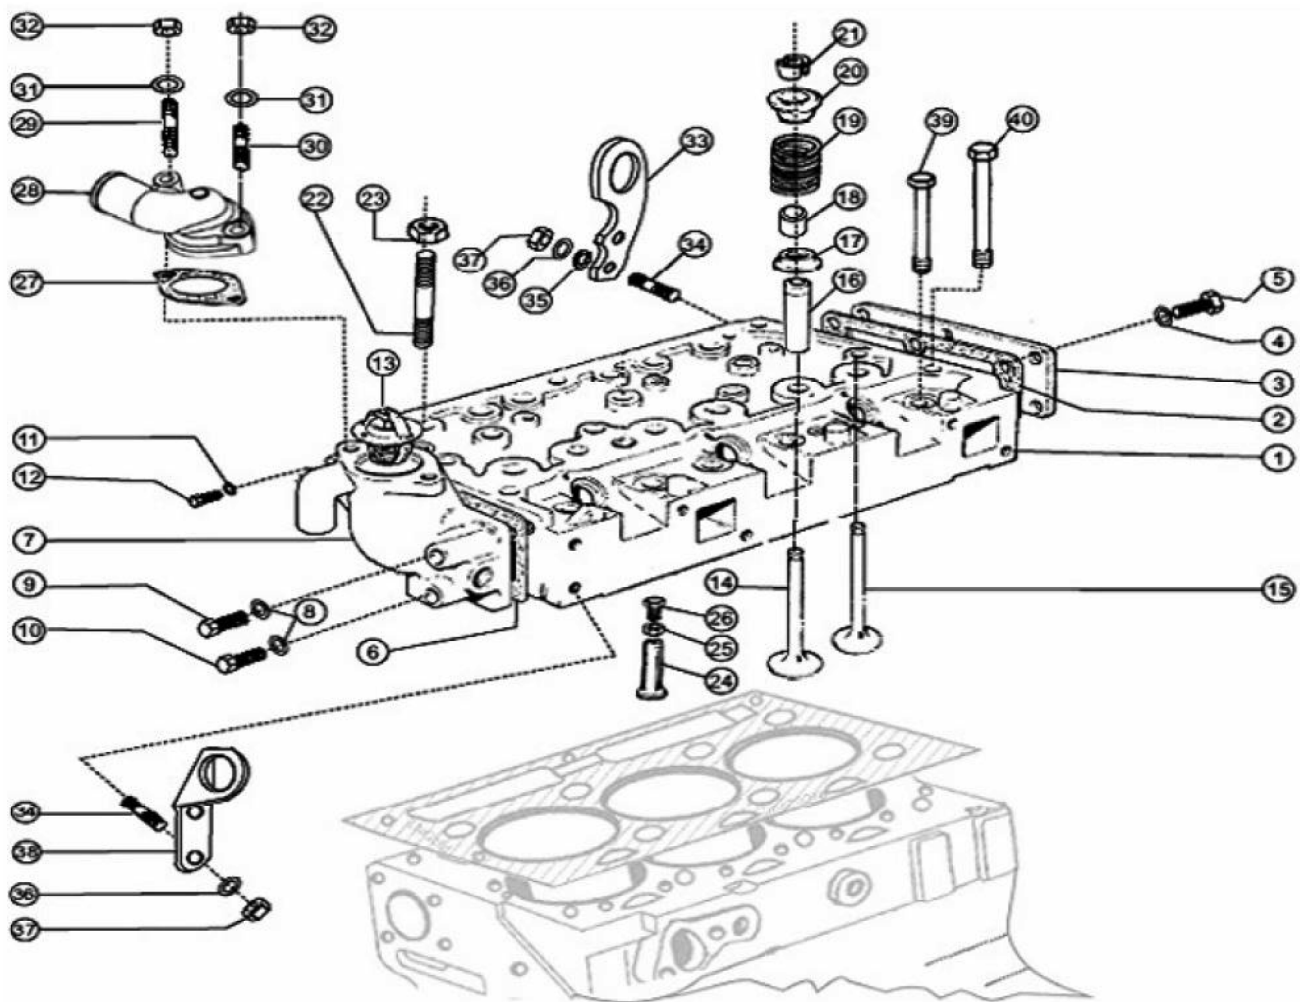

CYLINDER HEAD (G20/24)	
---------------------------	--

[illegible]

 
CYLINDER HEAD COVER (G20/24)

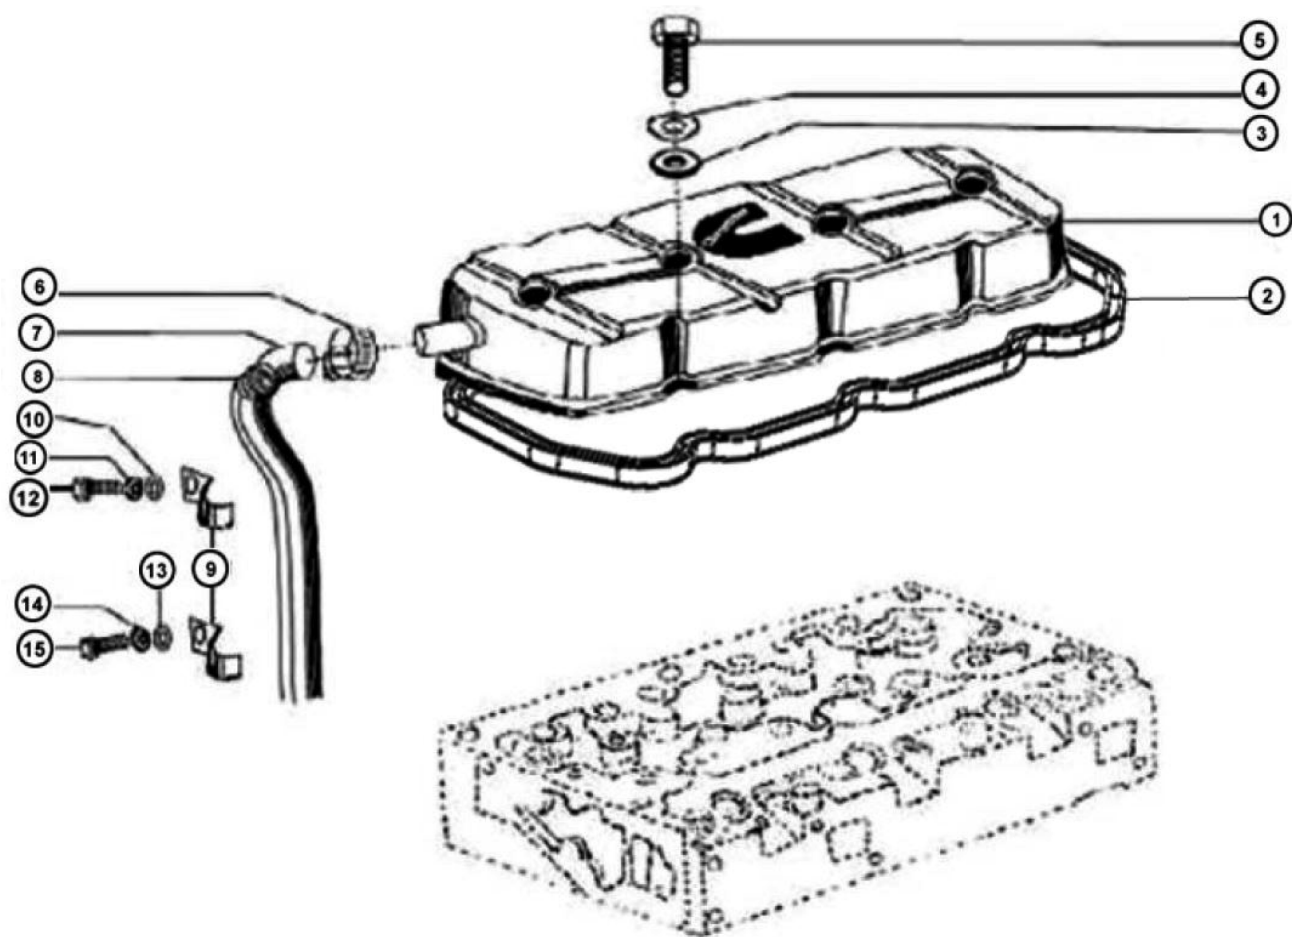

CYLINDER HEAD COVER (G20/24)	
---------------------------------	--

[illegible]

 
FAN ASSEMBLY (G20/24)

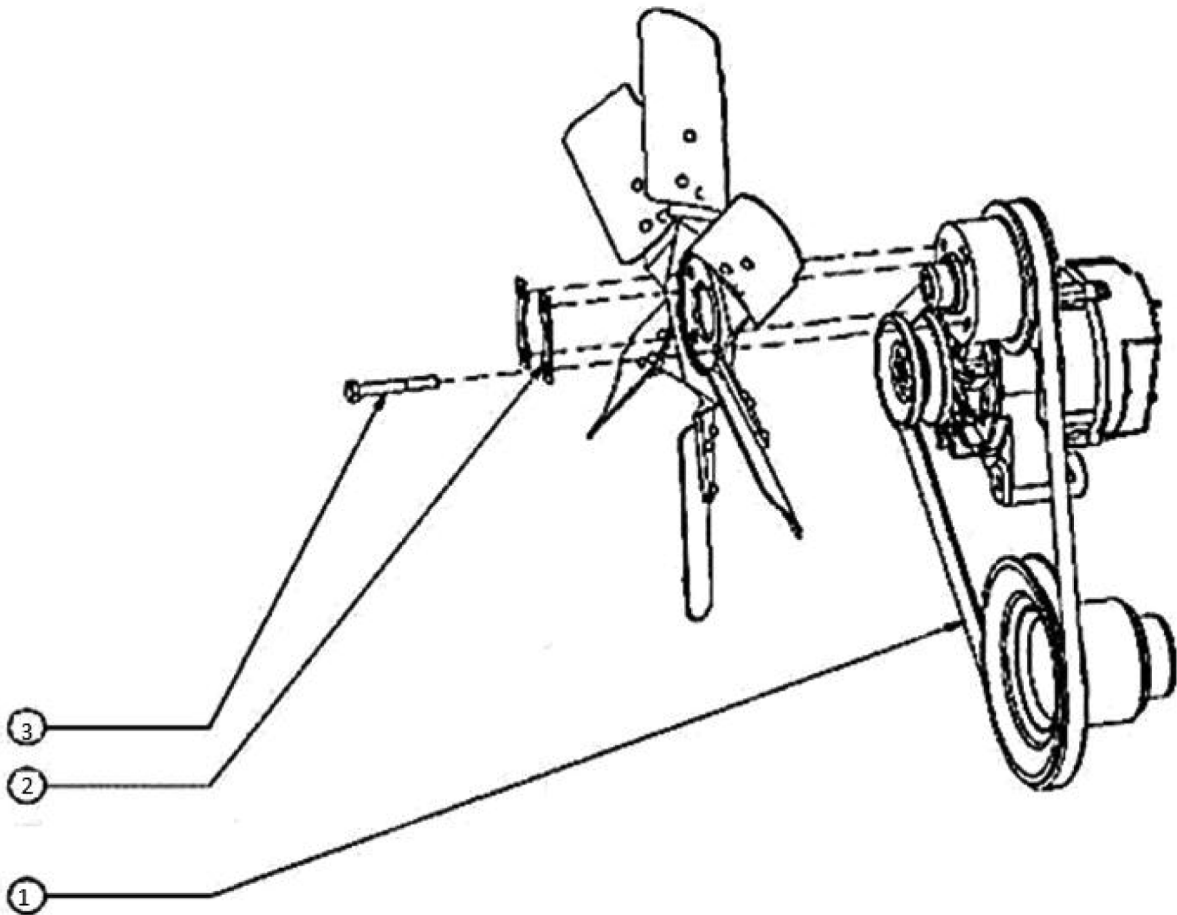

FAN ASSEMBLY (G20/24)	
---	--

[illegible]

 
FLYWHEEL/HOUSING/REAR END OIL SEAL (G20/24)

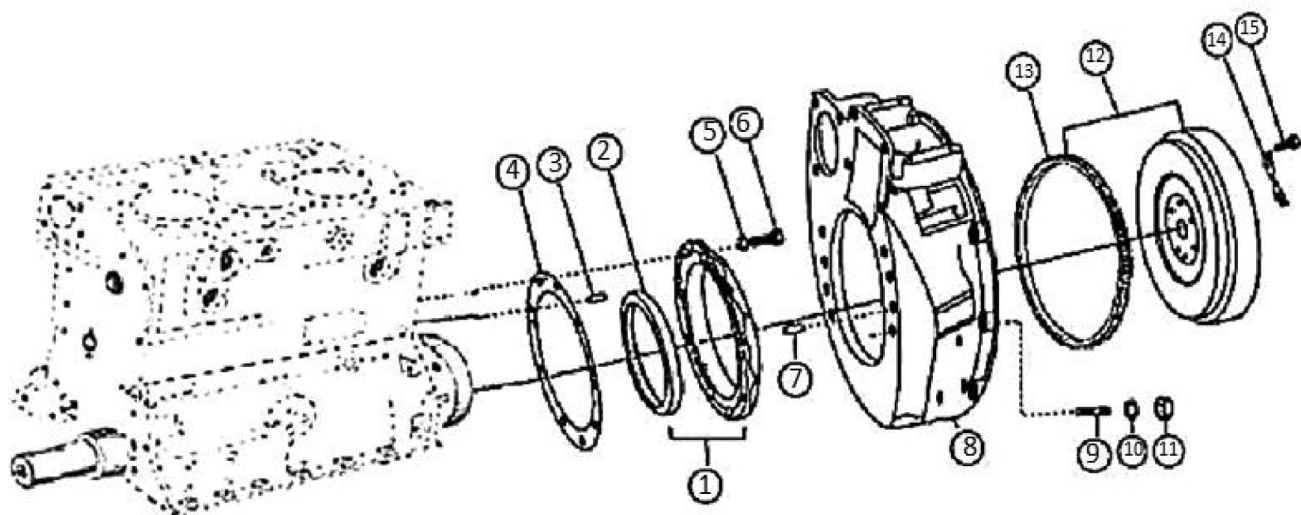

**FLYWHEEL/HOUSING/REAR END OIL SEAL
(G20/24)**

[illegible]

 
FUEL INJECTION EQUIPMENT (G20/24)

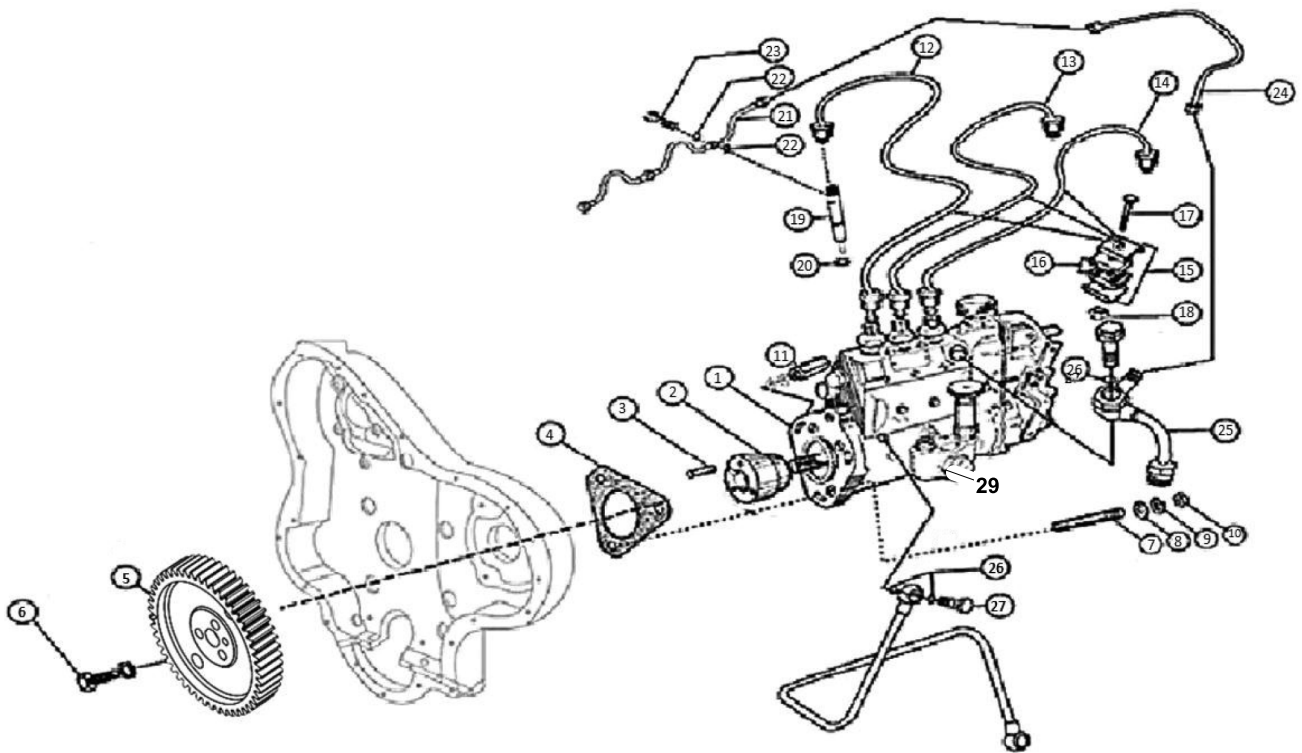

FUEL INJECTION EQUIPMENT (G20/24)

Item	Part Number	Description	Remarks	Serial Number	Qty
1	46703589	FUEL INJECTION PUMP (X2.5 G2)	G20		1
1	46717019	FUEL INJECTION PUMP (X2.5 G4)	G24		1
2	46716533	ADAPTER-FUEL INJECTION PUMP GEAR			1
3	46716888	DOWEL - DRIVE GEAR LOCATING			1
4	46703619	JOINT - FUEL PUMP TO TIMING CASE			1
5	46717037	GEAR - FUEL PUMP DRIVE			1
6	46716989	FLANGED BOLT			3
7	46714039	STUD - TIMING CASE TO FUEL INJECTION PUMP			3
8	46705504	WASHER PLAIN - FUEL INJECTION PUMP RETAINING NUT			3
9	46703632	WASHER SPRING - FUEL INJECTION PUMP RETAINING NUT			3
10	46703633	NUT - FUEL INJECTION PUMP RETAINING			2
11	46722662	NUT - FUEL INJECTION PUMP RETAINING			1
12	46727458	PIPE FUEL INJECTION NO. 1 CYLINDER ASSY			1
12	46717092	HIGH PRESSURE PIPE NO:1			1
13	46729672	PIPE FUEL INJECTION NO. 2 CYLINDER ASSY			1
13	46717090	HIGH PRESSURE PIPE NO:2			1
14	46729677	PIPE FUEL INJECTION NO. 3 CYLINDER ASSY			1
14	46717088	HIGH PRESSURE PIPE NO:3			1
14A	46717125	KIT-HIGH PRESSURE PIPE ASSY			1
15	46722688	PLATE - FUEL INJECTION PIPE VIBRATION DAMPER RETAINING			4
16	46716880	DAMPER - FUEL INJECTION PIPE DAMPER			4
17	46722719	SCREW - FUEL INJECTION PIPE DAMPER			2
18	46722666	NUT - FUEL INJECTION PIPE DAMPER SCREW			2
19	46709378	NOZZLE & HOLDER ASSY	G20		3
19	46722094	NOZZLE & HOLDER ASSY	G24		3
20	46705642	WASHER -NOZZLE SEATING			3
21	46716553	ASSY ATOMISER LEAKOFF PIPE			1
22	46722818	WASHER - BANJO BOLT			6
23	46716757	BOLT BANJO			3
24	46727453	PIPE ASSEMBLY - FUEL OIL LEAK OFF TO FIP RETURN			1
25	46722676	PIPE ASSEMBLY - FUEL INJECTION TO TANK			1




 
FUEL INJECTION EQUIPMENT (G20/24)

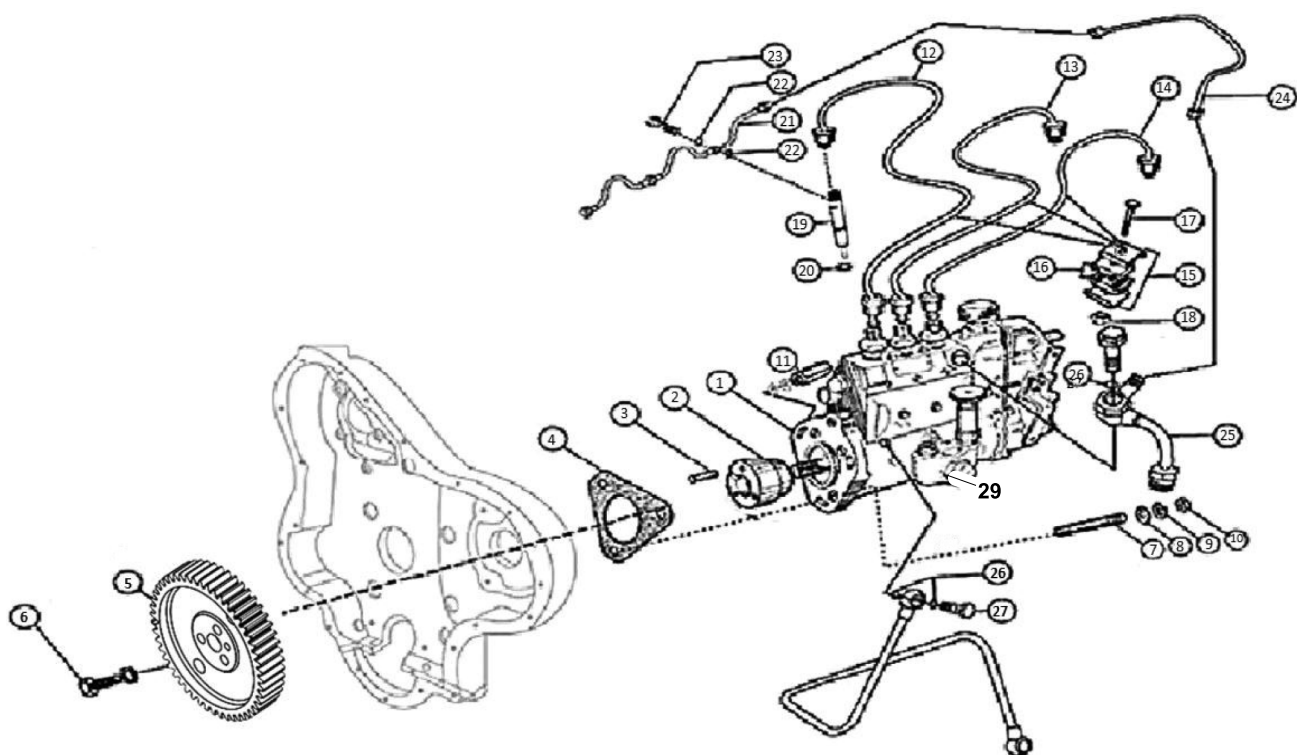

FUEL INJECTION EQUIPMENT (G20/24)	
--------------------------------------	--

[illegible]

    
JOINTS AND GASKETS (G20/24)

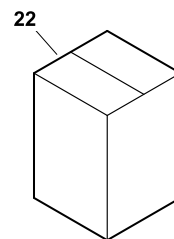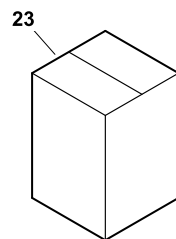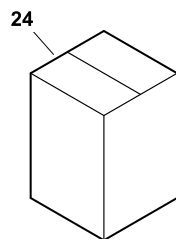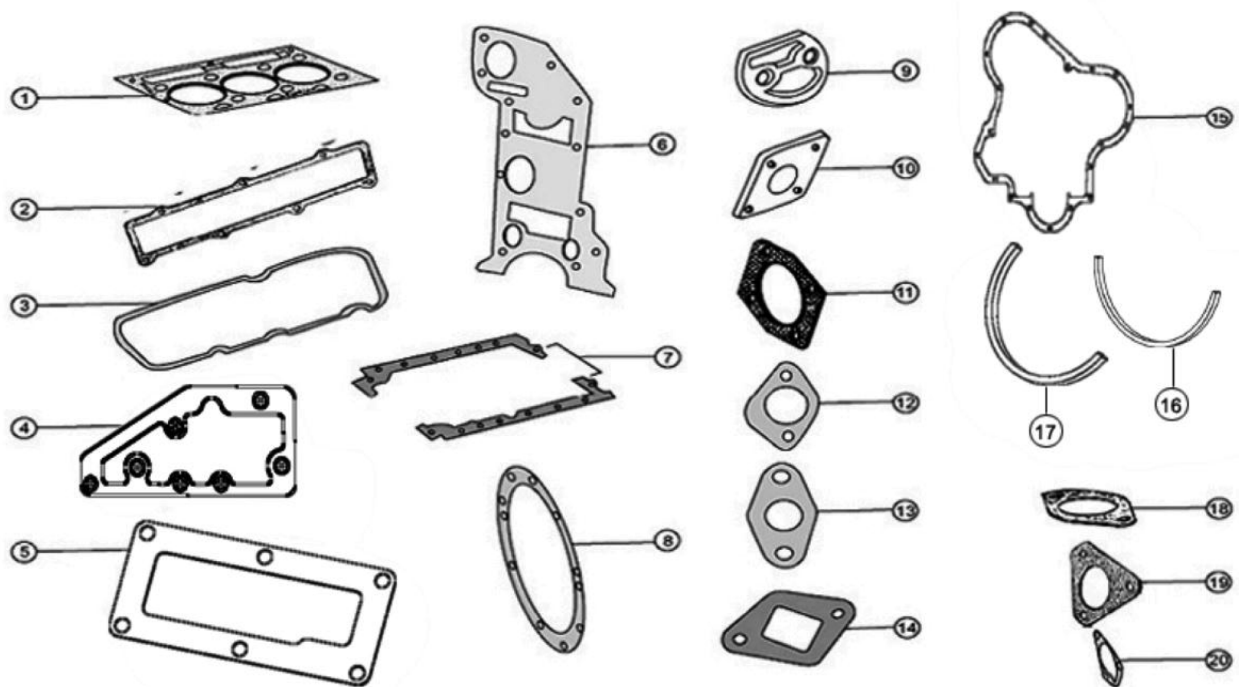

JOINTS AND GASKETS (G20/24)	
---	--

[illegible]

 
LUBRICATING OIL FILTERS (G20/24)

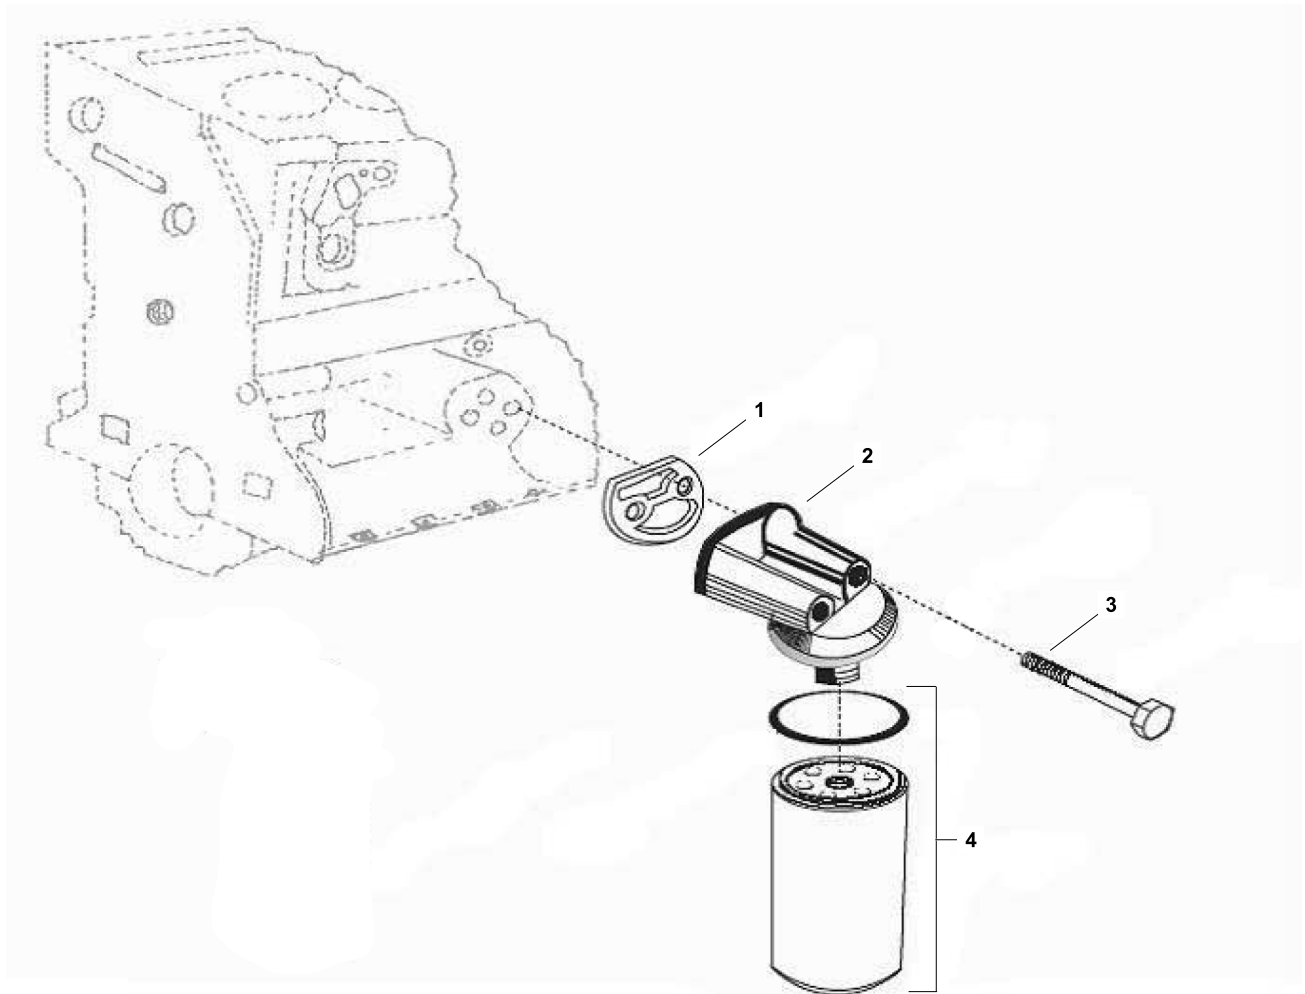

LUBRICATING OIL FILTERS (G20/24)	
-------------------------------------	--

[illegible]


LUBRICATING OIL PUMP (G20/24)	
--	--

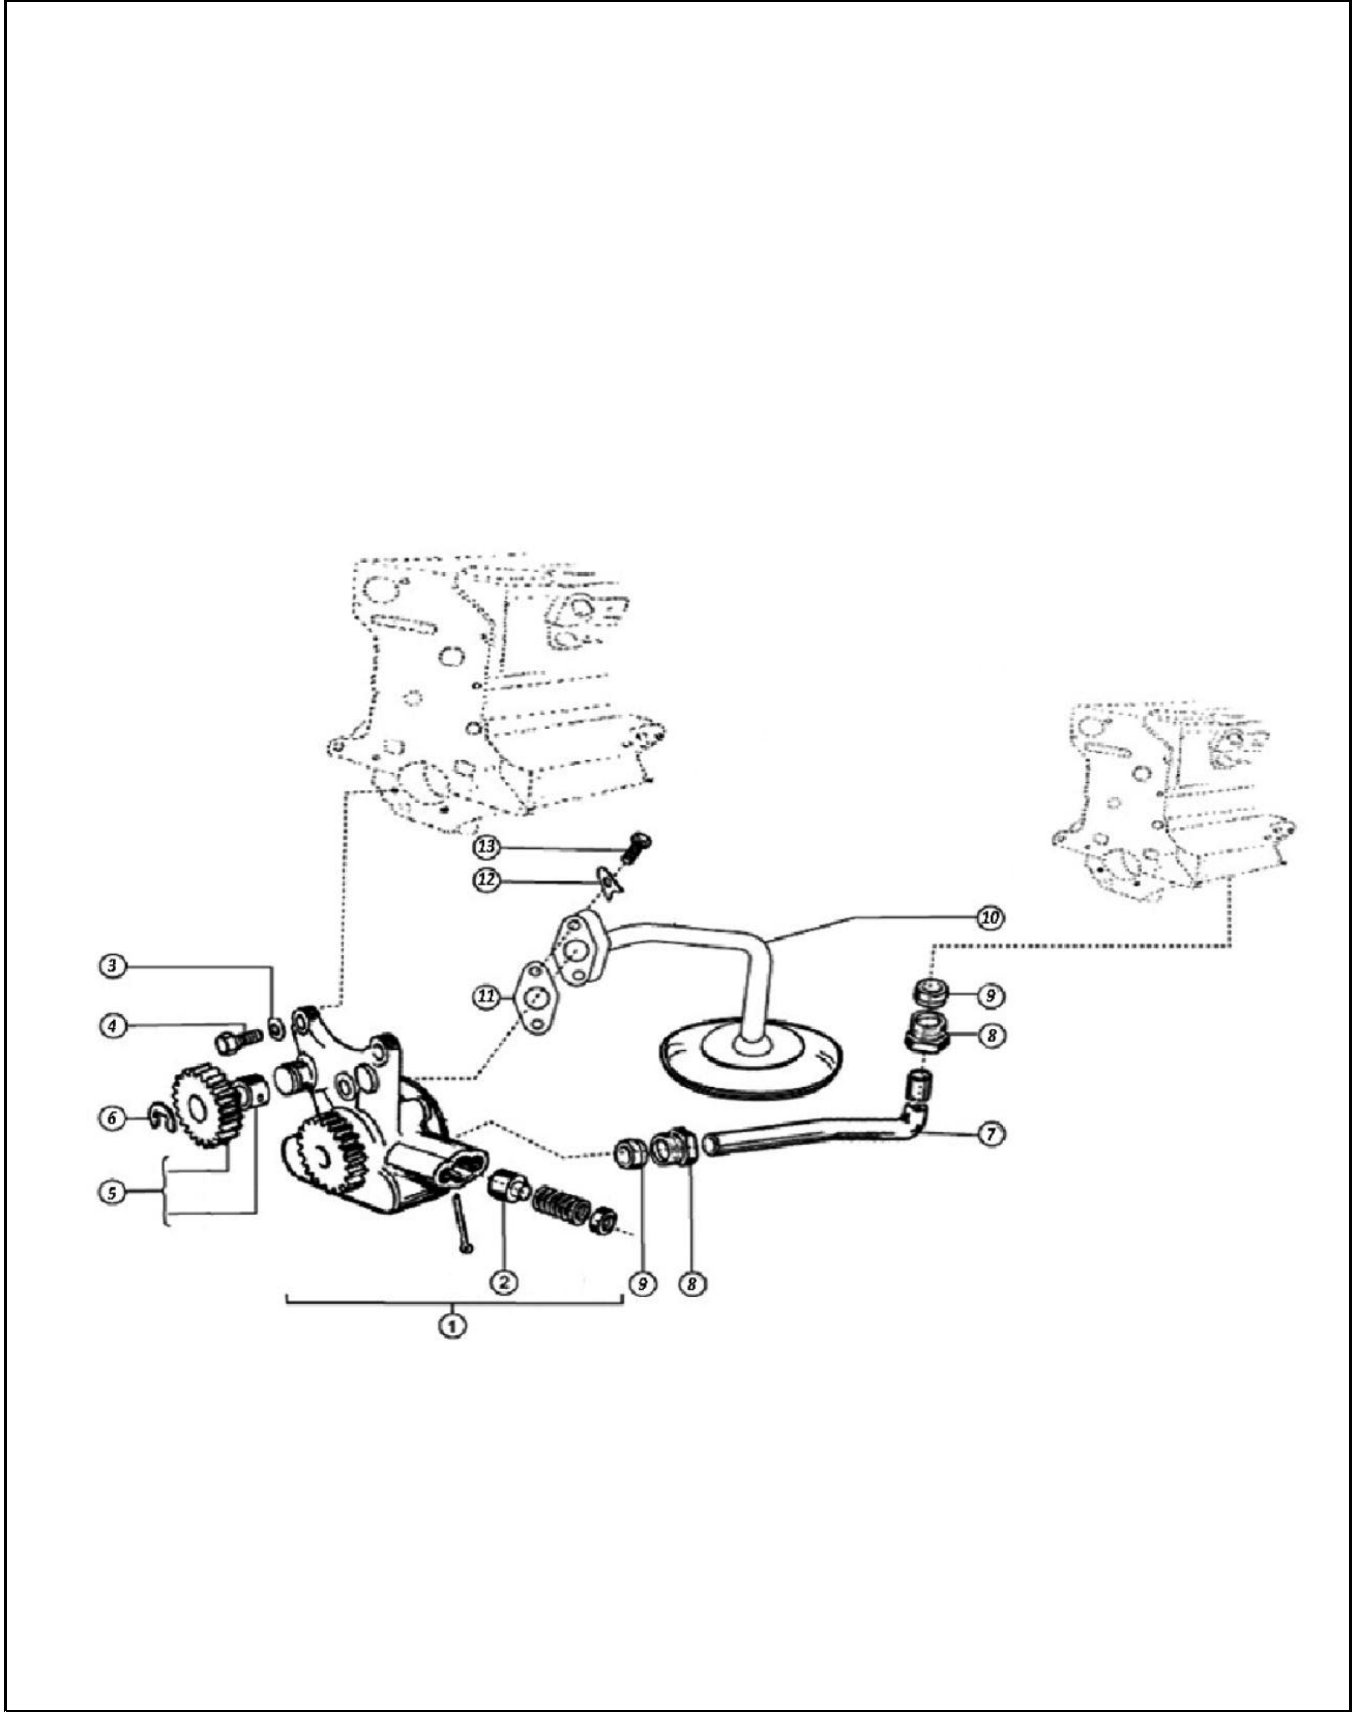 

LUBRICATING OIL PUMP (G20/24)	
---	--

[illegible]


LUBRICATING OIL SUMP (G20/24)	
---	--

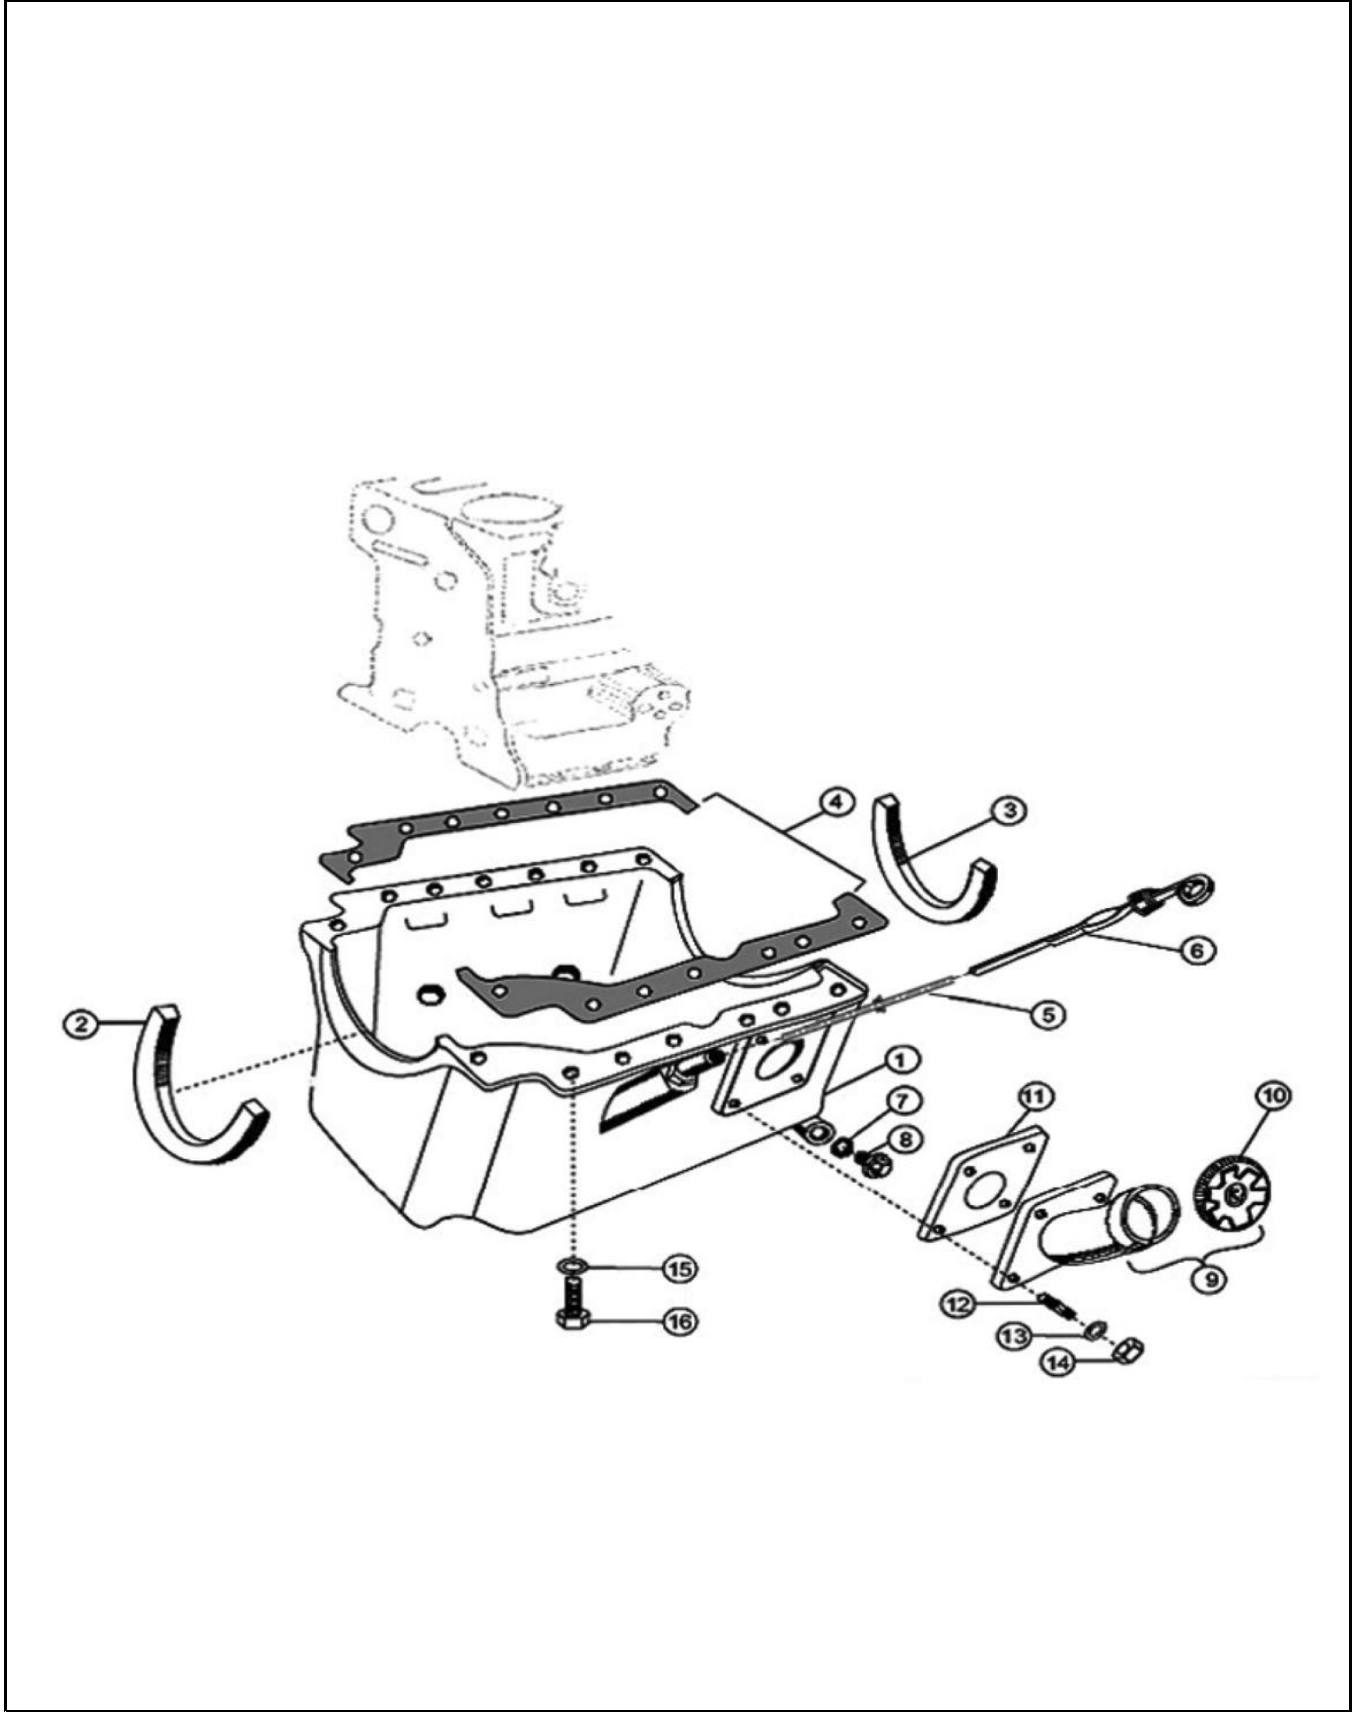 

LUBRICATING OIL SUMP (G20/24)

[illegible]

 
ROCKER SHAFT ASSEMBLY (G20/24)

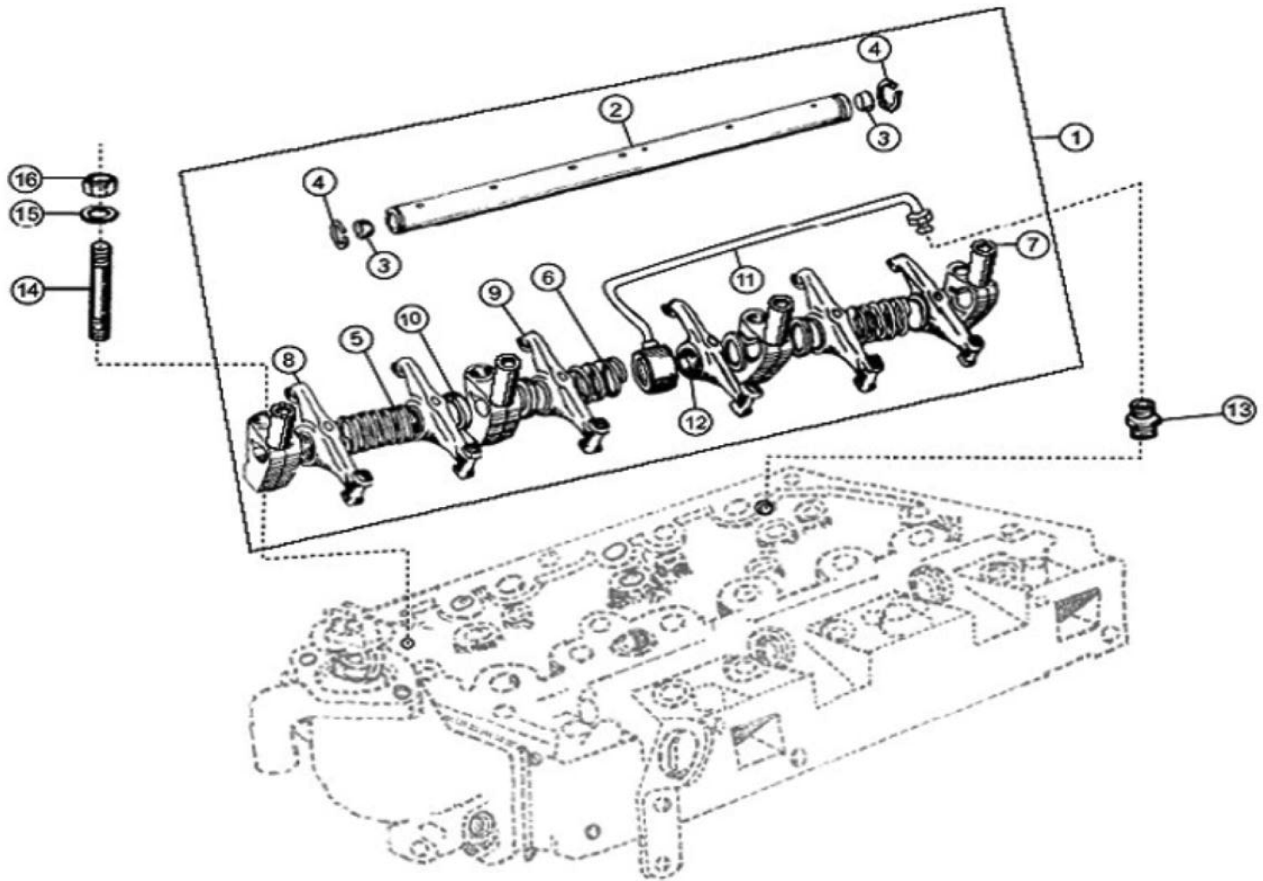

ROCKER SHAFT ASSEMBLY (G20/24)

[illegible]

 
STARTER MOTOR (G20/24)

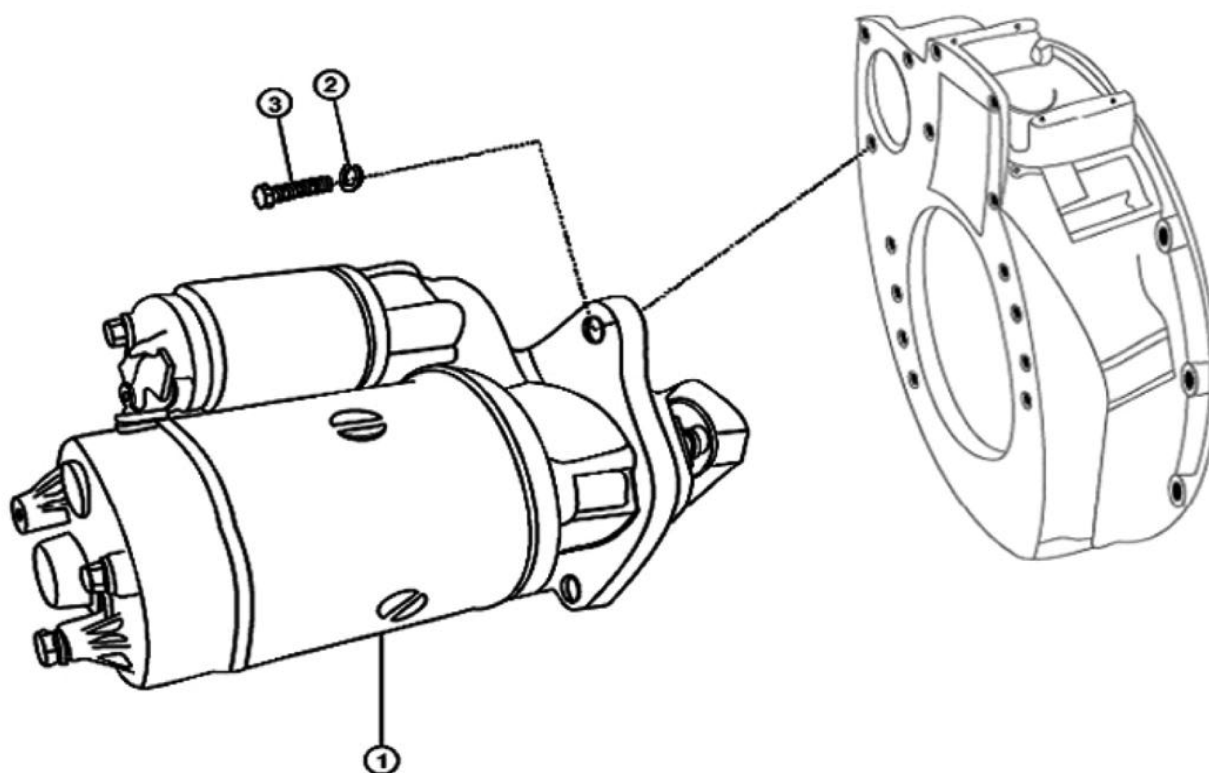

STARTER MOTOR (G20/24)

[illegible]

 
TIMING GEAR & CAMSHAFT (G20/24)

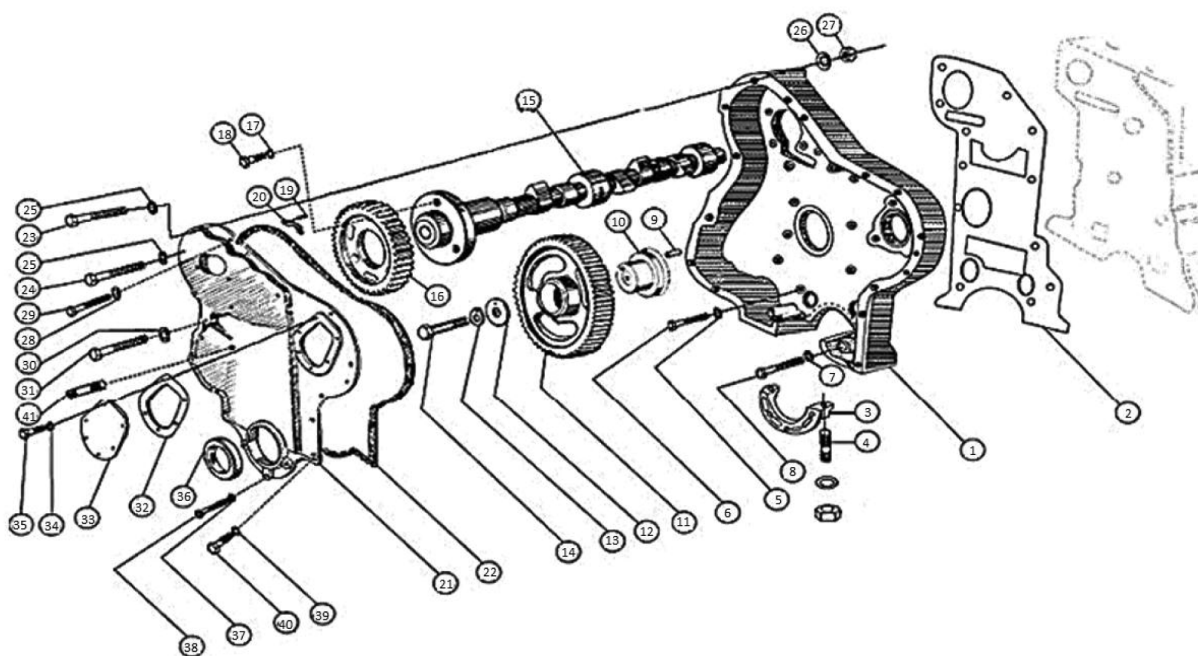

TIMING GEAR & CAMSHAFT (G20/24)

Item	Part Number	Description	Remarks	Serial Number	Qty
1	46722793	TIMING CASE (CAST IRON)			1
2	46703604	JOINT - TIMING CASE TO CYLINDER BLOCK			1
3	46716623	COVER - TIMING CASE BOTTOM			1
4	46716985	FLANGED BOLT (M8X1.25X30)- 10.9			2
5	46703632	SPRING WASHER			12
6	46722747	SETSCREW LUBRICATING OIL PUMP ASSEMBLY TO FRONT BEARING CAP			12
7	46703632	SPRING WASHER			2
8	46722756	SETSCREW CYLINDER BLOCK TO WATER INLET BODY			2
9	46716885	DOWEL - IDLER GEAR HUB LOCATING			1
10	46717105	HUB - IDLER			1
11	46717038	GEAR - IDLER			1
12	46722686	PLATE - IDLER GEAR RETAINING			1
13	46722786	TAB WASHER - IDLER GEAR HUB SETSCREW			1
14	46722750	SETSCREW - IDLER GEAR HUB TO CYLINDER BLOCK			1
15	NAP	CAMSHAFT WITH BUSH			1
16	46717035	GEAR - CAMSHAFT DRIVING			1
17	46703632	SPRING WASHER			3
18	46722758	SETSCREW CYLINDER BLOCK TO WATER INLET CONNECTION			3
19	46722706	RIVET - CAMSHAFT THRUST SPRING TO TIMING CASE FRONT COVER			1
20	46722765	SPRING - CAMSHAFT THRUST			1
21	46716628	COVER- TIMING CASE FRONT ASSY			1
22	46703613	JOINT - FRONT COVER TO TIMING CASE			1
23	46709478	BOLT			2
24	46709477	SETSCREW TIMING CASE COVER TO TIMING CASE			1
25	46722810	WASHER - TIMING CASE BOLT FRONT COVER TO TIMING CASE NUT			3
26	46703632	SPRING WASHER			3
27	46722660	NUT - TIMING CASE FRONT COVER BOLT TO TIMING CASE SETSCREW			3
28	46703632	SPRING WASHER			2
29	46722749	SETSCREW			2
30	46705661	WASHER SPRING CYLINDER HEAD STUD TO EXHAUST			2
31	46709476	SETSCREW BODY WATER OUTLET			2

 
TIMING GEAR & CAMSHAFT (G20/24)

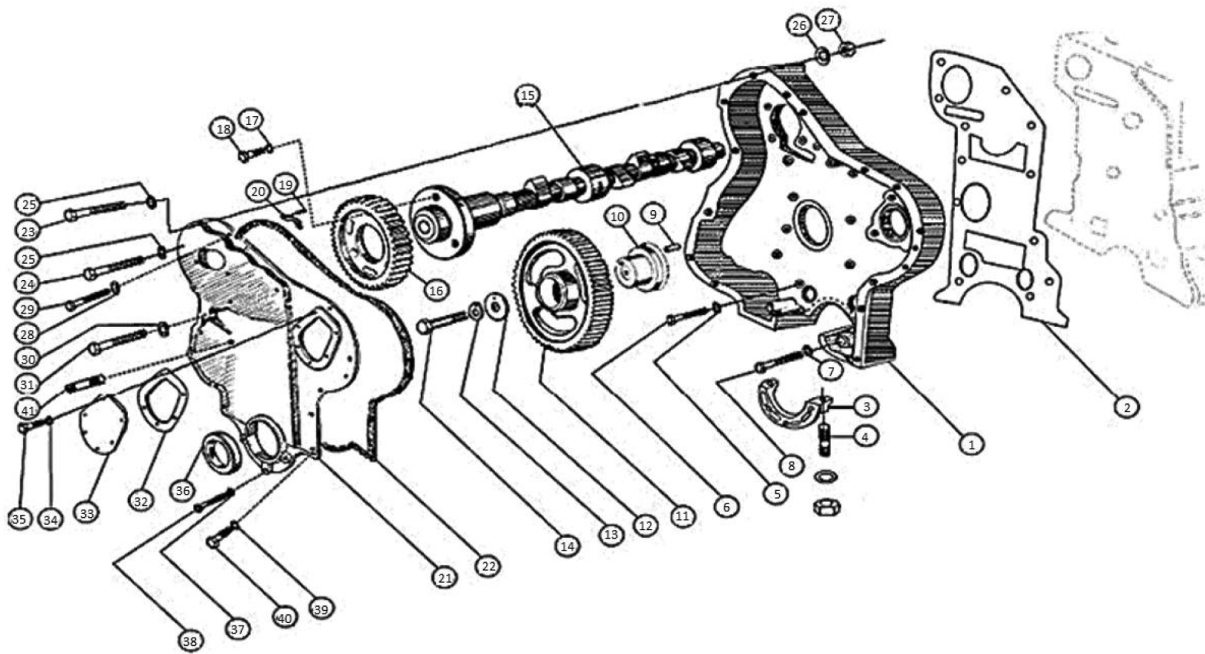

TIMING GEAR & CAMSHAFT (G20/24)	
------------------------------------	--

[illegible]

 
**WATER PUMP ASSEMBLY
(G20/24)**

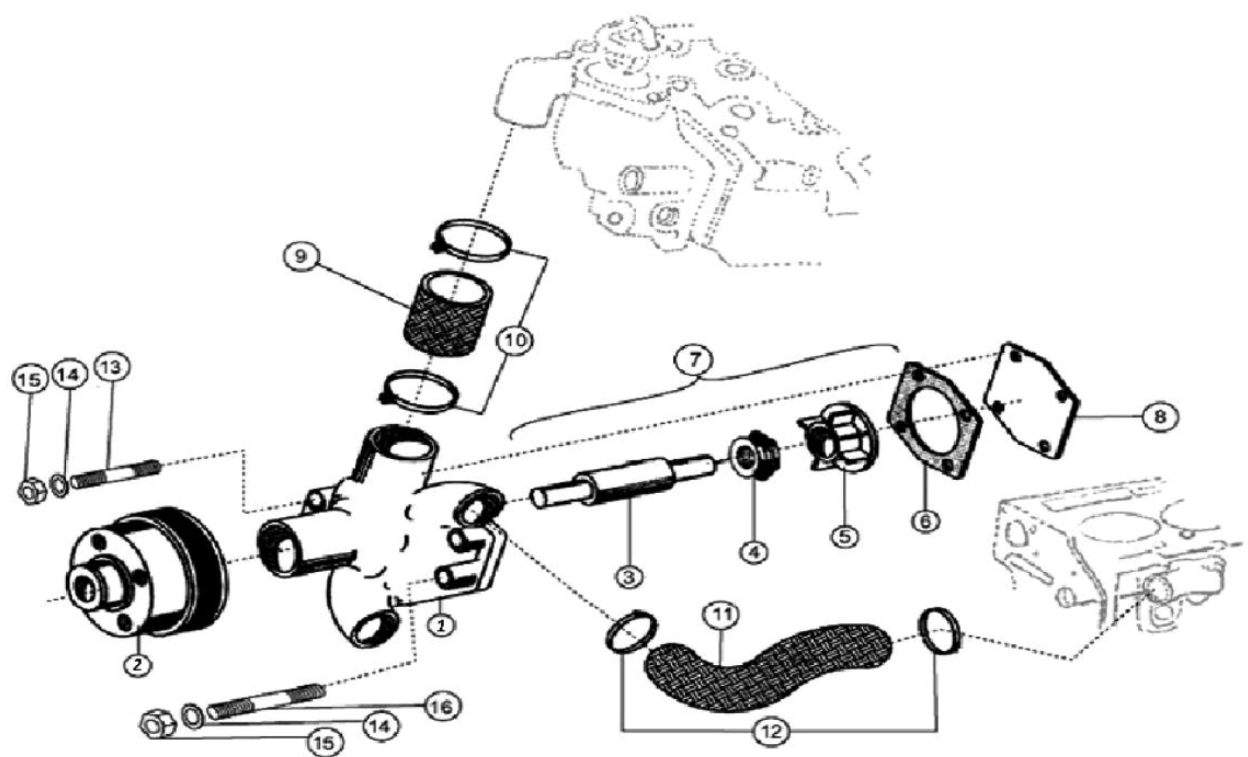

WATER PUMP ASSEMBLY (G20/24)	
--	--

[illegible]


 
AIR CLEANER INSTALLATION (G20/24)

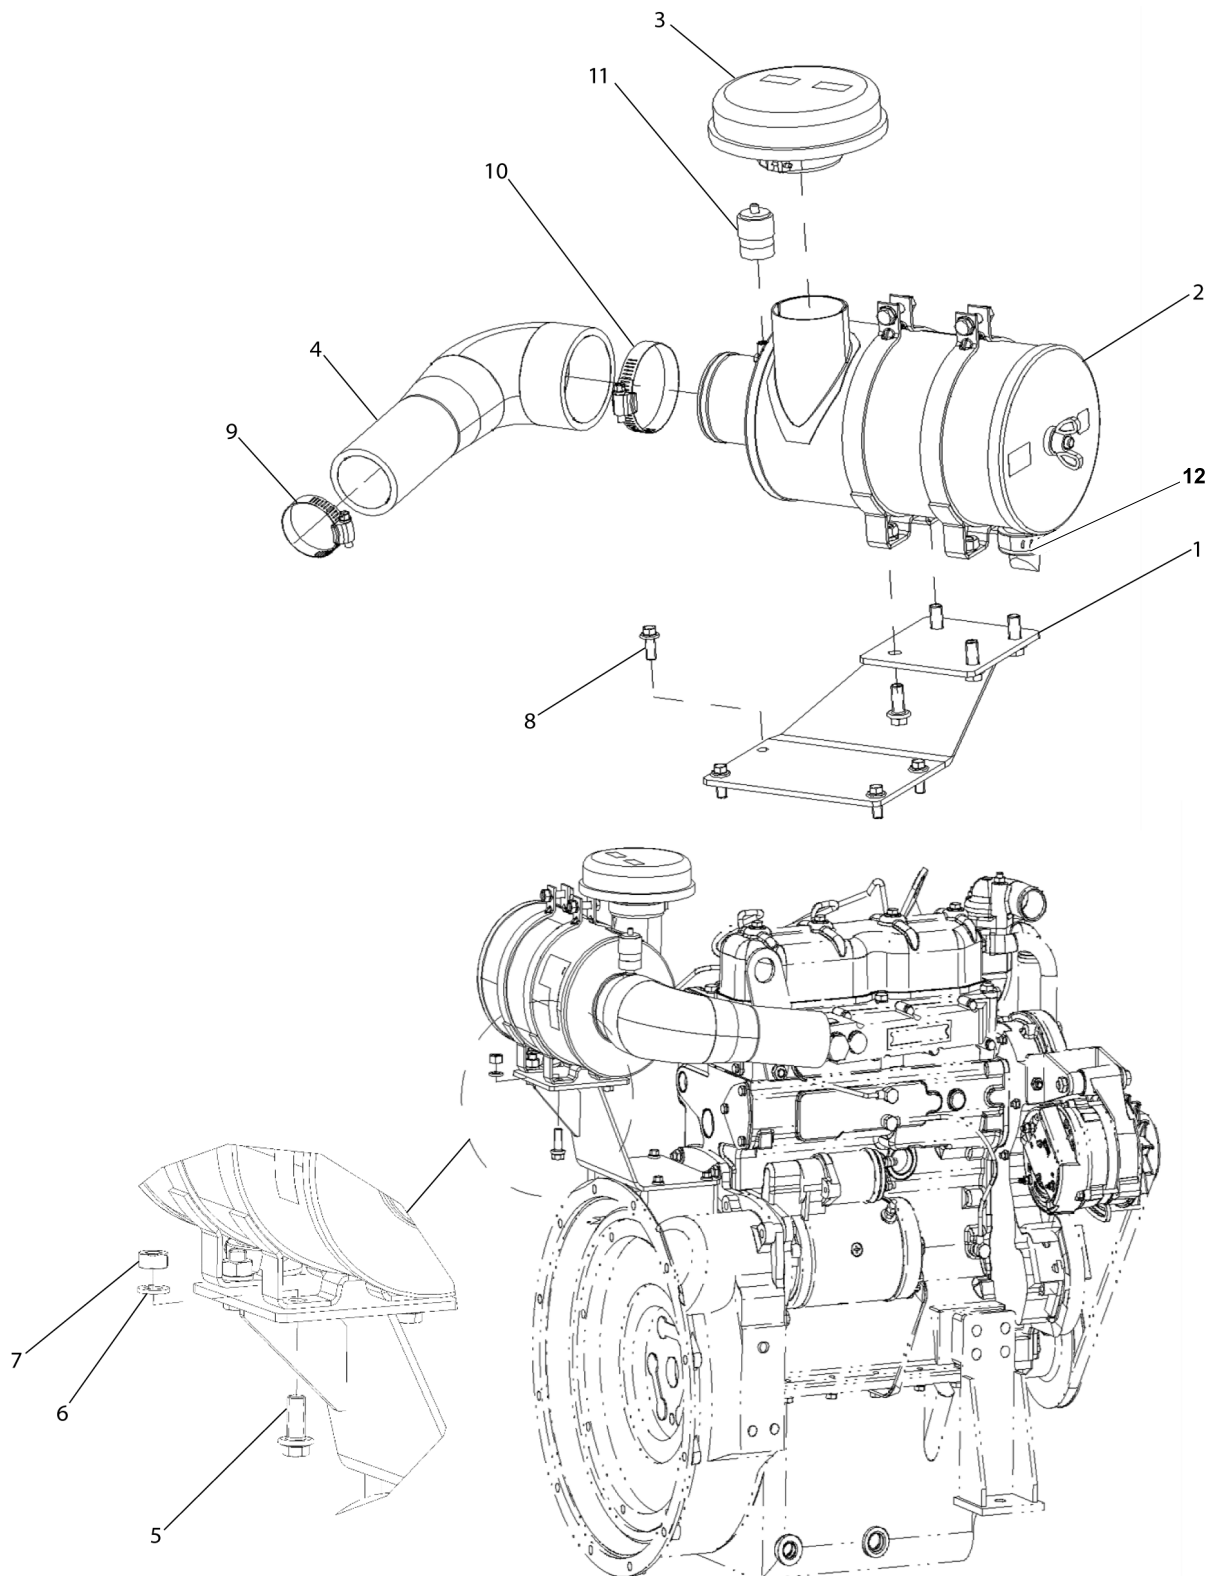

AIR CLEANER INSTALLATION (G20/24)

[illegible]

  
COOLING SYSTEM (G20/24)

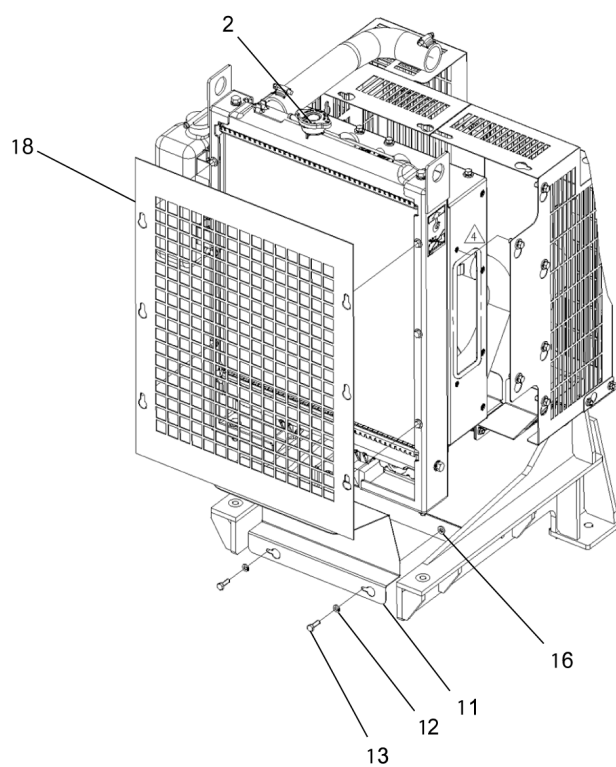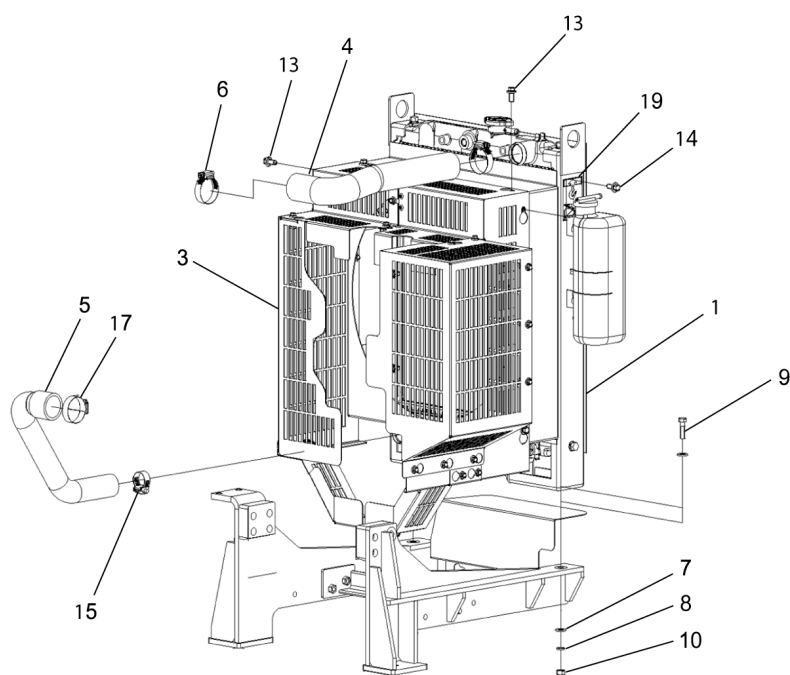

COOLING SYSTEM (G20/24)	
---	--

[illegible]

 
ENGINE INSTALLATION (G20/24)

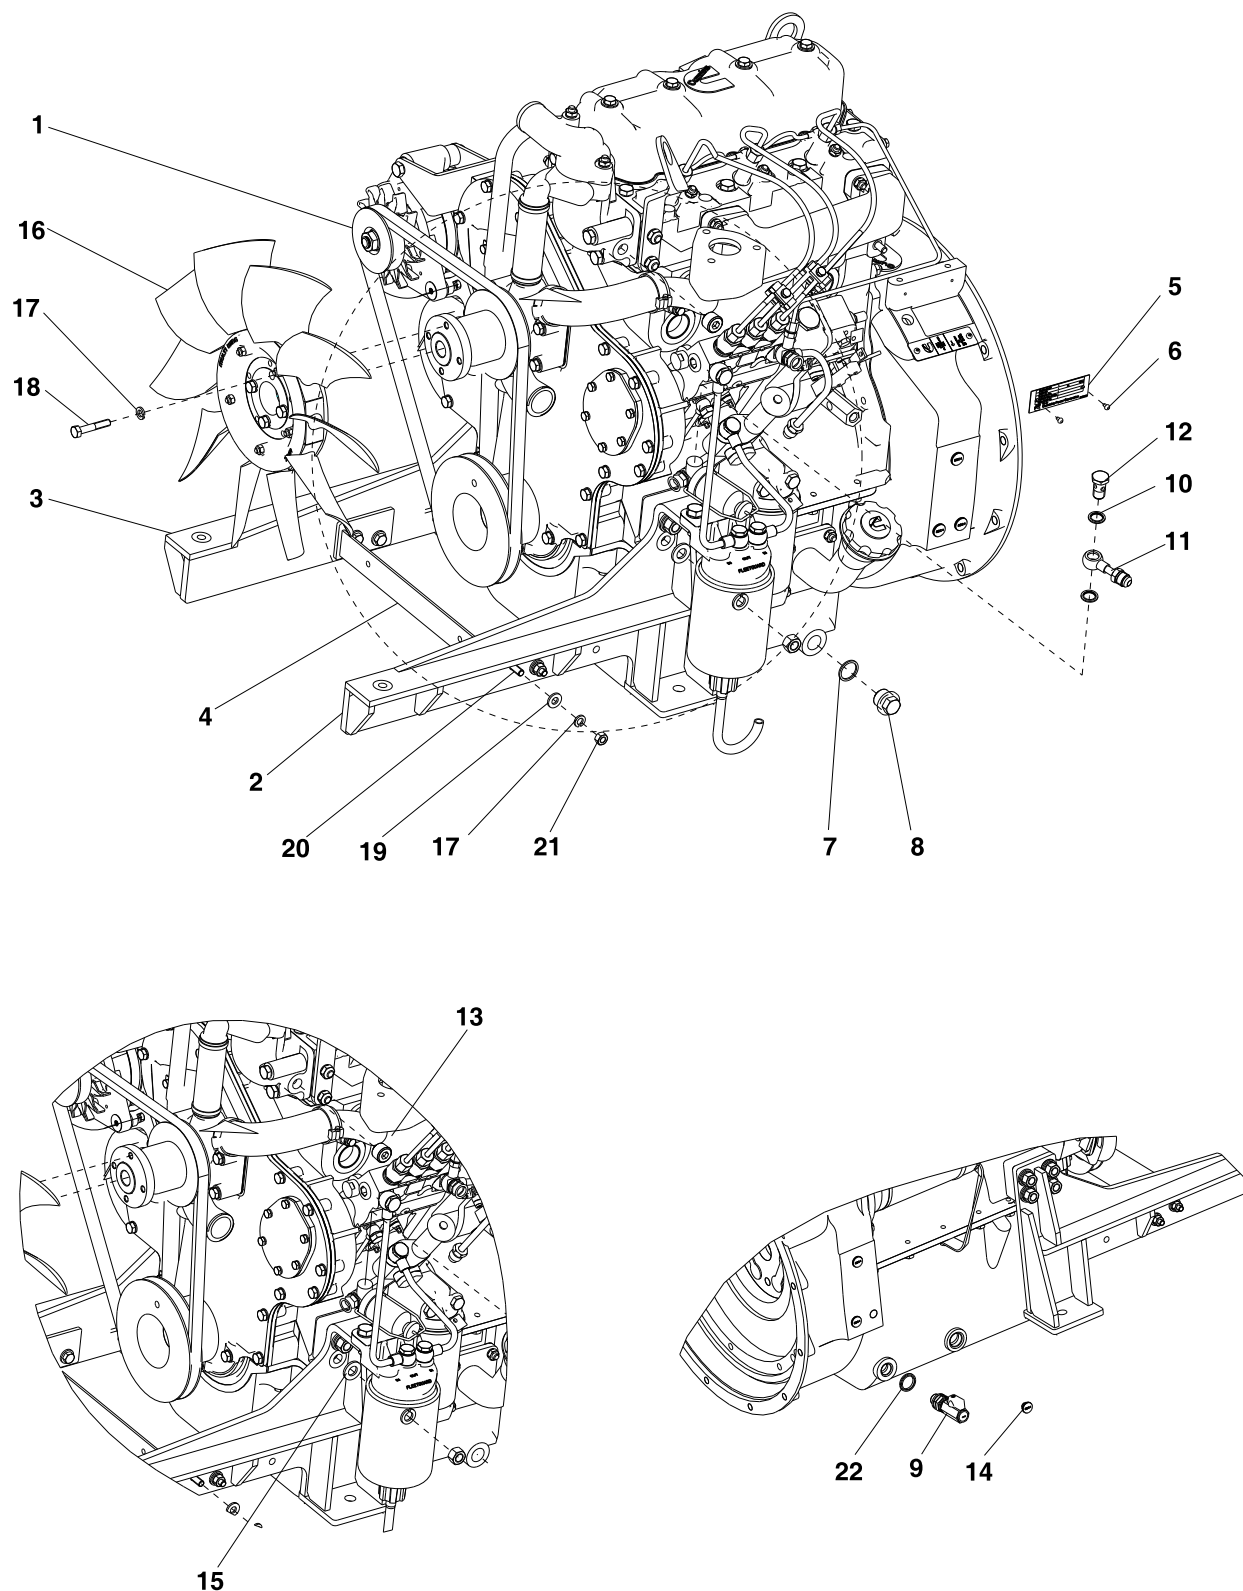

ENGINE INSTALLATION (G20/24)

[illegible]


 
FUEL SYSTEM (G20/24)

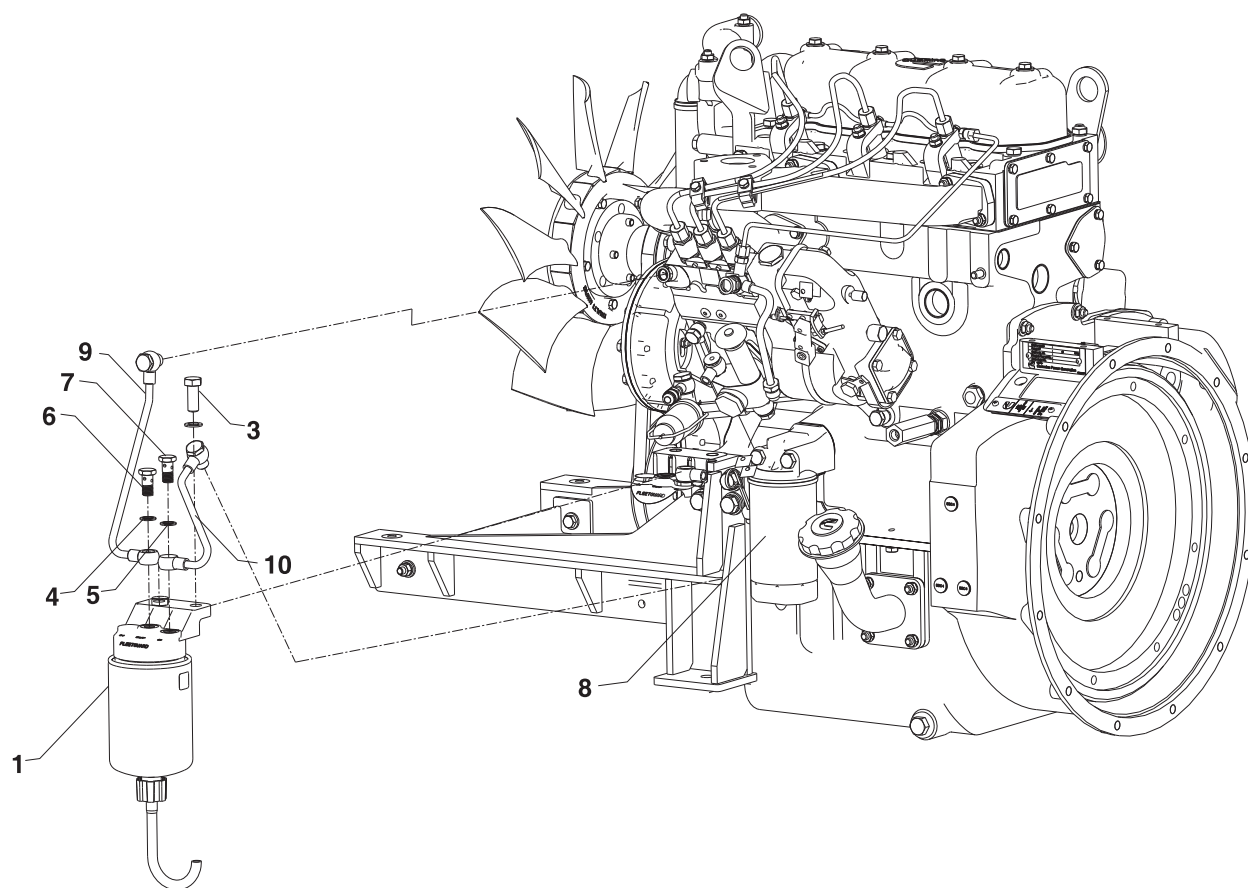

FUEL SYSTEM (G20/24)	
--	--

[illegible]

 
 
SENSOR INSTALLATION (G20/24)

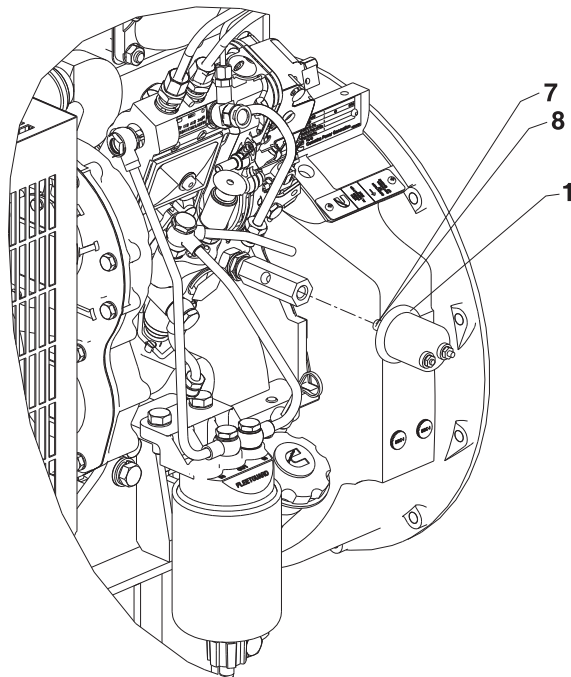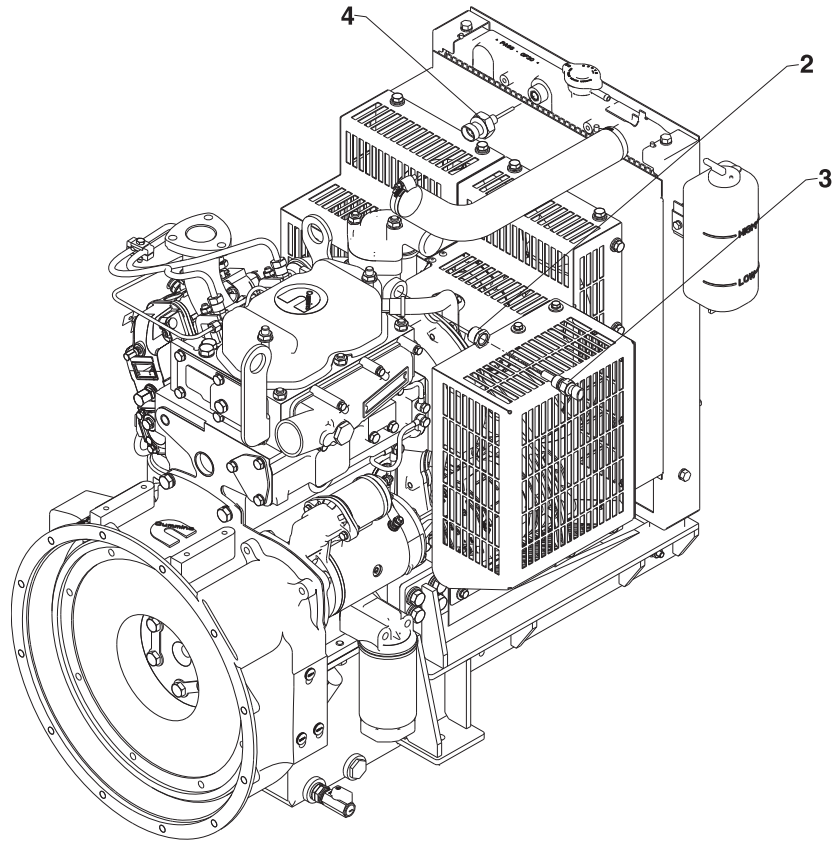

SENSOR INSTALLATION (G20/24)

[illegible]

  
SOLENOID INSTALLATION (G20/24)

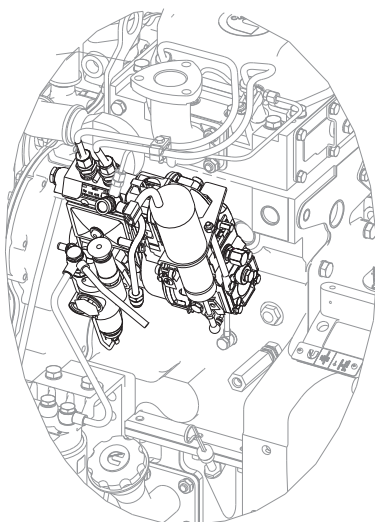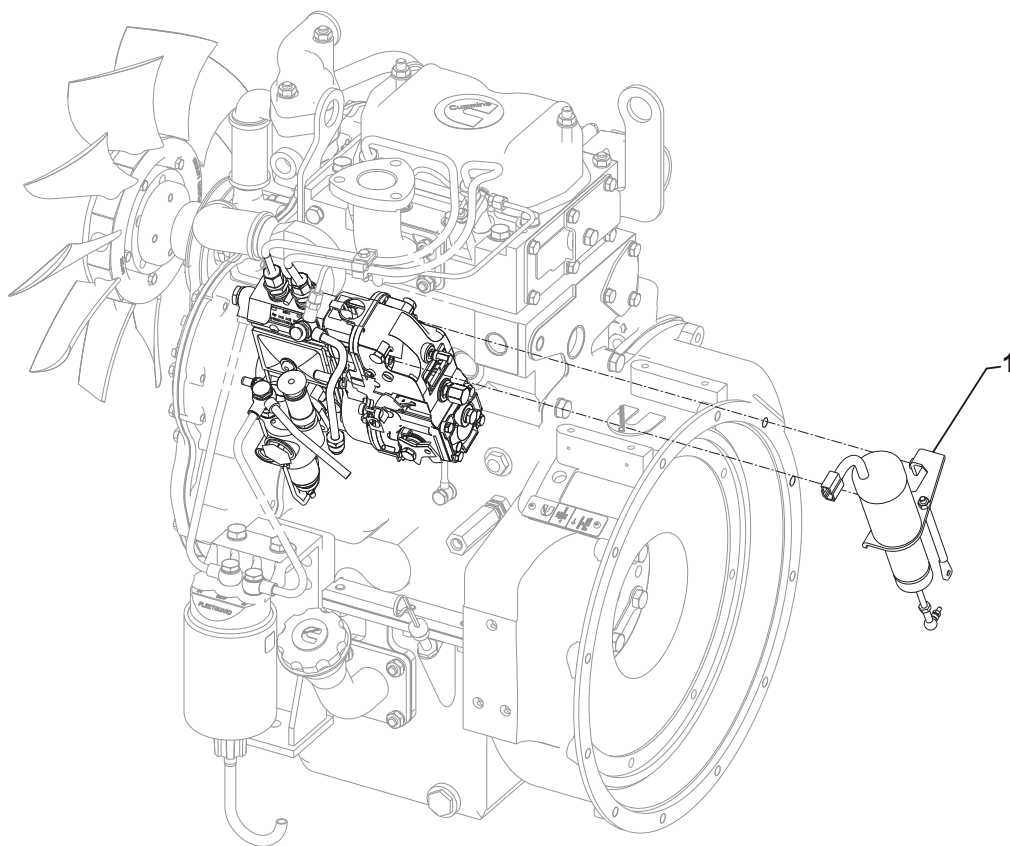

SOLENOID INSTALLATION (G20/24)

[illegible]

 
ENGINE ASSEMBLY (G30/36)

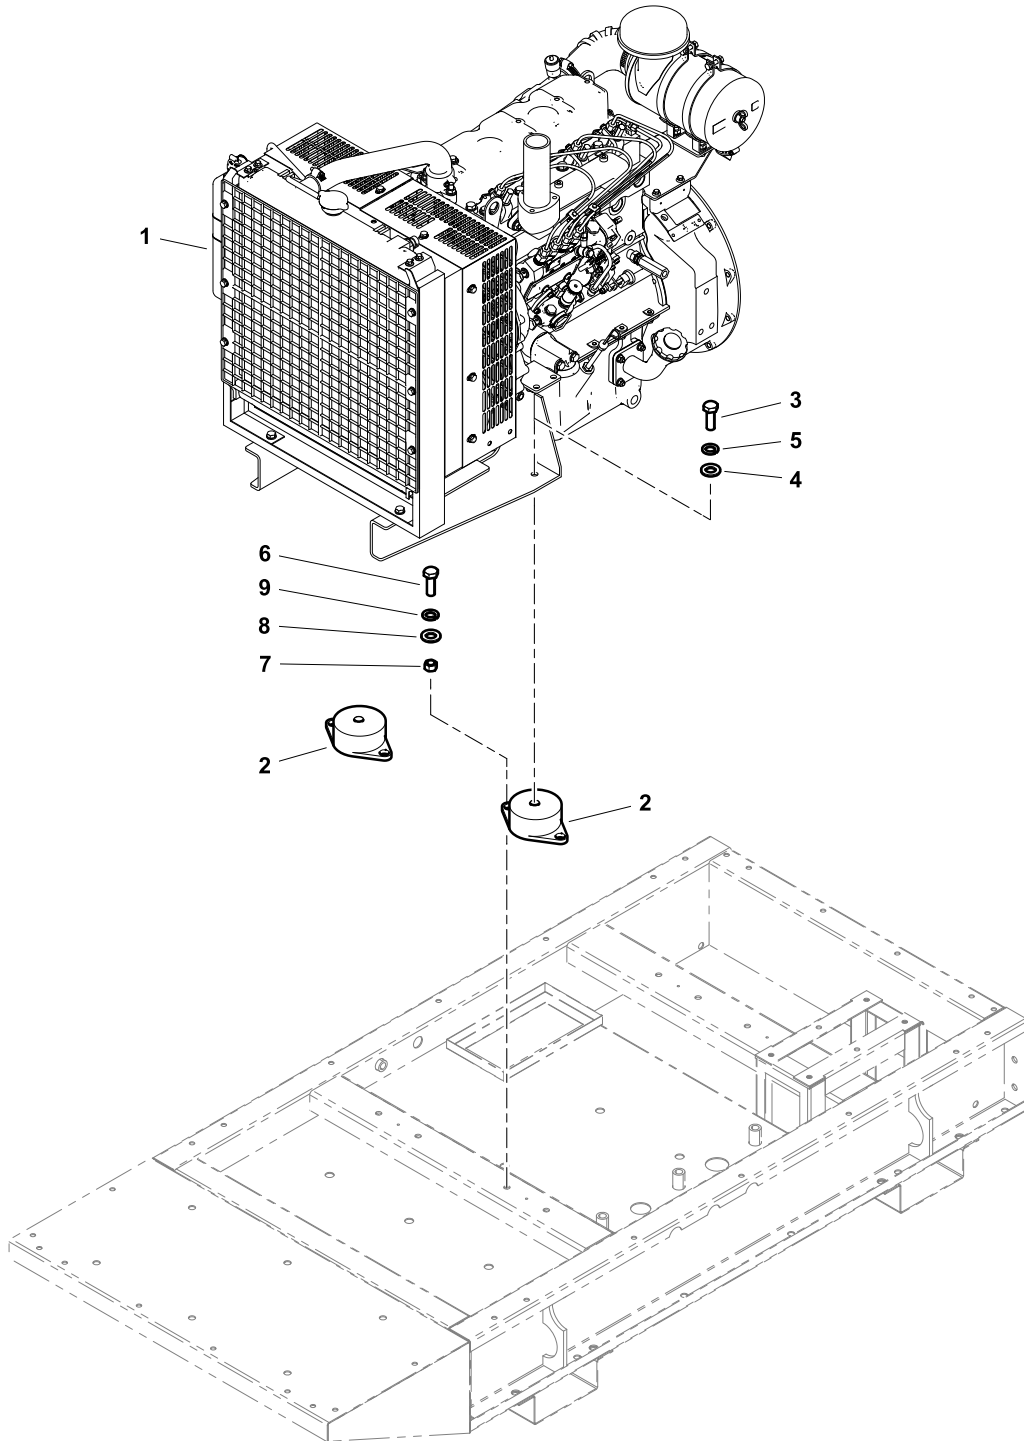

ENGINE ASSEMBLY (G30/36)

[illegible]

 
AIR INDUCTION & EXHAUST SYSTEM (G30/36)

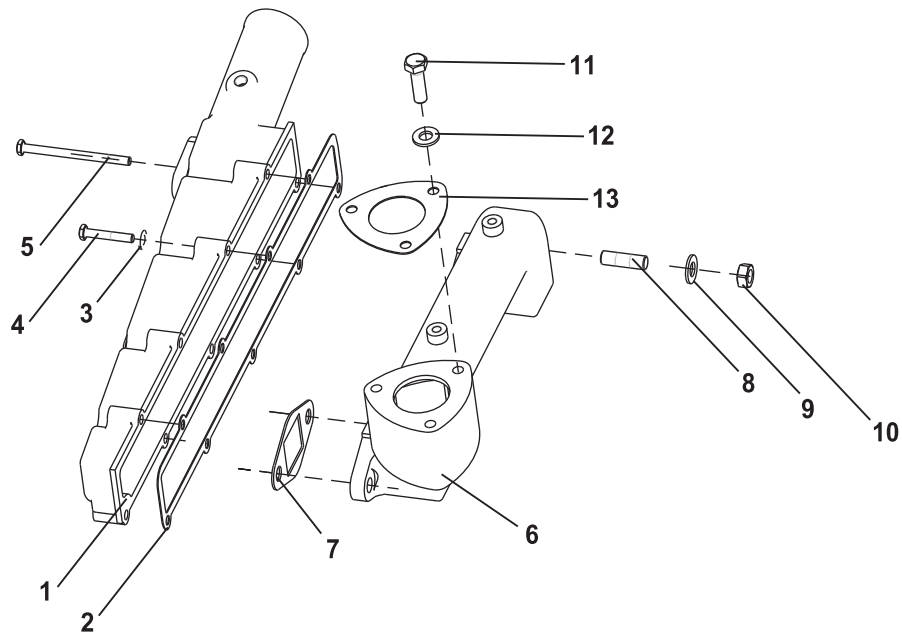

AIR INDUCTION & EXHAUST SYSTEM (G30/36)

[illegible]

 
ALTERNATOR AND SUPPORT (G30/36)

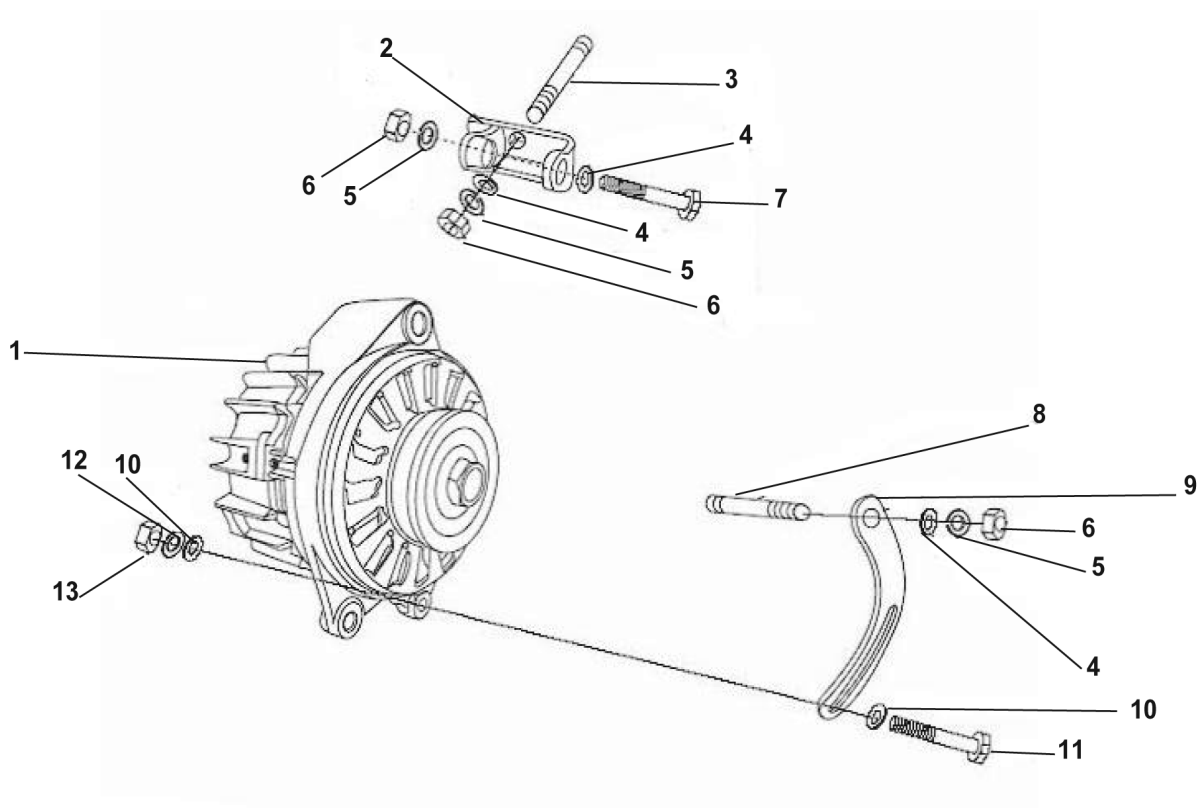

ALTERNATOR AND SUPPORT (G30/36)	
---	--

[illegible]

 
CRANK SHAFT ASSEMBLY (G30/36)

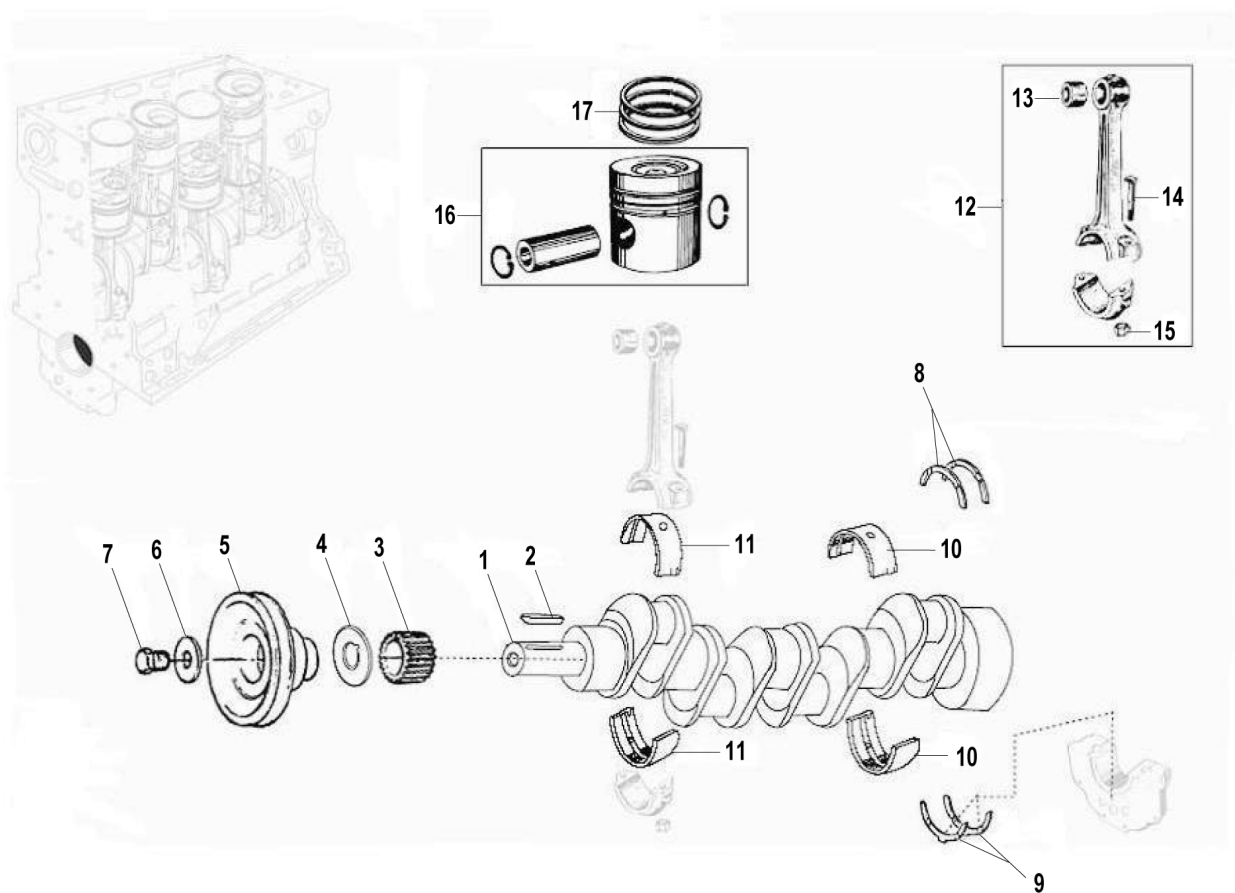

CRANK SHAFT ASSEMBLY (G30/36)

[illegible]

 
CYLINDER BLOCK **(G30/36)**

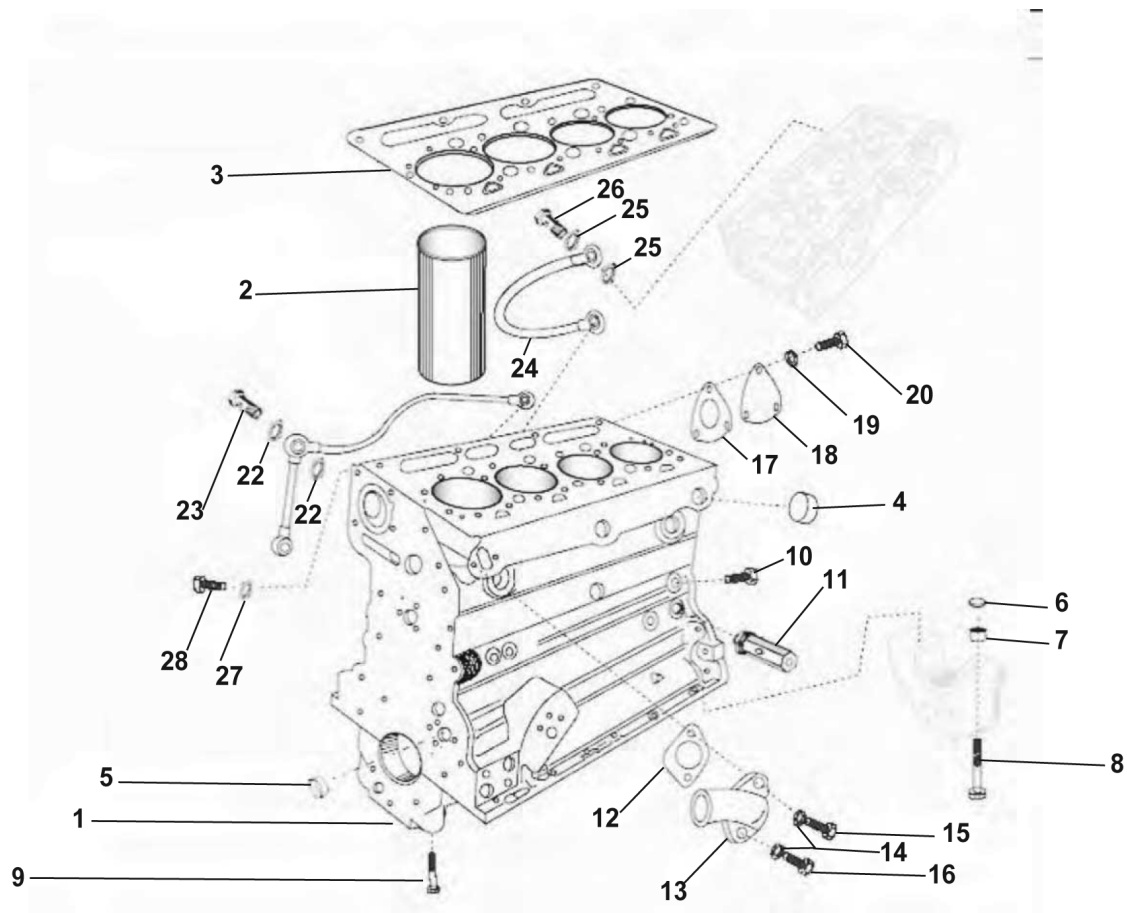

CYLINDER BLOCK (G30/36)

Item	Part Number	Description	Remarks	Serial Number	Qty
1	46716756	CYLINDER BLOCK ASSEMBLY			1
2	46717144	LINER CYLINDER BLOCK			4
3	46705470	GASKET CYLINDER HD			1
4	46722690	PLUG			10
5	46722687	PLUG			2
6	46716482	'O' RING-REAR			2
7	46739466	SLEEVE TUBE			10
8	46722748	SETSCREW			2
9	46722753	SETSCREW			8
10	46739467	PLUG DRAIN			1
11	46716532	ADAPTOR SENSOR			1
12	46705626	JOINT CYLINDER BLOCK WATER INLET CONNECTION			1
13	46722645	CONNECTION CYLINDER BLOCK WATER INLET			1
14	46722824	WASHER COPPER			2
15	46722758	SETSCREW			1
16	46703620	SCREW			1
17	46703620	JOINT TACHOMETER BLANKING PLATE			1
18	TBD	PLATE MOUNTING			1
19	46703632	SPRING WASHER			3
20	46722758	SETSCREW			3
21	46714066	PIPE ASSEMBLY			1
22	46722816	WASHER BANJO BOLT			4
23	46716744	BOLT BANJO			2
24	46714067	PIPE ASSEMBLY			1
25	46739468	WASHER SEALING			8
26	46716757	BOLT BANJO			4
27	46705504	WASHER PLAIN			2
28	46722757	SETSCREW			2

 
CYLINDER HEAD **(G30/36)**

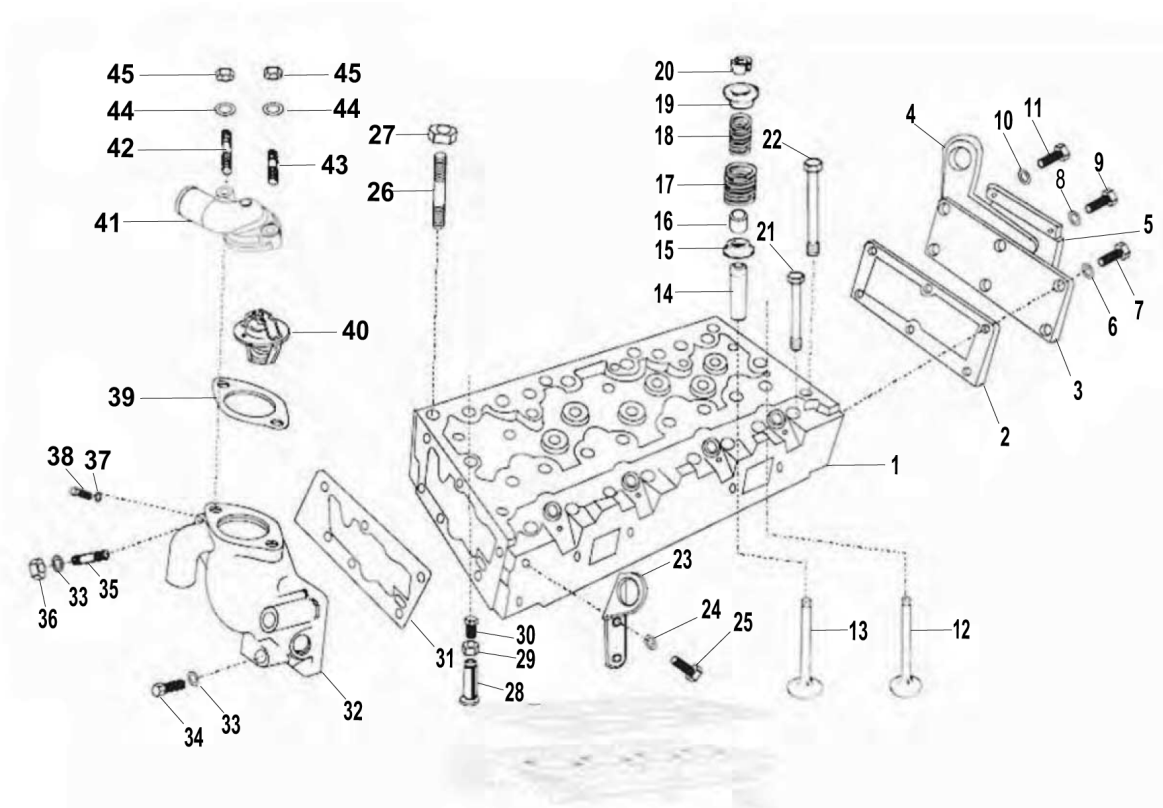

CYLINDER HEAD (G30/36)

Item	Part Number	Description	Remarks	Serial Number	Qty
1	46717051	HEAD CYLINDER	w/Ref. 1-38		1
2	46703603	JOINT CYLINDER			1
3	46722685	PLATE CYLINDER			1
4	46713988	PLATE ENGINE			1
5	46713990	BRACKET ENGINE			1
6	46703632	SPRING WASHER			2
7	46722757	SETSCREW			2
8	46705661	WASHER SPRING			1
9	46714016	SETSCREW ENGINE			1
10	46703632	SPRING WASHER			4
11	46722758	SETSCREW			4
12	46722802	VALVE INLET			4
13	46722795	VALVE EXHAUST			4
14	46717047	GUIDE VALVE			8
15	46722821	WASHER-INLET & EXHAUST VALVE SPRING			8
16	46722729	SEAL INLET			8
17	46722720	SEAL INLET			8
18	46722727	SEAL INLET			8
19	46716788	CAP VALVE SPRING			8
20	46716818	CUTTER VALVE SPRING			8
21	46722763	SETSCREW			8
22	46722759	SETSCREW			11
23	46713989	PLATE ENGINE			1
24	46705661	WASHER SPRING			2
25	46714017	SETSCREW ENGINE FRONT LIFTING PLATE			2
26	46722782	STUD CYLINDER			4
27	46722664	NUT CONNECTING			4
28	46722788	TAPPET			8
29	46717154	LOCKNUT			8
30	NAP	SCREW-HEX HD			8
31	46705466	JOINT WATER OUTLET BODY			1

 
CYLINDER HEAD (G30/36)

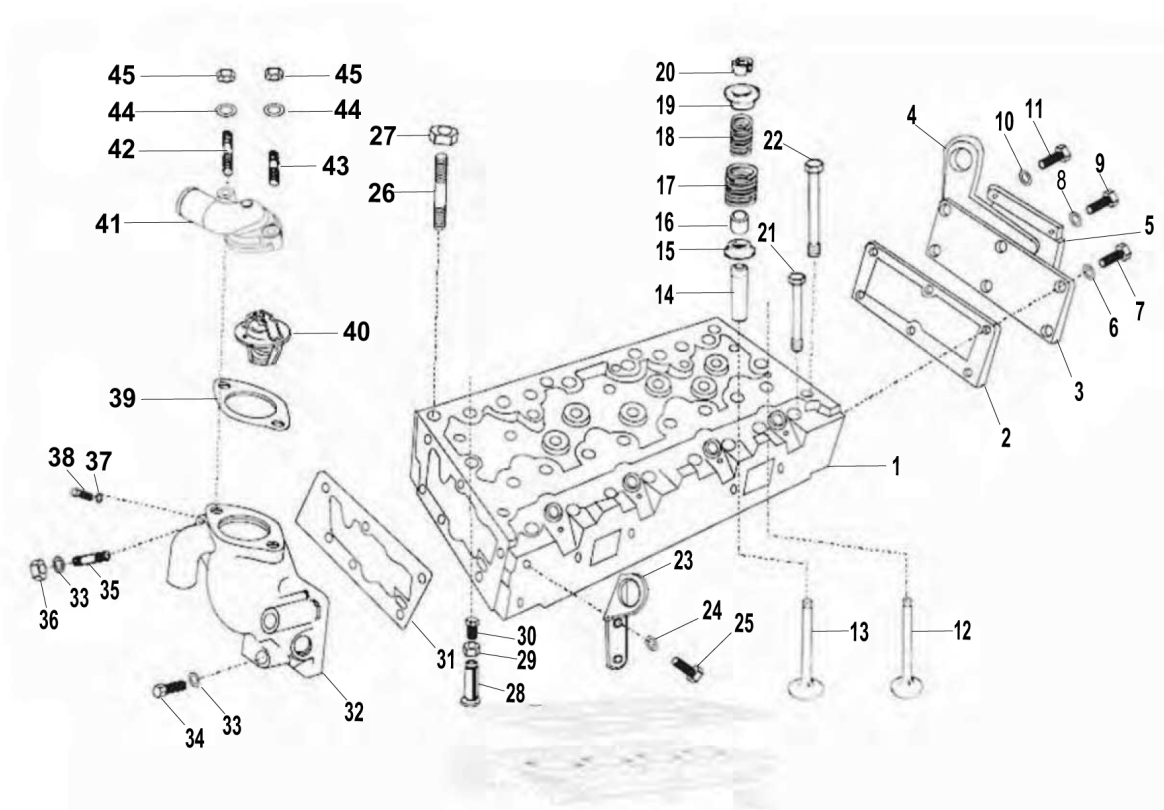

CYLINDER HEAD (G30/36)	
---------------------------	--

[illegible]

 
CYLINDER HEAD COVER (G30/36)

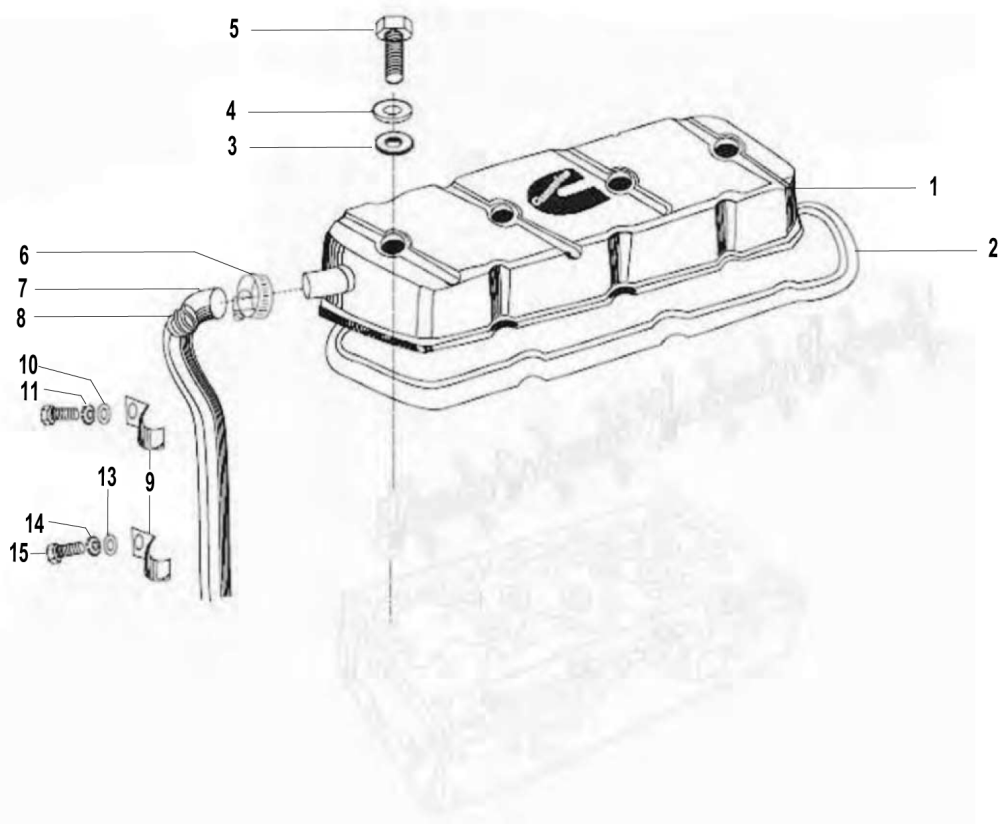

CYLINDER HEAD COVER (G30/36)	
---------------------------------	--

[illegible]

 
**FAN AND FAN DRIVE
(G30/36)**

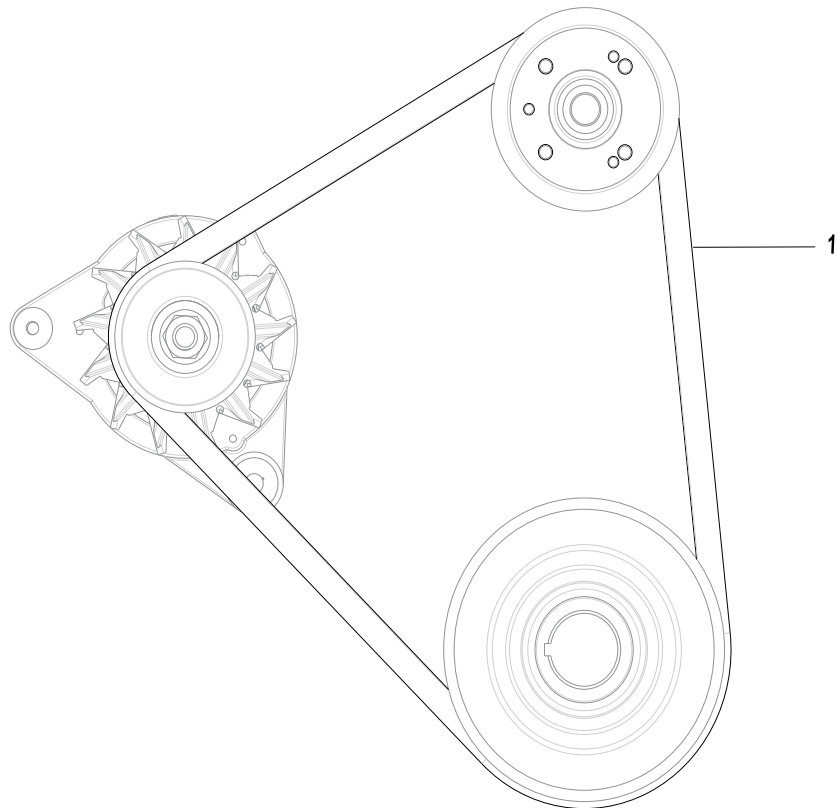

**FAN AND FAN DRIVE
(G30/36)**

[illegible]


 
FLYWHEEL, FLYWHEEL HSG. AND REAR END OIL SEAL (G30/36)

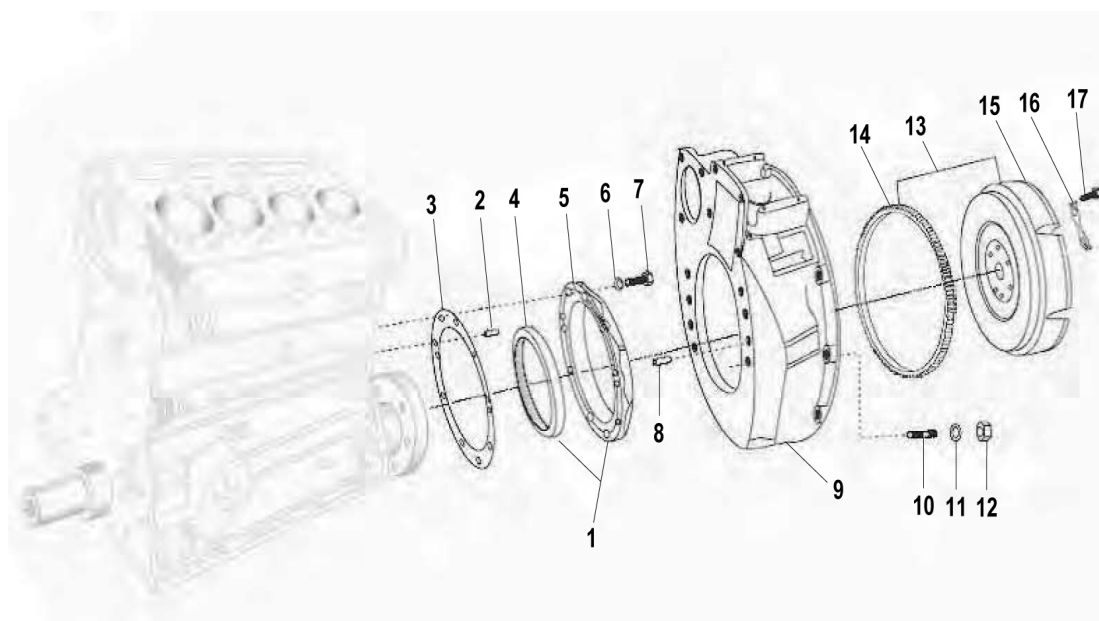

**FLYWHEEL, FLYWHEEL HSG. AND REAR END OIL SEAL
(G30/36)**

[illegible]

 
 
FUEL INJECTION EQUIPMENT (G30/36)

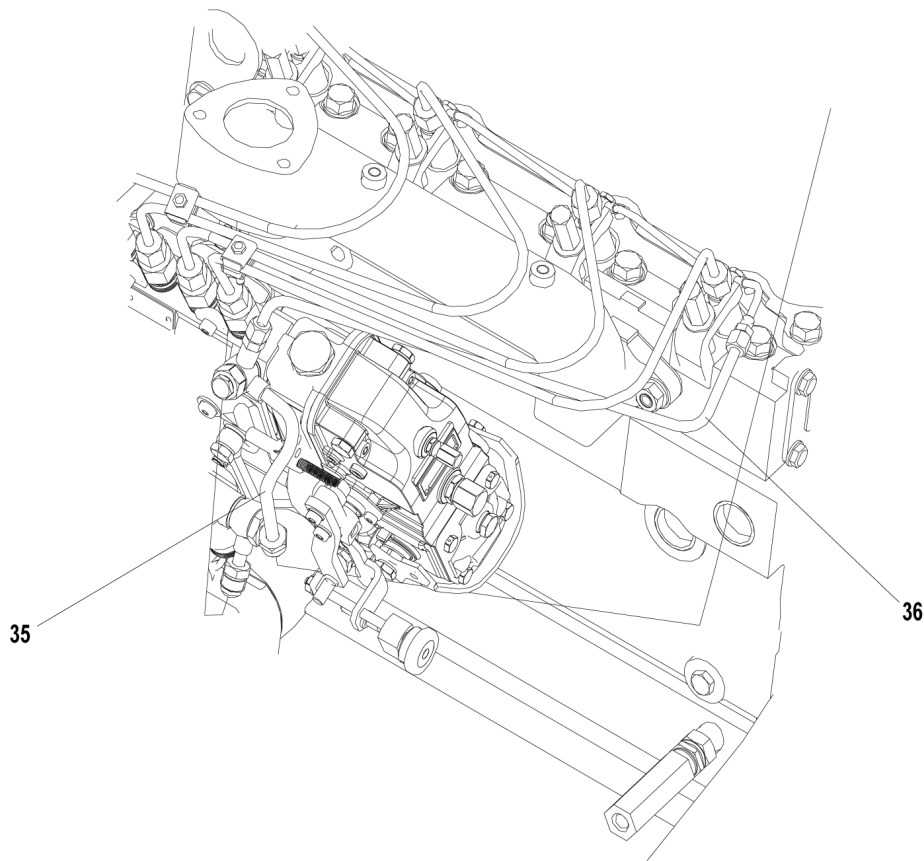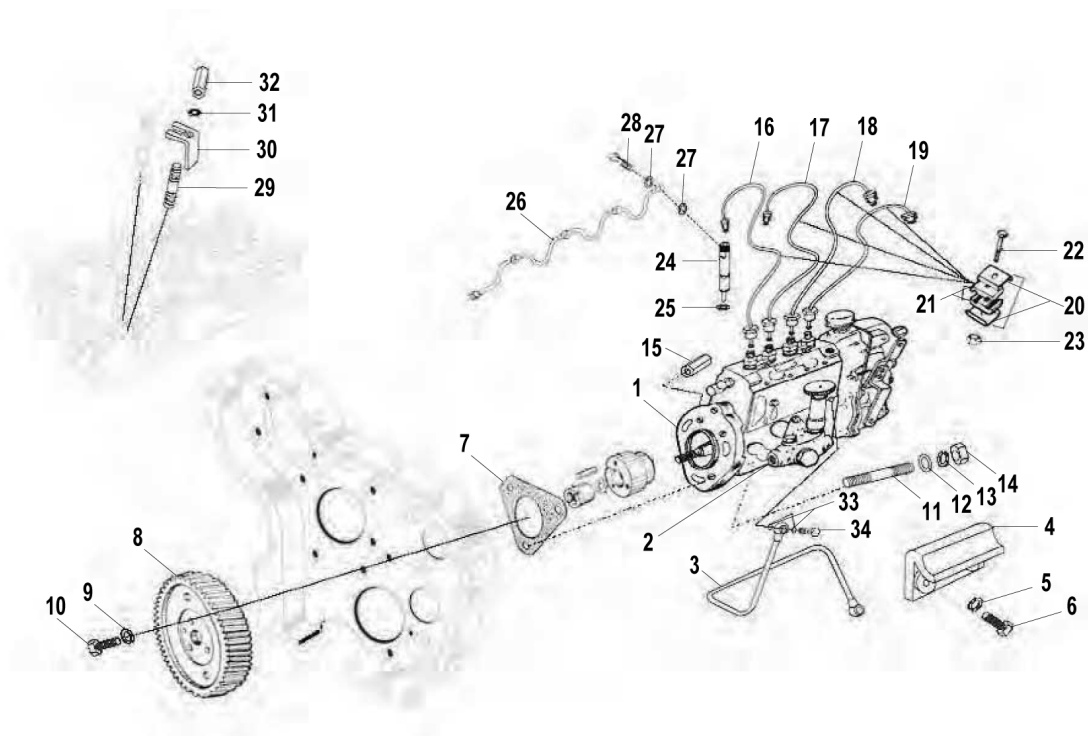

FUEL INJECTION EQUIPMENT (G30/36)

Item	Part Number	Description	Remarks	Serial Number	Qty
1	46709349	FUEL INJECTION PUMP	G30		1
1	46717020	FUEL INJECTION PUMP	G36		1
2	46705479	FEED PUMP			1
3	46717145	LINE FUEL			1
4	46716779	BRACKET			1
5	46705661	WASHER SPRING			2
6	46709476	SETSCREW			2
7	46705622	JOINT FUEL PUMP			1
8	46717044	GEAR FUEL PUMP DRIVE			1
9	46703632	SPRING WASHER			3
10	46714015	BANJO BOLT			3
11	46703631	STUD			3
12	46705504	WASHER PLAIN			3
13	46703632	SPRING WASHER			3
14	46703633	NUT			2
15	46722662	NUT			1
16	46713872	PIPE FUEL			1
17	46713873	PIPE FUEL			1
18	46713874	PIPE FUEL			1
19	46713875	PIPE FUEL			1
20	46716880	PLATE			6
21	46716882	DAMPER			6
22	46722719	SCREW			3
23	46722666	NUT			3
24	46705621	NOZZLE INJECTOR			4
25	46705642	WASHER-NOZZLE SEATING			4
26	46713871	LINE FUEL			1
27	46722818	WASHER			8
28	46716757	BOLT BANJO			4
29	46739469	STUD			4
30	46716776	BRACKET			4

  
FUEL INJECTION EQUIPMENT (G30/36)

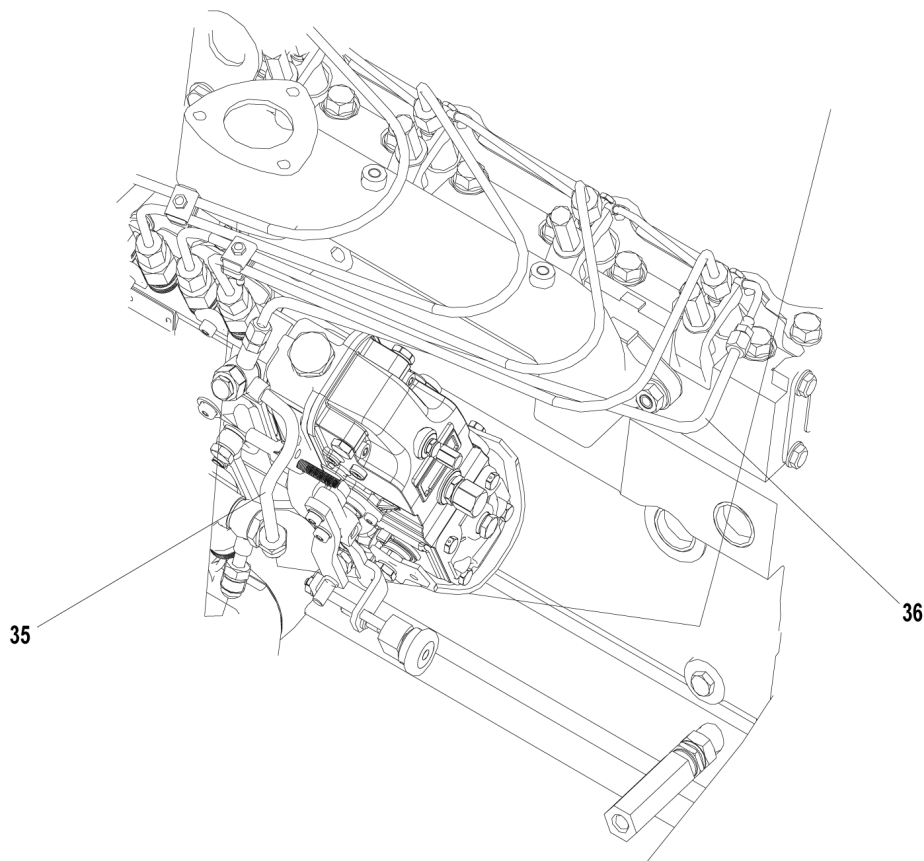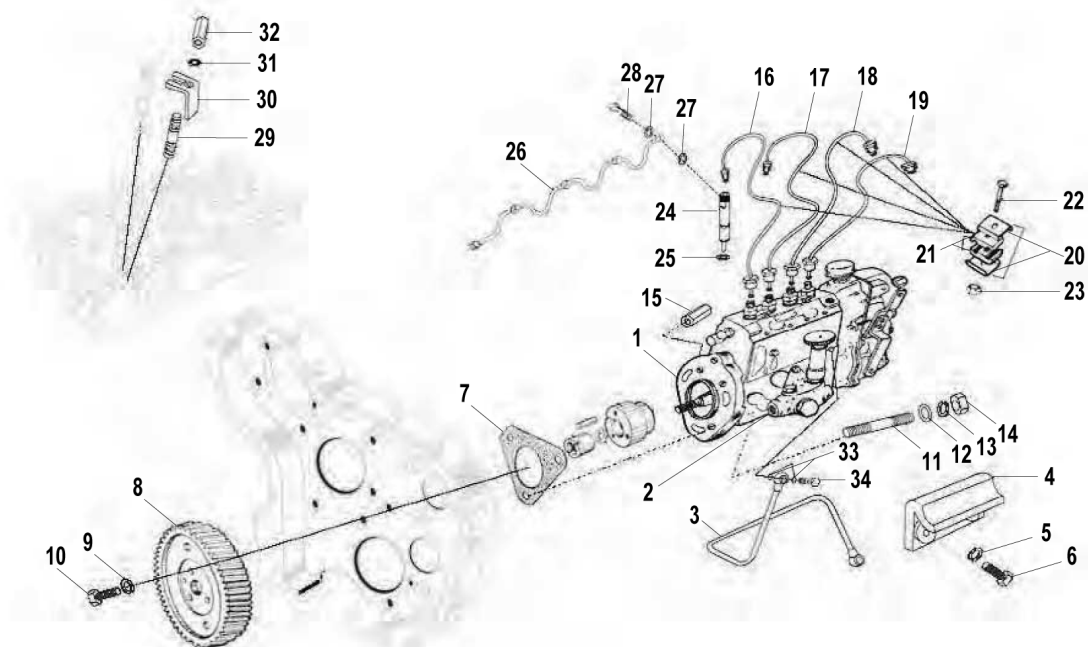

FUEL INJECTION EQUIPMENT (G30/36)	
--------------------------------------	--

[illegible]

 
JOINTS AND GASKETS (G30/36)

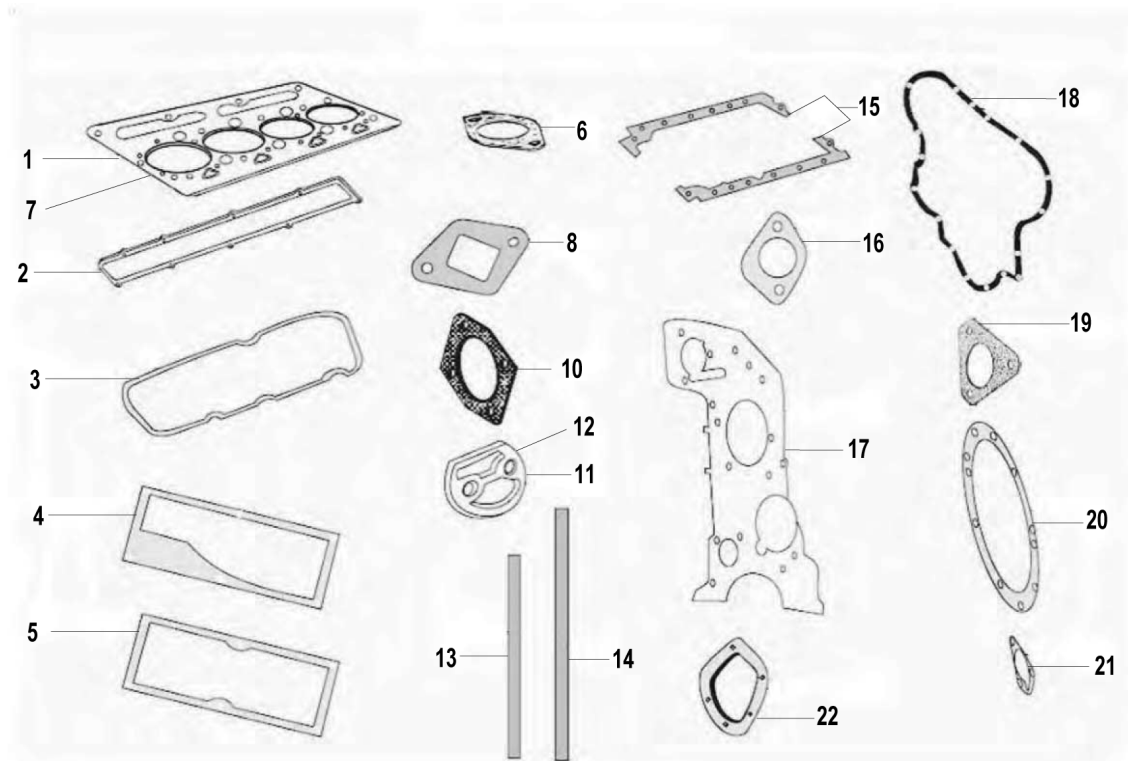

JOINTS AND GASKETS (G30/36)

Item	Part Number	Description	Remarks	Serial Number	Qty
1	46703602	GASKET CYLINDER HEAD			1
2	46703599	JOINT INDUCTION MANIFOLD			1
3	46703600	JOINT CYLINDER HEAD COVER			1
4	46703601	JOINT WATER OUTLET BODY			1
5	46705467	GASKET CYLINDER HEAD			1
6	46703603	GASKET EXHAUST			1
7	46705469	GASKET CYLINDER HEAD			1
8	46703605	GASKET EXHAUST			1
9	46705628	GASKET EXHAUST			2
10	46705619	GASKET WATER PUMP			1
11	46705604	GASKET OIL FILTER			1
12	46703609	JOINT LUB OIL FILLER			1
13	46703610	JOINT SUMP			1
14	46703611	JOINT SUMP			1
15	46705598	GASKET CRANKCASE			1
16	46703613	JOINT CYLINDER BLOCK			1
17	46703617	JOINT TIMING CASE			1
18	46703618	JOINT FRONT COVER			1
19	46703602	JOINT FUEL PUMP			1
20	46705468	GASKET CYLINDER HEAD			1
21	46703620	JOINT TACHOMETER BLANKING PLATE			1
22	46705484	GASKET COVER			1
#	46717032	GASKET KIT MINOR	w/Ref. 1-9		1
#	46705583	GASKET KIT MAJOR	w/Ref. 1-22		1

 
**LUBRICATING OIL FILTER
(G30/36)**

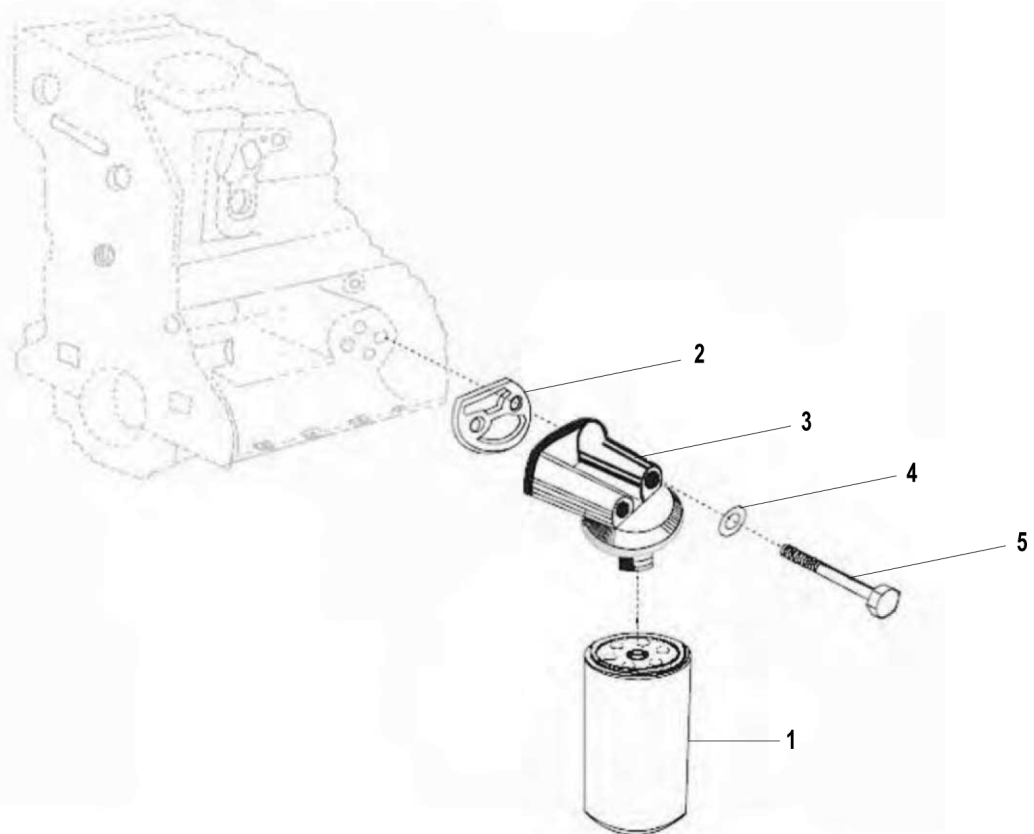

**LUBRICATING OIL FILTER
(G30/36)**

[illegible]

 
LUBRICATING OIL PUMP (G30/36)

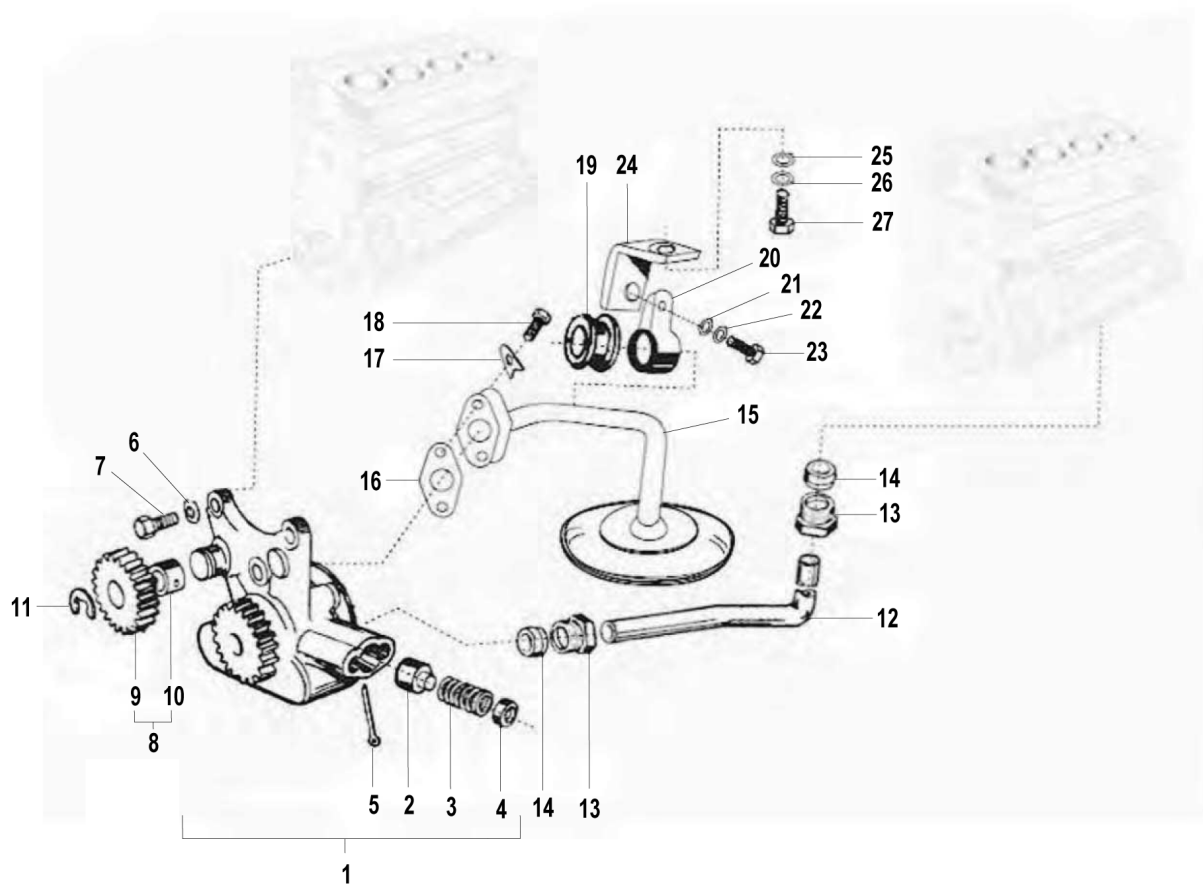

LUBRICATING OIL PUMP (G30/36)

Item	Part Number	Description	Remarks	Serial Number	Qty
1	46739471	PUMP OIL	w/Ref. 2-5		1
2	NAP	PLUNGER INTERLOCK			1
3	NAP	SPRING VALVE			1
4	NAP	RETAINER SPRING			1
5	NAP	PIN SPRING			1
6	46703632	SPRING WASHER			3
7	46722747	SETSCREW			3
8	46717041	GEAR ASSEMBLY	w/Ref. 9, 10		1
9	NAP	GEAR SPUR			1
10	46716783	BUSHING IDLER			1
11	46716799	CIRCLIP			1
12	46714070	PIPE			1
13	46717043	GLAND NUT			2
14	46722668	OLIVE			2
15	46716987	PIPE			1
16	46717031	JOINT LUB OIL			1
17	46714082	WASHER TAB			2
18	46722749	SETSCREW			2
19	46716782	BUSHING			1
20	46716798	CLIP TUBE			1
21	46722829	WASHER SETSCREW			1
22	46722828	WASHER SPRING			1
23	46722754	SETSCREW			1
24	46713994	PLATE SUPPORT			1
25	46716475	WASHER SEALING			1
26	46722828	WASHER SPRING			1
27	46722754	SETSCREW			1

 
LUBRICATING OIL SUMP **(G30/36)**

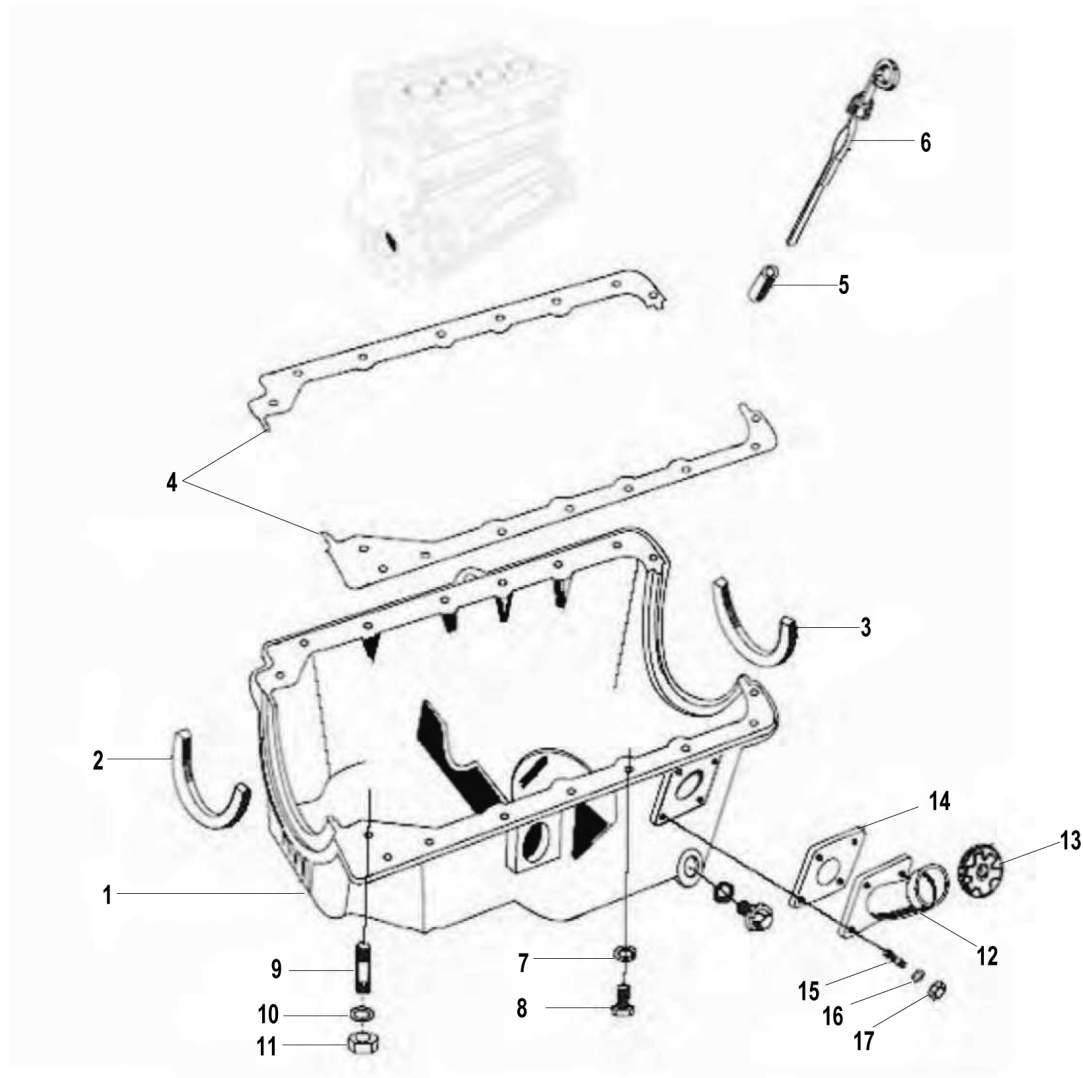

**LUBRICATING OIL SUMP
(G30/36)**

[illegible]

 
**MOUNTING ENGINE SUPPORT
(G30/36)**

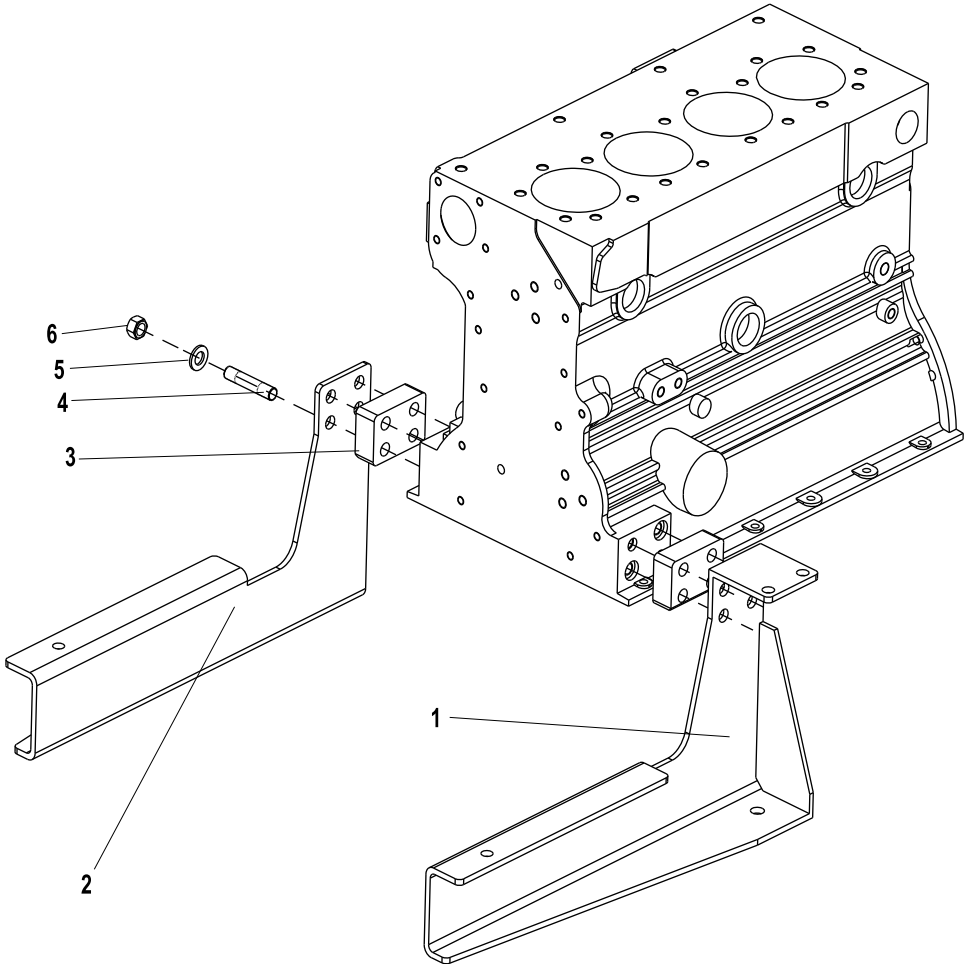

MOUNTING ENGINE SUPPORT (G30/36)

[illegible]

 
ROCKER SHAFT ASSEMBLY (G30/36)

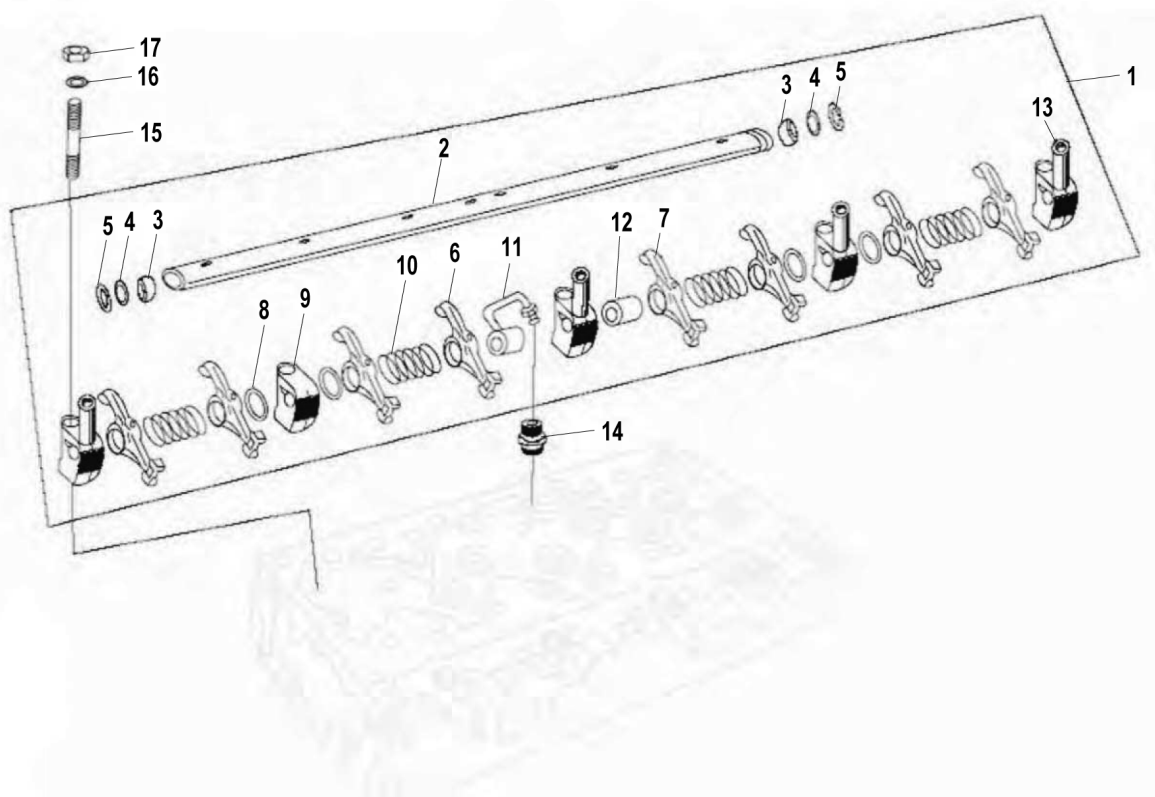

**ROCKER SHAFT ASSEMBLY
(G30/36)**

[illegible]

 
STARTER MOTOR (G30/36)

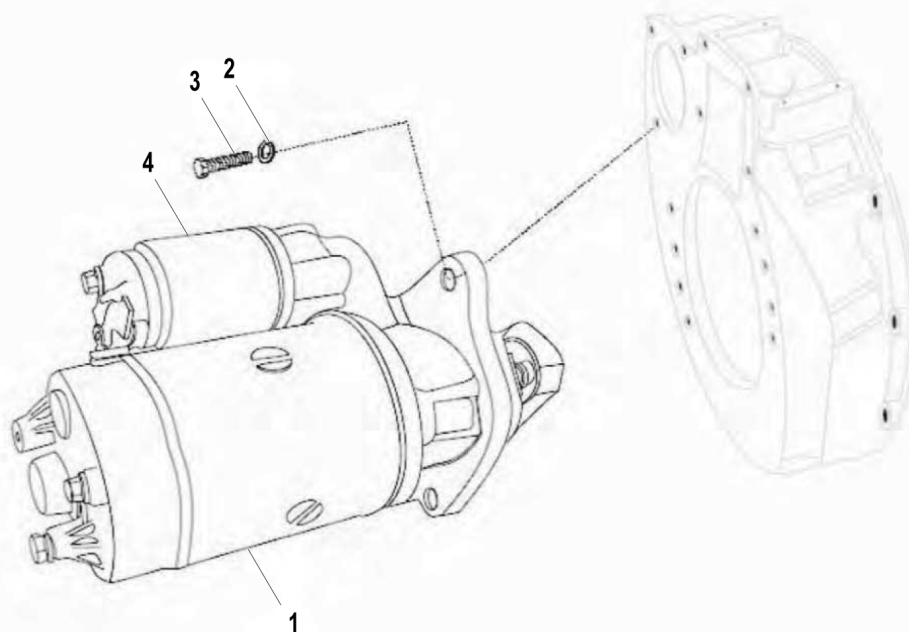

STARTER MOTOR (G30/36)

[illegible]

 
TIMING GEAR & CAMSHAFT (G30/36)

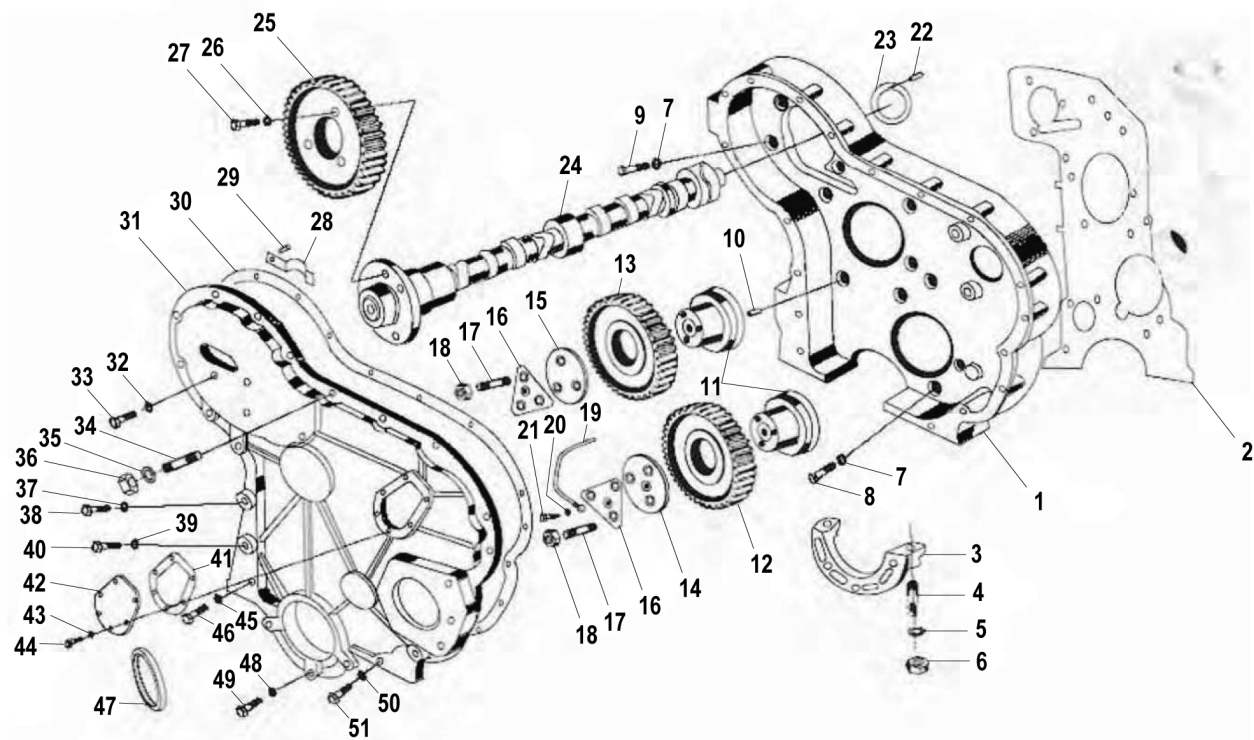

TIMING GEAR & CAMSHAFT (G30/36)

Item	Part Number	Description	Remarks	Serial Number	Qty
1	46717039	GEARCASE			1
2	46705489	JOINT TIMING CASE			1
3	46716623	COVER			1
4	46714039	STUD			2
5	46703632	SPRING WASHER			2
6	46703633	NUT			2
7	46703632	SPRING WASHER			14
8	46722749	SETSCREW			10
9	46722747	SETSCREW			4
10	46716886	DOWEL			2
11	46717106	HUB IDLER			2
12	46709616	GEAR IDLER LOWER			1
13	46709618	GEAR IDLER UPPER			1
14	46713987	PLATE IDLER			1
15	46713986	PLATE IDLER			1
16	46714083	WASHER			2
17	46714035	STUD			6
18	46705667	NUT			6
19	46714068	TUBE OIL			1
20	46722818	WASHER			2
21	46714015	BANJO BOLT			1
22	46722674	PIN THRUST			1
23	46722822	WASHER			1
24	46709487	CAMSHAFT			1
25	46709619	GEAR CAMSHAFT			1
26	46703632	SPRING WASHER			3
27	46722758	SETSCREW			3
28	46716773	BRACKET TUBE			1
29	46739477	RIVET			1
30	46705599	JOINT FRONT COVER			1
31	46716634	COVER, GEARCASE			1

 
TIMING GEAR & CAMSHAFT (G30/36)

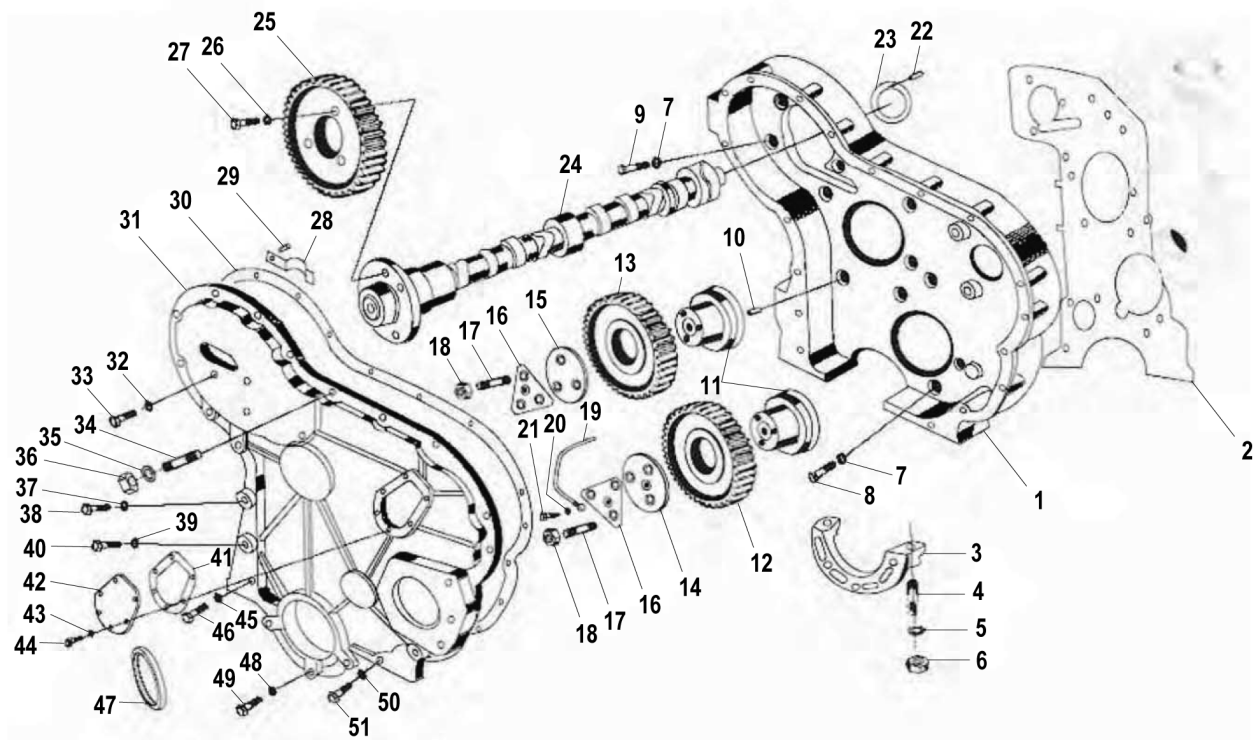

TIMING GEAR & CAMSHAFT (G30/36)	
------------------------------------	--

[illegible]


 
**WATER PUMP ASSEMBLY
(G30/36)**

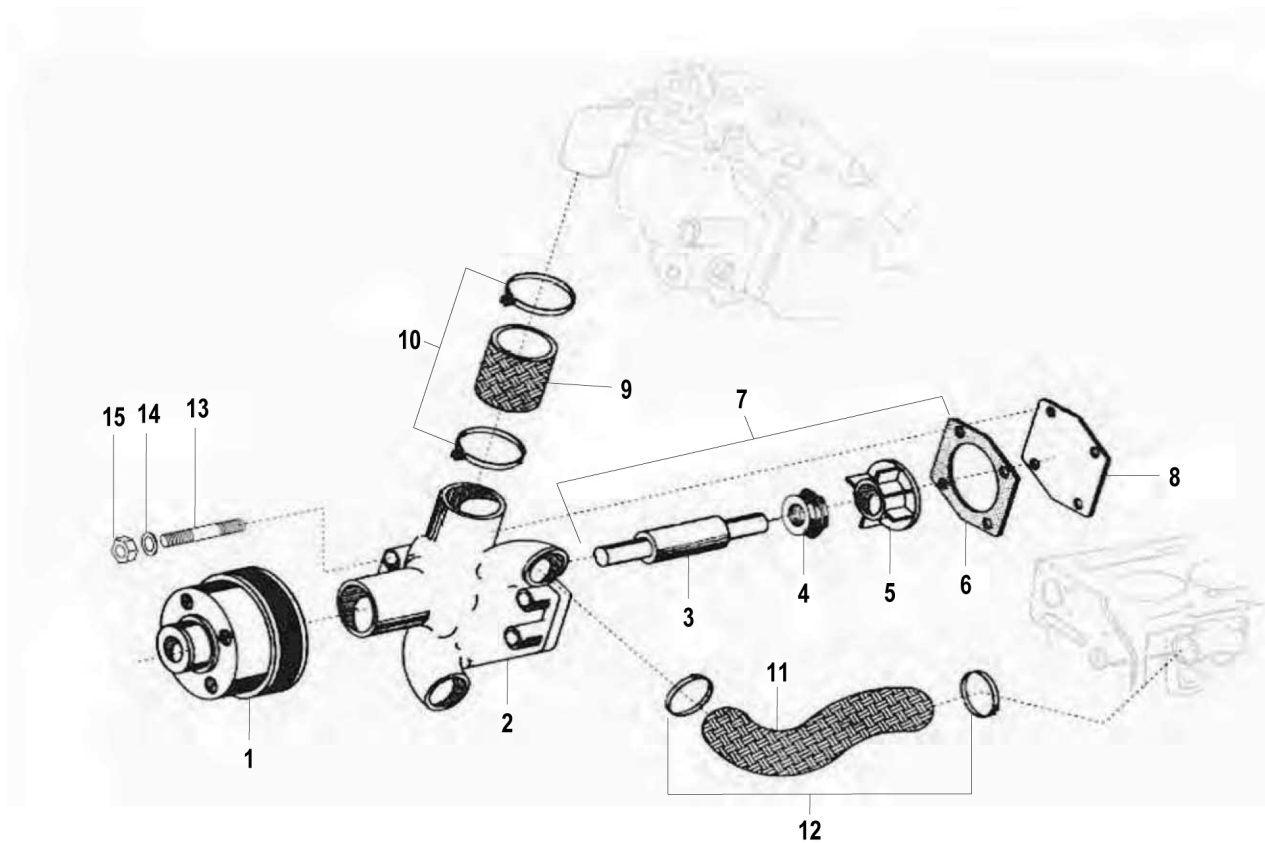

WATER PUMP ASSEMBLY
(G30/36)

[illegible]

  
AIR CLEANER INSTALLATION (G30/36)

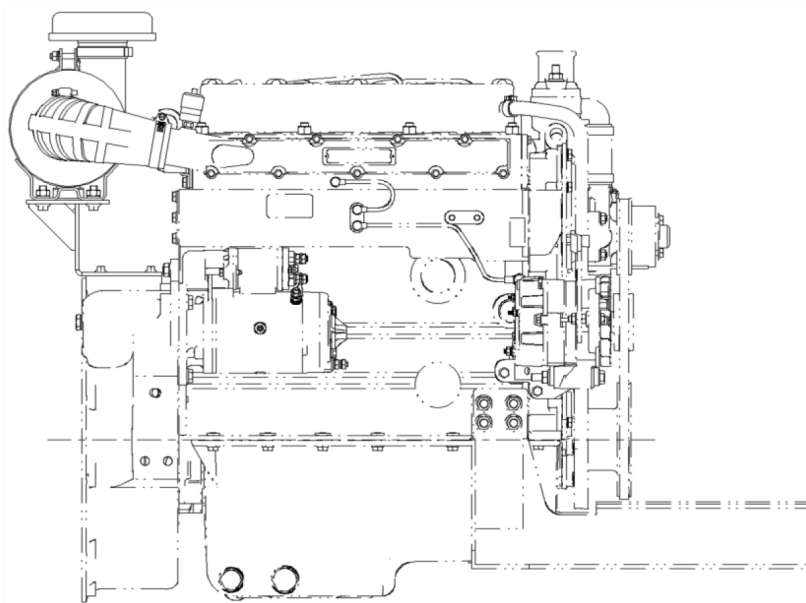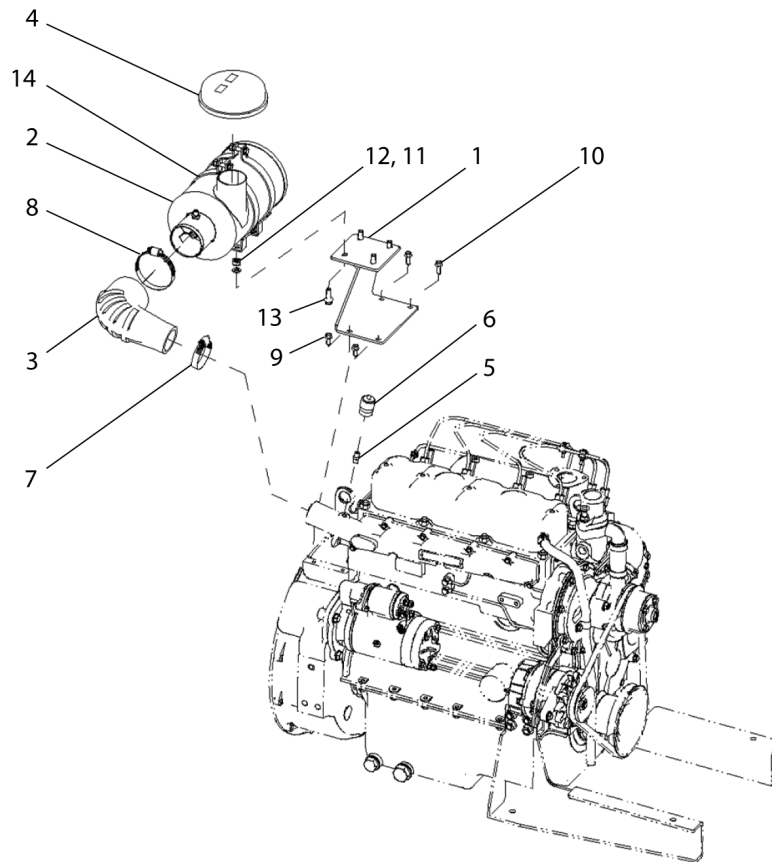

AIR CLEANER INSTALLATION (G30/36)

[illegible]

 
COOLING SYSTEM INSTALLATION
(G30/36)

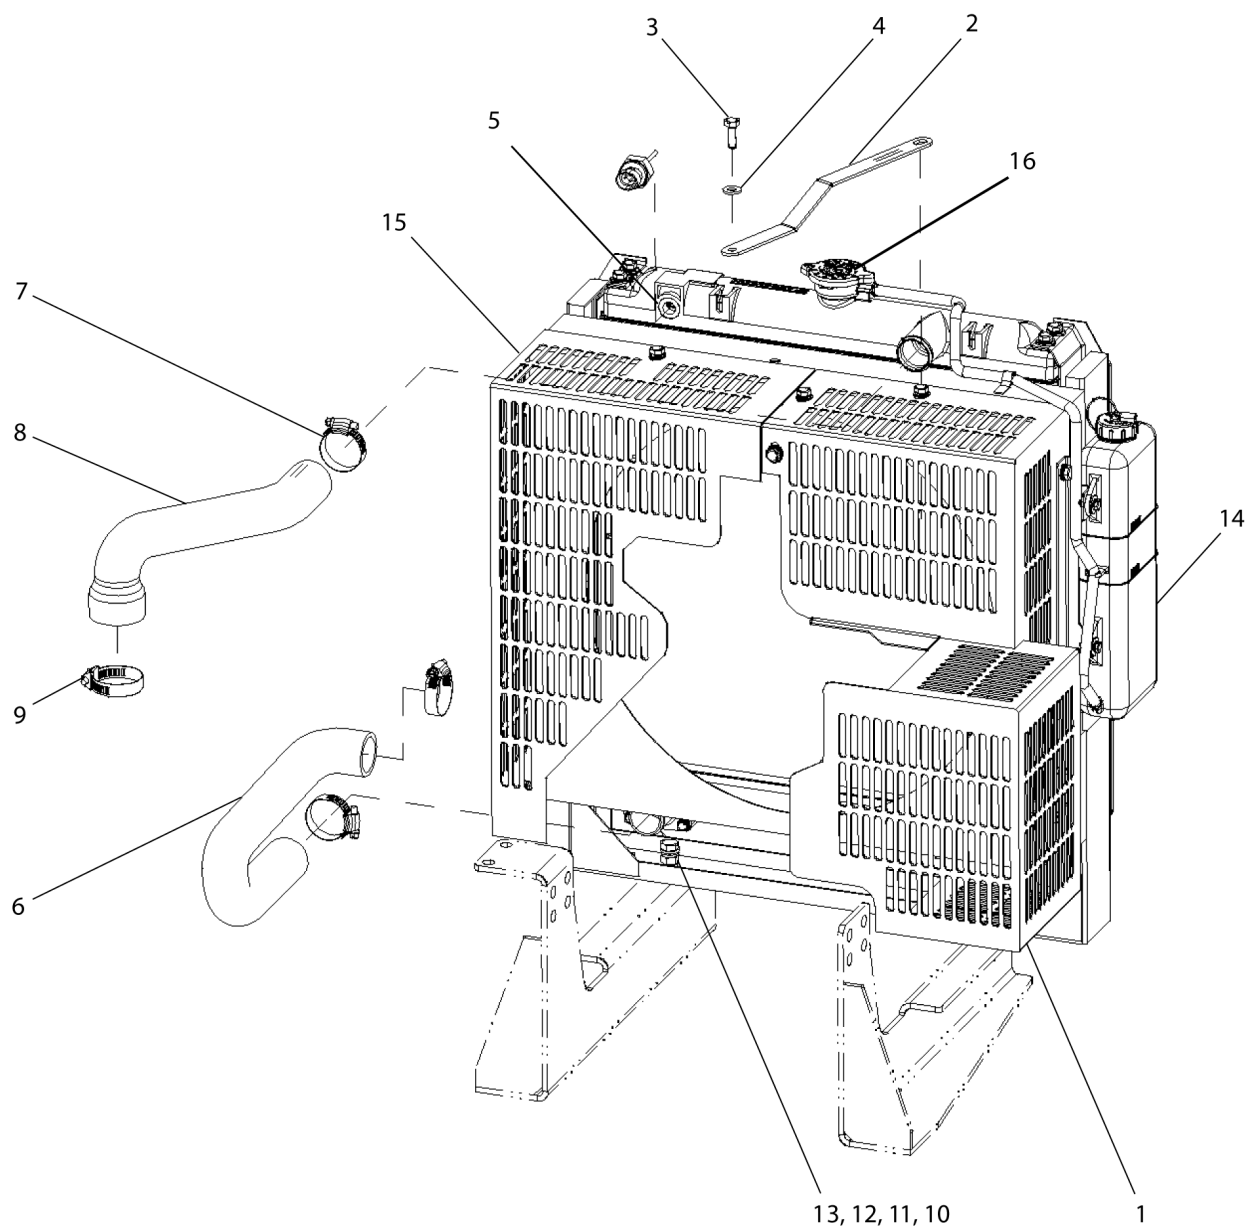

COOLING SYSTEM INSTALLATION (G30/36)

[illegible]


 
ENGINE INSTALLATION (G30/36)

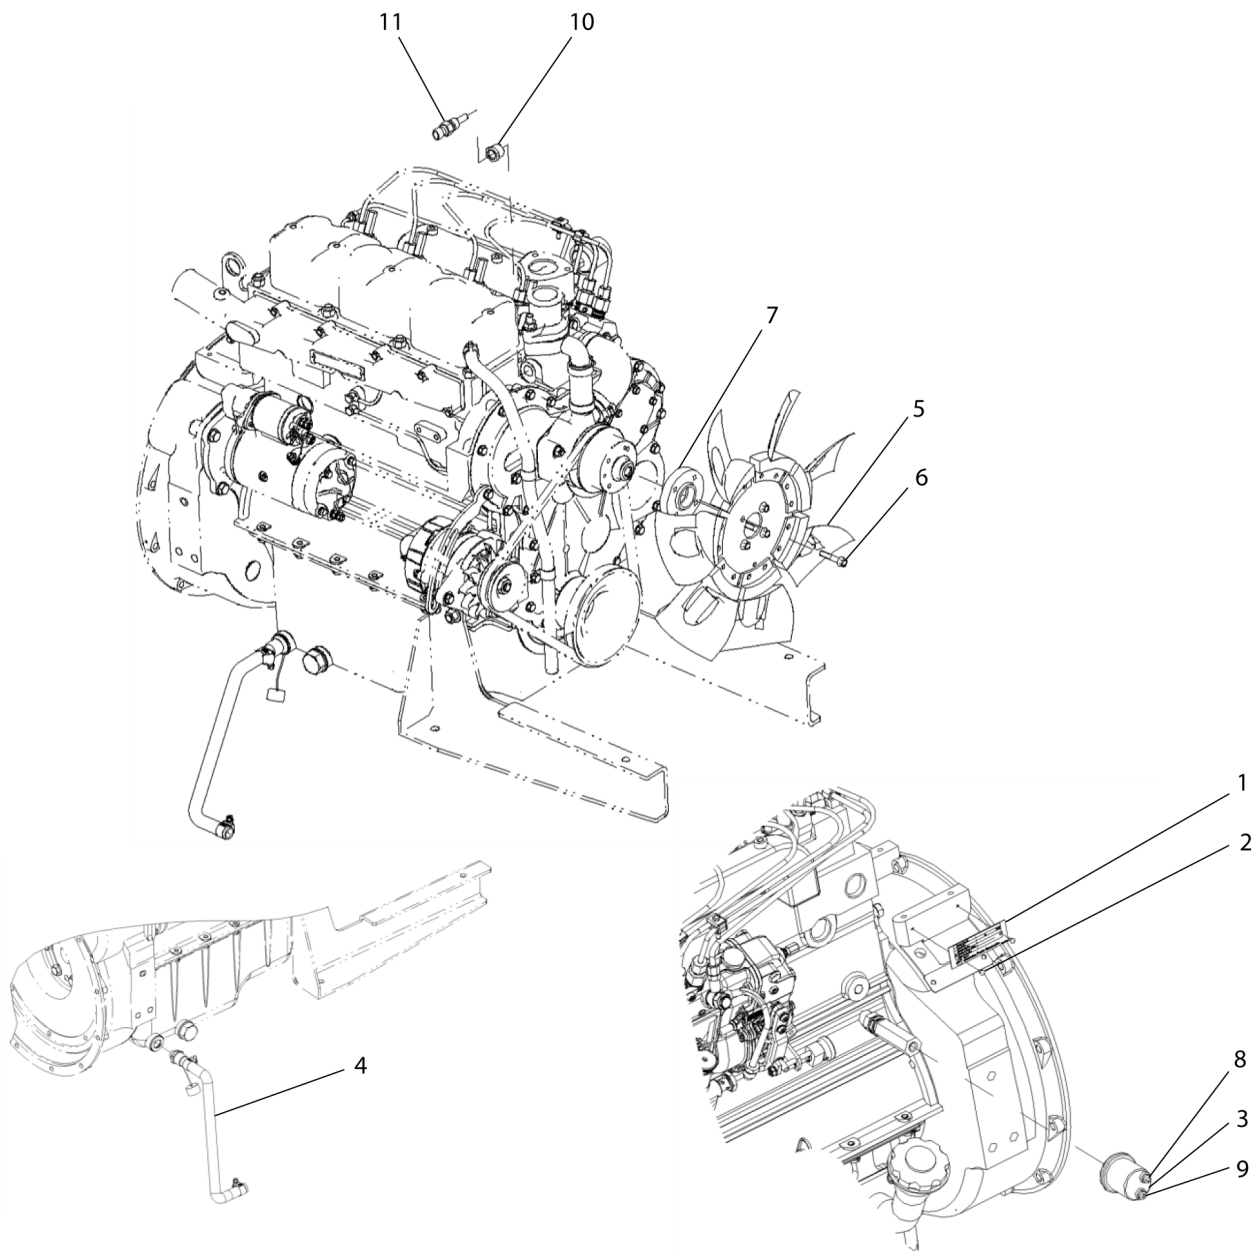

ENGINE INSTALLATION (G30/36)

[illegible]

  
EXHAUST INSTALLATION (G30/36)

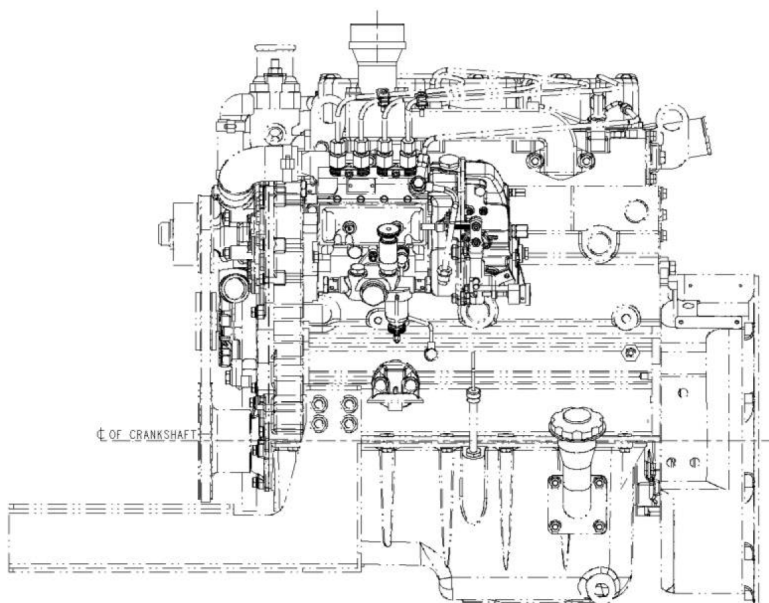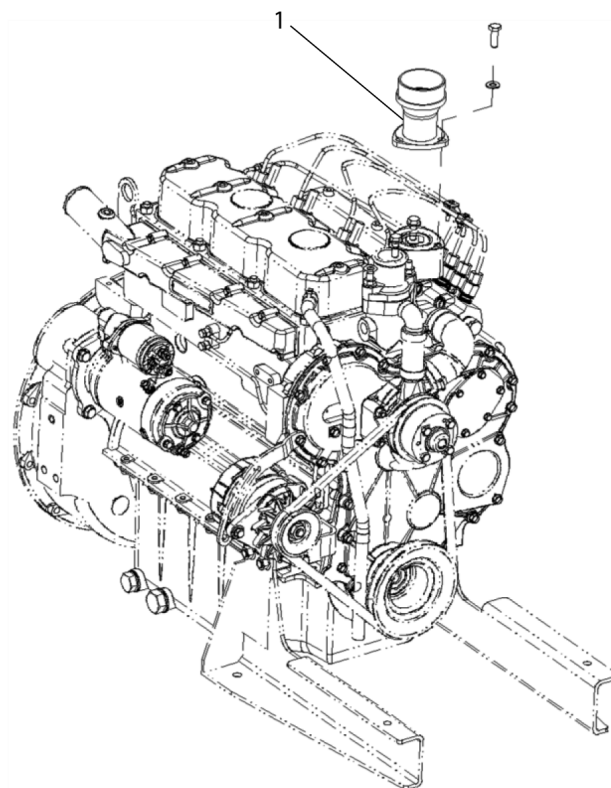

EXHAUST INSTALLATION (G30/36)

[illegible]











 
FUEL SYSTEM INSTALLATION (G30/36)

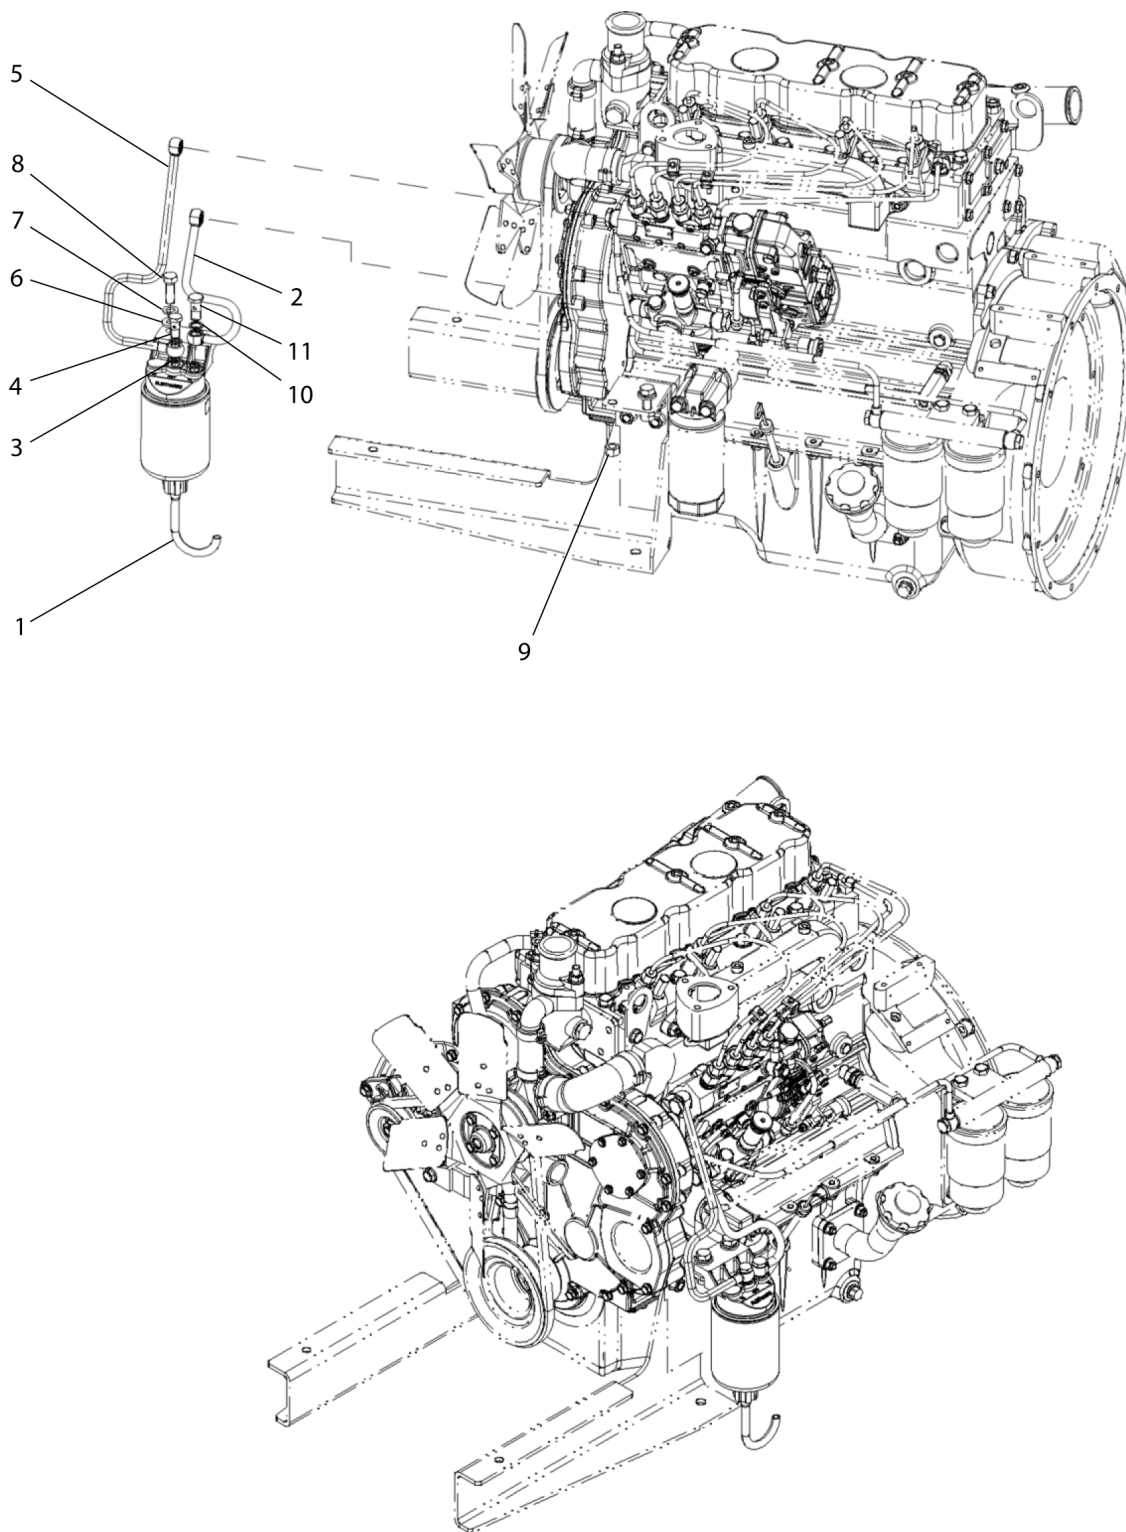

FUEL SYSTEM INSTALLATION (G30/36)
















[illegible]

           CLASS 1 MAINTENANCE AND REPAIR ITEMS
(G20/24)

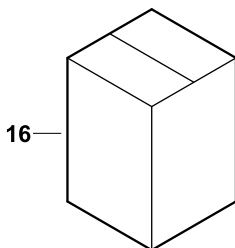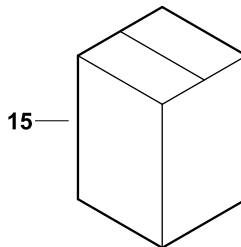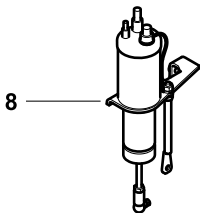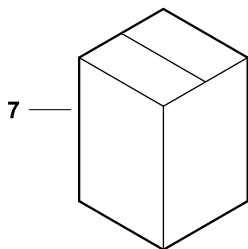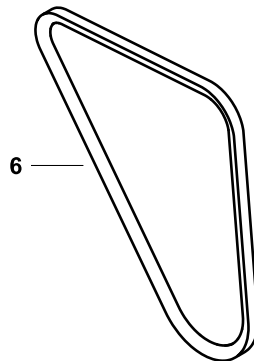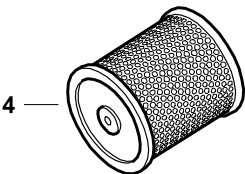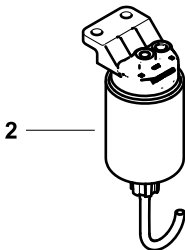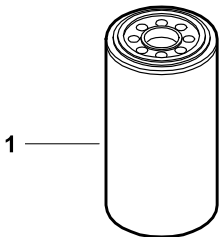

[illegible][illegible]

      
 
 
 
 
 
 
 
 
 
CLASS 2 EXTENDED DOWNTIME PREVENTION (G20/24)

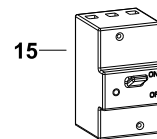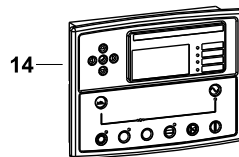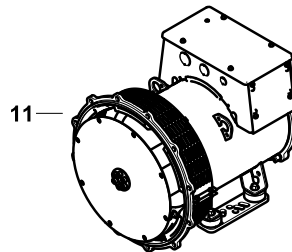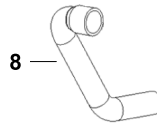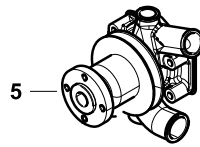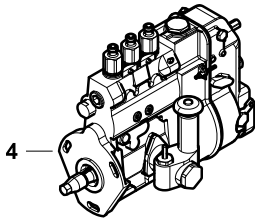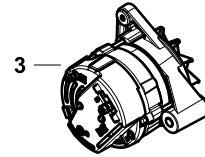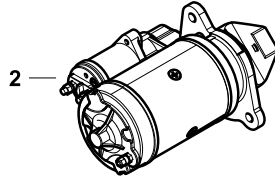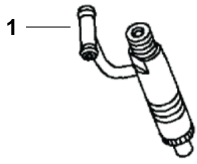

**CLASS 2 EXTENDED DOWNTIME PREVENTION
(G20/24)**

Item	Part Number	Description	Remarks	Serial Number	Qty
1	46709378	NOZZLE & HOLDER	G20		1
1	46722094	NOZZLE & HOLDER	G24		1
2	46703592	MOTOR STARTER			1
3	46703595	ALTERNATOR			1
4	46703589	FUEL INJECTION PUMP	G20		1
4	46717019	FUEL INJECTION PUMP	G24		1
5	46703629	WATER PUMP ASSEMBLY			1
6	46703639	HOSE BYPASS CONNECTION TO WATER PUMP BODY			1
7	46703641	HOSE WATER PUMP OUTLET TO CYLINDER BLOCK WATER INLET			1
8	46703782	HOSE WATER			1
9	46703783	HOSE WATER			1
10	46703767	CLAMP HOSE			6
10	46703787	CLAMP HOSE			6
10	46703640	CLIP WATER CONNECTION HOSE			6
10	46703642	CLIP WATER CONNECTION HOSE			6
11	46706646	ALTERNATOR S0L2-G1			1
12	46703791	KIT, AVR AS540			1
13	46703794	KIT, RECTIFIER SERVICE			1
14	46706537	CONTROLLER, DIGITAL DSE 6010			1
15	46716439	CIRCUIT BREAKER (MCCB)	32A TP		1
15	46728728	CIRCUIT BREAKER (MCCB),	65A TP (220/127V OPTION ONLY) G24		1
16	46706556	FUEL LEVEL GAUGE			1
17	46706615	HEAVY DUTY SOLENOID 12V			1
18	46719987	RELAY 12V DC 40A	FOR FUEL		1
19	46706563	FUSE CYLINDRICAL 10X38 20A			1
19	46706564	FUSE CYLINDRICAL 10X38 2A			1
20	46706643	RELAY 12VDC			1

          
**CLASS 1 MAINTENANCE AND REPAIR ITEMS
(G30/36)**

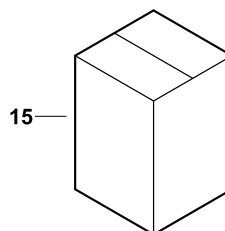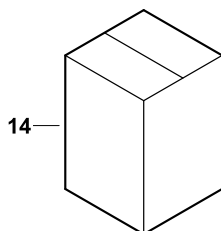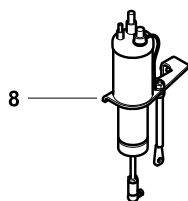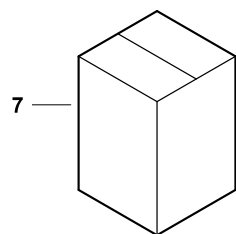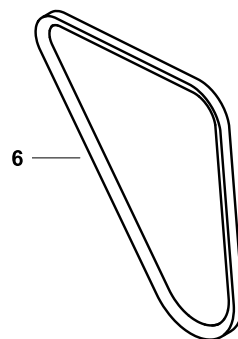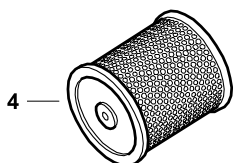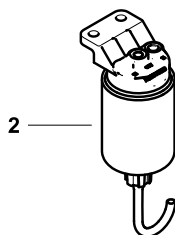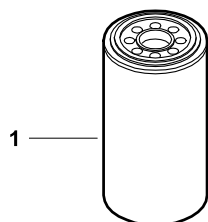

CLASS 1 MAINTENANCE AND REPAIR ITEMS (G30/36)	
1000	1000
1001	1001
1002	1002
1003	1003
1004	1004
1005	1005
1006	1006
1007	1007
1008	1008
1009	1009
1010	1010
1011	1011
1012	1012
1013	1013
1014	1014
1015	1015
1016	1016
1017	1017
1018	1018
1019	1019
1020	1020
1021	1021
1022	1022
1023	1023
1024	1024
1025	1025
1026	1026
1027	1027
1028	1028
1029	1029
1030	1030
1031	1031
1032	1032
1033	1033
1034	1034
1035	1035
1036	1036
1037	1037
1038	1038
1039	1039
1040	1040
1041	1041
1042	1042
1043	1043
1044	1044
1045	1045
1046	1046
1047	1047
1048	1048
1049	1049
1050	1050
1051	1051
1052	1052
1053	1053
1054	1054
1055	1055
1056	1056
1057	1057
1058	1058
1059	1059
1060	1060
1061	1061
1062	1062
1063	1063
1064	1064
1065	1065
1066	1066
1067	1067
1068	1068
1069	1069
1070	1070
1071	1071
1072	1072
1073	1073
1074	1074
1075	1075
1076	1076
1077	1077
1078	1078
1079	1079
1080	1080
1081	1081
1082	1082
1083	1083
1084	1084
1085	1085
1086	1086
1087	1087
1088	1088
1089	1089
1090	1090
1091	1091
1092	1092
1093	1093
1094	1094
1095	1095
1096	1096
1097	1097
1098	1098
1099	1099

[illegible]

 CLASS 2 EXTENDED DOWNTIME PREVENTION (G30/36)

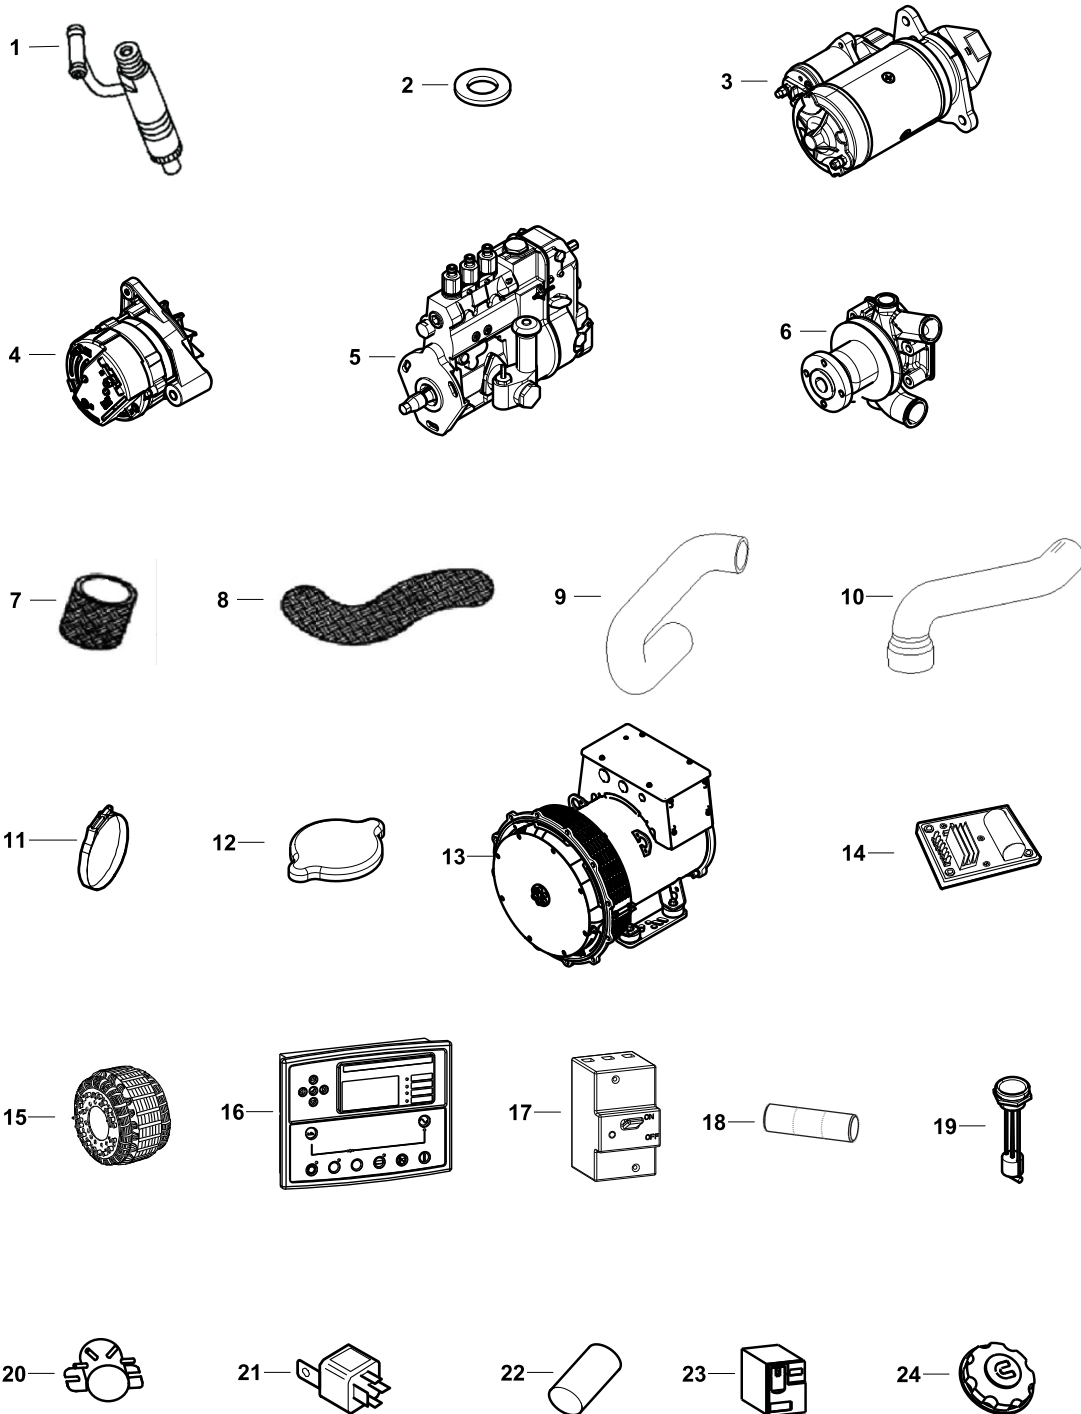

**CLASS 2 EXTENDED DOWNTIME PREVENTION
(G30/36)**

Item	Part Number	Description	Remarks	Serial Number	Qty
1	46705621	NOZZLE & HOLDER			1
2	46705642	WASHER NOZZLE SEATING			1
3	46703592	MOTOR STARTER			1
4	46703595	ALTERNATOR			1
5	46709349	FUEL INJECTION PUMP	G30		1
5	46717020	FUEL INJECTION PUMP	G36		1
6	46705620	WATER PUMP ASSEMBLY			1
7	46705641	HOSE BYPASS CONNECTION TO WATER PUMP BODY			1
8	46705640	HOSE WATER PUMP OUTLET TO CYLINDER BLOCK WATER INLET			1
9	46705498	HOSE WATER			1
10	46705492	HOSE WATER			1
11	46703767	CLAMP HOSE			6
11	46703640	CLIP WATER CONNECTION HOSE			6
11	46703642	CLIP WATER CONNECTION HOSE			6
12	46705471	PRESSURE CAP			1
13	46706648	ALTERNATOR S0L2-G1			1
14	46703791	KIT, AVR AS540			1
15	46703794	KIT, RECTIFIER SERVICE			1
16	46706537	CONTROLLER, DIGITAL DSE 6010			1
17	46716440	CIRCUIT BREAKER (MCCB)	50A TP		1
17	46716441	CIRCUIT BREAKER (MCCB)	100A TP (220/127V OPTION ONLY) G36		1
18	46703631	STUD WATER PUMP MOUNTING			1
19	46706556	FUEL LEVEL GAUGE			1
20	46706615	HEAVY DUTY SOLENOID 12V			1
21	46719987	RELAY 12V DC 40A	FOR FUEL		1
22	46706563	FUSE CYLINDRICAL 10X38 20A			1
22	46706564	FUSE CYLINDRICAL 10X38 2A			1
23	46706643	RELAY 12VDC			1
24	46703584	CAP LUB OIL FILLER			1

Intentionally left blank

NUMERICAL INDEX

PART NO.	PAGE	PART NO.	PAGE	PART NO.	PAGE	PART NO.	PAGE
23047566	9	46703627	39	46703784	67	46705641	119, 137
23047582	9	46703628	33,	46703785	67	46705642	43, 97, 137
23047624	9	89, 131, 135		46703786	67, 121	46705646	81
36875565	11, 23	46703629	63, 133	46703787	67, 133	46705648	93, 135
46573859	9	46703630	63	46703788	67	46705652	129
46573860	9	46703631	63,	46703789	67	46705657	125
46573921	9	97, 119, 137		46703791	13,	46705658	27, 81
46656744	9	46703632	33, 37, 41,	17, 133, 137		46705659	49, 103
46703582	53	43, 51, 53, 59, 61, 63,		46703792	13, 17	46705661	25,
46703583	53	81, 85, 87, 91, 95, 97,		46703794	13,	27, 33, 35, 41, 59, 79,	
46703584	53,	105, 107, 115, 117, 119		17, 133, 137		81, 87, 89, 95, 97	
107, 137		46703633	25, 43, 53,	46703798	13, 17	46705663	37,
46703585	49, 103	63, 97, 107, 115, 117,		46703799	73, 125	61, 81, 117	
46703587	49,	119		46703801	75,	46705666	17
71, 103, 131, 135		46703634	63	131, 135		46705667	27,
46703588	49, 103	46703635	63, 119	46705466	87	35, 41, 55, 79, 81, 89,	
46703589	43, 133	46703636	63	46705467	101	95, 111, 115	
46703591	45, 131	46703637	63	46705468	101	46705673	91
46703592	57,	46703638	63	46705469	89, 101	46705676	125
113, 133, 137		46703639	63, 133	46705470	85	46705680	113
46703593	57, 113	46703640	63,	46705471	123, 137	46705691	17
46703594	57, 113	119, 133, 137		46705474	123	46706514	15, 77
46703595	27,	46703641	63, 133	46705479	97, 135	46706517	21
81, 133, 137		46703642	63,	46705480	79	46706518	7
46703596	27, 81, 117	119, 133, 137		46705483	81	46706526	73,
46703597	27	46703645	67	46705484	101, 117	125, 131, 135	
46703598	47, 131	46703647	67	46705485	79	46706536	19
46703599	31, 47, 101	46703650	65, 121	46705489	115	46706537	19,
46703600	25, 47, 101	46703651	65,	46705492	123, 137	133, 137	
46703601	37, 47, 101	121, 131, 135		46705494	121	46706556	133, 137
46703602	33, 47, 101	46703652	65,	46705498	123, 137	46706560	19
46703603	33,	121, 131, 135		46705501	81	46706563	19,
47, 87, 101		46703653	65, 121	46705502	125	133, 137	
46703604	47, 59	46703654	65	46705503	119	46706564	19,
46703605	47, 53, 101	46703655	65, 123	46705504	25, 37, 43,	133, 137	
46703606	41, 47, 95	46703656	65, 121	81, 85, 91, 97, 117		46706613	7
46703607	47	46703658	69	46705512	27, 35, 81	46706615	133, 137
46703608	47, 53, 107	46703659	69	46705519	125	46706618	19
46703609	47, 63, 101	46703660	69, 125	46705530	123	46706619	19
46703610	47, 101	46703661	73,	46705546	125	46706621	7
46703611	47, 51, 101	125, 131, 135		46705577	121	46706638	7
46703612	25, 47, 79	46703662	73	46705583	101	46706642	131, 135
46703613	47, 59, 101	46703665	73	46705589	131	46706643	19,
46703617	47,	46703666	73	46705590	135	133, 137	
53, 101, 107		46703767	67,	46705598	101, 107	46706646	11, 133
46703618	47,	123, 133, 137		46705599	115	46706648	15, 137
53, 101, 107		46703770	67, 69, 123	46705604	101	46706649	19
46703619	43, 47	46703771	67	46705608	107	46706653	7
46703620	31,	46703774	65,	46705609	107	46706654	7
33, 47, 85, 101		121, 123		46705619	101, 119	46709349	97, 137
46703621	47, 61	46703777	67	46705620	119, 137	46709378	43, 133
46703622	69	46703778	67	46705621	97, 137	46709445	13, 17
46703623	67, 69	46703780	67	46705622	97	46709472	111
46703624	69	46703781	67	46705626	85	46709473	111
46703625	39, 131	46703782	67, 133	46705628	101	46709476	59, 89, 97
46703626	39	46703783	67, 133	46705640	119, 137	46709477	59, 117

NUMERICAL INDEX

PART NO.	PAGE	PART NO.	PAGE	PART NO.	PAGE	PART NO.	PAGE
46709478	59	46714042	33, 89	46716632	29	46716909	23, 69
46709481	69	46714043	33	46716634	115	46716912	77
46709482	123	46714044	109	46716640	33	46716914	77
46709487	115	46714066	85	46716644	33	46716922	13
46709489	13, 17	46714067	85	46716690	5	46716980	107
46709526	13, 17	46714068	115	46716706	21	46716981	13, 17
46709534	13, 17	46714069	111	46716742	63, 119	46716984	53
46709561	131	46714070	105	46716744	31,	46716985	59
46709562	135	46714071	89	45, 85, 99		46716986	31, 33
46709616	115	46714072	89	46716745	83	46716987	105
46709618	115	46714073	91	46716750	29	46716989	31, 43
46709619	115	46714074	91	46716751	29, 83	46716990	41
46713852	13, 17	46714077	71, 129	46716756	85	46716991	95
46713866	129	46714079	71, 129	46716757	43, 85, 97	46716997	13, 17
46713867	129	46714081	129	46716758	71, 129	46717019	43, 133
46713868	71	46714082	105	46716760	33	46717020	97, 137
46713869	71	46714083	115	46716763	71, 129	46717031	105
46713871	97	46715886	9	46716764	29, 83	46717032	101
46713872	97	46715887	9	46716767	69	46717035	59
46713873	97	46716428	19	46716768	27	46717036	29
46713874	97	46716430	21	46716770	55, 111	46717037	43
46713875	97	46716431	11,	46716773	115	46717038	59
46713879	99	15, 23, 77		46716776	97	46717039	115
46713880	99	46716433	11,	46716777	69	46717041	105
46713921	69	15, 23, 77		46716779	97	46717042	83
46713922	129	46716436	7	46716780	111	46717043	51, 105
46713923	13, 17	46716439	19, 133	46716781	55	46717044	97
46713986	115	46716440	19, 137	46716782	105	46717047	33, 87
46713987	115	46716441	19, 137	46716783	105	46717051	87
46713988	87	46716442	19	46716784	29, 83	46717088	43
46713989	87	46716449	7	46716787	29	46717090	43
46713990	87	46716452	19	46716788	33, 87	46717092	43
46713991	69	46716454	21	46716790	51	46717099	41
46713992	81	46716470	69	46716791	55, 111	46717100	41, 95
46713994	105	46716473	69	46716794	37, 91	46717102	91
46714000	65, 121	46716474	103	46716795	37, 91	46717105	59
46714004	65, 121	46716475	105	46716798	105	46717106	115
46714005	129	46716476	53	46716799	105	46717119	47
46714011	79	46716477	117	46716800	37, 91	46717120	47
46714013	123	46716478	109	46716806	29, 83	46717121	31
46714014	79	46716479	69	46716812	31	46717125	43
46714015	97, 115	46716482	31, 85	46716813	55	46717126	29, 83
46714016	87	46716530	31	46716815	33	46717133	13, 17
46714017	87	46716531	69	46716816	121	46717139	55
46714018	69	46716532	85	46716818	33, 87	46717141	55
46714020	117	46716533	43	46716819	127	46717144	31, 85
46714021	123	46716553	43	46716880	43, 97	46717145	97
46714031	111	46716571	7	46716882	97	46717154	33, 87
46714035	115	46716572	7	46716885	59	46717159	51
46714036	89	46716574	3	46716886	41, 95, 115	46717178	25
46714037	41, 95	46716621	37	46716887	55	46717180	25
46714038	111	46716623	59, 115	46716888	43	46717183	109
46714039	27,	46716626	91	46716893	31	46717184	79
43, 61, 115		46716628	59	46716894	25	46717185	79
46714040	13, 17	46716629	61, 117	46716900	65, 121	46717186	109
46714041	89	46716631	83	46716907	23, 69	46717225	19

NUMERICAL INDEX

PART NO.	PAGE	PART NO.	PAGE	PART NO.	PAGE	PART NO.	PAGE
46717226	19	46722066	71, 129, 131, 135	46722748	31, 85	46722828	25, 61, 89, 91, 95, 105, 117
46717227	19			46722749	51, 59, 61, 105, 115, 117	46722829	37, 91, 105
46717231	7	46722093	135	46722750	59	46722830	123
46717232	7	46722094	43, 133	46722751	33	46722834	29, 83
46717233	7	46722099	73, 123, 131, 135	46722752	33	46724125	21
46717234	7			46722753	31, 85	46724345	13
46717235	7	46722102	131	46722754	61, 105, 117	46727447	51
46717238	7	46722645	85	46722755	89, 91	46727453	43
46717239	7	46722660	59, 109	46722756	59, 117	46727455	37
46717244	21	46722662	43, 97, 99	46722757	37, 85, 87, 91	46727456	31
46717245	7	46722664	29, 33, 83, 87	46722758	37, 41, 53, 59, 85, 87, 91, 95, 107, 115	46727458	43
46717247	11, 15, 23, 77	46722665	65, 121, 123			46727460	29
46717252	9	46722666	43, 97	46722759	35, 87	46727461	31
46717262	19	46722668	105	46722760	25, 79	46727470	25
46717264	9	46722671	31	46722761	41, 95	46727471	123
46717270	7	46722672	51	46722762	29, 83	46727472	69
46717271	7	46722674	115	46722763	35, 87	46727474	37
46717279	21	46722676	43	46722765	59	46727496	25
46717280	7	46722677	51	46722767	111	46727508	37
46717281	7	46722678	55	46722768	55	46727512	51
46717282	7	46722679	83	46722769	111	46727515	25
46717283	7	46722680	29, 83	46722770	55	46728728	133
46717291	19	46722681	29	46722773	55	46729637	69
46717294	7	46722682	29	46722778	55	46729672	43
46717298	11, 15, 23, 77	46722683	35	46722779	111	46729673	45
46718025	9	46722684	35	46722780	31, 53, 107, 111	46729677	43
46718027	9	46722685	33, 87			46729685	69, 125
46718028	9	46722686	59	46722781	79, 81	46729693	65, 121
46718029	9	46722687	31, 85	46722782	33, 87	46730725	19
46718722	67	46722688	43	46722783	107, 117	46738385	21
46718790	67	46722689	31	46722784	25	46738386	21
46719978	21	46722690	31, 85	46722785	107	46738388	21
46719980	19	46722692	53	46722786	59	46738825	73
46719985	19	46722694	55, 111	46722788	33, 87	46739464	79
46719986	19	46722695	27	46722789	53	46739465	83
46719987	19, 133, 137	46722702	51	46722791	31	46739466	85
46719988	19	46722704	29	46722793	59	46739467	85
46719990	19	46722705	41, 95	46722795	33, 87	46739468	85
46720003	21	46722706	59	46722798	111	46739469	97
46721248	11, 15, 23, 77	46722707	55	46722802	33, 87	46739470	99
46721249	11, 15, 23, 77	46722711	31	46722810	59	46739471	105
		46722713	111	46722816	31, 85, 99	46739472	95
46721250	19	46722716	71	46722817	83	46739473	99
46721251	19	46722718	33	46722818	43, 97, 115	46739474	123
46721259	7	46722719	43, 97	46722820	29, 83	46739475	123
46721260	7	46722720	33, 87	46722821	33, 87	46739476	109
46721261	7	46722722	41, 95	46722822	115	46739477	115
46721848	9	46722724	61	46722823	29	46739478	123
46721850	9	46722726	117	46722824	31, 85	54629977	9
46721852	9	46722727	87	46722825	41, 95	54642327	9
46721854	9	46722729	33, 87	46722826	25, 35, 55, 111	92867449	9
		46722747	51, 59, 105, 115			92867530	9
						92912559	9
						92930593	9
						93171254	9

NUMERICAL INDEX

PART NO.	PAGE	PART NO.	PAGE	PART NO.	PAGE
93171262	9	N		T	
93171288	9	NAP	13,	TBD	85
		17, 45, 59, 69, 83, 87,			
		95, 105, 119, 125			

WORD INDEX

250 Hour Maintenance Kit 131, 135
 500 Hour Maintenance Kit 131, 135

A

ADAPTER SAE 3 13, 17
 ADAPTER-FUEL INJECTION PUMP GEAR 43
 ADAPTOR SENSOR 85
 ADAPTOR-LUBRICATING OIL PRESSURE
 GAUGE 31
 AIR CLEANER 121
 AIR FILTER ASSEMBLY 65
 ALTERNATOR 11, 15, 27, 81, 133, 137
 ALTERNATOR S0L2-G1 133, 137
 ANTI-VIBRATION RUBBER MOUNT 77
 ARM ROCKER 111
 ASBESTOS BLANKET 21
 ASSY ATOMISER LEAKOFF PIPE 43
 AVR AS540 13, 17

B

BACK PLATE 119
 BACK PLATE - WATER PUMP TO BODY TO TIMING
 CASE FRONT COVER 63
 BANJO BOLT 97, 115
 BANJO BOLT-CYLINDER BLOCK TO FUEL
 INJECTION 31
 BANJO BOLT-PIPE CYLINDER BLOCK ASSY TO
 FUEL INJECTION PUMP 45
 BANJO-BOLT 31
 BEARING 83
 BEARING CONNECTING ROD BIG END
 (STANDARD) 29
 BEARING CRANKSHAFT MAIN-COMPLETE
 SET 29
 BEARING NDE 13, 17
 BEARING THRUST 83
 BEARINGS, CRANKSHAFT MAIN 83
 BELT - ALTERNATOR DRIVING 39, 131
 BELT ALTERNATOR DRIVING 93, 135
 BODY WATER OUTLET 89
 BODY WATER PUMP 119
 BODY-CYLINDER HEAD WATER OUTLET 33
 BOLT 19, 21, 23, 27, 59, 77, 81, 83, 99, 117
 BOLT ALTERNATOR TO BRACKET 27
 BOLT BANJO 43, 69, 71, 85, 97, 129
 BOLT M10 X 30 11, 15
 BOLT M12 X 40 11, 15
 BOLT M6 X 20 LG HEX GI 7
 BOLT M8 X 25 LG HEX GI 7
 BOLT, BANJO 129
 BOLT, CONNECTING ROD TO CAP 29
 BOX, BREAKER GI MOUNTING 19
 BOX, CONTROL PANEL GI MOUNTING 19
 BRACKET 81, 97, 111, 123
 BRACKET - ROCKER SHAFT 55

BRACKET ALTERNATOR 27
 BRACKET ENGINE 69, 87
 BRACKET ENGINE FRONT MOUNTING LH ... 109
 BRACKET ENGINE FRONT MOUNTING RH ... 109
 BRACKET NDE 13, 17
 BRACKET RADIATOR 69
 BRACKET TUBE 115
 BRACKET, BREAKER GI MOUNTING 19
 BUSBAR INSULATOR CONICAL 19
 BUSH CONNECTING ROD SMALL END 29
 BUSH, CONNECTING ROD SMALL END 83
 BUSH-ROCKER LEVER 55
 BUSHING 105
 BUSHING IDLER 105
 BUSHING REDUCER 73, 125

C

CABLE GLAND PVC 19
 CAMSHAFT 115
 CAMSHAFT WITH BUSH 59
 CAP 107
 CAP - LUB OIL FILLER 53
 CAP LUB OIL FILLER 137
 CAP VALVE SPRING 87
 CAP-VALVE SPRING 33
 CIRCLIP 105, 111
 CIRCLIP - GUDGEON PIN RETAINING 29
 CIRCLIP - PUMP IDLER GEAR RETAINING 51
 CIRCLIP - ROCKER SHAFT LOCATING 55
 CIRCUIT BREAKER 19
 CIRCUIT BREAKER (MCCB) 133, 137
 CIRCUIT BREAKER (MCCB), 133
 CLAMP 123
 CLAMP HOSE 67, 121, 133, 137
 CLAMP, HOSE 65, 67
 CLAMP-HOSE 65
 CLIP 91
 CLIP - BREATHER PIPE SUPPORT 37
 CLIP EXTENSION HOSE TO CYLINDER HEAD
 COVER 37
 CLIP TUBE 105
 CLIP WATER 119
 CLIP WATER CONNECTION HOSE 133, 137
 CLIP-WATER CONNECTION HOSE 63
 COIL SPRING 91
 COIL SPRING - BREATHER PIPE EXTENSION
 INSERT 37
 COIL, ELECTRICAL 75, 131, 135
 CONNECTING ROD ASSEMBLY 29, 83
 CONNECTION - CYLINDER HEAD WATER
 OUTLET 33
 CONNECTION - ROCKER SHAFT OIL FEED
 PIPE 55
 CONNECTION CYLINDER BLOCK WATER
 INLET 85

WORD INDEX

CONNECTION-CYLINDER BLOCK WATER INLET	31
CONNECTOR EXHAUST	127
CONNECTOR, BARREL	121
CONTROLLER, DIGITAL DSE 6010 . . .	19, 133, 137
COOLANT TEMP SENDER/SWITCH	131, 135
COTTER-VALVE SPRING	33
COUPLING SAE 11.5	13, 17
COVER	115, 117
COVER - CYLINDER HEAD	37
COVER - TIMING CASE BOTTOM	59
COVER - TIMING CASE INSPECTION	61
COVER AIR CLEANER	121
COVER AIR-CLEANER	65
COVER CYLINDER HEAD	91
COVER PLATE, BREAKER	19
COVER, END	13, 17
COVER, GEARCASE	115
COVER- TIMING CASE FRONT ASSY	59
CRANKSHAFT	83
CRANKSHAFT ASSEMBLY	29
CURRENT TRANSFORMER	19
CUTOUT DOOR, PANEL	7
CUTTER VALVE SPRING	87
CYLINDER BLOCK ASSEMBLY	31, 85
CYLINDER HEAD ASSEMBLY	33
CYLINDER HEAD ASSEMBLY MAJOR KIT	33

D

DAMPER	97
DAMPER - FUEL INJECTION PIPE DAMPER. . .	43
DE SCREEN SAE 3.	13, 17
DECAL, BATTERY DISCONNECT	9
DECAL, COOLANT FILL	9
DECAL, COOLANT LEVEL	9
DECAL, DIESEL FUEL SYMBOL	9
DECAL, DOOSAN LOGO	9
DECAL, DOOSAN TRI-COLOUR 12"	9
DECAL, DOOSAN TRI-COLOUR 8"	9
DECAL, EARTH WARNING	9
DECAL, ELECTRIC SHOCK	9
DECAL, HOT SURFACE ISO	9
DECAL, ISO CENTRAL DRAIN	9
DECAL, LIFT HERE	9
DECAL, MODEL NUMBER	9
DECAL, NO WATER	9
DECAL, REFER TO HANDBOOK	9
DECAL, WARNING	9
DECAL, WEB SITE	9
DECAL, WEB SITE White	9
DIN RAIL	19
DIPSTICK	107
DIPSTICK - LUBRICATING OIL SUMP ASSEMBLY	53
DISTANCE PIECE-ROCKER LEVER	55
DOOR, BARE LH	7

DOOR, BARE RH	7
DOOR, CONTROL	19
DOWEL	95, 115
DOWEL - CYLINDER BLOCK TO ADAPTOR PLATE	41
DOWEL - DRIVE GEAR LOCATING	43
DOWEL - IDLER GEAR HUB LOCATING	59
DOWEL CYLINDER BLOCK	41
DRAIN PLUG-CYLINDER BLOCK	31
DUST CAP	25

E

EJECTOR VALVE	65, 121
ELEMENT AIR CLEANER	65, 121
ELEMENT FUEL WATER SEPERATOR	71
ELEMENT-AIR CLEANER	131, 135
EMERGENCY STOP	131, 135
ENGINE	23, 69, 77
EXCITATOR STATOR	13, 17
EXCITER ROTOR	13, 17

F

FAN	13, 17
FAN ASSY	69
FAN SHROUD	123
FAN, RADIATOR	125
FEED PUMP	45, 97, 131, 135
FILLER - LUB OIL ASSEMBLY	53
FILLER OIL	107
FILTER FUEL	129
FILTER-FUEL	131, 135
FLANGED BOLT	31, 33, 43
FLANGED BOLT (M8X1.25X30)- 10.9	59
FLYWHEEL	95
FLYWHEEL & STARTER RING ASSEMBLY	41
FLYWHEEL ASSY	95
FOAM bulk	7
FOAM BULK	7
FRAME	3, 5
FRAME EXTENSION FOR CANOPY	21
FRAME, LOUVER ASSY ALT SIDE	7
FRAME, RADIATOR SIDE COVER	7
FUEL INJECTION PUMP	97, 133, 137
FUEL INJECTION PUMP (X2.5 G2)	43
FUEL INJECTION PUMP (X2.5 G4)	43
FUEL LEVEL GAUGE	133, 137
FUEL SYSTEM	69
FUSE CARRIER	19
FUSE CYLINDRICAL	19
FUSE CYLINDRICAL 10X38 20A	133, 137
FUSE CYLINDRICAL 10X38 2A	133, 137

G

GASKET	21
--------------	----

WORD INDEX

GASKET - CYLINDER HEAD	47
GASKET COVER	101, 117
GASKET CRANKCASE	101, 107
GASKET CYLINDER HD	85
GASKET CYLINDER HEAD	101
GASKET EXH M/F OUTLET FLANGE	25, 47
GASKET EXHAUST	79, 101
GASKET KIT MAJOR	101
GASKET KIT MINOR	101
GASKET OIL FILTER	49, 101, 103
GASKET WATER PUMP	101, 119
GASKET-CYLINDER HEAD	31, 89
GEAR - CAMSHAFT DRIVING	59
GEAR - CRANKSHAFT	29
GEAR - FUEL PUMP DRIVE	43
GEAR - IDLER	59
GEAR ASSEMBLY	105
GEAR CAMSHAFT	115
GEAR CRANKSHAFT	83
GEAR FUEL PUMP DRIVE	97
GEAR IDLER LOWER	115
GEAR IDLER UPPER	115
GEAR SPUR	105
GEARCASE	115
GENERATOR BASE PLATE	13, 17
GLAND NUT	105
GLAND-NUT LUBRICATING OIL PUMP AND DELIVERY PIPE	51
GUARD, FAN	67
GUARD, PULLEY	67
GUARD, RADIATOR	67
GUIDE VALVE	87
GUIDE-EXHAUST AND INLET VALVE	33

H

HARNESS SENSOR	73
HEAD CYLINDER	87
HEAD LUBRICATING	103
HEAD-FILTER	49
HEAVY DUTY SOLENOID 12V	133, 137
HIGH PRESSURE PIPE NO:1	43
HIGH PRESSURE PIPE NO:2	43
HIGH PRESSURE PIPE NO:3	43
HINGES BLACK	19
HORIZONTAL, ALTERNATOR SIDE	7
HOSE	119
HOSE BYPASS CONNECTION TO WATER PUMP BODY	133, 137
HOSE COOLANT	123
HOSE WATER	119, 133, 137
HOSE WATER PUMP OUTLET TO CYLINDER BLOCK WATER INLET	133, 137
HOSE, ELBOW	65, 121
HOSE, WATER	67
HOSE-BYPASS CONNECTION TO WATER PUMP BODY	63

HOSE/PIPE BREATHER EXTENSION	91
HOSE-WATER PUMP OUTLET TO CYLINDER BLOCK WATER INLET	63
HOUSING CRANKSHAFT	95
HOUSING CRANKSHAFT REAR END OIL SEAL ASSEMBLY	41
HOUSING FLYWHEEL	41
HUB - IDLER	59
HUB IDLER	115

I

IMPELLER WATER PUMP	119
IMPELLER-WATER PUMP	63
INDICATOR, SERVICE	65, 121
INDICATOR-SERVICE	131, 135
ISOLATOR	23
ISOLATOR, 250 LB RATING	11, 15

J

JOINT	95
JOINT - CYLINDER HEAD COVER	47
JOINT - CYLINDER HEAD REAR END COVER	47
JOINT - CYLINDER HEAD WATER OUTLET BODY	47
JOINT - FRONT COVER TO TIMING CASE	47, 59
JOINT - FUEL INJECTION PUMP TO TIMING CASE	47
JOINT - FUEL PUMP TO TIMING CASE	43
JOINT - INDUCTION MANIFOLD TO CYLINDER HEAD	47
JOINT - INSPECTION COVER TO TIMING CASE	47, 61
JOINT - LUB OIL FILLER	53
JOINT - LUB. OIL FILTER	47
JOINT - LUBRICATING OIL SUMP TO BLOCK ASSEMBLY	53
JOINT - LUBRICATION OIL FILLER	47
JOINT - OIL SUCTION PIPE FLANGE TO LUBRICATING OIL PUMP	47
JOINT - PDC-WATER INLET CONNECTION	47
JOINT - REAR END HOUSING TO CYLINDER BLOCK	47
JOINT - REAR END OIL SEAL HOUSING TO CYLINDER BLOCK	41
JOINT - SUMP TO CYLINDER BLOCK ASSEMBLY	47
JOINT - SUMP TO CYLINDER BLOCK FRONT	47, 53
JOINT - SUMP TO CYLINDER BLOCK REAR	47, 53
JOINT - TACHOMETER HOUSING TO CYLINDER BLOCK	47
JOINT - TIMING CASE TO CYLINDER BLOCK	59
JOINT - WATER PUMP BACK PLATE	47
JOINT AND GASKETS TOP OVERHAUL KIT	47
JOINT CYLINDER	87

WORD INDEX

JOINT CYLINDER BLOCK. 101
 JOINT CYLINDER BLOCK WATER INLET
 CONNECTION 85
 JOINT CYLINDER HEAD COVER 91, 101
 JOINT CYLINDER HEAD WATER OUTLET BODY TO
 HEAD 47
 JOINT FRONT COVER 101, 115
 JOINT FUEL PUMP 97, 101
 JOINT INDUCTION MANIFOLD 79, 101
 JOINT LUB OIL 105
 JOINT LUB OIL FILLER 101, 107
 JOINT SUMP 101, 107
 JOINT TACHOMETER BLANKING PLATE 85, 101
 JOINT TIMING CASE 101, 115
 JOINT TIMINGS CASE TO CYLINDER BLOCK. 47
 JOINT WATER OUTLET BODY 87, 101
 JOINT, LH HORIZ 7
 JOINT, LH HORIZ EMERGENCY 7
 JOINT, RH HORIZ 7
 JOINT, VERT LH/RH 7
 JOINT-CYLINDER BLOCK WATER INLET
 CONNECTION 31
 JOINT-CYLINDER HEAD COVER FOR FOUR HOLE
 MOUNTING 37
 JOINT-CYLINDER HEAD REAR END COVER
 PLATE 33
 JOINT-CYLINDER HEAD WATER OUTLET
 BODY 33
 JOINT-INDUCTION MANIFOLD TO CYLINDER
 HEAD 25
 JOINT-LUBRICATING, OIL SUCTION PIPE FLANGE
 TO PUMP 51
 JOINT-TACHOMETER BLANKING PLATE 31
 JOINT-WATER OUTLET CONNECTION TOP 33
 JOINTS AND GASKETS BOTTOM OVERHAUL
 KIT 47
 JOINTS AND GASKETS MAJOR OVERHAUL KIT 47

K

KEY CRANKSHAFT 29, 83
 KIT, AVR AS540 133, 137
 KIT, RECTIFIER SERVICE. 133, 137
 KIT,ENGINE GASKET 131, 135
 KIT-HIGH PRESSURE PIPE ASSY 43

L

LATCH 7
 LEVER ALTERNATOR. 81
 LEVER-ALTERNATOR. 27
 LEVER-ROCKER L.H. ASSEMBLY. 55
 LEVER-ROCKER R.H. ASSEMBLY 55
 LINE FUEL 71, 97, 99, 129
 LINER CYLINDER BLOCK. 85
 LINER-CYLINDER BLOCK 31
 LOCKABLE KNOB. 19

LOCKNUT. 87
 LOCKNUT - TAPPET ADJUSTING SCREW 33
 LUB OIL FILTER 71
 LUB.OIL FILTER 103, 131, 135
 LUBE OIL FILTER 49
 LUBRICATING OIL PUMP - IDLER GEAR
 ASSEMBLY. 51

M

MANIFOLD EXHAUST. 25, 79
 MANIFOLD INDUCTION 25, 79
 MANUAL, OPERATION MAINTENANCE 9
 MANUAL, PARTS 9
 MOTOR STARTER 57, 113, 133, 137

N

NAME PLATE ENGINE 125
 NAMEPLATE. 69
 NOZZLE & HOLDER 133, 137
 NOZZLE & HOLDER ASSY 43
 NOZZLE INJECTOR 97
 NUT 21, 23, 27, 35, 41, 53, 61, 69, 77, 79, 81, 83,
 97, 99, 107, 109, 115, 117, 119, 121, 123, 129
 NUT - FUEL INJECTION PIPE DAMPER SCREW 43
 NUT - FUEL INJECTION PUMP RETAINING 43
 NUT - ROCKER SHAFT BRACKET RETAINING. 55
 NUT - TIMING CASE FRONT COVER BOLT TO
 TIMING CASE SETSCREW. 59
 NUT ALTERNATOR. 27
 NUT CONNECTING 87
 NUT CONNECTING ROD TO CAP BOLT 29
 NUT EXHAUST. 81, 89, 95, 111
 NUT EXHAUST MANIFOLD RETAINING 27
 NUT FUEL INJECTION PUMP RETAINING 25, 63
 NUT M10 GI 8.8 11, 15
 NUT M6 7
 NUT M8 7
 NUT, HEX. 65, 67
 NUT-CYLINDER HEAD RETAINING. 33
 NUT-REAR LIFTING PLATE RETAINING 35

O

'O' RING 53
 'O' RING-REAR. 85
 'O' RING-REAR BEARING CAP THIMBLE 31
 OIL PRESSURE SENDER/SWITCH. 131, 135
 OLIVE. 105

P

PANEL, CONTROL 19
 PANEL, LH CORNER, ALT SIDE 7
 PANEL, LH CORNER, RAD SIDE. 7
 PANEL, RH CORNER, ALT SIDE 7

WORD INDEX

PANEL, RH CORNER, RAD SIDE 7
 PARTITION, RADIATOR 21
 PIN DOWEL 95
 PIN SPRING 105
 PIN THRUST 115
 PIPE 105, 111
 PIPE - LUBRICATING OIL DELIVERY, PUMP TO
 CYLINDER BLOCK 51
 PIPE - ROCKER SHAFT OIL FEED ASSEMBLY . . 55
 PIPE ASSEMBLY 85
 PIPE ASSEMBLY - FUEL INJECTION TO TANK . . 43
 PIPE ASSEMBLY - FUEL OIL LEAK OFF TO FIP
 RETURN 43
 PIPE BREATHER EXTENSION 37
 PIPE EXHAUST 21
 PIPE FUEL 97
 PIPE FUEL INJECTION NO. 1 CYLINDER ASSY . 43
 PIPE FUEL INJECTION NO. 2 CYLINDER ASSY . 43
 PIPE FUEL INJECTION NO. 3 CYLINDER ASSY . 43
 PIPE FUEL PUMP DRAIN ASSY 45
 PIPE LUBRICATING OIL SUCTION ASSEMBLY -
 FLANGE TYPE 51
 PIPE-CAM CHAMBER TO CYLINDER HEAD
 ASSEMBLY 31
 PIPE-PRESSURE RAIL TO CAM CHAMBER
 ASSEMBLY 31
 PISTON ASSEMBLY KIT 29
 PISTON ASSY 29, 83
 PISTON RINGS ASSEMBLY 29, 83
 PLAIN WASHER 81
 PLATE 97
 PLATE - ENGINE LIFTING REAR 35
 PLATE - FUEL INJECTION PIPE VIBRATION
 DAMPER RETAINING 43
 PLATE - IDLER GEAR RETAINING 59
 PLATE CYLINDER 87
 PLATE ENGINE 87
 PLATE IDLER 115
 PLATE MOUNTING 85
 PLATE SUPPORT 95, 105
 PLATE-CYLINDER HEAD REAR END COVER . . 33
 PLATE-ENGINE LIFTING FRONT 35
 PLATE-TACHOMETER DRIVE BLANKING 31
 PLUG 69, 85, 111
 PLUG - ROCKER SHAFT END 55
 PLUG - SUMP DRAIN 53
 PLUG DRAIN 69, 85, 123
 PLUG HOLE 69
 PLUG INDUCTION MANIFOLD 25
 PLUG-CYLINDER BLOCK PRESSURE RAIL FRONT
 AND REAR 31
 PLUG-CYLINDER BLOCK WATER JACKET 31
 PLUG-CYLINDER BLOCK WATER RAIL 31
 PLUNGER 51
 PLUNGER INTERLOCK 105
 PRESSURE CAP 123, 137

PRESSURE CAP WITH CHAIN 67
 PULLEY 63
 PULLEY - ALTERNATOR 27
 PULLEY ALTERNATOR 81
 PULLEY CRANKSHAFT 29
 PULLEY WATER PUMP 119
 PUMP - LUBRICATING OIL ASSEMBLY 51
 PUMP OIL 105

R

RADIATOR 67, 123
 RADIATOR assy 123
 RADIATOR COVER -MODEL AMRC 130 7
 RADIATOR GUARD 123
 RADIATOR, SIDE HORIZ. 7
 RAIN CAP 21
 RECOVERY BOTTLE 123
 RECOVERY BOTTLE ASS 67
 RECTIFIER SERVICE 13, 17
 RELAY 19
 RELAY 12V DC 40A 133, 137
 RELAY 12VDC 133, 137
 RETAINER SPRING 105
 RING STARTER 41, 95
 RIVET 69, 115, 125
 RIVET - CAMSHAFT THRUST SPRING TO TIMING
 CASE FRONT COVER 59
 ROCKER - SHAFT ASSEMBLY 55
 ROCKER SHAFT ASSEMBLY 111
 ROOF, ALT SIDE 7
 ROOF, RAD SIDE 7
 ROTATING RECTIFIER 13, 17
 RUBBER SEAL 91
 RUBBER SEAL - CYLINDER HEAD COVER
 RETAINING SETSCREW 37

S

SCREW 49, 69, 71,
 79, 81, 85, 97, 121, 123, 125, 129
 SCREW - FUEL INJECTION PIPE DAMPER 43
 SCREW, HEX FLANGE HEAD 65, 67
 SCREW, HEX HEAD 67
 SCREW, HEX-HEAD 67
 SCREW-HEX HD 87
 SCREW-TAPPET ADJUSTING 33
 SEAL 117
 SEAL - TIMING CASE FRONT COVER OIL SEAL . 61
 SEAL CONNECTOR 119
 SEAL CRANKSHAFT 95
 SEAL CRANKSHAFT REAR END 41
 SEAL INLET 87
 SEAL, RADIATOR 67
 SEAL-VALVE STEM 33
 SEAL-WATER PUMP UNITIZED 63
 SENDER LOW COOLANT 73, 123

WORD INDEX

SENDER PRESSURE	73	SHAFT WATER PUMP	119
SENDER,LOW COOLANT	131, 135	SHAFT-WATER PUMP (INTEGRAL BEARING TYPE).	63
SENDER-PRESSURE	125	SHIM	111
SENSOR TEMPERATURE.	73, 125	SILENCER	21
SETSCREW . . 39, 59, 61, 79, 83, 85, 87, 89, 91, 95, 97, 103, 105, 107, 113, 115, 117		SLEEVE TUBE	85
SETSCREW - CLIP BREATHER PIPE SUPPORT . 37		SOLENOID	113
SETSCREW - CYLINDER HEAD TOP COVER RETAINING.	37	SOLIVE-LUBRICATING OIL DELIVERY PIPE	51
SETSCREW - IDLER GEAR HUB TO CYLINDER BLOCK	59	SPACER	109, 111
SETSCREW - LUB OIL SUMP TO CYLINDER BLOCK	53	SPACER, FAN.	125
SETSCREW - LUBRICATING OIL PUMP ASSEMBLY TO FRONT BEARING CAP	51	SPRING	111
SETSCREW - OIL SEAL HOUSING TO CYLINDER BLOCK	41	SPRING - CAMSHAFT THRUST	59
SETSCREW - STARTER MOTOR TO FLYWHEEL HOUSING	57	SPRING - ROCKER SHAFT CENTER	55
SETSCREW BODY WATER OUTLET	59	SPRING - ROCKER SHAFT FRONT AND REAR	55
SETSCREW CYLINDER BLOCK TO WATER INLET BODY	59	SPRING VALVE.	105
SETSCREW CYLINDER BLOCK TO WATER INLET CONNECTION	59	SPRING WA SHER	59
SETSCREW ENGINE	87	SPRING WASHER 23, 41, 53, 57, 59, 61, 63, 77, 81, 85, 87, 91, 95, 97, 105, 107, 113, 115, 117, 119	
SETSCREW ENGINE FRONT LIFTING PLATE.	87	SPRING WASHER M10 GI	11, 15
SETSCREW FLYWHEEL TO CRANKSHAFT	95	SPRING WASHER M12 GI	11, 15
SETSCREW LUBRICATING OIL PUMP ASSEMBLY TO FRONT BEARING CAP	59	SPRING-EXHAUST & INLET VALVE	33
SETSCREW TIMING CASE COVER TO TIMING CASE	59	STRAINER,FUEL	131
SETSCREW WATER OUTLET BODY TO CYLINDER HEAD	33	STUD	27, 41, 63, 79, 81, 89, 95, 97, 107, 109, 111, 115, 117, 119
SETSCREW-BEARING CAP TO CYLINDER BLOCK	31	STUD - OIL FILLER MOUNTING	53
SETSCREW-CRANKSHAFT PULLEY RETAINING.	29	STUD - ROCKER SHAFT BRACKET	55
SETSCREW-CYLINDER HEAD REAR AND COVERPLATE RETAINING	33	STUD - TIMING CASE BOTTOM COVER RETAINING.	61
SETSCREW-CYLINDER HEAD TO CYLINDER BLOCK LONG	35	STUD - TIMING CASE TO FUEL INJECTION PUMP	43
SETSCREW-CYLINDER HEAD TO CYLINDER BLOCK SHORT	35	STUD CYLINDER	87
SETSCREW-CYLINDER HEAD TO WATER OUTLET BODY	33	STUD WATER PUMP MOUNTING	137
SETSCREW-EXHAUST MANIFOLD OUTLET FLANGE	25	STUD, BRACKET ALTERNATOR	27
SETSCREW-FLYWHEEL TO CRANKSHAFT	41	STUD-CYLINDER BLOCK	31
SETSCREW-INDUCTION MANIFOLD TO CYLINDER HEAD	25	STUD-CYLINDER BLOCK TO CYLINDER HEAD RHS HOLE	33
SETSCREW-MAIN BEARING CAP TO CYLINDER BLOCK-REAR CAP	31	STUD-CYLINDER HEAD TO EXHAUST MANIFOLD AND OUTLET FLANGE	25
SETSCREW-SUCTION PIPE TO OIL PUMP	51	STUD-LIFTING PLATE FRONT & REAR.	35
SHAFT	111	STUD-WATER OUTLET CONNECTION	33
SHAFT PULLEY	83	STUD-WATER PUMP MOUNTING	63
SHAFT ROCKER 1	55	SUMP - LUBRICATING OIL	53
		SUMP LUBRICATING OIL	107
		SUPPORT AIR FILTER	65, 121

T

TAB WASHER - IDLER GEAR HUB SETSCREW . 59	
TAPPET	33, 87
TERMINAL BOARD	13, 17
TERMINAL ENCLOSURE	13, 17
TERMINAL ENCLOSURE PANEL	13, 17
THERMOSTAT	33, 89, 131, 135
THIMBLE-CRANKSHAFT BEARING CAP LOCATING	31
TIMING CASE (CAST IRON)	59
TINNED COPPER BUS BAR	19

WORD INDEX

TRUNKING 19
TUBE - LUBRICATING OIL SUMP DIPSTICK 53
TUBE OIL 107, 115
TUBE WATER 89

U

UNION PIPE 111

V

VALUE EXHAUST 33
VALVE BALL 69
VALVE EXHAUST 87
VALVE INLET 33, 87
VALVE PRESSURE 99
VALVE-BALL 125

W

WASHER 21, 69, 73, 79,
83, 91, 97, 99, 109, 115, 121, 123
WASHER - BANJO BOLT 43
WASHER - CRANKSHAFT PULLEY RETAINING
SETSCREW 29
WASHER - ROCKER SHAFT BRACKET
RETAINING 55
WASHER - TIMING CASE BOLT FRONT COVER TO
TIMING CASE NUT 59
WASHER -NOZZLE SEATING 43
WASHER -SPRING 27
WASHER BANJO BOLT 85
WASHER COPPER 85
WASHER FL 125, 129
WASHER FLAT 23, 77
WASHER FLAT M10 GI 11, 15
WASHER FLAT M12 GI 11, 15
WASHER FLAT M8 GI 7
WASHER INDUCTION MANIFOLD TO PLUG 25
WASHER LOCK 123
WASHER MAIN BEARING THRUST SET
STANDARD 29
WASHER MAIN BEARING THRUST SET STANDARD
-0.007" OVERSIZE 29
WASHER METALLIC 91
WASHER METALLIC - CYLINDER HEAD COVER
SETSCREW 37
WASHER NOZZLE SEATING 137
WASHER PLAIN 81, 85, 91, 97, 111, 117
WASHER PLAIN - FUEL INJECTION PUMP
RETAINING NUT 43
WASHER PLAIN - REAR LIFTING PLATE RETAINING
NUT 35
WASHER PLAIN - SETSCREW BREATHER PIPE
CLIP SUPPORT 37
WASHER PLAIN -CYLINDER HEAD STUD TO
EXHAUST MANIFOLD 25

WASHER SEALING 69, 71, 85, 103, 105
WASHER SETSCREW 105
WASHER SETSCREW - BREATHER PIPE CLIP
SUPPORT 37
WASHER SPR LK 125, 129
WASHER SPRING 25, 27, 33, 51, 61,
79, 81, 87, 89, 91, 95, 97, 105, 117
WASHER SPRING - FUEL INJECTION PUMP
RETAINING NUT 43
WASHER SPRING - LUB OIL SUMP TO CYLINDER
BLOCK 53
WASHER SPRING - OIL SEAL HOUSING TO
CYLINDER BLOCK 41
WASHER SPRING - REAR LIFTING PLATE
RETAINING NUT 35
WASHER SPRING - SETSCREW BREATHER PIPE
CLIP SUPPORT 37
WASHER SPRING - WATER OUTLET CONNECTION
STUD 35
WASHER SPRING CYLINDER HEAD STUD TO
EXHAUST 25, 59
WASHER SPRING-OUTLET BODY TO CYLINDER
HEAD SETSCREW 33
WASHER SPRING-WATER OUTLET BODY TO
CYLINDER HEAD SETSCREW 33
WASHER TAB 39, 105
WASHER TAB FLYWHEEL TO CRANKSHAFT
SETSCREW 95
WASHER TAB-FLYWHEEL TO CRANKSHAFT
SETSCREW 41
WASHER TAB-LUBRICATING OIL SUCTION PIPE
FLANGE 51
WASHER, FLAT 67
WASHER, LOCK 67
WASHER, SEALING 129
WASHER-BANJO-BOLT 31
WASHER-INLET & EXHAUST VALVE SPRING 87
WASHER-INLET & EXHAUST VALVE SPRING
LOCATING 33
WASHER-NOZZLE SEATING 97
WASHER-PIPE CYLINDER BLOCK ASSY TO FUEL
INJECTION PUMP 45
WASHER-PIPE CYLINDER BLOCK TO FUEL
INJECTION PUMP 31
WASHER-SPR LK 65, 67
WASHER-SPRING 27
WASHER-WATER INLET CONNECTION
SETSCREW 31
WATER PUMP ASSEMBLY 63, 119, 133, 137
WATER PUMP KIT 63, 119
WIRE TERMINAL BLOCK 19
WIRE TERMINAL BLOCK STOPPER 19
Wound Main Rotor with Complete Assembly 13, 17
Wound Main Stator with Frame Assembly 13, 17

WORD INDEX

Z

ZINC ALLOY HINGE 120X60MM BLACK	7
ZINC PLATED STEEL STRIKER	7



Portable Power