

 


Portable Power

G80, G100

PARTS MANUAL

G80 SERIAL No : G08030001->
G100 SERIAL No : G10030001->

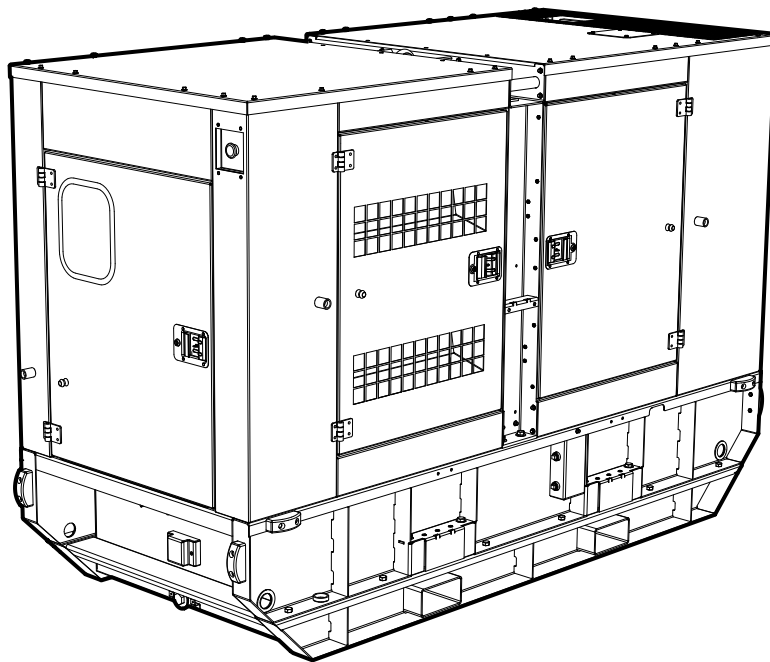



Portable Power

CONTENTS

MAIN FRAME

FRAME ASSEMBLY	3
ENCLOSURE	5
DECALS AND DOCUMENTATION	9

ELECTRICAL SYSTEM

ALTERNATOR MOUNTING - (G80)	11
ALTERNATOR MOUNTING - (G100)	13
ALTERNATOR PARTS - (G80) - (G08030001 -> G08030024)	15
ALTERNATOR PARTS - (G100) - (G10030001 -> G10030115)	17
ALTERNATOR PARTS	19
CONTROL PANEL - (digital)	21
CONTROL PANEL - (analogue)	23
POWER PEDESTAL ASSEMBLY - (G80)	25
POWER PEDESTAL ELECTRICAL LAYOUT - (G80)	27
POWER PEDESTAL ASSEMBLY - (G100)	31
POWER PEDESTAL ELECTRICAL LAYOUT - (G100)	33
BATTERY	37
WIRING DIAGRAM - (alternator)	39
WIRING DIAGRAM - (analogue panel)	41
WIRING DIAGRAM - (engine)	43
WIRING DIAGRAM - (digital panel)	45

POWER UNIT

ENGINE ASSEMBLY	47
COOLING SYSTEM - (piping)	49
COOLING SYSTEM - (panels and guards)	51
FUEL SYSTEM - (12 hour)	53
AIR INTAKE SYSTEM - (G80)	57
AIR INTAKE SYSTEM - (G100)	59
EXHAUST SYSTEM	61
CYLINDER BLOCK	63
CRANKSHAFT	65
CRANKSHAFT PULLEY	67
CONNECTING RODS & PISTONS	69
BALANCE SHAFT	71
CYLINDER HEAD	73
ACTUATING VALVE	75
ROCKER ARM COVER	77
BREATHER HOSE	79
FLYWHEEL AND FLYWHEEL HOUSING	81
FRONT PLATE	83
TIMING GEAR & WATER PUMP	85
WATER PUMP INLET	87
WATER PUMP PULLEY	89
THERMOSTAT AND THERMOSTAT COVER	91
FAN DRIVE ASSEMBLY	93
BELT TENSIONER	95
OIL PAN	97
DIP STICK	99


OIL PUMP	101
OIL COOLER	103
OIL FILLER NECK	105
ENGINE OIL FILTER	107
FUEL PUMP	109
FUEL INJECTION PUMP	111
PRIMARY FUEL FILTER	115
FINAL FUEL FILTER	117
FUEL LINES, LOW PRESSURE	119
AIR INTAKE	121
STARTING AID	123
EXHAUST MANIFOLD	125
EXHAUST ELBOW	127
TURBO CHARGER	129
ENGINE WIRING HARNESS	131
SENSORS	133
STARTER MOTOR	135
ALTERNATOR	137

ACCESSORIES & OPTIONS

OPTION - SOCKET	139
OPTION - SOCKET - (wiring diagram - 110 V)	141
OPTION - SOCKET - (wiring diagram - 230 V)	143
OPTION - NO SOCKETS	145
OPTION - DUAL FREQUENCY - (50/60 Hz)	147
OPTION - MULTIPLE GROUNDING SYSTEM	149
OPTION - EARTHING ROD	151
OPTION - SUPER START PACKAGE - (cold start)	153
OPTION - SUPER START PACKAGE - (connection box)	155
OPTION - 24 HOUR FUEL TANK	157
OPTION - NO CONTAINMENT DRAIN PLUG	161
OPTION - 3 WAY FUEL VALVE	163
OPTION - 3 WAY FUEL VALVE - (with external module)	165
OPTION - OIL HAND PUMP	167
OPTION - CONTAINER OIL SUMP PUMP	169
OPTION - BUMPERS	171
OPTION - EXHAUST INSULATION	173

G80_G100_46622819-B_07/16

 FRAME ASSEMBLY

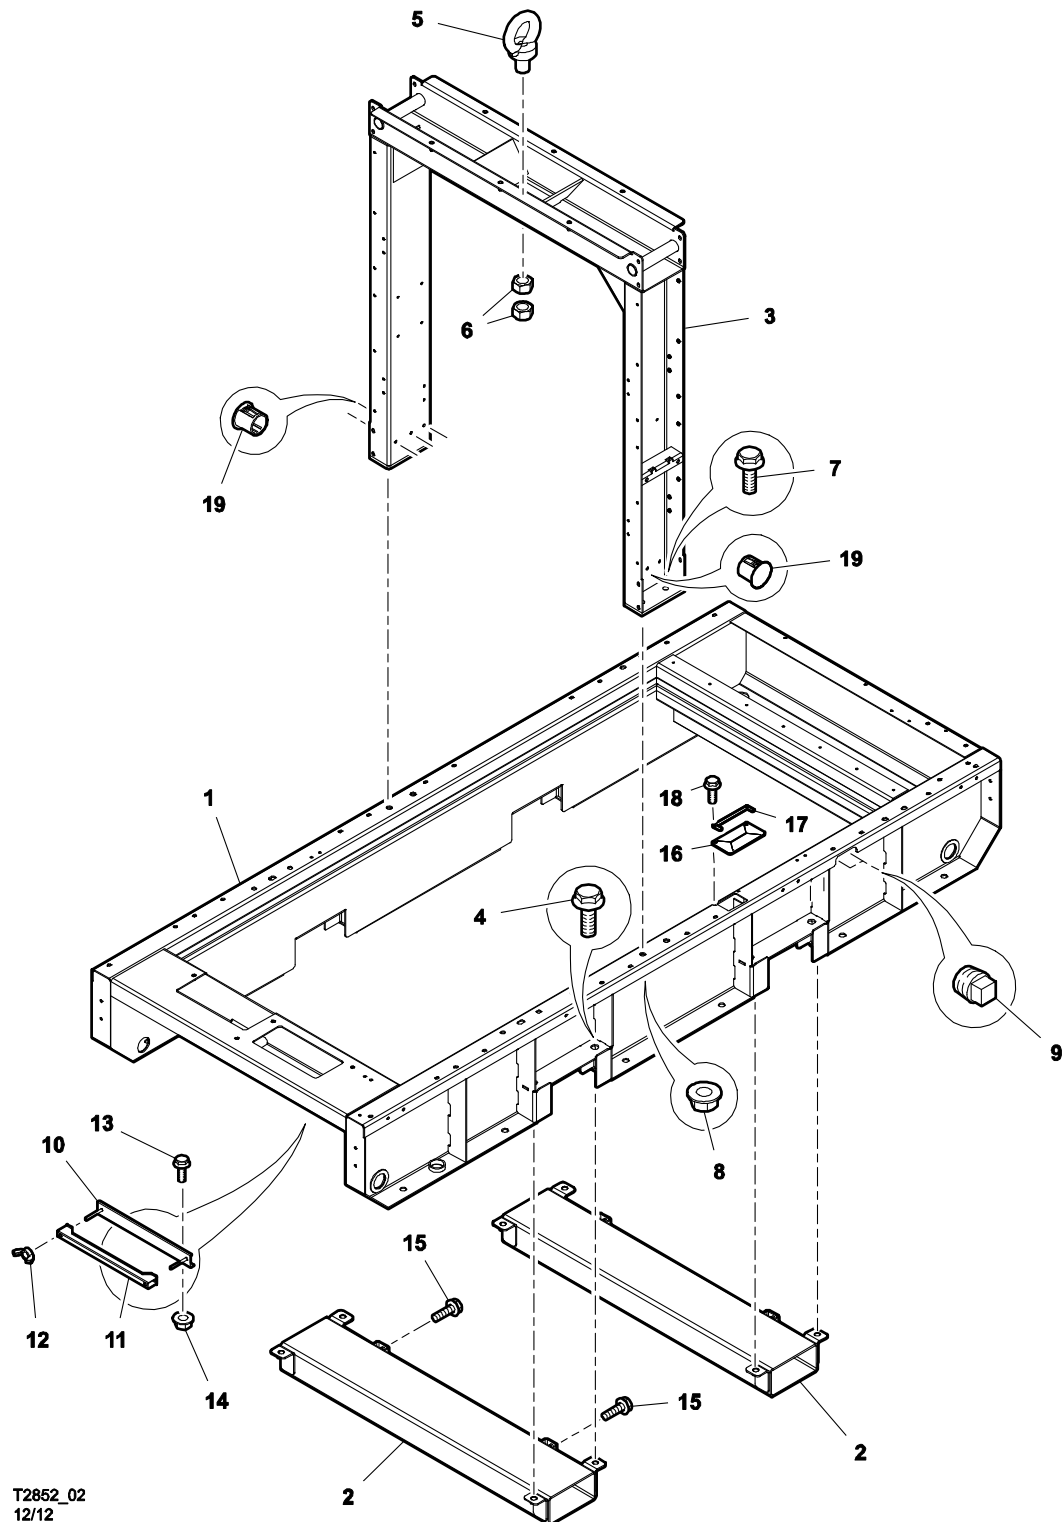

T2852_02
12/12

FRAME ASSEMBLY

[illegible]


ENCLOSURE



ENCLOSURE

Item	Part Number	Description	Remarks	Serial Number	Qty
1	46553895	PANEL ASSEMBLY			8
1	46553896	PANEL, PAINTED			8
2	46556511	PANEL ASSEMBLY			2
2	46556512	PANEL, PAINTED			1
3	46556518	PANEL ASSEMBLY			1
3	46556519	PANEL, PAINTED			1
4	46556685	PANEL ASSEMBLY			1
4	46556686	PANEL, PAINTED			1
5	46557355	DOOR ASSEMBLY			1
5	46556689	DOOR, PAINTED			1
6	46609459	PLEXIGLASS, DOOR			1
7	22897342	SEAL	(1,2 m long)		1
8	22064158	SEAL	(3,5 m long)		5
9	22375877	LATCH			5
10	36794345	CYLINDER, KEY			1
11	46556620	DOOR ASSEMBLY			1
11	46556621	DOOR, PAINTED			1
12	46556525	DOOR ASSEMBLY			2
12	46556526	DOOR, PAINTED			1
13	46556505	DOOR ASSEMBLY			1
13	46553845	DOOR, PAINTED			1
14	46556559	DOOR ASSEMBLY			1
14	46556560	DOOR, PAINTED			1
15	46556695	ROOF ASSEMBLY			1
15	46556696	ROOF, PAINTED			1
16	46556692	ROOF ASSEMBLY			1
16	46556693	ROOF, PAINTED			1
17	46557444	COVER			1
18	96742689	SCREW			4
19	46556522	PANEL ASSEMBLY			1
19	46556523	PANEL, PAINTED			1

 ENCLOSURE (CONT'D)

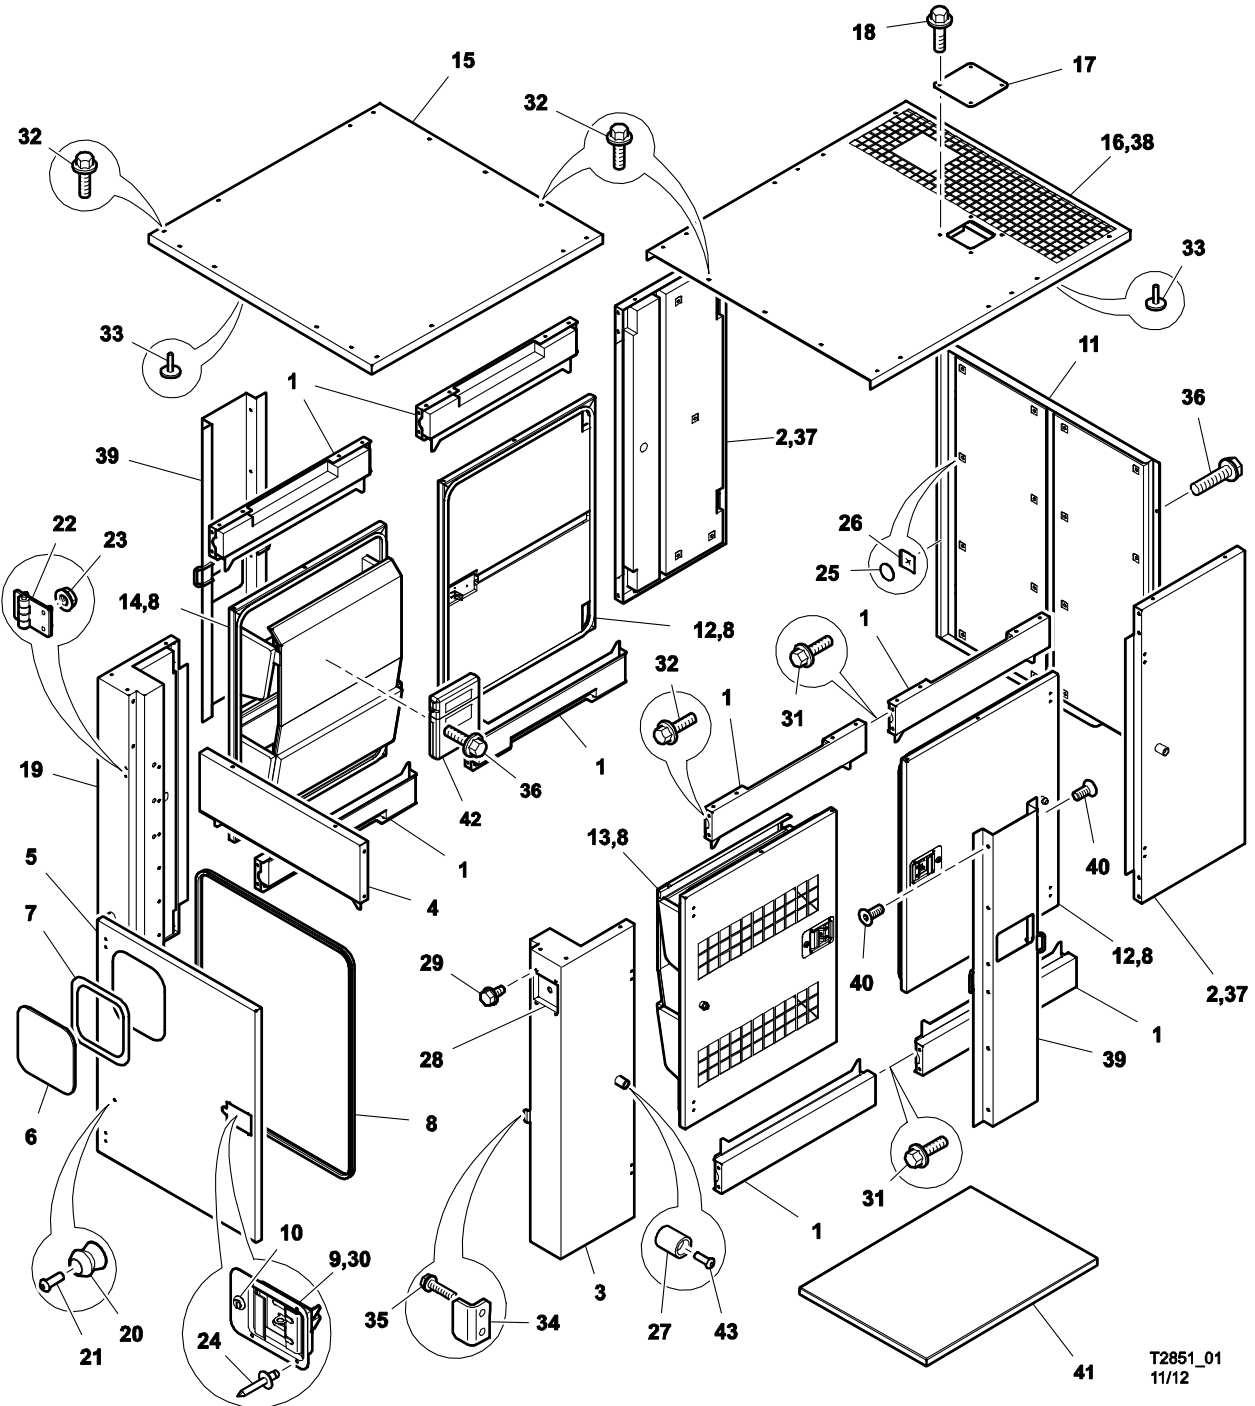


T2851_01
11/12


ENCLOSURE (CONT'D)

Item	Part Number	Description	Remarks	Serial Number	Qty
20	92922863	CATCH			5
21	96739313	SCREW			5
22	89287692	HINGE			12
23	35278530	NUT			48
24	22684971	RIVET			20
25	92104264	PROTECTOR			35
26	92101773	PLATE, RETAINER			35
27	92922855	CATCH			5
28	46610160	PANEL			1
29	36797652	SCREW			4
30	22869937	SEAL			4
31	36889608	SCREW	(M8-1.25 x 25)		16
32	96704408	SCREW			79
33	46570819	RETAINER			22
34	46557341	HOLDER			1
35	92096015	SCREW			2
36	36898096	SCREW			19
37	46556790	FIBERGLASS			2
38	46557426	FIBERGLASS			1
39	46553837	PANEL			2
40	46614019	SCREW			24
41	92949742	FOAM FIELD KIT (with adhesive)	1,9 m x 1,5 m x 25 mm (7' x 5' x 1")		1
41	92949767	FOAM FIELD KIT (with adhesive)	1,9 m x 1,5 m x 50 mm (7' x 5' x 2")		1
41	92949759	FOAM FIELD KIT (with adhesive)	0,95 m x 1,5 m x 25 mm (3' x 5' x 1")		1
41	92949775	FOAM FIELD KIT (with adhesive)	0,95 m x 1,5 m x 50 mm (3' x 5' x 2")		1
41	46592579	FOAM FIELD KIT (no adhesive)	1,9 m x 1,5 m x 50 mm (7' x 5' x 2")		1
41	46592580	FOAM FIELD KIT (no adhesive)	0,95 m x 1,5 m x 50 mm (3' x 5' x 2")		1
42	22990816	POUCH, LITERATURE			1
43	36771178	SCREW			5

 DECALS AND DOCUMENTATION

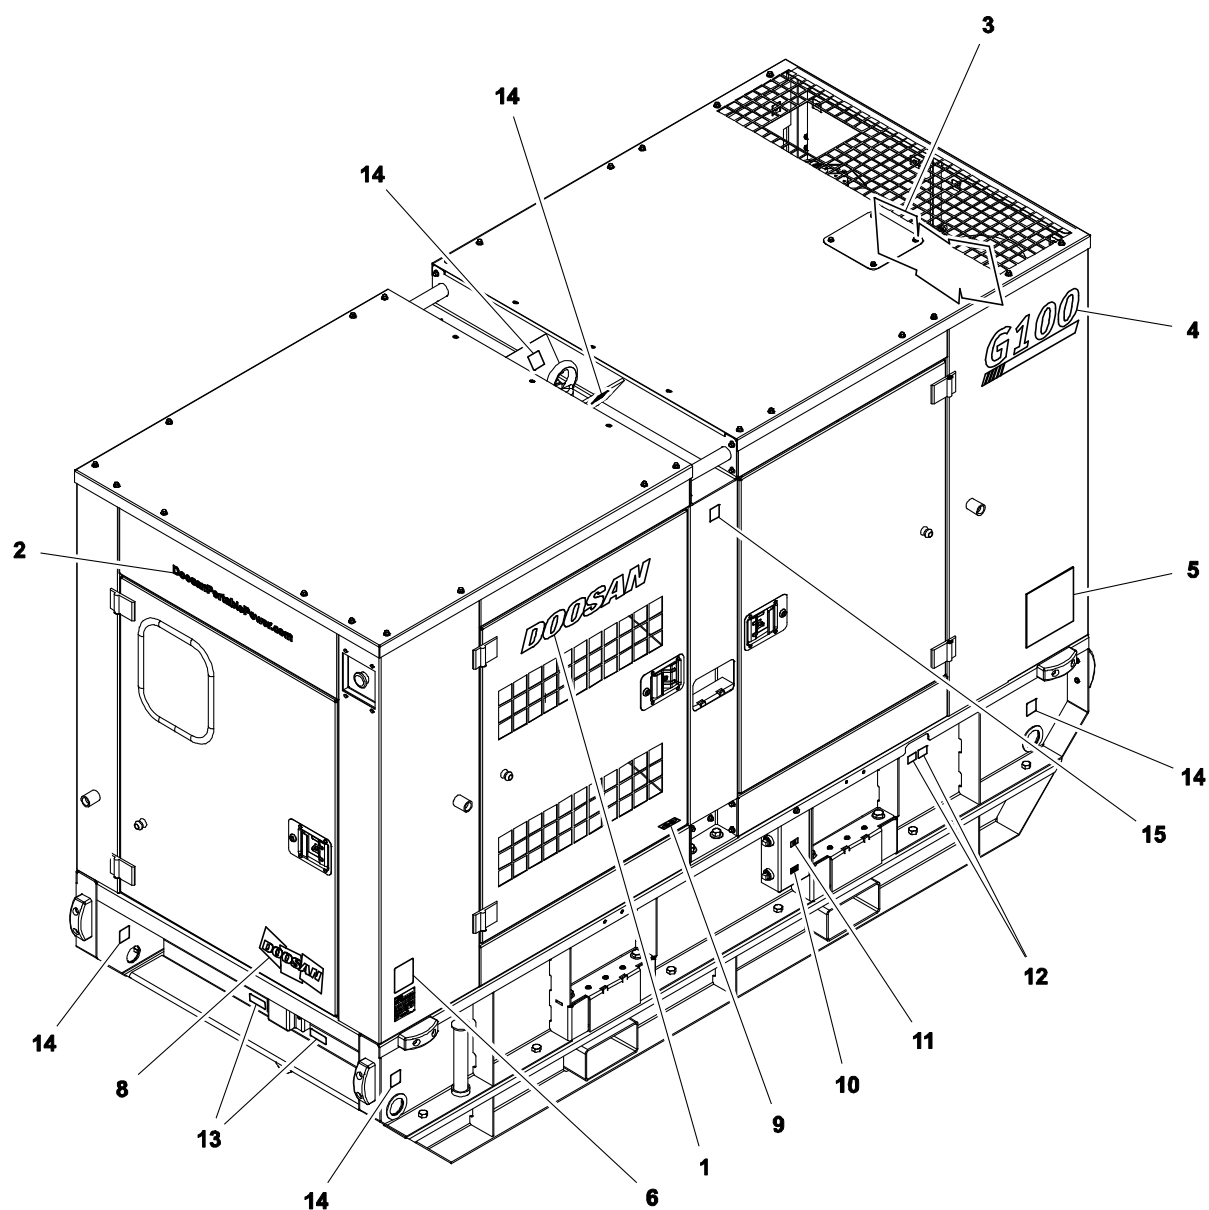


16

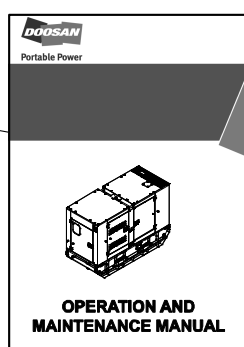 

T2853_03
11/12

 
17

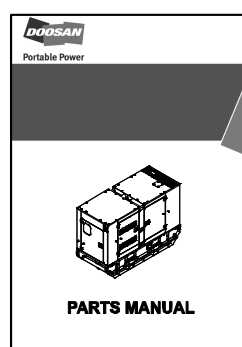

DECALS AND DOCUMENTATION

Item	Part Number	Description	Remarks	Serial Number	Qty
1	46573922	DECAL, DOOSAN LOGO			2
2	46656744	DECAL, WEB SITE			1
3	46573862	DECAL, DOOSAN TRI-COLOUR			1
4	46585923	DECAL, MODEL	(G80)		2
4	46585924	DECAL, MODEL	(G100)		2
5	46594481	DECAL, STAGE 3A			2
6	23054182	DECAL, SOUND POWER	(G80)		2
6	23054174	DECAL, SOUND POWER	(G100)		2
8	46573860	DECAL, DOOSAN TRI-COLOUR			1
9	46594480	DECAL, 3 WAY VALVE INDICATOR			1
10	46540654	DECAL, FUEL OUT			1
11	46540647	DECAL, FUEL IN			1
12	54629977	DECAL, ISO CENTRAL DRAIN	(use section 'B' for water; use section 'C' for oil)		1
13	54629977	DECAL, ISO CENTRAL DRAIN	(use section 'B & D')		1
14	93171262	DECAL, LIFT/TIE POINT			6
15	46602879	DECAL, NO LIFTING POINT			2
16	46606373	MANUAL, OPERATION & MAINTENANCE	(en)		1
16	46606359	MANUAL, OPERATION & MAINTENANCE	(fr)		1
16	46606360	MANUAL, OPERATION & MAINTENANCE	(nl)		1
16	46606361	MANUAL, OPERATION & MAINTENANCE	(et)		1
16	46606362	MANUAL, OPERATION & MAINTENANCE	(ro)		1
16	46606363	MANUAL, OPERATION & MAINTENANCE	(lt)		1
16	46606364	MANUAL, OPERATION & MAINTENANCE	(de)		1
16	46606365	MANUAL, OPERATION & MAINTENANCE	(es)		1
16	46606366	MANUAL, OPERATION & MAINTENANCE	(bg)		1
16	46606367	MANUAL, OPERATION & MAINTENANCE	(no)		1
16	46606368	MANUAL, OPERATION & MAINTENANCE	(pt)		1
16	46606369	MANUAL, OPERATION & MAINTENANCE	(cs)		1
16	46606371	MANUAL, OPERATION & MAINTENANCE	(ru)		1
16	46606372	MANUAL, OPERATION & MAINTENANCE	(sv)		1
17	46622819	MANUAL, PARTS			1

 ALTERNATOR MOUNTING (G80)

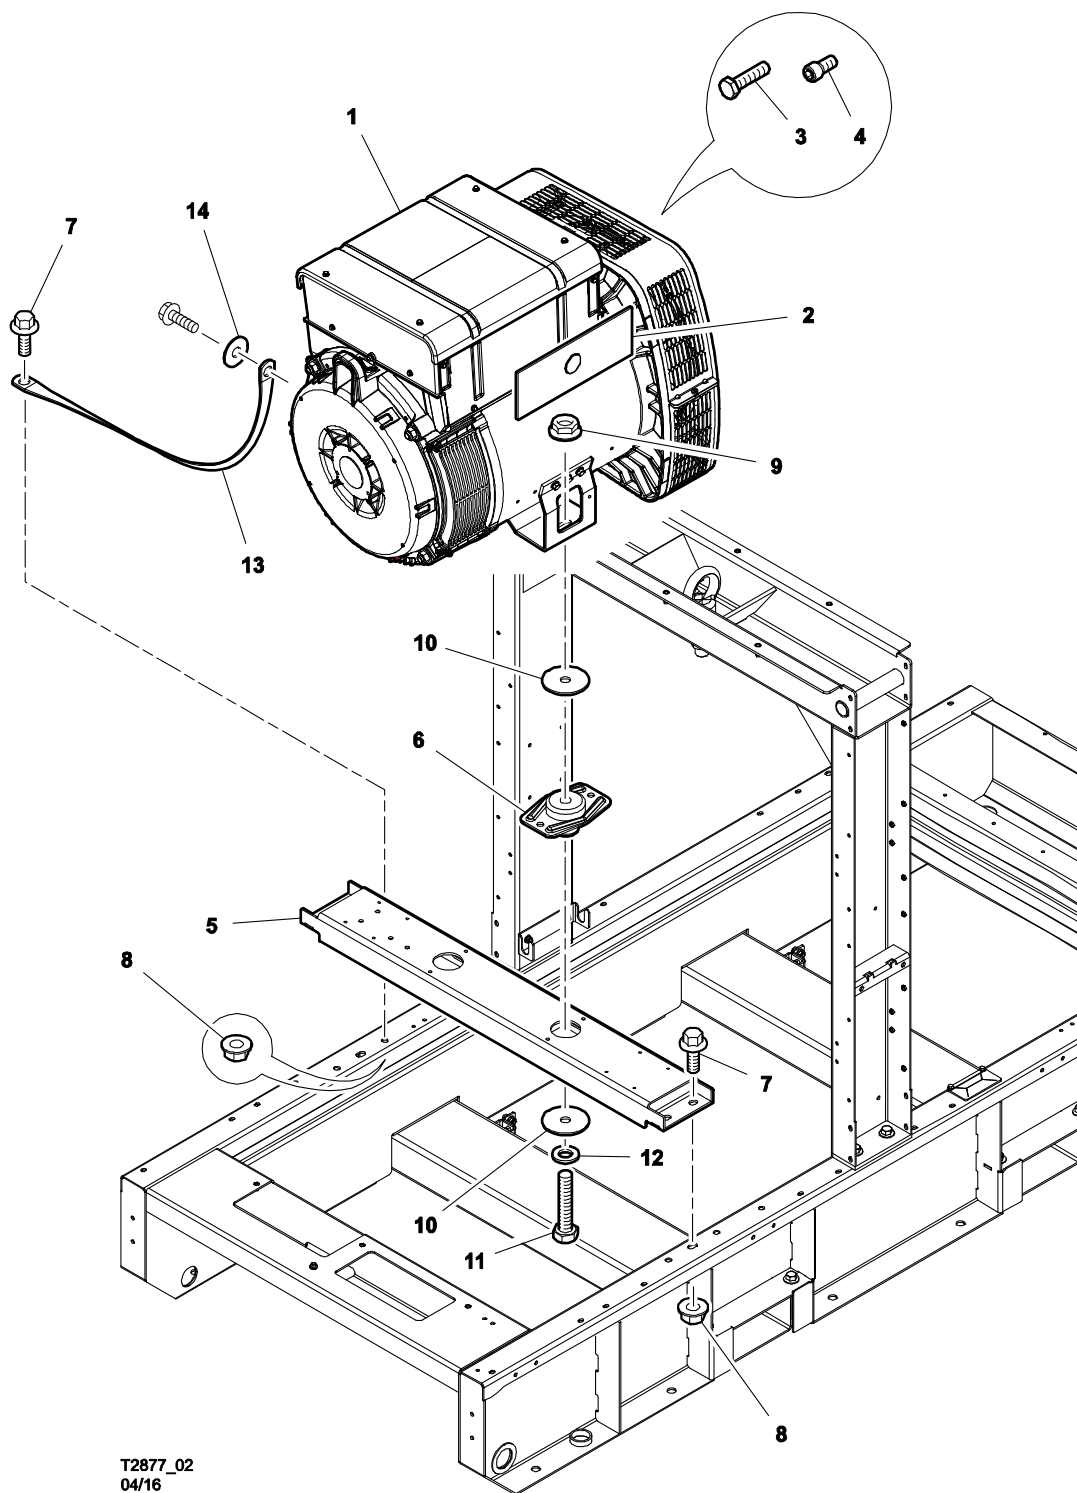


T2877_02
04/16

ALTERNATOR MOUNTING (G80)

[illegible]

 ALTERNATOR MOUNTING (G100)

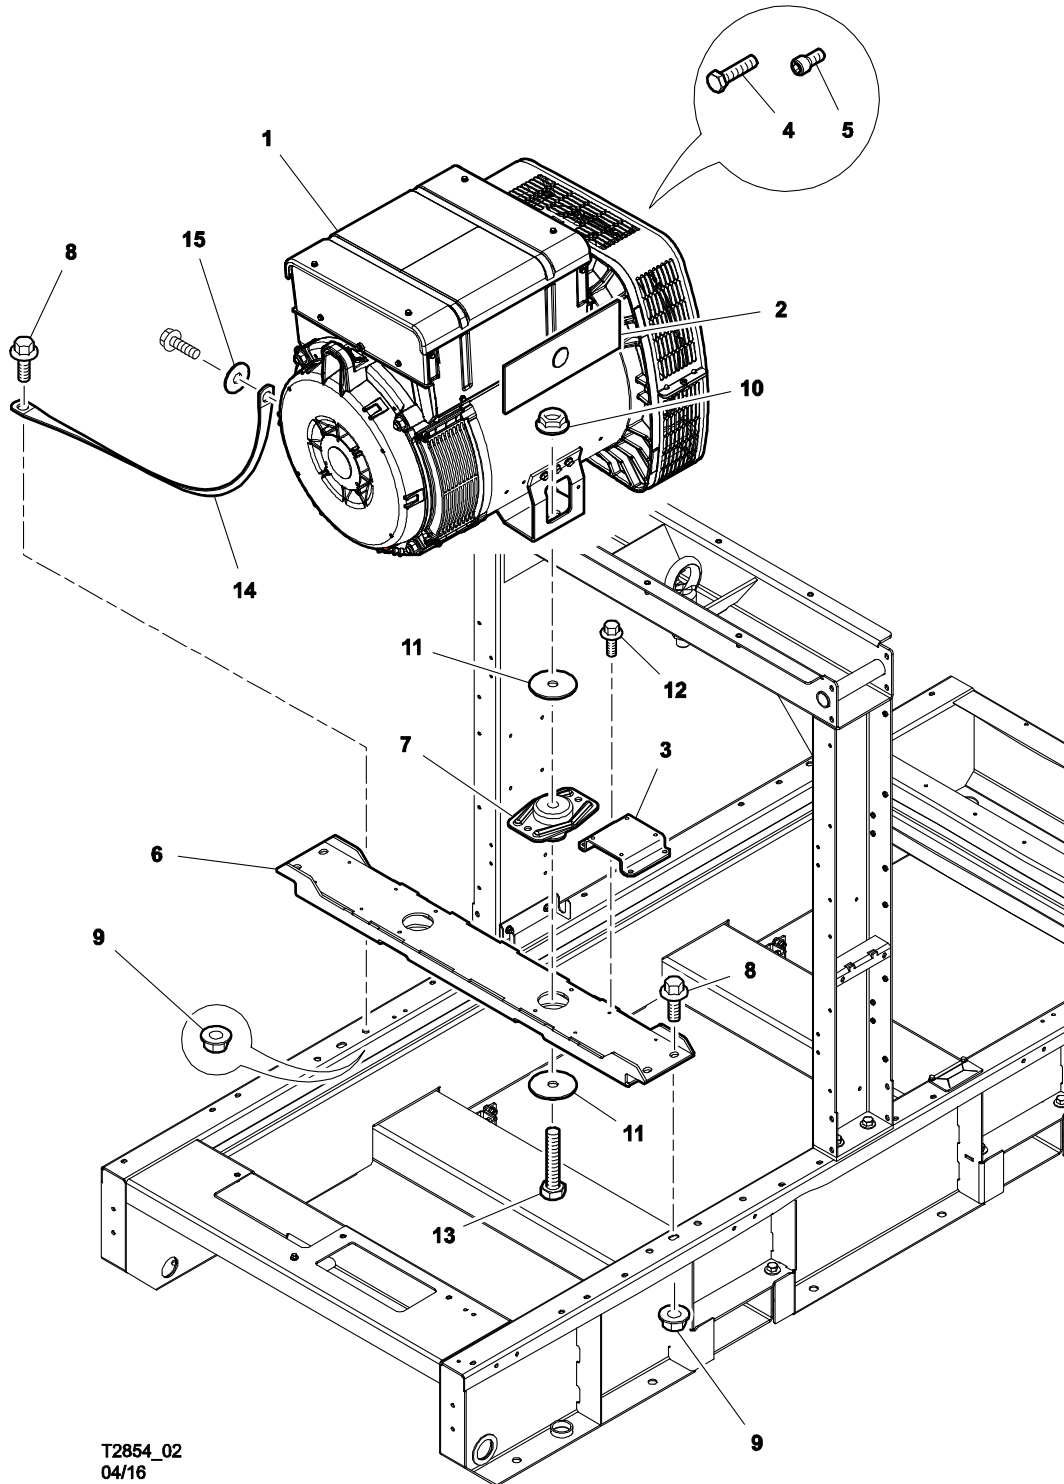


T2854_02
04/16

ALTERNATOR MOUNTING (G100)

[illegible]

 ALTERNATOR PARTS **(G80)** **(G08030001 -> G08030024)**

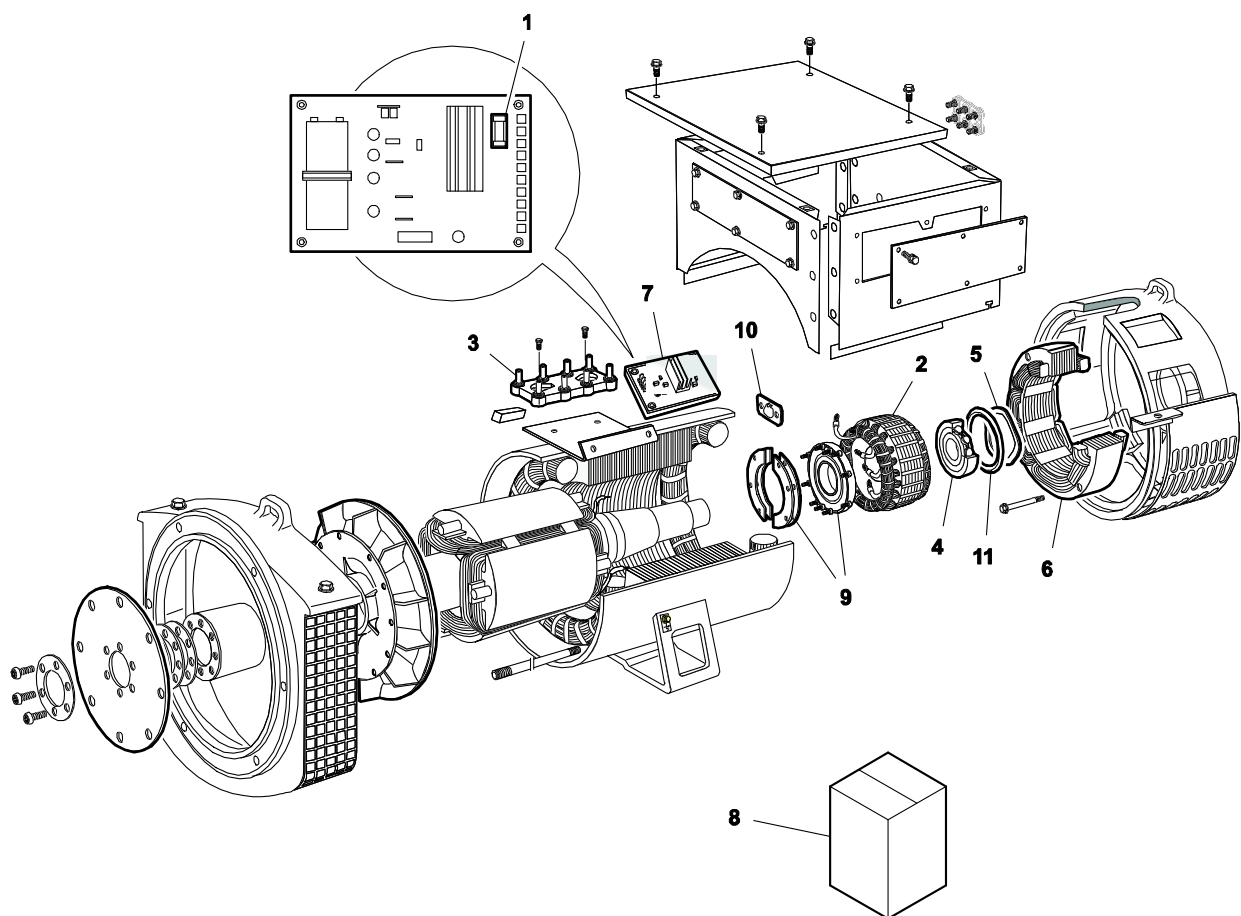


T2319_01
03/13

ALTERNATOR PARTS (G80) (G08030001 -> G08030024)

[illegible]

 ALTERNATOR PARTS **(G100)** **(G10030001 -> G10030115)**

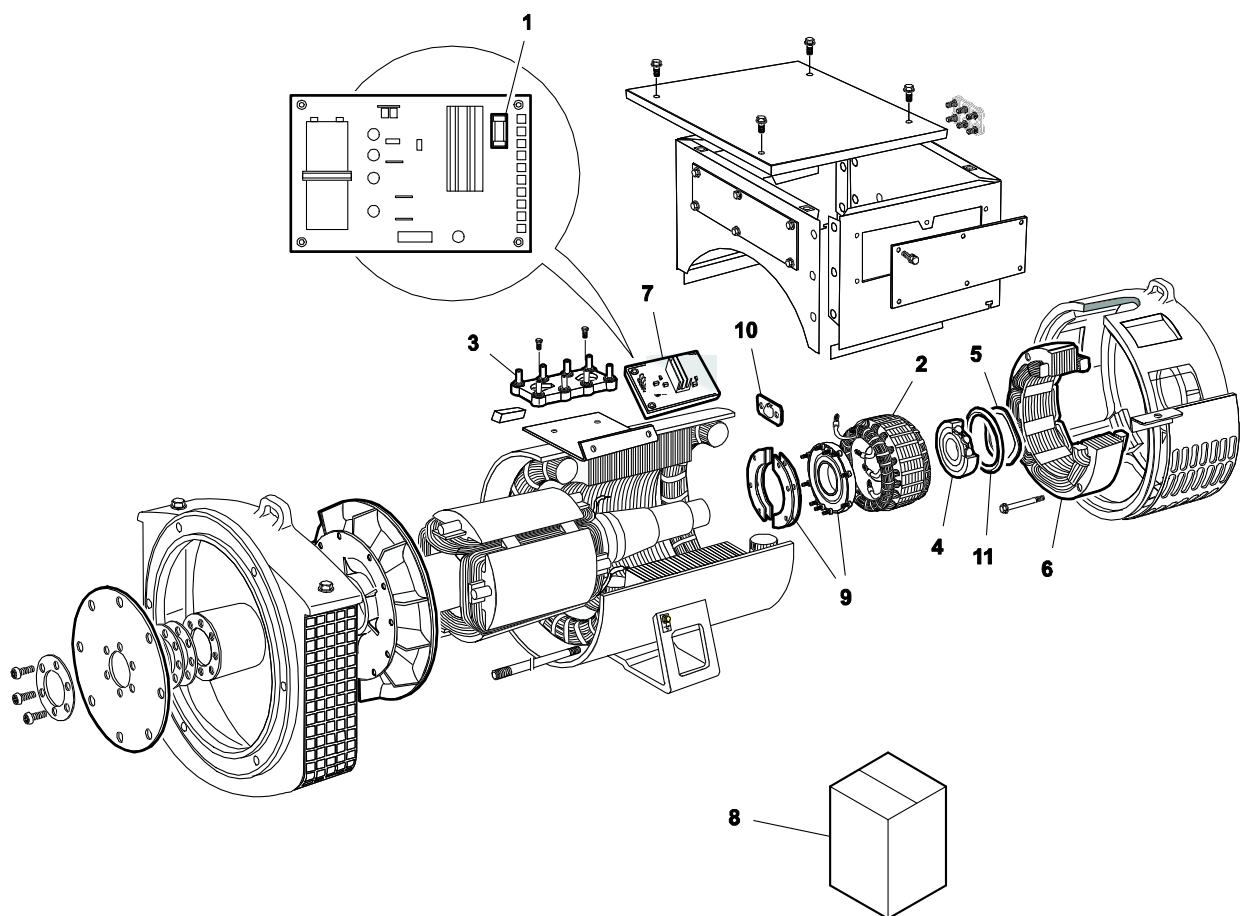


T2319B_01
03/13

**ALTERNATOR PARTS
(G100)
(G10030001 -> G10030115)**

[illegible]

 ALTERNATOR PARTS

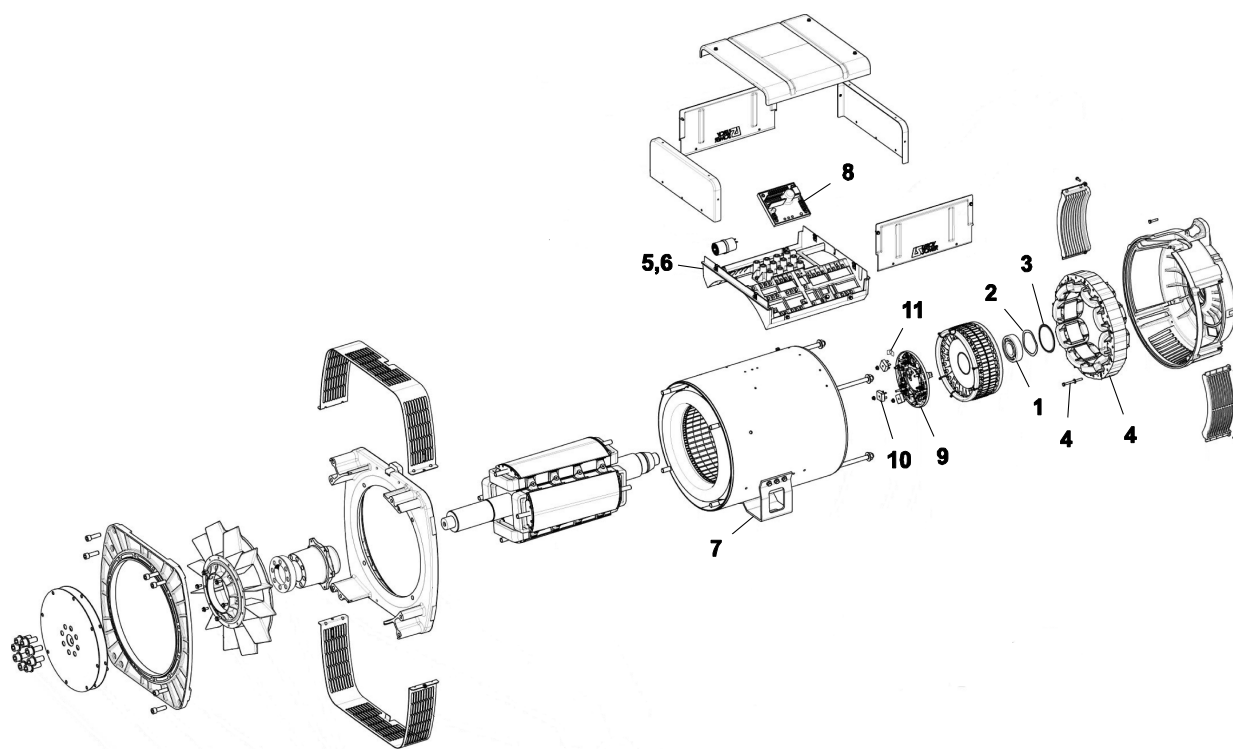


T2827_00
04/16

ALTERNATOR PARTS	
------------------	--

[illegible]

 CONTROL PANEL (digital)

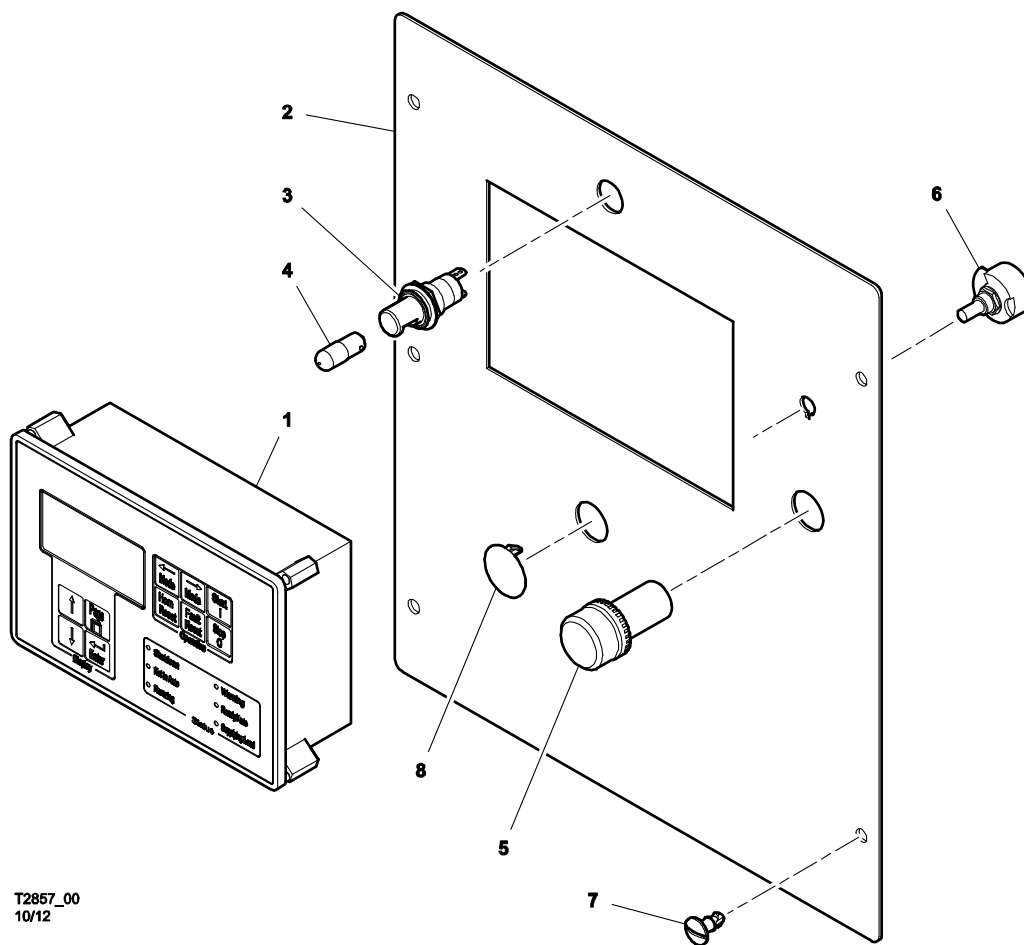


T2857_00
10/12

CONTROL PANEL (digital)

[illegible]

 CONTROL PANEL (analogue)

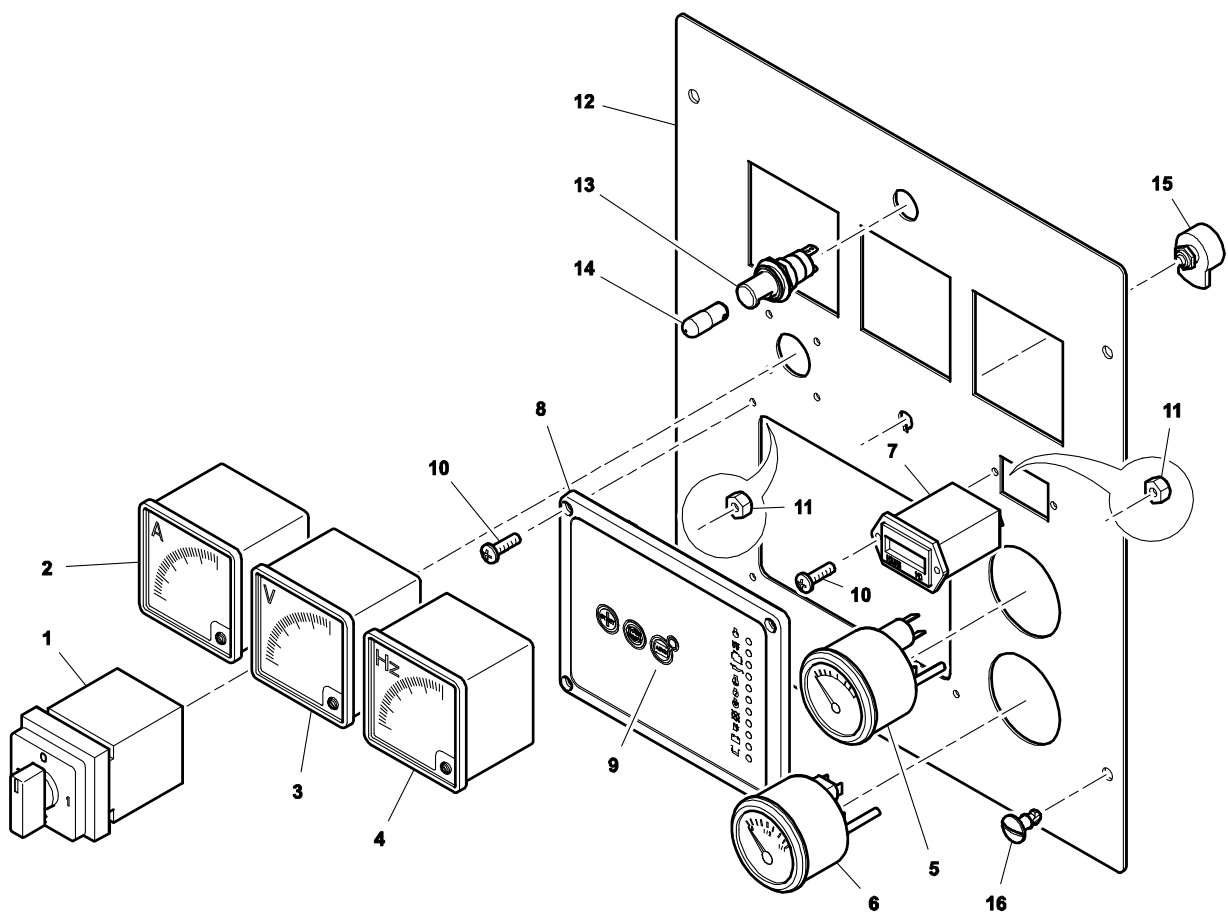


T2858_00
10/12

CONTROL PANEL (analogue)

[illegible]

 POWER PEDESTAL ASSEMBLY (G80)

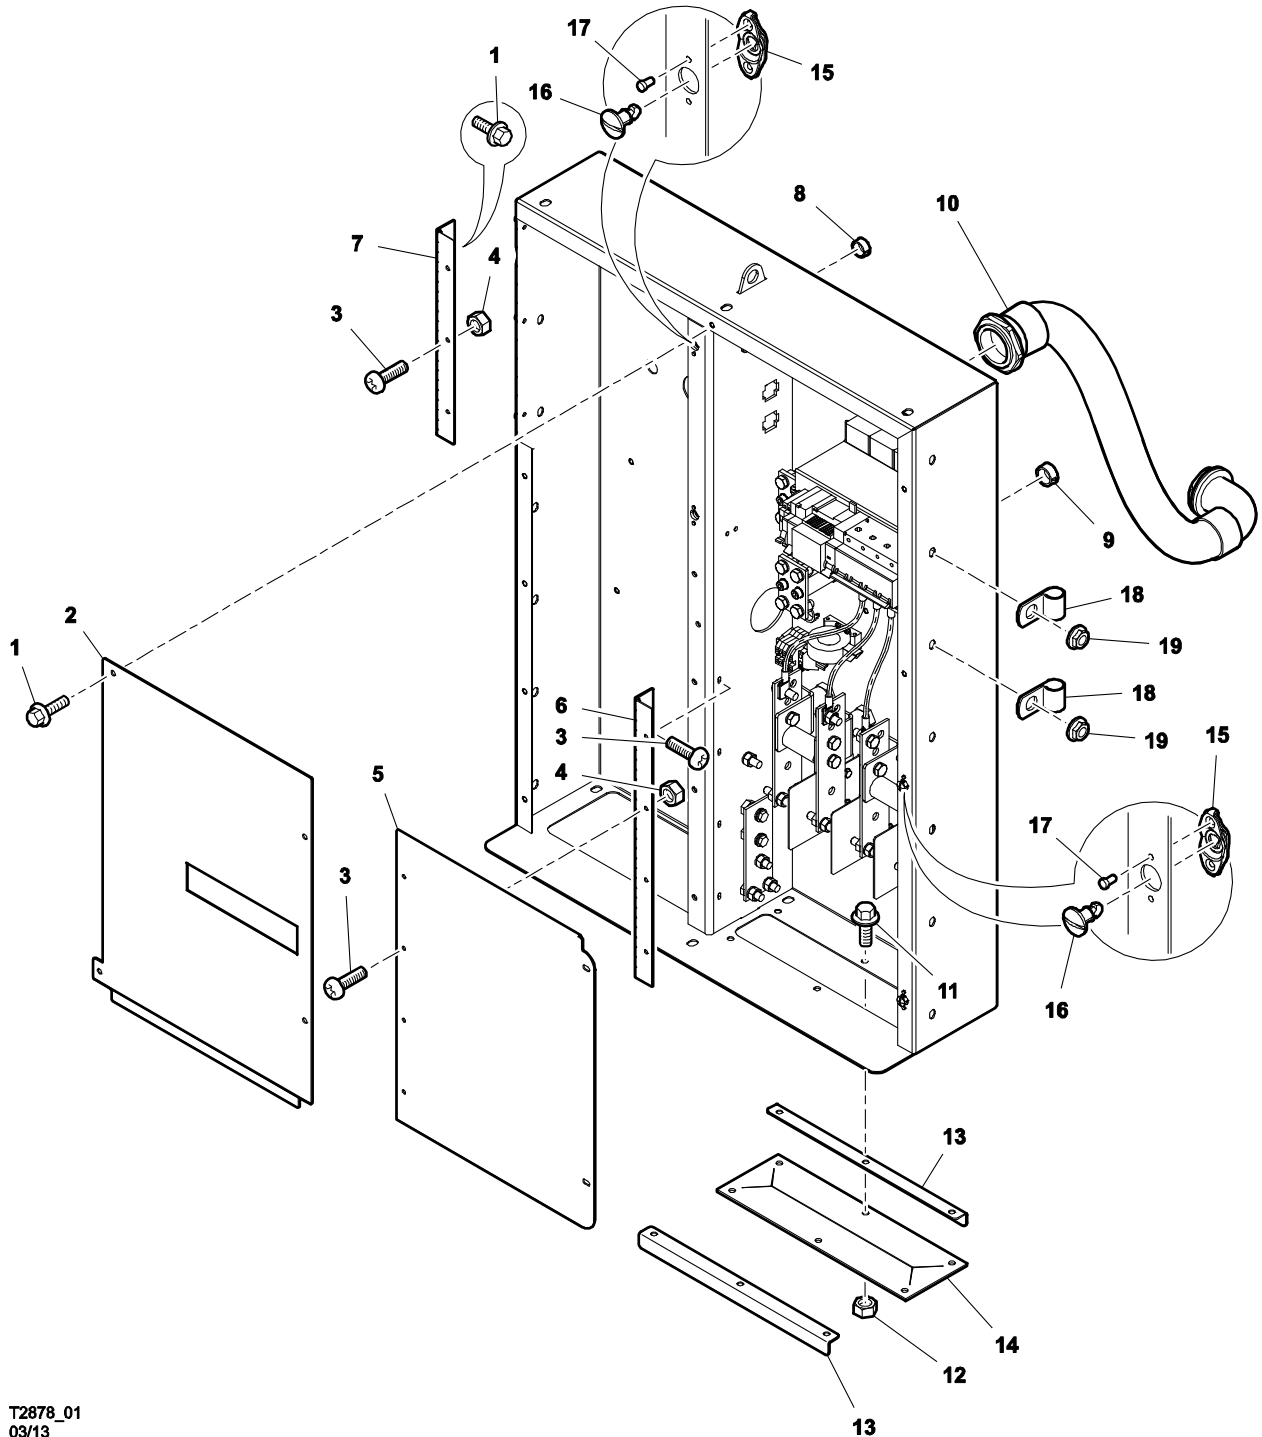


T2878_01
03/13

POWER PEDESTAL ASSEMBLY (G80)

[illegible]

 
POWER PEDESTAL ELECTRICAL LAYOUT (G80)

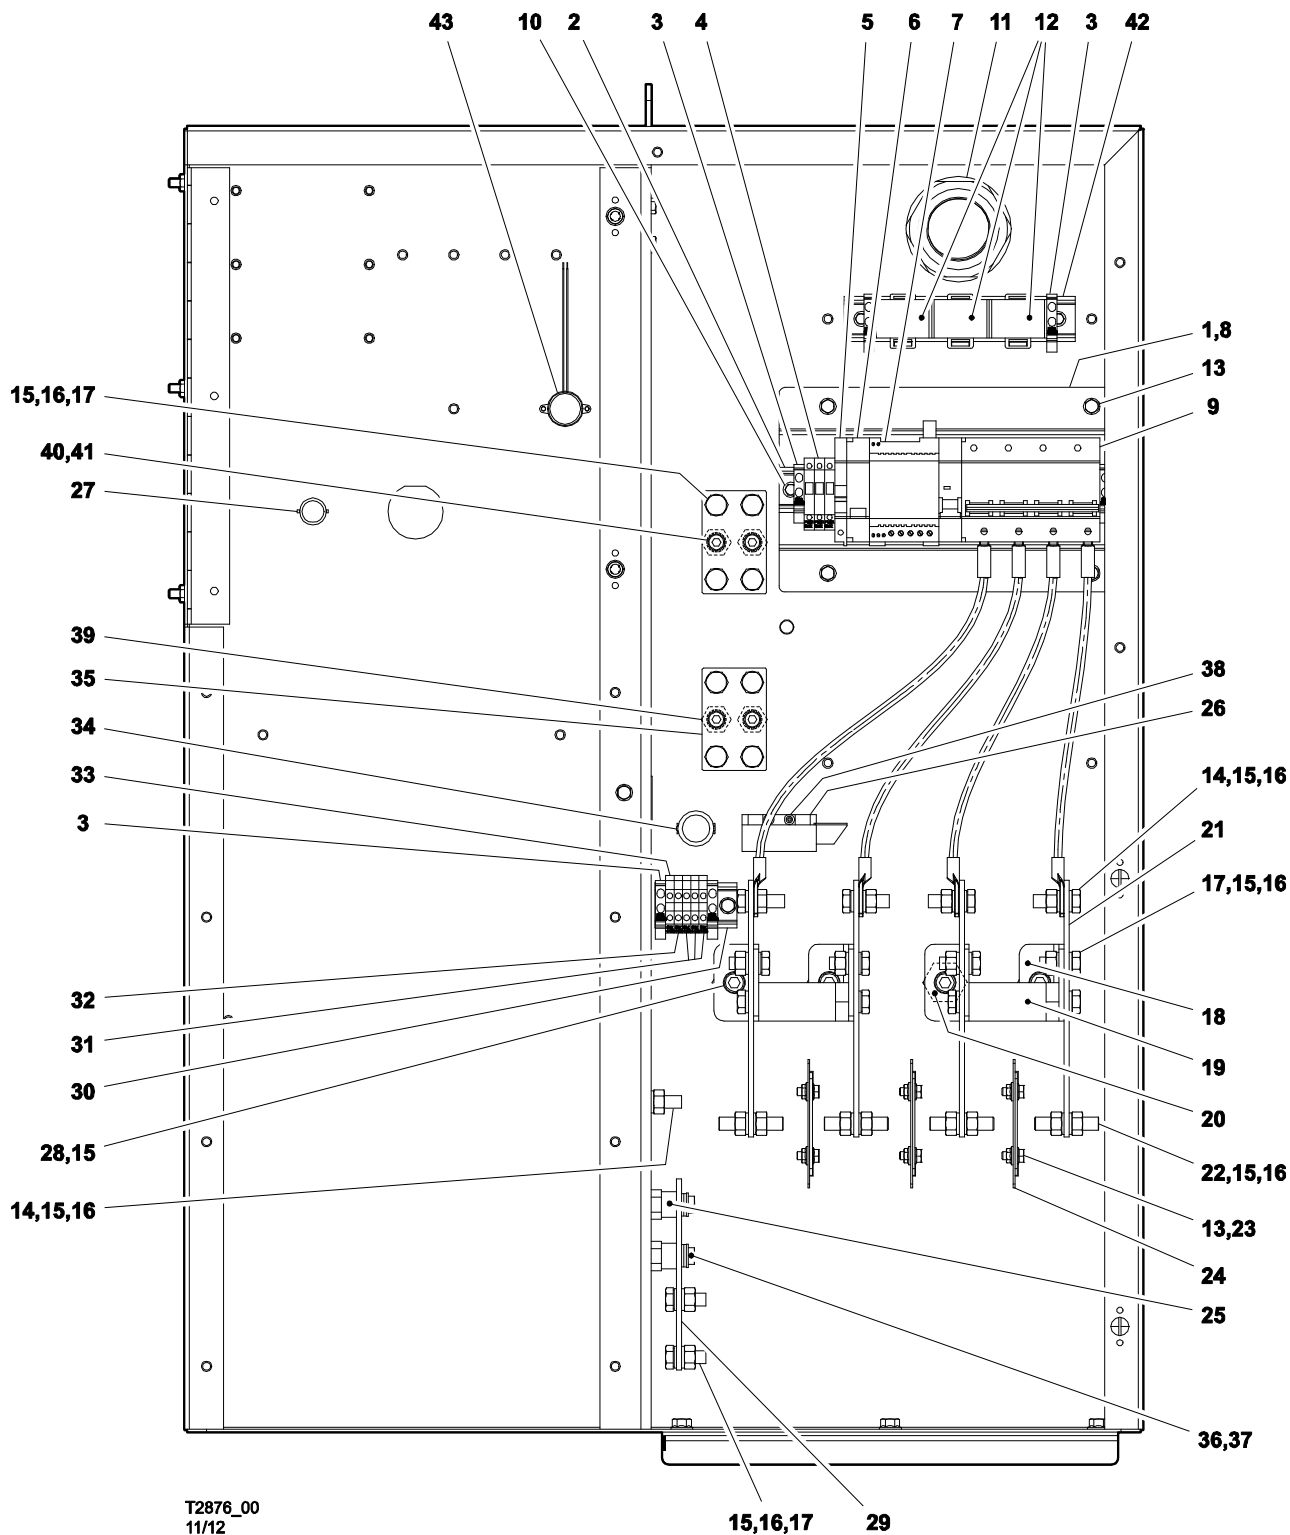

POWER PEDESTAL ELECTRICAL LAYOUT (G80)

Item	Part Number	Description	Remarks	Serial Number	Qty
1	46618419	BREAKER ASSEMBLY	W/Ref. 2-10		1
2	46618379	RAIL, DIN			1
3	22750970	TERMINAL			6
4	22747299	HOLDER			3
5	23293772	CONTACT			1
6	23293764	BREAKER			1
7	23269244	RELAY			1
8	46618400	SPACER			1
9	46649376	BREAKER			1
10	96750575	SCREW			2
11	46620808	HARNESS ASSEMBLY			1
12	22721104	TRANSFORMER			3
13	92184811	SCREW			12
14	35271154	BOLT			5
15	46501292	WASHER			64
16	92304526	NUT			36
17	96702287	SCREW			19
18	46557368	BRACKET			4
19	46557375	ISOLATOR			2
20	46557367	ISOLATOR			4
21	46558119	TERMINAL			4
22	23375785	BOLT			8
23	36898104	NUT			6
24	46558599	GUARD			3
25	46622971	ISOLATOR			2
26	23269228	TRANSFORMER			1
27	92783281	PLUG			1
28	96708136	SCREW			4
29	46558281	TERMINAL			1
30	22748206	RAIL			1
31	22768436	TERMINAL			3

 
POWER PEDESTAL ELECTRICAL LAYOUT (CONT'D) **(G80)**

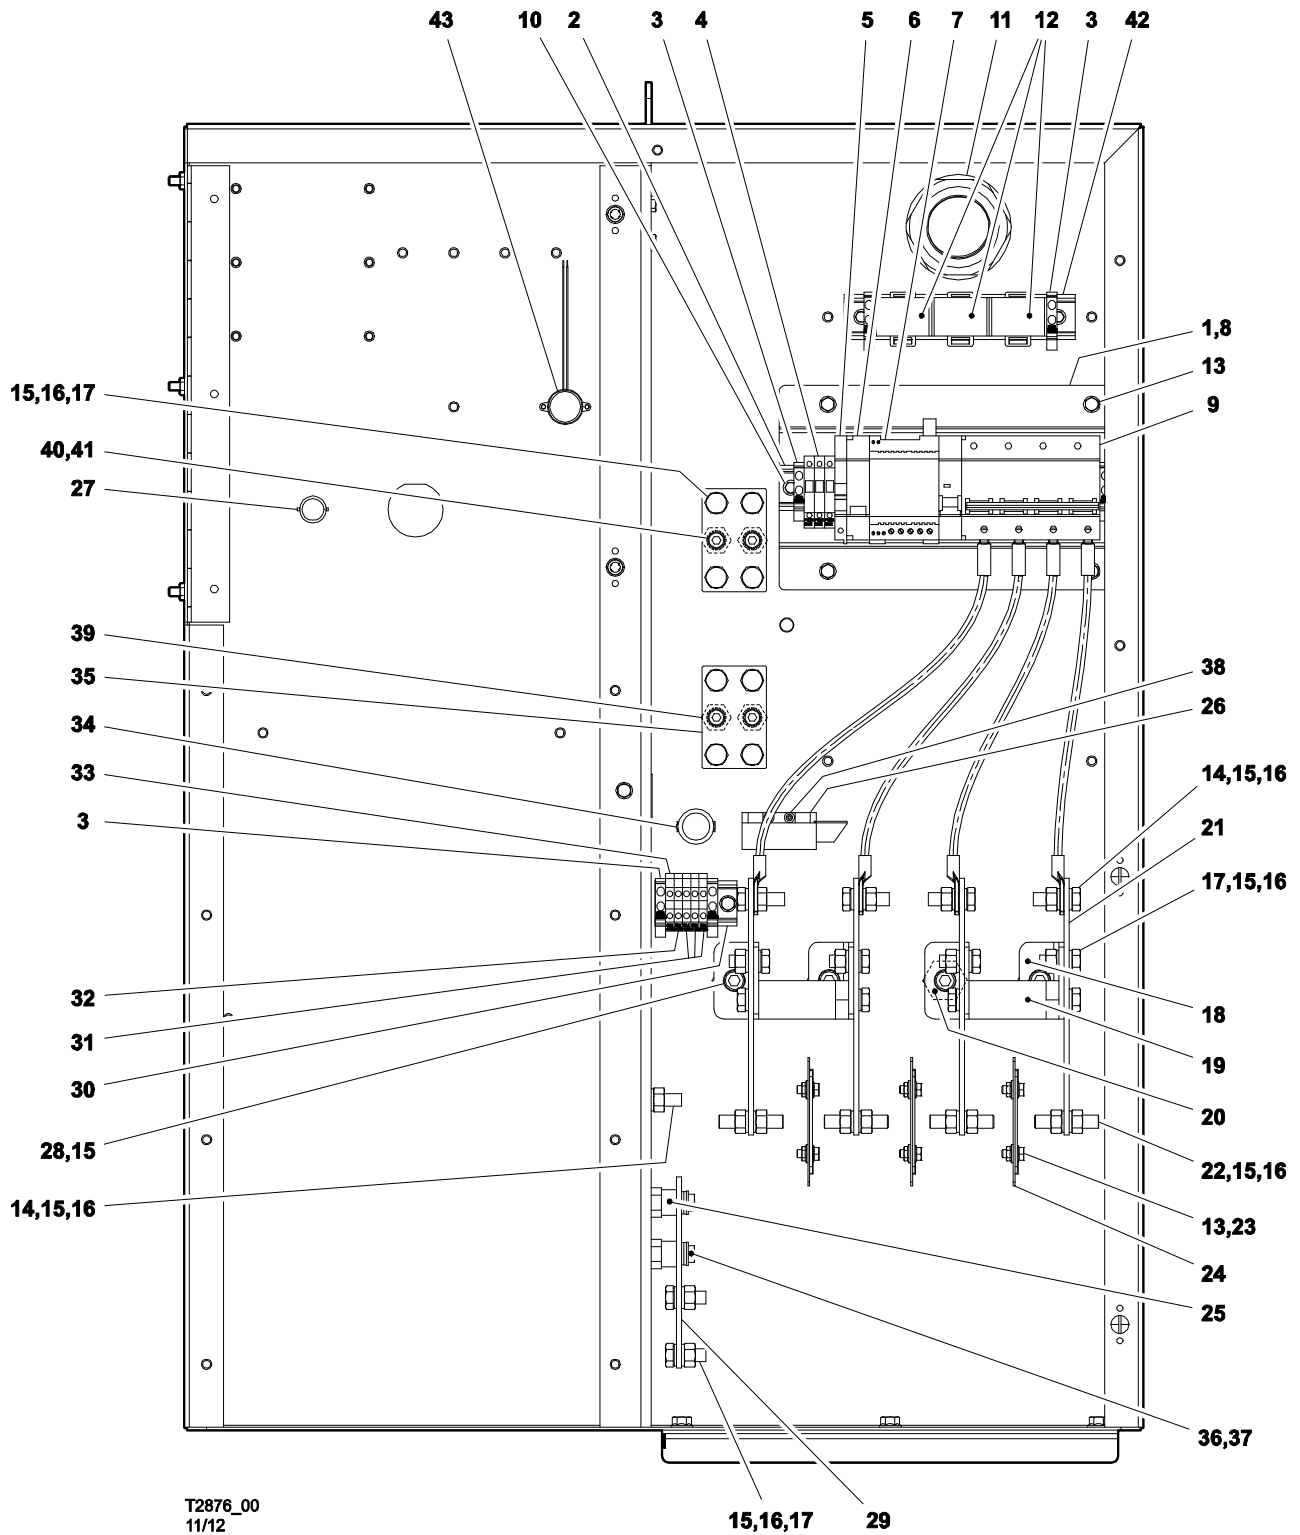

POWER PEDESTAL ELECTRICAL LAYOUT (CONT'D)
(G80)

[illegible]

 POWER PEDESTAL ASSEMBLY (G100)

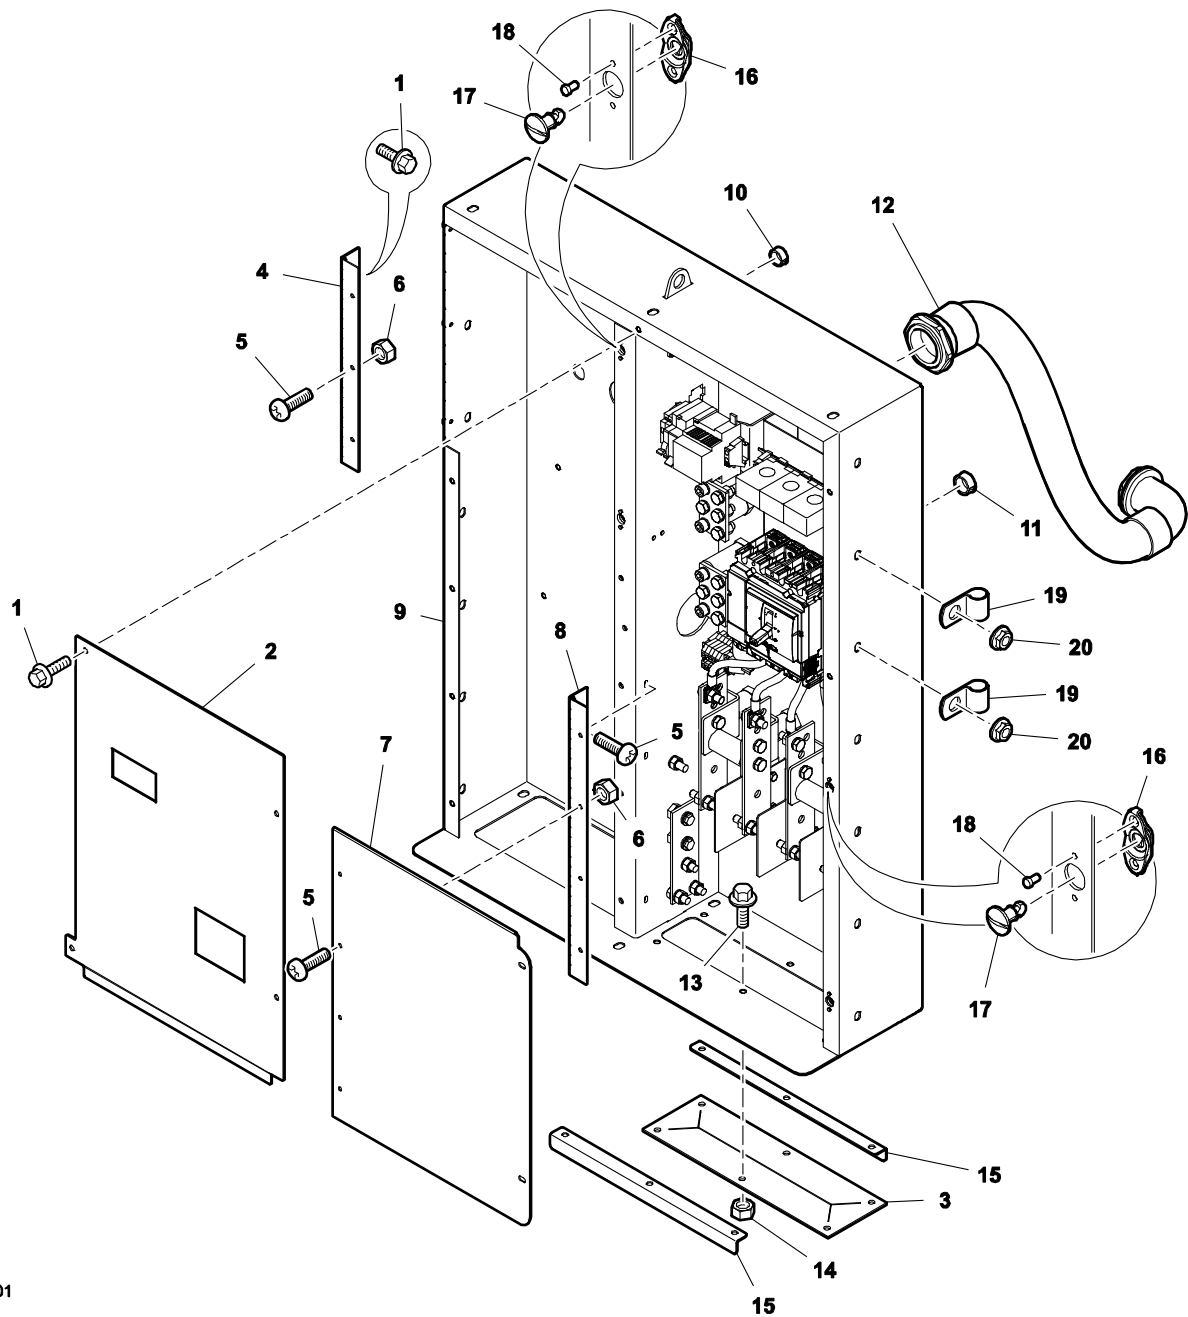


T2856_01
03/13

POWER PEDESTAL ASSEMBLY (G100)

[illegible]

 
POWER PEDESTAL ELECTRICAL LAYOUT (G100)

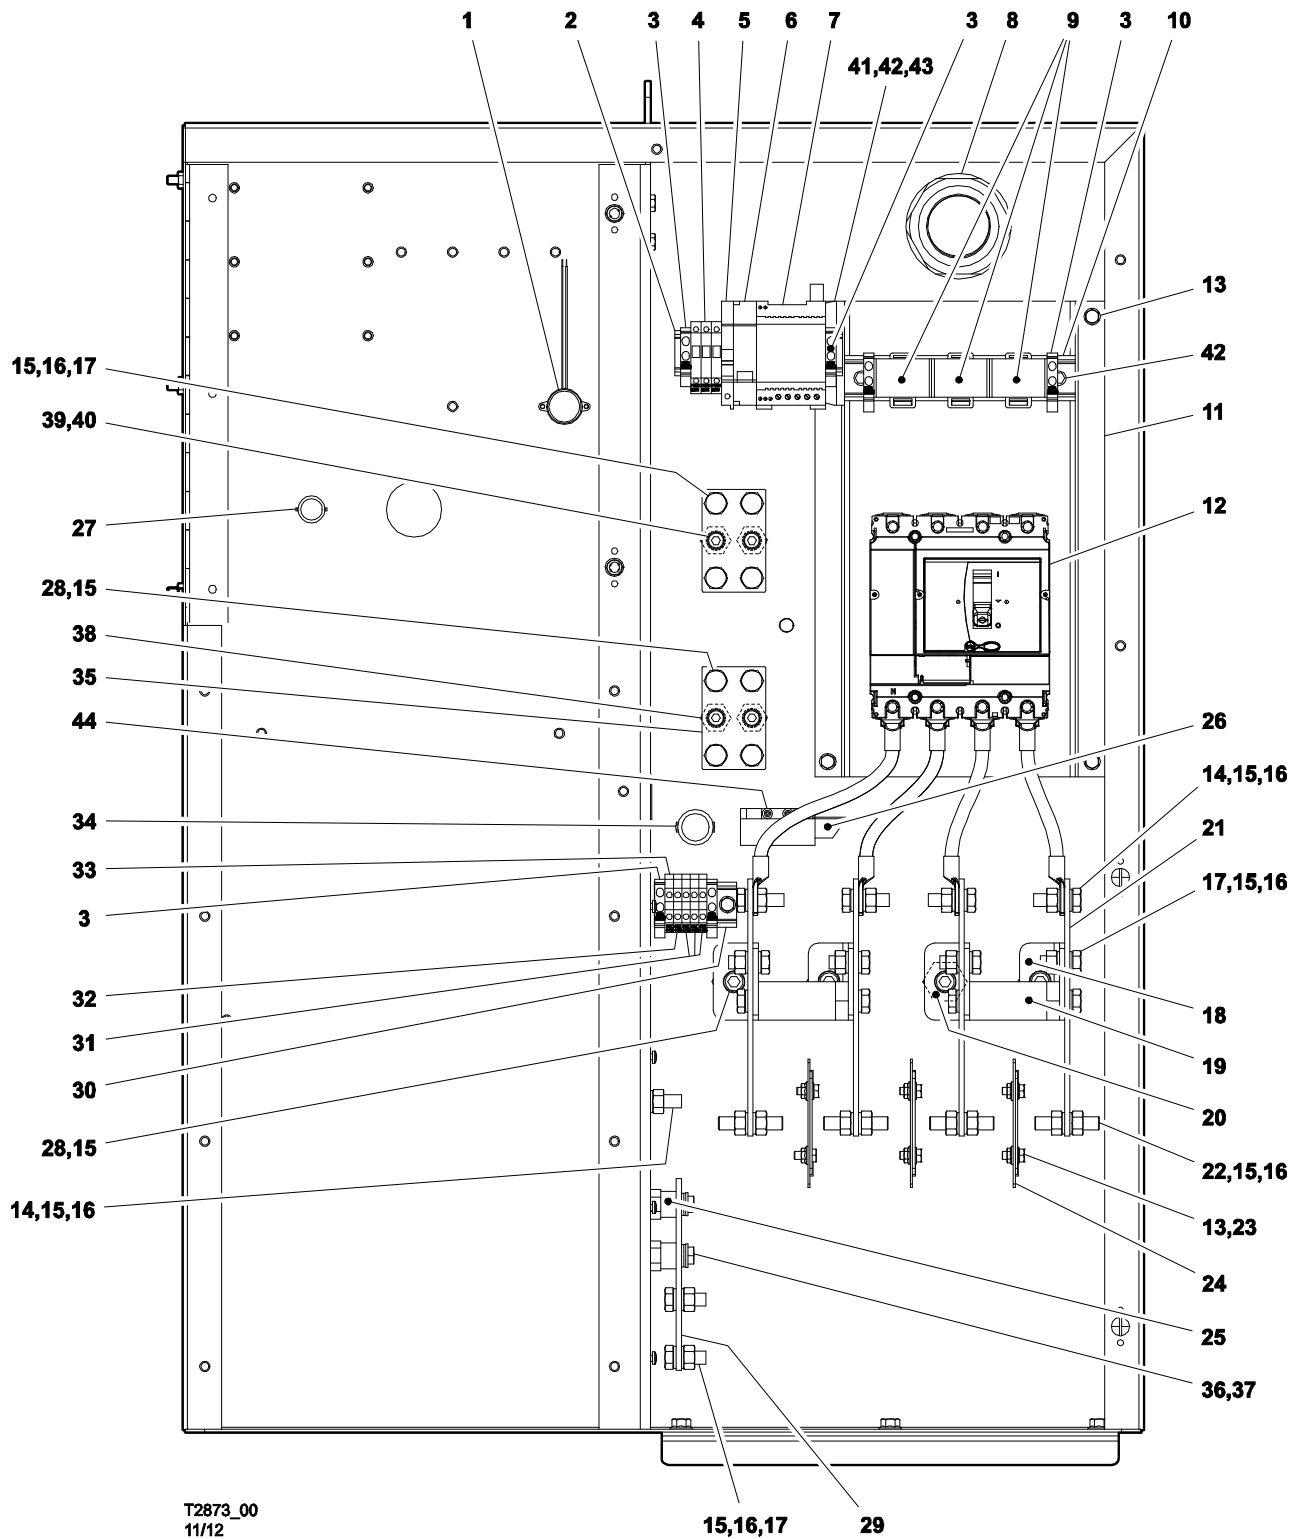

POWER PEDESTAL ELECTRICAL LAYOUT (G100)

Item	Part Number	Description	Remarks	Serial Number	Qty
1	23189319	HORN			1
2	46620789	RAIL, DIN			1
3	22750970	TERMINAL			6
4	22747299	HOLDER			3
5	23293772	CONTACT			1
6	23293764	BREAKER			1
7	23269244	RELAY			1
8	46559101	HARNESS			1
9	22904072	TRANSFORMER			3
10	22734859	RAIL, DIN			1
11	46557979	SPACER			1
12	46558971	BREAKER			1
13	92184811	SCREW			12
14	35271154	BOLT			5
15	46501292	WASHER			64
16	92304526	NUT			36
17	96702287	SCREW			19
18	46557368	BRACKET			4
19	46557375	ISOLATOR			2
20	46557367	ISOLATOR			4
21	46558119	TERMINAL			4
22	23375785	BOLT			8
23	36898104	NUT			6
24	46558599	GUARD			3
25	46622971	ISOLATOR			2
26	23269228	TRANSFORMER			1
27	92783281	PLUG			1
28	96708136	SCREW			4
29	46558281	TERMINAL			1
30	22748206	RAIL			1
31	22768436	TERMINAL			3

 
POWER PEDESTAL ELECTRICAL LAYOUT (CONT'D) (G100)

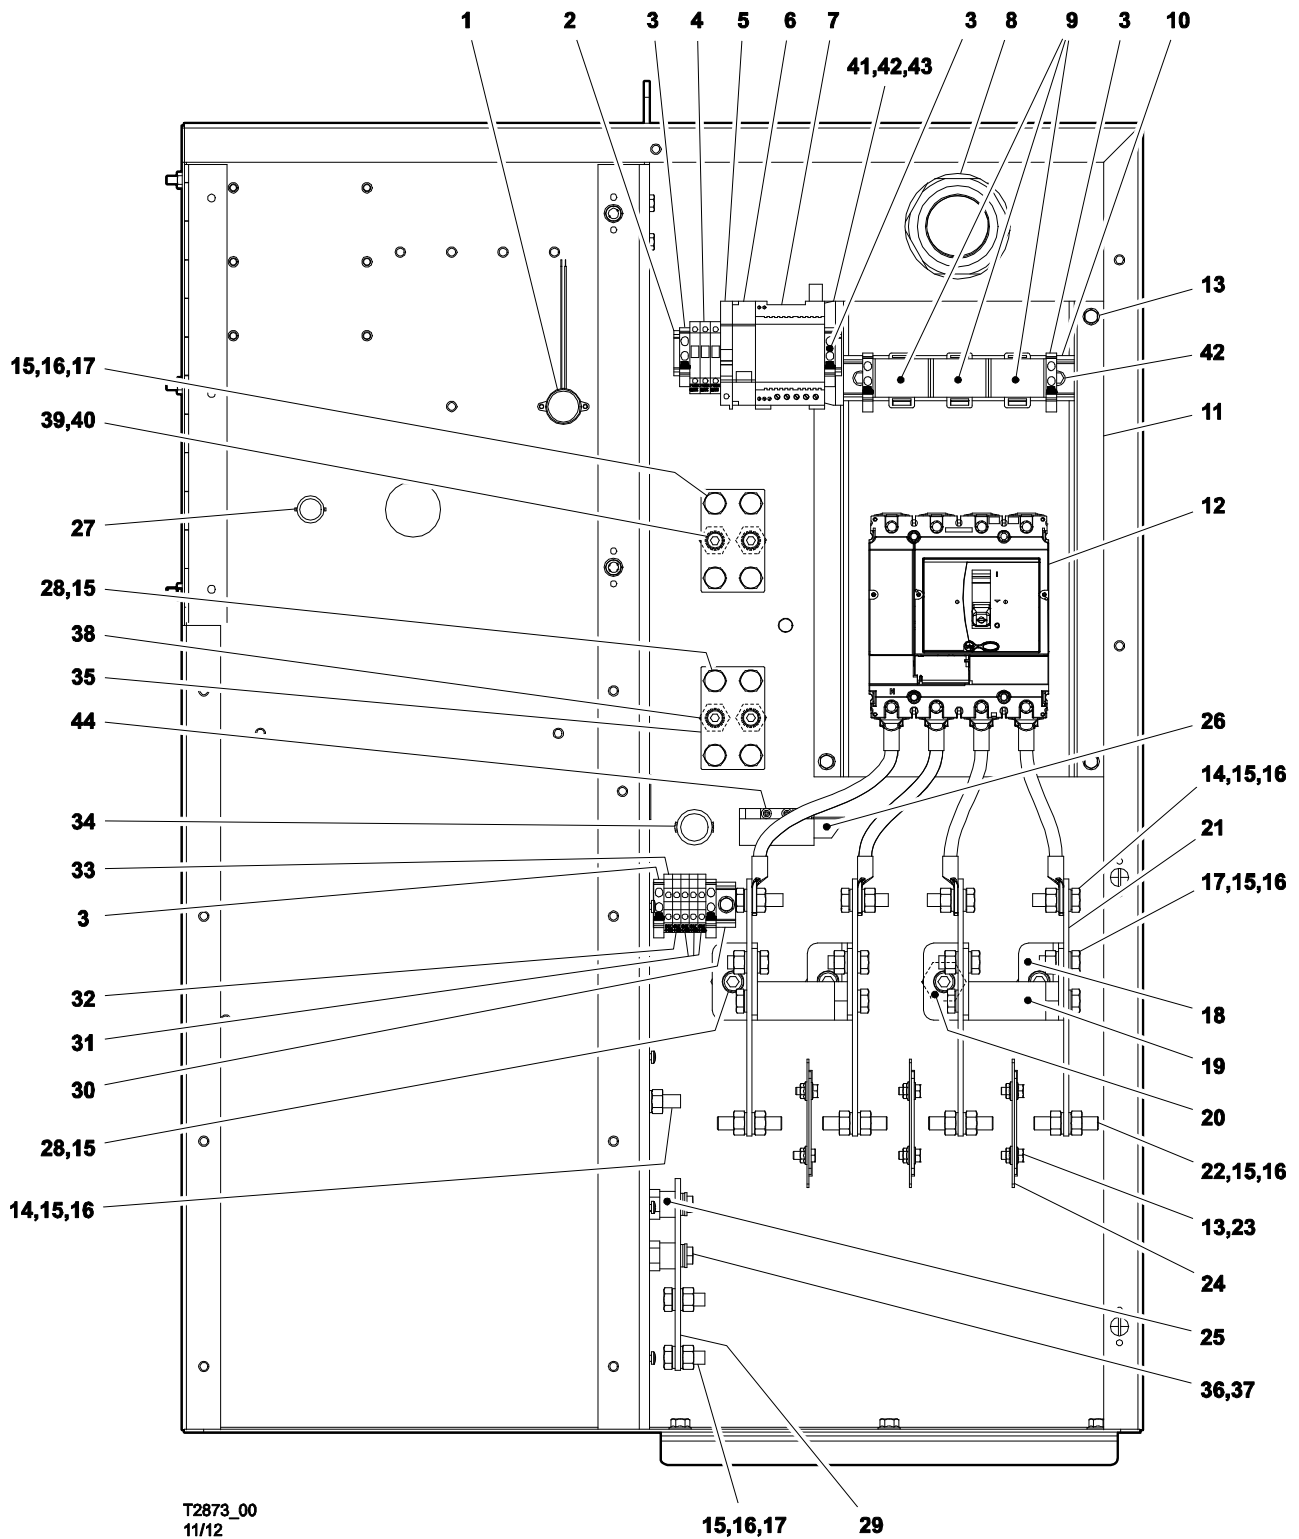

POWER PEDESTAL ELECTRICAL LAYOUT (CONT'D) (G100)

[illegible]

 BATTERY

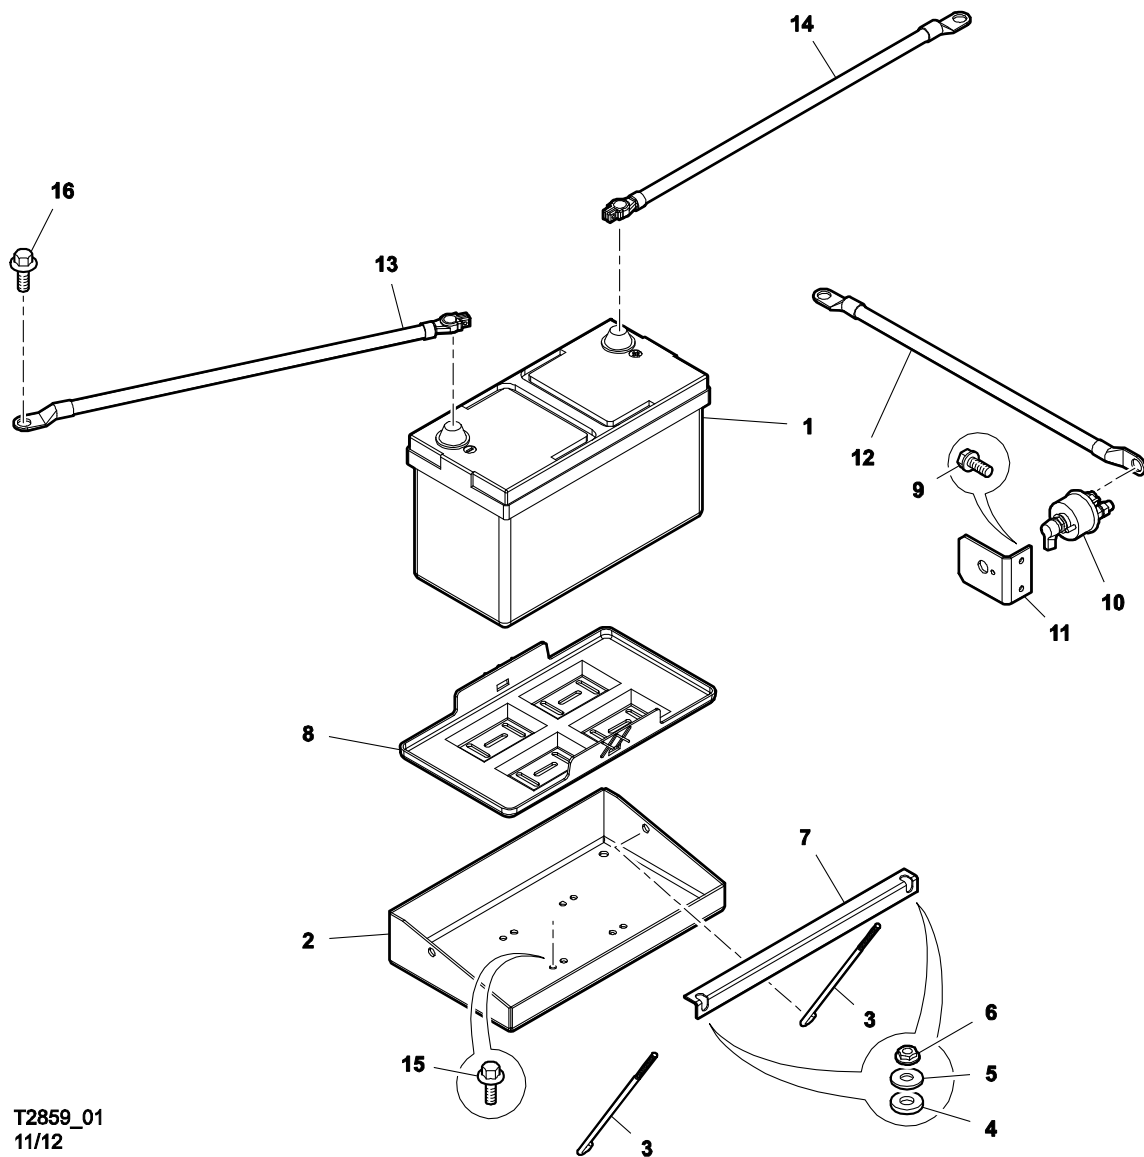


T2859_01
11/12

BATTERY	
---------	--

[illegible]

 WIRING DIAGRAM (alternator)

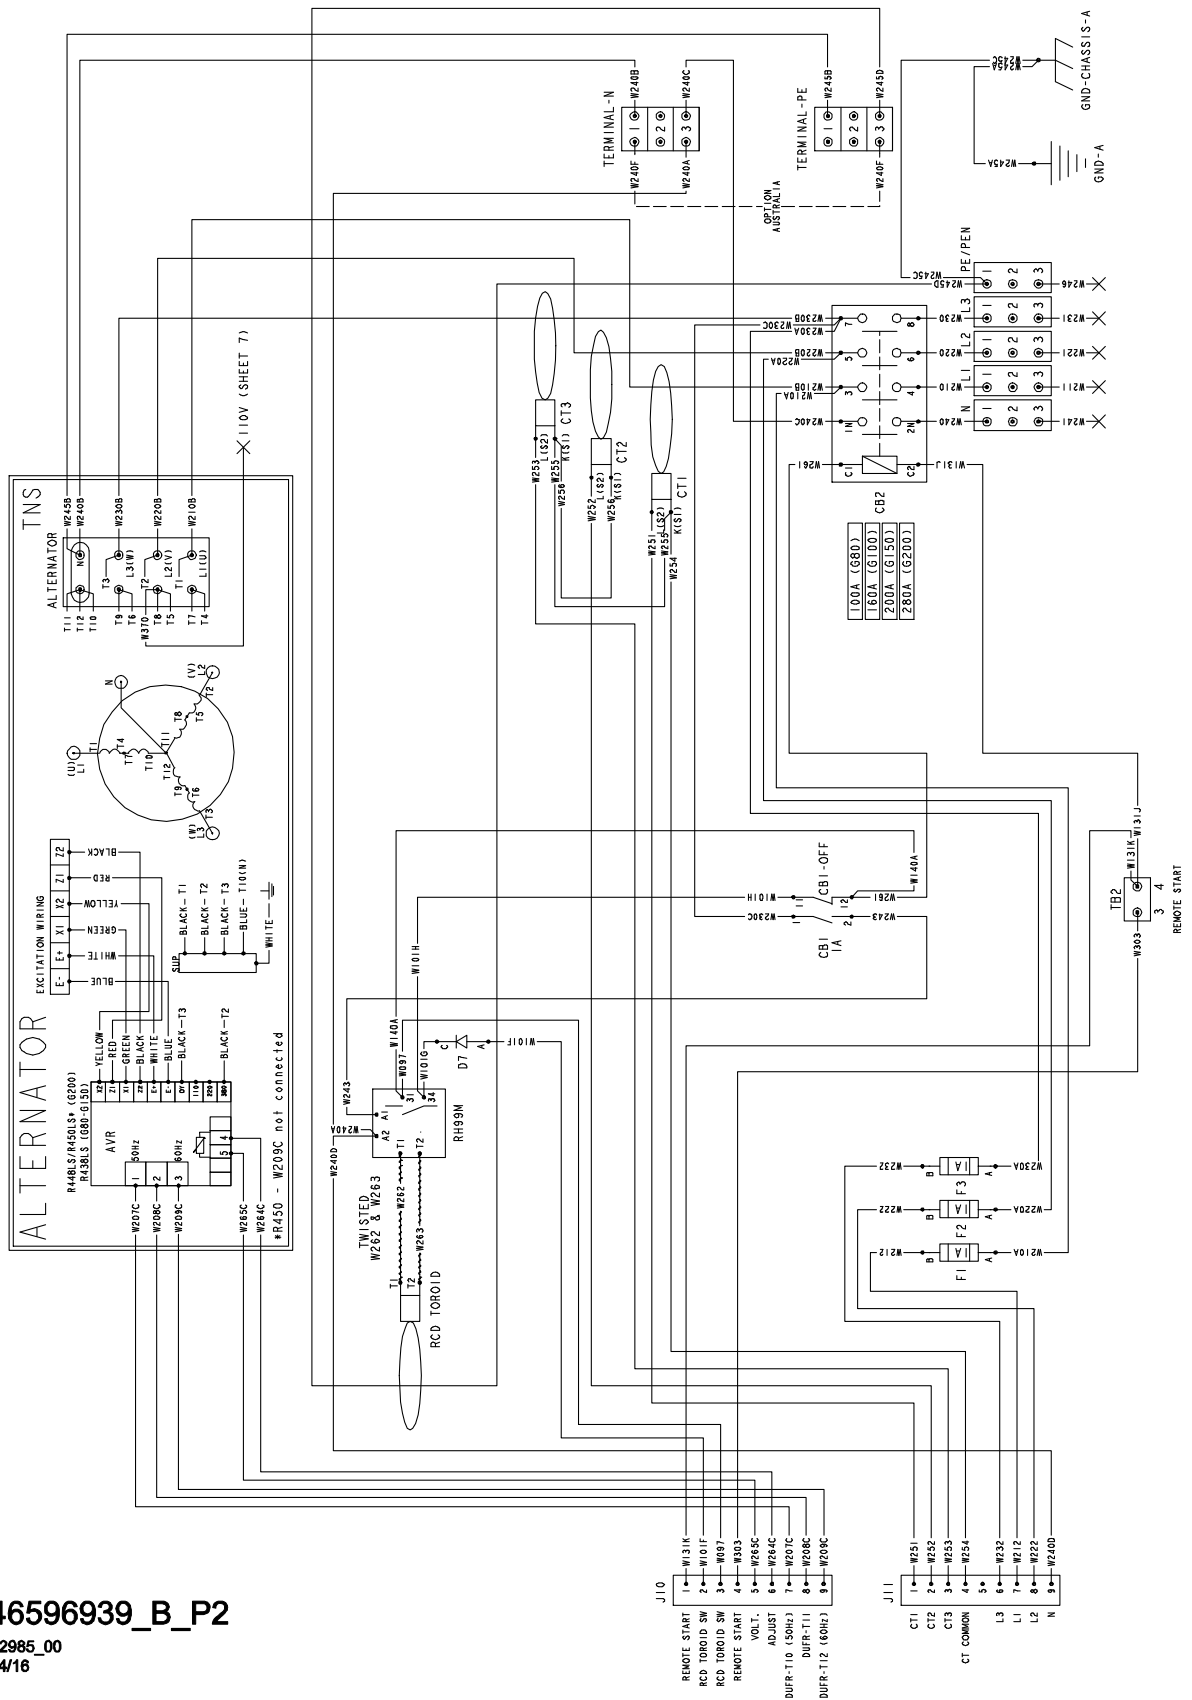

46596939_B_P2

T2985_00
04/16

WIRING DIAGRAM (alternator)

[illegible]

WIRING DIAGRAM (analogue panel)

[illegible]

 
WIRING DIAGRAM (engine)

[illegible]

WIRING DIAGRAM (digital panel)

46596939_B_P5


T2988_00
04/16

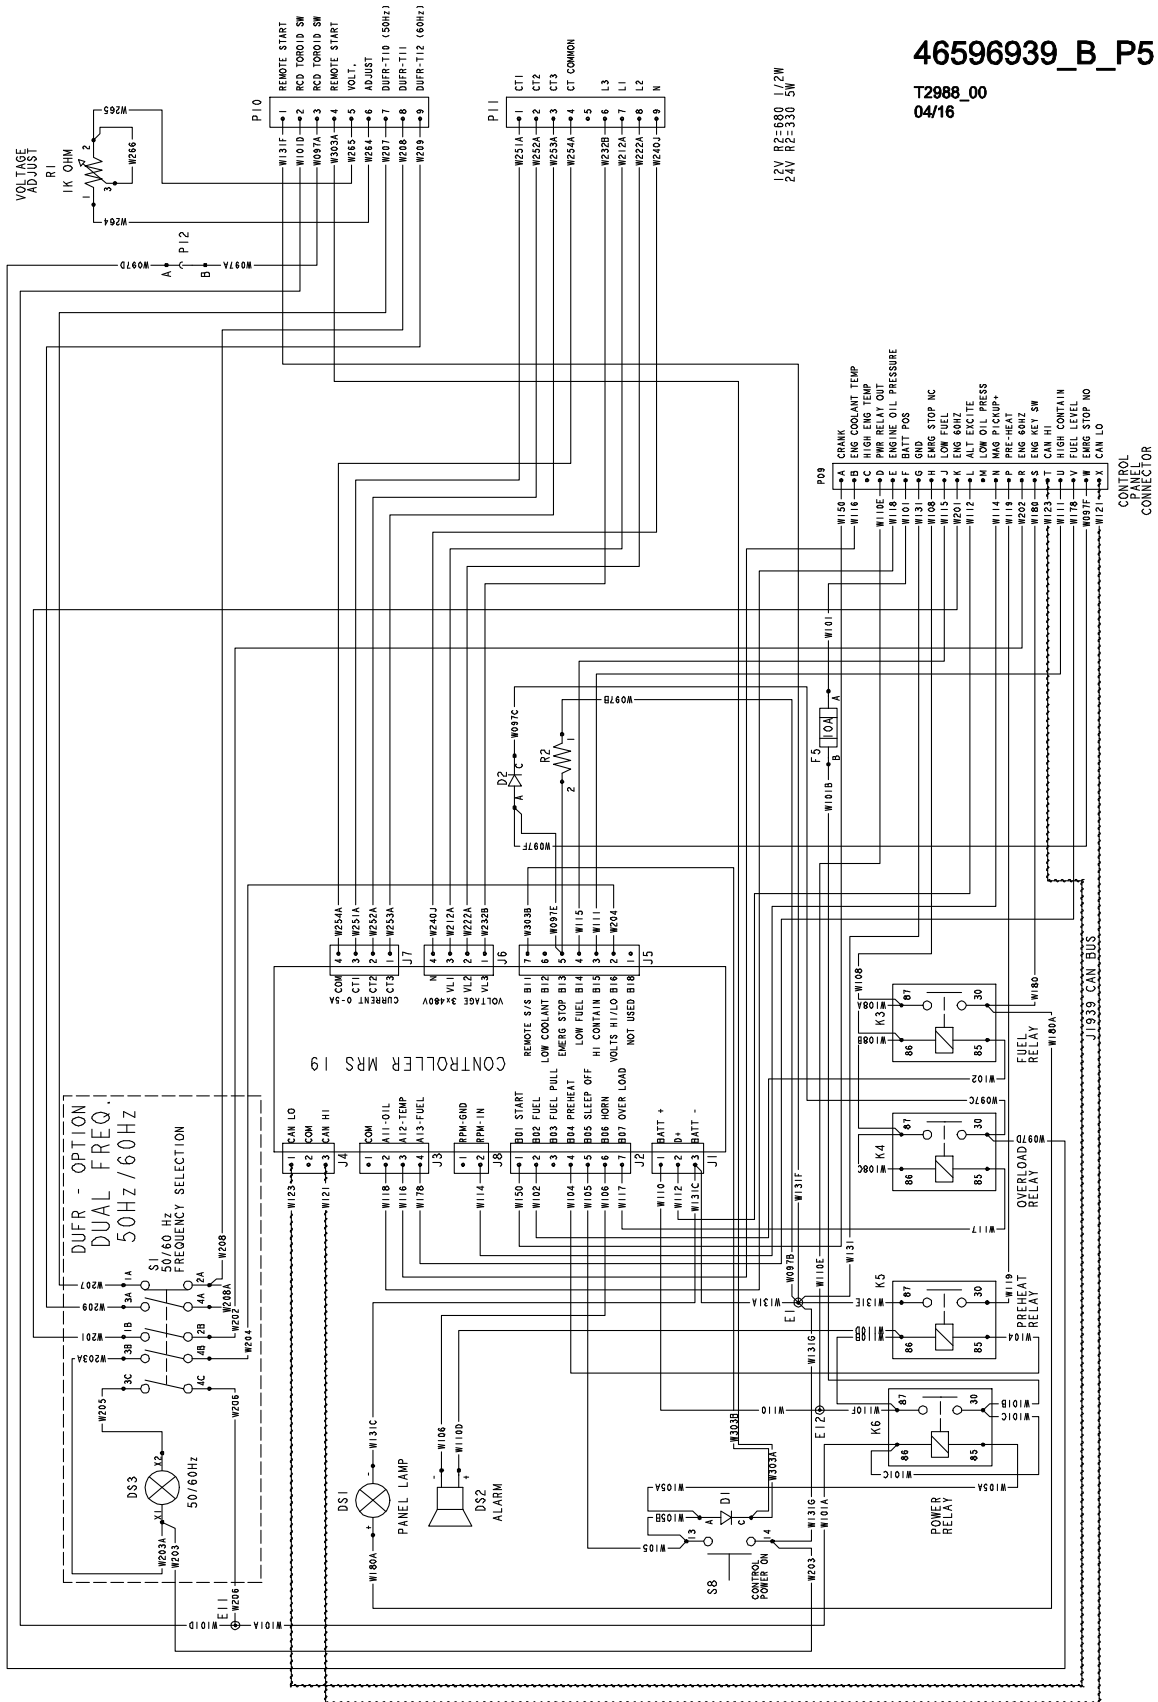

WIRING DIAGRAM (digital panel)

[illegible]

 ENGINE ASSEMBLY

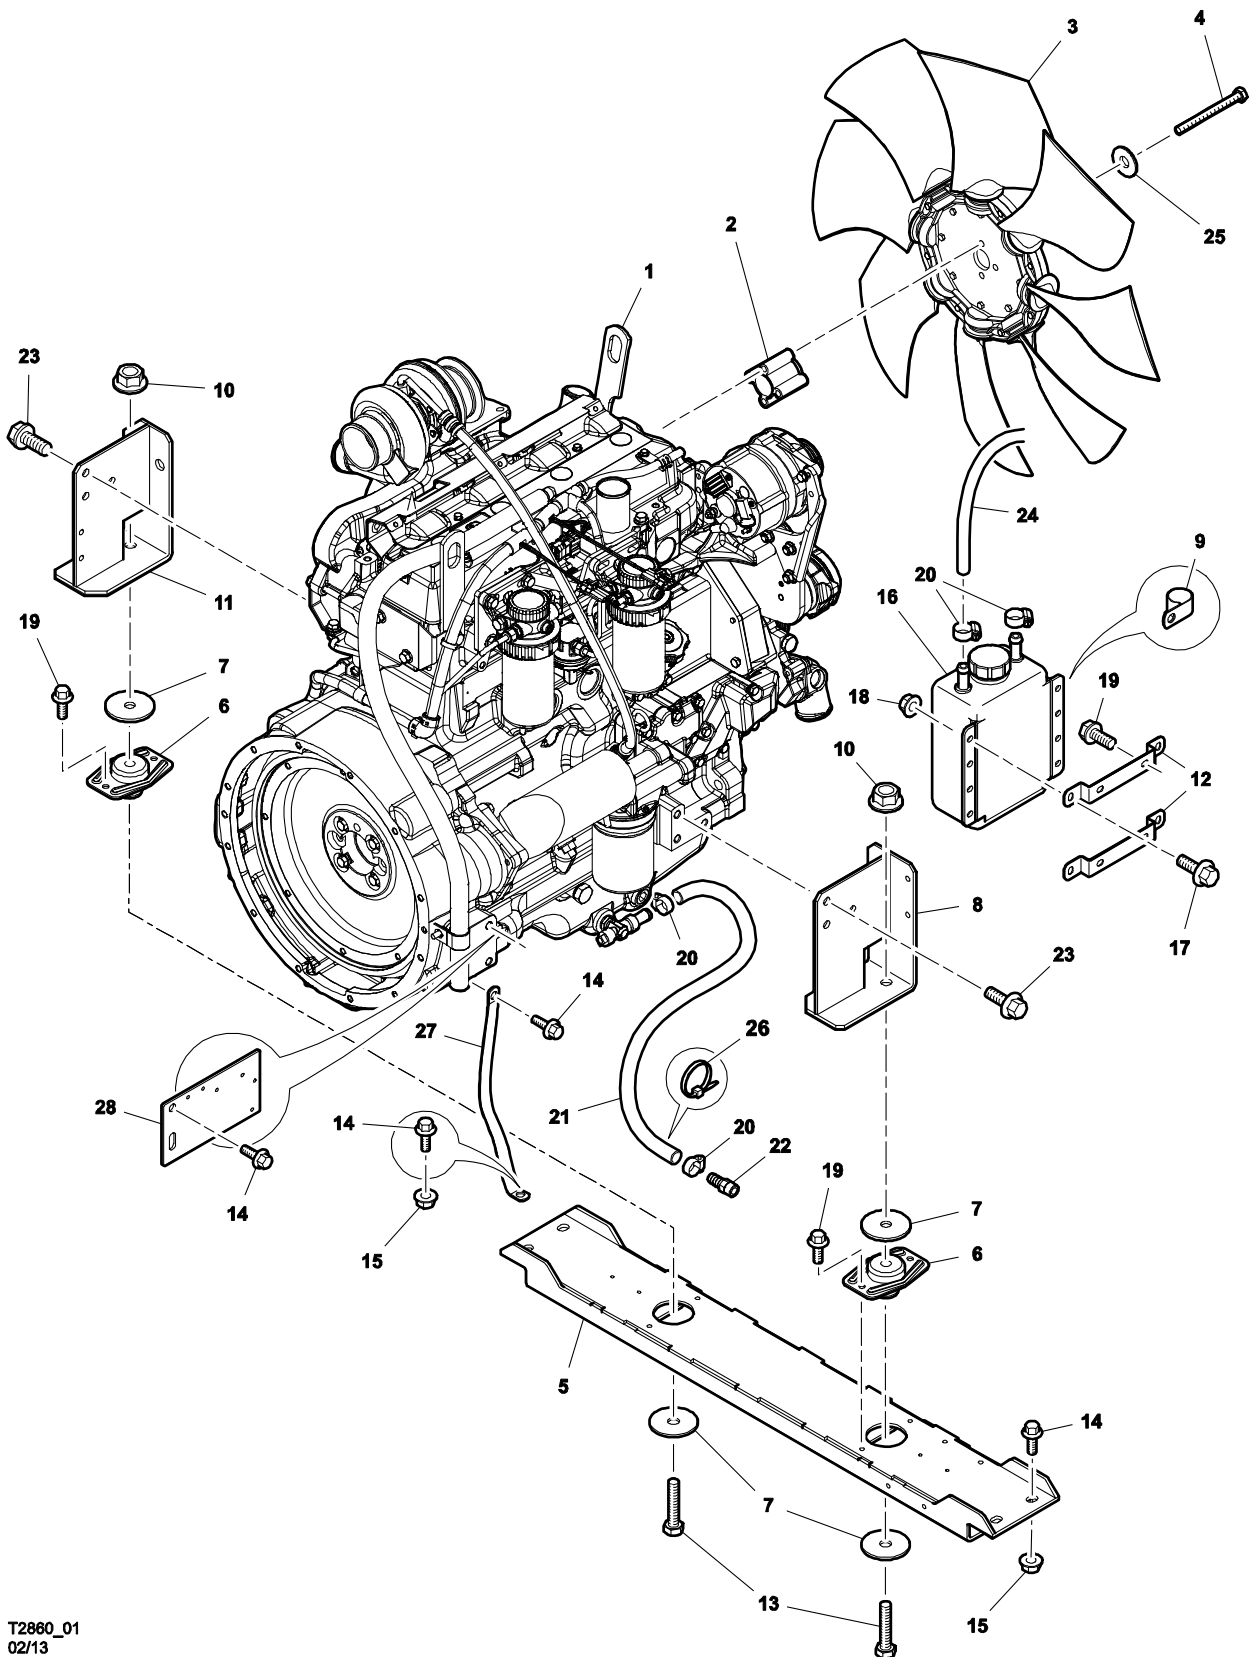


T2860_01
02/13

ENGINE ASSEMBLY

Item	Part Number	Description	Remarks	Serial Number	Qty
1	46599139	ENGINE	(G80)		1
1	46557345	ENGINE	(G100)		1
2	22743439	SPACER			1
3	22712350	FAN			1
4	96721154	SCREW			4
5	46600979	CROSS MEMBER, ENGINE			1
6	54471057	ISOLATOR			2
7	35609874	WASHER			4
8	46611699	BRACKET			1
9	35225085	CLAMP			1
10	36879211	NUT, FLANGE			2
11	46616359	BRACKET			1
12	46557438	BRACKET			2
13	96701503	BOLT			2
14	36879492	SCREW			6
15	36879203	NUT			5
16	22061964	BOTTLE, VENT			1
17	96704408	SCREW			4
18	36881886	NUT			4
19	22959936	SCREW			8
20	95220844	CLAMP			2
21	35326578	HOSE	(0,8 m long)		1
22	35326560	ADAPTOR			1
23	36888055	SCREW			6
24	35326578	HOSE	(2,1 m long)		1
25	92687664	WASHER			4
26	35356591	TIE, CABLE	(used to hold items 21 & 24 together)		2
27	22132153	STRAP			1
28	46628119	HOLDER			1

 COOLING SYSTEM (piping)

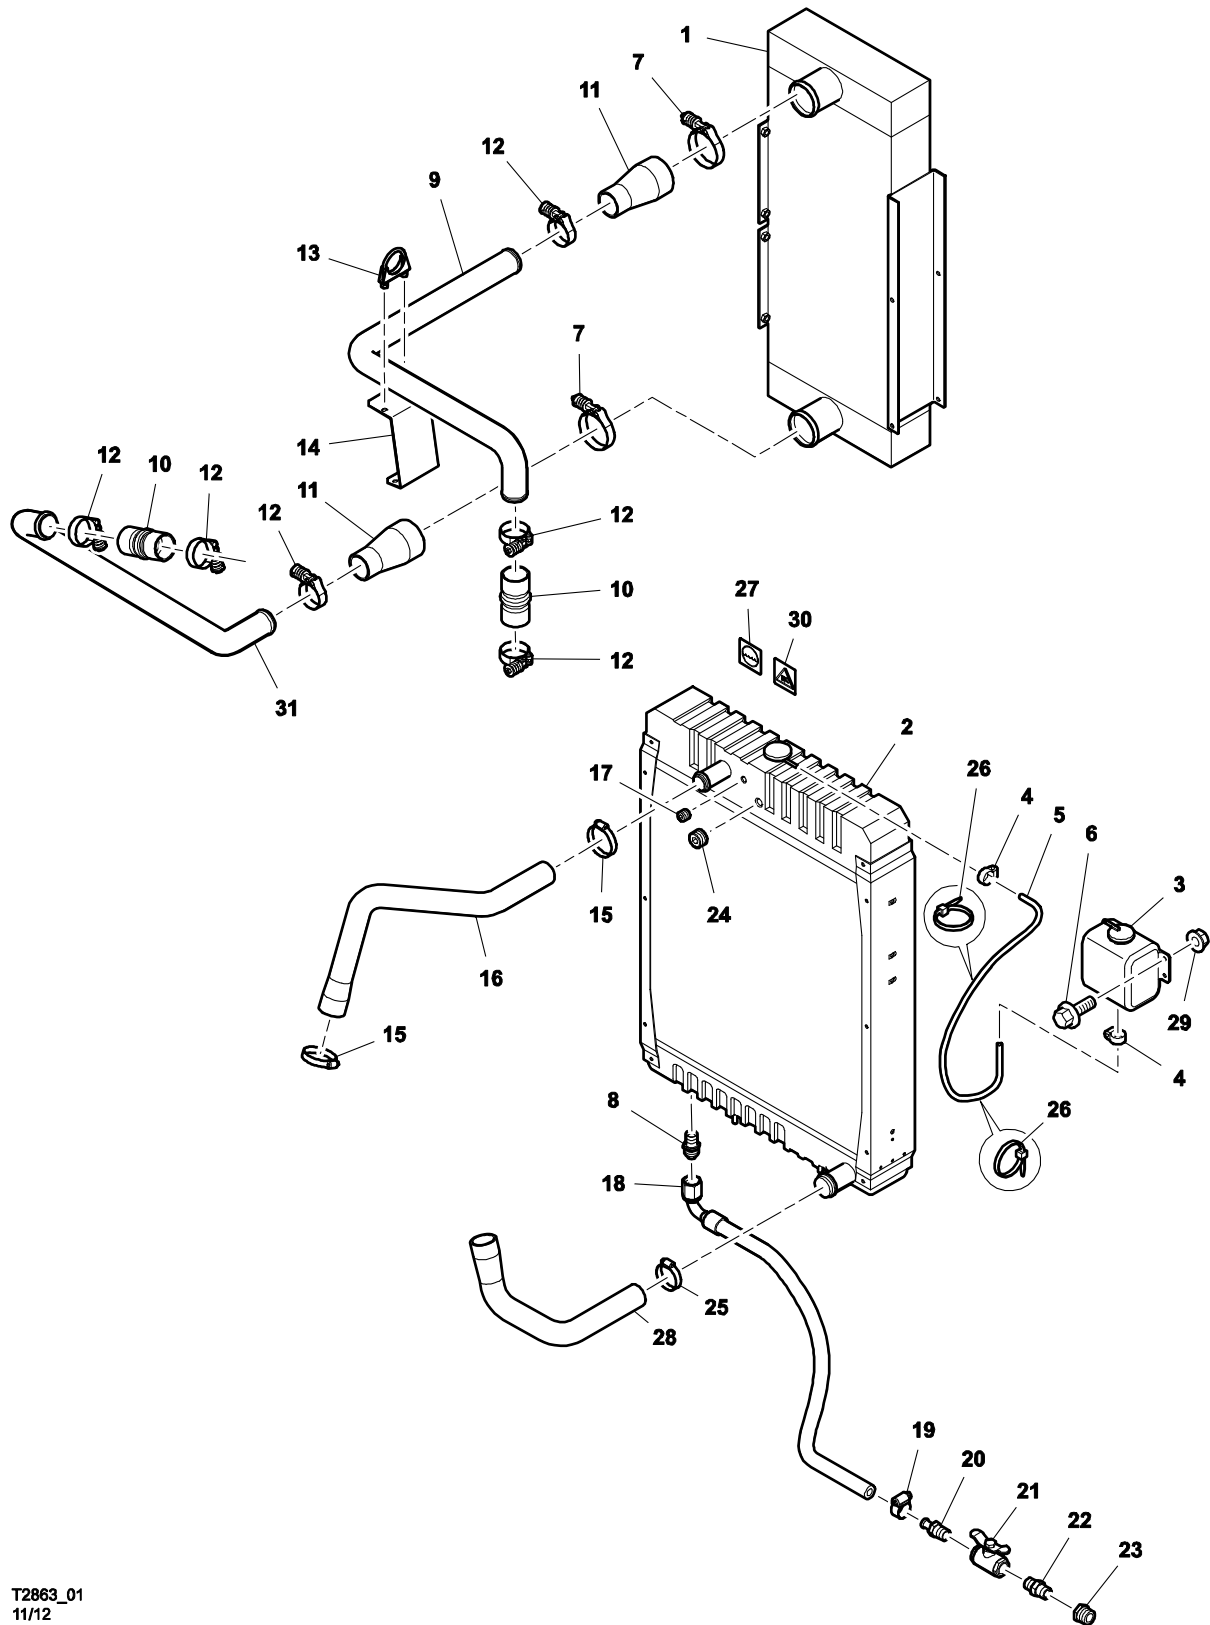


T2863_01
11/12

COOLING SYSTEM (piping)

Item	Part Number	Description	Remarks	Serial Number	Qty
1	22880074	COOLER			1
2	22285464	RADIATOR			1
3	36884948	TANK, EXPANSION			1
4	35296342	CLIP, RETAINING			2
5	35360775	TUBING	(0,8 m long)		1
6	96742689	SCREW			4
7	22144513	CLAMP			2
8	35283126	CONNECTOR			1
9	46617059	PIPE			1
10	22177265	CONNECTOR, FLEXIBLE			2
11	22189310	REDUCER			2
12	22189302	CLAMP			6
13	92789346	CLAMP			1
14	46620538	BRACKET			1
15	35221639	CLIP, RETAINING			2
16	46616519	HOSE			1
17	95928230	PLUG			1
18	46623555	HOSE ASSEMBLY	(0,6 m long)		1
19	95264776	CLAMP			1
20	35305234	ADAPTOR			1
21	22375141	VALVE			1
22	35366954	CONNECTOR			1
23	95952248	BUSH			1
24	95928255	PLUG			1
25	35221662	CLAMP			1
26	92281427	TIE, CABLE			2
27	93171288	DECAL, COOLANT FILL			1
28	22886360	HOSE			1
29	36898104	NUT			4
30	46539870	DECAL, HOT LIQUID SYMBOL			1
31	22903538	PIPE			1

 COOLING SYSTEM (panels and guards)

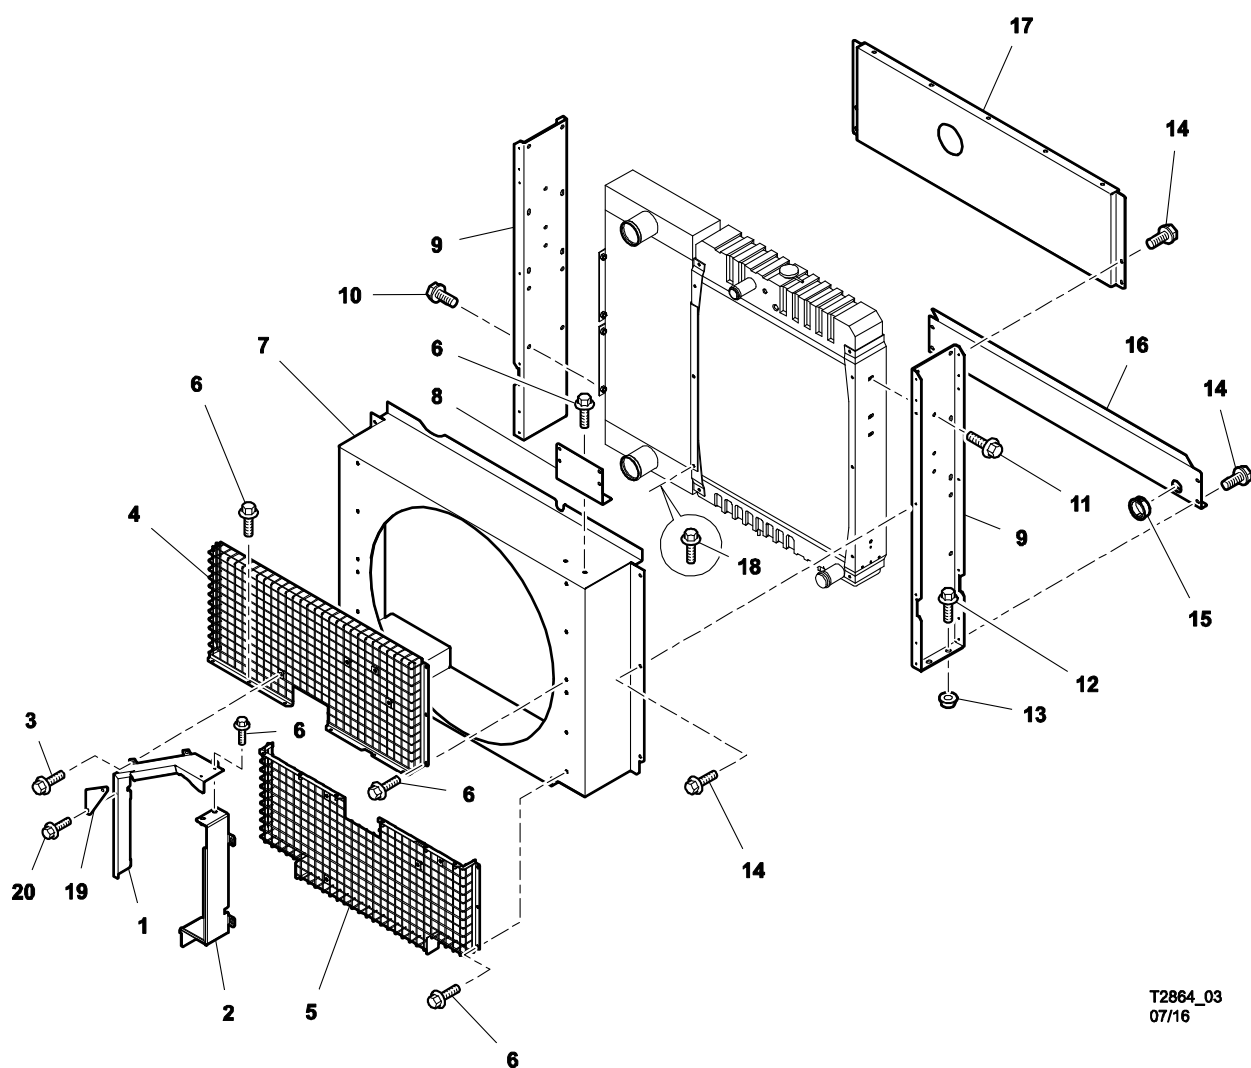


T2864_03
07/16

COOLING SYSTEM (panels and guards)	
---	--

[illegible]

 FUEL SYSTEM (12 hour)

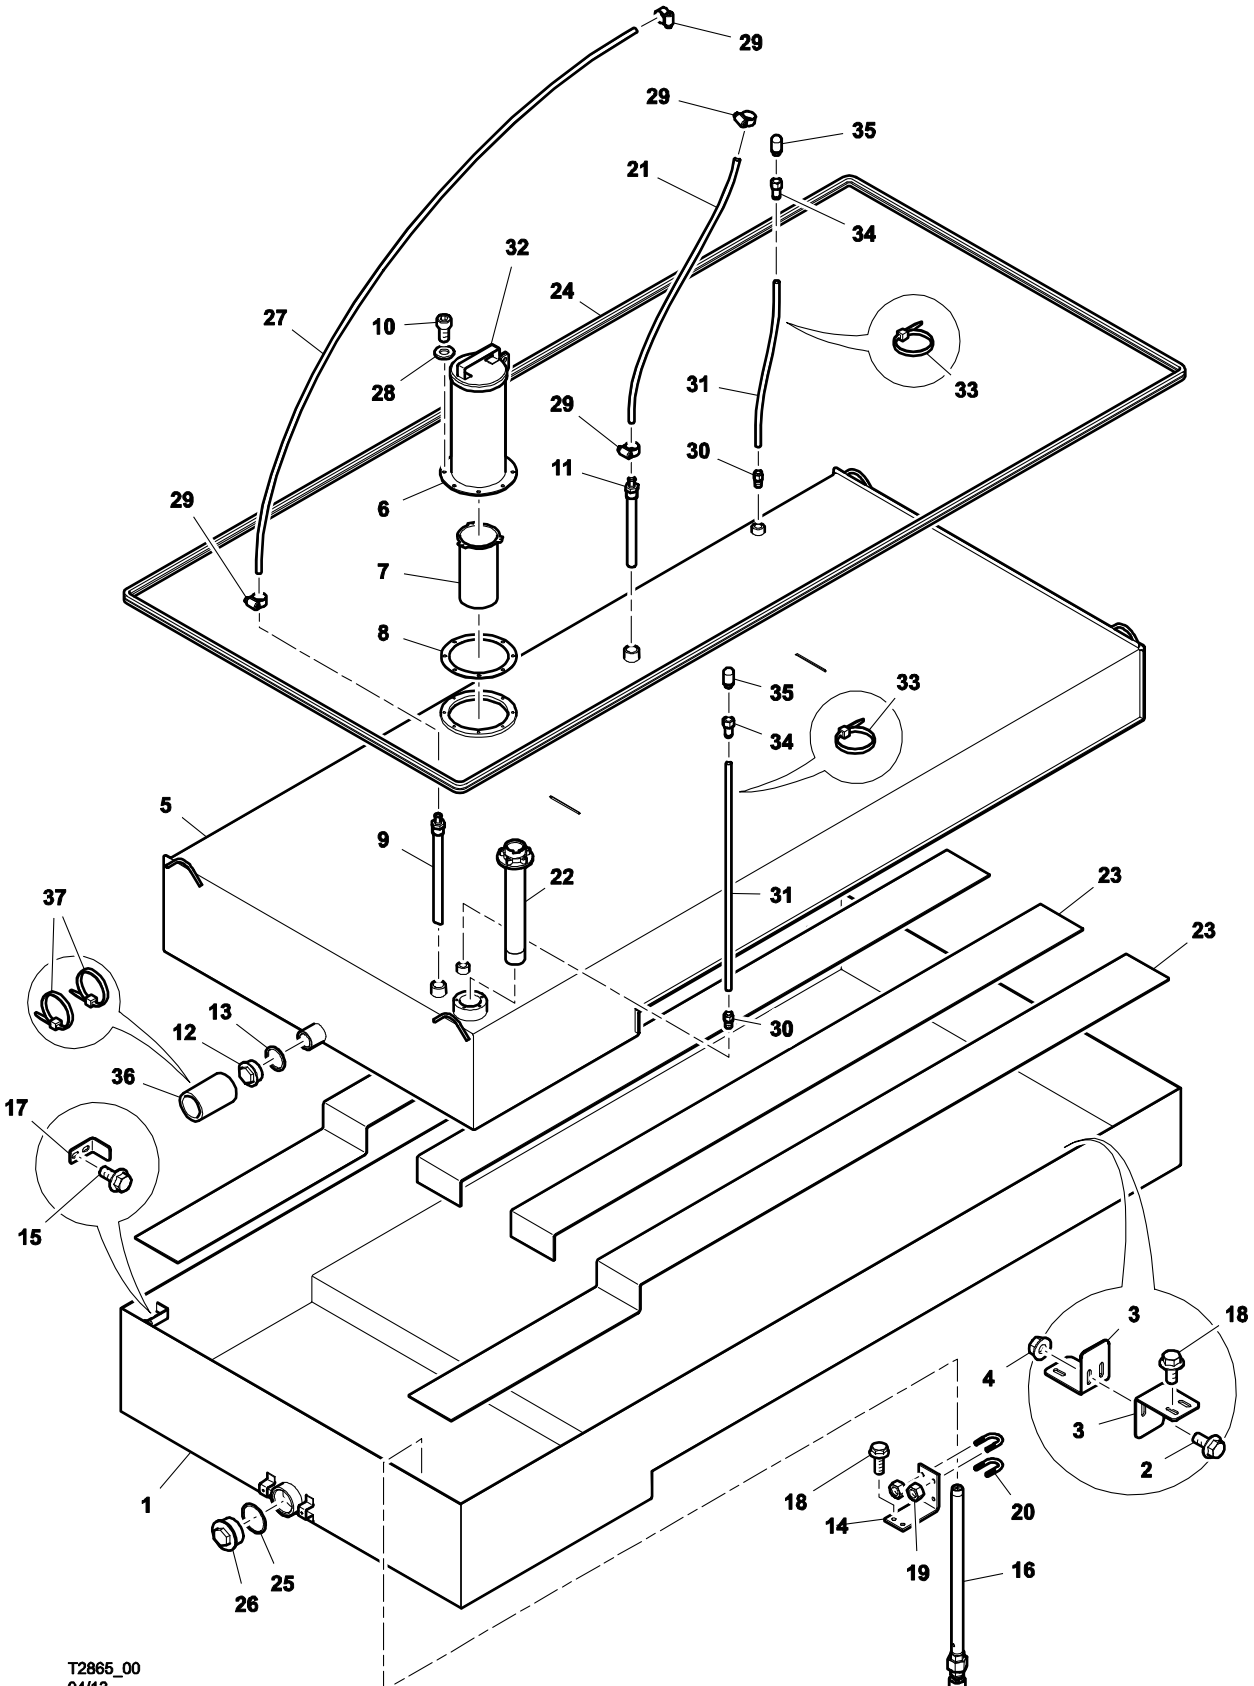


T2865_00
04/13

FUEL SYSTEM (12 hour)

Item	Part Number	Description	Remarks	Serial Number	Qty
1	46553722	BASE			1
2	36889608	SCREW	(M8-1.25 x 25)		4
3	46565499	HOLDER			4
4	36881886	NUT			4
5	46553723	TANK, FUEL			1
6	46553705	NECK, FUEL TANK			1
7	36845022	STRAINER, FUEL			1
8	46553706	GASKET			1
9	46553792	TUBE			1
10	35337070	SCREW			8
11	46553793	TUBE			1
12	46553760	PLUG			1
13	46553761	RING			1
14	22580336	BRACKET			1
15	96704408	SCREW			8
16	22841696	SENSOR, CONTAINMENT LEVEL			1
17	46613419	HOLDER			4
18	22959936	SCREW			6
19	95923298	NUT			4
20	22616353	U-BOLT			2
21	35285600	HOSE	(0,9 m long - fuel return) - (9.5 mm (3/8") ID)		1
22	22579213	SENDER			1
23	22680771	PAD, FUEL TANK	(1,53 m long)		2
23	22680771	PAD, FUEL TANK	(2,05 m long)		2
24	92899699	SEAL	(6,83 m long)		1
25	46562520	RING, SEALING			1
26	46562519	PLUG			1
27	35285600	HOSE	(2,5 m long - fuel pickup) - (9.5 mm (3/8") ID)		1
28	92341981	WASHER			8
29	35296342	CLIP, RETAINING			4
30	35369347	CONNECTOR			2

 FUEL SYSTEM (CONT'D) (12 hour)

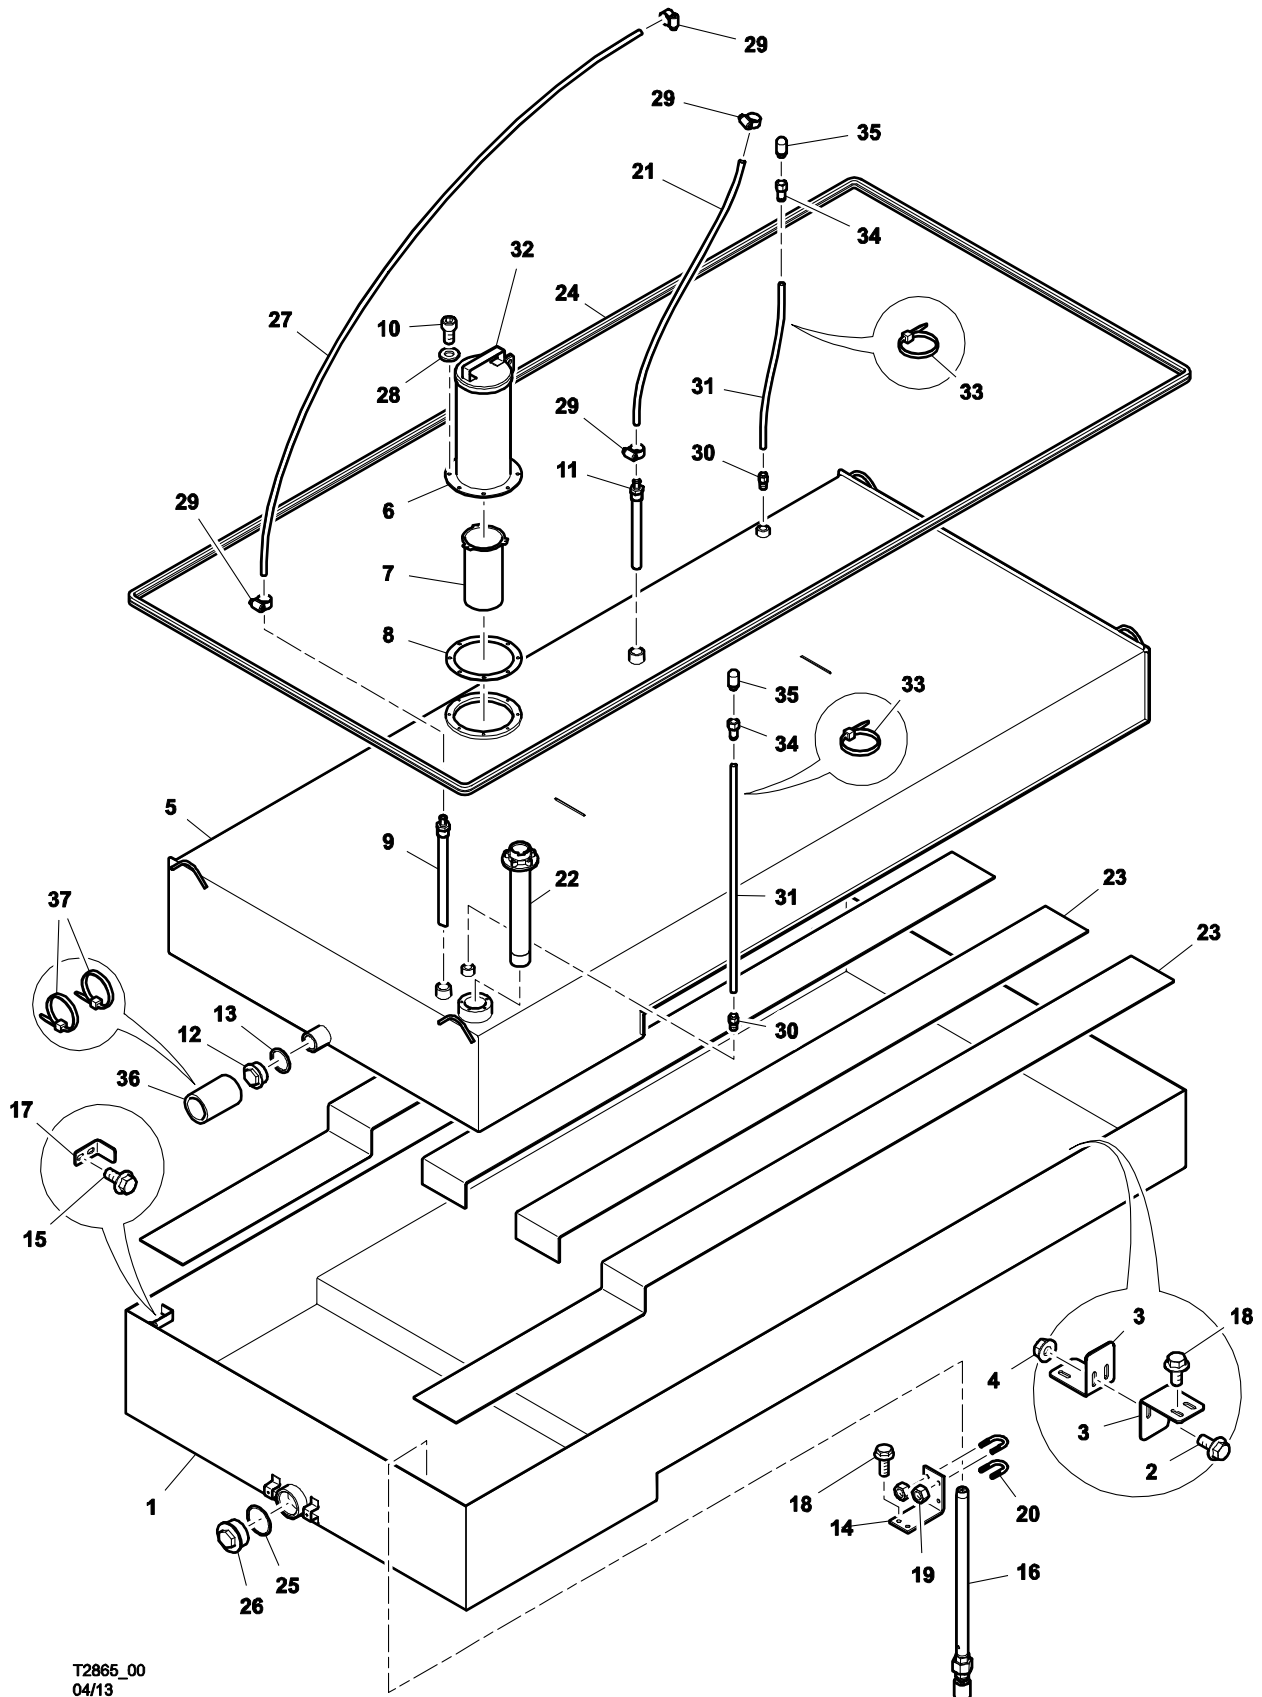


T2865_00
04/13

FUEL SYSTEM (CONT'D) (12 hour)	
--	--

[illegible]

 AIR INTAKE SYSTEM (G80)

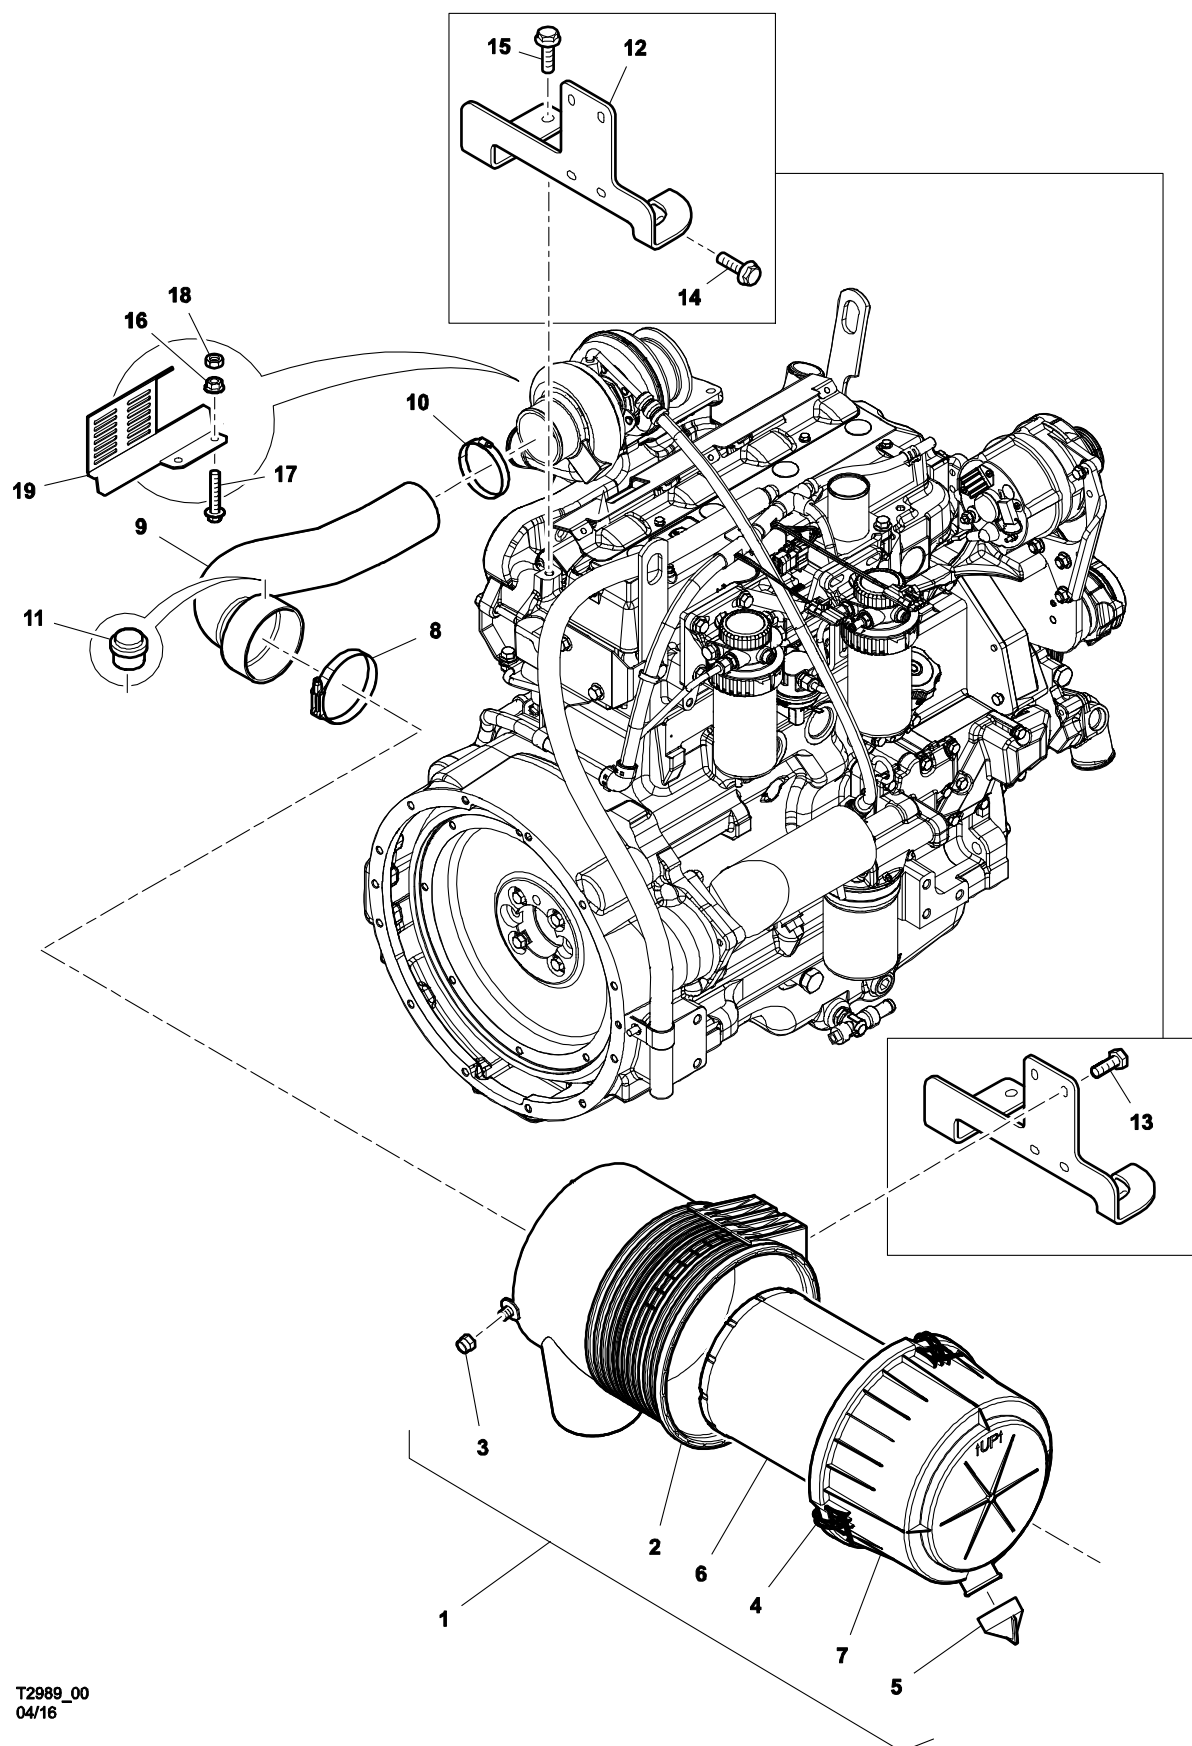


T2989_00
04/16

AIR INTAKE SYSTEM (G80)

[illegible]

 AIR INTAKE SYSTEM (G100)

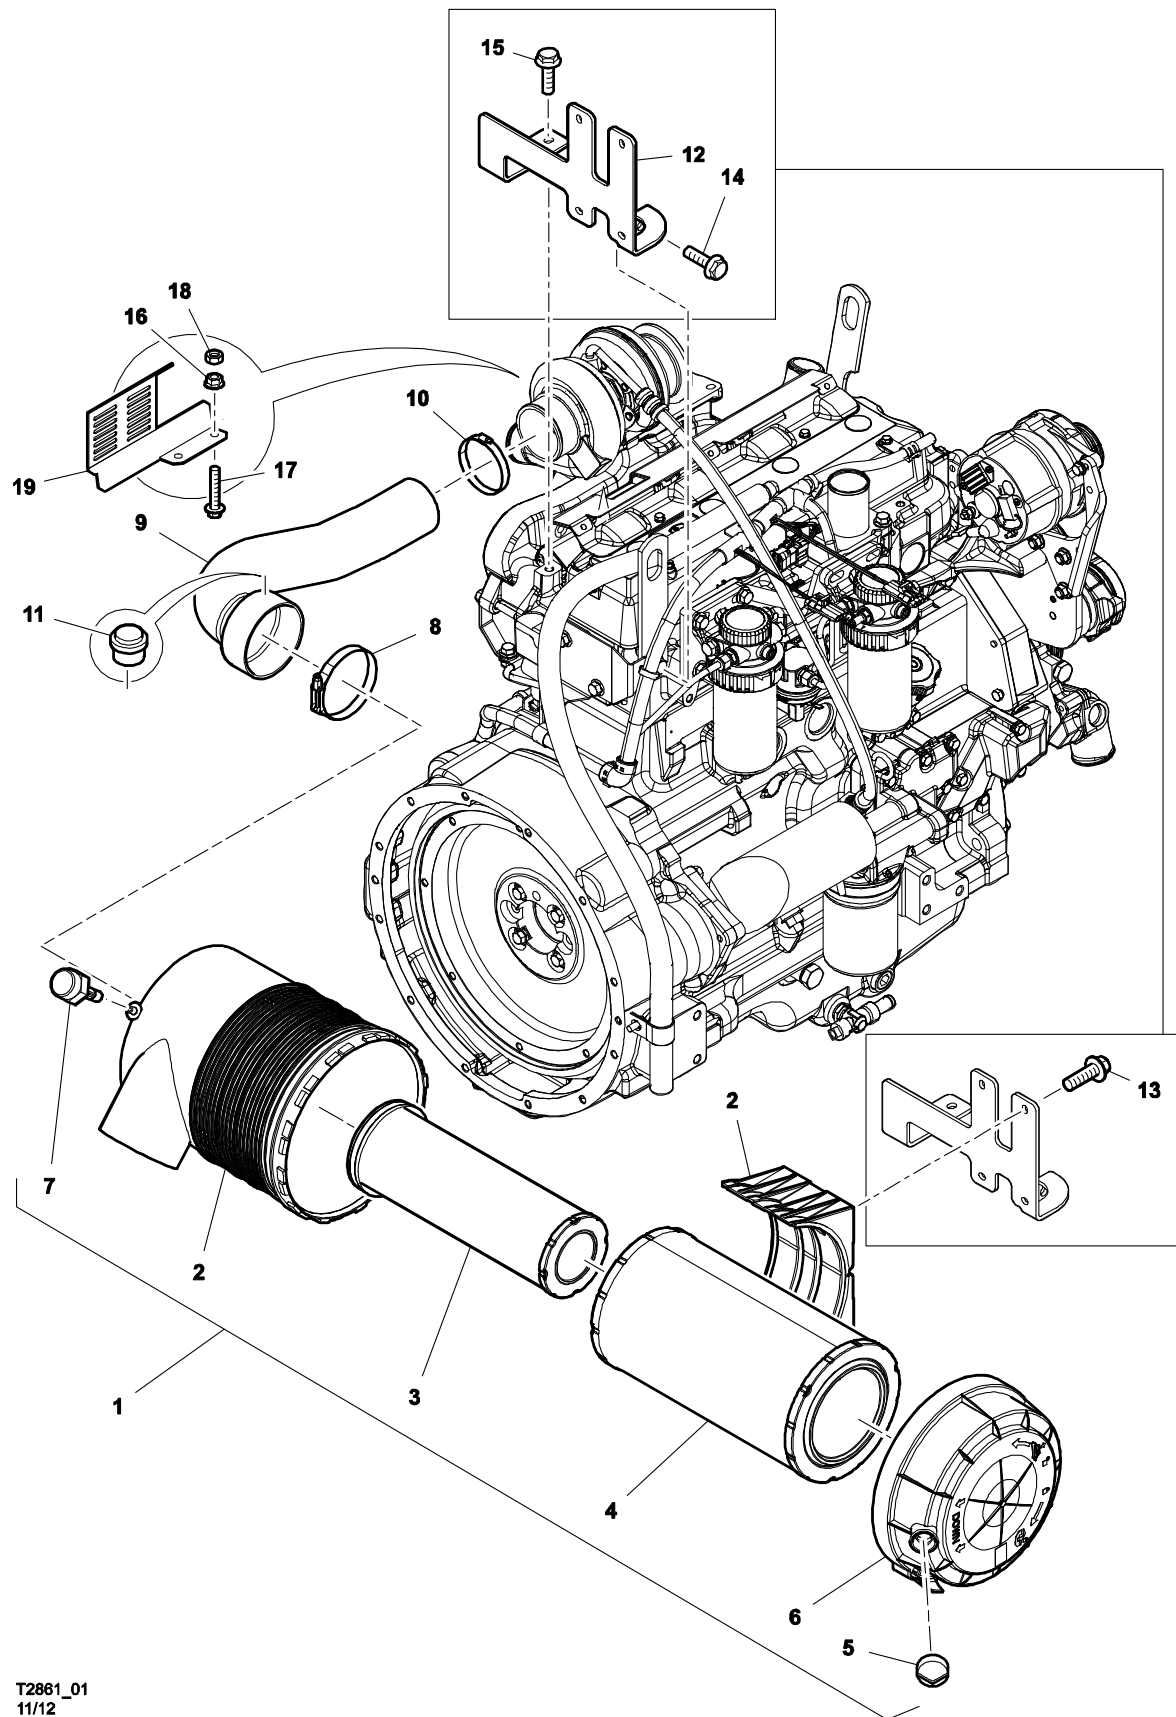


T2861_01
11/12

AIR INTAKE SYSTEM (G100)

[illegible]

 EXHAUST SYSTEM

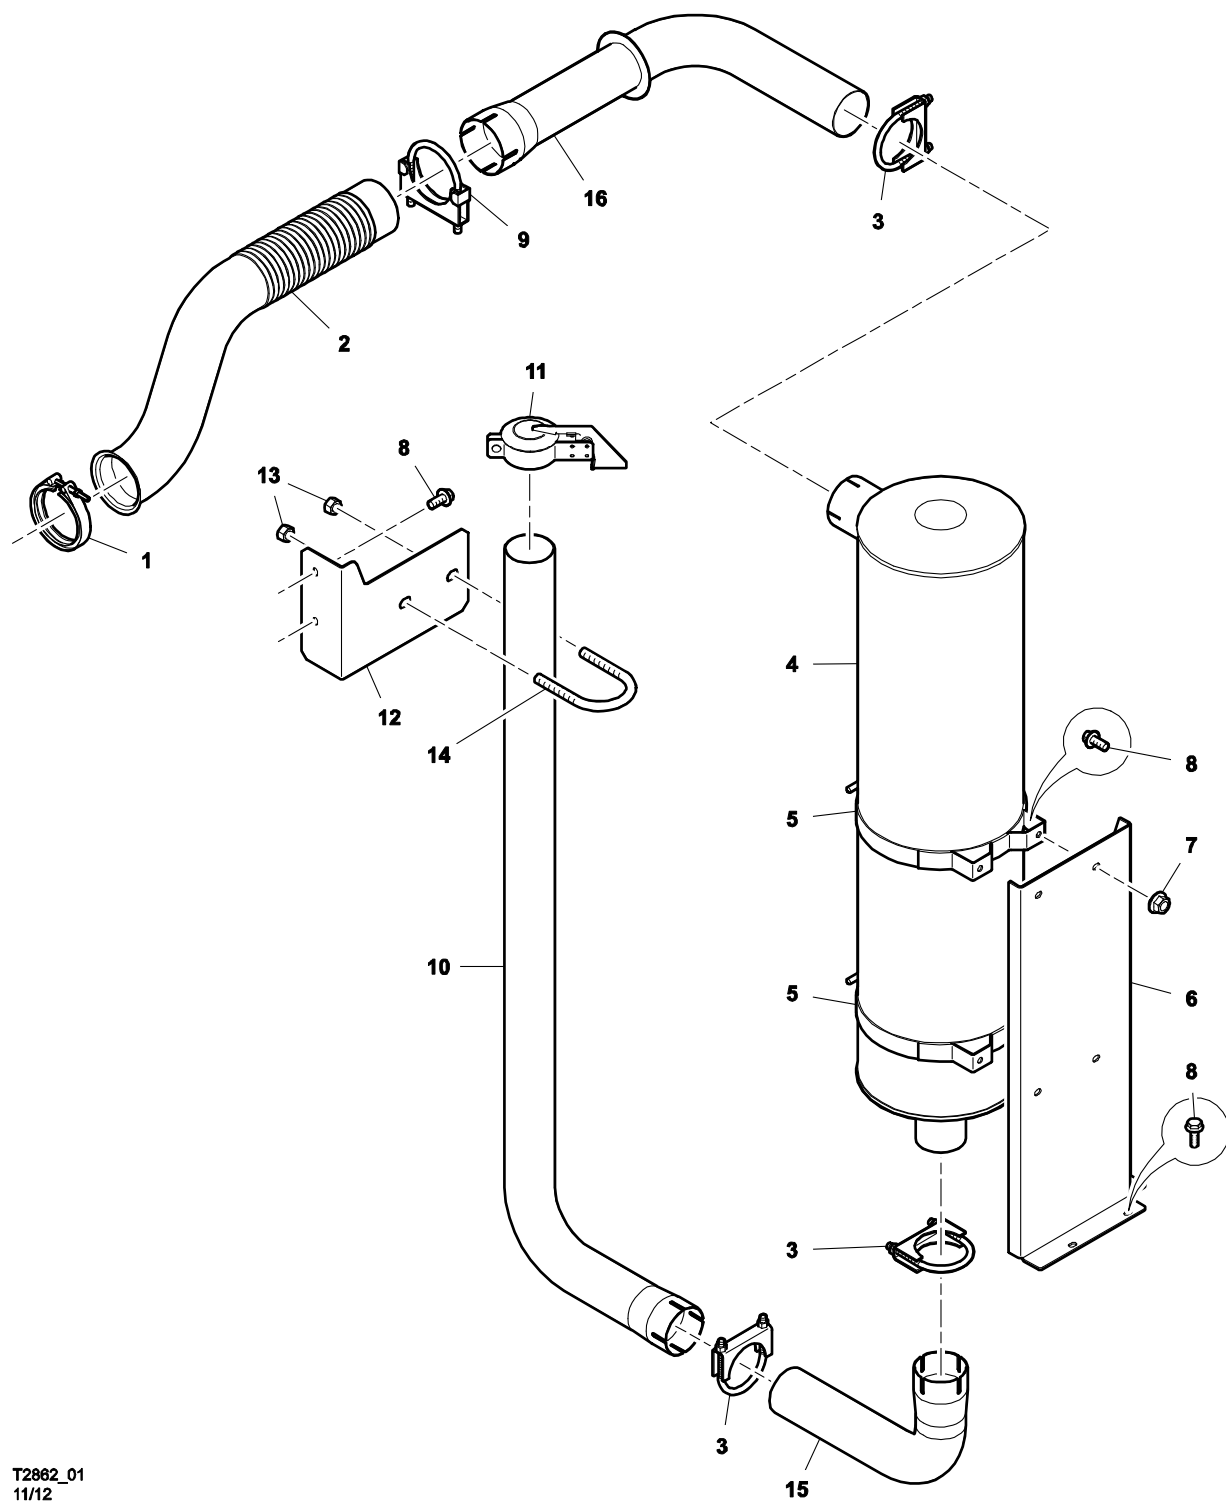


T2862_01
11/12

EXHAUST SYSTEM

[illegible]

 CYLINDER BLOCK

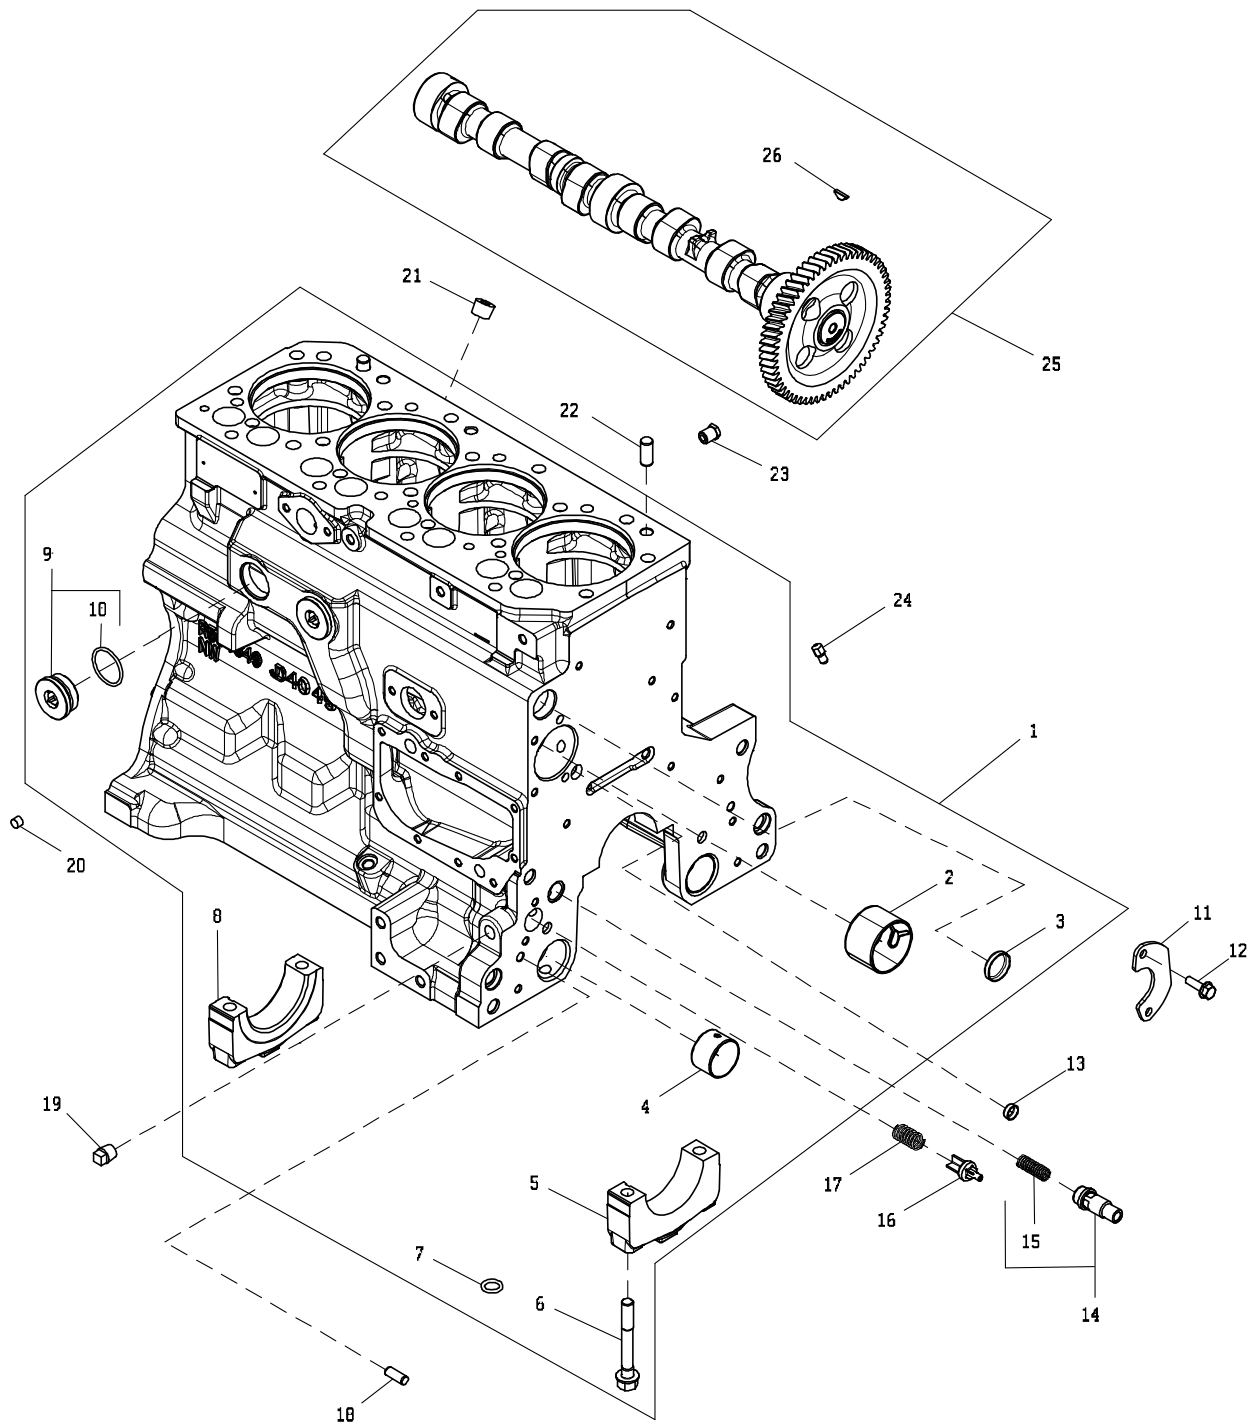


T3372_00
05/11

CYLINDER BLOCK

[illegible]

 CRANKSHAFT

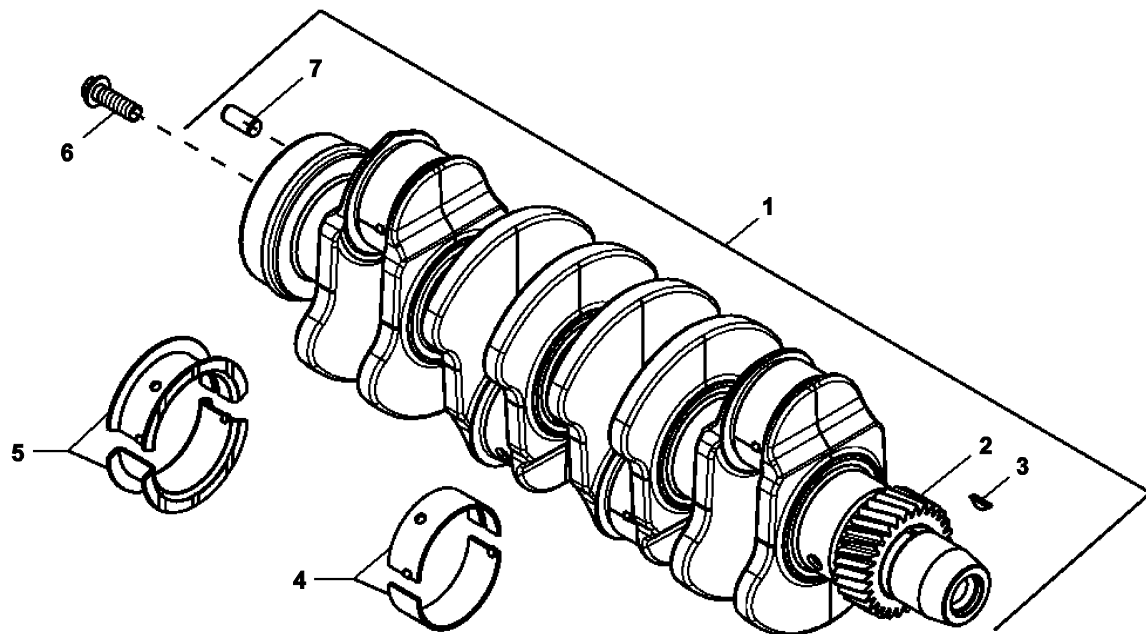


T3373_00
05/11

CRANKSHAFT	
------------	--

[illegible]

 CRANKSHAFT PULLEY

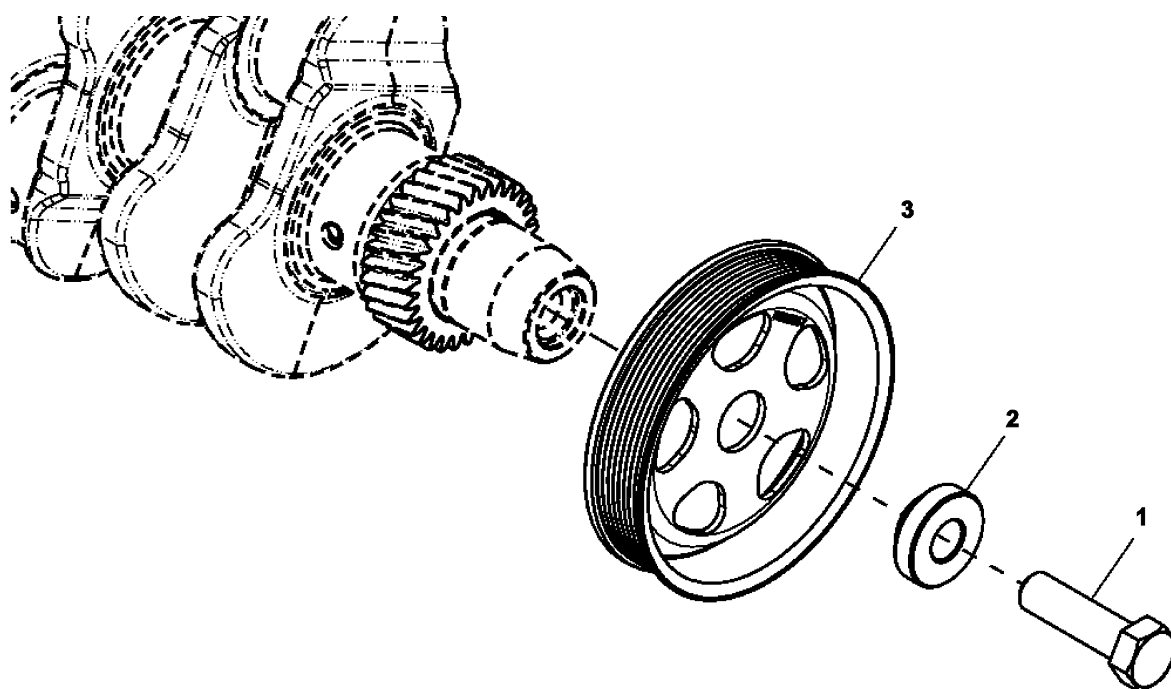


T3352_00
04/11

CRANKSHAFT PULLEY

[illegible]

 CONNECTING RODS & PISTONS

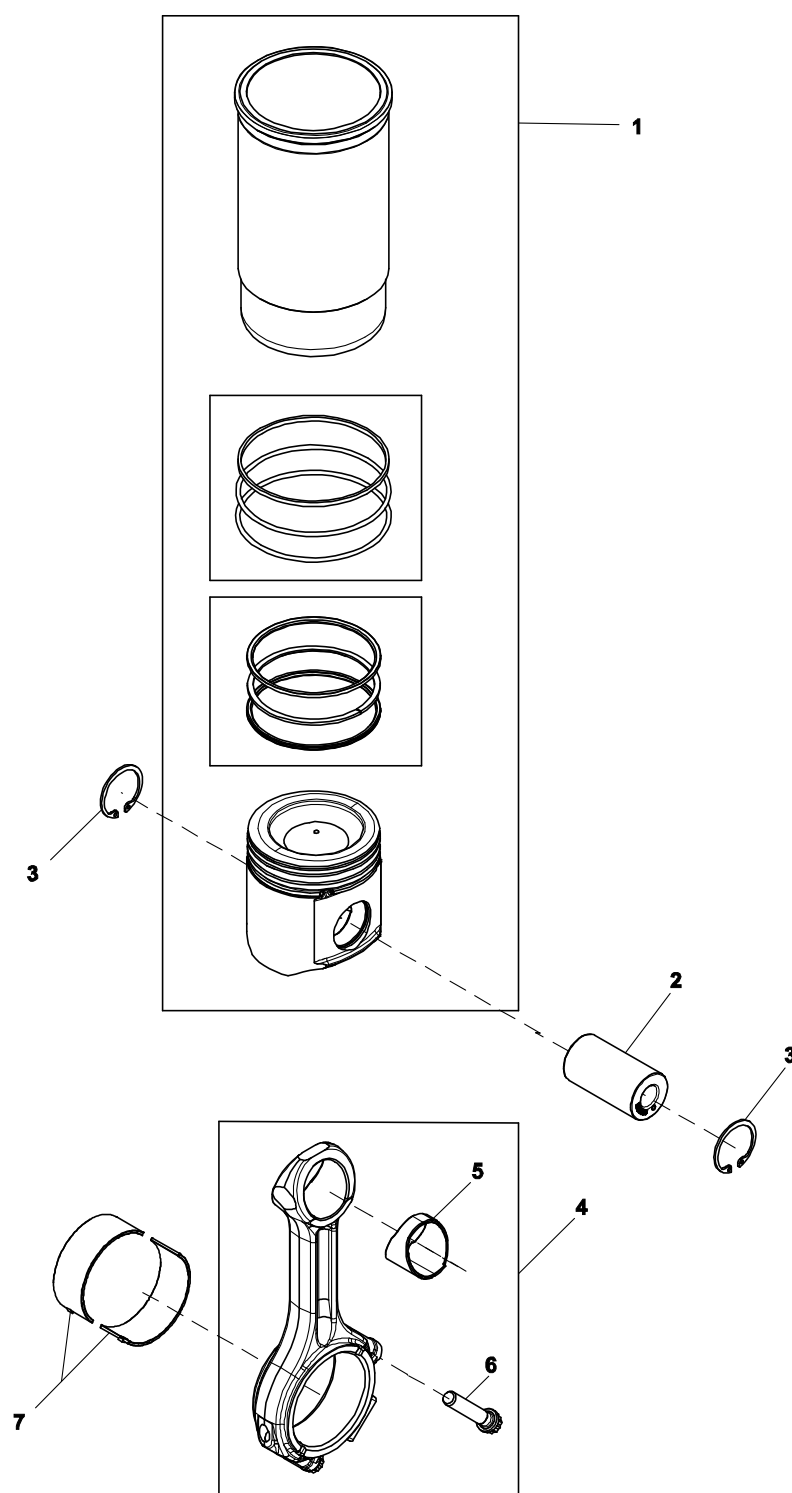


T3374_01
10/12

CONNECTING RODS & PISTONS

[illegible]

 BALANCE SHAFT

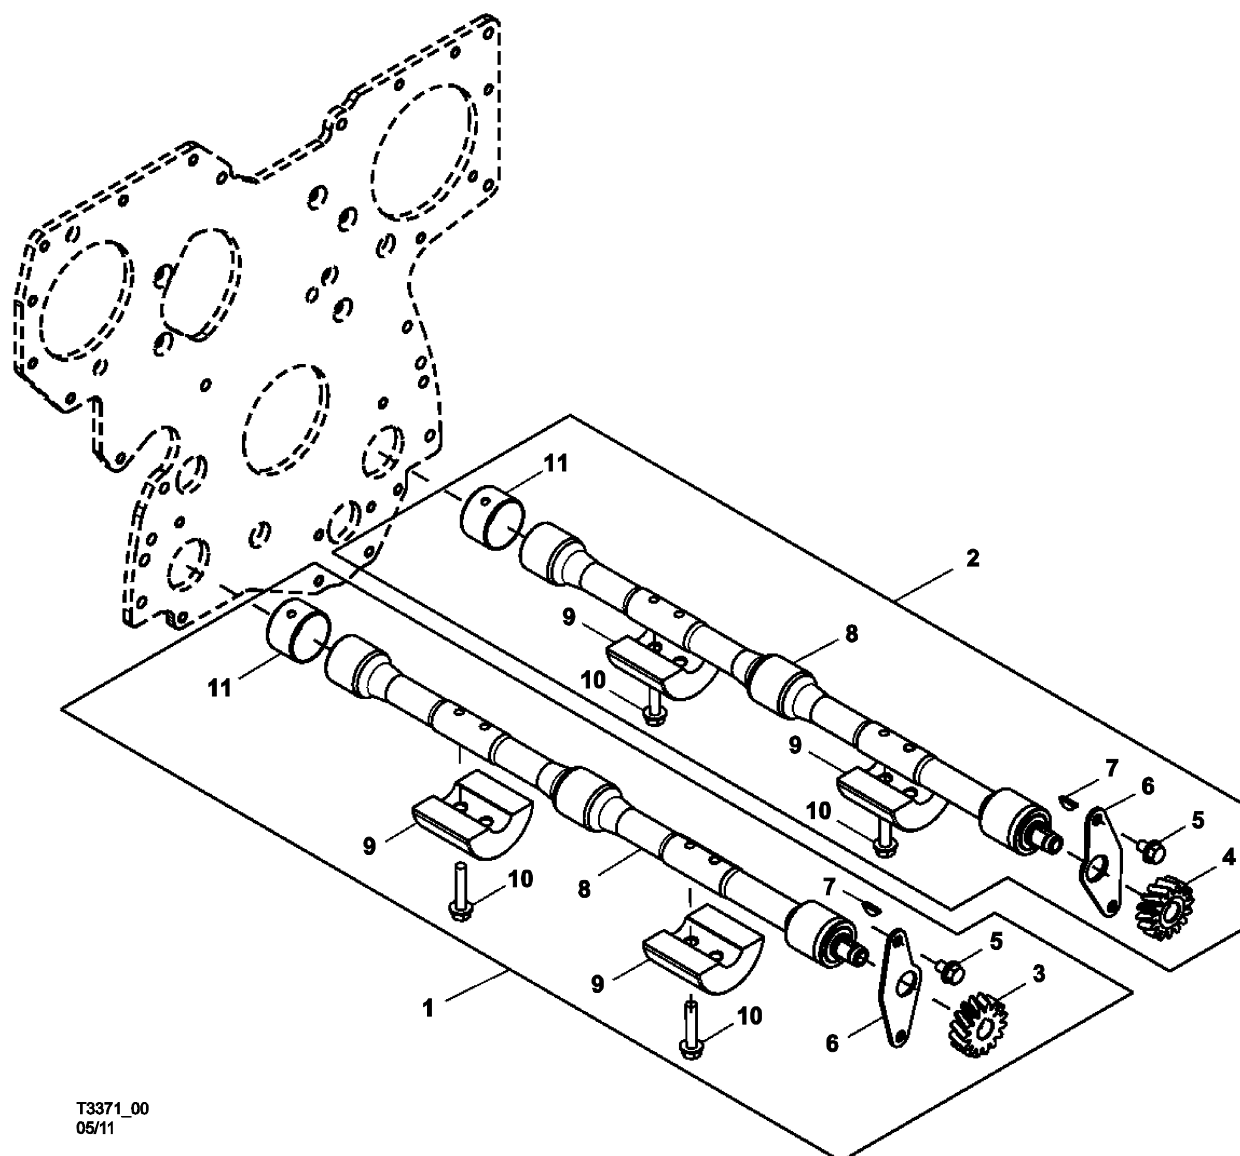


T3371_00
05/11

BALANCE SHAFT

[illegible]

 CYLINDER HEAD

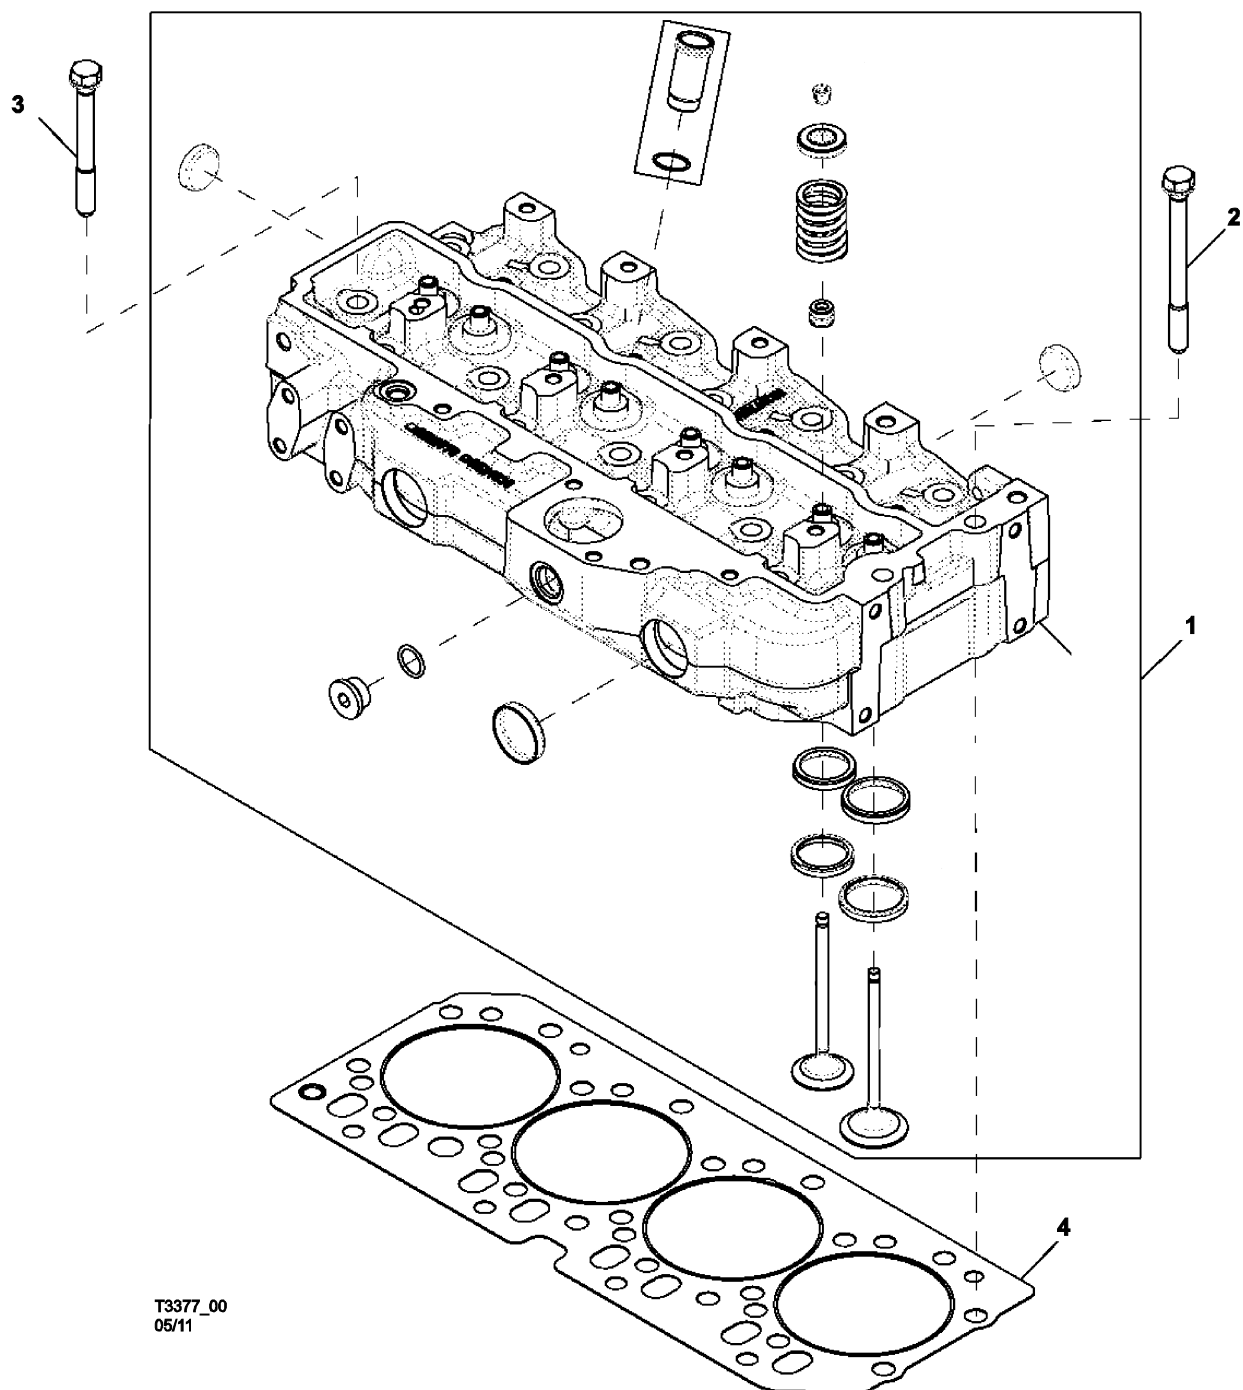


T3377_00
05/11

CYLINDER HEAD	
---------------	--

[illegible]

 ACTUATING VALVE

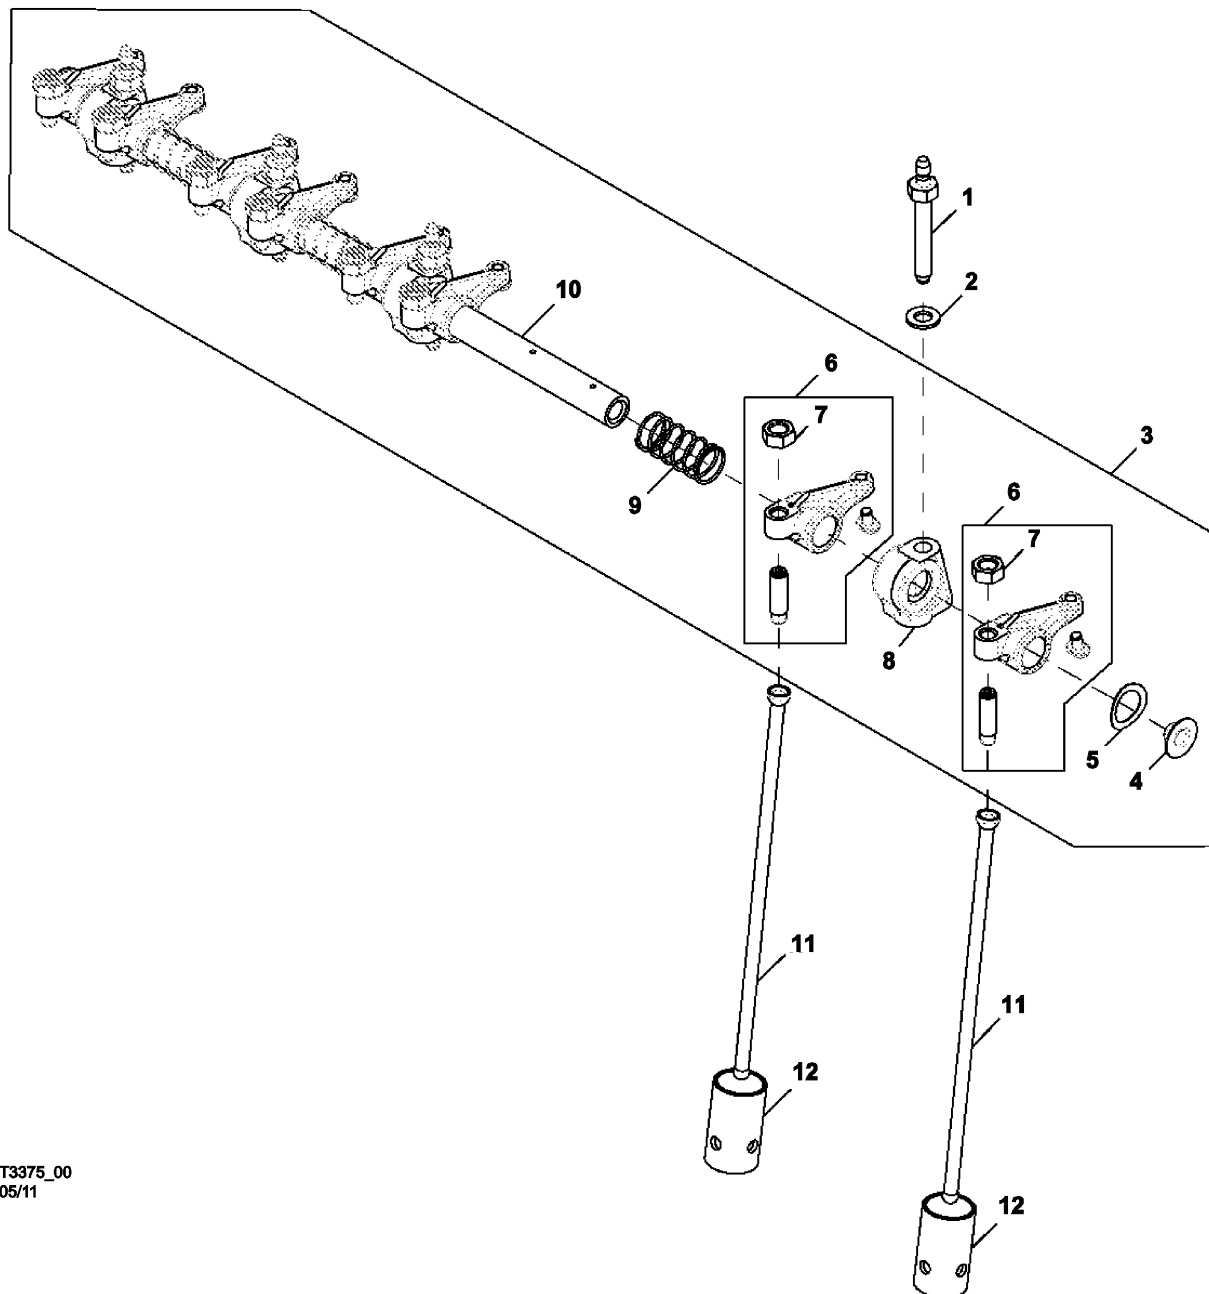


T3375_00
05/11

ACTUATING VALVE

[illegible]

 ROCKER ARM COVER

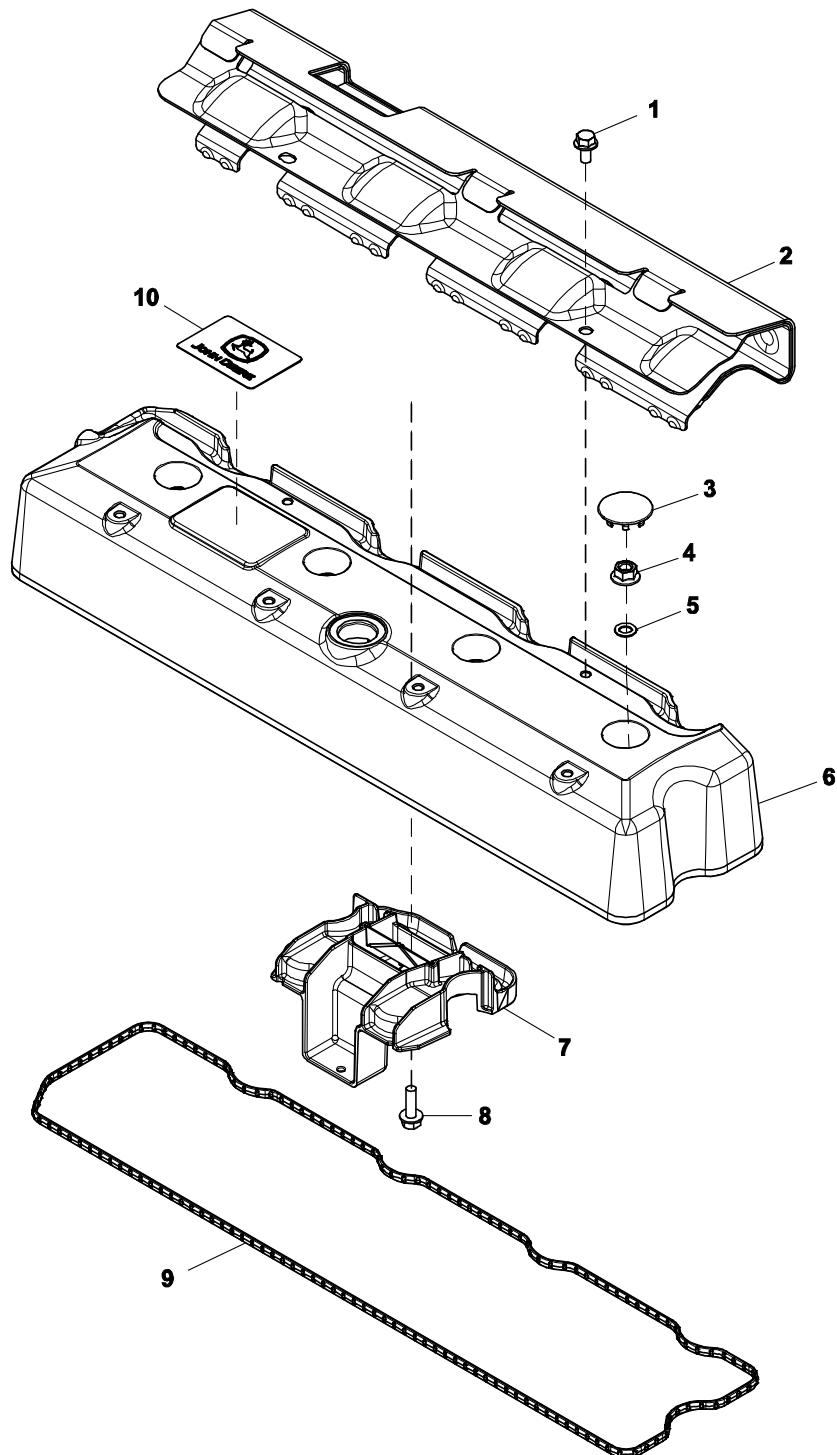


T3350_00
04/11

ROCKER ARM COVER

[illegible]

 BREATHER HOSE


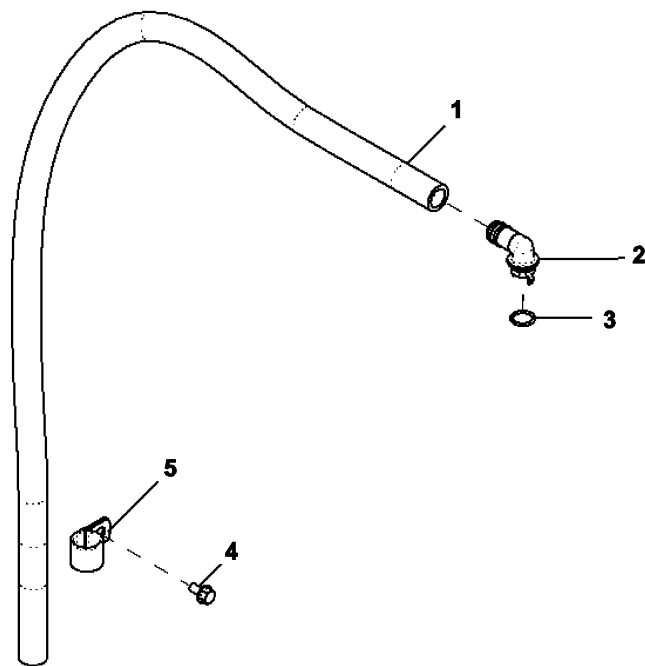


T3362_00
04/11

BREATHING HOSE	
----------------	--

[illegible]

  
FLYWHEEL AND FLYWHEEL HOUSING

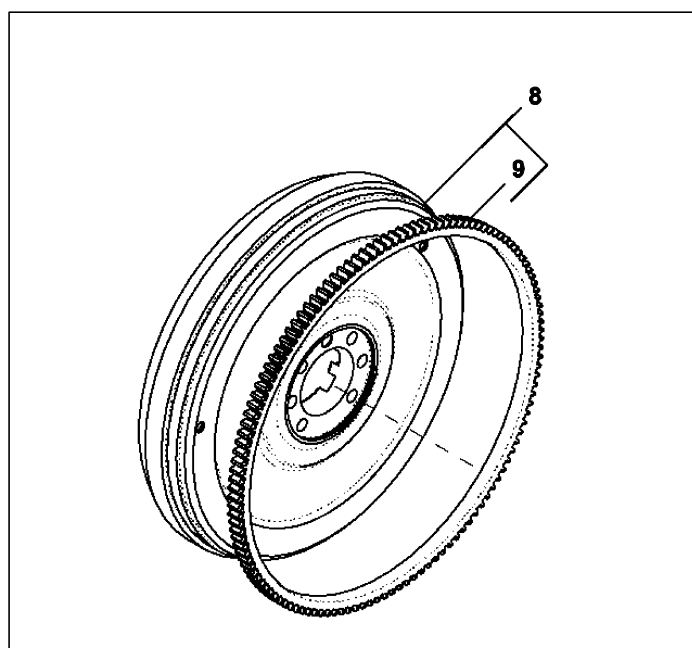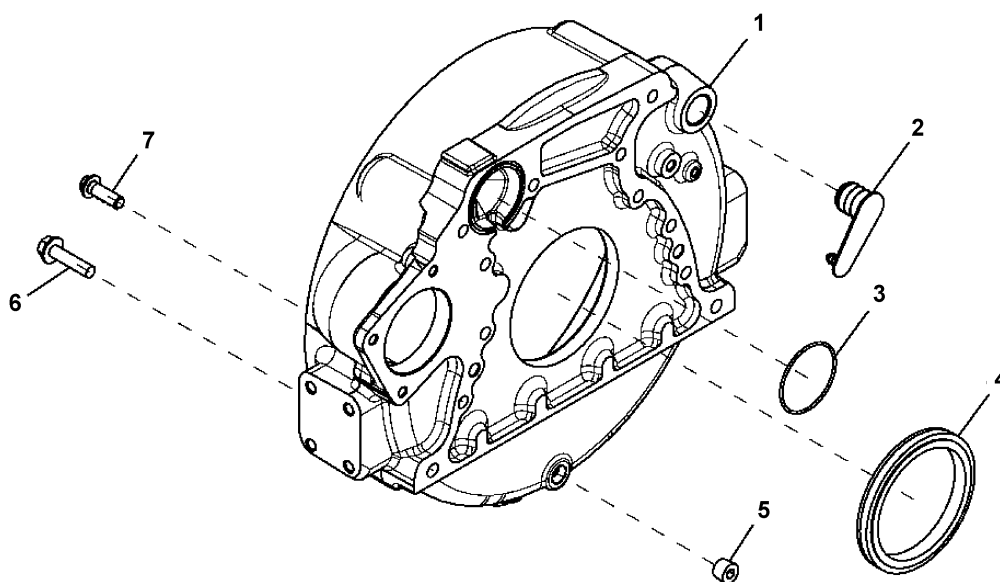

T3353_00
04/11

[illegible]

 FRONT PLATE

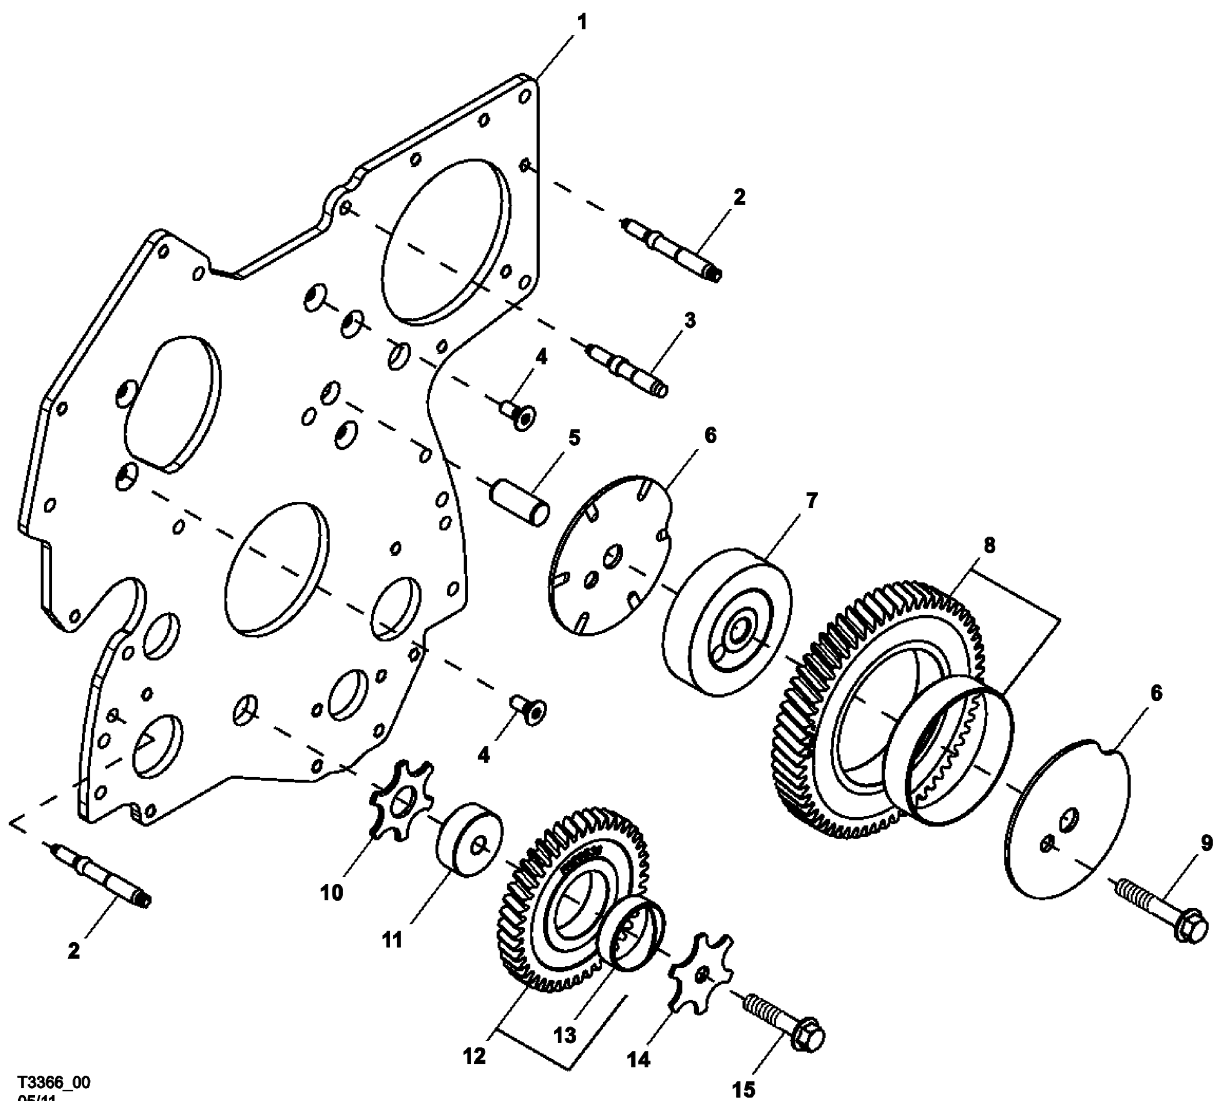


T3366_00
05/11

FRONT PLATE

[illegible]

 
TIMING GEAR & WATER PUMP

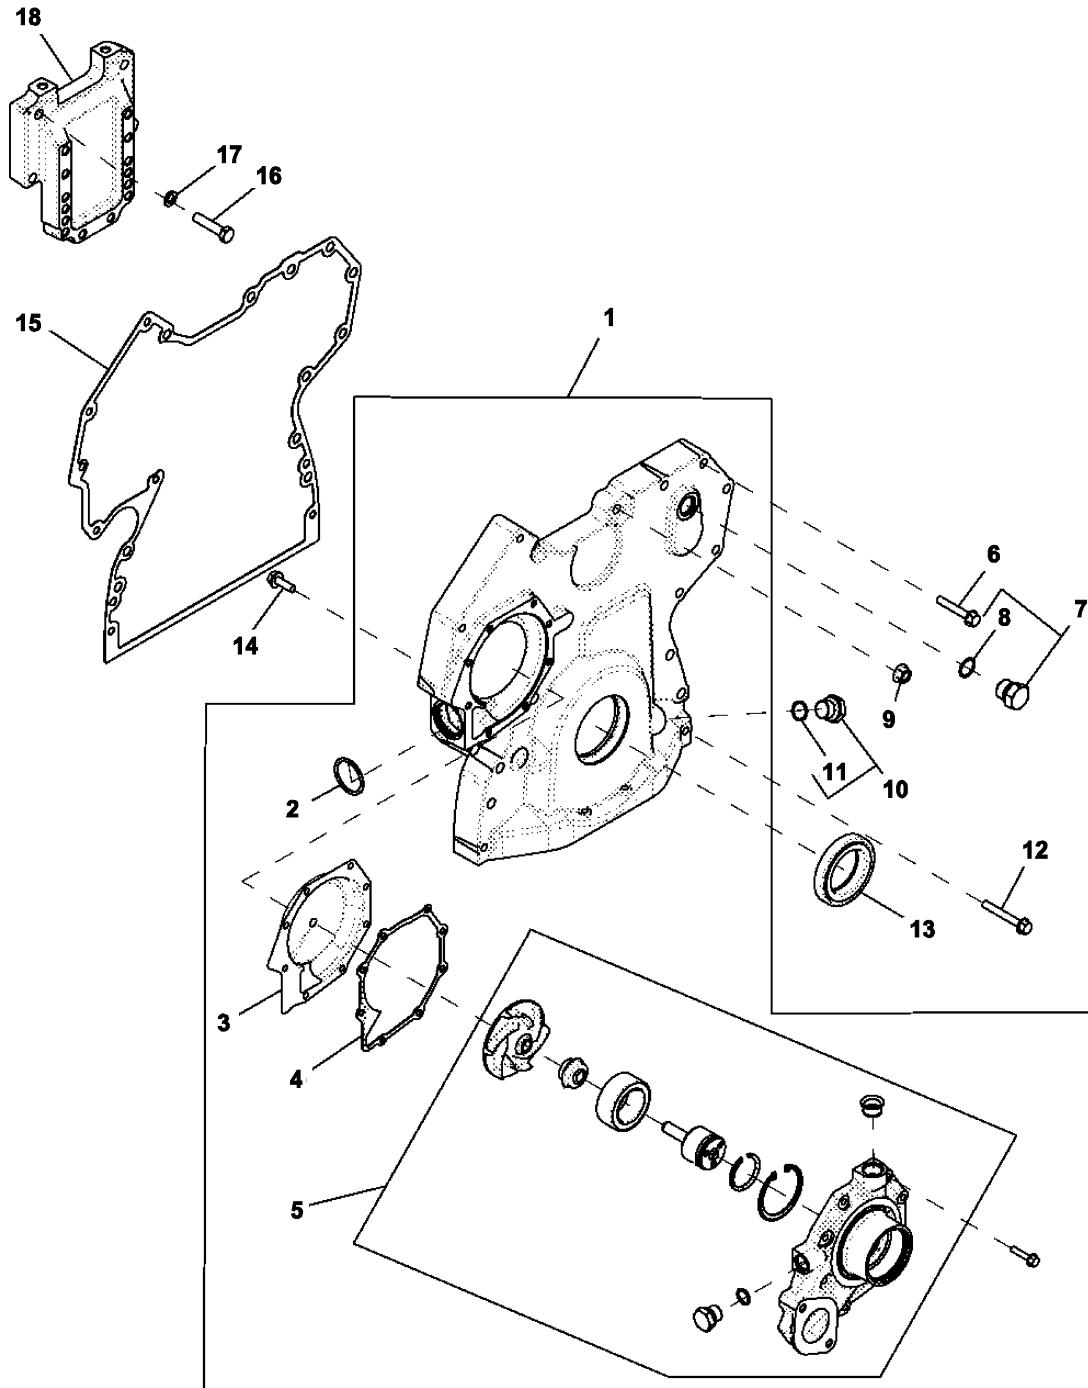

T3370_00
05/11

[illegible]

 WATER PUMP INLET

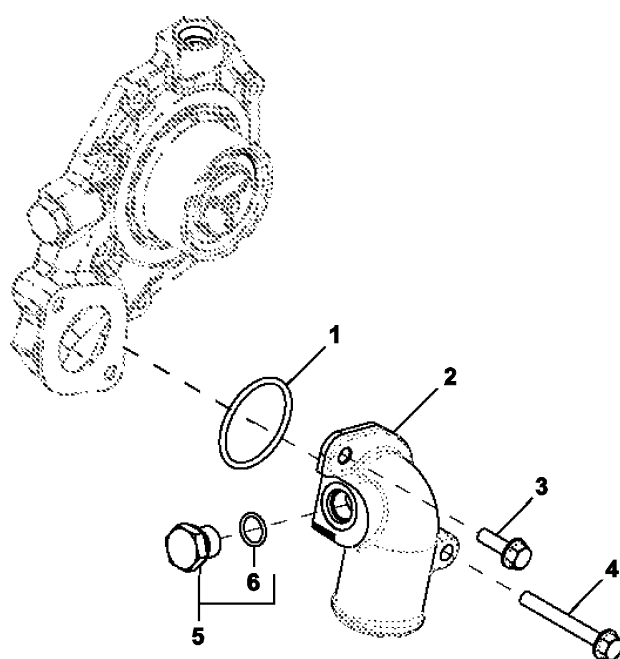


T3378_00
05/11

WATER PUMP INLET

[illegible]

 WATER PUMP PULLEY


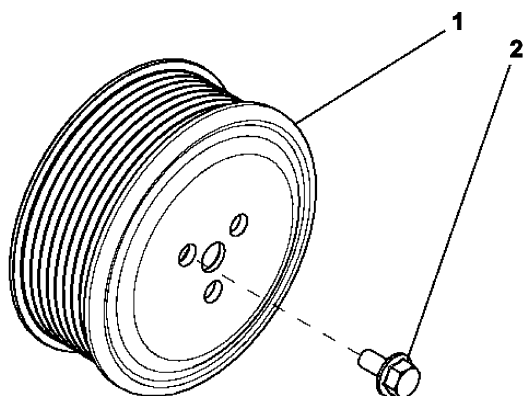


T3357_00
04/11

WATER PUMP PULLEY	
-------------------	--

[illegible]



 
 
THERMOSTAT AND THERMOSTAT COVER

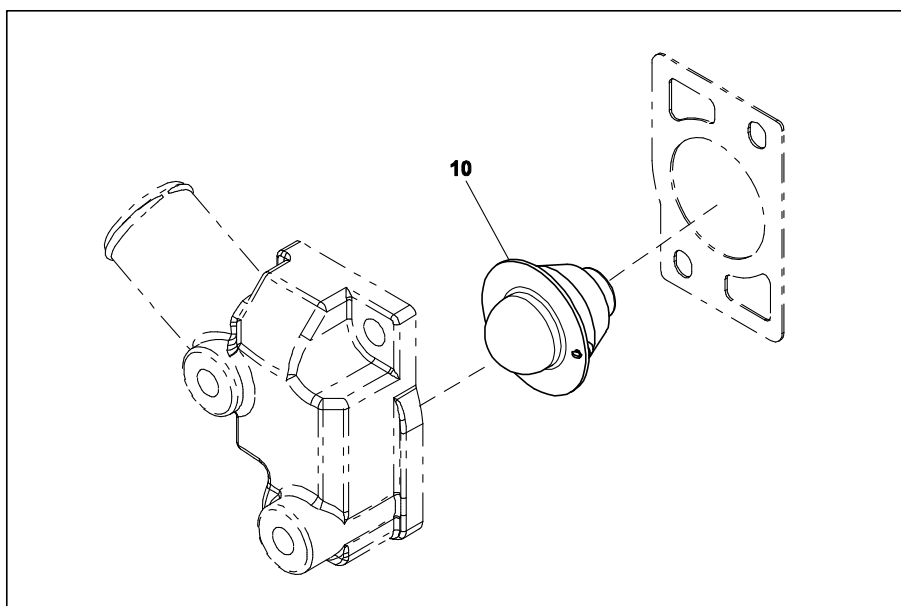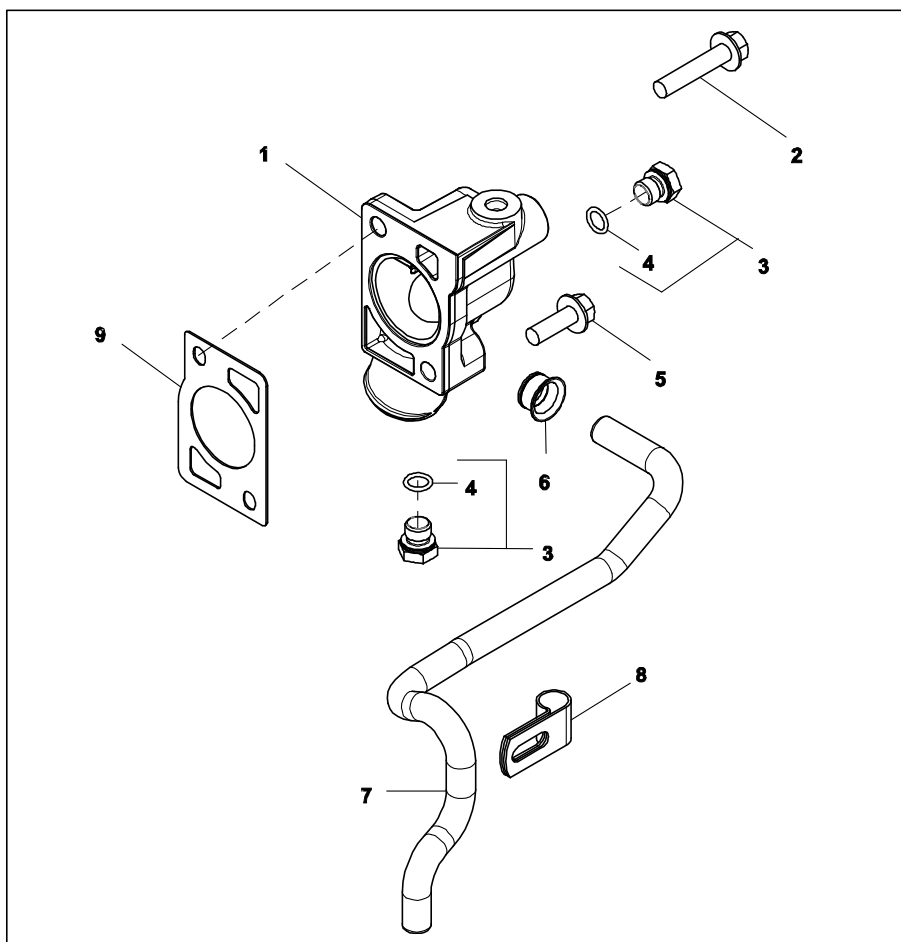

T3358_00
04/11

[illegible]

    
FAN DRIVE ASSEMBLY

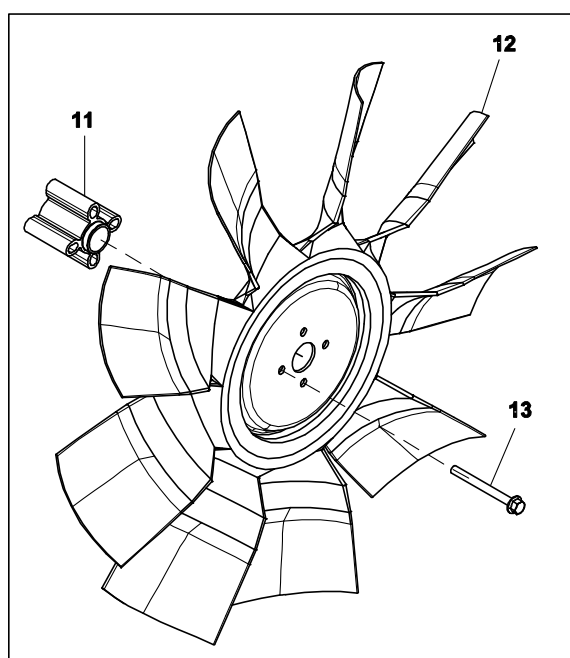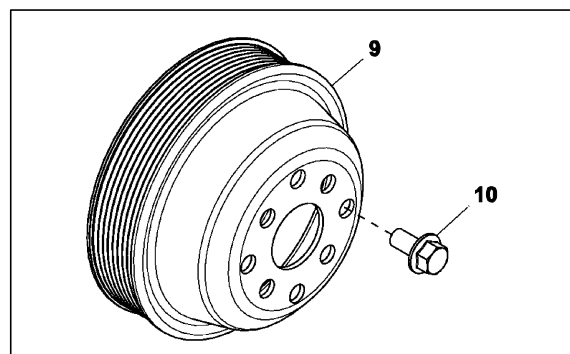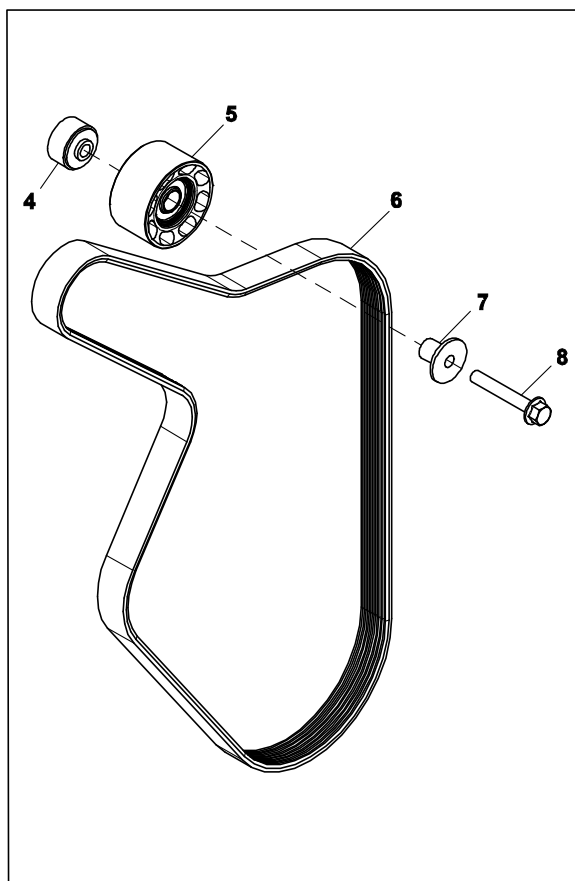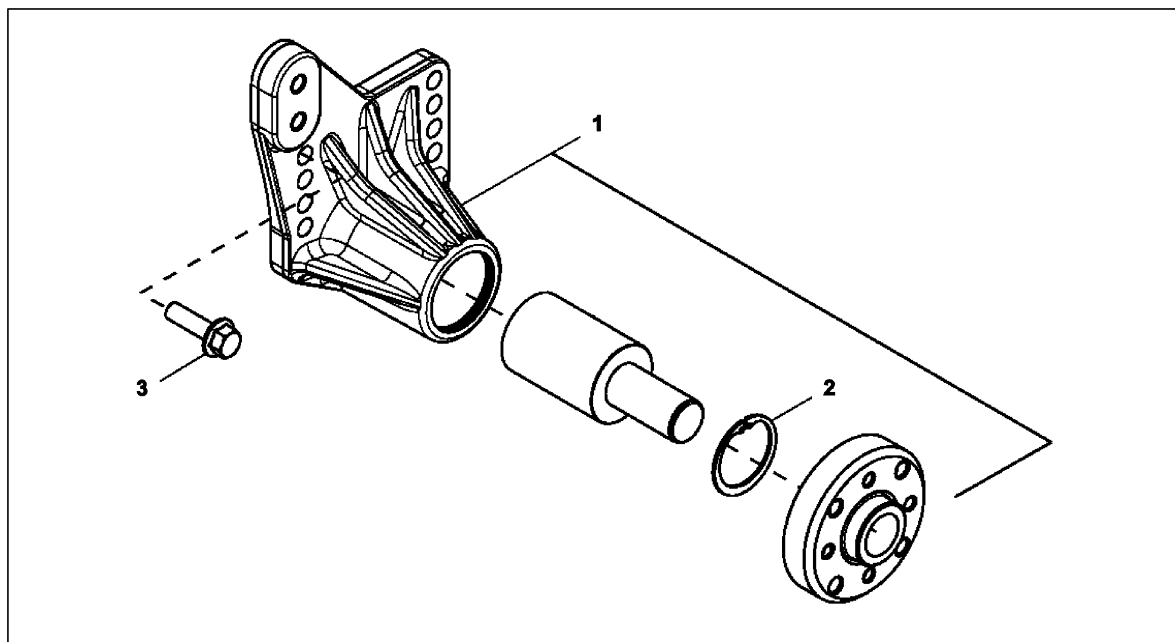

T3359_00
04/11

[illegible]

 BELT TENSIONER

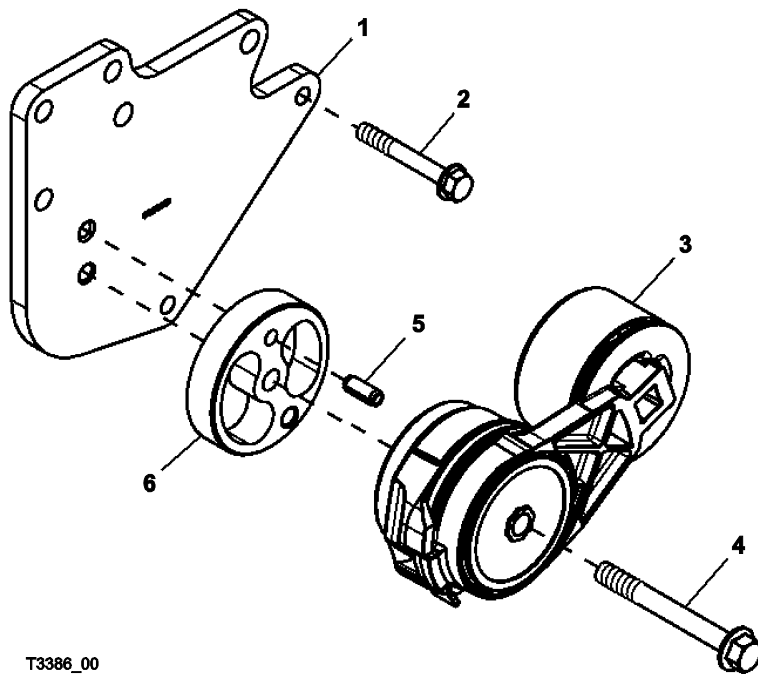


T3386_00
05/11

BELT TENSIONER

[illegible]

 OIL PAN

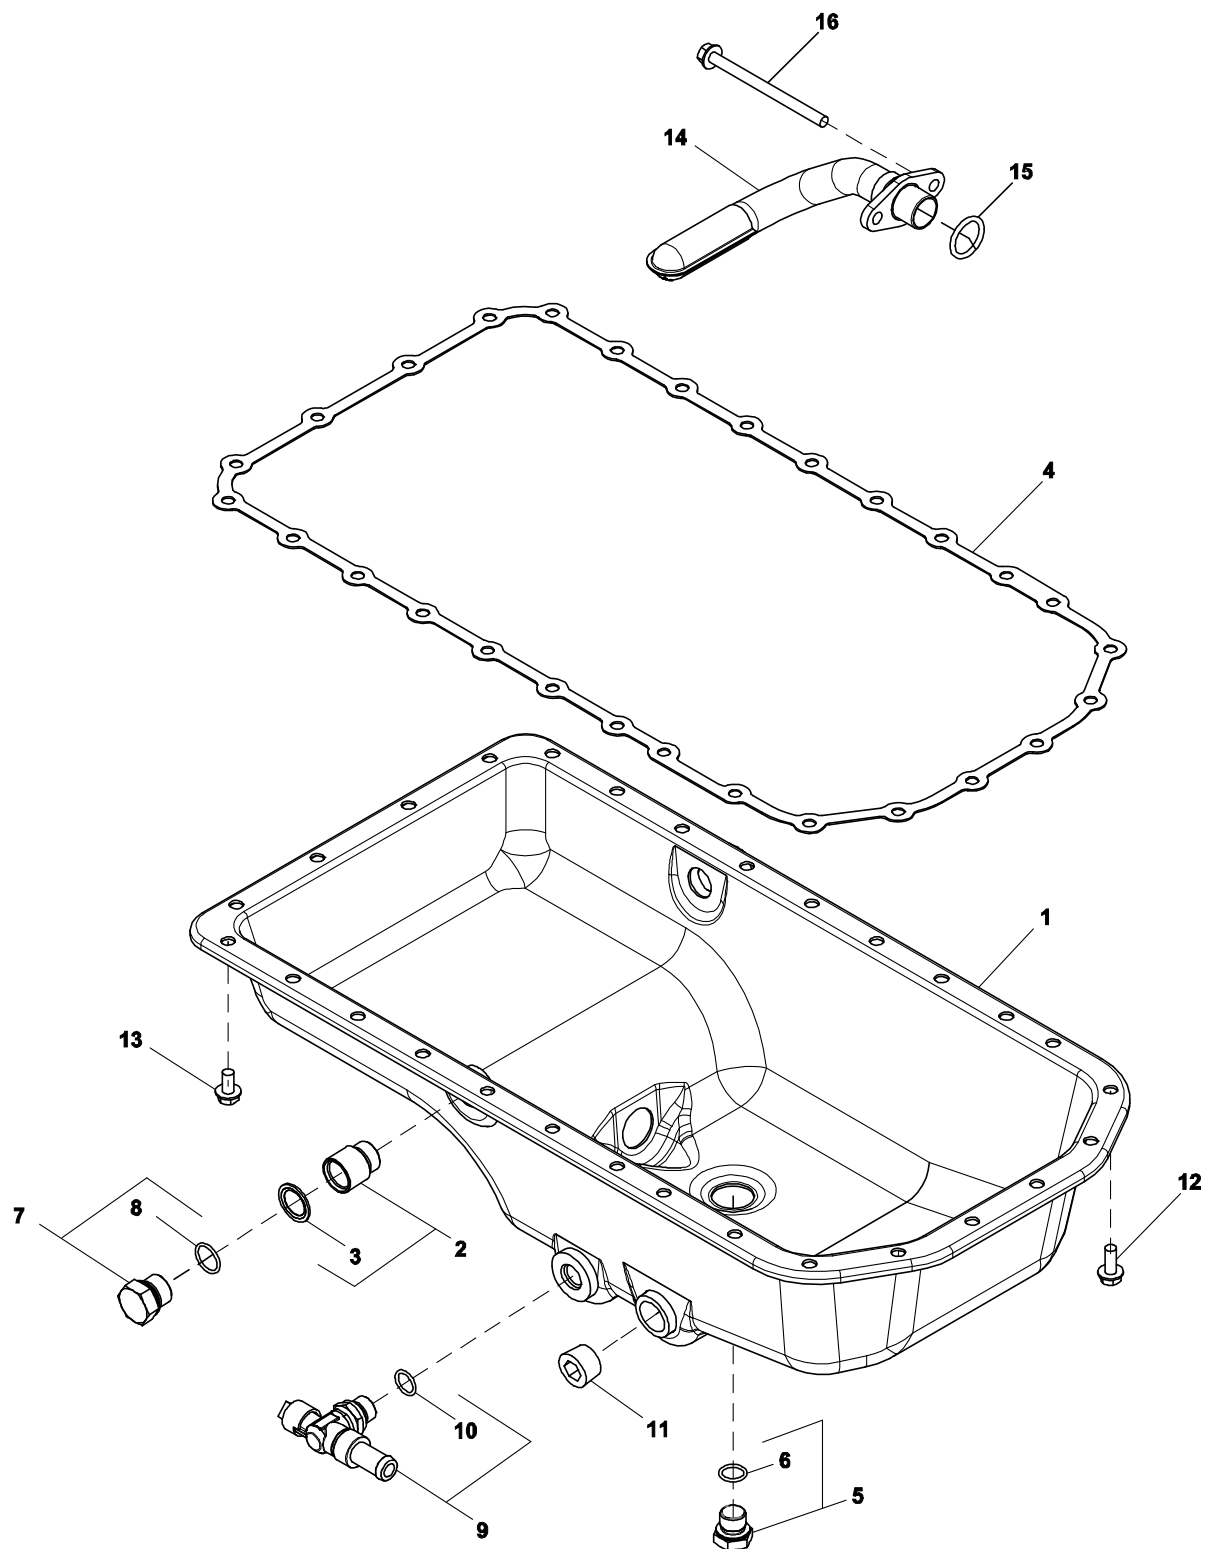


T3356_00
04/11

OIL PAN	
---------	--

[illegible]

 DIP STICK

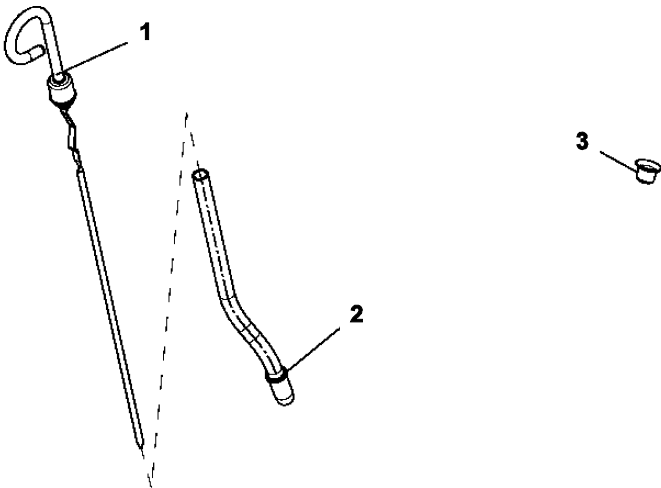


T3368_00
05/11

DIP STICK

[illegible]

 OIL PUMP

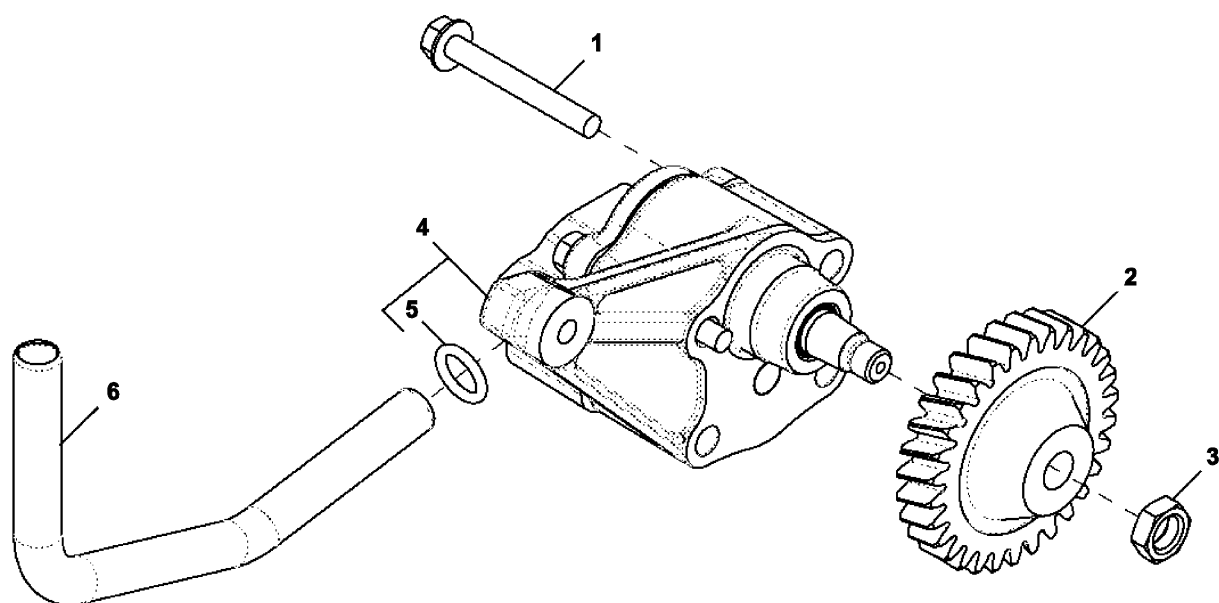


T3376_00
05/11

OIL PUMP	
----------	--

[illegible]

 OIL COOLER

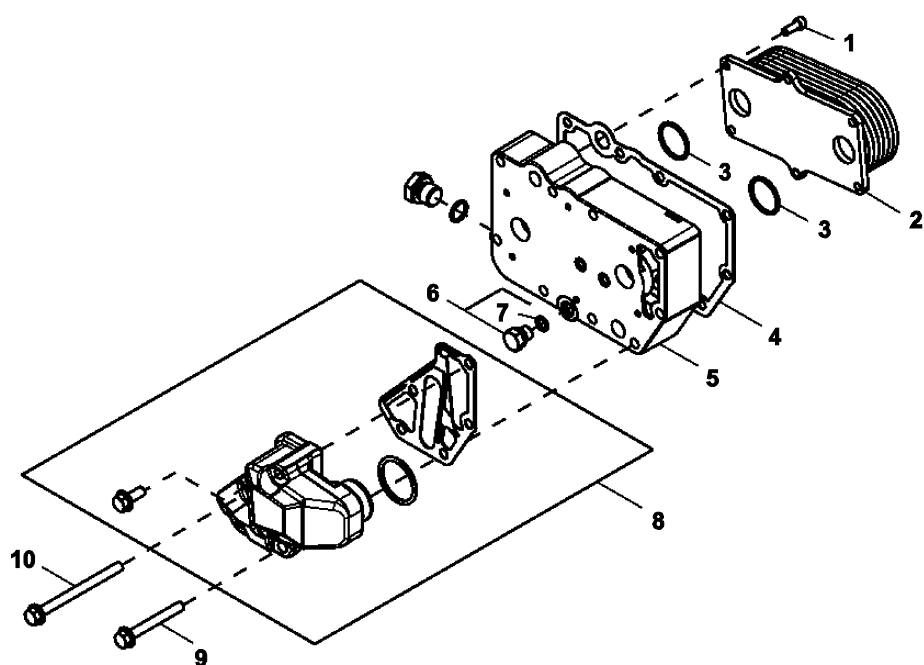


T3379_00
05/11

OIL COOLER	
------------	--

[illegible]

 
OIL FILLER NECK

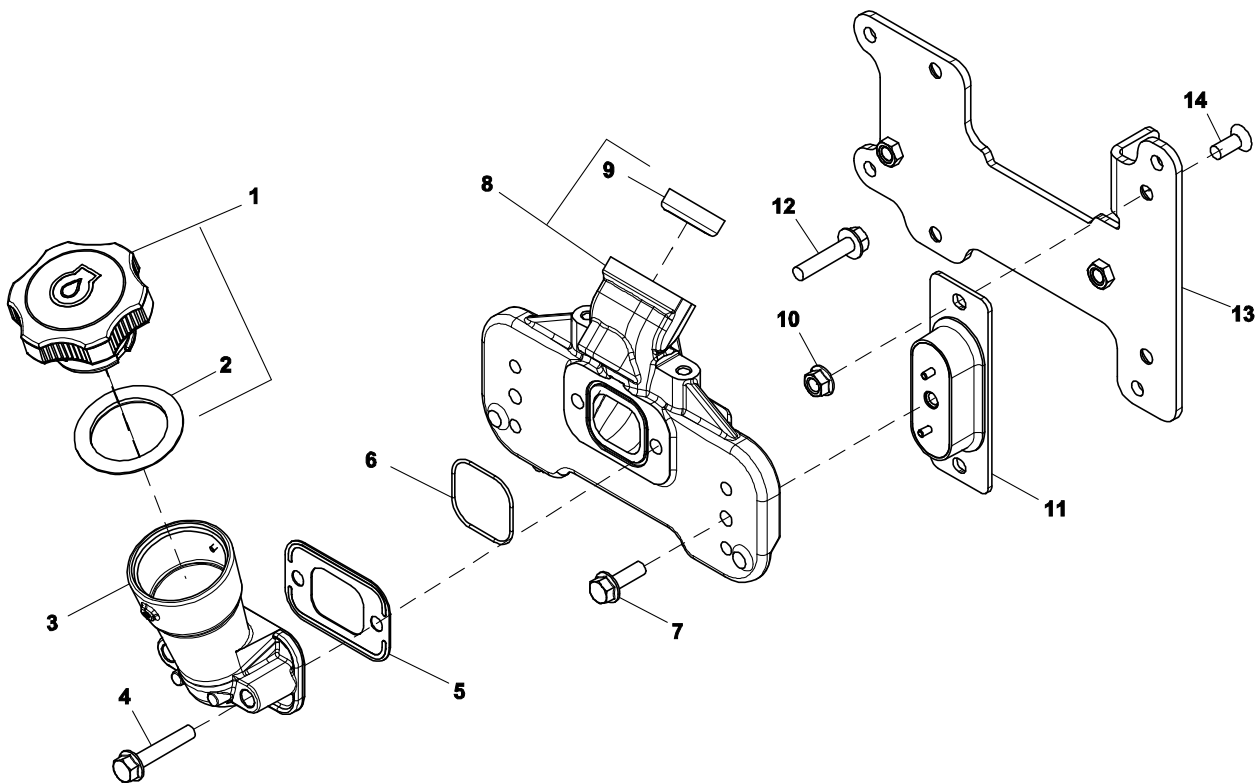

T3351_00
04/11

[illegible]

 
ENGINE OIL FILTER

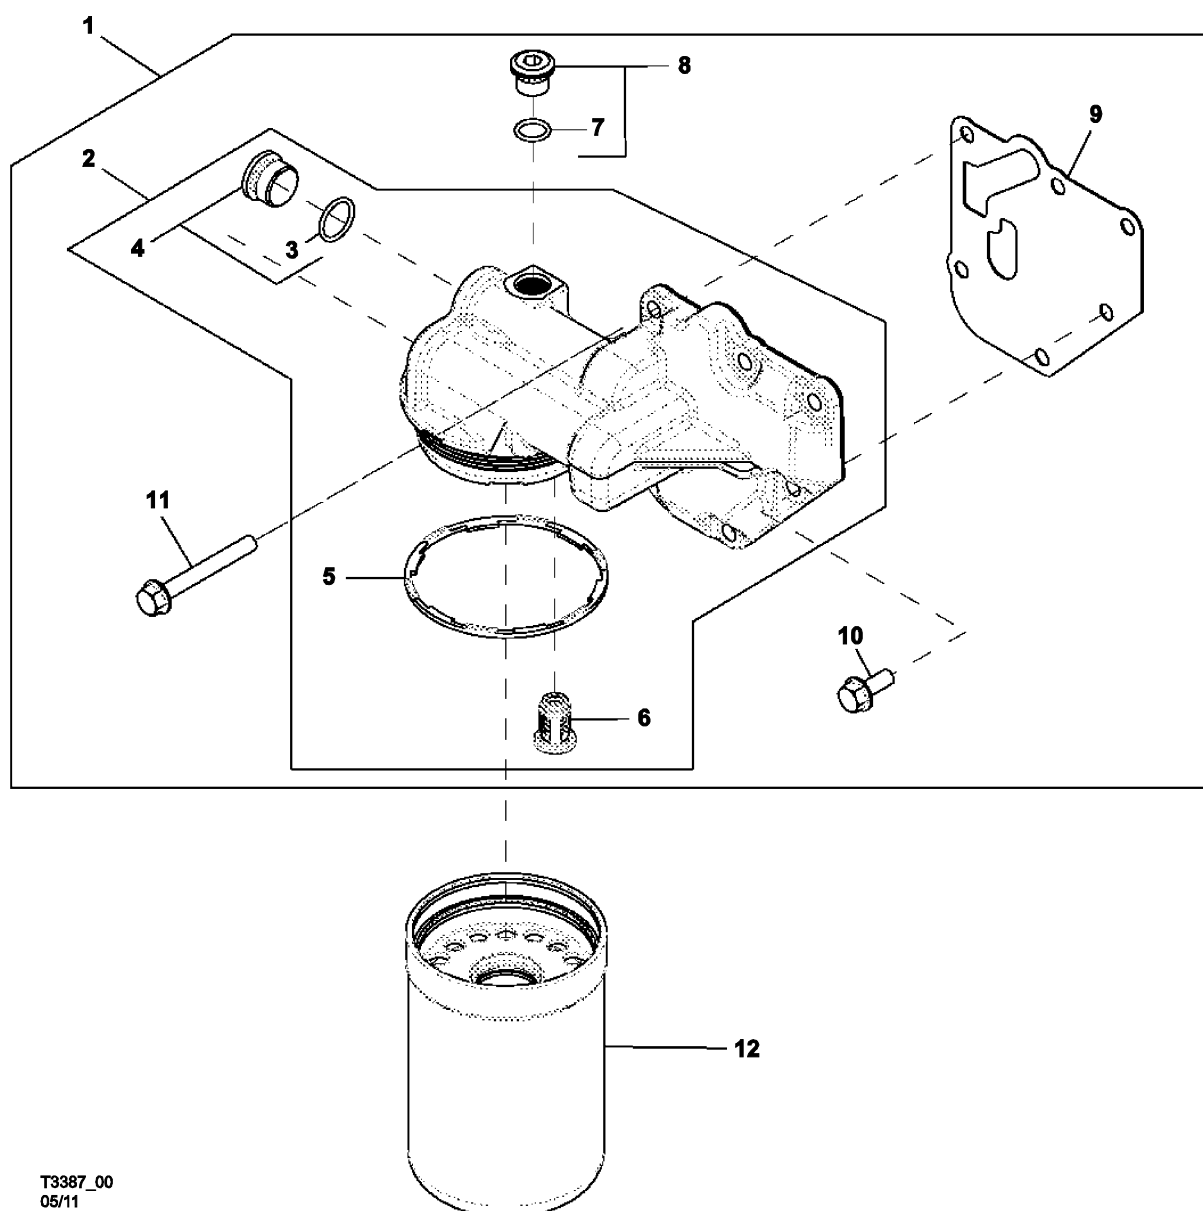

T3387_00
05/11

ENGINE OIL FILTER

 
FUEL PUMP

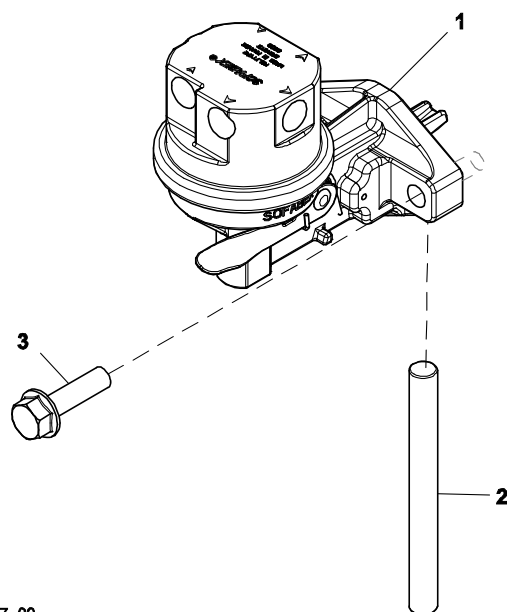

T3367_00
04/11

FUEL PUMP	
-----------	--

 FUEL INJECTION PUMP

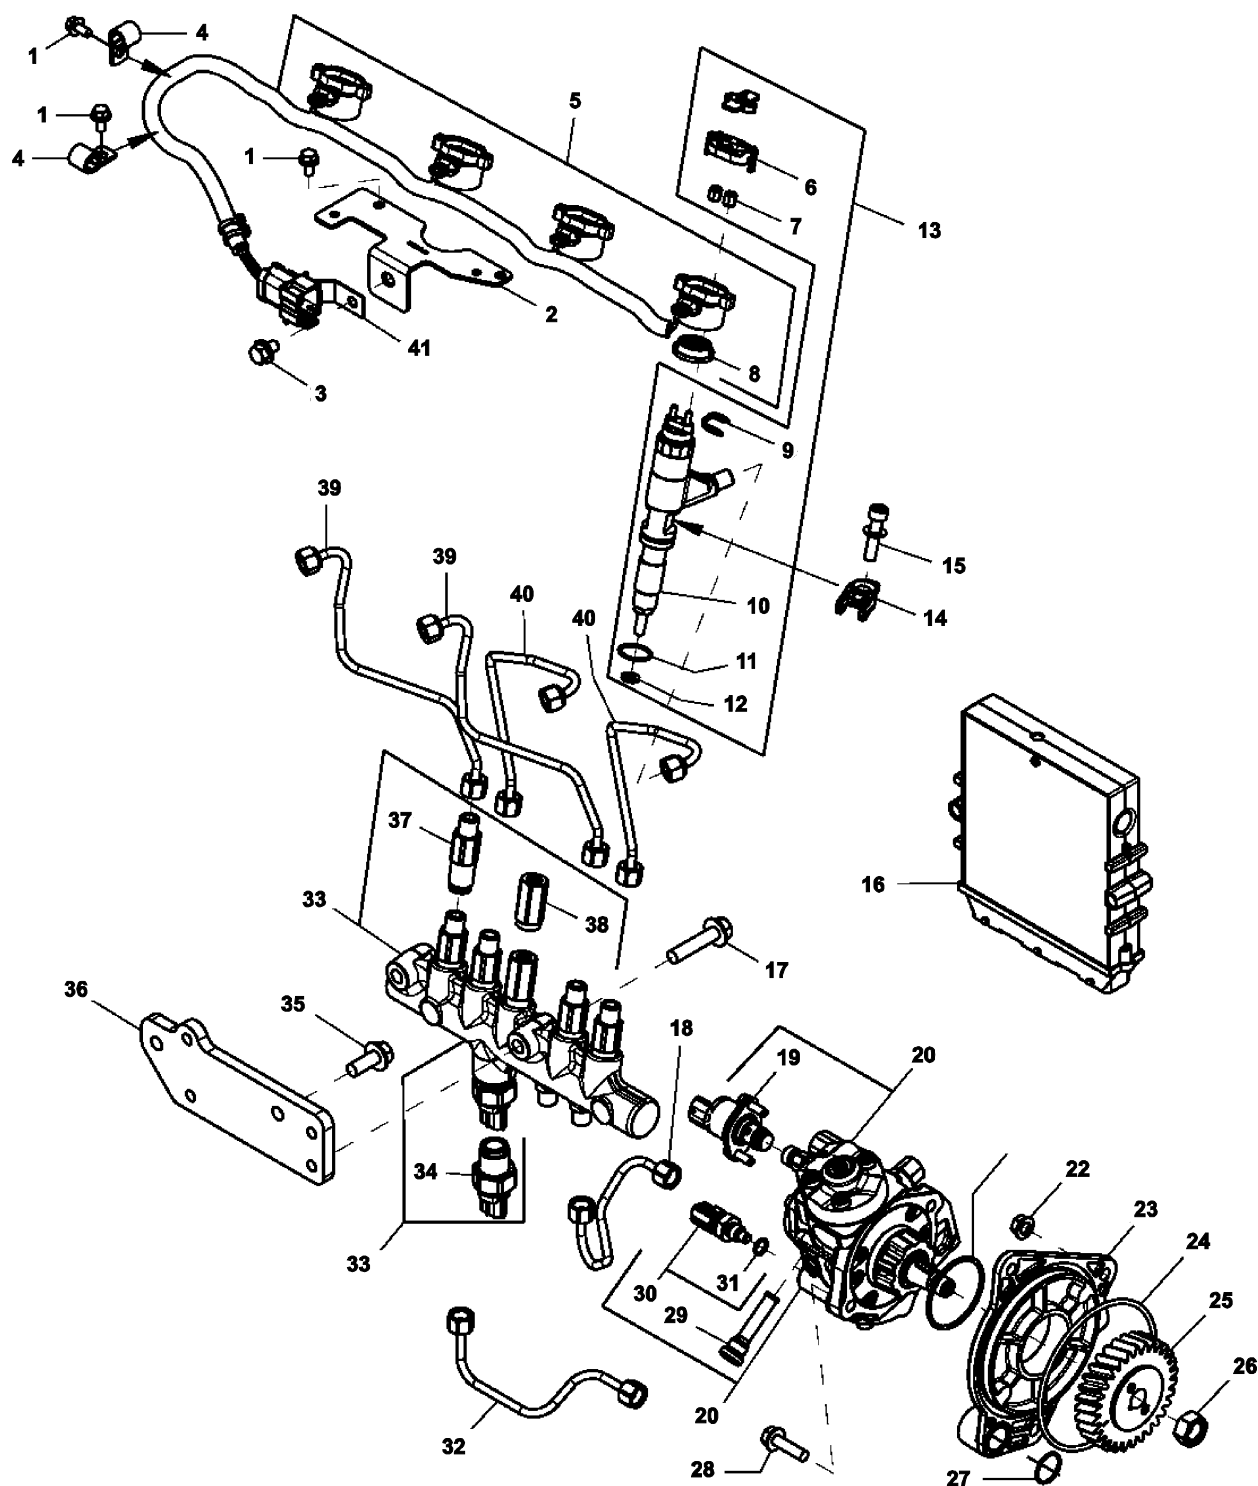


T3354_00
05/11

FUEL INJECTION PUMP

Item	Part Number	Description	Remarks	Serial Number	Qty
1	46550757	SCREW			1
2	46550758	BRACKET			1
3	23230162	SCREW			4
4	46550759	CLIP			2
5	46550760	HARNESS, WIRING			1
6	46550761	CAP			1
7	46550762	NUT			2
8	46550763	SEAL			1
9	23229826	WASHER			1
10	23160526	NOZZLE, INJECTOR			1
11	23229602	O-RING			1
12	23229867	WASHER, SEALING			1
13	23160526	NOZZLE, INJECTOR			1
14	46550766	CLAMP			1
15	46550767	SCREW	(with washer)		1
16	23230113	CONTROLLER, ENGINE			1
17	46550768	SCREW			2
18	23230147	LINE, FUEL			1
19	36139350	SUCTION CONTROL VALVE			1
20	46550771	PUMP, FUEL INJECTION			1
21	46500772	O-RING			1
22	46550750	NUT			3
23	46550773	ADAPTOR			1
24	85474716	O-RING			1
25	46550774	GEAR			1
26	36111516	NUT			1
27	46550775	O-RING			1
28	85471761	SCREW			2
29	46550777	SCREEN			1
30	23229974	SENDER, FUEL TEMPERATURE			1
31	46550778	O-RING			1

 
FUEL INJECTION PUMP (CONT'D)

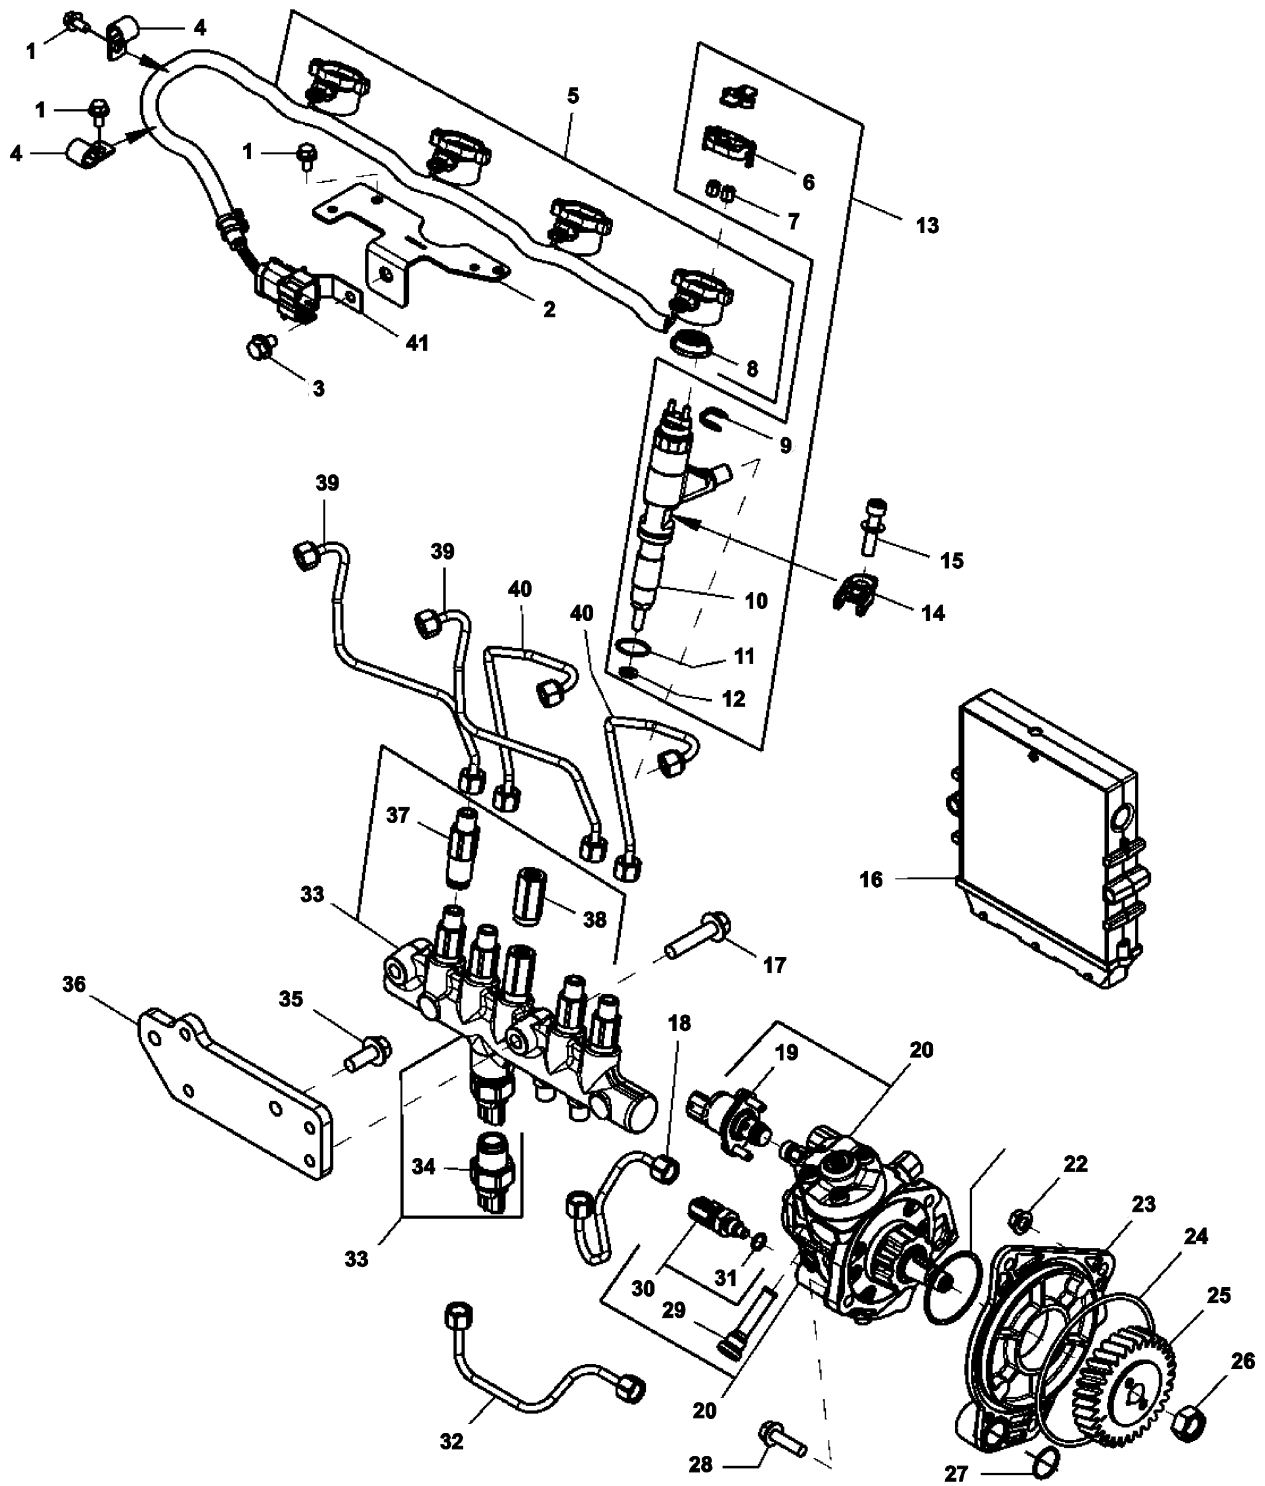

T3354_00
05/11

FUEL INJECTION PUMP (CONT'D)	
1	1.00
2	1.00
3	1.00
4	1.00
5	1.00
6	1.00
7	1.00
8	1.00
9	1.00
10	1.00
11	1.00
12	1.00
13	1.00
14	1.00
15	1.00
16	1.00
17	1.00
18	1.00
19	1.00
20	1.00
21	1.00
22	1.00
23	1.00
24	1.00
25	1.00
26	1.00
27	1.00
28	1.00
29	1.00
30	1.00
31	1.00
32	1.00
33	1.00
34	1.00
35	1.00
36	1.00
37	1.00
38	1.00
39	1.00
40	1.00
41	1.00
42	1.00
43	1.00
44	1.00
45	1.00
46	1.00
47	1.00
48	1.00
49	1.00
50	1.00
51	1.00
52	1.00
53	1.00
54	1.00
55	1.00
56	1.00
57	1.00
58	1.00
59	1.00
60	1.00
61	1.00
62	1.00
63	1.00
64	1.00
65	1.00
66	1.00
67	1.00
68	1.00
69	1.00
70	1.00
71	1.00
72	1.00
73	1.00
74	1.00
75	1.00
76	1.00
77	1.00
78	1.00
79	1.00
80	1.00
81	1.00
82	1.00
83	1.00
84	1.00
85	1.00
86	1.00
87	1.00
88	1.00
89	1.00
90	1.00
91	1.00
92	1.00
93	1.00
94	1.00
95	1.00
96	1.00
97	1.00
98	1.00
99	1.00
100	1.00

 
PRIMARY FUEL FILTER

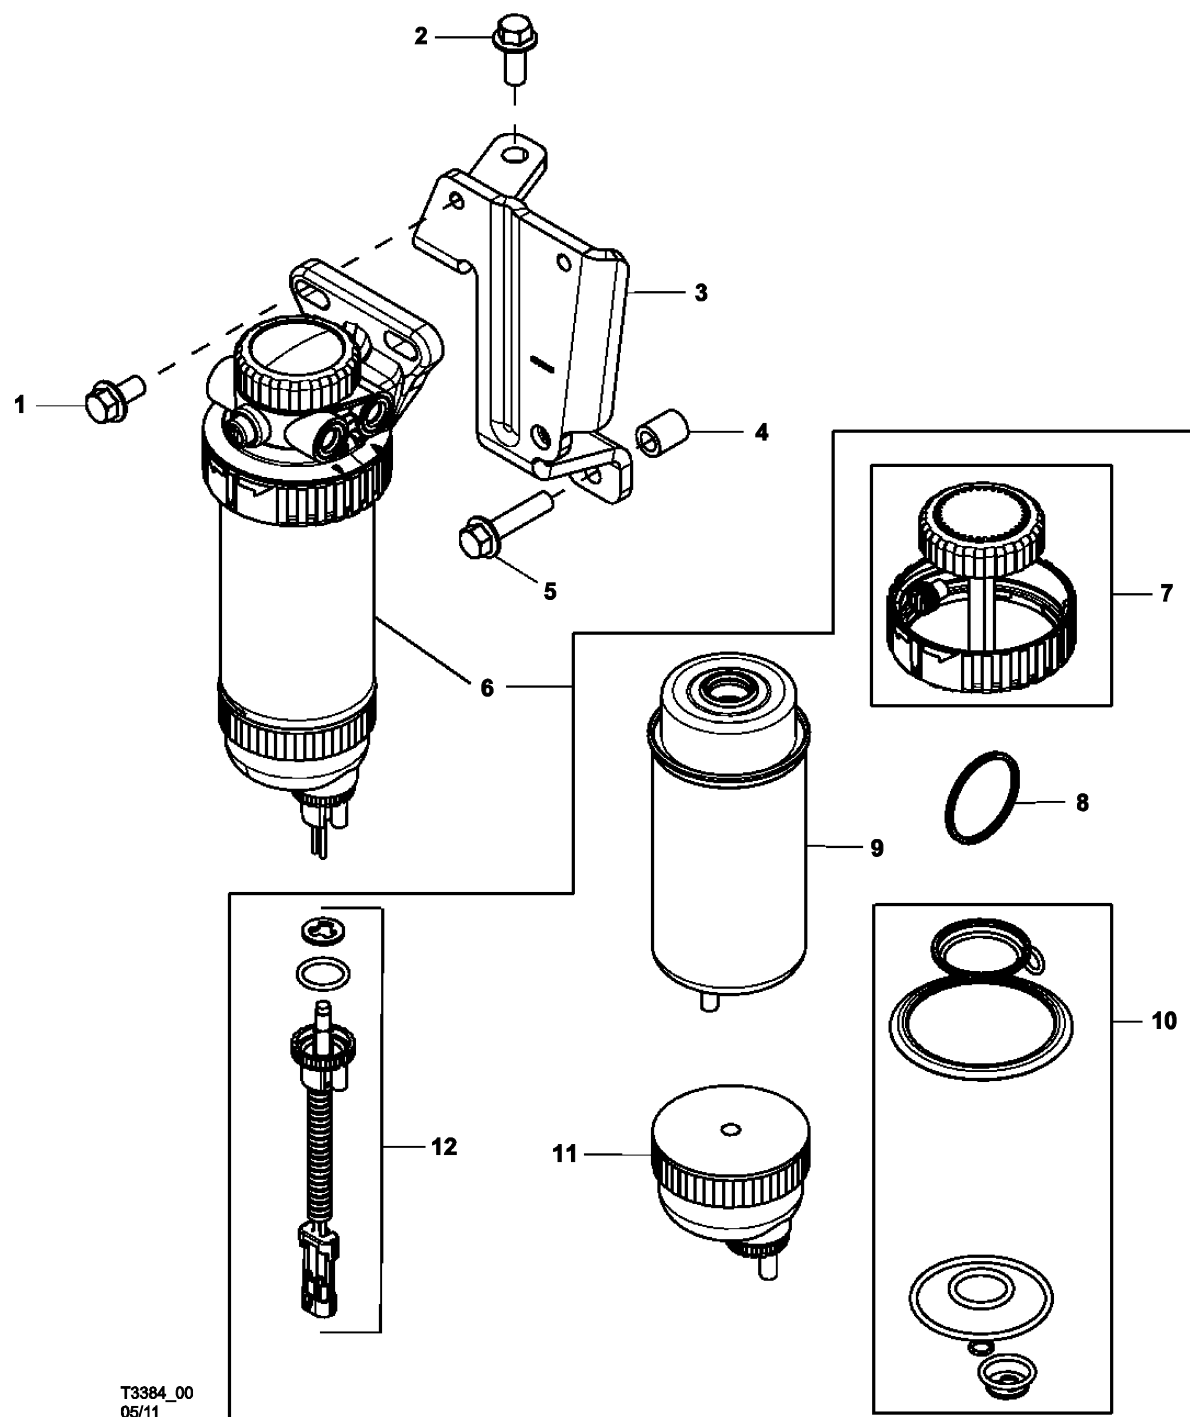

T3384_00
05/11

PRIMARY FUEL FILTER	
---------------------	--

 
FINAL FUEL FILTER

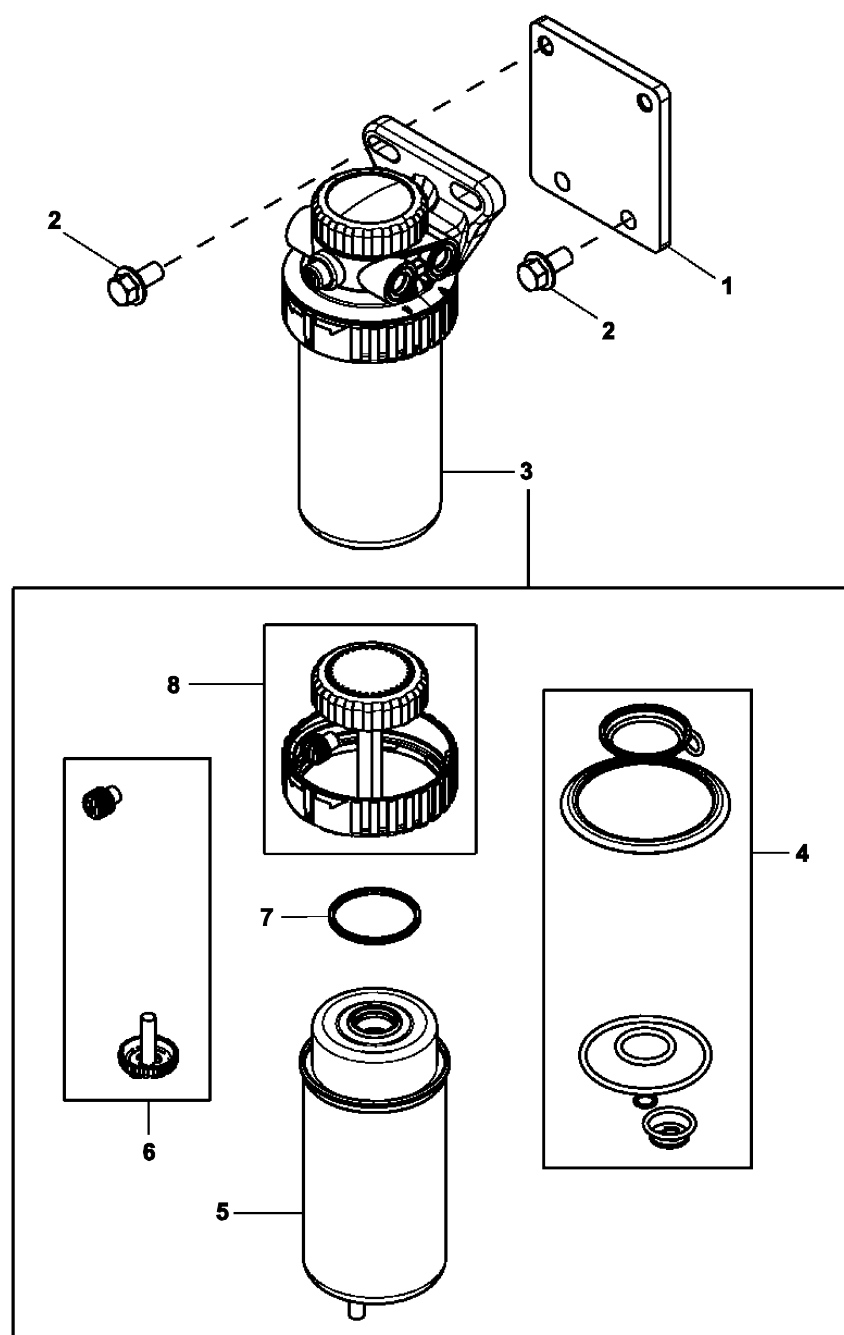

T3365_00
04/11

FINAL FUEL FILTER

 FUEL LINES, LOW PRESSURE

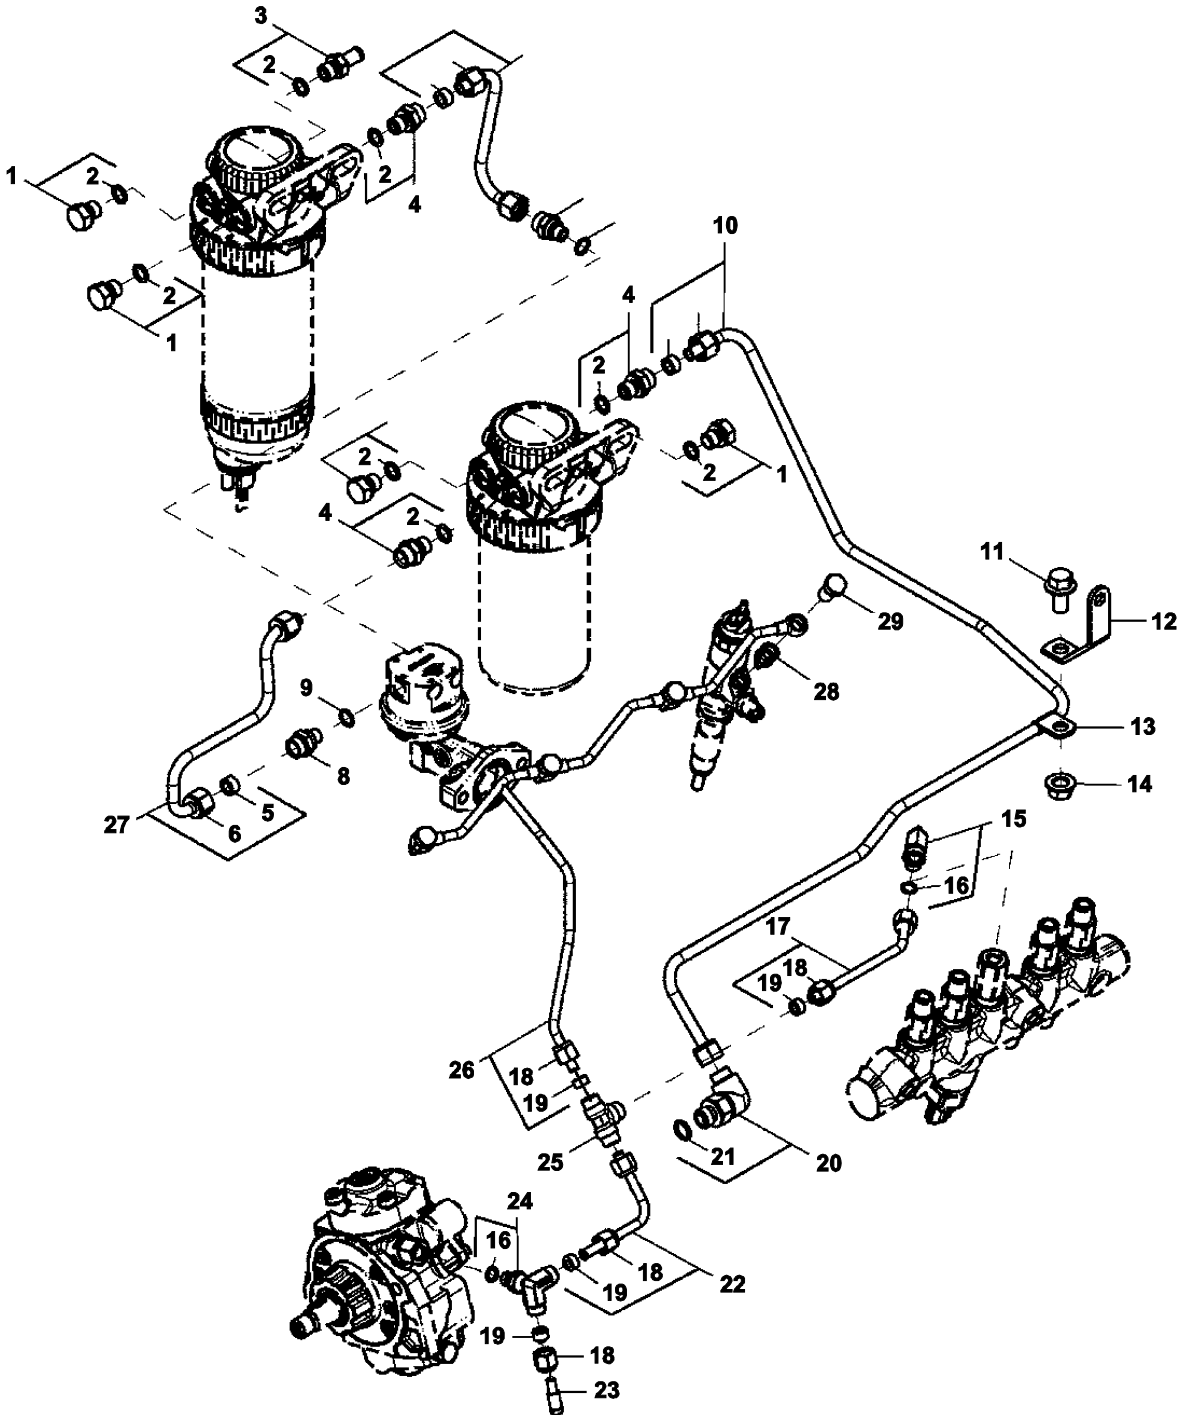


T3380_00
05/11

FUEL LINES, LOW PRESSURE

Item	Part Number	Description	Remarks	Serial Number	Qty
1	36114098	PLUG			4
2	36126019	O-RING			1
3	24899775	FITTING			1
4	36116242	ADAPTOR			3
5	85472744	WASHER, SEALING	order as required		x
6	85471829	NUT	order as required		x
7	46550899	LINE, FUEL			1
8	24899247	FITTING			2
9	85474575	O-RING			2
10	46550900	LINE, FUEL			1
11	85470359	SCREW			1
12	46550901	BRACKET			1
13	36118750	CLAMP			1
14	36100188	NUT			1
15	46550902	ELBOW			1
16	46550903	O-RING			1
17	23230030	LINE, FUEL			1
18	36106821	NUT	order as required		x
19	36126050	WASHER, SEALING	order as required		x
20	46550904	ELBOW			1
21	36128916	O-RING			1
22	23230238	LINE, FUEL			1
23	85472322	FITTING, HOSE			1
24	46550905	FITTING			1
25	46550906	TEE			1
26	46550907	LINE, FUEL			1
27	24899882	LINE, FUEL			1
28	23229826	WASHER			4
29	46550909	SCREW			4

 AIR INTAKE

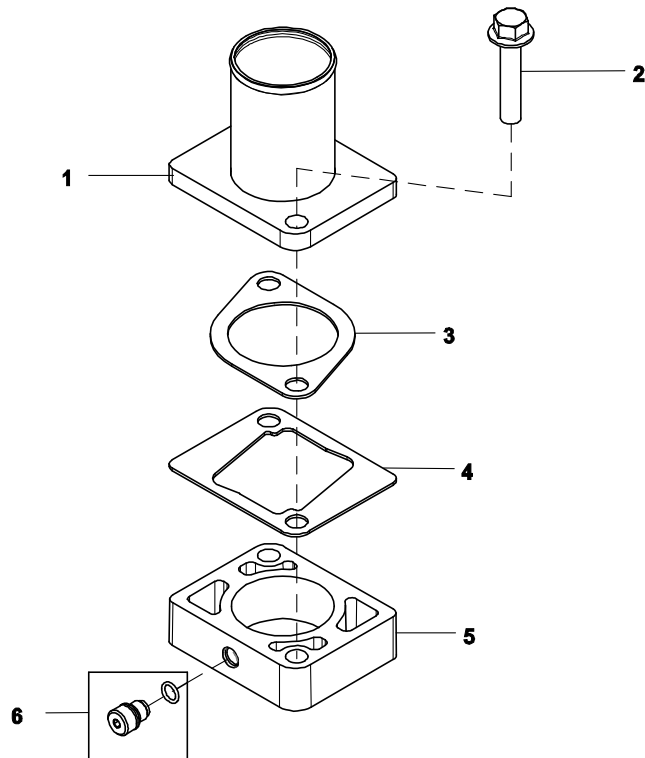


T3355_00
04/11

AIR INTAKE

[illegible]

 STARTING AID

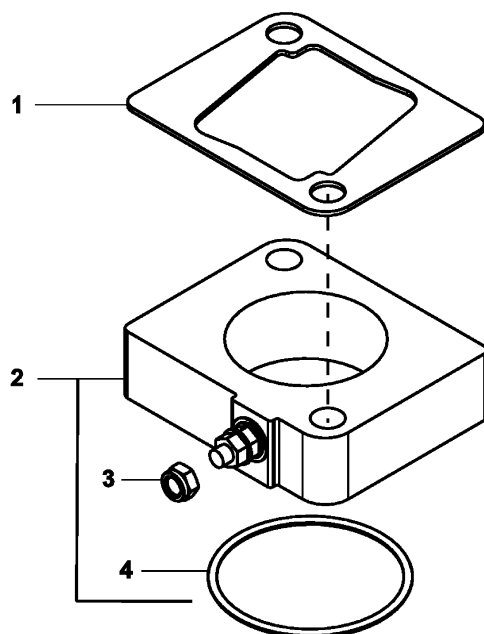


T3369_00
04/11

STARTING AID

[illegible]

 EXHAUST MANIFOLD

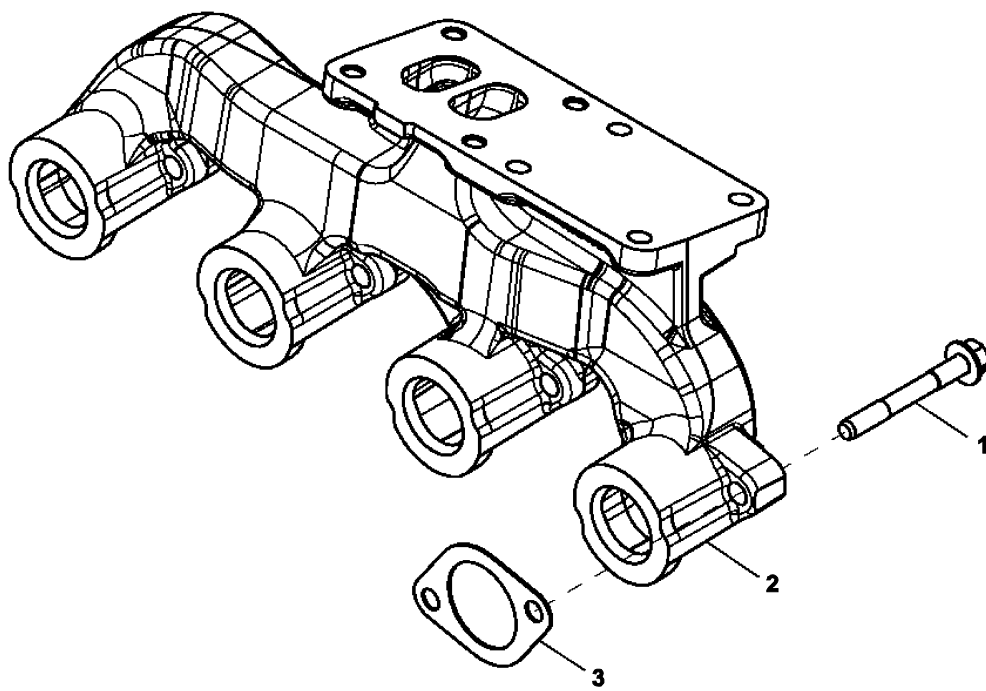


T3361_00
04/11

EXHAUST MANIFOLD

[illegible]

 EXHAUST ELBOW

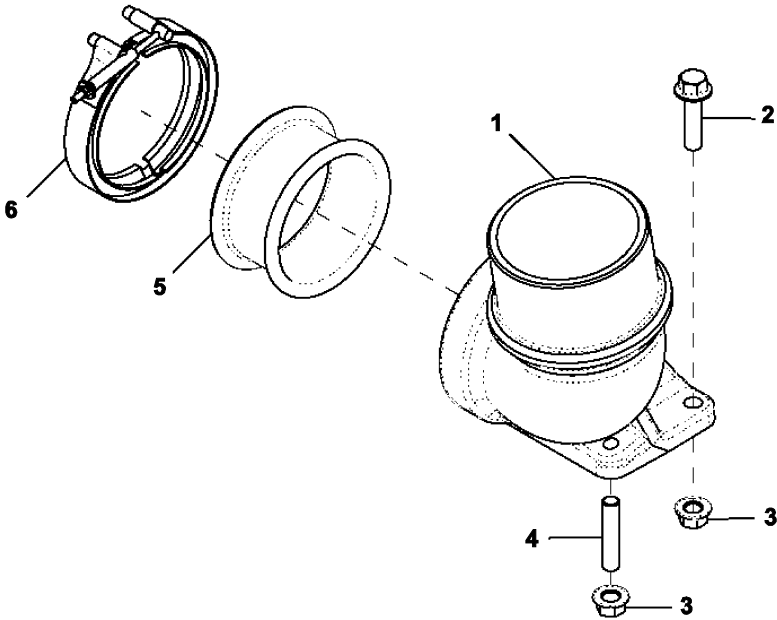


T3381_00
05/11

EXHAUST ELBOW	
1	2
3	4
5	6
7	8
9	10
11	12
13	14
15	16
17	18
19	20
21	22
23	24
25	26
27	28
29	30
31	32
33	34
35	36
37	38
39	40
41	42
43	44
45	46
47	48
49	50
51	52
53	54
55	56
57	58
59	60
61	62
63	64
65	66
67	68
69	70
71	72
73	74
75	76
77	78
79	80
81	82
83	84
85	86
87	88
89	90
91	92
93	94
95	96
97	98
99	100

[illegible]

 TURBO CHARGER

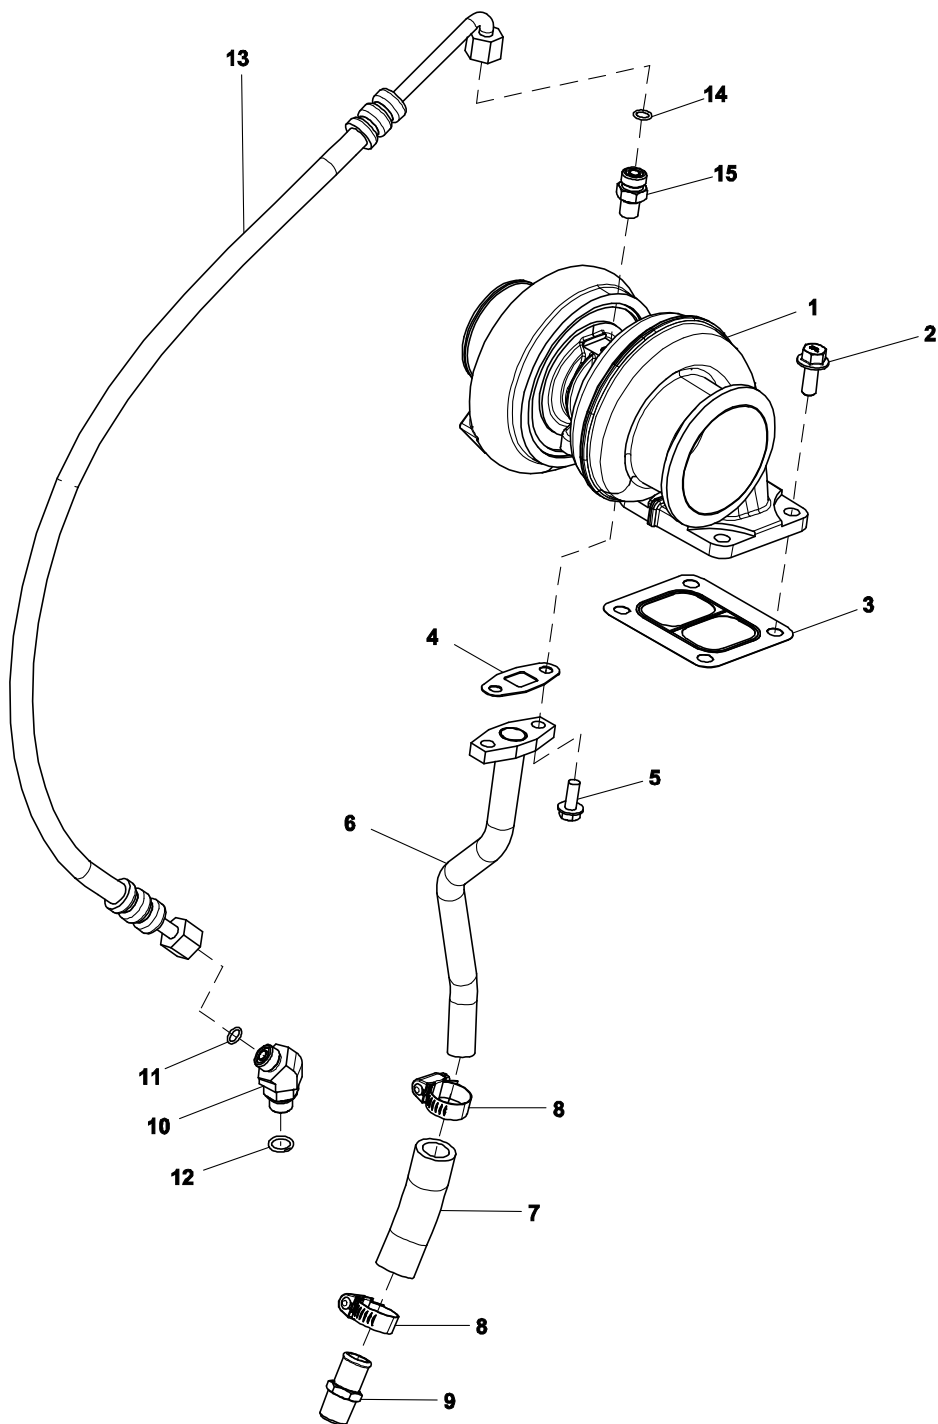


T3382_00
04/11

TURBO CHARGER	
---------------	--

[illegible]

 ENGINE WIRING HARNESS




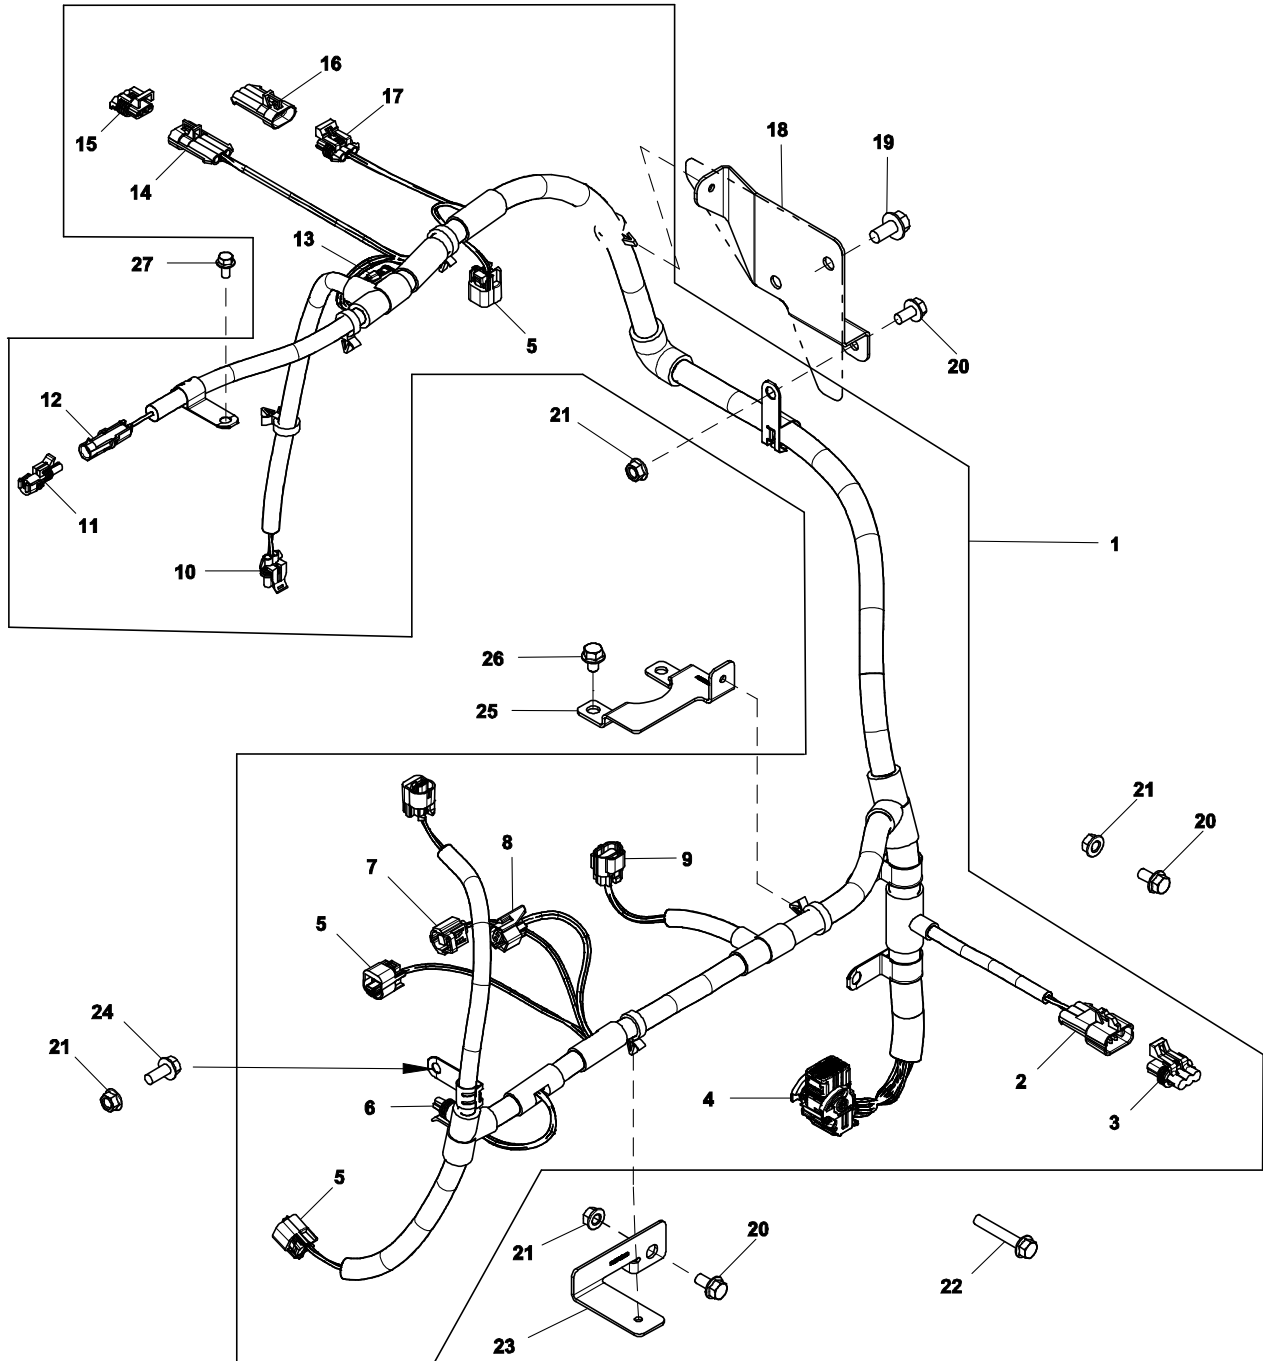


T3385_00
04/11

ENGINE WIRING HARNESS

Item	Part Number	Description	Remarks	Serial Number	Qty
1	46550927	HARNESS, WIRING			1
2	46550928	CONNECTOR			1
3	46550928	CONNECTOR			1
4	46550929	CONNECTOR			1
5	46550930	CONNECTOR			4
6	46550931	CONNECTOR			1
7	46550932	CONNECTOR			1
8	46550933	CONNECTOR			1
9	46550934	CONNECTOR			1
10	MISSING	CONNECTOR			1
11	46550936	CONNECTOR			1
12	46550937	CONNECTOR			1
13	46550938	CONNECTOR			1
14	46550939	CONNECTOR			1
15	46551364	HOUSING			1
16	46550939	CONNECTOR			1
17	46551364	HOUSING			1
18	46550941	BRACKET			1
19	46550942	SCREW			2
20	46550837	SCREW			4
21	46550750	NUT			5
22	46550942	SCREW			2
23	46550943	BRACKET			1
24	46550944	SCREW			1
25	46550945	BRACKET			1
26	46550757	SCREW			2
27	85470334	SCREW			1

    SENSORS

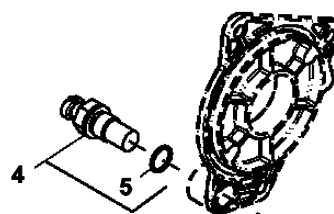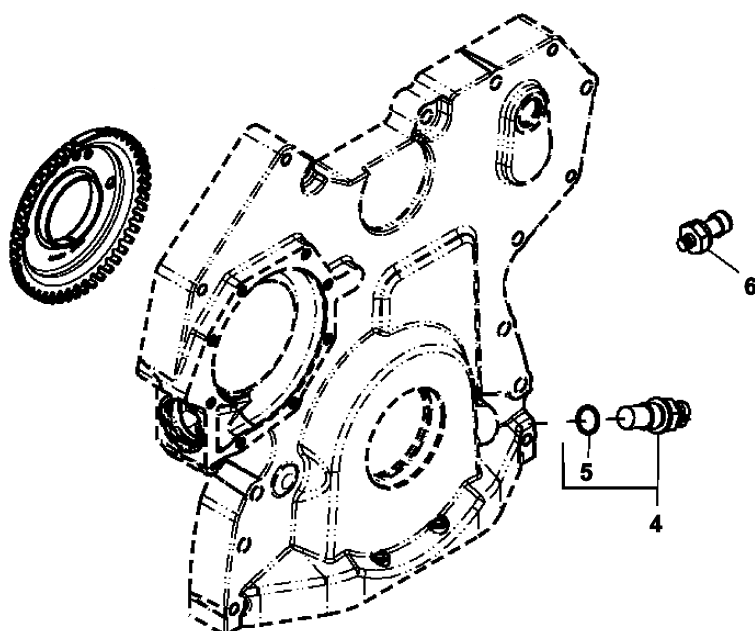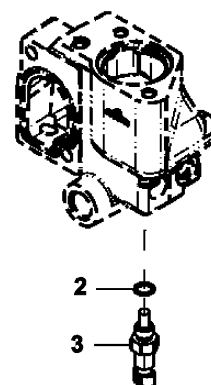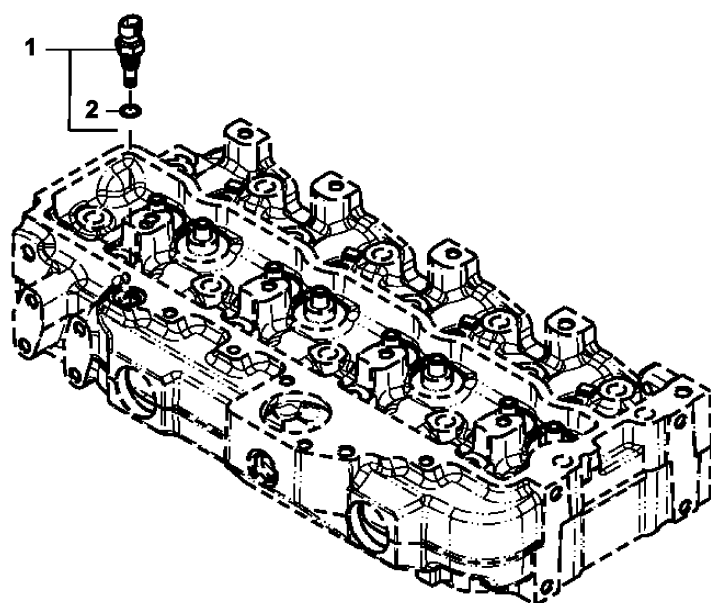


T3383_01
10/12

SENSORS

[illegible]

 STARTER MOTOR


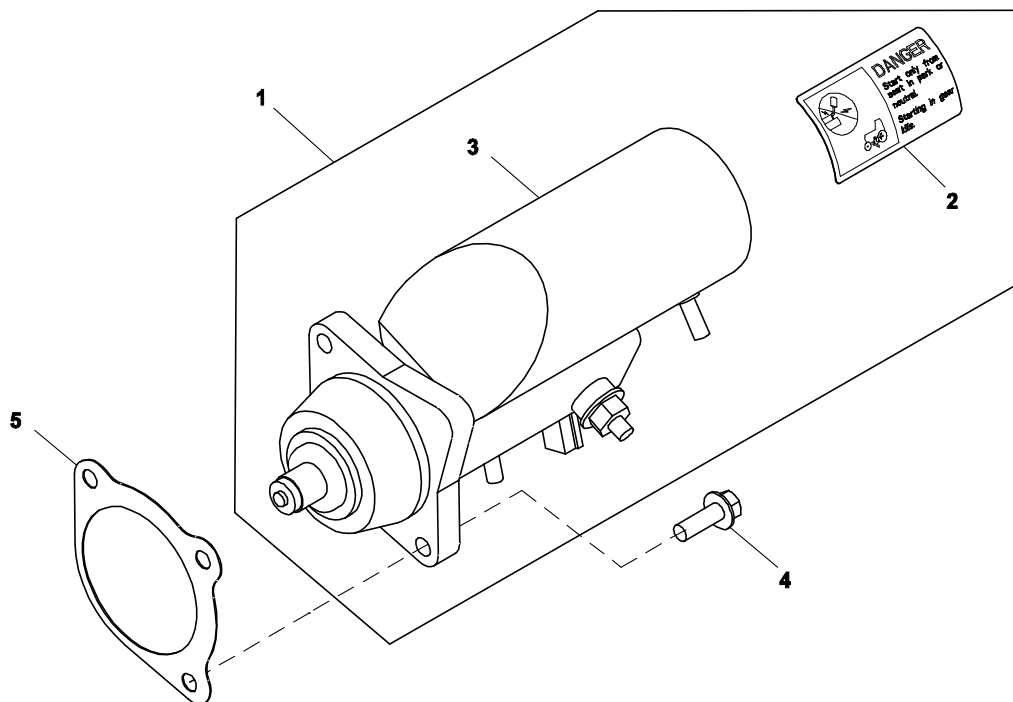


T3363_00
04/11

STARTER MOTOR

[illegible]

  ALTERNATOR

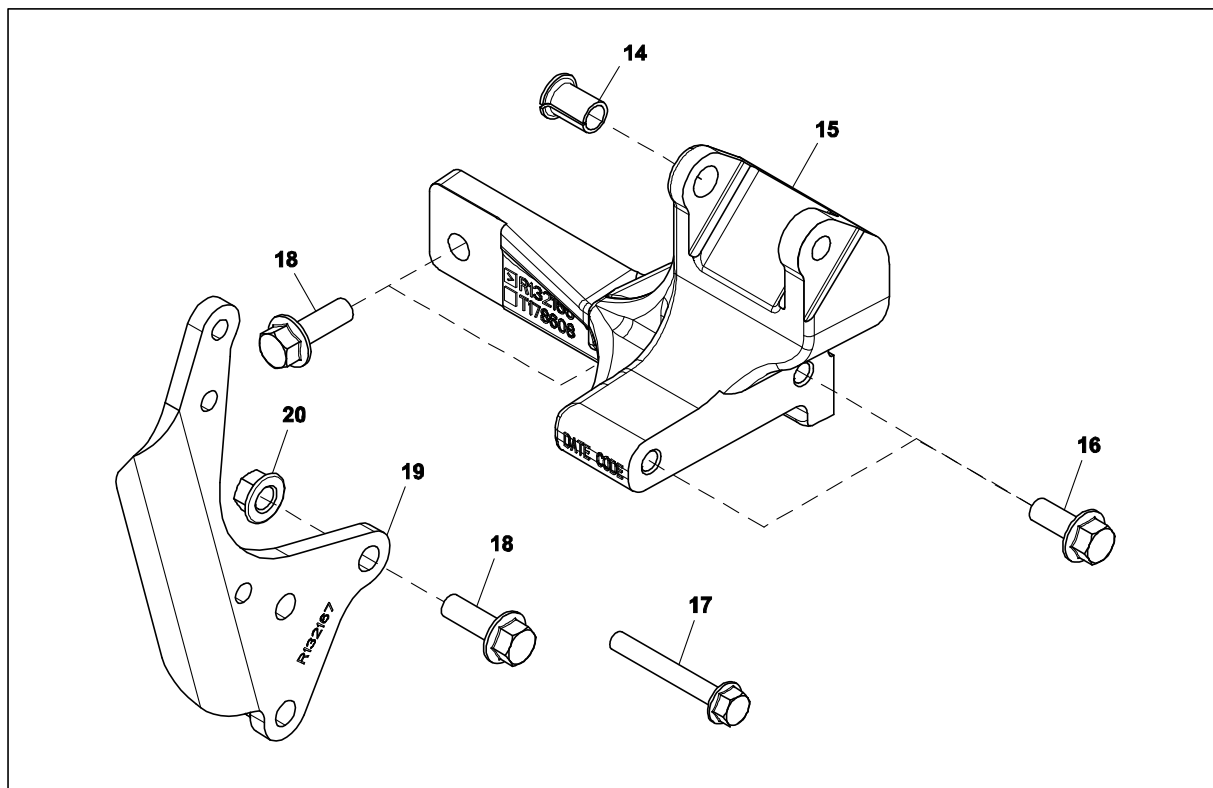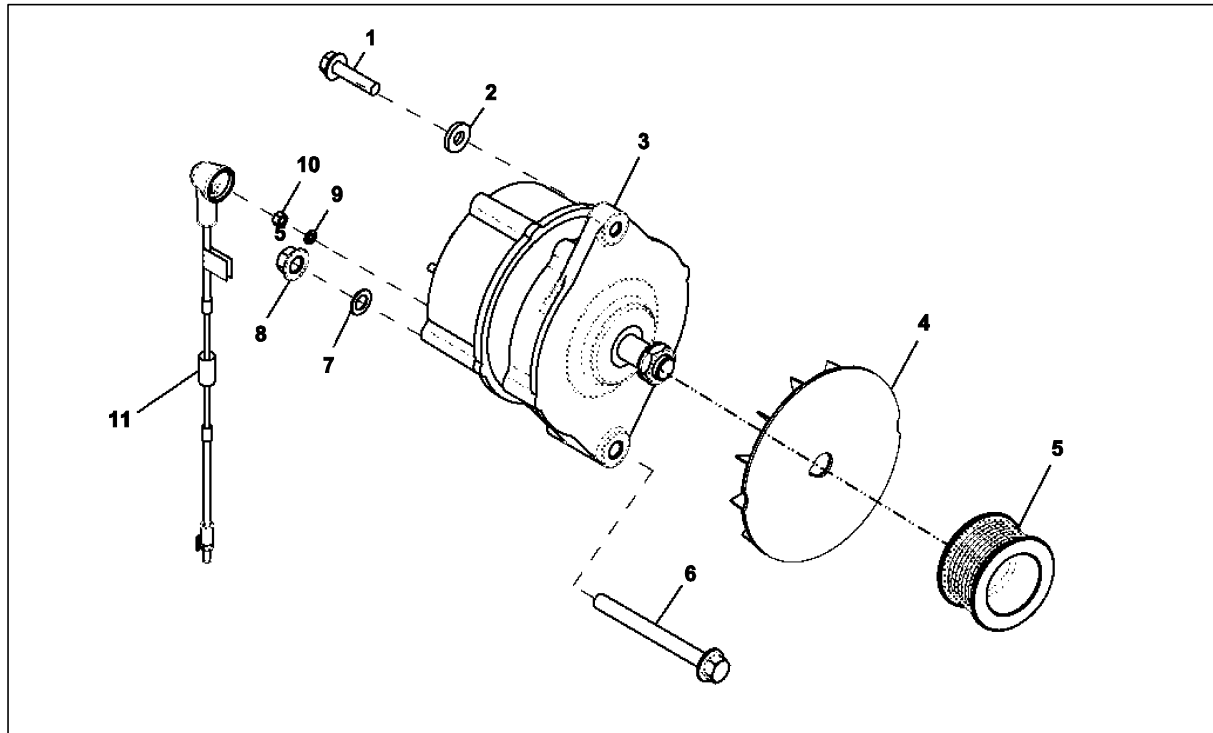


T3364_00
04/11

ALTERNATOR

[illegible]

 
OPTION - SOCKET

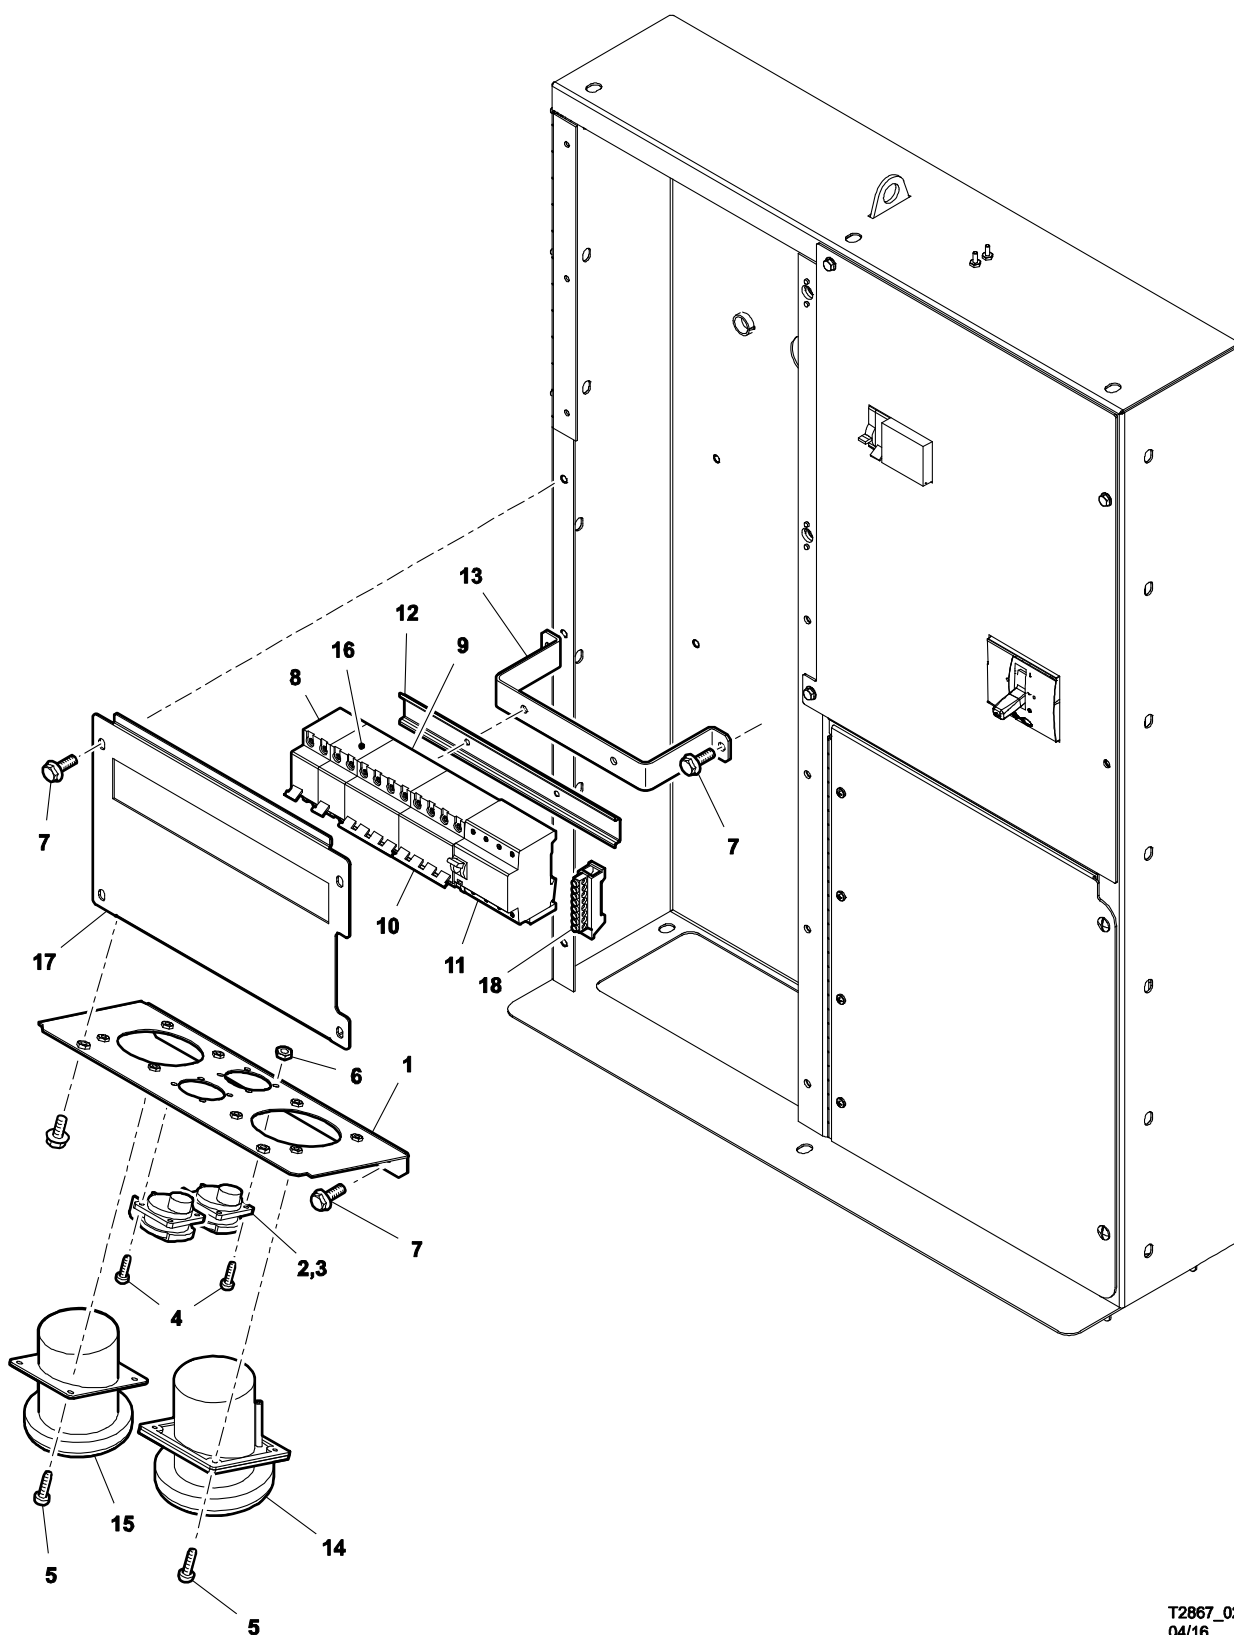

T2867_02
04/16

[illegible]

 OPTION - SOCKET (wiring diagram - 110 V)

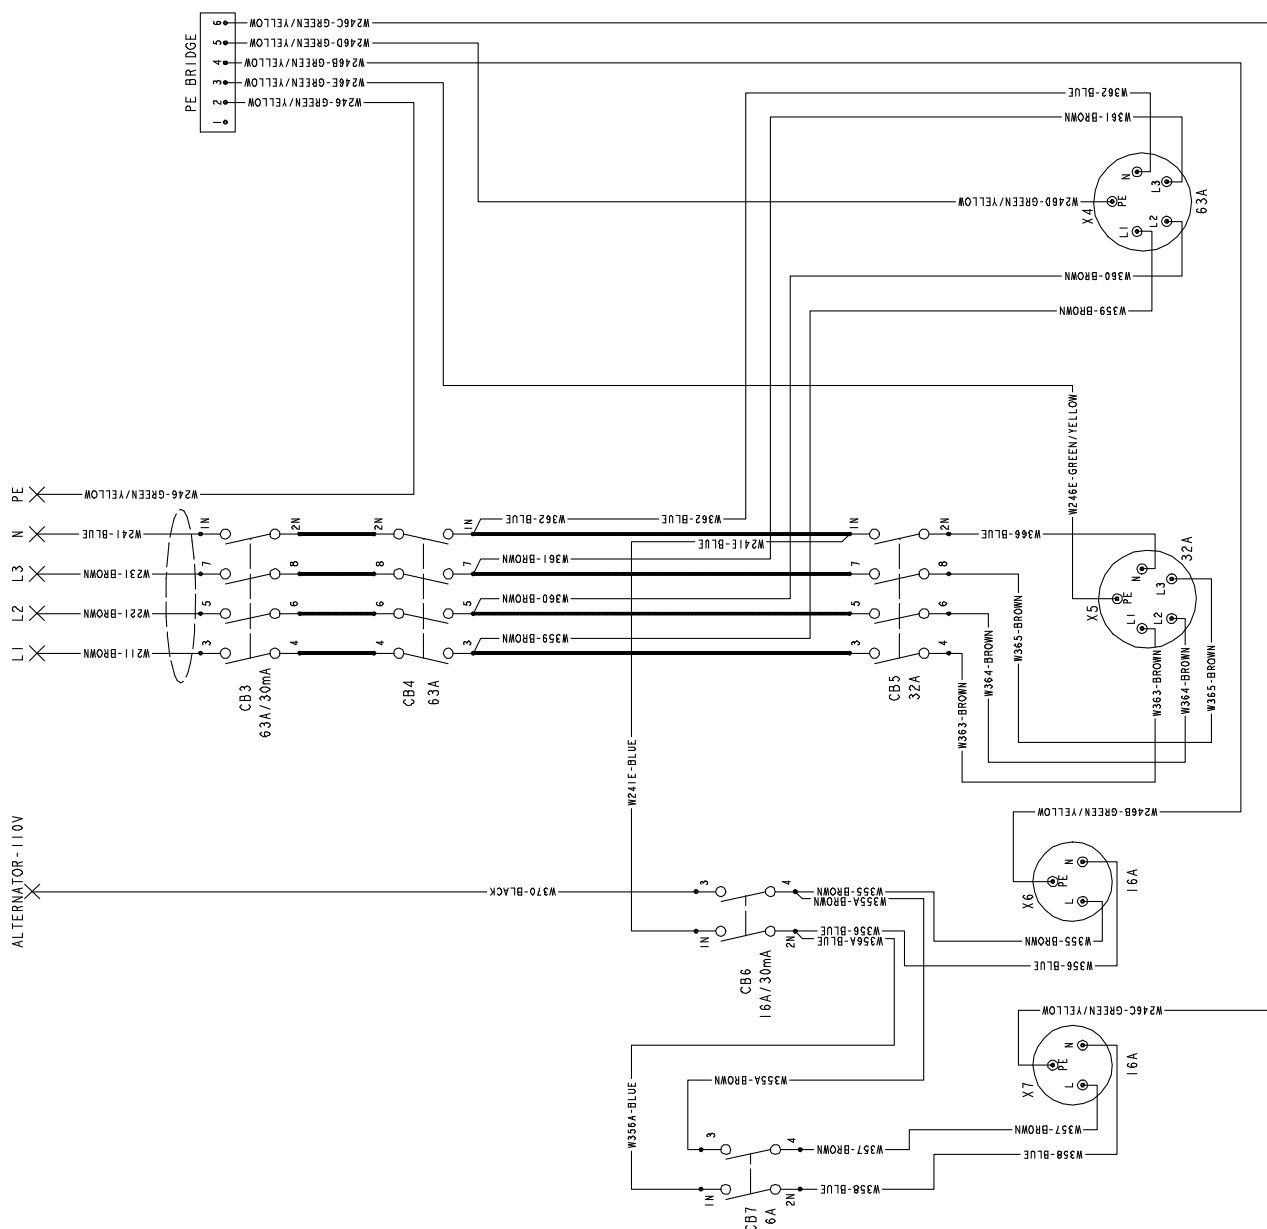


46596939_B_P7

T2999_00
04/16

OPTION - SOCKET
(wiring diagram - 110 V)

[illegible]

 OPTION - SOCKET (wiring diagram - 230 V)

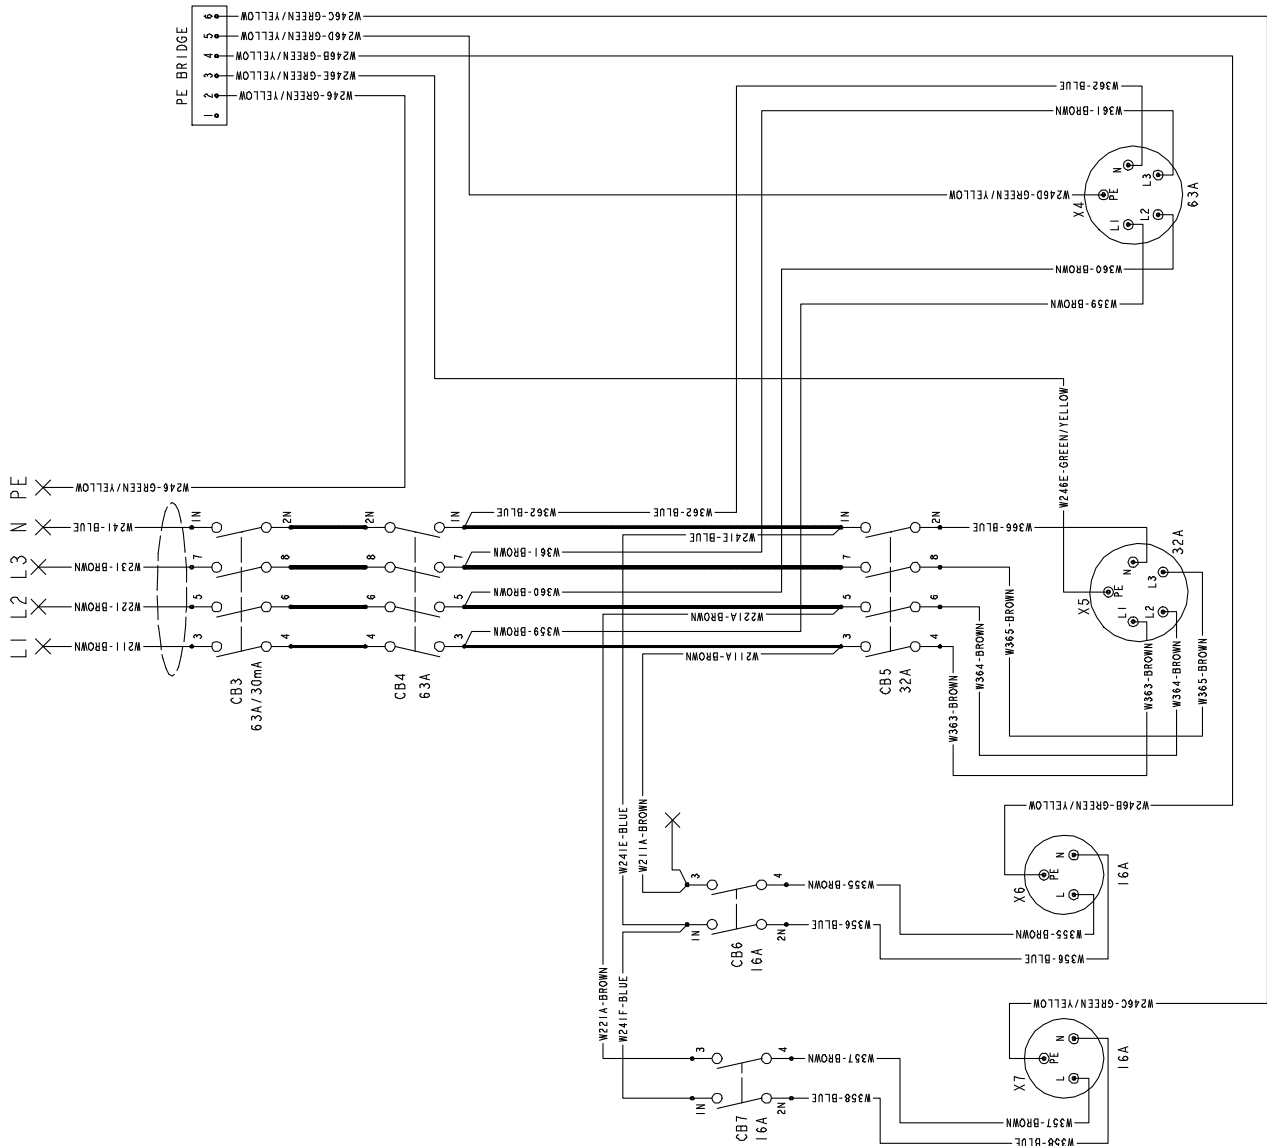


46596939_B_P6

T2998_00
04/16

OPTION - SOCKET
(wiring diagram - 230 V)

[illegible]

 OPTION - NO SOCKETS

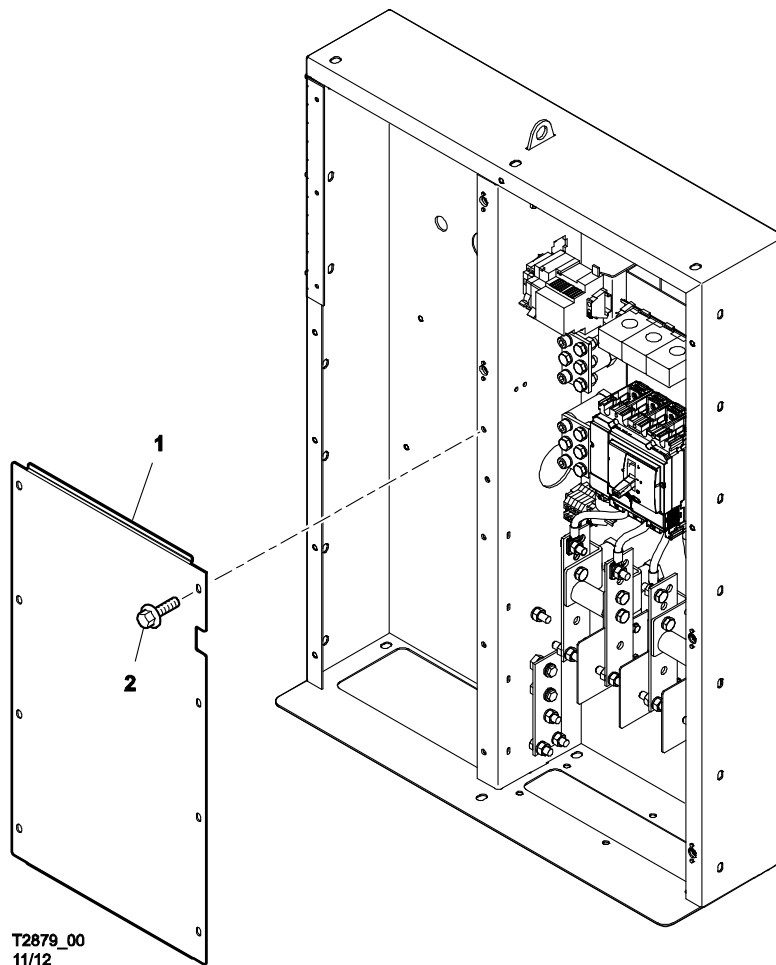


T2879_00
11/12

OPTION - NO SOCKETS	
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
10	10
11	11
12	12
13	13
14	14
15	15
16	16
17	17
18	18
19	19
20	20
21	21
22	22
23	23
24	24
25	25
26	26
27	27
28	28
29	29
30	30
31	31
32	32
33	33
34	34
35	35
36	36
37	37
38	38
39	39
40	40
41	41
42	42
43	43
44	44
45	45
46	46
47	47
48	48
49	49
50	50
51	51
52	52
53	53
54	54
55	55
56	56
57	57
58	58
59	59
60	60
61	61
62	62
63	63
64	64
65	65
66	66
67	67
68	68
69	69
70	70
71	71
72	72
73	73
74	74
75	75
76	76
77	77
78	78
79	79
80	80
81	81
82	82
83	83
84	84
85	85
86	86
87	87
88	88
89	89
90	90
91	91
92	92
93	93
94	94
95	95
96	96
97	97
98	98
99	99
100	100

[illegible]

 **OPTION - DUAL FREQUENCY
(50/60 Hz)**


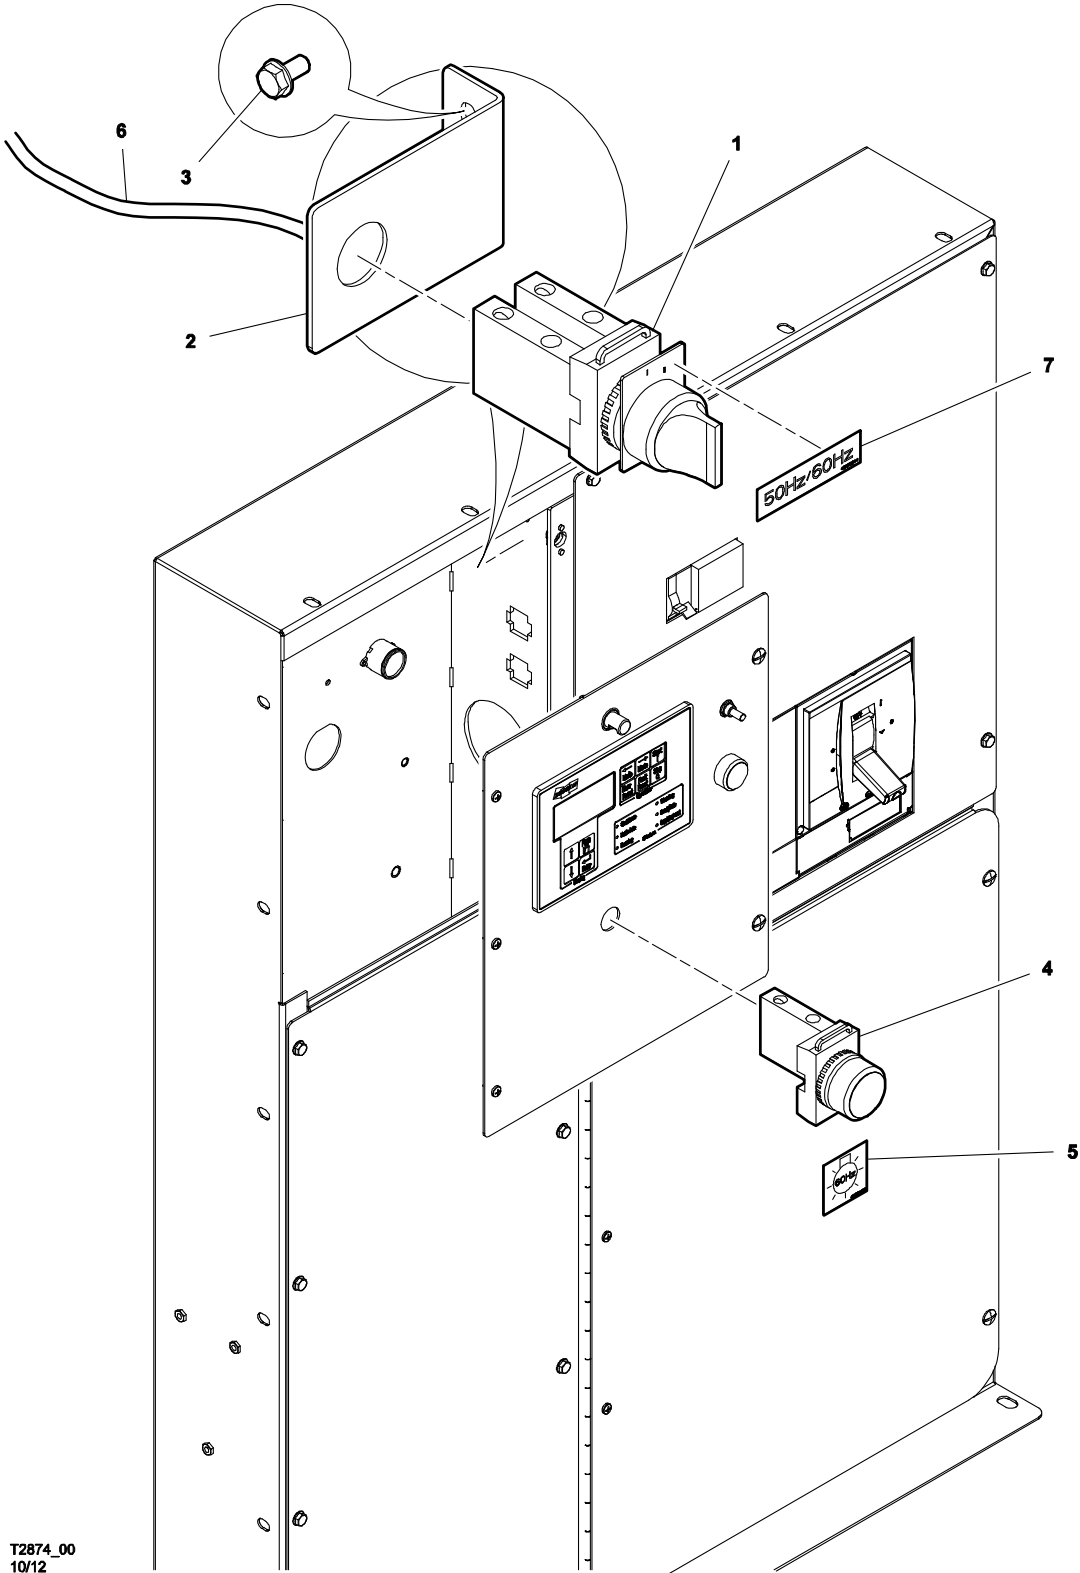


T2874_00
10/12

**OPTION - DUAL FREQUENCY
(50/60 Hz)**

[illegible]

  
OPTION - MULTIPLE GROUNDING SYSTEM

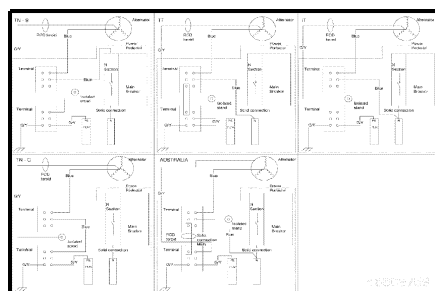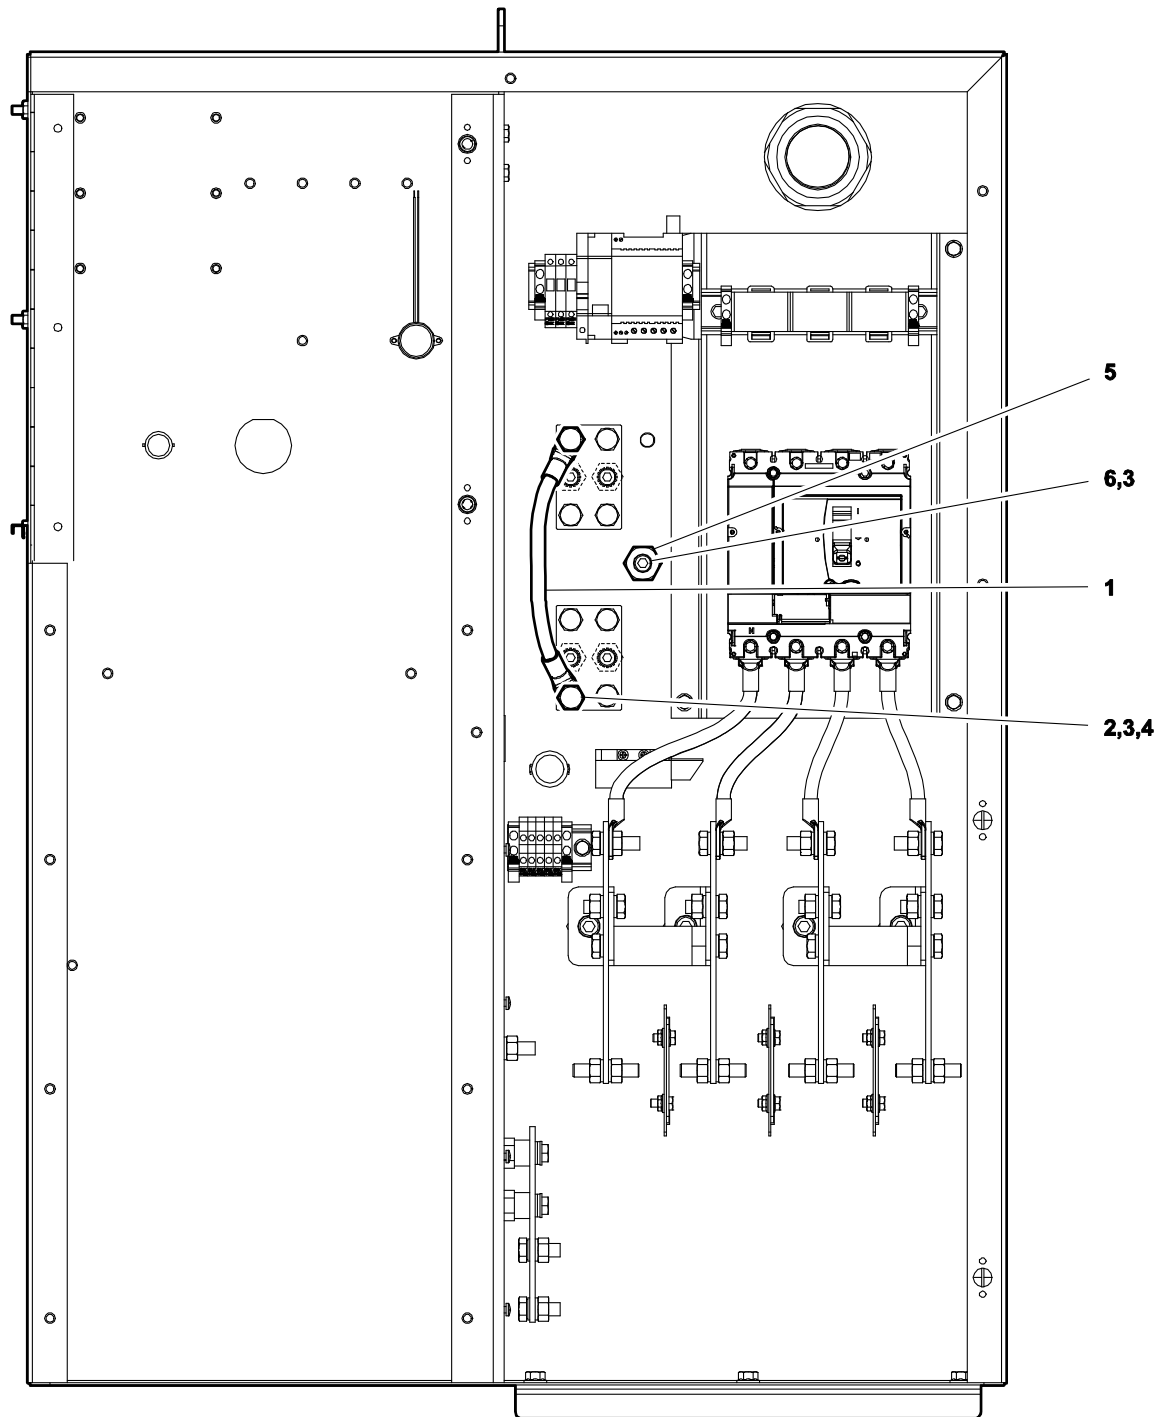

T2849_00
10/12

[illegible]

 OPTION - EARTHING ROD

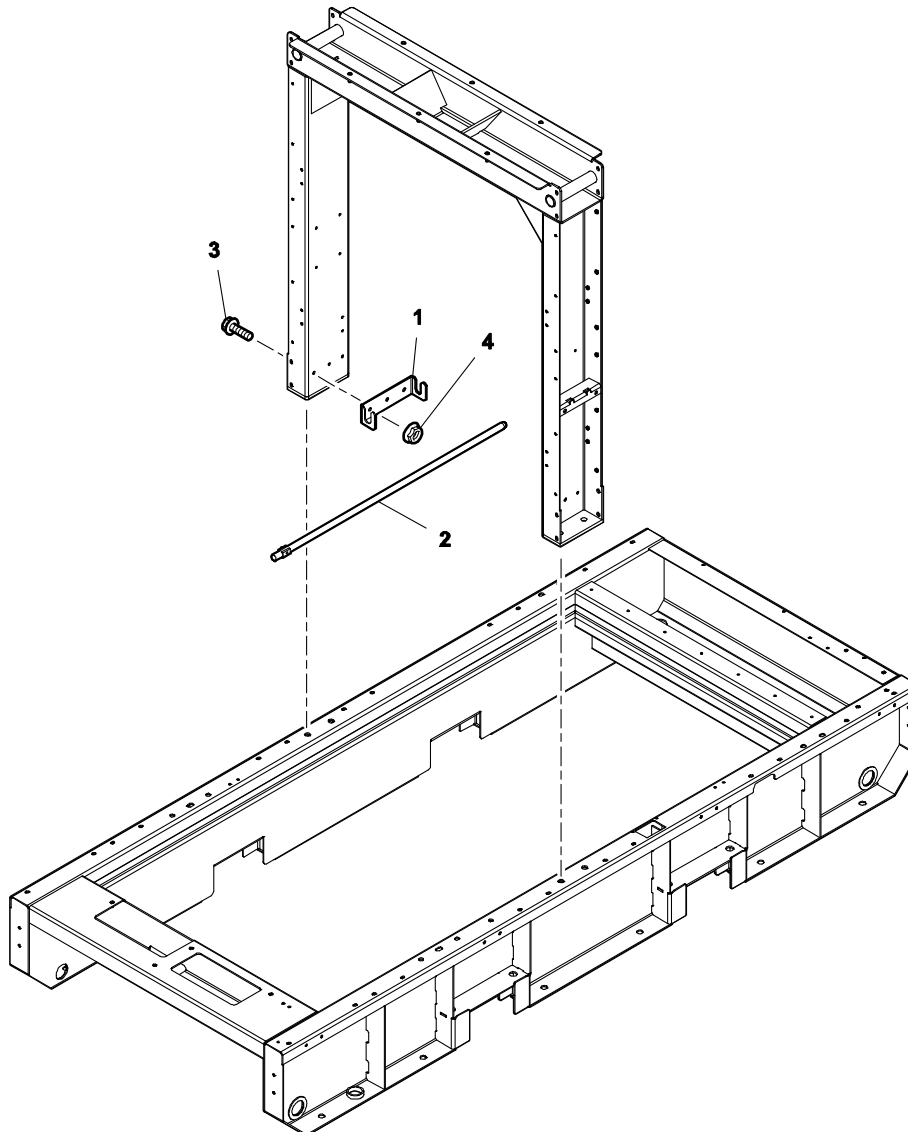


T2872_00
10/12

OPTION - EARTHING ROD

[illegible]

 OPTION - SUPER START PACKAGE (cold start)


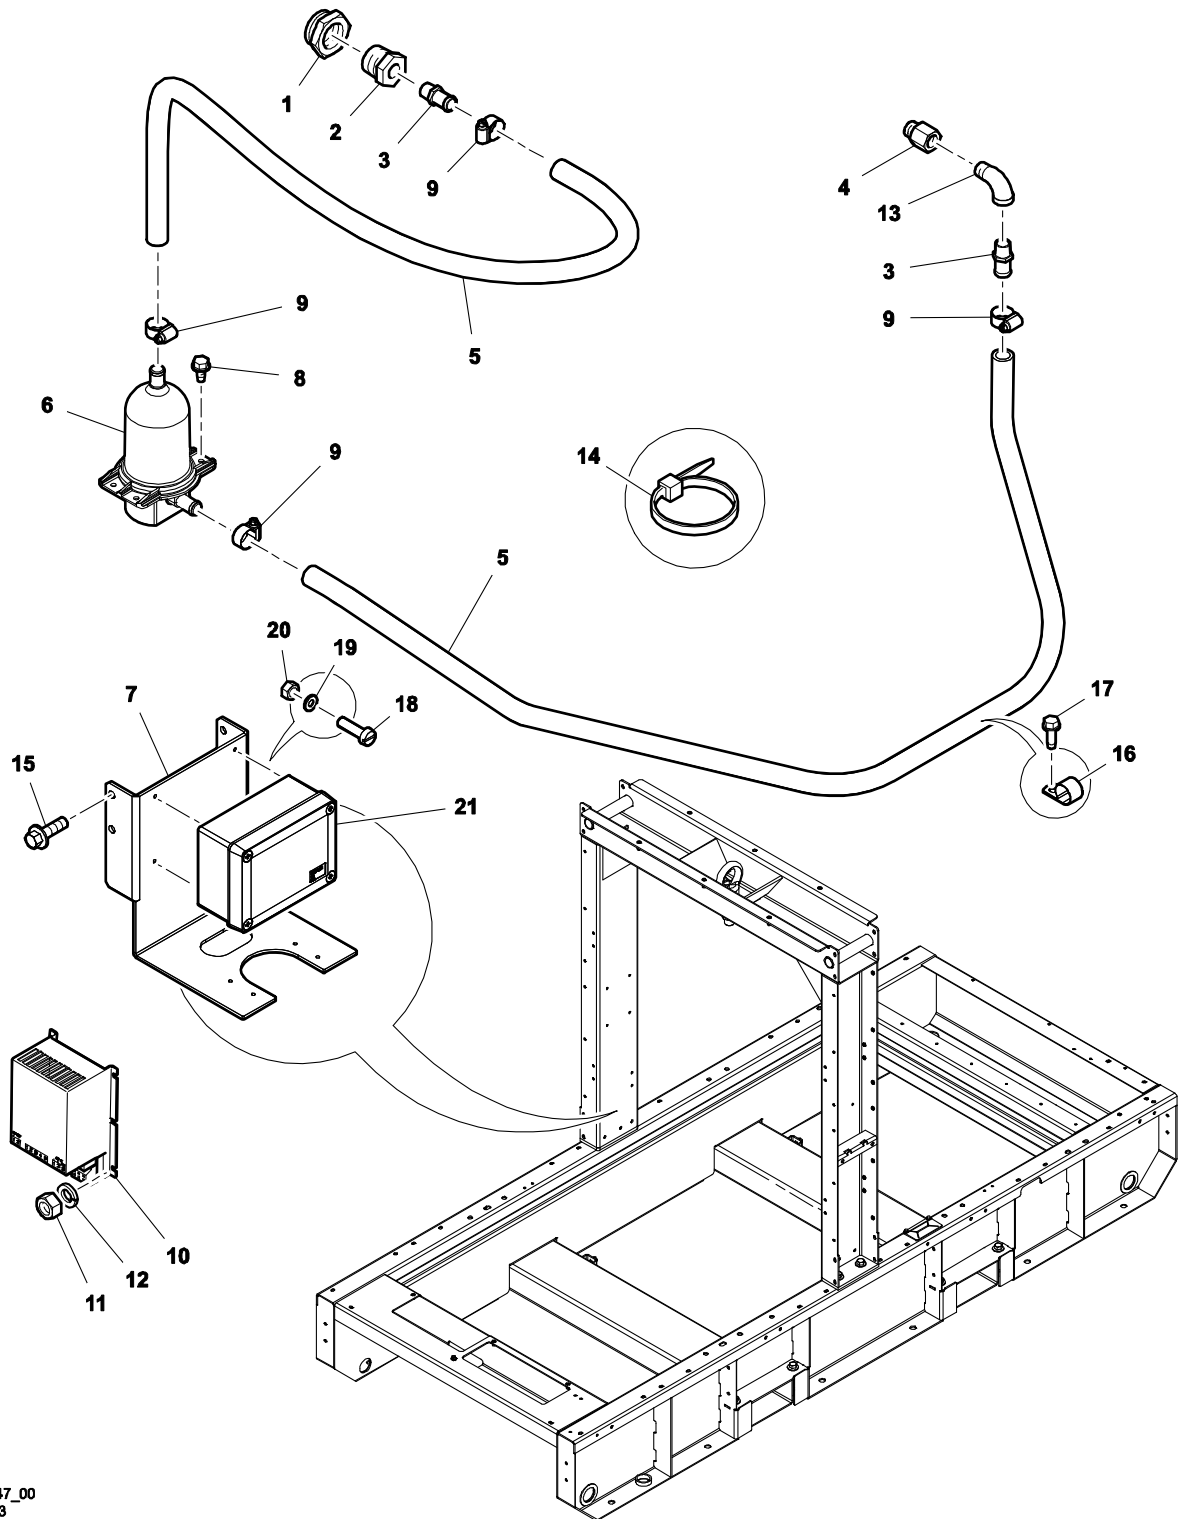


T2847_00
01/13

OPTION - SUPER START PACKAGE
(cold start)

[illegible]

  OPTION - SUPER START PACKAGE
(connection box)

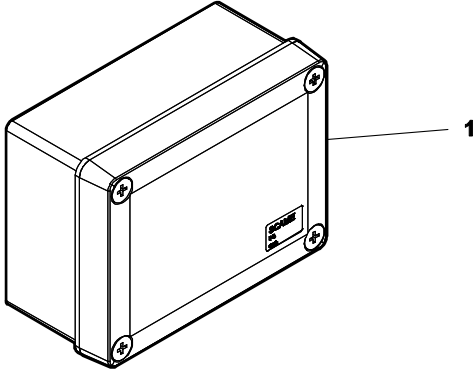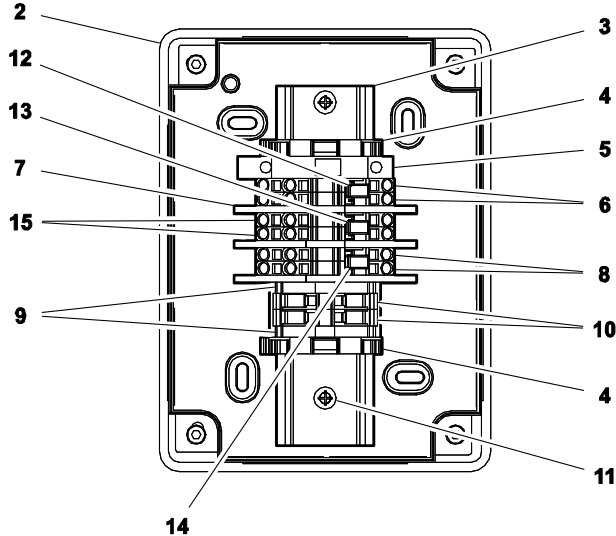


T2848_00
01/13

OPTION - SUPER START PACKAGE (connection box)

[illegible]

 OPTION - 24 HOUR FUEL TANK

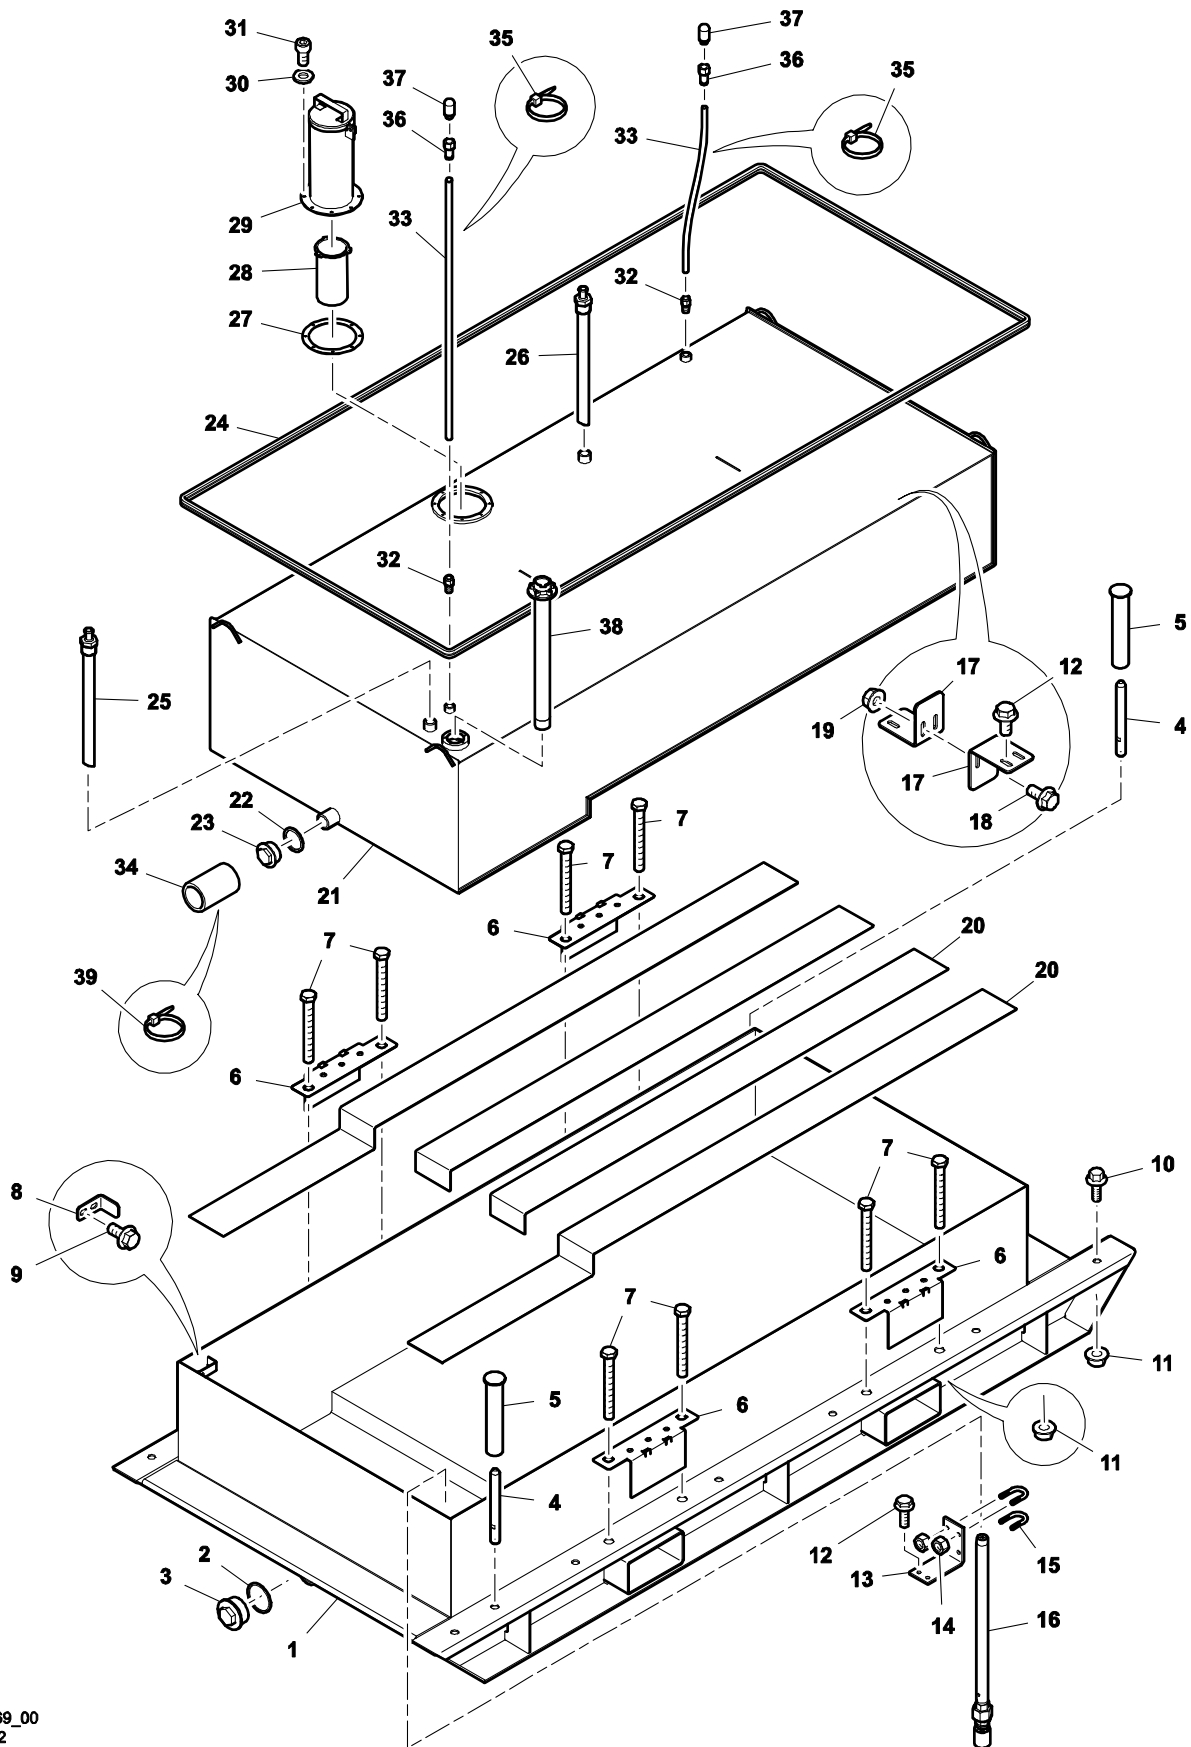


T2869_00
09/12

OPTION - 24 HOUR FUEL TANK

Item	Part Number	Description	Remarks	Serial Number	Qty
1	46609979	FRAME			1
2	46562520	RING, SEALING			1
3	46562519	PLUG			1
4	46610423	PIN			2
5	46611399	TUBE			2
6	46610439	COVER			4
7	46556917	SCREW			8
8	46613419	HOLDER			4
9	96704408	SCREW			8
10	36793040	SCREW			12
11	36879211	NUT, FLANGE			20
12	22959936	SCREW			6
13	22580336	BRACKET			1
14	95923298	NUT			4
15	22616353	U-BOLT			2
16	22841696	SENSOR, CONTAINMENT LEVEL			1
17	46565499	HOLDER			4
18	36889608	SCREW	(M8-1.25 x 25)		4
19	36881886	NUT			4
20	22680771	PAD, FUEL TANK	(1,53 m long)		2
20	22680771	PAD, FUEL TANK	(2,05 m long)		2
21	46609960	TANK, LARGE FUEL			1
22	46553761	RING			1
23	46553760	PLUG			1
24	92899699	SEAL	(6,83 m long)		1
25	46609961	TUBE ASSEMBLY			1
26	46609962	TUBE ASSEMBLY			1
27	46553706	GASKET			1
28	36845022	STRAINER, FUEL			1
29	46553705	NECK, FUEL TANK			1
30	92341981	WASHER			8

 OPTION - 24 HOUR FUEL TANK (CONT'D)

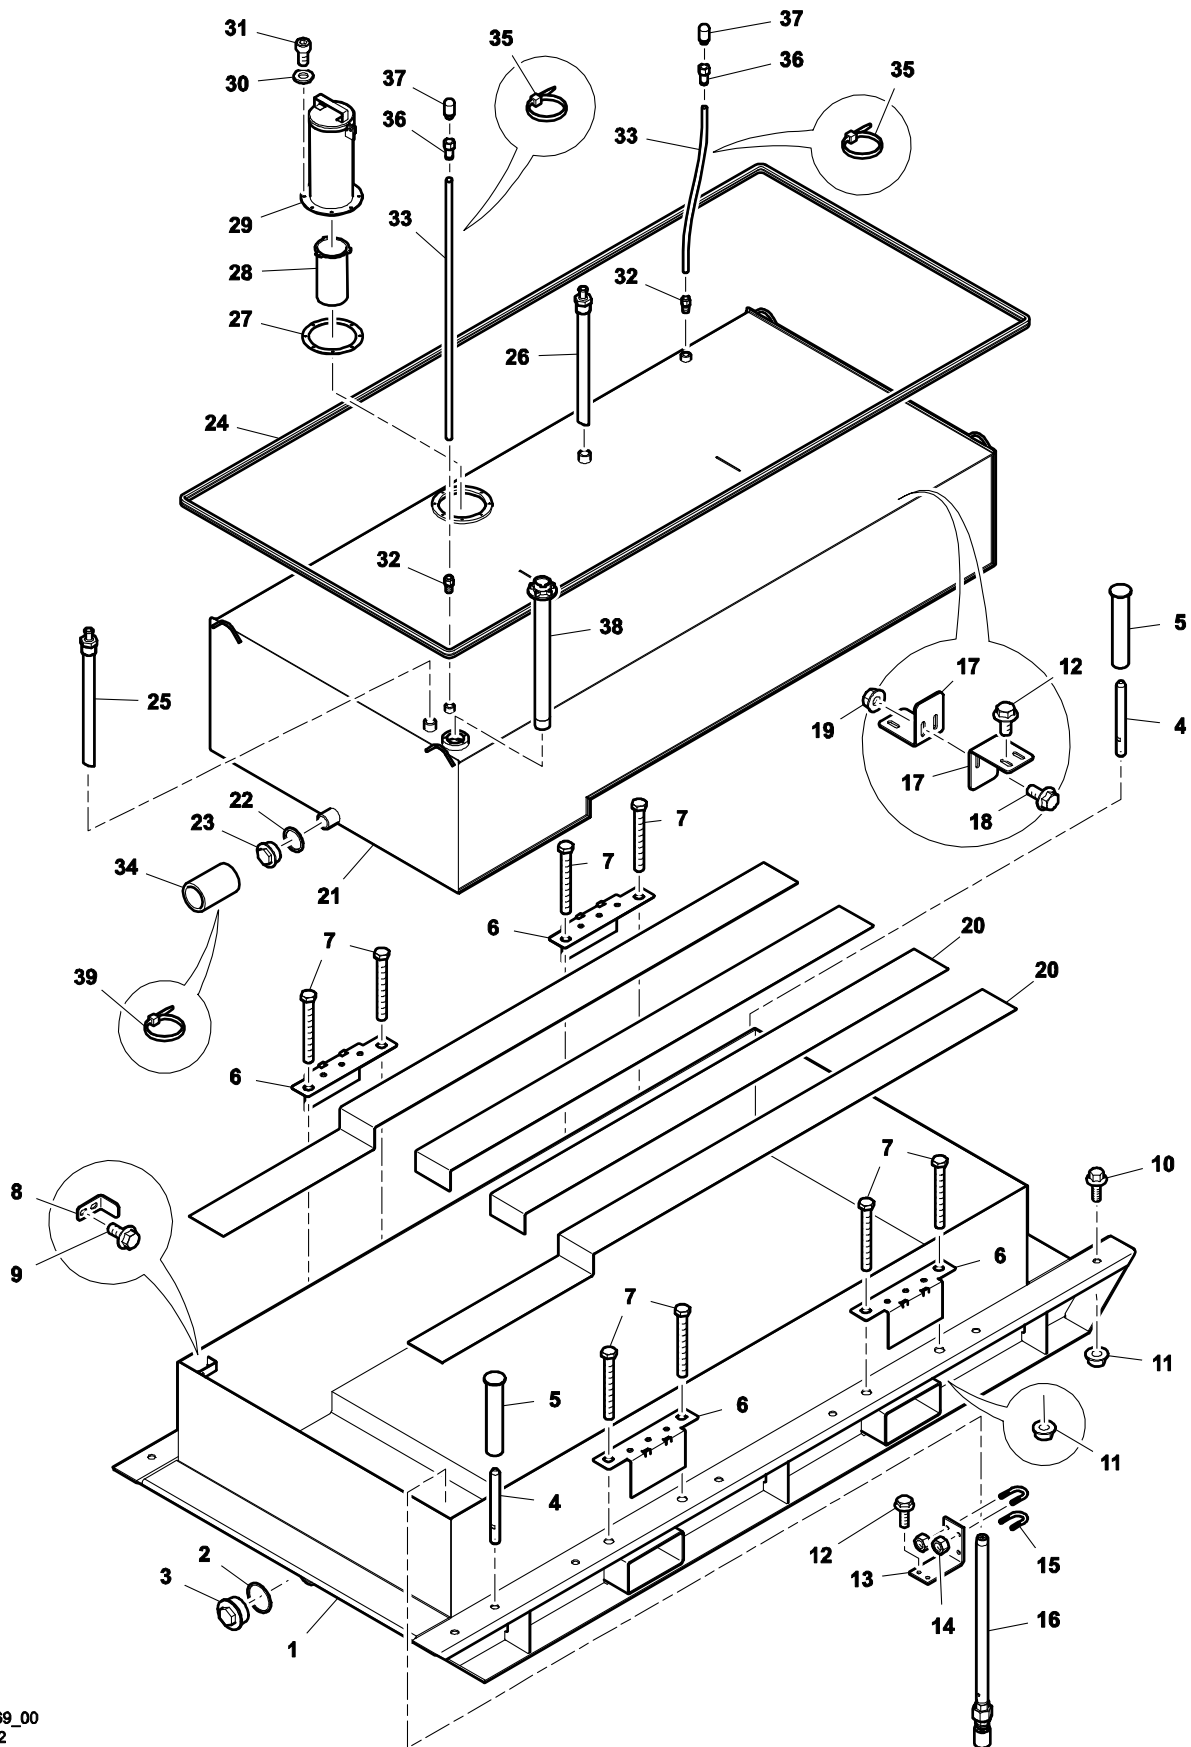


T2869_00
09/12

OPTION - 24 HOUR FUEL TANK (CONT'D)	
--	--

[illegible]

 OPTION - NO CONTAINMENT DRAIN PLUG

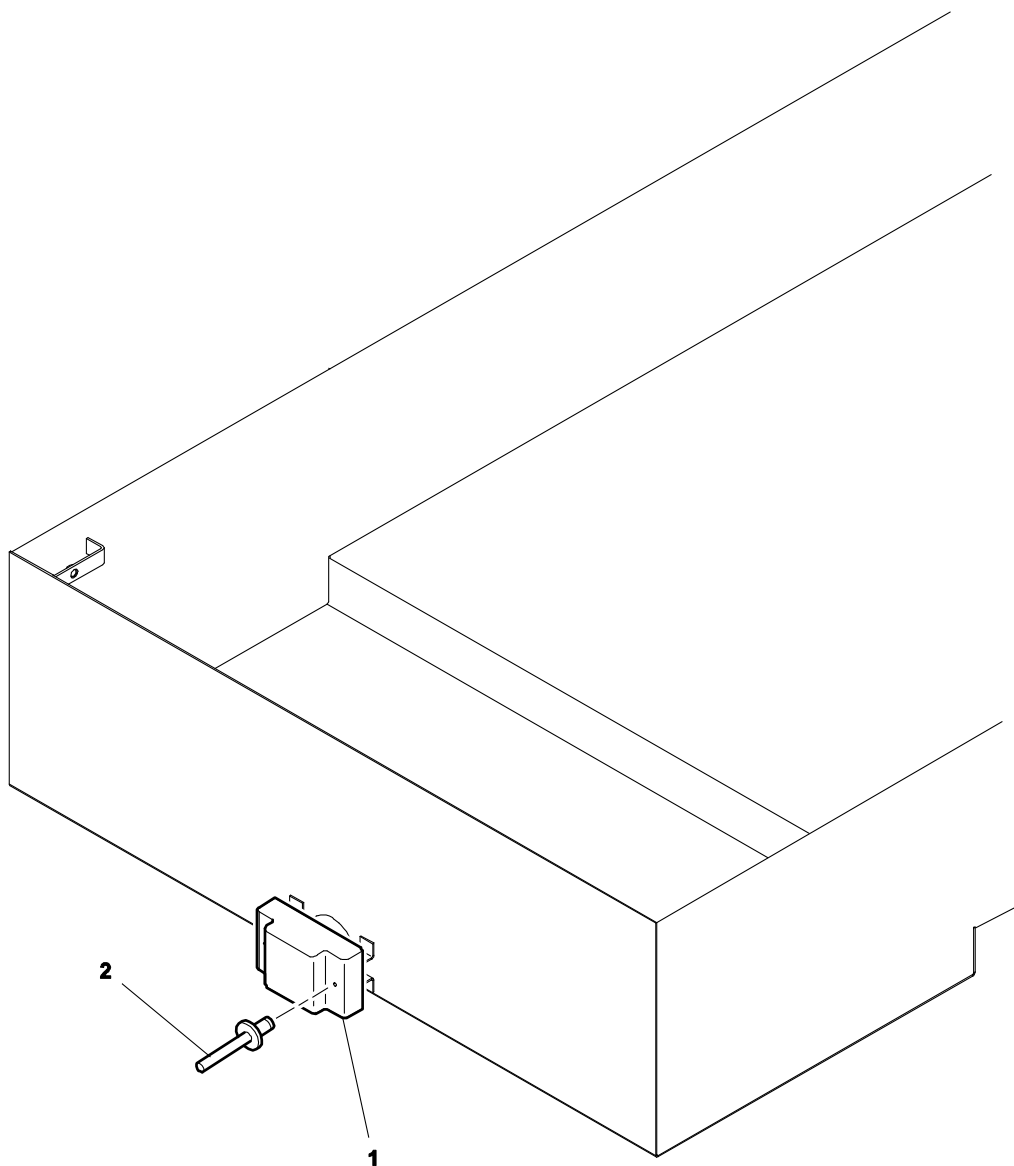


T2643_00
03/12

OPTION - NO CONTAINMENT DRAIN PLUG

[illegible]

 
OPTION - 3 WAY FUEL VALVE

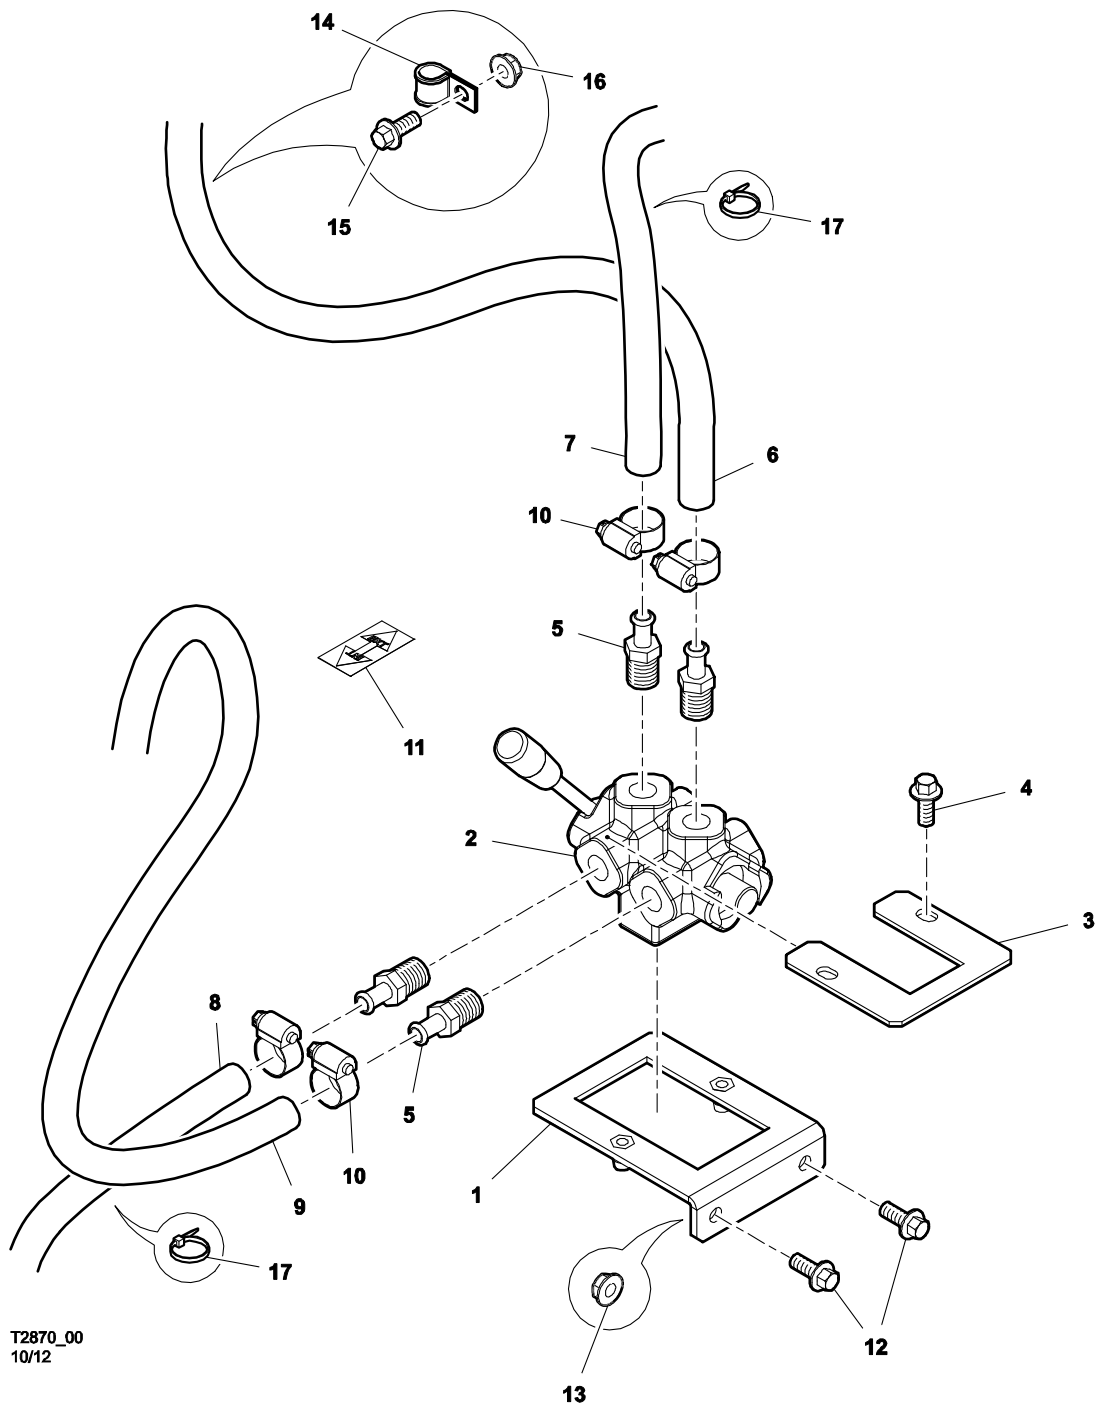

T2870_00
10/12

[illegible]

 OPTION - 3 WAY FUEL VALVE (with external module)

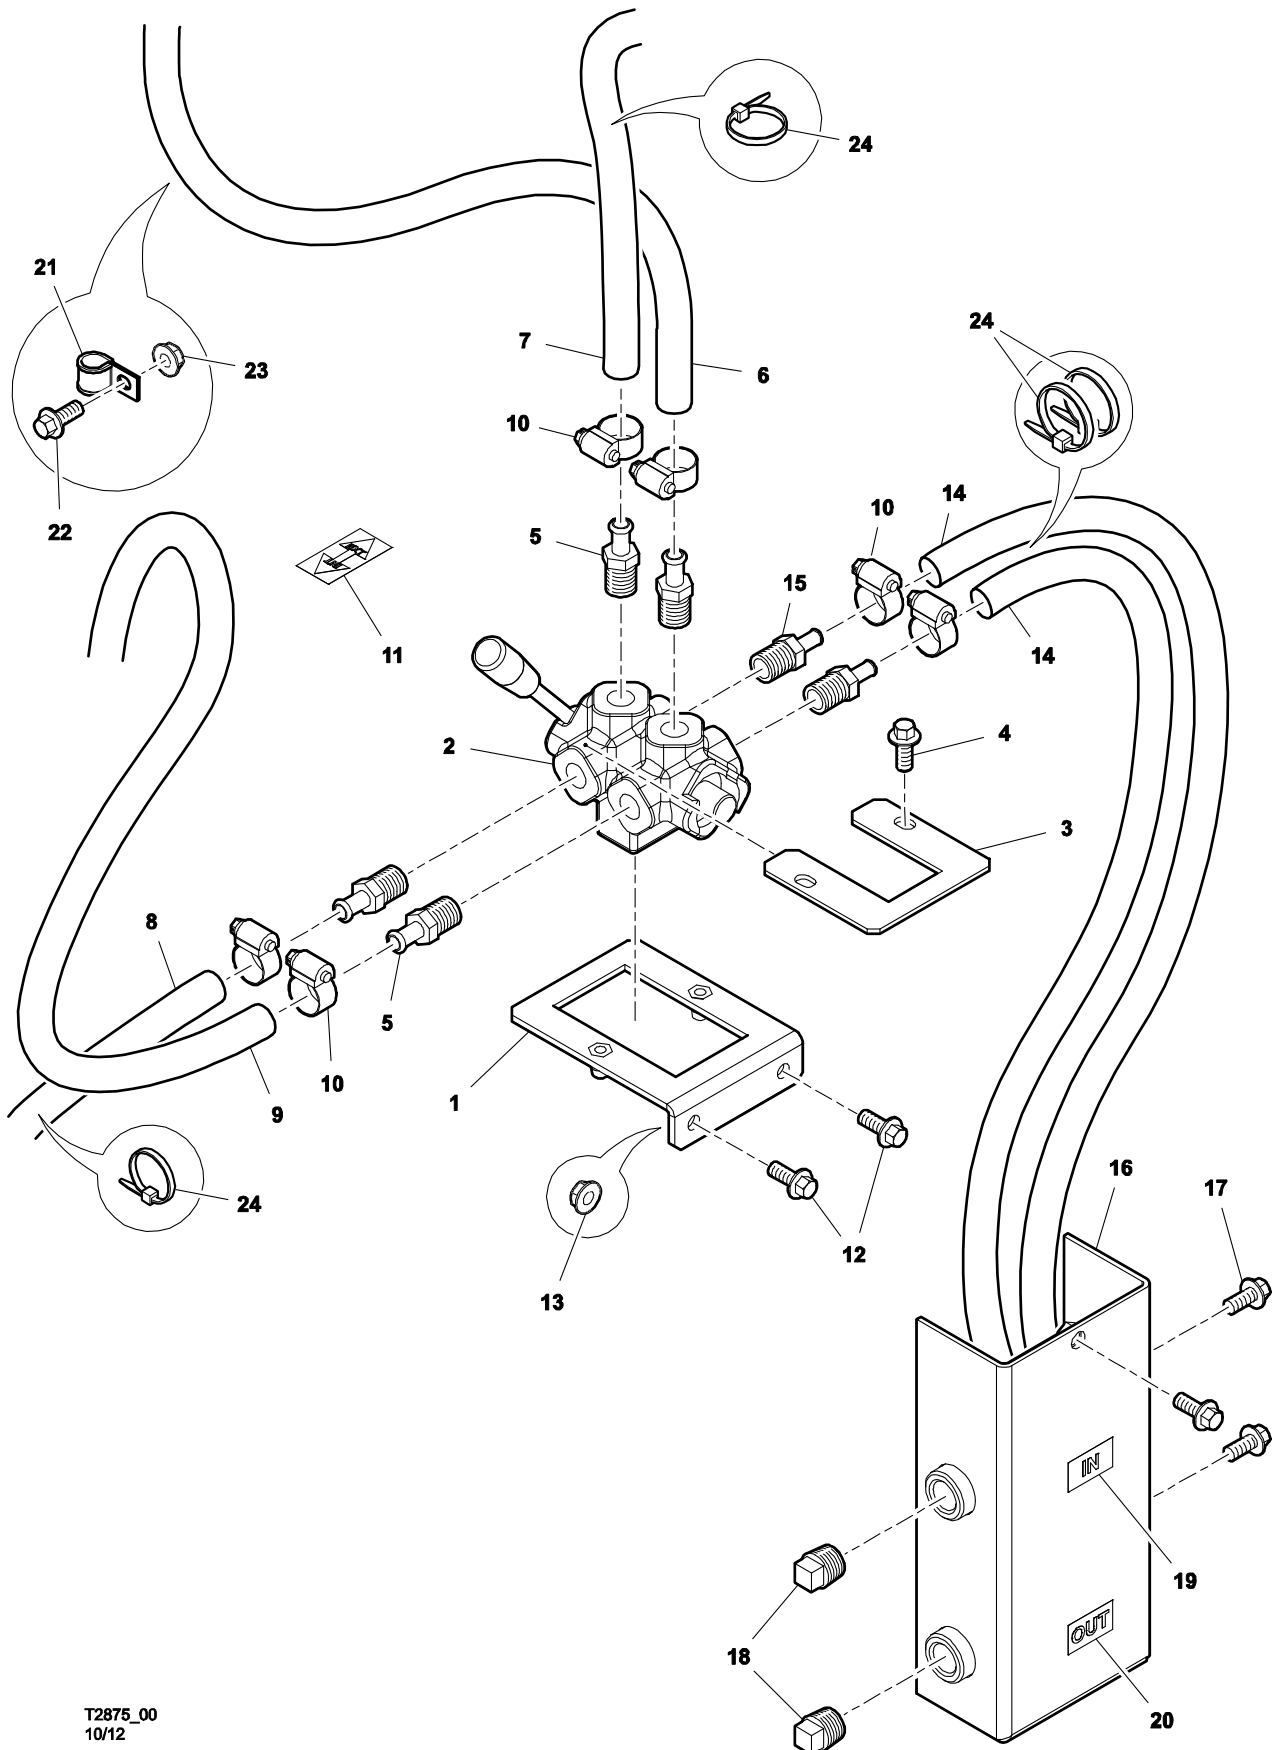


T2875_00
10/12

**OPTION - 3 WAY FUEL VALVE
(with external module)**

[illegible]

 OPTION - OIL HAND PUMP

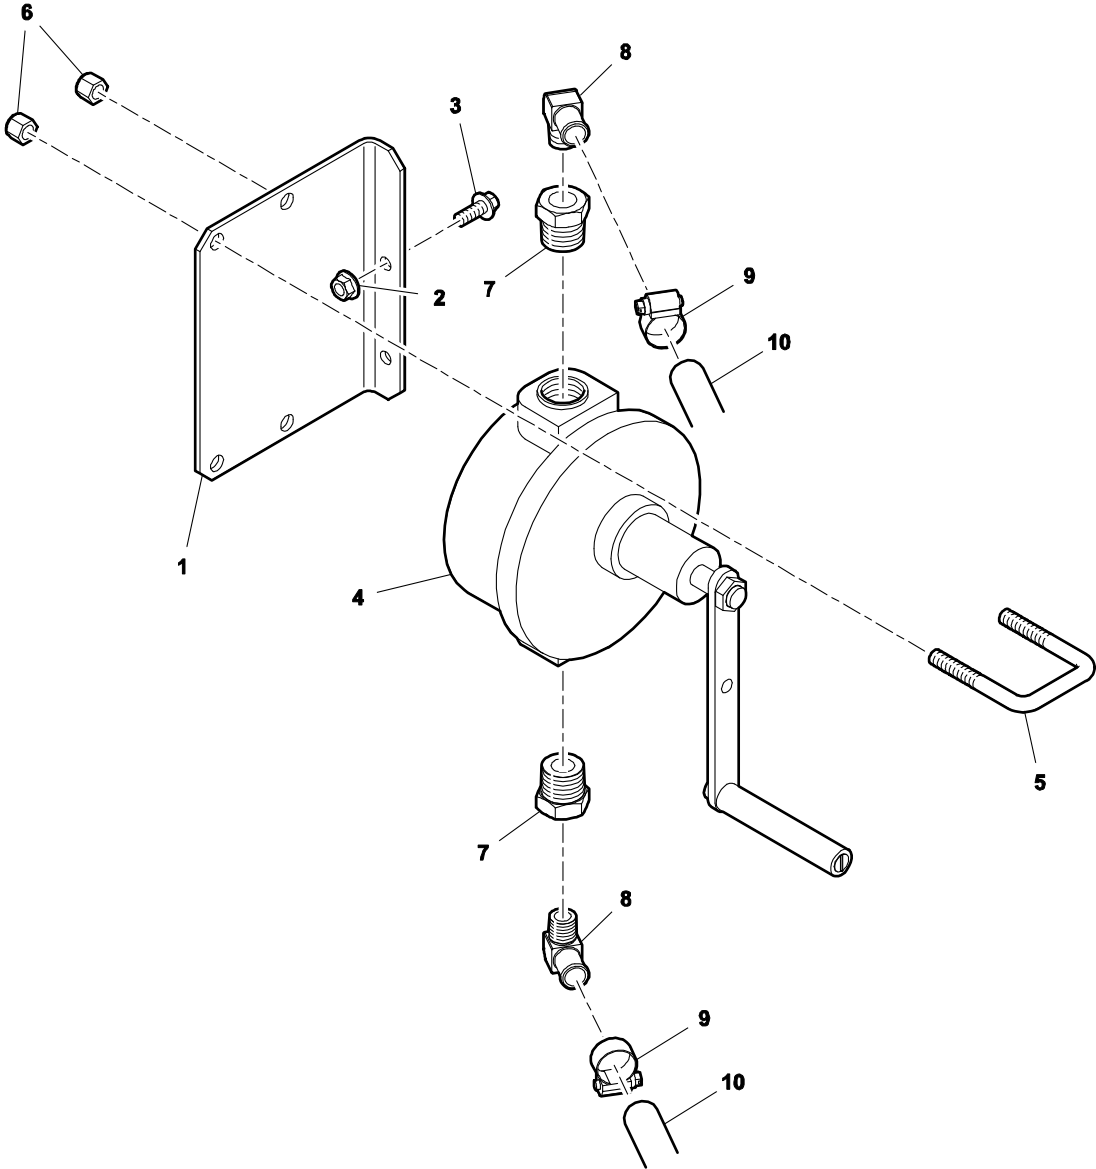


T2886_00
10/12

OPTION - OIL HAND PUMP	
---	--

[illegible]

 
OPTION - CONTAINER OIL SUMP PUMP

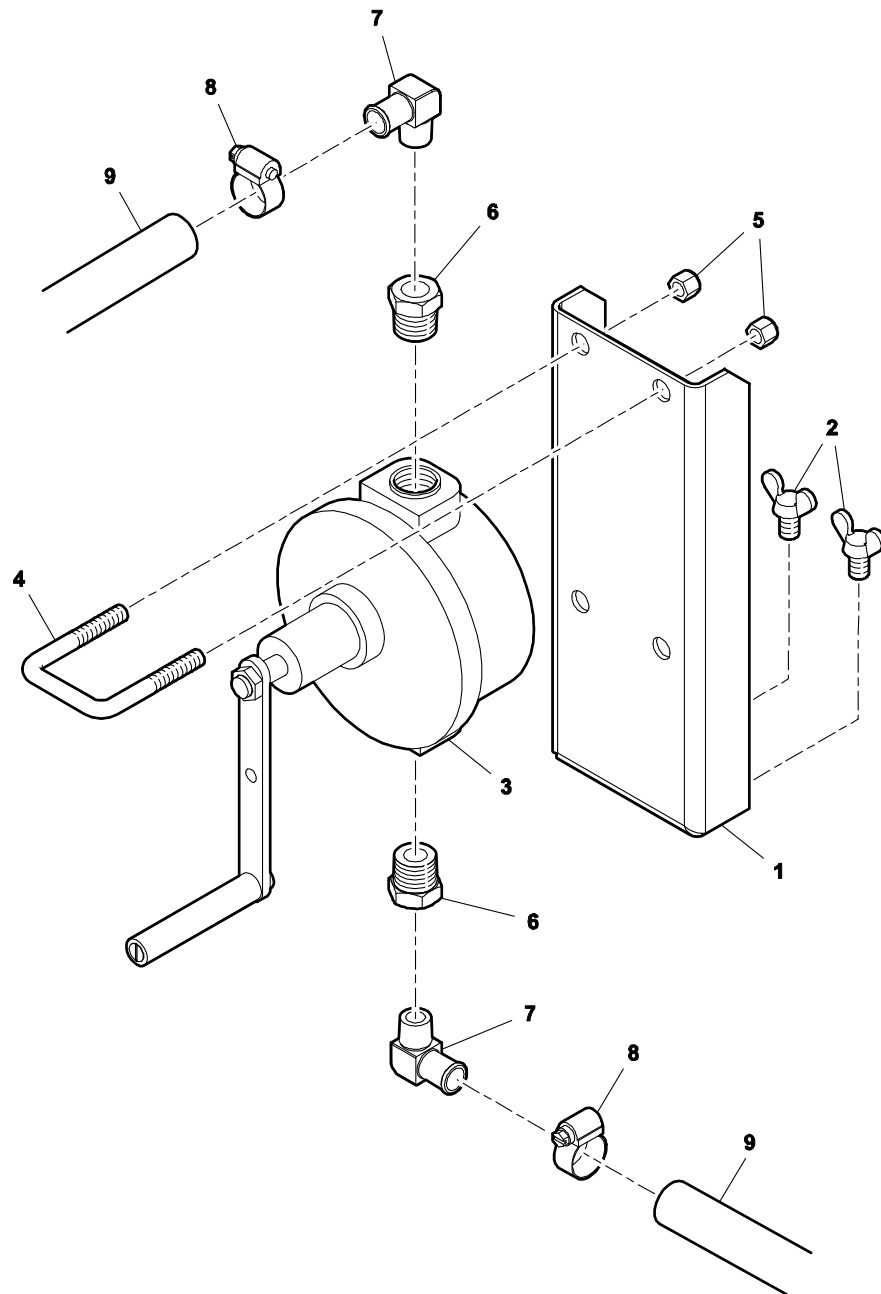

T2846_00
12/12

[illegible]

 OPTION - BUMPERS

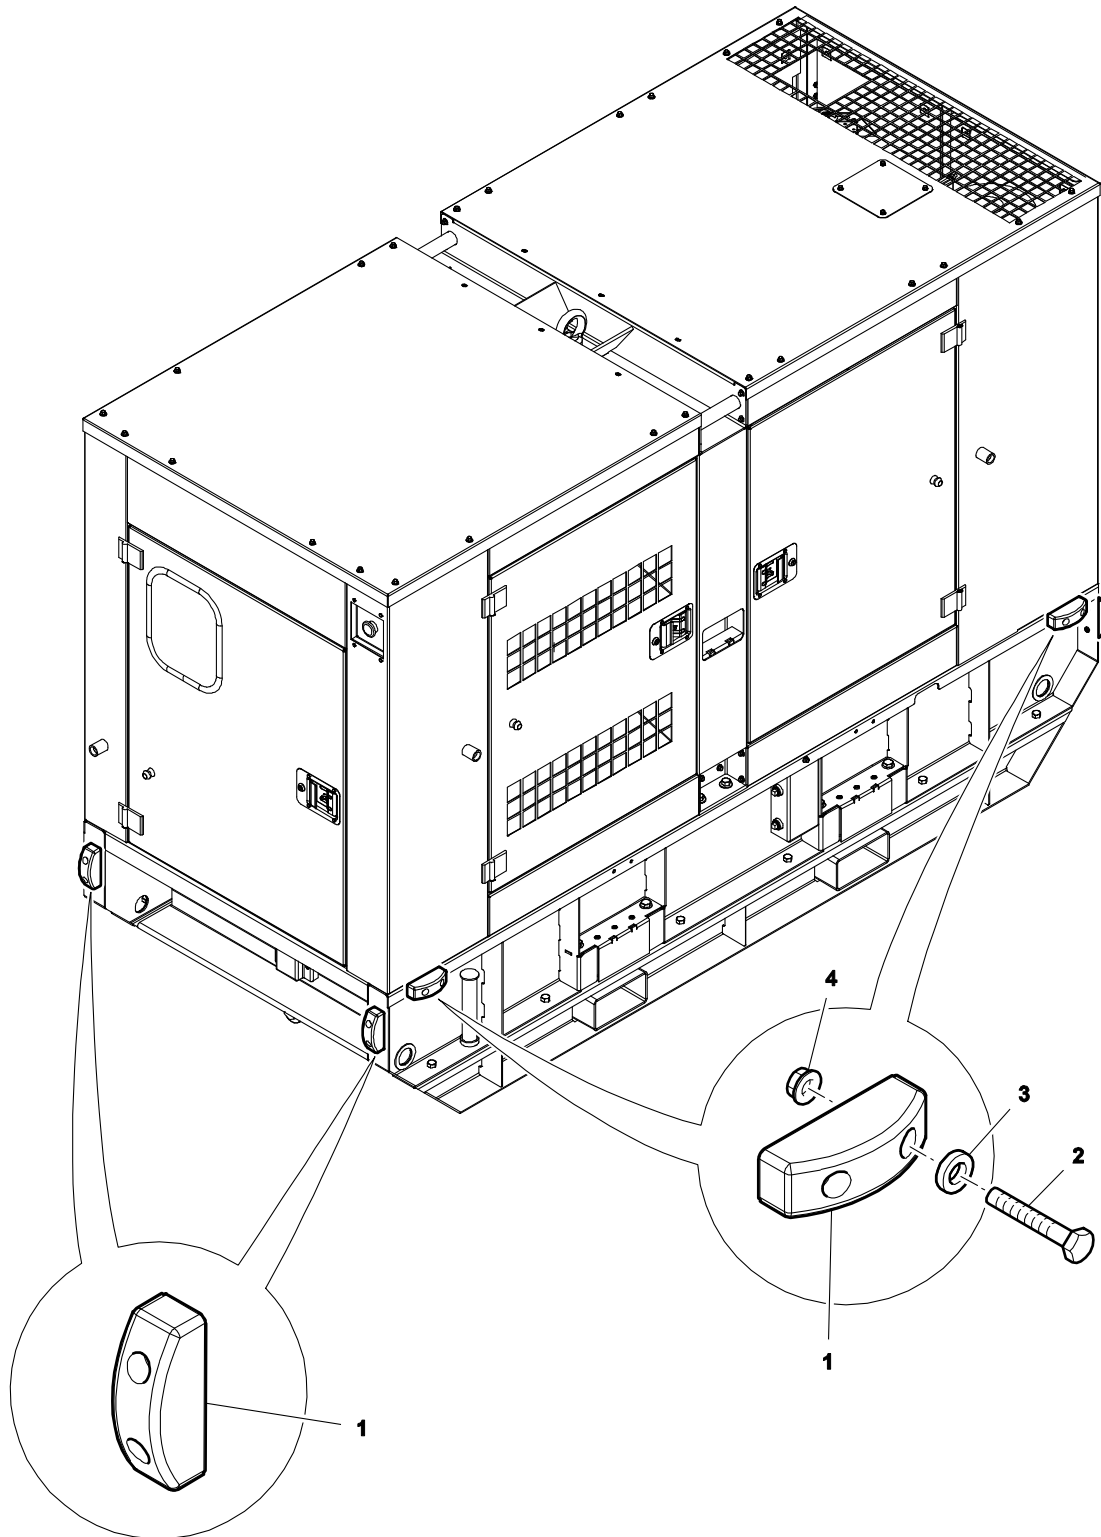


T2868_00
12/11

OPTION - BUMPERS	
------------------	--

[illegible]

 OPTION - EXHAUST INSULATION

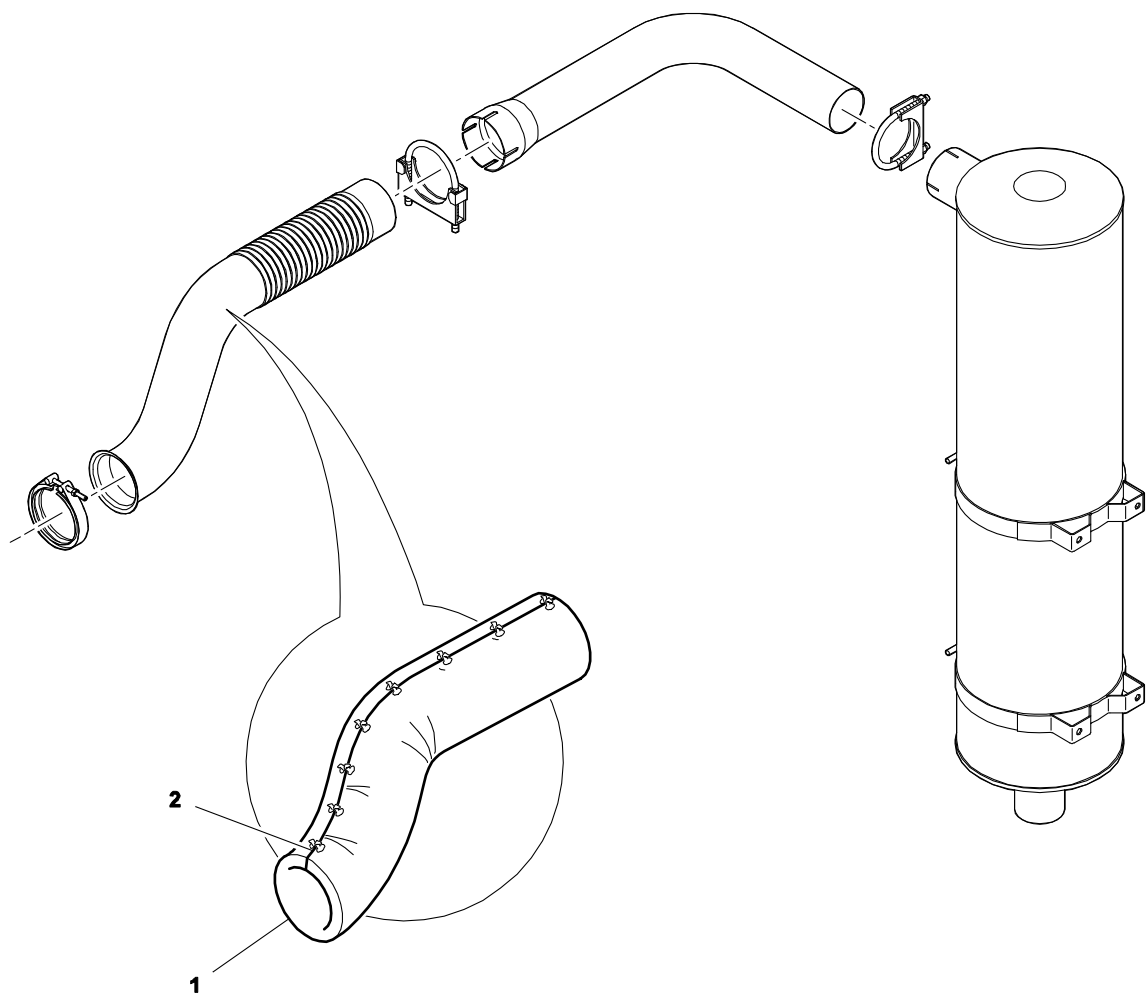

T2850_00
12/12

OPTION - EXHAUST INSULATION	
--	--

[illegible]

Intentionally left blank

NUMERICAL INDEX

Part Number	Denomination	WAS	Page	Subgroup
46623547	CHARGER, BATTERY		153	OPTION - SUPER START PACKAGE
18034033	ARM, ROCKER		75	ACTUATING VALVE
18965343	PULLEY		67	CRANKSHAFT PULLEY
22061964	BOTTLE, VENT		47	ENGINE ASSEMBLY
22064158	SEAL		5	ENCLOSURE
22067714	CLAMP		57 59	AIR INTAKE SYSTEM AIR INTAKE SYSTEM
22125165	SCREW		33	POWER PEDESTAL ELECTRICAL LAYOUT
22132153	STRAP		11 13 47	ALTERNATOR MOUNTING ALTERNATOR MOUNTING ENGINE ASSEMBLY
22144513	CLAMP		49	COOLING SYSTEM
22177265	CONNECTOR, FLEXIBLE		49	COOLING SYSTEM
22189302	CLAMP		49	COOLING SYSTEM
22189310	REDUCER		49	COOLING SYSTEM
22285464	RADIATOR		49	COOLING SYSTEM
22306229	SCREW		163 165	OPTION - 3 WAY FUEL VALVE OPTION - 3 WAY FUEL VALVE
22375141	VALVE		49	COOLING SYSTEM
22375877	LATCH		5	ENCLOSURE
22382261	ADAPTOR		153	OPTION - SUPER START PACKAGE
22382279	ADAPTOR		153	OPTION - SUPER START PACKAGE
22465207	RECEPTACLE		25 31	POWER PEDESTAL ASSEMBLY POWER PEDESTAL ASSEMBLY
22503825	BULB, LAMP		21 23	CONTROL PANEL CONTROL PANEL
22511901	STUD		21 23 25 31	CONTROL PANEL CONTROL PANEL POWER PEDESTAL ASSEMBLY POWER PEDESTAL ASSEMBLY
22515605	RIVET		25 31	POWER PEDESTAL ASSEMBLY POWER PEDESTAL ASSEMBLY
22550370	BRACKET, BATTERY MOUNT		37	BATTERY
22579213	SENDER		53	FUEL SYSTEM
22580336	BRACKET		53 157	FUEL SYSTEM OPTION - 24 HOUR FUEL TANK
22597306	BRACKET		37	BATTERY
22616353	U-BOLT		53 157	FUEL SYSTEM OPTION - 24 HOUR FUEL TANK
22650451	SOCKET		139	OPTION - SOCKET
22666093	BRIDGE		139	OPTION - SOCKET
22672471	VOLTMETER		23	CONTROL PANEL
22672547	HERTZMETER		23	CONTROL PANEL
22680771	PAD, FUEL TANK		53 157	FUEL SYSTEM OPTION - 24 HOUR FUEL TANK
22684971	RIVET		5	ENCLOSURE
22712350	FAN		47	ENGINE ASSEMBLY

Part Number	Denomination	WAS	Page	Subgroup
22715395	DECAL, AUTO START CONT		23	CONTROL PANEL
22716567	PUMP, OIL MANUAL DRAIN		167 169	OPTION - OIL HAND PUMP OPTION - CONTAINER OIL SUMP PUMP
22721104	TRANSFORMER		27	POWER PEDESTAL ELECTRICAL LAYOUT
22734859	RAIL, DIN		27 33	POWER PEDESTAL ELECTRICAL LAYOUT POWER PEDESTAL ELECTRICAL LAYOUT
22743439	SPACER		47	ENGINE ASSEMBLY
22747299	HOLDER		27 33 155	POWER PEDESTAL ELECTRICAL LAYOUT POWER PEDESTAL ELECTRICAL LAYOUT OPTION - SUPER START PACKAGE
22747893	SWITCH, AMMETER		23	CONTROL PANEL
22748206	RAIL		27 33	POWER PEDESTAL ELECTRICAL LAYOUT POWER PEDESTAL ELECTRICAL LAYOUT
22750970	TERMINAL		27 33	POWER PEDESTAL ELECTRICAL LAYOUT POWER PEDESTAL ELECTRICAL LAYOUT
22754212	FIELD, EXCITER		17	ALTERNATOR PARTS
22757371	ALTERNATOR		11	ALTERNATOR MOUNTING
22762231	POTENTIOMETER		21	CONTROL PANEL
22768436	TERMINAL		27 33	POWER PEDESTAL ELECTRICAL LAYOUT POWER PEDESTAL ELECTRICAL LAYOUT
22770762	U-BOLT		167 169	OPTION - OIL HAND PUMP OPTION - CONTAINER OIL SUMP PUMP
22773337	GAUGE, FUEL LEVEL		23	CONTROL PANEL
22773345	GAUGE, VOLTMETER		23	CONTROL PANEL
22778005	CONTROLLER		23	CONTROL PANEL
22780985	HOURLMETER		23	CONTROL PANEL
22787436	WINGNUT		3	FRAME ASSEMBLY
22841696	SENSOR, CONTAINMENT LE		53 157	FUEL SYSTEM OPTION - 24 HOUR FUEL TANK
22855258	RIVET		161	OPTION - NO CONTAINMENT DRAIN PLUG
22869937	SEAL		5	ENCLOSURE
22880074	COOLER		49	COOLING SYSTEM
22886360	HOSE		49	COOLING SYSTEM
22890701	BATTERY		37	BATTERY
22897342	SEAL		5	ENCLOSURE
22899199	ROD, EARTH		151	OPTION - EARTHING ROD
22903538	PIPE		49	COOLING SYSTEM
22904072	TRANSFORMER		33	POWER PEDESTAL ELECTRICAL LAYOUT
22923981	BRACKET		13	ALTERNATOR MOUNTING
22959936	SCREW		37 47 53 157	BATTERY ENGINE ASSEMBLY FUEL SYSTEM OPTION - 24 HOUR FUEL TANK
22969257	ELEMENT, FUEL FILTER		117	FINAL FUEL FILTER
22969265	ELEMENT, FUEL FILTER		115	PRIMARY FUEL FILTER
22980155	KIT, NUTS AND COPPER BA		15 17	ALTERNATOR PARTS ALTERNATOR PARTS
22990816	POUCH, LITERATURE		5	ENCLOSURE

Part Number	Denomination	WAS	Page	Subgroup
23018799	FILTER		117	FINAL FUEL FILTER
23018955	FILTER		115	PRIMARY FUEL FILTER
23019847	DEFLECTOR		77	ROCKER ARM COVER
23051188	ALTERNATOR		13	ALTERNATOR MOUNTING
23053499	PLUG		25	POWER PEDESTAL ASSEMBLY
			27	POWER PEDESTAL ELECTRICAL LAYOUT
			31	POWER PEDESTAL ASSEMBLY
			33	POWER PEDESTAL ELECTRICAL LAYOUT
23054174	DECAL, SOUND POWER		9	DECALS AND DOCUMENTATION
23054182	DECAL, SOUND POWER		9	DECALS AND DOCUMENTATION
23076656	WASHER		37	BATTERY
23103468	CONTROLLER		21	CONTROL PANEL
23105844	GUARD		57	AIR INTAKE SYSTEM
			59	AIR INTAKE SYSTEM
23111925	GASKET		77	ROCKER ARM COVER
23117708	BLOCK, TERMINAL		15	ALTERNATOR PARTS
23117716	BLOCK, TERMINAL		17	ALTERNATOR PARTS
23149438	SWITCH		21	CONTROL PANEL
23160518	SWITCH, TEMPERATURE		133	SENSORS
23160526	NOZZLE, INJECTOR		111	FUEL INJECTION PUMP
23174014	CLAMP		57	AIR INTAKE SYSTEM
			59	AIR INTAKE SYSTEM
23185739	POTENTIOMETER		23	CONTROL PANEL
23189319	HORN		27	POWER PEDESTAL ELECTRICAL LAYOUT
			33	POWER PEDESTAL ELECTRICAL LAYOUT
23212152	HEATER, TANK		153	OPTION - SUPER START PACKAGE
23229602	O-RING		111	FUEL INJECTION PUMP
23229628	GASKET		125	EXHAUST MANIFOLD
23229727	COVER, VALVE		77	ROCKER ARM COVER
23229776	SCREW		125	EXHAUST MANIFOLD
23229826	WASHER		111	FUEL INJECTION PUMP
			119	FUEL LINES, LOW PRESSURE
23229859	HOSE		129	TURBO CHARGER
23229867	WASHER, SEALING		111	FUEL INJECTION PUMP
23229875	MANIFOLD, EXHAUST		125	EXHAUST MANIFOLD
23229966	VALVE, PRESSURE RELIEF		111	FUEL INJECTION PUMP
23229974	SENDER, FUEL TEMPERATU		111	FUEL INJECTION PUMP
23229982	PUMP, FUEL		109	FUEL PUMP
23230014	SENSOR		111	FUEL INJECTION PUMP
23230030	LINE, FUEL		119	FUEL LINES, LOW PRESSURE
23230089	THERMOCOUPLE		133	SENSORS
23230113	CONTROLLER, ENGINE		111	FUEL INJECTION PUMP
23230147	LINE, FUEL		111	FUEL INJECTION PUMP
23230162	SCREW		77	ROCKER ARM COVER
			111	FUEL INJECTION PUMP
23230238	LINE, FUEL		119	FUEL LINES, LOW PRESSURE
23251986	BOX		155	OPTION - SUPER START PACKAGE

Part Number	Denomination	WAS	Page	Subgroup
23252224	BARRIER		155	OPTION - SUPER START PACKAGE
23252232	JUMPER		155	OPTION - SUPER START PACKAGE
23252240	JUMPER		155	OPTION - SUPER START PACKAGE
23252257	TERMINAL		155	OPTION - SUPER START PACKAGE
23252265	TERMINAL		155	OPTION - SUPER START PACKAGE
23252273	COVER		155	OPTION - SUPER START PACKAGE
23252281	TERMINAL		155	OPTION - SUPER START PACKAGE
23269186	BREAKER, CIRCUIT		139	OPTION - SOCKET
23269202	BREAKER, CIRCUIT		139	OPTION - SOCKET
23269228	TRANSFORMER		27 33	POWER PEDESTAL ELECTRICAL LAYOUT POWER PEDESTAL ELECTRICAL LAYOUT
23269244	RELAY		27 33	POWER PEDESTAL ELECTRICAL LAYOUT POWER PEDESTAL ELECTRICAL LAYOUT
23293764	BREAKER		27 33	POWER PEDESTAL ELECTRICAL LAYOUT POWER PEDESTAL ELECTRICAL LAYOUT
23293772	CONTACT		27 33	POWER PEDESTAL ELECTRICAL LAYOUT POWER PEDESTAL ELECTRICAL LAYOUT
23304249	HOLDER		33	POWER PEDESTAL ELECTRICAL LAYOUT
23339609	PLUG, BLANKING		21	CONTROL PANEL
23351620	SCREW		155	OPTION - SUPER START PACKAGE
23370703	TERMINAL		155	OPTION - SUPER START PACKAGE
23370711	JUMPER		155	OPTION - SUPER START PACKAGE
23370729	RAIL		155	OPTION - SUPER START PACKAGE
23375785	BOLT		27 33	POWER PEDESTAL ELECTRICAL LAYOUT POWER PEDESTAL ELECTRICAL LAYOUT
24898876	SCREW		93	FAN DRIVE ASSEMBLY
24898918	SCREW		77	ROCKER ARM COVER
24898975	SCREW		83	FRONT PLATE
24899247	FITTING		119	FUEL LINES, LOW PRESSURE
24899304	SEAL		107	ENGINE OIL FILTER
24899338	CONNECTION, WATER PUM		87	WATER PUMP INLET
24899346	HOUSING		81	FLYWHEEL AND FLYWHEEL HOUSING
24899452	BRACKET		117	FINAL FUEL FILTER
24899460	BUSH		67	CRANKSHAFT PULLEY
24899478	O-RING		81	FLYWHEEL AND FLYWHEEL HOUSING
24899601	PUMP, WATER		85	TIMING GEAR & WATER PUMP
24899775	FITTING		119	FUEL LINES, LOW PRESSURE
24899882	LINE, FUEL		119	FUEL LINES, LOW PRESSURE
24899932	KIT, O-RING		115 117	PRIMARY FUEL FILTER FINAL FUEL FILTER
35113646	CLAMP		61	EXHAUST SYSTEM
35144336	SCREW		25 31	POWER PEDESTAL ASSEMBLY POWER PEDESTAL ASSEMBLY
35221639	CLIP, RETAINING		49	COOLING SYSTEM
35221662	CLAMP		49	COOLING SYSTEM
35225085	CLAMP		47 153	ENGINE ASSEMBLY OPTION - SUPER START PACKAGE

Part Number	Denomination	WAS	Page	Subgroup
			31	POWER PEDESTAL ASSEMBLY
35271154	BOLT		27	POWER PEDESTAL ELECTRICAL LAYOUT
			33	POWER PEDESTAL ELECTRICAL LAYOUT
35271170	SCREW		57	AIR INTAKE SYSTEM
			59	AIR INTAKE SYSTEM
35273366	NUT		149	OPTION - MULTIPLE GROUNDING SYSTEM
35278530	NUT		5	ENCLOSURE
35283126	CONNECTOR		49	COOLING SYSTEM
35285600	HOSE		53	FUEL SYSTEM
			163	OPTION - 3 WAY FUEL VALVE
			165	OPTION - 3 WAY FUEL VALVE
35296342	CLIP, RETAINING		49	COOLING SYSTEM
			53	FUEL SYSTEM
35300771	SCREW		13	ALTERNATOR MOUNTING
			37	BATTERY
			153	OPTION - SUPER START PACKAGE
35305234	ADAPTOR		49	COOLING SYSTEM
35314939	INDICATOR, AIR RESTRICTI		57	AIR INTAKE SYSTEM
			59	AIR INTAKE SYSTEM
35322395	SILENCER, PNEUMATIC		53	FUEL SYSTEM
			157	OPTION - 24 HOUR FUEL TANK
35326560	ADAPTOR		47	ENGINE ASSEMBLY
35326578	HOSE		47	ENGINE ASSEMBLY
			153	OPTION - SUPER START PACKAGE
			167	OPTION - OIL HAND PUMP
			169	OPTION - CONTAINER OIL SUMP PUMP
35337070	SCREW		53	FUEL SYSTEM
			157	OPTION - 24 HOUR FUEL TANK
35356484	TUBE, NYLON		53	FUEL SYSTEM
			157	OPTION - 24 HOUR FUEL TANK
35356591	TIE, CABLE		47	ENGINE ASSEMBLY
			157	OPTION - 24 HOUR FUEL TANK
35360775	TUBING		49	COOLING SYSTEM
35366954	CONNECTOR		49	COOLING SYSTEM
35369339	CONNECTOR		53	FUEL SYSTEM
			157	OPTION - 24 HOUR FUEL TANK
35369347	CONNECTOR		53	FUEL SYSTEM
			157	OPTION - 24 HOUR FUEL TANK
35393669	CLIP, RETAINING		57	AIR INTAKE SYSTEM
35393677	VALVE, DUST EJECTOR		57	AIR INTAKE SYSTEM
			59	AIR INTAKE SYSTEM
35393719	CAP, PLUG		57	AIR INTAKE SYSTEM
			59	AIR INTAKE SYSTEM
35582410	CABLE, POSITIVE		37	BATTERY
35586288	U-BOLT		61	EXHAUST SYSTEM
35609874	WASHER		11	ALTERNATOR MOUNTING
			13	ALTERNATOR MOUNTING
			47	ENGINE ASSEMBLY
35846484	CAP, RAIN		61	EXHAUST SYSTEM
36100188	NUT		85	TIMING GEAR & WATER PUMP
			119	FUEL LINES, LOW PRESSURE

Part Number	Denomination	WAS	Page	Subgroup
			137	ALTERNATOR
36102838	RING, SNAP		93	FAN DRIVE ASSEMBLY
36102929	PLUG		77	ROCKER ARM COVER
36103182	ADAPTOR		129	TURBO CHARGER
36103232	BUSH		137	ALTERNATOR
36103810	ROD, PUSH		75	ACTUATING VALVE
36104230	BUSH		83	FRONT PLATE
36104248	SHAFT		83	FRONT PLATE
36104719	GASKET, CYLINDER HEAD		73	CYLINDER HEAD
36105062	ELBOW		79	BREATHER HOSE
36105112	GEAR		65	CRANKSHAFT
36105146	GEAR		101	OIL PUMP
36105377	TUBE		101	OIL PUMP
36105963	SUPPORT		75	ACTUATING VALVE
36106060	SEAL		91	THERMOSTAT AND THERMOSTAT COVER
36106094	STUD		75	ACTUATING VALVE
36106102	O-RING		109	FUEL PUMP
36106250	GASKET		85	TIMING GEAR & WATER PUMP
36106607	GASKET		103	OIL COOLER
36106656	SHAFT, ROCKER ARM		75	ACTUATING VALVE
36106706	CAM FOLLOWER		75	ACTUATING VALVE
36106748	GASKET		129	TURBO CHARGER
36106755	GASKET		129	TURBO CHARGER
36106763	NUT		77	ROCKER ARM COVER
36106771	O-RING		77	ROCKER ARM COVER
36106821	NUT		119	FUEL LINES, LOW PRESSURE
36107951	WASHER		83	FRONT PLATE
36108009	PLUG		81	FLYWHEEL AND FLYWHEEL HOUSING
36108066	STRAP		137	ALTERNATOR
36108371	PIN		109	FUEL PUMP
36108579	BOLT		65 81	CRANKSHAFT FLYWHEEL AND FLYWHEEL HOUSING
36108587	SCREW		83	FRONT PLATE
36108595	GASKET		105	OIL FILLER NECK
36108819	GEAR, RING		81	FLYWHEEL AND FLYWHEEL HOUSING
36109205	PIN, DOWEL		65	CRANKSHAFT
36109395	GASKET		135	STARTER MOTOR
36109478	RING, SNAP		69	CONNECTING RODS & PISTONS
36109502	PLUG		75	ACTUATING VALVE
36109932	O-RING		97	OIL PAN
36110054	O-RING		129	TURBO CHARGER
36110112	WASHER		137	ALTERNATOR
36110385	O-RING		79	BREATHER HOSE
36110401	CLAMP		79	BREATHER HOSE
36110864	GASKET		121	AIR INTAKE

Part Number	Denomination	WAS	Page	Subgroup
36111425	O-RING		87	WATER PUMP INLET
36111516	NUT		111	FUEL INJECTION PUMP
36111938	O-RING		101	OIL PUMP
36114015	SEAL		81	FLYWHEEL AND FLYWHEEL HOUSING
36114072	PLUG		91	THERMOSTAT AND THERMOSTAT COVER
36114080	PLUG, FITTING		87 97	WATER PUMP INLET OIL PAN
36114098	PLUG		103 119	OIL COOLER FUEL LINES, LOW PRESSURE
36114106	PLUG, DRAIN		85 97	TIMING GEAR & WATER PUMP OIL PAN
36114445	KIT, SEAL		115 117	PRIMARY FUEL FILTER FINAL FUEL FILTER
36114536	KIT, SEAL		115 117	PRIMARY FUEL FILTER FINAL FUEL FILTER
36114544	BOWL, SEDIMENT		115	PRIMARY FUEL FILTER
36115095	GEAR		83	FRONT PLATE
36115251	COOLER, OIL		103	OIL COOLER
36116044	SEAL		85	TIMING GEAR & WATER PUMP
36116242	ADAPTOR		119	FUEL LINES, LOW PRESSURE
36116341	FITTING		121	AIR INTAKE
36116648	KIT, VALVE		117	FINAL FUEL FILTER
36117562	KIT, BEARING STD		65	CRANKSHAFT
36117570	KIT, BEARING STD		65	CRANKSHAFT
36117711	KIT, BEARING STD		69	CONNECTING RODS & PISTONS
36117729	KIT, BEARING		69	CONNECTING RODS & PISTONS
36117885	CLAMP		129	TURBO CHARGER
36118131	SCREW		103	OIL COOLER
36118149	SCREW		107	ENGINE OIL FILTER
36118693	O-RING		103	OIL COOLER
36118750	CLAMP		119	FUEL LINES, LOW PRESSURE
36118826	FAN		137	ALTERNATOR
36119220	SPRING		75	ACTUATING VALVE
36119246	WASHER		75	ACTUATING VALVE
36119808	O-RING		129	TURBO CHARGER
36125813	ALTERNATOR		137	ALTERNATOR
36126019	O-RING		103 119	OIL COOLER FUEL LINES, LOW PRESSURE
36126050	WASHER, SEALING		119	FUEL LINES, LOW PRESSURE
36128916	O-RING		91 119 133	THERMOSTAT AND THERMOSTAT COVER FUEL LINES, LOW PRESSURE SENSORS
36136869	TENSIONER, BELT		95	BELT TENSIONER
36139350	SUCTION CONTROL VALVE		111	FUEL INJECTION PUMP
36771178	SCREW		5	ENCLOSURE
36780609	CABLE, NEGATIVE		37	BATTERY
36793040	SCREW		3	FRAME ASSEMBLY

Part Number	Denomination	WAS	Page	Subgroup
36794345	CYLINDER, KEY		5	ENCLOSURE
36797652	SCREW		3	FRAME ASSEMBLY
			5	ENCLOSURE
			51	COOLING SYSTEM
			153	OPTION - SUPER START PACKAGE
36845014	CAP		53	FUEL SYSTEM
36845022	STRAINER, FUEL		53	FUEL SYSTEM
			157	OPTION - 24 HOUR FUEL TANK
36852622	LAMP ASSEMBLY		21	CONTROL PANEL
			23	CONTROL PANEL
36853257	ANGLE		37	BATTERY
36853265	WASHER		37	BATTERY
36878064	TRAY, BATTERY		37	BATTERY
36879203	NUT		11	ALTERNATOR MOUNTING
			13	ALTERNATOR MOUNTING
			47	ENGINE ASSEMBLY
			51	COOLING SYSTEM
36879211	NUT, FLANGE		3	FRAME ASSEMBLY
			13	ALTERNATOR MOUNTING
			47	ENGINE ASSEMBLY
			157	OPTION - 24 HOUR FUEL TANK
36879492	SCREW		11	ALTERNATOR MOUNTING
			13	ALTERNATOR MOUNTING
			37	BATTERY
			47	ENGINE ASSEMBLY
			51	COOLING SYSTEM
			57	AIR INTAKE SYSTEM
			59	AIR INTAKE SYSTEM
36880995	SCREW		11	ALTERNATOR MOUNTING
			13	ALTERNATOR MOUNTING
			51	COOLING SYSTEM
36881175	CLAMP, EXHAUST		61	EXHAUST SYSTEM
36881886	NUT		47	ENGINE ASSEMBLY
			53	FUEL SYSTEM
			57	AIR INTAKE SYSTEM
			59	AIR INTAKE SYSTEM
			61	EXHAUST SYSTEM
			157	OPTION - 24 HOUR FUEL TANK
			163	OPTION - 3 WAY FUEL VALVE
			165	OPTION - 3 WAY FUEL VALVE
			167	OPTION - OIL HAND PUMP
36884948	TANK, EXPANSION		49	COOLING SYSTEM
36888055	SCREW		47	ENGINE ASSEMBLY
36889608	SCREW		5	ENCLOSURE
			53	FUEL SYSTEM
			59	AIR INTAKE SYSTEM
			157	OPTION - 24 HOUR FUEL TANK
			163	OPTION - 3 WAY FUEL VALVE
			165	OPTION - 3 WAY FUEL VALVE
36896462	PLUG		3	FRAME ASSEMBLY
36896975	SWITCH, BATTERY ISOLATO		37	BATTERY
36898096	SCREW		5	ENCLOSURE
			51	COOLING SYSTEM
			139	OPTION - SOCKET

Part Number	Denomination	WAS	Page	Subgroup
36898104	NUT		27	POWER PEDESTAL ELECTRICAL LAYOUT
			33	POWER PEDESTAL ELECTRICAL LAYOUT
			49	COOLING SYSTEM
45284619	SUPPRESSOR, SURGE		15	ALTERNATOR PARTS
			17	ALTERNATOR PARTS
46500062	CONNECTION BOX ASSEMB		153	OPTION - SUPER START PACKAGE
			155	OPTION - SUPER START PACKAGE
46500772	O-RING		111	FUEL INJECTION PUMP
46501292	WASHER		27	POWER PEDESTAL ELECTRICAL LAYOUT
			33	POWER PEDESTAL ELECTRICAL LAYOUT
			149	OPTION - MULTIPLE GROUNDING SYSTEM
46518411	PULLEY		137	ALTERNATOR
46520557	SENSOR		133	SENSORS
46539870	DECAL, HOT LIQUID SYMBO		49	COOLING SYSTEM
46539979	BUSH		51	COOLING SYSTEM
46540647	DECAL, FUEL IN		9	DECALS AND DOCUMENTATION
			165	OPTION - 3 WAY FUEL VALVE
46540654	DECAL, FUEL OUT		9	DECALS AND DOCUMENTATION
			165	OPTION - 3 WAY FUEL VALVE
46540894	HOSE ASSEMBLY		165	OPTION - 3 WAY FUEL VALVE
46550692	FAN ASSEMBLY		93	FAN DRIVE ASSEMBLY
46550695	SPACER		93	FAN DRIVE ASSEMBLY
46550713	ELEMENT, OIL FILTER		107	ENGINE OIL FILTER
46550715	SENSOR		115	PRIMARY FUEL FILTER
46550741	SHIELD, HEAT		77	ROCKER ARM COVER
46550743	MEDALLION		77	ROCKER ARM COVER
46550744	FILLER CAP		105	OIL FILLER NECK
46550746	O-RING		105	OIL FILLER NECK
46550747	SUPPORT		85	TIMING GEAR & WATER PUMP
46550748	HOUSING		105	OIL FILLER NECK
46550749	PLUG		105	OIL FILLER NECK
46550750	NUT		105	OIL FILLER NECK
			111	FUEL INJECTION PUMP
			123	STARTING AID
			131	ENGINE WIRING HARNESS
46550751	ISOLATOR		105	OIL FILLER NECK
46550753	BRACKET		105	OIL FILLER NECK
46550754	SCREW		105	OIL FILLER NECK
46550757	SCREW		111	FUEL INJECTION PUMP
			131	ENGINE WIRING HARNESS
46550758	BRACKET		111	FUEL INJECTION PUMP
46550759	CLIP		111	FUEL INJECTION PUMP
46550760	HARNESS, WIRING		111	FUEL INJECTION PUMP
46550761	CAP		111	FUEL INJECTION PUMP
46550762	NUT		111	FUEL INJECTION PUMP
46550763	SEAL		111	FUEL INJECTION PUMP
			129	TURBO CHARGER
46550766	CLAMP		111	FUEL INJECTION PUMP

Part Number	Denomination	WAS	Page	Subgroup
46550768	SCREW		111	FUEL INJECTION PUMP
46550771	PUMP, FUEL INJECTION		111	FUEL INJECTION PUMP
46550773	ADAPTOR		111	FUEL INJECTION PUMP
46550774	GEAR		111	FUEL INJECTION PUMP
46550775	O-RING		111	FUEL INJECTION PUMP
46550777	SCREEN		111	FUEL INJECTION PUMP
46550778	O-RING		111	FUEL INJECTION PUMP
46550779	LINE, FUEL		111	FUEL INJECTION PUMP
46550780	RAIL		111	FUEL INJECTION PUMP
46550781	BRACKET		111	FUEL INJECTION PUMP
46550782	RESTRICTOR		111	FUEL INJECTION PUMP
46550783	LINE, FUEL		111	FUEL INJECTION PUMP
46550784	LINE, FUEL		111	FUEL INJECTION PUMP
46550785	BRACKET		111	FUEL INJECTION PUMP
46550786	MANIFOLD, INTAKE		121	AIR INTAKE
46550801	OIL PAN		97	OIL PAN
46550802	ADAPTOR		97	OIL PAN
46550803	SEAL		97	OIL PAN
46550804	GASKET		97	OIL PAN
46550807	VALVE, DRAIN		97	OIL PAN
46550808	PLUG		97	OIL PAN
46550811	INTAKE, OIL PUMP		97	OIL PAN
46550812	SCREW		97	OIL PAN
46550815	TUBE		91	THERMOSTAT AND THERMOSTAT COVER
46550816	FAN DRIVE ASSEMBLY		93	FAN DRIVE ASSEMBLY
46550818	V BELT		93	FAN DRIVE ASSEMBLY
46550820	FAN		93	FAN DRIVE ASSEMBLY
46550837	SCREW		79 131	BREATHER HOSE ENGINE WIRING HARNESS
46550847	KIT, STARTER MOTOR		135	STARTER MOTOR
46550850	WASHER		137	ALTERNATOR
46550851	HARNESS, WIRING		137	ALTERNATOR
46550852	CAPACITOR		137	ALTERNATOR
46550853	REGULATOR, VOLTAGE		137	ALTERNATOR
46550854	PLATE		83	FRONT PLATE
46550855	STUD		83	FRONT PLATE
46550857	WASHER		83	FRONT PLATE
46550859	DIPSTICK		99	DIP STICK
46550860	SCREW		83	FRONT PLATE
46550863	SCREW		109	FUEL PUMP
46550866	TUBE, DIPSTICK		99	DIP STICK
46550867	COVER		85	TIMING GEAR & WATER PUMP
46550871	GASKET		85	TIMING GEAR & WATER PUMP
46550872	SCREW		85	TIMING GEAR & WATER PUMP
46550873	WASHER		85	TIMING GEAR & WATER PUMP

Part Number	Denomination	WAS	Page	Subgroup
46550879	KIT, PISTON LINER		69	CONNECTING RODS & PISTONS
46550880	PIN, PISTON		69	CONNECTING RODS & PISTONS
46550882	WASHER		75	ACTUATING VALVE
46550883	SHAFT, ROCKER ARM		75	ACTUATING VALVE
46550886	SCREW		101	OIL PUMP
46550889	SCREW		73	CYLINDER HEAD
46550894	HOUSING		103	OIL COOLER
46550899	LINE, FUEL		119	FUEL LINES, LOW PRESSURE
46550900	LINE, FUEL		119	FUEL LINES, LOW PRESSURE
46550901	BRACKET		119	FUEL LINES, LOW PRESSURE
46550902	ELBOW		119	FUEL LINES, LOW PRESSURE
46550903	O-RING		119	FUEL LINES, LOW PRESSURE
46550904	ELBOW		119	FUEL LINES, LOW PRESSURE
46550905	FITTING		119	FUEL LINES, LOW PRESSURE
46550906	TEE		119	FUEL LINES, LOW PRESSURE
46550907	LINE, FUEL		119	FUEL LINES, LOW PRESSURE
46550909	SCREW		119	FUEL LINES, LOW PRESSURE
46550910	ELBOW		127	EXHAUST ELBOW
46550912	STUD		127	EXHAUST ELBOW
46550913	ADAPTOR		127	EXHAUST ELBOW
46550915	TURBOCHARGER		129	TURBO CHARGER
46550917	LINE		129	TURBO CHARGER
46550919	HOSE		129	TURBO CHARGER
46550923	SWITCH, OIL PRESSURE		133	SENSORS
46550924	BRACKET		115	PRIMARY FUEL FILTER
46550925	SPACER		115	PRIMARY FUEL FILTER
46550926	SCREW		115	PRIMARY FUEL FILTER
46550927	HARNESS, WIRING		131	ENGINE WIRING HARNESS
46550928	CONNECTOR		131	ENGINE WIRING HARNESS
46550929	CONNECTOR		131	ENGINE WIRING HARNESS
46550930	CONNECTOR		131	ENGINE WIRING HARNESS
46550931	CONNECTOR		131	ENGINE WIRING HARNESS
46550932	CONNECTOR		131	ENGINE WIRING HARNESS
46550933	CONNECTOR		131	ENGINE WIRING HARNESS
46550934	CONNECTOR		131	ENGINE WIRING HARNESS
46550936	CONNECTOR		131	ENGINE WIRING HARNESS
46550937	CONNECTOR		131	ENGINE WIRING HARNESS
46550938	CONNECTOR		131	ENGINE WIRING HARNESS
46550939	CONNECTOR		131	ENGINE WIRING HARNESS
46550941	BRACKET		131	ENGINE WIRING HARNESS
46550942	SCREW		131	ENGINE WIRING HARNESS
46550943	BRACKET		131	ENGINE WIRING HARNESS
46550944	SCREW		131	ENGINE WIRING HARNESS
46550945	BRACKET		131	ENGINE WIRING HARNESS
46550946	PULLEY		93	FAN DRIVE ASSEMBLY

Part Number	Denomination	WAS	Page	Subgroup
46550947	SUPPORT		95	BELT TENSIONER
46550948	SCREW		95	BELT TENSIONER
46550950	SPACER		95	BELT TENSIONER
46550951	HEAD, FILTER		107	ENGINE OIL FILTER
46550952	HEAD, FILTER		107	ENGINE OIL FILTER
46550953	PLUG		107	ENGINE OIL FILTER
46550972	GEAR		83	FRONT PLATE
46551122	PIN, DOWEL		83	FRONT PLATE
46551124	SHAFT		83	FRONT PLATE
46551363	KIT, CYLINDER HEAD		73	CYLINDER HEAD
46551364	HOUSING		131	ENGINE WIRING HARNESS
46551437	SUPPRESSOR, SURGE		19	ALTERNATOR PARTS
46551586	SWITCH		147	OPTION - DUAL FREQUENCY
46551680	SUPPORT, CABLE		3	FRAME ASSEMBLY
46552209	HOLDER, CABLE		3	FRAME ASSEMBLY
46553677	FRAME		3	FRAME ASSEMBLY
46553705	NECK, FUEL TANK		53	FUEL SYSTEM
			157	OPTION - 24 HOUR FUEL TANK
46553706	GASKET		53	FUEL SYSTEM
			157	OPTION - 24 HOUR FUEL TANK
46553722	BASE		53	FUEL SYSTEM
46553723	TANK, FUEL		53	FUEL SYSTEM
46553760	PLUG		53	FUEL SYSTEM
			157	OPTION - 24 HOUR FUEL TANK
46553761	RING		53	FUEL SYSTEM
			157	OPTION - 24 HOUR FUEL TANK
46553766	POCKET, FORK LIFT		3	FRAME ASSEMBLY
46553792	TUBE		53	FUEL SYSTEM
46553793	TUBE		53	FUEL SYSTEM
46553801	CROSSMEMBER		11	ALTERNATOR MOUNTING
46553828	BAIL, LIFTING		3	FRAME ASSEMBLY
46553837	PANEL		5	ENCLOSURE
46553845	DOOR, PAINTED		5	ENCLOSURE
46553871	TUBE, DRAIN		53	FUEL SYSTEM
			157	OPTION - 24 HOUR FUEL TANK
46553895	PANEL ASSEMBLY		5	ENCLOSURE
46553896	PANEL, PAINTED		5	ENCLOSURE
46556505	DOOR ASSEMBLY		5	ENCLOSURE
46556511	PANEL ASSEMBLY		5	ENCLOSURE
46556512	PANEL, PAINTED		5	ENCLOSURE
46556518	PANEL ASSEMBLY		5	ENCLOSURE
46556519	PANEL, PAINTED		5	ENCLOSURE
46556522	PANEL ASSEMBLY		5	ENCLOSURE
46556523	PANEL, PAINTED		5	ENCLOSURE
46556525	DOOR ASSEMBLY		5	ENCLOSURE
46556526	DOOR, PAINTED		5	ENCLOSURE

Part Number	Denomination	WAS	Page	Subgroup
46556560	DOOR, PAINTED		5	ENCLOSURE
46556620	DOOR ASSEMBLY		5	ENCLOSURE
46556621	DOOR, PAINTED		5	ENCLOSURE
46556649	BRACKET, AIR FILTER		59	AIR INTAKE SYSTEM
46556650	HOSE, AIR FILTER		57 59	AIR INTAKE SYSTEM AIR INTAKE SYSTEM
46556669	SILENCER		61	EXHAUST SYSTEM
46556685	PANEL ASSEMBLY		5	ENCLOSURE
46556686	PANEL, PAINTED		5	ENCLOSURE
46556689	DOOR, PAINTED		5	ENCLOSURE
46556692	ROOF ASSEMBLY		5	ENCLOSURE
46556693	ROOF, PAINTED		5	ENCLOSURE
46556695	ROOF ASSEMBLY		5	ENCLOSURE
46556696	ROOF, PAINTED		5	ENCLOSURE
46556790	FIBERGLASS		5	ENCLOSURE
46556917	SCREW		157	OPTION - 24 HOUR FUEL TANK
46557341	HOLDER		5	ENCLOSURE
46557345	ENGINE		47	ENGINE ASSEMBLY
46557355	DOOR ASSEMBLY		5	ENCLOSURE
46557367	ISOLATOR		27 33	POWER PEDESTAL ELECTRICAL LAYOUT POWER PEDESTAL ELECTRICAL LAYOUT
46557368	BRACKET		27 33	POWER PEDESTAL ELECTRICAL LAYOUT POWER PEDESTAL ELECTRICAL LAYOUT
46557375	ISOLATOR		27 33 149	POWER PEDESTAL ELECTRICAL LAYOUT POWER PEDESTAL ELECTRICAL LAYOUT OPTION - MULTIPLE GROUNDING SYSTEM
46557384	PIPE		61	EXHAUST SYSTEM
46557402	BRACKET		61	EXHAUST SYSTEM
46557418	PANEL		23	CONTROL PANEL
46557426	FIBERGLASS		5	ENCLOSURE
46557430	BRACKET, MUFFLER		61	EXHAUST SYSTEM
46557438	BRACKET		47	ENGINE ASSEMBLY
46557444	COVER		5	ENCLOSURE
46557939	ENCLOSURE		25 31	POWER PEDESTAL ASSEMBLY POWER PEDESTAL ASSEMBLY
46557979	SPACER		33	POWER PEDESTAL ELECTRICAL LAYOUT
46558060	PANEL, CONTROL		21	CONTROL PANEL
46558099	HOLDER		25 31	POWER PEDESTAL ASSEMBLY POWER PEDESTAL ASSEMBLY
46558100	ENTRY		25 31	POWER PEDESTAL ASSEMBLY POWER PEDESTAL ASSEMBLY
46558119	TERMINAL		27 33	POWER PEDESTAL ELECTRICAL LAYOUT POWER PEDESTAL ELECTRICAL LAYOUT
46558219	COVER		31	POWER PEDESTAL ASSEMBLY
46558281	TERMINAL		27 33	POWER PEDESTAL ELECTRICAL LAYOUT POWER PEDESTAL ELECTRICAL LAYOUT
46558599	GUARD		27 33	POWER PEDESTAL ELECTRICAL LAYOUT POWER PEDESTAL ELECTRICAL LAYOUT

Part Number	Denomination	WAS	Page	Subgroup
46558679	HINGE		25 31	POWER PEDESTAL ASSEMBLY POWER PEDESTAL ASSEMBLY
46558681	DOOR		25 31	POWER PEDESTAL ASSEMBLY POWER PEDESTAL ASSEMBLY
46558739	COVER, RECEPTACLE		145	OPTION - NO SOCKETS
46558971	BREAKER		33	POWER PEDESTAL ELECTRICAL LAYOUT
46559101	HARNESS		31 33	POWER PEDESTAL ASSEMBLY POWER PEDESTAL ELECTRICAL LAYOUT
46561639	TERMINAL		27 33	POWER PEDESTAL ELECTRICAL LAYOUT POWER PEDESTAL ELECTRICAL LAYOUT
46561640	TERMINAL, EARTH		27 33	POWER PEDESTAL ELECTRICAL LAYOUT POWER PEDESTAL ELECTRICAL LAYOUT
46562519	PLUG		53 157	FUEL SYSTEM OPTION - 24 HOUR FUEL TANK
46562520	RING, SEALING		53 157	FUEL SYSTEM OPTION - 24 HOUR FUEL TANK
46565499	HOLDER		53 157	FUEL SYSTEM OPTION - 24 HOUR FUEL TANK
46570819	RETAINER		5	ENCLOSURE
46573860	DECAL, DOOSAN TRI-COLO		9	DECALS AND DOCUMENTATION
46573862	DECAL, DOOSAN TRI-COLO		9	DECALS AND DOCUMENTATION
46573922	DECAL, DOOSAN LOGO		9	DECALS AND DOCUMENTATION
46582419	VALVE		163 165	OPTION - 3 WAY FUEL VALVE OPTION - 3 WAY FUEL VALVE
46582639	BRACKET		163 165	OPTION - 3 WAY FUEL VALVE OPTION - 3 WAY FUEL VALVE
46583600	ADAPTOR		163 165	OPTION - 3 WAY FUEL VALVE OPTION - 3 WAY FUEL VALVE
46584099	BREAKER, CIRCUIT		139	OPTION - SOCKET
46584219	BRACKET		139	OPTION - SOCKET
46584319	RAIL		139	OPTION - SOCKET
46585923	DECAL, MODEL		9	DECALS AND DOCUMENTATION
46585924	DECAL, MODEL		9	DECALS AND DOCUMENTATION
46586239	COVER		161	OPTION - NO CONTAINMENT DRAIN PLUG
46587620	HINGE		31	POWER PEDESTAL ASSEMBLY
46587659	SCREW		3 167	FRAME ASSEMBLY OPTION - OIL HAND PUMP
46588485	AMMETER		23	CONTROL PANEL
46588879	WIRE, INSULATION		173	OPTION - EXHAUST INSULATION
46592579	FOAM FIELD KIT (no adhesive		5	ENCLOSURE
46592580	FOAM FIELD KIT (no adhesive		5	ENCLOSURE
46594480	DECAL, 3 WAY VALVE INDIC		9 163 165	DECALS AND DOCUMENTATION OPTION - 3 WAY FUEL VALVE OPTION - 3 WAY FUEL VALVE
46594481	DECAL, STAGE 3A		9	DECALS AND DOCUMENTATION
46596939	WIRING DIAGRAM		39 41 43 45 141	WIRING DIAGRAM WIRING DIAGRAM WIRING DIAGRAM WIRING DIAGRAM OPTION - SOCKET

Part Number	Denomination	WAS	Page	Subgroup
46598719	BRACKET		147	OPTION - DUAL FREQUENCY
46599139	ENGINE		47	ENGINE ASSEMBLY
46600589	HARNESS		147	OPTION - DUAL FREQUENCY
46600979	CROSS MEMBER, ENGINE		47	ENGINE ASSEMBLY
46601159	CROSSMEMBER		13	ALTERNATOR MOUNTING
46601219	SUPPORT, COOLER		51	COOLING SYSTEM
46601220	BAFFLE, COOLER		51	COOLING SYSTEM
46601221	BAFFLE, COOLER		51	COOLING SYSTEM
46601239	SHROUD, FAN		51	COOLING SYSTEM
46602879	DECAL, NO LIFTING POINT		9	DECALS AND DOCUMENTATION
46603459	PIPE		61	EXHAUST SYSTEM
46604099	LAMP, INDICATOR		147	OPTION - DUAL FREQUENCY
46604182	DECAL		147	OPTION - DUAL FREQUENCY
46606359	MANUAL, OPERATION & MAI		9	DECALS AND DOCUMENTATION
46606360	MANUAL, OPERATION & MAI		9	DECALS AND DOCUMENTATION
46606361	MANUAL, OPERATION & MAI		9	DECALS AND DOCUMENTATION
46606362	MANUAL, OPERATION & MAI		9	DECALS AND DOCUMENTATION
46606363	MANUAL, OPERATION & MAI		9	DECALS AND DOCUMENTATION
46606364	MANUAL, OPERATION & MAI		9	DECALS AND DOCUMENTATION
46606365	MANUAL, OPERATION & MAI		9	DECALS AND DOCUMENTATION
46606366	MANUAL, OPERATION & MAI		9	DECALS AND DOCUMENTATION
46606367	MANUAL, OPERATION & MAI		9	DECALS AND DOCUMENTATION
46606368	MANUAL, OPERATION & MAI		9	DECALS AND DOCUMENTATION
46606369	MANUAL, OPERATION & MAI		9	DECALS AND DOCUMENTATION
46606371	MANUAL, OPERATION & MAI		9	DECALS AND DOCUMENTATION
46606372	MANUAL, OPERATION & MAI		9	DECALS AND DOCUMENTATION
46606373	MANUAL, OPERATION & MAI		9	DECALS AND DOCUMENTATION
46609299	BOLT, EYE		3	FRAME ASSEMBLY
46609459	PLEXIGLASS, DOOR		5	ENCLOSURE
46609759	DECAL, MGS		149	OPTION - MULTIPLE GROUNDING SYSTEM
46609960	TANK, LARGE FUEL		157	OPTION - 24 HOUR FUEL TANK
46609961	TUBE ASSEMBLY		157	OPTION - 24 HOUR FUEL TANK
46609962	TUBE ASSEMBLY		157	OPTION - 24 HOUR FUEL TANK
46609979	FRAME		157	OPTION - 24 HOUR FUEL TANK
46610160	PANEL		5	ENCLOSURE
46610423	PIN		157	OPTION - 24 HOUR FUEL TANK
46610439	COVER		157	OPTION - 24 HOUR FUEL TANK
46611399	TUBE		157	OPTION - 24 HOUR FUEL TANK
46611699	BRACKET		47	ENGINE ASSEMBLY
46611701	BRACKET		165	OPTION - 3 WAY FUEL VALVE
46612139	GUARD, FAN		51	COOLING SYSTEM
46612140	GUARD, FAN		51	COOLING SYSTEM
46612179	COVER		3	FRAME ASSEMBLY
46612180	HOLDER, COVER		3	FRAME ASSEMBLY
46612739	PIPE		61	EXHAUST SYSTEM

Part Number	Denomination	WAS	Page	Subgroup
46612740	CLAMP, MUFFLER		61	EXHAUST SYSTEM
46612760	HOOK		37	BATTERY
46612959	GUARD, PULLEY		51	COOLING SYSTEM
46612979	GUARD, PULLEY		51	COOLING SYSTEM
46613419	HOLDER		53 157	FUEL SYSTEM OPTION - 24 HOUR FUEL TANK
46613499	BRACKET		163 165	OPTION - 3 WAY FUEL VALVE OPTION - 3 WAY FUEL VALVE
46613839	BRACKET, EARTH ROD		151	OPTION - EARTHING ROD
46613859	BRACKET		51	COOLING SYSTEM
46614019	SCREW		5	ENCLOSURE
46614139	ELBOW		167 169	OPTION - OIL HAND PUMP OPTION - CONTAINER OIL SUMP PUMP
46616339	BRACKET, PUMP MOUNTING		167	OPTION - OIL HAND PUMP
46616359	BRACKET		47	ENGINE ASSEMBLY
46616519	HOSE		49	COOLING SYSTEM
46616739	SENDER, FUEL LEVEL		157	OPTION - 24 HOUR FUEL TANK
46617059	PIPE		49	COOLING SYSTEM
46618303	COVER		25	POWER PEDESTAL ASSEMBLY
46618379	RAIL, DIN		27	POWER PEDESTAL ELECTRICAL LAYOUT
46618400	SPACER		27	POWER PEDESTAL ELECTRICAL LAYOUT
46618419	BREAKER ASSEMBLY		27	POWER PEDESTAL ELECTRICAL LAYOUT
46618479	BRACKET, AIR FILTER		57	AIR INTAKE SYSTEM
46620538	BRACKET		49	COOLING SYSTEM
46620539	BREAKER, CIRCUIT		139	OPTION - SOCKET
46620540	BREAKER, CIRCUIT		139	OPTION - SOCKET
46620672	COVER		139	OPTION - SOCKET
46620677	SOCKET		139	OPTION - SOCKET
46620789	RAIL, DIN		33	POWER PEDESTAL ELECTRICAL LAYOUT
46620808	HARNESS ASSEMBLY		25 27	POWER PEDESTAL ASSEMBLY POWER PEDESTAL ELECTRICAL LAYOUT
46620980	COVER		11 13	ALTERNATOR MOUNTING ALTERNATOR MOUNTING
46621221	COVER		31	POWER PEDESTAL ASSEMBLY
46621223	COVER		25	POWER PEDESTAL ASSEMBLY
46621441	ADAPTOR		165	OPTION - 3 WAY FUEL VALVE
46621552	SOCKET		139	OPTION - SOCKET
46622480	RAIL		139	OPTION - SOCKET
46622819	MANUAL, PARTS		9	DECALS AND DOCUMENTATION
46622971	ISOLATOR		27 33	POWER PEDESTAL ELECTRICAL LAYOUT POWER PEDESTAL ELECTRICAL LAYOUT
46623555	HOSE ASSEMBLY		49	COOLING SYSTEM
46623957	ISOLATOR		27 33	POWER PEDESTAL ELECTRICAL LAYOUT POWER PEDESTAL ELECTRICAL LAYOUT
46624039	BAR, BUS		27 33	POWER PEDESTAL ELECTRICAL LAYOUT POWER PEDESTAL ELECTRICAL LAYOUT
46624627	BRACKET		169	OPTION - CONTAINER OIL SUMP PUMP

Part Number	Denomination	WAS	Page	Subgroup
46624739	BOLT		169	OPTION - CONTAINER OIL SUMP PUMP
46626115	HOLDER, CONNECTION BOX		153	OPTION - SUPER START PACKAGE
46626644	DECAL		147	OPTION - DUAL FREQUENCY
46626919	CABLE		149	OPTION - MULTIPLE GROUNDING SYSTEM
46628119	HOLDER		47	ENGINE ASSEMBLY
46630129	GUARD, PULLEY		51	COOLING SYSTEM
46630130	GUARD, PULLEY		51	COOLING SYSTEM
46630131	GUARD, FAN		51	COOLING SYSTEM
46630132	GUARD, FAN		51	COOLING SYSTEM
46630133	GUARD, PULLEY		51	COOLING SYSTEM
46649376	BREAKER		27	POWER PEDESTAL ELECTRICAL LAYOUT
46649859	SOCKET		139	OPTION - SOCKET
46650042	BRACKET		139	OPTION - SOCKET
46650059	BRACKET		139	OPTION - SOCKET
46656744	DECAL, WEB SITE		9	DECALS AND DOCUMENTATION
46662170	ALTERNATOR		11	ALTERNATOR MOUNTING
46662172	ALTERNATOR		13	ALTERNATOR MOUNTING
46663080	ALTERNATOR		11	ALTERNATOR MOUNTING
46663084	ALTERNATOR		13	ALTERNATOR MOUNTING
46694499	KIT, NDE BEARING		19	ALTERNATOR PARTS
46694500	KIT, FIELD WINDING		19	ALTERNATOR PARTS
46694501	KIT, FIELD WINDING		19	ALTERNATOR PARTS
46694502	BLOCK, TERMINAL		19	ALTERNATOR PARTS
46694503	LINKS, CONNECTOR		19	ALTERNATOR PARTS
46694504	TERMINAL, EARTH		19	ALTERNATOR PARTS
46694505	REGULATOR, VOLTAGE		19	ALTERNATOR PARTS
46694506	KIT, DIODE BRIDGE		19	ALTERNATOR PARTS
46695081	SET, O-RING		19	ALTERNATOR PARTS
46695082	WASHER, PRELOADING		19	ALTERNATOR PARTS
46695083	KIT, DIODE		19	ALTERNATOR PARTS
54415393	COVER		57	AIR INTAKE SYSTEM
54471057	ISOLATOR		11 13 47	ALTERNATOR MOUNTING ALTERNATOR MOUNTING ENGINE ASSEMBLY
54471826	AIR CLEANER ASSEMBLY		57	AIR INTAKE SYSTEM
54471834	ELEMENT, AIR CLEANER		57	AIR INTAKE SYSTEM
54479811	BODY		57	AIR INTAKE SYSTEM
54577770	ADAPTOR		153	OPTION - SUPER START PACKAGE
54629977	DECAL, ISO CENTRAL DRAI		9	DECALS AND DOCUMENTATION
54661889	AIR CLEANER ASSEMBLY		59	AIR INTAKE SYSTEM
54692967	BODY, AIR CLEANER		59	AIR INTAKE SYSTEM
54692975	COVER, AIR CLEANER		59	AIR INTAKE SYSTEM
54717145	ELEMENT, AIR FILTER		59	AIR INTAKE SYSTEM
54717152	ELEMENT, AIR FILTER		59	AIR INTAKE SYSTEM
54765383	CABLE, POSITIVE		37	BATTERY

Part Number	Denomination	WAS	Page	Subgroup
85401180	THERMOSTAT		91	THERMOSTAT AND THERMOSTAT COVER
85402451	REGULATOR, VOLTAGE		15 17	ALTERNATOR PARTS ALTERNATOR PARTS
85409008	O-RING		17	ALTERNATOR PARTS
85425593	DIODE, CRESCENT		15 17	ALTERNATOR PARTS ALTERNATOR PARTS
85425890	BEARING, NDE		15 17	ALTERNATOR PARTS ALTERNATOR PARTS
85426968	FUSE		15 17	ALTERNATOR PARTS ALTERNATOR PARTS
85470003	SCREW		81	FLYWHEEL AND FLYWHEEL HOUSING
85470052	NUT		101	OIL PUMP
85470060	NUT		75	ACTUATING VALVE
85470078	PLUG		81	FLYWHEEL AND FLYWHEEL HOUSING
85470185	SCREW		111 115 137	FUEL INJECTION PUMP PRIMARY FUEL FILTER ALTERNATOR
85470235	SCREW		93	FAN DRIVE ASSEMBLY
85470334	SCREW		89 131	WATER PUMP PULLEY ENGINE WIRING HARNESS
85470359	SCREW		93 115 117 119	FAN DRIVE ASSEMBLY PRIMARY FUEL FILTER FINAL FUEL FILTER FUEL LINES, LOW PRESSURE
85470367	SCREW		105	OIL FILLER NECK
85470375	SCREW		87 103 107	WATER PUMP INLET OIL COOLER ENGINE OIL FILTER
85470417	SCREW		85 87 105	TIMING GEAR & WATER PUMP WATER PUMP INLET OIL FILLER NECK
85470474	SCREW		91 121	THERMOSTAT AND THERMOSTAT COVER AIR INTAKE
85470581	ELBOW		129	TURBO CHARGER
85470615	O-RING		107 129	ENGINE OIL FILTER TURBO CHARGER
85470623	O-RING		87 97	WATER PUMP INLET OIL PAN
85470631	O-RING		85 133	TIMING GEAR & WATER PUMP SENSORS
85470649	O-RING		85 107	TIMING GEAR & WATER PUMP ENGINE OIL FILTER
85470895	SCREW		103	OIL COOLER
85471035	WASHER		83	FRONT PLATE
85471050	NUT		137	ALTERNATOR
85471084	SCREW		137	ALTERNATOR
85471118	SCREW		105	OIL FILLER NECK
85471134	SCREW		85 95 137	TIMING GEAR & WATER PUMP BELT TENSIONER ALTERNATOR

Part Number	Denomination	WAS	Page	Subgroup
85471175	BUSH		69	CONNECTING RODS & PISTONS
85471225	PULLEY		89	WATER PUMP PULLEY
85471233	BALANCE SHAFT RH		71	BALANCE SHAFT
85471241	BALANCE SHAFT LH		71	BALANCE SHAFT
85471761	SCREW		111	FUEL INJECTION PUMP
85471787	SCREW		127	EXHAUST ELBOW
85471811	PLUG, DRAIN		107	ENGINE OIL FILTER
85471829	NUT		119	FUEL LINES, LOW PRESSURE
85471993	GASKET		107	ENGINE OIL FILTER
85472017	GASKET		121 123	AIR INTAKE STARTING AID
85472041	STUD		83	FRONT PLATE
85472223	CLAMP		91	THERMOSTAT AND THERMOSTAT COVER
85472280	SPACER		93	FAN DRIVE ASSEMBLY
85472322	FITTING, HOSE		119	FUEL LINES, LOW PRESSURE
85472348	SCREW		69	CONNECTING RODS & PISTONS
85472355	COVER		91	THERMOSTAT AND THERMOSTAT COVER
85472454	SLEEVE		93	FAN DRIVE ASSEMBLY
85472488	PLUG		99	DIP STICK
85472496	GASKET		91	THERMOSTAT AND THERMOSTAT COVER
85472504	PACKING		105	OIL FILLER NECK
85472587	O-RING		123	STARTING AID
85472744	WASHER, SEALING		119	FUEL LINES, LOW PRESSURE
85473395	FLYWHEEL		81	FLYWHEEL AND FLYWHEEL HOUSING
85473411	ROD, CONNECTING		69	CONNECTING RODS & PISTONS
85473502	PLUG		85	TIMING GEAR & WATER PUMP
85473783	PUMP, OIL		101	OIL PUMP
85473833	PULLEY		93	FAN DRIVE ASSEMBLY
85473973	KIT, ADAPTOR		103	OIL COOLER
85473981	HEATER		123	STARTING AID
85474054	ADAPTOR		129	TURBO CHARGER
85474161	SCREW		91 135 137	THERMOSTAT AND THERMOSTAT COVER STARTER MOTOR ALTERNATOR
85474211	SCREW		93 137	FAN DRIVE ASSEMBLY ALTERNATOR
85474213	SPACER		121	AIR INTAKE
85474401	PIN, SPRING		95	BELT TENSIONER
85474427	CLAMP		127	EXHAUST ELBOW
85474484	HOSE		79	BREATHER HOSE
85474575	O-RING		119	FUEL LINES, LOW PRESSURE
85474625	WASHER		137	ALTERNATOR
85474690	O-RING		85	TIMING GEAR & WATER PUMP
85474708	KEY, SHAFT		65	CRANKSHAFT
85474716	O-RING		111	FUEL INJECTION PUMP
85474906	INSERT		85	TIMING GEAR & WATER PUMP

Part Number	Denomination	WAS	Page	Subgroup
			129	TURBO CHARGER
85474971	BOLT		97	OIL PAN
85475044	SCREW		67	CRANKSHAFT PULLEY
85475168	CRANKSHAFT		65	CRANKSHAFT
85475234	VALVE		107	ENGINE OIL FILTER
85508711	FIELD, EXCITER		15	ALTERNATOR PARTS
85508729	O-RING		15	ALTERNATOR PARTS
85509040	WASHER, WAVY		15	ALTERNATOR PARTS
85509057	WASHER, WAVY		17	ALTERNATOR PARTS
89257067	PROTECTOR		171	OPTION - BUMPERS
89287692	HINGE		5	ENCLOSURE
92050376	SCREW		153	OPTION - SUPER START PACKAGE
92096015	SCREW		5	ENCLOSURE
92101773	PLATE, RETAINER		5	ENCLOSURE
92104264	PROTECTOR		5	ENCLOSURE
92184811	SCREW		27 33 51 147	POWER PEDESTAL ELECTRICAL LAYOUT POWER PEDESTAL ELECTRICAL LAYOUT COOLING SYSTEM OPTION - DUAL FREQUENCY
92253202	CLIP, PIPE		163 165	OPTION - 3 WAY FUEL VALVE OPTION - 3 WAY FUEL VALVE
92281427	TIE, CABLE		49 53 153 157 163 165	COOLING SYSTEM FUEL SYSTEM OPTION - SUPER START PACKAGE OPTION - 24 HOUR FUEL TANK OPTION - 3 WAY FUEL VALVE OPTION - 3 WAY FUEL VALVE
92304526	NUT		27 33	POWER PEDESTAL ELECTRICAL LAYOUT POWER PEDESTAL ELECTRICAL LAYOUT
92340439	WASHER		153	OPTION - SUPER START PACKAGE
92340454	NUT		139 153	OPTION - SOCKET OPTION - SUPER START PACKAGE
92341981	WASHER		53 157	FUEL SYSTEM OPTION - 24 HOUR FUEL TANK
92398114	NUT		171	OPTION - BUMPERS
92472638	SCREW		3 57 59	FRAME ASSEMBLY AIR INTAKE SYSTEM AIR INTAKE SYSTEM
92659432	SCREW		27 33 139	POWER PEDESTAL ELECTRICAL LAYOUT POWER PEDESTAL ELECTRICAL LAYOUT OPTION - SOCKET
92687664	WASHER		47	ENGINE ASSEMBLY
92757749	CLAMP		61	EXHAUST SYSTEM
92783281	PLUG		25 27 31 33	POWER PEDESTAL ASSEMBLY POWER PEDESTAL ELECTRICAL LAYOUT POWER PEDESTAL ASSEMBLY POWER PEDESTAL ELECTRICAL LAYOUT
92789346	CLAMP		49	COOLING SYSTEM
92861640	TIE, CABLE		53	FUEL SYSTEM
92899699	SEAL		53	FUEL SYSTEM

Part Number	Denomination	WAS	Page	Subgroup
92922855	CATCH		5	ENCLOSURE
92922863	CATCH		5	ENCLOSURE
92949742	FOAM FIELD KIT (with adhesi		5	ENCLOSURE
92949759	FOAM FIELD KIT (with adhesi		5	ENCLOSURE
92949767	FOAM FIELD KIT (with adhesi		5	ENCLOSURE
92949775	FOAM FIELD KIT (with adhesi		5	ENCLOSURE
93150977	SCREW		27 33	POWER PEDESTAL ELECTRICAL LAYOUT POWER PEDESTAL ELECTRICAL LAYOUT
93171262	DECAL, LIFT/TIE POINT		9	DECALS AND DOCUMENTATION
93171288	DECAL, COOLANT FILL		49	COOLING SYSTEM
93502128	PLUG		3 165	FRAME ASSEMBLY OPTION - 3 WAY FUEL VALVE
95220604	SCREW		11 13	ALTERNATOR MOUNTING ALTERNATOR MOUNTING
95220844	CLAMP		47 153 167 169	ENGINE ASSEMBLY OPTION - SUPER START PACKAGE OPTION - OIL HAND PUMP OPTION - CONTAINER OIL SUMP PUMP
95264776	CLAMP		49 163 165	COOLING SYSTEM OPTION - 3 WAY FUEL VALVE OPTION - 3 WAY FUEL VALVE
95922902	NUT		61	EXHAUST SYSTEM
95923298	NUT		53 157	FUEL SYSTEM OPTION - 24 HOUR FUEL TANK
95923314	NUT		25 31	POWER PEDESTAL ASSEMBLY POWER PEDESTAL ASSEMBLY
95923322	NUT		167 169	OPTION - OIL HAND PUMP OPTION - CONTAINER OIL SUMP PUMP
95928230	PLUG		49	COOLING SYSTEM
95928255	PLUG		49	COOLING SYSTEM
95928800	NUT		25 31	POWER PEDESTAL ASSEMBLY POWER PEDESTAL ASSEMBLY
95930517	NUT		23	CONTROL PANEL
95932802	BUSH, REDUCING		153	OPTION - SUPER START PACKAGE
95934543	CAPSCREW		51	COOLING SYSTEM
95934998	WASHER		27 33	POWER PEDESTAL ELECTRICAL LAYOUT POWER PEDESTAL ELECTRICAL LAYOUT
95938536	SCREW		51	COOLING SYSTEM
95942520	SCREW		23	CONTROL PANEL
95942595	SCREW		25 31	POWER PEDESTAL ASSEMBLY POWER PEDESTAL ASSEMBLY
95952248	BUSH		49	COOLING SYSTEM
95953956	BUSH		167 169	OPTION - OIL HAND PUMP OPTION - CONTAINER OIL SUMP PUMP
95954152	ELBOW		153	OPTION - SUPER START PACKAGE
96701370	NUT		57 59	AIR INTAKE SYSTEM AIR INTAKE SYSTEM
96701396	WASHER		171	OPTION - BUMPERS
96701503	BOLT		13	ALTERNATOR MOUNTING

Part Number	Denomination	WAS	Page	Subgroup
96702261	SCREW		171	OPTION - BUMPERS
96702287	SCREW		27 33 149	POWER PEDESTAL ELECTRICAL LAYOUT POWER PEDESTAL ELECTRICAL LAYOUT OPTION - MULTIPLE GROUNDING SYSTEM
96703251	SCREW		139	OPTION - SOCKET
96703806	NUT		153	OPTION - SUPER START PACKAGE
96704176	NUT		25 31	POWER PEDESTAL ASSEMBLY POWER PEDESTAL ASSEMBLY
96704408	SCREW		5 47 53 57 61 151 157 163 165	ENCLOSURE ENGINE ASSEMBLY FUEL SYSTEM AIR INTAKE SYSTEM EXHAUST SYSTEM OPTION - EARTHING ROD OPTION - 24 HOUR FUEL TANK OPTION - 3 WAY FUEL VALVE OPTION - 3 WAY FUEL VALVE
96704416	NUT		3 151 163 165	FRAME ASSEMBLY OPTION - EARTHING ROD OPTION - 3 WAY FUEL VALVE OPTION - 3 WAY FUEL VALVE
96704580	NUT		33	POWER PEDESTAL ELECTRICAL LAYOUT
96705231	NUT		3	FRAME ASSEMBLY
96708037	SCREW		27 33	POWER PEDESTAL ELECTRICAL LAYOUT POWER PEDESTAL ELECTRICAL LAYOUT
96708136	SCREW		27 33 149	POWER PEDESTAL ELECTRICAL LAYOUT POWER PEDESTAL ELECTRICAL LAYOUT OPTION - MULTIPLE GROUNDING SYSTEM
96711825	WASHER		11 13	ALTERNATOR MOUNTING ALTERNATOR MOUNTING
96721154	SCREW		47	ENGINE ASSEMBLY
96728274	NUT		37	BATTERY
96728555	NUT		11	ALTERNATOR MOUNTING
96734272	WASHER		11	ALTERNATOR MOUNTING
96739313	SCREW		5	ENCLOSURE
96742689	SCREW		5 25 31 49 145	ENCLOSURE POWER PEDESTAL ASSEMBLY POWER PEDESTAL ASSEMBLY COOLING SYSTEM OPTION - NO SOCKETS
96745229	WASHER		27 33	POWER PEDESTAL ELECTRICAL LAYOUT POWER PEDESTAL ELECTRICAL LAYOUT
96747142	SCREW		3	FRAME ASSEMBLY
96747282	SCREW		11	ALTERNATOR MOUNTING
96750575	SCREW		27	POWER PEDESTAL ELECTRICAL LAYOUT
MISSING	CONNECTOR		131	ENGINE WIRING HARNESS



Portable Power



Portable Power