

 


 
Portable Power

G30-SIIIA

PARTS MANUAL

G30 SERIAL No : G03030001 ->

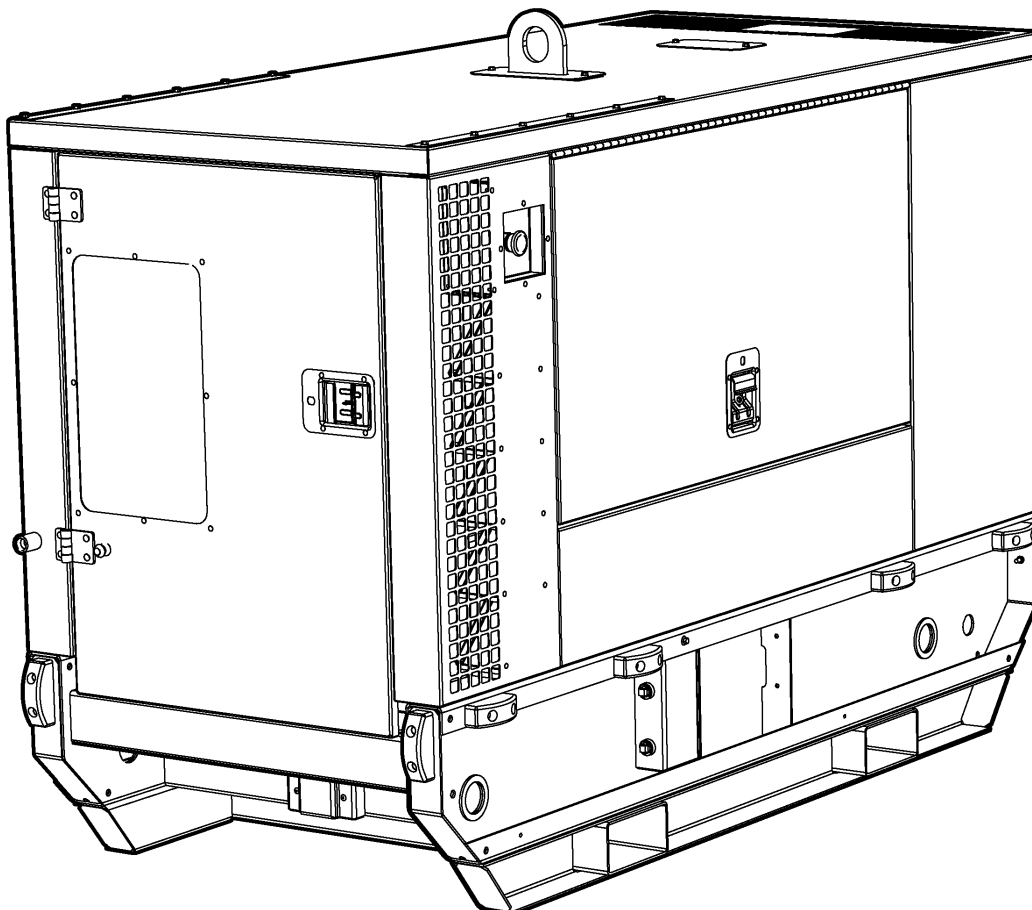

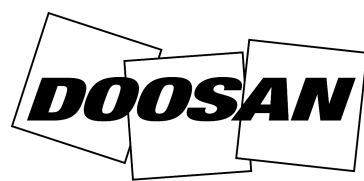

Portable Power

CONTENTS

MAIN FRAME

MAIN FRAME	3
ENCLOSURE	5
FORKLIFT SKID	9
DECALS AND DOCUMENTATION	11
DECALS AND DOCUMENTATION	13

ELECTRICAL SYSTEM

ALTERNATOR MOUNTING	15
ALTERNATOR PARTS	17
BATTERY MOUNTING	19
CONTROL PANEL - (digital)	21
CONTROL PANEL - (DSE)	23
RELAY MOUNTING	25
POWER PEDESTAL ASSEMBLY	27
POWER PEDESTAL ASSEMBLY	29
POWER PEDESTAL ASSEMBLY	31
POWER PEDESTAL COVERS - (TNS-300mA)	35
POWER PEDESTAL COVERS - (TNS-30mA)	37
POWER PEDESTAL COVERS - (TNS-adjustable)	39

POWER UNIT

ENGINE ASSEMBLY	41
ENGINE ASSEMBLY	43
AIR INTAKE	45
EXHAUST SYSTEM	47
COOLING SYSTEM	49
FUEL SYSTEM	51
ROCKER COVER	55
DIPSTICK	57
OIL FILTER ASSEMBLY	59
FUEL INJECTION PUMP	61
GEAR SENSOR	63
INJECTION VALVE	65
FUEL FILTER	67
FUEL/WATER SEPARATOR	69
FUEL FEED PUMP	71
STARTER MOTOR	73
ALTERNATOR	75
GASKET SET	77
BELT TRANSMISSION	79
THERMOSTAT	81
WATER PUMP	83

ACCESSORIES & OPTIONS

OPTION - FRAME PROTECTION	85
OPTION - OIL SUMP PUMP	87
OPTION - SUPER START PACKAGE	89
OPTION - 3 WAY FUEL VALVE	93
OPTION - NO CONTAINMENT DRAIN PLUG	95


OPTION - NO SOCKETS	97
OPTION - SOCKETS - (CE)	99
OPTION - DUAL FREQUENCY - (digital control panel only)	101
OPTION - EARTHING ROD	103

MAINTENANCE ITEMS

MAINTENANCE KIT - (250 hours)	105
MAINTENANCE KIT - (500 hours)	107
RECOMMENDED SPARES - (maintenance and repair items)	109
RECOMMENDED SPARES - (extended downtime prevention)	111

G30-SIIIA_46696923-B_07-17

 MAIN FRAME

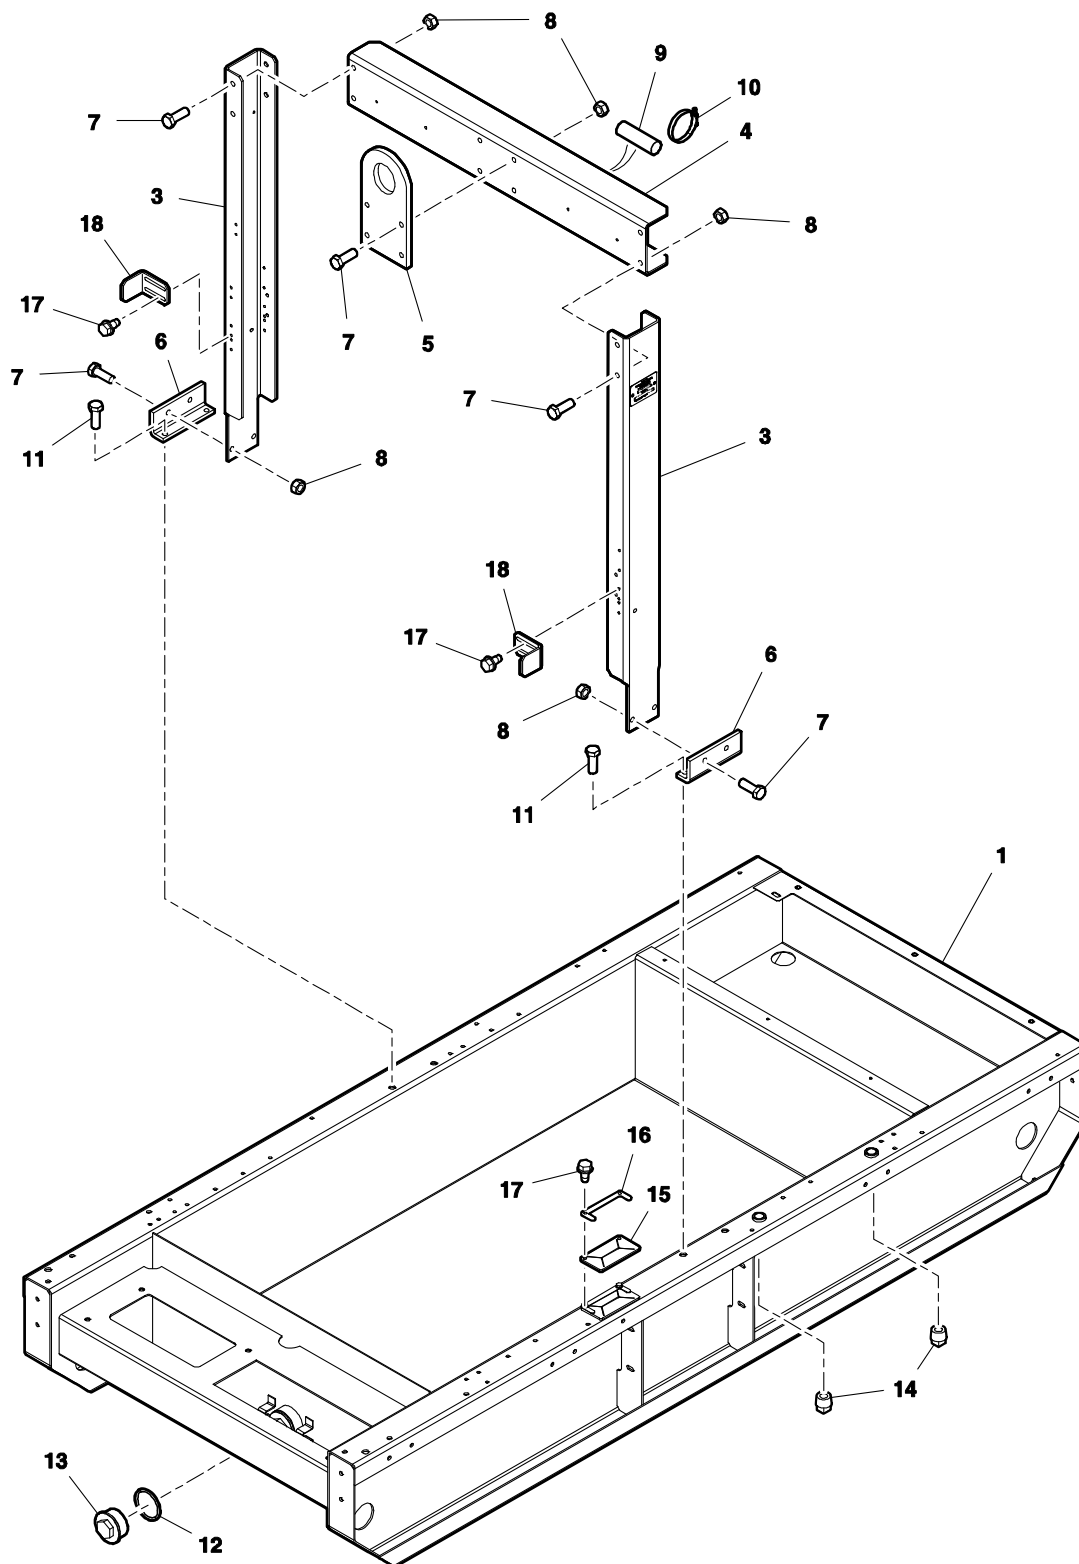


T6880_01
06/17

MAIN FRAME

[illegible]

 ENCLOSURE

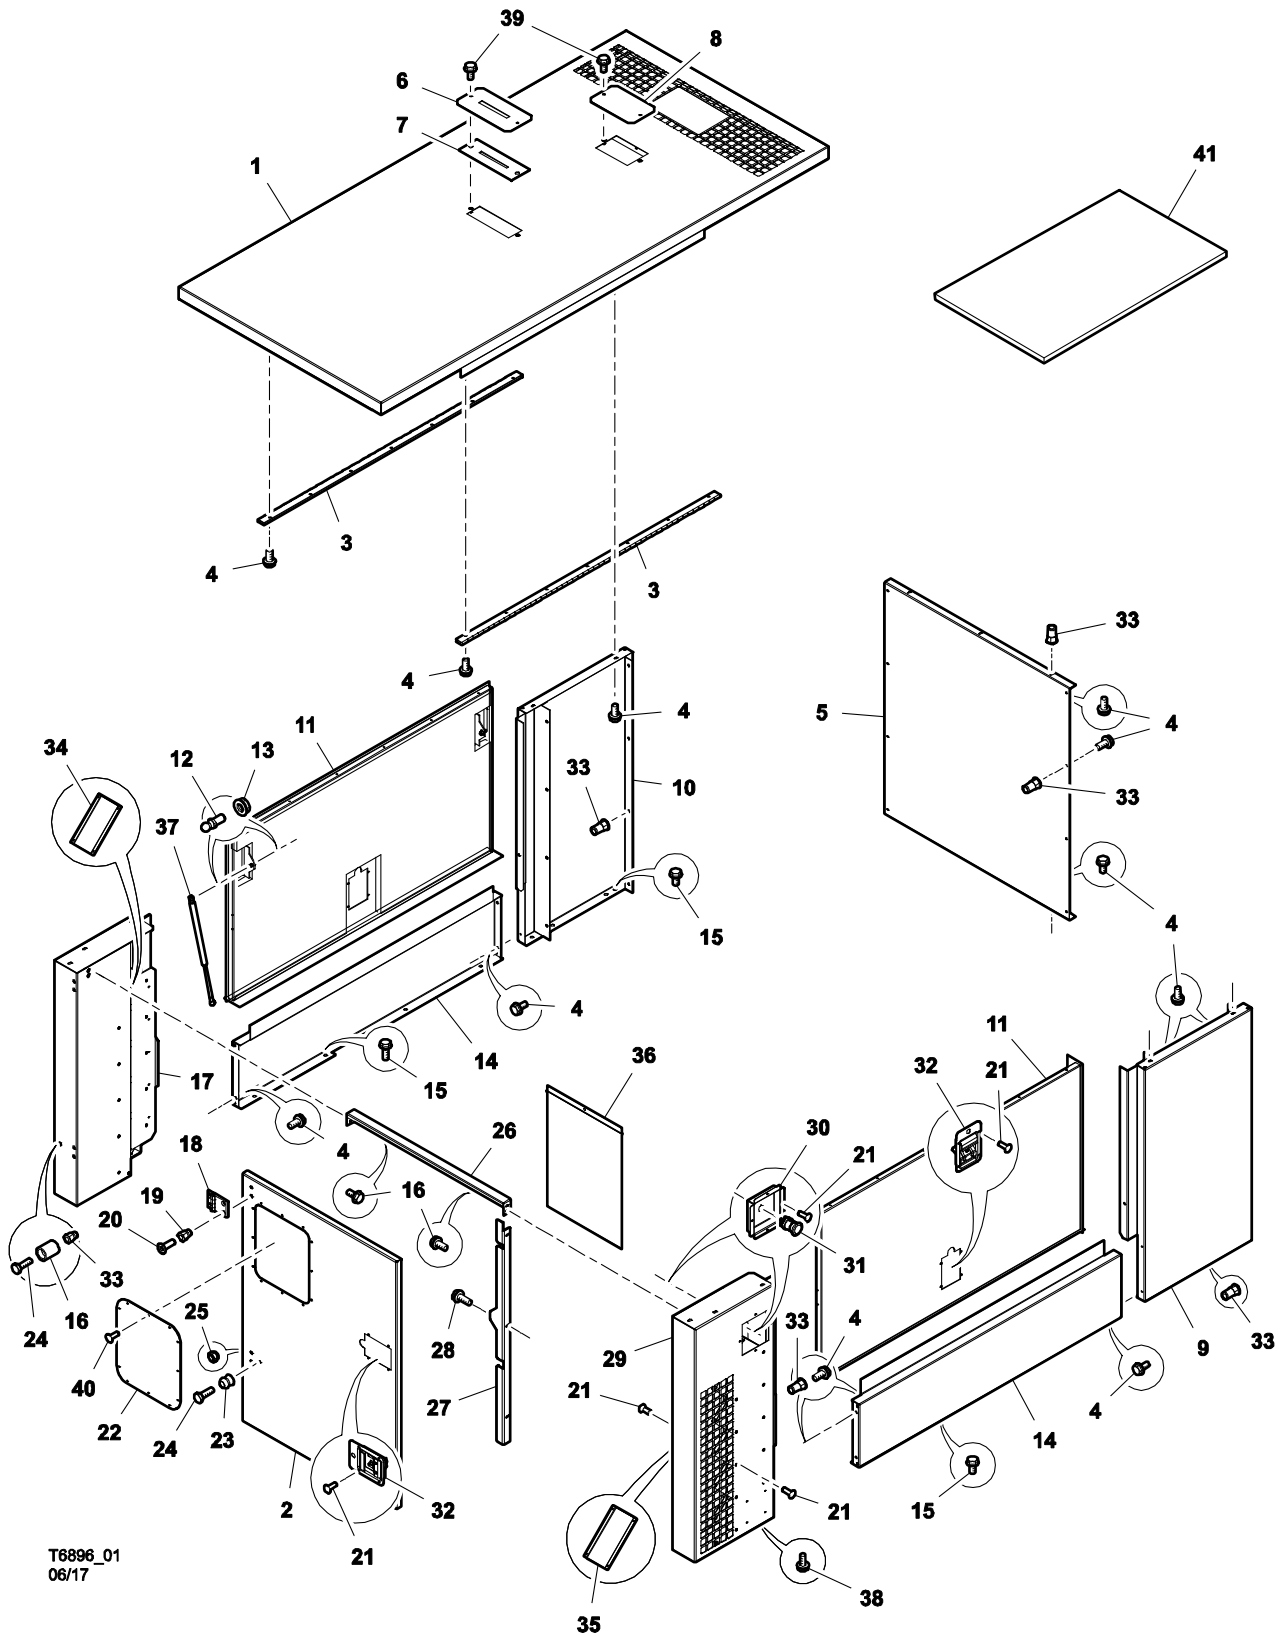


T6896_01
06/17

ENCLOSURE

Item	Part Number	Description	Remarks	Serial Number	Qty
1	46693024	PANEL, ROOF			1
2	46693035	DOOR ASSEMBLY			1
2	46695985	DOOR			1
3	22321111	HINGE			2
4	36797652	SCREW			20
5	22470322	PANEL			1
6	22682488	COVER			1
7	22896666	SEAL, COVER			1
8	22312409	COVER			1
9	22901334	PANEL			1
10	22901326	PANEL			1
11	46693036	DOOR ASSEMBLY			2
11	46693037	DOOR			2
12	35337328	STUD, BALL			8
13	36881886	NUT			8
14	46699276	PANEL			2
15	22959936	SCREW			12
16	92922855	CATCH			1
17	46693032	PANEL ASSEMBLY	W/Ref. 34		1
18	46556610	HINGE			2
19	46553373	NUT, RIVET			14
20	46561404	SCREW			8
21	22684971	RIVET			54
22	46697901	PLEXIGLASS			1
23	92922863	CATCH			1
24	96701461	SCREW			2
25	96703806	NUT			1
26	22630461	SUPPORT			1
27	46695746	SUPPORT			1
28	96742689	SCREW			17
29	46693033	PANEL ASSEMBLY	W/Ref. 35		1

 ENCLOSURE (CONT'D)

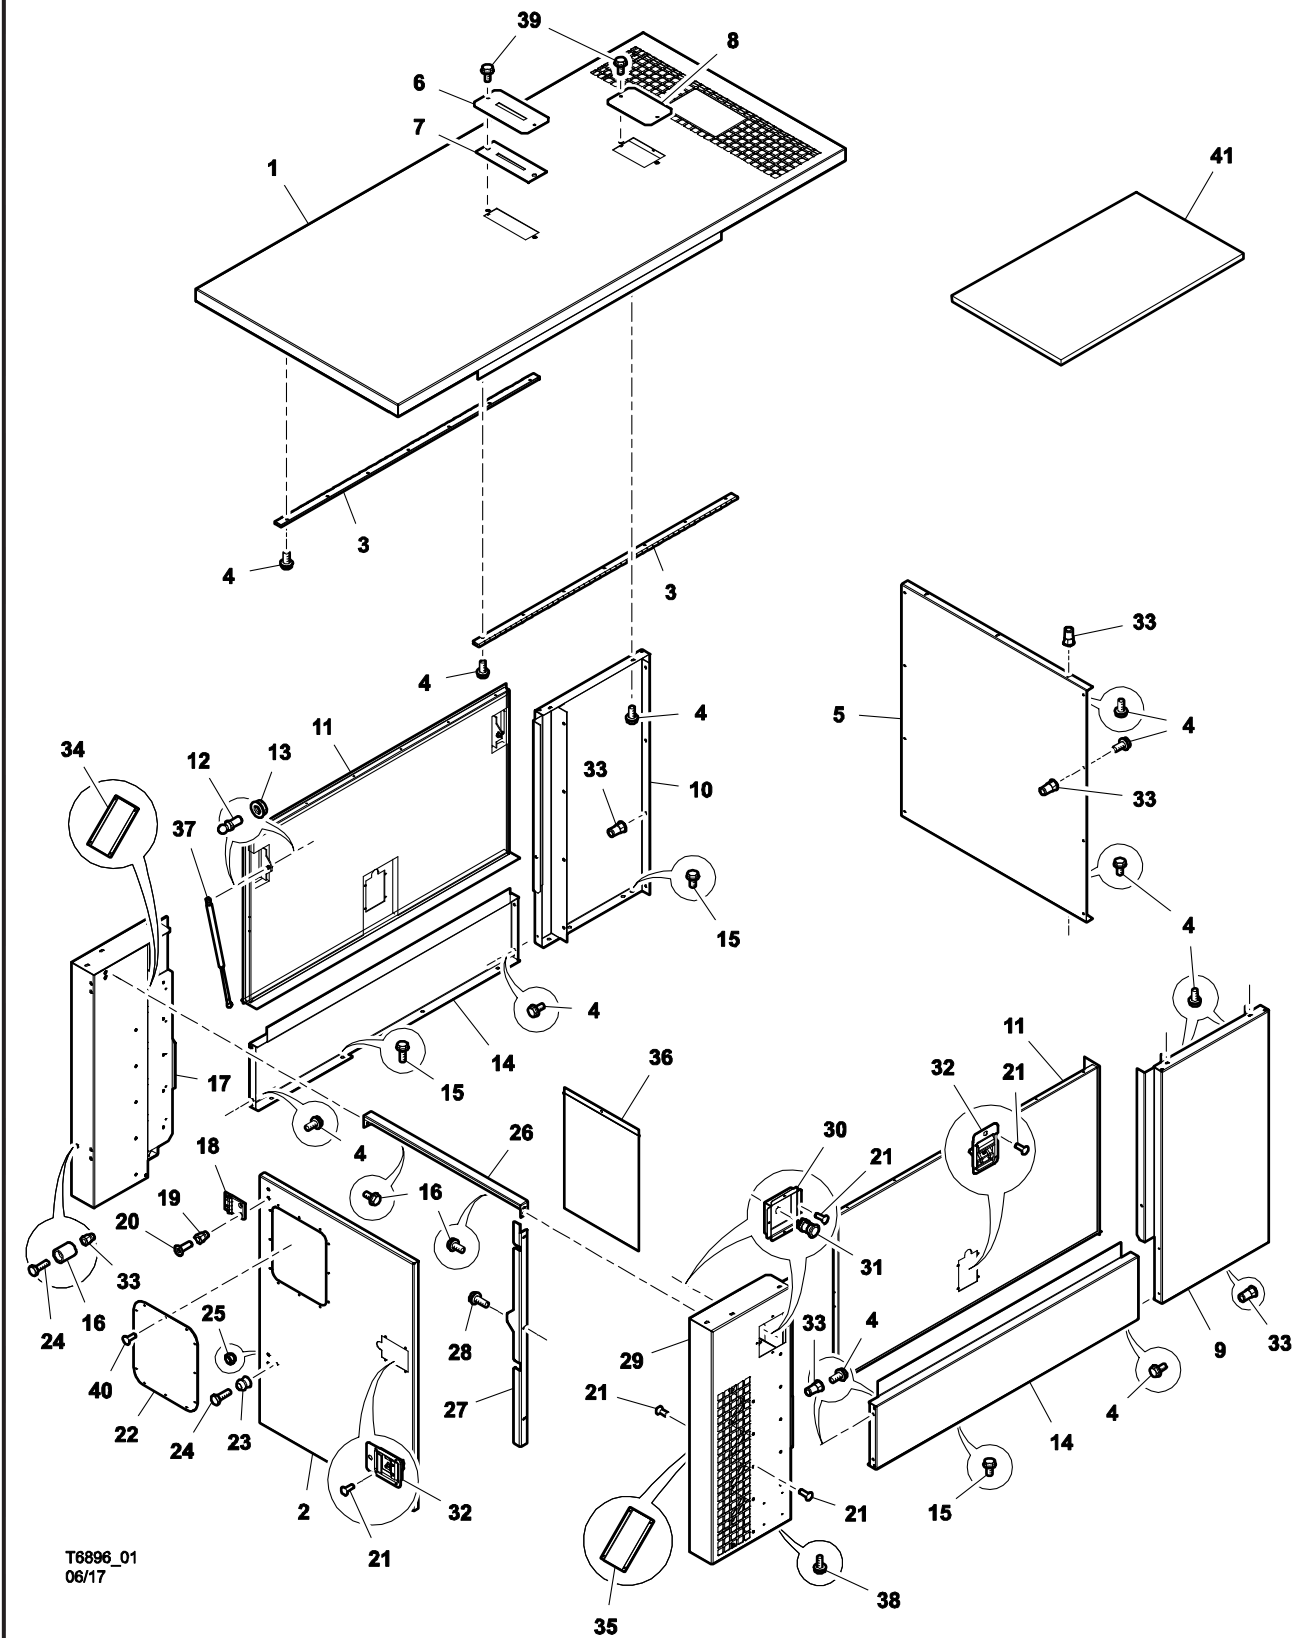


T6896_01
06/17

ENCLOSURE (CONT'D)

[illegible]

 FORKLIFT SKID



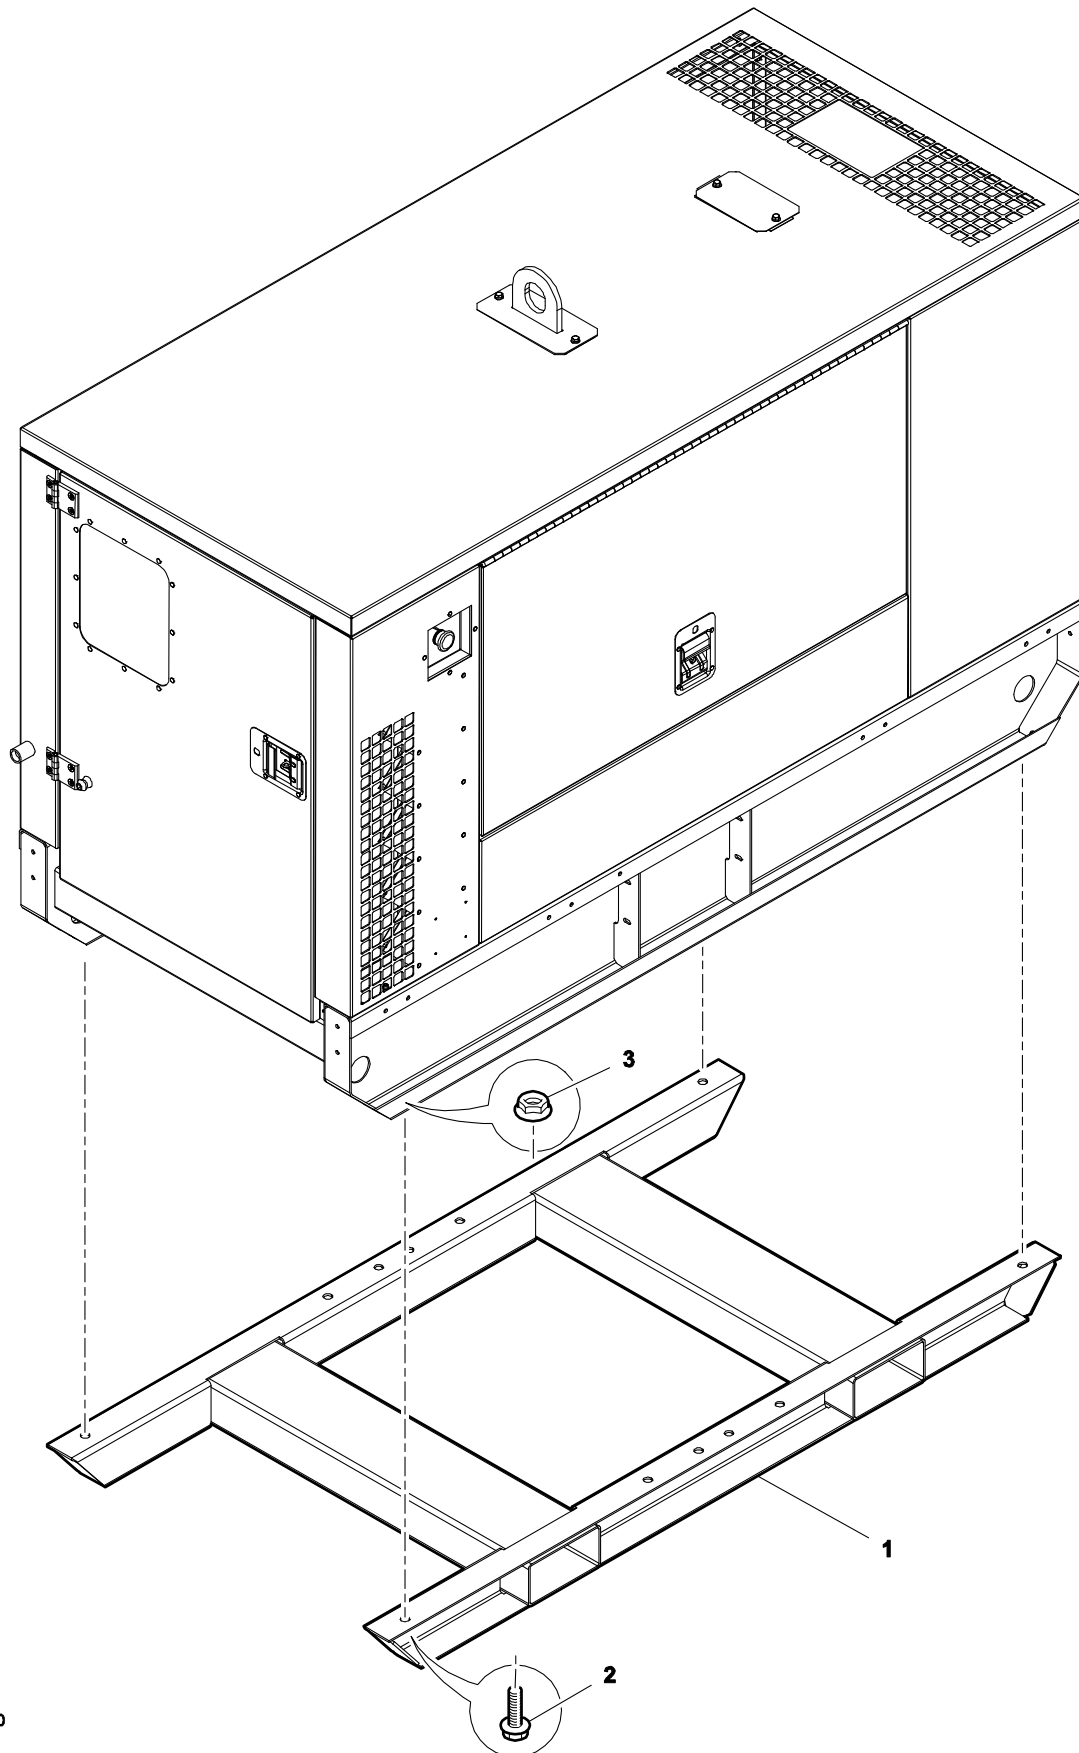


T6901_00
11/16

FORKLIFT SKID	
--	--


[illegible]

   DECALS AND DOCUMENTATION

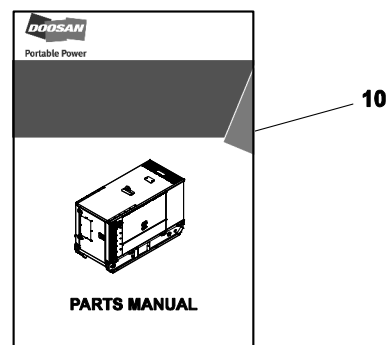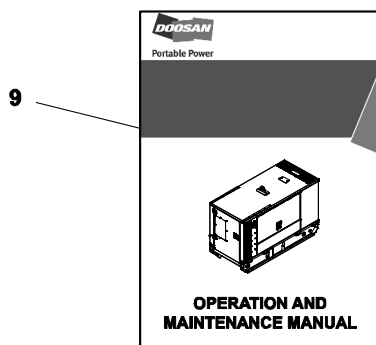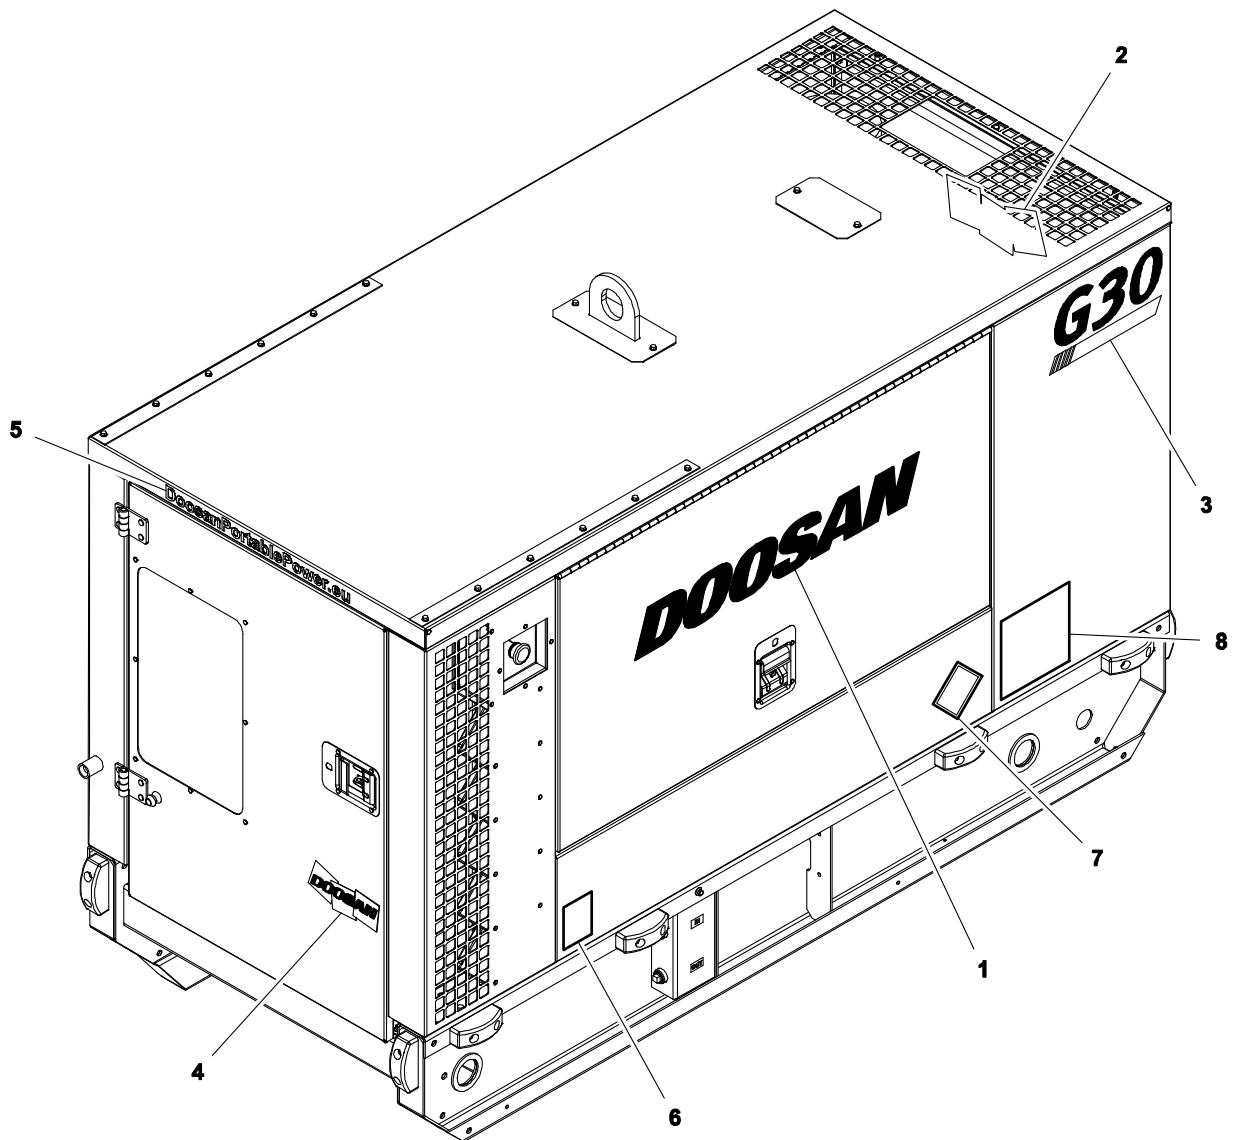

[illegible]

 
DECALS AND DOCUMENTATION

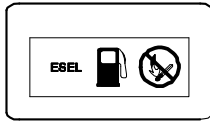


1



 2

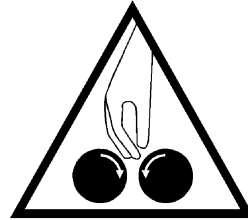

3

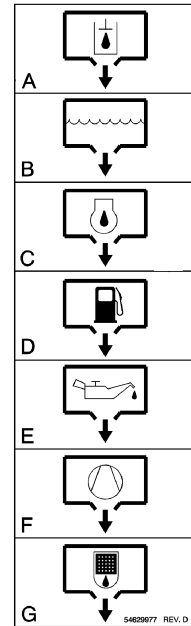 

7

 
DI



4



5

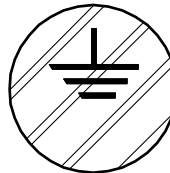


6




8



 9

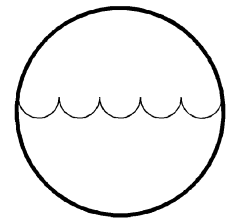


10

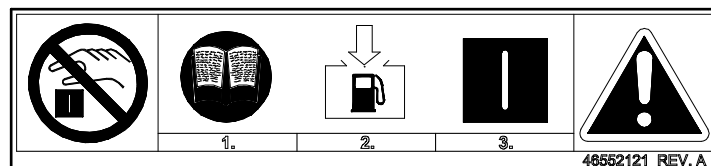 

11

[illegible]

 ALTERNATOR MOUNTING

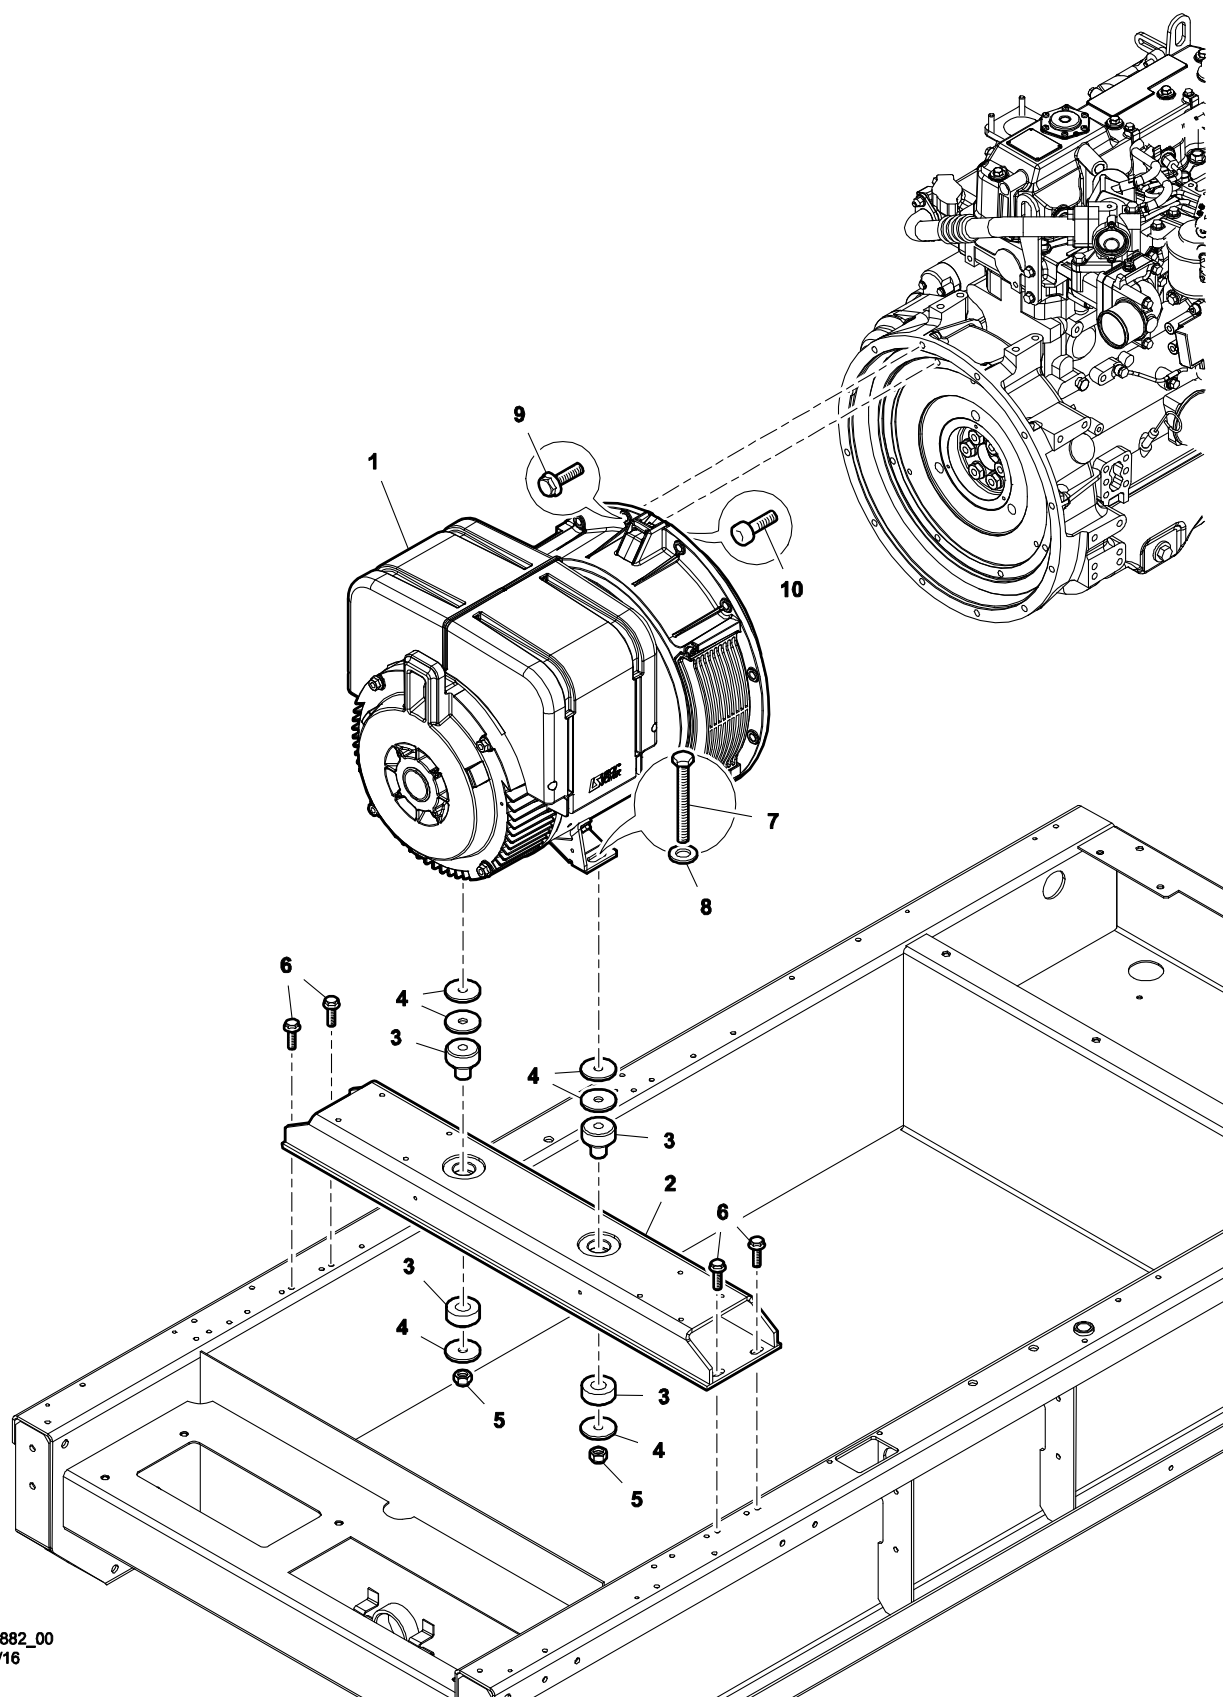


T6882_00
11/16

ALTERNATOR MOUNTING

[illegible]

 ALTERNATOR PARTS

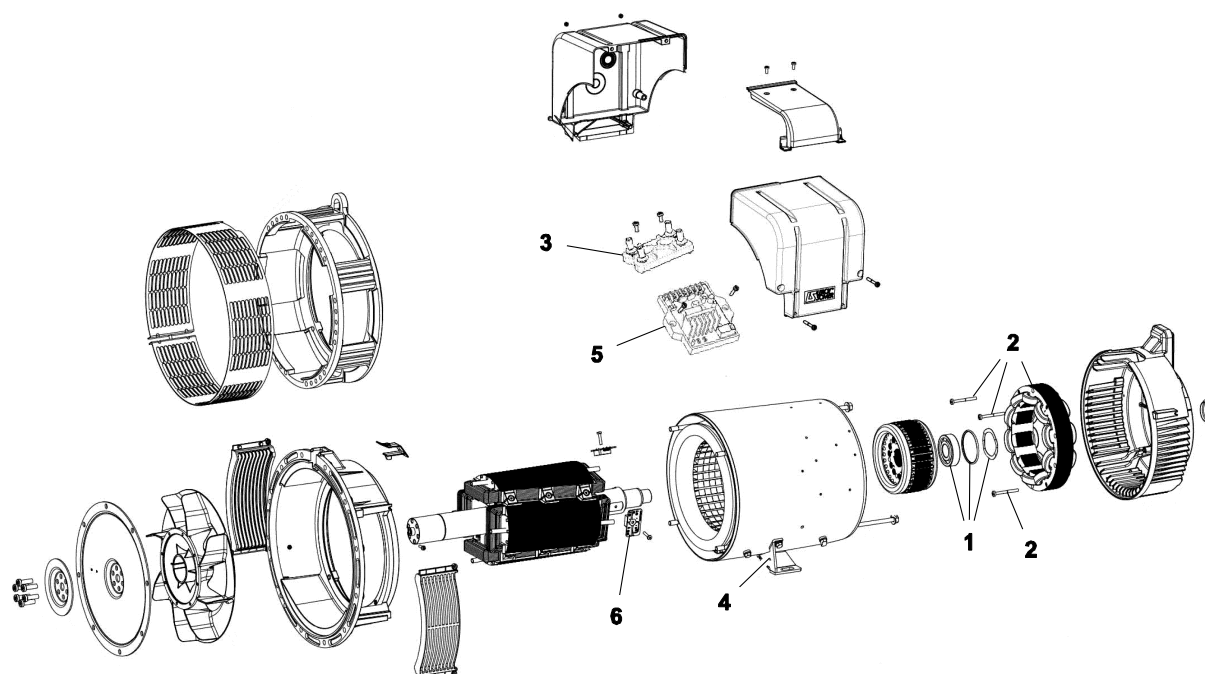


T6927_00
03/17

ALTERNATOR PARTS	
1	ALTERNATOR
2	DIODE RECTIFIER
3	DIODE RECTIFIER
4	DIODE RECTIFIER
5	DIODE RECTIFIER
6	DIODE RECTIFIER
7	DIODE RECTIFIER
8	DIODE RECTIFIER
9	DIODE RECTIFIER
10	DIODE RECTIFIER
11	DIODE RECTIFIER
12	DIODE RECTIFIER
13	DIODE RECTIFIER
14	DIODE RECTIFIER
15	DIODE RECTIFIER
16	DIODE RECTIFIER
17	DIODE RECTIFIER
18	DIODE RECTIFIER
19	DIODE RECTIFIER
20	DIODE RECTIFIER
21	DIODE RECTIFIER
22	DIODE RECTIFIER
23	DIODE RECTIFIER
24	DIODE RECTIFIER
25	DIODE RECTIFIER
26	DIODE RECTIFIER
27	DIODE RECTIFIER
28	DIODE RECTIFIER
29	DIODE RECTIFIER
30	DIODE RECTIFIER
31	DIODE RECTIFIER
32	DIODE RECTIFIER
33	DIODE RECTIFIER
34	DIODE RECTIFIER
35	DIODE RECTIFIER
36	DIODE RECTIFIER
37	DIODE RECTIFIER
38	DIODE RECTIFIER
39	DIODE RECTIFIER
40	DIODE RECTIFIER
41	DIODE RECTIFIER
42	DIODE RECTIFIER
43	DIODE RECTIFIER
44	DIODE RECTIFIER
45	DIODE RECTIFIER
46	DIODE RECTIFIER
47	DIODE RECTIFIER
48	DIODE RECTIFIER
49	DIODE RECTIFIER
50	DIODE RECTIFIER
51	DIODE RECTIFIER
52	DIODE RECTIFIER
53	DIODE RECTIFIER
54	DIODE RECTIFIER
55	DIODE RECTIFIER
56	DIODE RECTIFIER
57	DIODE RECTIFIER
58	DIODE RECTIFIER
59	DIODE RECTIFIER
60	DIODE RECTIFIER
61	DIODE RECTIFIER
62	DIODE RECTIFIER
63	DIODE RECTIFIER
64	DIODE RECTIFIER
65	DIODE RECTIFIER
66	DIODE RECTIFIER
67	DIODE RECTIFIER
68	DIODE RECTIFIER
69	DIODE RECTIFIER
70	DIODE RECTIFIER
71	DIODE RECTIFIER
72	DIODE RECTIFIER
73	DIODE RECTIFIER
74	DIODE RECTIFIER
75	DIODE RECTIFIER
76	DIODE RECTIFIER
77	DIODE RECTIFIER
78	DIODE RECTIFIER
79	DIODE RECTIFIER
80	DIODE RECTIFIER
81	DIODE RECTIFIER
82	DIODE RECTIFIER
83	DIODE RECTIFIER
84	DIODE RECTIFIER
85	DIODE RECTIFIER
86	DIODE RECTIFIER
87	DIODE RECTIFIER
88	DIODE RECTIFIER
89	DIODE RECTIFIER
90	DIODE RECTIFIER
91	DIODE RECTIFIER
92	DIODE RECTIFIER
93	DIODE RECTIFIER
94	DIODE RECTIFIER
95	DIODE RECTIFIER
96	DIODE RECTIFIER
97	DIODE RECTIFIER
98	DIODE RECTIFIER
99	DIODE RECTIFIER
100	DIODE RECTIFIER

[illegible]

 BATTERY MOUNTING

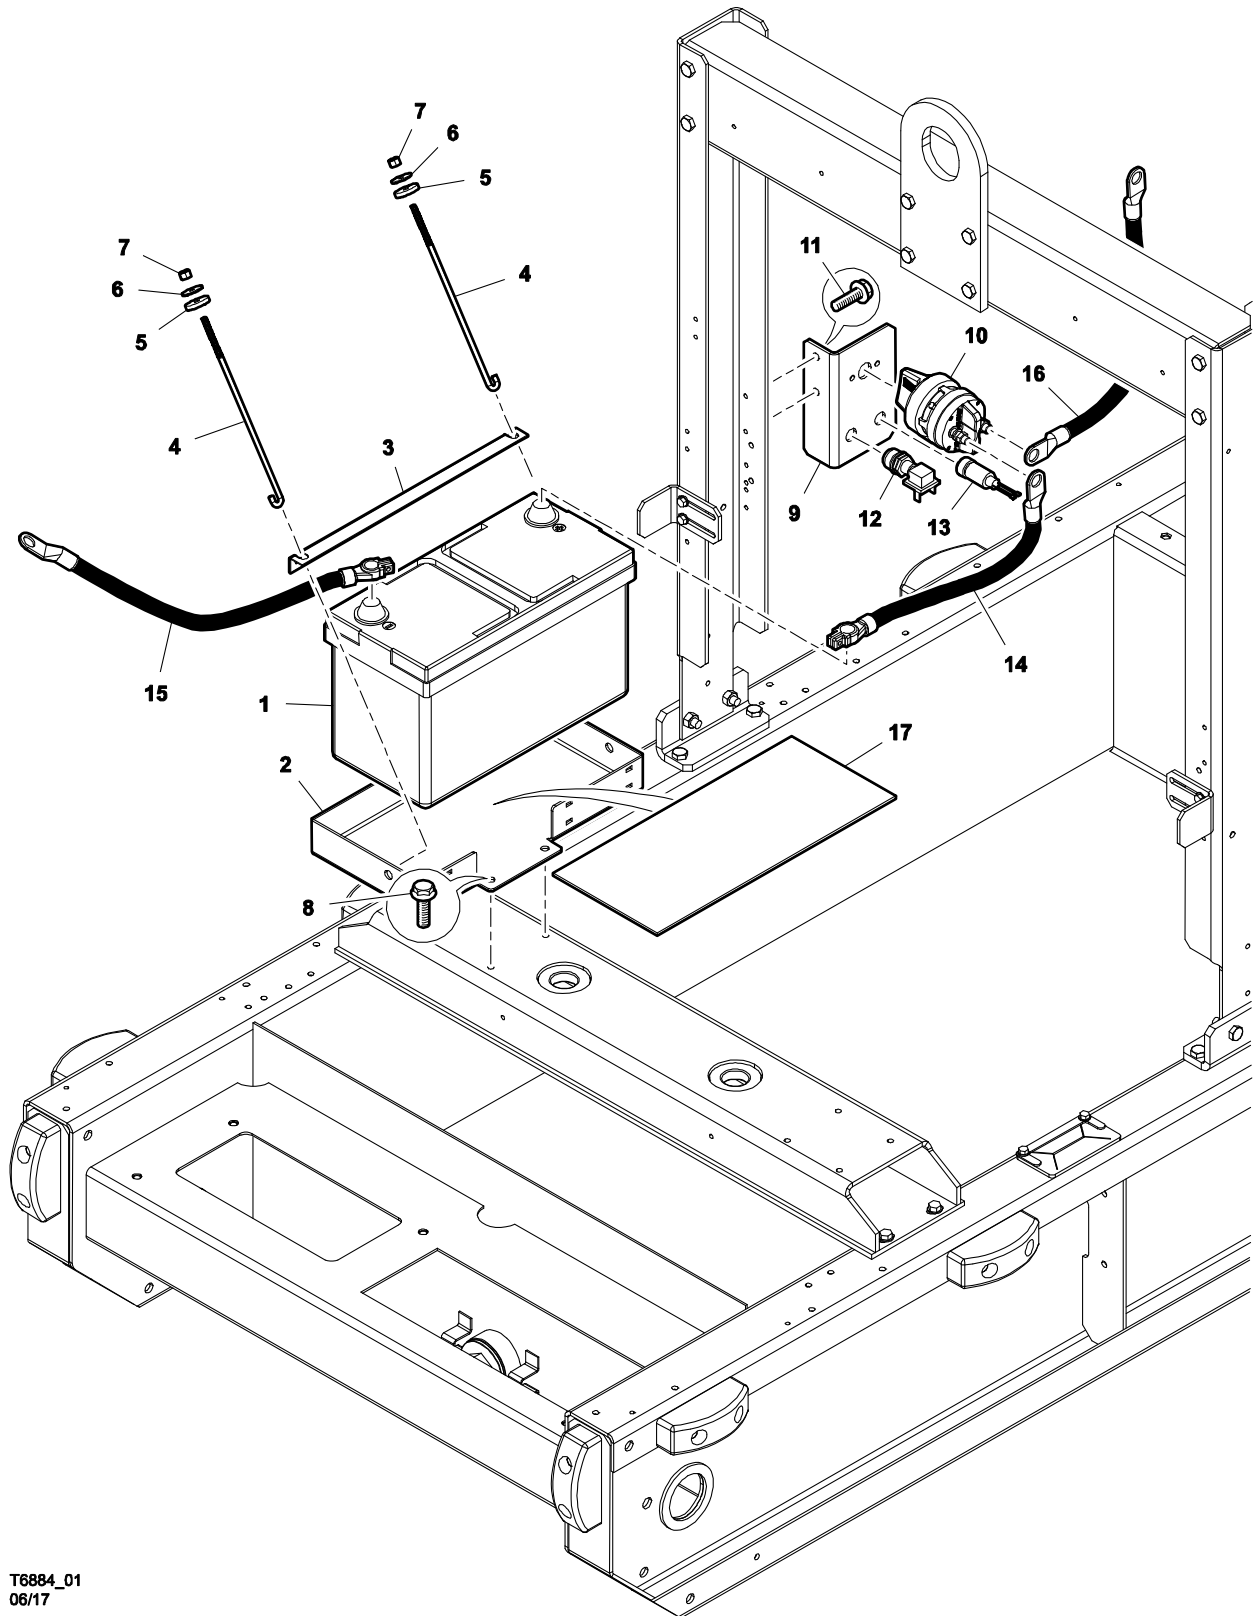


T6884_01
06/17

BATTERY MOUNTING

[illegible]

 CONTROL PANEL (digital)

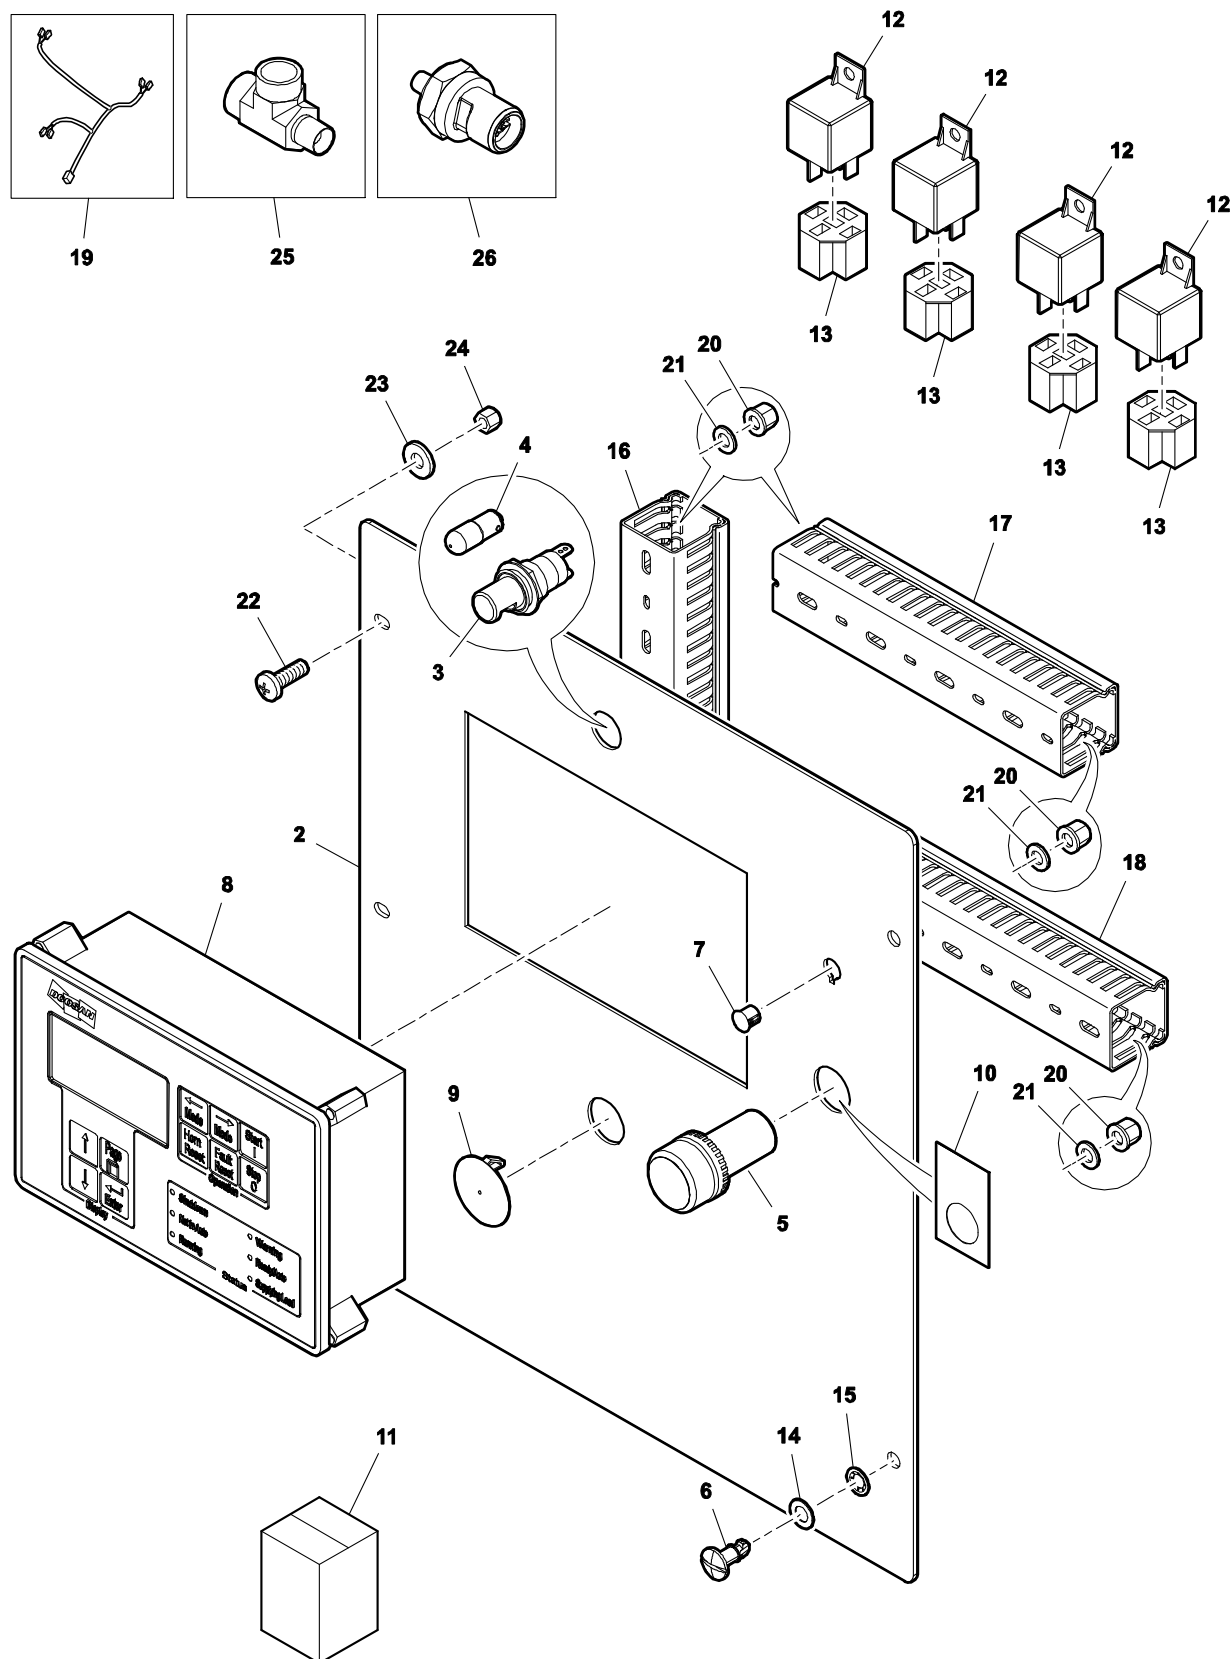


T6886_00
11/16

CONTROL PANEL (digital)

Item	Part Number	Description	Remarks	Serial Number	Qty
1	46696886	PANEL, CONTROL ASSEMBLY	W/Ref. 2-21		1
2	46697924	PANEL			1
3	36852622	LAMP ASSEMBLY			1
4	22503825	BULB, LAMP			1
5	23149438	SWITCH			1
6	22465165	STUD			2
7	46574759	PLUG			1
8	23103468	CONTROLLER			1
9	23339609	PLUG, BLANKING			1
10	23150030	DECAL			1
11	46622288	SPEC, SETTING FILE			1
12	46622121	RELAY			4
13	46541017	BASE, RELAY			4
14	22499487	WASHER			2
15	22499495	RETAINER			2
16	46697679	MANAGER	0,15 m long		1
17	46697679	MANAGER	0,21 m long		1
18	46697679	MANAGER	0,25 m long		1
19	46696891	HARNESS			1
20	46699178	NUT			6
21	92304583	WASHER			6
22	96703251	SCREW			3
23	95935029	WASHER			3
24	96704580	NUT			3
25	39127287	TEE			1
26	54496773	TRANSDUCER, PRESSURE	(0-225 psi)		1

 CONTROL PANEL (DSE)









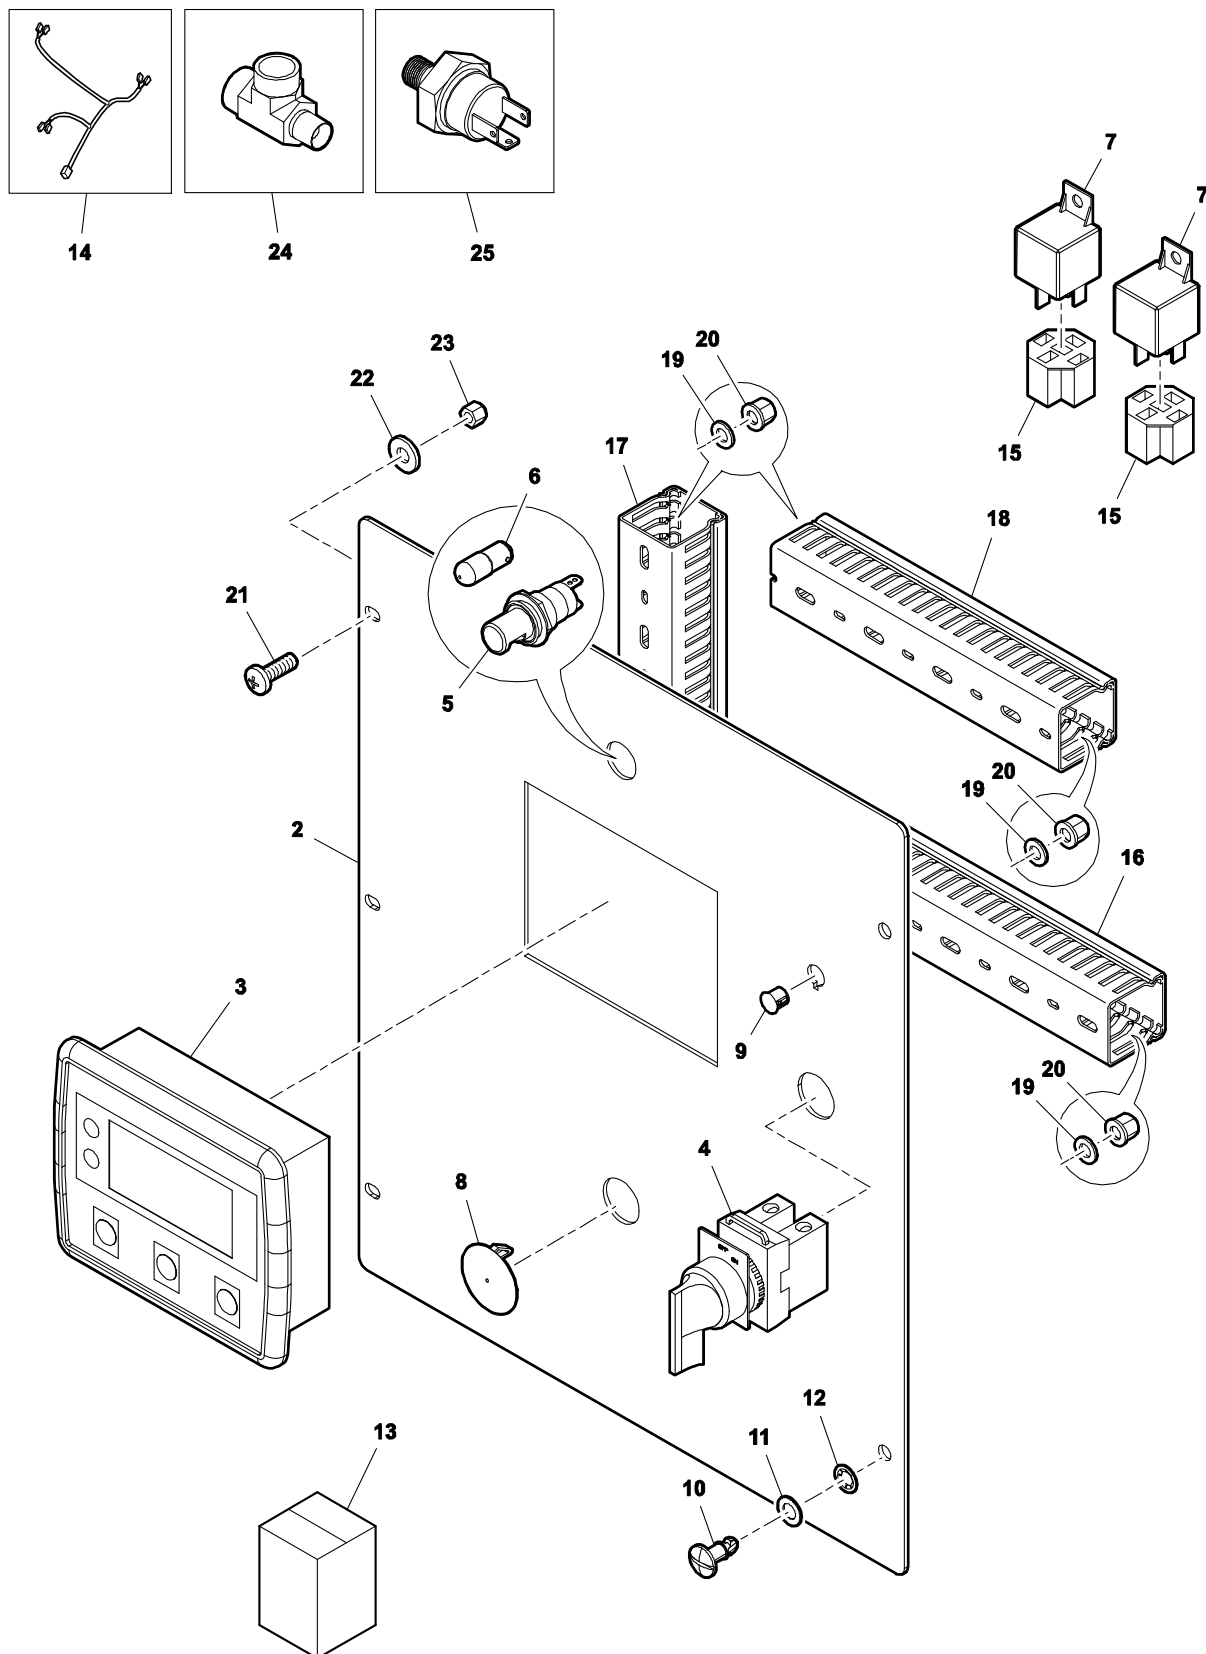


T6879_00
07/17

CONTROL PANEL (DSE)

Item	Part Number	Description	Remarks	Serial Number	Qty
1	46702035	CONTROL PANEL ASSEMBLY	W/Ref. 2-20		1
2	46702036	PANEL			1
3	46702038	CONTROLLER			1
4	46551568	SWITCH			1
5	36852622	LAMP ASSEMBLY			1
6	22503825	BULB, LAMP			1
7	46622121	RELAY			2
8	23339609	PLUG, BLANKING			1
9	46574759	PLUG			1
10	22465165	STUD			2
11	22499487	WASHER			2
12	22499495	RETAINER			2
13	46687796	SPEC, SETTING FILE			1
14	46702168	HARNESS			1
15	46541017	BASE, RELAY			2
16	46697679	MANAGER	(0,25 m long)		1
17	46697679	MANAGER	(0,21 m long)		1
18	46697679	MANAGER	(0,14 m long)		1
19	92304583	WASHER			6
20	46699178	NUT			6
21	96703251	SCREW			3
22	95935029	WASHER			3
23	96704580	NUT			3
24	39127287	TEE			1
25	54757935	SWITCH, OIL PRESSURE			1

         RELAY MOUNTING

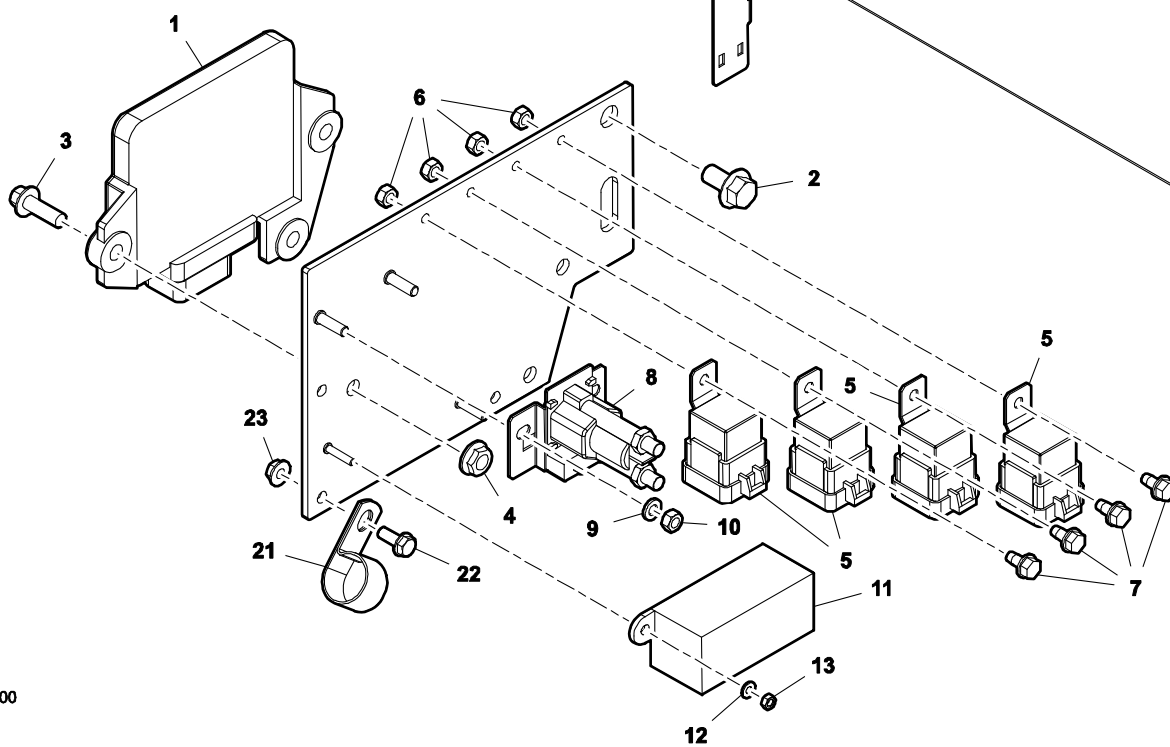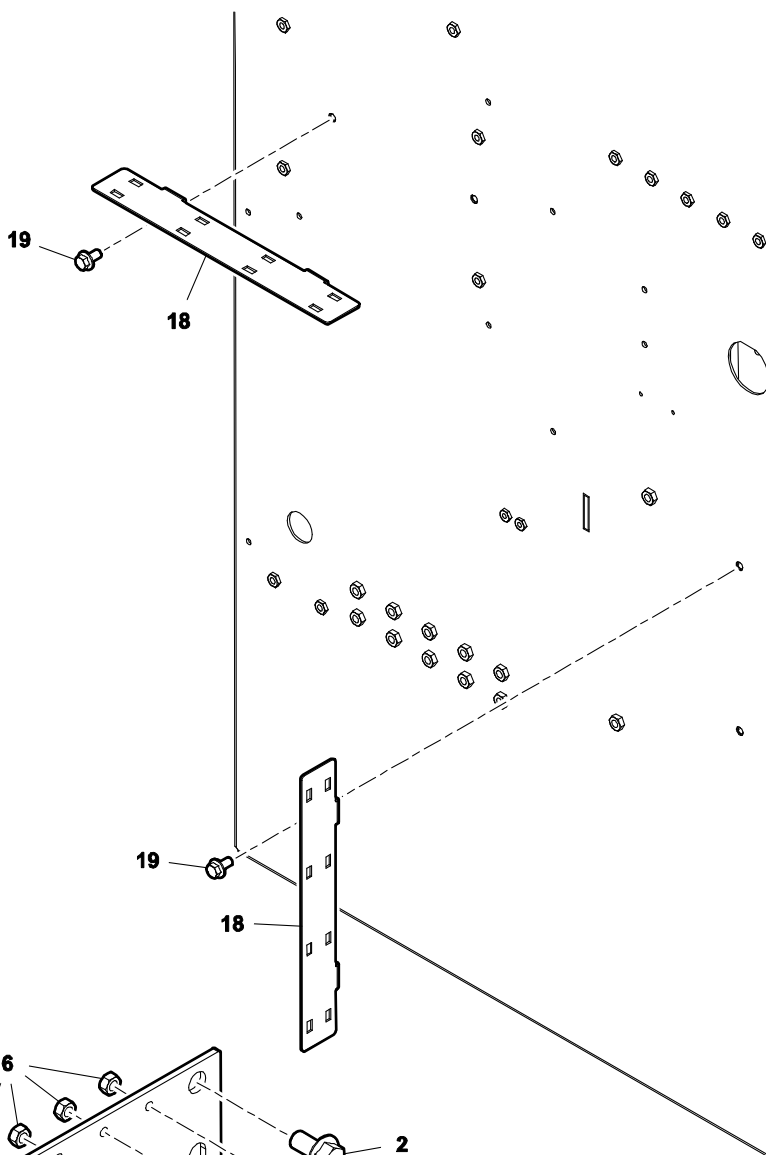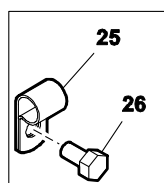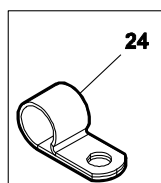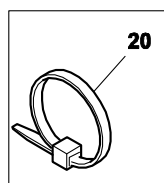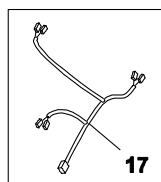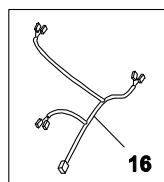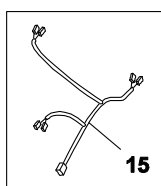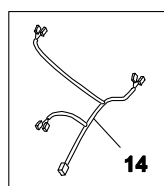


T6929_00
04/17

RELAY MOUNTING

Item	Part Number	Description	Remarks	Serial Number	Qty
1	46695847	BRACKET			1
2	96737549	SCREW			3
3	36889608	SCREW	(M8-1.25 x 25)		3
4	92398114	NUT	(M8)		3
5	36878361	RELAY, WEATHERPROOF	(12 V)		4
6	46541223	NUT			4
7	36797652	SCREW			4
8	36856250	RELAY			1
9	92341981	WASHER			2
10	96703806	NUT			2
11	46561862	HOLDER, FUSE			1
12	92340439	WASHER			2
13	92340454	NUT			2
14	46571979	HARNESS, WIRING	(engine intake heater)		1
15	46695870	HARNESS, WIRING			1
16	46695730	HARNESS, WIRING	(digital control panel)		1
16	46702167	HARNESS, WIRING	(DSE control panel)		1
17	46655242	HARNESS, ASSEMBLY			1
18	46695838	SUPPORT, HARNESS			2
19	96750575	SCREW			4
20	92281427	TIE, CABLE			13
21	35114081	CLAMP			1
22	92096015	SCREW			1
23	96704176	NUT			1
24	35225085	CLAMP			2
25	35222538	CLIP, RETAINING			1
26	96701479	SCREW			1

 
POWER PEDESTAL ASSEMBLY

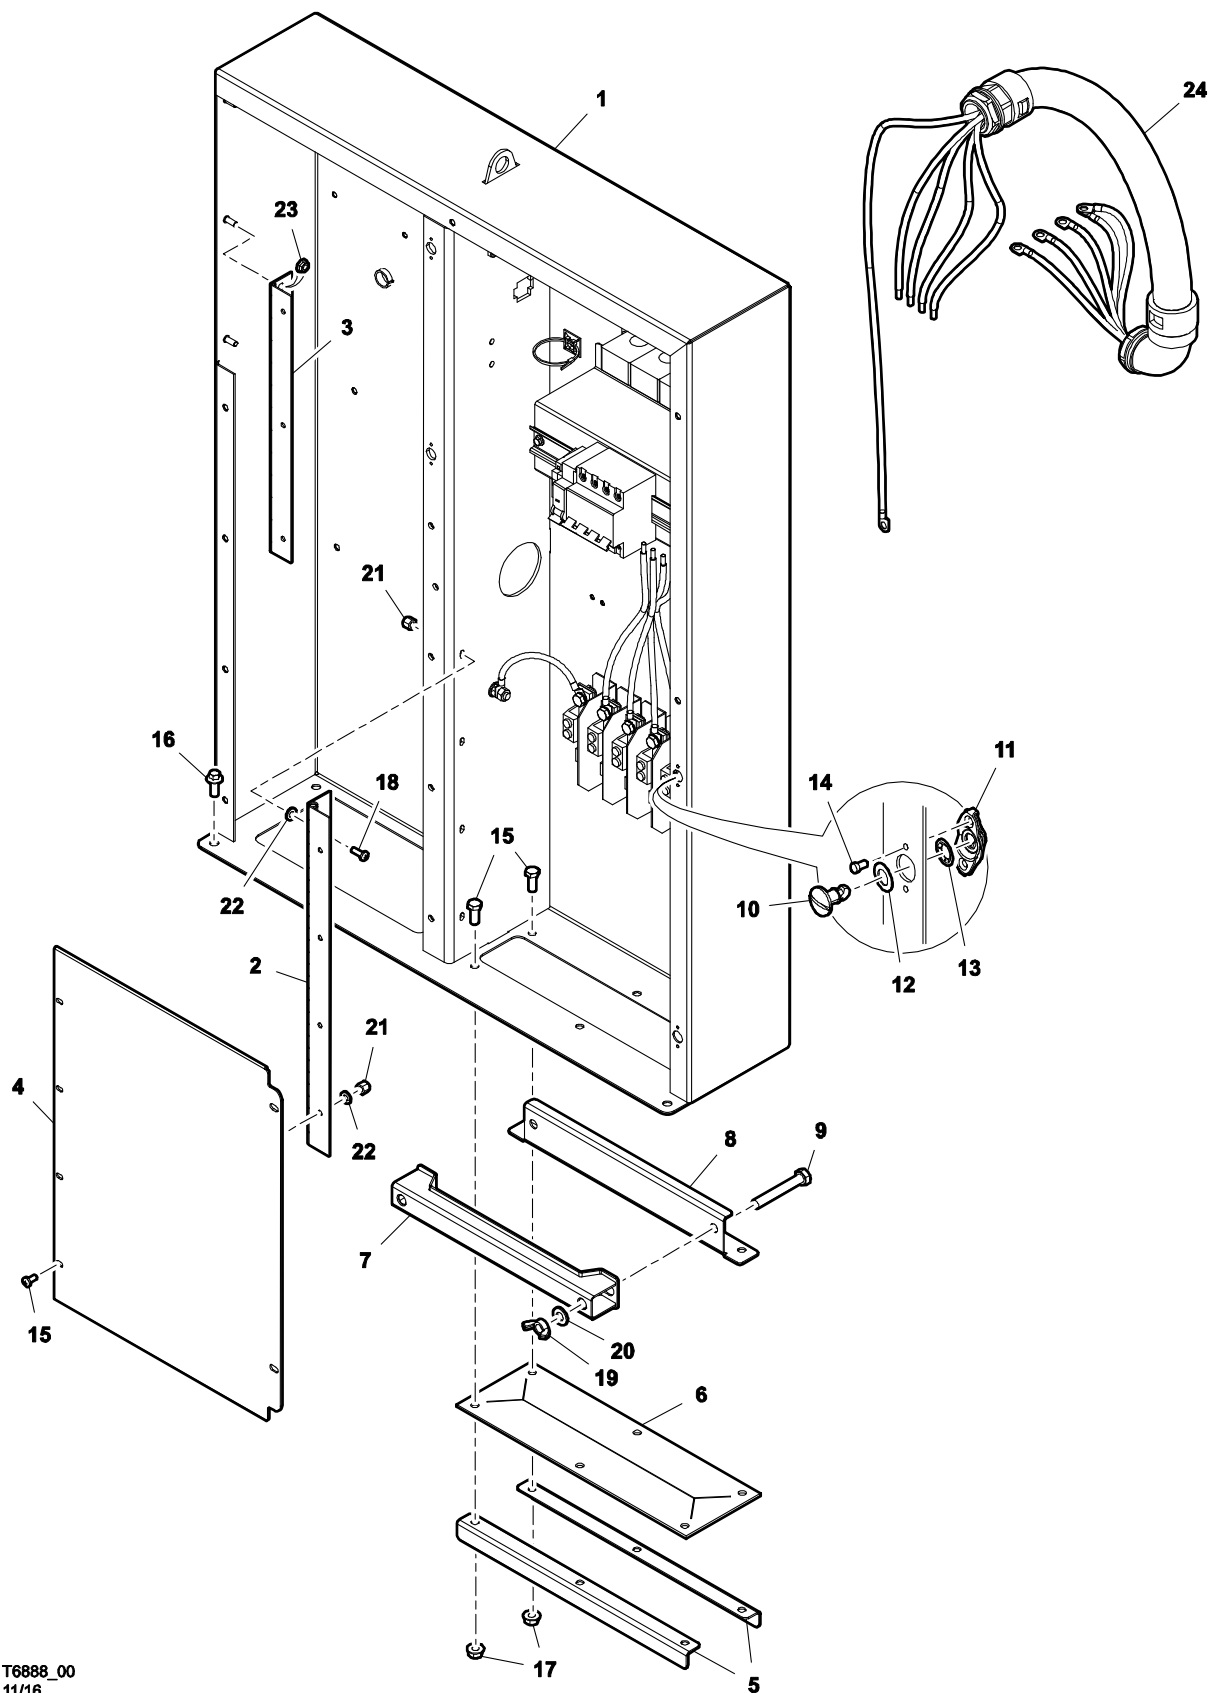

T6888_00
11/16

[illegible]

 POWER PEDESTAL ASSEMBLY

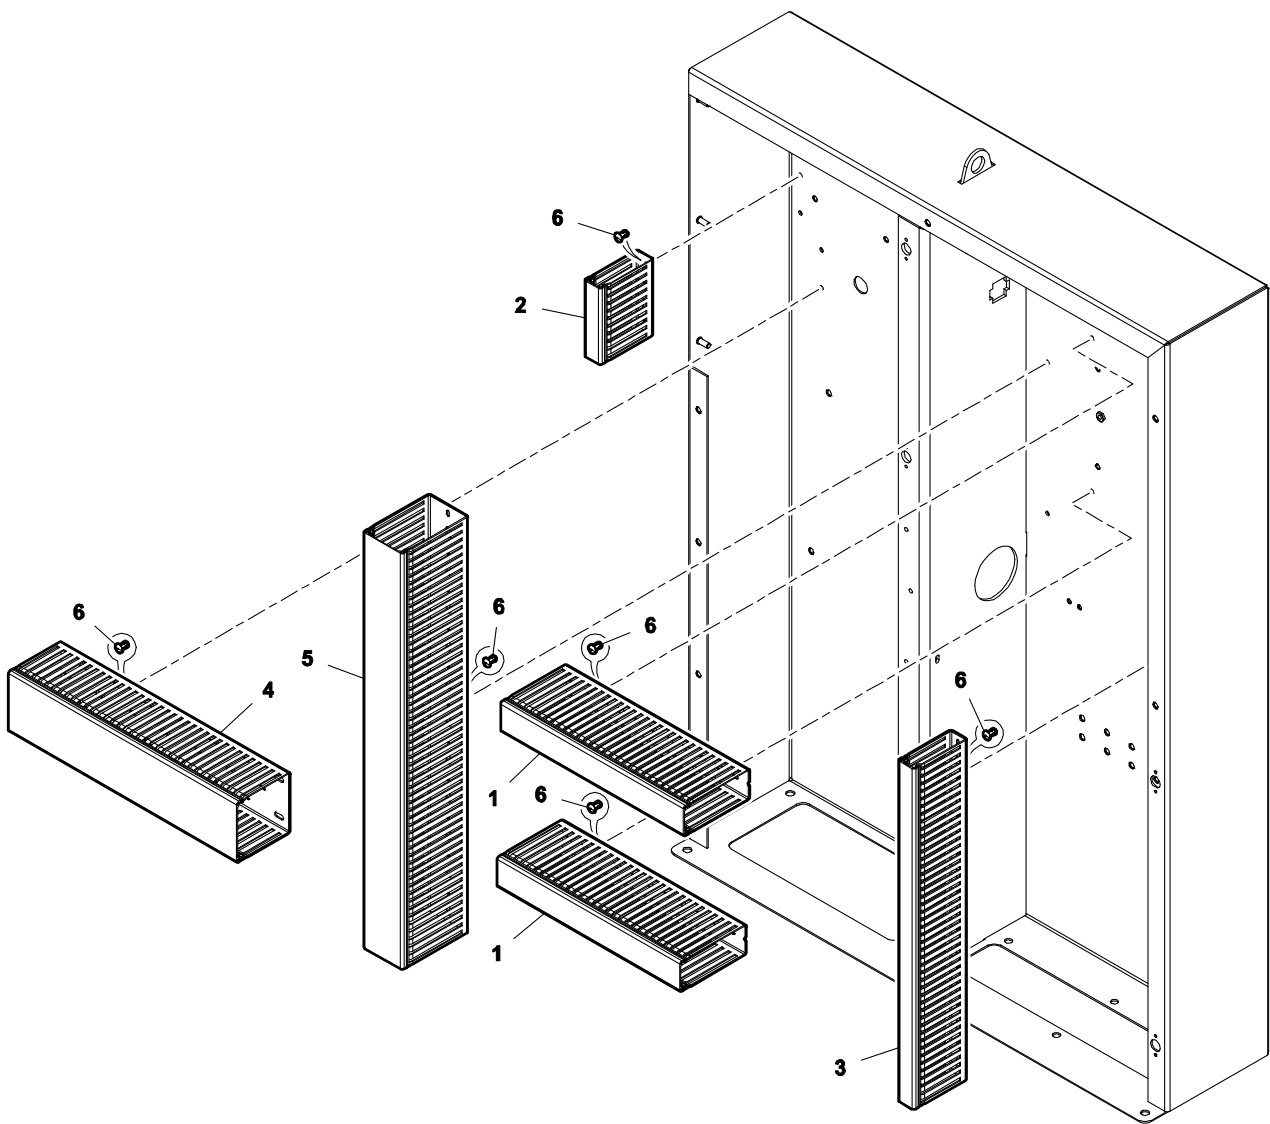


T6930_00
04/17

POWER PEDESTAL ASSEMBLY

[illegible]

 POWER PEDESTAL ASSEMBLY

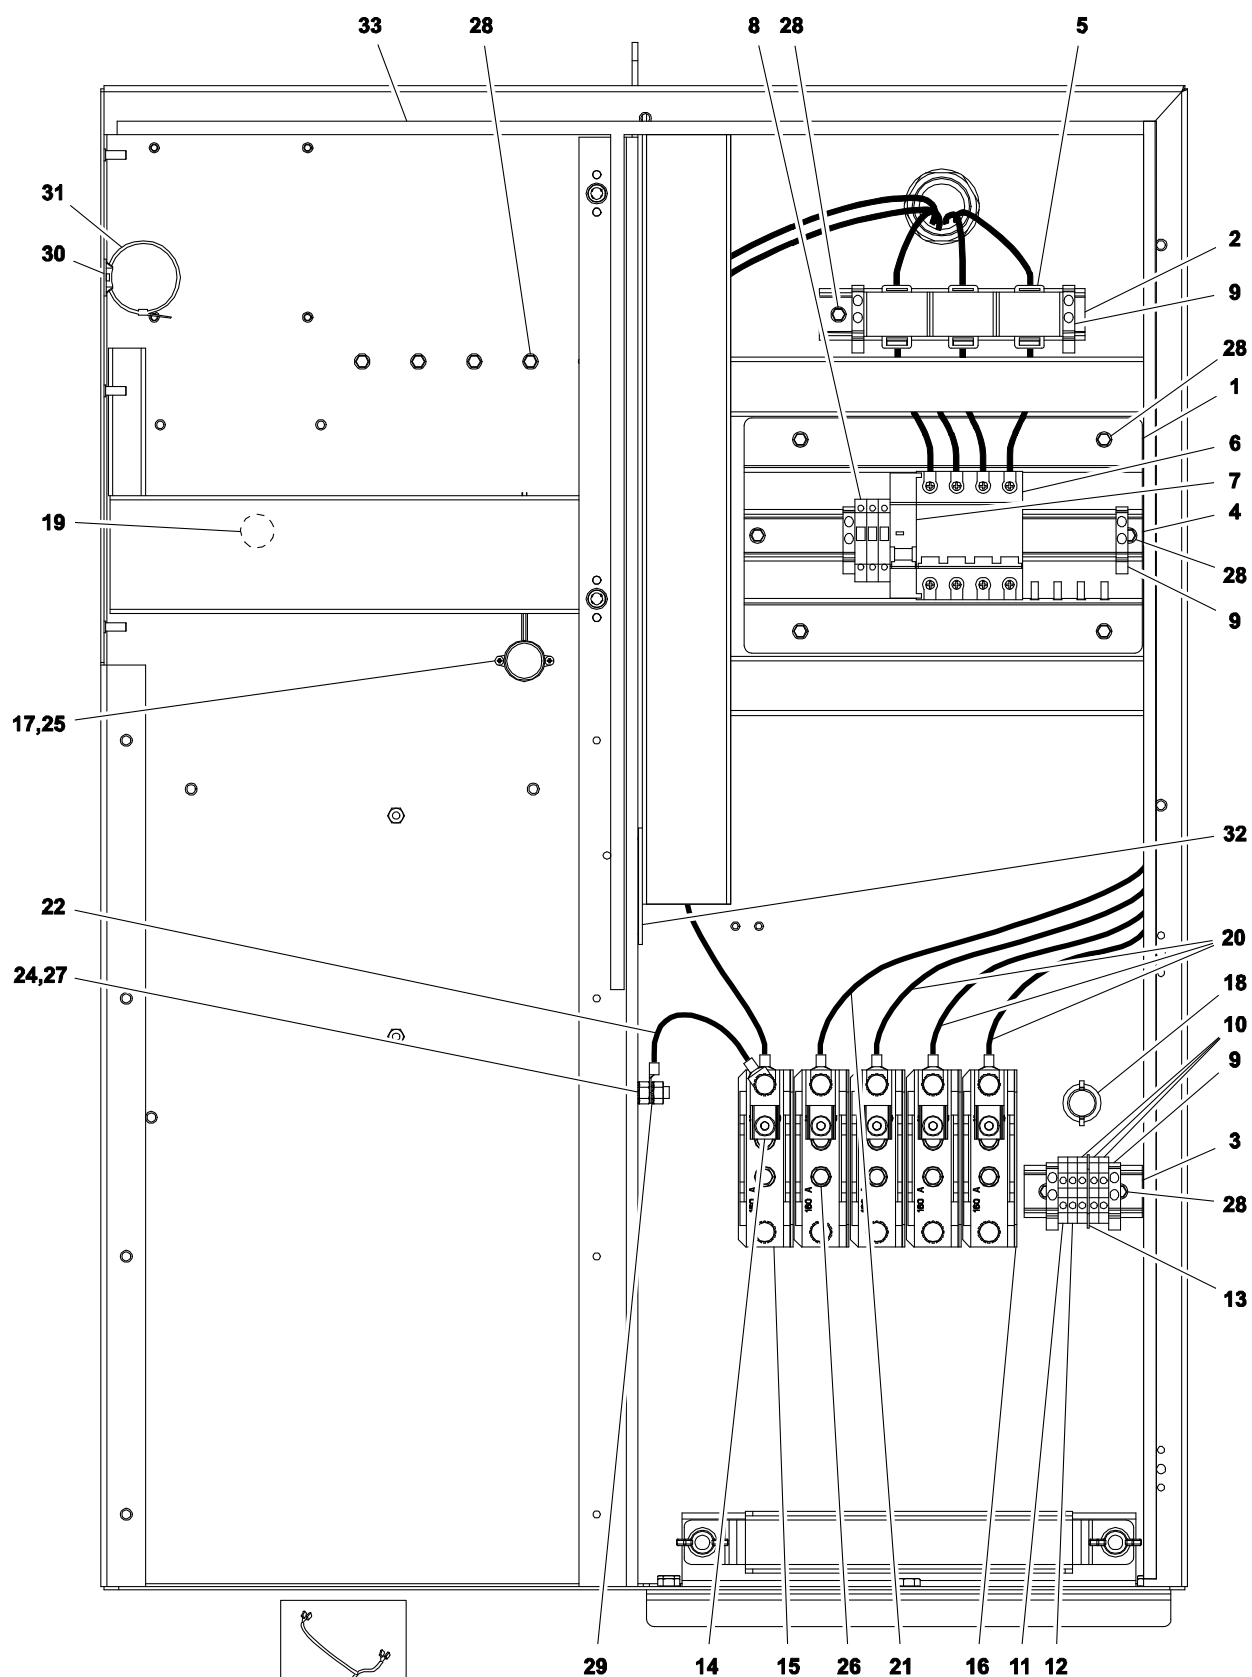


T6923_00
03/17

POWER PEDESTAL ASSEMBLY

Item	Part Number	Description	Remarks	Serial Number	Qty
1	46618400	SPACER			1
2	22734859	RAIL, DIN			1
3	46551576	RAIL, DIN			1
4	46618379	RAIL, DIN			1
5	22721088	TRANSFORMER, CURRENT			3
6	23269194	BREAKER			1
7	23270325	TRIP, COIL 12V			1
8	22747299	HOLDER			3
9	22750970	TERMINAL			6
10	22768436	TERMINAL			3
11	46561639	TERMINAL			1
12	46561640	TERMINAL, EARTH			1
13	46631806	PARTITION			1
14	22817522	TERMINAL			5
15	22832174	TERMINAL			5
16	22825533	BARRIER			5
17	23189319	HORN			1
18	23339609	PLUG, BLANKING			1
19	92783281	PLUG			1
20	46695701	CABLE			3
21	46695702	CABLE			1
22	46695703	CABLE			1
23	46695720	HARNESS			1
24	36889608	SCREW	(M8-1.25 x 25)		1
25	46652543	SCREW			2
26	36898096	SCREW			10
27	92304518	NUT			2
28	23064587	SCREW			15
29	96745229	WASHER			2
30	93524007	PLATE, CABLE TIE			1
31	92281427	TIE, CABLE			7

 POWER PEDESTAL ASSEMBLY (CONT'D)

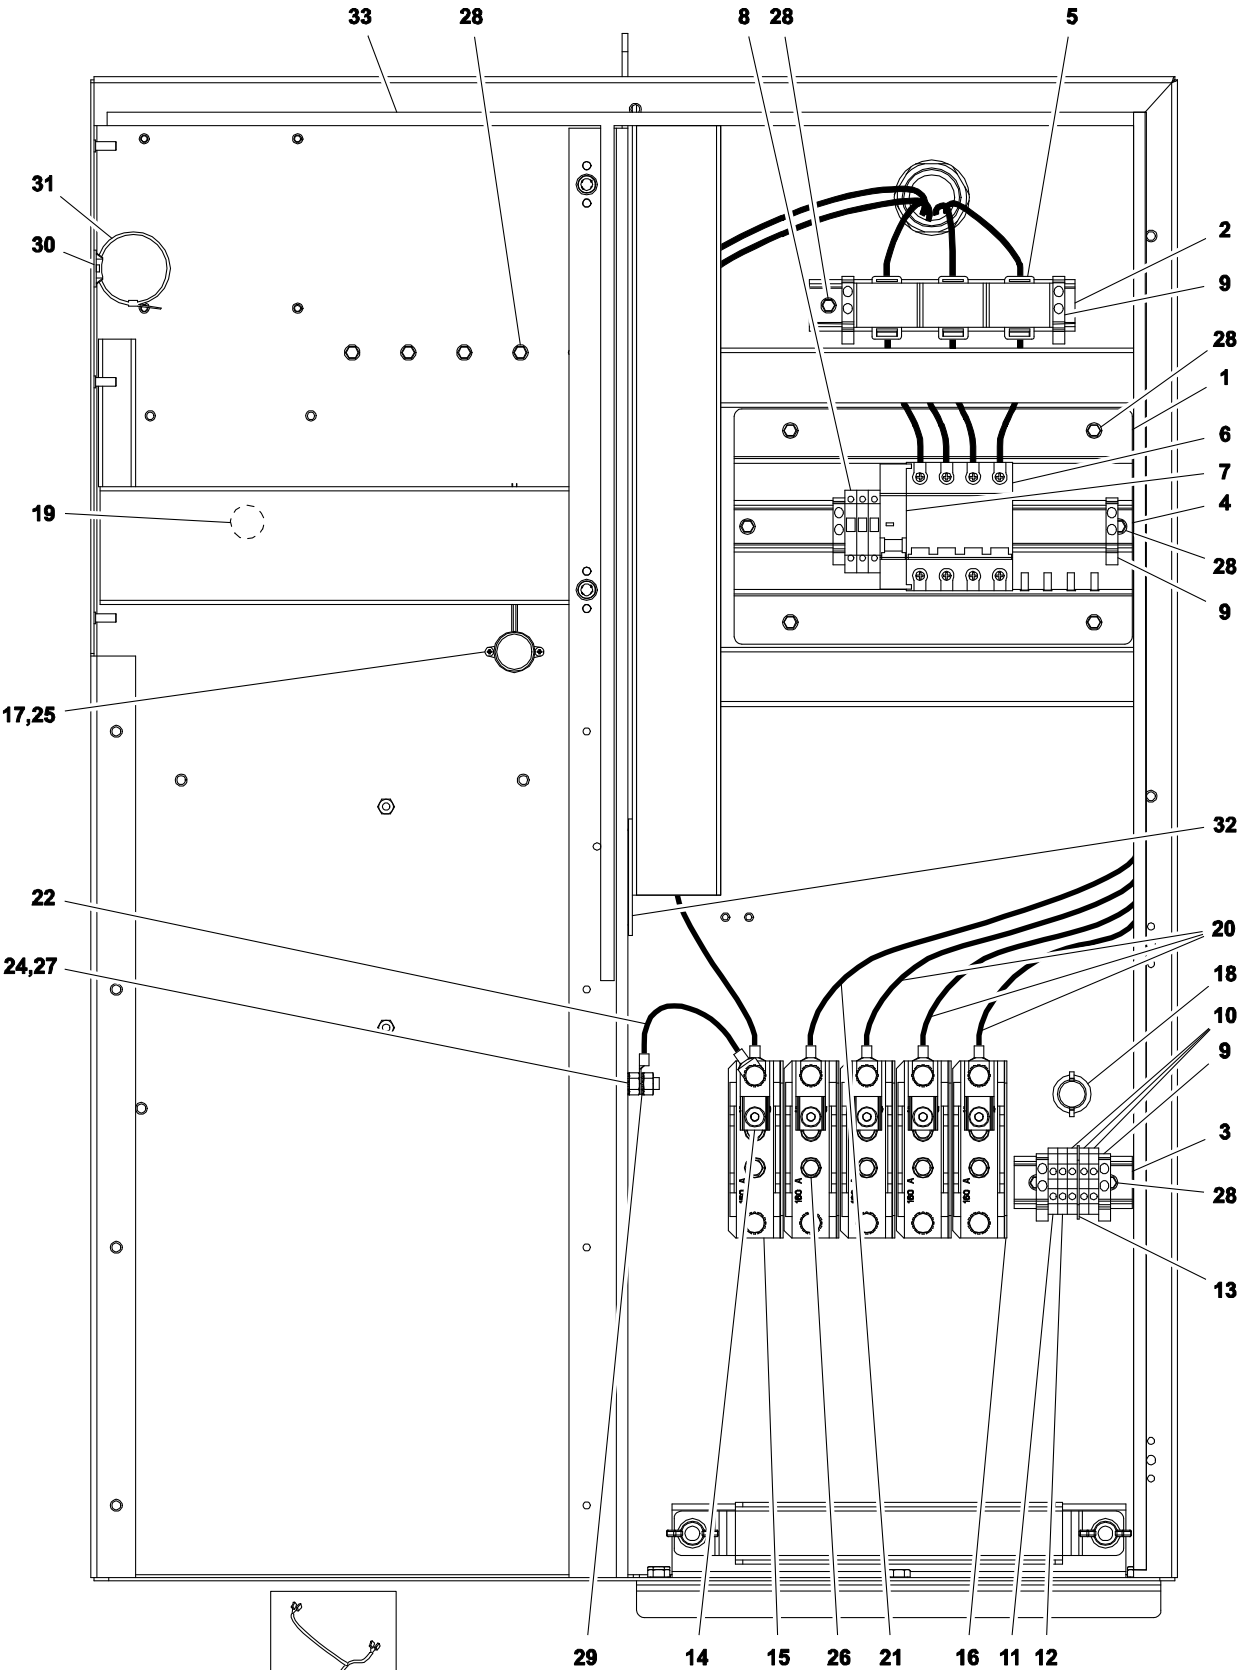


T6923_00
03/17

POWER PEDESTAL ASSEMBLY (CONT'D)	
1	POWER PEDESTAL ASSEMBLY (CONT'D)

[illegible]

 **POWER PEDESTAL COVERS
(TNS-300mA)**

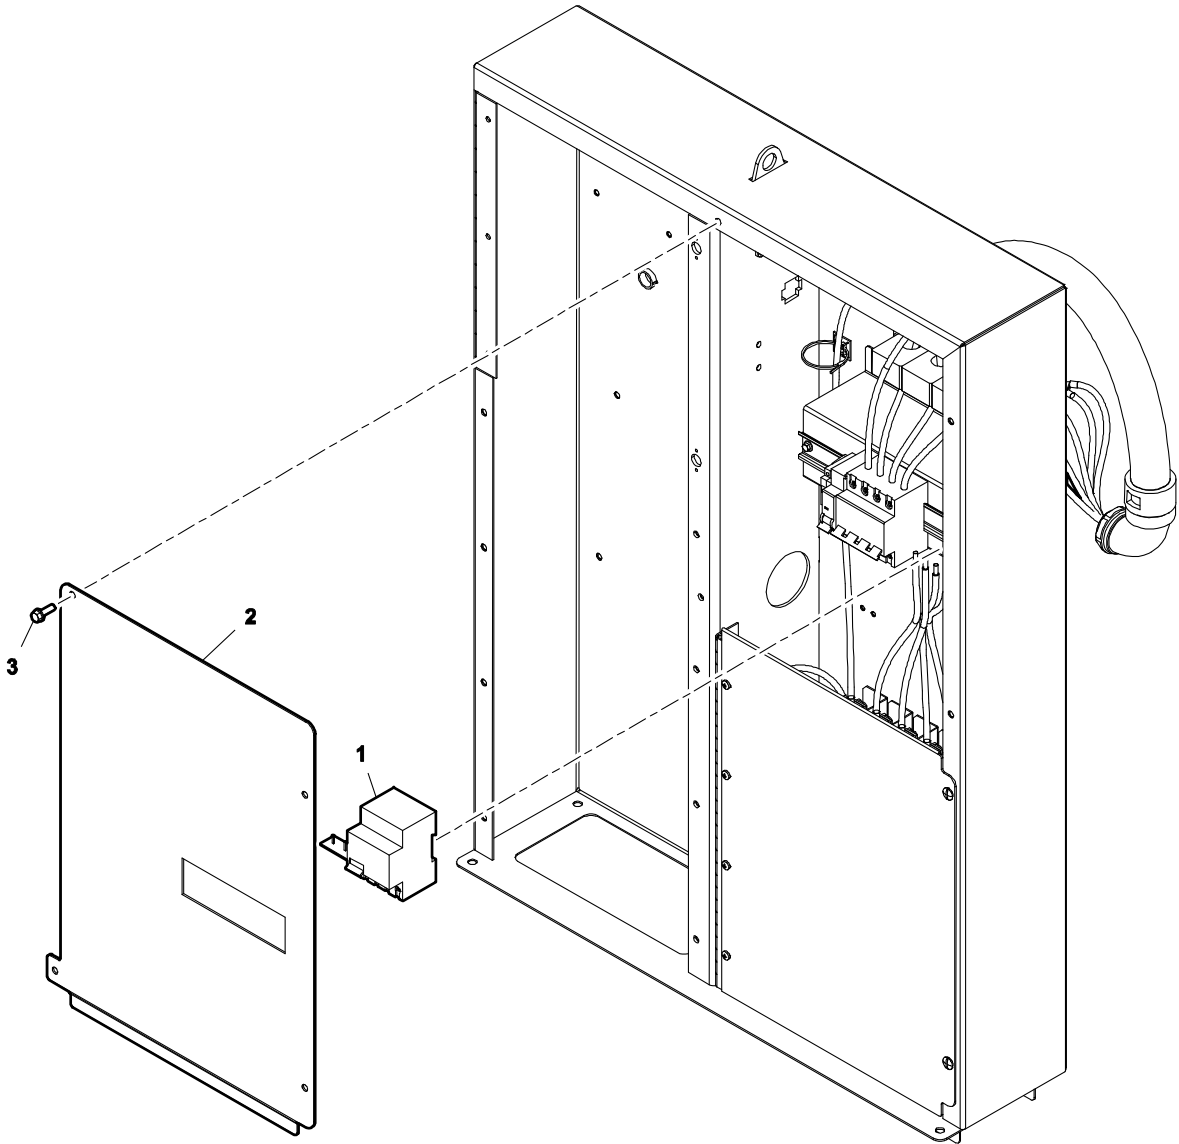


T6889_00
11/16

POWER PEDESTAL COVERS (TNS-300mA)
--

[illegible]

 **POWER PEDESTAL COVERS
(TNS-30mA)**

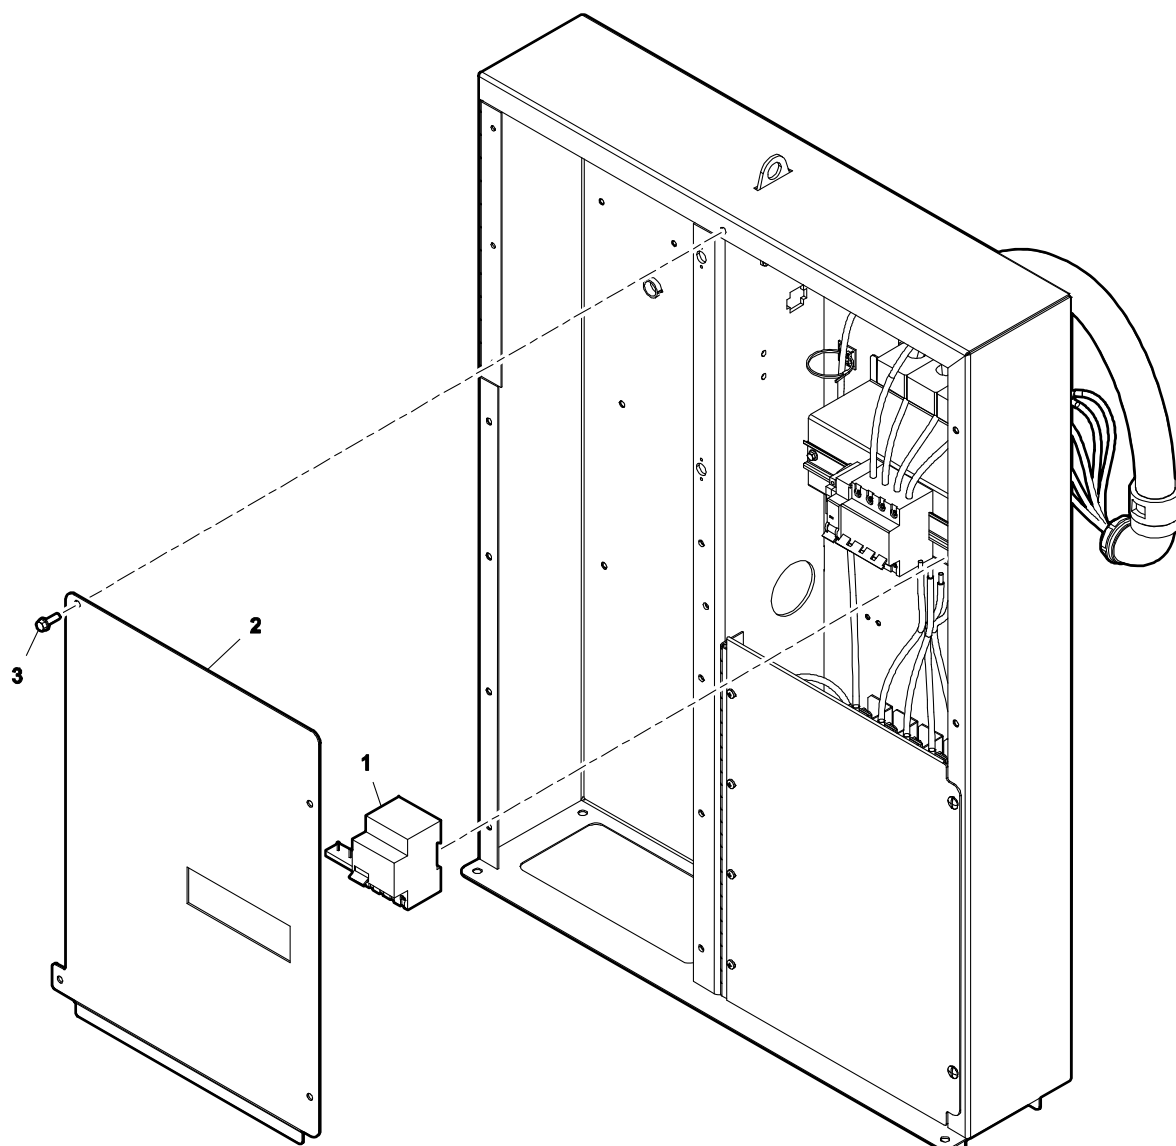


T6890_00
11/16

POWER PEDESTAL COVERS (TNS-30mA)	
-------------------------------------	--

[illegible]

 
POWER PEDESTAL COVERS (TNS-adjustable)

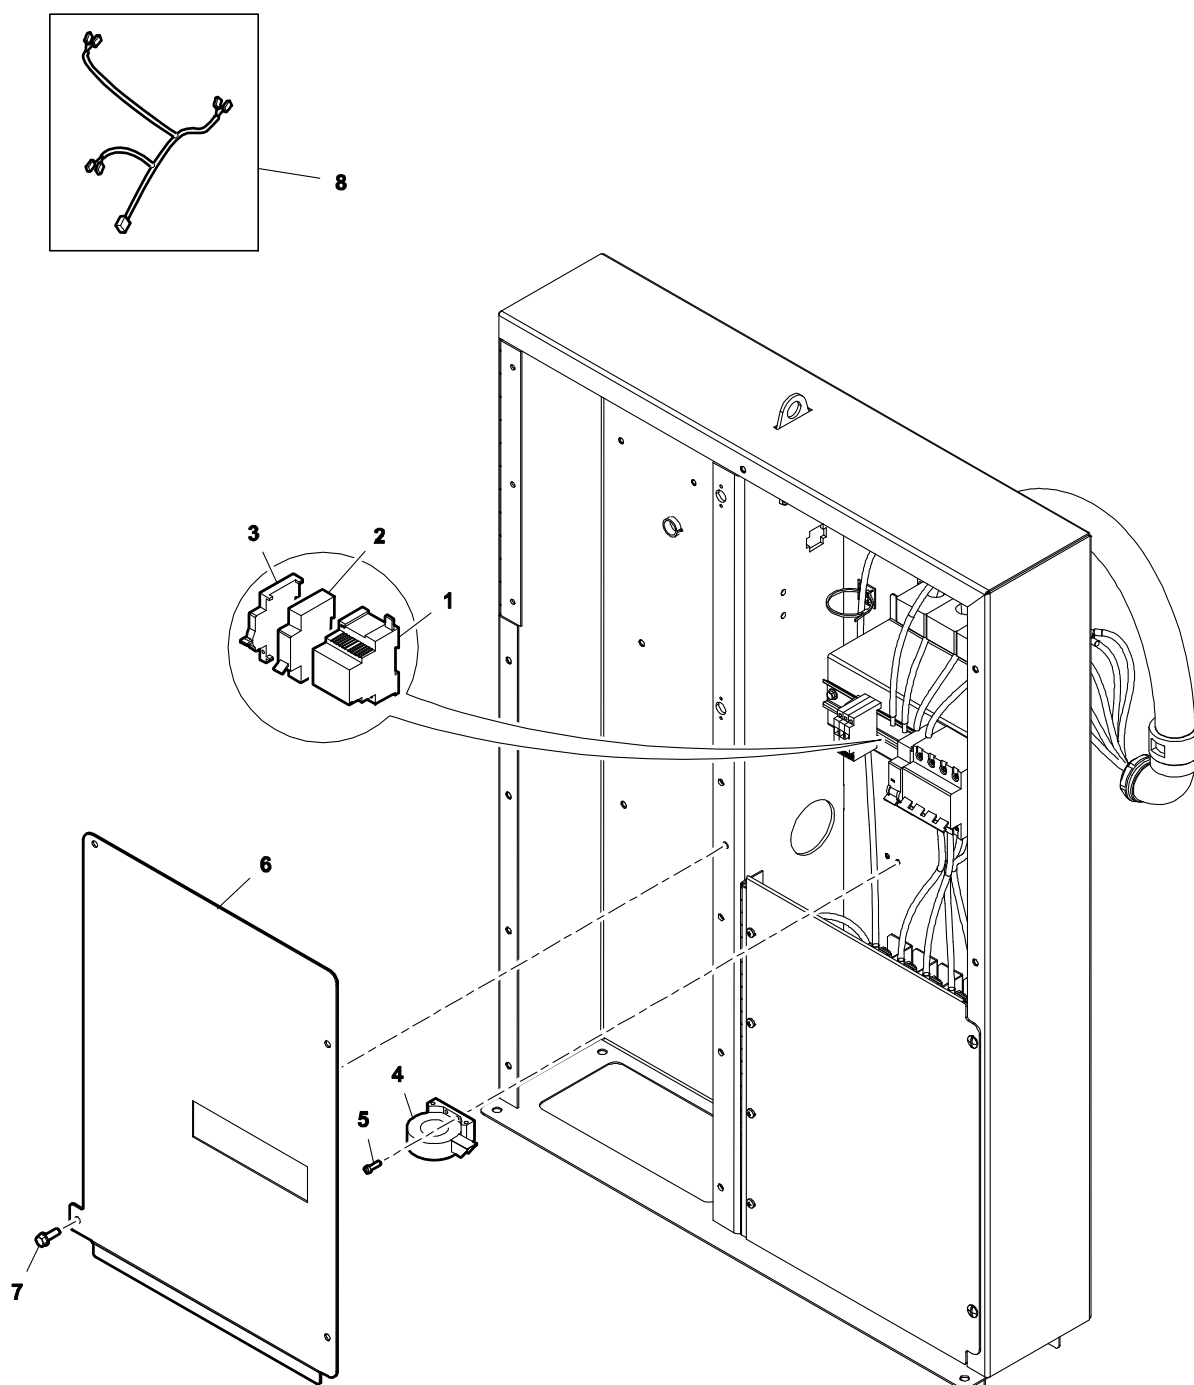

T6891_00
11/16

[illegible][illegible]

 ENGINE ASSEMBLY

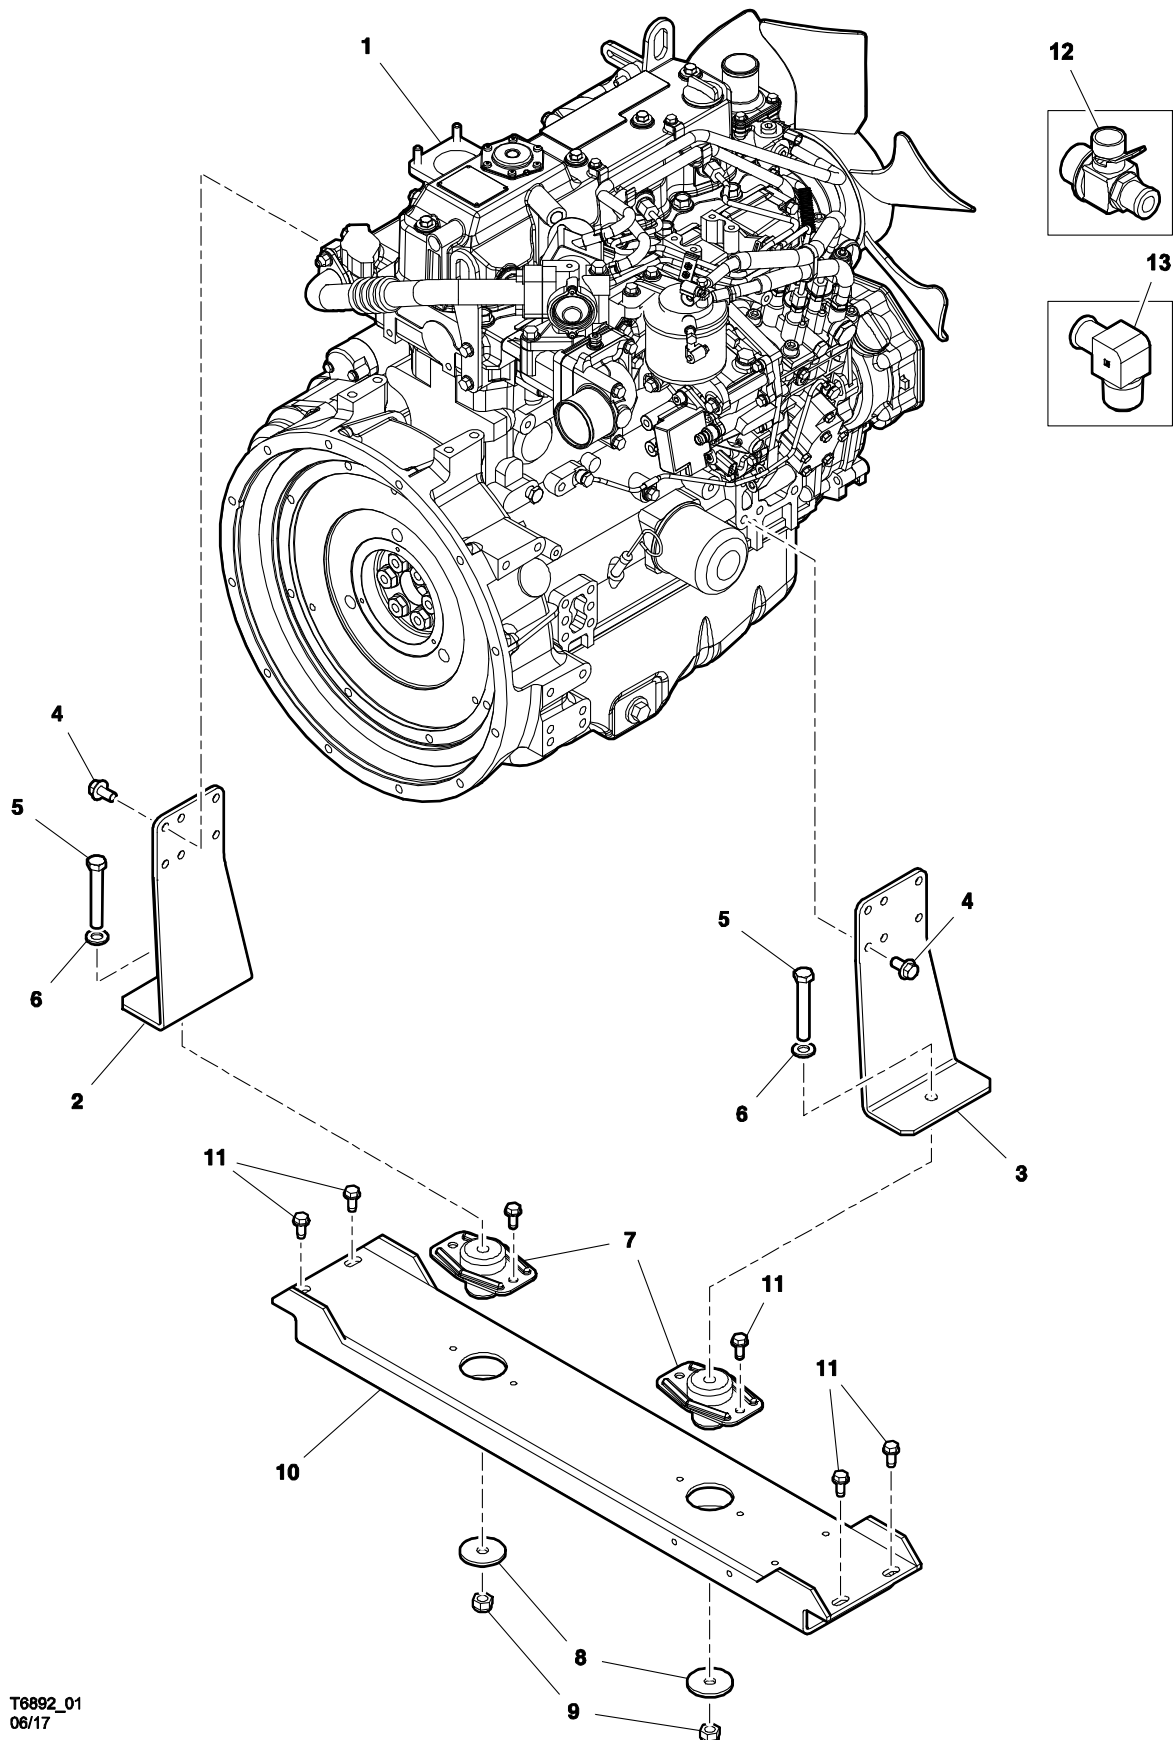


T6892_01
06/17

ENGINE ASSEMBLY

[illegible]

 ENGINE ASSEMBLY

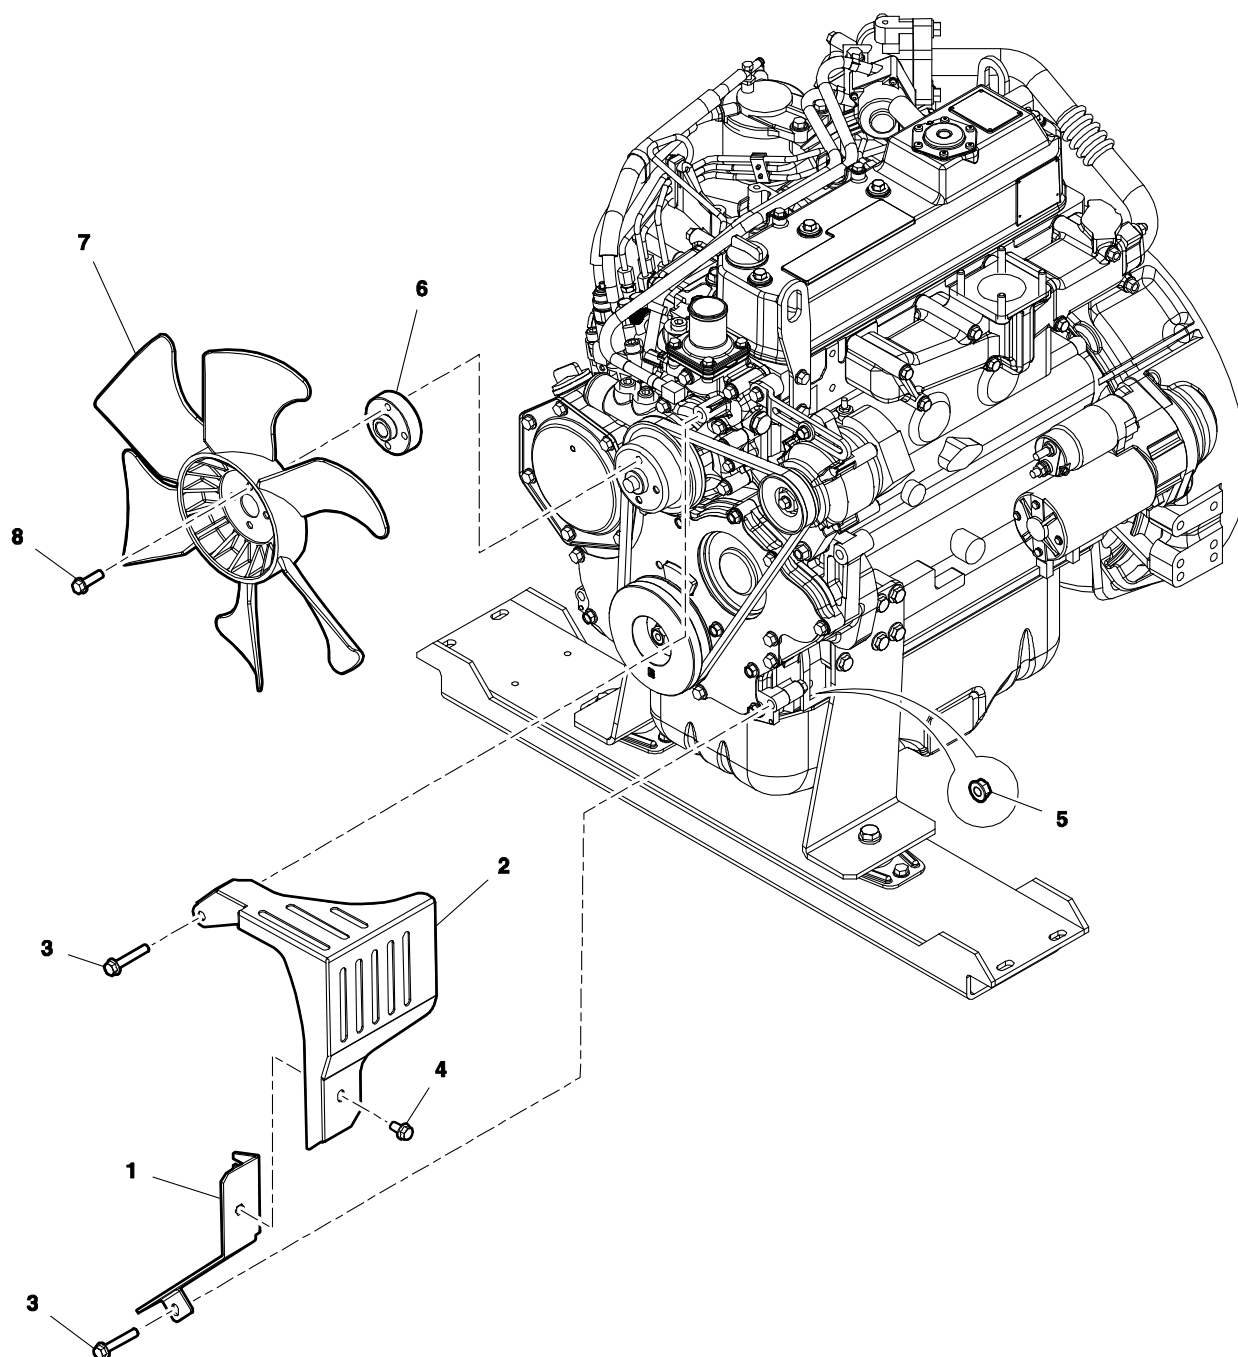


T6893_01
06/17

ENGINE ASSEMBLY

[illegible]

 AIR INTAKE

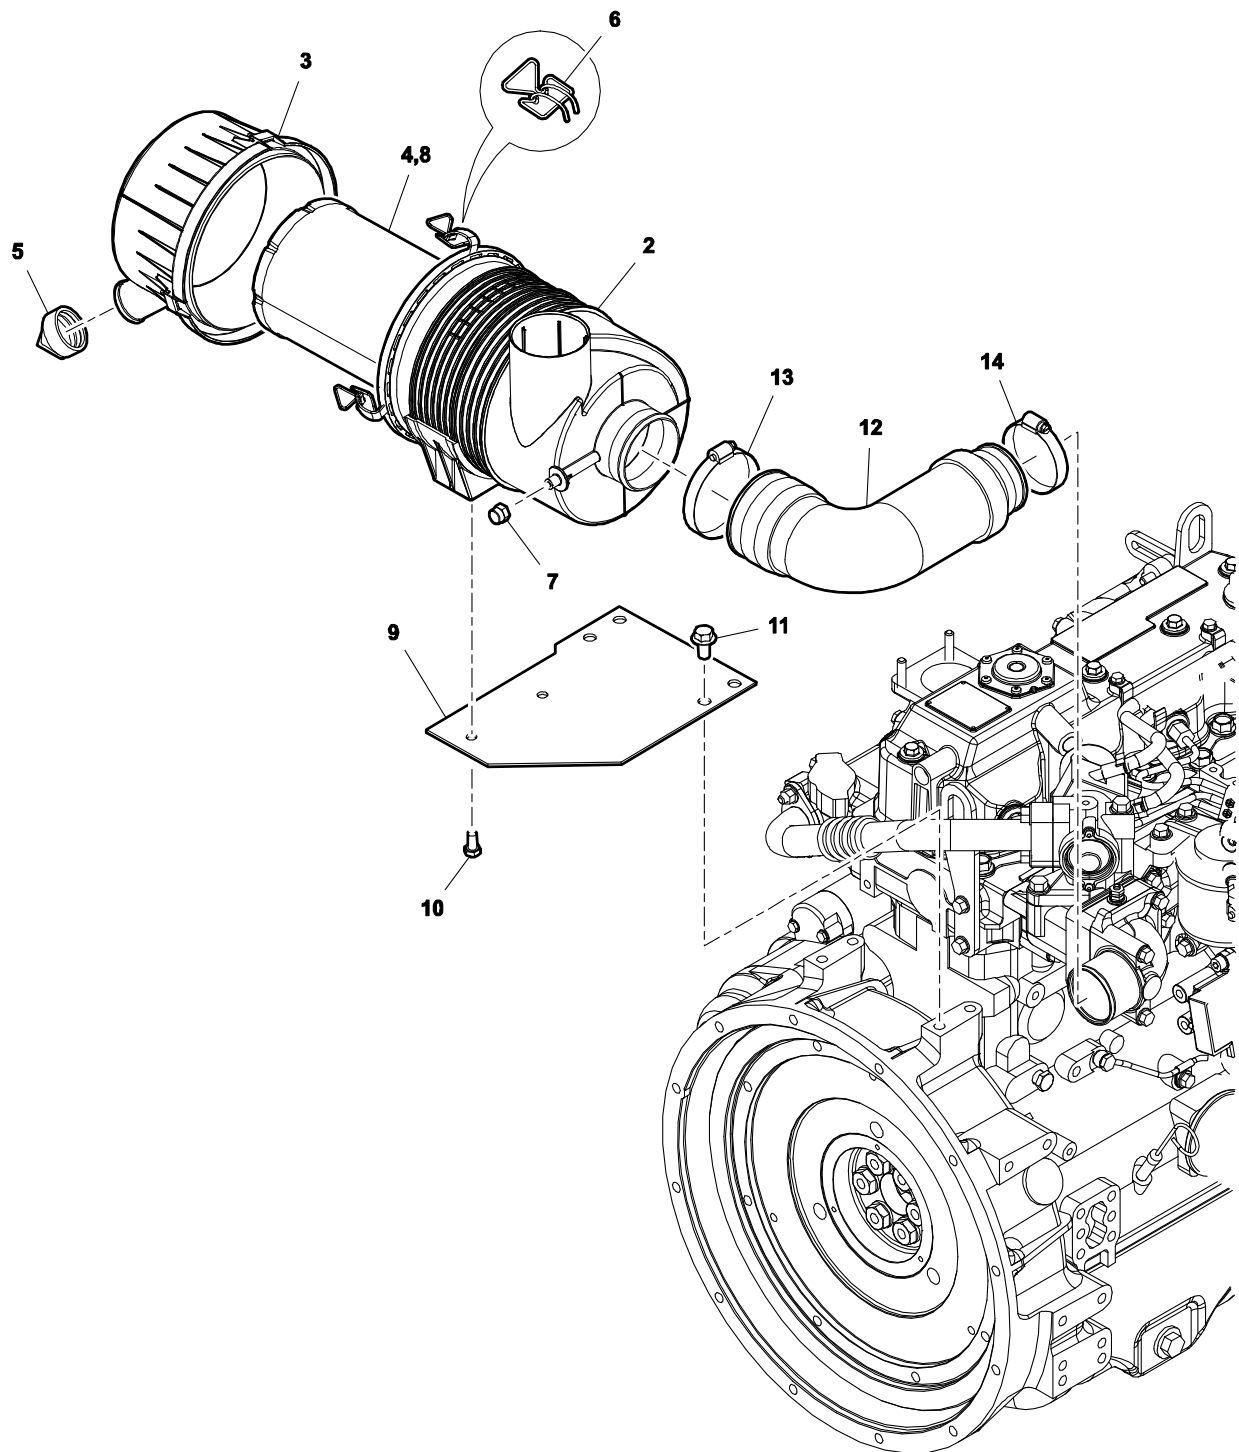


T6881_01
06/17

AIR INTAKE

[illegible]

 EXHAUST SYSTEM

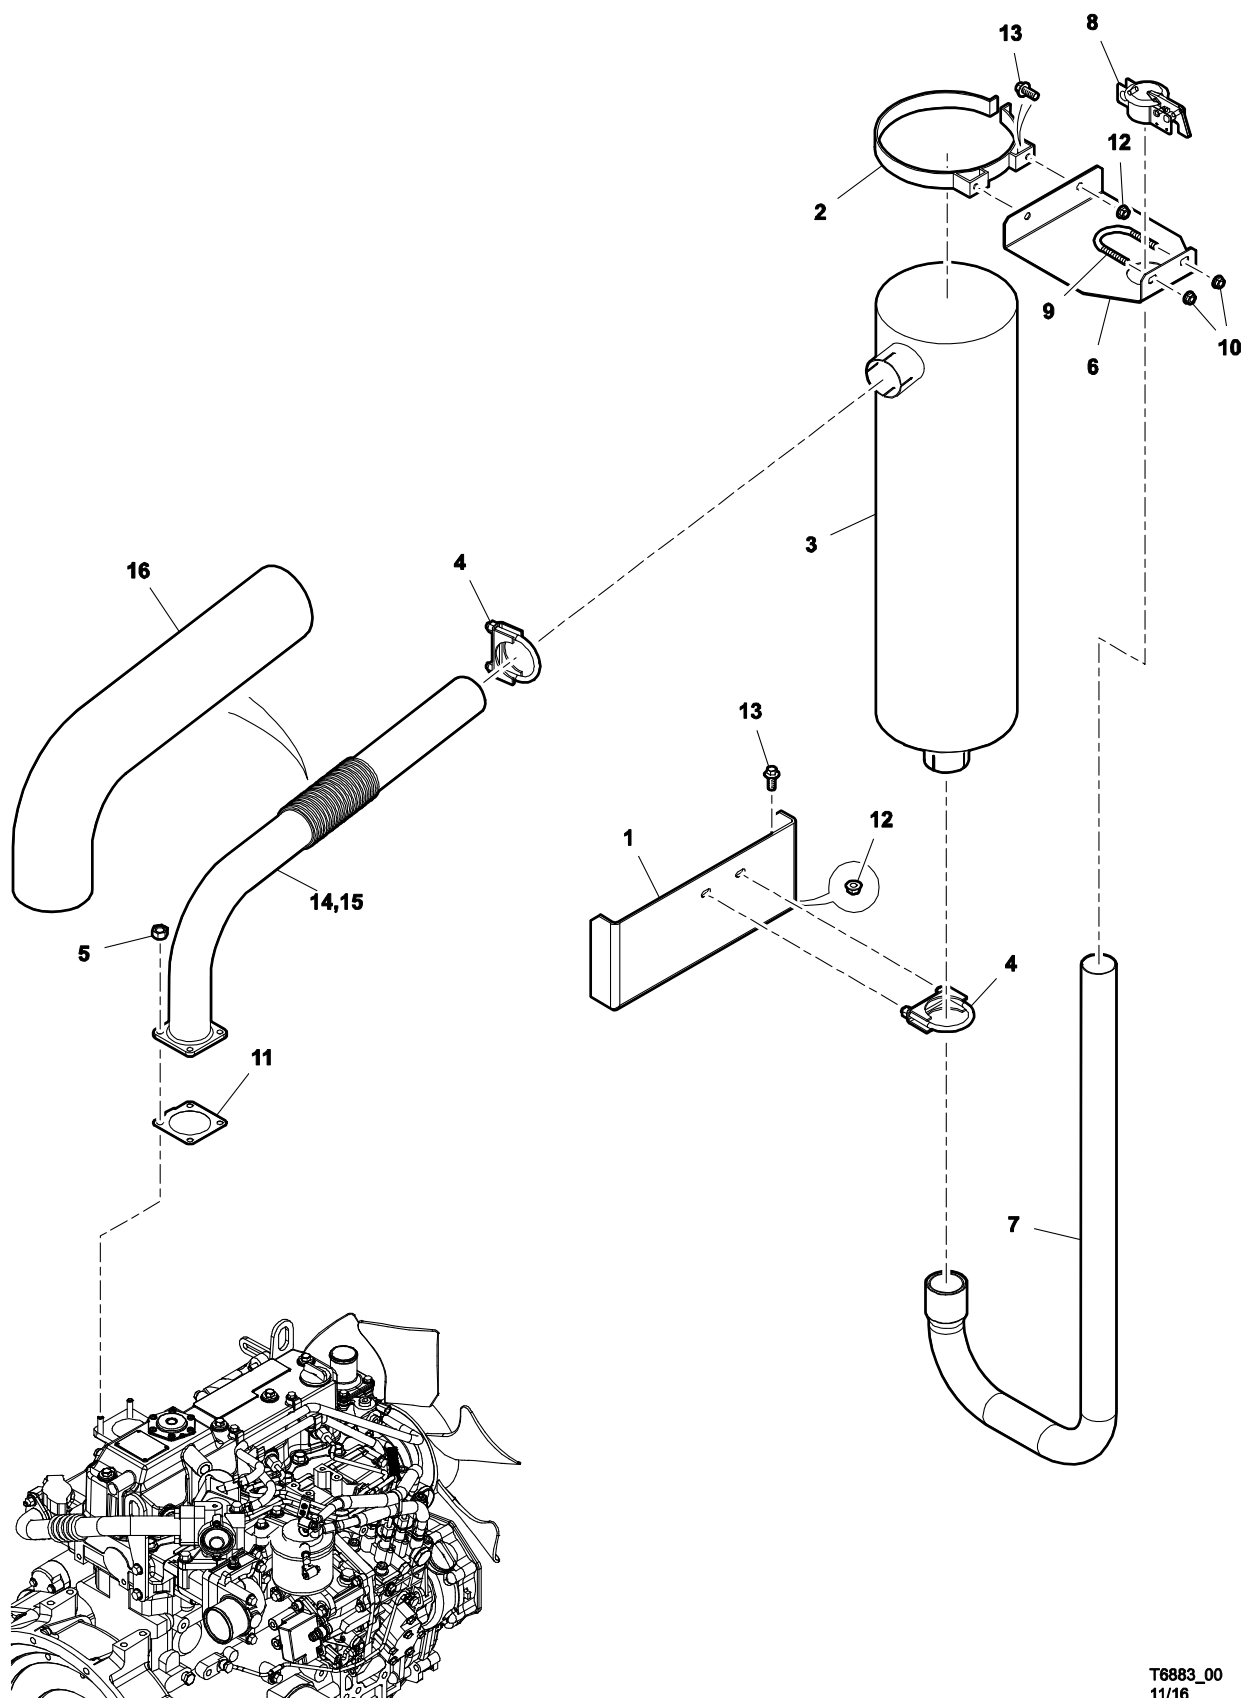


T6883_00
11/16

EXHAUST SYSTEM	
----------------	--

[illegible]

 COOLING SYSTEM



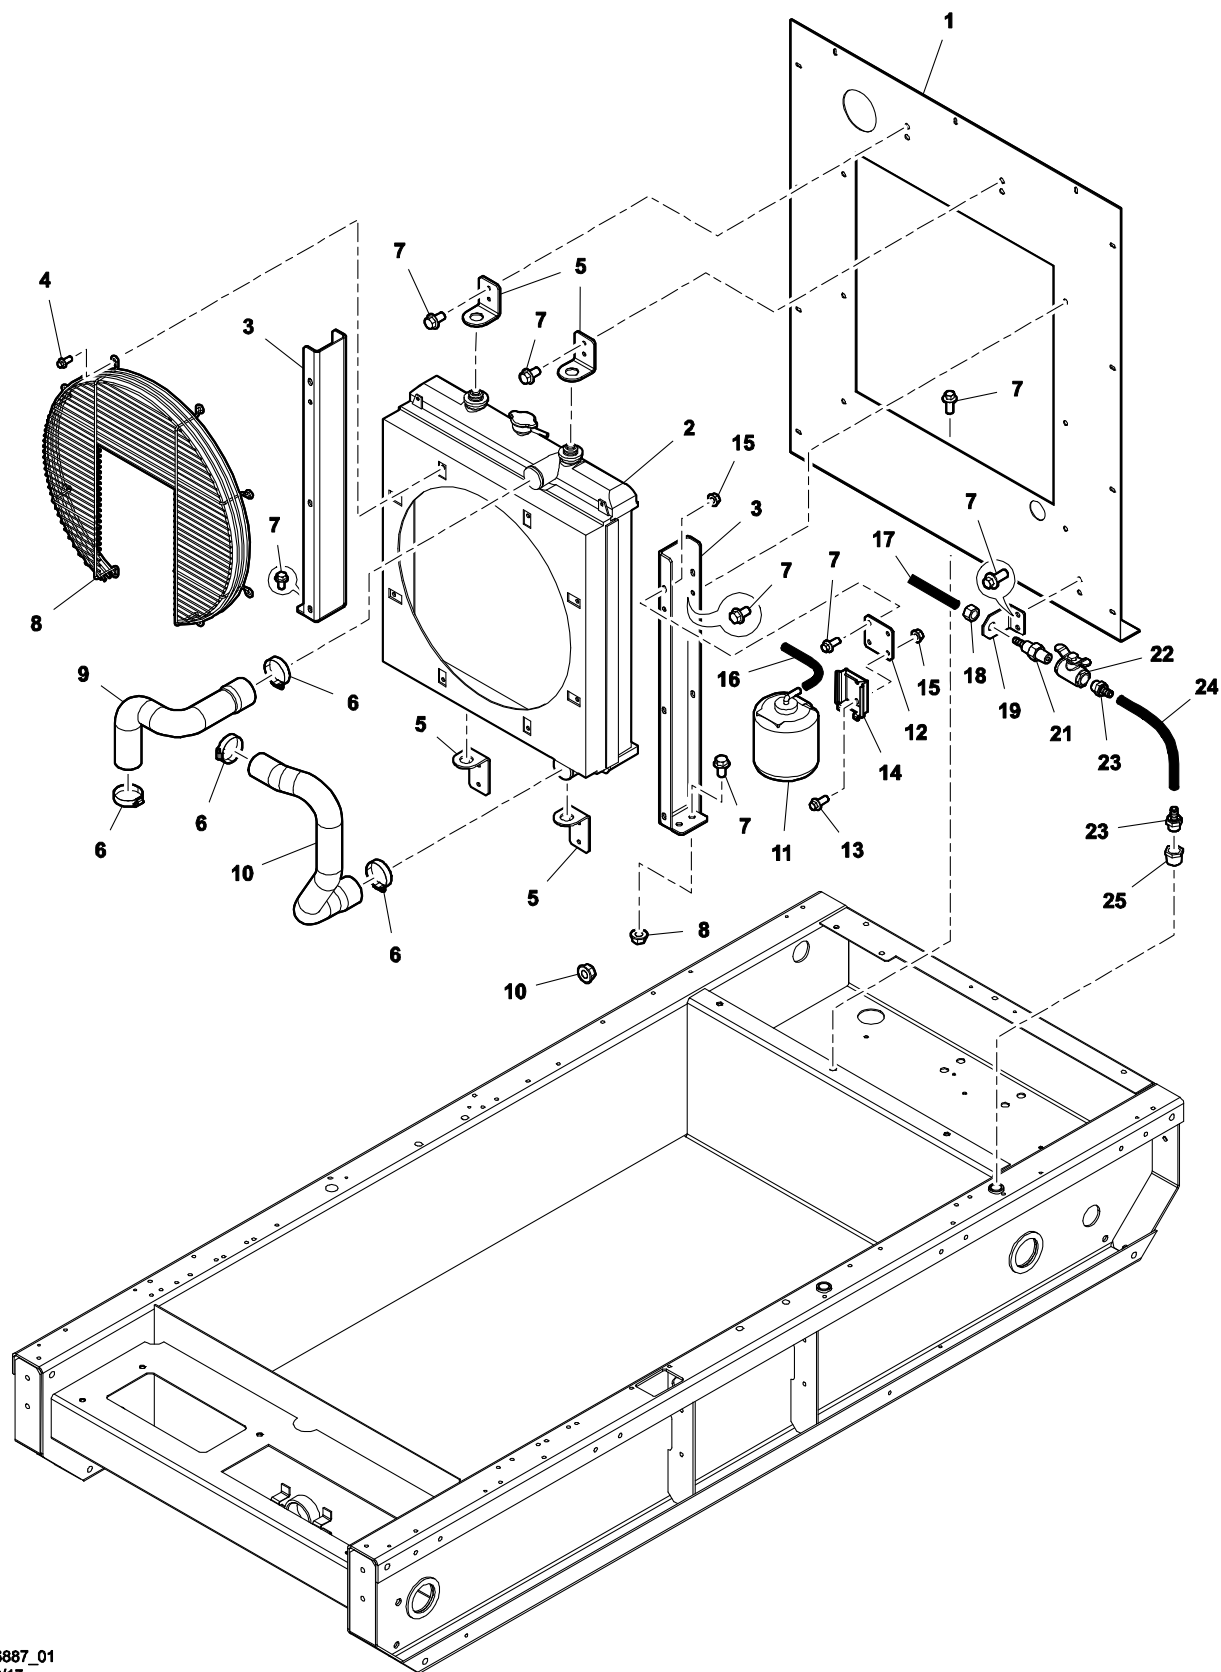


T6887_01
06/17

COOLING SYSTEM

Item	Part Number	Description	Remarks	Serial Number	Qty
1	46693109	SUPPORT, COOLER			1
2	46693289	RADIATOR ASSEMBLY			1
3	46695335	SUPPORT COOLER			2
4	36898096	SCREW			8
5	46695376	BRACKET			4
6	92253129	CLAMP			4
7	46700609	SCREW			21
8	46698475	GUARD, FAN			1
9	46698481	PIPE, COOLING			1
10	46698479	PIPE, COOLING			1
11	46695506	TANK, EXPANSION			1
12	46695531	BRACKET			1
13	36797652	SCREW			13
14	46695507	BRACKET			1
15	92398114	NUT	(M8)		4
16	35363498	HOSE	(8 mm (5/16") ID)		1
17	35363498	HOSE	(8 mm (5/16") ID)		1
18	96701750	NUT, HEX			1
19	46651963	BRACKET			1
21	46651966	FITTING			1
22	22375141	VALVE			1
23	46623638	CONNECTOR			2
24	35285600	HOSE	(9.5 mm (3/8") ID)		1
25	95952248	BUSH			1

   FUEL SYSTEM

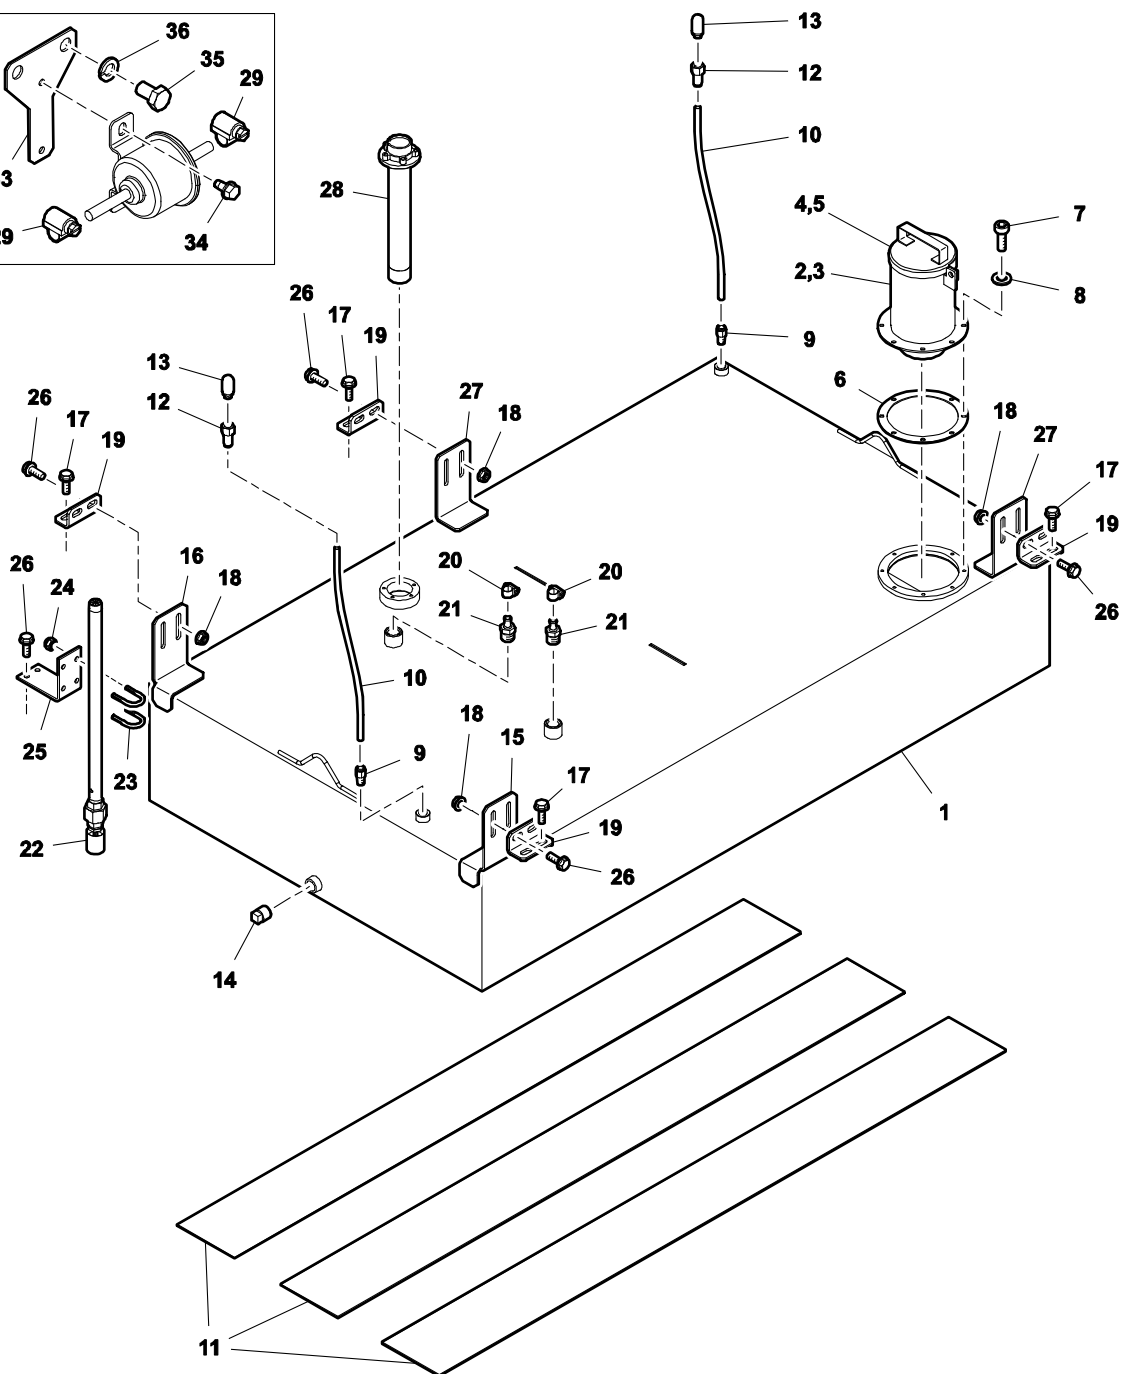
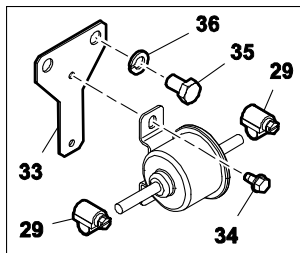
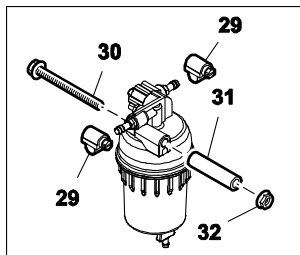


T6898_01
06/17

FUEL SYSTEM

Item	Part Number	Description	Remarks	Serial Number	Qty
1	46696043	TANK, FUEL			1
2	46644139	FILLER NECK ASSEMBLY	W/Ref. 3-5		1
3	23015084	NECK, FILLER			1
4	36845014	CAP			1
5	36845022	STRAINER, FUEL			1
6	46553706	GASKET			1
7	35337070	SCREW			8
8	92341981	WASHER			8
9	35369347	CONNECTOR			2
10	35356484	TUBE, NYLON	0,38 m long		2
11	22680771	PAD, FUEL TANK	1,31 m long		3
12	35369339	CONNECTOR			2
13	35322395	SILENCER, PNEUMATIC			2
14	95928255	PLUG			1
15	22765549	BRACKET			1
16	22765531	BRACKET			1
17	96704408	SCREW			8
18	36881886	NUT			8
19	22783245	BRACKET			4
20	35296342	CLIP, RETAINING			2
21	46553709	ADAPTOR			2
22	22580351	SENSOR, CONTAINMENT LEVEL			1
23	22616353	U-BOLT			2
24	95923298	NUT			4
25	22580336	BRACKET			1
26	22959936	SCREW			10
27	22765523	BRACKET			2
28	22579213	SENDER			1
29	35296342	CLIP, RETAINING			4
30	96728787	SCREW			1
31	46699277	SPACER			1

   
FUEL SYSTEM (CONT'D)

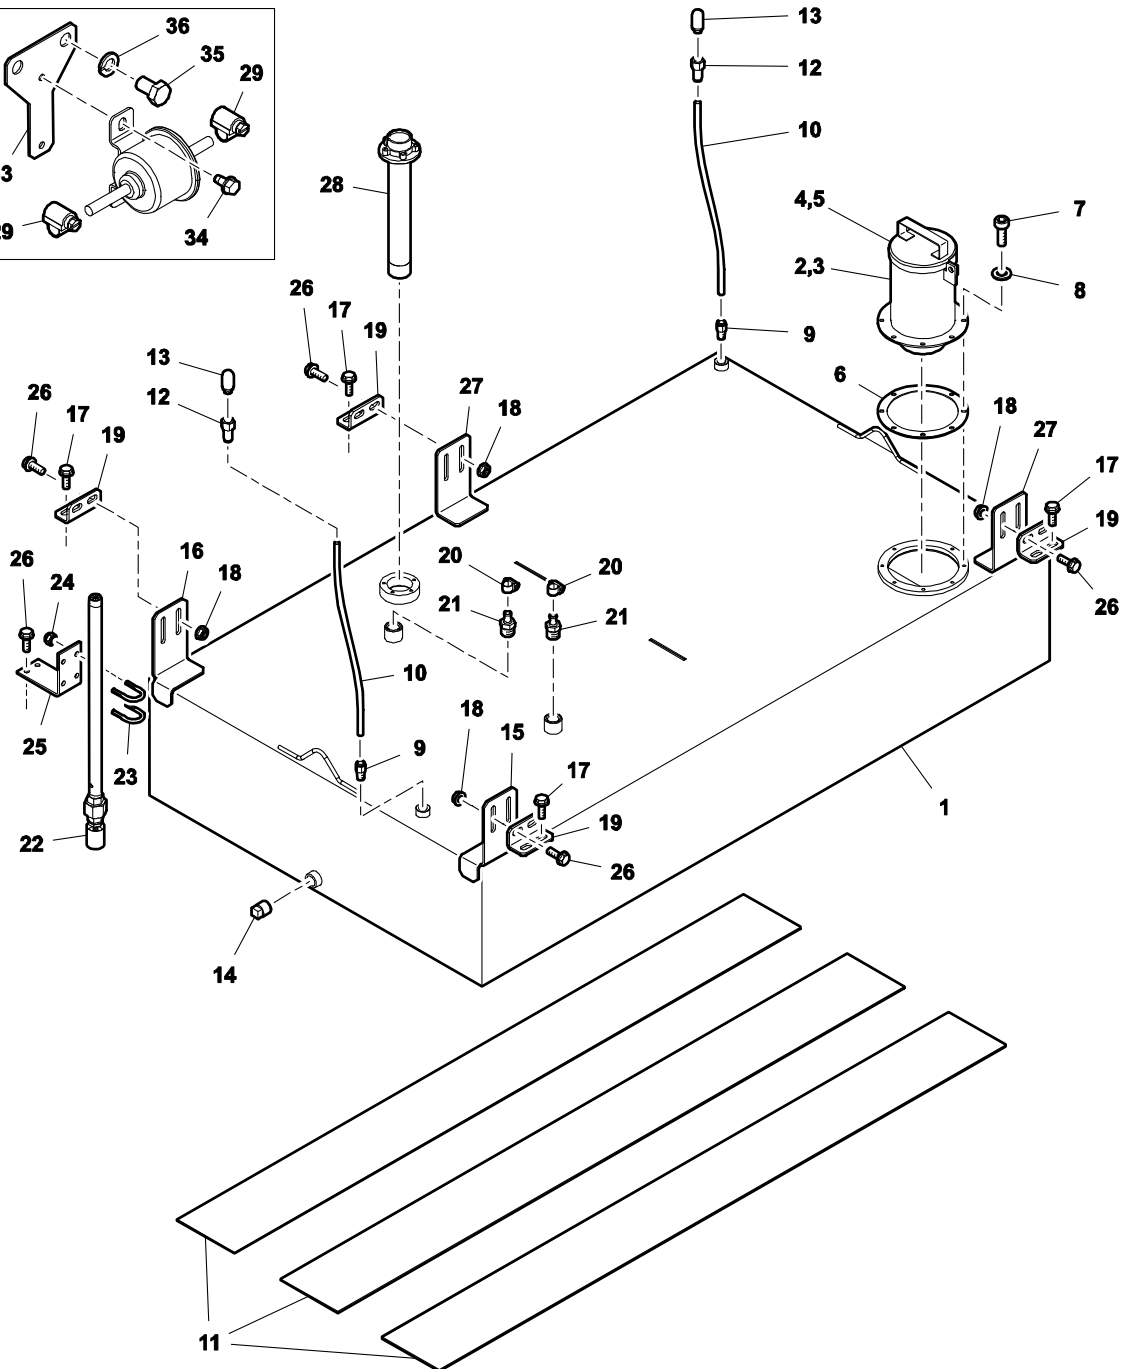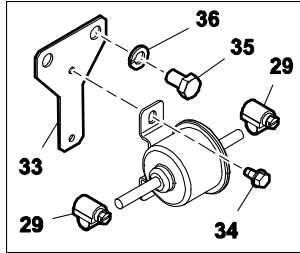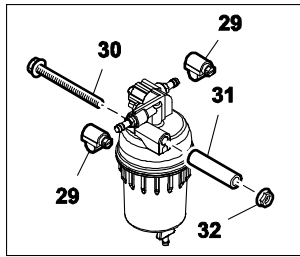

T6898_01
06/17


FUEL SYSTEM (CONT'D)	
----------------------	--

 ROCKER COVER

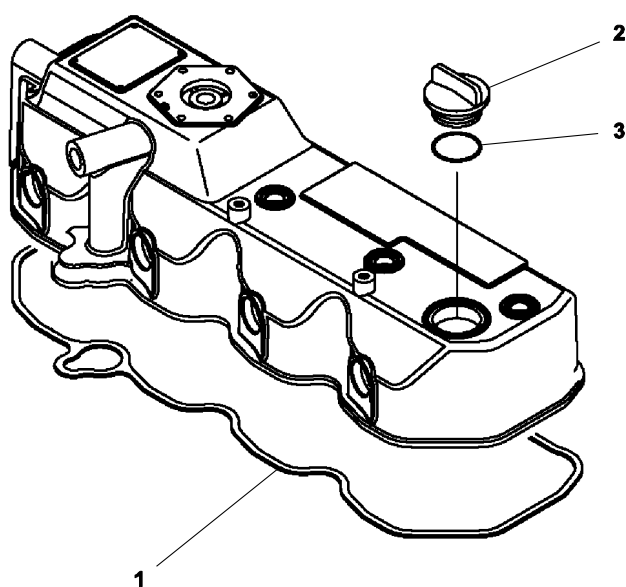

ROCKER COVER

 
DIPSTICK

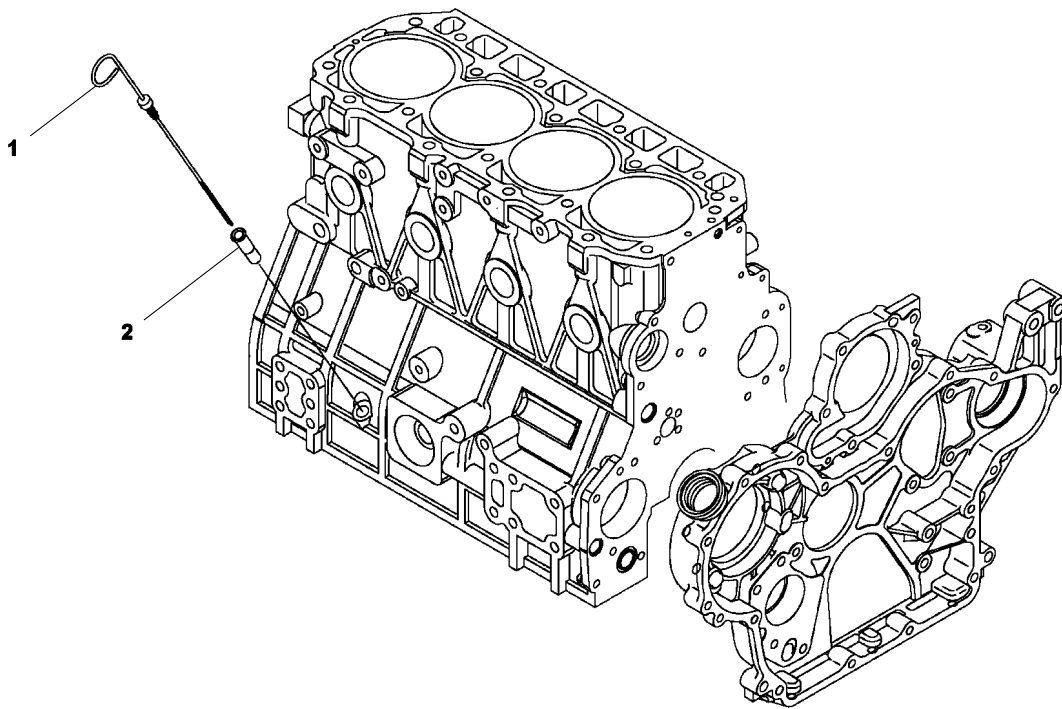

T6903_00
12/16

DIPSTICK

 
OIL FILTER ASSEMBLY

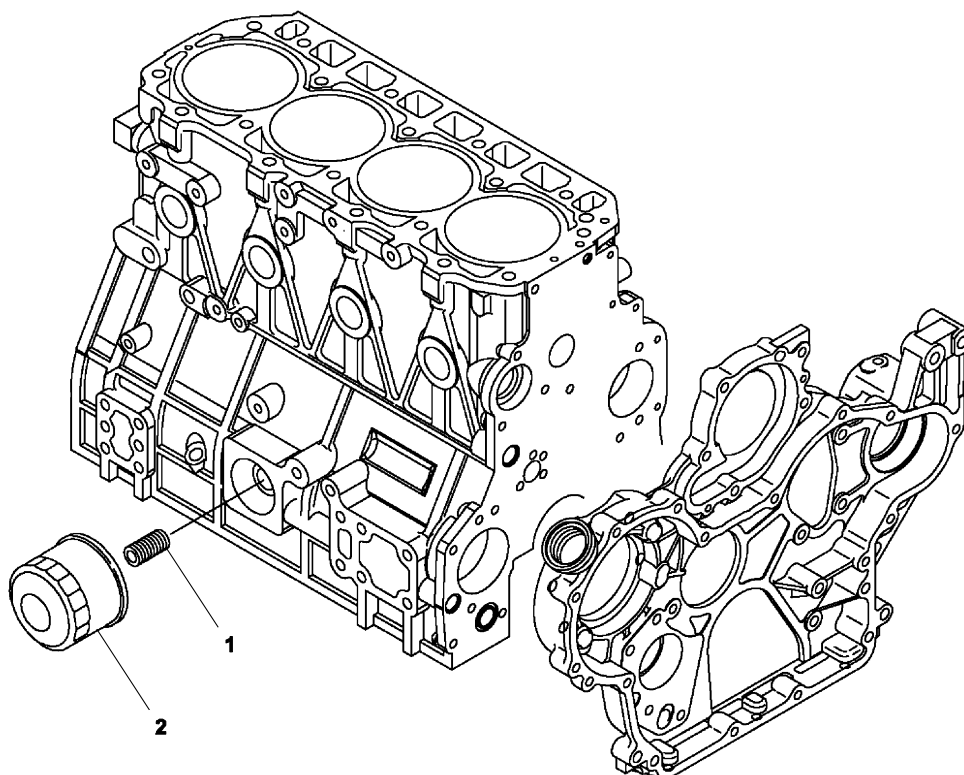

T8904_00
12/16

OIL FILTER ASSEMBLY	
---------------------	--

 FUEL INJECTION PUMP

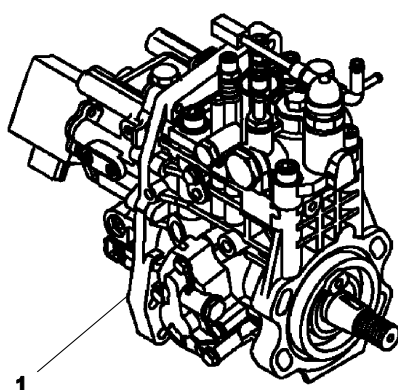


T6905_00
12/16

FUEL INJECTION PUMP	
---------------------	--

[illegible]

 GEAR SENSOR

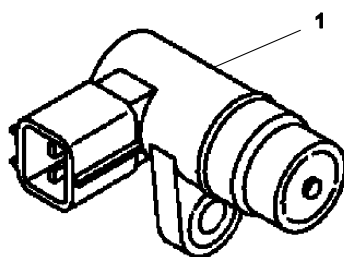


T6906_00
12/16

GEAR SENSOR

[illegible]

 INJECTION VALVE

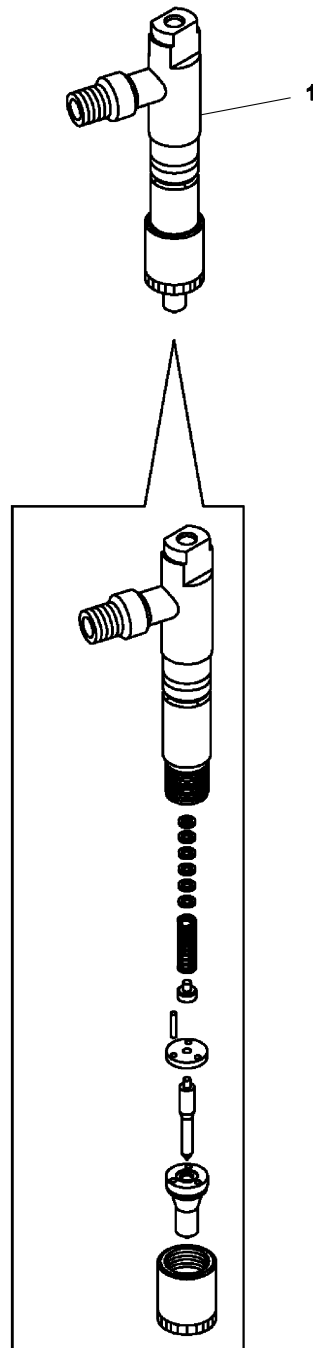


T8907_00
12/16

INJECTION VALVE

[illegible]

 
FUEL FILTER

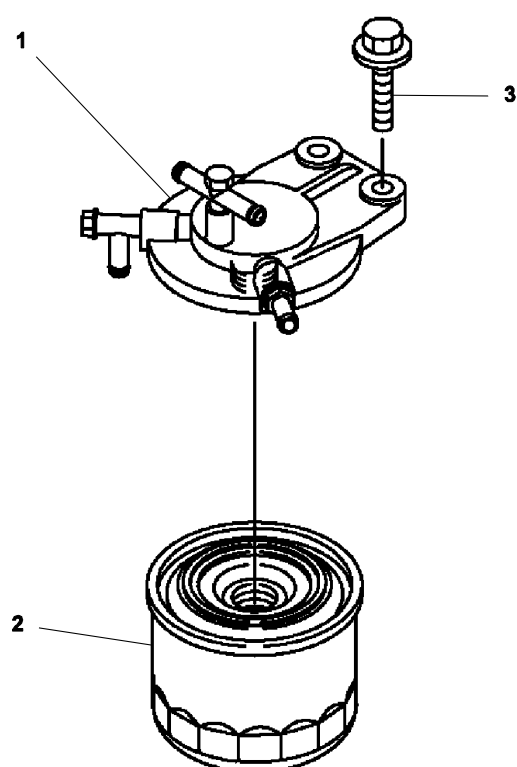

FUEL FILTER

[illegible]

 
FUEL/WATER SEPARATOR

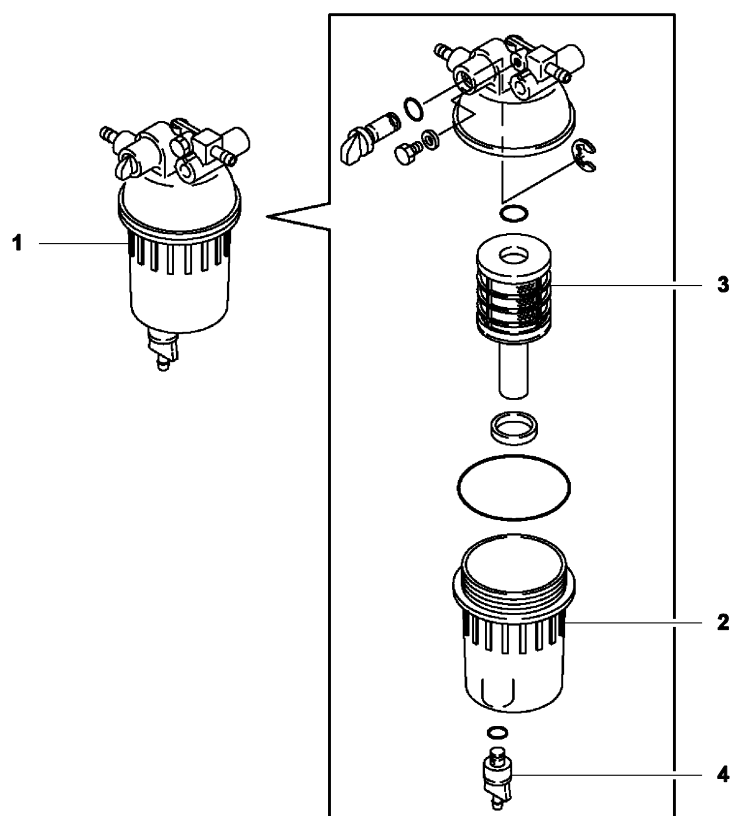

FUEL/WATER SEPARATOR	
----------------------	--

[illegible]

 FUEL FEED PUMP

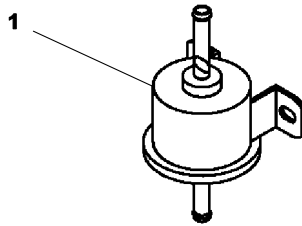


T8910_00
12/16

FUEL FEED PUMP	
----------------	--

[illegible]

 STARTER MOTOR

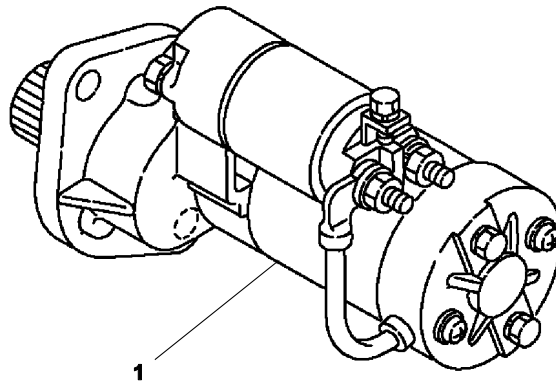


T6911_00
12/16

STARTER MOTOR

[illegible]

 ALTERNATOR

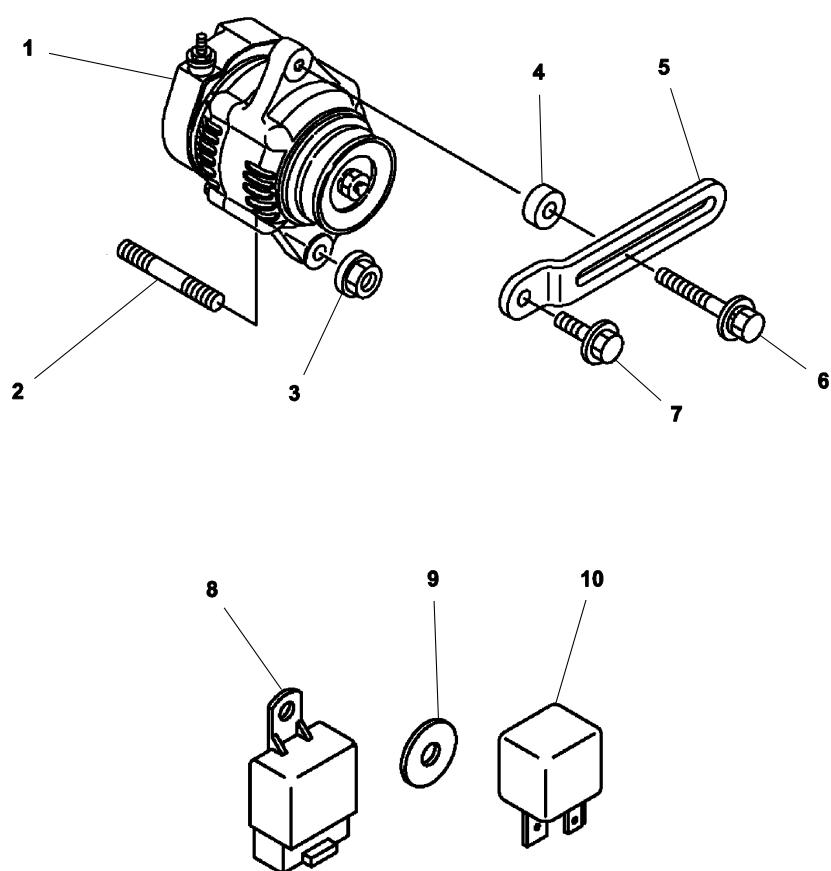


ALTERNATOR

[illegible]

GASKET SET

 
1

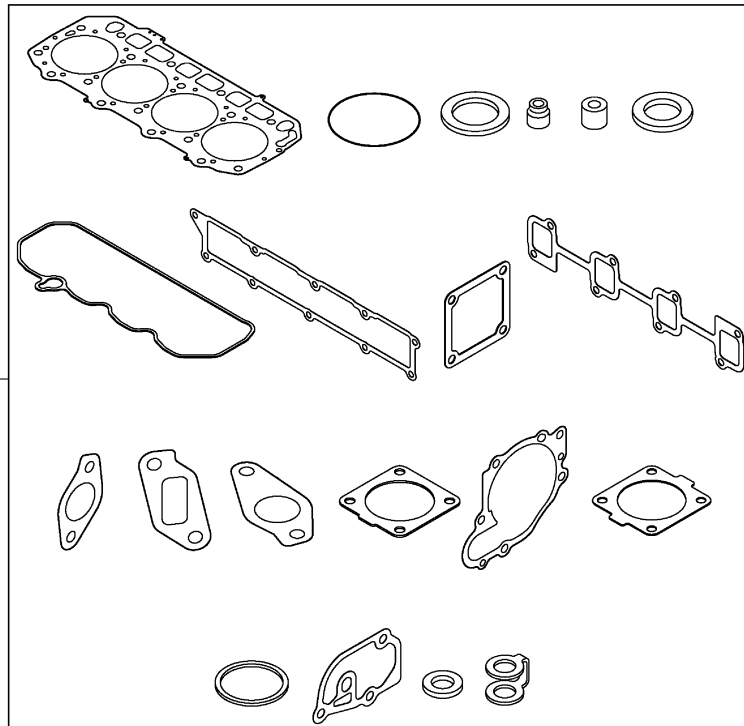

GASKET SET	
------------	--

[illegible]

 
BELT TRANSMISSION

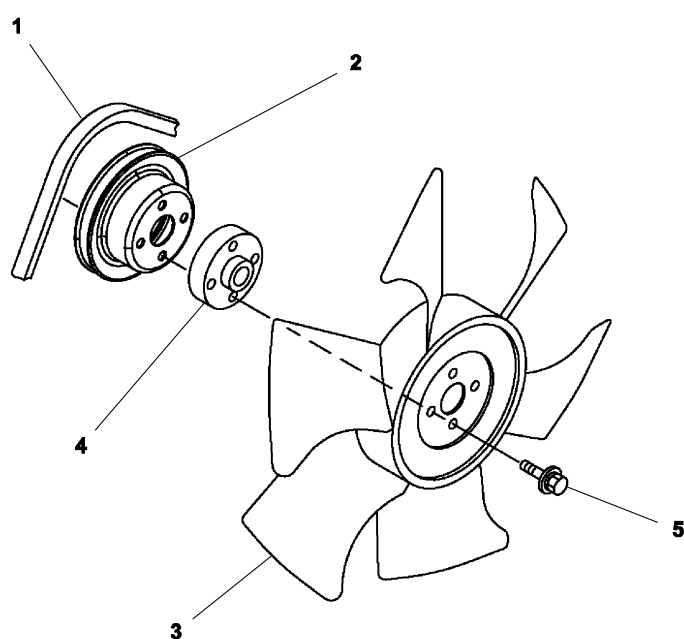

BELT TRANSMISSION

[illegible]

 
THERMOSTAT

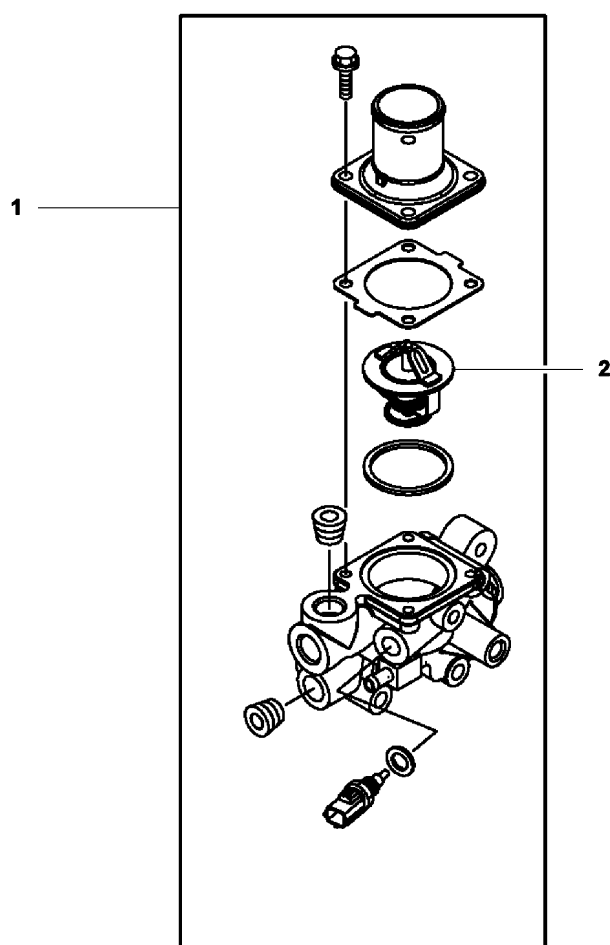

THERMOSTAT

[illegible]

 WATER PUMP

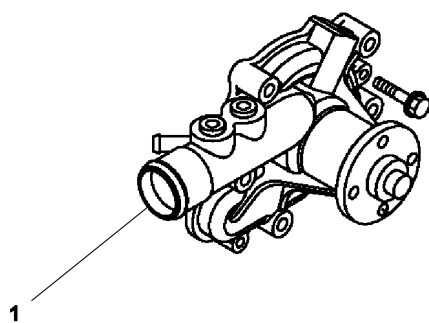


T6916_00
12/16

WATER PUMP	
------------	--

[illegible]

 OPTION - FRAME PROTECTION

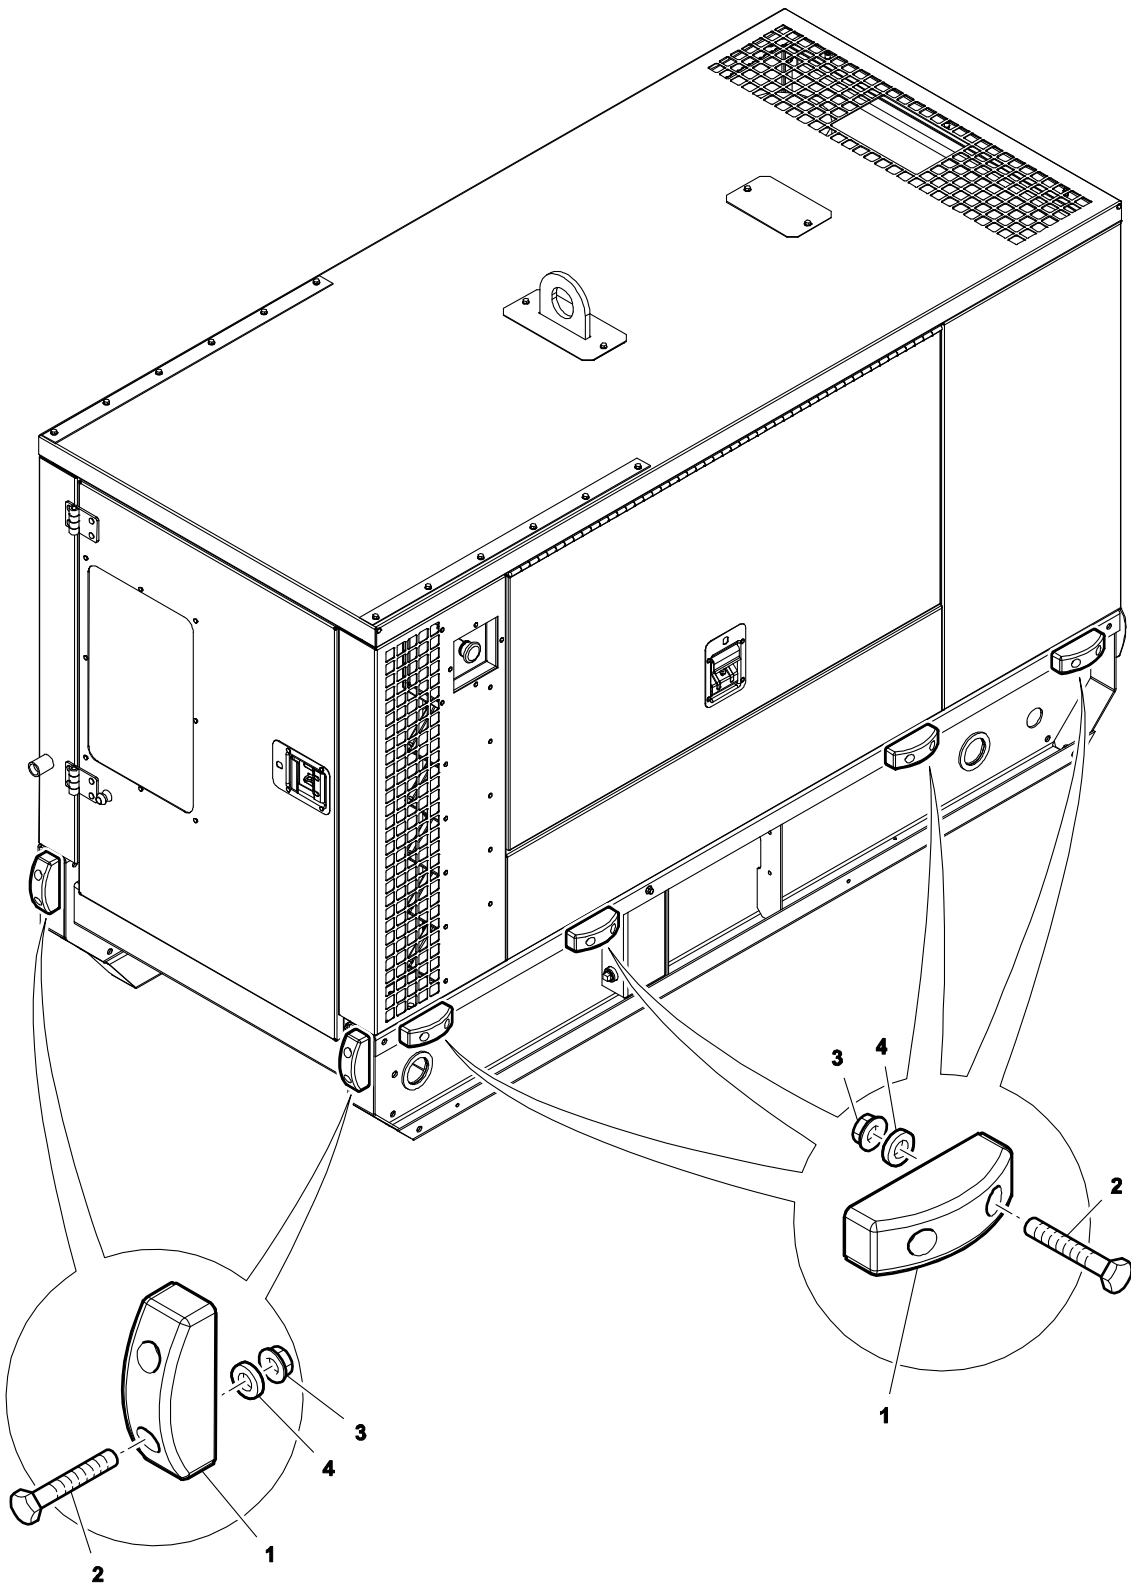


T6922_01
06/17

OPTION - FRAME PROTECTION

[illegible]

 OPTION - OIL SUMP PUMP

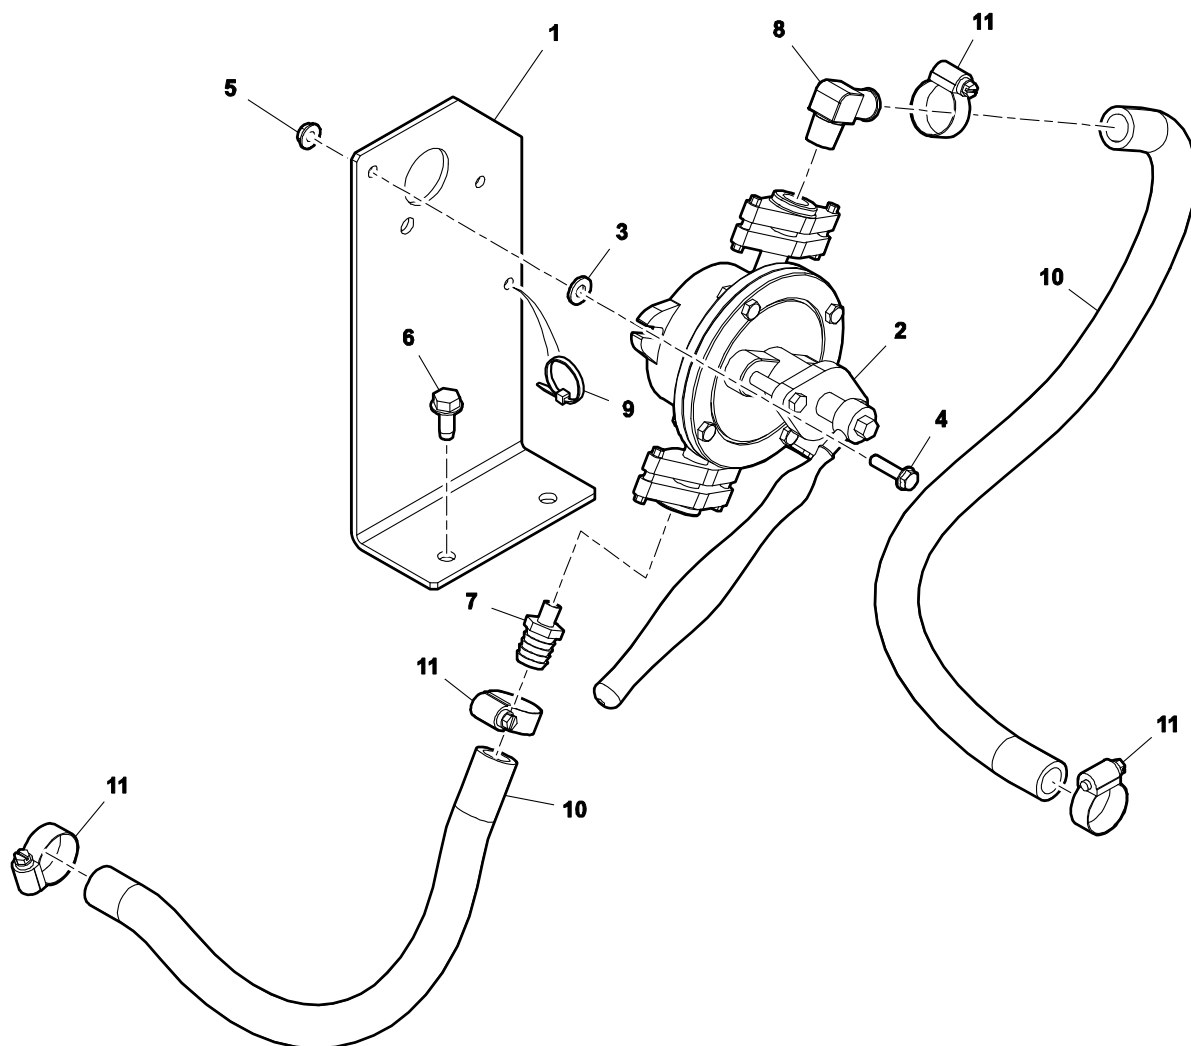


T6900_01
06/17

OPTION - OIL SUMP PUMP

[illegible]

 OPTION - SUPER START PACKAGE

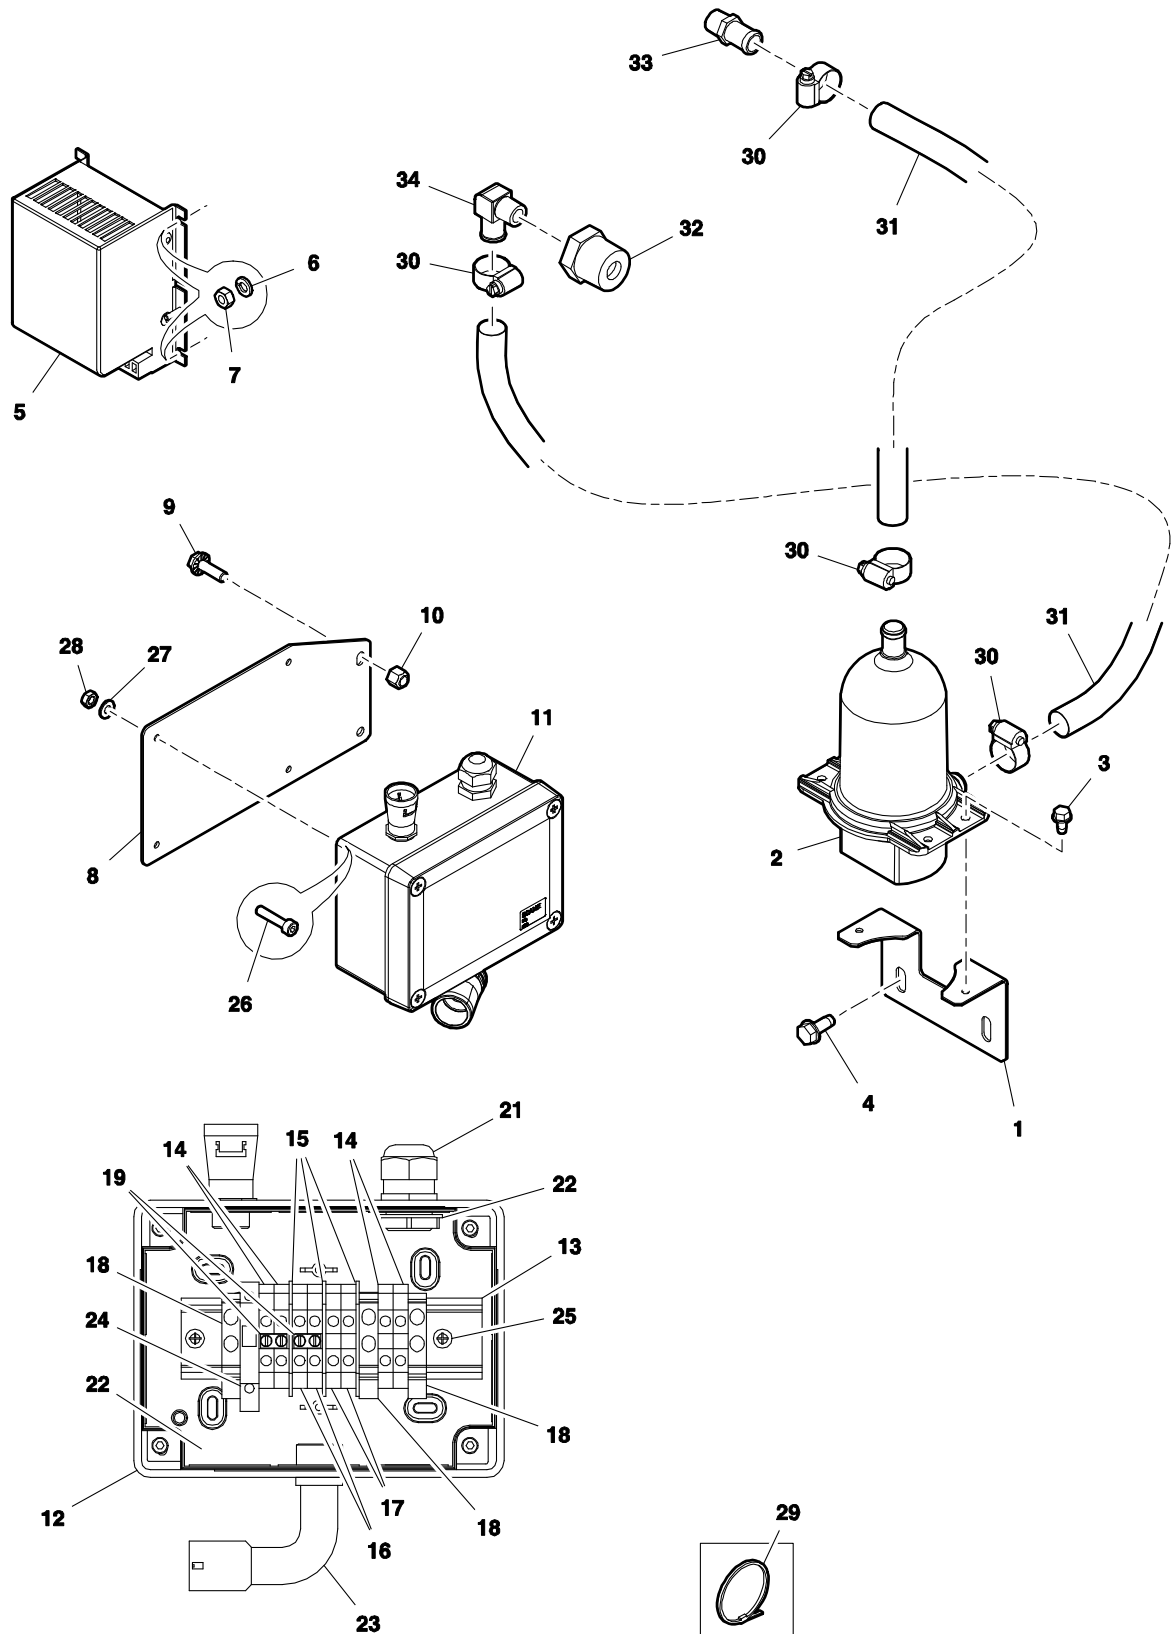


T6924_01
06/17

OPTION - SUPER START PACKAGE

Item	Part Number	Description	Remarks	Serial Number	Qty
1	46699421	BRACKET			1
2	23212152	HEATER, TANK			1
3	46700609	SCREW			2
4	22959936	SCREW			2
5	46623547	CHARGER, BATTERY			1
6	92304641	WASHER			4
7	96705132	NUT			4
8	46697963	BRACKET			1
9	22125165	SCREW			2
10	96704580	NUT			2
11	46698042	CONNECTION BOX ASSEMBLY	W/Ref. 12-25		1
12	23251986	BOX			1
13	23370729	RAIL			1
14	22768436	TERMINAL			4
15	46631806	PARTITION			3
16	46561639	TERMINAL			2
17	46561640	TERMINAL, EARTH			2
18	22750970	TERMINAL			3
19	46631807	CONNECTOR			2
20	46631826	CONNECTOR	W/Ref. 21-22		1
21	22950133	CONNECTOR, GLAND CABLE			1
22	46631808	NUT, CABLE GLAND			1
23	23339021	ELBOW			2
24	22747299	HOLDER			1
25	46631820	SCREW			2
26	96742283	SCREW			4
27	92340439	WASHER			4
28	92340454	NUT			4
29	92281427	TIE, CABLE			5
30	95220844	CLAMP			4
31	35326578	HOSE			2

 
OPTION - SUPER START PACKAGE (CONT'D)

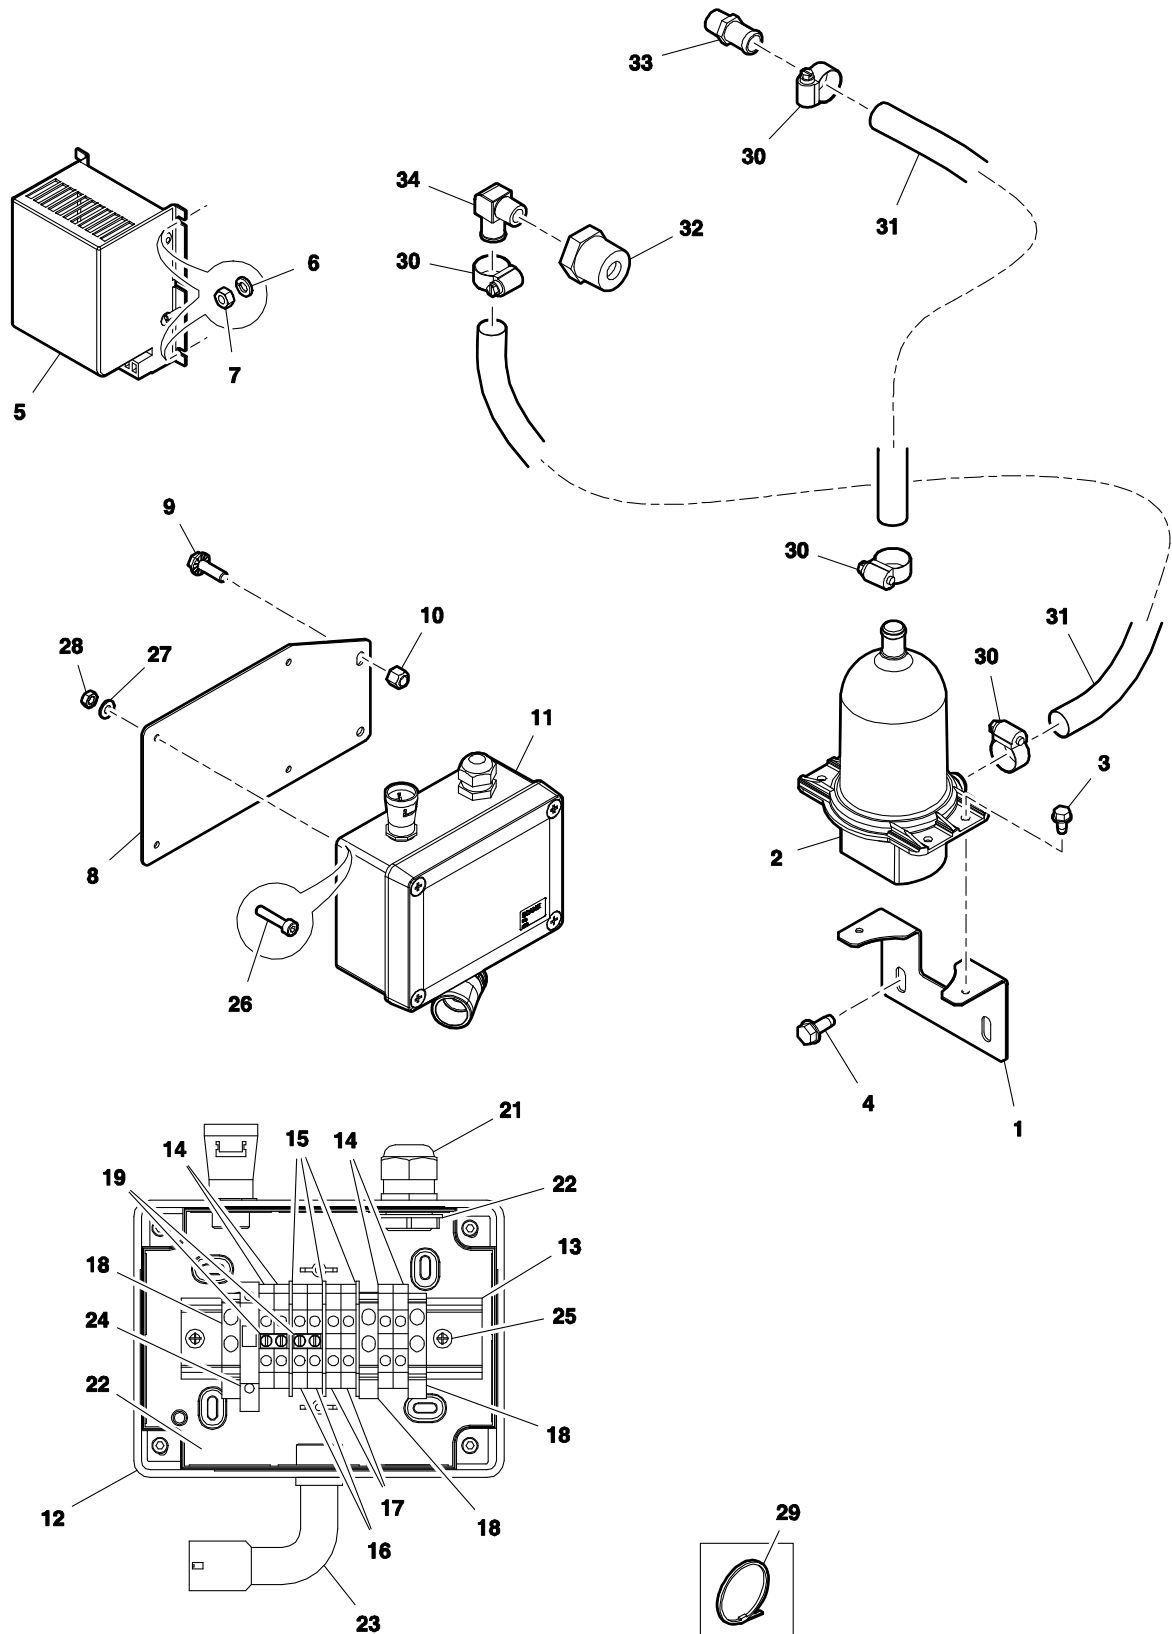

T6924_01
06/17

[illegible][illegible]

 
OPTION - 3 WAY FUEL VALVE

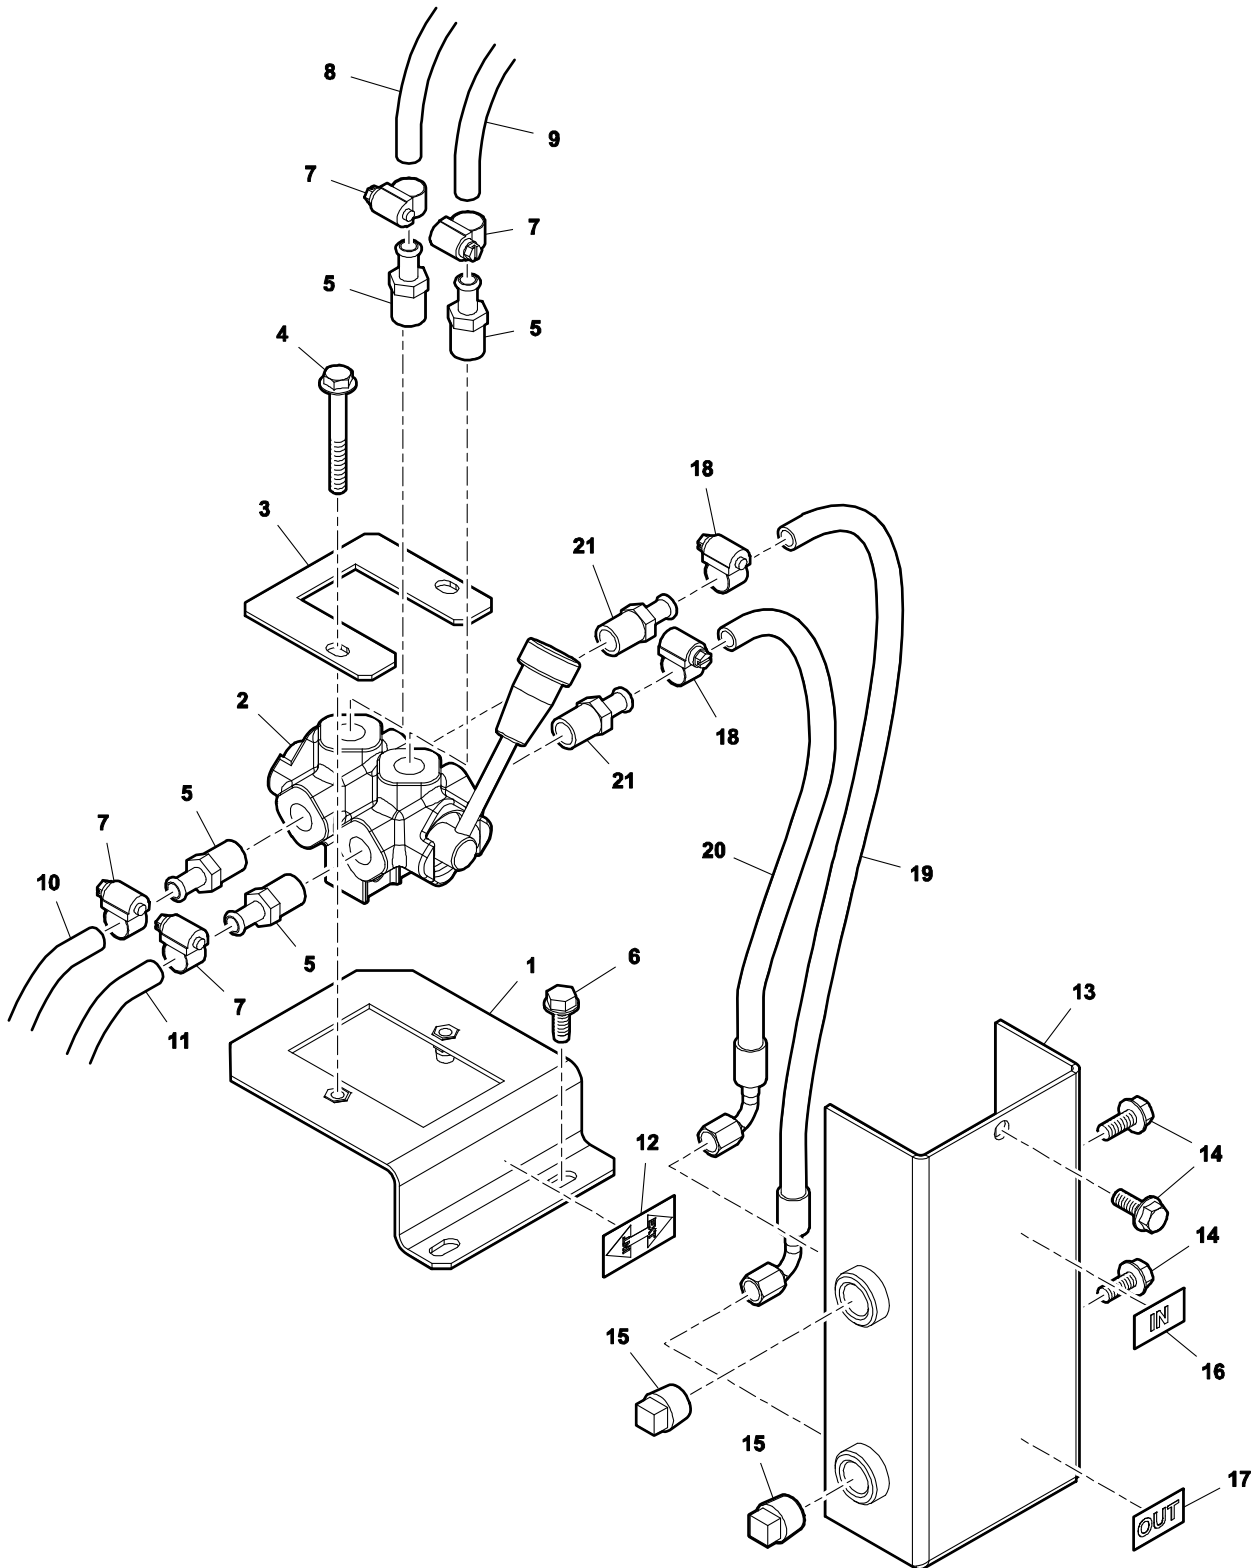

T6894_01
07/17

[illegible]

 OPTION - NO CONTAINMENT DRAIN PLUG

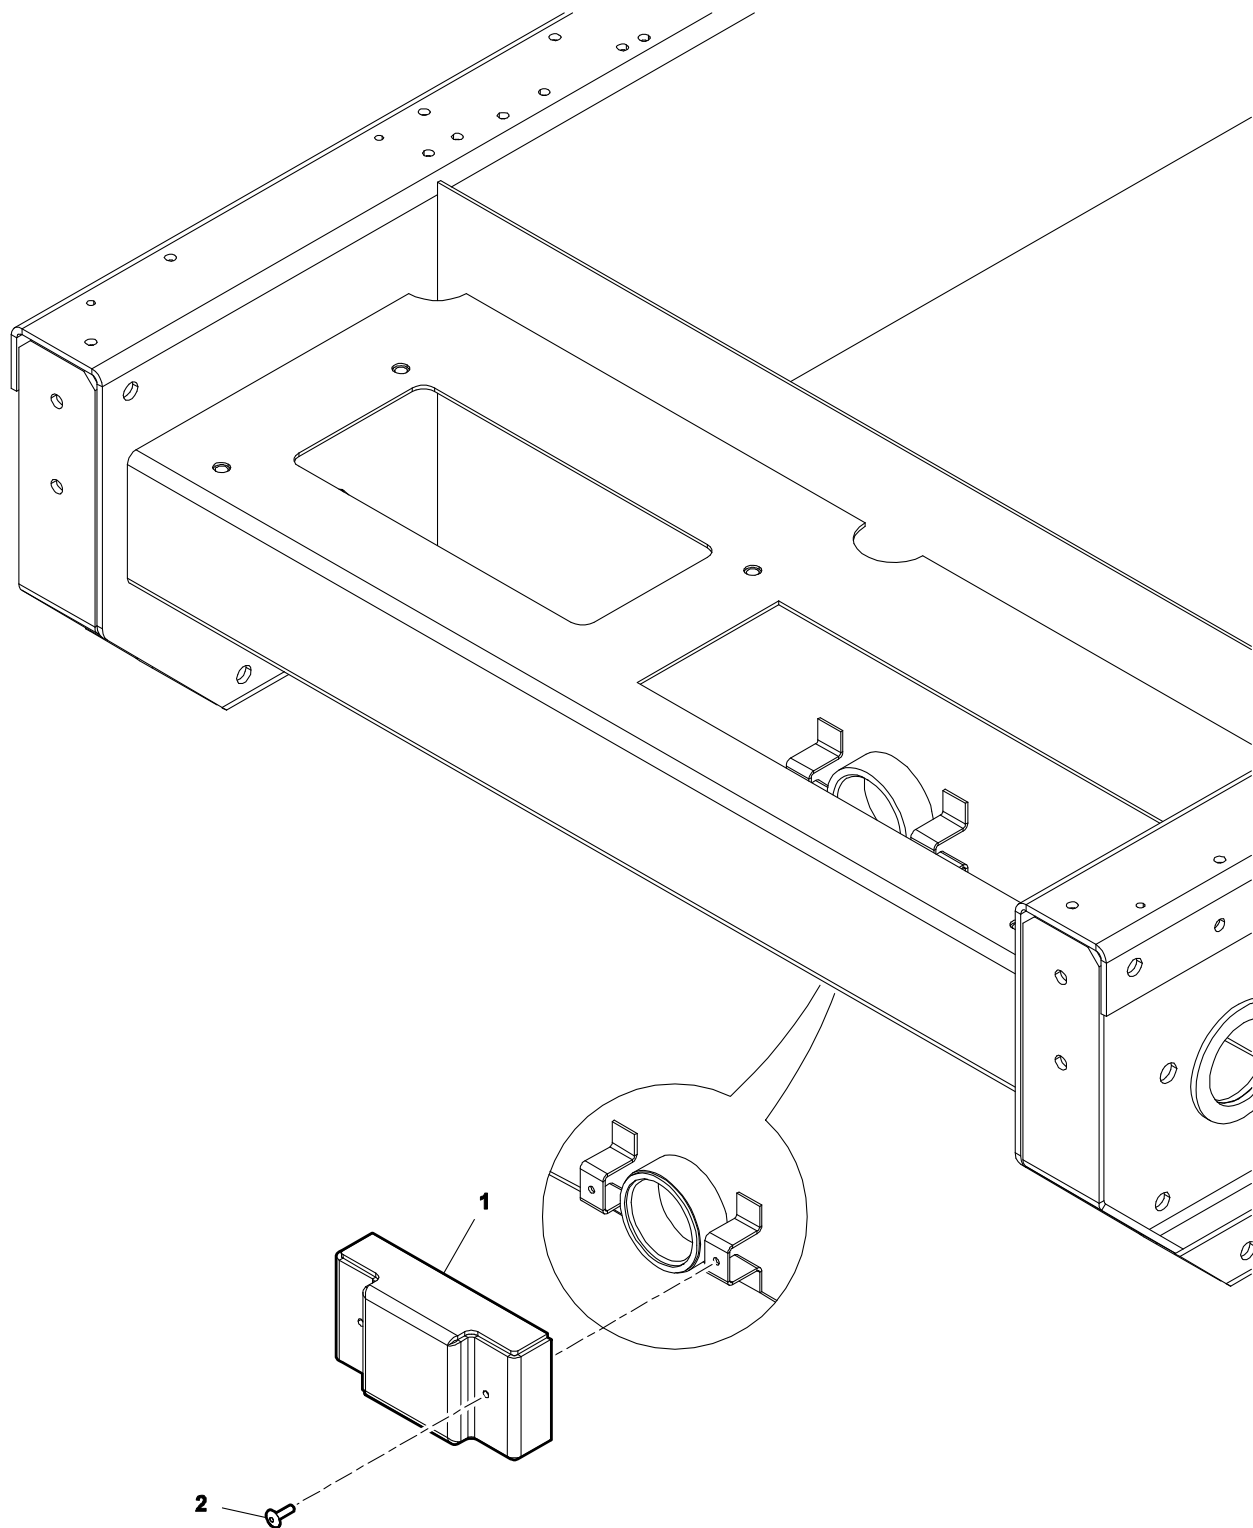


T6899_00
11/16

OPTION - NO CONTAINMENT DRAIN PLUG

[illegible]

 OPTION - NO SOCKETS

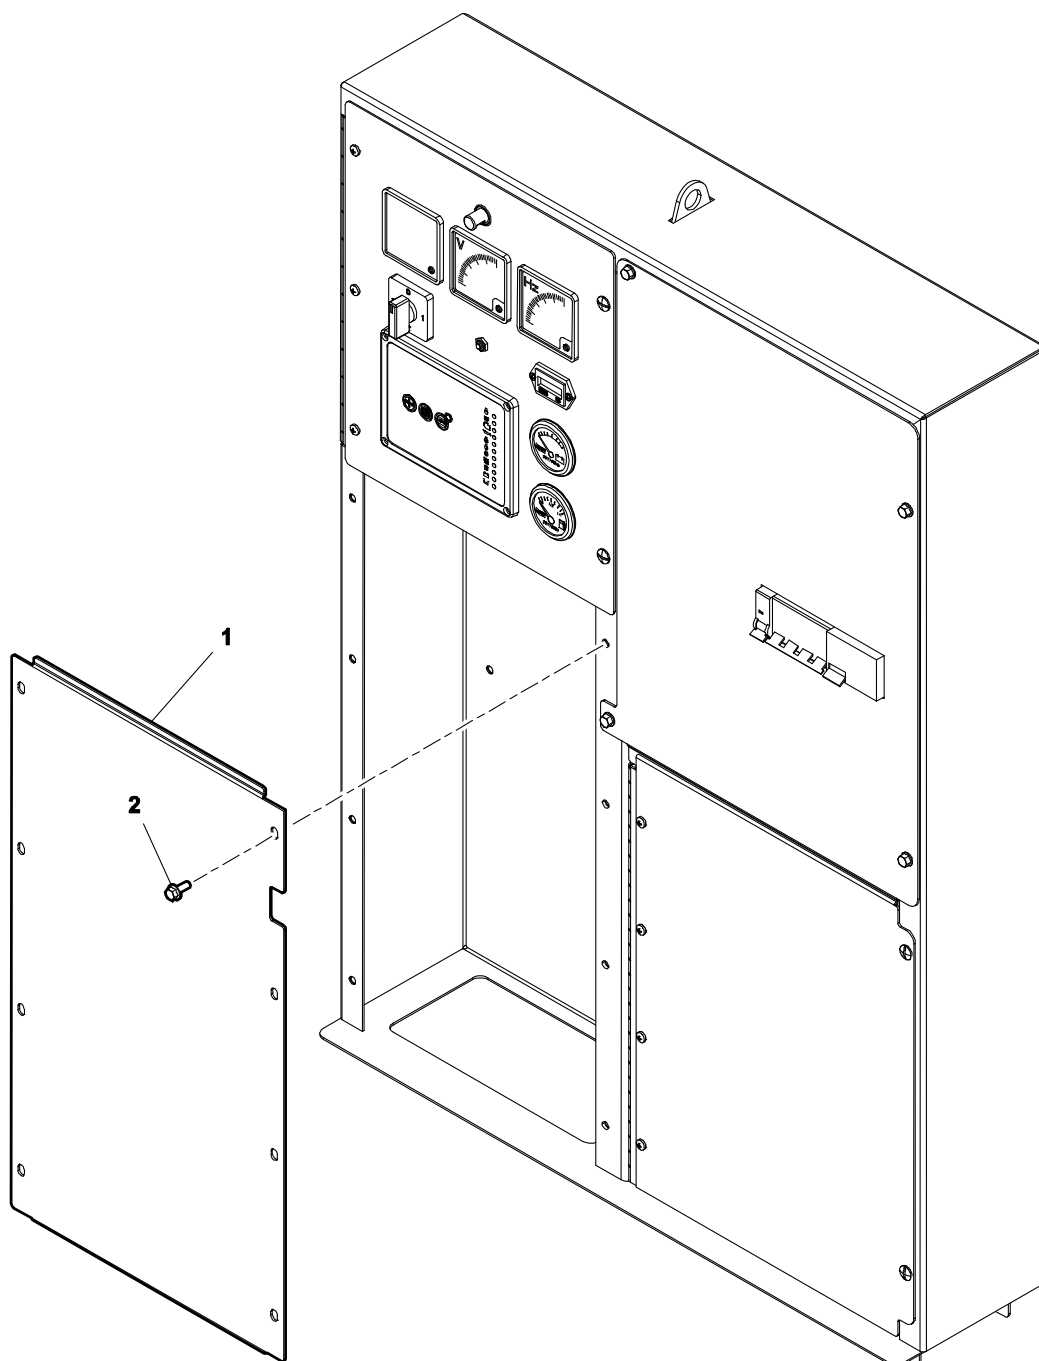


T6897_00
11/16

OPTION - NO SOCKETS

[illegible]

 OPTION - SOCKETS (CE)



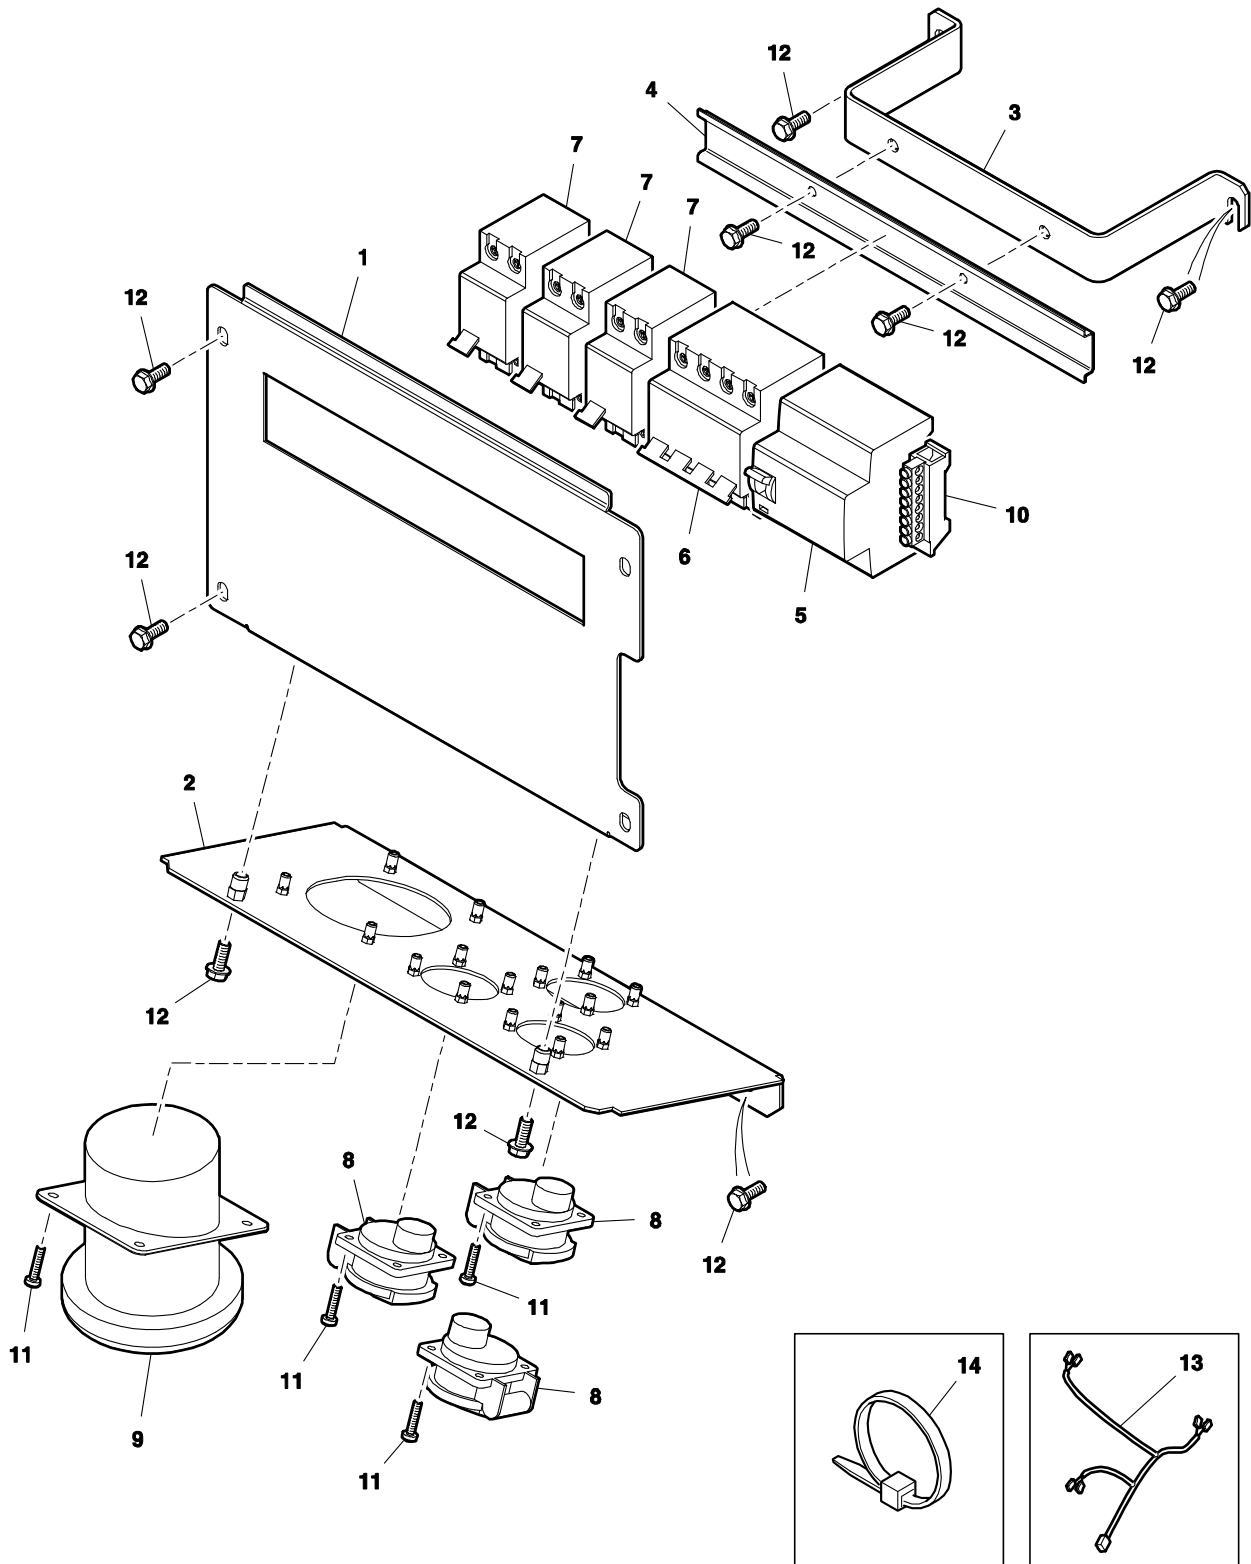


T6926_00
03/17

OPTION - SOCKETS (CE)	
---	--

[illegible]

   OPTION - DUAL FREQUENCY
(digital control panel only)

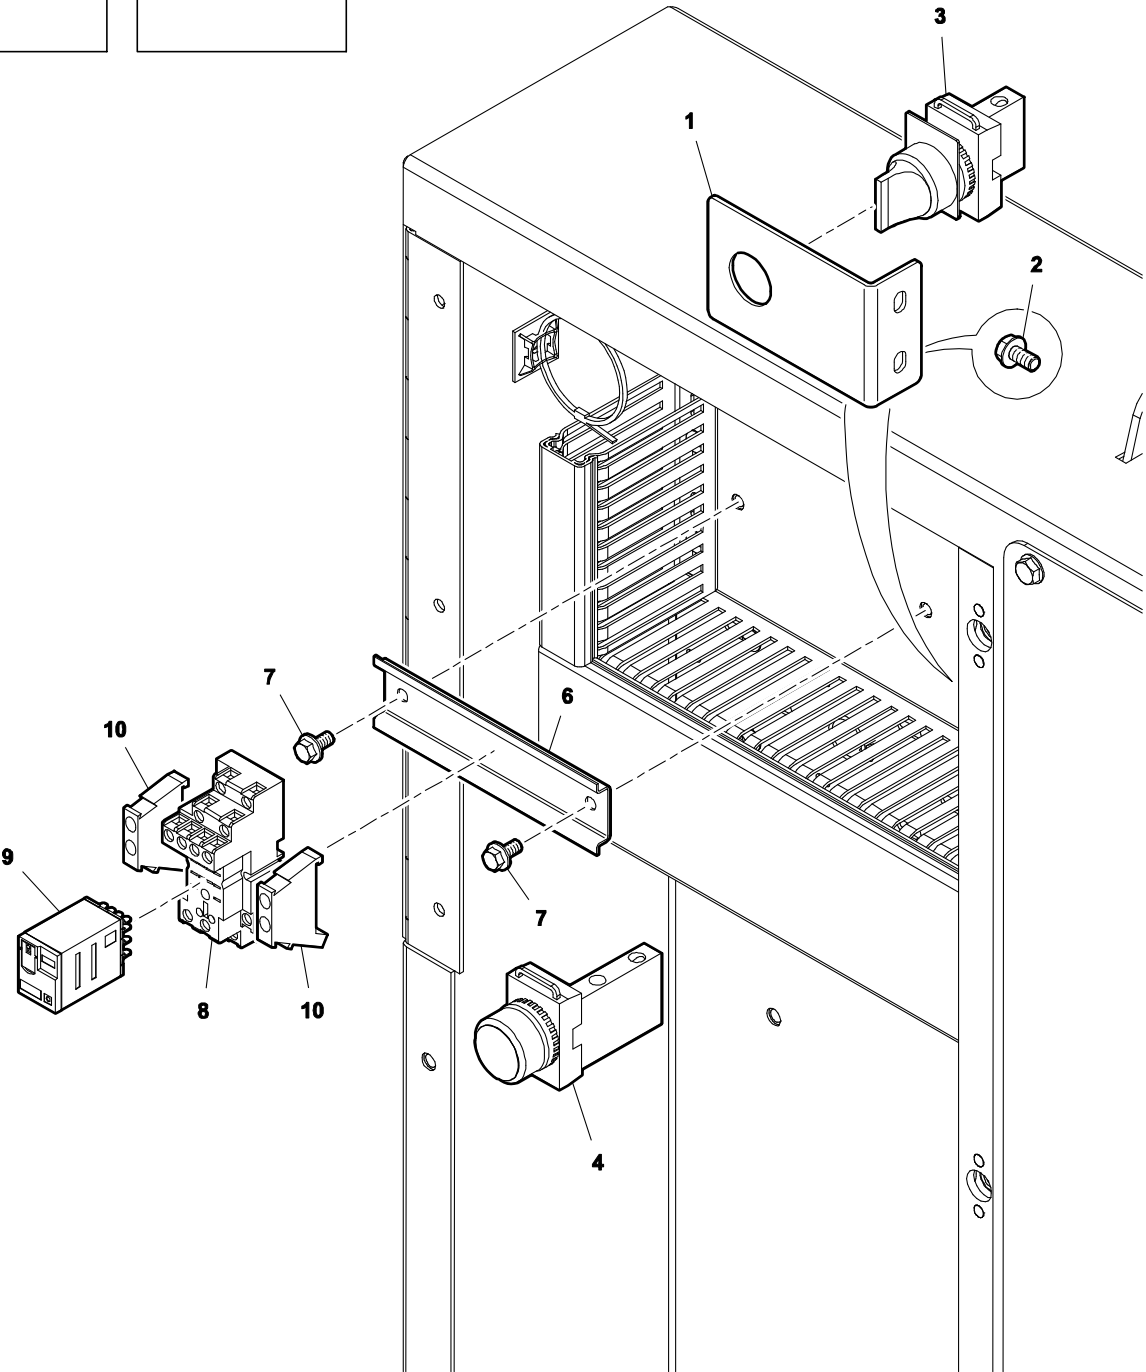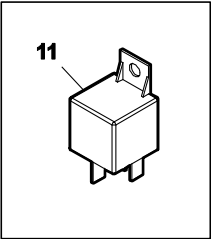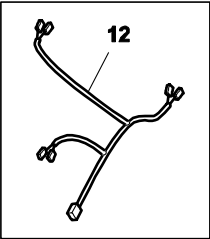


T6928_00
03/17

OPTION - DUAL FREQUENCY (digital control panel only)
--

[illegible]

 OPTION - EARTHING ROD

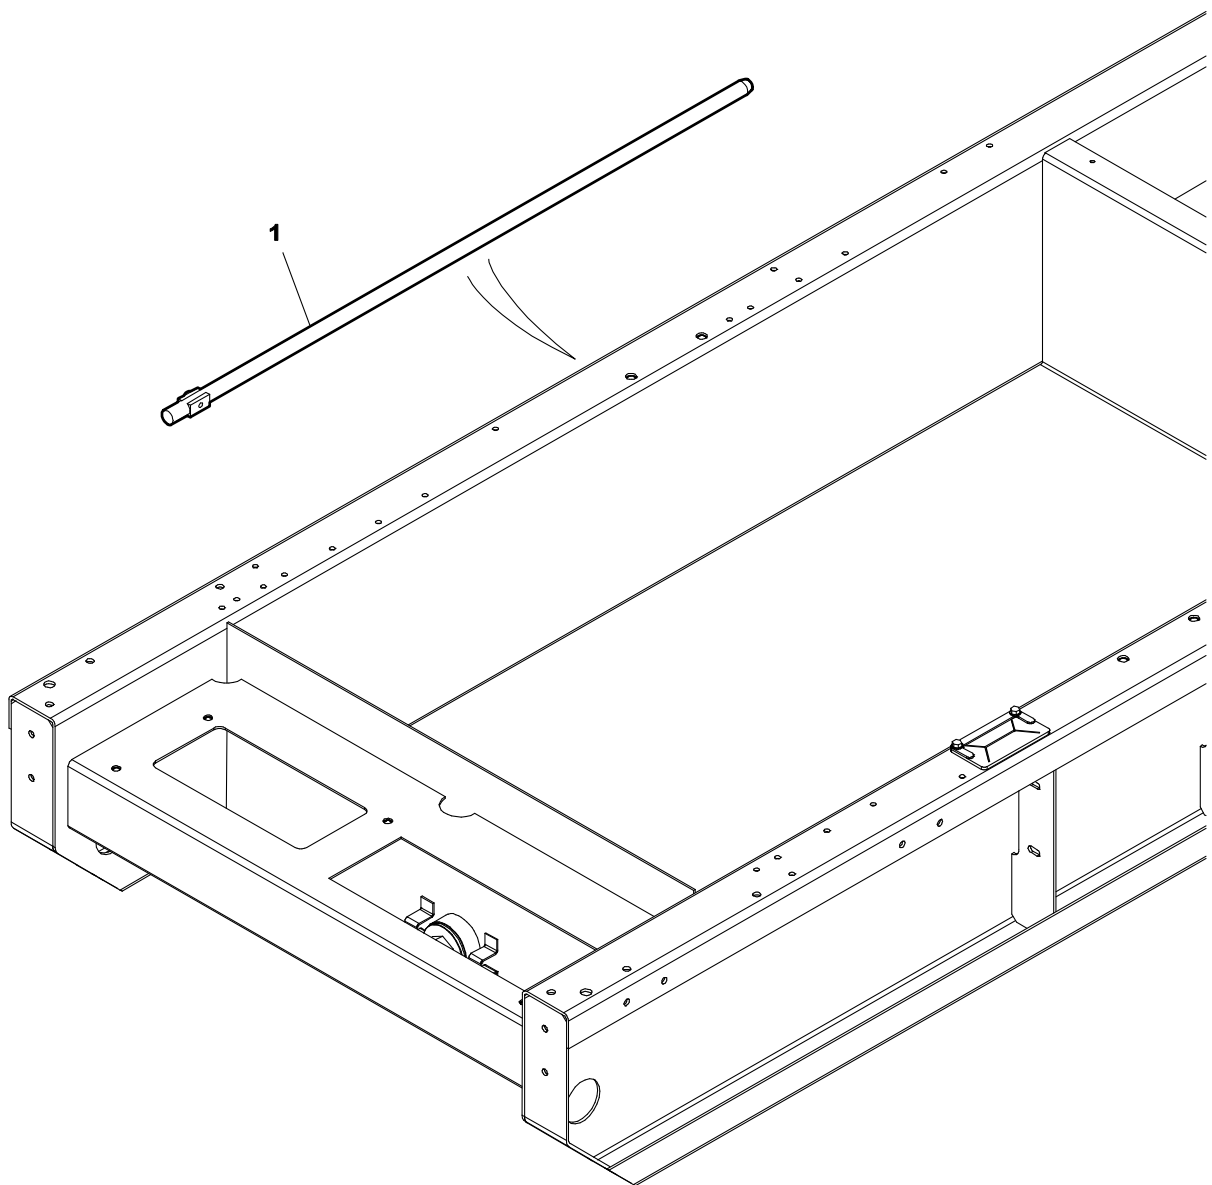


T6921_00
03/17

OPTION - EARTHING ROD	
--	--

[illegible]

 **MAINTENANCE KIT
(250 hours)**

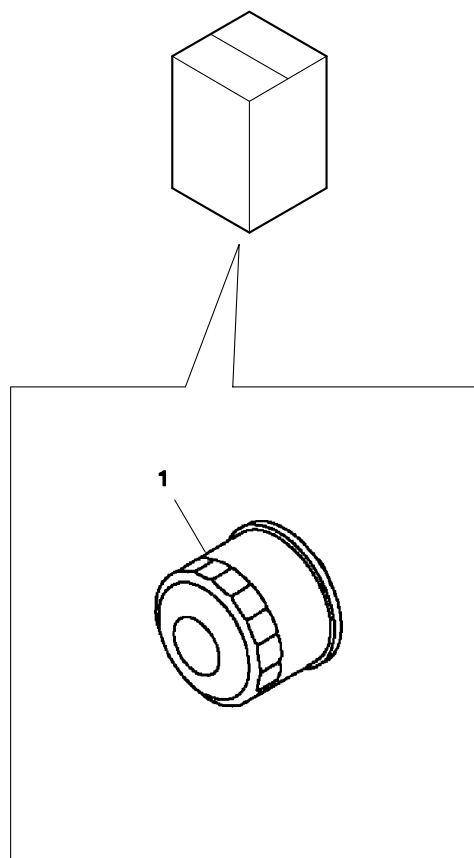


T6919_00
02/17

MAINTENANCE KIT (250 hours)

[illegible]

 MAINTENANCE KIT (500 hours)

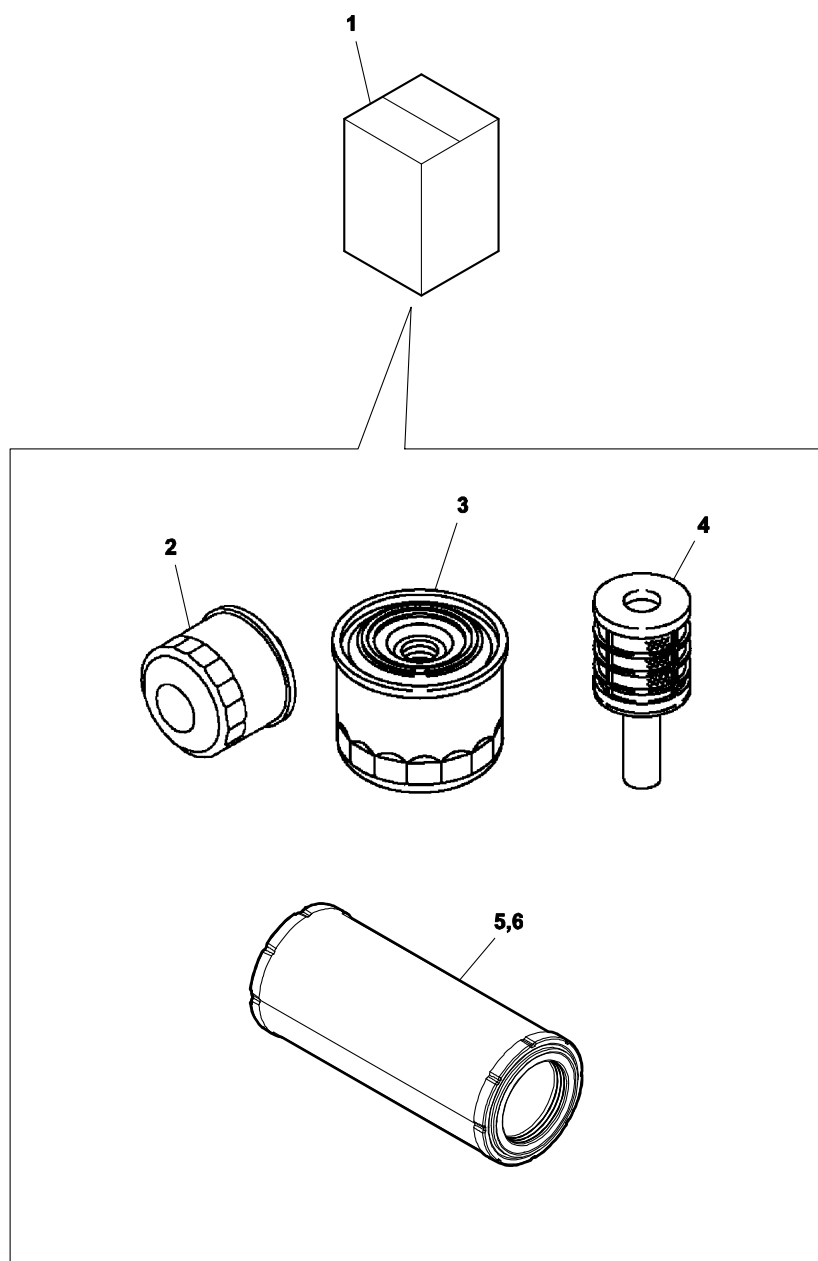


T6920_00
02/17

MAINTENANCE KIT (500 hours)

[illegible]

 RECOMMENDED SPARES (maintenance and repair items)

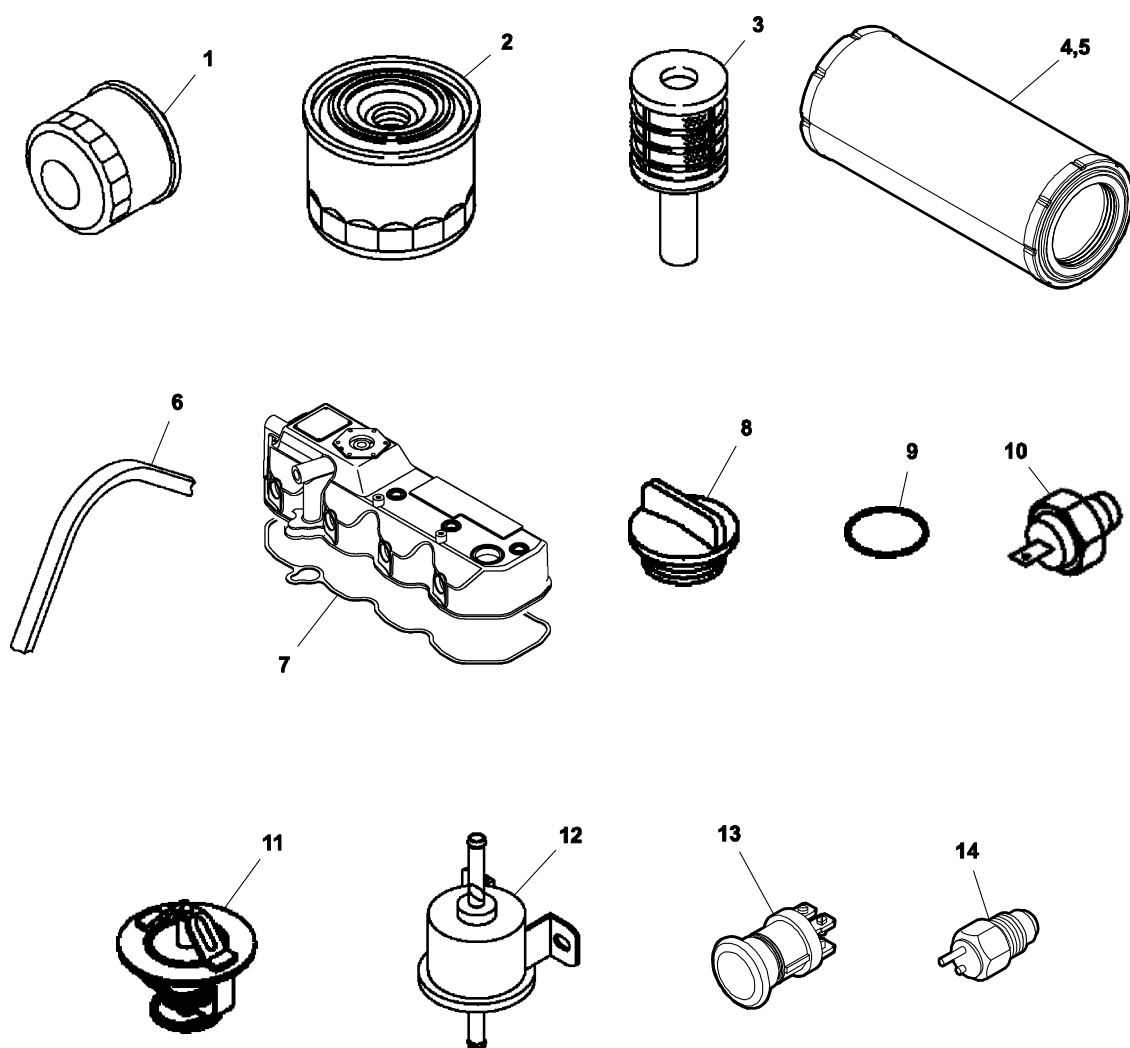


T6917_00
02/17

RECOMMENDED SPARES (maintenance and repair items)	
--	--

[illegible]

 RECOMMENDED SPARES (extended downtime prevention)

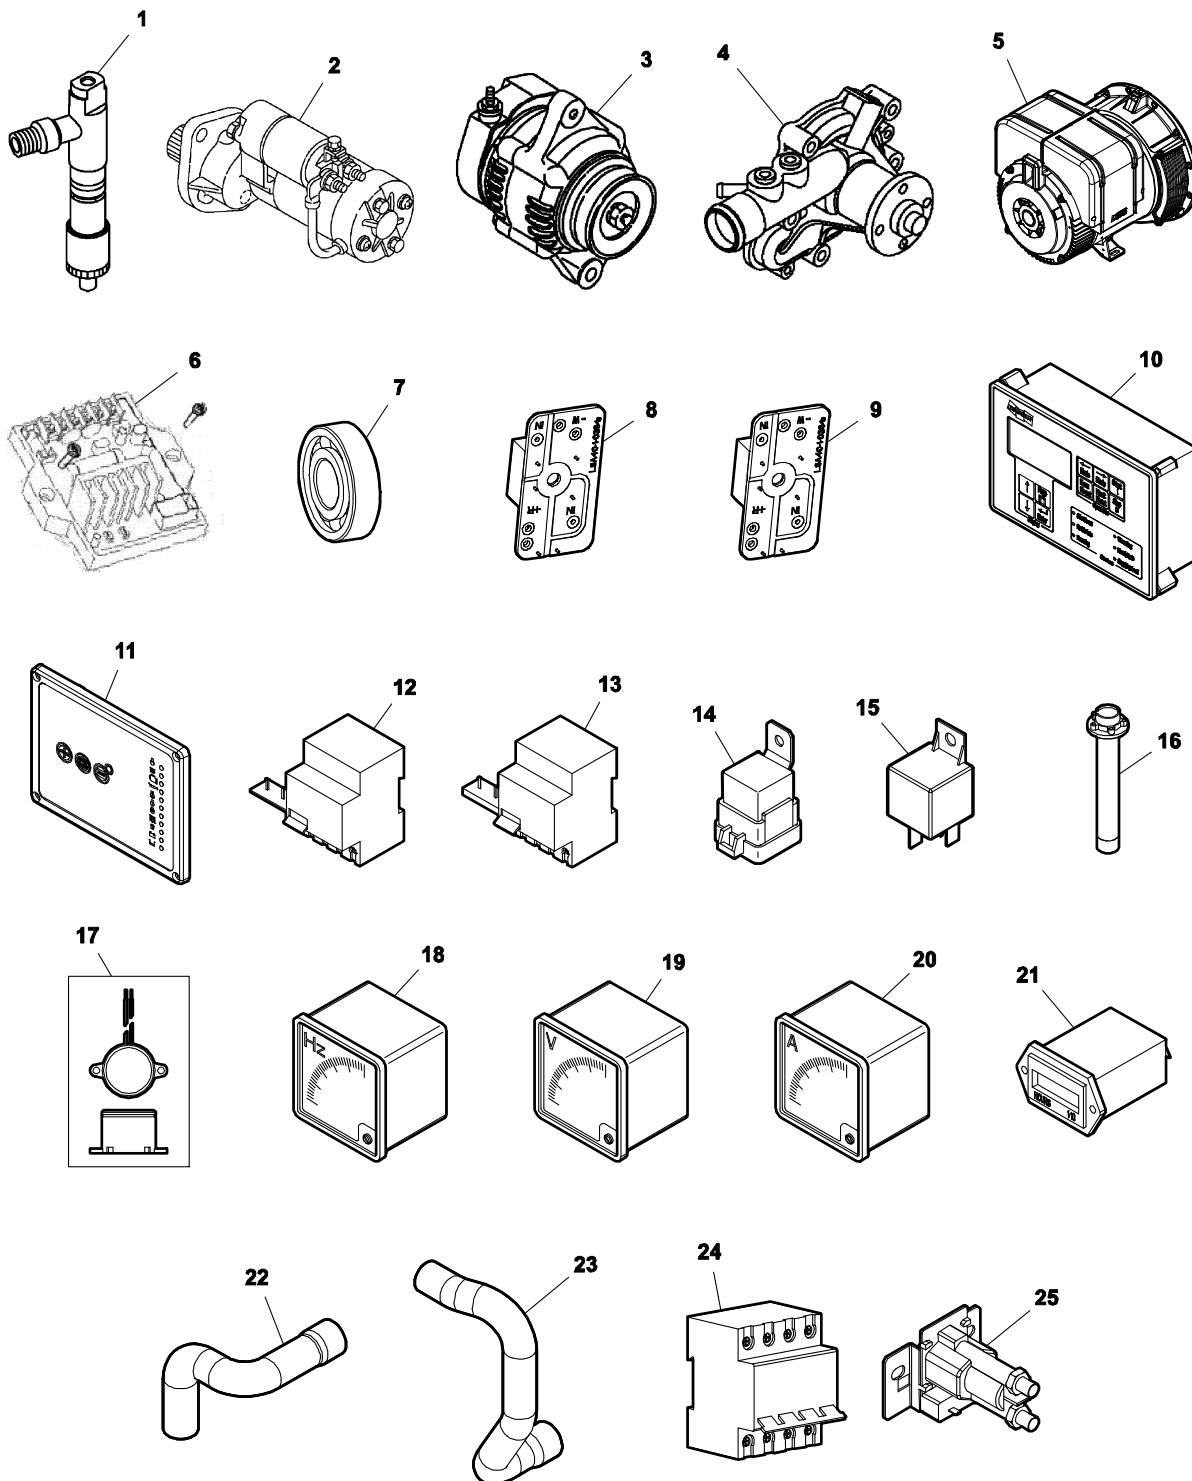

T6918_00
02/17

RECOMMENDED SPARES
(extended downtime prevention)

Item	Part Number	Description	Remarks	Serial Number	Qty
1	46697126	VALVE ASSEMBLY, INJECTION			4
2	22255566	STARTER ASSEMBLY			1
3	22255434	ALTERNATOR			1
4	46674786	WATER PUMP ASSEMBLY			1
5	46695101	ALTERNATOR	(HDI 2)		1
5	46695101	ALTERNATOR	(HDI 4)		1
6	46697912	REGULATOR, VOLTAGE	(AVR)		1
7	46551466	BEARING			1
8	46551463	DIODE BRIDGE ASSEMBLY	(with surge suppressor)	-> BF 325193	1
9	46695083	KIT, DIODE		BF 325194 ->	1
10	23103468	CONTROLLER			1
11	22778005	CONTROLLER			1
12	46650949	BREAKER			1
13	23269269	BREAKER			1
14	36878361	RELAY, WEATHERPROOF	(12 V)		1
15	46622121	RELAY			1
16	22579213	SENDER			1
17	23189319	HORN			1
18	22672547	HERTZMETER			1
19	22672471	VOLTMETER			1
20	46588485	AMMETER			1
21	22780985	HOURLMETER			1
22	46698481	PIPE, COOLING			1
23	46698479	PIPE, COOLING			1
24	23269194	BREAKER			1
25	36856250	RELAY			1

Intentionally left blank

NUMERICAL INDEX

Part Number	Denomination	WAS	Page	Subgroup
15896574	STUD		59	OIL FILTER ASSEMBLY
15896715	THERMOSTAT		81	THERMOSTAT
			109	RECOMMENDED SPARES
15896830	BOLT		75	ALTERNATOR
15897077	PUMP, FUEL		109	RECOMMENDED SPARES
15898117	GUIDE, DIPSTICK		57	DIPSTICK
15898182	CAP, OIL FILLER		55	ROCKER COVER
			109	RECOMMENDED SPARES
15898349	HEAD, FUEL FILTER		67	FUEL FILTER
15898752	STUD		75	ALTERNATOR
15898984	O-RING		55	ROCKER COVER
			109	RECOMMENDED SPARES
15899099	BOLT		43	ENGINE ASSEMBLY
			67	FUEL FILTER
			79	BELT TRANSMISSION
15899206	NUT		75	ALTERNATOR
22125165	SCREW		89	OPTION - SUPER START PACKAGE
22255434	ALTERNATOR		75	ALTERNATOR
			111	RECOMMENDED SPARES
22255566	STARTER ASSEMBLY		73	STARTER MOTOR
			111	RECOMMENDED SPARES
22306229	SCREW		93	OPTION - 3 WAY FUEL VALVE
22312409	COVER		5	ENCLOSURE
22321111	HINGE		5	ENCLOSURE
22363584	VALVE, DRAIN		41	ENGINE ASSEMBLY
22375141	VALVE		49	COOLING SYSTEM
22465165	STUD		21	CONTROL PANEL
			23	CONTROL PANEL
			27	POWER PEDESTAL ASSEMBLY
22465207	RECEPTACLE		27	POWER PEDESTAL ASSEMBLY
22470322	PANEL		5	ENCLOSURE
22499487	WASHER		21	CONTROL PANEL
			23	CONTROL PANEL
			27	POWER PEDESTAL ASSEMBLY
22499495	RETAINER		21	CONTROL PANEL
			23	CONTROL PANEL
			27	POWER PEDESTAL ASSEMBLY
22499768	STRIKER, DOOR		3	MAIN FRAME
22503692	SWITCH, EMERGENCY STOP		5	ENCLOSURE
			109	RECOMMENDED SPARES
22503825	BULB, LAMP		21	CONTROL PANEL
			23	CONTROL PANEL
22515605	RIVET		27	POWER PEDESTAL ASSEMBLY
22524433	TUBE, EXHAUST		47	EXHAUST SYSTEM
22577076	BRACKET		3	MAIN FRAME
22579213	SENDER		51	FUEL SYSTEM
			111	RECOMMENDED SPARES

Part Number	Denomination	WAS	Page	Subgroup
22580351	SENSOR, CONTAINMENT LE		51	FUEL SYSTEM
22593396	PLATE, LIFTING EYE		3	MAIN FRAME
22597595	MUFFLER, EXHAUST		47	EXHAUST SYSTEM
22599799	BRACKET		47	EXHAUST SYSTEM
22612667	SUPPORT, ALTERNATOR		15	ALTERNATOR MOUNTING
22616353	U-BOLT		51	FUEL SYSTEM
22630461	SUPPORT		5	ENCLOSURE
22644082	PLATE		13	DECALS AND DOCUMENTATION
22650451	SOCKET		99	OPTION - SOCKETS
22666093	BRIDGE		99	OPTION - SOCKETS
22672471	VOLTMETER		111	RECOMMENDED SPARES
22672547	HERTZMETER		111	RECOMMENDED SPARES
22680771	PAD, FUEL TANK		51	FUEL SYSTEM
22682488	COVER		5	ENCLOSURE
22682512	BOX, E-STOP		5	ENCLOSURE
22684971	RIVET		5	ENCLOSURE
22716716	PAD		19	BATTERY MOUNTING
22721088	TRANSFORMER, CURRENT		31	POWER PEDESTAL ASSEMBLY
22724165	SKID, FORKLIFT		9	FORKLIFT SKID
22734859	RAIL, DIN		31	POWER PEDESTAL ASSEMBLY
22737365	BRACKET		47	EXHAUST SYSTEM
22747299	HOLDER		31 89	POWER PEDESTAL ASSEMBLY OPTION - SUPER START PACKAGE
22750970	TERMINAL		31 89 101	POWER PEDESTAL ASSEMBLY OPTION - SUPER START PACKAGE OPTION - DUAL FREQUENCY
22765523	BRACKET		51	FUEL SYSTEM
22765531	BRACKET		51	FUEL SYSTEM
22765549	BRACKET		51	FUEL SYSTEM
22768436	TERMINAL		31 89	POWER PEDESTAL ASSEMBLY OPTION - SUPER START PACKAGE
22778005	CONTROLLER		111	RECOMMENDED SPARES
22780985	HOURLMETER		111	RECOMMENDED SPARES
22783245	BRACKET		51	FUEL SYSTEM
22787436	WINGNUT		27	POWER PEDESTAL ASSEMBLY
22787444	WASHER		27	POWER PEDESTAL ASSEMBLY
22817522	TERMINAL		31	POWER PEDESTAL ASSEMBLY
22825533	BARRIER		31	POWER PEDESTAL ASSEMBLY
22832174	TERMINAL		31	POWER PEDESTAL ASSEMBLY
22855258	RIVET		95	OPTION - NO CONTAINMENT DRAIN PLUG
22855969	CHANNEL, HORIZONTAL		3	MAIN FRAME
22890701	BATTERY		19	BATTERY MOUNTING
22896666	SEAL, COVER		5	ENCLOSURE
22899199	ROD, EARTH		103	OPTION - EARTHING ROD
22901326	PANEL		5	ENCLOSURE
22901334	PANEL		5	ENCLOSURE

Part Number	Denomination	WAS	Page	Subgroup
22959936	SCREW		5	ENCLOSURE
			15	ALTERNATOR MOUNTING
			19	BATTERY MOUNTING
			41	ENGINE ASSEMBLY
			51	FUEL SYSTEM
			87	OPTION - OIL SUMP PUMP
			89	OPTION - SUPER START PACKAGE
			93	OPTION - 3 WAY FUEL VALVE
23015084	NECK, FILLER		51	FUEL SYSTEM
23047566	DECAL, NO WATER		13	DECALS AND DOCUMENTATION
23047582	DECAL, CRUSH HAZARD		13	DECALS AND DOCUMENTATION
23047624	DECAL, COOLANT LEVEL		13	DECALS AND DOCUMENTATION
23062893	DECAL 91dB SOUND POWER		11	DECALS AND DOCUMENTATION
23064587	SCREW		31	POWER PEDESTAL ASSEMBLY
23076656	WASHER		19	BATTERY MOUNTING
23103468	CONTROLLER		21	CONTROL PANEL
			111	RECOMMENDED SPARES
23146434	RAIL, DIN		101	OPTION - DUAL FREQUENCY
23146905	CAP, RAIN		47	EXHAUST SYSTEM
23149438	SWITCH		21	CONTROL PANEL
23150030	DECAL		21	CONTROL PANEL
23174014	CLAMP		45	AIR INTAKE
23189319	HORN		31	POWER PEDESTAL ASSEMBLY
			111	RECOMMENDED SPARES
23212152	HEATER, TANK		89	OPTION - SUPER START PACKAGE
23251986	BOX		89	OPTION - SUPER START PACKAGE
23269186	BREAKER, CIRCUIT		99	OPTION - SOCKETS
23269194	BREAKER		31	POWER PEDESTAL ASSEMBLY
			111	RECOMMENDED SPARES
23269228	TRANSFORMER		39	POWER PEDESTAL COVERS
23269244	RELAY		39	POWER PEDESTAL COVERS
23269269	BREAKER		37	POWER PEDESTAL COVERS
			111	RECOMMENDED SPARES
23270325	TRIP, COIL 12V		31	POWER PEDESTAL ASSEMBLY
23285786	GASKET		55	ROCKER COVER
			109	RECOMMENDED SPARES
23286230	DIPSTICK		57	DIPSTICK
23286610	RELAY		75	ALTERNATOR
23293764	BREAKER		39	POWER PEDESTAL COVERS
23293772	CONTACT		39	POWER PEDESTAL COVERS
23330491	SCREW		5	ENCLOSURE
23339021	ELBOW		89	OPTION - SUPER START PACKAGE
23339609	PLUG, BLANKING		21	CONTROL PANEL
			23	CONTROL PANEL
			31	POWER PEDESTAL ASSEMBLY
23343957	HOUSING, THERMOSTAT		81	THERMOSTAT
23362841	LAMP		19	BATTERY MOUNTING
23370729	RAIL		89	OPTION - SUPER START PACKAGE
35114081	CLAMP		25	RELAY MOUNTING

Part Number	Denomination	WAS	Page	Subgroup
35209048	CLAMP		47	EXHAUST SYSTEM
35221639	CLIP, RETAINING		45	AIR INTAKE
35222538	CLIP, RETAINING		25	RELAY MOUNTING
35225085	CLAMP		25	RELAY MOUNTING
35252600	NUT		47	EXHAUST SYSTEM
35255561	SWITCH		19	BATTERY MOUNTING
35285600	HOSE		49 93	COOLING SYSTEM OPTION - 3 WAY FUEL VALVE
35296342	CLIP, RETAINING		51 93	FUEL SYSTEM OPTION - 3 WAY FUEL VALVE
35304047	NUT		15 41	ALTERNATOR MOUNTING ENGINE ASSEMBLY
35322395	SILENCER, PNEUMATIC		51	FUEL SYSTEM
35326578	HOSE		87 89	OPTION - OIL SUMP PUMP OPTION - SUPER START PACKAGE
35337070	SCREW		51	FUEL SYSTEM
35337328	STUD, BALL		5	ENCLOSURE
35356484	TUBE, NYLON		51	FUEL SYSTEM
35363498	HOSE		49 93	COOLING SYSTEM OPTION - 3 WAY FUEL VALVE
35369339	CONNECTOR		51	FUEL SYSTEM
35369347	CONNECTOR		51	FUEL SYSTEM
35393651	ELEMENT, SAFETY		45 107 109	AIR INTAKE MAINTENANCE KIT RECOMMENDED SPARES
35393669	CLIP, RETAINING		45	AIR INTAKE
35393677	VALVE, DUST EJECTOR		45	AIR INTAKE
35393685	ELEMENT, AIR FILTER		45 107 109	AIR INTAKE MAINTENANCE KIT RECOMMENDED SPARES
35393693	COVER, AIR CLEANER		45	AIR INTAKE
35393701	BODY, AIR CLEANER		45	AIR INTAKE
35393719	CAP, PLUG		45	AIR INTAKE
35587468	CLAMP		47	EXHAUST SYSTEM
35600261	SPRING		5	ENCLOSURE
36500106	MOUNT		41	ENGINE ASSEMBLY
36506756	BOLT		47	EXHAUST SYSTEM
36793602	LATCH		5	ENCLOSURE
36797652	SCREW		3 5 19 25 49	MAIN FRAME ENCLOSURE BATTERY MOUNTING RELAY MOUNTING COOLING SYSTEM
36845014	CAP		51	FUEL SYSTEM
36845022	STRAINER, FUEL		51	FUEL SYSTEM
36852622	LAMP ASSEMBLY		21 23	CONTROL PANEL CONTROL PANEL
36853257	ANGLE		19	BATTERY MOUNTING
36853265	WASHER		19	BATTERY MOUNTING

Part Number	Denomination	WAS	Page	Subgroup
36856250	RELAY		25 111	RELAY MOUNTING RECOMMENDED SPARES
36860005	J-BOLT		19	BATTERY MOUNTING
36878361	RELAY, WEATHERPROOF		25 111	RELAY MOUNTING RECOMMENDED SPARES
36879211	NUT, FLANGE		9	FORKLIFT SKID
36880995	SCREW		3 15	MAIN FRAME ALTERNATOR MOUNTING
36881886	NUT		5 27 47 51	ENCLOSURE POWER PEDESTAL ASSEMBLY EXHAUST SYSTEM FUEL SYSTEM
36884419	RIVET		5	ENCLOSURE
36889608	SCREW		25 31	RELAY MOUNTING POWER PEDESTAL ASSEMBLY
36897999	AIR CLEANER ASSEMBLY		45	AIR INTAKE
36898096	SCREW		31 35 37 49	POWER PEDESTAL ASSEMBLY POWER PEDESTAL COVERS POWER PEDESTAL COVERS COOLING SYSTEM
36898104	NUT		87	OPTION - OIL SUMP PUMP
36921344	NUTSERT		5	ENCLOSURE
39127287	TEE		21 23	CONTROL PANEL CONTROL PANEL
46520367	SPACER, ALTERNATOR		75	ALTERNATOR
46540647	DECAL, FUEL IN		93	OPTION - 3 WAY FUEL VALVE
46540654	DECAL, FUEL OUT		93	OPTION - 3 WAY FUEL VALVE
46541017	BASE, RELAY		21 23	CONTROL PANEL CONTROL PANEL
46541223	NUT		25	RELAY MOUNTING
46551463	DIODE BRIDGE ASSEMBLY		17 111	ALTERNATOR PARTS RECOMMENDED SPARES
46551466	BEARING		17 111	ALTERNATOR PARTS RECOMMENDED SPARES
46551568	SWITCH		23	CONTROL PANEL
46551576	RAIL, DIN		31	POWER PEDESTAL ASSEMBLY
46552121	DECAL, WARNING-NO FUEL		13	DECALS AND DOCUMENTATION
46553373	NUT, RIVET		5	ENCLOSURE
46553706	GASKET		51	FUEL SYSTEM
46553709	ADAPTOR		51	FUEL SYSTEM
46556146	SWITCH, BATTERY DISCONN		19	BATTERY MOUNTING
46556610	HINGE		5	ENCLOSURE
46556647	SCREW		27	POWER PEDESTAL ASSEMBLY
46558099	HOLDER		27	POWER PEDESTAL ASSEMBLY
46558100	ENTRY		27	POWER PEDESTAL ASSEMBLY
46558679	HINGE		27	POWER PEDESTAL ASSEMBLY
46558739	COVER, RECEPTACLE		97	OPTION - NO SOCKETS
46558841	ELBOW		41	ENGINE ASSEMBLY
46561404	SCREW		5	ENCLOSURE

Part Number	Denomination	WAS	Page	Subgroup
46561639	TERMINAL		31 89	POWER PEDESTAL ASSEMBLY OPTION - SUPER START PACKAGE
46561640	TERMINAL, EARTH		31 89	POWER PEDESTAL ASSEMBLY OPTION - SUPER START PACKAGE
46561862	HOLDER, FUSE		25	RELAY MOUNTING
46562519	PLUG		3	MAIN FRAME
46562520	RING, SEALING		3	MAIN FRAME
46571979	HARNESS, WIRING		25	RELAY MOUNTING
46573859	DECAL, DOOSAN TRI-COLO		11	DECALS AND DOCUMENTATION
46573860	DECAL, DOOSAN TRI-COLO		11	DECALS AND DOCUMENTATION
46573923	DECAL, DOOSAN LOGO		11	DECALS AND DOCUMENTATION
46574759	PLUG		21 23	CONTROL PANEL CONTROL PANEL
46582419	VALVE		93	OPTION - 3 WAY FUEL VALVE
46582639	BRACKET		93	OPTION - 3 WAY FUEL VALVE
46583600	ADAPTOR		93	OPTION - 3 WAY FUEL VALVE
46584219	BRACKET		99	OPTION - SOCKETS
46585920	DECAL, MODEL		11	DECALS AND DOCUMENTATION
46587620	HINGE		27	POWER PEDESTAL ASSEMBLY
46588485	AMMETER		111	RECOMMENDED SPARES
46588879	WIRE, INSULATION		47	EXHAUST SYSTEM
46592579	FOAM FIELD KIT (no adhesive		5	ENCLOSURE
46592580	FOAM FIELD KIT (no adhesive		5	ENCLOSURE
46594480	DECAL, 3 WAY VALVE INDIC		93	OPTION - 3 WAY FUEL VALVE
46594481	DECAL, STAGE 3A		11	DECALS AND DOCUMENTATION
46598719	BRACKET		101	OPTION - DUAL FREQUENCY
46604099	LAMP, INDICATOR		101	OPTION - DUAL FREQUENCY
46604182	DECAL		101	OPTION - DUAL FREQUENCY
46611701	BRACKET		93	OPTION - 3 WAY FUEL VALVE
46612179	COVER		3	MAIN FRAME
46612180	HOLDER, COVER		3	MAIN FRAME
46614139	ELBOW		87 89	OPTION - OIL SUMP PUMP OPTION - SUPER START PACKAGE
46618379	RAIL, DIN		31	POWER PEDESTAL ASSEMBLY
46618400	SPACER		31	POWER PEDESTAL ASSEMBLY
46620539	BREAKER, CIRCUIT		99	OPTION - SOCKETS
46620540	BREAKER, CIRCUIT		99	OPTION - SOCKETS
46620677	SOCKET		99	OPTION - SOCKETS
46622121	RELAY		21 23 101 111	CONTROL PANEL CONTROL PANEL OPTION - DUAL FREQUENCY RECOMMENDED SPARES
46622288	SPEC, SETTING FILE		21	CONTROL PANEL
46622480	RAIL		99	OPTION - SOCKETS
46623547	CHARGER, BATTERY		89	OPTION - SUPER START PACKAGE
46623638	CONNECTOR		49	COOLING SYSTEM
46631806	PARTITION		31	POWER PEDESTAL ASSEMBLY

Part Number	Denomination	WAS	Page	Subgroup
46631807	CONNECTOR		89	OPTION - SUPER START PACKAGE
46631808	NUT, CABLE GLAND		89	OPTION - SUPER START PACKAGE
46631820	SCREW		89	OPTION - SUPER START PACKAGE
46631826	CONNECTOR		89	OPTION - SUPER START PACKAGE
46644139	FILLER NECK ASSEMBLY		51	FUEL SYSTEM
46649500	SPACER		27	POWER PEDESTAL ASSEMBLY
46650949	BREAKER		35 111	POWER PEDESTAL COVERS RECOMMENDED SPARES
46651220	RIVET		27	POWER PEDESTAL ASSEMBLY
46651963	BRACKET		49	COOLING SYSTEM
46651966	FITTING		49	COOLING SYSTEM
46652363	COVER, DRAIN PLUG		95	OPTION - NO CONTAINMENT DRAIN PLUG
46652543	SCREW		31	POWER PEDESTAL ASSEMBLY
46653119	ADAPTOR		87	OPTION - OIL SUMP PUMP
46655242	HARNESS, ASSEMBLY		25	RELAY MOUNTING
46655654	DECAL, FLAMMABLE LIQUID		11	DECALS AND DOCUMENTATION
46656744	DECAL, WEB SITE		11	DECALS AND DOCUMENTATION
46668350	WASHER		15 41	ALTERNATOR MOUNTING ENGINE ASSEMBLY
46669128	PUMP		87	OPTION - OIL SUMP PUMP
46669440	HOSE		93	OPTION - 3 WAY FUEL VALVE
46673576	FAN		43 79	ENGINE ASSEMBLY BELT TRANSMISSION
46674362	ELEMENT, FUEL FILTER		69 107 109	FUEL/WATER SEPARATOR MAINTENANCE KIT RECOMMENDED SPARES
46674376	BOLT		75	ALTERNATOR
46674786	WATER PUMP ASSEMBLY		83 111	WATER PUMP RECOMMENDED SPARES
46674787	V-BELT		79 109	BELT TRANSMISSION RECOMMENDED SPARES
46674791	GEAR, SENSOR		63	GEAR SENSOR
46674801	ADJUSTER		75	ALTERNATOR
46674804	SWITCH		109	RECOMMENDED SPARES
46674960	MANUAL, OPERATION & MAI		11	DECALS AND DOCUMENTATION
46677500	GUARD		43	ENGINE ASSEMBLY
46677721	GUARD		43	ENGINE ASSEMBLY
46678336	MANUAL, OPERATION & MAI		11	DECALS AND DOCUMENTATION
46678774	HARNESS, DUAL FREQUENC		101	OPTION - DUAL FREQUENCY
46678870	RELAY		101	OPTION - DUAL FREQUENCY
46678871	SOCKET		101	OPTION - DUAL FREQUENCY
46678920	SWITCH		101	OPTION - DUAL FREQUENCY
46679058	MANUAL, OPERATION & MAI		11	DECALS AND DOCUMENTATION
46679059	MANUAL, OPERATION & MAI		11	DECALS AND DOCUMENTATION
46687796	SPEC, SETTING FILE		23	CONTROL PANEL
46687966	CUP		69	FUEL/WATER SEPARATOR
46687967	PLUG, DRAIN		69	FUEL/WATER SEPARATOR


Part Number	Denomination	WAS	Page	Subgroup
46689750	MANUAL, OPERATION & MAI		11	DECALS AND DOCUMENTATION
46693008	FRAME		3	MAIN FRAME
46693024	PANEL, ROOF		5	ENCLOSURE
46693032	PANEL ASSEMBLY		5	ENCLOSURE
46693033	PANEL ASSEMBLY		5	ENCLOSURE
46693035	DOOR ASSEMBLY		5	ENCLOSURE
46693036	DOOR ASSEMBLY		5	ENCLOSURE
46693037	DOOR		5	ENCLOSURE
46693109	SUPPORT, COOLER		49	COOLING SYSTEM
46693286	ENGINE		41	ENGINE ASSEMBLY
46693289	RADIATOR ASSEMBLY		49	COOLING SYSTEM
46693430	COVER		99	OPTION - SOCKETS
46693431	BRACKET		99	OPTION - SOCKETS
46693432	COVER		35 37	POWER PEDESTAL COVERS POWER PEDESTAL COVERS
46693433	DOOR		27	POWER PEDESTAL ASSEMBLY
46693434	ENCLOSURE		27	POWER PEDESTAL ASSEMBLY
46693461	HARNESS		99	OPTION - SOCKETS
46695083	KIT, DIODE		17 111	ALTERNATOR PARTS RECOMMENDED SPARES
46695101	ALTERNATOR		15 111	ALTERNATOR MOUNTING RECOMMENDED SPARES
46695299	GASKET		47	EXHAUST SYSTEM
46695301	BRACKET		93	OPTION - 3 WAY FUEL VALVE
46695330	BRACKET		41	ENGINE ASSEMBLY
46695331	BRACKET		41	ENGINE ASSEMBLY
46695332	BRACKET		45	AIR INTAKE
46695335	SUPPORT COOLER		49	COOLING SYSTEM
46695376	BRACKET		49	COOLING SYSTEM
46695404	PIPE ASSEMBLY, EXHAUST		47	EXHAUST SYSTEM
46695415	DIFFUSER		5	ENCLOSURE
46695428	BRACKET		87	OPTION - OIL SUMP PUMP
46695458	LIFTING BAIL ASSEMBLY		3	MAIN FRAME
46695459	CHANNEL, VERTICAL		3	MAIN FRAME
46695470	PUMP, FUEL		71	FUEL FEED PUMP
46695506	TANK, EXPANSION		49	COOLING SYSTEM
46695507	BRACKET		49	COOLING SYSTEM
46695531	BRACKET		49	COOLING SYSTEM
46695700	CONDUIT		27	POWER PEDESTAL ASSEMBLY
46695701	CABLE		31	POWER PEDESTAL ASSEMBLY
46695702	CABLE		31	POWER PEDESTAL ASSEMBLY
46695703	CABLE		31	POWER PEDESTAL ASSEMBLY
46695706	HOSE, AIR INTAKE		45	AIR INTAKE
46695707	COVER		39	POWER PEDESTAL COVERS
46695709	INSULATION		47	EXHAUST SYSTEM
46695720	HARNESS		31	POWER PEDESTAL ASSEMBLY

Part Number	Denomination	WAS	Page	Subgroup
46695730	HARNESS, WIRING		25	RELAY MOUNTING
46695746	SUPPORT		5	ENCLOSURE
46695759	HOLDER, BATTERY		19	BATTERY MOUNTING
46695838	SUPPORT, HARNESS		25	RELAY MOUNTING
46695847	BRACKET		25	RELAY MOUNTING
46695870	HARNESS, WIRING		25	RELAY MOUNTING
46695871	CABLE, NEGATIVE		19	BATTERY MOUNTING
46695985	DOOR		5	ENCLOSURE
46696043	TANK, FUEL		51	FUEL SYSTEM
46696622	TERMINAL, EARTH		17	ALTERNATOR PARTS
46696639	MANGER		29	POWER PEDESTAL ASSEMBLY
46696640	MANGER		29	POWER PEDESTAL ASSEMBLY
46696658	MANGER		29	POWER PEDESTAL ASSEMBLY
46696660	MANGER		29	POWER PEDESTAL ASSEMBLY
46696886	PANEL, CONTROL ASSEMBL		21	CONTROL PANEL
46696891	HARNESS		21	CONTROL PANEL
46696923	MANUAL, PARTS		11	DECALS AND DOCUMENTATION
46697108	FILTER, FUEL		67 107 109	FUEL FILTER MAINTENANCE KIT RECOMMENDED SPARES
46697111	FILTER, OIL		59 105 107 109	OIL FILTER ASSEMBLY MAINTENANCE KIT MAINTENANCE KIT RECOMMENDED SPARES
46697115	SEPARATOR ASSEMBLY		69	FUEL/WATER SEPARATOR
46697117	SPACER, FAN		43 79	ENGINE ASSEMBLY BELT TRANSMISSION
46697122	WASHER		75	ALTERNATOR
46697123	RELAY		75	ALTERNATOR
46697124	PULLEY		79	BELT TRANSMISSION
46697125	SET, GASKET		77	GASKET SET
46697126	VALVE ASSEMBLY, INJECTI		65 111	INJECTION VALVE RECOMMENDED SPARES
46697127	PUMP ASSEMBLY, INJECTIO		61	FUEL INJECTION PUMP
46697264	RIVET		29	POWER PEDESTAL ASSEMBLY
46697657	TAPE, ADHESIVE		31	POWER PEDESTAL ASSEMBLY
46697658	GUARD, RUBBER		31	POWER PEDESTAL ASSEMBLY
46697679	MANAGER		21 23	CONTROL PANEL CONTROL PANEL
46697901	PLEXIGLASS		5	ENCLOSURE
46697912	REGULATOR, VOLTAGE		17 111	ALTERNATOR PARTS RECOMMENDED SPARES
46697916	KIT, FIELD WINDING		17	ALTERNATOR PARTS
46697917	BLOCK, TERMINAL		17	ALTERNATOR PARTS
46697918	BLOCK, TERMINAL		17	ALTERNATOR PARTS
46697924	PANEL		21	CONTROL PANEL
46697963	BRACKET		89	OPTION - SUPER START PACKAGE


Part Number	Denomination	WAS	Page	Subgroup
46698186	HARNESS		39	POWER PEDESTAL COVERS
46698281	SWITCH, WATER TEMPERAT		109	RECOMMENDED SPARES
46698282	KIT, 500 HOUR		107	MAINTENANCE KIT
46698343	TUBE, DRAIN		3	MAIN FRAME
46698475	GUARD, FAN		49	COOLING SYSTEM
46698479	PIPE, COOLING		49 111	COOLING SYSTEM RECOMMENDED SPARES
46698481	PIPE, COOLING		49 111	COOLING SYSTEM RECOMMENDED SPARES
46699178	NUT		21 23	CONTROL PANEL CONTROL PANEL
46699236	HOLDER		27	POWER PEDESTAL ASSEMBLY
46699275	BRACKET		51	FUEL SYSTEM
46699276	PANEL		5	ENCLOSURE
46699277	SPACER		51	FUEL SYSTEM
46699421	BRACKET		89	OPTION - SUPER START PACKAGE
46699467	SUPPORT, ENGINE		41	ENGINE ASSEMBLY
46699851	ALTERNATOR		15	ALTERNATOR MOUNTING
46700395	HOSE		93	OPTION - 3 WAY FUEL VALVE
46700609	SCREW		49 51 89	COOLING SYSTEM FUEL SYSTEM OPTION - SUPER START PACKAGE
46702035	CONTROL PANEL ASSEMBL		23	CONTROL PANEL
46702036	PANEL		23	CONTROL PANEL
46702038	CONTROLLER		23	CONTROL PANEL
46702167	HARNESS, WIRING		25	RELAY MOUNTING
46702168	HARNESS		23	CONTROL PANEL
46702199	CABLE, NEGATIVE		19	BATTERY MOUNTING
46702200	CABLE, POSITIVE		19	BATTERY MOUNTING
46702230	BRACKET		19	BATTERY MOUNTING
54439062	MOUNT		15	ALTERNATOR MOUNTING
54496773	TRANSDUCER, PRESSURE		21	CONTROL PANEL
54577770	ADAPTOR		89	OPTION - SUPER START PACKAGE
54629977	DECAL, ISO CENTRAL DRAIN		13	DECALS AND DOCUMENTATION
54757935	SWITCH, OIL PRESSURE		23	CONTROL PANEL
89257067	PROTECTOR		85	OPTION - FRAME PROTECTION
92050376	SCREW		39	POWER PEDESTAL COVERS
92061506	WASHER		15 41	ALTERNATOR MOUNTING ENGINE ASSEMBLY
92096015	SCREW		25 39 99	RELAY MOUNTING POWER PEDESTAL COVERS OPTION - SOCKETS
92179043	SCREW		87	OPTION - OIL SUMP PUMP
92184811	SCREW		101	OPTION - DUAL FREQUENCY
92253129	CLAMP		49	COOLING SYSTEM
92281427	TIE, CABLE		25 31	RELAY MOUNTING POWER PEDESTAL ASSEMBLY

Part Number	Denomination	WAS	Page	Subgroup
			89	OPTION - SUPER START PACKAGE
			99	OPTION - SOCKETS
92304518	NUT		31	POWER PEDESTAL ASSEMBLY
92304583	WASHER		21	CONTROL PANEL
			23	CONTROL PANEL
			27	POWER PEDESTAL ASSEMBLY
92304641	WASHER		89	OPTION - SUPER START PACKAGE
92304674	LOCKWASHER		51	FUEL SYSTEM
92329119	NUT		85	OPTION - FRAME PROTECTION
92340439	WASHER		25	RELAY MOUNTING
			89	OPTION - SUPER START PACKAGE
92340454	NUT		25	RELAY MOUNTING
			89	OPTION - SUPER START PACKAGE
92341981	WASHER		25	RELAY MOUNTING
			51	FUEL SYSTEM
92398114	NUT		25	RELAY MOUNTING
			43	ENGINE ASSEMBLY
			49	COOLING SYSTEM
92659432	SCREW		99	OPTION - SOCKETS
92783281	PLUG		31	POWER PEDESTAL ASSEMBLY
92812940	POUCH, LITERATURE		5	ENCLOSURE
92861640	TIE, CABLE		3	MAIN FRAME
92867449	DECAL, REFER TO HANDBO		13	DECALS AND DOCUMENTATION
92912559	DECAL, EARTH WARNING		13	DECALS AND DOCUMENTATION
92922855	CATCH		5	ENCLOSURE
92922863	CATCH		5	ENCLOSURE
92930593	DECAL, ELECTRIC SHOCK		13	DECALS AND DOCUMENTATION
92949742	FOAM FIELD KIT (with adhesiv		5	ENCLOSURE
92949759	FOAM FIELD KIT (with adhesiv		5	ENCLOSURE
92949767	FOAM FIELD KIT (with adhesiv		5	ENCLOSURE
92949775	FOAM FIELD KIT (with adhesiv		5	ENCLOSURE
93171254	DECAL, DIESEL FUEL		13	DECALS AND DOCUMENTATION
93171262	DECAL, LIFT/TIE POINT		13	DECALS AND DOCUMENTATION
93502128	PLUG		3	MAIN FRAME
			93	OPTION - 3 WAY FUEL VALVE
93524007	PLATE, CABLE TIE		31	POWER PEDESTAL ASSEMBLY
95220844	CLAMP		87	OPTION - OIL SUMP PUMP
			89	OPTION - SUPER START PACKAGE
95264776	CLAMP		93	OPTION - 3 WAY FUEL VALVE
95923298	NUT		19	BATTERY MOUNTING
			51	FUEL SYSTEM
95928255	PLUG		51	FUEL SYSTEM
95932802	BUSH, REDUCING		89	OPTION - SUPER START PACKAGE
95935029	WASHER		21	CONTROL PANEL
			23	CONTROL PANEL
			87	OPTION - OIL SUMP PUMP
95952248	BUSH		49	COOLING SYSTEM
96701396	WASHER		85	OPTION - FRAME PROTECTION
96701461	SCREW		5	ENCLOSURE

Part Number	Denomination	WAS	Page	Subgroup
96701479	SCREW		25 51	RELAY MOUNTING FUEL SYSTEM
96701750	NUT, HEX		49	COOLING SYSTEM
96701917	SCREW		3	MAIN FRAME
96702261	SCREW		85	OPTION - FRAME PROTECTION
96702816	SCREW		45	AIR INTAKE
96702824	SCREW		27	POWER PEDESTAL ASSEMBLY
96703251	SCREW		21 23 27	CONTROL PANEL CONTROL PANEL POWER PEDESTAL ASSEMBLY
96703806	NUT		5 25	ENCLOSURE RELAY MOUNTING
96704176	NUT		25 27	RELAY MOUNTING POWER PEDESTAL ASSEMBLY
96704408	SCREW		5 47 51 93	ENCLOSURE EXHAUST SYSTEM FUEL SYSTEM OPTION - 3 WAY FUEL VALVE
96704580	NUT		21 23 27 89	CONTROL PANEL CONTROL PANEL POWER PEDESTAL ASSEMBLY OPTION - SUPER START PACKAGE
96704929	SCREW		15	ALTERNATOR MOUNTING
96705132	NUT		89	OPTION - SUPER START PACKAGE
96713078	BOLT		43	ENGINE ASSEMBLY
96728480	SCREW		43	ENGINE ASSEMBLY
96728787	SCREW		51	FUEL SYSTEM
96735543	NUT		47	EXHAUST SYSTEM
96735550	NUT		3	MAIN FRAME
96737549	SCREW		25 41 45	RELAY MOUNTING ENGINE ASSEMBLY AIR INTAKE
96739685	SCREW		27	POWER PEDESTAL ASSEMBLY
96740782	SCREW		15 41	ALTERNATOR MOUNTING ENGINE ASSEMBLY
96742283	SCREW		89	OPTION - SUPER START PACKAGE
96742689	SCREW		5 97	ENCLOSURE OPTION - NO SOCKETS
96745229	WASHER		31	POWER PEDESTAL ASSEMBLY
96747142	SCREW		9	FORKLIFT SKID
96750575	SCREW		25 101	RELAY MOUNTING OPTION - DUAL FREQUENCY

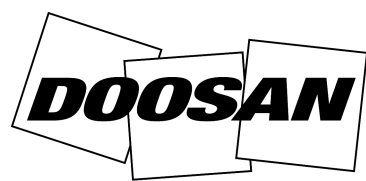 

Portable Power

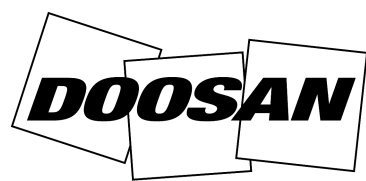 

Portable Power