

 


Doosan Infracore
Portable Power

LIGHTSOURCE LT6K

PARTS MANUAL

SERIAL No : 366000 ->

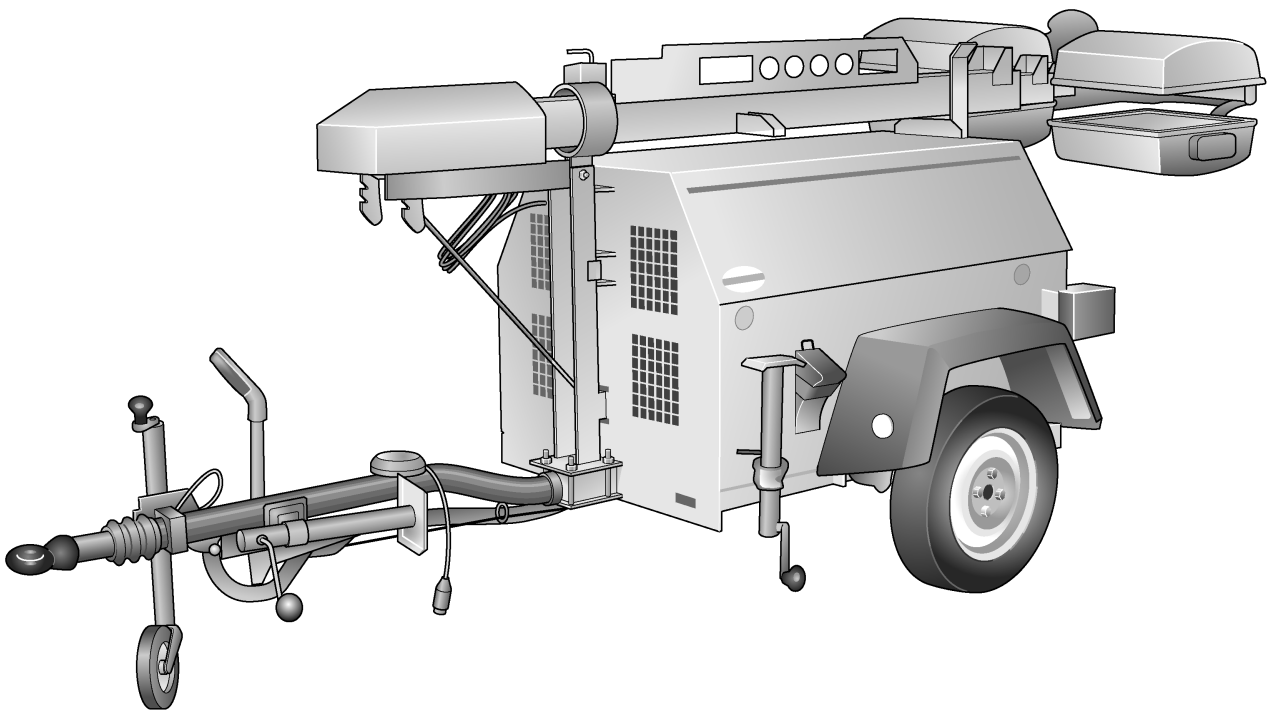

CONTENTS

RUNNING GEAR

RUNNING GEAR ASSEMBLY - (Fixed Height Braked)	3
RUNNING GEAR ASSEMBLY - (Fixed Height Braked)	5
RUNNING GEAR ASSEMBLY - (Fixed Height Braked)	7

MAIN FRAME

FRAME ASSEMBLY	9
TOWER SUPPORT ASSEMBLY	11
TOWER SUPPORT ASSEMBLY	13
TOWER SUPPORT ASSEMBLY	15
ENCLOSURE ASSEMBLY	17
DECAL LOCATION	19
DECAL LOCATION	21
DECAL LOCATION	23
DECAL LOCATION	25
DECAL LOCATION	27
TOWER CABLES AND ROUTING	29
TOWER ASSEMBLY	31
TOWER ASSEMBLY	33
LOWER MAST TUBE ASSEMBLY	35
LOWER MIDDLE MAST TUBE ASSEMBLY	37
UPPER MIDDLE MAST TUBE ASSEMBLY	39
UPPER MAST TUBE ASSEMBLY	41

ELECTRICAL SYSTEM

BATTERY AND MOUNTING	43
INSTRUMENT / CONTROL PANEL ASSEMBLY	45
BALLAST / CAPACITOR ASSEMBLY	47
INSTRUMENT / CONTROL PANEL ASSEMBLY	49
BUMPER / LIGHTS AND REFLECTORS	51
FLOODLIGHT ASSEMBLY	53
ALTERNATOR AND MOUNTING	55

POWER UNIT

ENGINE ASSEMBLY	57
FUEL TANK AND PIPING	59


ACCESSORIES & OPTIONS

OPTION - WATER SEPARATOR	61
--------------------------------	----

Intentionally left blank

LT6K - 22545503_07/12

 RUNNING GEAR ASSEMBLY (Fixed Height Braked)

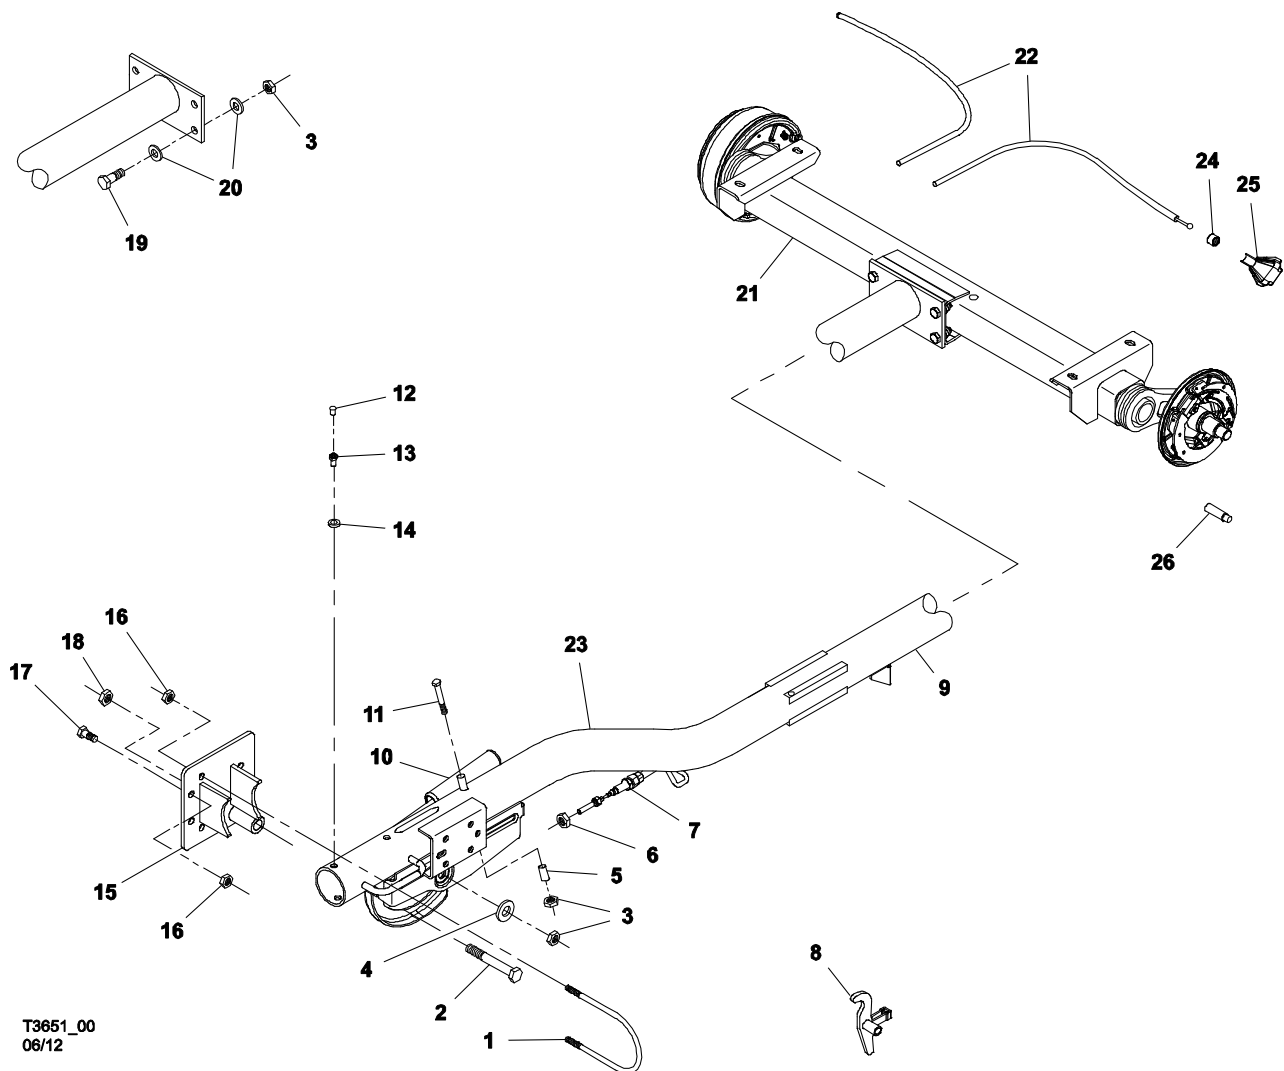


T3651_00
06/12

RUNNING GEAR ASSEMBLY (Fixed Height Braked)

Item	Part Number	Description	Remarks	Serial Number	Qty
1	22398242	U-BOLT			1
2	96707377	SCREW			1
3	22051494	NUT			6
4	22312417	WASHER			1
5	22051551	BUSH			2
6	22051577	LOCKNUT			2
7	22277335	CABLE			1
8	22051627	LEVER			1
9	22548432	DRAWBAR COMPLETE ASSEMBLY			1
10	22182802	SPRING			1
11	22051596	SCREW			1
12	22312375	CAP			2
13	22051403	SCREW			2
14	22051460	WASHER			4
15	22398259	BRACKET			1
16	96727300	LOCKNUT			6
17	96737556	SCREW			4
18	96737747	LOCKNUT			1
19	22104806	WASHER			4
20	22104814	WASHER			8
21	22312425	AXLE			1
22	22617146	CABLE			2
23	22617005	TUBE, DRAWBAR			1
24	22051247	PLUG			4
25	22051254	COVER			2
26	22051262	ATTACHMENT			2




 
RUNNING GEAR ASSEMBLY **(Fixed Height Braked)**

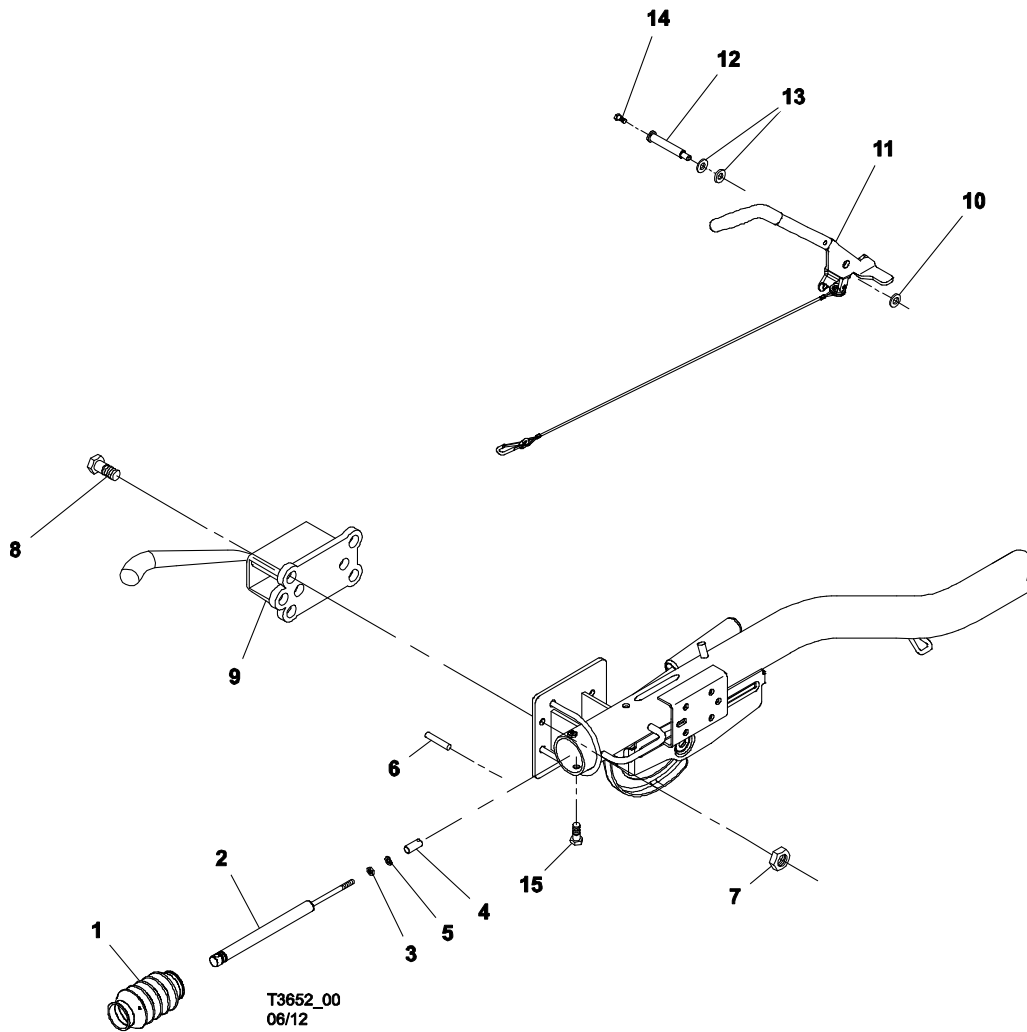


RUNNING GEAR ASSEMBLY (Fixed Height Braked)

[illegible]

    RUNNING GEAR ASSEMBLY (Fixed Height Braked)

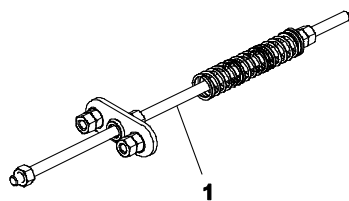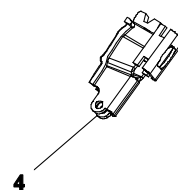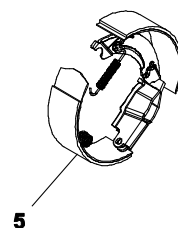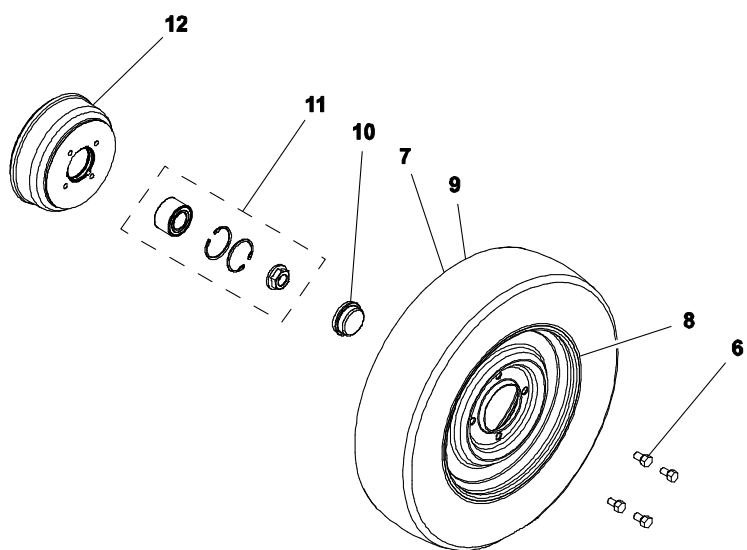


T3653_00
06/12

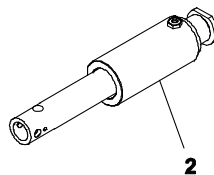 

RUNNING GEAR ASSEMBLY (Fixed Height Braked)

[illegible]

 FRAME ASSEMBLY

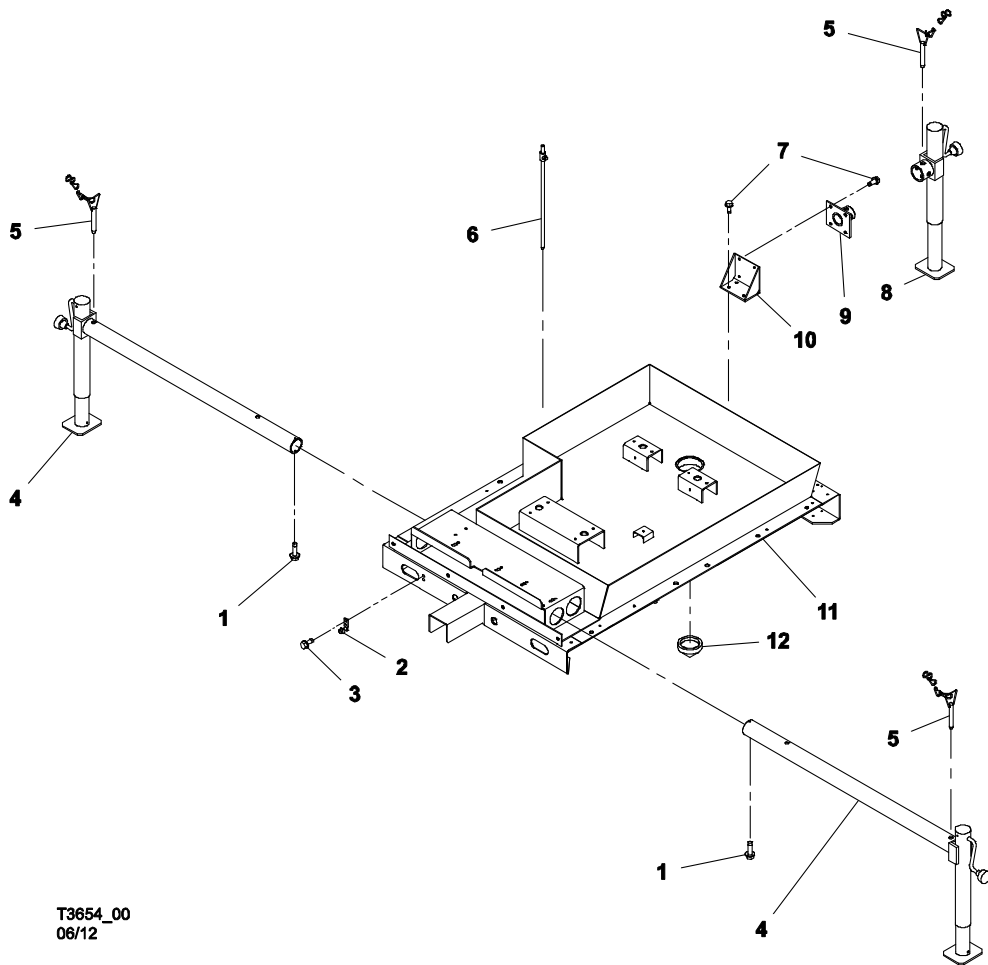


T3654_00
06/12

FRAME ASSEMBLY

[illegible]

 TOWER SUPPORT ASSEMBLY

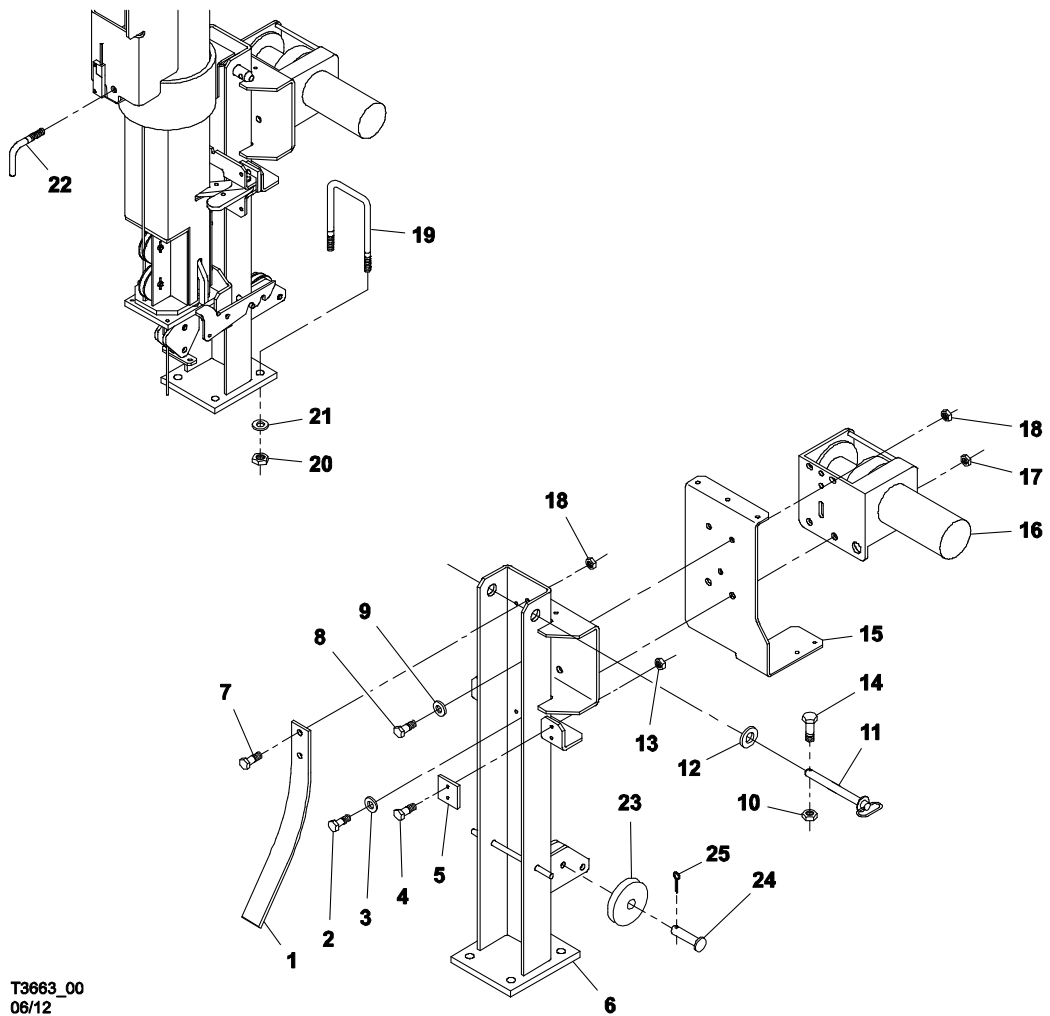


T3663_00
06/12

TOWER SUPPORT ASSEMBLY

Item	Part Number	Description	Remarks	Serial Number	Qty
1	36885549	SPRING			1
2	92304369	SCREW			3
3	95934998	WASHER			3
4	96739313	SCREW			4
5	22459390	PAD, WEAR			2
6	22408579	SUPPORT, TOWER			1
7	36880995	SCREW			2
8	96705983	SCREW			2
9	95935037	WASHER			2
10	36769743	NUT			1
11	36869253	PIN, PIVOT			1
12	95935011	WASHER			1
13	36769032	LOCKNUT			4
14	35271170	SCREW			1
15	22494488	SUPPORT, WINCH			1
16	36878056	WINCH			1
17	36881886	NUT			3
18	36879195	NUT			4
19	22142343	U-BOLT			2
20	95923348	NUT			4
21	95935003	WASHER			4
22	22493621	L-BOLT			1
23	36783009	PULLEY			1
24	36869246	PIN			2
25	95928867	PIN, COTTER			2
26	22972178	SWITCH, WINCH CABLE SLACK	not shown on illustration		1
27	22496616	HARNESS SINGLE WINCH	not shown on illustration		1

 TOWER SUPPORT ASSEMBLY

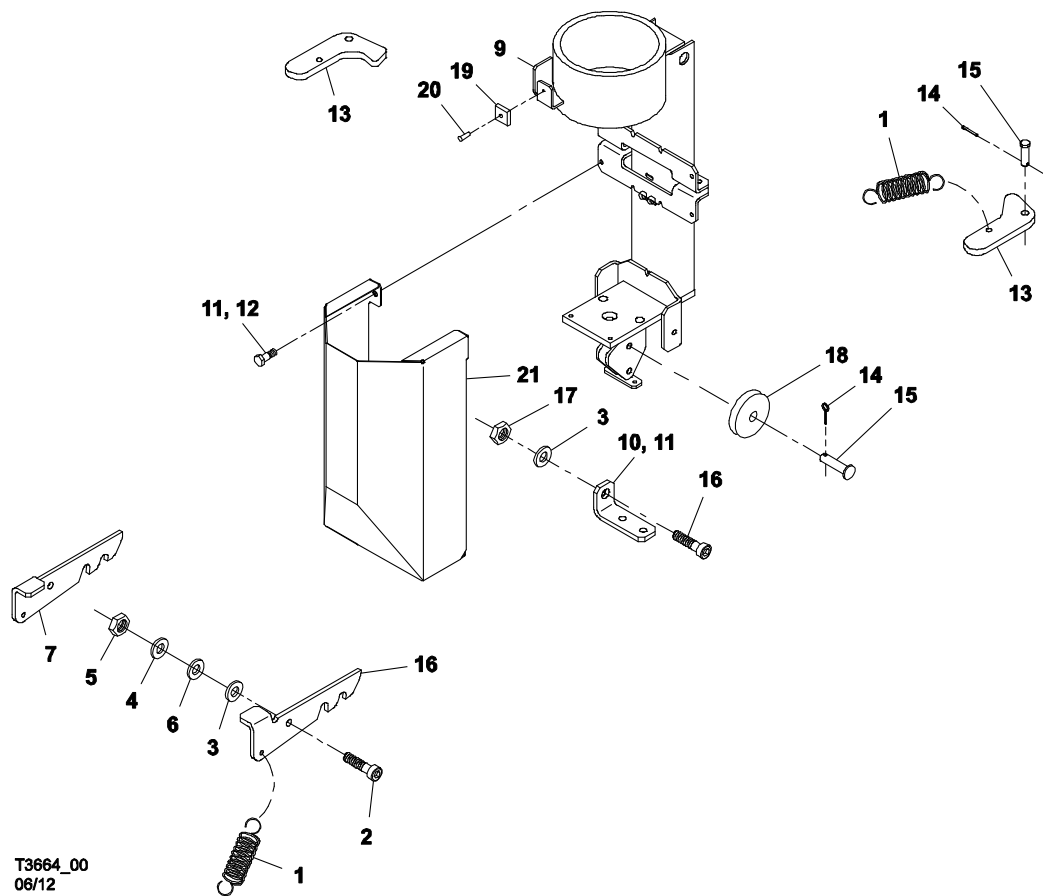


T3664_00
06/12

TOWER SUPPORT ASSEMBLY


[illegible]

 TOWER SUPPORT ASSEMBLY

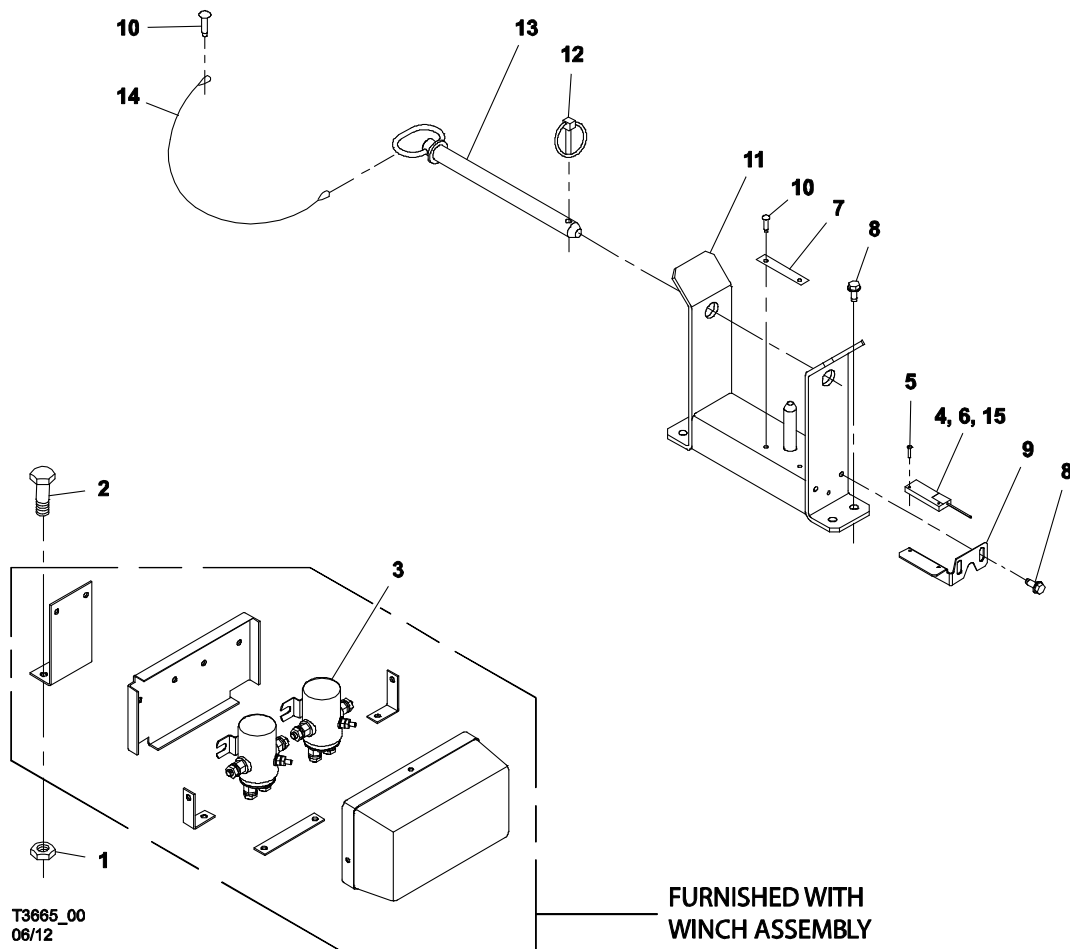

[illegible]

 
ENCLOSURE ASSEMBLY

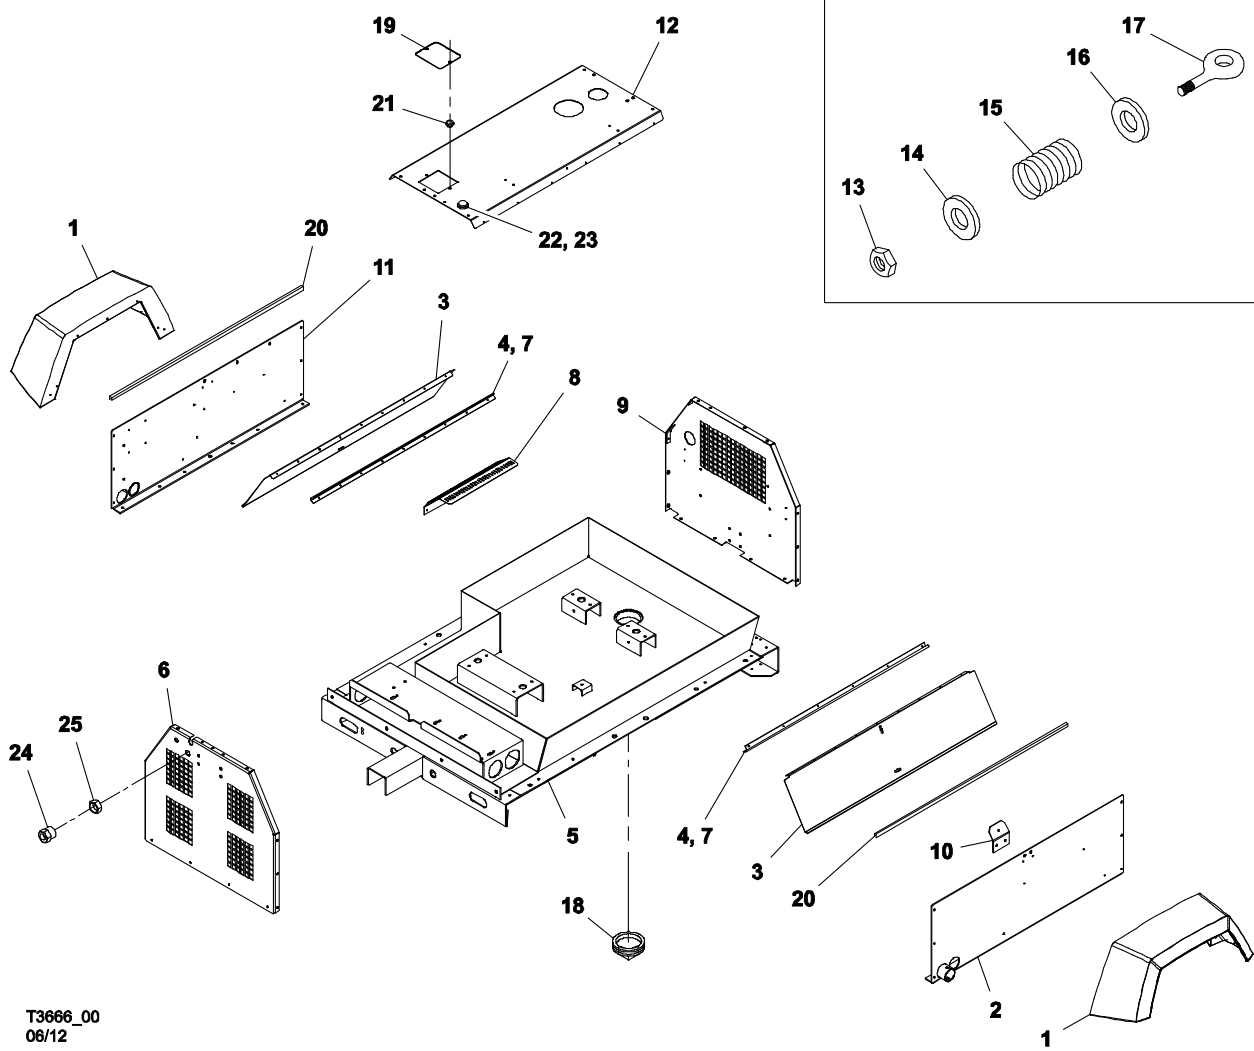

T3666_00
06/12

[illegible]

 DECAL LOCATION

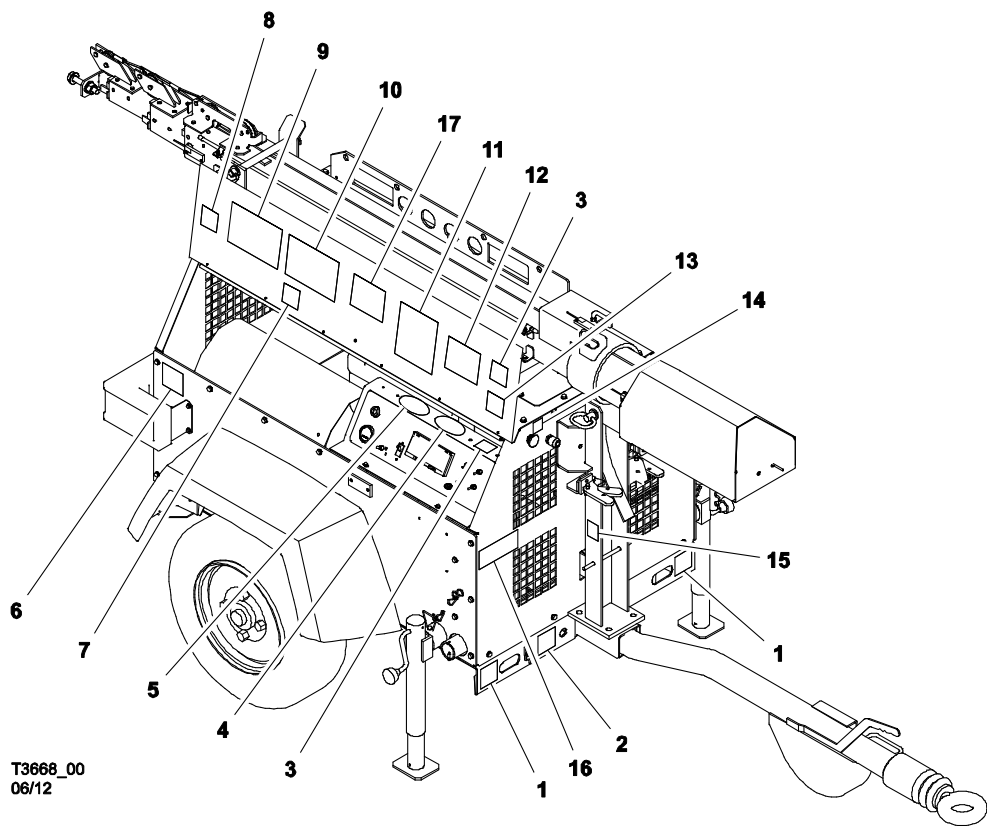


T3668_00
06/12

DECAL LOCATION	

[illegible]

 
DECAL LOCATION

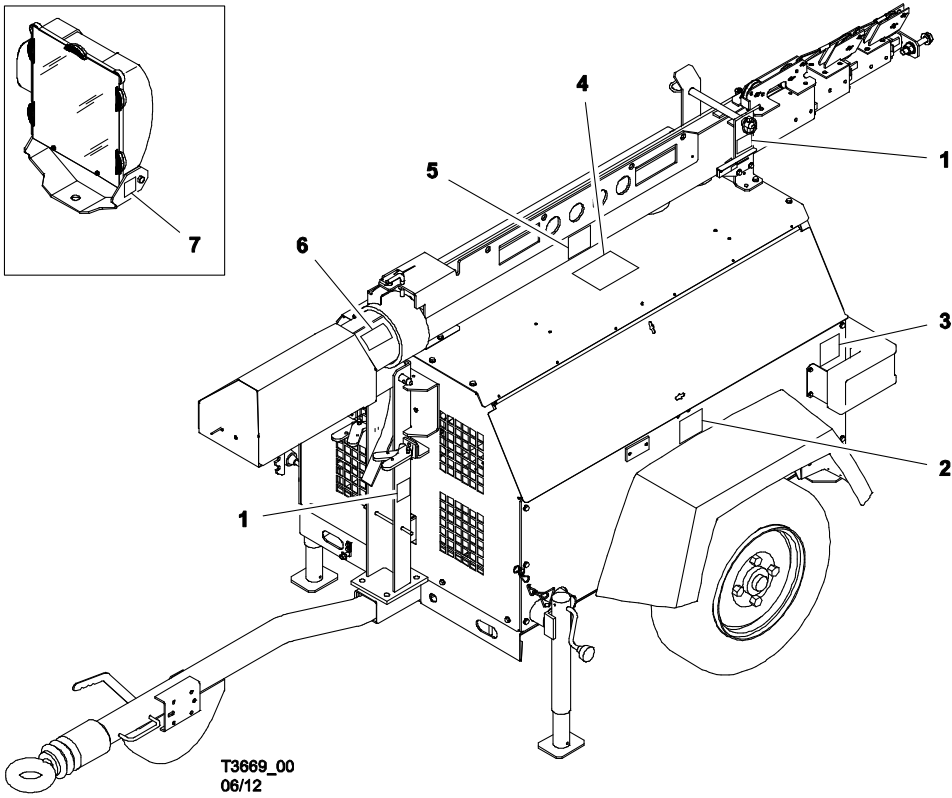

DECAL LOCATION	

[illegible]

 
DECAL LOCATION

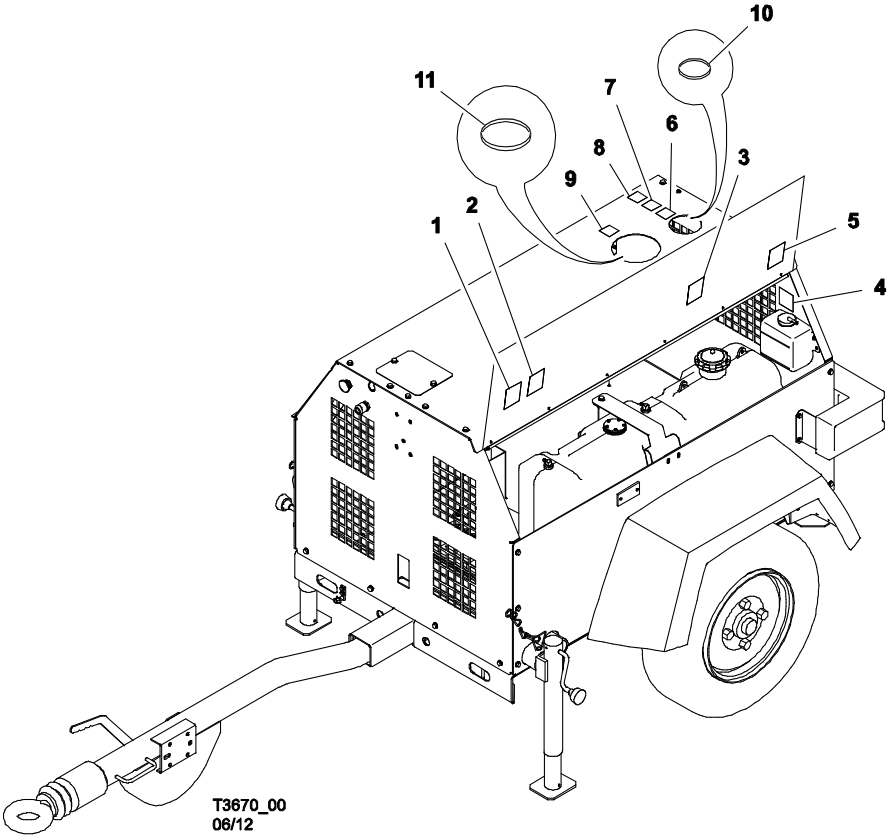

DECAL LOCATION	

[illegible]

 DECAL LOCATION

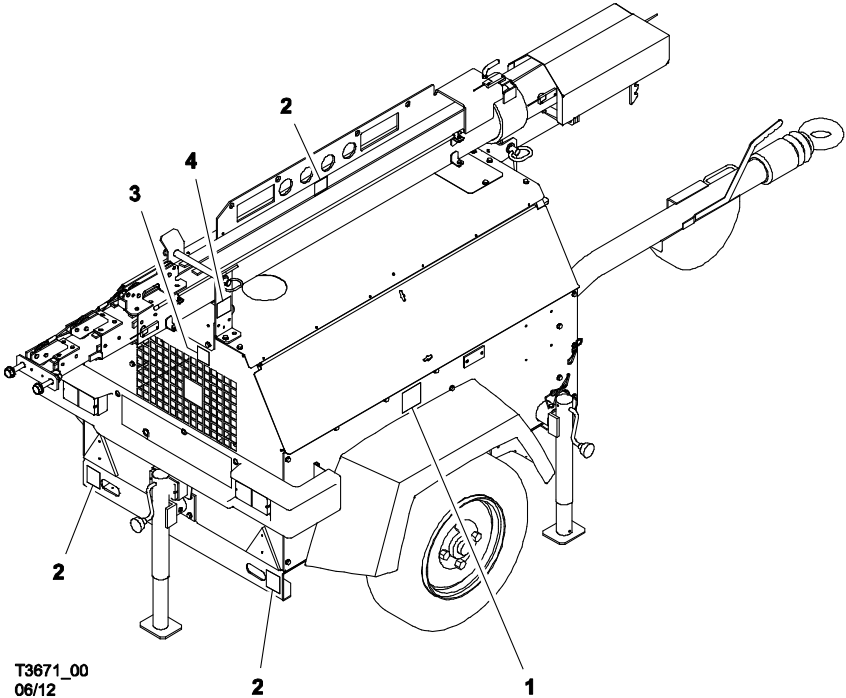


T3671_00
06/12

DECAL LOCATION	

[illegible]

 DECAL LOCATION

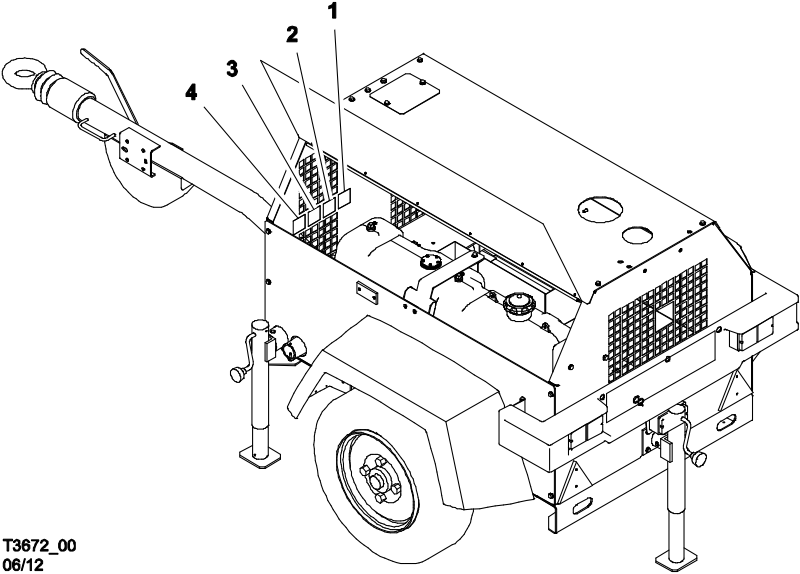


T3672_00
06/12

DECAL LOCATION	

[illegible]

 
TOWER CABLES AND ROUTING

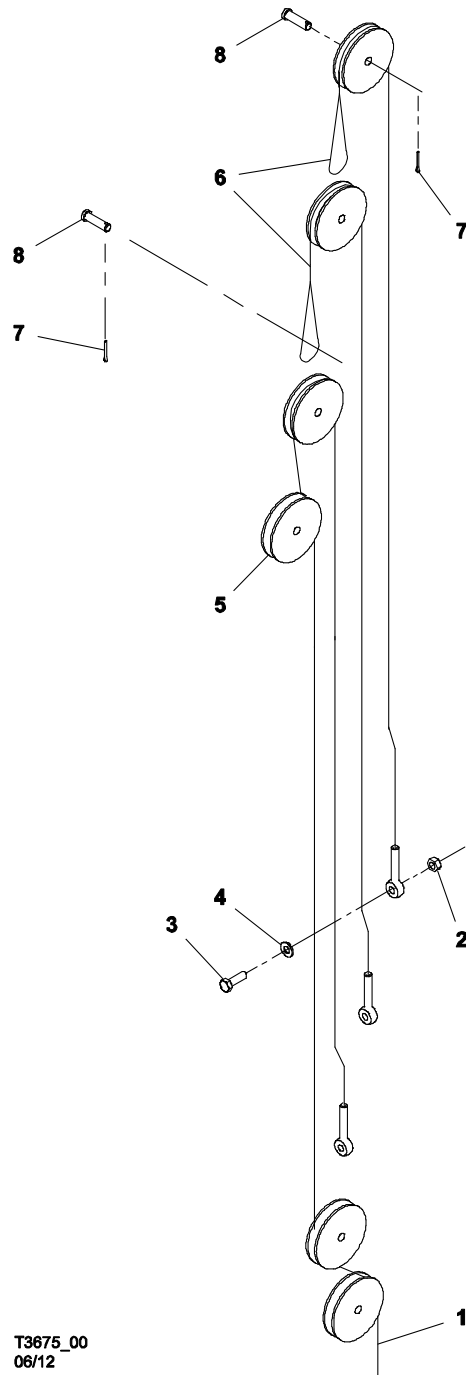

TOWER CABLES AND ROUTING	
--------------------------	--

[illegible]

 
TOWER ASSEMBLY

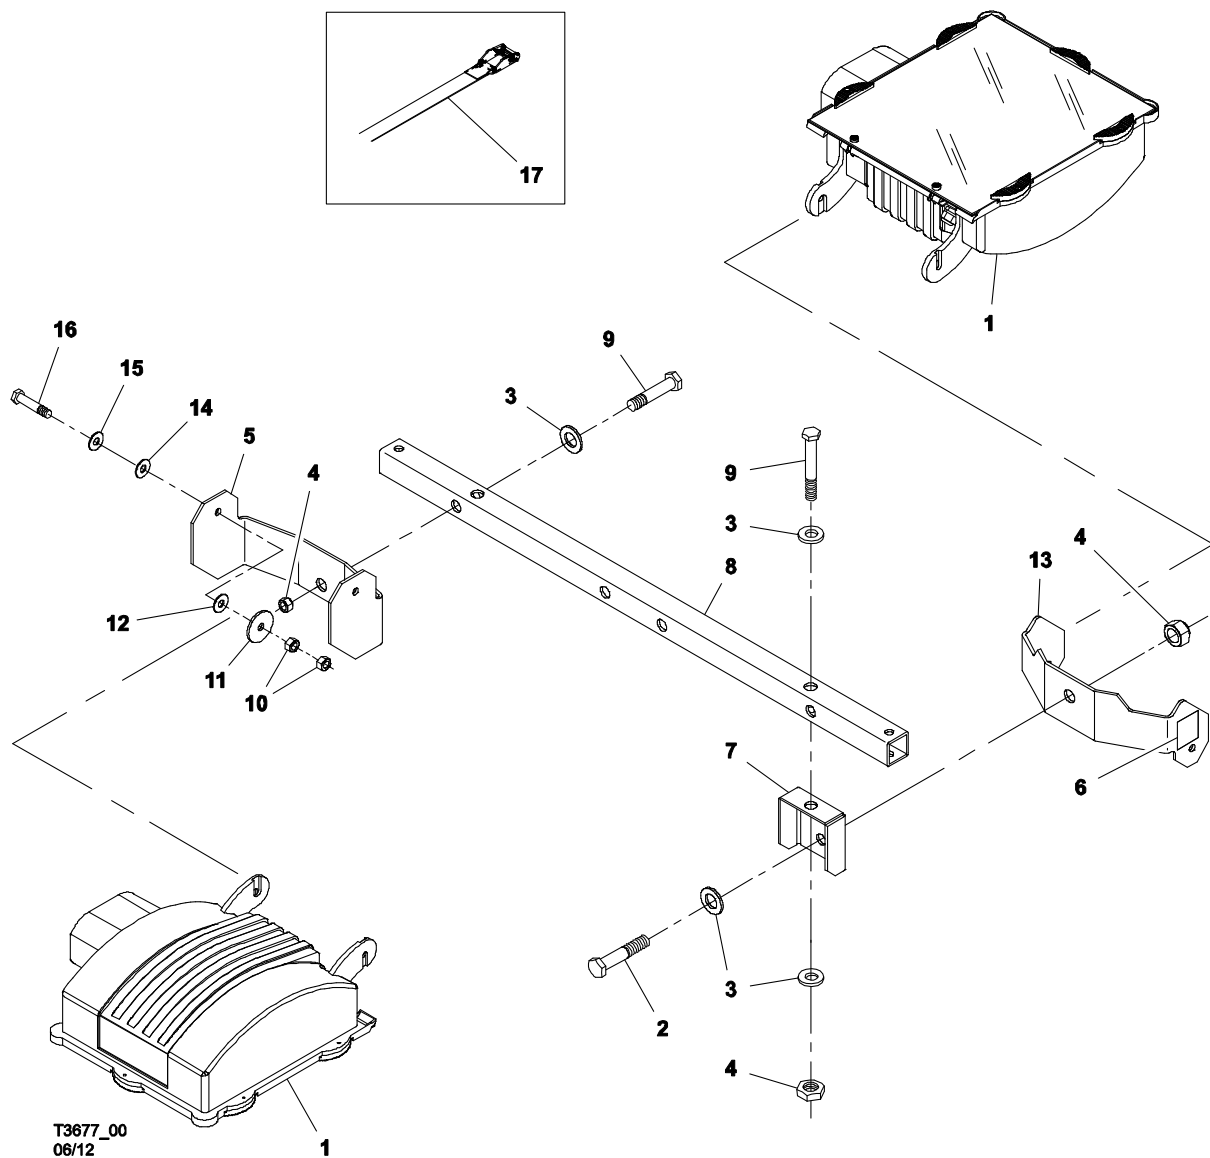

TOWER ASSEMBLY	
----------------	--

[illegible]

 TOWER ASSEMBLY


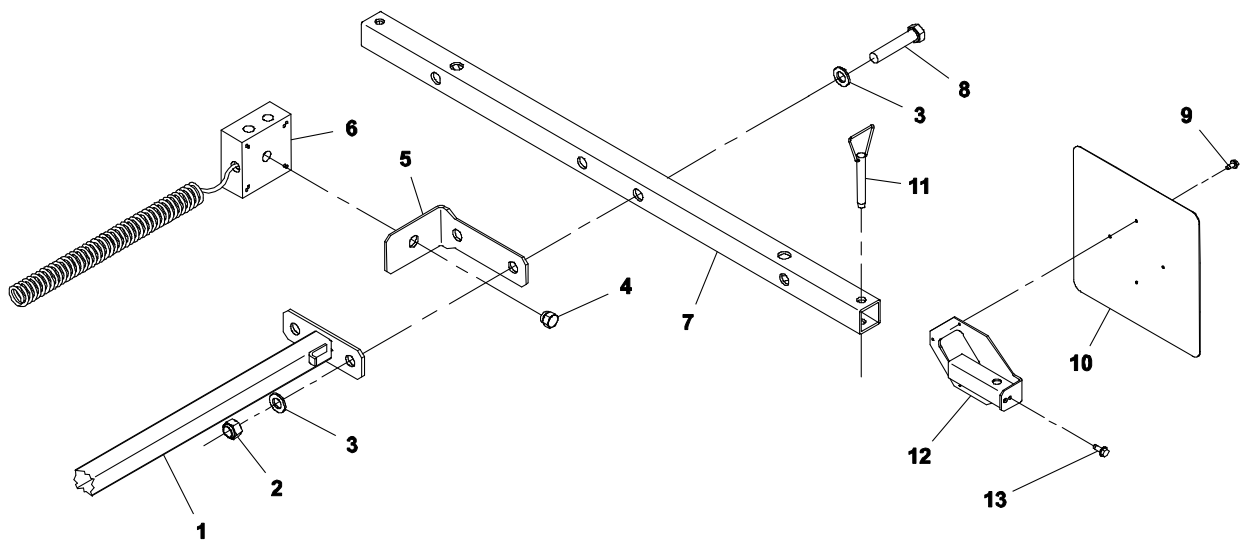


T3678_00
06/12

TOWER ASSEMBLY	
----------------	--


[illegible]

  LOWER MAST TUBE ASSEMBLY

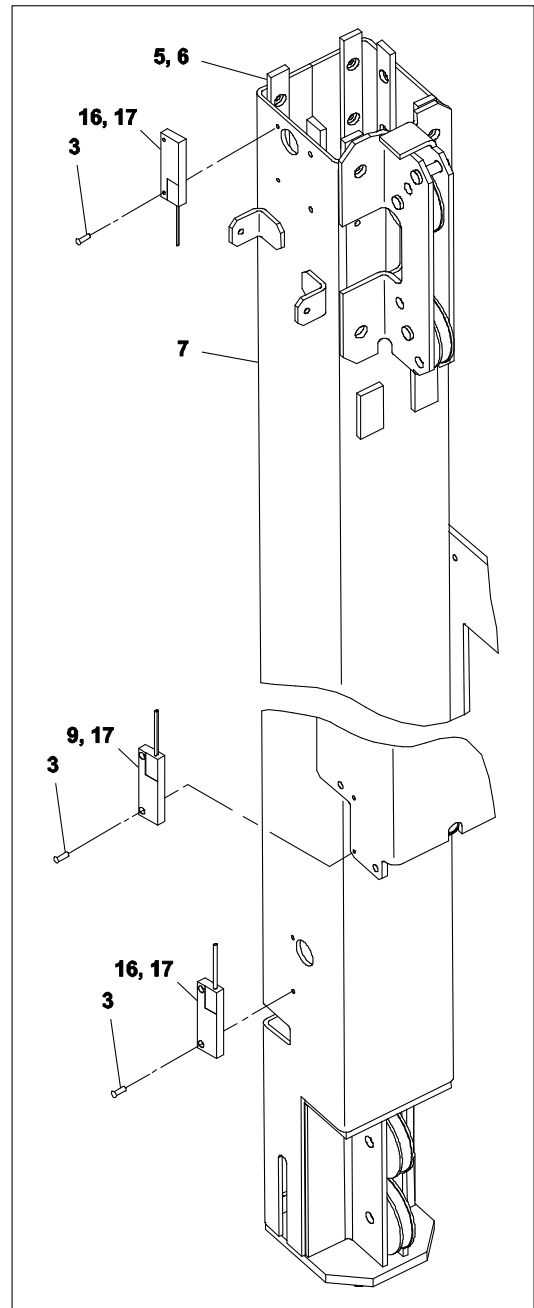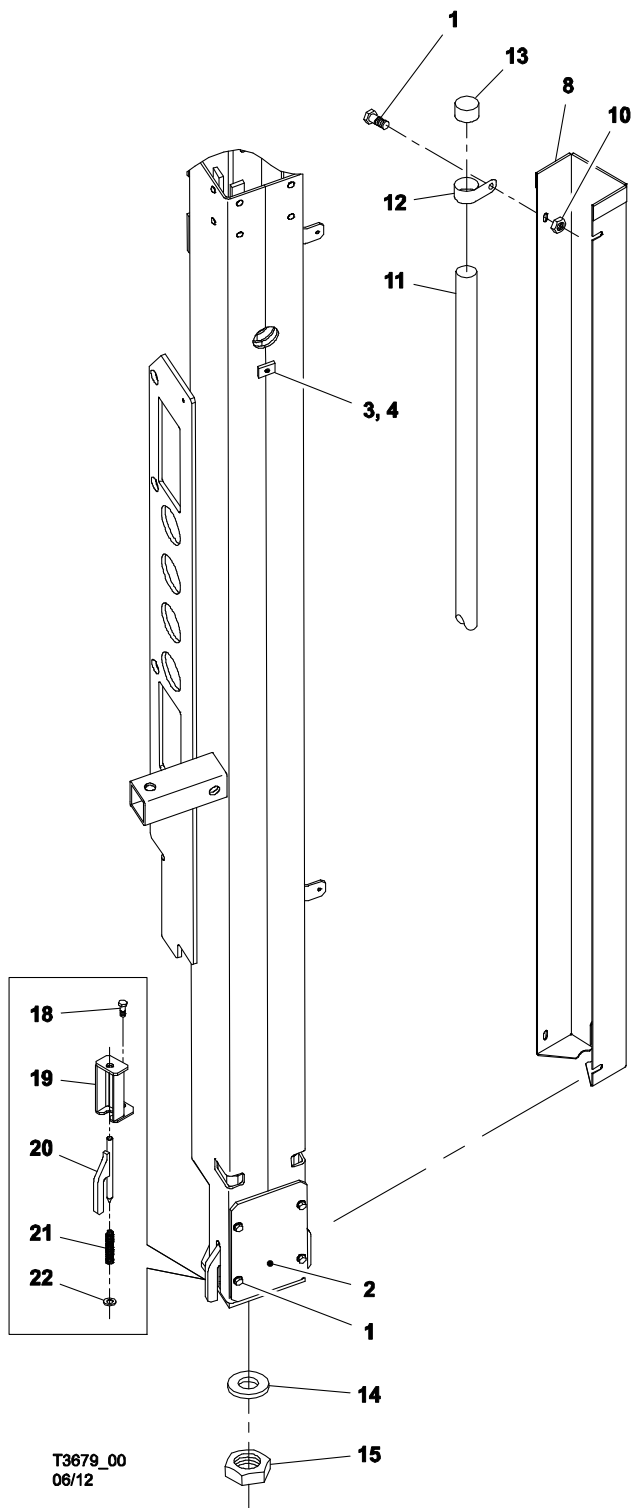

[illegible]

 
LOWER MIDDLE MAST TUBE ASSEMBLY

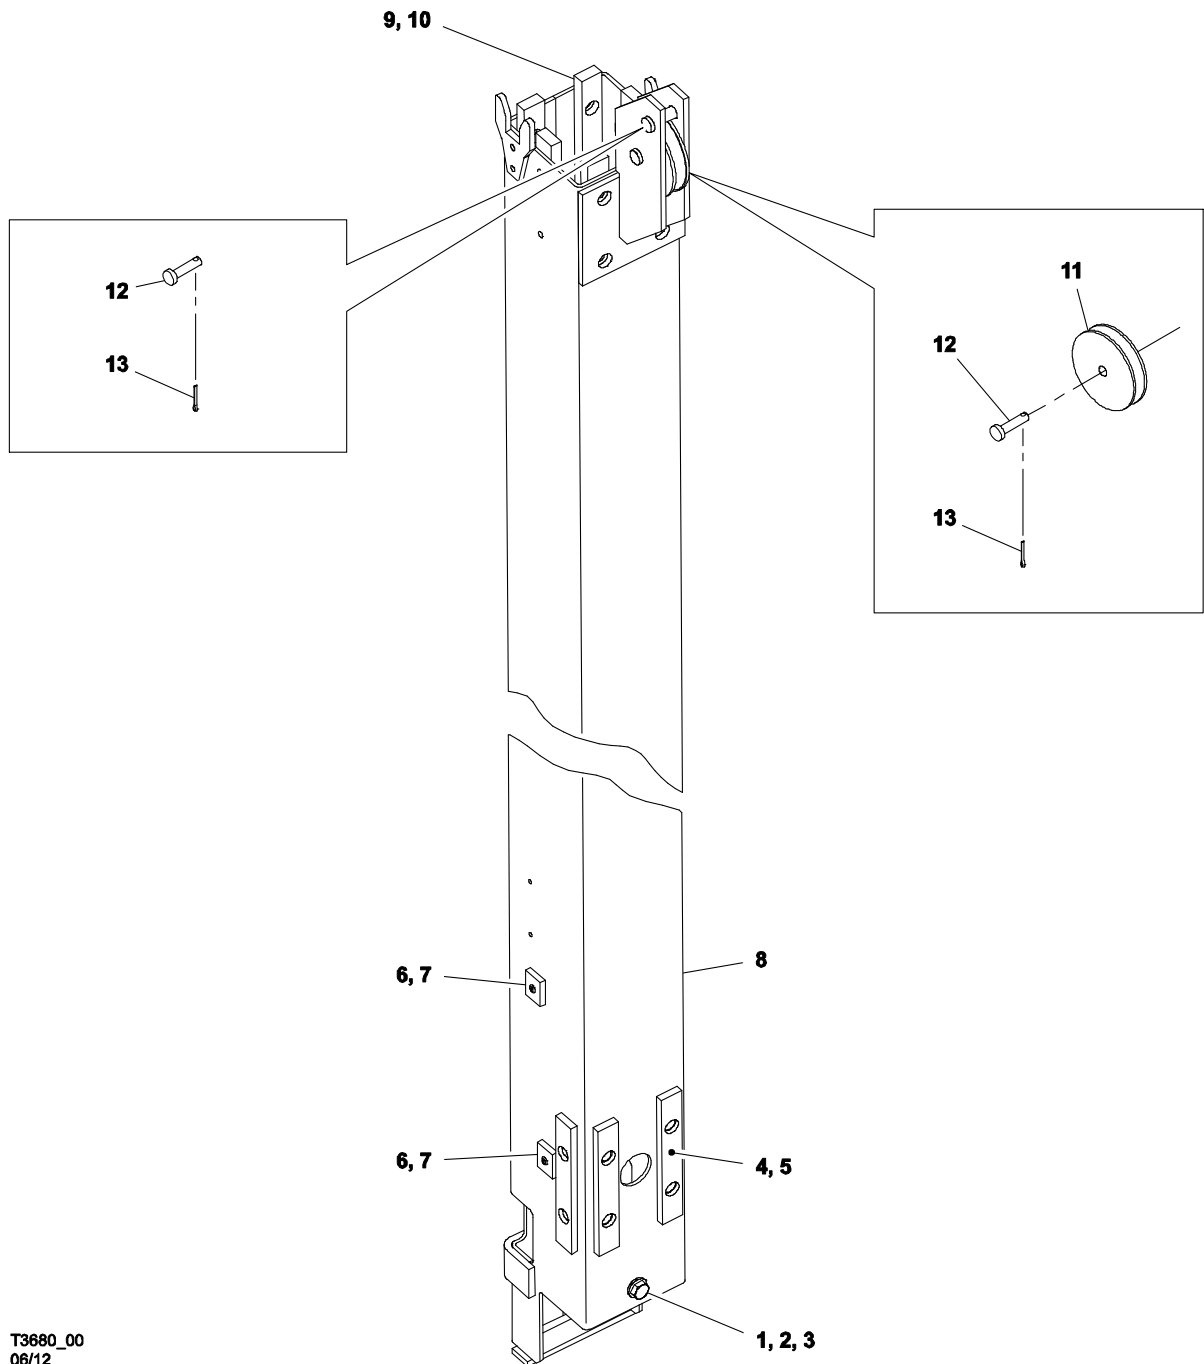

T3680_00
06/12

[illegible]

 UPPER MIDDLE MAST TUBE ASSEMBLY

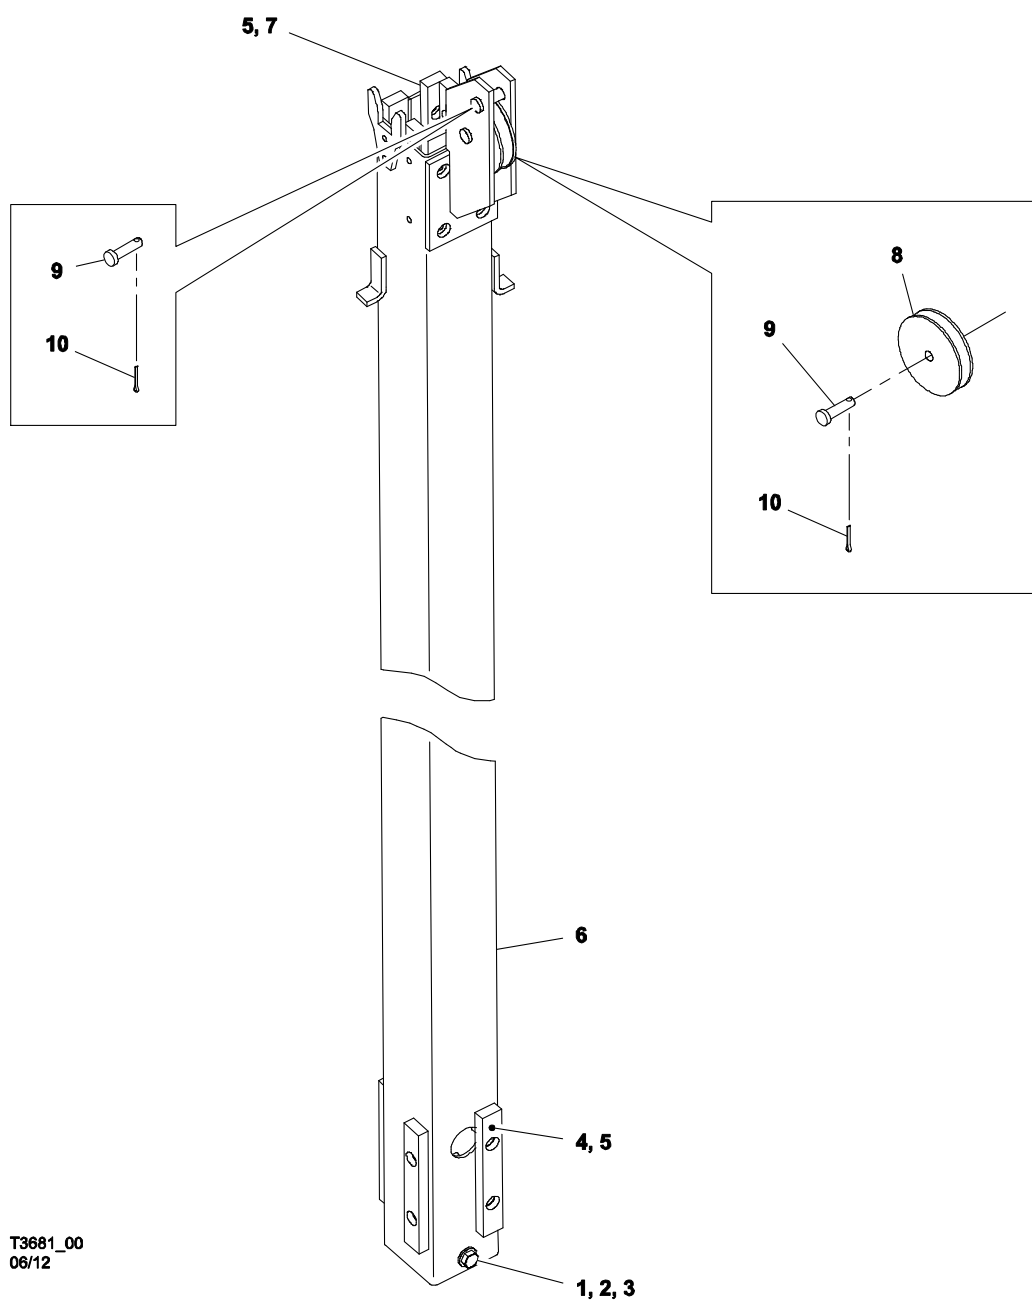


T3681_00
06/12

UPPER MIDDLE MAST TUBE ASSEMBLY

[illegible]

 UPPER MAST TUBE ASSEMBLY

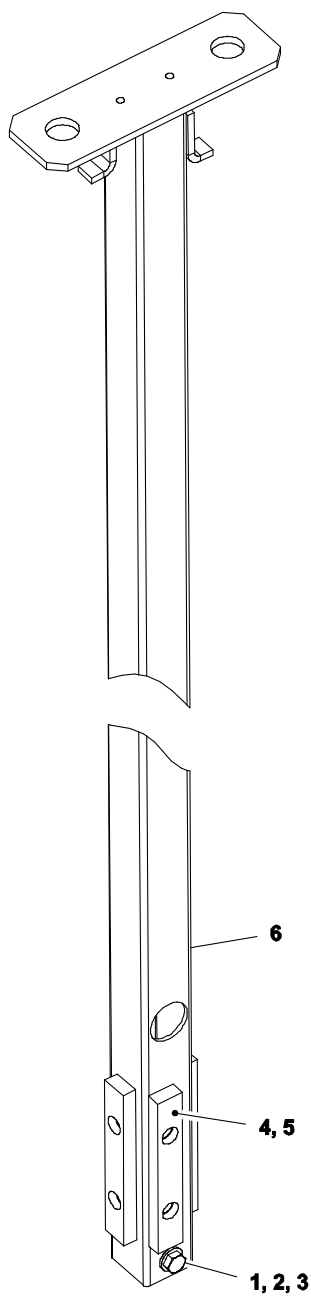


T3682_00
06/12

UPPER MAST TUBE ASSEMBLY

[illegible]

 BATTERY AND MOUNTING

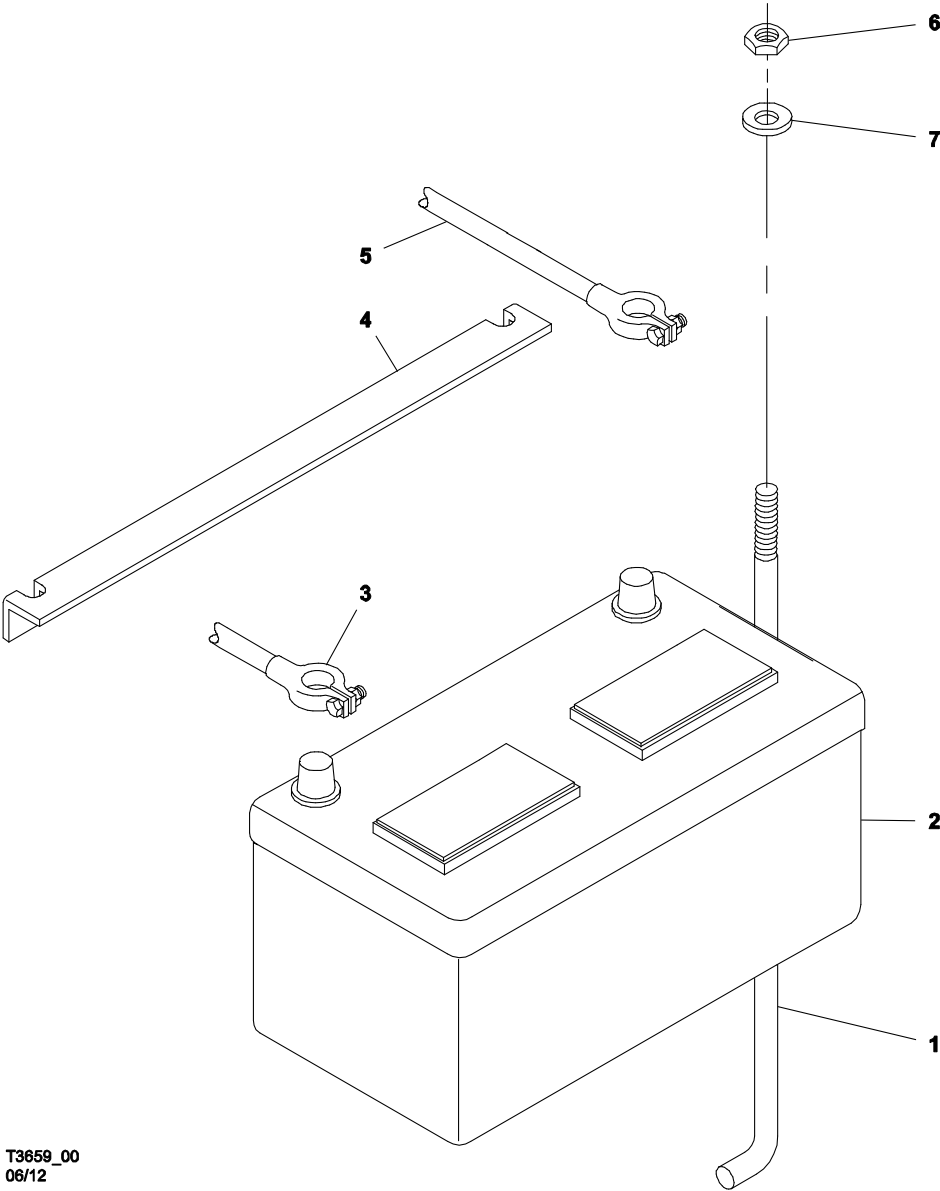


T3659_00
06/12

BATTERY AND MOUNTING

[illegible]

 INSTRUMENT / CONTROL PANEL ASSEMBLY

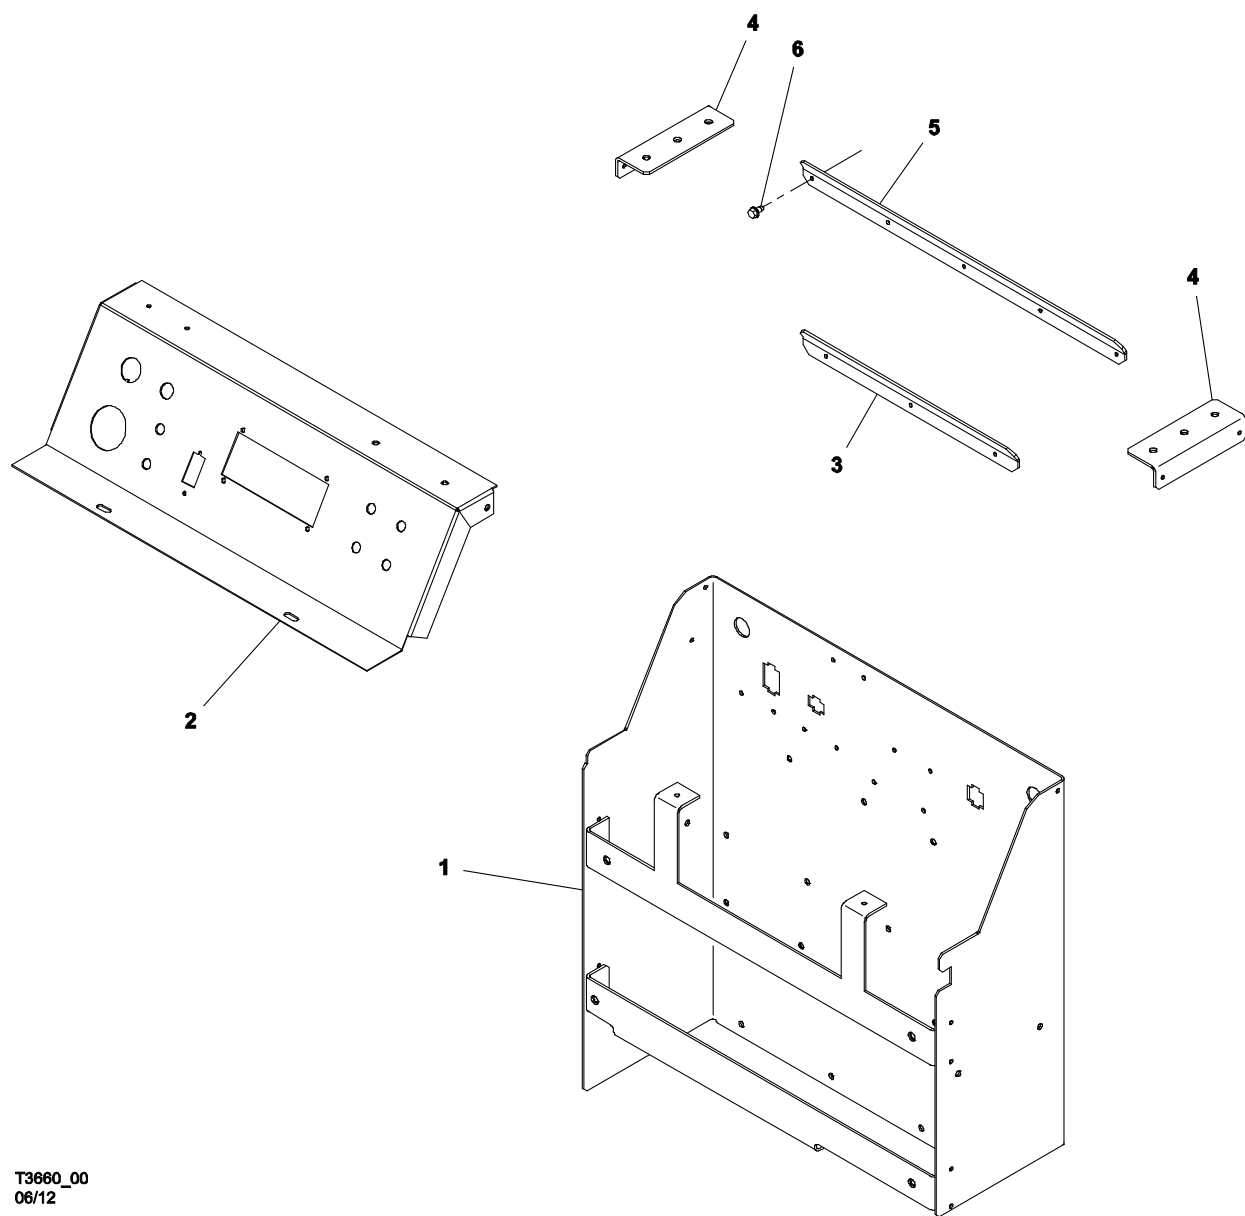


T3660_00
06/12

INSTRUMENT / CONTROL PANEL ASSEMBLY

[illegible]

 
BALLAST / CAPACITOR ASSEMBLY

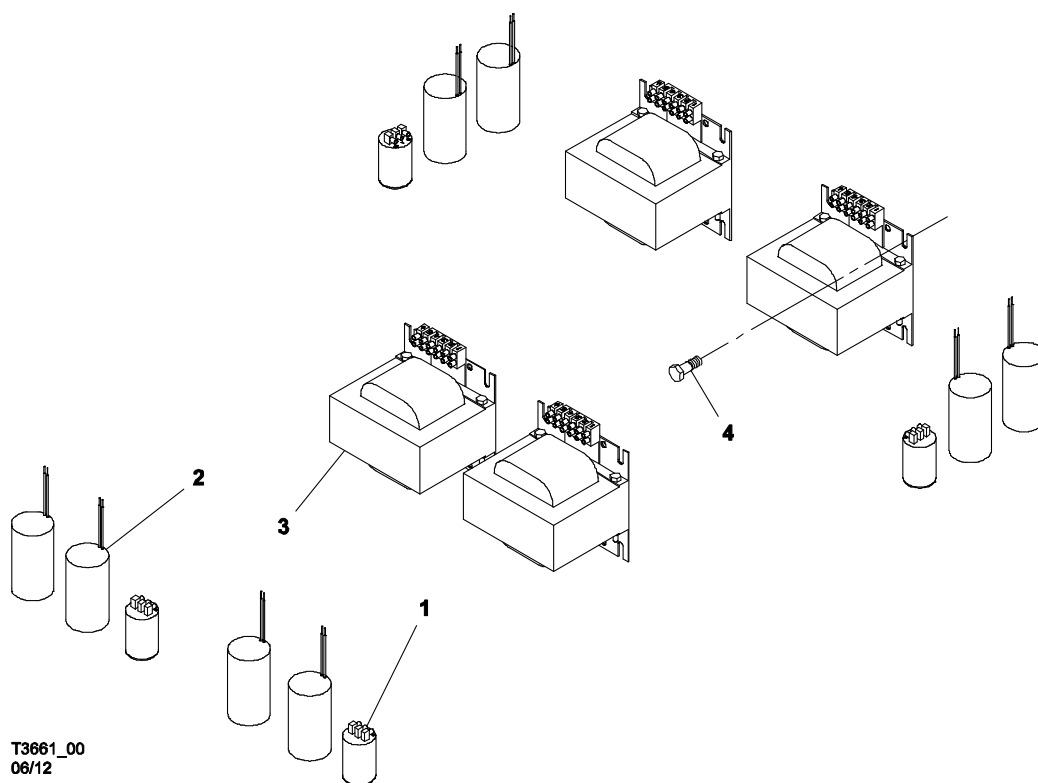

BALLAST / CAPACITOR ASSEMBLY	
---	--

[illegible]

 
INSTRUMENT / CONTROL PANEL ASSEMBLY

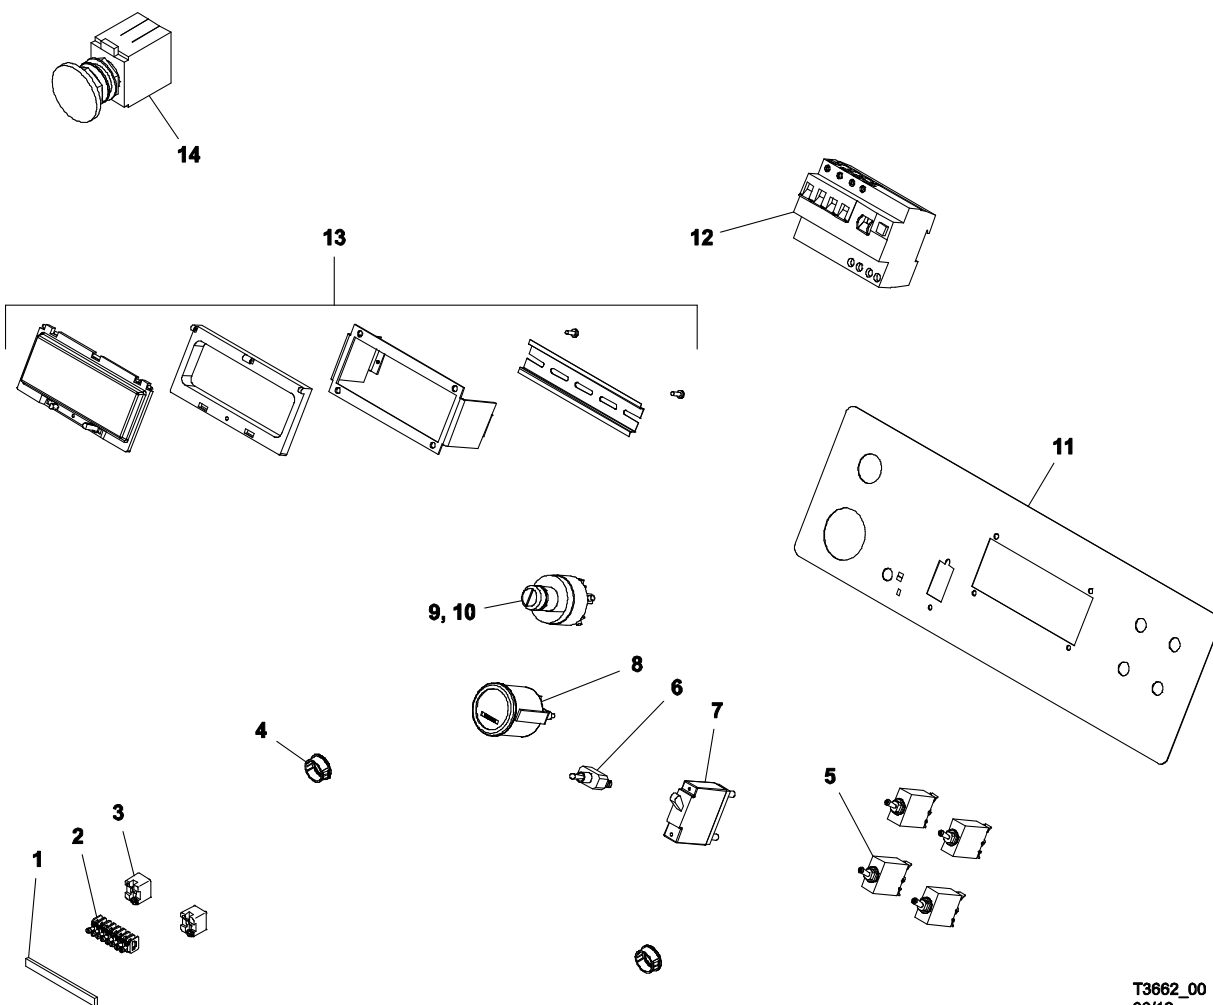

T3662_00
06/12

[illegible]

 
BUMPER / LIGHTS AND REFLECTORS

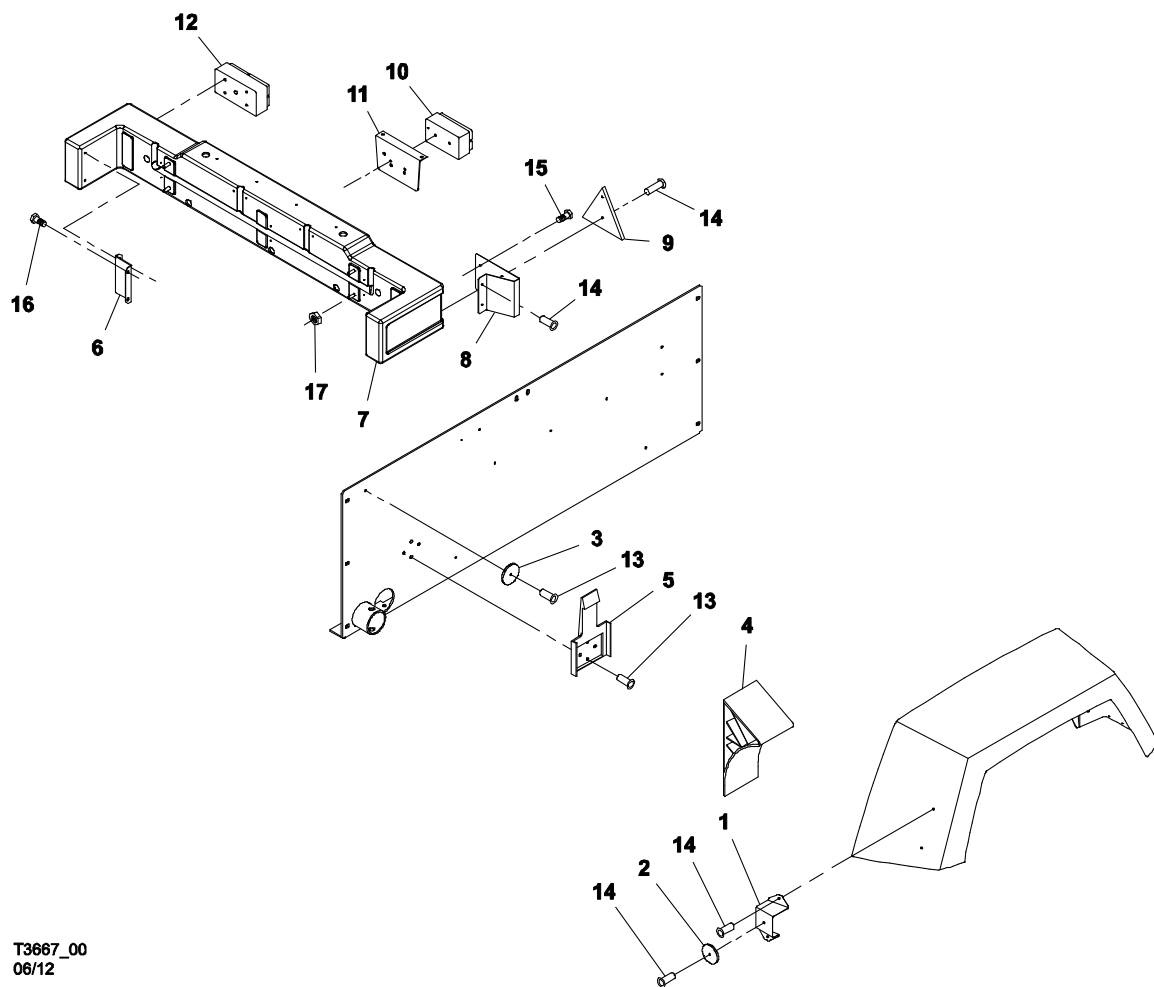

T3667_00
06/12

[illegible]

 FLOODLIGHT ASSEMBLY

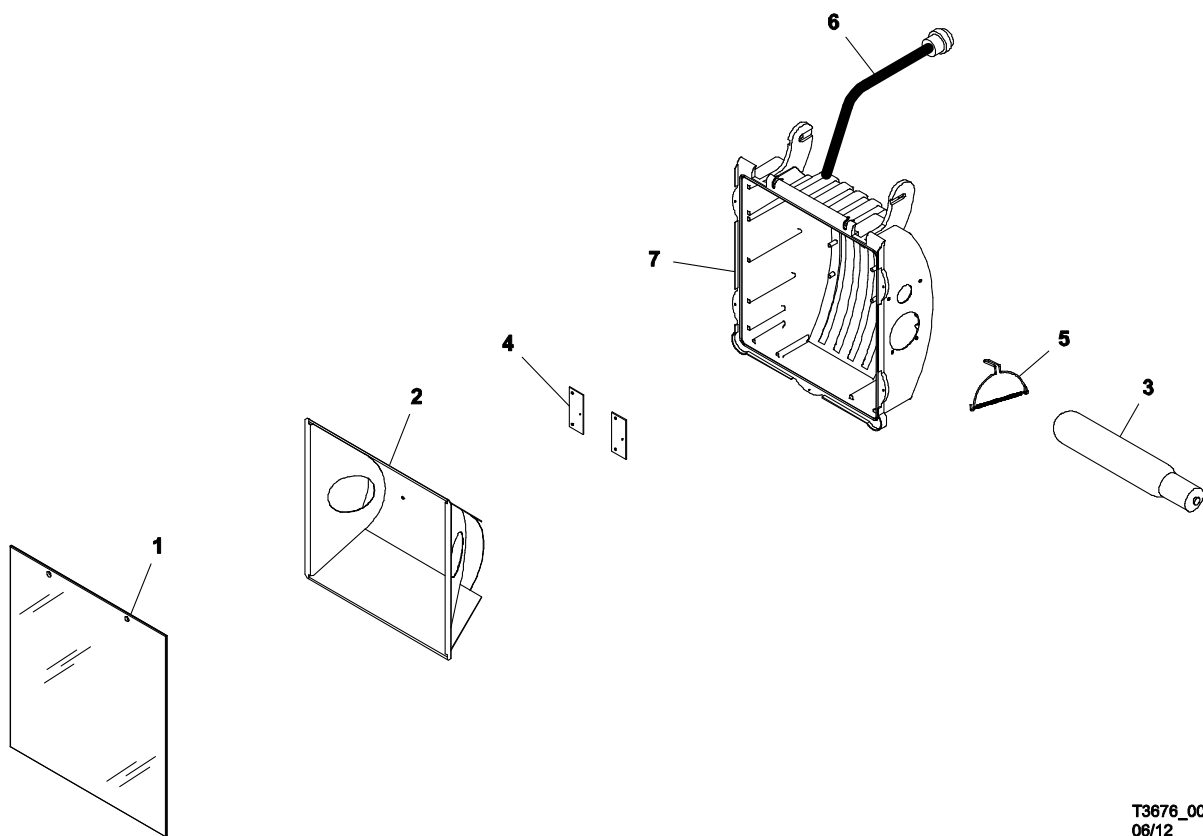


T3676_00
06/12

FLOODLIGHT ASSEMBLY	
---------------------	--

[illegible]







 
ALTERNATOR AND MOUNTING

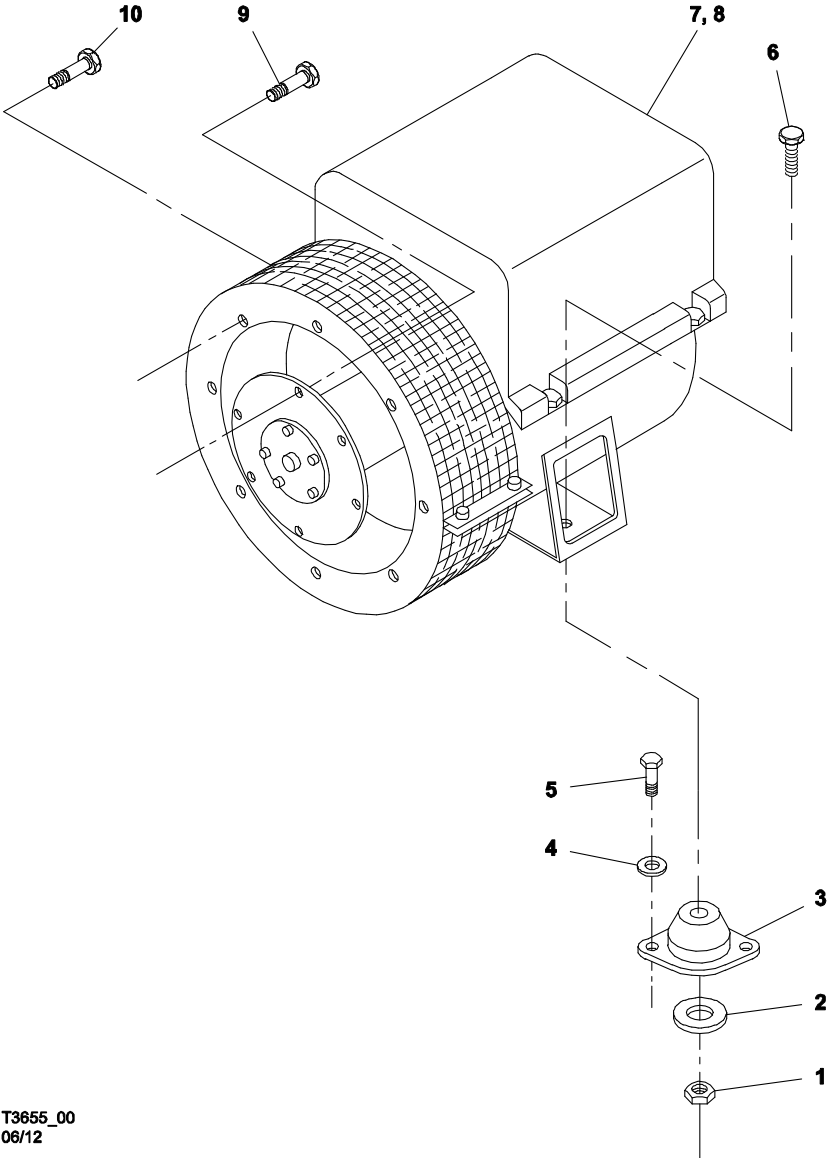

T3655_00
06/12

[illegible]

       ENGINE ASSEMBLY

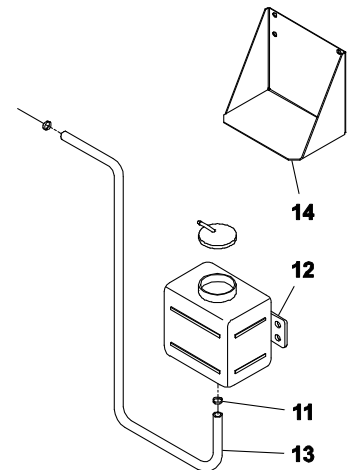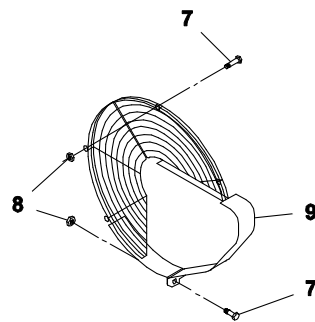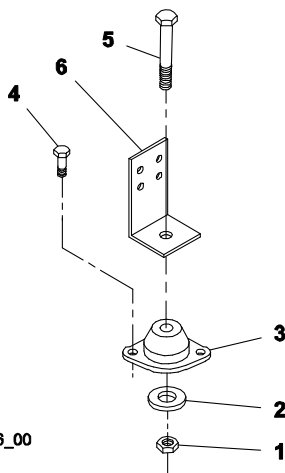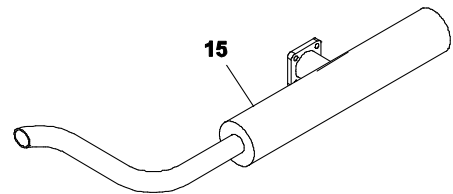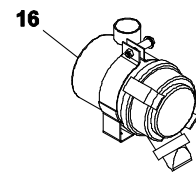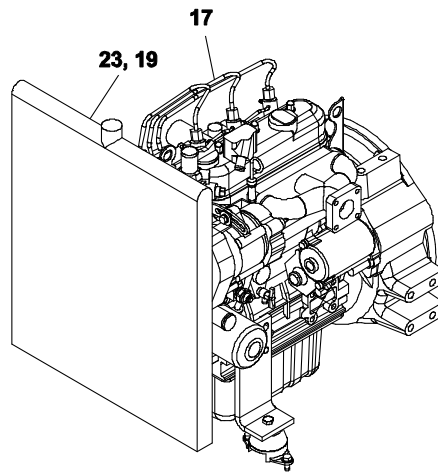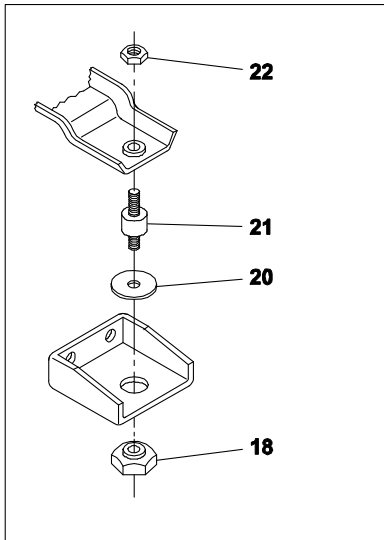


T3656_00
06/12

ENGINE ASSEMBLY

Item	Part Number	Description	Remarks	Serial Number	Qty
1	35273366	NUT			2
2	36899037	WASHER, SNUBBING			2
3	36875565	MOUNT			2
4	35279025	SCREW			4
5	96730411	SCREW			2
6	22262828	BRACKET			2
7	36898096	SCREW			8
8	36898104	NUT			8
9	36868727	GUARD, FAN			1
10	36871614	BRACKET			1
11	35296342	CLIP, RETAINING			2
12	36884948	RADIATOR			1
13	35363498	HOSE	(5/16")		1
14	22258230	BRACKET			1
15	36923431	MUFFLER			1
16	22173561	FILTER, AIR			1
17	22592562	ENGINE			1
18	43214808	NUT			2
19	22988885	CAP			1
20	36898542	WASHER			2
21	35307149	MOUNT			2
22	95923314	NUT			2
23	23084405	RADIATOR			1
24	44004539	KIT, SOLENOID	not shown on illustration		1
25	36870574	FILTER, ENGINE OIL	not shown on illustration		1
26	36870566	FILTER, FUEL	not shown on illustration		1
27	36890135	ELEMENT, AIR FILTER	not shown on illustration		1
28	36868479	SWITCH, COOLANT TEMPERATURE	not shown on illustration		1
29	36878379	SWITCH, OIL PRESSURE	not shown on illustration		1

 FUEL TANK AND PIPING

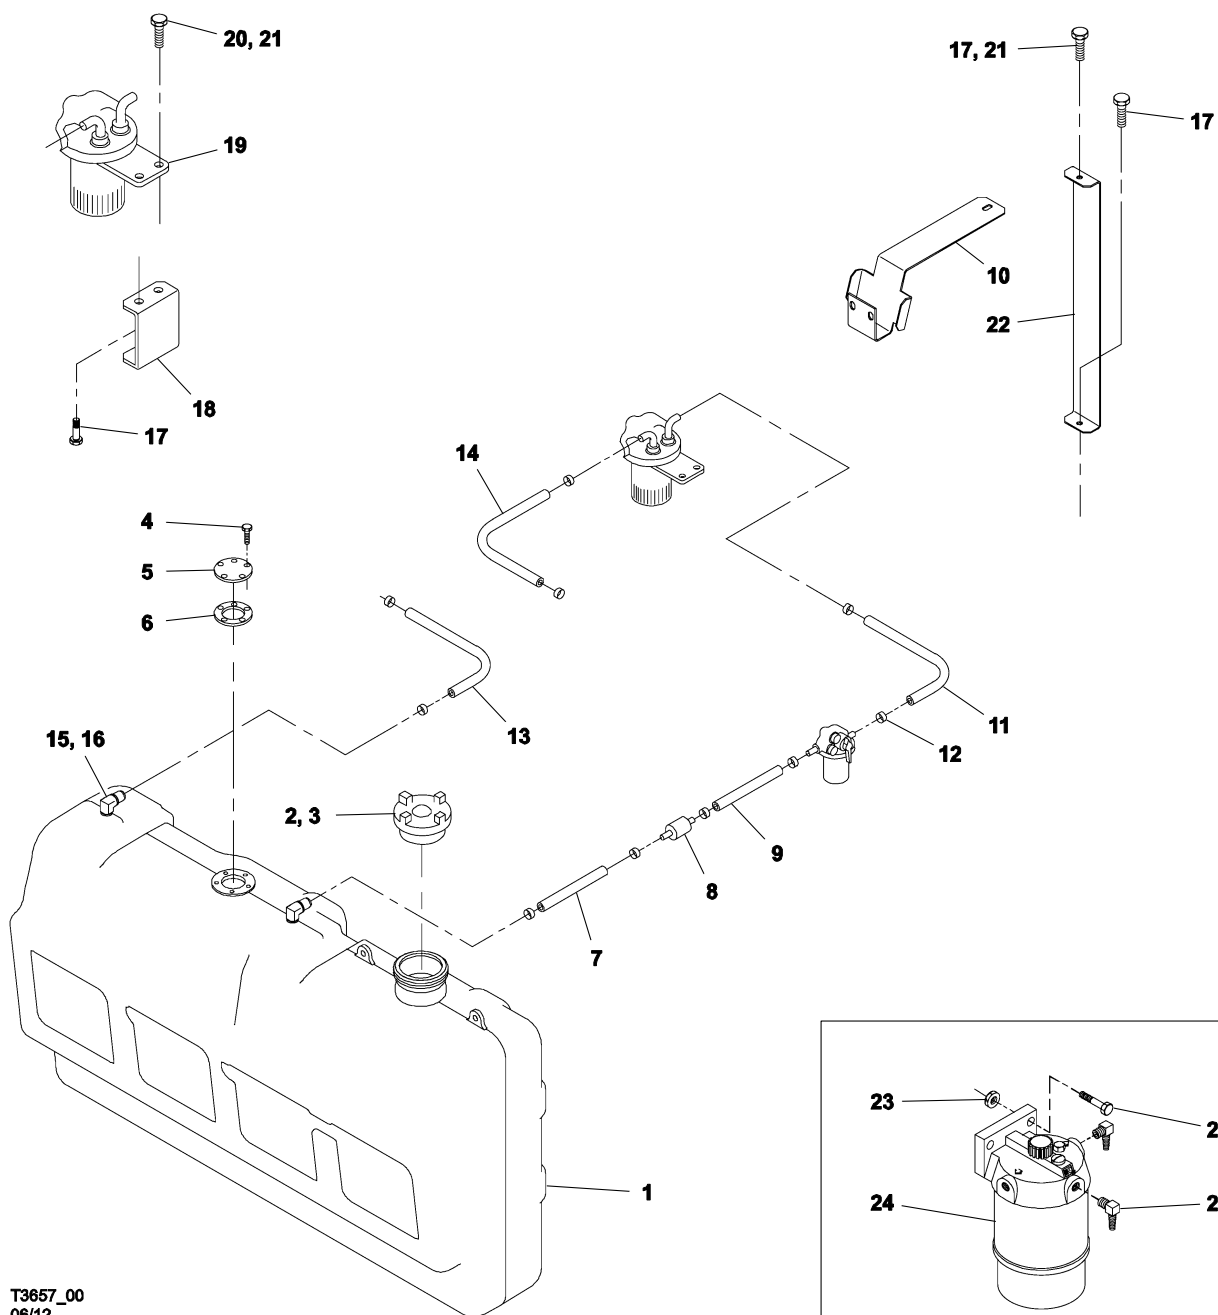


T3657_00
06/12

FUEL TANK AND PIPING

Item	Part Number	Description	Remarks	Serial Number	Qty
1	36881100	TANK, FUEL			1
2	36885564	CAP			1
3	35385111	GASKET			1
4	95916532	SCREW			5
5	36792828	COVER			1
6	35361849	GASKET			1
7	35363498	HOSE	(5/16")		1
8	36845493	FILTER			1
9	35363498	HOSE	(5/16")		1
10	22260905	STRAP			1
11	35363498	HOSE	(5/16")		1
12	35296342	CLIP, RETAINING			10
13	35282078	HOSE			1
14	35363498	HOSE	(5/16")		1
15	35392307	TANK, FUEL			2
16	35384577	BUSHING			2
17	35279025	SCREW			8
18	36923274	BRACKET			1
19	36870566	FILTER, FUEL			1
20	36889608	SCREW			2
21	36881886	NUT			3
22	22259386	STRAP			1
23	36881886	NUT	optional		2
24	36500957	FILTER	optional		1
25	36889608	SCREW	optional		2
26	35378538	ELBOW	optional		2

 OPTION - WATER SEPARATOR

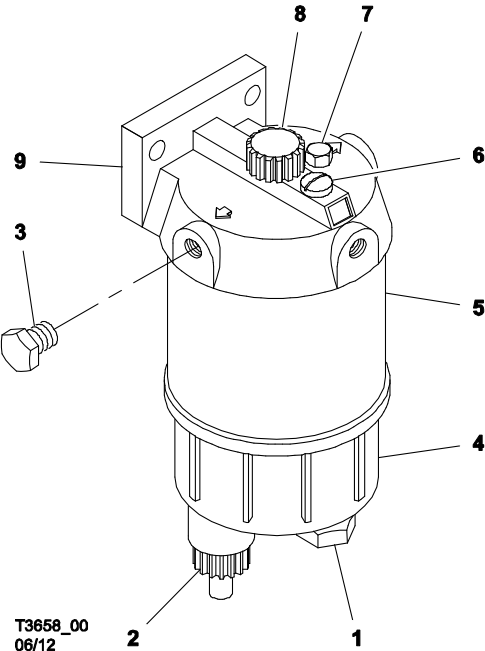

T3658_00
06/12

OPTION - WATER SEPARATOR

[illegible]

Intentionally left blank

NUMERICAL INDEX

Part Number	Denomination	WAS	Page	Subgroup
21110449	COVER		45	INSTRUMENT / CONTROL PANEL ASSEMBL
22051098	CAP		7	RUNNING GEAR ASSEMBLY
22051205	LEVER		7	RUNNING GEAR ASSEMBLY
22051247	PLUG		3	RUNNING GEAR ASSEMBLY
22051254	COVER		3	RUNNING GEAR ASSEMBLY
22051262	ATTACHMENT		3	RUNNING GEAR ASSEMBLY
22051403	SCREW		3	RUNNING GEAR ASSEMBLY
22051437	DAMPER		5	RUNNING GEAR ASSEMBLY
22051460	WASHER		3	RUNNING GEAR ASSEMBLY
22051494	NUT		3	RUNNING GEAR ASSEMBLY
22051510	COVER		5	RUNNING GEAR ASSEMBLY
22051544	JOINT		5	RUNNING GEAR ASSEMBLY
22051551	BUSH		3	RUNNING GEAR ASSEMBLY
22051577	LOCKNUT		3	RUNNING GEAR ASSEMBLY
			5	RUNNING GEAR ASSEMBLY
22051585	RING		5	RUNNING GEAR ASSEMBLY
22051596	SCREW		3	RUNNING GEAR ASSEMBLY
22051627	LEVER		3	RUNNING GEAR ASSEMBLY
22051643	WASHER		5	RUNNING GEAR ASSEMBLY
22051676	SCREW		5	RUNNING GEAR ASSEMBLY
22051833	LEVER, HANDBRAKE		5	RUNNING GEAR ASSEMBLY
22051866	BOLT		5	RUNNING GEAR ASSEMBLY
22051882	WASHER		5	RUNNING GEAR ASSEMBLY
22066971	WHEEL		7	RUNNING GEAR ASSEMBLY
22066989	TYRE		7	RUNNING GEAR ASSEMBLY
22067003	CLAMP ASSEMBLY		5	RUNNING GEAR ASSEMBLY
22104806	WASHER		3	RUNNING GEAR ASSEMBLY
22104814	WASHER		3	RUNNING GEAR ASSEMBLY
22113021	BREAKER COVER ASSEMBL		49	INSTRUMENT / CONTROL PANEL ASSEMBL
22123517	BREAKER, CIRCUIT		49	INSTRUMENT / CONTROL PANEL ASSEMBL
22123525	ROD, GROUND		9	FRAME ASSEMBLY
22123533	LUG, EARTHING		9	FRAME ASSEMBLY
22142343	U-BOLT		11	TOWER SUPPORT ASSEMBLY
22173561	FILTER, AIR		57	ENGINE ASSEMBLY
22182802	SPRING		3	RUNNING GEAR ASSEMBLY
22220347	HARNESS, ENGINE		49	INSTRUMENT / CONTROL PANEL ASSEMBL
22245047	FRAME		9	FRAME ASSEMBLY
			17	ENCLOSURE ASSEMBLY
22246797	BATTERY		43	BATTERY AND MOUNTING
22253470	SHIELD, HEAT		17	ENCLOSURE ASSEMBLY
22258230	BRACKET		57	ENGINE ASSEMBLY
22259386	STRAP		59	FUEL TANK AND PIPING
22260905	STRAP		59	FUEL TANK AND PIPING
22261382	PANEL, RIGHT SIDE		17	ENCLOSURE ASSEMBLY

Part Number	Denomination	WAS	Page	Subgroup
22261390	PANEL, LEFT SIDE		17	ENCLOSURE ASSEMBLY
22262828	BRACKET		57	ENGINE ASSEMBLY
22277335	CABLE		3	RUNNING GEAR ASSEMBLY
22283865	PLUG, PLASTIC		9 17	FRAME ASSEMBLY ENCLOSURE ASSEMBLY
22312375	CAP		3	RUNNING GEAR ASSEMBLY
22312383	PIN		5	RUNNING GEAR ASSEMBLY
22312391	SCREW		5	RUNNING GEAR ASSEMBLY
22312417	WASHER		3	RUNNING GEAR ASSEMBLY
22312425	AXLE		3	RUNNING GEAR ASSEMBLY
22312433	DRUM, BRAKE		7	RUNNING GEAR ASSEMBLY
22312441	BOLT		7	RUNNING GEAR ASSEMBLY
22333215	JUNCTION BOX AND CORD		33	TOWER ASSEMBLY
22347033	CARRIER, WHEEL CHOCK		51	BUMPER / LIGHTS AND REFLECTORS
22347041	CHOCK, WHEEL		51	BUMPER / LIGHTS AND REFLECTORS
22367163	CAP		35	LOWER MAST TUBE ASSEMBLY
22380943	CARDLE, TOWER		15	TOWER SUPPORT ASSEMBLY
22398242	U-BOLT		3	RUNNING GEAR ASSEMBLY
22398259	BRACKET		3	RUNNING GEAR ASSEMBLY
22408579	SUPPORT, TOWER		11	TOWER SUPPORT ASSEMBLY
22415244	PIN, TOWER		15	TOWER SUPPORT ASSEMBLY
22451702	RELAY		15	TOWER SUPPORT ASSEMBLY
22458012	PAD		15 35 37	TOWER SUPPORT ASSEMBLY LOWER MAST TUBE ASSEMBLY LOWER MIDDLE MAST TUBE ASSEMBLY
22459390	PAD, WEAR		11	TOWER SUPPORT ASSEMBLY
22469589	SPRING		35	LOWER MAST TUBE ASSEMBLY
22469878	CABLE		29	TOWER CABLES AND ROUTING
22469886	CABLE		29	TOWER CABLES AND ROUTING
22471403	SPRING		13	TOWER SUPPORT ASSEMBLY
22477616	PANEL, REAR END		17	ENCLOSURE ASSEMBLY
22477624	PANEL		17	ENCLOSURE ASSEMBLY
22477921	MAST, LOWER TUBE		35	LOWER MAST TUBE ASSEMBLY
22477939	MAST, LOWER MIDDLE TUB		37	LOWER MIDDLE MAST TUBE ASSEMBLY
22477947	MAST		39	UPPER MIDDLE MAST TUBE ASSEMBLY
22477954	MAST, TOP		33 41	TOWER ASSEMBLY UPPER MAST TUBE ASSEMBLY
22477962	CROSSBAR, LIGHT		31 33	TOWER ASSEMBLY TOWER ASSEMBLY
22478051	SUPPORT		13	TOWER SUPPORT ASSEMBLY
22480206	SLIDE		37 39 41	LOWER MIDDLE MAST TUBE ASSEMBLY UPPER MIDDLE MAST TUBE ASSEMBLY UPPER MAST TUBE ASSEMBLY
22481188	COVER, SPRING		35	LOWER MAST TUBE ASSEMBLY
22481196	SUPPORT		33	TOWER ASSEMBLY
22481204	SHROUD		35	LOWER MAST TUBE ASSEMBLY
22481212	PLATE		35	LOWER MAST TUBE ASSEMBLY

Part Number	Denomination	WAS	Page	Subgroup
22481220	TUBING		35	LOWER MAST TUBE ASSEMBLY
22481295	LATCH		13	TOWER SUPPORT ASSEMBLY
22481303	LATCH		13	TOWER SUPPORT ASSEMBLY
22481311	PIN		35	LOWER MAST TUBE ASSEMBLY
22481329	LEVER, ATD		13	TOWER SUPPORT ASSEMBLY
22493621	L-BOLT		11	TOWER SUPPORT ASSEMBLY
22494488	SUPPORT, WINCH		11	TOWER SUPPORT ASSEMBLY
22494603	SWITCH		35	LOWER MAST TUBE ASSEMBLY
22494850	DECAL		49	INSTRUMENT / CONTROL PANEL ASSEMBL
22494983	ANGLE		43	BATTERY AND MOUNTING
22495584	GUARD		13	TOWER SUPPORT ASSEMBLY
22496616	HARNESS SINGLE WINCH		11	TOWER SUPPORT ASSEMBLY
22497184	PANEL, TOP		17	ENCLOSURE ASSEMBLY
22497895	COVER		17	ENCLOSURE ASSEMBLY
22498323	BRACKET		51	BUMPER / LIGHTS AND REFLECTORS
22508105	DECAL, 3-PART WARNING		19	DECAL LOCATION
22508113	DECAL, TOWER OPERATION		19	DECAL LOCATION
22508121	DECAL, LIFTING INSTRUCTI		21	DECAL LOCATION
22508139	DECAL, PINCH POINT		19 21 25	DECAL LOCATION DECAL LOCATION DECAL LOCATION
22508147	DECAL, ULTRA VIOLET		19	DECAL LOCATION
22514194	DECAL, SOUND POWER		19 21	DECAL LOCATION DECAL LOCATION
22514343	FLOOD LIGHT ASSEMBLY		31	TOWER ASSEMBLY
22514350	HOUSING		53	FLOODLIGHT ASSEMBLY
22518104	BULB		53	FLOODLIGHT ASSEMBLY
22518112	REFLECTOR ASSEMBLY		53	FLOODLIGHT ASSEMBLY
22518120	COVER, LENS		53	FLOODLIGHT ASSEMBLY
22518153	PLATE, REFLECTOR		53	FLOODLIGHT ASSEMBLY
22519656	REFLECTOR		33	TOWER ASSEMBLY
22522023	WASHER, NYLON		31	TOWER ASSEMBLY
22523484	BRACKET		33	TOWER ASSEMBLY
22525091	LIGHTING HARNESS		51	BUMPER / LIGHTS AND REFLECTORS
22526578	BRACKET		51	BUMPER / LIGHTS AND REFLECTORS
22526834	SUPPORT		15	TOWER SUPPORT ASSEMBLY
22527501	BUMPER ASSEMBLY WITH L		51	BUMPER / LIGHTS AND REFLECTORS
22528319	BRACKET		51	BUMPER / LIGHTS AND REFLECTORS
22532402	BRACKET		13	TOWER SUPPORT ASSEMBLY
22547954	SUPPORT		53	FLOODLIGHT ASSEMBLY
22548432	DRAWBAR COMPLETE ASS		3	RUNNING GEAR ASSEMBLY
22553309	BUSHING		49	INSTRUMENT / CONTROL PANEL ASSEMBL
22557946	TRUNNION		31	TOWER ASSEMBLY
22557953	SUPPORT		31	TOWER ASSEMBLY
22558738	TRUNNION		31	TOWER ASSEMBLY
22562813	BALLAST		47	BALLAST / CAPACITOR ASSEMBLY

Part Number	Denomination	WAS	Page	Subgroup
22562821	IGNITER, IMPULSER		47	BALLAST / CAPACITOR ASSEMBLY
22562847	CAPACITOR		47	BALLAST / CAPACITOR ASSEMBLY
22563555	SUPPORT		45	INSTRUMENT / CONTROL PANEL ASSEMBL
22563563	SUPPORT		45	INSTRUMENT / CONTROL PANEL ASSEMBL
22573398	BOX, BALLAST		45	INSTRUMENT / CONTROL PANEL ASSEMBL
22574024	SUPPORT		45	INSTRUMENT / CONTROL PANEL ASSEMBL
22592562	ENGINE		57	ENGINE ASSEMBLY
22593305	STRAP, TRANSPORT		31	TOWER ASSEMBLY
22593651	HARNESS, CONTROLL PANE		49	INSTRUMENT / CONTROL PANEL ASSEMBL
22600845	DECAL, AC SCHEMATIC		19	DECAL LOCATION
22600852	DECAL, DC SCHEMATIC		19	DECAL LOCATION
22617005	TUBE, DRAWBAR		3	RUNNING GEAR ASSEMBLY
22617138	BRAKE ROD COMPLETE AS		7	RUNNING GEAR ASSEMBLY
22617146	CABLE		3	RUNNING GEAR ASSEMBLY
22617187	SET , BRAKE SHOE		7	RUNNING GEAR ASSEMBLY
22617203	SET , BRAKE ADJUSTING		7	RUNNING GEAR ASSEMBLY
22617211	GUIDE TUBE ASSEMBLY		7	RUNNING GEAR ASSEMBLY
22617815	SET, BEARING		7	RUNNING GEAR ASSEMBLY
22773949	CAP		23	DECAL LOCATION
22773956	CAP		23	DECAL LOCATION
22972178	SWITCH, WINCH CABLE SLA		11	TOWER SUPPORT ASSEMBLY
22988885	CAP		57	ENGINE ASSEMBLY
23084405	RADIATOR		57	ENGINE ASSEMBLY
23226558	ALTERNATOR		55	ALTERNATOR AND MOUNTING
35120492	RIVET		35	LOWER MAST TUBE ASSEMBLY
			37	LOWER MIDDLE MAST TUBE ASSEMBLY
			39	UPPER MIDDLE MAST TUBE ASSEMBLY
35253038	CLAMP		35	LOWER MAST TUBE ASSEMBLY
35271170	SCREW		11	TOWER SUPPORT ASSEMBLY
35273366	NUT		55	ALTERNATOR AND MOUNTING
			57	ENGINE ASSEMBLY
35279025	SCREW		9	FRAME ASSEMBLY
			15	TOWER SUPPORT ASSEMBLY
			51	BUMPER / LIGHTS AND REFLECTORS
			57	ENGINE ASSEMBLY
			59	FUEL TANK AND PIPING
35282078	HOSE		59	FUEL TANK AND PIPING
35284793	SCREW		13	TOWER SUPPORT ASSEMBLY
35296342	CLIP, RETAINING		57	ENGINE ASSEMBLY
			59	FUEL TANK AND PIPING
35300771	SCREW		9	FRAME ASSEMBLY
35307149	MOUNT		57	ENGINE ASSEMBLY
35323385	TERMINAL		15	TOWER SUPPORT ASSEMBLY
			35	LOWER MAST TUBE ASSEMBLY
35356526	NUT		35	LOWER MAST TUBE ASSEMBLY
35356583	MOUNT		15	TOWER SUPPORT ASSEMBLY
35358340	BOWL		61	OPTION - WATER SEPARATOR

Part Number	Denomination	WAS	Page	Subgroup
35358365	CAP		61	OPTION - WATER SEPARATOR
35358373	KNOB, DRAIN		61	OPTION - WATER SEPARATOR
35358381	PLUG		61	OPTION - WATER SEPARATOR
35358399	PLUG		61	OPTION - WATER SEPARATOR
35361849	GASKET		59	FUEL TANK AND PIPING
35363498	HOSE		57 59	ENGINE ASSEMBLY FUEL TANK AND PIPING
35367978	ELEMENT		61	OPTION - WATER SEPARATOR
35368703	PLUG, VENT		61	OPTION - WATER SEPARATOR
35375377	SCREW		31	TOWER ASSEMBLY
35378538	ELBOW		59	FUEL TANK AND PIPING
35384577	BUSHING		59	FUEL TANK AND PIPING
35385111	GASKET		59	FUEL TANK AND PIPING
35385533	KEY, STARTING		49	INSTRUMENT / CONTROL PANEL ASSEMBL
35392307	TANK, FUEL		59	FUEL TANK AND PIPING
35516582	CABLE, POSITIVE		43	BATTERY AND MOUNTING
35578194	STRAP, EARTHING		43	BATTERY AND MOUNTING
35607829	BOLT, EYE		17	ENCLOSURE ASSEMBLY
35607837	SPRING		17	ENCLOSURE ASSEMBLY
35610856	CABLE, NEGATIVE		43	BATTERY AND MOUNTING
36500957	FILTER		59	FUEL TANK AND PIPING
36761476	SCREW		13	TOWER SUPPORT ASSEMBLY
36769032	LOCKNUT		11	TOWER SUPPORT ASSEMBLY
36769131	TERMINAL		49	INSTRUMENT / CONTROL PANEL ASSEMBL
36769149	BUSBAR		49	INSTRUMENT / CONTROL PANEL ASSEMBL
36769164	SUPPORT, BUSBAR		49	INSTRUMENT / CONTROL PANEL ASSEMBL
36769743	NUT		11 13 29 37 39 41	TOWER SUPPORT ASSEMBLY TOWER SUPPORT ASSEMBLY TOWER CABLES AND ROUTING LOWER MIDDLE MAST TUBE ASSEMBLY UPPER MIDDLE MAST TUBE ASSEMBLY UPPER MAST TUBE ASSEMBLY
36772028	WASHER		17	ENCLOSURE ASSEMBLY
36779346	CORD		53	FLOODLIGHT ASSEMBLY
36783009	PULLEY		11 13 29 37 39	TOWER SUPPORT ASSEMBLY TOWER SUPPORT ASSEMBLY TOWER CABLES AND ROUTING LOWER MIDDLE MAST TUBE ASSEMBLY UPPER MIDDLE MAST TUBE ASSEMBLY
36786218	CABLE, PIN		15	TOWER SUPPORT ASSEMBLY
36786457	KEY SWITCH ASSEMBLY		49	INSTRUMENT / CONTROL PANEL ASSEMBL
36787398	LEVEL, CIRCLE		17	ENCLOSURE ASSEMBLY
36787430	TAPE		17	ENCLOSURE ASSEMBLY
36792828	COVER		59	FUEL TANK AND PIPING
36794170	PIN, LATCH		15	TOWER SUPPORT ASSEMBLY
36794204	SWITCH, SPDT		49	INSTRUMENT / CONTROL PANEL ASSEMBL
36796068	TUBE, JACK		9	FRAME ASSEMBLY

Part Number	Denomination	WAS	Page	Subgroup
			47	BALLAST / CAPACITOR ASSEMBLY
			51	BUMPER / LIGHTS AND REFLECTORS
36841245	HOURLMETER		49	INSTRUMENT / CONTROL PANEL ASSEMBL
36843282	RIVET		15	TOWER SUPPORT ASSEMBLY
			17	ENCLOSURE ASSEMBLY
36845493	FILTER		59	FUEL TANK AND PIPING
36848224	PIN		9	FRAME ASSEMBLY
			33	TOWER ASSEMBLY
36850402	BREAKER, CIRCUIT		49	INSTRUMENT / CONTROL PANEL ASSEMBL
36853265	WASHER		43	BATTERY AND MOUNTING
36853505	NUT		17	ENCLOSURE ASSEMBLY
36868479	SWITCH, COOLANT TEMPER		57	ENGINE ASSEMBLY
36868727	GUARD, FAN		57	ENGINE ASSEMBLY
36869246	PIN		11	TOWER SUPPORT ASSEMBLY
			13	TOWER SUPPORT ASSEMBLY
			29	TOWER CABLES AND ROUTING
			37	LOWER MIDDLE MAST TUBE ASSEMBLY
			39	UPPER MIDDLE MAST TUBE ASSEMBLY
36869253	PIN, PIVOT		11	TOWER SUPPORT ASSEMBLY
36870566	FILTER, FUEL		57	ENGINE ASSEMBLY
			59	FUEL TANK AND PIPING
36870574	FILTER, ENGINE OIL		57	ENGINE ASSEMBLY
36871614	BRACKET		57	ENGINE ASSEMBLY
36875565	MOUNT		55	ALTERNATOR AND MOUNTING
			57	ENGINE ASSEMBLY
36876746	MAGNET		13	TOWER SUPPORT ASSEMBLY
			35	LOWER MAST TUBE ASSEMBLY
			37	LOWER MIDDLE MAST TUBE ASSEMBLY
36876803	SENSOR, PROXIMITY		15	TOWER SUPPORT ASSEMBLY
			35	LOWER MAST TUBE ASSEMBLY
36876910	PLUG		61	OPTION - WATER SEPARATOR
36877579	FENDER		17	ENCLOSURE ASSEMBLY
36878056	WINCH		11	TOWER SUPPORT ASSEMBLY
36878379	SWITCH, OIL PRESSURE		57	ENGINE ASSEMBLY
36879195	NUT		11	TOWER SUPPORT ASSEMBLY
36880995	SCREW		11	TOWER SUPPORT ASSEMBLY
36881100	TANK, FUEL		59	FUEL TANK AND PIPING
36881886	NUT		11	TOWER SUPPORT ASSEMBLY
			51	BUMPER / LIGHTS AND REFLECTORS
			59	FUEL TANK AND PIPING
36883809	SWITCH, E-STOP		49	INSTRUMENT / CONTROL PANEL ASSEMBL
36884419	RIVET		37	LOWER MIDDLE MAST TUBE ASSEMBLY
			39	UPPER MIDDLE MAST TUBE ASSEMBLY
			41	UPPER MAST TUBE ASSEMBLY
36884948	RADIATOR		57	ENGINE ASSEMBLY
36885549	SPRING		11	TOWER SUPPORT ASSEMBLY
36885564	CAP		59	FUEL TANK AND PIPING
36888915	CONNECTOR		55	ALTERNATOR AND MOUNTING
36889186	PLUG		33	TOWER ASSEMBLY

Part Number	Denomination	WAS	Page	Subgroup
36890135	ELEMENT, AIR FILTER		57	ENGINE ASSEMBLY
36890358	CONNECTOR, STRAIN RELIEF		17	ENCLOSURE ASSEMBLY
36895746	NUTSERT		13 17	TOWER SUPPORT ASSEMBLY ENCLOSURE ASSEMBLY
36898096	SCREW		15 57	TOWER SUPPORT ASSEMBLY ENGINE ASSEMBLY
36898104	NUT		15 57	TOWER SUPPORT ASSEMBLY ENGINE ASSEMBLY
36898211	BREAKER, CIRCUIT		49	INSTRUMENT / CONTROL PANEL ASSEMBLY
36898542	WASHER		57	ENGINE ASSEMBLY
36899037	WASHER, SNUBBING		31 55 57	TOWER ASSEMBLY ALTERNATOR AND MOUNTING ENGINE ASSEMBLY
36923134	BRACKET		17	ENCLOSURE ASSEMBLY
36923175	HINGE		17	ENCLOSURE ASSEMBLY
36923183	DOOR		17	ENCLOSURE ASSEMBLY
36923274	BRACKET		59	FUEL TANK AND PIPING
36923282	ROD		43	BATTERY AND MOUNTING
36923407	JACK, OUTRIGGER		9	FRAME ASSEMBLY
36923415	JACK ASSEMBLY		9	FRAME ASSEMBLY
36923431	MUFFLER		57	ENGINE ASSEMBLY
39139316	WASHER, NYLON		13 31	TOWER SUPPORT ASSEMBLY TOWER ASSEMBLY
43214568	CAPACITOR		55	ALTERNATOR AND MOUNTING
43214808	NUT		57	ENGINE ASSEMBLY
44004539	KIT, SOLENOID		57	ENGINE ASSEMBLY
54410600	SUPPORT, JACK		9	FRAME ASSEMBLY
54624119	BAR, BUMPER		51	BUMPER / LIGHTS AND REFLECTORS
54627617	GUARD		17	ENCLOSURE ASSEMBLY
54630033	DECAL, OPERATING INSTRU		19	DECAL LOCATION
54640008	DECAL, IR ENGINE OIL		19	DECAL LOCATION
54640024	DECAL, GENUINE PARTS		19	DECAL LOCATION
54737408	WHEEL AND TYRE ASSEMB		7	RUNNING GEAR ASSEMBLY
89203822	BRACKET		51	BUMPER / LIGHTS AND REFLECTORS
92085729	REFLECTOR, WHITE		51	BUMPER / LIGHTS AND REFLECTORS
92121243	REFLECTOR, AMBER		51	BUMPER / LIGHTS AND REFLECTORS
92271915	RIVET		51	BUMPER / LIGHTS AND REFLECTORS
92271923	RIVET		51	BUMPER / LIGHTS AND REFLECTORS
92304369	SCREW		11	TOWER SUPPORT ASSEMBLY
92368687	SCREW		9 33 35	FRAME ASSEMBLY TOWER ASSEMBLY LOWER MAST TUBE ASSEMBLY
92721331	REFLECTOR, RED		51	BUMPER / LIGHTS AND REFLECTORS
92783620	LAMP, STOP/REAR/INDICAT		51	BUMPER / LIGHTS AND REFLECTORS
92867449	DECAL, REFER TO HANDBO		23 27	DECAL LOCATION DECAL LOCATION
92867530	DECAL, HOT SURFACE		19	DECAL LOCATION

Part Number	Denomination	WAS	Page	Subgroup
			23	DECAL LOCATION
			31	TOWER ASSEMBLY
92912559	DECAL, EARTH WARNING		19	DECAL LOCATION
92930585	DECAL, PRESSURISED VES		23	DECAL LOCATION
92930593	DECAL, ELECTRIC SHOCK		19	DECAL LOCATION
			23	DECAL LOCATION
			27	DECAL LOCATION
92930601	DECAL, CORROSIVE SUBST		27	DECAL LOCATION
92930627	DECAL, GENERAL WARNING		19	DECAL LOCATION
			23	DECAL LOCATION
			27	DECAL LOCATION
92930650	DECAL, EMERGENCY STOP		19	DECAL LOCATION
92930668	DECAL, NO MAINT/READ MA		21	DECAL LOCATION
92976042	DECAL, EXHAUST GAS DISC		25	DECAL LOCATION
93165959	DECAL, ROTATING FAN		19	DECAL LOCATION
			23	DECAL LOCATION
93171254	DECAL, DIESEL FUEL		23	DECAL LOCATION
93171262	DECAL, LIFT/TIE POINT		19	DECAL LOCATION
			21	DECAL LOCATION
			25	DECAL LOCATION
93171288	DECAL, COOLANT FILL		23	DECAL LOCATION
93171916	DECAL, TIRE PRESSURE		21	DECAL LOCATION
			25	DECAL LOCATION
93178945	DECAL, OIL FILL SYMBOL XP		23	DECAL LOCATION
93477388	LAMP, FOG		51	BUMPER / LIGHTS AND REFLECTORS
95067864	SCREW		55	ALTERNATOR AND MOUNTING
95916532	SCREW		59	FUEL TANK AND PIPING
95920674	SCREW		55	ALTERNATOR AND MOUNTING
95923298	NUT		17	ENCLOSURE ASSEMBLY
			43	BATTERY AND MOUNTING
95923314	NUT		13	TOWER SUPPORT ASSEMBLY
			57	ENGINE ASSEMBLY
95923348	NUT		11	TOWER SUPPORT ASSEMBLY
95928867	PIN, COTTER		11	TOWER SUPPORT ASSEMBLY
			13	TOWER SUPPORT ASSEMBLY
			29	TOWER CABLES AND ROUTING
			37	LOWER MIDDLE MAST TUBE ASSEMBLY
			39	UPPER MIDDLE MAST TUBE ASSEMBLY
95934998	WASHER		11	TOWER SUPPORT ASSEMBLY
			13	TOWER SUPPORT ASSEMBLY
			29	TOWER CABLES AND ROUTING
			37	LOWER MIDDLE MAST TUBE ASSEMBLY
			39	UPPER MIDDLE MAST TUBE ASSEMBLY
			41	UPPER MAST TUBE ASSEMBLY
			55	ALTERNATOR AND MOUNTING
95935003	WASHER		11	TOWER SUPPORT ASSEMBLY
95935011	WASHER		11	TOWER SUPPORT ASSEMBLY
			31	TOWER ASSEMBLY
			33	TOWER ASSEMBLY
95935029	WASHER		17	ENCLOSURE ASSEMBLY
95935037	WASHER		11	TOWER SUPPORT ASSEMBLY
			13	TOWER SUPPORT ASSEMBLY

Part Number	Denomination	WAS	Page	Subgroup
			35	LOWER MAST TUBE ASSEMBLY
95939492	WASHER		35	LOWER MAST TUBE ASSEMBLY
95962734	RIVET		13	TOWER SUPPORT ASSEMBLY
			15	TOWER SUPPORT ASSEMBLY
			35	LOWER MAST TUBE ASSEMBLY
			37	LOWER MIDDLE MAST TUBE ASSEMBLY
96702428	SCREW		31	TOWER ASSEMBLY
96702659	SCREW		29	TOWER CABLES AND ROUTING
			33	TOWER ASSEMBLY
			37	LOWER MIDDLE MAST TUBE ASSEMBLY
			39	UPPER MIDDLE MAST TUBE ASSEMBLY
			41	UPPER MAST TUBE ASSEMBLY
96702741	NUT, SELF LOCKING		31	TOWER ASSEMBLY
			33	TOWER ASSEMBLY
96703806	NUT		35	LOWER MAST TUBE ASSEMBLY
96705983	SCREW		11	TOWER SUPPORT ASSEMBLY
96707377	SCREW		3	RUNNING GEAR ASSEMBLY
96715354	SCREW		31	TOWER ASSEMBLY
			33	TOWER ASSEMBLY
96727300	LOCKNUT		3	RUNNING GEAR ASSEMBLY
			5	RUNNING GEAR ASSEMBLY
96730411	SCREW		55	ALTERNATOR AND MOUNTING
			57	ENGINE ASSEMBLY
96735550	NUT		31	TOWER ASSEMBLY
96737556	SCREW		3	RUNNING GEAR ASSEMBLY
			5	RUNNING GEAR ASSEMBLY
96737747	LOCKNUT		3	RUNNING GEAR ASSEMBLY
96738802	SCREW		13	TOWER SUPPORT ASSEMBLY
			35	LOWER MAST TUBE ASSEMBLY
			55	ALTERNATOR AND MOUNTING
96739313	SCREW		11	TOWER SUPPORT ASSEMBLY

