

PM	Section	Page	CPN
RX-344H	A.1	Upper Section And Engine	59187807
RX-344H	A.1	Upper Section And Engine	59831123
RX-344H	A.1	Upper Section And Engine	59831131
RX-344H	A.1	Upper Section And Engine	59840744
RX-344H	A.1	Upper Section And Engine	54680665
RX-344H	A.1	Upper Section And Engine	58898255
RX-344H	A.1	Upper Section And Engine	59953935
RX-344H	A.1	Upper Section And Engine	59831925
RX-344H	A.1	Upper Section And Engine	59835371
RX-344H	A.1	Upper Section And Engine	59187831
RX-344H	A.1	Upper Section And Engine	59187864
RX-344H	A.1	Upper Section And Engine	59187856
RX-344H	A.1	Upper Section And Engine	59187849
RX-344H	A.1	Upper Section And Engine	59187815
RX-344H	A.1	Upper Section And Engine	59839852
RX-344H	A.1	Upper Section And Engine	59187823
RX-344H	A.1	Upper Section And Engine	59840819
RX-344H	A.1	Upper Section And Engine	59840827
RX-344H	A.1	Upper Section And Engine	59840835
RX-344H	A.1	Upper Section And Engine	59840843
RX-344H	A.1	Upper Section And Engine	59840850
RX-344H	A.1	Upper Section And Engine	54680673
RX-344H	A.1	Upper Section And Engine	59840819
RX-344H	A.1	Upper Section And Engine	59840827
RX-344H	A.1	Upper Section And Engine	59840835
RX-344H	A.1	Upper Section And Engine	59953190
RX-344H	A.1	Upper Section And Engine	59840918
RX-344H	A.1	Upper Section And Engine	59840926
RX-344H	A.1	Upper Section And Engine	59839431
RX-344H	A.1	Upper Section And Engine	59837948
RX-344H	A.1	Upper Section And Engine	59840934
RX-344H	A.1	Upper Section And Engine	59839456
RX-344H	A.1	Upper Section And Engine	59841163
RX-344H	A.1	Upper Section And Engine	59841171
RX-344H	A.1	Upper Section And Engine	59831925
RX-344H	A.1	Upper Section And Engine	59835371
RX-344H	A.1	Upper Section And Engine	59187898
RX-344H	A.1	Upper Section And Engine	59187906
RX-344H	A.1	Upper Section And Engine	59187922
RX-344H	A.1	Upper Section And Engine	59840983
RX-344H	A.1	Upper Section And Engine	59187963
RX-344H	A.1	Upper Section And Engine	59187930
RX-344H	A.1	Upper Section And Engine	59187948
RX-344H	A.1	Upper Section And Engine	59187955
RX-344H	A.1	Upper Section And Engine	59187971
RX-344H	A.1	Upper Section And Engine	59841064
RX-344H	A.1	Upper Section And Engine	59187989
RX-344H	A.1	Upper Section And Engine	59187880
RX-344H	A.1	Upper Section And Engine	59187914
RX-344H	A.1	Upper Section And Engine	59187997
RX-344H	A.1	Upper Section And Engine	59952242
RX-344H	A.1	Upper Section And Engine	59951632
RX-344H	A.1	Upper Section And Engine	59843722
RX-344H	A.1	Upper Section And Engine	59835371
RX-344H	A.1	Upper Section And Engine	59831925

RX-344H	A.1	Upper Section And Engine	59832931
RX-344H	A.1	Upper Section And Engine	59830208
RX-344H	A.1	Upper Section And Engine	59188003
RX-344H	A.1	Upper Section And Engine	59840082
RX-344H	B.1	Lower Section	59841213
RX-344H	B.1	Lower Section	59841221
RX-344H	B.1	Lower Section	59841239
RX-344H	B.1	Lower Section	59188029
RX-344H	B.1	Lower Section	59841254
RX-344H	B.1	Lower Section	59832030
RX-344H	B.1	Lower Section	59831743
RX-344H	B.1	Lower Section	54680731
RX-344H	B.1	Lower Section	54680749
RX-344H	B.1	Lower Section	59188045
RX-344H	B.1	Lower Section	59188052
RX-344H	B.1	Lower Section	59841320
RX-344H	B.1	Lower Section	59841338
RX-344H	B.1	Lower Section	54680756
RX-344H	B.1	Lower Section	59841353
RX-344H	B.1	Lower Section	59841361
RX-344H	B.1	Lower Section	59841379
RX-344H	B.1	Lower Section	59188060
RX-344H	B.1	Lower Section	54680764
RX-344H	B.1	Lower Section	54680772
RX-344H	B.1	Lower Section	58898263
RX-344H	B.1	Lower Section	59831123
RX-344H	B.1	Lower Section	59831131
RX-344H	B.1	Lower Section	54680780
RX-344H	B.1	Lower Section	54680798
RX-344H	B.1	Lower Section	59838334
RX-344H	B.1	Lower Section	59843391
RX-344H	B.1	Lower Section	59831800
RX-344H	B.1	Lower Section	54680806
RX-344H	B.1	Lower Section	59832287
RX-344H	B.1	Lower Section	59951632
RX-344H	B.1	Lower Section	59188409
RX-344H	B.1	Lower Section	59831560
RX-344H	B.1	Lower Section	54680822
RX-344H	B.1	Lower Section	54680830
RX-344H	B.1	Lower Section	59188086
RX-344H	B.1	Lower Section	59834721
RX-344H	B.1	Lower Section	59951632
RX-344H	B.1	Lower Section	59188102
RX-344H	B.1	Lower Section	59951632
RX-344H	B.1	Lower Section	59188094
RX-344H	B.1	Lower Section	54686142
RX-344H	B.1	Lower Section	58836982
RX-344H	B.1	Lower Section	59840454
RX-344H	B.1	Lower Section	59237388
RX-344H	B.1	Lower Section	13201199
RX-344H	B.1	Lower Section	59106369
RX-344H	C.1	Handle Section	54680657
RX-344H	C.1	Handle Section	59832535
RX-344H	C.1	Handle Section	59831925
RX-344H	C.1	Handle Section	59188128
RX-344H	C.1	Handle Section	59188136

RX-344H	C.1	Handle Section	59188144
RX-344H	C.1	Handle Section	59831925
RX-344H	C.1	Handle Section	54624606
RX-344H	C.1	Handle Section	54680426
RX-344H	C.1	Handle Section	13202122
RX-344H	C.1	Handle Section	54680442
RX-344H	C.1	Handle Section	59853358
RX-344H	C.1	Handle Section	59188185
RX-344H	C.1	Handle Section	59188193
RX-344H	C.1	Handle Section	59188201
RX-344H	C.1	Handle Section	59841684
RX-344H	C.1	Handle Section	59841692
RX-344H	C.1	Handle Section	59188219
RX-344H	C.1	Handle Section	59188227
RX-344H	C.1	Handle Section	59188235
RX-344H	C.1	Handle Section	59188243
RX-344H	C.1	Handle Section	59953935
RX-344H	C.1	Handle Section	58898230
RX-344H	C.1	Handle Section	59831925
RX-344H	C.1	Handle Section	59831917
RX-344H	C.1	Handle Section	59830315
RX-344H	C.1	Handle Section	59840058
RX-344H	C.1	Handle Section	54680582
RX-344H	C.1	Handle Section	59835371
RX-344H	C.1	Handle Section	13201116
RX-344H	C.1	Handle Section	80025927
RX-344H	C.1	Handle Section	80025935
RX-344H	C.1	Handle Section	80025950
RX-344H	C.2	Carrying Cart And Tools	59188326
RX-344H	C.2	Carrying Cart And Tools	59188334
RX-344H	C.2	Carrying Cart And Tools	59840496
RX-344H	C.2	Carrying Cart And Tools	59188342
RX-344H	C.2	Carrying Cart And Tools	59952325
RX-344H	C.2	Carrying Cart And Tools	59188359
RX-344H	C.2	Carrying Cart And Tools	59832931
RX-344H	C.2	Carrying Cart And Tools	59843706
RX-344H	C.2	Carrying Cart And Tools	59839159
RX-344H	C.2	Carrying Cart And Tools	59840579
RX-344H	C.2	Carrying Cart And Tools	13200795
RX-344H	C.2	Carrying Cart And Tools	59839050
RX-344H	C.2	Carrying Cart And Tools	59830018
RX-344H	C.2	Carrying Cart And Tools	59830000
RX-344H	C.2	Carrying Cart And Tools	59838805
RX-344H	C.2	Carrying Cart And Tools	59840637
RX-344H	C.2	Carrying Cart And Tools	13363098
RX-344H	C.2	Carrying Cart And Tools	59842153
RX-344H	C.2	Carrying Cart And Tools	59843136
RX-344H	G.1	Decals	13201546
RX-344H	G.1	Decals	59188011
RX-344H	G.1	Decals	54680616
RX-344H	G.1	Decals	59839654
RX-344H	G.1	Decals	59839662
RX-344H	G.1	Decals	59840306
RX-344H	G.1	Decals	59188268
RX-344H	G.1	Decals	59188276
RX-344H	G.1	Decals	54683180

RX-344H	G.1	Decals	59188292
RX-344H	G.1	Decals	59188300
RX-344H	G.1	Decals	59188318
RX-344H	G.1	Decals	54680509
RX-344H	G.1	Decals	59841767
RX-344H	G.1	Decals	59093299
RX-344H	G.1	Decals	54680525
RX-344H	G.1	Decals	54680533
RX-344H	G.1	Decals	13201520
RX-344H	G.1	Decals	54679170
RX-344H	G.1	Decals	13200811
RX-344H	G.1	Decals	13200829
RX-344H	I.1	Cylinder Head	59242917
RX-344H	I.1	Cylinder Head	59242925
RX-344H	I.1	Cylinder Head	59242933
RX-344H	I.1	Cylinder Head	59242941
RX-344H	I.1	Cylinder Head	59242958
RX-344H	I.1	Cylinder Head	59242966
RX-344H	I.1	Cylinder Head	59242974
RX-344H	I.1	Cylinder Head	59245982
RX-344H	I.1	Cylinder Head	59242990
RX-344H	I.1	Cylinder Head	59243204
RX-344H	I.1	Cylinder Head	59243212
RX-344H	I.1	Cylinder Head	59243220
RX-344H	I.1	Cylinder Head	59243238
RX-344H	I.1	Cylinder Head	59243246
RX-344H	I.1	Cylinder Head	59243253
RX-344H	I.1	Cylinder Head	59243261
RX-344H	I.1	Cylinder Head	59243279
RX-344H	I.1	Cylinder Head	59243287
RX-344H	I.1	Engine Block	59243295
RX-344H	I.1	Engine Block	59243303
RX-344H	I.1	Engine Block	59243311
RX-344H	I.1	Engine Block	59243329
RX-344H	I.1	Engine Block	59243337
RX-344H	I.1	Engine Block	59243345
RX-344H	I.1	Engine Block	59243352
RX-344H	I.1	Engine Block	59243360
RX-344H	I.1	Engine Block	59243378
RX-344H	I.1	Engine Block	59243386
RX-344H	I.1	Engine Block	59243394
RX-344H	I.1	Engine Block	59243600
RX-344H	I.1	Engine Block	59243618
RX-344H	I.1	Engine Block	59243626
RX-344H	I.1	Engine Block	59243634
RX-344H	I.1	Engine Block	59243642
RX-344H	I.1	Crankcase Cover	59243659
RX-344H	I.1	Crankcase Cover	59243667
RX-344H	I.1	Crankcase Cover	59243675
RX-344H	I.1	Crankcase Cover	59243683
RX-344H	I.1	Crankcase Cover	59243691
RX-344H	I.1	Crankcase Cover	59243709
RX-344H	I.1	Crankcase Cover	59243717
RX-344H	I.1	Crankcase Cover	59243725
RX-344H	I.1	Crankcase Cover	59243618
RX-344H	I.1	Crankcase Cover	59243733

RX-344H	I.1	Crankcase Cover	59243741
RX-344H	I.1	Crankcase Cover	59243758
RX-344H	I.1	Crankcase Cover	59243766
RX-344H	I.1	Piston	59243782
RX-344H	I.1	Piston	59243790
RX-344H	I.1	Piston	59243808
RX-344H	I.1	Piston	59243816
RX-344H	I.1	Piston	59243824
RX-344H	I.1	Piston	59243832
RX-344H	I.1	Piston	59243774
RX-344H	I.1	Camshaft/Valves	59243840
RX-344H	I.1	Camshaft/Valves	59243857
RX-344H	I.1	Camshaft/Valves	59243865
RX-344H	I.1	Camshaft/Valves	59243873
RX-344H	I.1	Camshaft/Valves	59243881
RX-344H	I.1	Camshaft/Valves	59243899
RX-344H	I.1	Camshaft/Valves	59243907
RX-344H	I.1	Camshaft/Valves	59243915
RX-344H	I.1	Camshaft/Valves	59243923
RX-344H	I.1	Camshaft/Valves	59243931
RX-344H	I.1	Camshaft/Valves	59243949
RX-344H	I.1	Camshaft/Valves	59243956
RX-344H	I.1	Camshaft/Valves	59243964
RX-344H	I.1	Camshaft/Valves	59243972
RX-344H	I.1	Camshaft/Valves	59243980
RX-344H	I.1	Starter	59243998
RX-344H	I.1	Starter	59244004
RX-344H	I.1	Starter	59244012
RX-344H	I.1	Starter	59244020
RX-344H	I.1	Starter	59244038
RX-344H	I.1	Starter	59244046
RX-344H	I.1	Starter	59244053
RX-344H	I.1	Starter	59244061
RX-344H	I.1	Starter	59244079
RX-344H	I.1	Starter	59244087
RX-344H	I.1	Starter	59244095
RX-344H	I.1	Starter	59244103
RX-344H	I.1	Side Cover	59244111
RX-344H	I.1	Side Cover	59244129
RX-344H	I.1	Side Cover	59244137
RX-344H	I.1	Side Cover	59244145
RX-344H	I.1	Side Cover	59244152
RX-344H	I.1	Side Cover	59242990
RX-344H	I.1	Side Cover	59244160
RX-344H	I.1	Side Cover	59244178
RX-344H	I.1	Carburetor	59244186
RX-344H	I.1	Carburetor	59244194
RX-344H	I.1	Carburetor	59244202
RX-344H	I.1	Carburetor	59244210
RX-344H	I.1	Carburetor	59244228
RX-344H	I.1	Carburetor	59244236
RX-344H	I.1	Carburetor	59244244
RX-344H	I.1	Carburetor	59244251
RX-344H	I.1	Carburetor	59244269
RX-344H	I.1	Carburetor	59244277
RX-344H	I.1	Carburetor	59247285

RX-344H	I.1	Carburetor	59244293
RX-344H	I.1	Carburetor	59244301
RX-344H	I.1	Carburetor	59244319
RX-344H	I.1	Carburetor	59244327
RX-344H	I.1	Air Cleaner	59244335
RX-344H	I.1	Air Cleaner	59244343
RX-344H	I.1	Air Cleaner	59244350
RX-344H	I.1	Air Cleaner	59244368
RX-344H	I.1	Air Cleaner	59244376
RX-344H	I.1	Air Cleaner	59244384
RX-344H	I.1	Air Cleaner	59244392
RX-344H	I.1	Air Cleaner	59244400
RX-344H	I.1	Air Cleaner	59244418
RX-344H	I.1	Air Cleaner	59244426
RX-344H	I.1	Air Cleaner	59244434
RX-344H	I.1	Muffler	59244442
RX-344H	I.1	Muffler	59244459
RX-344H	I.1	Muffler	59244467
RX-344H	I.1	Muffler	59244475
RX-344H	I.1	Muffler	59244418
RX-344H	I.1	Muffler	59244426
RX-344H	I.1	Muffler	59244483
RX-344H	I.1	Muffler	59244491
RX-344H	I.1	Fuel Strainer	59244509
RX-344H	I.1	Fuel Strainer	59244517
RX-344H	I.1	Fuel Strainer	59244525
RX-344H	I.1	Fuel Strainer	59244533
RX-344H	I.1	Fuel Strainer	59244541
RX-344H	I.1	Fuel Strainer	59244558
RX-344H	I.1	Fuel Strainer	59244566
RX-344H	I.1	Fuel Strainer	59244574
RX-344H	I.1	Fuel Strainer	59244582
RX-344H	I.1	Flywheel	59244590
RX-344H	I.1	Flywheel	59244608
RX-344H	I.1	Flywheel	59244616
RX-344H	I.1	Flywheel	59244624
RX-344H	I.1	Flywheel	59244632
RX-344H	I.1	Ignition	59244640
RX-344H	I.1	Ignition	59244657
RX-344H	I.1	Ignition	59244665
RX-344H	I.1	Control Assembly	59244673
RX-344H	I.1	Control Assembly	59244681
RX-344H	I.1	Control Assembly	59244699
RX-344H	I.1	Control Assembly	59244707
RX-344H	I.1	Control Assembly	59244715
RX-344H	I.1	Control Assembly	59244723
RX-344H	I.1	Control Assembly	59244731
RX-344H	I.1	Control Assembly	59244749
RX-344H	I.1	Control Assembly	59244756
RX-344H	I.1	Control Assembly	59244764
RX-344H	I.1	Control Assembly	59244772
RX-344H	I.1	Control Assembly	59244780
RX-344H	I.1	Control Assembly	59244673
RX-344H	I.1	Control Assembly	59244681
RX-344H	I.1	Control Assembly	59244699
RX-344H	I.1	Control Assembly	59244707

[illegible]

Desc
Crankcase CP (Includes Items 2 thru 5)
Plug
Packing
Spring Pin 1 8 x 20
Bearing Case (RX-344H)
O-ring
Bolt 6 M8 x 30
Spring Washer 6 M8
Washer 6 M8
Clutch Drum
Screw 1 M8 x 20
O-ring
O-ring Washer
Pinion Gear
Key 1 5 x 5 x 20
Oil Seal
Snap Ring
Ball Bearing
Snap Ring
Needle Bearing
Bearing Puller (A)
Crank Gear (RX-344H)
Snap Ring
Ball Bearing (RX-344H)
Snap Ring
Ball Bearing (RX-344H)
Bearing Puller (B)
Crank Rod Assembly (Includes Items 30 thru 33)
Ball Bearing
Snap Ring
Bushing
Snap Ring
Rubber Buffer
Bolt 4 M8 x 28
Spring Washer 4 M8
Washer 4 M8
Stud Bolt
Stud Bolt
Clutch Assembly (Includes Items 42 thru 49)
Woodruff Key
Guide Plate (A)
Clutch Lining Shoe
Clutch Boss
Clutch Spring
Guide Plate (B)
Washer
Nut 1 M12
Engine Assembly 1 See Breakdown - I.1
Flange Nut
Engine Support
Bolt 2 M10 x 25
Spring Washer 2 M10
Bolt 1 M8 x 40
Washer 1 M8
Spring Washer 1 M8

Nut 1 M8
Bolt 2 M8 x 45
Oil Gauge Protector
Clamp
Piston
Crank Rod Pin
Nylon Plug
Upper Cylinder (RX-344H)
O-ring
Bolt 4 M12 x 35
Spring Washer 4 M12
Bellows (RX-344H)
Band w/Guide Rail w/Nut (RX-334H)
O-ring (RX-334H)
Coil Spring Assembly (Includes Items 12 & 13)
Large Coil Spring
Small Coil Spring
Piston Guide (RX-334H)
Spring Washer 1 M20
Nut 1 M20
Upper Damper
Lower Damper
Lower Cylinder (RX-334H)
Pipe Protector Assembly (RX-334H)
Oil Gauge
Plug
Packing
O-ring (RX-344H)
Spring Seat (RX-344H)
O-ring (RX-344H)
Socket Head Bolt (RX-344H) 2 M10 x 25
Lockwasher (RX-344H) 2 M10
Foot Block (RX-344H)
Bolt (RX-344H) 4 M10 x 30
Spring Washer(RX-344H) 4 M10
Socket Head Bolt (RX-334H) 6 M8 x 25
Lockwasher 6 M8
Foot Plate & Bolt Assembly (RX-334H)
Foot Plate Assembly (RX-344H)
Flush Bolt 7 M10 x 58
Nylon Nut 6 M10
Spring Washer 6 M10
Washer 1 10.5 x 35 x 3.2
Spring Washer 1 M10
Eye Nut 1 M10
Flush Bolt Assembly (RX-334H)
Flush Bolt (RX-334H) 4 M12 x 65
Nylon Nut 4 M12
Spring Washer 4 M12
Lifting Hndle
Foot Plate Assembly (Optional) 230mm
Operating Handle
Bolt 8 M8 x 20
Spring Washer 8 M8
Muffler Protector
Air Cleaner Protector

Bolt 5 M8 x 15
Spring Washer 5 M8
Fuel Tank Assembly (Includes Items 9 thru 17)
Fuel Tank
Fuel Tank Cap CP
Packing
Fuel Filter
Cap
Packing
Fuel Strainer
Locknut
O-ring
Strainer
Rubber Pipe
Rubber Pipe
Hose Clamp
Bolt 2 M8 x 30
Washer 2 8.5 x 22 x 2.3
Spring Washer 2 M8
Nylon Nut 2 M8
Throttle Lever
Throttle Cable
Engine Cover
Washer 4 M8
Handle Guid Roller
OM_RX-264/344H_W_EUR
OM_RX-264/344H_SCAN
PM_RX-344H_EUR
Carrying Cart Assembly (Includes Items 2 thru 10)
Cart Body
Grip
Stopper
Bolt 1 M8 x 25
Friction Spring
Nut 1 M8
Tire & Wheel Assembly
Washer 2 M20
Cotter Pin 2 4 x 40
Tool Kit (Includes Items 12 thru 16)
Tool Bag
Double Ended Spanner 1 17 x 19
Double Ended Spanner 1 10 x 13
Slotted Screwdriver
Cross Slot Screwdriver
Operation/Maintenance & Parts Manual
Disassembling Tool
Clutch Puller
Decal Kit (RX-334H) (Includes Items 2 thru 21)
Name Plate
Decal: Oil Caution (RX-334H)
Decal: Oil Feed
Decal: Oil Gauge
Decal: Drain
Decal: Notice
Decal: Gasoline
Decal: PL Caution

Decal: Oil Level
Decal: Caution
Decal: Danger/Warning
Decal: Warning
Decal: High-Low
Decal: Engine RPM
Decal: I-R Emblem
Decal: I-R Logo
Decal: RX-344H
Decal: I-R Emblem
Decal: Stop Engine
Decal: Noise (RX-344H)
Cylinder Head
Inlet Valve Guide
Exhaust Valve Guide
Valve Guide Clip
Head Gasket
Head Cover
Packing
Breather Tube
Flange Bolt 4 M6 x 12mm
Stud Bolt 2 M6 x 112mm
Stud Bolt 2 M8 x 32mm
Dowel Pin 2 M10 x 16mm
Flange Bolt 4 M8 x 55mm
Spark Plug 1 BP5ES NGK
Spark Plug 1 W16EP-U ND
Spark Plug 1 BP6ES NGK
Spark Plug 1 W20EP-U ND
Wrench, Spark Plug
Governor Kit (includes items 4,8,12,14)
Cylinder Barrel Assembly (includes items 15,16)
Governor Assembly (includes items 5,6,7)
Weight
Weight Holder
Weight Pin
Slider
Arm Shaft
Drain Plug
Thrust Washer
Washer
Clip
Bearing
Oil Seal
Washer 2 6mm
Lock Pin 1 8mm
Crankcase Cover (includes item 17)
Packing
Oil Tank
Oil Filler Cap Assembly (includes item 11)
Packing
Flange Bolt 1 M6 x 14mm
Flange Bolt 7 M6 x 28mm
Flange Bolt 1 M6 x 16mm
Bearing
O-ring 1 15.8 x 2.4

Dowel Pin
Tube Clip
Tube
Piston Ring Set 1 Standard
Piston 1 Standard
Piston Pin
Connecting Rod Assembly (includes item 5)
Rod Bolt
Clip
Crankshaft
Camshaft Assembly (includes item 6)
Push Rod
Rocker Arm
Valve Lifter
Rocker Arm Pivot
Return Spring
Inlet Valve
Exhaust Valve
Valve Spring
Spring Retainer, Inlet
Spring Retainer, Exhaust
Valve Rotater
Guide Plate
Pivot Bolt
Pivot Adjusting Nut
Recoil Starter Assembly (includes items 2 thru 12)
Starter Case
Starter Reel
Starter Ratchet
Ratchet Guide
Friction Spring
Starter Spring
Return Spring
Starter Knob
Starter Rope
Setting Screw
Flange Bolt 3 M6 x 8mm
Adjusting Cover Grommet
Fan Cover
Side Plate
Engine Stop Switch
Stop Switch Cord
Flange Bolt 4 M6 x 12mm
Flange Bolt 1 M6 x 20mm
Gasket Set
Float Valve Set
Float Set
Float Chamber Set (includes item 7)
Pilot Screw Set
Drain Screw Set (includes gasket)
Screw Set (includes gasket)
Choke Set
Carburetor Assembly
Insulator
Packing
Spacer

Packing
Choke Lever Complete (includes item 31)
Main Jet - Standard (includes gasket) 1 #60
Pilot Jet Set 1 #35
Tube Clip
Air Cleaner Assembly (includes items 3,4,5)
Air Cleaner Element
Outer Filter
Cover
Connecting Tube
Band
Air Cleaner Elbow (includes items 6,7)
Flange Nut 2 6mm
Flange Bolt 2 M6 x 16mm
Flange Bolt 1 M6 x 20mm
Muffler
Muffler Stay
Gasket
Hex Nut 2 8mm
Flange Nut 4 6mm
Flange Bolt 2 M6 x 16mm
Flange Bolt 1 M6 x 25mm
Flange Bolt 1 M8 x 20mm
Air Bent Tube
Tube
Rubber Supporter
Fuel Strainer
Double Clip
Fuel Tube
Tube Clip
Tube Clip
Tube Clip
Cooling Fan
Starter Pulley
Flywheel Complete
Special Nut 1 14mm
Woodruff Key
Ignition Coil Assembly
Terminal Assembly
Flange Bolt 2 M6 x 25mm
Governor Arm
Governor Rod
Governor Spring
Throttle Return Spring
Control Assembly
Lever Spring
Control Adjusting Spring
Cable return Spring
Flange Bolt
Flange Bolt
Governor Arm Bolt
Flange Nut
Governor Arm
Governor Rod
Governor Spring
Throttle Return Spring

Control Assembly
Lever Spring
Adjusting Spring
Cable Return Spring
Flange Bolt 1 M6 x 12mm
Flange Bolt 1 M6 x 20mm
Governor Arm Bolt
Flange Nut 1 6mm
ChainCaseCoverAssembly(includesItems12,16)
Oil Seal
Ball Bearing
Packing
P.T.O. Drive Chain
Drive Sprocket
P.T.O. Shaft
Flange Bolt 4 M8 x 35mm
Thrust Washer
Thrust Spring
Washer 1 8mm
Hex Bolt 1 M8 x 25mm
Dowel Pin
Flange Bolt 1 M8 x 55mm
Choke Mark