

PM	Section	Page	CPN
BX	A.1	Vibration Plate, Guard Frame And Water Tank Installation	13202130
BX	A.1	Vibration Plate, Guard Frame And Water Tank Installation	13202148
BX	A.1	Vibration Plate, Guard Frame And Water Tank Installation	13202155
BX	A.1	Vibration Plate, Guard Frame And Water Tank Installation	22194815
BX	A.1	Vibration Plate, Guard Frame And Water Tank Installation	22194823
BX	A.1	Vibration Plate, Guard Frame And Water Tank Installation	22195192
BX	A.1	Vibration Plate, Guard Frame And Water Tank Installation	59832287
BX	A.1	Vibration Plate, Guard Frame And Water Tank Installation	59951632
BX	A.1	Vibration Plate, Guard Frame And Water Tank Installation	22194831
BX	A.1	Vibration Plate, Guard Frame And Water Tank Installation	22195200
BX	A.1	Vibration Plate, Guard Frame And Water Tank Installation	59832287
BX	A.1	Vibration Plate, Guard Frame And Water Tank Installation	59951632
BX	A.1	Vibration Plate, Guard Frame And Water Tank Installation	58835943
BX	A.1	Vibration Plate, Guard Frame And Water Tank Installation	59237289
BX	A.1	Vibration Plate, Guard Frame And Water Tank Installation	22194849
BX	A.1	Vibration Plate, Guard Frame And Water Tank Installation	22195218
BX	A.1	Vibration Plate, Guard Frame And Water Tank Installation	59952242
BX	A.1	Vibration Plate, Guard Frame And Water Tank Installation	59951632
BX	A.1	Vibration Plate, Guard Frame And Water Tank Installation	22194856
BX	A.1	Vibration Plate, Guard Frame And Water Tank Installation	54676465
BX	A.1	Vibration Plate, Guard Frame And Water Tank Installation	59954131
BX	A.1	Vibration Plate, Guard Frame And Water Tank Installation	59832188
BX	A.1	Vibration Plate, Guard Frame And Water Tank Installation	22194864
BX	A.1	Vibration Plate, Guard Frame And Water Tank Installation	22194872
BX	A.1	Vibration Plate, Guard Frame And Water Tank Installation	59952242
BX	A.1	Vibration Plate, Guard Frame And Water Tank Installation	59951632
BX	A.1	Vibration Plate, Guard Frame And Water Tank Installation	58835943
BX	A.1	Vibration Plate, Guard Frame And Water Tank Installation	22194880
BX	A.1	Vibration Plate, Guard Frame And Water Tank Installation	22195226
BX	A.1	Vibration Plate, Guard Frame And Water Tank Installation	54674320
BX	A.1	Vibration Plate, Guard Frame And Water Tank Installation	13201595
BX	A.1	Vibration Plate, Guard Frame And Water Tank Installation	59832535
BX	A.1	Vibration Plate, Guard Frame And Water Tank Installation	59952325
BX	A.1	Vibration Plate, Guard Frame And Water Tank Installation	59831925
BX	A.1	Vibration Plate, Guard Frame And Water Tank Installation	59952655
BX	A.1	Vibration Plate, Guard Frame And Water Tank Installation	13201371
BX	A.1	Vibration Plate, Guard Frame And Water Tank Installation	13201132
BX	A.1	Vibration Plate, Guard Frame And Water Tank Installation	59831842
BX	A.1	Vibration Plate, Guard Frame And Water Tank Installation	13201587
BX	A.1	Vibration Plate, Guard Frame And Water Tank Installation	13201389
BX	A.1	Vibration Plate, Guard Frame And Water Tank Installation	13202205
BX	A.1	Vibration Plate, Guard Frame And Water Tank Installation	13202213
BX	B.1	Engine, Handle And Clutch Installation	58836438
BX	B.1	Engine, Handle And Clutch Installation	58836446
BX	B.1	Engine, Handle And Clutch Installation	59952382
BX	B.1	Engine, Handle And Clutch Installation	59831925
BX	B.1	Engine, Handle And Clutch Installation	59835371
BX	B.1	Engine, Handle And Clutch Installation	22194906
BX	B.1	Engine, Handle And Clutch Installation	22195234
BX	B.1	Engine, Handle And Clutch Installation	22194914
BX	B.1	Engine, Handle And Clutch Installation	22195242
BX	B.1	Engine, Handle And Clutch Installation	59831032
BX	B.1	Engine, Handle And Clutch Installation	59952325
BX	B.1	Engine, Handle And Clutch Installation	59831925
BX	B.1	Engine, Handle And Clutch Installation	13202304

BX	B.1	Engine, Handle And Clutch Installation	22194922
BX	B.1	Engine, Handle And Clutch Installation	22195259
BX	B.1	Engine, Handle And Clutch Installation	22194930
BX	B.1	Engine, Handle And Clutch Installation	59832535
BX	B.1	Engine, Handle And Clutch Installation	59831925
BX	B.1	Engine, Handle And Clutch Installation	22194948
BX	B.1	Engine, Handle And Clutch Installation	59832535
BX	B.1	Engine, Handle And Clutch Installation	59831925
BX	B.1	Engine, Handle And Clutch Installation	22069843
BX	B.1	Engine, Handle And Clutch Installation	13201140
BX	B.1	Engine, Handle And Clutch Installation	13202189
BX	B.1	Engine, Handle And Clutch Installation	13202197
BX	B.1	Engine, Handle And Clutch Installation	59188490
BX	B.1	Engine, Handle And Clutch Installation	59841106
BX	B.1	Engine, Handle And Clutch Installation	22194971
BX	B.1	Engine, Handle And Clutch Installation	22194989
BX	B.1	Engine, Handle And Clutch Installation	22194997
BX	B.1	Engine, Handle And Clutch Installation	59832618
BX	B.1	Engine, Handle And Clutch Installation	54693189
BX	B.1	Engine, Handle And Clutch Installation	22195002
BX	B.1	Engine, Handle And Clutch Installation	22195010
BX	B.1	Engine, Handle And Clutch Installation	13201157
BX	B.1	Engine, Handle And Clutch Installation	22195028
BX	B.1	Engine, Handle And Clutch Installation	59832535
BX	B.1	Engine, Handle And Clutch Installation	59831925
BX	B.1	Engine, Handle And Clutch Installation	22069843
BX	B.1	Engine, Handle And Clutch Installation	59830315
BX	B.1	Engine, Handle And Clutch Installation	22195036
BX	B.1	Engine, Handle And Clutch Installation	59830331
BX	B.1	Engine, Handle And Clutch Installation	59840082
BX	B.1	Engine, Handle And Clutch Installation	22195044
BX	B.1	Engine, Handle And Clutch Installation	13201165
BX	B.1	Engine, Handle And Clutch Installation	13202221
BX	B.1	Engine, Handle And Clutch Installation	59832535
BX	B.1	Engine, Handle And Clutch Installation	59831925
BX	B.1	Engine, Handle And Clutch Installation	59952655
BX	B.1	Engine, Handle And Clutch Installation	22195267
BX	B.1	Engine, Handle And Clutch Installation	22195267
BX	B.2	Vibration Unit Assembly	22195051
BX	B.2	Vibration Unit Assembly	22195069
BX	B.2	Vibration Unit Assembly	59832287
BX	B.2	Vibration Unit Assembly	59951632
BX	B.2	Vibration Unit Assembly	59831842
BX	B.2	Vibration Unit Assembly	59831149
BX	B.2	Vibration Unit Assembly	13201173
BX	B.2	Vibration Unit Assembly	59831156
BX	B.2	Vibration Unit Assembly	22195077
BX	B.2	Vibration Unit Assembly	22195085
BX	B.2	Vibration Unit Assembly	22195275
BX	B.2	Vibration Unit Assembly	22195366
BX	B.2	Vibration Unit Assembly	22195093
BX	B.2	Vibration Unit Assembly	59831123
BX	B.2	Vibration Unit Assembly	58837709
BX	B.2	Vibration Unit Assembly	59952242
BX	B.2	Vibration Unit Assembly	59831800
BX	B.2	Vibration Unit Assembly	59236182

BX	B.2	Vibration Unit Assembly	59831131
BX	B.2	Vibration Unit Assembly	22195101
BX	B.2	Vibration Unit Assembly	13202163
BX	B.2	Vibration Unit Assembly	13202171
BX	B.2	Vibration Unit Assembly	13202296
BX	B.2	Vibration Unit Assembly	13202296
BX	B.2	Vibration Unit Assembly	59832618
BX	B.2	Vibration Unit Assembly	59832618
BX	B.2	Vibration Unit Assembly	58837717
BX	B.2	Vibration Unit Assembly	58837717
BX	B.2	Vibration Unit Assembly	13202262
BX	B.2	Vibration Unit Assembly	13202270
BX	B.2	Vibration Unit Assembly	13202288
BX	C.1	Carrying Cart Assembly And Tool Kit	22195119
BX	C.1	Carrying Cart Assembly And Tool Kit	22195283
BX	C.1	Carrying Cart Assembly And Tool Kit	22195127
BX	C.1	Carrying Cart Assembly And Tool Kit	22195291
BX	C.1	Carrying Cart Assembly And Tool Kit	59843706
BX	C.1	Carrying Cart Assembly And Tool Kit	59839159
BX	C.1	Carrying Cart Assembly And Tool Kit	59839176
BX	C.1	Carrying Cart Assembly And Tool Kit	13201835
BX	C.1	Carrying Cart Assembly And Tool Kit	13201843
BX	C.1	Carrying Cart Assembly And Tool Kit	13201850
BX	C.1	Carrying Cart Assembly And Tool Kit	13201868
BX	C.1	Carrying Cart Assembly And Tool Kit	22195135
BX	C.1	Carrying Cart Assembly And Tool Kit	59830026
BX	C.1	Carrying Cart Assembly And Tool Kit	59830018
BX	C.1	Carrying Cart Assembly And Tool Kit	59830000
BX	C.1	Carrying Cart Assembly And Tool Kit	59838805
BX	C.1	Carrying Cart Assembly And Tool Kit	59839095
BX	C.1	Carrying Cart Assembly And Tool Kit	13202313
BX	C.1	Carrying Cart Assembly And Tool Kit	80025968
BX	C.1	Carrying Cart Assembly And Tool Kit	80025976
BX	C.1	Carrying Cart Assembly And Tool Kit	80025984
BX	C.1	Carrying Cart Assembly And Tool Kit	80025968
BX	C.1	Carrying Cart Assembly And Tool Kit	80025976
BX	C.1	Carrying Cart Assembly And Tool Kit	80025984
BX	C.2	Decals	54679162
BX	C.2	Decals	22195143
BX	C.2	Decals	22195317
BX	C.2	Decals	22195408
BX	C.2	Decals	54693635
BX	C.2	Decals	59188011
BX	C.2	Decals	54692561
BX	C.2	Decals	59188300
BX	C.2	Decals	54679170
BX	C.2	Decals	59841767
BX	C.2	Decals	13200811
BX	C.2	Decals	13200829
BX	C.2	Decals	13200837
BX	C.2	Decals	13202239
BX	C.2	Decals	13202247
BX	C.2	Decals	13202254
BX	I.1	Cylinder Head	13220983
BX	I.1	Cylinder Head	59242925
BX	I.1	Cylinder Head	54473913

BX	I.1	Cylinder Head	59242933
BX	I.1	Cylinder Head	59242941
BX	I.1	Cylinder Head	59242958
BX	I.1	Cylinder Head	13220991
BX	I.1	Cylinder Head	54474028
BX	I.1	Cylinder Head	59242974
BX	I.1	Cylinder Head	13221007
BX	I.1	Cylinder Head	59242982
BX	I.1	Cylinder Head	59242990
BX	I.1	Cylinder Head	54474036
BX	I.1	Cylinder Head	54474044
BX	I.1	Cylinder Head	59243212
BX	I.1	Cylinder Head	59243220
BX	I.1	Cylinder Head	13221015
BX	I.1	Cylinder Head	59243238
BX	I.1	Cylinder Head	54474093
BX	I.1	Cylinder Head	54474135
BX	I.1	Cylinder Head	54474093
BX	I.1	Engine Block	59243295
BX	I.1	Engine Block	59243311
BX	I.1	Engine Block	59243329
BX	I.1	Engine Block	59243337
BX	I.1	Engine Block	59243345
BX	I.1	Engine Block	59243352
BX	I.1	Engine Block	59243386
BX	I.1	Engine Block	59243600
BX	I.1	Engine Block	59243634
BX	I.1	Engine Block	13221023
BX	I.1	Engine Block	59243618
BX	I.1	Engine Block	59243626
BX	I.1	Engine Block	54474176
BX	I.1	Engine Block	54474168
BX	I.1	Engine Block	59243360
BX	I.1	Engine Block	59243378
BX	I.1	Engine Block	59243394
BX	I.1	Engine Block	54474226
BX	I.1	Engine Block	54474234
BX	I.1	Engine Block	59243642
BX	I.1	Engine Block	54474259
BX	I.1	Crankcase Cover	13221031
BX	I.1	Crankcase Cover	59243618
BX	I.1	Crankcase Cover	13221064
BX	I.1	Crankcase Cover	13221049
BX	I.1	Crankcase Cover	13221056
BX	I.1	Crankcase Cover	59243683
BX	I.1	Crankcase Cover	59243691
BX	I.1	Crankcase Cover	54474309
BX	I.1	Crankcase Cover	54474341
BX	I.1	Crankcase Cover	54474317
BX	I.1	Crankcase Cover	59243691
BX	I.1	Crankcase Cover	54474325
BX	I.1	Crankcase Cover	54474333
BX	I.1	Crankcase Cover	59243717
BX	I.1	Crankcase Cover	54474366
BX	I.1	Flywheel	59244632
BX	I.1	Flywheel	59244590

BX	I.1	Flywheel	59244608
BX	I.1	Flywheel	13221072
BX	I.1	Flywheel	59244624
BX	I.1	Ignition	54474416
BX	I.1	Ignition	54474424
BX	I.1	Ignition	59244665
BX	I.1	Crankshaft	13221080
BX	I.1	Crankshaft	13221098
BX	I.1	Crankshaft	13221106
BX	I.1	Crankshaft	54474465
BX	I.1	Crankshaft	54474473
BX	I.1	Crankshaft	54474457
BX	I.1	Piston	13221114
BX	I.1	Piston	59243790
BX	I.1	Piston	59243808
BX	I.1	Piston	59243816
BX	I.1	Piston	59243824
BX	I.1	Piston	59243832
BX	I.1	Camshaft/Valves	13221122
BX	I.1	Camshaft/Valves	59243899
BX	I.1	Camshaft/Valves	59243857
BX	I.1	Camshaft/Valves	54474648
BX	I.1	Camshaft/Valves	59243873
BX	I.1	Camshaft/Valves	54474655
BX	I.1	Camshaft/Valves	59243907
BX	I.1	Camshaft/Valves	54474671
BX	I.1	Camshaft/Valves	59243923
BX	I.1	Camshaft/Valves	59243931
BX	I.1	Camshaft/Valves	59243949
BX	I.1	Camshaft/Valves	59243956
BX	I.1	Camshaft/Valves	59243964
BX	I.1	Camshaft/Valves	59243972
BX	I.1	Camshaft/Valves	59243980
BX	I.1	Side Cover	59244111
BX	I.1	Side Cover	54474697
BX	I.1	Side Cover	13221130
BX	I.1	Side Cover	13221148
BX	I.1	Side Cover	13221155
BX	I.1	Side Cover	54474804
BX	I.1	Side Cover	13221163
BX	I.1	Side Cover	54474820
BX	I.1	Side Cover	59244145
BX	I.1	Side Cover	59244152
BX	I.1	Side Cover	13221171
BX	I.1	Side Cover	54474846
BX	I.1	Side Cover	59242990
BX	I.1	Side Cover	59244764
BX	I.1	Side Cover	59244103
BX	I.1	Starter	59243998
BX	I.1	Starter	54474861
BX	I.1	Starter	59244004
BX	I.1	Starter	59244012
BX	I.1	Starter	54474879
BX	I.1	Starter	59244020
BX	I.1	Starter	54474895
BX	I.1	Starter	59244038

BX	I.1	Starter	59244046
BX	I.1	Starter	59244053
BX	I.1	Starter	59244061
BX	I.1	Starter	59242479
BX	I.1	Starter	59241992
BX	I.1	Starter	59244095
BX	I.1	Starter	13221189
BX	I.1	Starter	59244103
BX	I.1	Control Assembly	13221205
BX	I.1	Control Assembly	13221213
BX	I.1	Control Assembly	59244723
BX	I.1	Control Assembly	54474978
BX	I.1	Control Assembly	54474986
BX	I.1	Control Assembly	54474994
BX	I.1	Control Assembly	13221221
BX	I.1	Control Assembly	59244731
BX	I.1	Control Assembly	59244749
BX	I.1	Control Assembly	54475025
BX	I.1	Control Assembly	54475041
BX	I.1	Control Assembly	54475074
BX	I.1	Control Assembly	54475058
BX	I.1	Control Assembly	54475090
BX	I.1	Control Assembly	54475082
BX	I.1	Control Assembly	54474929
BX	I.1	Control Assembly	59244681
BX	I.1	Control Assembly	59244699
BX	I.1	Control Assembly	59244707
BX	I.1	Control Assembly	59242990
BX	I.1	Control Assembly	59244772
BX	I.1	Control Assembly	59244764
BX	I.1	Control Assembly	59244418
BX	I.1	Carburetor	13221254
BX	I.1	Carburetor	13221262
BX	I.1	Carburetor	59244186
BX	I.1	Carburetor	13221239
BX	I.1	Carburetor	13221247
BX	I.1	Carburetor	59244228
BX	I.1	Carburetor	59244210
BX	I.1	Carburetor	59244236
BX	I.1	Carburetor	59244244
BX	I.1	Carburetor	54475140
BX	I.1	Carburetor	13221270
BX	I.1	Carburetor	13221288
BX	I.1	Carburetor	54475181
BX	I.1	Carburetor	54475280
BX	I.1	Carburetor	54475330
BX	I.1	Carburetor	54475348
BX	I.1	Carburetor	54475314
BX	I.1	Carburetor	54475355
BX	I.1	Carburetor	54475363
BX	I.1	Carburetor	59244319
BX	I.1	Carburetor	13221304
BX	I.1	Carburetor	59244327
BX	I.1	Carburetor	54475108
BX	I.1	Carburetor	59244269
BX	I.1	Carburetor	54475215

BX	I.1	Carburetor	54475207
BX	I.1	Carburetor	59244285
BX	I.1	Carburetor	54475249
BX	I.1	Carburetor	54475223
BX	I.1	Carburetor	54475264
BX	I.1	Carburetor	13221296
BX	I.1	Carburetor	59244301
BX	I.1	Air Cleaner	54475421
BX	I.1	Air Cleaner	13221312
BX	I.1	Air Cleaner	13221320
BX	I.1	Air Cleaner	54475462
BX	I.1	Air Cleaner	13221338
BX	I.1	Air Cleaner	54475470
BX	I.1	Air Cleaner	13221353
BX	I.1	Air Cleaner	13221346
BX	I.1	Air Cleaner	54475496
BX	I.1	Air Cleaner	59243196
BX	I.1	Air Cleaner	54475512
BX	I.1	Air Cleaner	54475546
BX	I.1	Air Cleaner	54475538
BX	I.1	Air Cleaner	54475553
BX	I.1	Air Cleaner	54475553
BX	I.1	Air Cleaner	54475561
BX	I.1	Air Cleaner	59244418
BX	I.1	Muffler	54475645
BX	I.1	Muffler	54475579
BX	I.1	Muffler	54475652
BX	I.1	Muffler	54475587
BX	I.1	Muffler	54475595
BX	I.1	Muffler	59244467
BX	I.1	Muffler	54475611
BX	I.1	Muffler	54475629
BX	I.1	Muffler	54475637
BX	I.1	Muffler	13221361
BX	I.1	Muffler	59244475
BX	I.1	Fuel Tank	59244525
BX	I.1	Fuel Tank	54475660
BX	I.1	Fuel Tank	13221379
BX	I.1	Fuel Tank	54475702
BX	I.1	Fuel Tank	54475710
BX	I.1	Fuel Tank	54475694
BX	I.1	Fuel Tank	54475736
BX	I.1	Fuel Tank	54475702
BX	I.1	Fuel Tank	54475710
BX	I.1	Fuel Tank	54475744
BX	I.1	Fuel Tank	54475751
BX	I.1	Fuel Tank	54475769
BX	I.1	Fuel Tank	54475785
BX	I.1	Fuel Tank	54475793
BX	I.1	Fuel Tank	54475801
BX	I.1	Fuel Tank	54474226
BX	I.1	Fuel Tank	59244418
BX	I.1	Fuel Tank	54475827
BX	I.1	Fuel Tank	59244566
BX	I.1	Fuel Tank	54475835
BX	I.2	Cylinder Head	54473897

BX	I.2	Cylinder Head	59242925
BX	I.2	Cylinder Head	59242933
BX	I.2	Cylinder Head	59242941
BX	I.2	Cylinder Head	54474010
BX	I.2	Cylinder Head	54474028
BX	I.2	Cylinder Head	59242974
BX	I.2	Cylinder Head	59245982
BX	I.2	Cylinder Head	59242990
BX	I.2	Cylinder Head	54474044
BX	I.2	Cylinder Head	59243212
BX	I.2	Cylinder Head	59243220
BX	I.2	Cylinder Head	54474051
BX	I.2	Cylinder Head	54474093
BX	I.2	Cylinder Head	54474135
BX	I.2	Cylinder Head	59243287
BX	I.2	Engine Block	59243295
BX	I.2	Engine Block	59243311
BX	I.2	Engine Block	59243329
BX	I.2	Engine Block	59243337
BX	I.2	Engine Block	59243345
BX	I.2	Engine Block	59243352
BX	I.2	Engine Block	59243386
BX	I.2	Engine Block	59243600
BX	I.2	Engine Block	59243634
BX	I.2	Engine Block	54474143
BX	I.2	Engine Block	54474200
BX	I.2	Engine Block	54474184
BX	I.2	Engine Block	54474192
BX	I.2	Engine Block	54474176
BX	I.2	Engine Block	59243360
BX	I.2	Engine Block	59243378
BX	I.2	Engine Block	59243394
BX	I.2	Engine Block	54474226
BX	I.2	Engine Block	54474234
BX	I.2	Engine Block	59243642
BX	I.2	Engine Block	54474259
BX	I.2	Crankcase Cover	54474275
BX	I.2	Crankcase Cover	54474358
BX	I.2	Crankcase Cover	54474382
BX	I.2	Crankcase Cover	54474291
BX	I.2	Crankcase Cover	59243683
BX	I.2	Crankcase Cover	59243691
BX	I.2	Crankcase Cover	54474317
BX	I.2	Crankcase Cover	59243691
BX	I.2	Crankcase Cover	54474325
BX	I.2	Crankcase Cover	54474333
BX	I.2	Crankcase Cover	54474366
BX	I.2	Crankcase Cover	54474374
BX	I.2	Flywheel	59244632
BX	I.2	Flywheel	54474390
BX	I.2	Flywheel	59244608
BX	I.2	Flywheel	54474408
BX	I.2	Flywheel	59244624
BX	I.2	Ignition	54474416
BX	I.2	Ignition	59244657
BX	I.2	Ignition	54474424

BX	I.2	Ignition	59244665
BX	I.2	Crankshaft	54474432
BX	I.2	Crankshaft	54474457
BX	I.2	Crankshaft	54474465
BX	I.2	Crankshaft	54474473
BX	I.2	Piston	54474481
BX	I.2	Piston	54474531
BX	I.2	Piston	54474598
BX	I.2	Piston	54474606
BX	I.2	Piston	59243824
BX	I.2	Piston	54474614
BX	I.2	Camshaft/Valves	54474622
BX	I.2	Camshaft/Valves	59243899
BX	I.2	Camshaft/Valves	54474630
BX	I.2	Camshaft/Valves	54474648
BX	I.2	Camshaft/Valves	59243873
BX	I.2	Camshaft/Valves	54474655
BX	I.2	Camshaft/Valves	54474663
BX	I.2	Camshaft/Valves	54474671
BX	I.2	Camshaft/Valves	59243923
BX	I.2	Camshaft/Valves	59243931
BX	I.2	Camshaft/Valves	59243949
BX	I.2	Camshaft/Valves	59243956
BX	I.2	Camshaft/Valves	54474689
BX	I.2	Camshaft/Valves	59243972
BX	I.2	Camshaft/Valves	59243980
BX	I.2	Side Cover	54474697
BX	I.2	Side Cover	54474739
BX	I.2	Side Cover	54474796
BX	I.2	Side Cover	54474804
BX	I.2	Side Cover	54474812
BX	I.2	Side Cover	54474820
BX	I.2	Side Cover	59244145
BX	I.2	Side Cover	59244152
BX	I.2	Side Cover	54474838
BX	I.2	Side Cover	54474846
BX	I.2	Side Cover	59242990
BX	I.2	Side Cover	59244764
BX	I.2	Side Cover	59244103
BX	I.2	Starter	59243998
BX	I.2	Starter	59244004
BX	I.2	Starter	59244012
BX	I.2	Starter	59244020
BX	I.2	Starter	59244038
BX	I.2	Starter	59244046
BX	I.2	Starter	59244053
BX	I.2	Starter	59244061
BX	I.2	Starter	59244079
BX	I.2	Starter	59244087
BX	I.2	Starter	59244095
BX	I.2	Starter	59244103
BX	I.2	Control Assembly	54474911
BX	I.2	Control Assembly	54474960
BX	I.2	Control Assembly	59244723
BX	I.2	Control Assembly	54474978
BX	I.2	Control Assembly	54474986

BX	I.2	Control Assembly	54474994
BX	I.2	Control Assembly	54475017
BX	I.2	Control Assembly	59244731
BX	I.2	Control Assembly	59244749
BX	I.2	Control Assembly	54475025
BX	I.2	Control Assembly	54475041
BX	I.2	Control Assembly	54475058
BX	I.2	Control Assembly	54475066
BX	I.2	Control Assembly	54475074
BX	I.2	Control Assembly	54475090
BX	I.2	Control Assembly	54474929
BX	I.2	Control Assembly	54474937
BX	I.2	Control Assembly	54474945
BX	I.2	Control Assembly	54474952
BX	I.2	Control Assembly	54475033
BX	I.2	Control Assembly	59244756
BX	I.2	Control Assembly	59244772
BX	I.2	Control Assembly	59244780
BX	I.2	Carburetor	54475108
BX	I.2	Carburetor	54475124
BX	I.2	Carburetor	59244186
BX	I.2	Carburetor	59244194
BX	I.2	Carburetor	59244202
BX	I.2	Carburetor	59244228
BX	I.2	Carburetor	59244210
BX	I.2	Carburetor	59244236
BX	I.2	Carburetor	59244244
BX	I.2	Carburetor	54475140
BX	I.2	Carburetor	54475173
BX	I.2	Carburetor	54475181
BX	I.2	Carburetor	54475322
BX	I.2	Carburetor	54475330
BX	I.2	Carburetor	54475348
BX	I.2	Carburetor	54475314
BX	I.2	Carburetor	54475355
BX	I.2	Carburetor	54475363
BX	I.2	Carburetor	54475405
BX	I.2	Carburetor	59244327
BX	I.2	Carburetor	54475199
BX	I.2	Carburetor	54475215
BX	I.2	Carburetor	59244285
BX	I.2	Carburetor	54475249
BX	I.2	Carburetor	54475264
BX	I.2	Carburetor	59244301
BX	I.2	Carburetor	54475371
BX	I.2	Air Cleaner	54475421
BX	I.2	Air Cleaner	54475439
BX	I.2	Air Cleaner	54475447
BX	I.2	Air Cleaner	54475462
BX	I.2	Air Cleaner	54475454
BX	I.2	Air Cleaner	54475470
BX	I.2	Air Cleaner	54475504
BX	I.2	Air Cleaner	54475488
BX	I.2	Air Cleaner	54475496
BX	I.2	Air Cleaner	59243196
BX	I.2	Air Cleaner	54475512

BX	I.2	Air Cleaner	54475553
BX	I.2	Air Cleaner	54475553
BX	I.2	Air Cleaner	54475561
BX	I.2	Air Cleaner	59244418
BX	I.2	Muffler	54475645
BX	I.2	Muffler	54475579
BX	I.2	Muffler	54475587
BX	I.2	Muffler	54475595
BX	I.2	Muffler	59244467
BX	I.2	Muffler	54475611
BX	I.2	Muffler	54475629
BX	I.2	Muffler	54475637
BX	I.2	Muffler	59244475
BX	I.2	Fuel Tank	59244525
BX	I.2	Fuel Tank	54475660
BX	I.2	Fuel Tank	54475678
BX	I.2	Fuel Tank	54475702
BX	I.2	Fuel Tank	54475736
BX	I.2	Fuel Tank	54475744
BX	I.2	Fuel Tank	54475785
BX	I.2	Fuel Tank	54475793
BX	I.2	Fuel Tank	54475801
BX	I.2	Fuel Tank	54475819
BX	I.2	Fuel Tank	59244418
BX	I.2	Fuel Tank	54475827
BX	I.2	Fuel Tank	59244566
BX	I.2	Fuel Tank	54475835

Desc
Vibration Plate (BX-60WH)
Vibration Plate (BX-80WH)
Vibration Plate (BX-120WH)
Guard Frame
Connection (A) (BX-60WH)
Connection (A) (BX-80WH, 120WH)
Bolt
Spring Washer
Connection (B) (BX-60WH)
Connection (B) (BX-80WH, 120WH)
Bolt
Spring Washer
Nut
Washer
Engine Bed (BX-60WH)
Engine Bed (BX-80WH, 120WH)
Bolt
Spring Washer
Spacer (A)
Bolt
Spring Washer
Washer
Rubber Buffer (A)
Rubber Buffer (B)
Bolt
Spring Washer
Nut
Water Tank Assembly (BX-60WH)
Water Tank Assembly (BX-80WH, 120WH)
Water Tank Cap (BX-60WH, 80-WH, 120WH)
Sprinkler Plate (BX-80WH, 120WH)
Bolt (BX-60WH, 80WH)
Bolt (BX-120WH)
Spring Washer (BX-60WH,80WH, 120WH)
Washer
Valve Assy, Sprinkler (BX-60WH,80WH, 120WH)
Spacer (B)
Washer
Sprinkler Plate (BX-60WH)
Plug Cap
Rubber Buffer Bracket (BX-60WH)
Rubber Buffer Bracket (BX-80WH/120WH)
Engine Assembly (BX-60WH) 1 See Breakdown - I
Engine Assembly (BX-80WH, 120WH) 1 See Breakd
Bolt
Spring Washer
Washer
Clutch Assembly (BX-60WH)
Clutch Assembly (BX-80WH, 120WH)
Clutch Shoe Assembly (BX-60WH)
Clutch Shoe Assembly (BX-80WH,120WH)
Key
Bolt
Spring Washer
Washer

V-belt (BX-60H/WH)
V-belt (BX-80H/WH, 120H/WH)
Inside Cover
Bolt
Spring Washer
Pulley Cover
Bolt
Spring Washer
Washer
Long Nut
Operating Handle (BX-60WH)
Operating Handle (BX-80WH, 120WH)
Handle Bolt
Washer
Bushing
Coller (A)
Bolt
Spring Washer
Washer
Coller (B)
Bracket (BX-60WH)
Bracket (BX-80WH, 120WH)
Screw
Bolt
Spring Washer
Washer
Throttle Lever
Throttle Cable
Wire Band
Wire Clamp
Return Spring
Rubber Cover
Stopper Bracket
Bolt
Spring Washer
Washer
Handle BX-80WH/BX-120WH
Handle BX-80WH/BX-120WH
Bearing Case (A)
Bearing Case (B)
Bolt
Spring Washer
Washer
Ball Bearing (BX-60WH)
Roller Bearing (BX-80/120WH)
Oil Seal
O Ring
Eccentric Shaft (BX-60WH)
Eccentric Shaft (BX-80WH)
Eccentric Shaft (BX-120WH)
Rubber Cover
Plug
Pulley
Bolt
Lock Washer
Washer

Packing
Plug
Shaft Case (BX-60WH)
Shaft Case (BX-80WH, 120WH)
Bolt (BX-60WH)
Bolt (BX-80WH, 120WH)
Spring Washer (BX-60WH)
Spring Washer (BX-80WH, 120WH)
Washer (BX-60WH)
Washer (BX-80WH, 120WH)
Vibration Unit Assy (BX-60WH)
Vibration Unit Assy (BX-80WH)
Vibration Unit Assy (BX-120WH)
Carrying Cart Assembly (BX-60WH)
Carrying Cart Assembly (BX-80WH,
Cart Shaft (BX-60WH)
Cart Shaft (BX-80WH,120WH)
Tire & Wheel Assembly
Washer
Cotter Pin
Fixing Arm (BX- 60WH)
Fixing Arm (BX-80WH,120WH)
Nylon Collar
Cotter Pin
Tool Kit
Double Ended Spanner 1 22 x 24
Double Ended Spanner 1 17 x 19
Double Ended Spanner 1 10 x 13
Slotted Screwdriver
Tool Bag
Operation/Maintenance & Parts Manual
OM_BX-60/80/120WH_W_EUR
OM_BX-60/80/120WH_SCAN
PM_BX-60/80/120WH_EUR
OM_BX-60/80/120WH_W_EUR
OM_BX-60/80/120WH_SCAN
PM_BX-60/80/120WH_EUR
Decal, I-R Emblem
Decal, BX-60 (White) (BX-60WH)
Decal, BX-80 (White) (BX-80WH)
Decal, BX-120 (White) (BX-120WH)
Decal, I-R Logo
Name Plate
Label, Warning
Label, Caution
Decal, I-R Emblem
Label, High-Low
Label, Stop
Label, Noise (BX-60WH, 120WH)
Label, Noise (BX-80WH)
Decal Set (BX-60WH)
Decal Set (BX-80WH)
Decal Set (BX-120WH)
Cylinder Head (Includes Item 2, 3 & 4)
Inlet Valve Guide
Inlet Valve Guide

Exhaust Valve Guide
Valve Guide Clip
Head Gasket
Head Gasket
Head Cover
Packing
Breather Tube (Eff. With Engine S/N 2115474)
Breather Tube (Prior to Engine S/N 2115474)
Flange Bolt (Eff. with Engine S/N 2299857)
Flange Bolt (Prior to Engine S/N 2299857) 4 M
Stud Bolt 2 M6 x 109mm
Stud Bolt 2 M8 x 32mm
Dowel Pin 2 M10 x 16mm
Tube Clip
Flange Bolt 4 M8 x 60mm
Spark Plug 1 BPR6ES NGK
Spark Plug 1 W20EPR-U ND
Spark Plug Wrench 1 BPR6ES NGK
Governor Kit (includes items 4,8,13,15, 20)
Governor Assembly (includes items 5,6,7)
Weight
Weight Holder
Weight Pin
Slider
Thrust Washer
Clip
Washer 2 6mm
Cylinder Barrel Assembly (includes items 16,1
Bearing
Oil Seal
Oil Level Switch Assembly
Oil Level Switch Assembly
Arm Shaft
Drain Plug
Washer
O-ring 1 14mm
Flange Nut 1 10mm
Lockpin 1 8mm
Flange Bolt 2 M6 x 12mm
Crankcase Cover (includes items 10, 11)
Bearing
Oil Seal 1 25 x 41 x 6mm
Packing (Eff. with Engine S/N 2272435)
Packing (Prior to Engine S/N 2272435)
Oil Filler Cap Assembly (includes item 8)
Packing (Effective with Engine S/N 2354643)
Oil Filler Cap Assembly (includes item 8)
Packing (Prior to Engine S/N 2354643)
Oil Cap Assembly (includes item 8)
Packing (Effective with Engine S/N 2354643)
Oil Filler Cap (Prior to Engine S/N 2354643)
Packing (Prior to Engine S/N 2354643)
Flange Bolt 7 M8 x 32mm
Dowel Pin 2 M8 x 14mm
Woodruff Key
Cooling Fan

Starter Pulley
Flywheel Complete
Special Nut 1 14mm
Ignition Coil Assembly
Noise Suppressor Cap Assembly
Flange Bolt 2 M6 x 25mm
Crankshaft (Includes Items 11 and 12)
Timing Gear
Governor Drive Gear
Washer 1 M8
Key
Hex Bolt 1 M8 x 25mm
Piston Ring Set 1 Standard
Piston 1 Standard
Piston Pin
Connecting Rod Assembly (includes item 5)
Connecting Rod Bolt
Clip
Camshaft Assembly (includes item 6)
Return Spring
Push Rod
Rocker Arm
Valve Lifter
Rocker Arm Pivot
Intake Valve
Exhaust Valve
Valve Spring
Spring Retainer, Inlet
Spring Retainer, Exhaust
Valve Rotater
Guide Plate
Pivot Bolt
Pivot Adjusting Nut
Cover Adjustment Grommet
Oil Alert Unit
Fan Cover (Effective with Engine S/N 2186370)
Fan Cover (Prior to Engine S/N 2186370)
Side Plate
Stop Switch Cord Clamp
Shroud
Engine Stop Switch Harness
Engine Stop Switch
Stop Switch Cord
Label: Specification
Label: Oil Alert
Flange Bolt 4 M6 x 12mm
Flange Bolt 1 M6 x 20mm
Flange Bolt 1 M6 x 8mm
Recoil Starter Assembly (includes items 2 thr
Recoil Starter Assembly (includes items 2 thr
Starter Case
Starter Reel (Eff. with Engine S/N 2169650)
Starter Reel (Prior to Engine S/N 2169650)
Starter Ratchet
Starter Ratchet
Ratchet Guide

Friction Spring
Starter Spring
Return Spring
Starter Knob
Starter Rope
Setting Screw
Emblem (Eff with Engine S/N 2185870)
Flange Bolt 3 M6 x 8mm
Control Assembly (Includes items 9,10,11,
Control Lever
Lever Spring
Control Lever Washer
Cable Holder
Control Lever Spacer
#NAME?
Control Adjusting Spring
Cable Return Spring
Wire Holder
Locknut 1 6mm
Pan Screw 1 M4 x 6mm
Pan Screw 1 M5 x 25mm
Pan Screw (Eff. with Engine S/N 2311704)
Screw Washer (Prior to Engine S/N 2311704)
Governor Arm
Governor Rod
Governor Spring
Throttle Return Spring
Flange Bolt 1 M6 x 12mm
Governor Arm Bolt
Flange Bolt 1 M6 x 20mm
Flange Nut 1 6mm
Carburetor Assembly
Carburetor Assembly
Float Valve Set
Float Set
Float Chamber Set (Includes item 7)
Drain Screw Set (Includes gasket)
Pilot Screw Set
Screw Set (includes gasket)
Choke Set
Throttle Stop Screw
Main Nozzle (Eff. with Engine S/N BE12A)
Main Nozzle (Prior to Engine S/N BE12A)
Fuel Strainer Cup Packing
Cock Lever
Lever Setting Plate
Lever Spring
Packing
Fuel Strainer Cup
Pan Screw 2 M3 x
Main Jet (includes gasket)
Main Jet (Includes gasket)
Pilot Jet Set (Includes Item 2) 1 #35
Gasket Set
Carburetor Insulator
Packing (Eff. with Engine S/N 2272435)

Packing (Prior to Engine S/N 2272435)
Carburetor Spacer
Packing (Eff. with Engine S/N 2272435)
Packing (Prior to Engine S/N 2272435)
Choke Control Stay
Choke Control Stay
Choke Lever Complete
Packing
Air Cleaner (includes items 3,5)
Air Cleaner Filter
Grommet
Cover
Silencer Nose
Air Cleaner Elbow (includes items 7,8)
Collar
Collar (B)
Choke Mark
Cap Nut 2 6mm
Wing Nut (Effective with Engine S/N 2185870)
Cover Nut (Prior to Engine S/N 2185870)
Tool Box Setting Nut
Tool Box Setting Nut
Bolt 1 M6 x 20mm
Flange Nut 2 6mm
Muffler
Protector (Standard)
Protector (Standard)
Deflector
Spark Arrestor
Gasket
Guide
Tapping Screw 4 M5 x 8mm
Tapping Screw 4 M4 x 6mm
Tapping Screw 2 M4 x 8mm
Hex Nut 2 8mm
Rubber Supporter
Fuel Tank Joint
Fuel Tank Complete
Fuel Tank Cap (Includes item 8)
Packing (Effective with Engine S/N 2421923)
Fuel Tank Cap (Includes item 8)
Packing (Prior to Engine S/N 2421923)
Fuel Tank Cap (Includes Item 8)
Packing (Effective with Engine S/N 2421923)
Fuel Filter (Effective with Engine S/N 232848)
Fuel Filter (Prior to Engine S/N 2328483)
Fuel Filter Holder
Label: Caution
Caution Mark
Oil Alert Mark
O-ring 1 14mm
Flange Nut 2 6mm
Fuel Tube 1 M4.5 x 140mm
Tube Clip
Flange Bolt 1 M6 x 25mm
Cylinder Head

Inlet Valve Guide
Exhaust Valve Guide
Valve Guide Clip
Head Gasket
Head Cover
Packing
Breather Tube
Flange Bolt 4 M6 x 12mm
Stud Bolt 2 M6 x 109mm
Stud Bolt 2 M8 x 32mm
Dowel Pin 2 M10 x 16mm
Flange Bolt 4 M8 x 60mm
Spark Plug 1 BPR6ES NGK
Spark Plug 1 W20EPR-U ND
Spark Plug Wrench
Governor Kit (includes items 4,8,13,15, 20)
Governor Assembly (includes items 5,6,7)
Weight
Weight Holder
Weight Pin
Slider
Thrust Washer
Clip
Washer 2 6mm
Cylinder Barrel Assembly (includes items 16,17)
Oil Seal 1 M25 x 41 x 6mm
Bearing 1 6205TMB
Bearing 1 6205SH
Oil Level Switch Assembly
Arm Shaft
Drain Plug
Washer
O-ring 1 14mm
Flange Nut 1 10mm
Lockpin 1 8mm
Flange Bolt 2 M6 x 12mm
Crankcase Cover (includes items 9, 12)
Oil Seal 1 25 x 41 x 6mm
Bearing
Packing
Oil Filler Cap Assembly (includes item 8)
Packing
Oil Filler Cap Assembly (includes item 8)
Packing
Oil Filler Cap
Packing
Dowel Pin 2 M8 x 14mm
Flange Bolt 6 M8 x 32mm
Woodruff Key
Cooling Fan
Starter Pulley
Flywheel Complete
Special Nut 1 14mm
Ignition Coil Assembly
High Tension Terminal Assembly
Noise Suppressor Cap Assembly

Flange Bolt 2 M6 x 25mm
Crankshaft
Hex Bolt 1 M8 x 25mm
Washer 1 M8
Key 1 M8 x 5 x 33mm
Piston Ring Set 1 Standard
Piston 1 Standard
Piston Pin
Connecting Rod Assembly (includes item 5)
Rod Bolt
Clip
Camshaft Assembly (includes item 6)
Return Spring
Push Rod
Rocker Arm
Valve Lifter
Rocker Arm Pivot
Intake Valve
Exhaust Valve
Valve Spring
Inlet Spring Retainer
Exhaust Spring Retainer
Valve Rotater
Guide Plate
Pivot Bolt
Pivot Adjusting Nut
Oil Alert Unit
Fan Cover
Side Plate
Stop Switch Cord Clamp
Shroud
Engine Stop Switch Harness
Engine Stop Switch
Stop Switch Cord
Label: Specification
Label: Oil Alert
Flange Bolt 4 M6 x 12mm
Flange Bolt 1 M6 x 20mm
Flange Bolt 1 M6 x 8mm
Recoil Starter Assembly (includes items 2 thru 12)
Starter Case
Starter Reel
Starter Ratchet
Ratchet Guide
Friction Spring
Starter Spring
Return Spring
Starter Knob
Starter Rope
Setting Screw
Flange Bolt 3 M6 x 8mm
Control Assembly (includes items 9,10,11,12,13,14,
Control Lever
Lever Spring
Lever Washer
Cable Holder

Spacer
Control Base
Adjusting Spring
Cable Return Spring
Wire Holder
Locknut 1 6mm
Pan Screw
Circlip 1 5mm
Pan Screw 1 M4 x 6mm
Pan Screw 1 M5 x 16mm
Governor Arm
Governor Rod
Governor Spring
Throttle Return Spring
Recessed Bolt 1 M5 x 25mm
Flange Bolt 1 M6 x 12mm
Governor Arm Bolt
Flange Nut 1 6mm
Gasket Set
Carburetor Assembly
Float Valve Set
Float Set
Float Chamber Set (includes item 7)
Drain Screw Set (includes gasket)
Pilot Screw Set
Screw Set (includes gasket)
Choke Set
Throttle Stop Screw
Main Nozzle
Packing
Cock Lever
Lever Setting Plate
Lever Spring
Packing
Fuel Strainer Cup
Pan Screw 2 M3 x 8mm
Main Jet (includes gasket) 1 #70
Pilot Jet Set 1 #35
Insulator
Packing
Spacer
Packing
Choke Control Stay
Choke Lever Complete (includes item 35)
Spring Pin 1 M2 x 12mm
Packing
Air Cleaner (includes items 3,5)
Air Cleaner Filter
Grommet
Cover
Silencer Nose
Air Cleaner Elbow (includes items 7,8)
Collar
Collar (B)
Choke Mark
Cap Nut 2 6mm

Tool Box Setting Nut
Tool Box Setting Nut
Bolt 1 M6 x 20mm
Flange Nut 2 6mm
Muffler
Protector (Standard)
Deflector
Spark Arrestor
Gasket
Guide
Tapping Screw 4 M5 x 8mm
Tapping Screw 4 M4 x 6mm
Hex Nut 2 8mm
Rubber Supporter
Fuel Tank Joint
Fuel Tank Complete
Fuel Filler Cap (Includes item 19)
Packing
Fuel Filter
Label: Caution
Caution Mark
Oil Alert Mark
O-ring 1 14mm
Flange Nut 2 6mm
Fuel Tube 1 M4.5 x 140mm
Tube Clip
Flange Bolt 1 M6 x 25mm