

# BX-60WH

## Plate Compactor

# BX-80WH

## Plate Compactor

# BX-120WH

## Plate Compactor



*Doosan purchased Bobcat Company from Ingersoll-Rand Company in 2007. Any reference to Ingersoll-Rand Company or use of trademarks, service marks, logos, or other proprietary identifying marks belonging to Ingersoll-Rand Company in this manual is historical or nominative in nature, and is not meant to suggest a current affiliation between Ingersoll-Rand Company and Doosan Company or the products of either.*

# PARTS MANUAL



BX-60WH	Serial No. SG1501	→
BX-80WH	TG1301	→
BX-120WH	UG0301	→



# HOW TO USE THIS MANUAL

This Parts Manual applies to all BX-60/80/120WH Plate Compactors

## ***When the Comm. # is not Known - Use the Word Index:***

- Ingersoll-Rand's Word Index will make this item easy to locate. The Word Index is found in the very back of the book. The items listed are in alphabetical order and may be repeated several times depending on their functional descriptions.
- Let's assume you need to replace the AIR CLEANER FILTER.

Use any of the functional words in the item description to locate the desired item. Example: The first listing for the **Air Cleaner Filter** in the **Word Index** is: Air Cleaner Filter. The index shows the component will be found on pages **43 & 73**, which are the **Parts List** page numbers for the two different Engine Assemblies.

<p>A  Air Cleaner Filter 43, 73  Air Cleaner 43, 73  Alert Unit, Oil 33, 69  Arm, Governor 37,69  B  Bag, Tool13</p>
--

- The item is also listed as:

Filter, Air Cleaner

## ***Using the Parts Identification Pages:***

- The **PARTS IDENTIFICATION PAGES** consist of the **PARTS ILLUSTRATION** (even numbered pages) and the **PARTS LIST** (odd numbered pages).
- The **Parts Illustration** shows the assembly with its component parts identified by **Item Numbers**.
- On the **Parts List**, the components are listed in **Item Number** order as found in the **ITEM** column. Other information provided by the **Parts List** is the **Comm. Number** which will be required to order Genuine Ingersoll-Rand Replacement Parts, a **functional description**, the **quantity** required to assemble one complete assembly, and any additional **notes/ dimensions** required to help place your parts order.
- **For the example: The Air Cleaner Filter shown on Page 43 is listed as Item 3, and the Comm. Number for the Element is 13221320, Quantity of 1.**

***When the Comm. # is not known - Use the Table of Contents:***

- Turn to the TABLE OF CONTENTS pages in the front of this manual. These pages show the major systems of the machine divided into FUNCTIONAL GROUPS.
- Find the Functional Group that best describes the area of the machine you are interested in. For example: Engine Assembly.
- See the sample Table of Contents shown below:

4 Engine Assembly - Internal Breakdown

....

04-01-13 Carburetor - BX-60WH39

04-01-14 Air Cleaner - BX-60WH43

Listed under the Functional Group of Internal Breakdown are SECTIONS (identified by numbers that describe major repairable components of that group. Find the listing that refers to the Honda Engine (58836438).

- Since the Air Cleaner Filter is what needs to be replaced, refer to the parts listing for the Engine. The Air Cleaner used on your machine is found in Functional Group 04; Section 01, this makes up the first part of the page number. Turn to that section of the parts manual and find the parts listing on page 43 for the Air Cleaner (13221312).

***When the Comm. # is Known - Use the Numerical Index:***

- If you already know the **Comm. Number** (part number) for the item required, a **NUMERICAL INDEX** is provided in the back of the manual to assist you. Look up the **Comm. Number** desired and the **Numerical Index** will show the **Page Number** where the item can be found.

For our Air Cleaner Filter Example: The Comm. Number for the Air Cleaner Filter 13221320 is found in the Numerical Index, it shows that component will be found on page 43.

# UTILISATION DE CE CATALOGUE

Ce catalogue des pièces détachées s'applique à toutes les Plaques Vibrantes BX-60/80/120WH

**En l'absence du numéro de pièce (Comm. Number), utilisez l'index de mots (Word Index):**

- L'index de mots (Word Index) se trouve au dos de chaque catalogue. Les articles y sont classés dans l'ordre alphabétique et peuvent apparaître à plusieurs reprises, selon leurs descriptions fonctionnelles.
- Supposons que vous deviez remplacer le FILTRE A AIR (Air Cleaner Filter).

Utilisez n'importe quel terme fonctionnel de la description pour retrouver l'article souhaité. Par exemple: la première mention relative au **filtre à air** dans l'index de mots (Word Index) est: **Air Cleaner Filter**. L'index indique que le composant figure aux pages **43 & 73**, qui sont les numéros de page de la **Liste des pièces (Parts List)** des deux ensembles de moteur différents.

A
Air Cleaner Filter 43, 73
Air Cleaner 43, 73
Alert Unit, Oil 33, 69
Arm, Governor 37,69
B
Bag, Tool13

- L'article est aussi répertorié sous la mention:  
Filter, Air Cleaner (Filtre, à air)

**Utilisation des pages d'identification des pièces (Parts Identification Pages):**

- Les **PAGES D'IDENTIFICATION DES PIÈCES** incluent les **ILLUSTRATIONS DE PIÈCES (Parts Illustration)** (pages paires) et les **LISTES DE PIÈCES (Parts List)** (pages impaires).
- L'**illustration des pièces** représente l'ensemble avec les pièces qui le composent, identifiées par des **références (Item Numbers)**.
- La **Liste des pièces** énumère les composants dans l'ordre des **références** correspondant à la colonne **ARTICLE (Item)**. Les autres informations fournies par la **Liste des pièces** sont le **Numéro de pièce (Comm. Number)**, requis pour commander des pièces de rechange d'origine Ingersoll-Rand, la **description fonctionnelle**, la **quantité** requise pour assembler un ensemble complet ainsi que des **remarques/dimensions** diverses susceptibles de faciliter la commande de pièces.
- **Par exemple: Le filtre à air (Air Cleaner Filter) illustré à la Page 43 est répertorié sous l'article 3. Son numéro comm. est 13221320 et sa quantité, 1.**

***En l'absence du numéro de pièce (Comm. Number), utilisez la table des matières (Table of Contents):***

- Consultez les pages de la **TABLE DES MATIERES**, au début du catalogue. Ces pages répartissent les principaux circuits de la machine dans des **GROUPES FONCTIONNELS**.
- Retrouvez le **Groupe fonctionnel** qui décrit le mieux la zone de la machine qui vous intéresse. Par exemple: **Engine Assembly (Ensemble moteur)**
- Consultez l'exemple de **Table des matières** ci-dessous:

4 Engine Assembly - Internal Breakdown

....

04-01-13 Carburetor - BX-60WH39

04-01-14 Air Cleaner - BX-60WH43

Sous le **Groupe fonctionnel** des **compositions internes (Internal Breakdown)** sont répertoriées des **SECTIONS** (identifiées par des numéros décrivant les principaux composants réparables de ce groupe). Retrouvez la liste qui fait référence au moteur Honda (Honda Engine) (58836438).

- Comme le composant à remplacer est le **filtre à air (Air Cleaner Filter)**, consultez la liste des pièces (Parts List) du Moteur (Engine). Le filtre à air (Air Cleaner Filter) installé sur votre machine figure dans le **Groupe fonctionnel 04; Section 01**, qui constitue la première partie du numéro de page. Accédez à cette section du catalogue des pièces détachées et retrouvez les pièces énumérées à la page 43 qui constituent le **filtre à air (Air Cleaner)** (13221312).

***Quand le numéro de pièce est connu, utilisez l'index numérique (Numerical Index):***

- Si vous connaissez déjà le numéro de pièce de l'article requis, utilisez l'**INDEX NUMERIQUE (Numerical Index)**, fourni au dos du catalogue. Retrouvez le numéro de pièce souhaité et l'index numérique mentionnera le **Numéro de page** de l'article.

Pour notre exemple de filtre air (Air Cleaner Filter): le numéro de pièce (Comm. Number) de l'élément du filtre à air (Air Cleaner Filter) 13221320 figure dans l'index numérique (Numerical Index) et indique que ce composant se trouve à la page 43.

# ANGABEN ZUR VERWENDUNG DIESES HANDBUCHES

Diese Ersatzteilliste gilt für alle BX-60/80/120WH Plattenverdichter

## **Wenn die Teile-Nr. (Comm. #) unbekannt ist - das Stichwortverzeichnis (Word Index) verwenden:**

- Das Stichwortverzeichnis befindet sich ganz hinten im Handbuch. Die Teile sind in alphabetischer Reihenfolge aufgeführt und können je nach ihrer Funktionsbeschreibung doppelt oder sogar mehrfach aufgeführt werden.
- Gehen wir einmal davon aus, dass der **LUFTFILTEREINSATZ (air cleaner filter)** ausgewechselt werden soll.

Zum Auffinden des gewünschten Teils eines der Funktionswörter in der Teilebeschreibung verwenden. Beispiel: Zum ersten Mal erscheint eine Auflistung für den **Luftfiltereinsatz** im Stichwortverzeichnis unter: Luftfiltereinsatz. Laut Stichwortverzeichnis ist das Teil auf den Seiten **43 & 73** beschrieben; es handelt sich dabei um die Seitennummer der **Teileliste (parts list)** für die zwei unterschiedlichen Motorbaugruppen.

<p>A</p> <p>Air Cleaner Filter 43, 73</p> <p>Air Cleaner 43, 73</p> <p>Alert Unit, Oil 33, 69</p> <p>Arm, Governor 37,69</p> <p>B</p> <p>Bag, Tool13</p>
--

- Das Teil ist ebenfalls aufgeführt unter:  
Filter, Luftfilter

## **Verwendung der Teile-Seiten:**

- Die **TEILE-SEITEN (parts identification pages)** bestehen aus der **TEILEDARSTELLUNG (parts illustration)** (Seiten mit gerader Seitennummer) und der **TEILELISTE** (Seiten mit ungerader Seitennummer).
- Die **Teileabbildung** zeigt die komplette Baugruppe mit den dazugehörigen Einzelteilen, die durch die **Positionsnummern (item numbers)** gekennzeichnet sind.
- In der **Teileliste** sind die Teile in der Spalte **POS. (item)** in der Reihenfolge der **Positionsnummer** aufgeführt. Zusätzlich enthält die **Teileliste** folgende Angaben: die **Teilenummer (Comm. Number)**, die zum Bestellen von Original Ingersoll-Rand Ersatzteilen benötigt wird, eine **Funktionsbeschreibung**, die **Anzahl**, die für die Montage einer kompletten Baugruppe benötigt wird sowie zusätzliche **Bemerkungen/Maße**, die hilfreich für die Teilebestellung sind.
- **Beispiel:** der auf Seite 43 gezeigte Luftfiltereinsatz ist als Pos. 3 aufgeführt, die Bestellnummer für den Filtereinsatz lautet 13221320, und die Anzahl entspricht 1.

**Wenn die Teile-Nr. unbekannt ist - das Inhaltsverzeichnis verwenden:**

- Die Seiten mit dem **INHALTSVERZEICHNIS ( table of contents)** vorn in diesem Handbuch aufschlagen. Auf diesen Seiten sind die wichtigsten Systeme der Maschine, unterteilt nach **FUNKTIONS-GRUPPEN** aufgelistet.
- Die Funktionsgruppe ausfindig machen, die am besten den Bereich der Maschine beschreibt, an dem Sie interessiert sind. Beispiel: Motorbaugruppe.
- Sehen Sie dazu die nachfolgend gezeigte Musterseite des **Inhaltsverzeichnisses**:

4 Engine Assembly - Internal Breakdown

....

04-01-13 Carburetor - BX-60WH39

04-01-14 Air Cleaner - BX-60WH43

Unter der **Funktionsgruppe** mit der Bezeichnung Internal Breakdown (Innere Ausstattung) sind **ABSCHNITTE (sections)** (gekennzeichnet durch die Nummer zur Beschreibung der wichtigsten reparablen Elemente der betreffenden Gruppe) aufgeführt. Die Auflistung suchen, die sich auf den Honda-Motor (M58836438) bezieht.

- Da der **Luftfiltereinsatz** ausgewechselt werden soll, muss in der Teileliste für den Motor nachgeschlagen werden. Der an der betreffenden Maschine verwendete Luftfilter kann unter **Funktionsgruppe 04; Abschnitt 1** nachgeschlagen werden; dieser Kennbuchstabe und die Kennnummer geben schon den ersten Teil der Seitennummer an. Zum betreffenden Abschnitt des Teilehandbuchs weiterblättern; hier ist dann auf Seite **43** die Teileliste für den **Luftfilter** (13221312) aufgeführt.

**Wenn die Teile-Nr. bekannt ist - den Zahlenindex verwenden:**

- Wenn die **Bestellnummer** (Teilenummer) für das gewünschte Teil bereits bekannt ist, kann in einem **ZAHLENINDEX** (numerical index) hinten im Handbuch nachgeschlagen werden. Die gewünschte **Bestellnummer** nachschlagen, und unter dem Zahlenindex kann dann die **Seitennummer** für das betreffende Teil nachgeschlagen werden.

Für das Beispiel des Luftfiltereinsatzes gilt also: Durch Nachschlagen der Bestellnummer für den Luftfiltereinsatz 13221320 im Zahlenindex wird festgestellt, dass das Teil auf Seite 43 beschrieben ist.

# COME UTILIZZARE QUESTO MANUALE

Questo manuale ricambi é valido per tutte le Piastre vibranti BX-60/80/120WH

## **Quando non si conosce il numero di riferimento, utilizzare l'indice per parola (Word Index):**

- L'indice per parola si trova alla fine del libro. Le voci sono elencate in ordine alfabetico e possono essere ripetute più volte a seconda della descrizione della loro funzione.
- Supponiamo che si debba cambiare l'**Air Cleaner Filter (l'elemento filtro dell'aria)**.

Per trovare la voce desiderata utilizzare una delle parole della descrizione della stessa voce. Esempio: la prima parola elencata per l'**Air Cleaner Filter (Elemento Filtro dell'aria)** nell'Indice per parola é: Air Cleaner Filter. L'indice indica che il componente si trova a pagina **43 e 73**, che é il numero della pagina della **Lista Ricambi (Parts List)** per diversi gruppi motore.

A

Air Cleaner Filter 43, 73

Air Cleaner 43, 73

Alert Unit, Oil 33, 69

Arm, Governor 37,69

B

Bag, Tool13

- La voce é indicata anche in questo modo:

Filter, Air Cleaner

## **Utilizzo delle pagine d'identificazione dei ricambi (Parts Identification Pages):**

- Le **PAGINE D'IDENTIFICAZIONE DEI RICAMBI (PARTS IDENTIFICATION PAGES)** sono costituite dalle **ILLUSTRAZIONI DEI RICAMBI (PARTS ILLUSTRATION)** (numeri di pagina pari) e dalla **LISTA RICAMBI (PARTS LIST)** (numeri di pagina dispari).
- La sezione Illustrazioni dei ricambi mostra il gruppo con i pezzi che lo compongono, identificati tramite **numeri di riferimento (Item Number)**.
- Sulla **Lista ricambi**, le componenti sono elencate in ordine di **numero di riferimento (Item Number)** come si troverà nella colonna per **PAROLE (Item)**. Altre informazioni fornite dalla **Lista Ricambi** sono: il numero di riferimento, necessario per ordinare i ricambi originali Ingersoll-Rand, una **descrizione delle funzioni (functional description)**, la **quantità (quantity)** richiesta per costituire un gruppo completo e le **note/ dimensioni (notes/dimensions)** supplementari necessarie a ordinare i ricambi.
- **Esempio: Air Cleaner Filter che appare alla pagina 43 é la terza voce della lista, il numero di riferimento per l'elemento é 13221320, Quantità 1.**

**Quando non si conosce il numero di riferimento (Comm. #), utilizzare l'indice analitico (Table of Contents):**

- Ritorniamo all'**INDICE ANALITICO** all'inizio di questo manuale. Queste pagine indicano i principali impianti della macchina divisi in **GRUPPI FUNZIONALI (FUNCTIONAL GROUPS)**.
- Localizzare il **Gruppo Funzionale** che descrive meglio l'area della macchina interessata. Ad esempio: **Gruppo motore**.
- Ecco un campione dell'**Indice analitico**:

4 Engine Assembly - Internal Breakdown

....

04-01-13 Carburetor - BX-60WH39

04-01-14 Air Cleaner - BX-60WH43

Nella lista **Gruppi funzionali di Internal Breakdown** (intervalli interni) ci sono le **SEZIONI (SECTIONS)** (identificate dai numeri che descrivono le principali componenti riparabili di quel gruppo). Scorrere la lista sul **motore** Honda (58836438).

- Dal momento che l'**Air Cleaner Filter** é l'elemento da sostituire, consultare la lista dei ricambi del Motore. L'Air Cleaner utilizzato sulla vostra macchina si trova nel **Gruppo funzionale 04; Sezione 01**, questo numero corrisponde alla prima parte del numero di pagina. Andare a questa sezione del manuale e cercare la lista dei pezzi alla pagina **43** per l'**Air Cleaner** (13221312).

**Quando si conosce il numero di riferimento (Comm. #) utilizzare l'Indice numerico (Numerical Index):**

- Se si conosce già il **numero di riferimento** (codice) del pezzo desiderato, fare riferimento all'**INDICE NUMERICO** alla fine del manuale. Individuare il Numero di riferimento desiderato e l'Indice numerico mostrerà il **Numero di pagina** in cui la voce può essere trovata.

Nel caso dell'esempio dell'Air Cleaner Filter: il **Numero di riferimento** per l'Air Cleaner Filter 13221320 é stato trovato nell'**Indice numerico**, da cui risulta che il pezzo si trova a pagina 43.

# CÓMO USAR EL PRESENTE MANUAL

Este Manual de recambios se refiere a todas las Planchas Compactadoras BX-60/80/120WH

## **Cuando no se conoce el nº de pedido (Comm.#) – Utilice el índice alfabético (Word Index):**

- El índice alfabético se encuentra en la cont raportada del libro. Los elementos están ordenados por orden alfabético, y pueden aparecer varias veces según sea su descripción funcional.
- Supongamos de necesita sustituir el **FILTRO DE AIRE** (AIR CLEANER ELEMENT).

Use cualquiera de las palabras en la descripción de elementos para localizar el que usted necesite. Ejemplo: La primera aparición del **Filtro de aire** en el **índice alfabético** es: Air Cleaner Element. El índice le indica que el componente se encuentra en las páginas **43 y 73**, correspondiente a la **lista de piezas (Parts List)** de los dos conjuntos de motor diferentes.

A

Air Cleaner Filter 43, 73

Air Cleaner 43, 73

Alert Unit, Oil 33, 69

Arm, Governor 37,69

B

Bag, Tool13

- El elemento aparece también como:  
Elemento, filtro de aire (Element, Air Cleaner)

## **Uso de las páginas de identificación de repuestos:**

- Las **PÁGINAS DE IDENTIFICACIÓN DE REPUESTOS** (Parts Identification Pages) están compuestas de la **PÁGINA DE ILUSTRACIÓN** (Parts Illustration) (páginas pares) y la **LISTA DE PIEZAS** (Parts List) (páginas impares).
- La **ilustración de las piezas** muestra los componentes del conjunto identificados por medio de un **número de orden** (Comm. Number).
- En la lista de piezas, los componentes se enumeran según el **número de orden (Item Number)** en la columna de **NÚMERO (Item)**. Otra información que aparece en la **lista de piezas** es el **número pedido**, necesario para encargar repuestos originales Ingersoll-Rand, una **descripción funcional (functional description)**, la **cantidad (quantity)** precisa para montar un conjunto completo y las **notas/dimensiones (notes/dimensions)** adicionales necesarias para poder hacer el pedido de piezas.
- **Por ejemplo:** El filtro de aire es el elemento nº 3 de la página 43, y el número de pedido para dicho elemento es el M13221320, cantidad: 1.

**Cuando no se conoce el n° de pedido (Comm.#) - Utilice el índice (Table of Contents):**

- Diríjase al **ÍNDICE**, situado en las primeras páginas del manual. Dichas páginas recogen los sistemas principales de la máquina divididos en **GRUPOS FUNCIONALES** (Functional Groups).
- Localice el grupo funcional que mejor describa la zona de la máquina en la que está interesado. Por ejemplo: **Conjunto del motor** (Engine Assembly).
- Véase el ejemplo de índice más abajo:

4 Engine Assembly - Internal Breakdown

....

04-01-13 Carburetor - BX-60WH39

04-01-14 Air Cleaner - BX-60WH43

Enumeradas bajo el **grupo funcional de divisiones internas** (Internal Breakdown) hay **SECCIONES** (Sections) (identificadas por medio de números que describen los principales componentes reparables de ese grupo. Localice la lista que hace referencia al motor Honda (58836438).

- Dado que el filtro de aire es lo que necesitamos sustituir, remítase a la lista de piezas del motor. El filtro de aire usado en su máquina se encuentra en el **grupo funcional 04; Sección 01**, correspondientes a la primera parte del número de página. Diríjase al manual y encontrará la lista de piezas en la página **43** para el **filtro de aire** (13221312).

**Cuando sí se conoce el n° de pedido (Comm.#) – Utilice el índice numérico (Numerical Index):**

- Si conociese de antemano el número de pedido (referencia) del elemento de que se trate, encontrará en la parte posterior del manual un **ÍNDICE NUMÉRICO** que le será de utilidad. Busque el **número de pedido** que desee y el **índice numérico** le proporcionará el **número de página** en el que encontrará el elemento.

En el caso de nuestro filtro de aire de ejemplo: El número de pedido del filtro de aire 13221320 se encuentra en el índice numérico, donde vemos que el componente está en la página 43.

# HOE MOET U DIT HANDBOEK GEBRUIKEN

Dit onderdelenhandboek is van toepassing op alle BX-60/80/120WH Trilplaten

## **Als het bestelnummer niet bekend is, gebruikt u de woordindex:**

- De woordindex van Ingersoll-Rand maakt dit artikel gemakkelijk op te sporen. De woordindex vindt u helemaal achterin het boek. De artikelen in de lijst staan in alfabetische volgorde en kunnen, afhankelijk van hun functiebeschrijvingen, verscheidene keren worden herhaald.
- Stel dat u het **LUCHTFILTER (AIR CLEANER FILTER)** moet vervangen.

Gebruik een van de functiewoorden in de artikelbeschrijving om het gewenste artikel op te sporen. Voorbeeld: De eerste beschrijving voor het **luchtfilter** (Air Cleaner Filter) in de woordindex is: **Luchtreiniger Filter** (Air Cleaner Filter). De index toont dat de component kan worden gevonden op de pagina's **43 & 73**. Dit zijn de paginanummers van de onderdelenlijst voor de twee verschillende motorassemblages (Engine Assemblies).

<p>A            Air Cleaner Filter 43, 73            Air Cleaner 43, 73            Alert Unit, Oil 33, 69            Arm, Governor 37,69            B            Bag, Tool13</p>
--

- Het artikel is ook in de lijst opgenomen als:  
 Filter, luchtreiniger (Filter, Air Cleaner)

## **De pagina's onderdelenidentificatie gebruiken:**

- De PAGINA'S **ONDERDELENIDENTIFICATIE** bestaan uit de **ILLUSTRATIE VAN DE ONDERDELEN** (even genummerde pagina's) en de **ONDERDELENLIJST** (oneven genummerde pagina's).
- De illustratie van de onderdelen toont de assemblage met zijn componentonderdelen, geïdentificeerd aan de hand van de artikelnummers.
- Op de onderdelenlijst zijn de componenten opgesomd op volgorde van de artikelnummers, zoals ze worden aangetroffen in de kolom **ARTIKEL**. Andere informatie die door de onderdelenlijst wordt verstrekt, is het bestelnummer dat vereist is om originele Bobcat reserveonderdelen te bestellen, een functiebeschrijving, het aantal dat vereist is voor de montage van een complete assemblage, en alle extra opmerkingen/ afmetingen die vereist zijn om u te helpen bij de plaatsing van uw onderdelenbestelling.
- **Als voorbeeld: Het luchtfilter (Air Cleaner Filter) dat wordt getoond op pagina 43 is in de lijst opgenomen als artikel 3, en het bestelnummer voor het element is 13221320, het aantal is 1.**

**Als het bestelnummer niet bekend is, gebruikt u de inhoudsopgave:**

- Blader naar de pagina's van de INHOUDSOPGAVE vooraan in deze handleiding. Deze pagina's tonen de belangrijkste systemen van de machine, verdeeld in FUNCTIEGROEPEN.
- Zoek de functiegroep die het gedeelte van de machine waarin u geïnteresseerd bent het best beschrijft. Bijvoorbeeld: Motorassemblage (Engine Assembly).
- Zie het voorbeeld van de Inhoudsopgave dat hieronder wordt getoond:

4 Engine Assembly - Internal Breakdown

....

04-01-13 Carburetor - BX-60WH39

04-01-14 Air Cleaner - BX-60WH43

In de lijst zijn onder de functiegroep Interne storingsen (Internal Breakdown) SECTIES opgenomen (geïdentificeerd door nummers die de belangrijkste repareerbare onderdelen van die groep beschrijven). Zoek de beschrijving die verwijst naar de Honda motor (58836438) (Honda Engine).

- Omdat het **luchtfilter** (Air Cleaner Filter) vervangen moet worden, raadpleegt u de onderdelenlijst voor de **motor** (Engine).  
De op uw machine gebruikte **luchtreiniger** (Air Cleaner) vindt u in functiegroep 04; Sectie 01, dit vormt het eerste deel van het paginanummer. Blader naar die sectie van het onderdelenhandboek en zoek de onderdelenlijst op pagina **43** van de **luchtreiniger** (13221312) (Air Cleaner).

**Als het bestelnummer wel bekend is, gebruikt u de numerieke index:**

- Als u het **bestelnummer** (onderdeelnummer) van het vereiste artikel al kent, gebruikt u de **NUMERIEKE INDEX** achterin de handleiding om u bij te staan. Zoek het gewenste bestelnummer op en de numerieke index toont u het paginanummer waar het artikel kan worden aangetroffen.

Voor ons Luchtfiltervoorbeeld: het bestelnummer voor het luchtfilter 13221320 vindt u in de numerieke index. Deze toont aan dat de component kan worden gevonden op pagina 43.

## STANDARD ABBREVIATIONS

AC	Alternating Current	Ref	Reference
A/R	As Required	RH	Right Hand
ARC	Authorized Rebuilt Component	RHSS	Round Head SelfTapping Screw
Assy	Assembly	ROPS	Roll-Over Protection System
BHCS	Button Head Cap Screw	RPM	Revolutions Per Minute
Cu Yd	Cubic Yard	SAE	Society of Automotive Engineers
Cyl	Cylinder	Sec	Section
DC	Direct Current	SFH	Slotted Fillister Head
Dia	Diameter	SHCS	Socket Head Cap Screw
Eff	Effective	SMV	Slow Moving Vehicle
FHCS	Flat Head Cap Screw	S/N	Serial Number
F-N-R	Forward-Neutral-Reverse	SPST	Single Pole/Single Throw
FOPS	Falling Object Protection System	S.T.	Self-Tapping
F/P	Fork Positioning	Std	Standard
Gr	Grade	Str	Straight
HHCS	Hex Head Cap Screw	Sw	Swivel
HHMS	Hex Head Machine Screw	Tach	Tachometer
HSBHCS	Hex Socket Button Head Cap Screw	Temp	Temperature
ID	Inside Diameter	Thd	Thread
LH	Left Hand	Thk	Thick
M	Metric	Typ	Typical
MIK	Maintenance Interval Kit	UNC	Unified Coarse
mm	Millimeter	UNF	Unified Fine
Nat Asp	Naturally Aspirated	Univ	Universal
Neg	Negative	Var	Variable
NSS	Not Sold Separately	V	Volt
NSVA	Non Serviceable Assembly	VPM	Vibrations Per Minute
OD	Outside Diameter	Wgt	Weight
Pos	Positive	w/	With
PSI	Pounds per Square Inch	w/o	Without
Q/A	Quick-Attach	Wp	Weatherproof

## ABBREVIATIONS STANDARD

AC	Courant alternatif	Ref	Référence
A/R	Comme requis	RH	Droite
ARC	Composant rénové autorisé	RHSS	Vis auto-taraudeuse à tête arrondie
Assy	Ensemble	ROPS	Dispositif de protection contre le retournement
BHCS	Vis à tête demi-ronde	RPM	Tours par minute
Cu Yd	Yard cubique	SAE	Society of Automotive Engineers
Cyl	Vérin	Sec	Section
DC	Courant continu	SFH	Tête conique à encoche
Dia	Diamètre	SHCS	Vis creuse à tête demi-ronde
Eff	Effectif	SMV	Véhicule lent
FHCS	Vis à tête plate	S/N	Numéro de série
F-N-R	Avant-Point mort-Arrière	SPST	Contacteur unipolaire
FOPS	Dispositif de protection contre la chute d'objets	S.T.	Auto-taraudeuse
F/P	Positionnement des fourches	Std	Standard
Gr	Classe	Str	Droit
HHCS	Vis à tête hex	Sw	Pivot
HHMS	Vis à six pans	Tach	Tachymètre
HSBHCS	Vis demi-ronde à six pans creuse	Temp	Température
ID	Diamètre intérieur	Thd	Filet
LH	Gauche	Thk	Epaisseur
M	Métrique	Typ	Typique
MIK	Kit de maintenance	UNC	Unifié gros
mm	Millimètre	UNF	Unifié fin
Nat Asp	Aspiré naturellement	Univ	Universel
Neg	Négatif	Var	Variable
NSS	Non vendu séparément	V	Volt
NSVA	Ensemble ne nécessitant pas d'entretien	VPM	Vibrations par minute
OD	Diamètre extérieur	Wgt	Poids
Pos	Positif	w/	Avec
PSI	Livres par pouce carré	w/o	Sans
Q/A	Fixation rapide	Wp	Etanche

# STANDARDABKÜRZUNGEN

AC	Wechselstrom	RH	Rechts
A/R	Nach Bedarf	RHSS	Rundkopf-Schneidschraube
ARC	Mit Genehmigung instandgesetztes Teil	ROPS	Überrollschutz
Assy	Baugruppe	RPM	Umdrehungen pro Minute
BHCS	Halbrundschrabe	SAE	Gesellschaft der Automobilingenieure (Society of Automotive Engineers)
Cu Yd	Kubikyard	Sec	Kapitel, Schnitt
Cyl	Zylinder	SFH	Schlitzschraube mit Zylinderkopf
DC	Gleichstrom	SHCS	Innensechskant-Kopfschraube
Dia	Durchmesser	SMV	Langsam fahrendes Fahrzeug
Eff	Effektiv	S/N	Seriennummer
FHCS	Senkkopfschraube	SPST	Einpoliger Schalter
F-N-R	Vorwärts-Leerlauf-Rückwärts	S.T.	Selbstschneidend
FOPS	Aufbau zum Schutz gegen herabfallende Gegenstände	Std	Standard
F/P	Gabelpositionierung	Str	Gerade
Gr	Klasse	Sw	Drehgelenk
HHCS	Sechskantschraube	Tach	Drehzahlmesser
HHMS	Sechskant-Maschinenschraube	Temp	Temperatur
HSBHCS	Innensechskant-Halbrundkopfschraube	Thd	Gewinde
ID	Innendurchmesser	Thk	Dick
LH	Links	Typ	Typisch
M	Metrisch	UNC	Grobgewinde
MIK	Wartungssatz	UNF	Feingewinde
mm	Millimeter	Univ	Universal
Nat Asp	Saug-Neg Negativ	Var	Variable
NSS	Nicht separat verkauft	V	Volt
NSVA	Nicht wartbare Baugruppe	VPM	Vibrationen pro Minute
OD	Außendurchmesser	Wgt	Gewicht
Pos	Positiv	w/	Mit
PSI	Pfund pro Quadratzoll	w/o	Ohne
Q/A	Schnellanbringung	Wp	Witterungsbeständig
Ref	Referenz		

## ABBREVIAZIONI STANDARD

AC	Corrente alternata	Ref	Riferimento
A/R	Secondo la necessità	RH	Destro
ARC	Componente a ricostruzione autorizzata	RHSS	Vite autofilettante a testa circolare
Assy	Gruppo	ROPS	Sistema di protezione contro il ribaltamento
BHCS	Vite con testa tonda stretta	RPM	Giri al minuto
Cu Yd	larda cubica	SAE	Society of Automotive Engineers
Cyl	Cilindro	Sec	Sezione
DC	Corrente diretta	SFH	Testa cilindrica a fessura
Dia	Diametro	SHCS	Vite ad esagono incassato
Eff	Effettivo	SMV	Veicolo lento
FHCS	Vite a testa piana	S/N	Numero di serie
F-N-R	Avanti-Folle-Retromarcia	SPST	Interruttore unipolare
FOPS	Sistema di protezione contro la caduta di oggetti	S.T.	Autofilettante
F/P	Posizionamento della forza	Std	Standard
Gr	Grado	Str	Diritto
HHCS	Vite a testa esagonale	Sw	Interruttore
HHMS	Vite a testa esagonale lavorata	Tach	Tachimetro
HSBHCS	Vite a testa esagonale incassata	Temp	Temperatura
ID	Diametro interno	Thd	Filettatura
LH	Sinistro	Thk	Grosso
M	Metrico	Typ	Tipico
MIK	Kit intervallo di manutenzione	UNC	Passo grosso
mm	Millimetro	UNF	Passo fine
Nat Asp	Aspirato naturalmente	Univ	Universale
Neg	Negativo	Var	Variabile
NSS	Non venduto separatamente	V	Volt
NSVA	Gruppo non riparabile	VPM	Vibrazioni al minuto
OD	Diametro esterno	Wgt	Peso
Pos	Positivo	w/	Con
PSI	Libbre per pollice quadrato	w/o	Senza
Q/A	Aggancio rapido	Wp	Resistente all'acqua

# ABREVIATURAS ESTÁNDAR

AC	Corriente alterna	Ref	Número de orden
A/R	Según sea necesario	RH	Derecha
ARC	Componente reelaborado autorizado	RHSS	Tornillo autorroscante cabeza redonda
Assy	Conjunto	ROPS	Sist. protección contra vuelcos
BHCS	Tornillo de cabeza de botón	RPM	Revoluciones por minuto
Cu Yd	Yarda cúbica	SAE	Society of Automotive Engineers
Cyl	Cilindro	Sec	Sección
DC	Corriente continua	SFH	Cabeza con ranura de encaje
Dia	Diámetro	SHCS	Tornillo con cabeza de tubo
Eff	Efectivo	SMV	Vehículo lento
FHCS	Tornillo de cabeza plana	S/N	Número de serie
F-N-R	Adelante-Punto muerto-Atrás	SPST	Unipolar y univanal (un contacto)
FOPS	Sist. protección contra caída de objetos	S.T.	Autorroscante
F/P	Posicionamiento de las horquillas	Std	Estándar
Gr	Nivelar	Str	Recto
HHCS	Tornillo de cabeza hexagonal	Sw	Basculante
HHMS	Tornillo de cabeza hexagonal maqui- nada	Tach	Tacómetro
HSBHCS	Tornillo de cabeza botón hexagonal	Temp	Temperatura
ID	Diámetro interior	Thd	Rosca
LH	Izquierda	Thk	Grueso
M	Métrico	Typ	Típico
MIK	Conjunto de intervalo de mantenimiento	UNC	Paso ancho unificado
mm	Milímetro	UNF	Paso fino unificado
Nat Asp	Aspirado	Univ	Universal
Neg	Negativo	Var	Variable
NSS	No se vende por separado	V	Voltios
NSVA	Conjunto no reparable	VPM	Vibraciones por minuto
OD	Diámetro exterior	Wgt	Peso
Pos	Positivo	w/	Con
PSI	Libras por pulgada cuadrada	w/o	Sin
Q/A	Quick-Attach (enganche rápido)	Wp	Impermeable

# STANDAARD AFKORTINGEN

AC	Wisselstroom	Ref	Referentie
A/R	Zoals vereist	RH	Rechts
ARC	Toegelaten ruilcomponent	RHSS	Bolkop parkerschroef
Assy	Samenstel	ROPS	Roll-over beschermingsysteem
BHCS	(Plat)bolkop kopschroef	TPM	Toeren per minuut
Cu Yd	Kubieke yard	SAE	Society of Automotive Engineers (Vereniging van autotechnische ingenieurs)
Cyl	Cilinder		
DC	Gelijkstroom	Sec	Sectie
Dia	Diameter	SFH	Sleufcilinderkop
Eff	Effectief	SHCS	Inbuskop kopschroef
FHCS	Platkop kopschroef	SMV	Traag bewegend voertuig
F-N-R	Vooruit -Vrijstand-Achteruit	S/N	Serienummer
FOPS	Beschermingsysteem tegen vallende objecten	SPST	Enkelpolig/enkele wikkelspoed
F/P	Vorkpositionering	S.T.	Zelftappend
Gr	Graad	Std	Standaard
HHCS	Zeskantkop kopschroef	Str	Recht
HHMS	Zeskantkop kolomschroef	Sw	Wartel
HSBHCS	Platbolkop kopschroef met verzonken zeskant	Tach	Snelheidsmeter
ID	Binnendiameter	Temp	Temperatuur
LH	Links	Thd	Schroefdraad
M	Metrisch	Thk	Dik
MIK	Onderhoudsintervalkit	Typ	Karakteristiek
mm	Millimeter	UNC	Grove schroefdraad
Nat Asp	Natuurlijke aanzuiging	UNF	Fijne schroefdraad
Neg	Negatief	Univ	Universeel
NSS	Niet afzonderlijk verkocht	Var	Variabele
NSVA	Niet onderhoudbaar samenstel	V	Volt
OD	Buitendiameter	VPM	Trillingen per minuut
Pos	Positief	Wgt	Gewicht
PSI	Pond per vierkante inch	w/	Met
Q/A	Snelbevestiging	w/o	Zonder
		Wp	Weerbestendig

# CONTENTS

## 0 Recommended Service Parts

00-01-01 Recommended Service Parts - 0 - 1000 Operating Hours	3
00-01-02 Recommended Service Parts - 1000 - 3000 Operating Hours	5
00-01-03 Recommended Service Parts - 3000 < Operating Hours	7

## 1 Vibration Plate And Water Tank

01-01-01 Vibration Plate, Guard Frame And Water Tank Installation	9
---	---

## 2 Engine And Vibration Unitrollover Cage

02-01-01 Engine, Handle And Clutch Installation	13
02-01-02 Vibration Unit Assembly	17

## 3 Carrying Cart, Tools And Decals

03-01-01 Carrying Cart Assembly And Tool Kit	19
03-01-02 Decals	21

## 4 Engine Internal Breakdown: BX-60WH

04-01-01 Cylinder Head - BX-60WH	23
04-01-02 Engine Block - BX-60WH	25
04-01-03 Crankcase Cover - BX-60WH	27
04-01-04 Flywheel - BX-60WH	29
04-01-05 Ignition - BX-60WH	31
04-01-06 Crankshaft - BX-60WH	33
04-01-08 Piston - BX-60WH	35
04-01-09 Camshaft/Valves - BX-60WH	37
04-01-10 Side Cover - BX-60WH	39
04-01-11 Starter - BX-60WH	41
04-01-12 Control Assembly - BX-60WH	43
04-01-13 Carburetor - BX-60WH	45
04-01-14 Air Cleaner - BX-60WH	49
04-01-15 Muffler - BX-60WH	51
04-01-16 Fuel Tank - BX-60WH	53

## 5 Engine Internal Breakdown: BX-80WH / BX-120WH

05-01-01 Cylinder Head - BX-80WH / BX-120WH	55
05-01-02 Engine Block - BX-80WH / BX-120WH	57
05-01-03 Crankcase Cover - BX-80WH / BX-120WH	59
05-01-04 Flywheel - BX-80WH / BX-120WH	61
05-01-05 Ignition - BX-80WH / BX-120WH	63
05-01-06 Crankshaft - BX-80WH / BX-120WH	65
05-01-07 Piston - BX-80WH / BX-120WH	67
05-01-08 Camshaft/Valves - BX-80WH / BX-120WH	69
05-01-09 Side Cover - BX-80WH / BX-120WH	71
05-01-10 Starter - BX-80WH / BX-120WH	73
05-01-11 Control Assembly - BX-80WH / BX-120WH	75
05-01-12 Carburetor - BX-80WH / BX-120WH	77
05-01-13 Air Cleaner - BX-80WH / BX-120WH	79
05-01-14 Muffler - BX-80WH / BX-120WH	81

05-01-15 Fuel Tank - BX-80WH / BX-120WH .....83

**Plate Compactors BX-60WH - BX-80WH - BX-120WH**

**Recommended Service Parts**  
0 - 1000 Operating Hours

**Recommended  
Service Parts**  
0-1000 Operating Hours

PC000000



**Recommended Service Parts**  
1000 - 3000 Operating Hours

**Recommended  
Service Parts**  
1000-3000 Operating Hours




**Recommended Service Parts**  
3000 < Operating Hours

**Recommended  
Service Parts**  
3000 < Operating Hours



# Vibration Plate, Guard Frame And Water Tank Installation

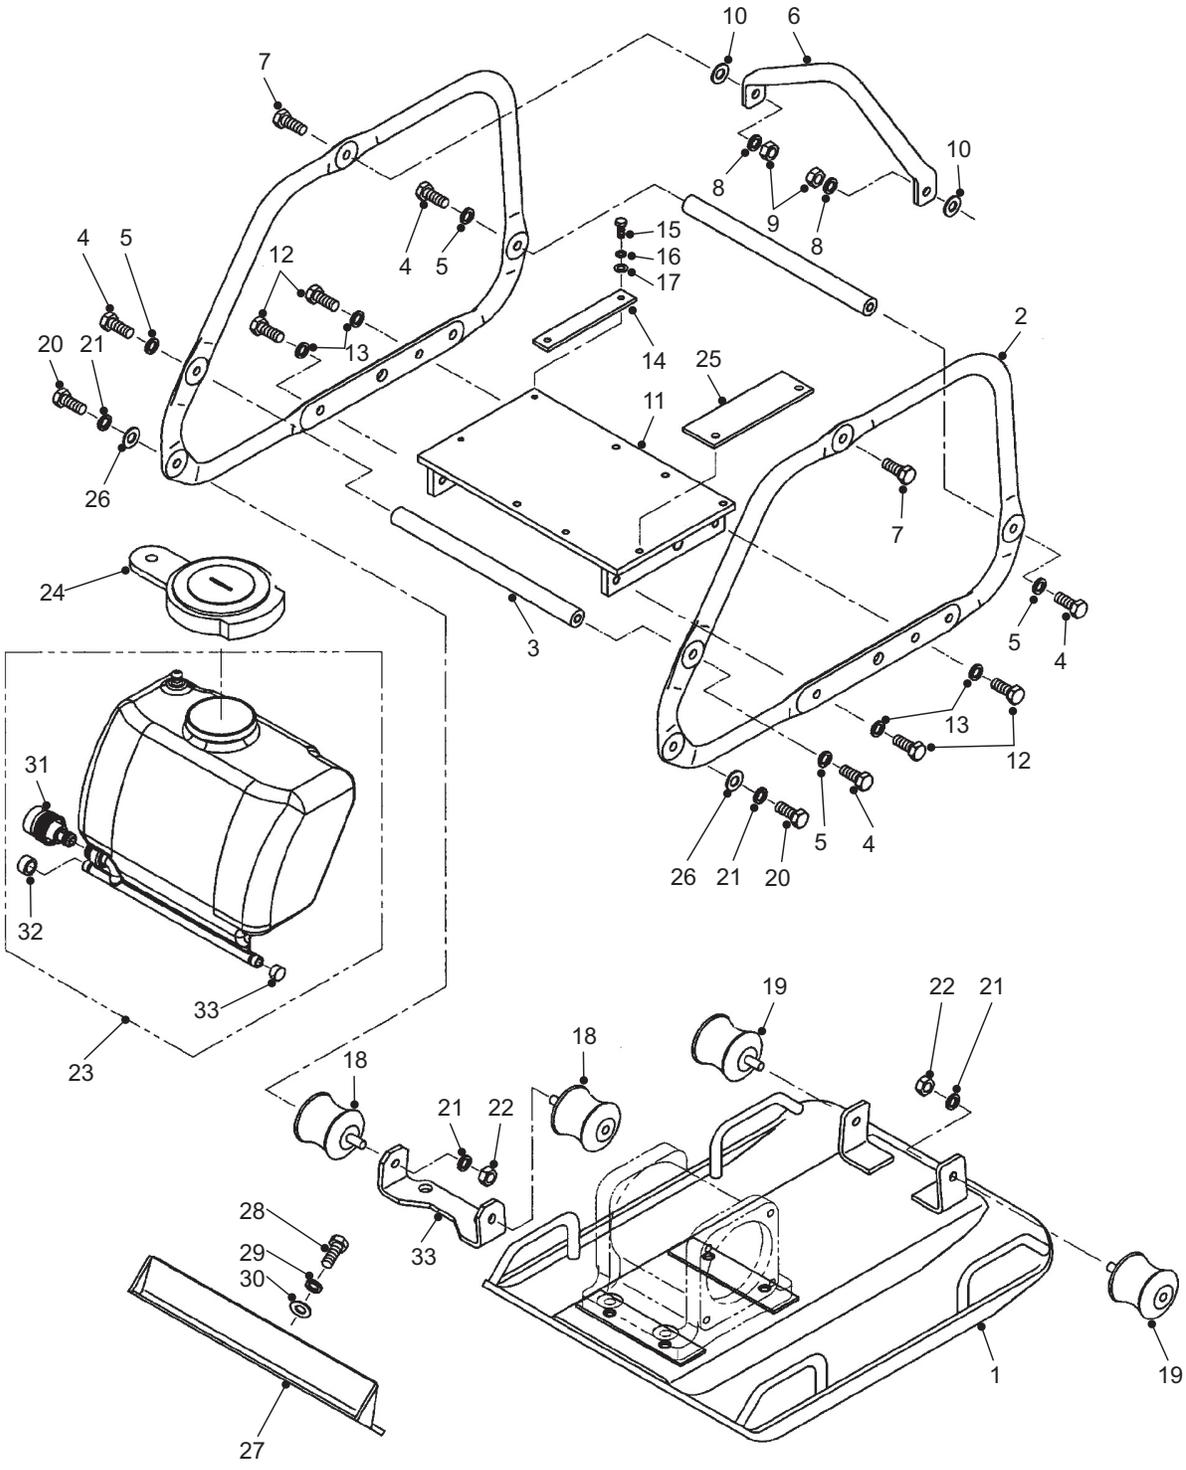

PC000001


# Vibration Plate, Guard Frame And Water Tank Installation

Section  
01-01-01

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	13202130	Vibration Plate (BX-60WH)			1
	13202148	Vibration Plate (BX-80WH)			1
	13202155	Vibration Plate (BX-120WH)			1
2	22194815	Guard Frame			2
3	22194823	Connection (A) (BX-60WH)			2
	22195192	Connection (A) (BX-80WH, BX-120WH)			2
4	59832287	Bolt			4
5	59951632	Spring Washer			4
6	22194831	Connection (B) (BX-60WH)			1
	22195200	Connection (B) (BX-80WH, 120WH)			1
7	59832287	Bolt			2
8	59951632	Spring Washer			2
9	58835943	Nut			2
10	59237289	Washer			2
11	22194849	Engine Bed (BX-60WH)			1
	22195218	Engine Bed (BX-80WH, BX-120WH)			1
12	59952242	Bolt			4
13	59951632	Spring Washer			4
14	22194856	Spacer (A)			1
15	54676465	Bolt			2
16	59954131	Spring Washer			2
17	59832188	Washer			2
18	22194864	Rubber Buffer (A)			2
19	22194872	Rubber Buffer (B)			2
20	59952242	Bolt			4
21	59951632	Spring Washer			8
22	58835943	Nut			4
23	22194880	Water Tank Assembly (BX-60WH)			1
	22195226	Water Tank Assembly (BX-80WH, 120WH)			1
24	54674320	Water Tank Cap			1
25	13201132	Spacer (B)			1

# Vibration Plate, Guard Frame And Water Tank Installation


Recurrence of previous drawing

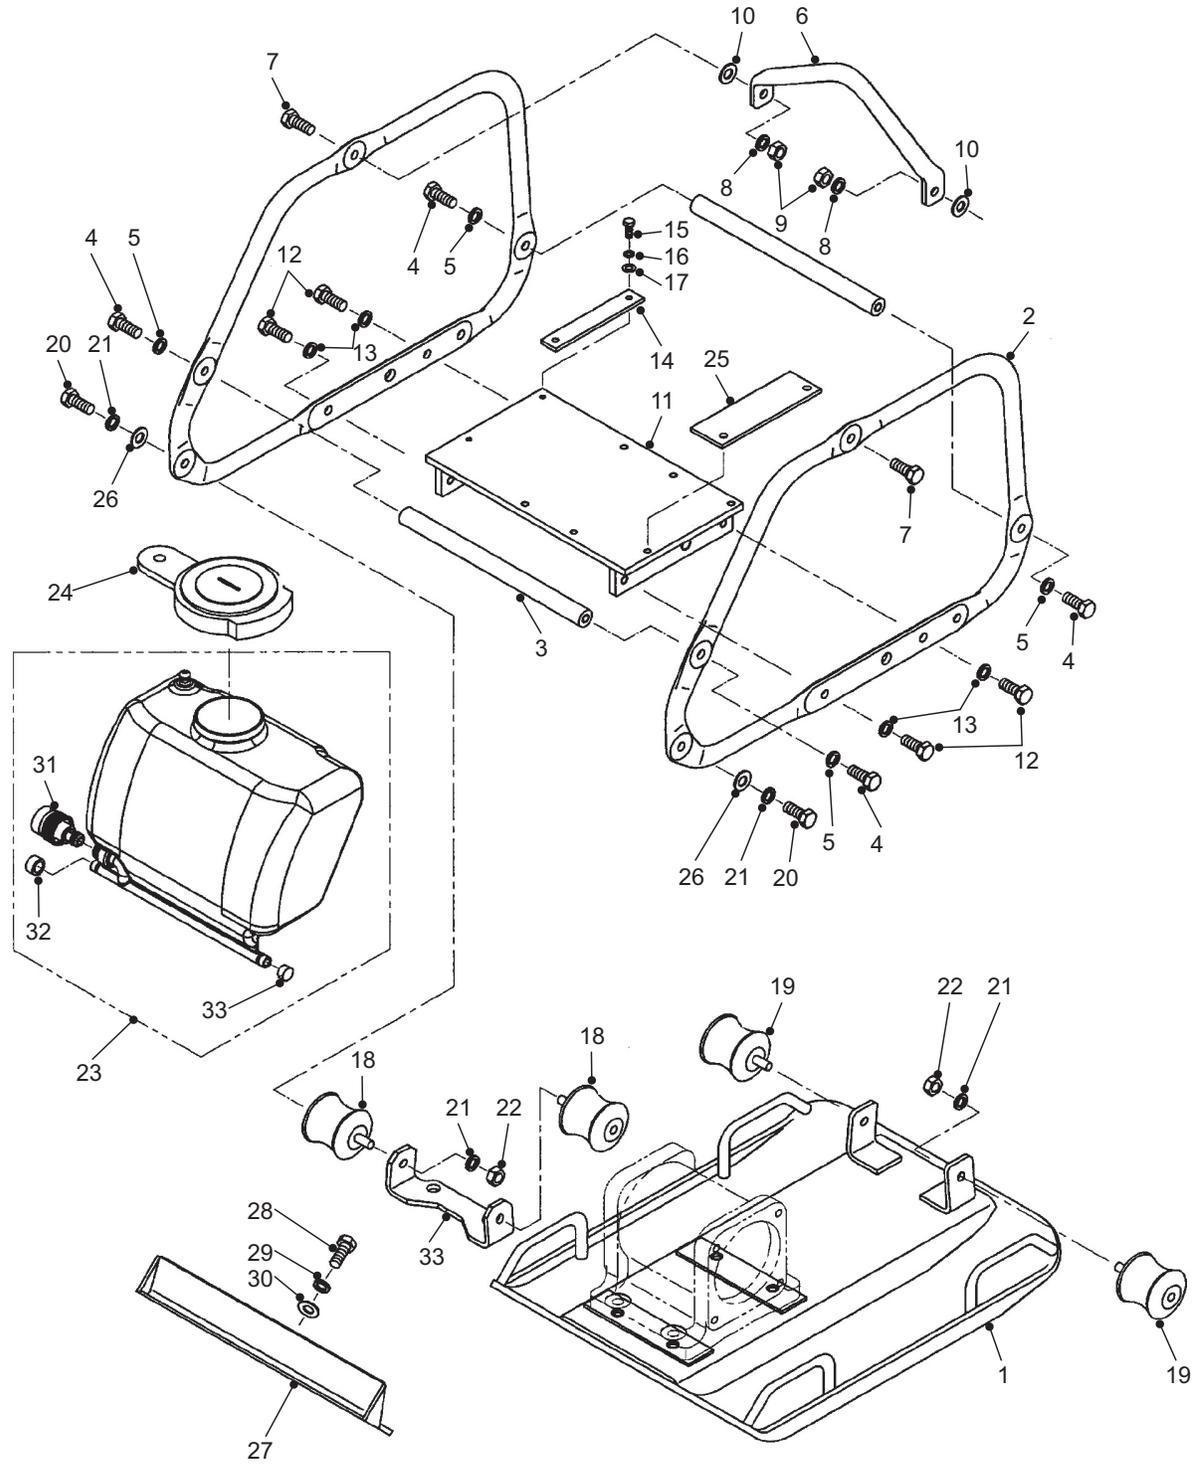

PC000001



# Engine, Handle And Clutch Installation

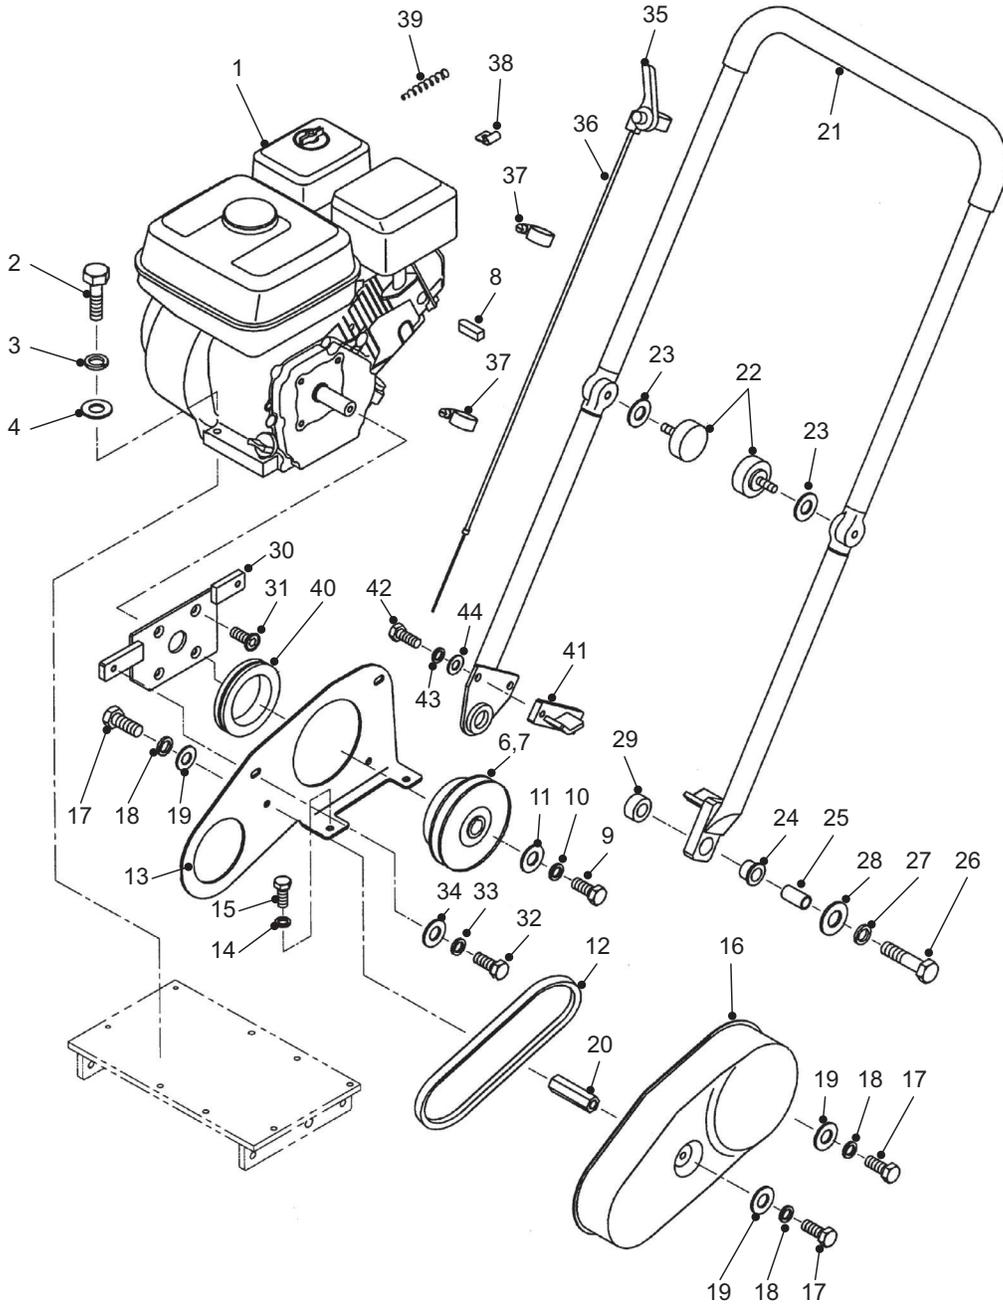

PC000002


# Engine, Handle And Clutch Installation

Section  
02-01-01

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	58836438	Engine Assembly (BX-60WH°			1
	58836446	Engine Assembly			1
2	59952382	Bolt			4
3	59831925	Spring Washer			8
4	59835371	Washer			4
6	22194906	Clutch Assembly (BX-60WH)			1
	22195234	Clutch Assembly (BX-80WH, BX-120WH)			1
7	22194914	Clutch Shoe Assembly (BX-60WH)			1
	22195242	Clutch Shoe Assembly (BX-80WH, 120WH)			1
8	59831032	Key			1
9	59952325	Bolt			1
10	59831925	Spring Washer			1
11	13202304	Washer			1
12	22194922	V-belt (BX-60H/WH)			1
	22195259	V-belt (BX-80H/WH, BX-120H/WH)			1
13	22194930	Inside Cover			1
14	59831925	Spring Washer			2
15	59832535	Bolt			2
16	22194948	Pully Cover			1
17	59832535	Bolt			3
18	59831925	Spring Washer			3
19	22069843	Washer			3
20	13201140	Long Nut			1
21	13202189	Operation Handle (BX-60WH)			1
	13202197	Operating Handle (BX-80WH, BX-120WH)			1
22	59188490	Handle Bolt			2
23	59841106	Washer			2
24	22194971	Bushing			2
25	22194989	Coller (A)			2
26	22194997	Bolt			2
27	59832618	Spring Washer			2

# Engine, Handle And Clutch Installation


Recurrence of previous drawing

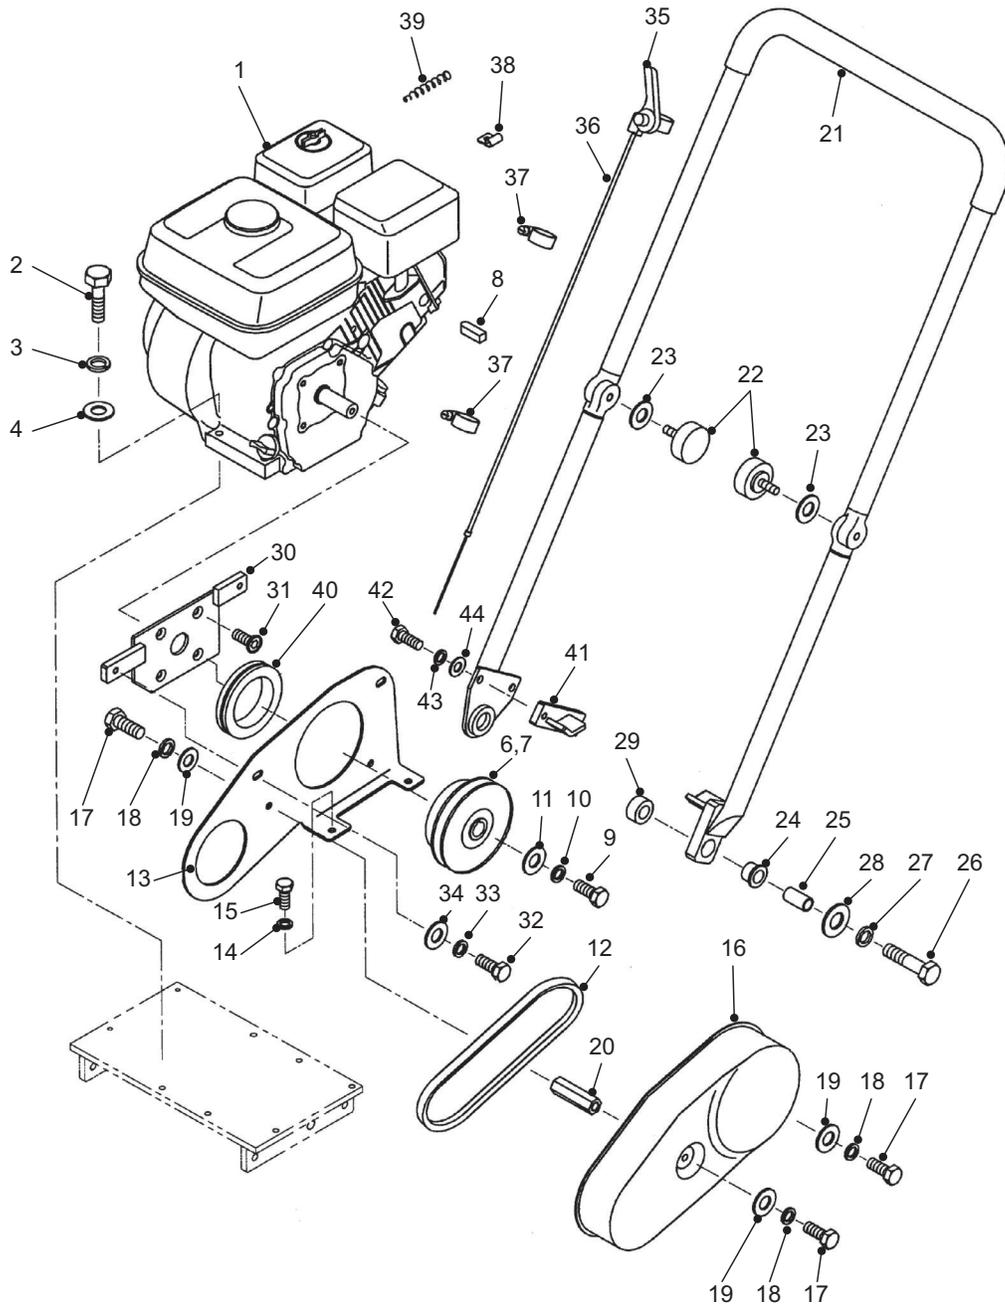

PC000002



# Vibration Unit Assembly

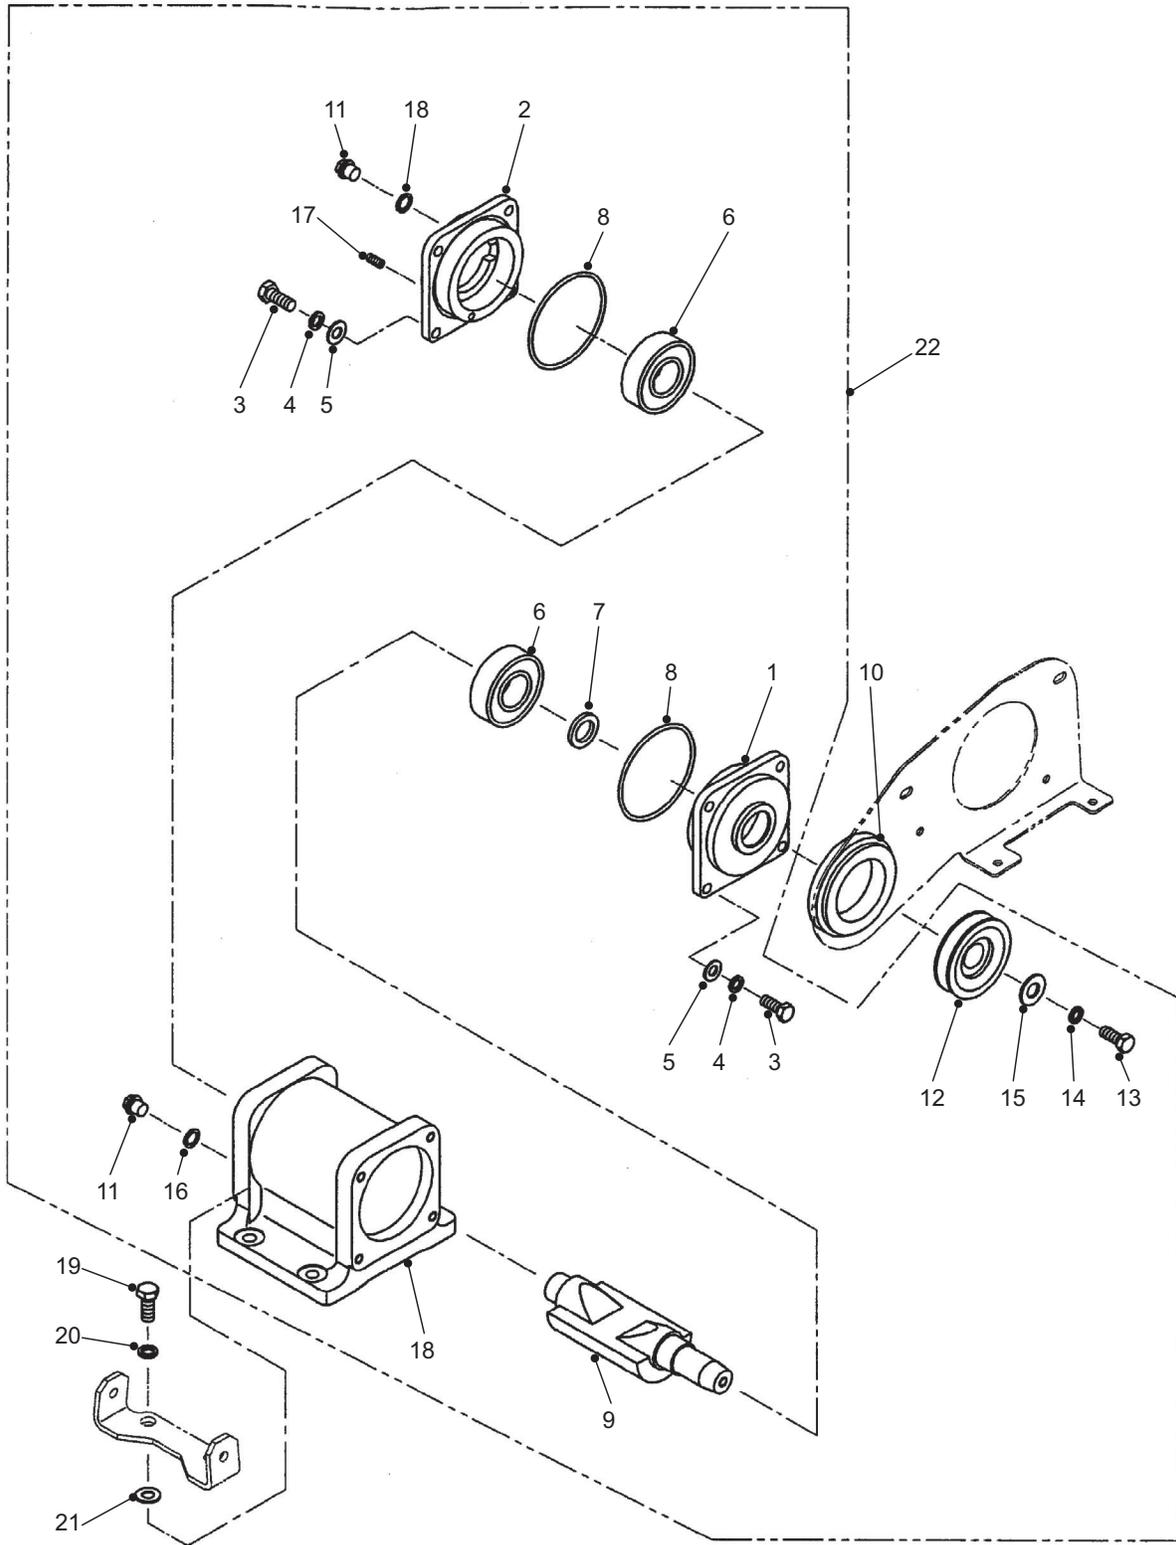



PC000003

# Vibration Unit Assembly

**Section  
02-01-02**




Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	22195051	Bearing Case (A)			1
2	22195069	Bearing Case (B)			1
3	59832287	Bolt			8
4	59951632	Spring Washer			8
5	59831842	Washer			8
6	59831149	Ball Bearing (BX-60WH)			2
	13201173	Roller Bearing (BX-80/BX-120WH)			2
7	59831156	Oil Seal			1
8	22195077	O-ring			2
9	22195085	Eccentric Shaft (BX-60WH)			1
	22195275	Eccentric Shaft (BX-80WH)			1
	22195366	Eccentric Shaft (BX-120WH)			1
10	22195093	Rubber Cover			1
11	59831123	Plug			1
12	58837709	Pulley			1
13	59952242	Bolt			1
14	59831800	Lock Washer			1
15	59236182	Washer			1
16	59831131	Packing			1
17	22195101	Plug			1
18	13202163	Shaft Case (BX-60WH)			1
	13202171	Shaft Case (BX-80WH, BX-120WH)			1
19	13202296	Bolt	BX-60WH		4
	13202296	Bolt	BX-80WH, BX-120WH		6
20	59832618	Spring Washer	BX-60WH		4
	59832618	Spring Washer	BX-80WH, BX-120WH		6
21	58837717	Washer	BX-60WH		4
	58837717	Washer	BX-80WH, BX-120WH		6
22	13202262	Vibration Unit Assy (BX-60WH)			1
	13202270	Vibration Unit Assy (BX-80WH)			1
	13202288	Vibration Unit Assy (BX-120WH)			1

# Carrying Cart Assembly And Tool Kit

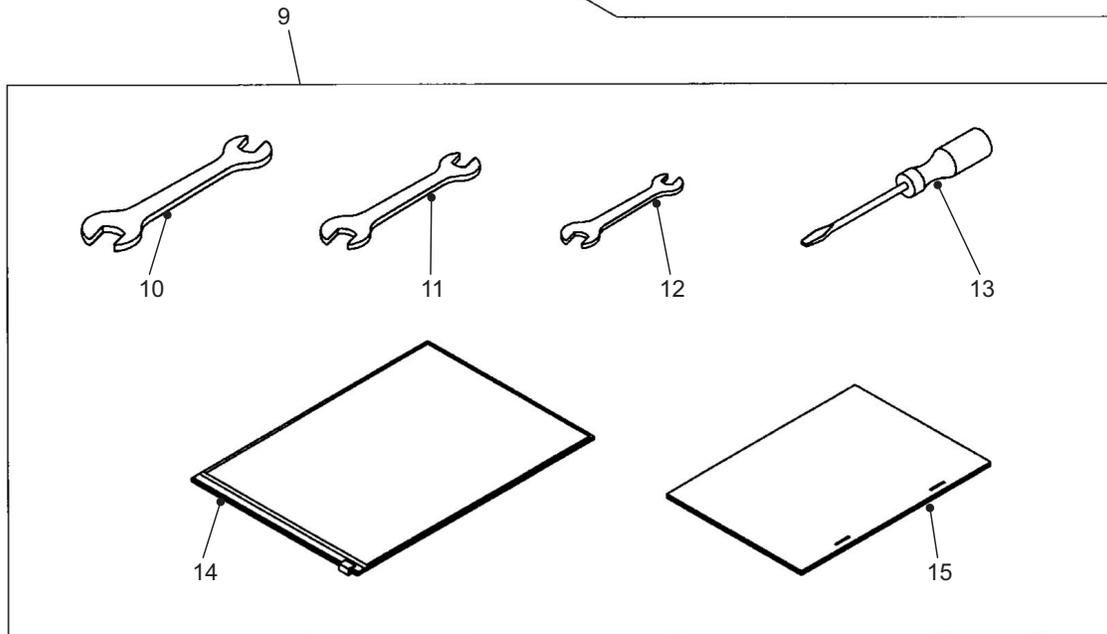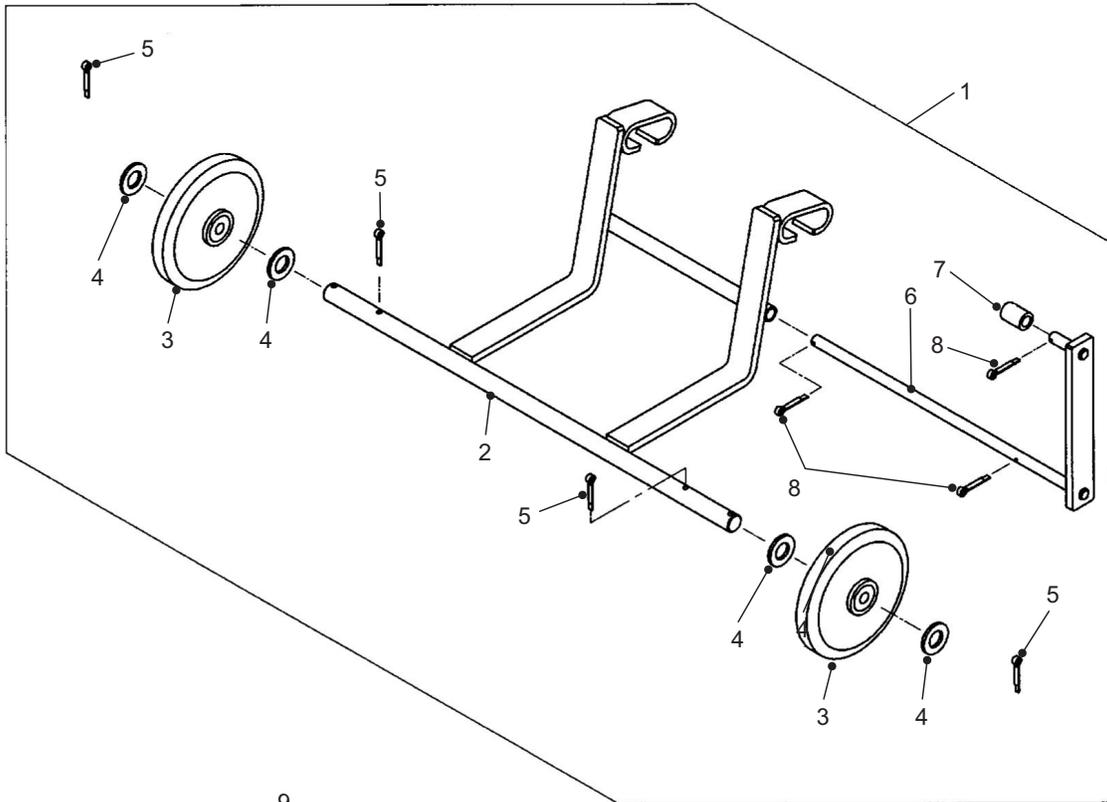

PC000004




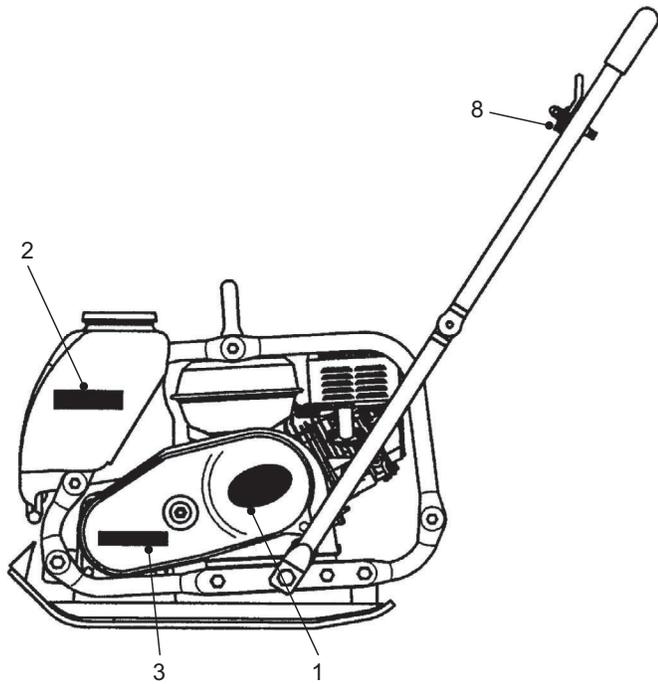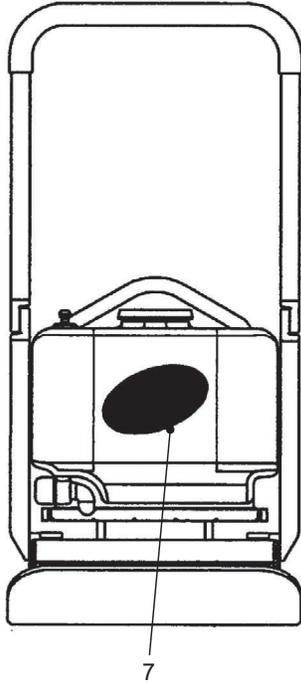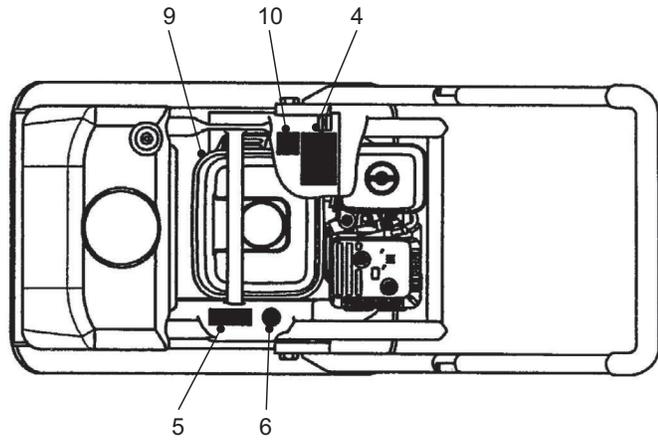

PC000005




# Cylinder Head BX-60WH

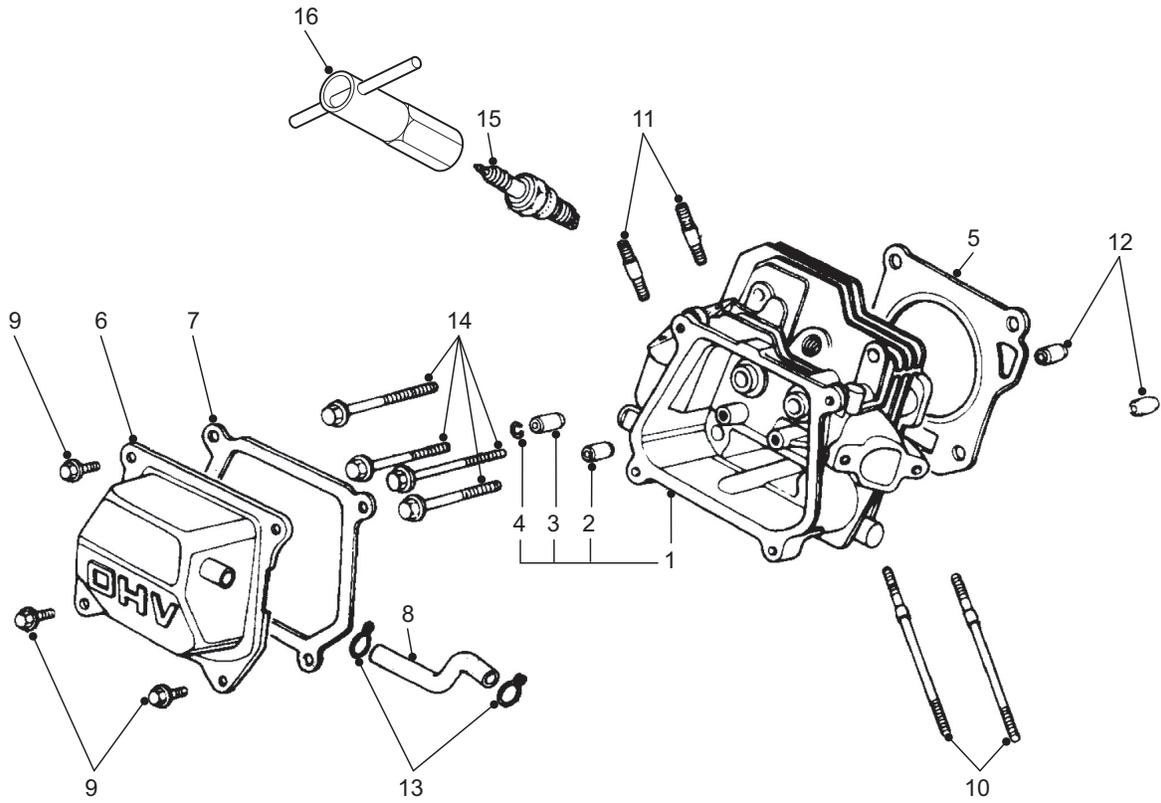

PC000006




# Engine Block BX-60WH

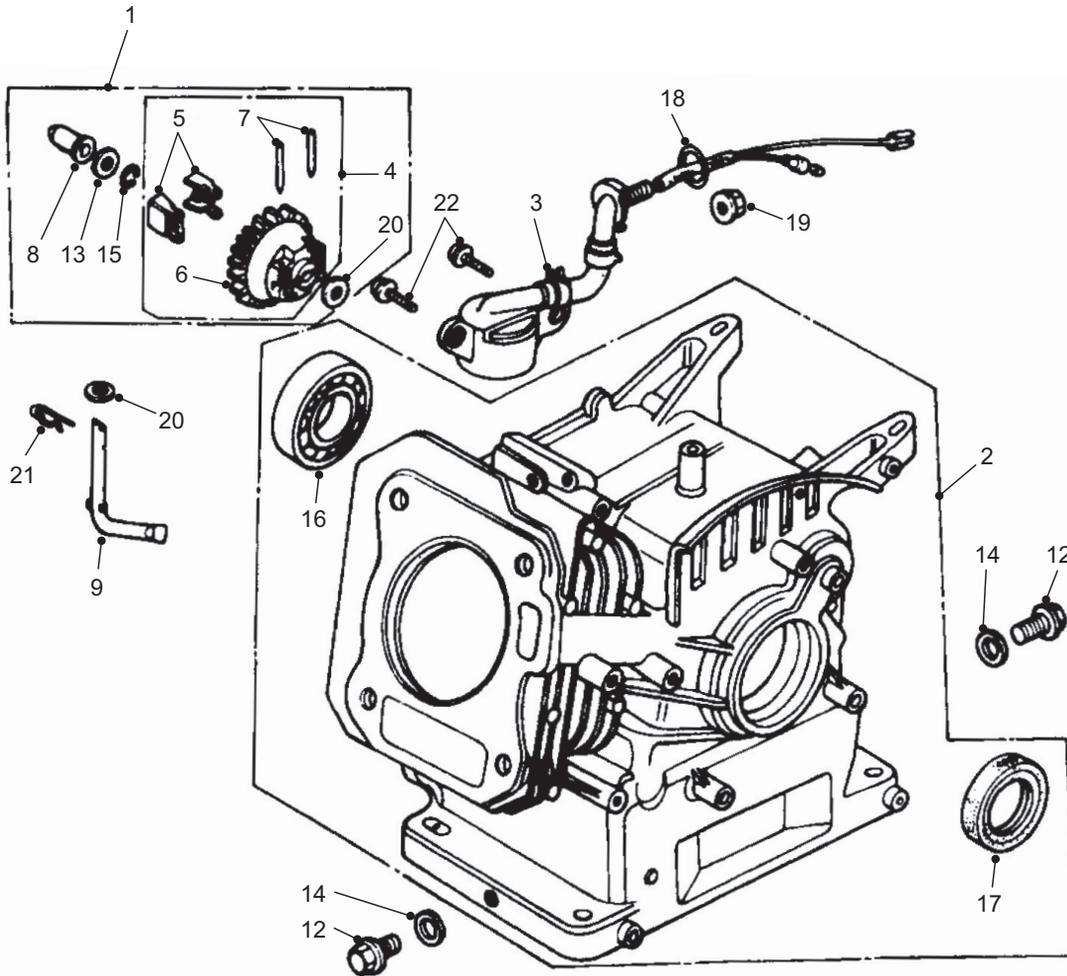

PC000007




# Crankcase Cover BX-60WH

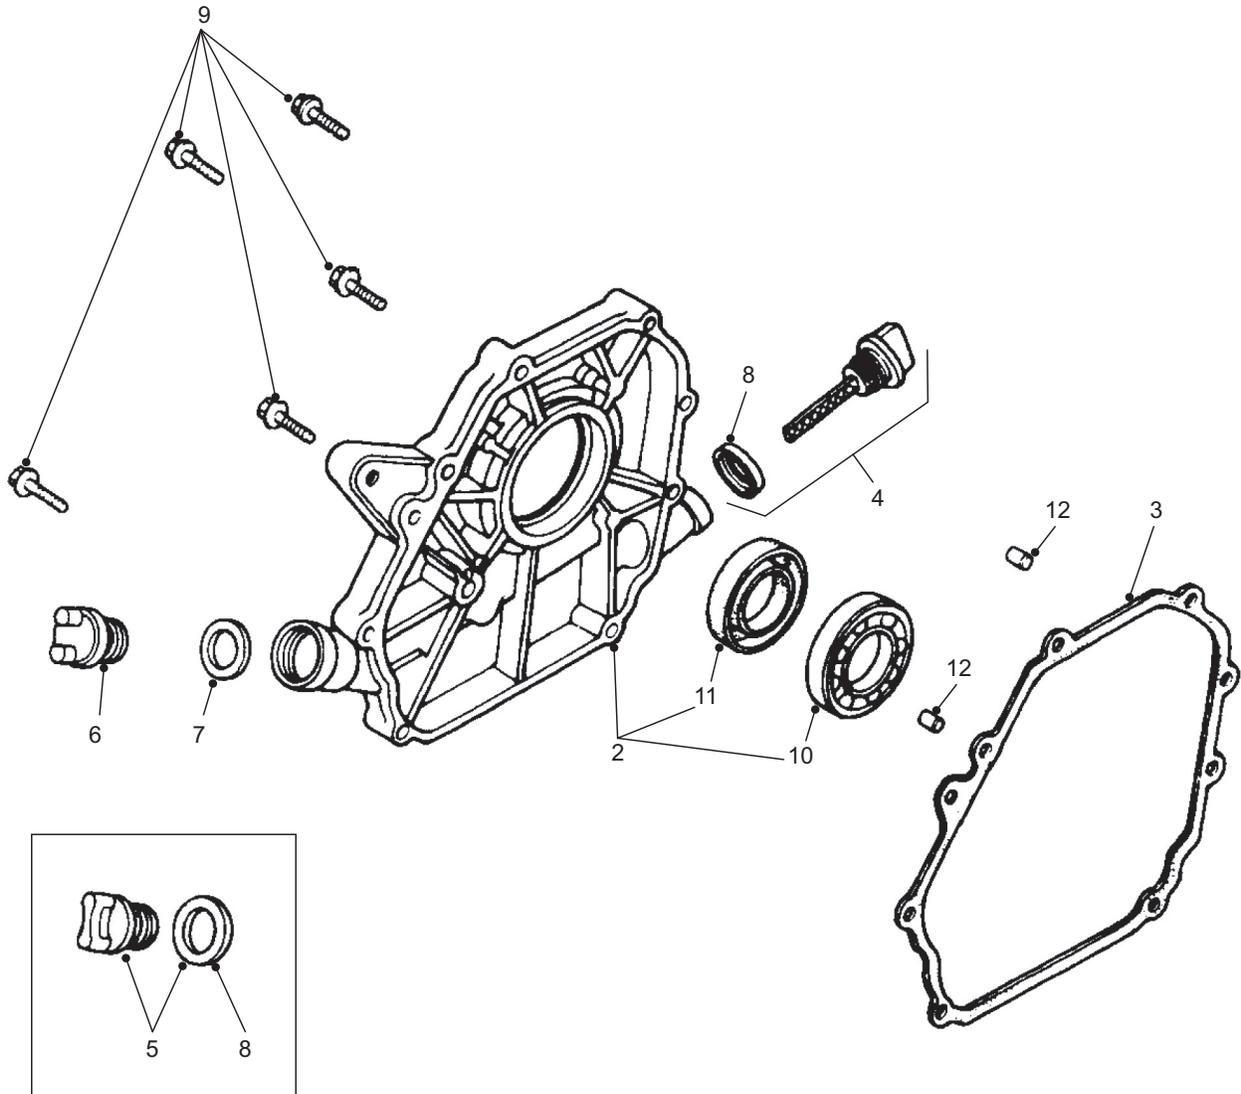

PC000008




# Flywheel BX-60WH

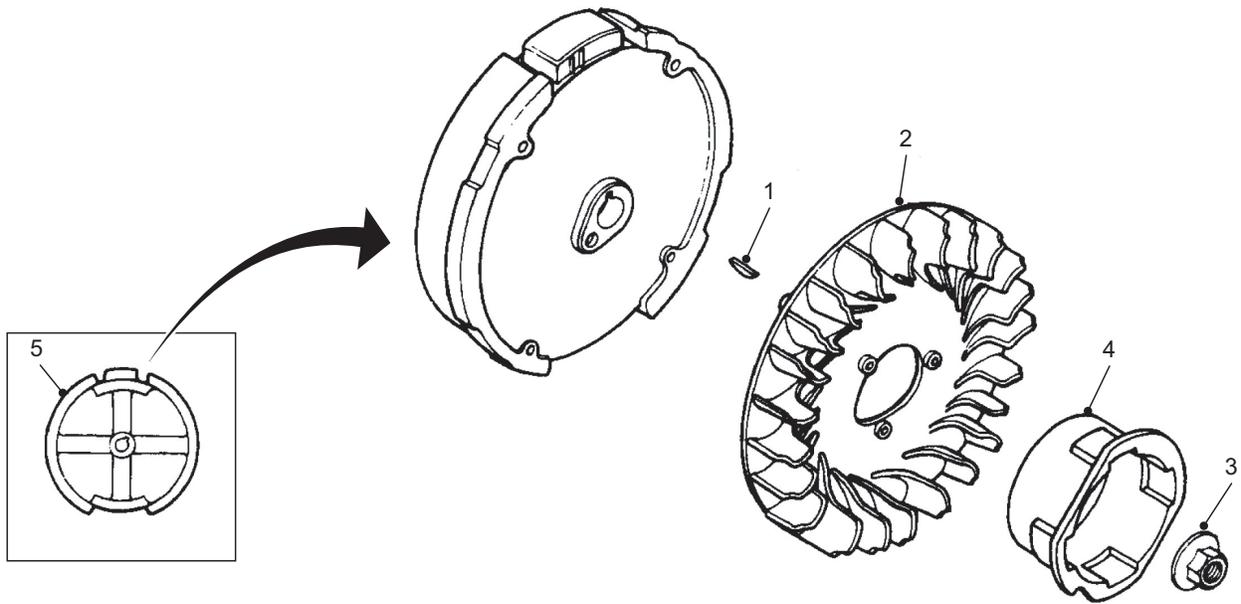

PC000009




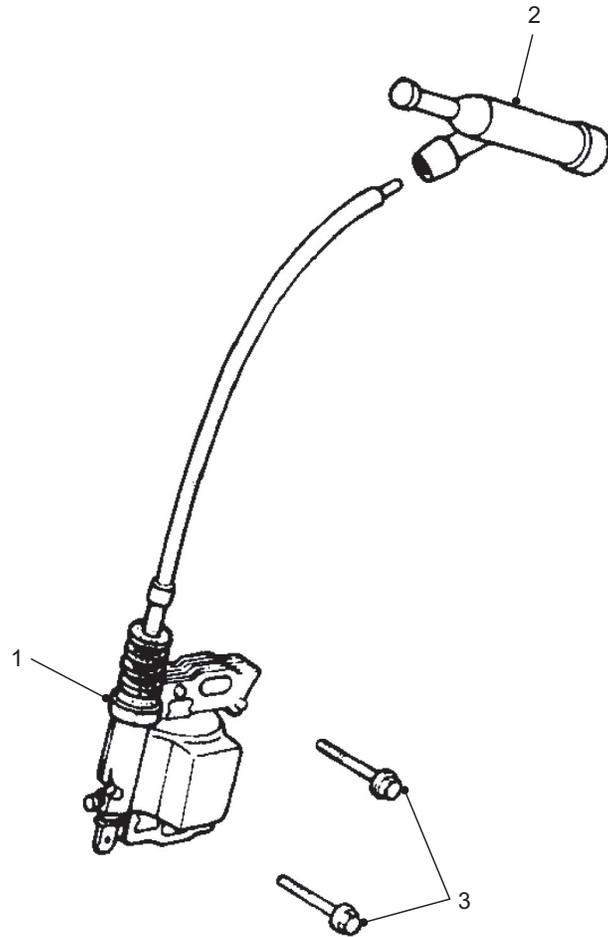

PC000010




# Crankshaft BX-60WH

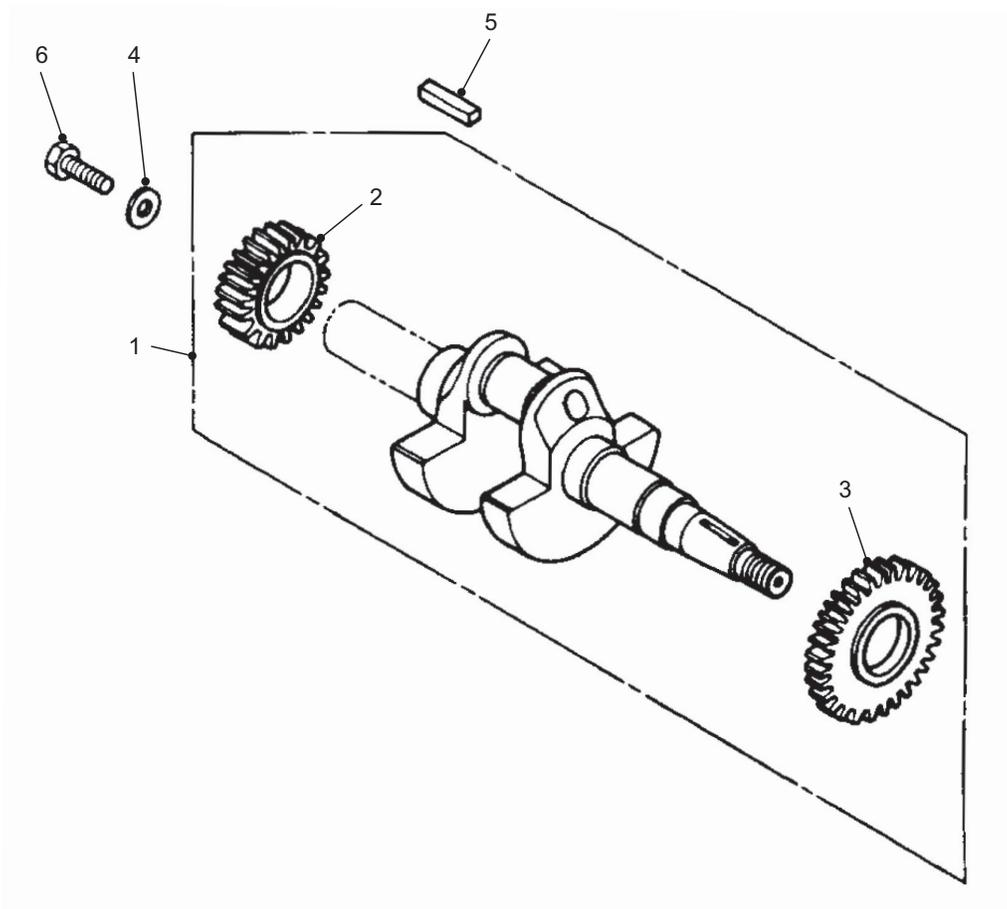

PC000011




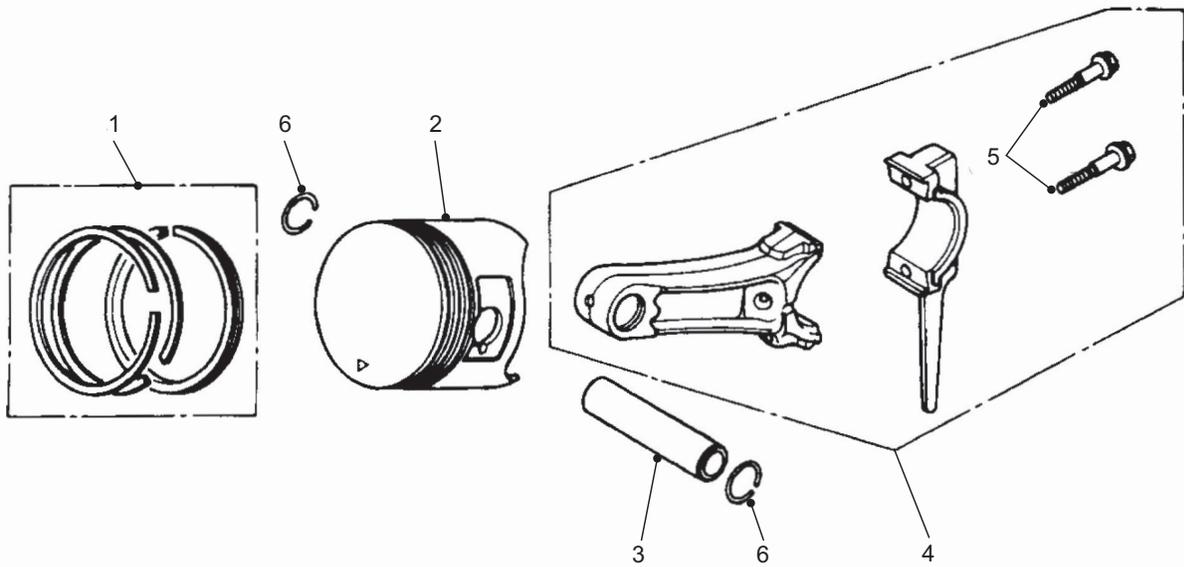

PC000012




# Camshaft/Valves BX-60WH

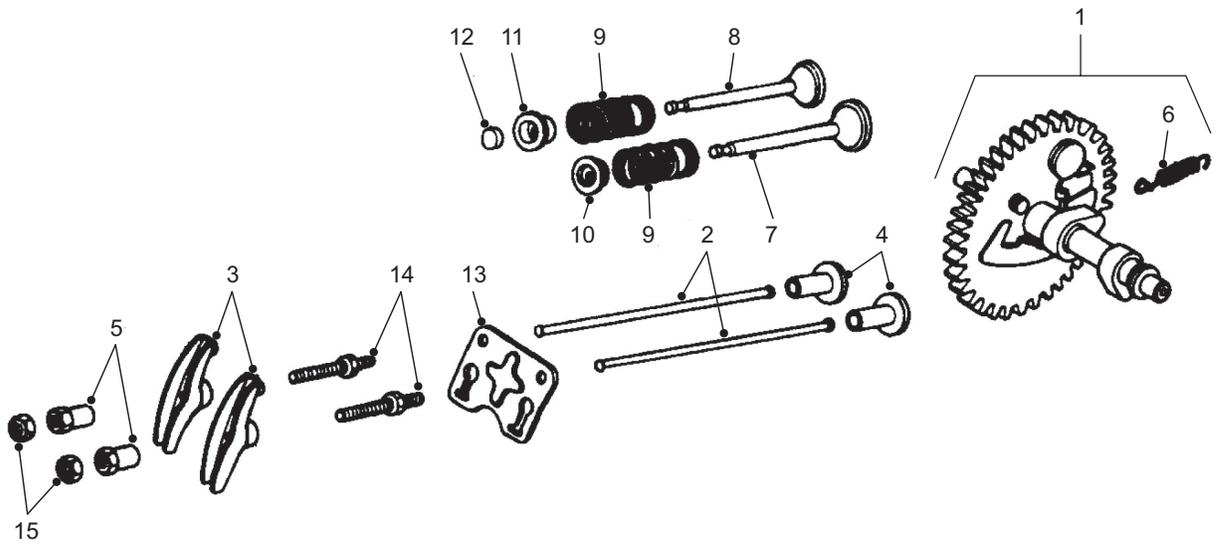

PC000013




# Side Cover BX-60WH

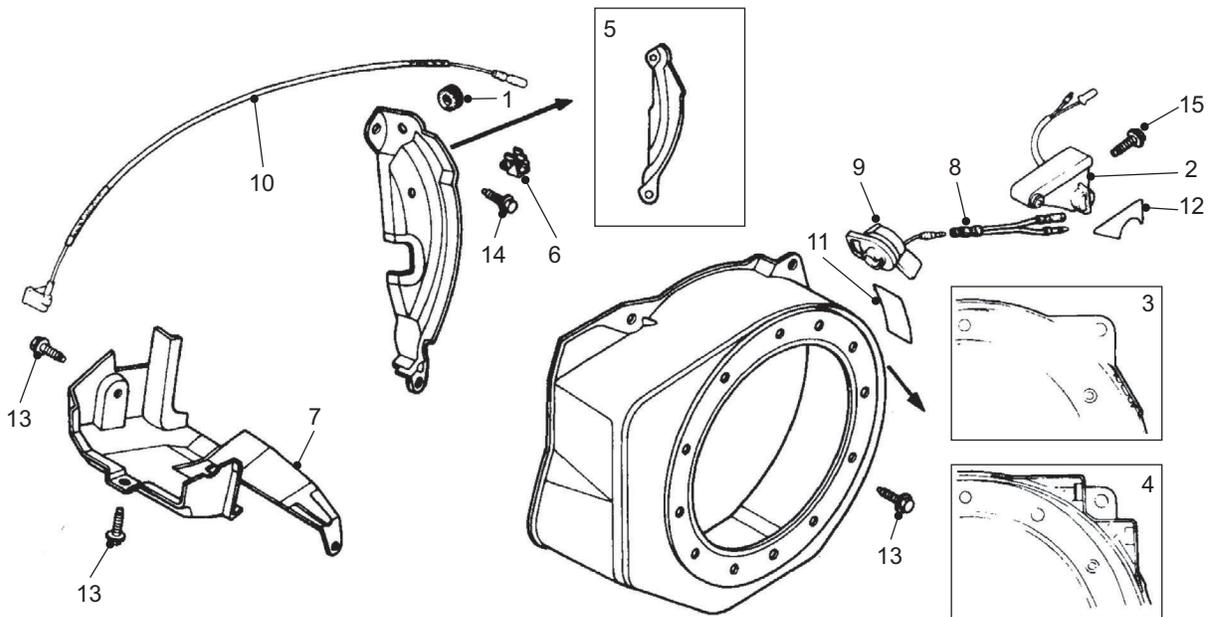

PC000014




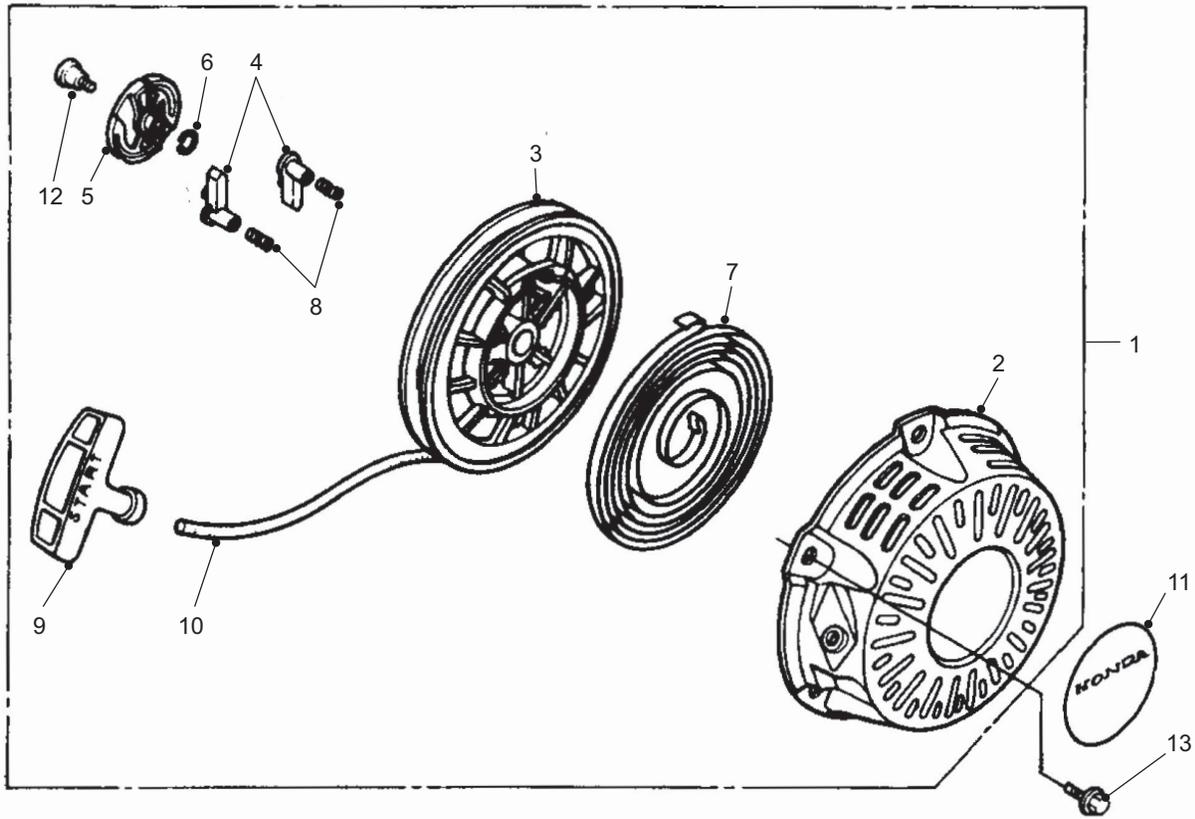

PC000015




# Control Assembly BX-60WH

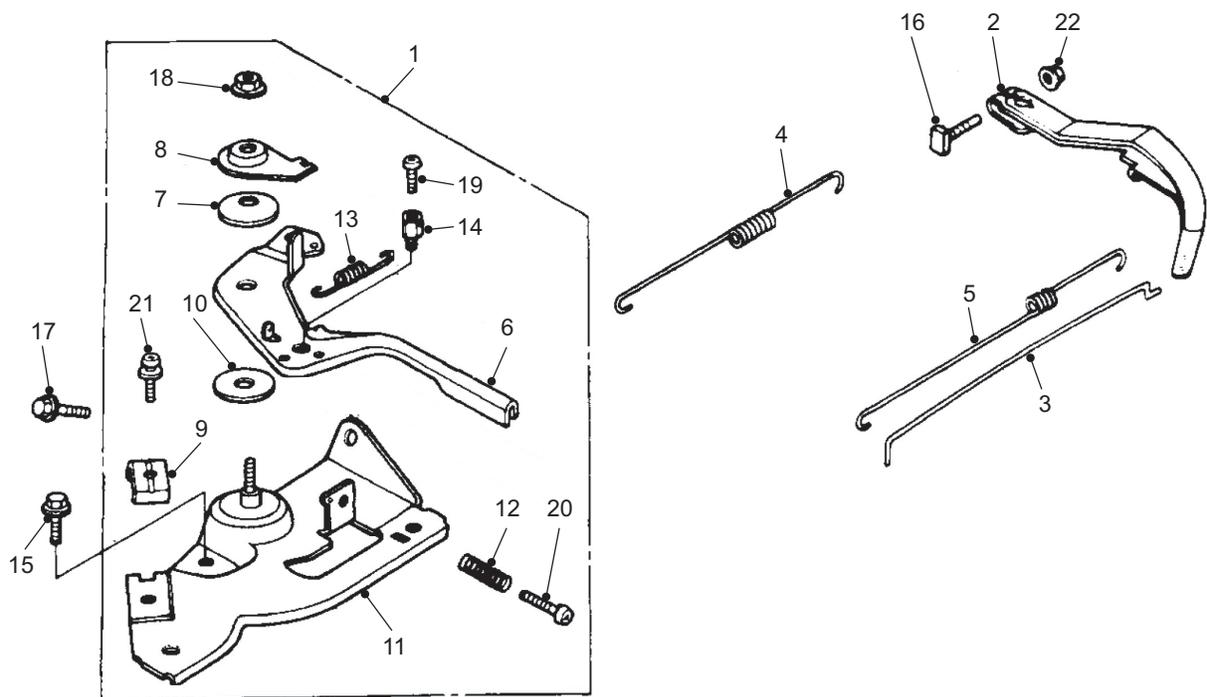

PC000016



# Carburetor BX-60WH

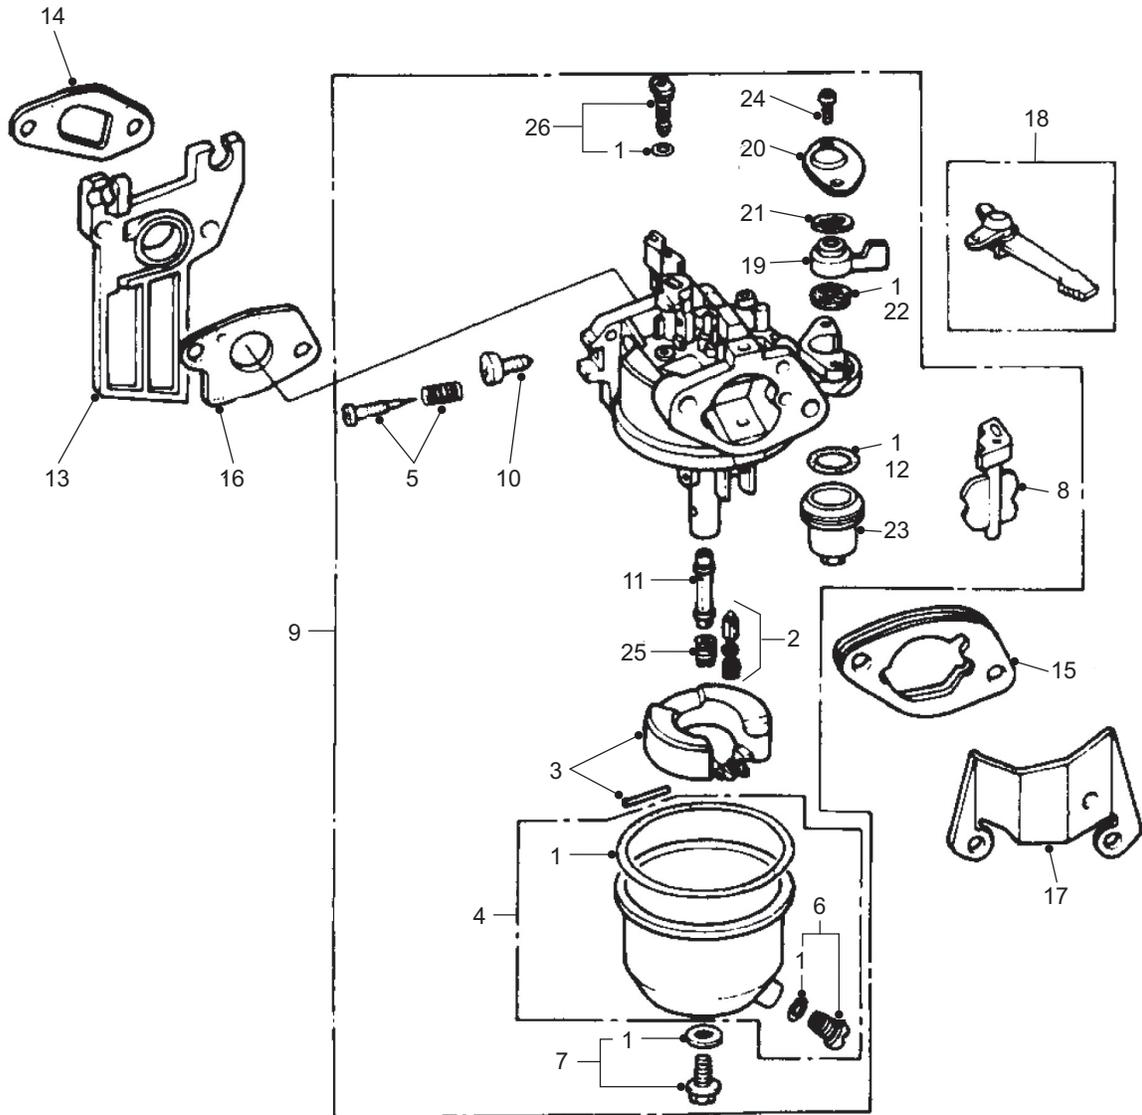

PC000017


## Carburetor BX-60WH

Section  
04-01-13

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	54475108	Gasket Set			1
2	59244186	Float Valve Set			1
3	13221239	Float Set			1
4	13221247	Float Chamber Set	Includes Ref. 6		1
5	59244210	Pilot Screw Set			1
6	59244228	Drain Screw Set	Includes gasket		1
7	59244236	Screw Set	Includes gasket		1
8	59244244	Choke Set			1
9	13221262	Carburetor Assembly	Until Engine S/N 2354881 Includes Ref. 2 - 5 + 7 + 8 + 10 - 12 + 19 - 26		1
	13221254	Carburetor Assembly	From Engine S/N 2354881 Includes Ref. 2 - 5 + 7 + 8 + 10 - 12 + 19 - 26		1
10	54475140	Throttle Stop Screw			1
11	13221288	Main Nozzle	Until Engine S/N BE12A		1
	13221270	Main Nozzel	From Engine S/N BE12A		1
12	54475181	Fuel Strainer Cup Packing			1
13	59244269	Carburetor Insulator			1
14	54475207	Packing	Until Engine S/N 2272435		1
	54475215	Packing	From Engine S/N 2272435		1
15	59244285	Carburetor Spacer			1
16	54475223	Packing	Until Engine S/N 2272435		1
	54475249	Packing	From Engine S/N 2272435		1
17	13221296	Choke Control Stay			1
	54475264	Choke Control Stay	From Engine S/N 2377548		1
18	59244301	Choke Lever Complete			1
19	54475280	Cock Lever			1
20	54475330	Lever Setting Plate			1
21	54475348	Lever Spring			1
22	54475314	Packing			1
23	54475355	Fuel Strainer Cup			1
24	54475363	Pan screw			2
25	13221304	Main Jet	Includes Gasket Until Engine S/n BE12A		1
	59244319	Main Jet	Includes Gasket From S/N BE12A		1


# Carburetor BX-60WH

Recurrence of previous drawing

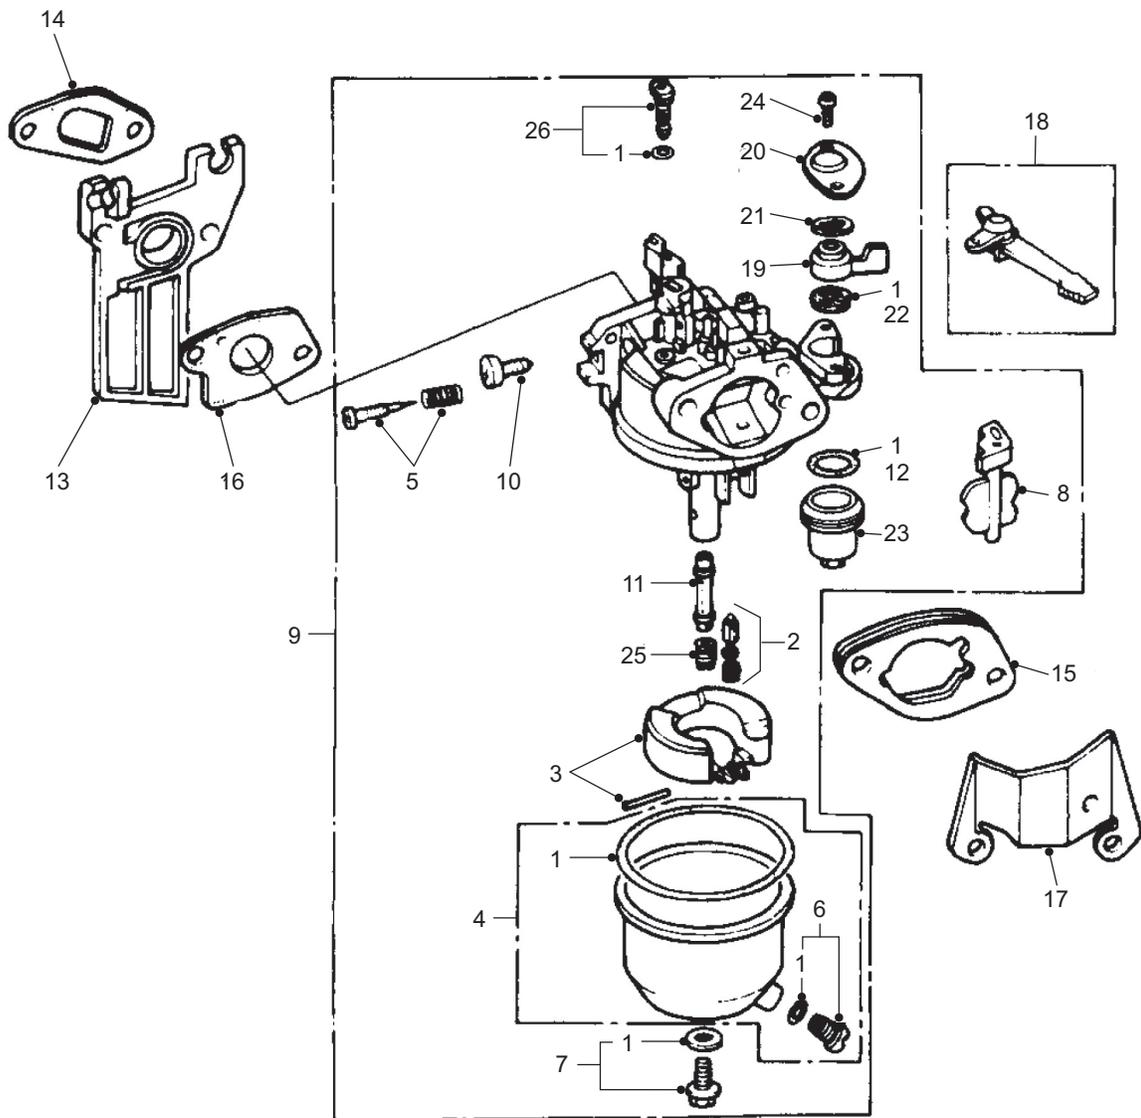




# Air Cleaner BX-60WH

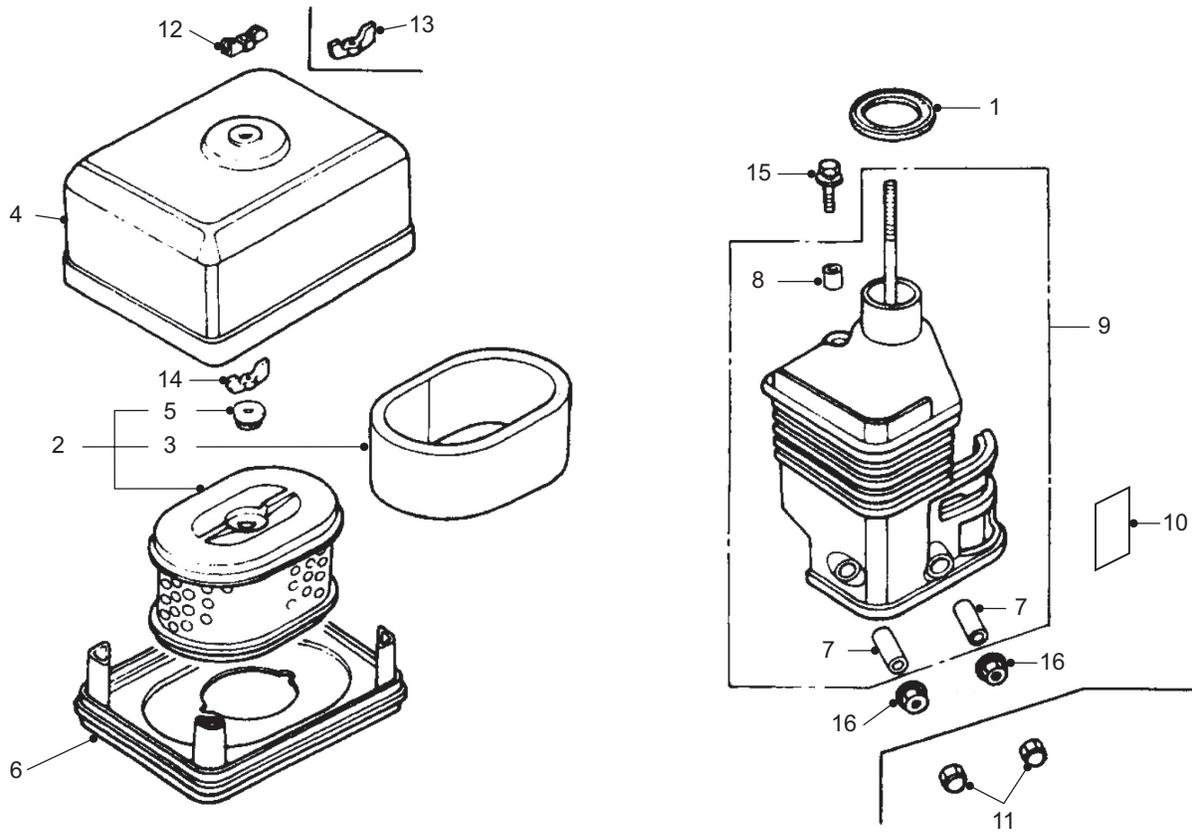


PC000018



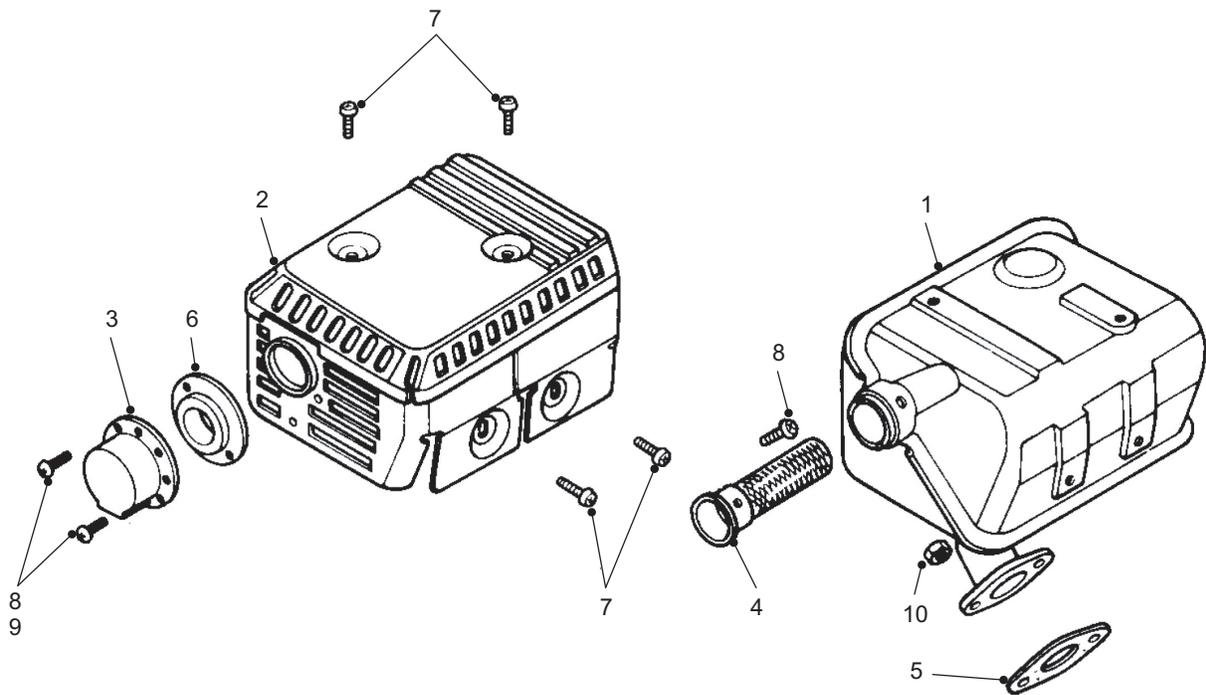



# Fuel Tank BX-60WH

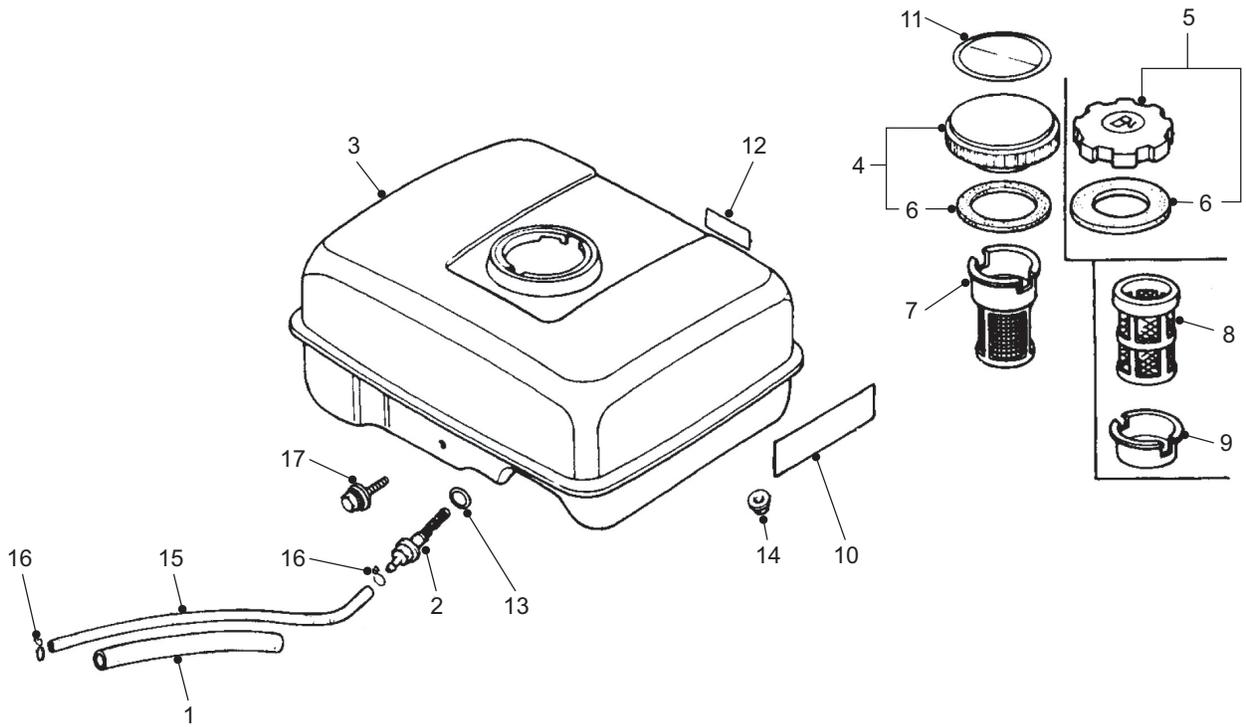


PC000020



# Cylinder Head

BX-80WH / BX-120WH

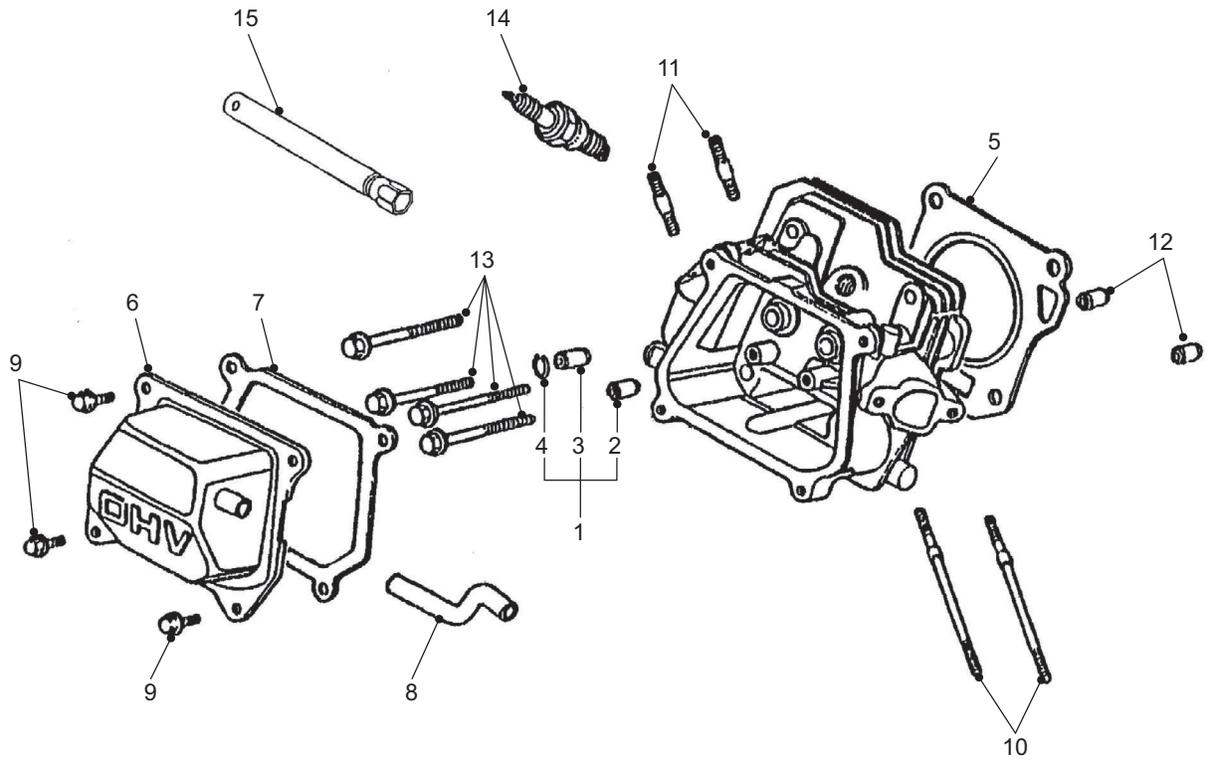


PC000021



# Engine Block

BX-80WH / BX-120WH

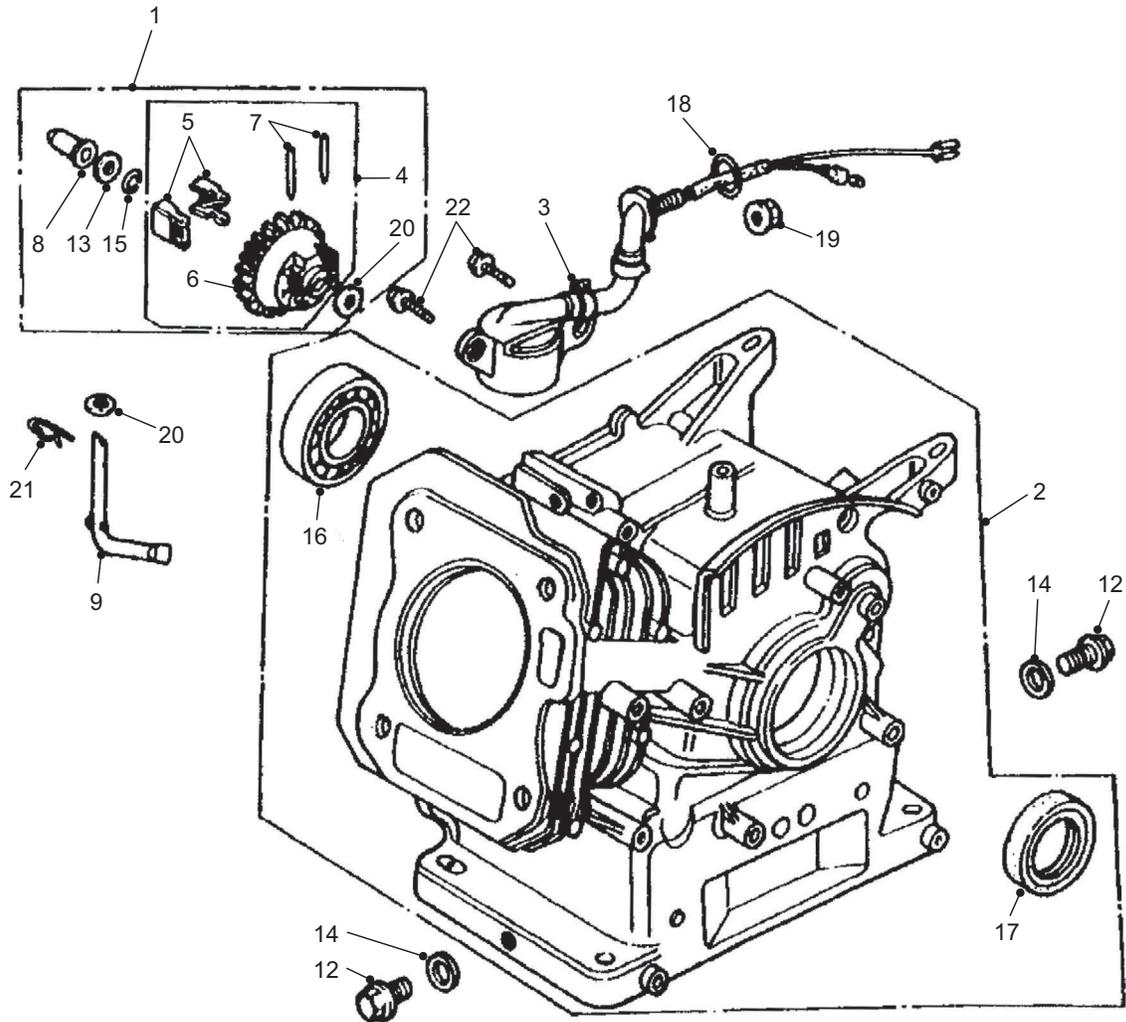


PC000022



# Crankcase Cover


BX-80WH / BX-120WH

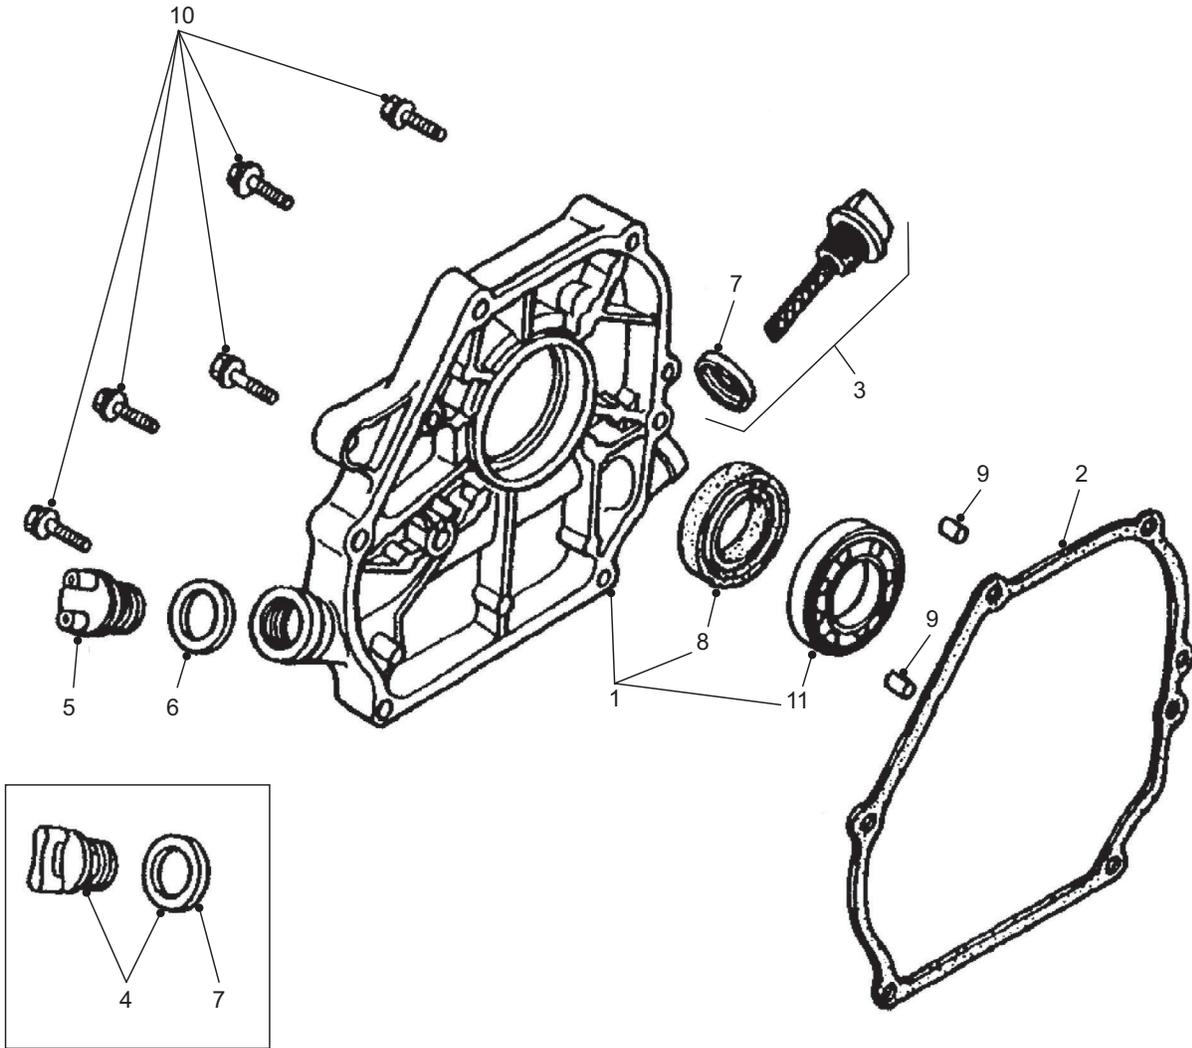



# Flywheel

BX-80WH / BX-120WH

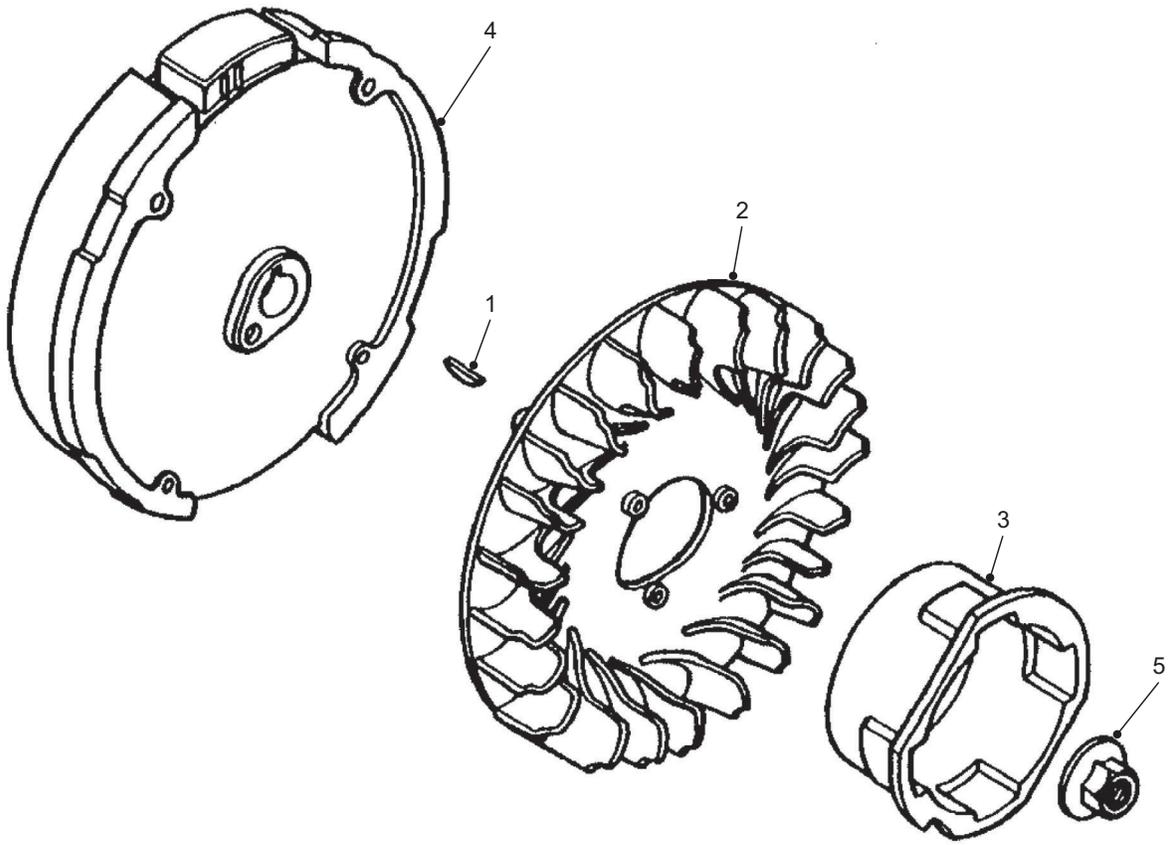


PC000024



# Ignition

BX-80WH / BX-120WH

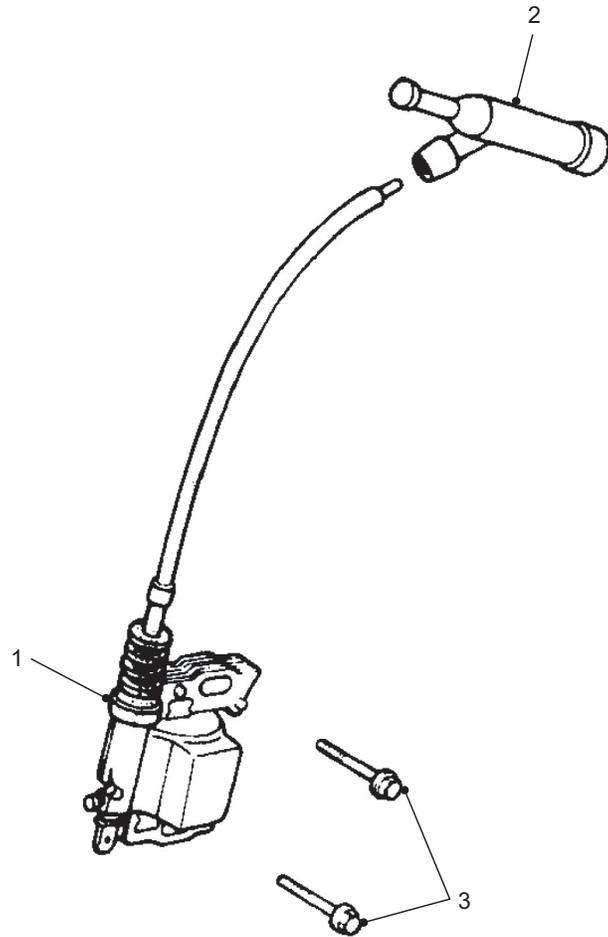


PC000133



# Crankshaft

BX-80WH / BX-120WH

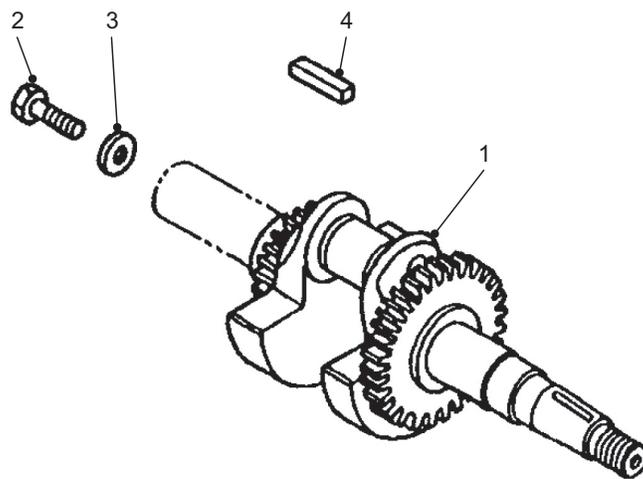


PC000025



# Piston

BX-80WH / BX-120WH

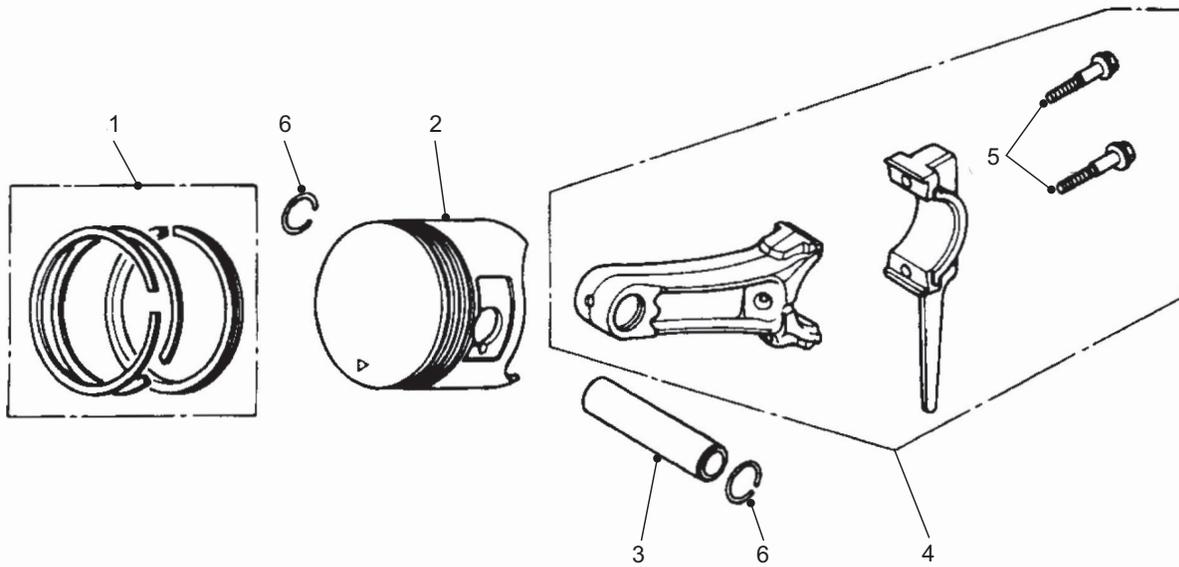


PC000134



# Camshaft/Valves

BX-80WH / BX-120WH

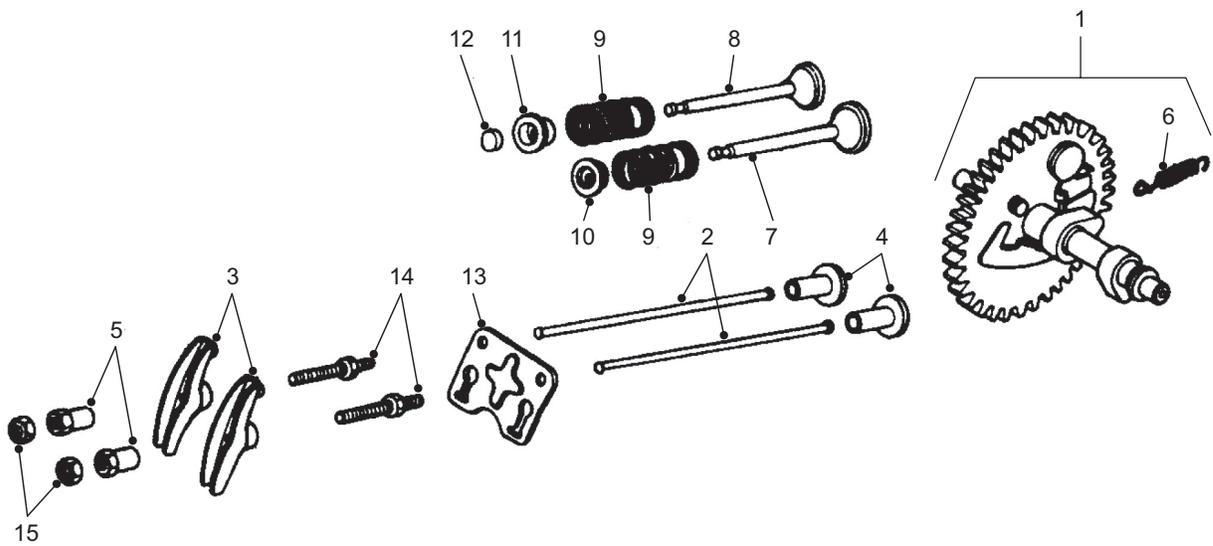


PC000135



# Side Cover

BX-80WH / BX-120WH

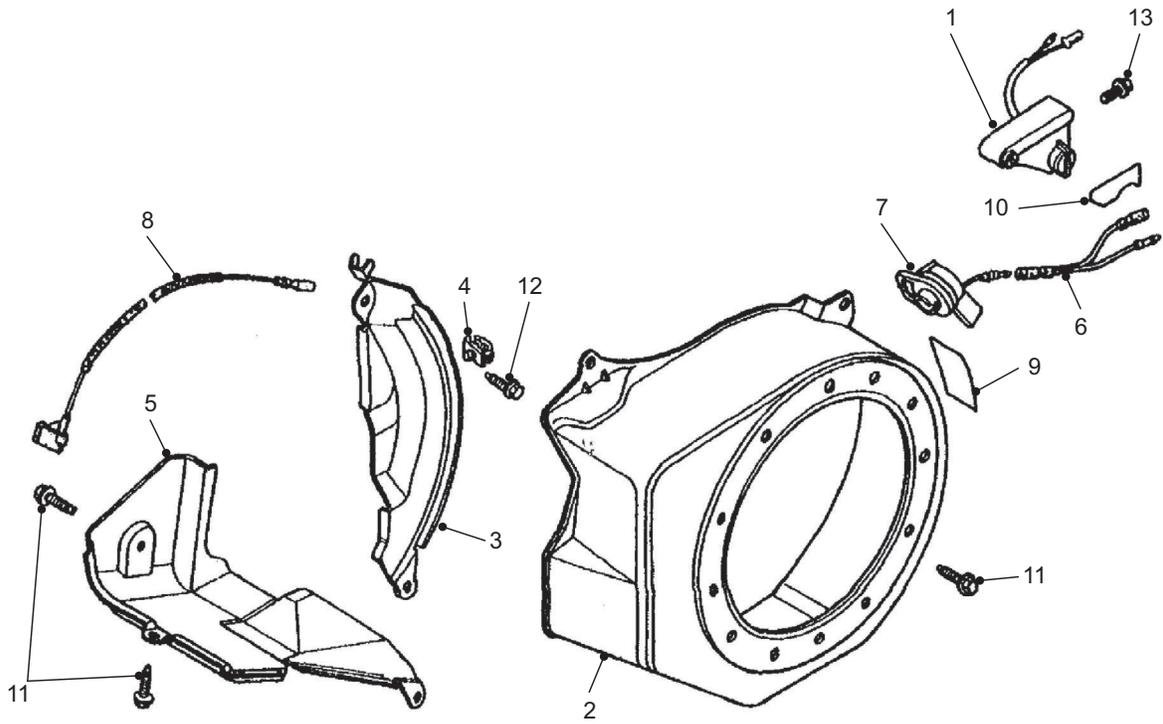


PC000026



# Starter

BX-80WH / BX-120WH

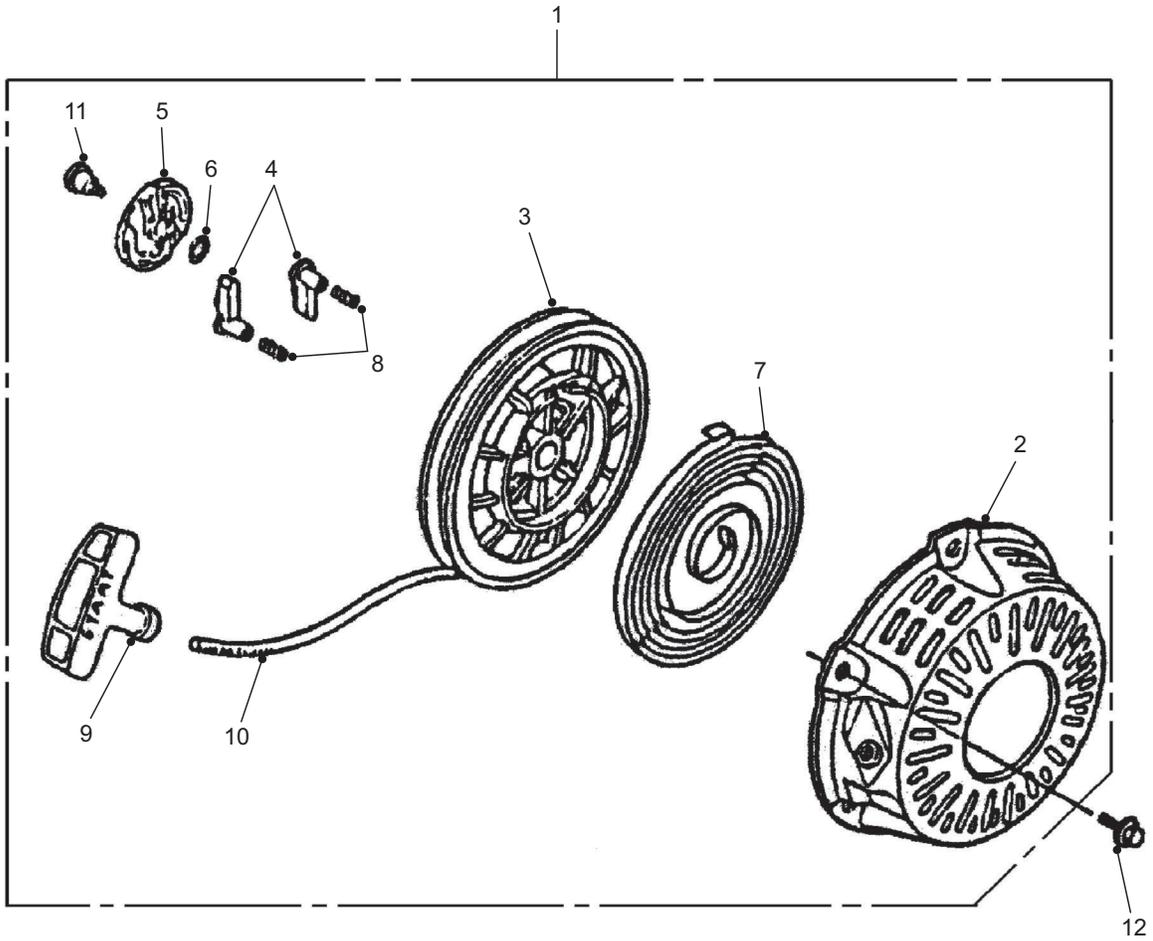


PC000027



# Control Assembly

BX-80WH / BX-120WH

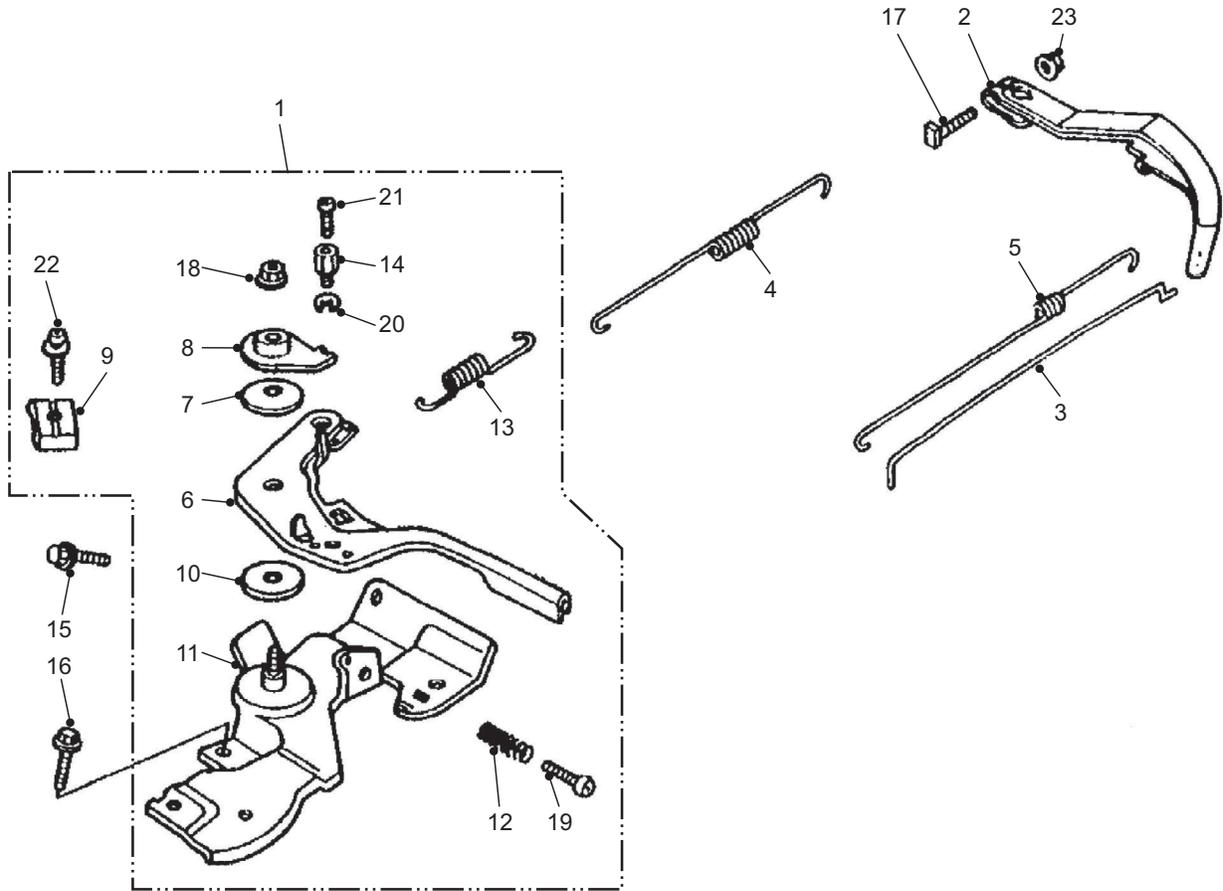


PC000028



# Carburetor

BX-80WH / BX-120WH

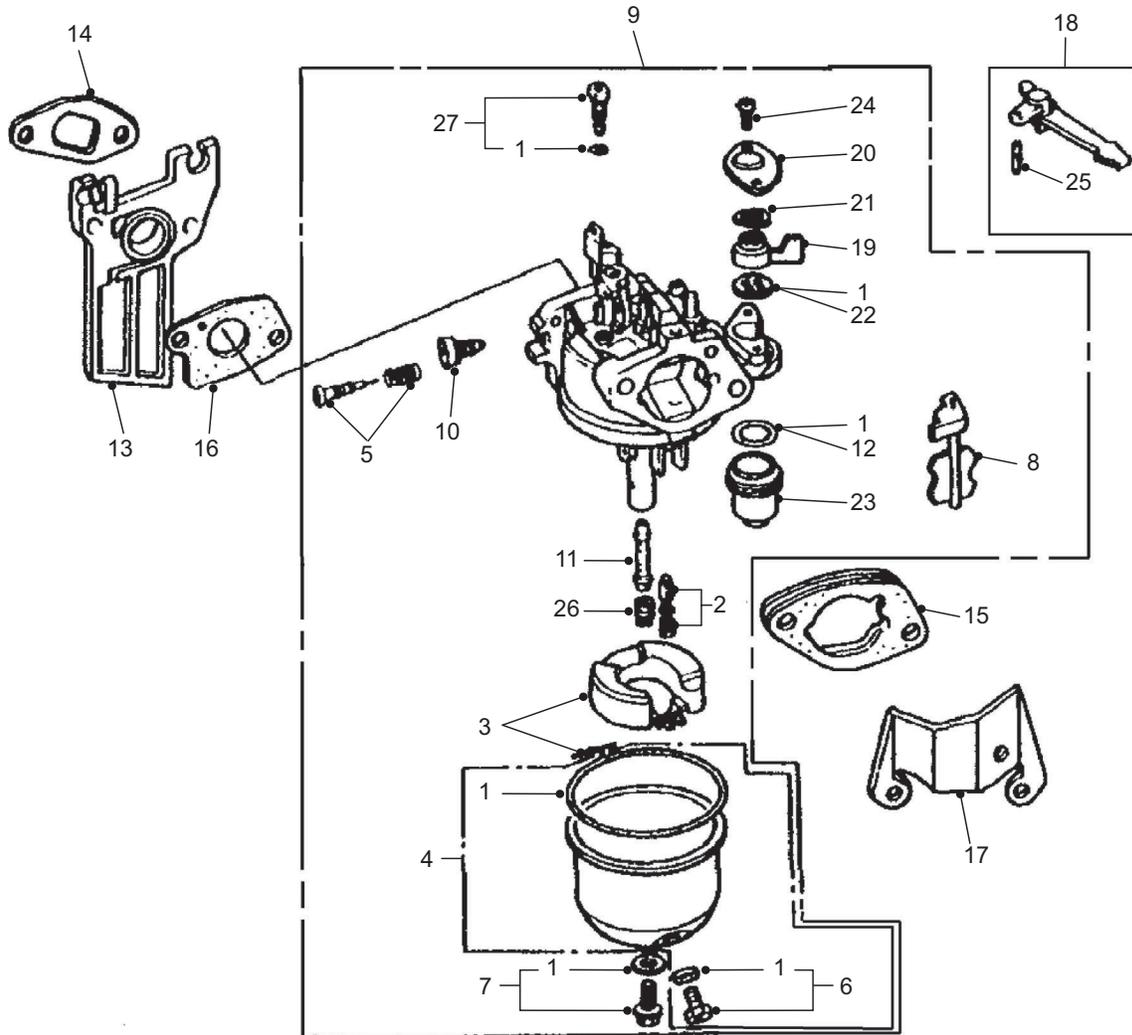

PC000029


## Carburetor BX-80WH / BX-120WH

Section  
05-01-12

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	54475108	Gasket Set			1
2	59244186	Float Valve Set			1
3	59244194	float Set			1
4	59244202	Float Chamber Set	includes Ref. 6		1
5	59244210	Pilot Screw Set			1
6	59244228	Drain Screw Set	Includes gasket		1
7	59244236	Screw Set	Includes gasket		1
8	59244244	Choke Set			1
9	54475124	Carburetor Assembly	Includes Ref. 2 - 7 + 8 + 10 - 12 +19 - 24 + 26 + 27		1
10	54475140	Throttle Stop Screw			1
11	54475173	Main Nozzel			1
12	54475181	Fuel Strainer Cup Packing			1
13	54475199	Insulator			1
14	54475215	Packing			1
15	59244285	Carburetor Spacer			1
16	54475249	Packing			1
17	54475264	Choke Control Stay			1
18	59244301	Choke Lever Complete	Includes Ref. 25		1
19	54475322	Choke Lever			1
20	54475330	Lever Setting Plate			1
21	54475348	Lever Spring			1
22	54475314	Packing			1
23	54475355	Fuel Strainer Cup			1
24	54475363	Pan screw			2
25	54475371	Spring Pin			1
26	54475405	Main Jet	includes gasket		1
27	59244327	Pilote Jet set			1

# Air Cleaner

BX-80WH / BX-120WH

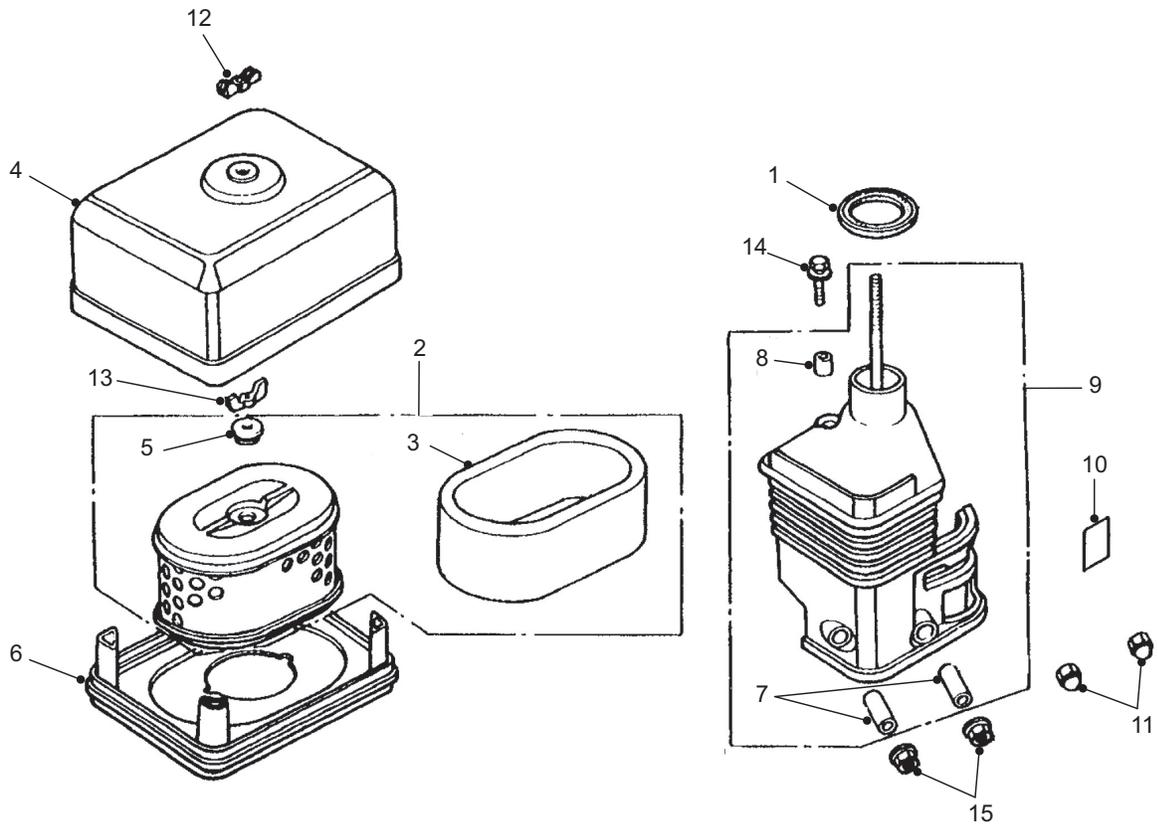


PC000030



# Muffler

BX-80WH / BX-120WH

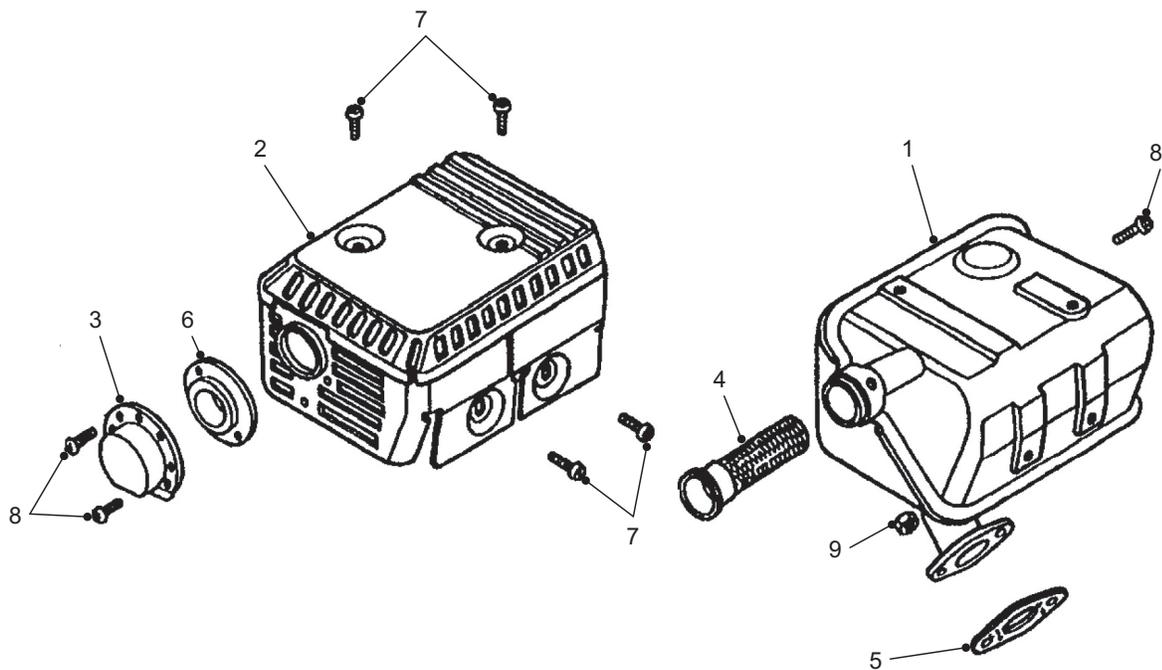


PC000031



# Fuel Tank

BX-80WH / BX-120WH

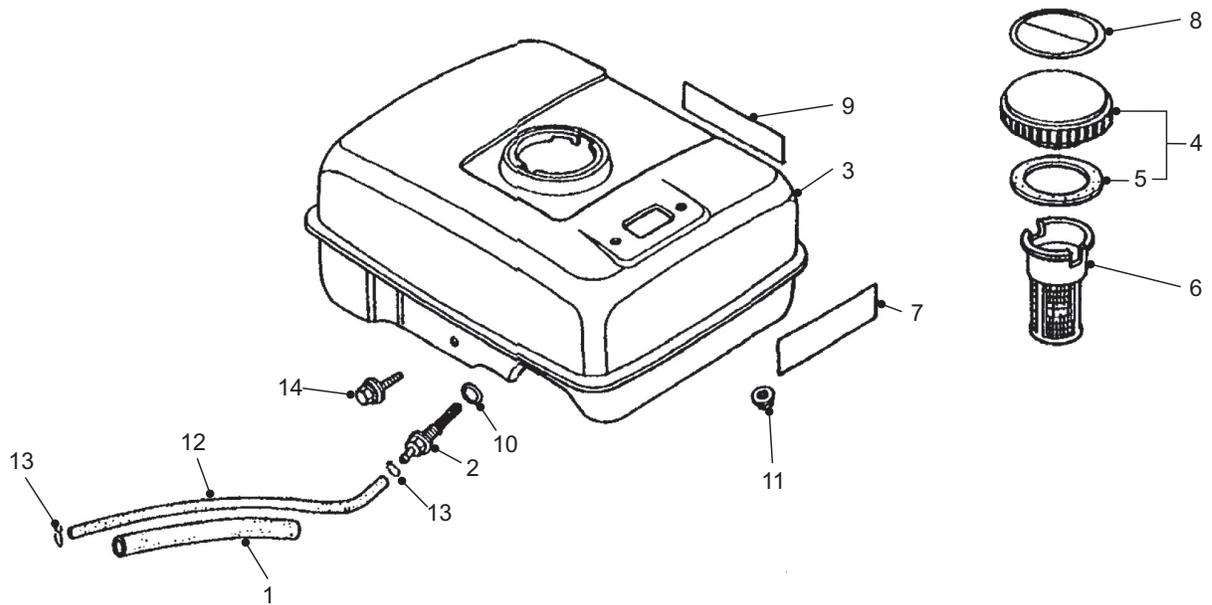

PC000032



Intentionally left blank

# WORD INDEX

## A

Air Cleaner	49, 79
Air Cleaner Elbow	49, 79
Air Cleaner Filter	3, 49, 79
Arm shaft	25, 57

## B

Ball Bearing (BX-60WH)	17
Bearing Case (A)	17
Bearing Case (B)	17
Becal, BX-60 (White) (BX-60WH)	21
Bolt	9, 13, 17, 49, 79
Bracket (BX-60WH)	13
Bracket (BX-80WH, BX-120WH)	13
Breather Tube	23, 55
Bushing	13

## C

Cable Holder	43, 75
Cable return Spring	43, 75
Camshaft Assembly	37, 69
Cap Nut	49, 79
Carburetor Assembly	45, 77
Carburetor Insulator	45
Carburetor Spacer	45, 77
Carrying Cart Assembly (BX-60WH)	19
Carrying Cart Assembly (BX-80WH)	19
cart Shaft (BX-60WH)	19
Cart Shaft (BX-80WH)	19
Caution Mark	53, 83
Choke Control Stay	45, 77
Choke Lever	77
Choke Lever Complete	45, 77
Choke Mark	49, 79
Choke Set	45, 77
Circlip	75
Clip	25, 35, 57, 67
Clutch Assembly (BX-60WH)	13
Clutch Assembly (BX-80WH, BX-120WH)	13
Clutch Shoe Assembly (BX-60WH)	13
Clutch Shoe Assembly (BX-80WH, 120WH)	13
Cock Lever	45
Collar	49, 79
Collar (B)	49, 79
Coller (A)	13
Coller (B)	13
Connection (A) (BX-60WH)	9
Connection (A) (BX-80WH, BX-120WH)	9
Connection (B) (BX-60WH)	9

Connection Rod Assembly	35, 67
Connection Rod Bolt	35, 67
Control Adjusting Spring	43, 75
Control Assembly	43, 75
Control Base	43, 75
Control lever	43, 75
Control Lever Spacer	43, 75
Control Lever Washer	43, 75
Controls	5
Cooling Fan	29, 61
Cotter Pin	19
Cover	49, 79
Cover adjustment Grommet	39
Cover Nut	49
Crankcase Cover	27, 59
Crankshaft	33, 65
Cylinder Barrel Assembly	25, 57
Cylinder Head	23, 55

## D

Decal Set (BX-120WH)	21
Decal Set (BX-80WH)	21
Decal, BX-120 (White) (BX-120WH)	21
Decal, BX-80 (White) (BX-80WH)	21
decal, IR emblem	21
Decal, IR-Logo	21
Deflector	51, 81
Double Ended spanner	19
Dowel pin	23, 27, 55, 59
Drain Plug	25, 57
Drain Screw Set	45, 77

## E

Eccentric Shaft (BX-120WH)	17
Eccentric Shaft (BX-80WH)	17
Emblem	41
Engine Assembly	13
Engine Assembly (BX-60WH°)	13
Engine Bed (BX-60WH)	9
Engine Bed (BX-80WH, BX-120WH)	9
Engine Stop Switch	3, 39, 71
Engine Stop switch Harness	39, 71
Exhaust Valve	7, 37, 69
Exhaust Valve Guid	23, 55

## F

Fan Cover	39, 71
Fixing Arm (BX-60WH)	19
Fixing Arm (BX-80WH, BX-120WH)	19
Flang nut	25, 57

Flange Nut .....	43, 49, 53, 75, 79, 83	Lable, High-Low .....	21
Float Chamber Set .....	45, 77	Lable, Noise .....	21
Float Set .....	45, 77	Lable, Stop .....	21
Float Valve Set .....	45, 77	Lable, Warning .....	21
Flywheel Complete .....	29, 61	Lable: Caution .....	53, 83
Friction Spring .....	41, 73	Lever Setting Plate .....	45, 77
Fuel Filter .....	3, 53, 83	Lever Spring .....	43, 45, 75, 77
Fuel Filter Holder .....	53	Lock Washer .....	17
Fuel Strainer Cup .....	3, 45, 77	Locknut .....	43, 75
Fuel Strainer Cup Packing .....	45, 77	Lockpin .....	25, 57
Fuel Tank Cap .....	3, 53, 83	Long Nut .....	13
Fuel Tank Complete .....	53, 83	<b>M</b>	
Fuel tank Joint .....	53, 83	Main Body .....	3
Fuel Tube .....	53, 83	Main Nozzel .....	45, 77
<b>G</b>		Main Nozzle .....	45
Gasket .....	51, 81	Muffler .....	7, 51, 81
Gasket Set .....	45, 77	<b>N</b>	
Governor Arm .....	43, 75	Name Plate .....	21
Governor Arm Bolt .....	43, 75	Nut .....	9
Governor assembly .....	25, 57	Nylon Collar .....	19
Governor Drive Gear .....	33	<b>O</b>	
Governor Kit .....	25, 57	Oil Alert Mark .....	53, 83
Governor Rob .....	75	Oil Alert Unit .....	39, 71
Governor Rod .....	43	Oil Cap Assembly .....	27, 59
Governor Spring .....	43, 75	Oil Filler Cap .....	27, 59
Grommet .....	49, 79	Oil Filler Cap Assembly .....	3, 27, 59
Guard Frame .....	9	Oil Level Switch Assembly .....	25, 57
Guide .....	51, 81	Oil Seal .....	17, 25, 27, 57, 59
Guide Plate .....	37, 69	Operating Handle .....	5
<b>H</b>		Operating Handle (BX-80WH, BX-120WH) .....	13
Handle Bolt .....	13	Operation & Maintenance Manual .....	19
head gasket .....	23, 55	Operation Handle (BX-60WH) .....	13
Hex Bolt .....	33, 65	O-ring .....	17, 25, 53, 57, 83
Hex Nut .....	51, 81	<b>P</b>	
High Tension Terminal Assembly .....	63	Packing .....	17, 23, 27, 45, 49, 53, 55, 59, 77, 79, 83
Honda Engine (58836438) .....	3, 5, 7	Pan Screw .....	43, 45, 75, 77
Honda Engine (58836446) .....	3, 5, 7	Parts Manual .....	19
<b>I</b>		Pilot Screw Set .....	45, 77
Ignition Coil assembly .....	31, 63	Pilote Jet set .....	45, 77
Inlet Valve Guide .....	23, 55	Piston .....	35, 67
Inside Cover .....	13	Piston Pin .....	35
Insulator .....	77	Piston Ring .....	67
Intake Valve .....	7, 37, 69	Piston Ring Set .....	35, 67
<b>K</b>			
Key .....	13, 33, 65		
<b>L</b>			
Label: Oil Alert .....	39, 71		
Label: Specification .....	39, 71		

Pivot Bolt . . . . .	37, 69
Plug . . . . .	17
Plug cap . . . . .	9
Protector (Standard) . . . . .	51, 81
Pulley . . . . .	17
Pully Cover . . . . .	13
Push Rod . . . . .	37, 69

**R**

Ratchet Guide . . . . .	41, 73
Recessed Bolt . . . . .	75
Recoil Starter Assembly . . . . .	5, 41, 73
Return Spring . . . . .	13, 37, 41, 69, 73
Rocker Arm . . . . .	37, 69
Rocker Arm Pivot . . . . .	37, 69
Roller Bearing (BX-80/BX-120WH) . . . . .	17
Rubber Buffer (A) . . . . .	9
Rubber Buffer (B) . . . . .	9
Rubber Buffer Bracket (BX-60WH) . . . . .	9
Rubber Buffer Bracket (BX-80WH/120WH) . . . . .	9
Rubber Cover . . . . .	13, 17
Rubber Supporter . . . . .	53, 83

**S**

Screw . . . . .	13
Screw Washer . . . . .	43
Setting Screw . . . . .	41, 73
Shaft Case (BX-60WH) . . . . .	17
Shaft Case (BX-80WH, BX-120WH) . . . . .	17
Shroud . . . . .	39, 71
Side Plate . . . . .	39, 71
Silencer Nose . . . . .	49, 79
Slider . . . . .	25, 57
Slotted Screwdriver . . . . .	19
Spacer (A) . . . . .	9
Spacer (B) . . . . .	9
Spark Arrestor . . . . .	51, 81
Spark Plug . . . . .	23, 55
Spark Plug Wrench . . . . .	23, 55
Special Nut . . . . .	29, 61
Spring Pin . . . . .	77
Spring Retainer, Exhaust . . . . .	37, 69
Spring retainer, Inlet . . . . .	37, 69
Spring Washer . . . . .	9, 13, 17
Sprinkle Plate (BX-60WH) . . . . .	9
Sprinkler Plate (BX-80WH, BX-120WH) . . . . .	9
Starter Case . . . . .	41, 73
Starter Knob . . . . .	3, 41, 73
Starter Pully . . . . .	29, 61
Starter Ratchet . . . . .	41, 73
Starter Reel . . . . .	41, 73
Starter Rope . . . . .	3, 41, 73
Starter Spring . . . . .	41, 73

Stop Switch Cord Clamp . . . . .	39, 71
Stopper Bracket . . . . .	13
Stud Bolt . . . . .	23, 55

**T**

Tapping screw . . . . .	51, 81
Throttle Cable . . . . .	5, 13
Throttle Lever . . . . .	5, 13
Throttle Return Spring . . . . .	43, 75
Throttle Stop Screw . . . . .	45, 77
Thrust Washer . . . . .	25, 57
Timing Gear . . . . .	33
Tire & Wheel Assembly . . . . .	19
Tool Bag . . . . .	19
Tool Box Setting Nut . . . . .	49, 79
Tool Kit . . . . .	19
Tube Clip . . . . .	23, 53, 83

**V**

Valve Assy, Sprinkler (BX-60WH, BX-80WH, BX-120WH) . . . . .	9
Valve Lifter . . . . .	37, 69
Valve Rotater . . . . .	37, 69
Valve Spring . . . . .	37, 69
V-belt (BX-60H/WH) . . . . .	3, 13
V-belt (BX-80H/WH, BX-120H/WH) . . . . .	3, 13
Vibration Plate (BX-120WH) . . . . .	9
Vibration Plate (BX-60WH) . . . . .	9
Vibration Plate (BX-80WH) . . . . .	9
Vibration Unit Assy (BX-120WH) . . . . .	17
Vibration Unit Assy (BX-60WH) . . . . .	17
Vibration Unit Assy (BX-80WH) . . . . .	17

**W**

Washer . . . . .	9, 13, 17, 19, 25, 33, 57, 65
Water Tank Assembly (BX-60WH) . . . . .	9
Water Tank Assembly (BX-80WH, 120WH) . . . . .	9
Water Tank Cap . . . . .	9
Weight . . . . .	25, 57
Weight holder . . . . .	25, 57
Weight pin . . . . .	25, 57
Wing Nut . . . . .	49
Wire band . . . . .	13
Wire clamp . . . . .	13
Wire Holder . . . . .	43, 75
Woodruff Key . . . . .	29, 61

# NUMERICAL INDEX

Part Number	Denomination	WAS	Page	Subgroup
			21	Decals
13200829	Lable, Noise		21	Decals
13200837	Lable, Noise		21	Decals
13201132	Spacer (B)		9	Vibration Plate, Guard Frame And Water Tank I
13201140	Long Nut		13	Engine, Handle And Clutch Installation
13201157	Bracket (BX-80WH, BX-120WH)		13	Engine, Handle And Clutch Installation
13201165	Rubber Cover		13	Engine, Handle And Clutch Installation
13201173	Roller Bearing (BX-80/BX-120W)		17	Vibration Unit Assembly
13201371	Valve Assy, Sprinkler (BX-60WH)		9	Vibration Plate, Guard Frame And Water Tank I
13201389	Plug cap		9	Vibration Plate, Guard Frame And Water Tank I
13201587	Sprinkle Plate (BX-60WH)		9	Vibration Plate, Guard Frame And Water Tank I
13201595	Sprinkler Plate (BX-80WH, BX-1		9	Vibration Plate, Guard Frame And Water Tank I
13201835	Fixing Arm (BX-60WH)		19	Carrying Cart Assembly And Tool Kit
13201843	Fixing Arm (BX-80WH, BX-120		19	Carrying Cart Assembly And Tool Kit
13201850	Nylon Collar		19	Carrying Cart Assembly And Tool Kit
13201868	Cotter Pin		19	Carrying Cart Assembly And Tool Kit
13202130	Vibration Plate (BX-60WH)		9	Vibration Plate, Guard Frame And Water Tank I
13202148	Vibration Plate (BX-80WH)		9	Vibration Plate, Guard Frame And Water Tank I
13202155	Vibration Plate (BX-120WH)		9	Vibration Plate, Guard Frame And Water Tank I
13202163	Shaft Case (BX-60WH)		17	Vibration Unit Assembly
13202171	Shaft Case (BX-80WH, BX-120		17	Vibration Unit Assembly
13202189	Operation Handle (BX-60WH)		13	Engine, Handle And Clutch Installation
13202197	Operating Handle (BX-80WH, B		13	Engine, Handle And Clutch Installation
13202205	Rubber Buffer Bracket (BX-60W		9	Vibration Plate, Guard Frame And Water Tank I
13202213	Rubber Buffer Bracket (BX-80W		9	Vibration Plate, Guard Frame And Water Tank I
13202221	Stopper Bracket		13	Engine, Handle And Clutch Installation
13202239	Decal Set (BX-60WH)		21	Decals
13202247	Decal Set (BX-80WH)		21	Decals
13202254	Decal Set (BX-120WH)		21	Decals
13202262	Vibration Unit Assy (BX-60WH)		17	Vibration Unit Assembly
13202270	Vibration Unit Assy (BX-80WH)		17	Vibration Unit Assembly
13202288	Vibration Unit Assy (BX-120WH)		17	Vibration Unit Assembly
13202296	Bolt		17	Vibration Unit Assembly
13202304	Washer		13	Engine, Handle And Clutch Installation
13220983	Cylinder Head		23	Cylinder Head
13220991	head gasket		23	Cylinder Head
13221007	Breather Tube		23	Cylinder Head
13221015	Tube Clip		23	Cylinder Head
13221023	Cylinder Barrel Assembly		25	Engine Block
13221031	Crankcase Cover		27	Crankcase Cover

Part Number	Denomination	WAS	Page	Subgroup
13221056	Packing		27	Crankcase Cover
13221064	Oil Seal		27	Crankcase Cover
13221072	Flywheel Complete		29	Flywheel
13221080	Crankshaft		33	Crankshaft
13221098	Timing Gear		33	Crankshaft
13221106	Governor Drive Gear		33	Crankshaft
13221114	Piston Ring Set		35	Piston
13221122	Camshaft Assembly		37	Camshaft/Valves
13221130	Fan Cover		39	Side Cover
13221148	Fan Cover		39	Side Cover
13221155	Side Plate		39	Side Cover
13221163	Shroud		39	Side Cover
13221171	Label: Specification		39	Side Cover
13221189	Emblem		41	Starter
13221197	Emblem		41	Starter
13221205	Control Assembly		43	Control Assembly
13221213	Control lever		43	Control Assembly
13221221	Control Base		43	Control Assembly
13221239	Float Set		45	Carburetor
13221247	Float Chamber Set		45	Carburetor
13221254	Carburetor Assembly		45	Carburetor
13221262	Carburetor Assembly		45	Carburetor
13221270	Main Nozzel		45	Carburetor
13221288	Main Nozzle		45	Carburetor
13221296	Choke Control Stay		45	Carburetor
13221304	Main Jet		45	Carburetor
13221312	Air Cleaner		49	Air Cleaner
13221320	Air Cleaner Filter		3 49	Recommended Service Parts Air Cleaner
13221338	Cover		49	Air Cleaner
13221346	Collar		49	Air Cleaner
13221353	Air Cleaner Elbow		49	Air Cleaner
13221361	Tapping Screw		51	Muffler
13221379	Fuel Tank Complete		53	Fuel Tank
22069843	Washer		13	Engine, Handle And Clutch Installation
22194815	Guard Frame		9	Vibration Plate, Guard Frame And Water Tank I
22194823	Connection (A) (BX-60WH)		9	Vibration Plate, Guard Frame And Water Tank I
22194831	Connection (B) (BX-60WH)		9	Vibration Plate, Guard Frame And Water Tank I
22194849	Engine Bed (BX-60WH)		9	Vibration Plate, Guard Frame And Water Tank I
22194856	Spacer (A)		9	Vibration Plate, Guard Frame And Water Tank I
22194864	Rubber Buffer (A)		9	Vibration Plate, Guard Frame And Water Tank I
22194872	Rubber Buffer (B)		9	Vibration Plate, Guard Frame And Water Tank I

Part Number	Denomination	WAS	Page	Subgroup
22194906	Clutch Assembly (BX-60WH)		13	Engine, Handle And Clutch Installation
22194914	Clutch Shoe Assembly (BX-60W)		13	Engine, Handle And Clutch Installation
22194922	V-belt (BX-60H/WH)		3 13	Recommended Service Parts Engine, Handle And Clutch Installation
22194930	Inside Cover		13	Engine, Handle And Clutch Installation
22194948	Pully Cover		13	Engine, Handle And Clutch Installation
22194963	Operating Handle		5	Recommended Service Parts
22194971	Bushing		13	Engine, Handle And Clutch Installation
22194989	Coller (A)		13	Engine, Handle And Clutch Installation
22194997	Bolt		13	Engine, Handle And Clutch Installation
22195002	Coller (B)		13	Engine, Handle And Clutch Installation
22195010	Bracket (BX-60WH)		13	Engine, Handle And Clutch Installation
22195028	Screw		13	Engine, Handle And Clutch Installation
22195036	Throttle Cable		5 13	Recommended Service Parts Engine, Handle And Clutch Installation
22195044	Return Spring		13	Engine, Handle And Clutch Installation
22195051	Bearing Case (A)		17	Vibration Unit Assembly
22195069	Bearing Case (B)		17	Vibration Unit Assembly
22195077	O-ring		17	Vibration Unit Assembly
22195085	Eccentric Shaft (BX-60WH)		17	Vibration Unit Assembly
22195093	Rubber Cover		17	Vibration Unit Assembly
22195101	Plug		17	Vibration Unit Assembly
22195119	Carrying Cart Assembly (BX-60		19	Carrying Cart Assembly And Tool Kit
22195127	cart Shaft (BX-60WH)		19	Carrying Cart Assembly And Tool Kit
22195135	Tool Kit		19	Carrying Cart Assembly And Tool Kit
22195143	Becal, BX-60 (White) (BX-60WH)		21	Decals
22195192	Connection (A) (BX-80WH, BX-1		9	Vibration Plate, Guard Frame And Water Tank I
22195200	Connection (B) (BX-80WH, 120		9	Vibration Plate, Guard Frame And Water Tank I
22195218	Engine Bed (BX-80WH, BX-120		9	Vibration Plate, Guard Frame And Water Tank I
22195226	Water Tank Assembly (BX-80W		9	Vibration Plate, Guard Frame And Water Tank I
22195234	Clutch Assembly (BX-80WH, BX		13	Engine, Handle And Clutch Installation
22195242	Clutch Shoe Assembly (BX-80W		13	Engine, Handle And Clutch Installation
22195259	V-belt (BX-80H/WH, BX-120H/W		3 13	Recommended Service Parts Engine, Handle And Clutch Installation
22195267	Operating Handle		5	Recommended Service Parts
22195275	Eccentric Shaft (BX-80WH)		17	Vibration Unit Assembly
22195283	Carrying Cart Assembly (BX-80		19	Carrying Cart Assembly And Tool Kit
22195291	Cart Shaft (BX-80WH)		19	Carrying Cart Assembly And Tool Kit
22195317	Decal, BX-80 (White) (BX-80WH)		21	Decals
22195366	Eccentric Shaft (BX-120WH)		17	Vibration Unit Assembly
22195408	Decal, BX-120 (White) (BX-120		21	Decals
54473897	Cylinder Head		55	Cylinder Head
54473913	Inlet Valve Guide		23	Cylinder Head

Part Number	Denomination	WAS	Page	Subgroup
54474028	Head Cover		23	Cylinder Head
			55	Cylinder Head
54474036	Flange Bolt		23	Cylinder Head
54474044	Stud Bolt		23	Cylinder Head
			55	Cylinder Head
54474051	Flange Bolt		55	Cylinder Head
54474093	Spark Plug Wrench		23	Cylinder Head
			55	Cylinder Head
54474135	Spark Plug		23	Cylinder Head
			55	Cylinder Head
54474143	Cylinder Barrel Assembly		57	Engine Block
54474168	Oil Level Switch Assembly		25	Engine Block
54474176	Oil Level Switch assembly		25	Engine Block
			57	Engine Block
54474184	Bearing		57	Engine Block
54474192	Bearing		57	Engine Block
54474200	Oil Seal		57	Engine Block
54474226	O-ring		25	Engine Block
			53	Fuel Tank
			57	Engine Block
54474234	Flang nut		25	Engine Block
			57	Engine Block
54474259	Flange bolt		25	Engine Block
			57	Engine Block
54474275	Crankcase Cover		59	Crankcase Cover
54474291	packing		59	Crankcase Cover
54474309	Oil Filler Cap Assembly		3	Recommended Service Parts
			27	Crankcase Cover
54474317	Oil Cap Assembly		27	Crankcase Cover
			59	Crankcase Cover
54474325	Oil Filler Cap		27	Crankcase Cover
			59	Crankcase Cover
54474333	Packing		27	Crankcase Cover
			59	Crankcase Cover
54474341	Packing		27	Crankcase Cover
54474358	Oil Seal		59	Crankcase Cover
54474366	Dowel Pin		27	Crankcase Cover
			59	Crankcase Cover
54474374	Flange Bolt		59	Crankcase Cover
54474382	Bearing		59	Crankcase Cover
54474390	Cooling Fan		61	Flywheel
54474408	Flywheel Complete		61	Flywheel
54474416	Ignition Coil assembly		31	Ignition
			63	Ignition
54474424	Noise Suppressor Cap Assembl		31	Ignition
			63	Ignition

Part Number	Denomination	WAS	Page	Subgroup
54474457	Hex Bolt		33	Crankshaft
			65	Crankshaft
54474465	Washer		33	Crankshaft
			65	Crankshaft
54474473	Key		33	Crankshaft
			65	Crankshaft
54474481	Piston ring Set		67	Piston
54474531	Piston		67	Piston
54474598	Piston Ring		67	Piston
54474606	Connection Rod Assembly		67	Piston
54474614	Clip		67	Piston
54474622	Camshaft Assembly		69	Camshaft/Valves
54474630	Push Rod		69	Camshaft/Valves
54474648	Rocker Arm		37	Camshaft/Valves
			69	Camshaft/Valves
54474655	Rocker Arm Pivot		37	Camshaft/Valves
			69	Camshaft/Valves
54474663	Intake Valve		7	Recommended Service Parts
			69	Camshaft/Valves
54474671	Exhaust Valve		7	Recommended Service Parts
			37	Camshaft/Valves
			69	Camshaft/Valves
54474689	Guide Plate		69	Camshaft/Valves
54474697	Oil Alert Unit		39	Side Cover
			71	Side Cover
54474739	Fan Cover		71	Side Cover
54474796	Side Plate		71	Side Cover
54474804	Stop Switch Cord Clamp		39	Side Cover
			71	Side Cover
54474812	Shroud		71	Side Cover
54474820	Engine Stop switch Harness		39	Side Cover
			71	Side Cover
54474838	Label: specification		71	Side Cover
54474846	Label: Oil Alert		39	Side Cover
			71	Side Cover
54474861	Recoil Starter Assembly		5	Recommended Service Parts
			41	Starter
54474879	Starter Reel		41	Starter
54474895	Starter Ratchet		41	Starter
54474911	Control Assembly		75	Control Assembly
54474929	Governor Arm		43	Control Assembly
			75	Control Assembly
54474937	Governor Rob		75	Control Assembly
54474945	Governor Spring		75	Control Assembly
54474952	Throttle Return spring		75	Control Assembly
54474960	Control Lever		75	Control Assembly

Part Number	Denomination	WAS	Page	Subgroup
54474978	Control Lever Washer		43	Control Assembly
			75	Control Assembly
54474986	Cable Holder		43	Control Assembly
			75	Control Assembly
54474994	Control Lever Spacer		43	Control Assembly
			75	Control Assembly
54475017	Control Base		75	Control Assembly
54475025	Wire Holder		43	Control Assembly
			75	Control Assembly
54475033	Recessed Bolt		75	Control Assembly
54475041	Locknut		43	Control Assembly
			75	Control Assembly
54475058	Pan Screw		43	Control Assembly
			75	Control Assembly
54475066	Circlip		75	Control Assembly
54475074	Pan Screw		43	Control Assembly
			75	Control Assembly
54475082	Screw Washer		43	Control Assembly
54475090	Pan Screw		43	Control Assembly
			75	Control Assembly
54475108	Gasket Set		45	Carburetor
			77	Carburetor
54475124	Carburetor Assembly		77	Carburetor
54475140	Throttle Stop Screw		45	Carburetor
			77	Carburetor
54475173	Main Nozzel		77	Carburetor
54475181	Fuel Strainer Cup Packing		45	Carburetor
			77	Carburetor
54475199	Insulator		77	Carburetor
54475207	Packing		45	Carburetor
54475215	Packing		45	Carburetor
			77	Carburetor
54475223	Packing		45	Carburetor
54475249	Packing		45	Carburetor
			77	Carburetor
54475264	Choke Control Stay		45	Carburetor
			77	Carburetor
54475280	Cock Lever		45	Carburetor
54475314	Packing		45	Carburetor
			77	Carburetor
54475322	Choke Lever		77	Carburetor
54475330	Lever Setting Plate		45	Carburetor
			77	Carburetor
54475348	Lever Spring		45	Carburetor
			77	Carburetor
54475355	Fuel Strainer Cup		3	Recommended Service Parts
			45	Carburetor

Part Number	Denomination	WAS	Page	Subgroup
54475363	Pan screw		45	Carburetor
			77	Carburetor
54475371	Spring Pin		77	Carburetor
54475405	Main Jet		77	Carburetor
54475421	Packing		49	Air Cleaner
			79	Air Cleaner
54475439	Air Cleaner		79	Air Cleaner
54475447	Air Cleaner Filter		3	Recommended Service Parts
			79	Air Cleaner
54475454	Cover		79	Air Cleaner
54475462	Grommet		49	Air Cleaner
			79	Air Cleaner
54475470	Silencer Nose		49	Air Cleaner
			79	Air Cleaner
54475488	Collar		79	Air Cleaner
54475496	Collar (B)		49	Air Cleaner
			79	Air Cleaner
54475504	Air Cleaner Elbow		79	Air Cleaner
54475512	Cap Nut		49	Air Cleaner
			79	Air Cleaner
54475538	Cover Nut		49	Air Cleaner
54475546	Wing Nut		49	Air Cleaner
54475553	Tool Box Setting Nut		49	Air Cleaner
			79	Air Cleaner
54475561	Bolt		49	Air Cleaner
			79	Air Cleaner
54475579	Protector (Standard)		51	Muffler
			81	Muffler
54475587	Deflector		51	Muffler
			81	Muffler
54475595	Spark Arrestor		51	Muffler
			81	Muffler
54475611	Guide		51	Muffler
			81	Muffler
54475629	Tapping screw		51	Muffler
			81	Muffler
54475637	Tapping Screw		51	Muffler
			81	Muffler
54475645	Muffler		7	Recommended Service Parts
			51	Muffler
			81	Muffler
54475652	Protector (standard)		51	Muffler
54475660	Fuel tank Joint		53	Fuel Tank
			83	Fuel Tank
54475678	Fuel Tank Complete		83	Fuel Tank
54475694	Fuel Tank Cap		3	Recommended Service Parts
			53	Fuel Tank

Part Number	Denomination	WAS	Page	Subgroup
			53	Fuel Tank
			83	Fuel Tank
54475710	Packing		53	Fuel Tank
54475736	Packing		53	Fuel Tank
			83	Fuel Tank
54475744	Fuel Filter		3	Recommended Service Parts
			53	Fuel Tank
			83	Fuel Tank
54475751	Fuel Filter		3	Recommended Service Parts
			53	Fuel Tank
54475769	Fuel Filter Holder		53	Fuel Tank
54475785	Lable: Caution		53	Fuel Tank
			83	Fuel Tank
54475793	Caution Mark		53	Fuel Tank
			83	Fuel Tank
54475801	Oil Alert Mark		53	Fuel Tank
			83	Fuel Tank
54475819	O-ring		83	Fuel Tank
54475827	Fuel Tube		53	Fuel Tank
			83	Fuel Tank
54475835	Flange Bolt		53	Fuel Tank
			83	Fuel Tank
54674320	Water Tank Cap		9	Vibration Plate, Guard Frame And Water Tank I
54676465	Bolt		9	Vibration Plate, Guard Frame And Water Tank I
54679162	Decal, IR Emblem		21	Decals
54679170	decal, IR emblem		21	Decals
54692561	Lable, Warning		21	Decals
54693189	Washer		13	Engine, Handle And Clutch Installation
54693635	Decal, IR-Logo		21	Decals
58835943	Nut		9	Vibration Plate, Guard Frame And Water Tank I
58836438	Engine Assembly (BX-60WH°		13	Engine, Handle And Clutch Installation
58836446	Engine Assembly		13	Engine, Handle And Clutch Installation
58837709	Pulley		17	Vibration Unit Assembly
58837717	Washer		17	Vibration Unit Assembly
59188011	Name Plate		21	Decals
59188300	Lable, Caution		21	Decals
59188490	Handle Bolt		13	Engine, Handle And Clutch Installation
59236182	Washer		17	Vibration Unit Assembly
59237289	Washer		9	Vibration Plate, Guard Frame And Water Tank I
59241992	Starter Rope		3	Recommended Service Parts
			41	Starter
59242479	Starter Knob		3	Recommended Service Parts
			41	Starter
59242925	Inlet Valve Guide		23	Cylinder Head
			55	Cylinder Head
59242933	Exhaust Valve Guid		23	Cylinder Head

Part Number	Denomination	WAS	Page	Subgroup
59242941	Valve Guide Clip		23	Cylinder Head
			55	Cylinder Head
59242958	Head Gasket		23	Cylinder Head
59242974	Packing		23	Cylinder Head
			55	Cylinder Head
59242982	Breather Tube		23	Cylinder Head
59242990	Flange Bolt		23	Cylinder Head
			39	Side Cover
			43	Control Assembly
			55	Cylinder Head
			71	Side Cover
59243196	Choke Mark		49	Air Cleaner
			79	Air Cleaner
59243212	Stud Bolt		23	Cylinder Head
			55	Cylinder Head
59243220	Dowel pin		23	Cylinder Head
			55	Cylinder Head
59243238	flange Bolt		23	Cylinder Head
59243287	Spark Plug Wrench		55	Cylinder Head
59243295	Governor Kit		25	Engine Block
			57	Engine Block
59243311	Governor assembly		25	Engine Block
			57	Engine Block
59243329	Weight		25	Engine Block
			57	Engine Block
59243337	Weight holder		25	Engine Block
			57	Engine Block
59243345	Weight pin		25	Engine Block
			57	Engine Block
59243352	Slider		25	Engine Block
			57	Engine Block
59243360	Arm shaft		25	Engine Block
			57	Engine Block
59243378	Drain Plug		25	Engine Block
			57	Engine Block
59243386	Thrust Washer		25	Engine Block
			57	Engine Block
59243394	Washer		25	Engine Block
			57	Engine Block
59243600	Clip		25	Engine Block
			57	Engine Block
59243618	Bearing		25	Engine Block
			27	Crankcase Cover
59243626	Oil seal		25	Engine Block
59243634	Washer		25	Engine Block
			57	Engine Block
59243642	Lockpin		25	Engine Block
			57	Engine Block

Part Number	Denomination	WAS	Page	Subgroup
			27	Crankcase Cover
			59	Crankcase Cover
59243691	Packing		27	Crankcase Cover
			59	Crankcase Cover
59243717	Flange Bolt		27	Crankcase Cover
59243790	Piston		35	Piston
59243808	Piston Pin		35	Piston
59243816	Connection Rod Assembly		35	Piston
59243824	Connection Rod Bolt		35	Piston
			67	Piston
59243832	Clip		35	Piston
59243857	Push Rod		37	Camshaft/Valves
59243873	Valve Lifter		37	Camshaft/Valves
			69	Camshaft/Valves
59243899	Return Spring		37	Camshaft/Valves
			69	Camshaft/Valves
59243907	Intake Valve		7	Recommended Service Parts
			37	Camshaft/Valves
59243923	Valve Spring		37	Camshaft/Valves
			69	Camshaft/Valves
59243931	Spring retainer, Inlet		37	Camshaft/Valves
			69	Camshaft/Valves
59243949	Spring Retainer, Exhaust		37	Camshaft/Valves
			69	Camshaft/Valves
59243956	Valve Rotater		37	Camshaft/Valves
			69	Camshaft/Valves
59243964	Guide Plate		37	Camshaft/Valves
59243972	Pivot Bolt		37	Camshaft/Valves
			69	Camshaft/Valves
59243980	Pivot Adjusting Nut		37	Camshaft/Valves
			69	Camshaft/Valves
59243998	Recoil Starter Assembly		5	Recommended Service Parts
			41	Starter
			73	Starter
59244004	Starter Case		41	Starter
			73	Starter
59244012	Starter Reel		41	Starter
			73	Starter
59244020	Starter Ratchet		41	Starter
			73	Starter
59244038	Ratchet Guide		41	Starter
			73	Starter
59244046	Friction Spring		41	Starter
			73	Starter
59244053	Starter Spring		41	Starter
			73	Starter
59244061	Return Spring		41	Starter
			73	Starter

Part Number	Denomination	WAS	Page	Subgroup
			73	Starter
59244087	Starter Rope		3	Recommended Service Parts
			73	Starter
59244095	Setting Screw		41	Starter
			73	Starter
59244103	Flange Bolt		39	Side Cover
			41	Starter
			71	Side Cover
			73	Starter
59244111	Cover adjustment Grommet		39	Side Cover
59244145	Engine Stop Switch		3	Recommended Service Parts
			39	Side Cover
			71	Side Cover
59244152	Stop Switch Cord		39	Side Cover
			71	Side Cover
59244186	Float Valve Set		45	Carburetor
			77	Carburetor
59244194	float Set		77	Carburetor
59244202	Float Chamber Set		77	Carburetor
59244210	Pilot Screw Set		45	Carburetor
			77	Carburetor
59244228	Drain Screw Set		45	Carburetor
			77	Carburetor
59244236	Screw Set		45	Carburetor
			77	Carburetor
59244244	Choke Set		45	Carburetor
			77	Carburetor
59244269	Carburetor Insulator		45	Carburetor
59244285	Carburetor Spacer		45	Carburetor
			77	Carburetor
59244301	Choke Lever Complete		45	Carburetor
			77	Carburetor
59244319	Main Jet		45	Carburetor
59244327	Pilote Jet set		45	Carburetor
			77	Carburetor
59244418	Flange Nut		43	Control Assembly
			49	Air Cleaner
			53	Fuel Tank
			79	Air Cleaner
			83	Fuel Tank
59244467	Gasket		51	Muffler
			81	Muffler
59244475	Hex Nut		51	Muffler
			81	Muffler
59244525	Rubber Supporter		53	Fuel Tank
			83	Fuel Tank
59244566	Tube Clip		53	Fuel Tank
			83	Fuel Tank
59244590	Cooling Fan		29	Flywheel

Part Number	Denomination	WAS	Page	Subgroup
59244608	Starter Pully		29	Flywheel
			61	Flywheel
59244624	Special Nut		29	Flywheel
			61	Flywheel
59244632	Woodruff Key		29	Flywheel
			61	Flywheel
59244657	High Tension Terminal Assembl		63	Ignition
59244665	Flange Bolt		31	Ignition
			63	Ignition
59244681	Governor Rod		43	Control Assembly
59244699	Governor Spring		43	Control Assembly
59244707	Throttle Return Spring		43	Control Assembly
59244723	Lever Spring		43	Control Assembly
			75	Control Assembly
59244731	Control Adjusting Spring		43	Control Assembly
			75	Control Assembly
59244749	Cable return Spring		43	Control Assembly
			75	Control Assembly
59244756	Flange Bolt		75	Control Assembly
59244764	Flange Bolt		39	Side Cover
			43	Control Assembly
			71	Side Cover
59244772	Governor Arm Bolt		43	Control Assembly
			75	Control Assembly
59244780	Flange Nut		75	Control Assembly
59245982	Breather Tube		55	Cylinder Head
59830000	Double Ended spanner		19	Carrying Cart Assembly And Tool Kit
59830018	Double Ended Spanner		19	Carrying Cart Assembly And Tool Kit
59830026	Double Ended Spanner		19	Carrying Cart Assembly And Tool Kit
59830315	Throttle Lever		5	Recommended Service Parts
			13	Engine, Handle And Clutch Installation
59830331	Wire band		13	Engine, Handle And Clutch Installation
59831032	Key		13	Engine, Handle And Clutch Installation
59831123	Plug		17	Vibration Unit Assembly
59831131	Packing		17	Vibration Unit Assembly
59831149	Ball Bearing (BX-60WH)		17	Vibration Unit Assembly
59831156	Oil Seal		17	Vibration Unit Assembly
59831800	Lock Washer		17	Vibration Unit Assembly
59831842	Washer		9	Vibration Plate, Guard Frame And Water Tank I
			17	Vibration Unit Assembly
59831925	Spring Washer		9	Vibration Plate, Guard Frame And Water Tank I
			13	Engine, Handle And Clutch Installation
59832188	Washer		9	Vibration Plate, Guard Frame And Water Tank I
59832287	Bolt		9	Vibration Plate, Guard Frame And Water Tank I
			17	Vibration Unit Assembly
59832535	Bolt		9	Vibration Plate, Guard Frame And Water Tank I

Part Number	Denomination	WAS	Page	Subgroup
59832618	Spring Washer		13 17	Engine, Handle And Clutch Installation Vibration Unit Assembly
59835371	Washer		13	Engine, Handle And Clutch Installation
59838805	Slotted Screwdriver		19	Carrying Cart Assembly And Tool Kit
59839095	Tool Bag		19	Carrying Cart Assembly And Tool Kit
59839159	Washer		19	Carrying Cart Assembly And Tool Kit
59839176	Cotter pin		19	Carrying Cart Assembly And Tool Kit
59840082	Wire clamp		13	Engine, Handle And Clutch Installation
59841106	Washer		13	Engine, Handle And Clutch Installation
59841767	Lable, High-Low		21	Decals
59843706	Tire & Wheel Assembly		19	Carrying Cart Assembly And Tool Kit
59951632	Spring Washer		9 17	Vibration Plate, Guard Frame And Water Tank I Vibration Unit Assembly
59952242	Bolt		9 17	Vibration Plate, Guard Frame And Water Tank I Vibration Unit Assembly
59952325	Bolt		9 13	Vibration Plate, Guard Frame And Water Tank I Engine, Handle And Clutch Installation
59952382	Bolt		13	Engine, Handle And Clutch Installation
59952655	Washer		9 13	Vibration Plate, Guard Frame And Water Tank I Engine, Handle And Clutch Installation
59954131	Spring Washer		9	Vibration Plate, Guard Frame And Water Tank I
80025976	Operation & Maintenance Manu		19	Carrying Cart Assembly And Tool Kit
80025984	Parts Manual		19	Carrying Cart Assembly And Tool Kit