

 
DX-500E

Walk-Behind Duplex Rollers



Doosan purchased Bobcat Company from Ingersoll-Rand Company in 2007. Any reference to Ingersoll-Rand Company or use of trademarks, service marks, logos, or other proprietary identifying marks belonging to Ingersoll-Rand Company in this manual is historical or nominative in nature, and is not meant to suggest a current affiliation between Ingersoll-Rand Company and Doosan Company or the products of either.

PARTS MANUAL

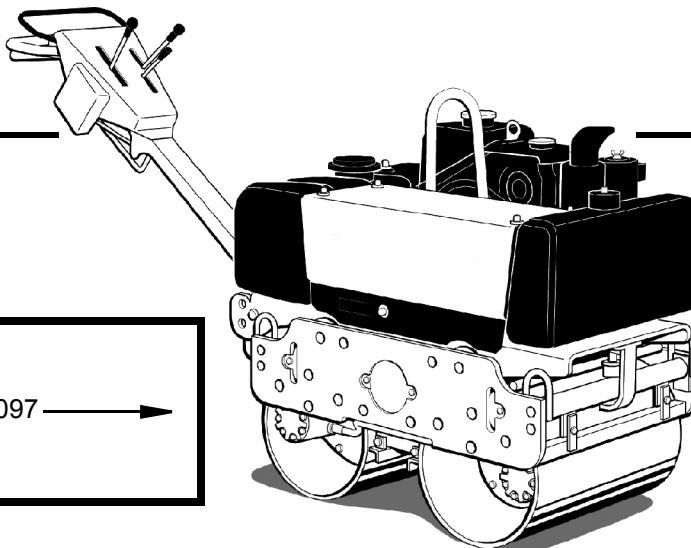

DX-500E Serial No. NF0097 →

Revised (01-13)
80026040 (10-06)



© Ingersoll Rand 2006
© Ingersoll Rand Construction Technologies

HOW TO USE THIS MANUAL

This Parts Manual applies to all DX-500E Walk-Behind Duplex Rollers

When the Comm. # is not Known - Use the Word Index:

- Ingersoll-Rand's Word Index will make this item easy to locate. The Word Index is found in the very back of the book. The items listed are in alphabetical order and may be repeated several times depending on their functional descriptions.
- Let's assume you need to replace the AIR CLEANER FILTER.

Use any of the functional words in the item description to locate the desired item. Example: The first listing for the **Air Cleaner Filter** in the **Word Index** is: Air Cleaner Filter. The index shows the component will be found on pages **43 & 73**, which are the **Parts List** page numbers for the two different Engine Assemblies.

A	
Air Cleaner Filter	43, 73
Air Cleaner.....	43, 73
Alert Unit, Oil.....	33, 69
Arm, Governor	37, 69
B	
Bag, Tool	13

- The item is also listed as:

Filter, Air Cleaner

Using the Parts Identification Pages:

- The **PARTS IDENTIFICATION PAGES** consist of the **PARTS ILLUSTRATION** (even numbered pages) and the **PARTS LIST** (odd numbered pages).
- The **Parts Illustration** shows the assembly with its component parts identified by **Item Numbers**.
- On the **Parts List**, the components are listed in **Item Number** order as found in the **ITEM** column. Other information provided by the **Parts List** is the **Comm. Number** which will be required to order Genuine Ingersoll-Rand Replacement Parts, a **functional description**, the **quantity** required to assemble one complete assembly, and any additional **notes/ dimensions** required to help place your parts order.
- **For the example: The Air Cleaner Filter shown on Page 43 is listed as Item 3, and the Comm. Number for the Element is 13221320, Quantity of 1.**

When the Comm. # is not known - Use the Table of Contents:

- Turn to the TABLE OF CONTENTS pages in the front of this manual. These pages show the major systems of the machine divided into FUNCTIONAL GROUPS.
- Find the Functional Group that best describes the area of the machine you are interested in. For example: Engine Assembly.
- See the sample Table of Contents shown below:

4 Engine Assembly - Internal Breakdown	
....	
04-01-13 Carburetor - BX-60WH	39
04-01-14 Air Cleaner - BX-60WH.....	43

Listed under the Functional Group of Internal Breakdown are SECTIONS (identified by numbers that describe major repairable components of that group. Find the listing that refers to the Honda Engine (58836438).

- Since the Air Cleaner Filter is what needs to be replaced, refer to the parts listing for the Engine. The Air Cleaner used on your machine is found in Functional Group 04; Section 01, this makes up the first part of the page number. Turn to that section of the parts manual and find the parts listing on page 43 for the Air Cleaner (13221312).

When the Comm. # is Known - Use the Numerical Index:

- If you already know the **Comm. Number** (part number) for the item required, a **NUMERICAL INDEX** is provided in the back of the manual to assist you. Look up the **Comm. Number** desired and the **Numerical Index** will show the **Page Number** where the item can be found.

For our Air Cleaner Filter Example: The Comm. Number for the Air Cleaner Filter 13221320 is found in the Numerical Index, it shows that component will be found on page 43.

UTILISATION DE CE CATALOGUE

Ce catalogue des pièces détachées s'applique à toutes les Rouleaux Duplex à Guidage Manuel DX-500E

En l'absence du numéro de pièce (Comm. Number), utilisez l'index de mots (Word Index):

- L'index de mots (Word Index) se trouve au dos de chaque catalogue. Les articles y sont classés dans l'ordre alphabétique et peuvent apparaître à plusieurs reprises, selon leurs descriptions fonctionnelles.
- Supposons que vous deviez remplacer le FILTRE A AIR (Air Cleaner Filter).

Utilisez n'importe quel terme fonctionnel de la description pour retrouver l'article souhaité. Par exemple: la première mention relative au **filtre à air** dans l'index de mots (Word Index) est: **Air Cleaner Filter**. L'index indique que le composant figure aux pages **43 & 73**, qui sont les numéros de page de la **Liste des pièces (Parts List)** des deux ensembles de moteur différents.

A	
Air Cleaner Filter	43, 73
Air Cleaner.....	43, 73
Alert Unit, Oil.....	33, 69
Arm, Governor	37,69
B	
Bag, Tool13	

- L'article est aussi répertorié sous la mention:
Filter, Air Cleaner (Filtre, à air)

Utilisation des pages d'identification des pièces (Parts Identification Pages):

- Les **PAGES D'IDENTIFICATION DES PIÈCES** incluent les **ILLUSTRATIONS DE PIÈCES (Parts Illustration)** (pages paires) et les **LISTES DE PIÈCES (Parts List)** (pages impaires).
- L'**illustration des pièces** représente l'ensemble avec les pièces qui le composent, identifiées par des **références (Item Numbers)**.
- La **Liste des pièces** énumère les composants dans l'ordre des **références** correspondant à la colonne **ARTICLE (Item)**. Les autres informations fournies par la **Liste des pièces** sont le **Numéro de pièce (Comm. Number)**, requis pour commander des pièces de rechange d'origine Ingersoll-Rand, la **description fonctionnelle**, la **quantité** requise pour assembler un ensemble complet ainsi que des **remarques/dimensions** diverses susceptibles de faciliter la commande de pièces.
- **Par exemple: Le filtre à air (Air Cleaner Filter) illustré à la Page 43 est répertorié sous l'article 3. Son numéro comm. est 13221320 et sa quantité, 1.**

En l'absence du numéro de pièce (Comm. Number), utilisez la table des matières (Table of Contents):

- Consultez les pages de la **TABLE DES MATIERES**, au début du catalogue. Ces pages répartissent les principaux circuits de la machine dans des **GROUPES FONCTIONNELS**.
- Retrouvez le **Groupe fonctionnel** qui décrit le mieux la zone de la machine qui vous intéresse. Par exemple: **Engine Assembly (Ensemble moteur)**
- Consultez l'exemple de **Table des matières** ci-dessous:

4 Engine Assembly - Internal Breakdown

....

04-01-13 Carburetor - BX-60WH 39

04-01-14 Air Cleaner - BX-60WH..... 43

Sous le **Groupe fonctionnel** des **compositions internes (Internal Breakdown)** sont répertoriées des **SECTIONS** (identifiées par des numéros décrivant les principaux composants réparables de ce groupe). Retrouvez la liste qui fait référence au moteur Honda (Honda Engine) (58836438).

- Comme le composant à remplacer est le **filtre à air (Air Cleaner Filter)**, consultez la liste des pièces (Parts List) du Moteur (Engine). Le filtre à air (Air Cleaner Filter) installé sur votre machine figure dans le **Groupe fonctionnel 04; Section 01**, qui constitue la première partie du numéro de page. Accédez à cette section du catalogue des pièces détachées et retrouvez les pièces énumérées à la page 43 qui constituent le **filtre à air (Air Cleaner)** (13221312).

Quand le numéro de pièce est connu, utilisez l'index numérique (Numerical Index):

- Si vous connaissez déjà le numéro de pièce de l'article requis, utilisez l'**INDEX NUMERIQUE (Numerical Index)**, fourni au dos du catalogue. Retrouvez le numéro de pièce souhaité et l'index numérique mentionnera le **Numéro de page** de l'article.

Pour notre exemple de filtre air (Air Cleaner Filter): le numéro de pièce (Comm. Number) de l'élément du filtre à air (Air Cleaner Filter) 13221320 figure dans l'index numérique (Numerical Index) et indique que ce composant se trouve à la page 43.

ANGABEN ZUR VERWENDUNG DIESES HANDBUCHES

Diese Ersatzteilleiste gilt für alle DX-500E Handgeführte Duplex-Walzen

Wenn die Teile-Nr. (Comm. #) unbekannt ist - das Stichwortverzeichnis (Word Index) verwenden:

- Das Stichwortverzeichnis befindet sich ganz hinten im Handbuch. Die Teile sind in alphabetischer Reihenfolge aufgeführt und können je nach ihrer Funktionsbeschreibung doppelt oder sogar mehrfach aufgeführt werden.
- Gehen wir einmal davon aus, dass der **LUFTFILTEREINSATZ (air cleaner filter)** ausgewechselt werden soll.

Zum Auffinden des gewünschten Teils eines der Funktionswörter in der Teilebeschreibung verwenden. Beispiel: Zum ersten Mal erscheint eine Auflistung für den **Luftfiltereinsatz** im Stichwortverzeichnis unter: Luftfiltereinsatz. Laut Stichwortverzeichnis ist das Teil auf den Seiten **43 & 73** beschrieben; es handelt sich dabei um die Seitennummer der **Teilleiste (parts list)** für die zwei unterschiedlichen Motorbaugruppen.

A	
Air Cleaner Filter	43, 73
Air Cleaner.....	43, 73
Alert Unit, Oil.....	33, 69
Arm, Governor	37,69
B	
Bag, Tool13	

- Das Teil ist ebenfalls aufgeführt unter:

Filter, Luftfilter

Verwendung der Teile-Seiten:

- Die **TEILE-SEITEN (parts identification pages)** bestehen aus der **TEILEDARSTELLUNG (parts illustration)** (Seiten mit gerader Seitennummer) und der **TEILLEISTE** (Seiten mit ungerader Seitennummer).
- Die **Teileabbildung** zeigt die komplette Baugruppe mit den dazugehörigen Einzelteilen, die durch die **Positionsnummern (item numbers)** gekennzeichnet sind.
- In der **Teilleiste** sind die Teile in der Spalte **POS. (item)** in der Reihenfolge der **Positionsnummer** aufgeführt. Zusätzlich enthält die **Teilleiste** folgende Angaben: die **Teilenummer (Comm. Number)**, die zum Bestellen von Original Ingersoll-Rand Ersatzteilen benötigt wird, eine **Funktionsbeschreibung**, die **Anzahl**, die für die Montage einer kompletten Baugruppe benötigt wird sowie zusätzliche **Bemerkungen/Maße**, die hilfreich für die Teilebestellung sind.
- **Beispiel:** der auf Seite 43 gezeigte Luftfiltereinsatz ist als Pos. 3 aufgeführt, die Bestellnummer für den Filtereinsatz lautet 13221320, und die Anzahl entspricht 1.

Wenn die Teile-Nr. unbekannt ist - das Inhaltsverzeichnis verwenden:

- Die Seiten mit dem **INHALTSVERZEICHNIS (table of contents)** vorn in diesem Handbuch aufschlagen. Auf diesen Seiten sind die wichtigsten Systeme der Maschine, unterteilt nach **FUNKTIONS-GRUPPEN** aufgelistet.
- Die Funktionsgruppe ausfindig machen, die am besten den Bereich der Maschine beschreibt, an dem Sie interessiert sind. Beispiel: Motorbaugruppe.
- Sehen Sie dazu die nachfolgend gezeigte Musterseite des **Inhaltsverzeichnisses**:

4 Engine Assembly - Internal Breakdown	
....	
04-01-13 Carburetor - BX-60WH	39
04-01-14 Air Cleaner - BX-60WH.....	43

Unter der **Funktionsgruppe** mit der Bezeichnung Internal Breakdown (Innere Ausstattung) sind **ABSCHNITTE (sections)** (gekennzeichnet durch die Nummer zur Beschreibung der wichtigsten reparablen Elemente der betreffenden Gruppe) aufgeführt. Die Auflistung suchen, die sich auf den Honda-Motor (M58836438) bezieht.

- Da der **Luftfiltereinsatz** ausgewechselt werden soll, muss in der Teileliste für den Motor nachgeschlagen werden. Der an der betreffenden Maschine verwendete Luftfilter kann unter **Funktionsgruppe 04; Abschnitt 1** nachgeschlagen werden; dieser Kennbuchstabe und die Kennnummer geben schon den ersten Teil der Seitennummer an. Zum betreffenden Abschnitt des Teilehandbuchs weiterblättern; hier ist dann auf Seite **43** die Teileliste für den **Luftfilter** (13221312) aufgeführt.

Wenn die Teile-Nr. bekannt ist - den Zahlenindex verwenden:

- Wenn die **Bestellnummer** (Teilenummer) für das gewünschte Teil bereits bekannt ist, kann in einem **ZAHLENINDEX** (numerical index) hinten im Handbuch nachgeschlagen werden. Die gewünschte **Bestellnummer** nachschlagen, und unter dem Zahlenindex kann dann das **Seitennummer** für das betreffende Teil nachgeschlagen werden.

Für das Beispiel des Luftfiltereinsatzes gilt also: Durch Nachschlagen der Bestellnummer für den Luftfiltereinsatz 13221320 im Zahlenindex wird festgestellt, dass das Teil auf Seite 43 beschrieben ist.

COME UTILIZZARE QUESTO MANUALE

Questo manuale ricambi é valido per tutte Rulli Vibranti Tandem con operatore a piedi DX-500E

Quando non si conosce il numero di riferimento, utilizzare l'indice per parola (Word Index):

- L'indice per parola si trova alla fine del libro. Le voci sono elencate in ordine alfabetico e possono essere ripetute più volte a seconda della descrizione della loro funzione.
- Supponiamo che si debba cambiare l'**Air Cleaner Filter (l'elemento filtro dell'aria)**.

Per trovare la voce desiderata utilizzare una delle parole della descrizione della stessa voce. Esempio: la prima parola elencata per l'**Air Cleaner Filter (Elemento Filtro dell'aria)** nell'Indice per parola é: Air Cleaner Filter. L'indice indica che il componente si trova a pagina **43 e 73**, che é il numero della pagina della **Lista Ricambi (Parts List)** per diversi gruppi motore.

A	
Air Cleaner Filter	43, 73
Air Cleaner.....	43, 73
Alert Unit, Oil.....	33, 69
Arm, Governor	37,69
B	
Bag, Tool13	

- La voce é indicata anche in questo modo:

Filter, Air Cleaner

Utilizzo delle pagine d'identificazione dei ricambi (Parts Identification Pages):

- Le **PAGINE D'IDENTIFICAZIONE DEI RICAMBI (PARTS IDENTIFICATION PAGES)** sono costituite dalle **ILLUSTRAZIONI DEI RICAMBI (PARTS ILLUSTRATION)** (numeri di pagina pari) e dalla **LISTA RICAMBI (PARTS LIST)** (numeri di pagina dispari).
- La sezione Illustrazioni dei ricambi mostra il gruppo con i pezzi che lo compongono, identificati tramite **numeri di riferimento (Item Number)**.
- Sulla **Lista ricambi**, le componenti sono elencate in ordine di **numero di riferimento (Item Number)** come si troverà nella colonna per **PAROLE (Item)**. Altre informazioni fornite dalla **Lista Ricambi** sono: il numero di riferimento, necessario per ordinare i ricambi originali Ingersoll-Rand, una **descrizione delle funzioni (functional description)**, la **quantità (quantity)** richiesta per costituire un gruppo completo e le **note/ dimensioni (notes/dimensions)** supplementari necessarie a ordinare i ricambi.
- **Esempio: Air Cleaner Filter che appare alla pagina 43 é la terza voce della lista, il numero di riferimento per l'elemento é 13221320, Quantità 1.**

Quando non si conosce il numero di riferimento (Comm. #), utilizzare l'indice analitico (Table of Contents):

- Ritorniamo all'**INDICE ANALITICO** all'inizio di questo manuale. Queste pagine indicano i principali impianti della macchina divisi in **GRUPPI FUNZIONALI (FUNCTIONAL GROUPS)**.
- Localizzare il **Gruppo Funzionale** che descrive meglio l'area della macchina interessata. Ad esempio: **Gruppo motore**.
- Ecco un campione dell'**Indice analitico**:

4 Engine Assembly - Internal Breakdown

....

04-01-13 Carburetor - BX-60WH39

04-01-14 Air Cleaner - BX-60WH.....43

Nella lista **Gruppi funzionali di Internal Breakdown** (intervalli interni) ci sono le **SEZIONI (SECTIONS)** (identificate dai numeri che descrivono le principali componenti riparabili di quel gruppo). Scorrere la lista sul **motore** Honda (58836438).

- Dal momento che l'**Air Cleaner Filter** é l'elemento da sostituire, consultare la lista dei ricambi del Motore. L'Air Cleaner utilizzato sulla vostra macchina si trova nel **Gruppo funzionale 04; Sezione 01**, questo numero corrisponde alla prima parte del numero di pagina. Andare a questa sezione del manuale e cercare la lista dei pezzi alla pagina **43** per l'**Air Cleaner** (13221312).

Quando si conosce il numero di riferimento (Comm. #) utilizzare l'Indice numerico (Numerical Index):

- Se si conosce già il **numero di riferimento** (codice) del pezzo desiderato, fare riferimento all'**INDICE NUMERICO** alla fine del manuale. Individuare il Numero di riferimento desiderato e l'Indice numerico mostrerà il **Numero di pagina** in cui la voce può essere trovata.

Nel caso dell'esempio dell'Air Cleaner Filter: il **Numero di riferimento** per l'Air Cleaner Filter 13221320 é stato trovato nell'**Indice numerico**, da cui risulta che il pezzo si trova a pagina 43.

CÓMO USAR EL PRESENTE MANUAL

Este Manual de recambios se refiere a todas las Rodillos Dúplex a Pie DX-500E

Cuando no se conoce el n° de pedido (Comm.#) – Utilice el índice alfabético (Word Index):

- El índice alfabético se encuentra en la cont raportada del libro. Los elementos están ordenados por orden alfabético, y pueden aparecer varias veces según sea su descripción funcional.
- Supongamos de necesita sustituir el **FILTRO DE AIRE** (AIR CLEANER ELEMENT).

Use cualquiera de las palabras en la descripción de elementos para localizar el que usted necesite. Ejemplo: La primera aparición del **Filtro de aire** en el **índice alfabético** es: Air Cleaner Element. El índice le indica que el componente se encuentra en las páginas **43 y 73**, correspondiente a la **lista de piezas (Parts List)** de los dos conjuntos de motor diferentes.

A	
Air Cleaner Filter	43, 73
Air Cleaner.....	43, 73
Alert Unit, Oil.....	33, 69
Arm, Governor	37,69
B	
Bag, Tool13	

- El elemento aparece también como:
Elemento, filtro de aire (Element, Air Cleaner)

Uso de las páginas de identificación de repuestos:

- Las **PÁGINAS DE IDENTIFICACIÓN DE REPUESTOS** (Parts Identification Pages) están compuestas de la **PÁGINA DE ILUSTRACIÓN** (Parts Illustration) (páginas pares) y la **LISTA DE PIEZAS** (Parts List) (páginas impares).
- La **ilustración de las piezas** muestra los componentes del conjunto identificados por medio de un **número de orden** (Comm. Number).
- En la lista de piezas, los componentes se enumeran según el **número de orden (Item Number)** en la columna de **NÚMERO (Item)**. Otra información que aparece en la **lista de piezas** es el **número pedido**, necesario para encargar repuestos originales Ingersoll-Rand, una **descripción funcional (functional description)**, la **cantidad (quantity)** precisa para montar un conjunto completo y las **notas/dimensiones (notes/dimensions)** adicionales necesarias para poder hacer el pedido de piezas.
- Por ejemplo:** El filtro de aire es el elemento n° 3 de la página 43, y el número de pedido para dicho elemento es el M13221320, cantidad: 1.

Cuando no se conoce el n° de pedido (Comm.#) - Utilice el índice (Table of Contents):

- Diríjase al **ÍNDICE**, situado en las primeras páginas del manual. Dichas páginas recogen los sistemas principales de la máquina divididos en **GRUPOS FUNCIONALES** (Functional Groups).
- Localice el grupo funcional que mejor describa la zona de la máquina en la que está interesado. Por ejemplo: **Conjunto del motor** (Engine Assembly).
- Véase el ejemplo de índice más abajo:

4 Engine Assembly - Internal Breakdown

....

04-01-13 Carburetor - BX-60WH 39

04-01-14 Air Cleaner - BX-60WH..... 43

Enumeradas bajo el **grupo funcional de divisiones internas** (Internal Breakdown) hay **SECCIONES** (Sections) (identificadas por medio de números que describen los principales componentes reparables de ese grupo. Localice la lista que hace referencia al motor Honda (58836438).

- Dado que el filtro de aire es lo que necesitamos sustituir, remítase a la lista de piezas del motor. El filtro de aire usado en su máquina se encuentra en el **grupo funcional 04; Sección 01**, correspondientes a la primera parte del número de página. Diríjase al manual y encontrará la lista de piezas en la página **43** para el **filtro de aire** (13221312).

Cuando sí se conoce el n° de pedido (Comm.#) – Utilice el índice numérico (Numerical Index):

- Si conociese de antemano el número de pedido (referencia) del elemento de que se trate, encontrará en la parte posterior del manual un **ÍNDICE NUMÉRICO** que le será de utilidad. Busque el **número de pedido** que desee y el **índice numérico** le proporcionará el **número de página** en el que encontrará el elemento.

En el caso de nuestro filtro de aire de ejemplo: El número de pedido del filtro de aire 13221320 se encuentra en el índice numérico, donde vemos que el componente está en la página 43.

HOE MOET U DIT HANDBOEK GEBRUIKEN

Dit onderdelenhandboek is van toepassing op alle DX-500E Handgevoerde tandemtrilwalsen

Als het bestelnummer niet bekend is, gebruikt u de woordindex:

- De woordindex van Ingersoll-Rand maakt dit artikel gemakkelijk op te sporen. De woordindex vindt u helemaal achterin het boek. De artikelen in de lijst staan in alfabetische volgorde en kunnen, afhankelijk van hun functiebeschrijvingen, verscheidene keren worden herhaald.
- Stel dat u het **LUCHTFILTER (AIR CLEANER FILTER)** moet vervangen.

Gebruik een van de functiewoorden in de artikelbeschrijving om het gewenste artikel op te sporen. Voorbeeld: De eerste beschrijving voor het **luchtfilter** (Air Cleaner Filter) in de woordindex is: **Luchtreiniger Filter** (Air Cleaner Filter). De index toont dat de component kan worden gevonden op de pagina's **43 & 73**. Dit zijn de paginanummers van de onderdelenlijst voor de twee verschillende motorassemblages (Engine Assemblies).

A	
Air Cleaner Filter	43, 73
Air Cleaner.....	43, 73
Alert Unit, Oil.....	33, 69
Arm, Governor	37,69
B	
Bag, Tool13	

- Het artikel is ook in de lijst opgenomen als:
Filter, luchtreiniger (Filter, Air Cleaner)

De pagina's onderdelenidentificatie gebruiken:

- De PAGINA'S **ONDERDELENIDENTIFICATIE** bestaan uit de **ILLUSTRATIE VAN DE ONDERDELEN** (even genummerde pagina's) en de **ONDERDELENLIJST** (oneven genummerde pagina's).
- De illustratie van de onderdelen toont de assemblage met zijn componentonderdelen, geïdentificeerd aan de hand van de artikelnummers.
- Op de onderdelenlijst zijn de componenten opgesomd op volgorde van de artikelnummers, zoals ze worden aangetroffen in de kolom **ARTIKEL**. Andere informatie die door de onderdelenlijst wordt verstrekt, is het bestelnummer dat vereist is om originele Bobcat reserveonderdelen te bestellen, een functiebeschrijving, het aantal dat vereist is voor de montage van een complete assemblage, en alle extra opmerkingen/ afmetingen die vereist zijn om u te helpen bij de plaatsing van uw onderdelenbestelling.
- **Als voorbeeld: Het luchtfilter (Air Cleaner Filter) dat wordt getoond op pagina 43 is in de lijst opgenomen als artikel 3, en het bestelnummer voor het element is 13221320, het aantal is 1.**

Als het bestelnummer niet bekend is, gebruikt u de inhoudsopgave:

- Blader naar de pagina's van de INHOUDSOPGAVE vooraan in deze handleiding. Deze pagina's tonen de belangrijkste systemen van de machine, verdeeld in FUNCTIEGROEPEN.
- Zoek de functiegroep die het gedeelte van de machine waarin u geïnteresseerd bent het best beschrijft. Bijvoorbeeld: Motorassemblage (Engine Assembly).
- Zie het voorbeeld van de Inhoudsopgave dat hieronder wordt getoond:

4 Engine Assembly - Internal Breakdown

....

04-01-13 Carburetor - BX-60WH	39
04-01-14 Air Cleaner - BX-60WH.....	43

In de lijst zijn onder de functiegroep Interne storingen (Internal Breakdown) SECTIES opgenomen (geïdentificeerd door nummers die de belangrijkste repareerbare onderdelen van die groep beschrijven). Zoek de beschrijving die verwijst naar de Honda motor (58836438) (Honda Engine).

- Omdat het **luchtfilter** (Air Cleaner Filter) vervangen moet worden, raadpleegt u de onderdelenlijst voor de **motor** (Engine).
De op uw machine gebruikte **luchtreiniger** (Air Cleaner) vindt u in functiegroep 04; Sectie 01, dit vormt het eerste deel van het paginanummer. Blader naar die sectie van het onderdelenhandboek en zoek de onderdelenlijst op pagina **43** van de **luchtreiniger** (13221312) (Air Cleaner).

Als het bestelnummer wel bekend is, gebruikt u de numerieke index:

- Als u het **bestelnummer** (onderdeelnummer) van het vereiste artikel al kent, gebruikt u de **NUMERIEKE INDEX** achterin de handleiding om u bij te staan. Zoek het gewenste bestelnummer op en de numerieke index toont u het paginanummer waar het artikel kan worden aangetroffen.

Voor ons Luchtfiltervoorbeeld: het bestelnummer voor het luchtfilter 13221320 vindt u in de numerieke index. Deze toont aan dat de component kan worden gevonden op pagina 43.

STANDARD ABBREVIATIONS

AC	Alternating Current	Ref	Reference
A/R	As Required	RH	Right Hand
ARC	Authorized Rebuilt Component	RHSS	Round Head SelfTapping Screw
Assy	Assembly	ROPS	Roll-Over Protection System
BHCS	Button Head Cap Screw	RPM	Revolutions Per Minute
Cu Yd	Cubic Yard	SAE	Society of Automotive Engineers
Cyl	Cylinder	Sec	Section
DC	Direct Current	SFH	Slotted Fillister Head
Dia	Diameter	SHCS	Socket Head Cap Screw
Eff	Effective	SMV	Slow Moving Vehicle
FHCS	Flat Head Cap Screw	S/N	Serial Number
F-N-R	Forward-Neutral-Reverse	SPST	Single Pole/Single Throw
FOPS	Falling Object Protection System	S.T.	Self-Tapping
F/P	Fork Positioning	Std	Standard
Gr	Grade	Str	Straight
HHCS	Hex Head Cap Screw	Sw	Swivel
HHMS	Hex Head Machine Screw	Tach	Tachometer
HSBHCS	Hex Socket Button Head Cap Screw	Temp	Temperature
ID	Inside Diameter	Thd	Thread
LH	Left Hand	Thk	Thick
M	Metric	Typ	Typical
MIK	Maintenance Interval Kit	UNC	Unified Coarse
mm	Millimeter	UNF	Unified Fine
Nat Asp	Naturally Aspirated	Univ	Universal
Neg	Negative	Var	Variable
NSS	Not Sold Separately	V	Volt
NSVA	Non Serviceable Assembly	VPM	Vibrations Per Minute
OD	Outside Diameter	Wgt	Weight
Pos	Positive	w/	With
PSI	Pounds per Square Inch	w/o	Without
Q/A	Quick-Attach	Wp	Weatherproof

ABREVIATIONS STANDARD

AC	Courant alternatif	Ref	Référence
A/R	Comme requis	RH	Droite
ARC	Composant rénové autorisé	RHSS	Vis auto-taraudeuse à tête arrondie
Assy	Ensemble	ROPS	Dispositif de protection contre le retournement
BHCS	Vis à tête demi-ronde	RPM	Tours par minute
Cu Yd	Yard cubique	SAE	Society of Automotive Engineers
Cyl	Vérin	Sec	Section
DC	Courant continu	SFH	Tête conique à encoche
Dia	Diamètre	SHCS	Vis creuse à tête demi-ronde
Eff	Effectif	SMV	Véhicule lent
FHCS	Vis à tête plate	S/N	Numéro de série
F-N-R	Avant-Point mort-Arrière	SPST	Contacteur unipolaire
FOPS	Dispositif de protection contre la chute d'objets	S.T.	Auto-taraudeuse
F/P	Positionnement des fourches	Std	Standard
Gr	Classe	Str	Droit
HHCS	Vis à tête hex	Sw	Pivot
HHMS	Vis à six pans	Tach	Tachymètre
HSBHCS	Vis demi-ronde à six pans creuse	Temp	Température
ID	Diamètre intérieur	Thd	Filet
LH	Gauche	Thk	Epaisseur
M	Métrique	Typ	Typique
MIK	Kit de maintenance	UNC	Unifié gros
mm	Millimètre	UNF	Unifié fin
Nat Asp	Aspiré naturellement	Univ	Universel
Neg	Négatif	Var	Variable
NSS	Non vendu séparément	V	Volt
NSVA	Ensemble ne nécessitant pas d'entretien	VPM	Vibrations par minute
OD	Diamètre extérieur	Wgt	Poids
Pos	Positif	w/	Avec
PSI	Livres par pouce carré	w/o	Sans
Q/A	Fixation rapide	Wp	Etanche

STANDARDABKÜRZUNGEN

AC	Wechselstrom	RH	Rechts
A/R	Nach Bedarf	RHSS	Rundkopf-Schneidschraube
ARC	Mit Genehmigung instandgesetztes Teil	ROPS	Überrollschutz
Assy	Baugruppe	RPM	Umdrehungen pro Minute
BHCS	Halbrundschrabe	SAE	Gesellschaft der Automobilingenieure (Society of Automotive Engineers)
Cu Yd	Kubikyard	Sec	Kapitel, Schnitt
Cyl	Zylinder	SFH	Schlitzschraube mit Zylinderkopf
DC	Gleichstrom	SHCS	Innensechskant-Kopfschraube
Dia	Durchmesser	SMV	Langsam fahrendes Fahrzeug
Eff	Effektiv	S/N	Seriennummer
FHCS	Senkkopfschraube	SPST	Einpoliger Schalter
F-N-R	Vorwärts-Leerlauf-Rückwärts	S.T.	Selbstschneidend
FOPS	Aufbau zum Schutz gegen herabfallende Gegenstände	Std	Standard
F/P	Gabelpositionierung	Str	Gerade
Gr	Klasse	Sw	Drehgelenk
HHCS	Sechskantschraube	Tach	Drehzahlmesser
HHMS	Sechskant-Maschinenschraube	Temp	Temperatur
HSBHCS	Innensechskant-Halbrundkopfschraube	Thd	Gewinde
ID	Innendurchmesser	Thk	Dick
LH	Links	Typ	Typisch
M	Metrisch	UNC	Grobgewinde
MIK	Wartungssatz	UNF	Feingewinde
mm	Millimeter	Univ	Universal
Nat Asp	Saug-Neg Negativ	Var	Variable
NSS	Nicht separat verkauft	V	Volt
NSVA	Nicht wartbare Baugruppe	VPM	Vibrationen pro Minute
OD	Außendurchmesser	Wgt	Gewicht
Pos	Positiv	w/	Mit
PSI	Pfund pro Quadratzoll	w/o	Ohne
Q/A	Schnellanbringung	Wp	Witterungsbeständig
Ref	Referenz		

ABBREVIAZIONI STANDARD

AC	Corrente alternata	Ref	Riferimento
A/R	Secondo la necessità	RH	Destro
ARC	Componente a ricostruzione autorizzata	RHSS	Vite autofilettante a testa circolare
Assy	Gruppo	ROPS	Sistema di protezione contro il ribaltamento
BHCS	Vite con testa tonda stretta	RPM	Giri al minuto
Cu Yd	larda cubica	SAE	Society of Automotive Engineers
Cyl	Cilindro	Sec	Sezione
DC	Corrente diretta	SFH	Testa cilindrica a fessura
Dia	Diametro	SHCS	Vite ad esagono incassato
Eff	Effettivo	SMV	Veicolo lento
FHCS	Vite a testa piana	S/N	Numero di serie
F-N-R	Avanti-Folle-Retromarcia	SPST	Interruttore unipolare
FOPS	Sistema di protezione contro la caduta di oggetti	S.T.	Autofilettante
F/P	Posizionamento della forza	Std	Standard
Gr	Grado	Str	Diritto
HHCS	Vite a testa esagonale	Sw	Interruttore
HHMS	Vite a testa esagonale lavorata	Tach	Tachimetro
HSBHCS	Vite a testa esagonale incassata	Temp	Temperatura
ID	Diametro interno	Thd	Filettatura
LH	Sinistro	Thk	Grosso
M	Metrico	Typ	Tipico
MIK	Kit intervallo di manutenzione	UNC	Passo grosso
mm	Millimetro	UNF	Passo fine
Nat Asp	Aspirato naturalmente	Univ	Universale
Neg	Negativo	Var	Variabile
NSS	Non venduto separatamente	V	Volt
NSVA	Gruppo non riparabile	VPM	Vibrazioni al minuto
OD	Diametro esterno	Wgt	Peso
Pos	Positivo	w/	Con
PSI	Libbre per pollice quadrato	w/o	Senza
Q/A	Aggancio rapido	Wp	Resistente all'acqua

ABREVIATURAS ESTÁNDAR

AC	Corriente alterna	Ref	Número de orden
A/R	Según sea necesario	RH	Derecha
ARC	Componente reelaborado autorizado	RHSS	Tornillo autorroscante cabeza redonda
Assy	Conjunto	ROPS	Sist. protección contra vuelcos
BHCS	Tornillo de cabeza de botón	RPM	Revoluciones por minuto
Cu Yd	Yarda cúbica	SAE	Society of Automotive Engineers
Cyl	Cilindro	Sec	Sección
DC	Corriente continua	SFH	Cabeza con ranura de encaje
Dia	Diámetro	SHCS	Tornillo con cabeza de tubo
Eff	Efectivo	SMV	Vehículo lento
FHCS	Tornillo de cabeza plana	S/N	Número de serie
F-N-R	Adelante-Punto muerto-Atrás	SPST	Unipolar y univanal (un contacto)
FOPS	Sist. protección contra caída de objetos	S.T.	Autorroscante
F/P	Posicionamiento de las horquillas	Std	Estándar
Gr	Nivelar	Str	Recto
HHCS	Tornillo de cabeza hexagonal	Sw	Basculante
HHMS	Tornillo de cabeza hexagonal maqui- nada	Tach	Tacómetro
HSBHCS	Tornillo de cabeza botón hexagonal	Temp	Temperatura
ID	Diámetro interior	Thd	Rosca
LH	Izquierda	Thk	Grueso
M	Métrico	Typ	Típico
MIK	Conjunto de intervalo de mantenimiento	UNC	Paso ancho unificado
mm	Milímetro	UNF	Paso fino unificado
Nat Asp	Aspirado	Univ	Universal
Neg	Negativo	Var	Variable
NSS	No se vende por separado	V	Voltios
NSVA	Conjunto no reparable	VPM	Vibraciones por minuto
OD	Diámetro exterior	Wgt	Peso
Pos	Positivo	w/	Con
PSI	Libras por pulgada cuadrada	w/o	Sin
Q/A	Quick-Attach (enganche rápido)	Wp	Impermeable

STANDAARD AFKORTINGEN

AC	Wisselstroom	Ref	Referentie
A/R	Zoals vereist	RH	Rechts
ARC	Toegelaten ruilcomponent	RHSS	Bolkop parkerschroef
Assy	Samenstel	ROPS	Roll-over beschermingsysteem
BHCS	(Plat)bolkop kopschroef	TPM	Toeren per minuut
Cu Yd	Kubieke yard	SAE	Society of Automotive Engineers (Vereniging van autotechnische ingenieurs)
Cyl	Cilinder		
DC	Gelijkstroom	Sec	Sectie
Dia	Diameter	SFH	Sleufcilinderkop
Eff	Effectief	SHCS	Inbuskop kopschroef
FHCS	Platkop kopschroef	SMV	Traag bewegend voertuig
F-N-R	Vooruit -Vrijstand-Achteruit	S/N	Serienummer
FOPS	Beschermingsysteem tegen vallende objecten	SPST	Enkelpolig/enkele wikkelspoed
F/P	Vorkpositionering	S.T.	Zelftappend
Gr	Graad	Std	Standaard
HHCS	Zeskantkop kopschroef	Str	Recht
HHMS	Zeskantkop kolomschroef	Sw	Wartel
HSBHCS	Platbolkop kopschroef met verzonken zeskant	Tach	Snelheidsmeter
ID	Binnendiameter	Temp	Temperatuur
LH	Links	Thd	Schroefdraad
M	Metrisch	Thk	Dik
MIK	Onderhoudsintervalkit	Typ	Karakteristiek
mm	Millimeter	UNC	Grove schroefdraad
Nat Asp	Natuurlijke aanzuiging	UNF	Fijne schroefdraad
Neg	Negatief	Univ	Universeel
NSS	Niet afzonderlijk verkocht	Var	Variabele
NSVA	Niet onderhoudbaar samenstel	V	Volt
OD	Buitendiameter	VPM	Trillingen per minuut
Pos	Positief	Wgt	Gewicht
PSI	Pond per vierkante inch	w/	Met
Q/A	Snelbevestiging	w/o	Zonder
		Wp	Weerbestendig

CONTENTS

0 Recommended Service Parts

00-01-01 Recommended Service Parts - 0 - 1000 Operating Hours	3
00-01-02 Recommended Service Parts - 1000 - 3000 Operating Hours	5
00-01-03 Recommended Service Parts - 3000 < Operating Hours	7

1 Main Frame

01-01-01 Frame Installation	9
01-01-02 Oil Tank & Water Tank Installation	11
01-01-03 Operation Handle Installation - Forward / Reverse	17
01-01-04 Operating Handle Installation - Neutral	23
01-01-05 Vibration Lever/Throttle Lever Installation	27
01-01-06 Tool Kit & Manuals	31
01-01-07 Truck Hook Assembly - Optional	33

2 Drum

02-01-01 Drum Installation	35
02-01-02 Eccentric Case Installation	39

3 Engine

03-01-01 Engine Installation	43
------------------------------	----

4 Electrical

04-01-01 Electrical Installation	47
----------------------------------	----

5 Decals

05-01-01 Decal Installation	49
-----------------------------	----

6 Hosing

06-01-01 Hydraulic Hosing Installation	51
--	----

7 Internal Breakdowns

07-01-01 Crankcase	55
07-01-02 Cylinder Head	57
07-01-03 Gear Case	59
07-01-04 Cylinder Head Cover	61
07-01-05 Oil Filter	63
07-01-06 Oil Gauge	65
07-01-07 Oil Pump	67
07-01-08 Side Apron	69
07-01-09 Main Bearing Case	71
07-01-10 Camshaft	73
07-01-11 Piston assembly	75
07-01-12 Flywheel	77
07-01-13 Balancer	79
07-01-14 Control Installation	81
07-01-15 Jet Start	83
07-01-16 Injection Pump	85
07-01-17 Governor	87
07-01-18 Throttle	89

07-01-19 Nozzle Holder	91
07-01-20 Nozzle	93
07-01-21 Fuel Filter	95
07-01-22 Fuel Tank	97
07-01-23 Starter	99
07-01-24 Starter Assembly	101
07-01-25 Oil Switch	103
07-01-26 Radiator	105
07-01-27 Fan	107
07-01-28 Tension Pulley	109
07-01-29 Valves	111
07-01-30 Air Cleaner	113
07-01-31 Muffler	115
07-01-32 Ignition	117
07-01-33 Tool Kit	119
07-01-34 Engine Decals	121

Walk-Behind Duplex Rollers DX-500E

Recommended Service Parts

0 - 1000 Operating Hours

**Recommended
Service Parts**
0-1000 Operating Hours

PC000000

Recommended Service Parts

0 - 1000 Operating Hours

**Section
00-01-01**

Item	Part Number	Denomination	Remarks	Serial Number	Qty
		Engine - Kubota			
	59333708	Oil Filter			1
	59335307	Fuel Filter Assembly			1
	59854398	Element Assembly			1
	59239038	Fuel Tank Cap			1
	59335828	Radiator Cap			1
	59854414	V-belt			1
	59854315	Air Cleaner Element			1
	59239160	Ignition Switch Assembly			1
	59239178	Ignition Key			1
		Frame			
	54674320	Water Tank Cap			1
	54674262	Oil Tank Cap			1
	54678008	Forward/Reverse Lever Knob			1
	54678008	Forward/Reverse Lever Knob			1
	59952192	Throttle Lever Knob			1
	54677109	Brake Lever			1
		Drum			
	54677794	V-belt			1
		Hydraulics			
	54678545	Hydraulic Tank Cap			1
	54678552	Hydraulic Tank Filter			1
	59838581	Oil Filter			1

Recommended Service Parts

1000 - 3000 Operating Hours

**Recommended
Service Parts**
1000-3000 Operating Hours

PC000136

**Section
00-01-02**

Walk-Behind Duplex Rollers DX-500E

Recommended Service Parts

3000 < Operating Hours


**Recommended
Service Parts**
3000 < Operating Hours

PC000137

**Section
00-01-03**

Walk-Behind Duplex Rollers DX-500E

 Frame Installation

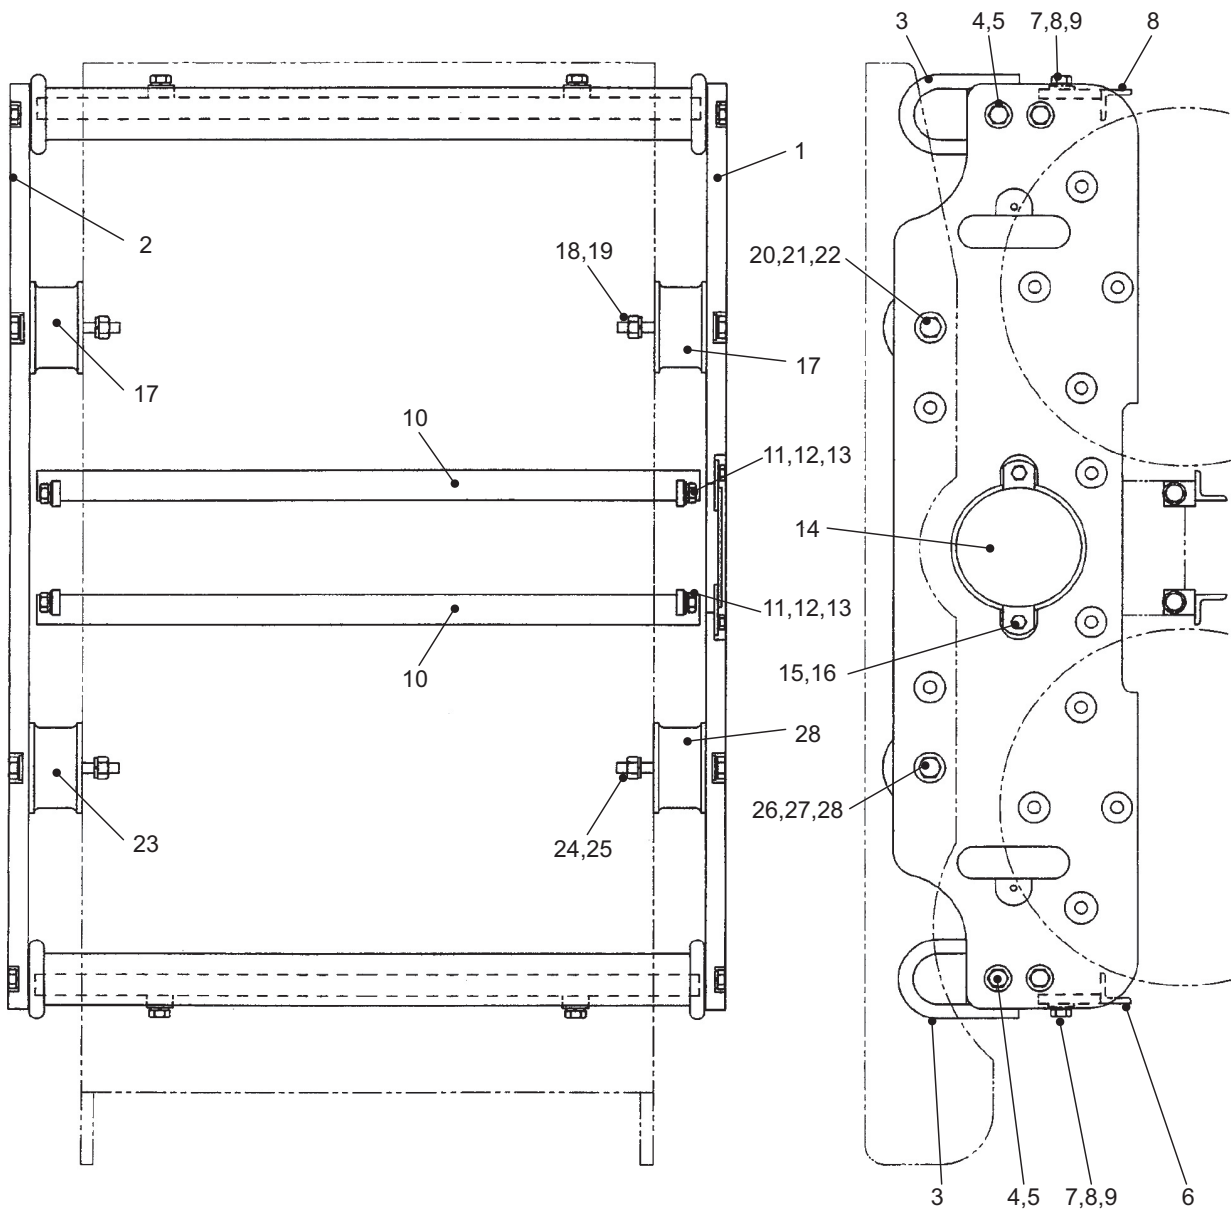



PC000078

Frame Installation

Section
01-01-01

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	54674023	Right Side Frame (DX-500E)			1
2	54674106	Left Side Frame (DX-500E)			1
3	54674122	Member (DX-500E)			1
4	59952242	Bolt			8
5	59956132	Spring Washer			8
6	54674148	Scraper (A) (DX-500E)			2
7	59952242	Bolt			4
8	59951632	Spring Washer			4
9	59952291	Washer			4
10	54674163	Scraper (B) (DX-500E)			2
11	59952242	Bolt			4
12	59951632	Spring Washer			4
13	54674171	Washer			4
14	54674189	Cover (B)			1
15	59188144	Bolt			2
16	59831560	Lockwasher			2
17	54674197	Rubber Buffer, 45°			2
18	59831750	Nut			2
19	59831743	Spring Washer			2
20	59833780	Bolt			2
21	59831602	Lockwasher			2
22	54674205	Plain Washer			2
23	54674213	Rubber Buffer, 65°			2
24	59831750	Nut			2
25	59831743	Spring Washer			2
26	59833780	Bolt			2
27	59831602	Lockwasher			2
28	54674205	Plain Washer			2

  Oil Tank & Water Tank Installation

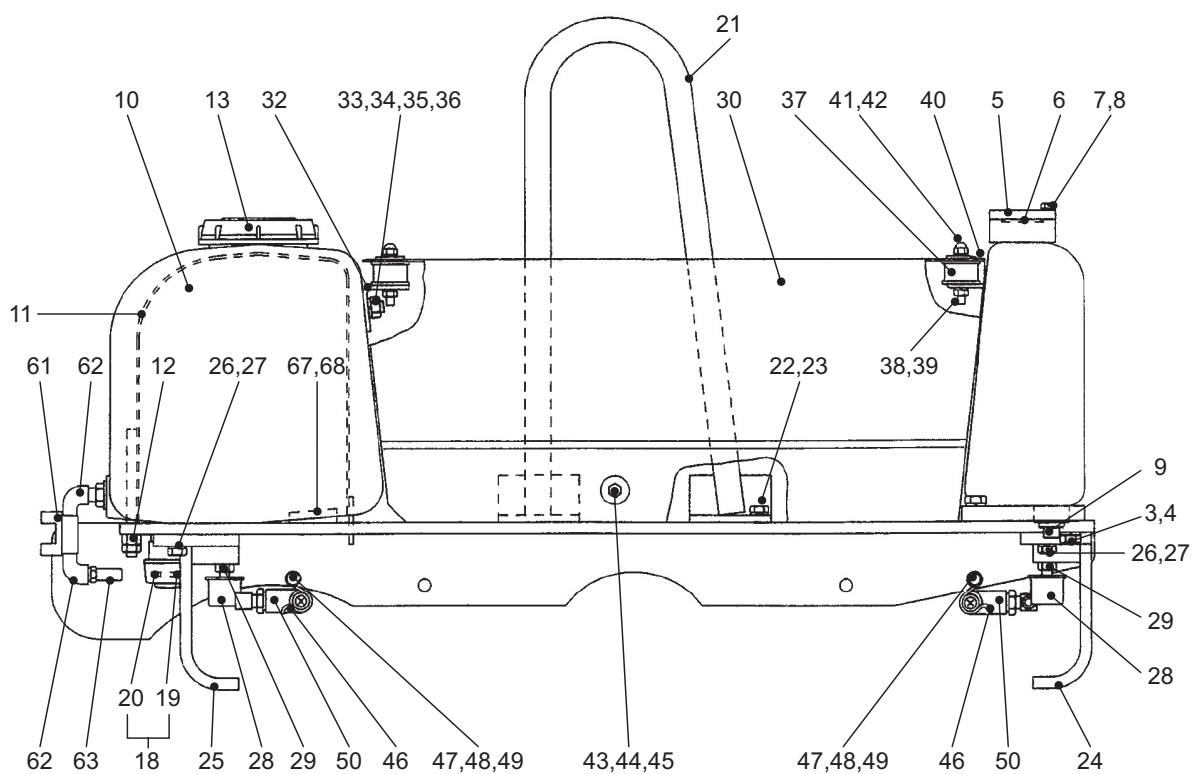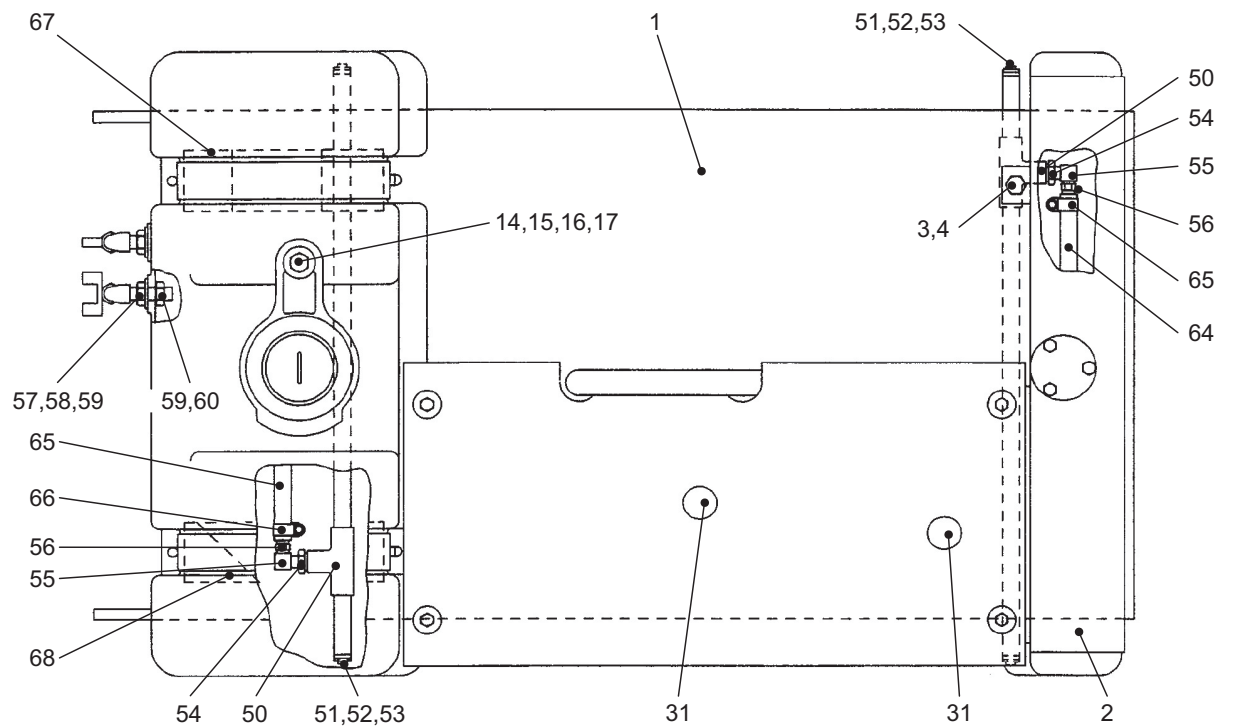

PC000079



Oil Tank & Water Tank Installation

Section
01-01-02

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	54674239	Base (DX-500E)			1
2	54674254	Oil Tank (DX-500E)			1
3	59831594	Bolt			4
4	59831743	Spring Washer			4
5	54674262	Oil Tank Cap			1
6	59406603	O-ring			1
7	59832535	Bolt			3
8	59831925	Spring Washer			3
9	54674270	Plug			1
10	54674296	Water Tank (DX-500E)			1
11	54674304	Water Tank Band			2
12	54674312	Nut			4
13	54674320	Water Tank Cap			1
14	54674338	Bolt			1
15	59235796	Packing			1
16	59952473	Plain Washer			1
17	54674346	Capnut			1
18	54674353	Drain Cap CP	Includes Ref. 19 + 20		1
19	54674361	Drain Cap			1
20	54674379	Packing			1
21	54674387	Lifting Hook			1
22	59952242	Bolt			4
23	59951632	Spring Washer			4
24	54674395	Stop Plate (A)			1
25	54674411	Stop Plate (B)			1
26	59952242	Bolt			4
27	59951632	Spring Washer			4
28	54674429	Rubber Stop			2
29	59832931	Nut			2
30	54674445	Cover (A) (DX-500E)			1
31	54674460	Cap			2

Oil Tank & Water Tank Installation

  Recurrence of previous drawing

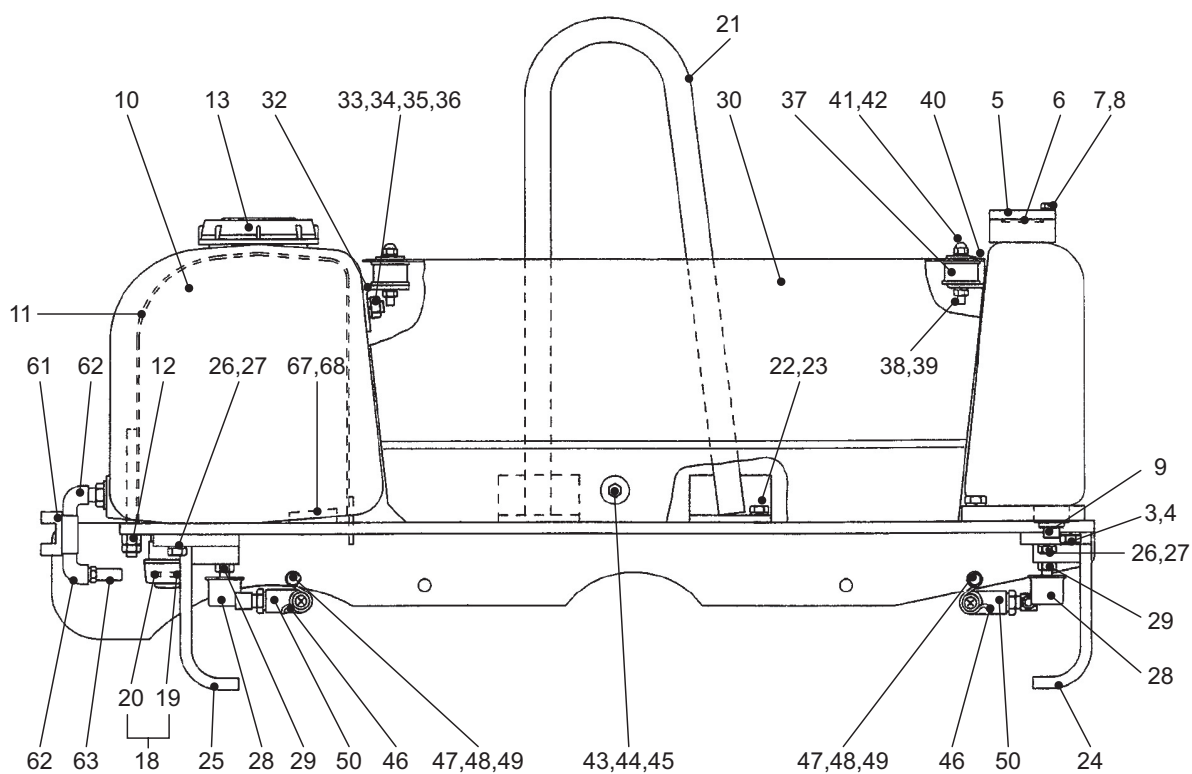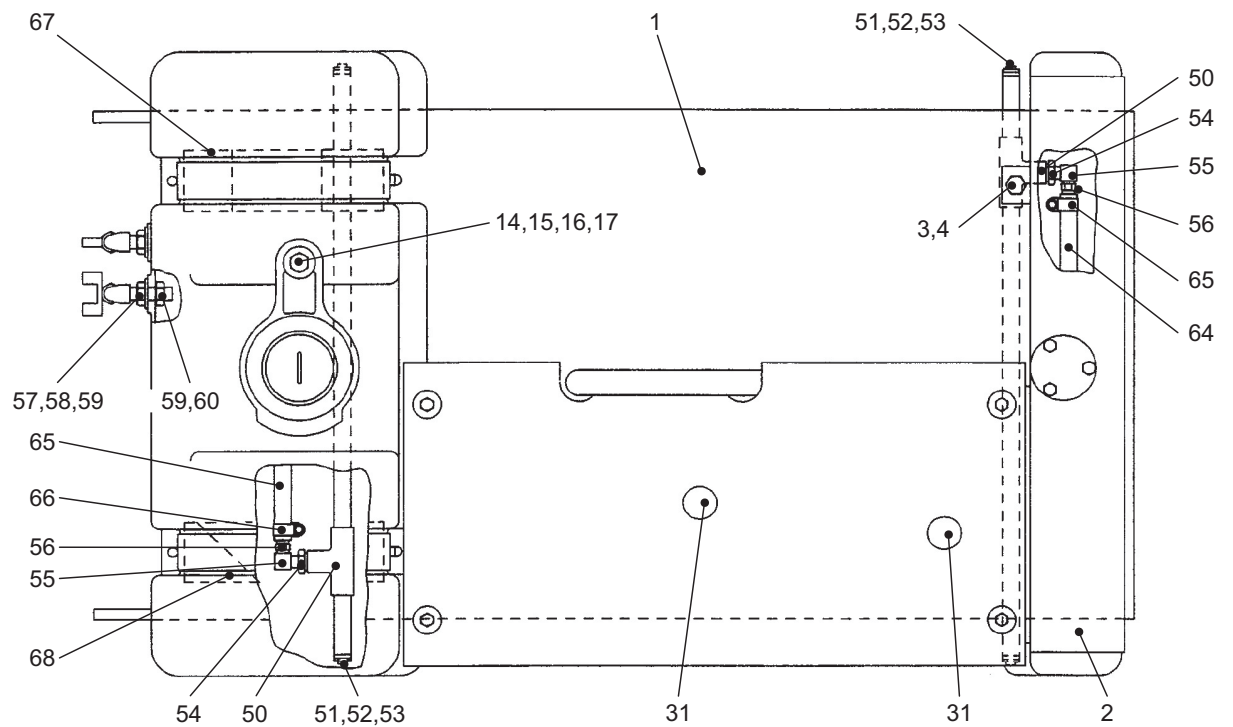

PC000079



Oil Tank & Water Tank Installation

Section
01-01-02

Item	Part Number	Denomination	Remarks	Serial Number	Qty
32	54674486	Bracket (DX-500E)			1
33	54674494	Bolt			2
34	59235796	Packing			2
35	59831750	Nut			2
36	59831743	Spring Washer			2
37	59835330	Rubber Buffer (B)			4
38	59832931	Nut			4
39	59831925	Spring Washer			4
40	59838011	Plain Washer			4
41	54674502	Capnut			4
42	59831925	Spring Washer			1
43	59832535	Bolt			1
44	59831925	Spring Washer			1
45	59838011	Plain Washer			1
46	54674510	Sprinkler Pipe Bracket			4
47	59832535	Bolt			4
48	59831925	Spring Washer			4
49	54674528	Washer			4
50	54674544	Sprinkler Pipe (DX-500E)			2
51	59832170	Rubber Plug Assembly			4
52	59954123	Screw			4
53	59954131	Spring Washer			4
54	54674551	Bushing			2
55	59951764	Elbow			2
56	54674569	Hose Joint			2
57	59235770	Joint			2
58	54674577	Washer			2
59	59235796	Packing			4
60	59235788	Nut			2
61	54674585	Sprinkler Valve			2
62	54674593	Elbow			4

Oil Tank & Water Tank Installation

  Recurrence of previous drawing

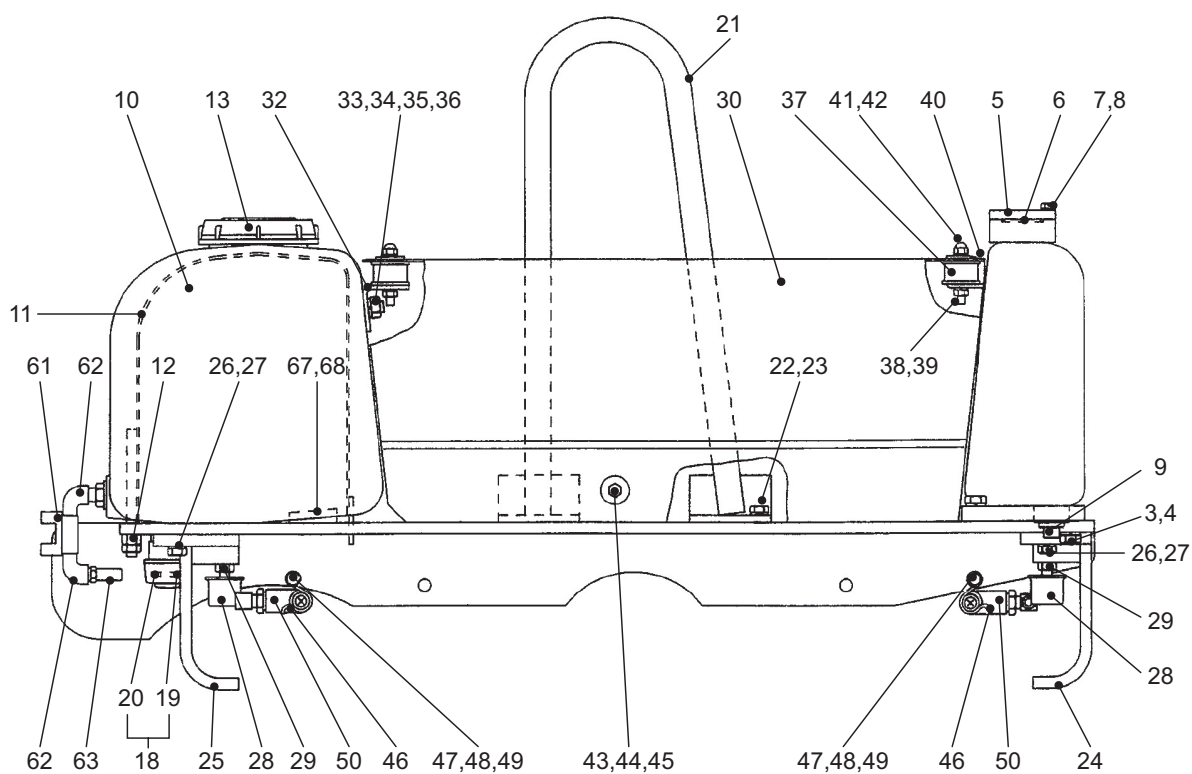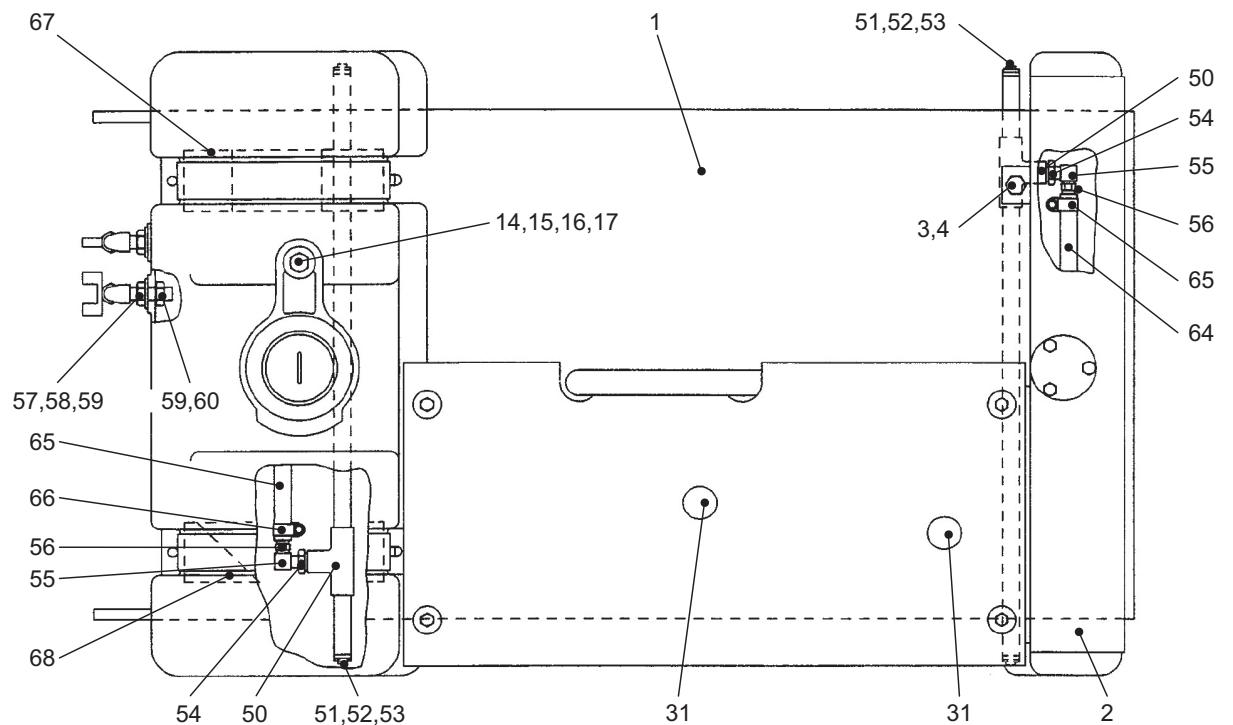


PC000079

**Section
01-01-02**

15

 Operation Handle Installation Forward / Reverse

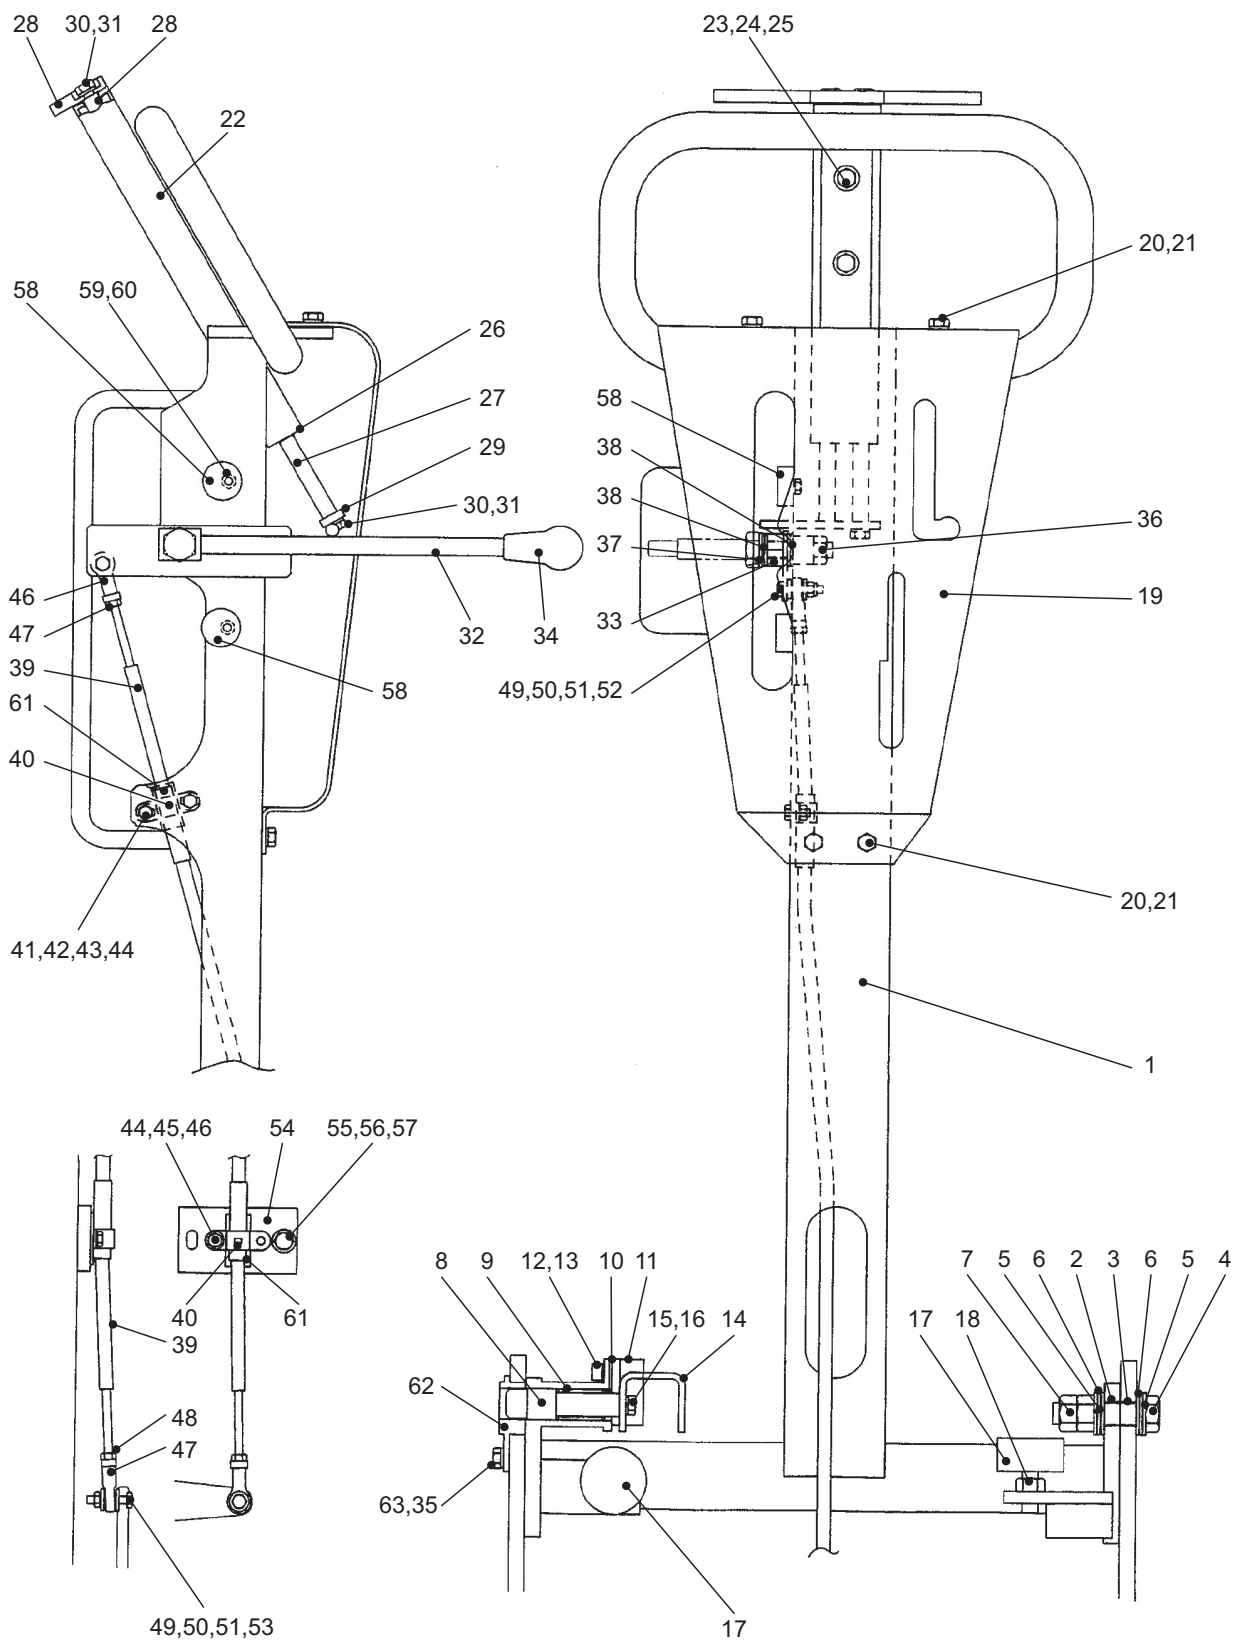

PC000080


Operation Handle Installation

Forward / Reverse

Section
01-01-03

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	54677810	Operation Handle (DX-500E)			1
2	54677828	Bushing			2
3	54677828	Bushing			2
4	54677836	Bolt			2
5	59235879	Washer			4
6	54677844	Friction Spring			8
7	54677851	Nut			4
8	54677869	Pin			1
9	59836221	Return Spring			1
10	54677877	Collar			1
11	54677885	Bracket			1
12	54677893	Socket Head Bolt			1
13	59831560	Lockwasher			1
14	54677901	Hook			1
15	59832535	Bolt			1
16	59831925	Spring Washer			1
17	59832766	Rubber Stop			2
18	59831750	Nut			2
19	54677919	Lever Guide			1
20	59188144	Bolt			4
21	59831925	Spring Washer			4
22	54677927	Holder			1
23	59832535	Bolt			2
24	59831925	Spring Washer			2
25	54677935	Washer			2
26	54677943	Bushing			4
27	54677950	Rod			2
28	54677968	Bar			1
29	54677976	Bar			1
30	59188144	Bolt			4
31	59831925	Spring Washer			4

 Operation Handle Installation Forward / Reverse

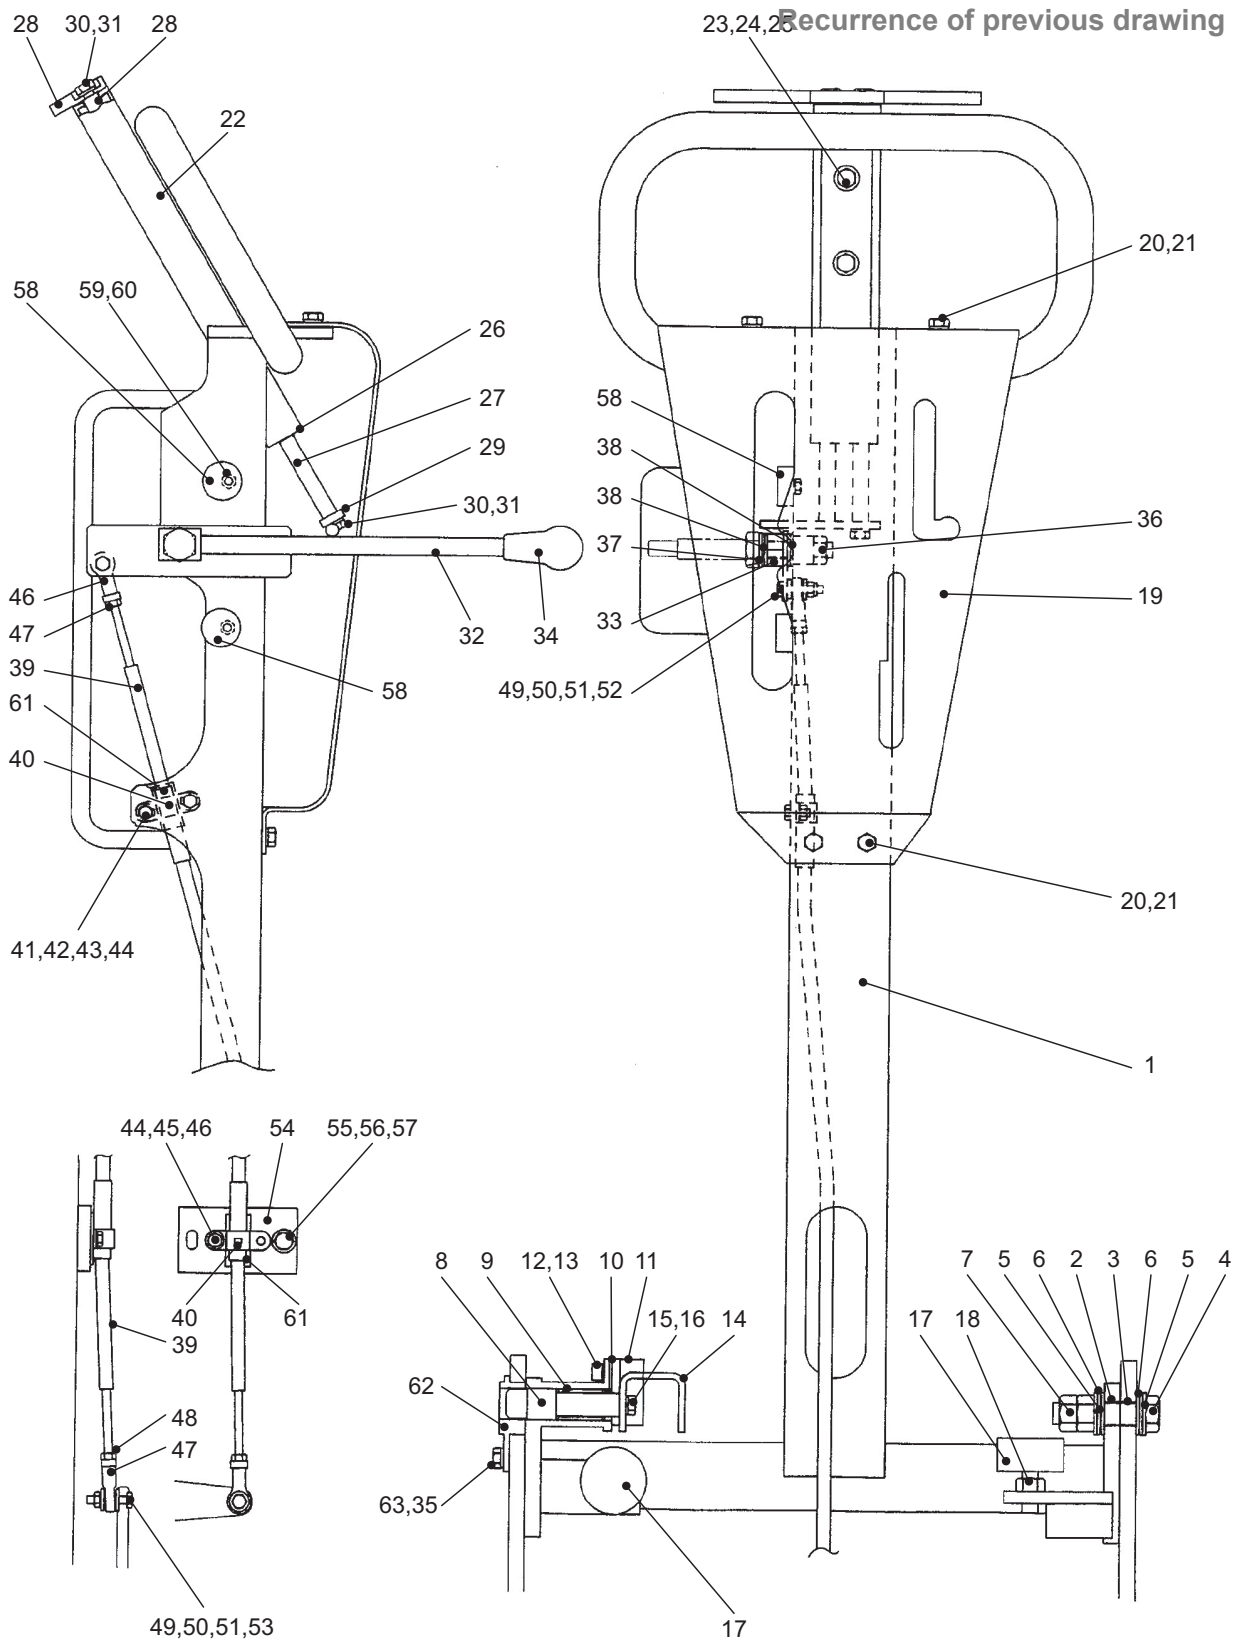

PC000080


Operation Handle Installation

Forward / Reverse

Section
01-01-03

Item	Part Number	Denomination	Remarks	Serial Number	Qty
32	54677984	Forward / Reverse Lever			1
33	54677992	Bushing			1
34	54678008	Forward/Reverse Lever Knob			1
35	59831925	Spring Washer			2
36	59831750	Nut			1
37	54678016	Plain Washer			1
38	54678024	Friction Spring			4
39	54678032	Forward/Reverse Cable			1
40	54678040	Bracket			2
41	54676465	Bolt			2
42	59833293	Spring Washer			2
43	59405514	Nut			2
44	59954131	Spring Washer			4
45	59839126	Bolt			2
46	59833293	Spring Washer			2
47	54678057	Rod End			2
48	59405514	Nut			2
49	59953224	Bolt			2
50	59954131	Spring Washer			4
51	59833293	Spring Washer			2
52	54678065	Nylon Nut			1
53	59405514	Nut			1
54	54678073	Clamp Set Plate			1
55	59952325	Bolt			2
56	59831925	Spring Washer			2
57	54678099	Washer			2
58	54678107	Collar			2
59	54676465	Bolt			2
60	59833293	Spring Washer			2
61	54678115	Spacer			2
62	54678123	Holder			1

 Operation Handle Installation Forward / Reverse

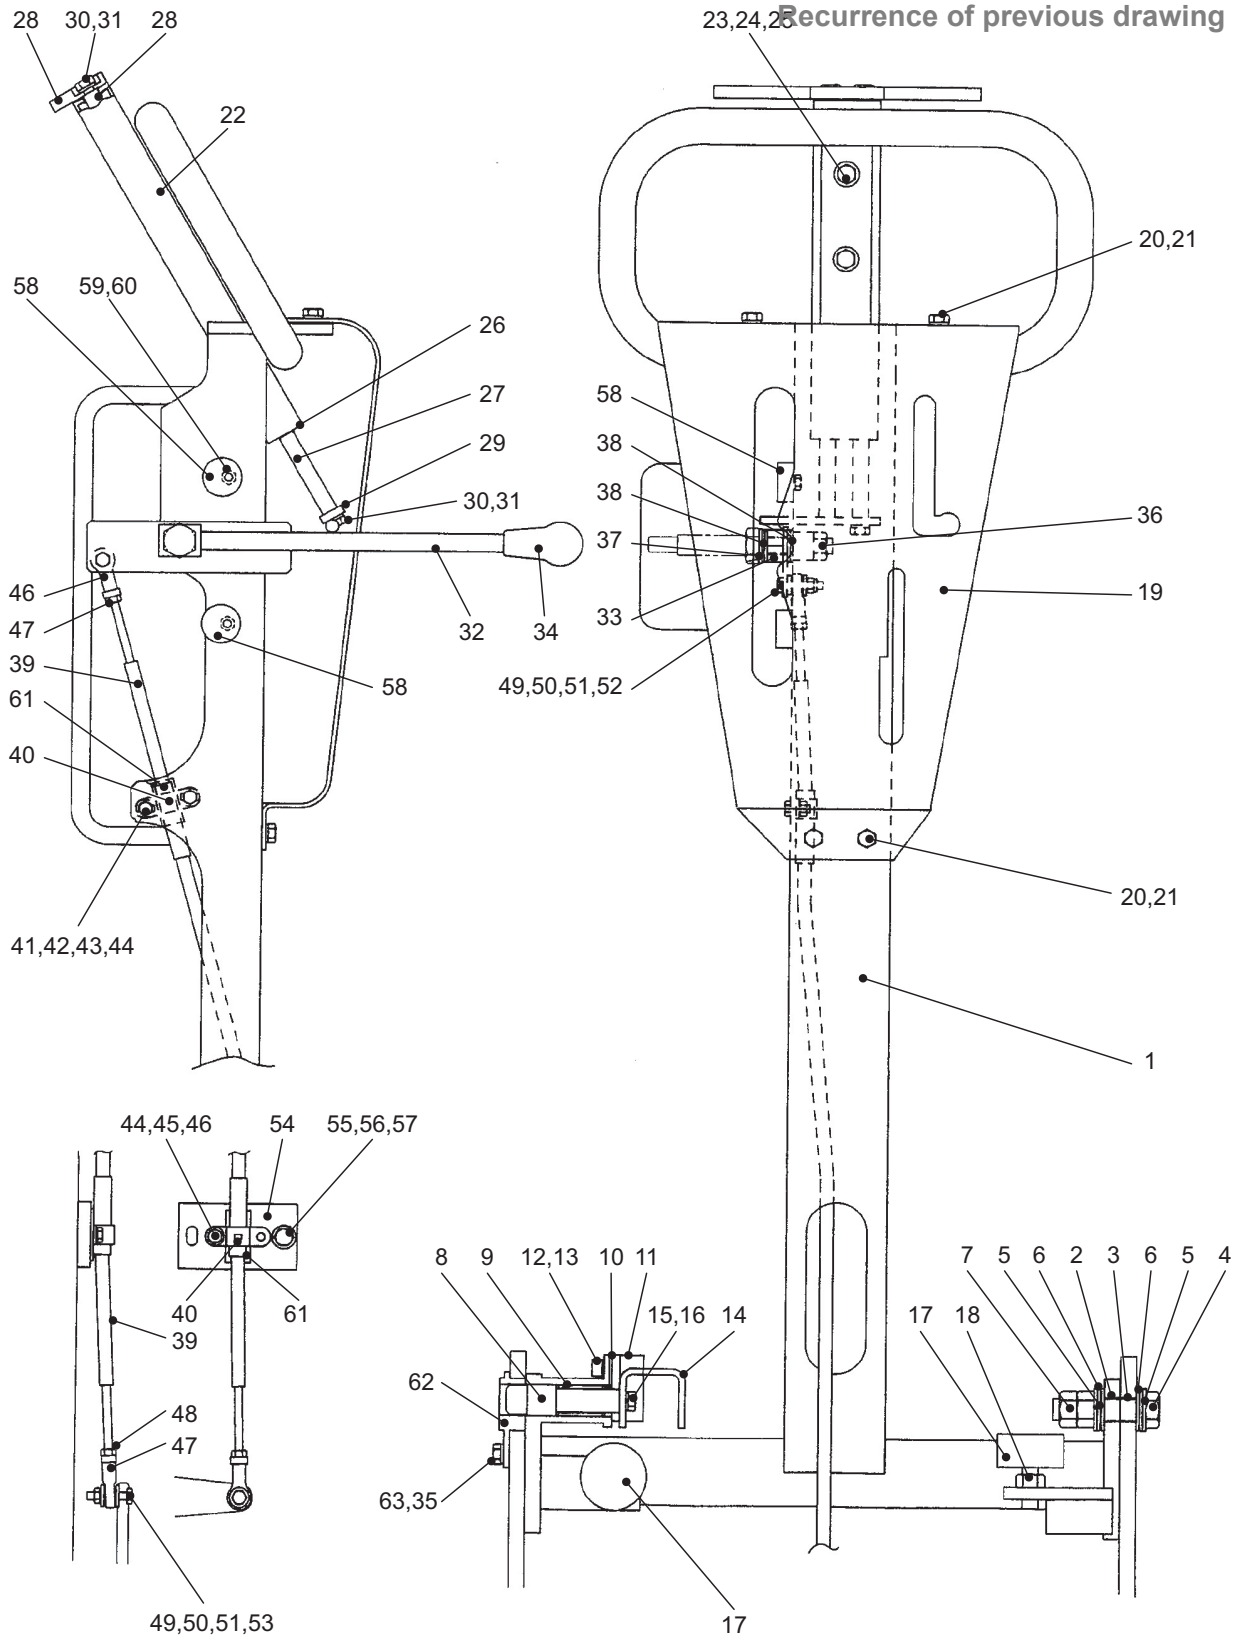

PC000080

 
 
Operation Handle Installation

Forward / Reverse


**Section
01-01-03**

[illegible]

Operating Handle Installation Neutral

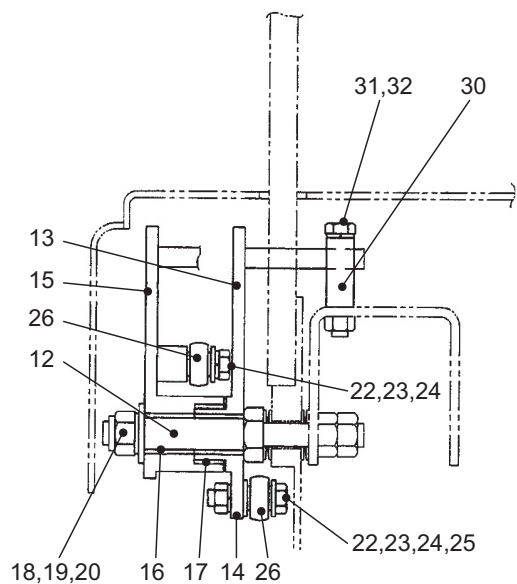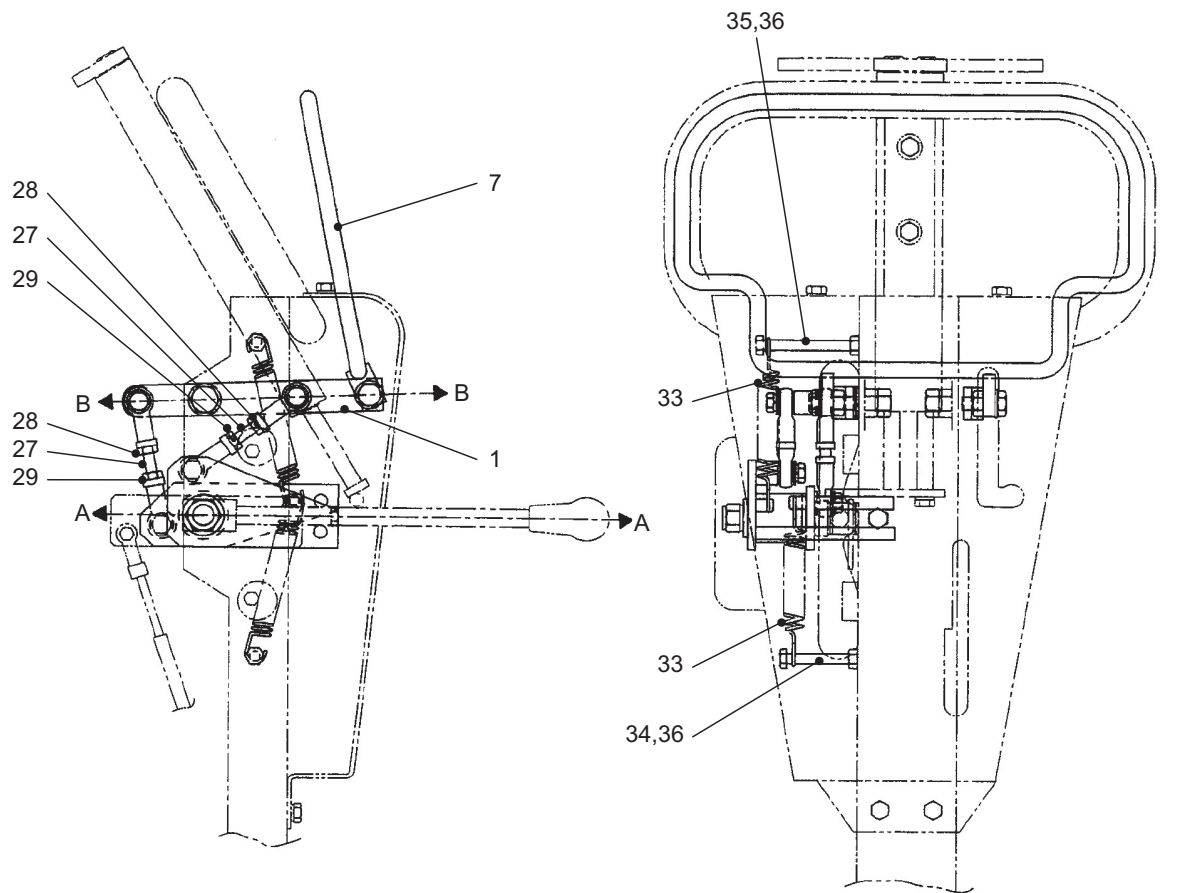

A-A SECTION

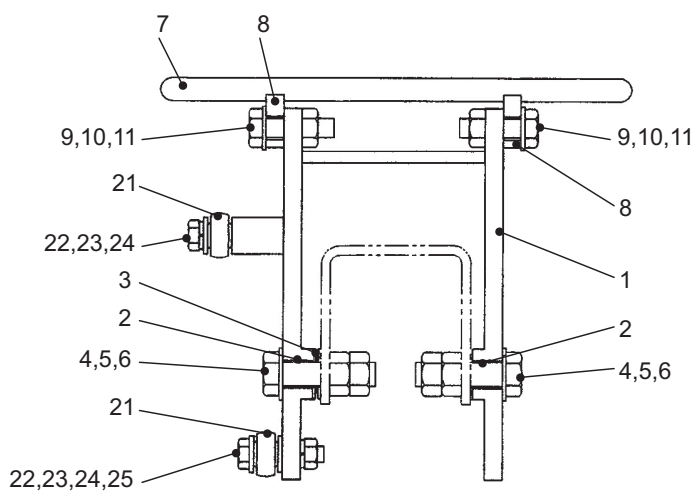 

B-B SECTION

PC000081

Operating Handle Installation


Neutral

**Section
01-01-04**

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	54678321	Handle Bracket			1
2	54677992	Bushing			2
3	59831602	Lockwasher			2
4	54678149	Bolt			2
5	59831750	Nut			2
6	59952473	Plain Washer			2
7	54678339	Handle			1
8	54678347	Bushing			2
9	59831792	Bolt			2
10	59841106	Washer			2
11	59832931	Nut			2
12	54678354	Shaft Arm			1
13	54678362	Neutral Arm (A)			1
14	54678370	Bushing			1
15	54678388	Neutral Arm (B)			1
16	54678370	Bushing			1
17	54678396	Bushing			1
18	59840454	Nylon Nut			1
19	59831743	Spring Washer			1
20	59952473	Plain Washer			2
21	59833103	Rod End			2
22	59952382	Bolt			2
23	54678099	Washer			6
24	59831925	Spring Washer			4
25	59832931	Nut			2
26	54678412	Rod End			2
27	54678420	Rod			2
28	59832931	Nut			2
29	54678446	Nut			2
30	54678453	Stop Guide			1
31	59952341	Bolt			1

Operating Handle Installation Neutral

 Recurrence of previous drawing

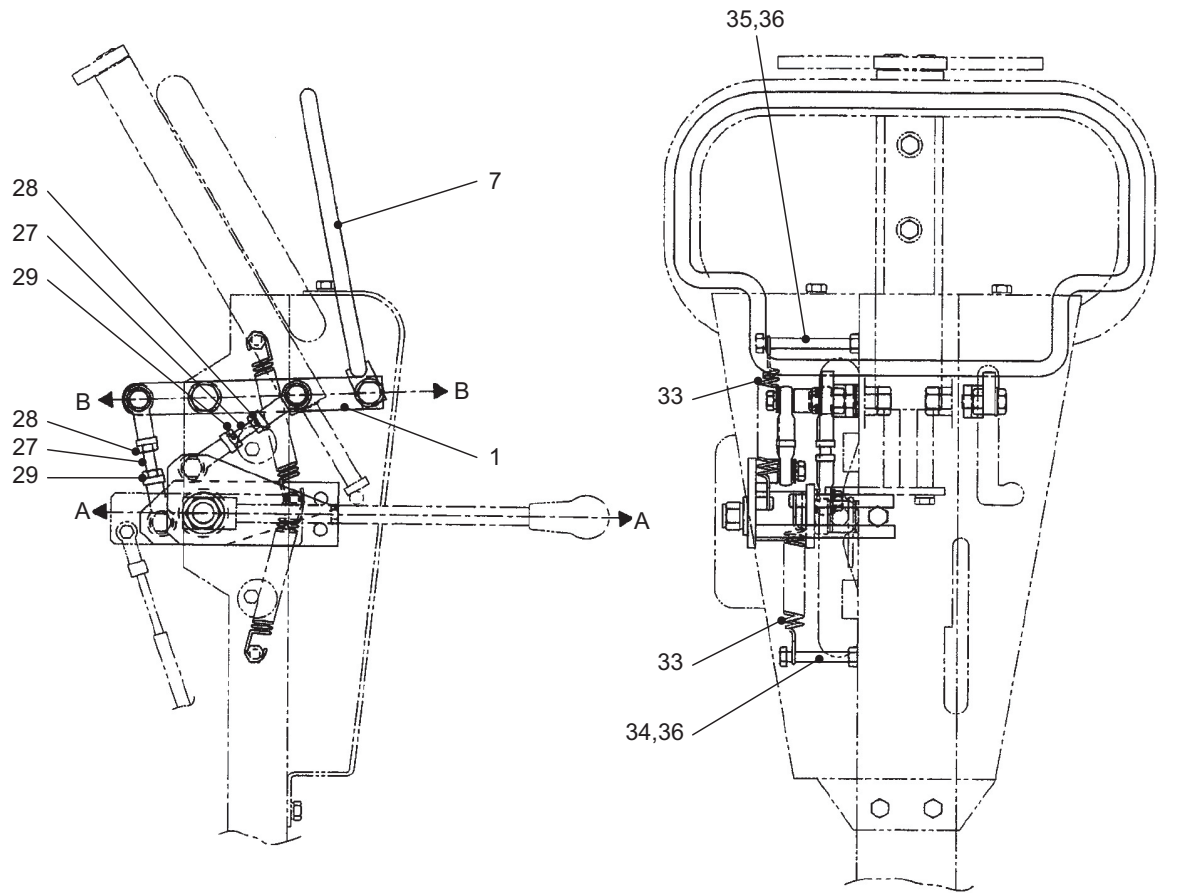

A-A SECTION

B-B SECTION


PC000081

Operating Handle Installation

**Section
01-01-04**

[illegible]

 Vibration Lever/Throttle Lever Installation

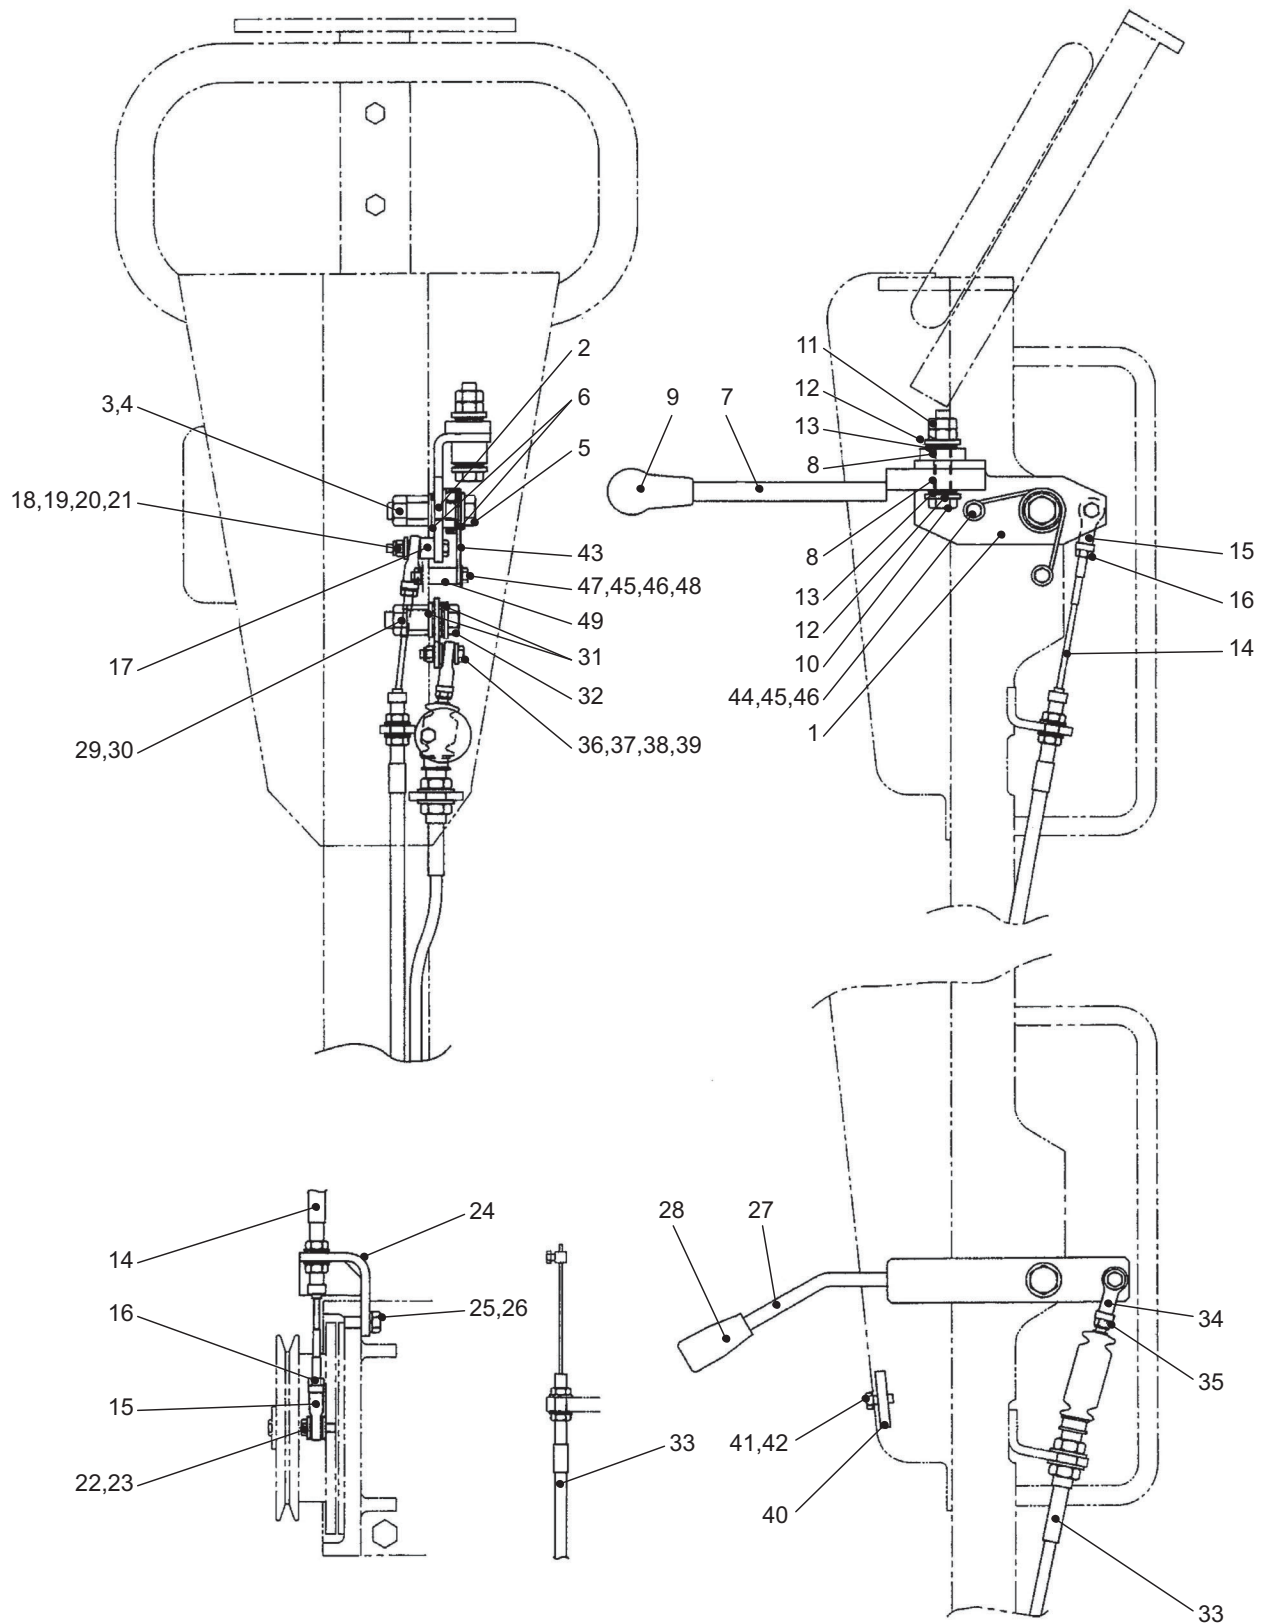

PC000082


Vibration Lever/Throttle Lever Installation

**Section
01-01-05**

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	54678131	Vibration Holder			1
2	54677992	Bushing			1
3	54678149	Bolt			1
4	59831750	Nut			1
5	54678016	Plain Washer			1
6	54678024	Friction Spring			4
7	54678156	Vibration Lever			1
8	54678164	Bushing			2
9	54678008	Forward/Reverse Lever Knob			1
10	54678172	Bolt			1
11	59832931	Nut			2
12	59952291	Washer			2
13	54678180	Friction Spring			4
14	54678198	Vibration Cable			1
15	54678057	Rod End			2
16	59405514	Nut			2
17	54678206	Collar			1
18	54678214	Bolt			1
19	59954131	Spring Washer			2
20	59833293	Spring Washer			1
21	54678065	Nylon Nut			1
22	59952903	Bolt			1
23	59954131	Spring Washer			2
24	54678222	Bracket			1
25	59832535	Bolt			2
26	59831925	Spring Washer			2
27	54678230	Throttle Lever			1
28	59952192	Throttle Lever Knob			1
29	59405712	Bolt			1
30	59831750	Nut			1
31	54678016	Plain Washer			1

Vibration Lever/Throttle Lever Installation



 
Recurrence of previous drawing

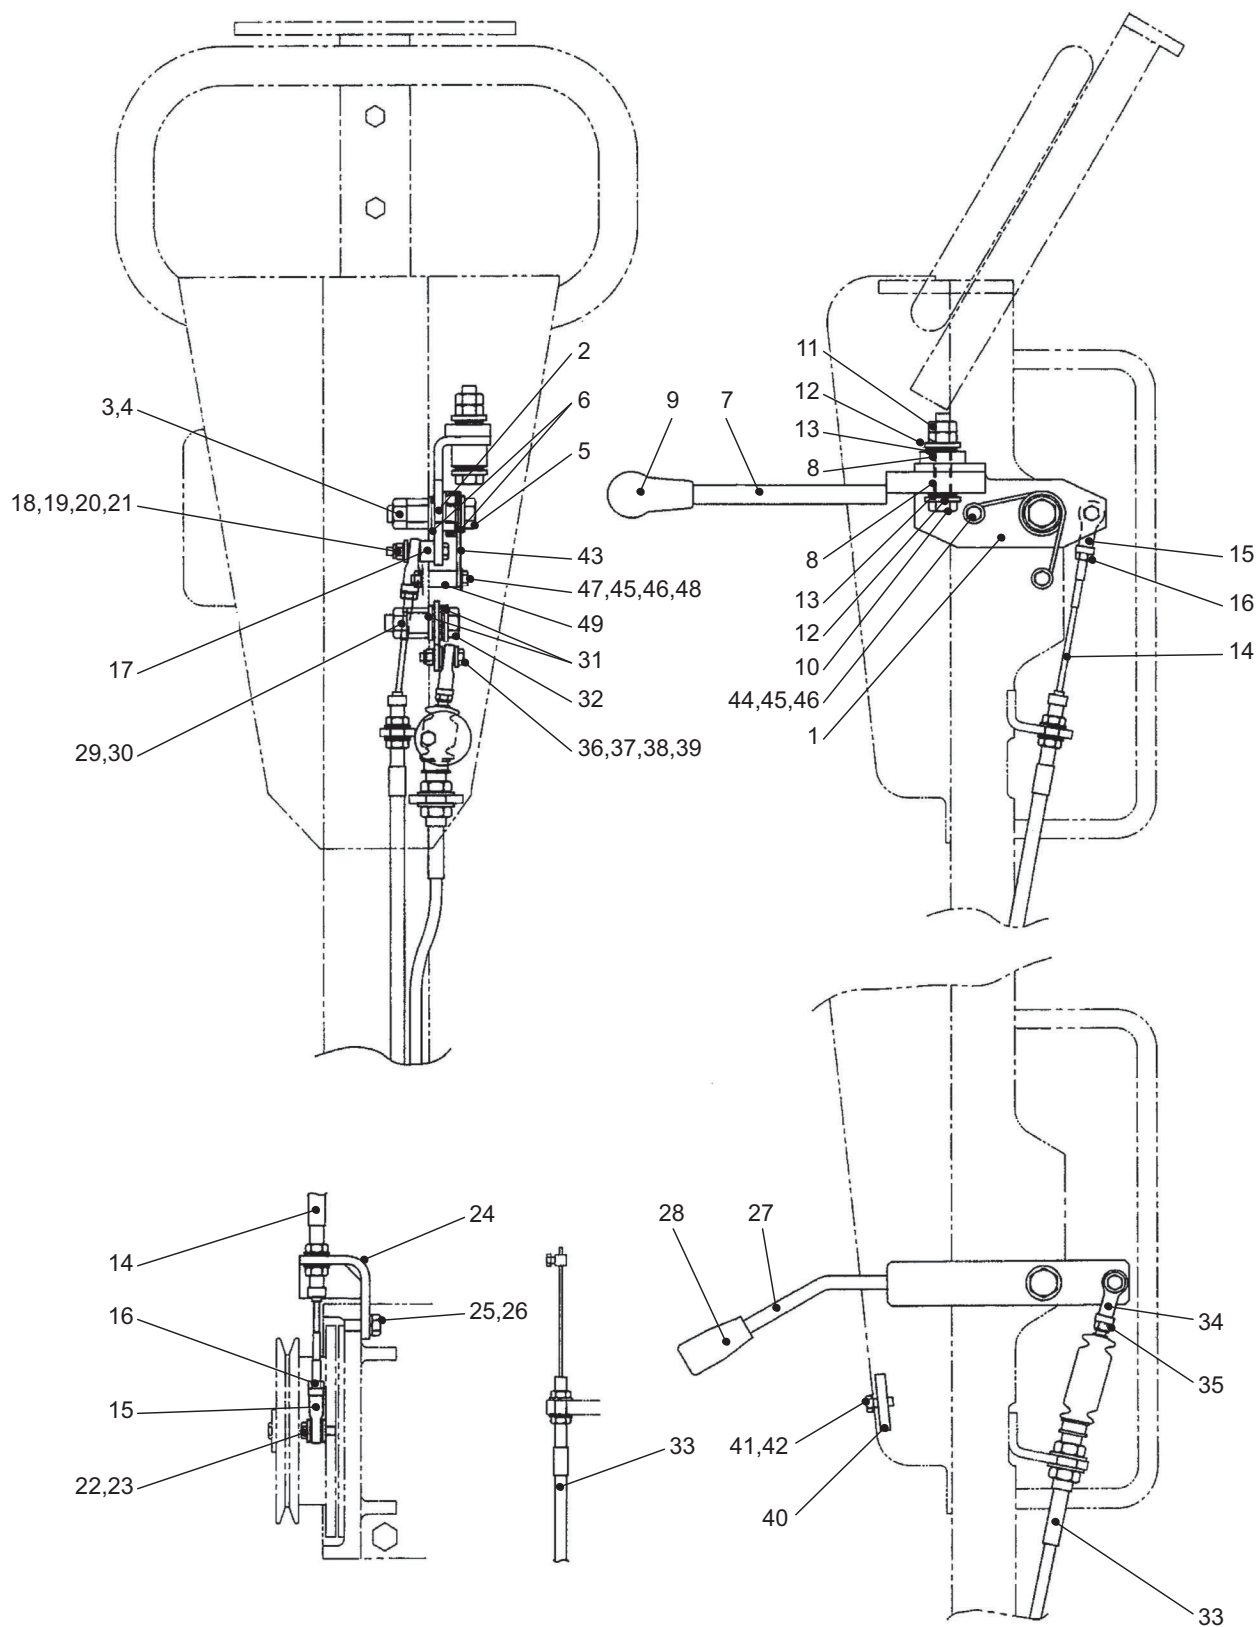

PC000082

**Section
01-01-05**

   
Walk-Behind Duplex Rollers DX-500E

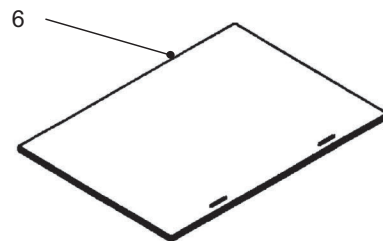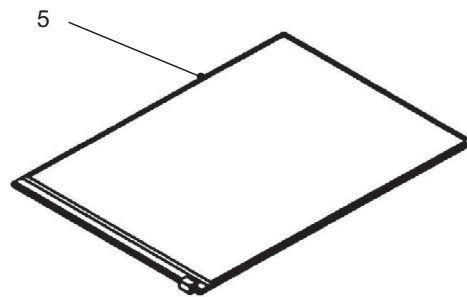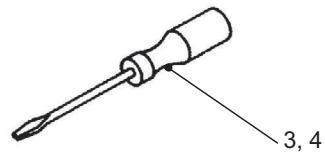


**Section
01-01-06**

Walk-Behind Duplex Rollers DX-500E

 
Truck Hook Assembly Optional

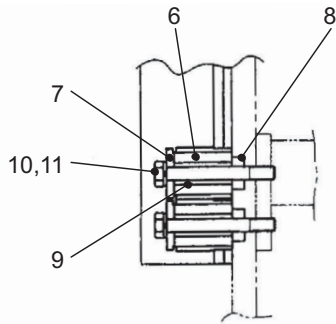

Section A

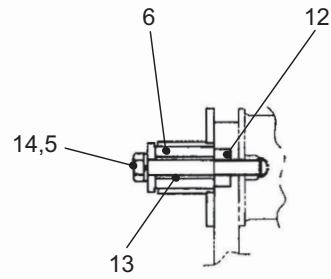 


Section B

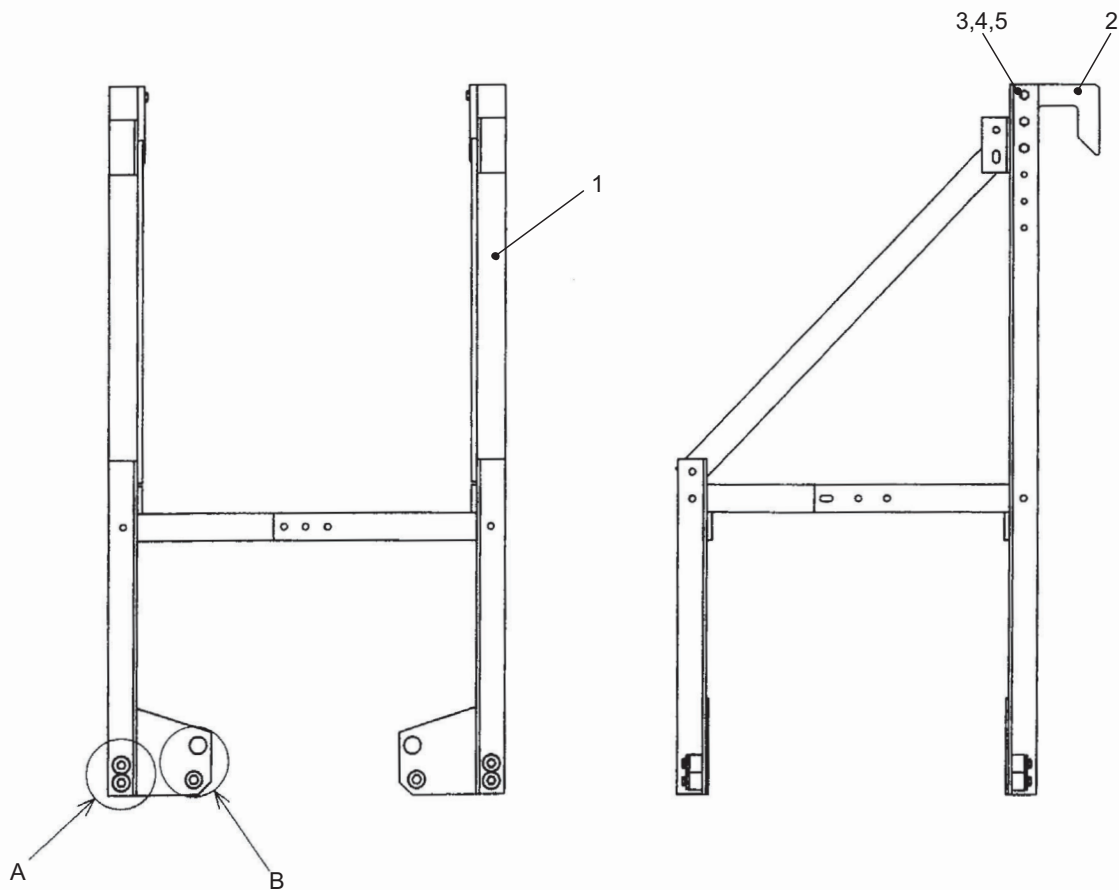 

**Section
01-01-07**

Walk-Behind Duplex Rollers DX-500E

 Drum Installation

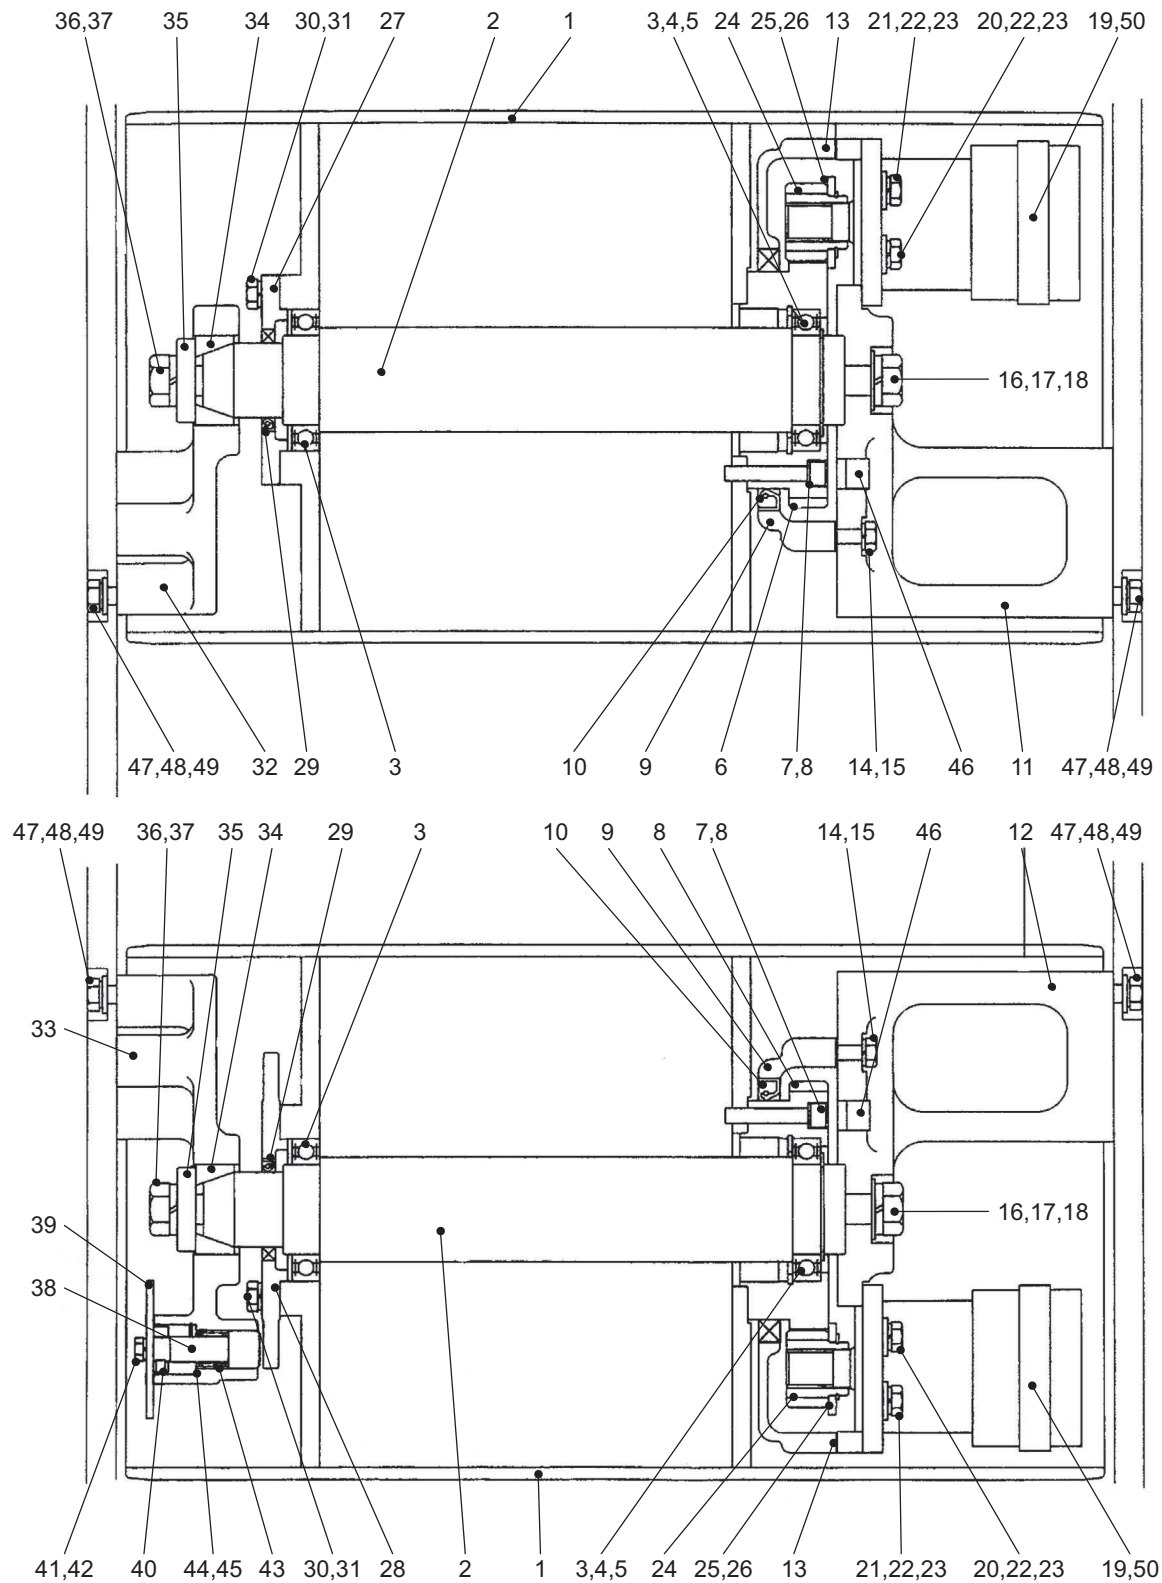

PC000085


Drum Installation

Section
02-01-01

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	54676697	Roller Drum (DX-500E)			2
2	54676739	Shaft (DX-500E)			2
3	54676754	Ball Bearing			4
4	54676846	Snap Ring			2
5	54676861	Snap Ring			2
6	54676887	Gear			2
7	54676895	Socket Head Bolt			12
8	59831800	Lock Washer			12
9	54676911	Case			2
10	54676937	Oil Seal			2
11	54676952	Front Bracket			1
12	54676960	Rear Bracket			1
13	54676978	Packing			2
14	59832287	Bolt			8
15	59951632	Spring Washer			8
16	54676986	Bolt			2
17	59841353	Spring Washer			2
18	59832865	Friction Spring			2
19	54676994	Drive Motor Assembly			2
20	59832287	Bolt			4
21	54674684	Bolt			4
22	59951632	Spring Washer			8
23	59952291	Washer			8
24	54677000	Pinion Gear			2
25	54677018	Gear Set plate			2
26	59840835	Snap Ring			2
27	54677026	Seal Case			1
28	54677034	Brake Floange			1
29	54677042	Oil Seal			2
30	59832287	Bolt			12
31	59951632	Spring Washer			12

Drum Installation

 Recurrence of previous drawing

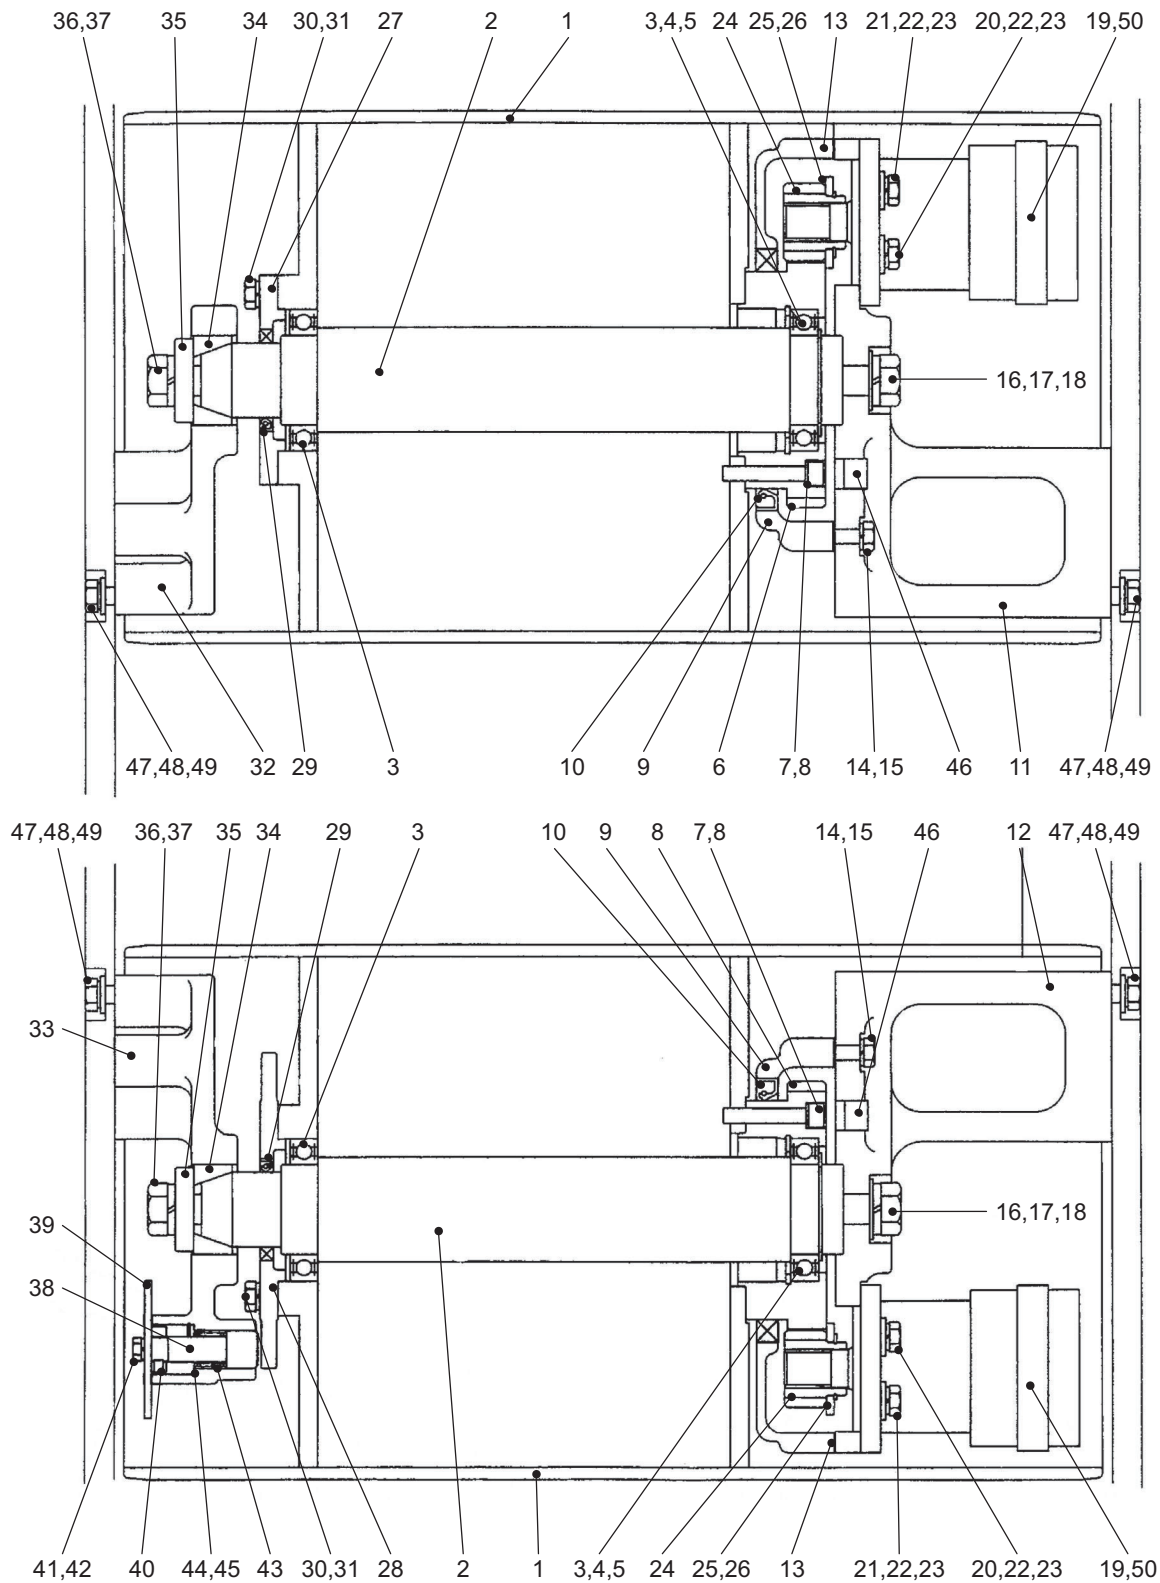


PC000085

**Section
02-01-01**

Walk-Behind Duplex Rollers DX-500E

 Eccentric Case Installation

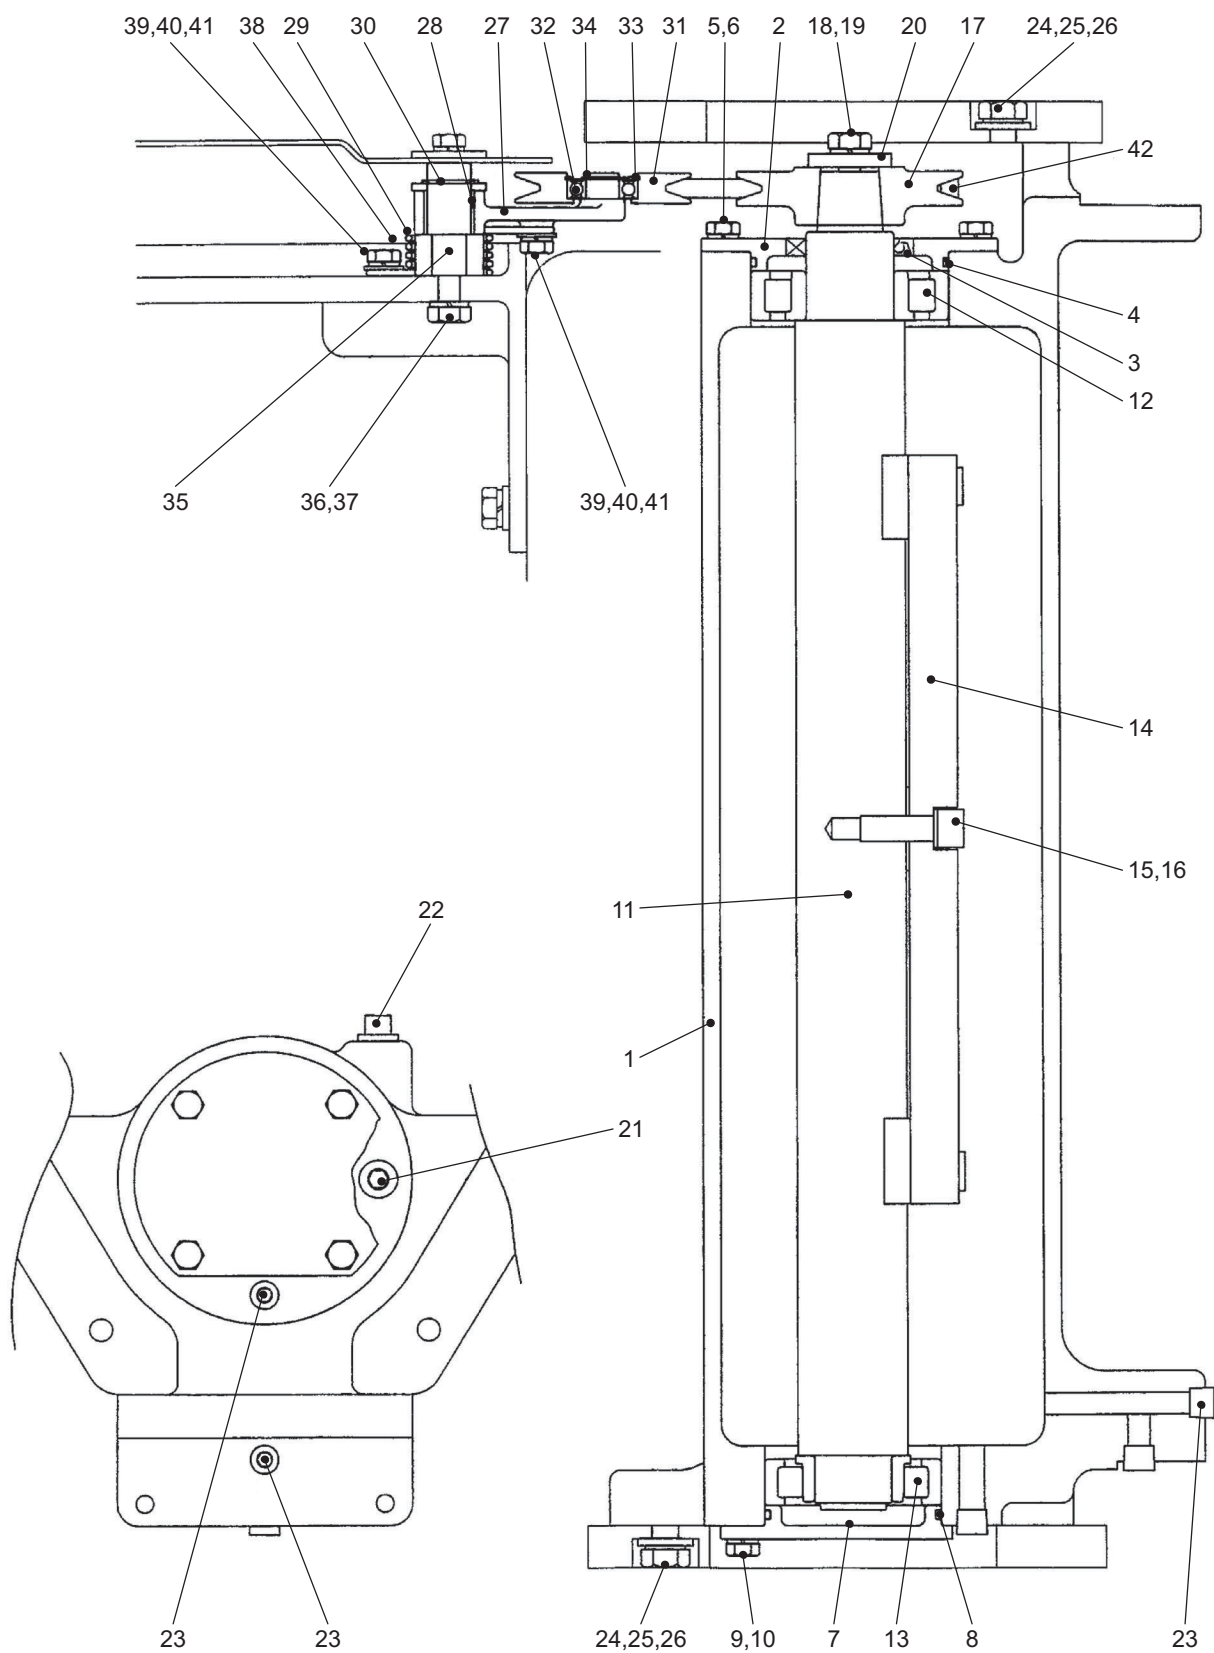

PC000086

Eccentric Case Installation


**Section
02-01-02**

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	54677521	Eccentric Case (DX-500E)			1
2	54677539	Seal Case			1
3	54677547	Oil Seal			1
4	54677554	O-ring			1
5	59832535	Bolt			4
6	59831925	Spring Washer			4
7	54677562	Bearing Cover			1
8	59838334	O-ring			1
9	59832535	Bolt			4
10	59831925	Spring Washer			4
11	54677588	Eccentric Shaft (DX-500E)			1
12	54677596	Roller Bearing			1
13	54677604	Roller Bearing			1
14	54677620	Weight (DX-500E)			1
15	54677638	Socket Head Bolt			3
16	59831602	Lockwasher			3
17	54677653	Pulley (DX-500E)			1
18	59952242	Bolt			1
19	59951632	Spring Washer			1
20	54677661	Washer			1
21	54677679	Plug			1
22	54677687	Plug			1
23	54677695	Plug			3
24	59832030	Bolt			8
25	59831602	Lockwasher			8
26	54674205	Plain Washer			8
27	54677703	Tension Arm			1
28	54677711	Bushing			1
29	54677729	Washer			1
30	59839456	Snap Ring			1
31	54677737	Tension Pulley			1



**Section
02-01-02**

 Walk-Behind Duplex Rollers DX-500E

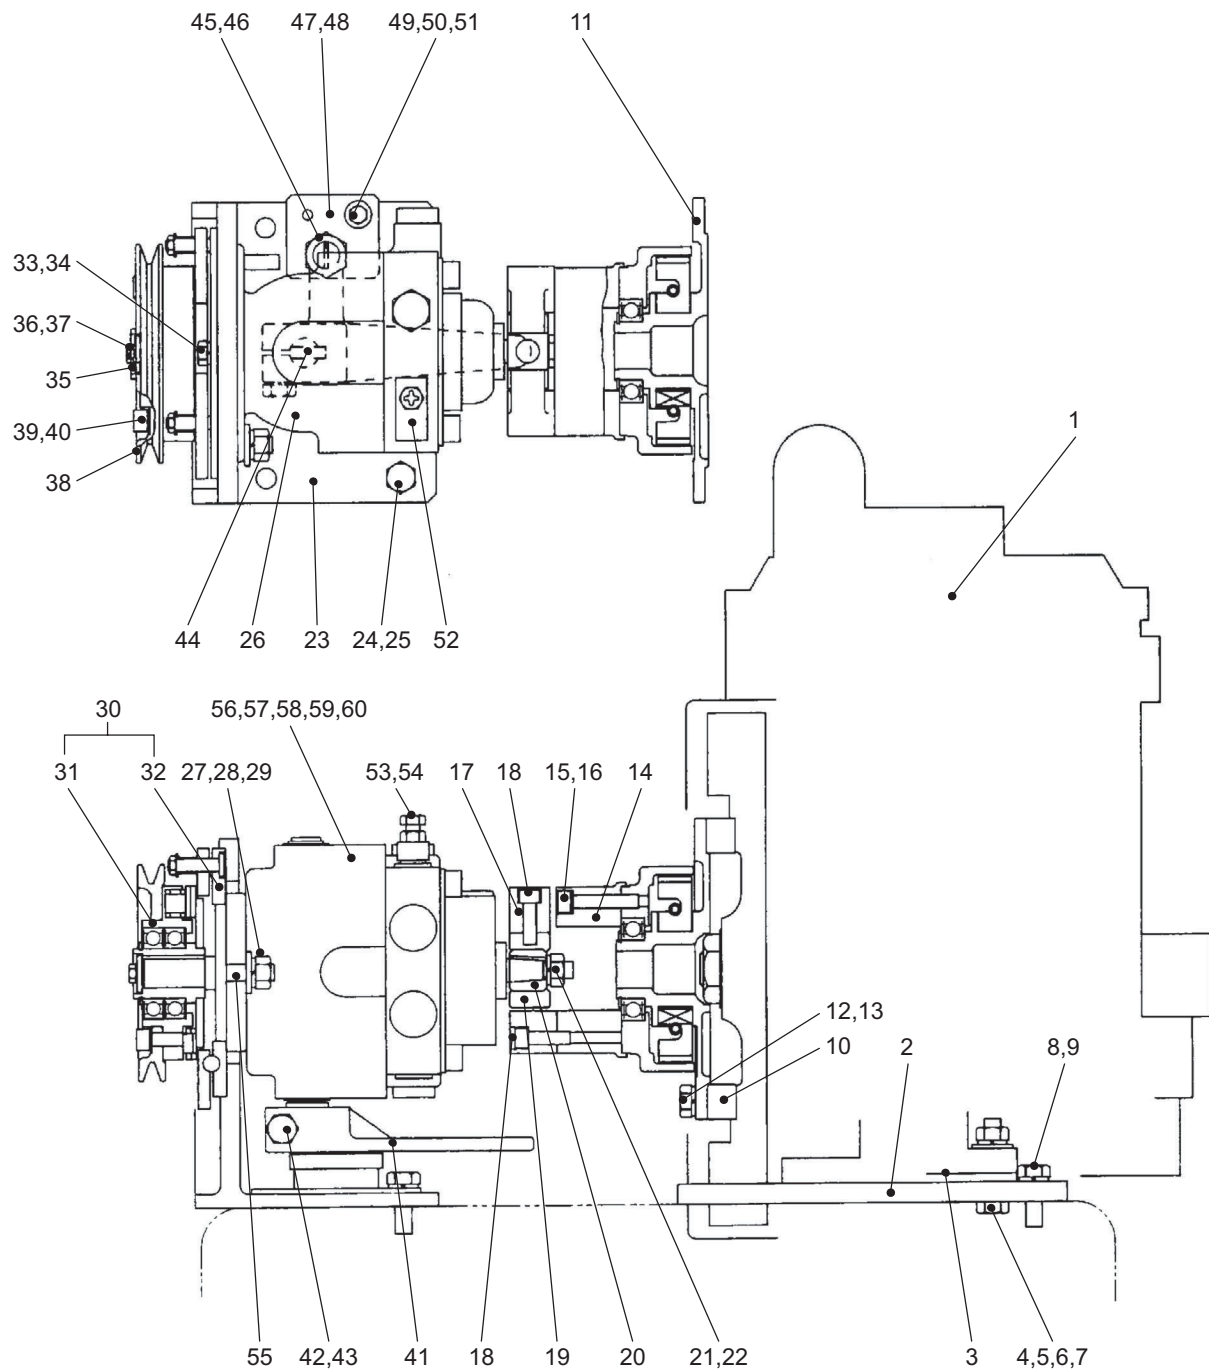


Engine Installation

Section
03-01-01

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	54674650	Engine Assembly			1
2	54674668	Engine Base			1
3	54674676	Base Plate			2
4	54674684	Bolt			4
5	54674171	Washer			4
6	59832931	Nut			4
7	59951632	Spring Washer			4
8	59832287	Bolt			4
9	59921632	Spring Washer			4
10	54674692	Clutch Plate			1
11	13201223	Drive Clutch Assembly			1
12	59842708	Bolt			3
13	59951632	Spring Washer			3
16	59831560	Lockwasher			3
17	54674825	Coupling			1
18	54674833	Socket Head Bolt			6
19	54676259	Coupling Boss (DX-500E)			1
20	54676275	Coupling Shaft (DX-500E)			1
21	59832931	Nut			1
22	59951632	Spring Washer			1
23	54676283	Pump Bracket			1
24	59832287	Bolt			4
25	59951632	Spring Washer			4
26	54676291	Pump Assembly			1
27	54676309	Nut			2
28	59951632	Spring Washer			2
29	59952291	Washer			2
30	12301231	Vibration Clutch Assembly	Includes Ref. 31 - 32		1
31	13201249	Disc Complete			1
32	13201256	Plate Complete			1
33	59832535	Bolt			3

 Recurrence of previous drawing

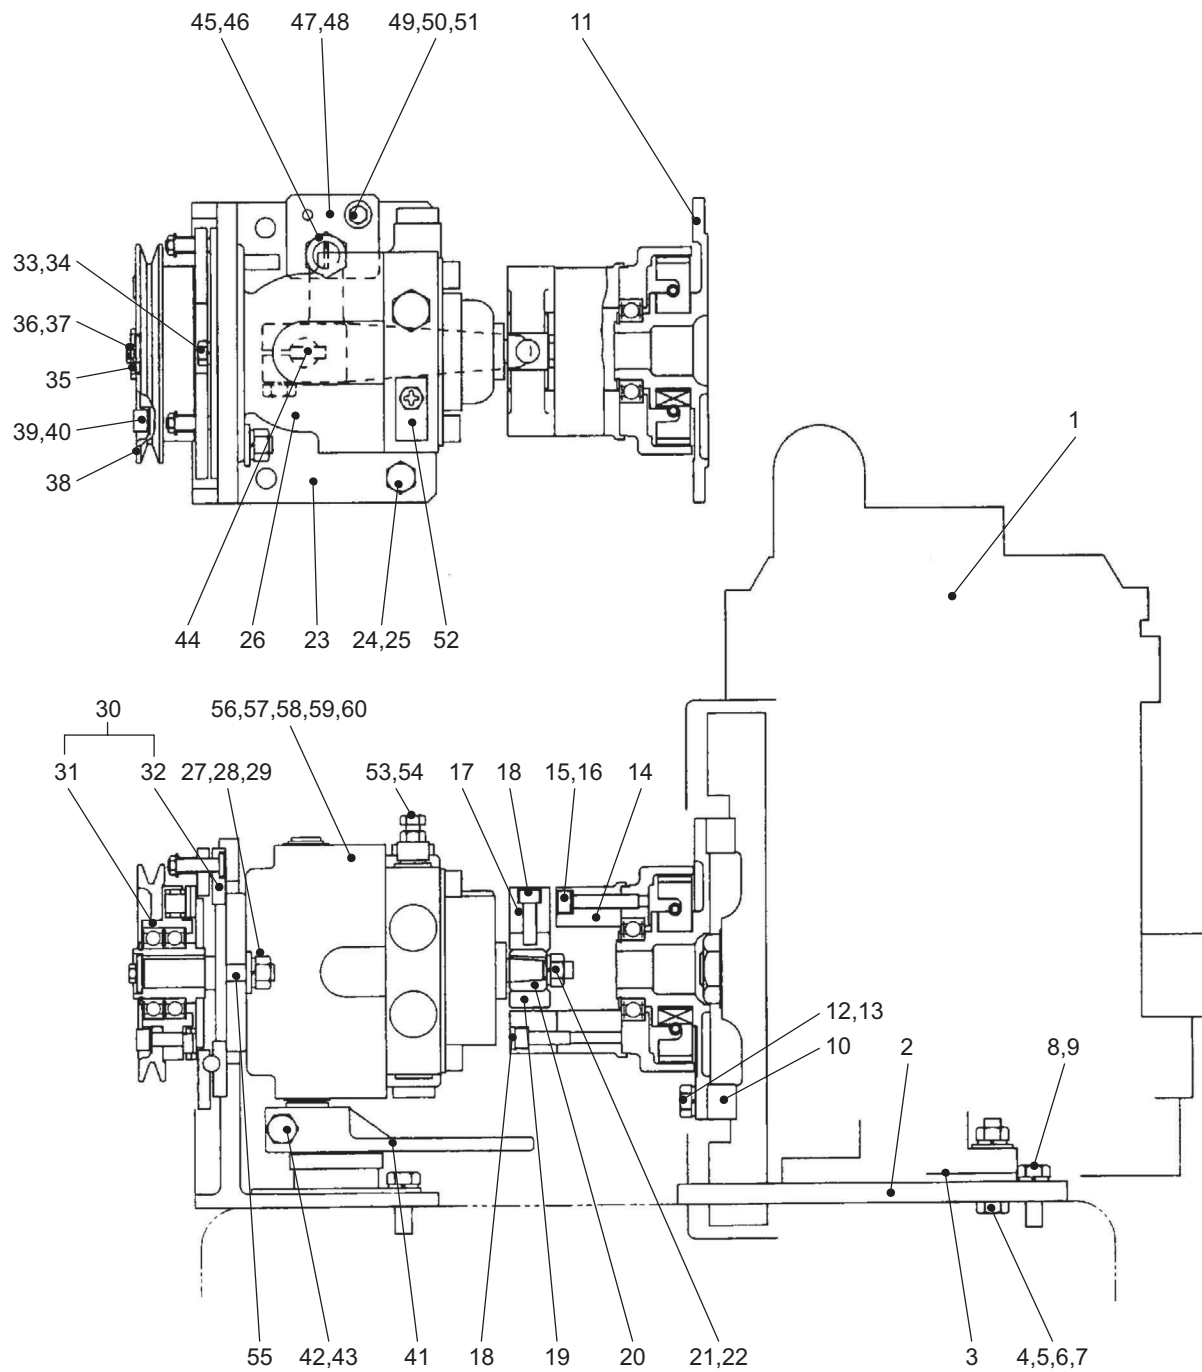


PC000087

Engine Installation

Section
03-01-01

Item	Part Number	Denomination	Remarks	Serial Number	Qty
34	59831925	Spring Washer			3
35	54676457	Washer			1
36	54676465	Bolt			1
37	59833293	Spring Washer			1
38	54676473	Clutch Pully			1
39	58836966	Socket Head Bolt			3
40	59831560	Lockwasher			3
41	54676481	Pump Control Lever			1
42	59831792	Bolt			1
43	59951632	Spring Washer			1
44	54676499	Spring Pin			1
45	54676507	Plunger			1
46	54676515	Nut			1
47	54676523	Ball Plate			1
48	54676531	Ball Spacer			1
49	54676549	Bolt			2
50	59833293	Spring Washer			2
51	54676564	Washer			2
52	54676572	Stopper			1
53	54676580	Bolt			2
54	59832931	Nut			1
55	54676598	Set Screw			2
56	54676606	Oil Seal Kit			1
57	54676614	Charge Oil Seal			1
58	54676630	Flange oil Seal			1
59	59370965	Trunnion Oil Seal			2
60	54676655	Charge O-ring			1

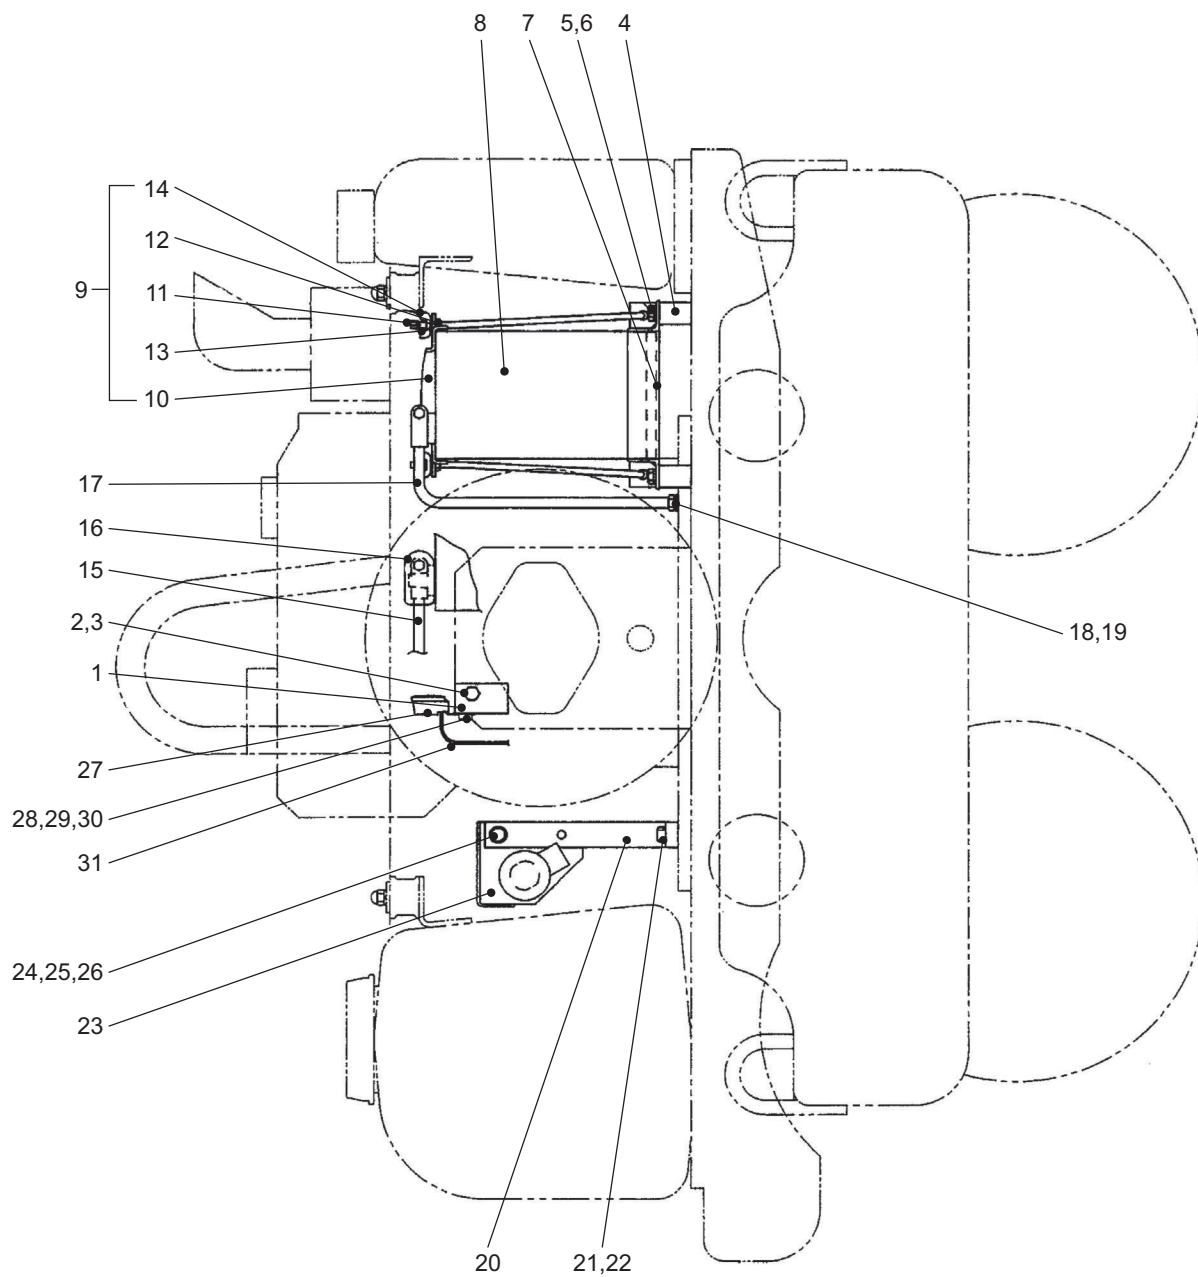 






PC000088

Electrical Installation

Section
04-01-01

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	54678818	Horn Bracket			1
2	59831552	Bolt			1
3	59831925	Spring Washer			1
4	54678834	Battery Case			1
5	59953331	Bolt			4
6	59831925	Spring Washer			4
7	54678842	Battery Pad			1
8	54678859	Battery			1
9	54678867	Battery Holder Down Plate Assembly	Includes Ref. 10 - 14		1
10	54678883	Battery Plate			1
11	54678891	Bolt			1
12	59405514	Nut			2
13	59954131	Spring Washer			2
14	59365387	Wing Nut			2
15	54678909	Battery Cable			1
16	54678925	Battery Terminal Cover			1
17	54678917	Battery Cable			1
18	59188144	Bolt			1
19	59831925	Spring Washer			1
20	54678933	Switch Panel Bracket			1
21	59832535	Bolt			2
22	59831925	Spring Washer			2
23	54678958	Switch Panel			1
24	59188144	Bolt			2
25	59831925	Spring Washer			2
26	59835371	Washer			2
27	54678966	Horn			1
28	54676465	Bolt			1
29	59832188	Washer			1
30	59833293	Spring Washer			1
31	54678974	Ground Cable			1

     Decal Installation

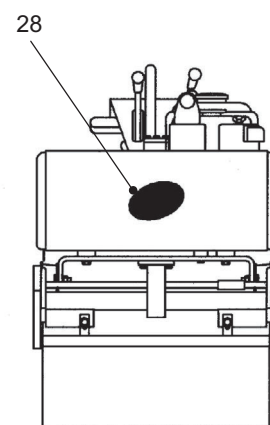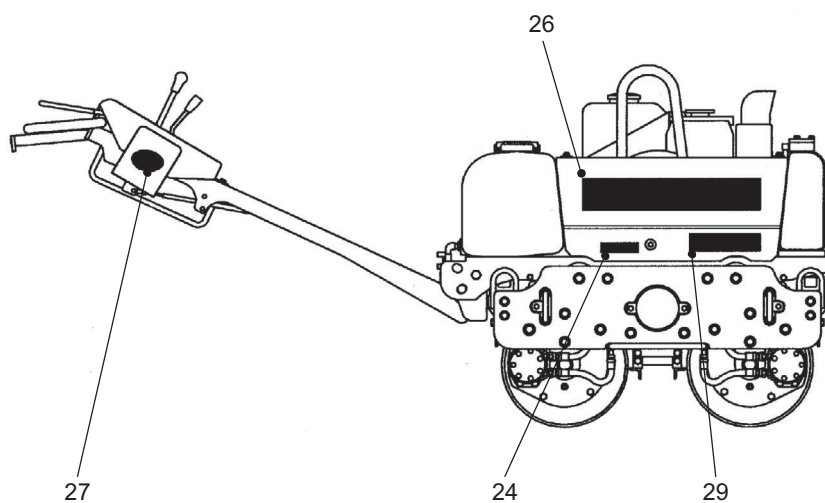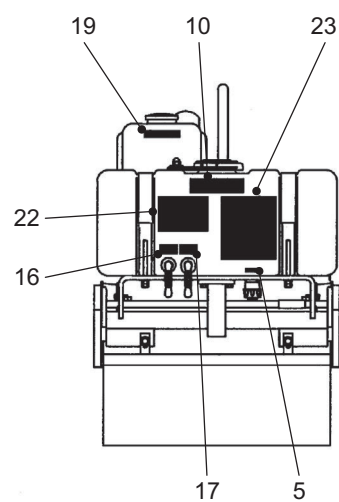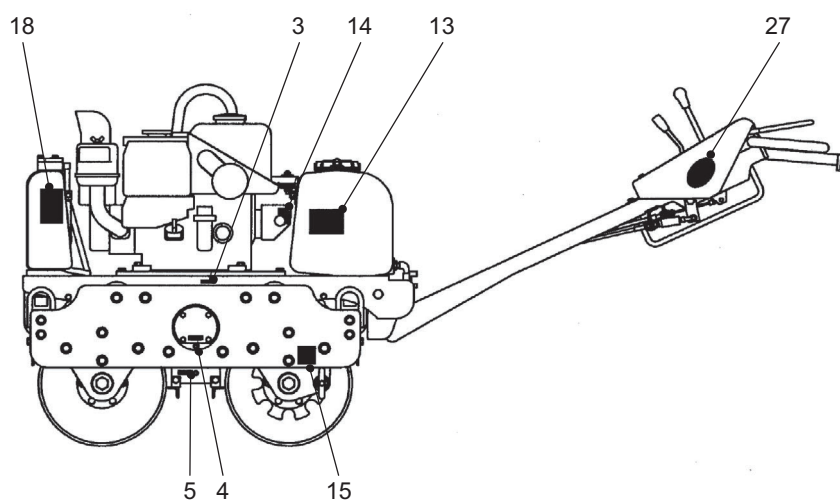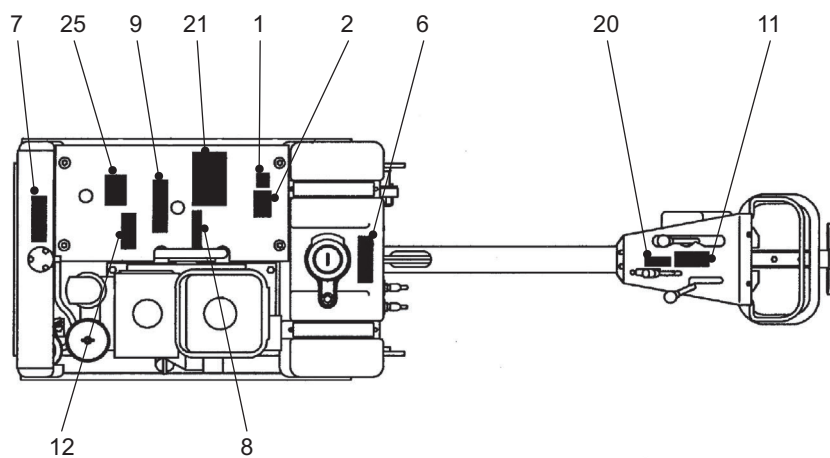


PC000089

Decal Installation

Section
05-01-01

Item	Part Number	Denomination	Remarks	Serial Number	Qty
	54678990	Decal Kit (DX-500E)	Includes Ref. 2 - 29		1
1	13200829	Lable, Noise			1
2	59188011	Name Plate			1
3	59839654	Decal: Oil Feed			1
4	59839662	Decal: Oil Gauge			1
5	59840306	Decal: Drain			1
6	59486530	Decal: Water			1
7	59484311	Decal: Hydraulic Oil			1
8	59484329	Decal: Oil Level			1
9	59484337	Decal: Check oil			1
10	59486555	Decal: Check Parking			1
11	59486522	Decal: Control Lever			1
12	54679014	Decal: Engine RPM			1
13	54679022	Decal: Caution			1
14	54679030	Decal: Starter Switch			1
15	54679048	Decal: Parking Brake			1
16	54679055	Decal: Sprinkler			1
17	54679063	Decal: Sprinkler			1
18	54679071	Decal: Oil Level			1
19	54679089	Decal: Caution			1
20	54679097	Decal: Throttle			1
21	54679105	Decal: Warning			1
22	54679113	Decal: Warning			1
23	54679121	Decal: Warning			1
24	54679139	Decal: Warning			1
25	54679147	Decal: Warning			1
26	54679154	Decal: IR Logo			1
27	54679162	Decal, IR Emblem			2
28	54679170	decal, IR emblem			1
29	54679188	Decal: DX-500E			1

 Hydraulic Hosing Installation

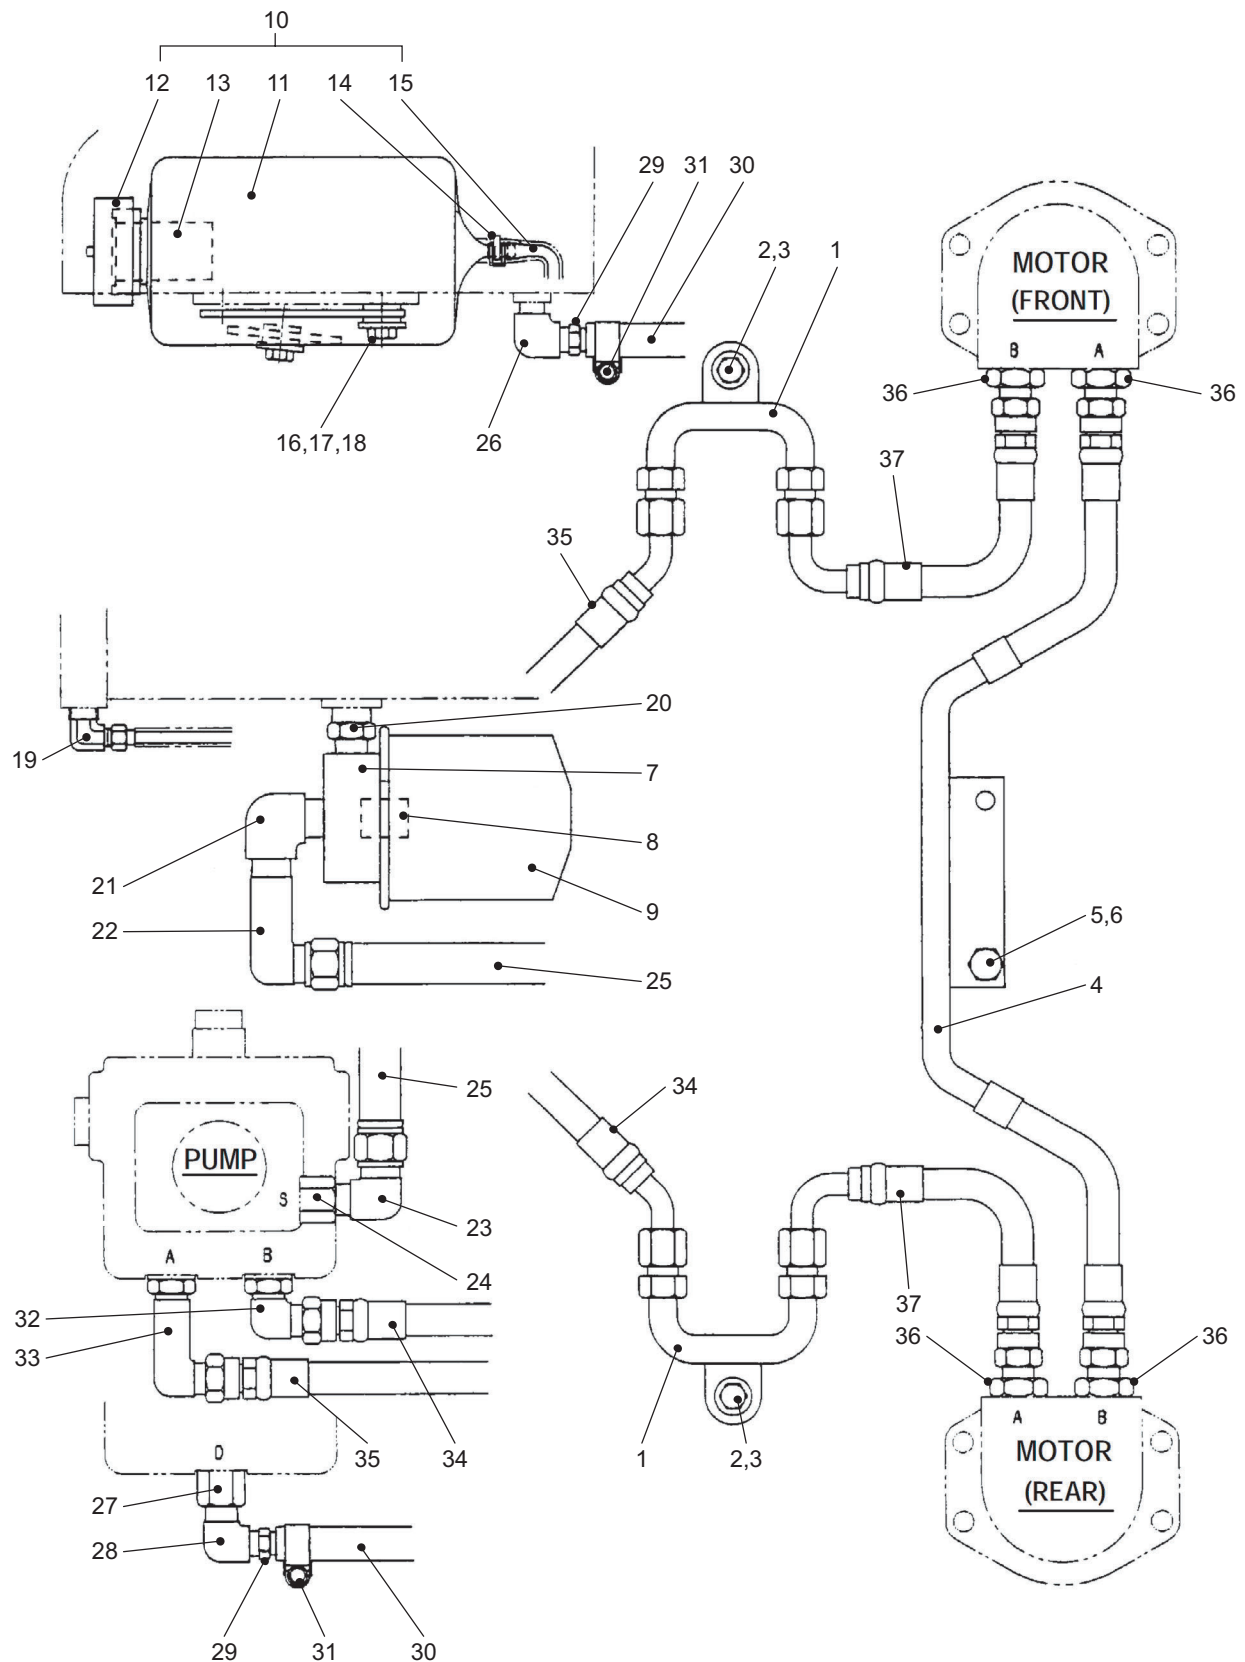

PC000090


Hydraulic Hosing Installation

Section
06-01-01

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	54678487	Joint			2
2	59188144	Bolt			2
3	59831560	Lockwasher			2
4	54678495	Joint			1
5	59952242	Bolt			2
6	59951632	Spring Washer			2
7	54678503	Filter Cover			1
8	59838573	Nipple			1
9	59838581	Oil Filter			1
10	22070379	Hydraulic Tank Assembly	Includes Ref. 11 - 15		1
11	22070023	Hydraulic Tank			1
12	22070387	Hydraulic Tank Cap			1
13	22070072	Hydraulic Tank Filter			1
14	22070098	Band			1
15	22070080	Return Hose			1
16	59952325	Bolt			3
17	22070361	Rubber Washer			6
18	22069843	Washer			3
19	22070007	Elbow			1
20	54678669	Nipple			1
21	59407221	Elbow			1
22	54678677	Elbow			1
23	54678685	Elbow			1
24	54678693	Bushing			1
25	54678701	Hose			1
26	54678719	Elbow			1
27	54678693	Bushing			1
28	54678727	Elbow			1
29	59835595	Hose Joint			2
30	54678735	Hose			1
31	59832162	Band			2

Hydraulic Hosing Installation

 Recurrence of previous drawing

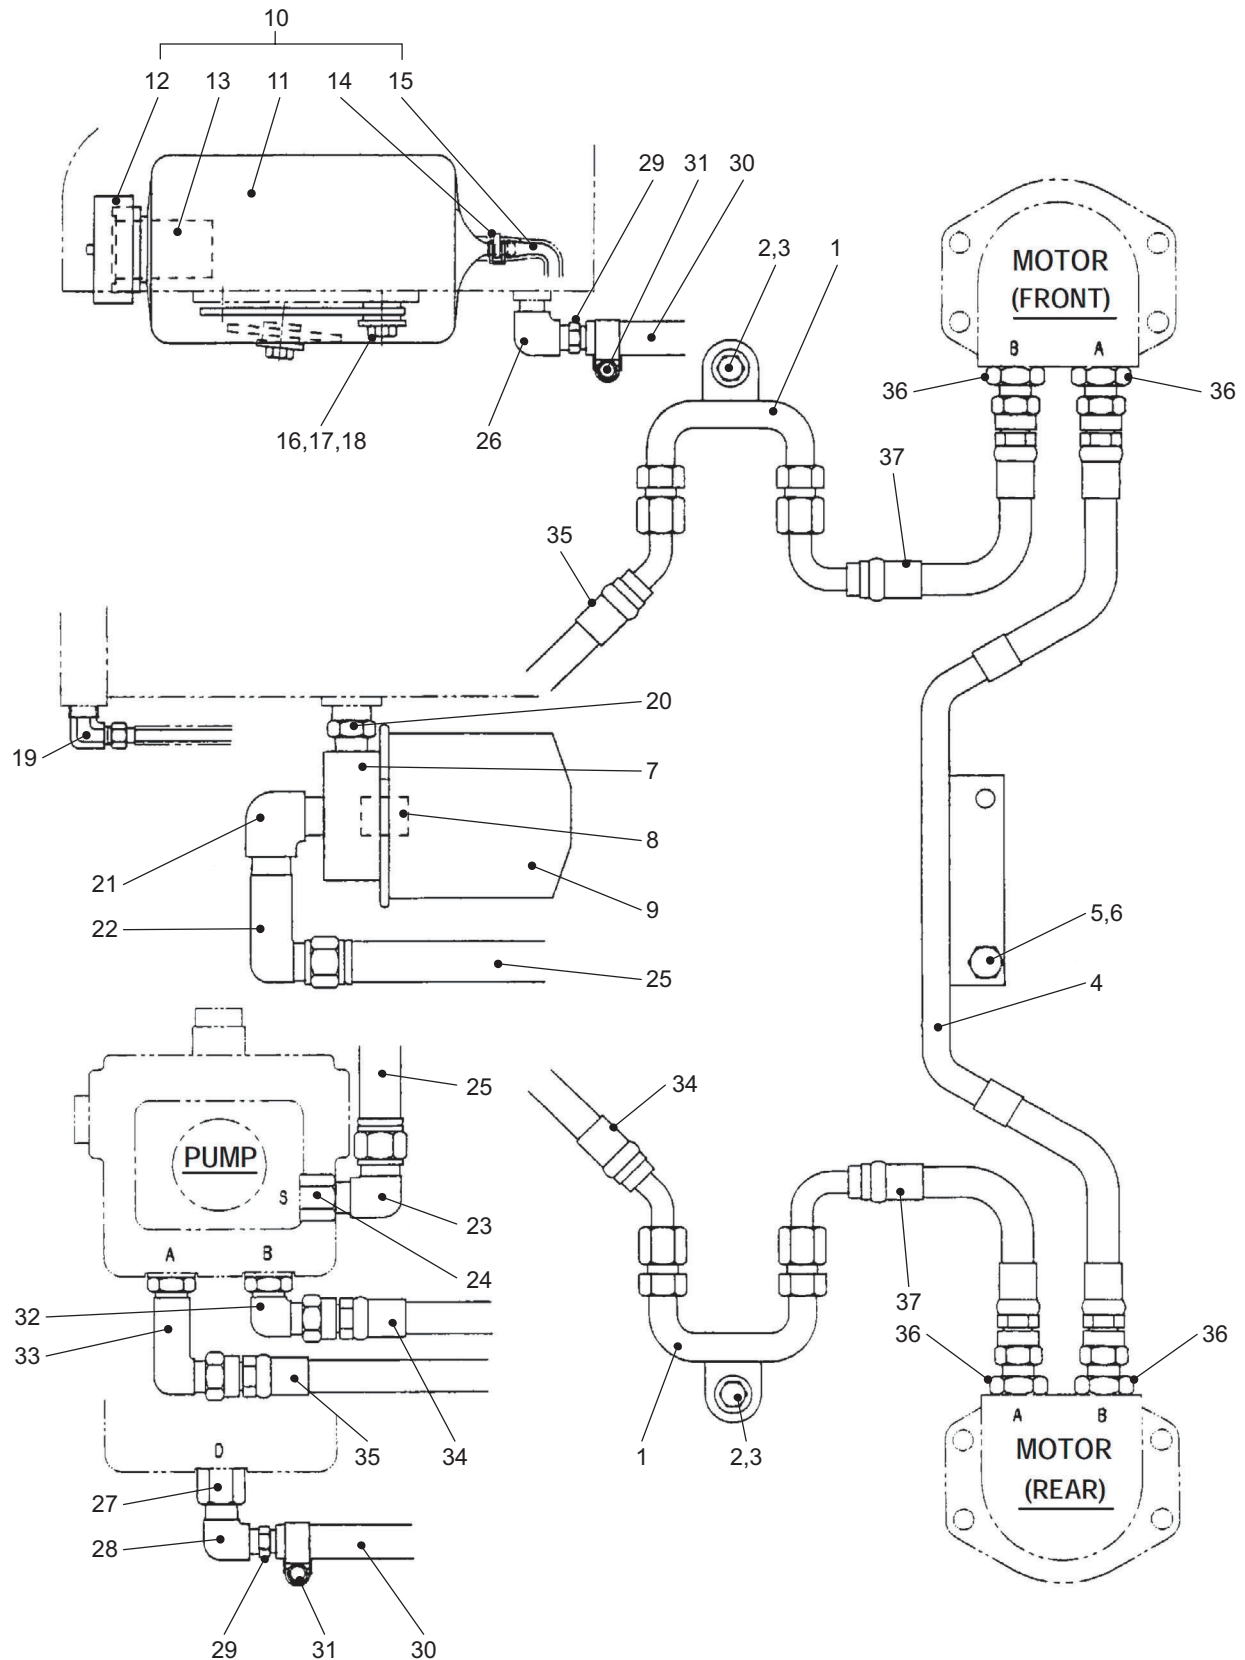


PC000090

Hydraulic Hosing Installation

**Section
06-01-01**

[illegible]

 Crankcase

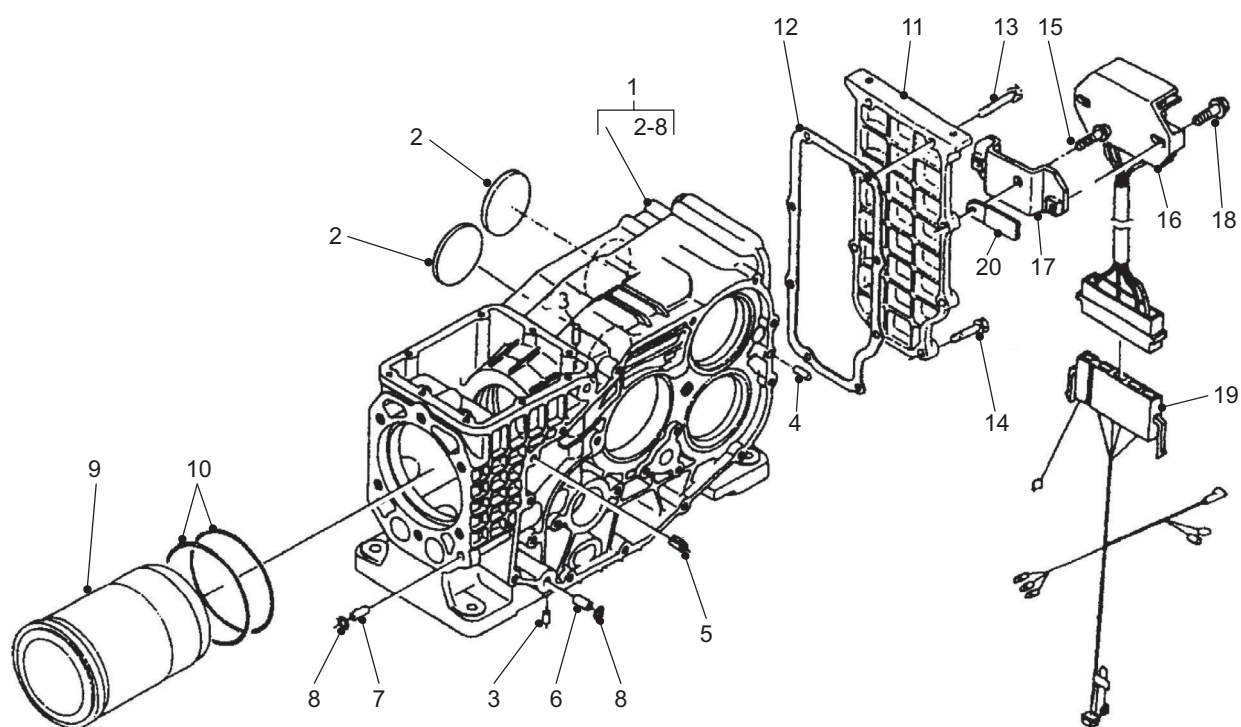


PC000091

**Section
07-01-01**

Walk-Behind Duplex Rollers DX-500E

 
Cylinder Head

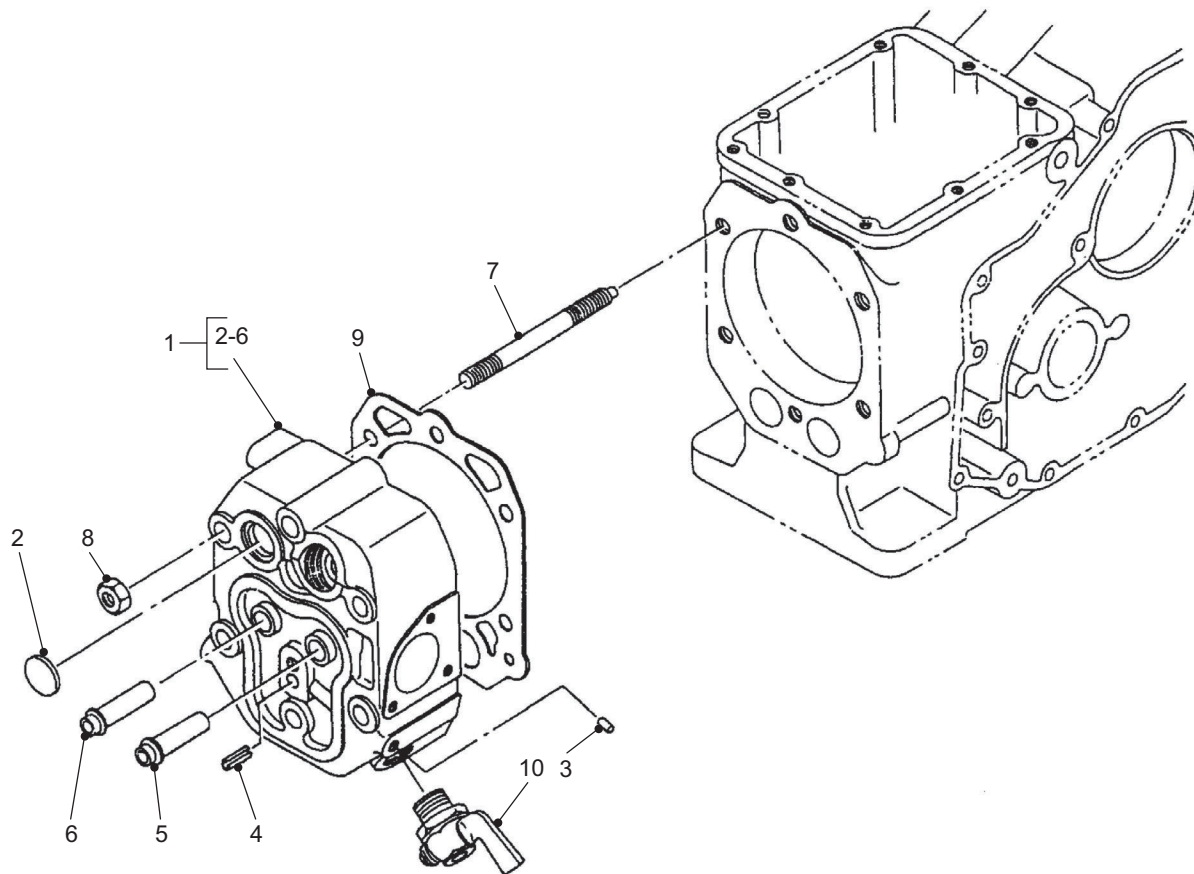

PC000092

**Section
07-01-02**

 57

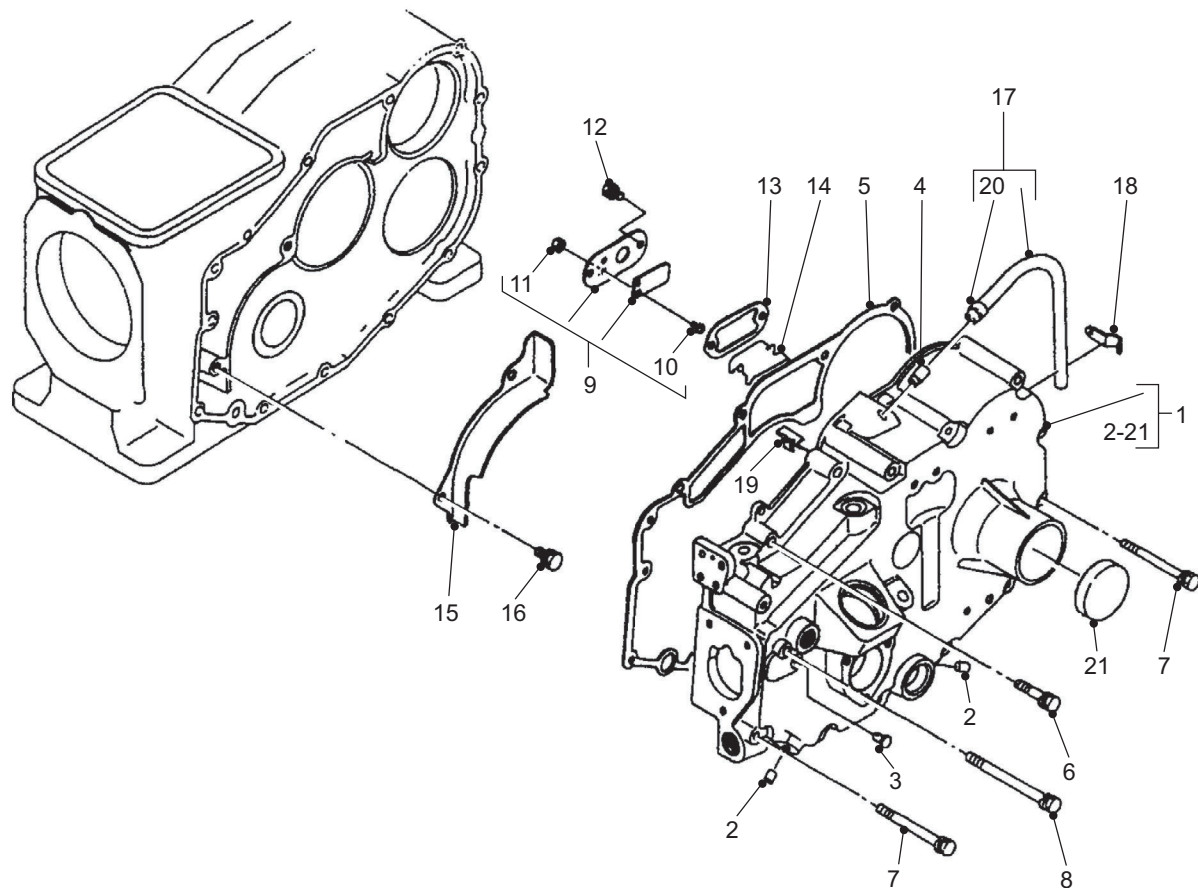


PC000093

**Section
07-01-03**

59

 
Cylinder Head Cover

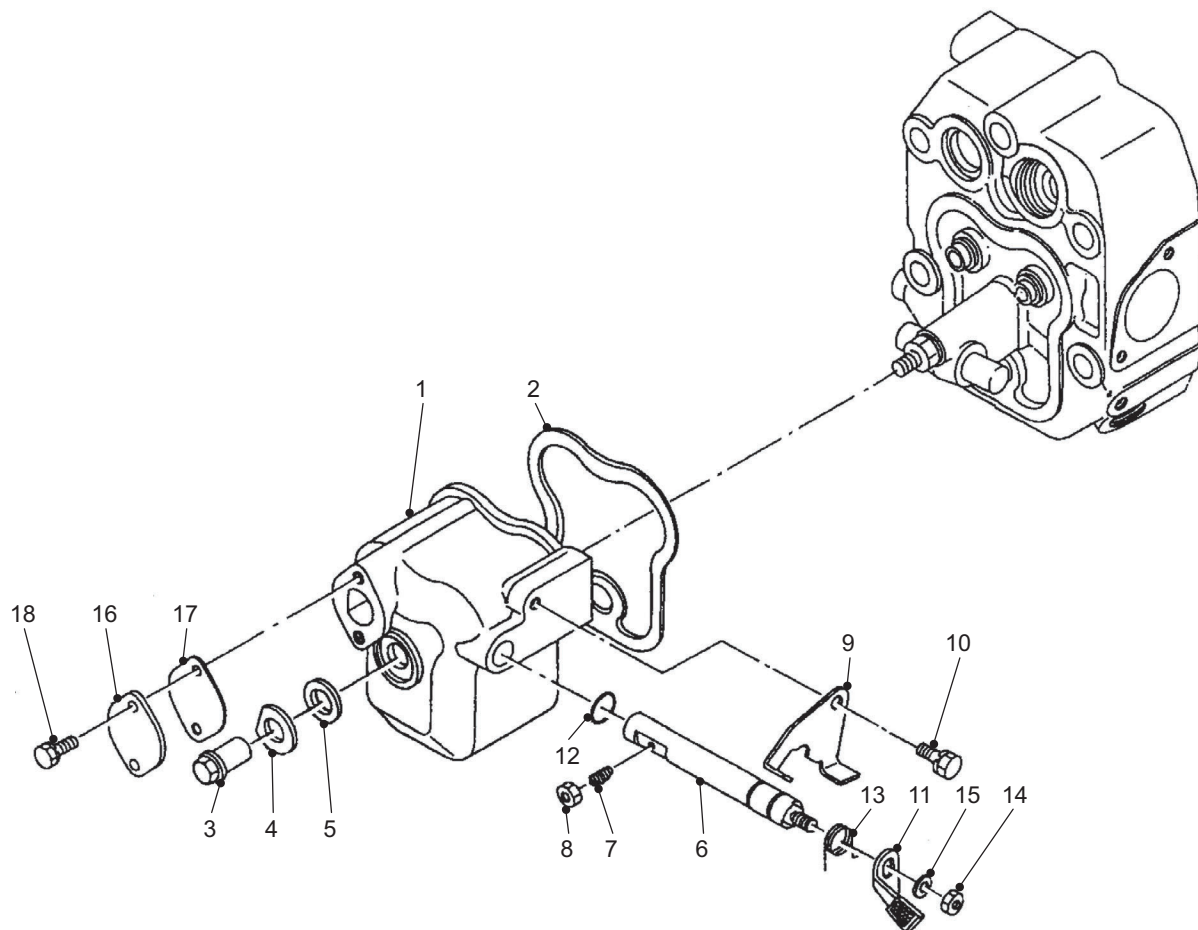

PC000094

**Section
07-01-04**

 
Walk-Behind Duplex Rollers DX-500E

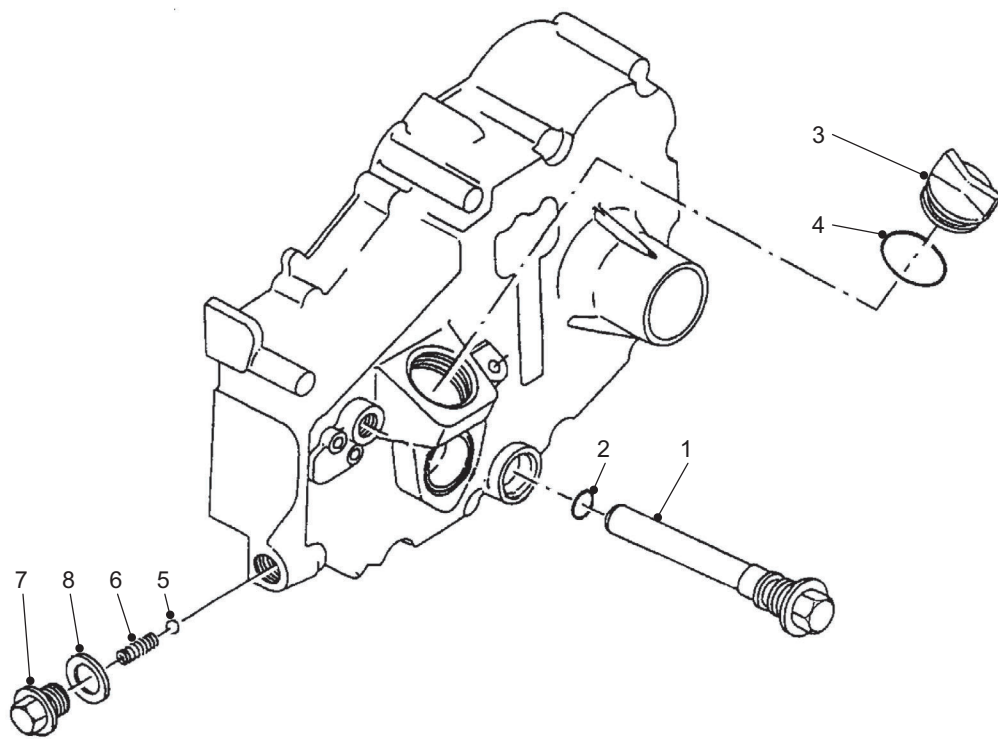

PC000095

**Section
07-01-05**

 63

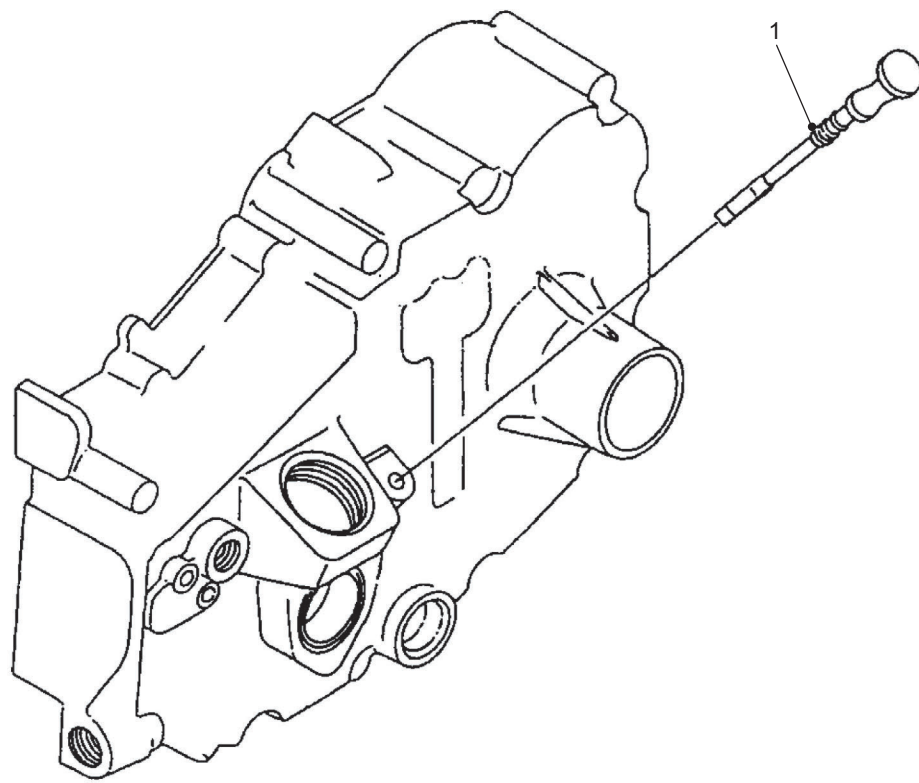


PC000096

Oil Gauge

**Section
07-01-06**

 
[illegible]

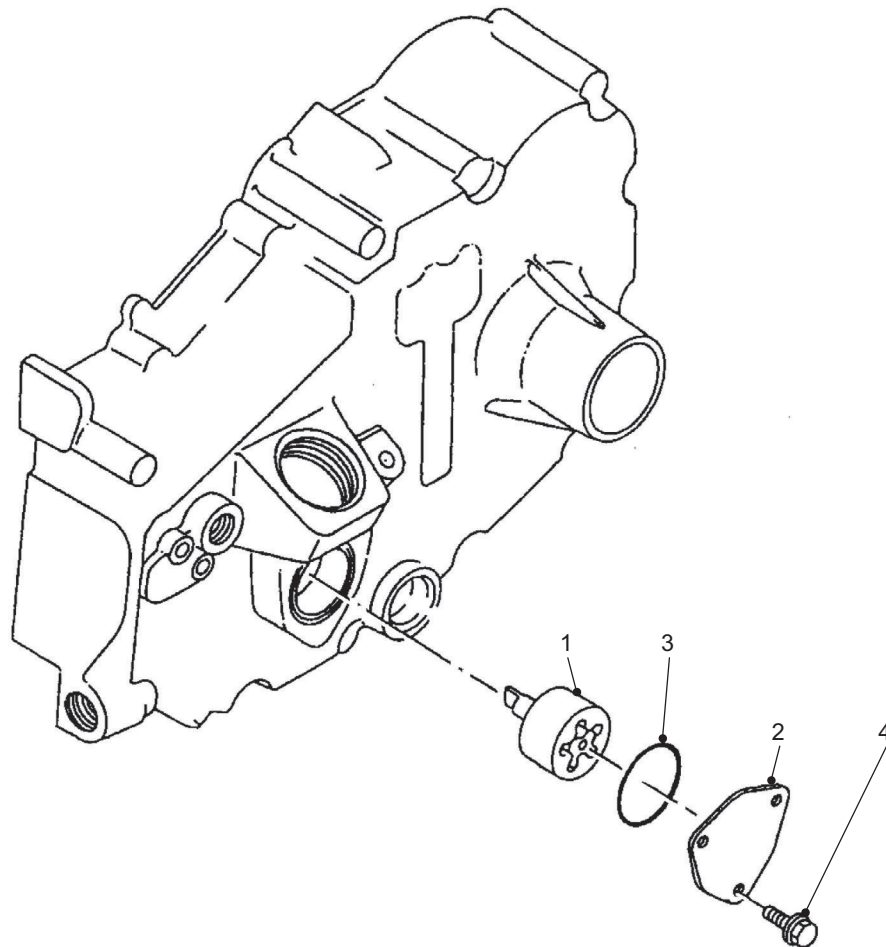

PC000097

**Section
07-01-07**

 67

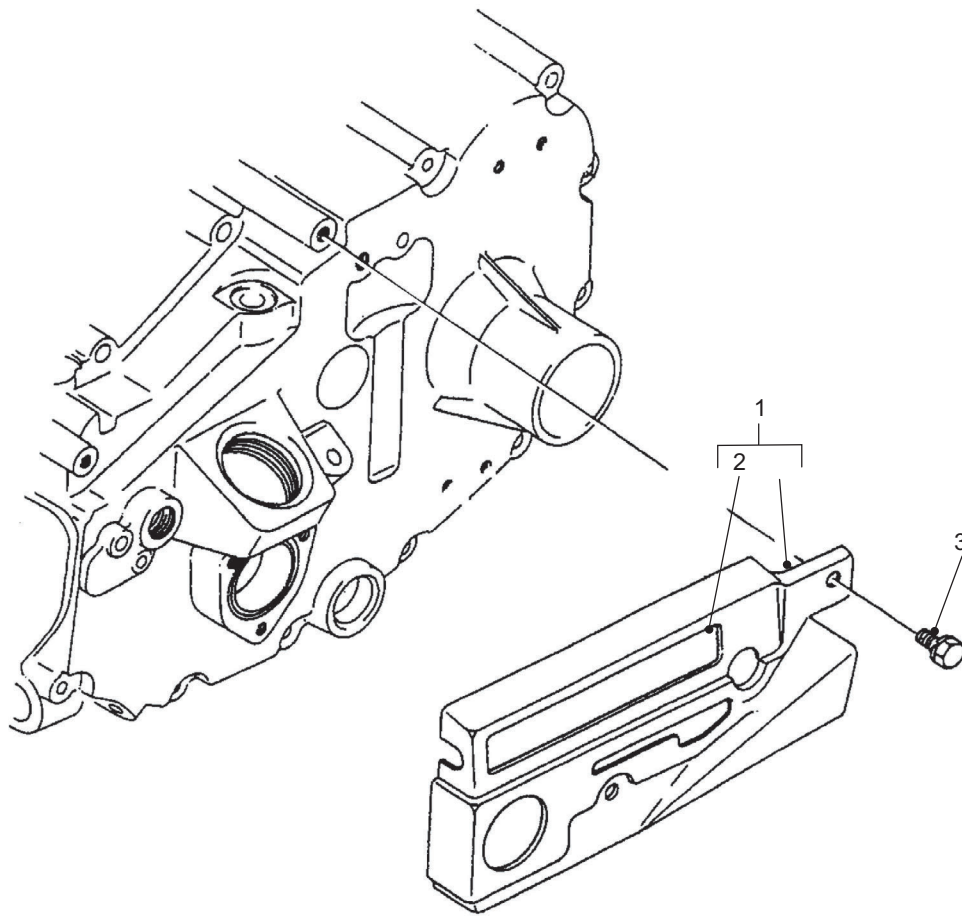


PC000098

**Section
07-01-08**

69

 
Main Bearing Case

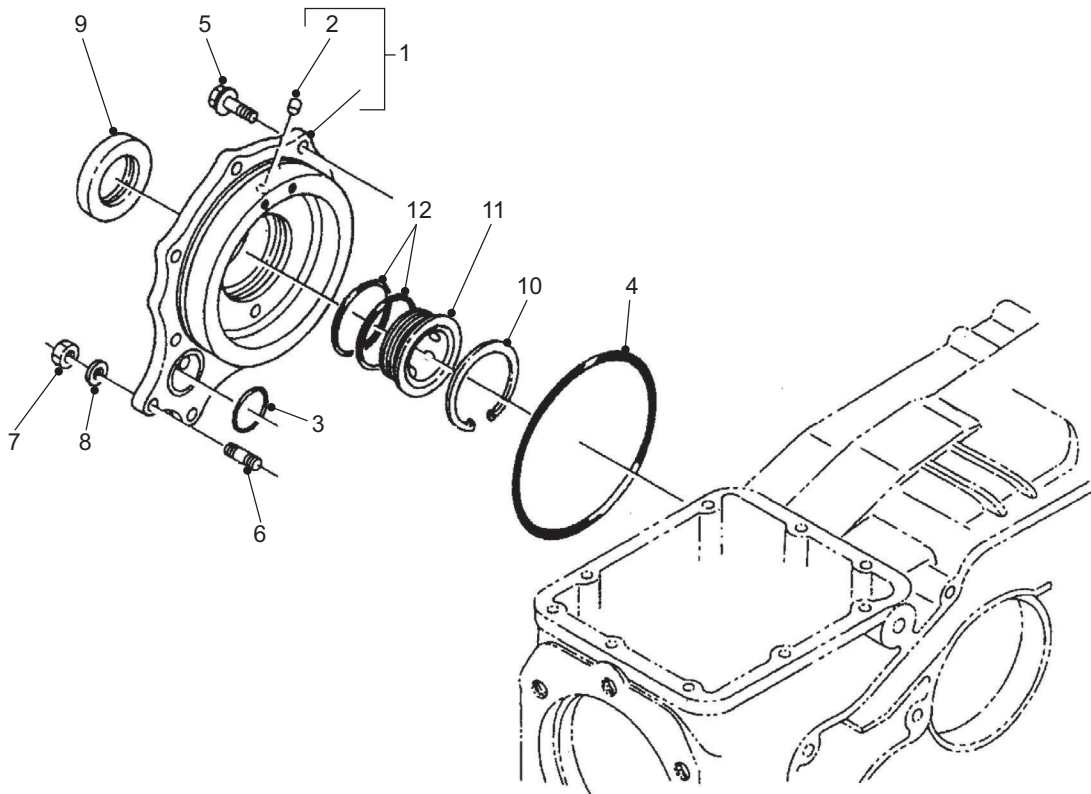

PC000099

**Section
07-01-09**

 Walk-Behind Duplex Rollers DX-500E

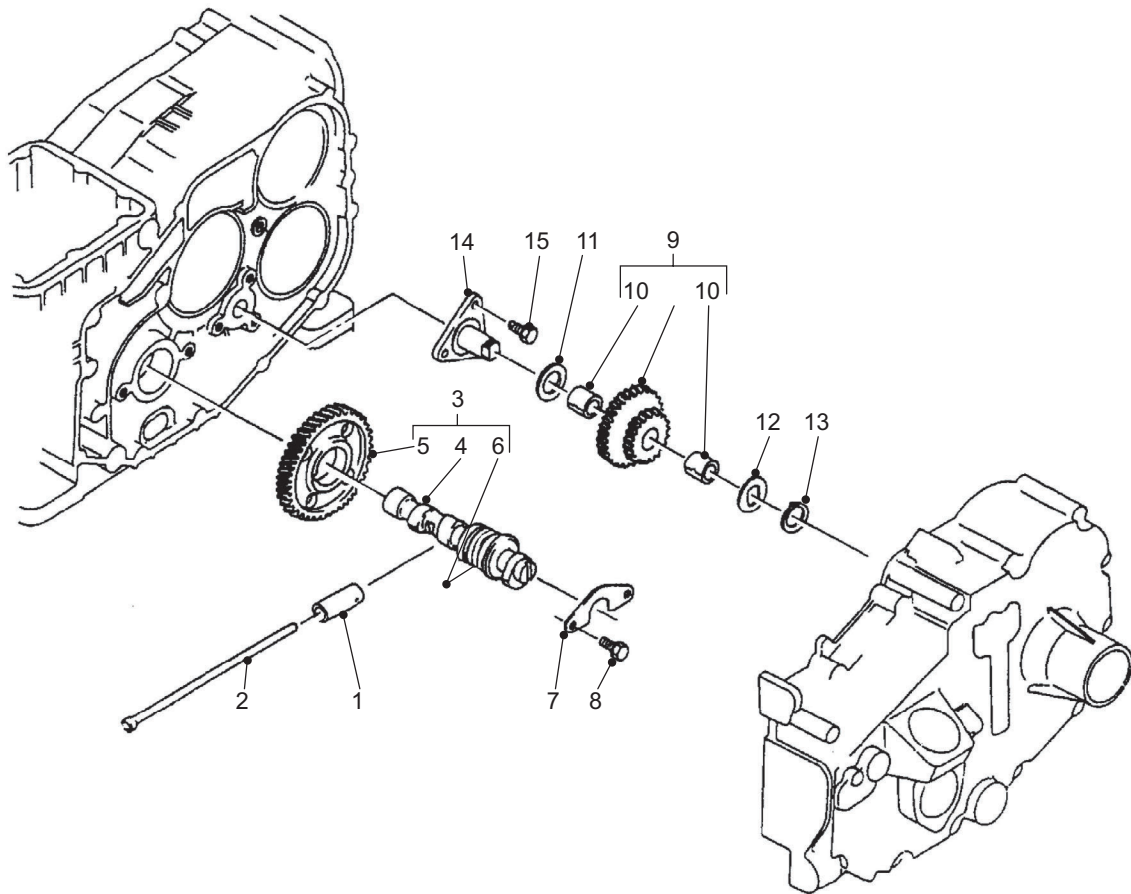


PC000100

**Section
07-01-10**


73

 Piston assembly

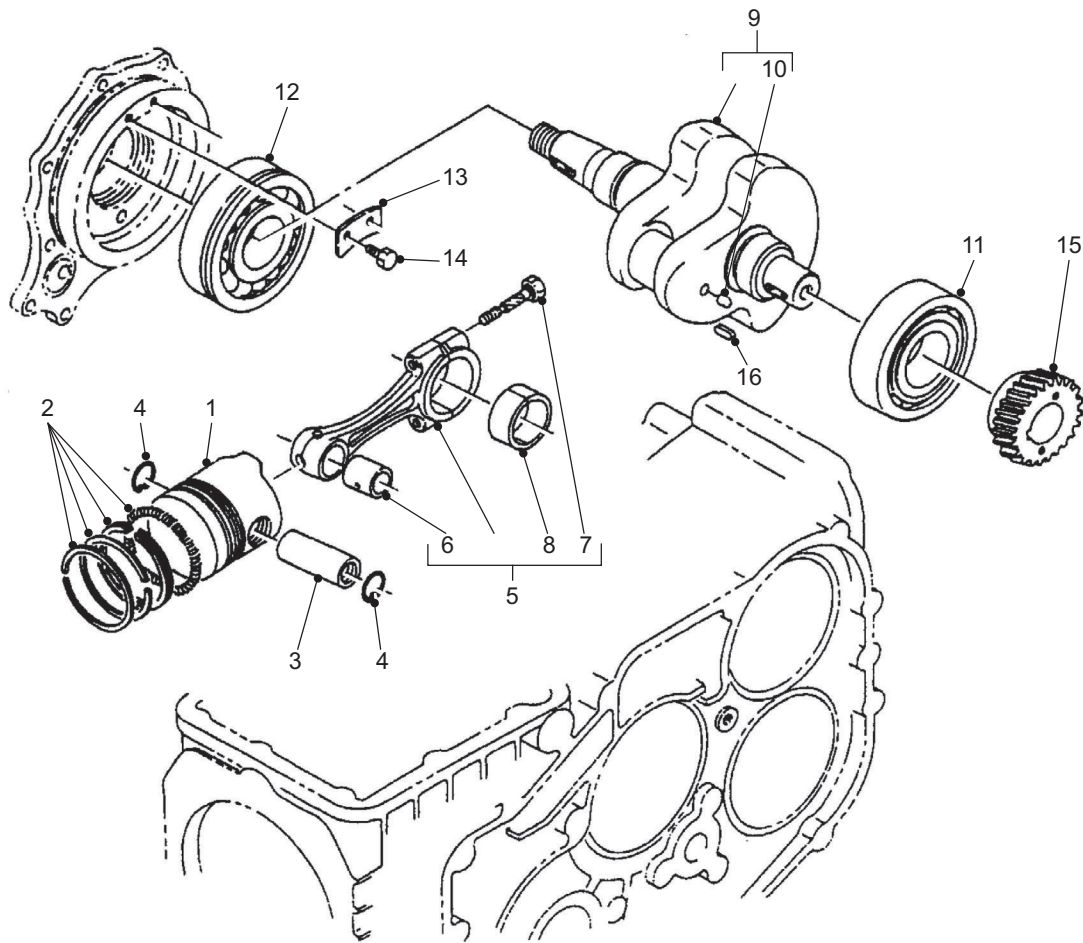


PC000101

 Section
07-01-1175

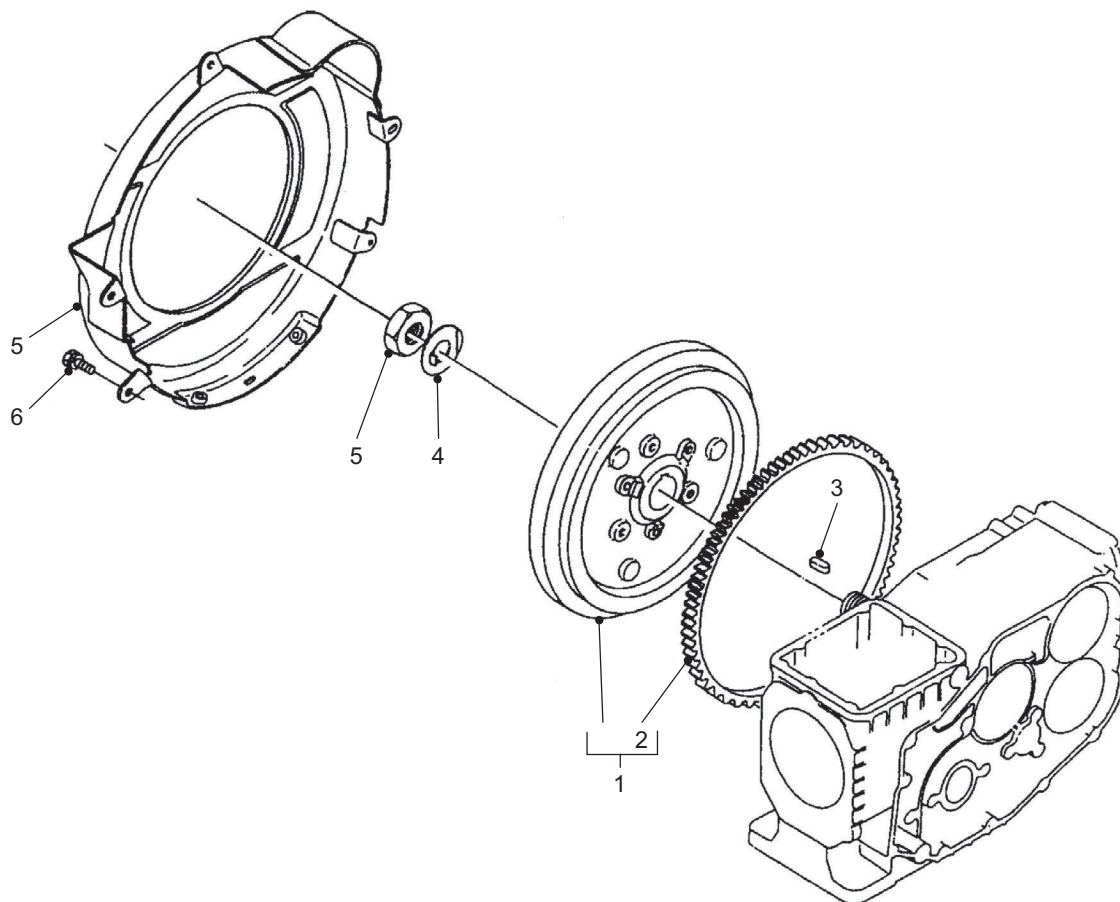

**Section
07-01-12**

 
Walk-Behind Duplex Rollers DX-500E

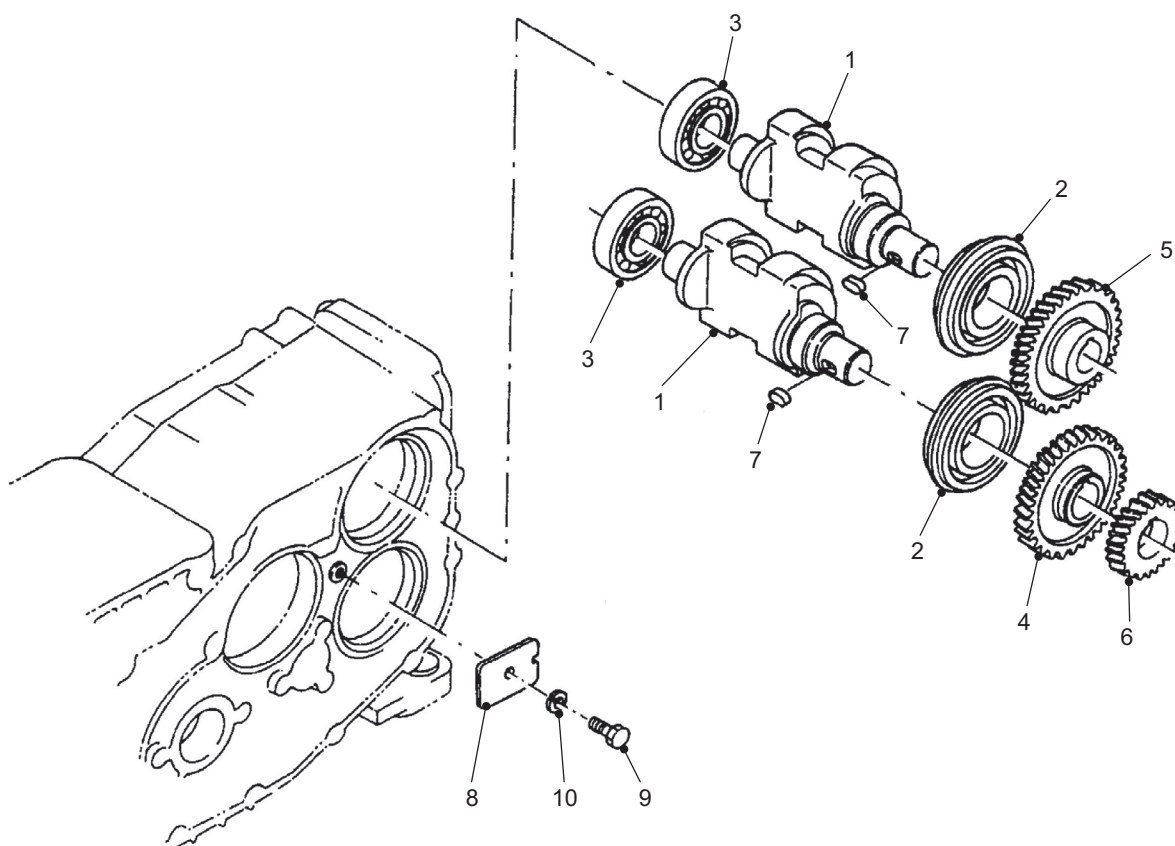


PC000103

**Section
07-01-13**

 79

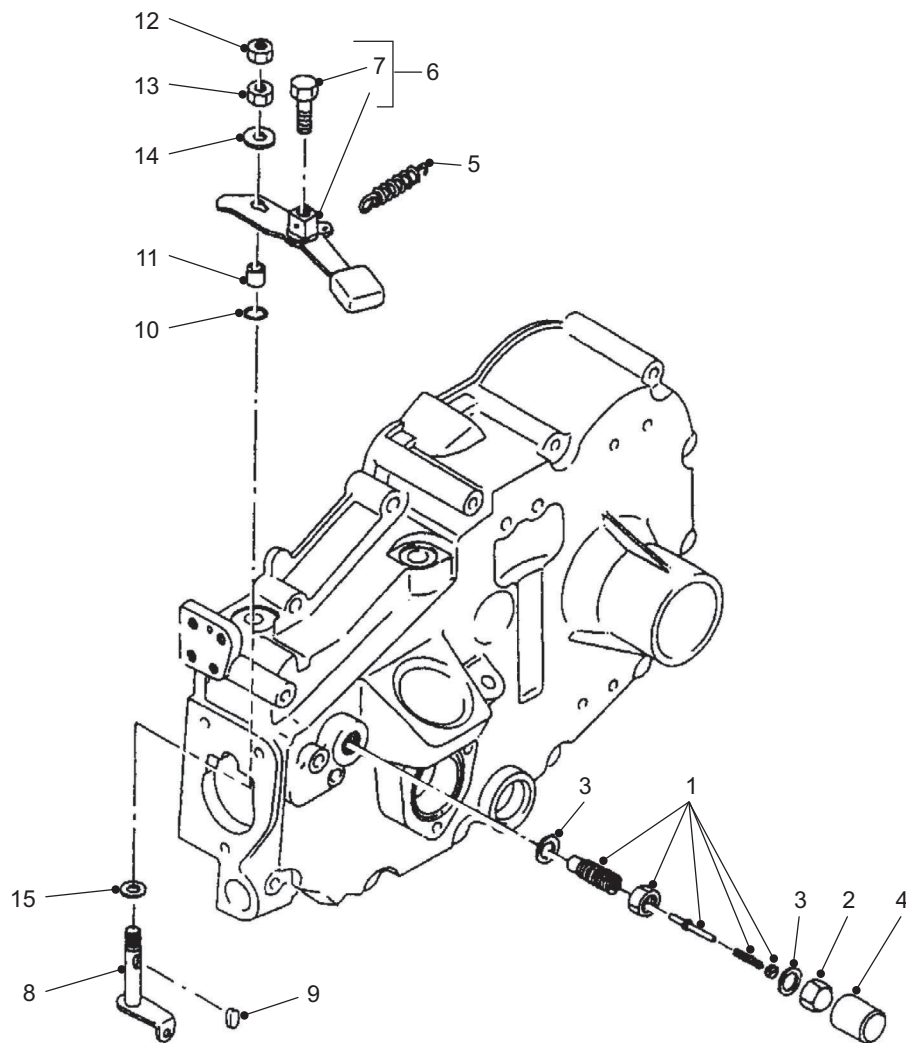

Section
07-01-1481

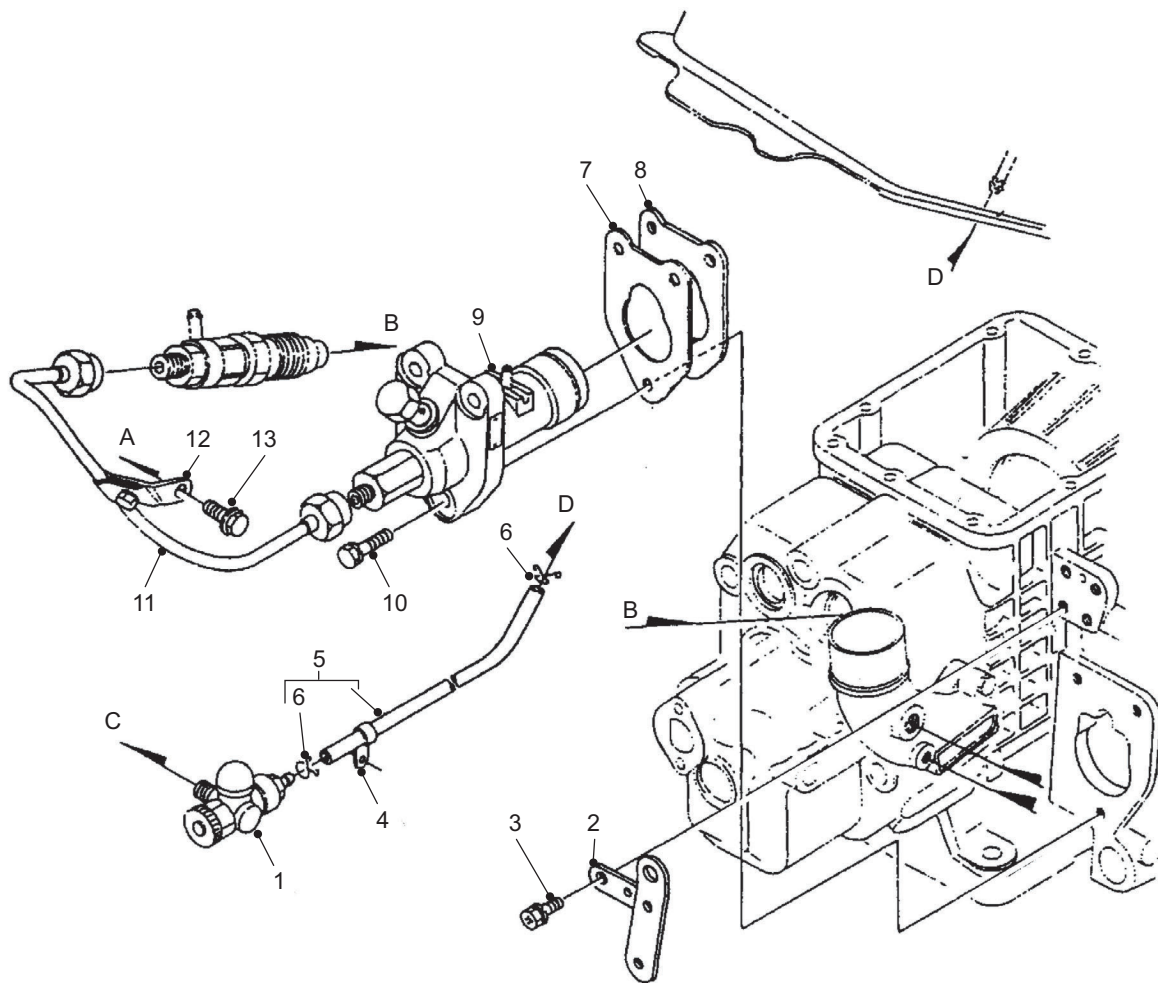 


PC000105

**Section
07-01-15**

83

 Injection Pump

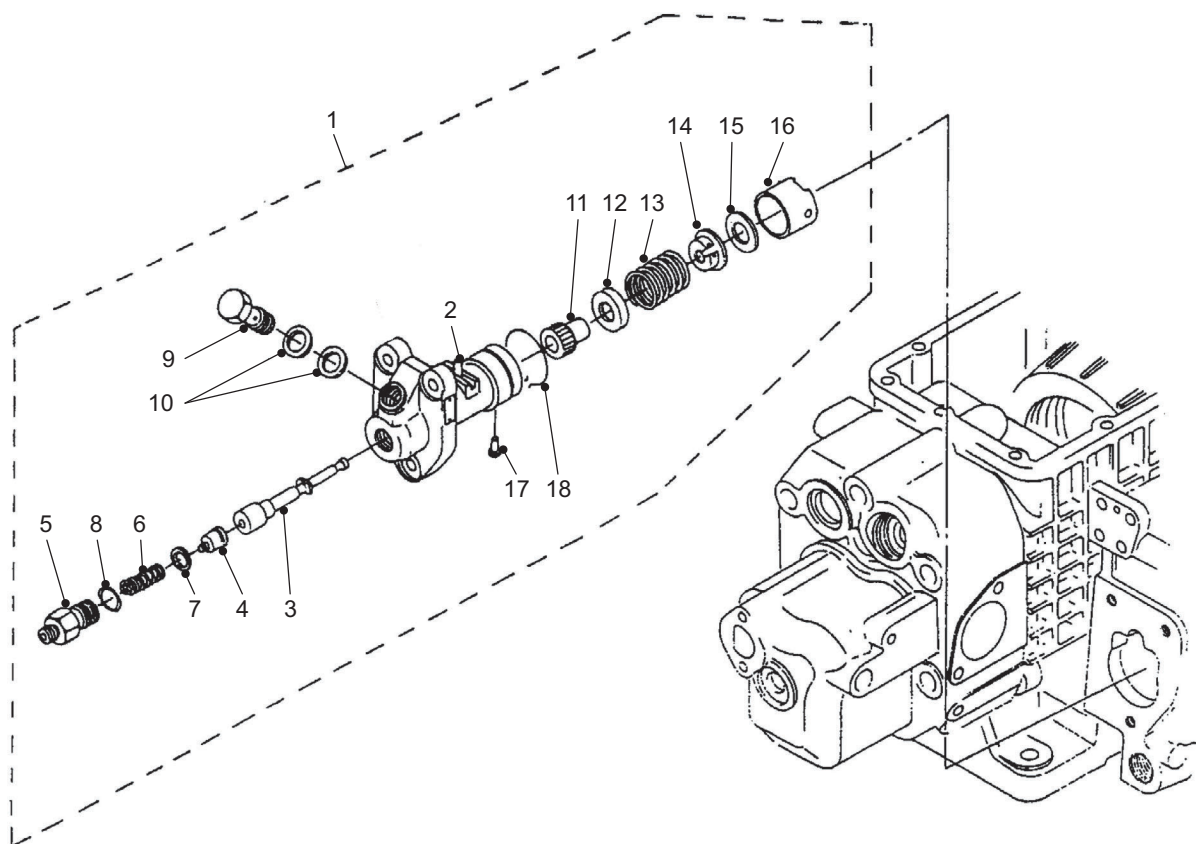


PC000106

Section
07-01-1685

**Section
07-01-17**

 87

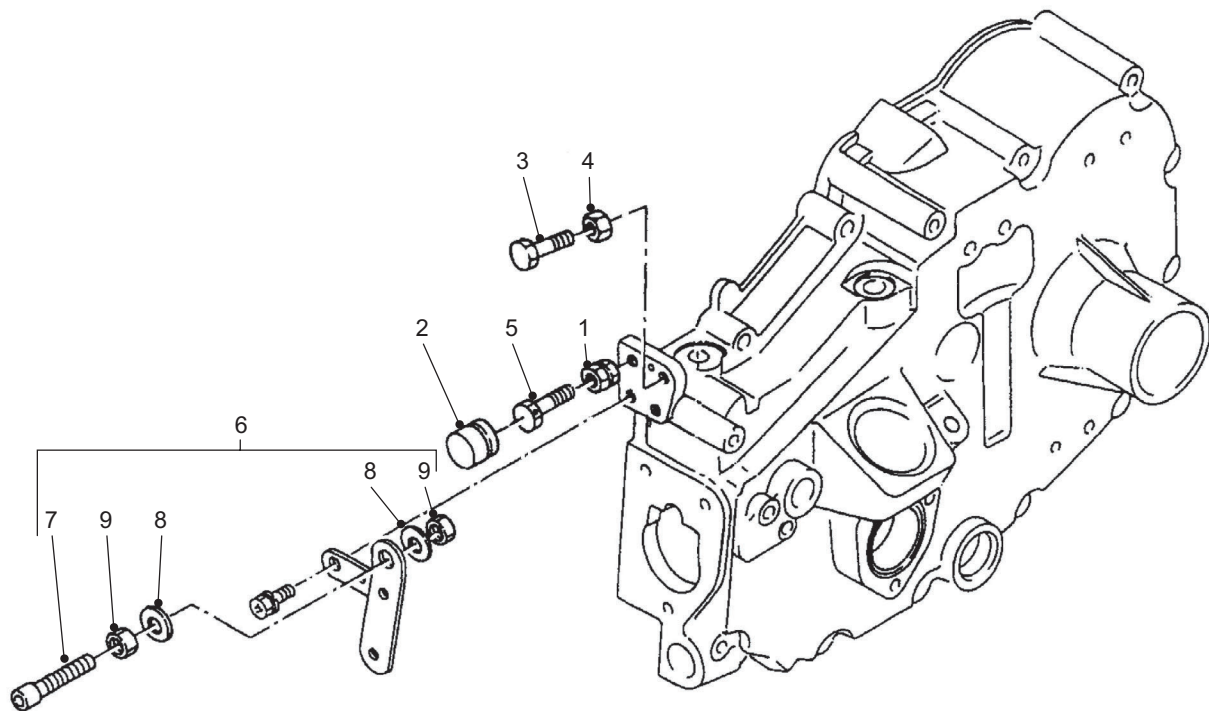


PC000108

**Section
07-01-18**

89

 
Nozzle Holder

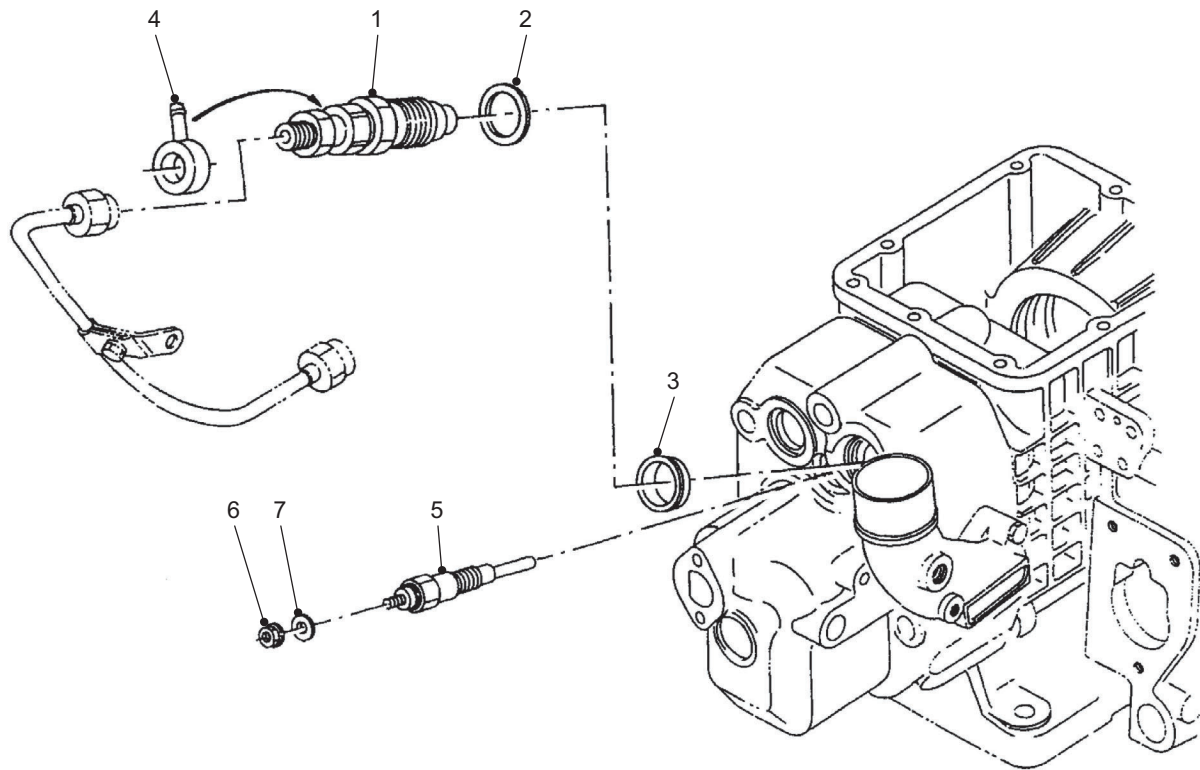

PC000109

**Section
07-01-19**

 
91

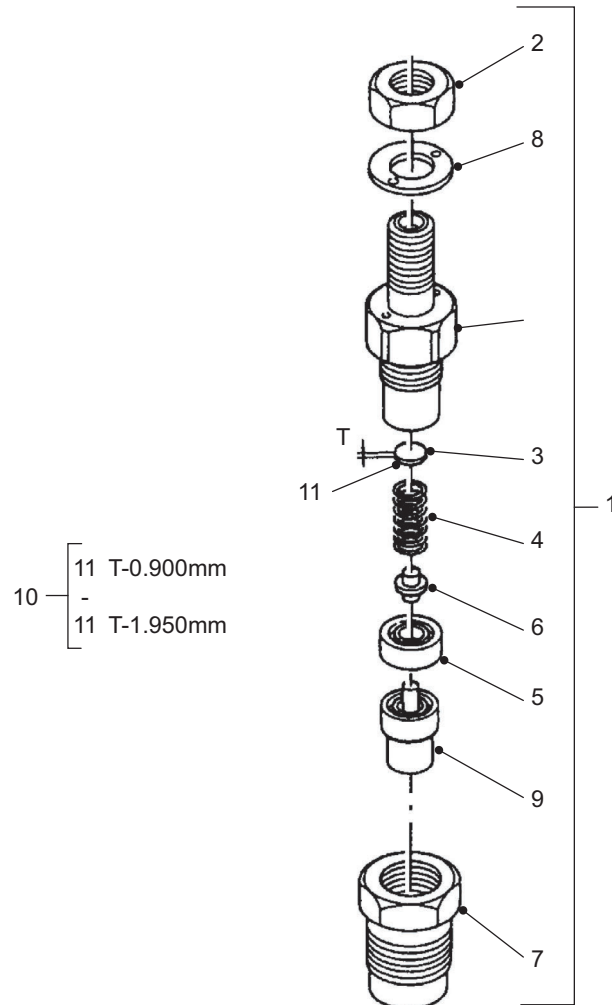

**Section
07-01-20**

93

 Fuel Filter

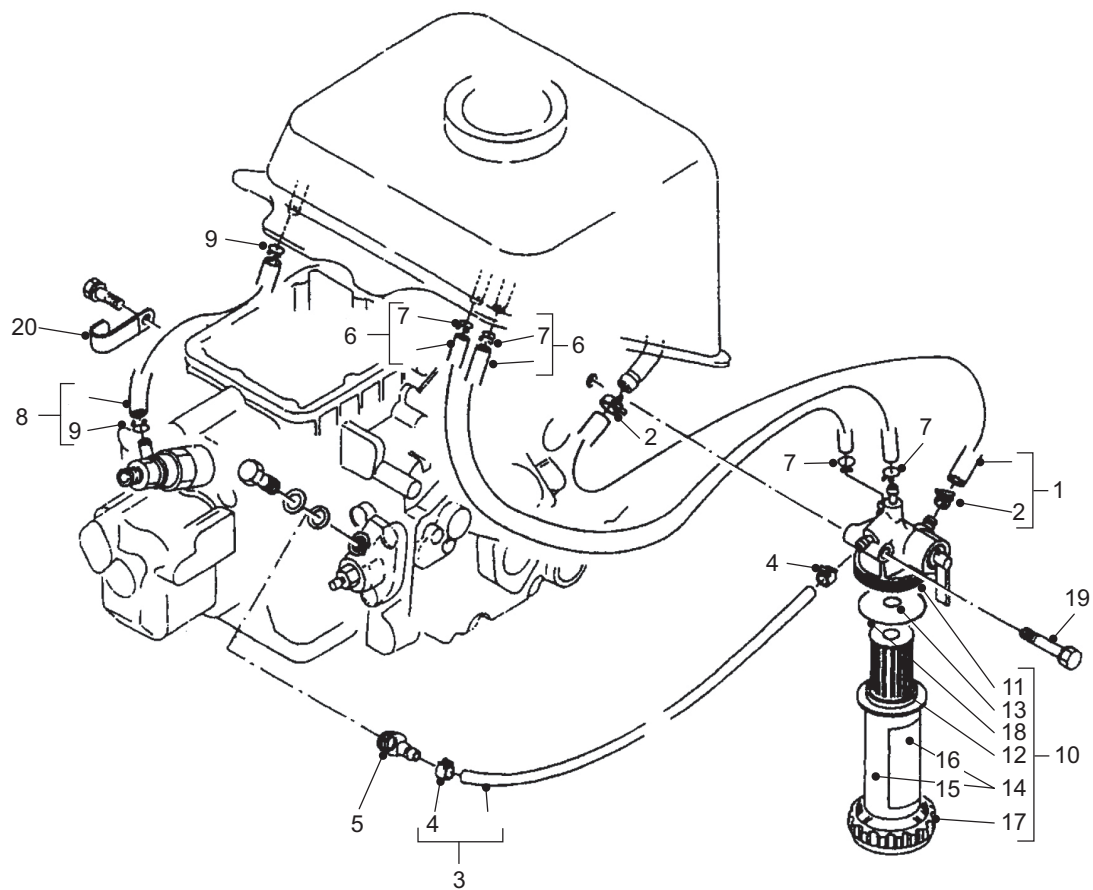


PC000111

**Section
07-01-21**


95

 Fuel Tank

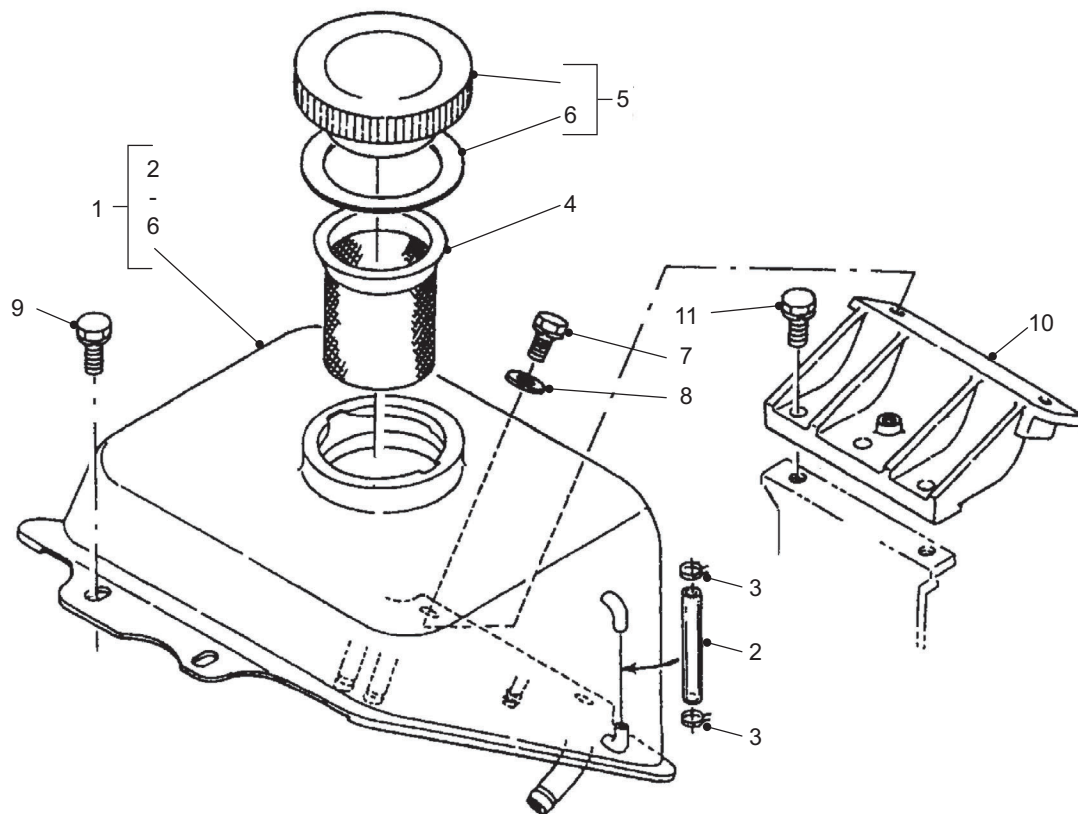

PC000112

 Section
07-01-2297

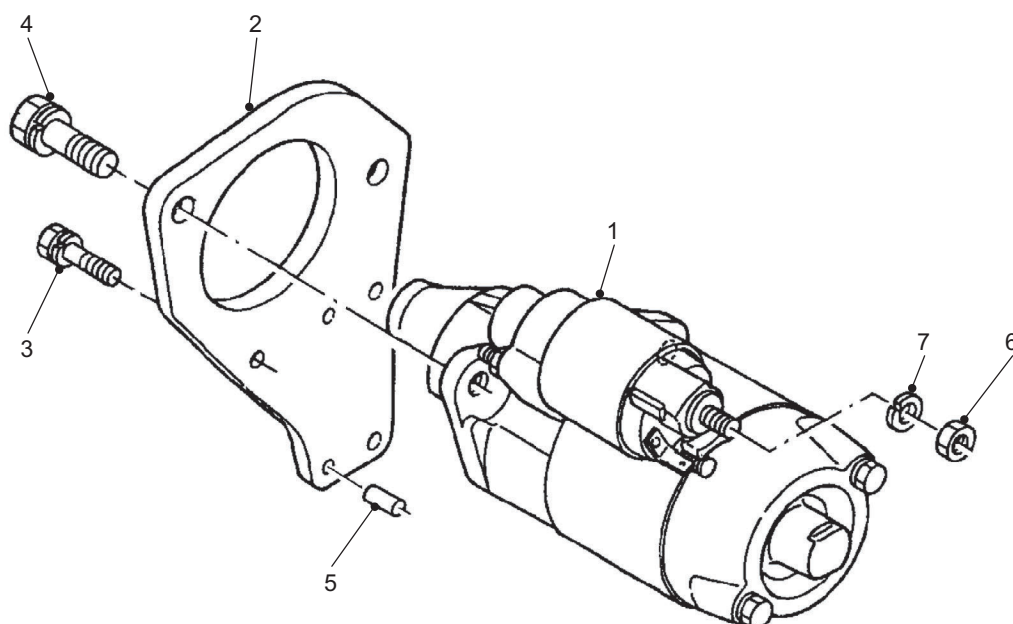


PC000113

**Section
07-01-23**

99

 Starter Assembly

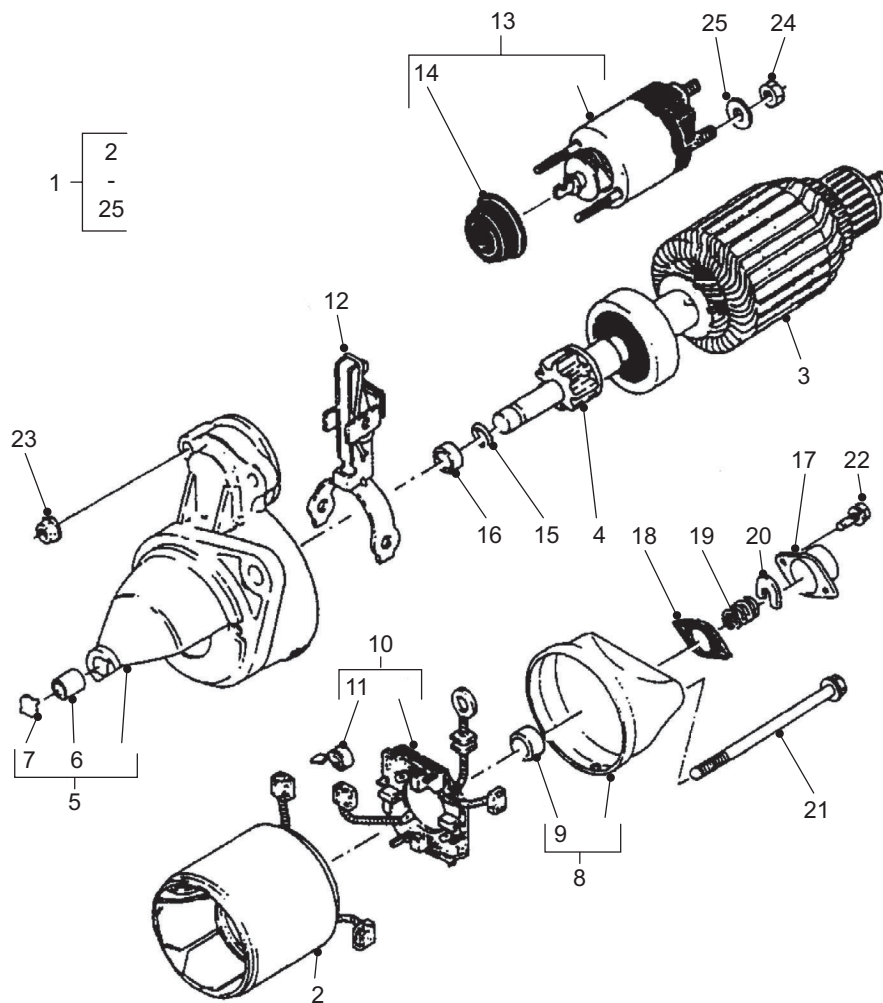


PC000114

Starter Assembly

Section
07-01-24

Item	Part Number	Denomination	Remarks	Serial Number	Qty
1	59365437	Starter Assembly	Includes Ref. 2 - 25		1
2	59366096	Starter Yoke Assembly			1
3	59366104	Arm			1
4	59366112	Clutch			1
5	59366120	Frame Assembly	Includes Ref. 6 + 7		1
6	59366138	Starter Housing Bushing			1
7	59366146	Expansion Plug			1
8	59366153	End Frame Assembly	Includes Ref. 9		1
9	59366161	Bushing			1
10	59366187	Brush Holder Assembly	Includes Ref. 11		1
11	59366195	Brush Spring			4
12	59366203	Drive Lever			1
13	59366211	Magnetic Switch	Includes Ref. 14		1
14	59366229	Cover			1
15	59366237	Snap Ring			1
16	59366245	Nut			1
17	59366252	End Frame Cap			1
18	59366260	Gasket			1
19	59366278	Brake Spring			1
20	59366286	Brake Shoe			1
21	59366294	Bolt			2
22	59238923	Screw w/Washer			2
23	59367201	Nut			2
24	59336024	Nut			1
25	59367219	Washer			1

 Oil Switch

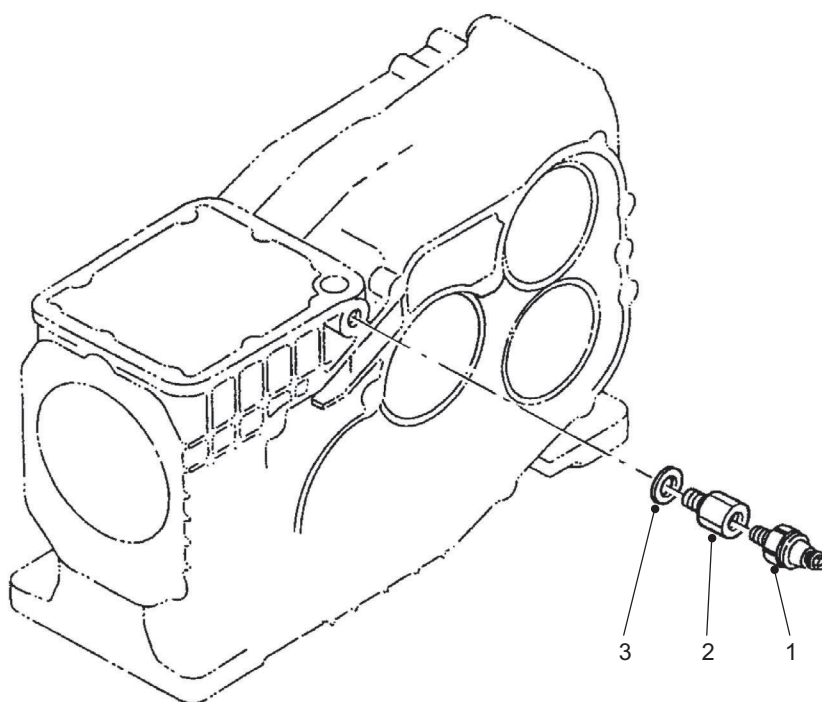


PC000115

**Section
07-01-25**

Walk-Behind Duplex Rollers DX-500E

 
Radiator

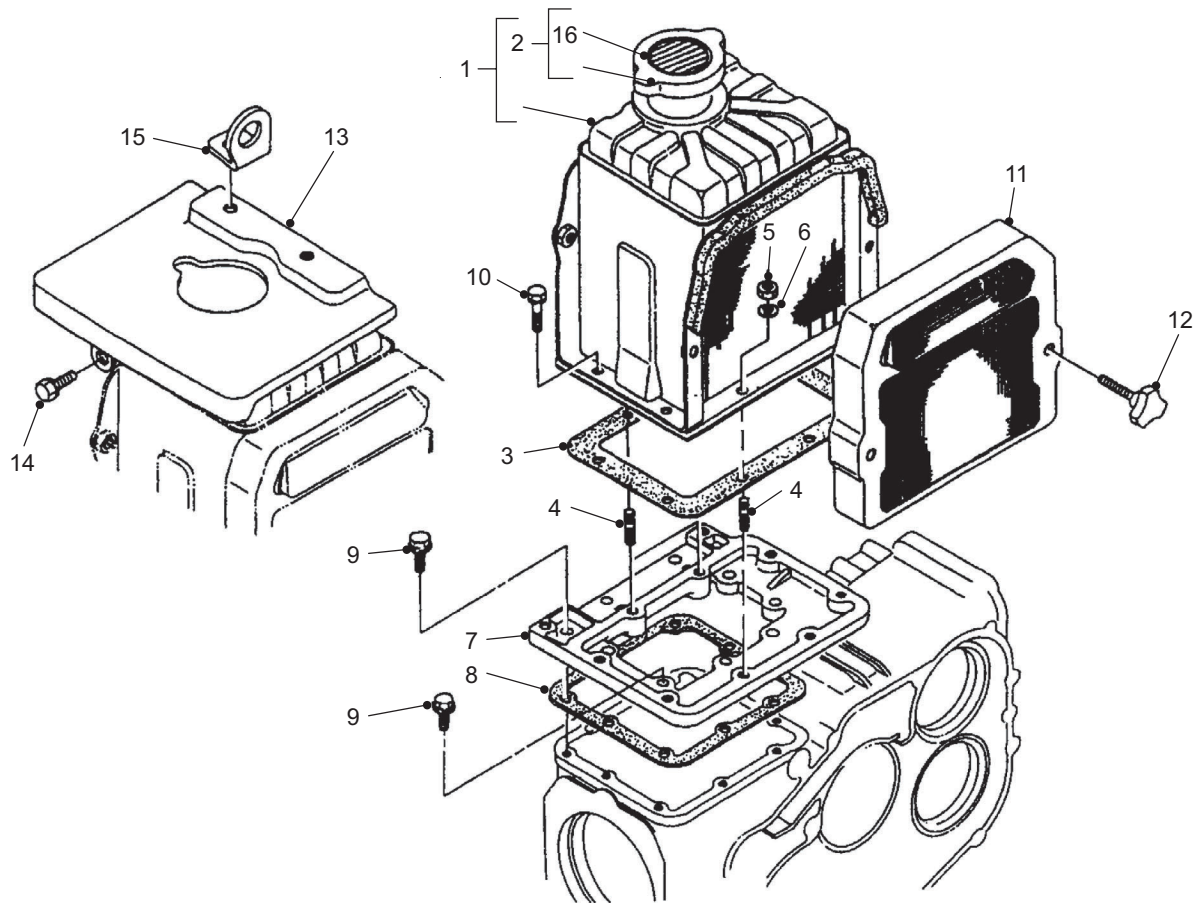

PC000116

**Section
07-01-26**

 105

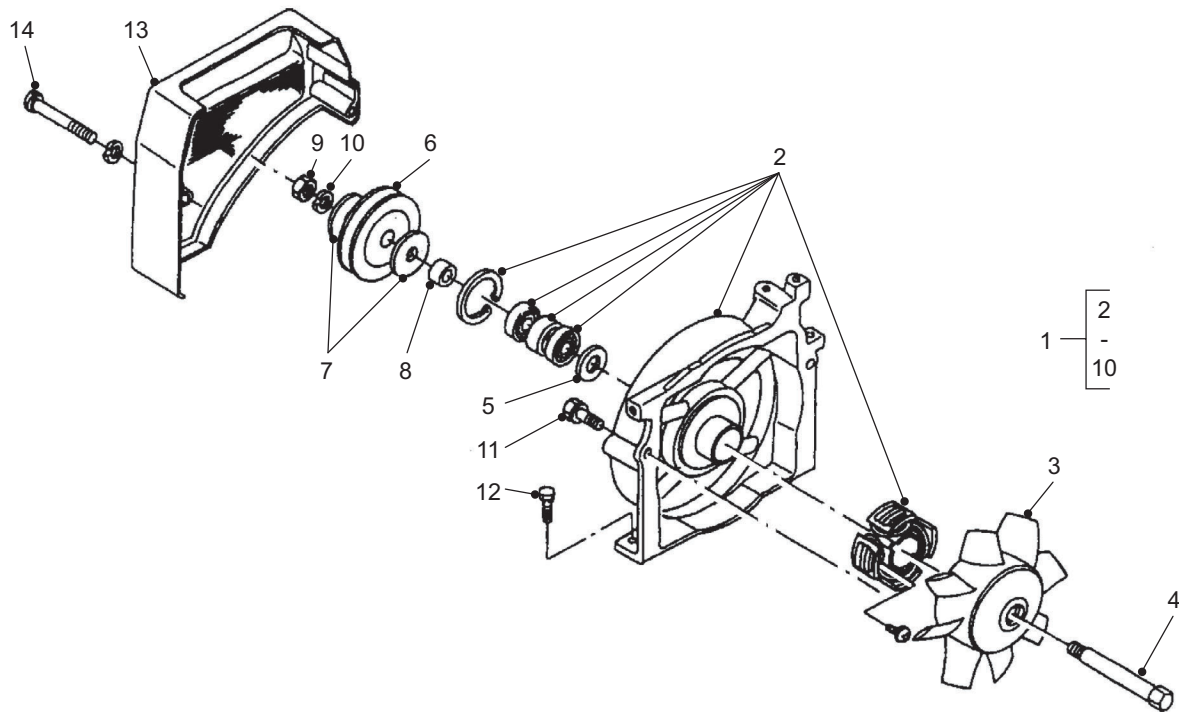


PC000117

**Section
07-01-27**

107

 
Tension Pulley

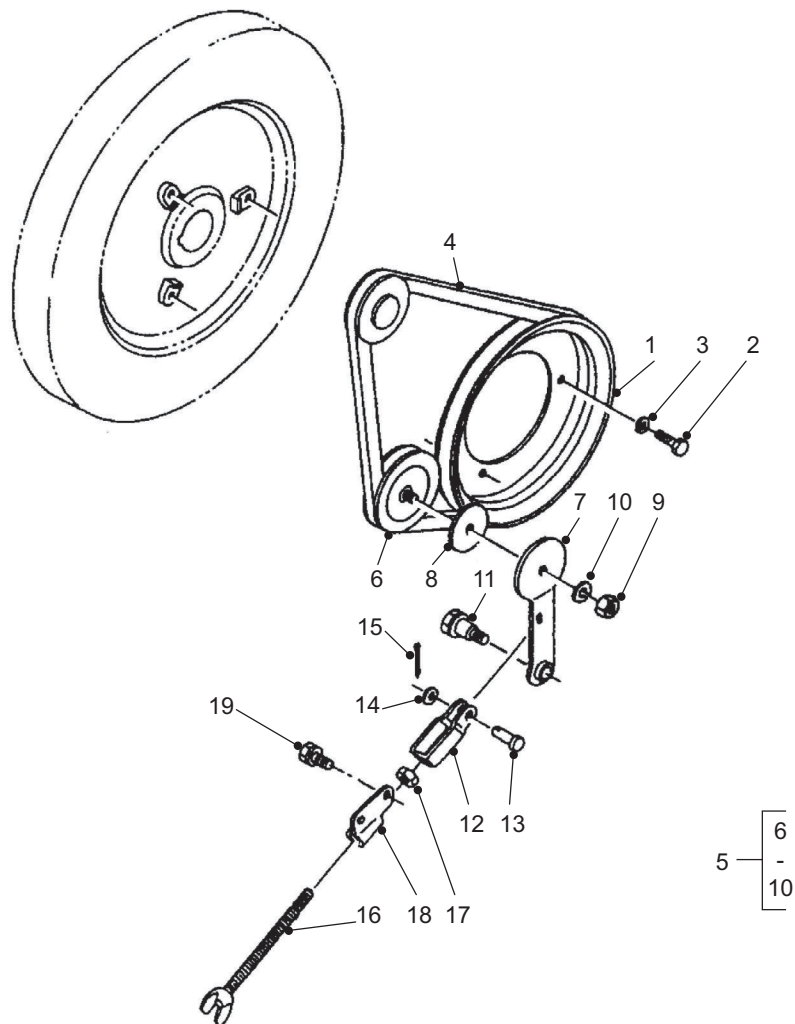

PC000118

**Section
07-01-28**

 
109

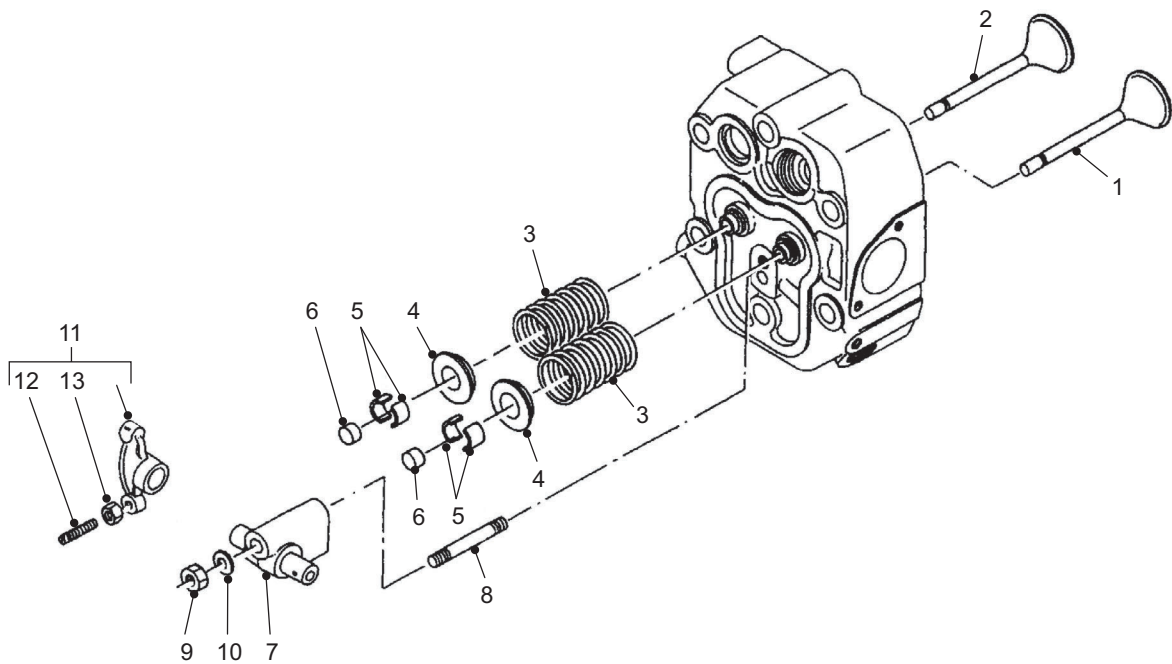

PC000119

Section
07-01-29111

 Air Cleaner

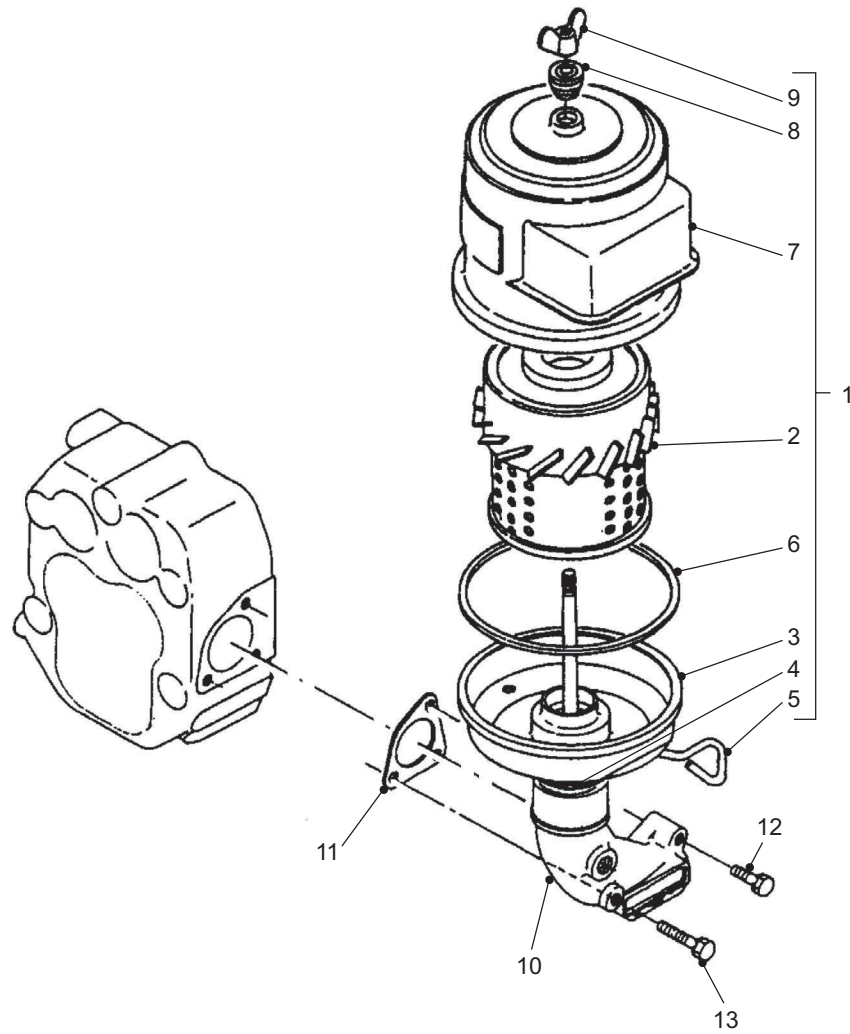


PC000120

**Section
07-01-30**

113

 
Muffler

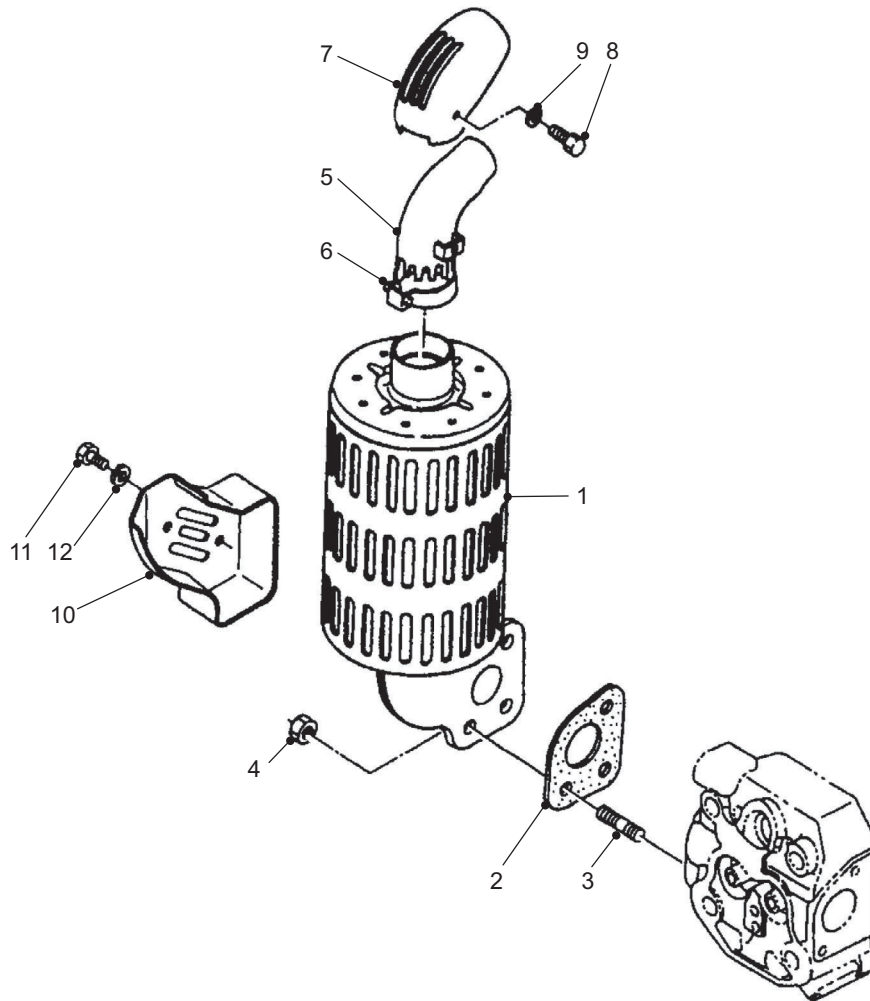

PC000121

**Section
07-01-31**

 
115

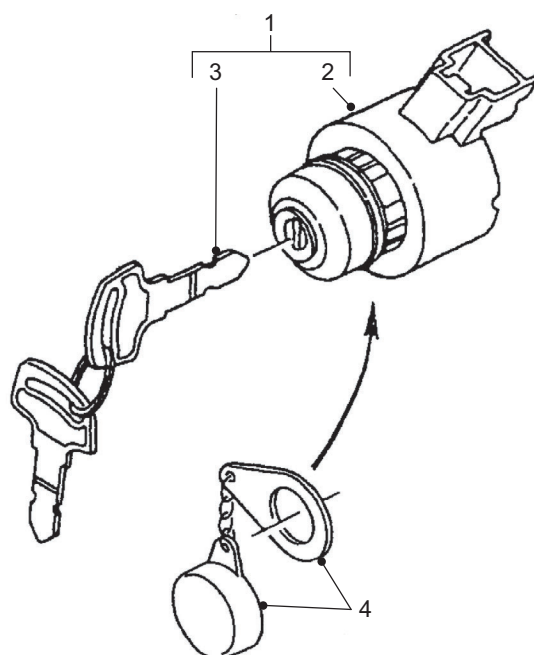

PC000122


**Section
07-01-32**

 117

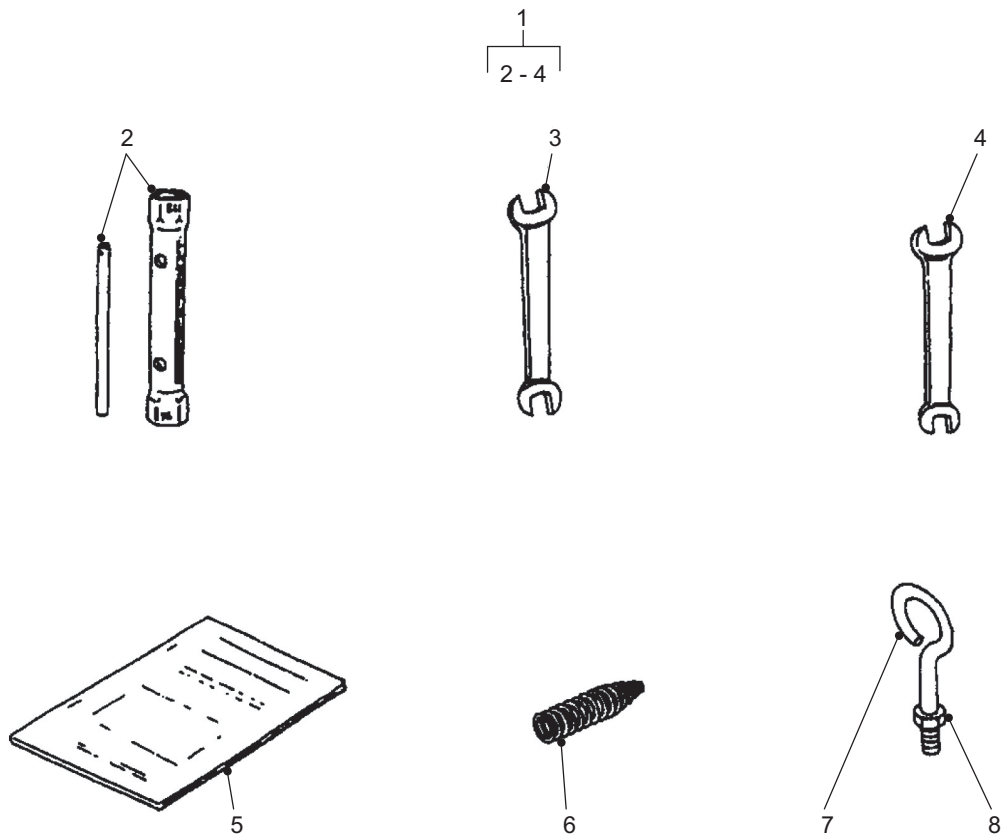

**Section
07-01-33**

 119

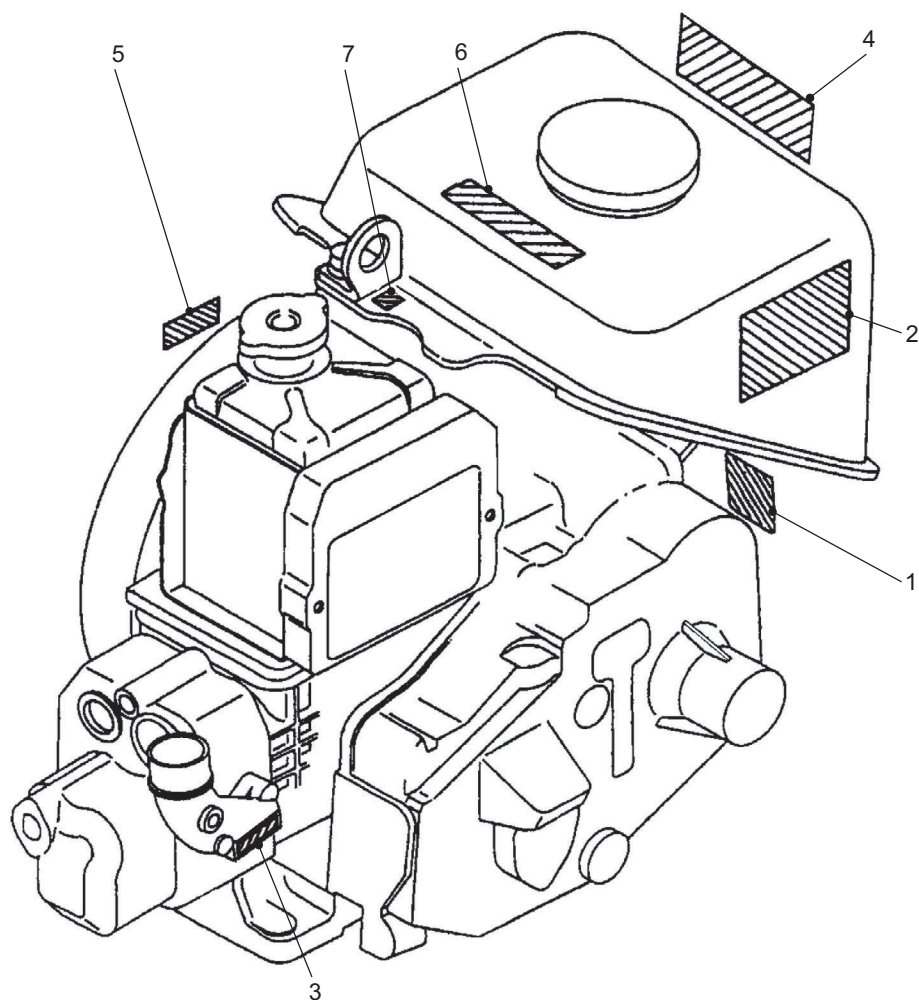

PC000124

**Section
07-01-34**

121

Intentionally left blank

WORD INDEX

A

Adapter	51
Adjusting Washer	93
Adjustment Washer Assembly	93
Air Cleaner Assembly	113
Air Cleaner Element	3, 113
Air Cleaner Flange	113
Air Vent Pipe Assembly	95
Arm	101
Arm Shaft (DX-500E)	39

B

Balancer	79
Balancer 1 Gear	79
Balancer 2 Bearing	79
Balancer 2 Gear	79
Balancer 3 Gear	79
Ball	63, 87
Ball Bearing	35, 39
Ball Plate	43
Ball Spacer	43
Band	11, 51
Bar	17
Base (DX-500E)	11
Base Plate	43
Battery	47
Battery Cable	5, 47
Battery Case	47
Battery Holder Down Plate Assembly	47
Battery Pad	47
Battery Plate	47
Battery Terminal Cover	47
Bearing Cover	39
Bearing Retainer	79
Bearing Stop	75
Body - Complete	113
Bolt	9, 11, 17, 23, 27, 33, 35, 39, 43, 47, 51, 55, 59, 61, 69, 73, 75, 77, 79, 81, 83, 87, 89, 95, 97, 99, 101, 105, 107, 109, 113, 115
Box Spanner	119
Bracket	17, 27

Brake Floange	35
Brake Lever	3, 35
Brake Pin	35
Brake Shoe	101
Brake Spring	101
Breather Assembly	59
Breather Gasket	59
Breather Inner Plate	59
Breather Joint	59
Breather Oil Guard	59
Brush Holder Assembly	101
Brush Spring	101
Bushing	11, 17, 23, 27, 39, 51, 101

C

Camshaft	73
Camshaft Gear	73
Camshaft Stopper	73
Cap	11, 81, 89, 109
Capnut	11, 81
Case	35
Case - Complete	113
Caution Label	105
Charge Oil Seal	7, 43
Charge O-ring	43
Clamp Pin	85
Clamp Set Plate	17
Clip	97
Clutch	101
Clutch Plate	43
Clutch Pulley	43
Collar	17, 27
Collar (A)	33
Collar (B)	33
Comp Flywheel	77
Connecting Rod Assembly	75
Connecting Rod Bolt	75
Control Lever Shaft Assembly	81
Control Rack	85
Control Sleeve	85
Cord Clamp	55, 59, 83, 95
Coupling Boss (DX-500E)	43
Coupling Shaft (DX-500E)	43
Coupling	43
Cover	101
Cover (A) (DX-500E)	11
Cover (B)	9
Crankcase Assembly	55

Crankcase Cover Gasket	55
Crankpin Metal	75
Crankshaft Assembly	75
Crankshaft Gear	75
Crankshaft Nut	77
Cross Slot Screwdriver	31
Cylinder Head Assembly	57
Cylinder Head Cover Assembly	61
Cylinder Head Gasket	57
Cylinder Head Nut	57
Cylinder Head Stud	57
Cylinder Liner	55

D

Decal Kit (DX-500E)	49
Decal: Caution	49
Decal: Check oil	49
Decal: Check Parking	49
Decal: Control Lever	49
Decal: Drain	49
Decal: DX-500E	49
Decal: Engine Hook	121
Decal: Engine Name	121
Decal: Engine RPM	49
Decal: Fuel	121
Decal: Hydraulic Oil	49
Decal: Instruction	121
Decal: IR Logo	49
Decal: Jet Start	121
Decal: Mark	121
Decal: Oil Feed	49
Decal: Oil Gauge	49
Decal: Oil Level	49
Decal: Parking Brake	49
Decal: Sprinkler	49
Decal: Starter Switch	49
Decal: Throttle	49
Decal: Warning	49
Decal: Water	49
Decompression Bolt	61
Decompression Hole Cover	61
Decompression Lever	61
Decompression Shaft	61
Decompression Spring	61
Decompression Stopper	61
Delivery Valve	85
Delivery Valve Bracket	85
Delivery Valve Gasket	85
Delivery Valve Spring	85
Disc Complete	43
Double Ended spanner	31, 119
Drain Cap	11
Drain Cap CP	11
Drain Cock	57

Drive Lever	101
Drive Motor Assembly	7, 35
Drum	3, 7

E

Eccentric Case (DX-500E)	39
Elbow	11, 51
Electrical	5
Element Assembly	3, 95
End Frame Assembly	101
End Frame Cap	101
Engine - Kubota	3, 5, 7
Engine Assembly	43
Engine Base	43
Engine Hook	105
Engine Hook Bolt Assembly	119
Exhaust Valve Guide	57
Expansion Plug	57, 101
Eye Joint	95

F

Fan	107
Fan Bracket Assembly	107
Fan Collar	107
Fan Cover	107
Fan Drive Pulley	109
Fan Pulley	107
Fan Shaft	107
Fan Washer	107
Filter	97
Filter Body Assembly	95
Filter Cover	51
Filter Cup	95
Filter Cup Assembly	95
Filter O-ring	95
Flange Bolt	55, 67, 71, 83, 105
Flange Gasket	113
Flange Nut	91
Flange oil Seal	7, 43
Flywheel Cover	77
Flywheel Washer	77
Forward / Reverse Lever	5, 17
Forward/Reverse Cable	5, 17
Forward/Reverse Lever Knob	3, 17, 27
Frame	3, 5
Frame Assembly	101
Friction Plate	81
Friction Spring	17, 27, 35
Front Bracket	35
Fuel Assembly	81
Fuel Filter Assembly	3, 95
Fuel Filter Lable	95

Fuel Pipe Assembly	59, 95	Ignition Switch Assembly	3, 117
Fuel Tank Assembly	97	Ignition Switch Cap	117
Fuel Tank Cap	3, 97	Injection Pipe	83
Fuel Tank Support	97	Injection Pump Assembly	83, 85
G		Inlet Valve Guide	57
Gasket	61, 63, 81, 85, 87, 91, 101, 103, 113	Instruction Manual	119
Gear	35	Internal Circlip	71, 75
Gear Case CP	59	J	
Gear Case Gasket	59	Jet Start Assembly	83
Gear Set plate	35	Joint	11, 51
Glow Plug	91	Joint Pin	109
Governor Lever Assembly	87	K	
Governor Lever Shaft	87	Key	73, 75, 79, 81
Governor Shaft	87	Knob Bolt	105
Governor Spring	87	L	
Governor Weight Pin	87	Lable, Noise	49
Governor Wheight Assembly	87	Lever Guide	17
Grommet	113	Lifting Hook	11
Ground Cable	47	Lock Washer	35
H		Locknut	89
Handle	23	Lockwasher	9, 17, 23, 35, 39, 43, 51
Head Cover Gasket	61	Lower Spring Seat	85
Head Cover Nut	61	M	
Head Cover Washer	61	Magnetic Switch	101
Heat Seal	91	Main 2 Bearing	75
Holder	17	Main Bearing Case assembly	71
Hook	17, 33	Member (DX-500E)	9
Horn	47	Muffler	7, 115
Horn Bracket	47	Muffler Flange Cover	115
Hose	11, 51	Muffler Gasket	7, 115
Hose (A)	51	Muffler Pipe	115
Hose (B)	51	Muffler Pipe Cover	115
Hose (C)	51	N	
Hose (DX-500E)	11	Name Plate	49
Hose Joint	11, 51	Neutral Arm (B)	23
Hydraulic Tank	51	Nipple	51
Hydraulic Tank Assembly	51	Nozzle	93
Hydraulic Tank Cap	3, 51	Nozzle Holder Assembly	91, 93
Hydraulic Tank Filter	3, 51	Nozzle Holder Join	91
Hydraulics	3	Nozzle Nut	93
I		Nozzle Spring	93
Idle Gear 1 Collar	73		
Idle Gear Assembly	73		
Idle Gear Bushing	73		
Idle Gear Circlip	73		
Idle Gear Shaft	73		
Idle Spring	87		
Idle Spring Pin	59		
Ignition Key	3, 117		

Nut Gasket	61
Nylon Nut	17, 23, 27, 33

O

Oil Filter	3, 51, 63
Oil Filter Plug	63
Oil Filter Ring	71
Oil Gauge	5, 65
Oil Pump Cover	67
Oil Pump Rotor Assembly	67
Oil Seal	35, 39, 71
Oil Seal Kit	7, 43
Oil Signal Holder	103
Oil Switch	5, 103
Oil Tank (DX-500E)	11
Oil Tank Cap	3, 11
Operation & Maintenance Manual	31
Operation Handle (DX-500E)	17
O-ring	11, 39, 55, 61, 63, 67, 71, 81, 85, 113
Over Pipe Assembly	95
Overflow Pipe Assembly	83
Overhaul Gasket Set	55

P

Packing	11, 35
Parts Manual	31
Pin	17
Pin Plug	55, 59
Pinion Gear	35
Pipe (A)	33
Pipe (B)	33
Pipe Band	115
Pipe Clamp	83
Pipe Clip	59, 83, 95
Pipe Pin	55
Piston	75
Piston Pin	75
Piston Pin Bushing	75
Piston Ring Assembly	75
Plain Washer	9, 11, 17, 23, 27, 35, 39
Plate Complete	43
Plug	11, 35, 39, 57, 59, 63, 71, 75, 87
Plunger	43
Plunger Spring	85
Pulley (DX-500E)	39

Pump Bracket	43
Pump Control Lever	5, 43
Pump Plunger	85
Push Rod	73, 93

R

Radiator Assembly	105
Radiator Base Gasket	105
Radiator Cap	3, 105
Radiator Cover	105
Radiator Gasket	105
Radiator Shroud	105
Reamer Bolt	109
Rear Bracket	35
Regulator Assembly	55
Regulator Stay	55
Retaining Ring	95
Return Hose	51
Return Spring	17, 35
Right Side Frame (DX-500E)	9
Ring Gear	77
Rocker Arm Assembly	111
Rocker Arm Bracket Assembly	111
Rod	17, 23
Rod End	17, 23, 27
Roller Bearing	39
Roller Drum (DX-500E)	35
Rubber Buffer	33
Rubber Buffer (B)	11
Rubber Buffer, 45°	9
Rubber Buffer, 65°	9
Rubber Plug Assembly	11
Rubber Stop	11, 17
Rubber Washer	51

S

Scraper (A) (DX-500E)	9
Screw	11, 85
Screw w/Washer	59, 87, 101
Seal Case	35, 39
Seal Kit	7, 35
Seal Plug	55
Set Screw	35, 43
Setting Bolt	113
Shaft (DX-500E)	35
Shaft Arm	23
Shim	83
Shim Plate	85
Side Apron Assembly	69
Slotted Screwdriver	31
Snap Ring	35, 39, 101
Socket Head Bolt	17, 35, 39, 43

Speed Control Lever Assembly	81
Speed Lable	69
Split Pin	87, 109
Spring	23, 27, 39, 63, 119
Spring Pin	43, 55, 57
Spring Washer	9, 11, 17, 23, 27, 33, 35, 39, 43, 47, 51, 61, 71, 79, 99, 105, 107, 109, 115
Sprinkler Pipe (DX-500E)	11
Sprinkler Pipe Bracket	11
Sprinkler Valve	11
Starter Assembly	5, 99, 101
Starter Housing Bushing	101
Starter Support	99
Starter Yoke Assembly	101
Stop Guide	23
Stop Plate (A)	11
Stop Plate (B)	11
Stop Spring	81
Stopper	43
Straight Pin	55, 99
Stud	71, 105, 111, 115
Switch Panel	47
Switch Panel Bracket	47

T

Tank Camp Gasket	97
Tank Set Plate (B)	11
Taper Collar	35
Tappet	73
Tappet Assembly	85
Tappet Guide Pin	85
Tension Arm	39
Tension Bolt	109
Tension Bolt Guide	109
Tension Pulley	39, 109
Tension Pulley Arm	109
Tension Pulley Assembly	109
Tension Pulley Support	109
Throttle Bracket Assembly	89
Throttle Cable	5, 27
Throttle Lever	5, 27
Throttle Lever Knob	3, 27
Throttle Wire Holder	89
Tool Bag	31
Tool Kit	119

Truck Hook assembly	33
Trunnion Oil Seal	7, 43

U

Upper Spring Seat	85
-----------------------------	----

V

Valve	111
Valve Spring	111
Valve Spring Collet	111
Valve Spring Retainer	111
V-belt	3, 39, 109
Vibration Cable	5, 27
Vibration Clutch Assembly	7, 43
Vibration Holder	27
Vibration Lever	5, 27

W

Washer	9, 11, 17, 23, 27, 35, 39, 43, 47, 51, 81, 87, 89, 91, 93, 97, 101, 109, 111
Washer (A)	33
Water Tank (DX-500E)	11
Water Tank Band	11
Water Tank Cap	3, 11
Weight (DX-500E)	39
Wing Nut	47, 113
Wire Harness Assembly	55

NUMERICAL INDEX

Part Number	Denomination	WAS	Page	Subgroup
12301231	Vibration Clutch Assembly		43	Engine Installation
13200829	Lable, Noise		49	Decal Installation
13201223	Drive Clutch Assembly		43	Engine Installation
13201249	Disc Complete		43	Engine Installation
13201256	Plate Complete		43	Engine Installation
22069843	Washer		51	Hydraulic Hosing Installation
22070007	Elbow		51	Hydraulic Hosing Installation
22070023	Hydraulic Tank		51	Hydraulic Hosing Installation
22070072	Hydraulic Tank Filter		51	Hydraulic Hosing Installation
22070080	Return Hose		51	Hydraulic Hosing Installation
22070098	Band		51	Hydraulic Hosing Installation
22070361	Rubber Washer		51	Hydraulic Hosing Installation
22070379	Hydraulic Tank Assembly		51	Hydraulic Hosing Installation
22070387	Hydraulic Tank Cap		51	Hydraulic Hosing Installation
54674023	Right Side Frame (DX-500E)		9	Frame Installation
54674106	Left Side Frame (DX-500E)		9	Frame Installation
54674122	Member (DX-500E)		9	Frame Installation
54674148	Scraper (A) (DX-500E)		9	Frame Installation
54674163	Scraper (B) (DX-500E)		9	Frame Installation
54674171	Washer		9	Frame Installation
			43	Engine Installation
54674189	Cover (B)		9	Frame Installation
54674197	Rubber Buffer, 45°		9	Frame Installation
54674205	Plain Washer		9	Frame Installation
			35	Drum Installation
			39	Eccentric Case Installation
54674213	Rubber Buffer, 65°		9	Frame Installation
54674239	Base (DX-500E)		11	Oil Tank & Water Tank Installation
54674254	Oil Tank (DX-500E)		11	Oil Tank & Water Tank Installation
54674262	Oil Tank Cap		3	Recommended Service Parts
			11	Oil Tank & Water Tank Installation
54674270	Plug		11	Oil Tank & Water Tank Installation
54674296	Water Tank (DX-500E)		11	Oil Tank & Water Tank Installation
54674304	Water Tank Band		11	Oil Tank & Water Tank Installation
54674312	Nut		11	Oil Tank & Water Tank Installation
54674320	Water Tank Cap		3	Recommended Service Parts
			11	Oil Tank & Water Tank Installation
54674338	Bolt		11	Oil Tank & Water Tank Installation
54674346	Capnut		11	Oil Tank & Water Tank Installation
54674353	Drain Cap CP		11	Oil Tank & Water Tank Installation
54674361	Drain Cap		11	Oil Tank & Water Tank Installation
54674379	Packing		11	Oil Tank & Water Tank Installation

Part Number	Denomination	WAS	Page	Subgroup
54674387	Lifting Hook		11	Oil Tank & Water Tank Installation
54674395	Stop Plate (A)		11	Oil Tank & Water Tank Installation
54674411	Stop Plate (B)		11	Oil Tank & Water Tank Installation
54674429	Rubber Stop		11	Oil Tank & Water Tank Installation
54674445	Cover (A) (DX-500E)		11	Oil Tank & Water Tank Installation
54674460	Cap		11	Oil Tank & Water Tank Installation
54674486	Bracket (DX-500E)		11	Oil Tank & Water Tank Installation
54674494	Bolt		11	Oil Tank & Water Tank Installation
54674502	Capnut		11	Oil Tank & Water Tank Installation
54674510	Sprinkler Pipe Bracket		11	Oil Tank & Water Tank Installation
54674528	Washer		11 39	Oil Tank & Water Tank Installation Eccentric Case Installation
54674544	Sprinkler Pipe (DX-500E)		11	Oil Tank & Water Tank Installation
54674551	Bushing		11	Oil Tank & Water Tank Installation
54674569	Hose Joint		11	Oil Tank & Water Tank Installation
54674577	Washer		11	Oil Tank & Water Tank Installation
54674585	Sprinkler Valve		11	Oil Tank & Water Tank Installation
54674593	Elbow		11	Oil Tank & Water Tank Installation
54674601	Hose		11	Oil Tank & Water Tank Installation
54674627	Hose (DX-500E)		11	Oil Tank & Water Tank Installation
54674635	Tank Set Plate		11	Oil Tank & Water Tank Installation
54674643	Tank Set Plate (B)		11	Oil Tank & Water Tank Installation
54674650	Engine Assembly		43	Engine Installation
54674668	Engine Base		43	Engine Installation
54674676	Base Plate		43	Engine Installation
54674684	Bolt		35 43	Drum Installation Engine Installation
54674692	Clutch Plate		43	Engine Installation
54674718	Drive Clutch Assembly		7	Recommended Service Parts
54674825	Coupling		43	Engine Installation
54674833	Socket Head Bolt		43	Engine Installation
54676259	Coupling Boss (DX-500E)		43	Engine Installation
54676275	Coupling Shaft (DX-500E)		43	Engine Installation
54676283	Pump Bracket		43	Engine Installation
54676291	Pump Assembly		7 43	Recommended Service Parts Engine Installation
54676309	Nut		43	Engine Installation
54676325	Vibration Clutch Assembly		7	Recommended Service Parts
54676457	Washer		43	Engine Installation
54676465	Bolt		17 43 47	Operation Handle Installation Engine Installation Electrical Installation
54676473	Clutch Pully		43	Engine Installation

Part Number	Denomination	WAS	Page	Subgroup
			43	Engine Installation
54676499	Spring Pin		43	Engine Installation
54676507	Plunger		43	Engine Installation
54676515	Nut		43	Engine Installation
54676523	Ball Plate		43	Engine Installation
54676531	Ball Spacer		43	Engine Installation
54676549	Bolt		43	Engine Installation
54676564	Washer		43	Engine Installation
54676572	Stopper		43	Engine Installation
54676580	Bolt		43	Engine Installation
54676598	Set Screw		43	Engine Installation
54676606	Oil Seal Kit		7	Recommended Service Parts
			43	Engine Installation
54676614	Charge Oil Seal		7	Recommended Service Parts
			43	Engine Installation
54676630	Flange oil Seal		7	Recommended Service Parts
			43	Engine Installation
54676655	Charge O-ring		43	Engine Installation
54676697	Roller Drum (DX-500E)		35	Drum Installation
54676739	Shaft (DX-500E)		35	Drum Installation
54676754	Ball Bearing		35	Drum Installation
54676846	Snap Ring		35	Drum Installation
54676861	Snap Ring		35	Drum Installation
54676887	Gear		35	Drum Installation
54676895	Socket Head Bolt		35	Drum Installation
54676911	Case		35	Drum Installation
54676937	Oil Seal		35	Drum Installation
54676952	Front Bracket		35	Drum Installation
54676960	Rear Bracket		35	Drum Installation
54676978	Packing		35	Drum Installation
54676986	Bolt		35	Drum Installation
54676994	Drive Motor Assembly		7	Recommended Service Parts
			35	Drum Installation
54677000	Pinion Gear		35	Drum Installation
54677018	Gear Set plate		35	Drum Installation
54677026	Seal Case		35	Drum Installation
54677034	Brake Floange		35	Drum Installation
54677042	Oil Seal		35	Drum Installation
54677059	Front Bracket		35	Drum Installation
54677067	Rear Bracket		35	Drum Installation
54677075	Taper Collar		35	Drum Installation
54677083	Washer		35	Drum Installation
54677091	Brake Pin		35	Drum Installation

Part Number	Denomination	WAS	Page	Subgroup
			35	Drum Installation
54677117	Set Screw		35	Drum Installation
54677125	Washer		35	Drum Installation
54677133	Plug		35	Drum Installation
54677141	Seal Kit		7 35	Recommended Service Parts Drum Installation
54677521	Eccentric Case (DX-500E)		39	Eccentric Case Installation
54677539	Seal Case		39	Eccentric Case Installation
54677547	Oil Seal		39	Eccentric Case Installation
54677554	O-ring		39	Eccentric Case Installation
54677562	Bearing Cover		39	Eccentric Case Installation
54677588	Eccentric Shaft (DX-500E)		39	Eccentric Case Installation
54677596	Roller Bearing		39	Eccentric Case Installation
54677604	Roller Bearing		39	Eccentric Case Installation
54677620	Weight (DX-500E)		39	Eccentric Case Installation
54677638	Socket Head Bolt		39	Eccentric Case Installation
54677653	Pulley (DX-500E)		39	Eccentric Case Installation
54677661	Washer		39	Eccentric Case Installation
54677679	Plug		39	Eccentric Case Installation
54677687	Plug		39	Eccentric Case Installation
54677695	Plug		39	Eccentric Case Installation
54677703	Tension Arm		39	Eccentric Case Installation
54677711	Bushing		39	Eccentric Case Installation
54677729	Washer		39	Eccentric Case Installation
54677737	Tension Pulley		39	Eccentric Case Installation
54677745	Ball Bearing		39	Eccentric Case Installation
54677752	Snap Ring		39	Eccentric Case Installation
54677778	Arm Shaft (DX-500E)		39	Eccentric Case Installation
54677786	Spring		39	Eccentric Case Installation
54677794	V-belt		3 39	Recommended Service Parts Eccentric Case Installation
54677810	Operation Handle (DX-500E)		17	Operation Handle Installation
54677828	Bushing		17	Operation Handle Installation
54677836	Bolt		17	Operation Handle Installation
54677844	Friction Spring		17	Operation Handle Installation
54677851	Nut		17	Operation Handle Installation
54677869	Pin		17	Operation Handle Installation
54677877	Collar		17	Operation Handle Installation
54677885	Bracket		17	Operation Handle Installation
54677893	Socket Head Bolt		17	Operation Handle Installation
54677901	Hook		17	Operation Handle Installation
54677919	Lever Guide		17	Operation Handle Installation
54677927	Holder		17	Operation Handle Installation

Part Number	Denomination	WAS	Page	Subgroup
54677943	Bushing		17	Operation Handle Installation
54677950	Rod		17	Operation Handle Installation
54677968	Bar		17	Operation Handle Installation
54677976	Bar		17	Operation Handle Installation
54677984	Forward / Reverse Lever		5	Recommended Service Parts
			17	Operation Handle Installation
54677992	Bushing		17	Operation Handle Installation
			23	Operating Handle Installation
			27	Vibration Lever/Throttle Lever Installation
54678008	Forward/Reverse Lever Knob		3	Recommended Service Parts
			17	Operation Handle Installation
			27	Vibration Lever/Throttle Lever Installation
54678016	Plain Washer		17	Operation Handle Installation
			27	Vibration Lever/Throttle Lever Installation
54678024	Friction Spring		17	Operation Handle Installation
			27	Vibration Lever/Throttle Lever Installation
54678032	Forward/Reverse Cable		5	Recommended Service Parts
			17	Operation Handle Installation
54678040	Bracket		17	Operation Handle Installation
54678057	Rod End		17	Operation Handle Installation
			27	Vibration Lever/Throttle Lever Installation
54678065	Nylon Nut		17	Operation Handle Installation
			27	Vibration Lever/Throttle Lever Installation
54678073	Clamp Set Plate		17	Operation Handle Installation
54678099	Washer		17	Operation Handle Installation
			23	Operating Handle Installation
54678107	Collar		17	Operation Handle Installation
54678115	Spacer		17	Operation Handle Installation
54678123	Holder		17	Operation Handle Installation
54678131	Vibration Holder		27	Vibration Lever/Throttle Lever Installation
54678149	Bolt		23	Operating Handle Installation
			27	Vibration Lever/Throttle Lever Installation
54678156	Vibration Lever		5	Recommended Service Parts
			27	Vibration Lever/Throttle Lever Installation
54678164	Bushing		27	Vibration Lever/Throttle Lever Installation
54678172	Bolt		27	Vibration Lever/Throttle Lever Installation
54678180	Friction Spring		27	Vibration Lever/Throttle Lever Installation
54678198	Vibration Cable		5	Recommended Service Parts
			27	Vibration Lever/Throttle Lever Installation
54678206	Collar		27	Vibration Lever/Throttle Lever Installation
54678214	Bolt		27	Vibration Lever/Throttle Lever Installation
54678222	Bracket		27	Vibration Lever/Throttle Lever Installation
54678230	Throttle Lever		5	Recommended Service Parts
			27	Vibration Lever/Throttle Lever Installation
54678248	Throttle Cable		5	Recommended Service Parts
			27	Vibration Lever/Throttle Lever Installation

Part Number	Denomination	WAS	Page	Subgroup
54678263	Bolt		27	Vibration Lever/Throttle Lever Installation
54678271	Spring		27	Vibration Lever/Throttle Lever Installation
54678289	Collar		27	Vibration Lever/Throttle Lever Installation
54678321	Handle Bracket		23	Operating Handle Installation
54678339	Handle		23	Operating Handle Installation
54678347	Bushing		23	Operating Handle Installation
54678354	Shaft Arm		23	Operating Handle Installation
54678362	Neutral Arm (A)		23	Operating Handle Installation
54678370	Bushing		23	Operating Handle Installation
54678388	Neutral Arm (B)		23	Operating Handle Installation
54678396	Bushing		23	Operating Handle Installation
54678412	Rod End		23	Operating Handle Installation
54678420	Rod		23	Operating Handle Installation
54678446	Nut		23	Operating Handle Installation
54678453	Stop Guide		23	Operating Handle Installation
54678461	Spring		23	Operating Handle Installation
54678479	Bolt		23	Operating Handle Installation
54678487	Joint		51	Hydraulic Hosing Installation
54678495	Joint		51	Hydraulic Hosing Installation
54678503	Filter Cover		51	Hydraulic Hosing Installation
54678545	Hydraulic Tank Cap		3	Recommended Service Parts
54678552	Hydraulic Tank Filter		3	Recommended Service Parts
54678669	Nipple		51	Hydraulic Hosing Installation
54678677	Elbow		51	Hydraulic Hosing Installation
54678685	Elbow		51	Hydraulic Hosing Installation
54678693	Bushing		51	Hydraulic Hosing Installation
54678701	Hose		51	Hydraulic Hosing Installation
54678719	Elbow		51	Hydraulic Hosing Installation
54678727	Elbow		51	Hydraulic Hosing Installation
54678735	Hose		51	Hydraulic Hosing Installation
54678743	Elbow		51	Hydraulic Hosing Installation
54678750	Elbow		51	Hydraulic Hosing Installation
54678768	Hose (A)		51	Hydraulic Hosing Installation
54678776	Hose (B)		51	Hydraulic Hosing Installation
54678792	Adapter		51	Hydraulic Hosing Installation
54678800	Hose (C)		51	Hydraulic Hosing Installation
54678818	Horn Bracket		47	Electrical Installation
54678834	Battery Case		47	Electrical Installation
54678842	Battery Pad		47	Electrical Installation
54678859	Battery		47	Electrical Installation
54678867	Battery Holder Down Plate Ase		47	Electrical Installation
54678883	Battery Plate		47	Electrical Installation

Part Number	Denomination	WAS	Page	Subgroup
54678909	Battery Cable		5 47	Recommended Service Parts Electrical Installation
54678917	Battery Cable		5 47	Recommended Service Parts Electrical Installation
54678925	Battery Terminal Cover		47	Electrical Installation
54678933	Switch Panel Bracket		47	Electrical Installation
54678958	Switch Panel		47	Electrical Installation
54678966	Horn		47	Electrical Installation
54678974	Ground Cable		47	Electrical Installation
54678990	Decal Kit (DX-500E)		49	Decal Installation
54679014	Decal: Engine RPM		49	Decal Installation
54679022	Decal: Caution		49	Decal Installation
54679030	Decal: Starter Switch		49	Decal Installation
54679048	Decal: Parking Brake		49	Decal Installation
54679055	Decal: Sprinkler		49	Decal Installation
54679063	Decal: Sprinkler		49	Decal Installation
54679071	Decal: Oil Level		49	Decal Installation
54679089	Decal: Caution		49	Decal Installation
54679097	Decal: Throttle		49	Decal Installation
54679105	Decal: Warning		49	Decal Installation
54679113	Decal: Warning		49	Decal Installation
54679121	Decal: Warning		49	Decal Installation
54679139	Decal: Warning		49	Decal Installation
54679147	Decal: Warning		49	Decal Installation
54679154	Decal: IR Logo		49	Decal Installation
54679162	Decal, IR Emblem		49	Decal Installation
54679170	decal, IR emblem		49	Decal Installation
54679188	Decal: DX-500E		49	Decal Installation
54679204	Toolkit		31	Tool Kit & Manuals
54679212	Truck Hook assembly		33	Truck Hook Assembly
54679220	Washer (A)		33	Truck Hook Assembly
54679238	Collar (A)		33	Truck Hook Assembly
54679246	Pipe (A)		33	Truck Hook Assembly
54679253	Bolt		33	Truck Hook Assembly
54679261	Collar (B)		33	Truck Hook Assembly
54679287	Pipe (B)		33	Truck Hook Assembly
54679295	Bolt		33	Truck Hook Assembly
58836966	Socket Head Bolt		43	Engine Installation
59188011	Name Plate		49	Decal Installation
59188144	Bolt		9 17 47 51	Frame Installation Operation Handle Installation Electrical Installation Hydraulic Hosing Installation

Part Number	Denomination	WAS	Page	Subgroup
59235788	Nut		11	Oil Tank & Water Tank Installation
59235796	Packing		11	Oil Tank & Water Tank Installation
59235879	Washer		17	Operation Handle Installation
59236265	Overhaul Gasket Set		55	Crankcase
59236281	Inlet Valve Guide		57	Cylinder Head
59236299	Exhaust Valve Guide		57	Cylinder Head
59236315	Cylinder Head Assembly		57	Cylinder Head
59236323	Glow Plug		91	Nozzle Holder
59236356	Fuel Assembly		81	Control Installation
59236364	Capnut		81	Control Installation
59236372	Gasket		81	Control Installation
59236422	Main Bearing Case assembly		71	Main Bearing Case
59236430	Plug		71	Main Bearing Case
59236448	Flange Bolt		55 71	Crankcase Main Bearing Case
59236455	Air Cleaner Flange		113	Air Cleaner
59236463	Muffler Pipe Cover		115	Muffler
59236471	Valve		111	Valves
59236497	Valve Spring Retainer		111	Valves
59236505	O-ring		61	Cylinder Head Cover
59236539	Crankshaft Assembly		75	Piston assembly
59236547	Main 2 Bearing		75	Piston assembly
59236554	Bearing Stop		75	Piston assembly
59236562	Bolt		75	Piston assembly
59236596	Flange Bolt		83	Jet Start
59236604	Injection Pump Assembly		83 85	Jet Start Injection Pump
59236612	Shim		83	Jet Start
59236620	Nozzle Holder Assembly		91 93	Nozzle Holder Nozzle
59236638	Gasket		91	Nozzle Holder
59236646	Injection Pipe		83	Jet Start
59236653	Heat Seal		91	Nozzle Holder
59236661	Nozzle Holder Join		91	Nozzle Holder
59236679	Jet Start Assembly		83	Jet Start
59236687	Overflow Pipe Assembly		83	Jet Start
59236703	Locknut		89	Throttle
59236711	Cap		89	Throttle
59236729	Radiator Assembly		105	Radiator
59236737	Caution Label		105	Radiator
59236752	Fan Bracket Assembly		107	Fan
59236786	Decal: Mark		121	Engine Decals
59236810	Decal: Engine Name		121	Engine Decals

Part Number	Denomination	WAS	Page	Subgroup
59236844	Decal: Jet Start		121	Engine Decals
59236851	Decal: Instruction		121	Engine Decals
59236869	Decal: Engine Hook		121	Engine Decals
59236893	Decal: Fuel		121	Engine Decals
59236919	Nut		93	Nozzle
59236927	Washer		93	Nozzle
59236935	Adjusting Washer		93	Nozzle
59236943	Nozzle Spring		93	Nozzle
59236950	Spacer		93	Nozzle
59236968	Push Rod		93	Nozzle
59236976	Nozzle Nut		93	Nozzle
59236984	Nozzle		93	Nozzle
59237305	Rubber Buffer		33	Truck Hook Assembly
59238733	Washer		97	Fuel Tank
59238881	Crankcase Assembly		55	Crankcase
59238899	Washer		91	Nozzle Holder
59238907	Bolt		89	Throttle
59238915	Flange Bolt		67	Oil Pump
59238923	Screw w/Washer		101	Starter Assembly
59238931	Flange Bolt		55	Crankcase
59238949	Nut		89	Throttle
59238956	Nut		99	Starter
59238964	Flange Nut		91	Nozzle Holder
59238972	Double Ended Spanner		119	Tool Kit
59238980	Double Ended Spanner		119	Tool Kit
59238998	Tool Kit		119	Tool Kit
59239004	Breather Assembly		59	Gear Case
59239012	Regulator Stay		55	Crankcase
59239020	Oil Switch		5 103	Recommended Service Parts Oil Switch
59239038	Fuel Tank Cap		3 97	Recommended Service Parts Fuel Tank
59239046	Tank Camp Gasket		97	Fuel Tank
59239053	Gear Case CP		59	Gear Case
59239061	Fan Assembly		107	Fan
59239079	Fan		107	Fan
59239087	Box Spanner		119	Tool Kit
59239095	Wire Harness Assembly		55	Crankcase
59239103	Side Apron Assembly		69	Side Apron
59239111	Regulator Assembly		55	Crankcase
59239129	Stop Spring		81	Control Installation
59239137	Cord Clamp		83	Jet Start
59239145	Throttle Bracket Assembly		89	Throttle

Part Number	Denomination	WAS	Page	Subgroup
59239160	Ignition Switch Assembly		3 117	Recommended Service Parts Ignition
59239178	Ignition Key		3 117	Recommended Service Parts Ignition
59239186	Crankshaft Nut		77	Flywheel
59239194	Piston Ring Assembly		75	Piston assembly
59239202	Piston		75	Piston assembly
59239210	Delivery Valve Bracket		85	Injection Pump
59239228	Adjustment Washer Assembly		93	Nozzle
59239236	Cylinder Head Nut		57	Cylinder Head
59239244	Instruction Manual		119	Tool Kit
59239251	Cap		81	Control Installation
59239269	Comp Flywheel		77	Flywheel
59239277	Flywheel Cover		77	Flywheel
59239285	Drain Cock		57	Cylinder Head
59239293	Plug		59	Gear Case
59239301	Ignition Switch Cap		117	Ignition
59239319	Crankpin Metal		75	Piston assembly
59239327	Crankpin Metal		75	Piston assembly
59330910	Fan Pulley		107	Fan
59333203	Seal Plug		55	Crankcase
59333229	Straight Pin		55	Crankcase
59333237	Spring Pin		55	Crankcase
59333245	Pipe Pin		55	Crankcase
59333252	Pipe Pin		55	Crankcase
59333260	O-ring		55	Crankcase
59333278	Cylinder Liner		55	Crankcase
59333286	O-ring		55	Crankcase
59333294	Crankcase Cover		55	Crankcase
59333302	Bolt		55 59	Crankcase Gear Case
59333310	Bolt		55	Crankcase
59333351	Nut		115 119	Muffler Tool Kit
59333369	Spring Washer		99 109	Starter Tension Pulley
59333385	Oil Signal Holder		103	Oil Switch
59333393	Gasket		87 103	Governor Oil Switch
59333419	Expansion Plug		57	Cylinder Head
59333427	Plug		57	Cylinder Head
59333435	Spring Pin		57	Cylinder Head
59333468	Cylinder Head Stud		57	Cylinder Head
59333518	Pin Plug		55	Crankcase

Part Number	Denomination	WAS	Page	Subgroup
59333526	Idle Spring Pin		59	Gear Case
59333534	Breather Joint		59	Gear Case
59333542	Gear Case Gasket		59	Gear Case
59333567	Bolt		59	Gear Case
59333575	Bolt		59	Gear Case
59333625	Breather Gasket		59	Gear Case
59333633	Breather Inner Plate		59	Gear Case
59333641	Breather Oil Guard		59	Gear Case
59333682	Cord Clamp		55 59 95	Crankcase Gear Case Fuel Filter
59333690	Breather Oil Guard		59	Gear Case
59333708	Oil Filter		3 63	Recommended Service Parts Oil Filter
59333716	O-ring		63	Oil Filter
59333724	Oil Filter Plug		63	Oil Filter
59333732	O-ring		63	Oil Filter
59333740	Oil Pump Rotor Assembly		67	Oil Pump
59333757	Oil Pump Cover		67	Oil Pump
59333765	O-ring		67 71	Oil Pump Main Bearing Case
59333773	Bolt		79 109	Balancer Tension Pulley
59333799	Oil Gauge		5 65	Recommended Service Parts Oil Gauge
59333807	Ball		63	Oil Filter
59333815	Spring		63	Oil Filter
59333823	Plug		63	Oil Filter
59333831	Gasket		63	Oil Filter
59334011	O-ring		71	Main Bearing Case
59334037	Stud		71	Main Bearing Case
59334045	Nut		71 81	Main Bearing Case Control Installation
59334086	Oil Seal		71	Main Bearing Case
59334094	Internal Circlip		71	Main Bearing Case
59334102	Oil Filter Ring		71	Main Bearing Case
59334110	O-ring		71	Main Bearing Case
59334128	Air Cleaner Assembly		113	Air Cleaner
59334136	O-ring		113	Air Cleaner
59334144	Setting Bolt		113	Air Cleaner
59334151	Gasket		113	Air Cleaner
59334169	Grommet		113	Air Cleaner
59334177	Wing Nut		113	Air Cleaner
59334193	Flange Gasket		113	Air Cleaner

Part Number	Denomination	WAS	Page	Subgroup
59334227	Muffler		7 115	Recommended Service Parts Muffler
59334235	Muffler Gasket		7 115	Recommended Service Parts Muffler
59334243	Stud		115	Muffler
59334268	Muffler Pipe		115	Muffler
59334276	Pipe Band		115	Muffler
59334318	Muffler Flange Cover		115	Muffler
59334334	Bolt		115	Muffler
59334359	Valve Spring		111	Valves
59334375	Valve Spring Collet		111	Valves
59334383	Valve Cap		111	Valves
59334391	Rocker Arm Bracket Assembly		111	Valves
59334409	Stud		111	Valves
59334417	Nut		111	Valves
59334425	Washer		111	Valves
59334433	Rocker Arm Assembly		111	Valves
59334441	Cylinder Head Cover Assembly		61	Cylinder Head Cover
59334458	Head Cover Nut		61	Cylinder Head Cover
59334466	Head Cover Washer		61	Cylinder Head Cover
59334474	Nut Gasket		61	Cylinder Head Cover
59334482	Decompression Shaft		61	Cylinder Head Cover
59334490	Decompression Bolt		61	Cylinder Head Cover
59334508	Nut		61	Cylinder Head Cover
59334516	Decompression Stopper		61	Cylinder Head Cover
59334524	Bolt		59 61 69 109	Gear Case Cylinder Head Cover Side Apron Tension Pulley
59334532	Spring Washer		61 71 79 105 109 115	Cylinder Head Cover Main Bearing Case Balancer Radiator Tension Pulley Muffler
59334540	Decompression Lever		61	Cylinder Head Cover
59334565	Decompression Spring		61	Cylinder Head Cover
59334573	Nut		61 89 105 109	Cylinder Head Cover Throttle Radiator Tension Pulley
59334599	Decompression Hole Cover		61	Cylinder Head Cover
59334607	Gasket		61	Cylinder Head Cover
59334615	Bolt		61 77 87	Cylinder Head Cover Flywheel Governor

Part Number	Denomination	WAS	Page	Subgroup
59334631	Push Rod		73	Camshaft
59334649	Camshaft Assembly		73	Camshaft
59334656	Camshaft Stopper		73	Camshaft
59334672	Idle Gear Assembly		73	Camshaft
59334680	Idle Gear 1 Collar		73	Camshaft
59334698	Idle Gear 2 Collar		73	Camshaft
59334706	Idle Gear Circlip		73	Camshaft
59334714	Idle Gear Shaft		73	Camshaft
59334722	Bolt		73 83 105 107	Camshaft Jet Start Radiator Fan
59334797	Balancer		79	Balancer
59334805	Balancer 1 Bearing		79	Balancer
59334813	Balancer 2 Bearing		79	Balancer
59334821	Balancer 1 Gear		79	Balancer
59334839	Balancer 2 Gear		79	Balancer
59334847	Balancer 3 Gear		79	Balancer
59334854	Key		79	Balancer
59334870	Bearing Retainer		79	Balancer
59334904	Piston		75	Piston assembly
59334912	Piston Pin		75	Piston assembly
59334920	Internal Circlip		75	Piston assembly
59334938	Connecting Rod Assembly		75	Piston assembly
59334953	Main 1 Bearing		75	Piston assembly
59334995	Crankshaft Gear		75	Piston assembly
59335000	Key		75	Piston assembly
59335042	Flywheel Washer		77	Flywheel
59335190	Clip		97	Fuel Tank
59335257	Bolt		99	Starter
59335273	Fuel Pipe Assembly		59 95	Gear Case Fuel Filter
59335281	Eye Joint		95	Fuel Filter
59335307	Fuel Filter Assembly		3 95	Recommended Service Parts Fuel Filter
59335315	Filter Body Assembly		95	Fuel Filter
59335323	Filter O-ring		95	Fuel Filter
59335331	Filter Cup Assembly		95	Fuel Filter
59335349	Retaining Ring		95	Fuel Filter
59335356	Filter O-ring		95	Fuel Filter
59335364	Bolt		95 97	Fuel Filter Fuel Tank
59335380	Shim		83	Jet Start
59335398	Shim		83	Jet Start

Part Number	Denomination	WAS	Page	Subgroup
59335406	Bolt		83	Jet Start
			97	Fuel Tank
			113	Air Cleaner
59335448	Pipe Clamp		83	Jet Start
59335497	Jet Start Bracket		83	Jet Start
59335562	Governor Wheight Assembly		87	Governor
59335588	Governor Shaft		87	Governor
59335596	Governor Lever Assembly		87	Governor
59335604	Governor Lever Shaft		87	Governor
59335612	Screw w/Washer		87	Governor
59335620	Plug		87	Governor
59335653	Idle Spring		87	Governor
59335661	Governor Spring		87	Governor
59335679	Ball		87	Governor
59335687	Speed Control Lever Assembly		81	Control Installation
59335695	Control Lever Shaft Assembly		81	Control Installation
59335703	Key		81	Control Installation
59335711	O-ring		81	Control Installation
59335729	Friction Plate		81	Control Installation
59335737	Nut		81	Control Installation
59335745	Washer		81	Control Installation
59335760	Bolt		89	Throttle
59335828	Radiator Cap		3	Recommended Service Parts
			105	Radiator
59335836	Radiator Gasket		105	Radiator
59335844	Stud		105	Radiator
59335877	Radiator Base		105	Radiator
59335885	Radiator Base Gasket		105	Radiator
59335893	Flange Bolt		105	Radiator
59335927	Radiator Shroud		105	Radiator
59335935	Knob Bolt		105	Radiator
59335984	Fan Shaft		107	Fan
59335992	Fan Washer		107	Fan
59336016	Fan Collar		107	Fan
59336024	Nut		101	Starter Assembly
			107	Fan
59336032	Spring Washer		107	Fan
59336040	Fan Washer		107	Fan
59336073	Bolt		105	Radiator
			107	Fan
59336081	Fan Cover		107	Fan
59336099	Bolt		107	Fan
59336115	Fan Drive Pulley		109	Tension Pulley

Part Number	Denomination	WAS	Page	Subgroup
59336156	Reamer Bolt		109	Tension Pulley
59336164	Tension Pulley Arm		109	Tension Pulley
59336172	Joint Pin		109	Tension Pulley
59336180	Washer		81 89 109	Control Installation Throttle Tension Pulley
59336198	Split Pin		109	Tension Pulley
59336206	Tension Bolt		109	Tension Pulley
59336222	Tension Bolt Guide		109	Tension Pulley
59336305	Engine Hook Bolt Assembly		119	Tool Kit
59336396	Control Rack		85	Injection Pump
59336404	Pump Plunger		85	Injection Pump
59336412	Delivery Valve		85	Injection Pump
59336438	Delivery Valve Spring		85	Injection Pump
59336446	Delivery Valve Gasket		85	Injection Pump
59336453	O-ring		85	Injection Pump
59336461	Screw		85	Injection Pump
59336479	Gasket		85	Injection Pump
59336487	Control Sleeve		85	Injection Pump
59336495	Upper Spring Seat		85	Injection Pump
59336503	Plunger Spring		85	Injection Pump
59336511	Lower Spring Seat		85	Injection Pump
59336529	Shim Plate		85	Injection Pump
59336537	Tappet Assembly		85	Injection Pump
59336545	Tappet Guide Pin		85	Injection Pump
59336552	Clamp Pin		85	Injection Pump
59364809	Fuel Tank Support		97	Fuel Tank
59365387	Wing Nut		47	Electrical Installation
59365437	Starter Assembly		5 99 101	Recommended Service Parts Starter Starter Assembly
59365445	Bolt		99	Starter
59365601	Engine Hook		105	Radiator
59365619	Radiator Cover		105	Radiator
59365692	Ring Gear		77	Flywheel
59365700	Starter Support		99	Starter
59365718	Straight Pin		99	Starter
59365726	Fuel Tank Assembly		97	Fuel Tank
59365759	Fuel Gauge		5 97	Recommended Service Parts Fuel Tank
59365775	Filter		97	Fuel Tank
59365783	Bolt		97	Fuel Tank
59365817	Fuel Pipe Assembly		95	Fuel Filter

Part Number	Denomination	WAS	Page	Subgroup
59365924	Screw w/Washer		59	Gear Case
59366096	Starter Yoke Assembly		101	Starter Assembly
59366104	Arm		101	Starter Assembly
59366112	Clutch		101	Starter Assembly
59366120	Frame Assembly		101	Starter Assembly
59366138	Starter Housing Bushing		101	Starter Assembly
59366146	Expansion Plug		101	Starter Assembly
59366153	End Frame Assembly		101	Starter Assembly
59366161	Bushing		101	Starter Assembly
59366187	Brush Holder Assembly		101	Starter Assembly
59366195	Brush Spring		101	Starter Assembly
59366203	Drive Lever		101	Starter Assembly
59366211	Magnetic Switch		101	Starter Assembly
59366229	Cover		101	Starter Assembly
59366237	Snap Ring		101	Starter Assembly
59366245	Nut		101	Starter Assembly
59366252	End Frame Cap		101	Starter Assembly
59366260	Gasket		101	Starter Assembly
59366278	Brake Spring		101	Starter Assembly
59366286	Brake Shoe		101	Starter Assembly
59366294	Bolt		101	Starter Assembly
59367201	Nut		101	Starter Assembly
59367219	Washer		101	Starter Assembly
59369876	Over Pipe Assembly		95	Fuel Filter
59370965	Trunnion Oil Seal		7 43	Recommended Service Parts Engine Installation
59405514	Nut		17 27 47	Operation Handle Installation Vibration Lever/Throttle Lever Installation Electrical Installation
59405712	Bolt		27	Vibration Lever/Throttle Lever Installation
59406603	O-ring		11	Oil Tank & Water Tank Installation
59407221	Elbow		51	Hydraulic Hosing Installation
59484311	Decal: Hydraulic Oil		49	Decal Installation
59484329	Decal: Oil Level		49	Decal Installation
59484337	Decal: Check oil		49	Decal Installation
59486522	Decal: Control Lever		49	Decal Installation
59486530	Decal: Water		49	Decal Installation
59486555	Decal: Check Parking		49	Decal Installation
59830000	Double Ended spanner		31	Tool Kit & Manuals
59830018	Double Ended Spanner		31	Tool Kit & Manuals
59831552	Bolt		39 47	Eccentric Case Installation Electrical Installation
59831560	Lockwasher		9	Frame Installation

Part Number	Denomination	WAS	Page	Subgroup
			43	Engine Installation
			51	Hydraulic Hosing Installation
59831594	Bolt		11	Oil Tank & Water Tank Installation
59831602	Lockwasher		9	Frame Installation
			23	Operating Handle Installation
			35	Drum Installation
			39	Eccentric Case Installation
59831743	Spring Washer		9	Frame Installation
			11	Oil Tank & Water Tank Installation
			23	Operating Handle Installation
			33	Truck Hook Assembly
59831750	Nut		9	Frame Installation
			11	Oil Tank & Water Tank Installation
			17	Operation Handle Installation
			23	Operating Handle Installation
			27	Vibration Lever/Throttle Lever Installation
59831792	Bolt		23	Operating Handle Installation
			43	Engine Installation
59831800	Lock Washer		35	Drum Installation
59831925	Spring Washer		11	Oil Tank & Water Tank Installation
			17	Operation Handle Installation
			23	Operating Handle Installation
			27	Vibration Lever/Throttle Lever Installation
			35	Drum Installation
			39	Eccentric Case Installation
			43	Engine Installation
			47	Electrical Installation
59832030	Bolt		35	Drum Installation
			39	Eccentric Case Installation
59832162	Band		11	Oil Tank & Water Tank Installation
			51	Hydraulic Hosing Installation
59832170	Rubber Plug Assembly		11	Oil Tank & Water Tank Installation
59832188	Washer		27	Vibration Lever/Throttle Lever Installation
			47	Electrical Installation
59832287	Bolt		35	Drum Installation
			39	Eccentric Case Installation
			43	Engine Installation
59832535	Bolt		11	Oil Tank & Water Tank Installation
			17	Operation Handle Installation
			27	Vibration Lever/Throttle Lever Installation
			35	Drum Installation
			39	Eccentric Case Installation
			43	Engine Installation
			47	Electrical Installation
59832766	Rubber Stop		17	Operation Handle Installation
59832865	Friction Spring		35	Drum Installation
59832931	Nut		11	Oil Tank & Water Tank Installation
			23	Operating Handle Installation
			27	Vibration Lever/Throttle Lever Installation
			43	Engine Installation
59833103	Rod End		23	Operating Handle Installation

Part Number	Denomination	WAS	Page	Subgroup
			27	Vibration Lever/Throttle Lever Installation
			43	Engine Installation
			47	Electrical Installation
59833780	Bolt		9	Frame Installation
59834499	Bolt		33	Truck Hook Assembly
59835330	Rubber Buffer (B)		11	Oil Tank & Water Tank Installation
59835371	Washer		47	Electrical Installation
59835595	Hose Joint		51	Hydraulic Hosing Installation
59836221	Return Spring		17	Operation Handle Installation
			35	Drum Installation
59837039	Snap Ring		35	Drum Installation
			39	Eccentric Case Installation
59838011	Plain Washer		11	Oil Tank & Water Tank Installation
59838334	O-ring		39	Eccentric Case Installation
59838573	Nipple		51	Hydraulic Hosing Installation
59838581	Oil Filter		3	Recommended Service Parts
			51	Hydraulic Hosing Installation
59838805	Slotted Screwdriver		31	Tool Kit & Manuals
59839050	Tool Bag		31	Tool Kit & Manuals
59839126	Bolt		17	Operation Handle Installation
			27	Vibration Lever/Throttle Lever Installation
59839456	Snap Ring		39	Eccentric Case Installation
59839654	Decal: Oil Feed		49	Decal Installation
59839662	Decal: Oil Gauge		49	Decal Installation
59840306	Decal: Drain		49	Decal Installation
59840454	Nylon Nut		23	Operating Handle Installation
			33	Truck Hook Assembly
59840637	Cross Slot Screwdriver		31	Tool Kit & Manuals
59840835	Snap Ring		35	Drum Installation
59841106	Washer		23	Operating Handle Installation
59841353	Spring Washer		35	Drum Installation
59842708	Bolt		43	Engine Installation
59854265	Cylinder Head Gasket		57	Cylinder Head
59854273	Crankcase Cover Gasket		55	Crankcase
59854315	Air Cleaner Element		3	Recommended Service Parts
			113	Air Cleaner
59854323	Head Cover Gasket		61	Cylinder Head Cover
59854364	Piston Ring Assembly		75	Piston assembly
59854398	Element Assembly		3	Recommended Service Parts
			95	Fuel Filter
59854414	V-belt		3	Recommended Service Parts
			109	Tension Pulley
59921632	Spring Washer		43	Engine Installation
59951632	Spring Washer		9	Frame Installation
			11	Oil Tank & Water Tank Installation

Part Number	Denomination	WAS	Page	Subgroup
			35	Drum Installation
			39	Eccentric Case Installation
			43	Engine Installation
			51	Hydraulic Hosing Installation
59951764	Elbow		11	Oil Tank & Water Tank Installation
59952192	Throttle Lever Knob		3	Recommended Service Parts
			27	Vibration Lever/Throttle Lever Installation
59952242	Bolt		9	Frame Installation
			11	Oil Tank & Water Tank Installation
			39	Eccentric Case Installation
			51	Hydraulic Hosing Installation
59952291	Washer		9	Frame Installation
			27	Vibration Lever/Throttle Lever Installation
			35	Drum Installation
			43	Engine Installation
59952325	Bolt		17	Operation Handle Installation
			51	Hydraulic Hosing Installation
59952341	Bolt		23	Operating Handle Installation
59952382	Bolt		23	Operating Handle Installation
59952473	Plain Washer		11	Oil Tank & Water Tank Installation
			23	Operating Handle Installation
59952903	Bolt		27	Vibration Lever/Throttle Lever Installation
59953224	Bolt		17	Operation Handle Installation
			27	Vibration Lever/Throttle Lever Installation
59953331	Bolt		47	Electrical Installation
59954123	Screw		11	Oil Tank & Water Tank Installation
59954131	Spring Washer		11	Oil Tank & Water Tank Installation
			17	Operation Handle Installation
			27	Vibration Lever/Throttle Lever Installation
			47	Electrical Installation
59956132	Spring Washer		9	Frame Installation
59958751	Hook		33	Truck Hook Assembly
80026024	Operation & Maintenance Manu		31	Tool Kit & Manuals
80026032	Operation & Maintenance Manu		31	Tool Kit & Manuals
80026040	Parts Manual		31	Tool Kit & Manuals
NSS	Pipe Clip		59	Gear Case
			69	Side Apron
			73	Camshaft
			75	Piston assembly
			81	Control Installation
			83	Jet Start
			87	Governor
			89	Throttle
			93	Nozzle
			95	Fuel Filter
			109	Tension Pulley
			111	Valves
			113	Air Cleaner
			117	Ignition
			119	Tool Kit