

Air End Serial Number

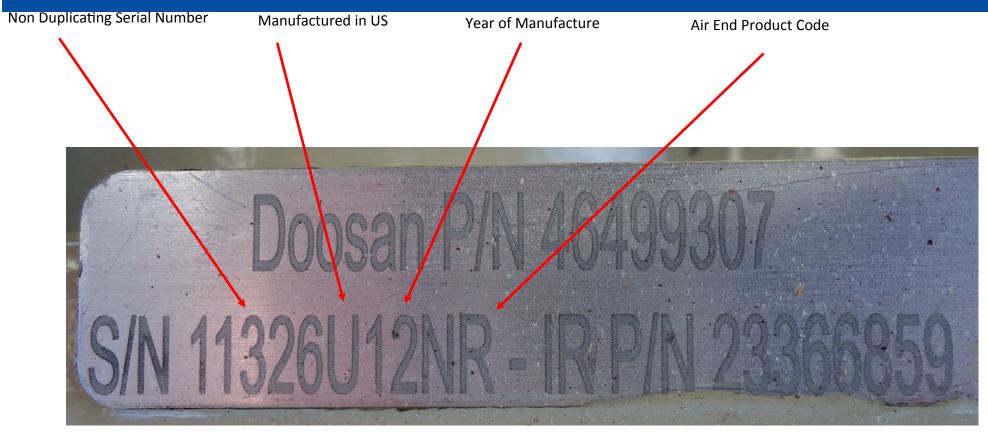


Please note airend serial numbers which contain "RU" or "U" were built by Doosan Airend Rebuild.


Air End Serial Number Locations

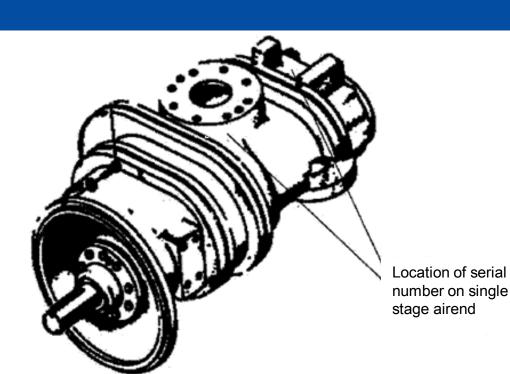

Location of serial number on over and under airend

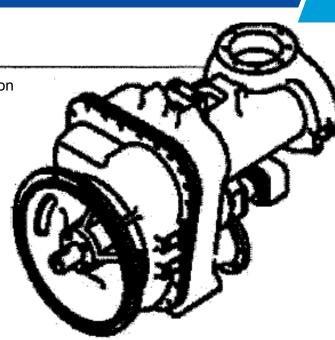

Locations of serial numbers on two-stage high pressure airend

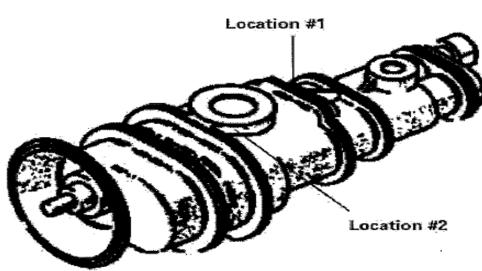


DOOSAN

Doosan Infracore Portable Power Page 85

Air End Serial Numbers Small to Medium Air Compressors



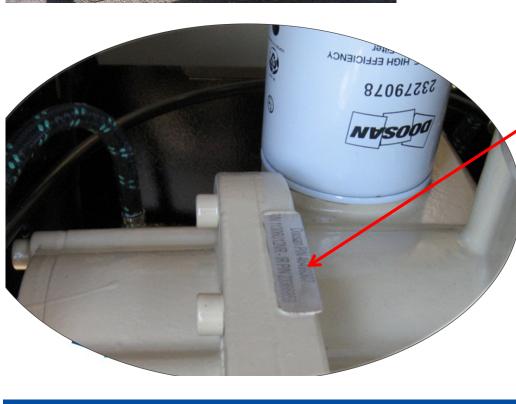

Portable Power



Page 86

Air End Serial Number Locations Large Air Compressors



Page 87

Doosan Infracore