




ATS to Generator connection

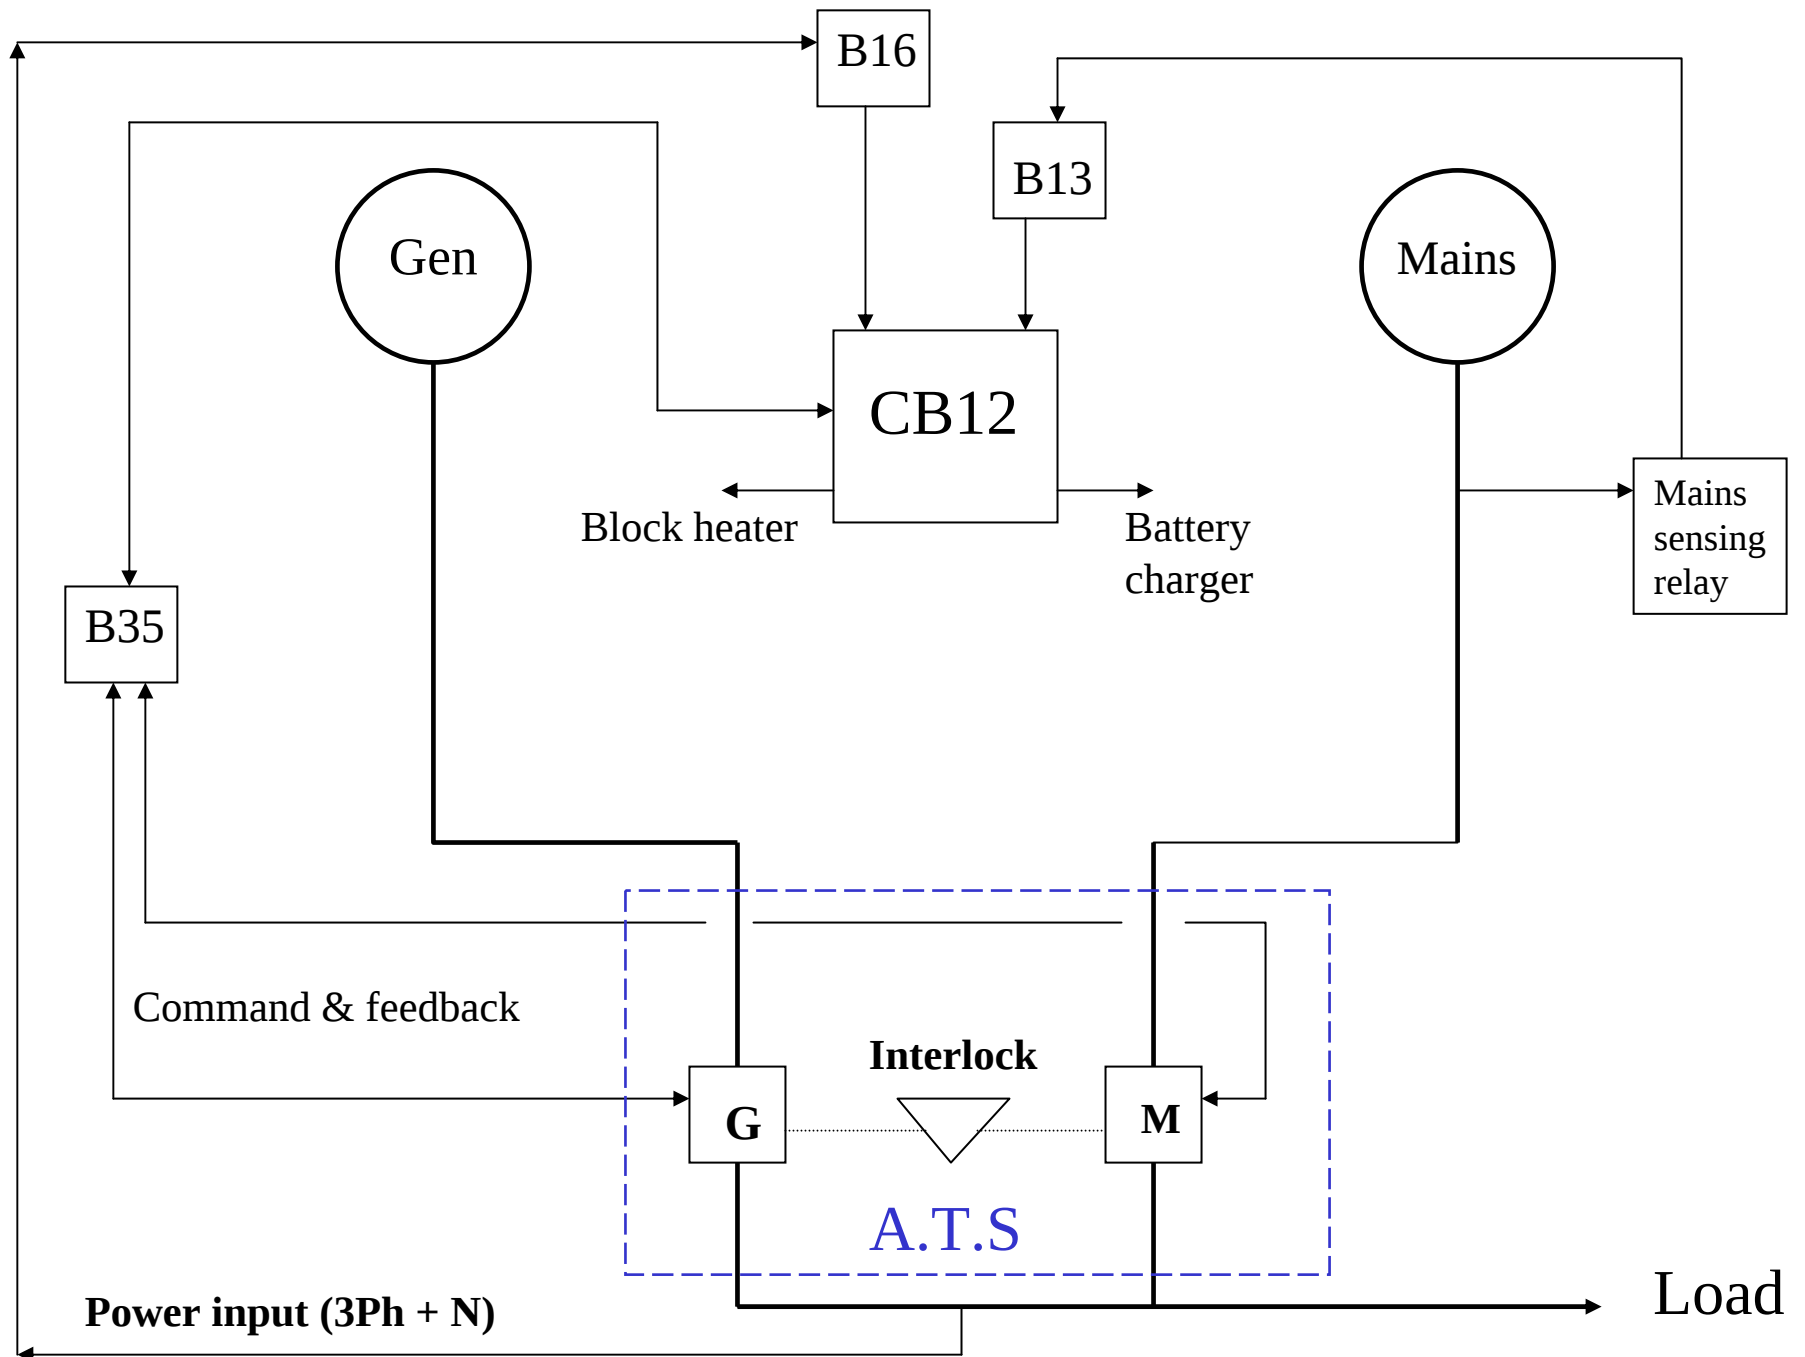


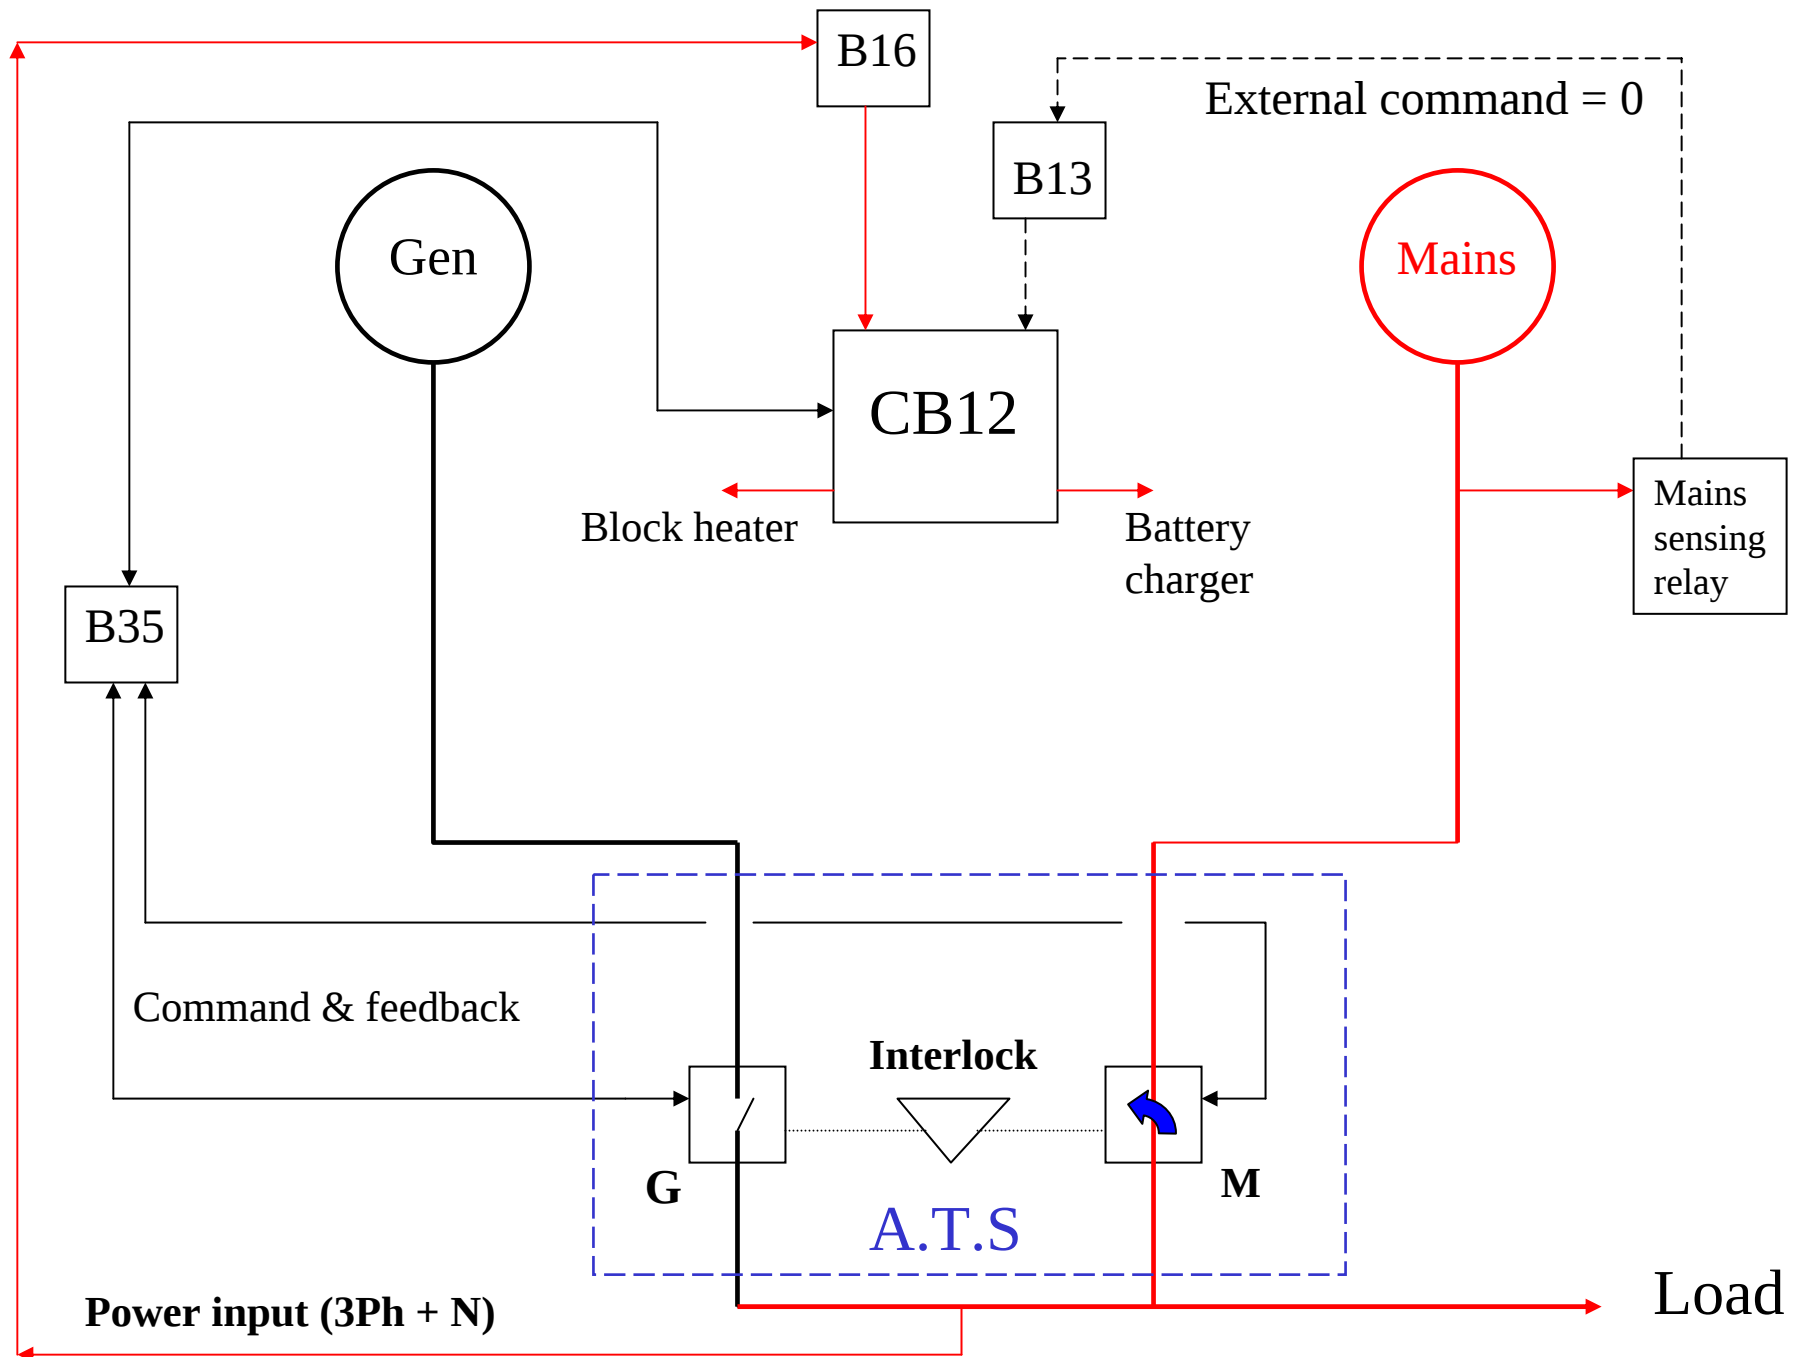

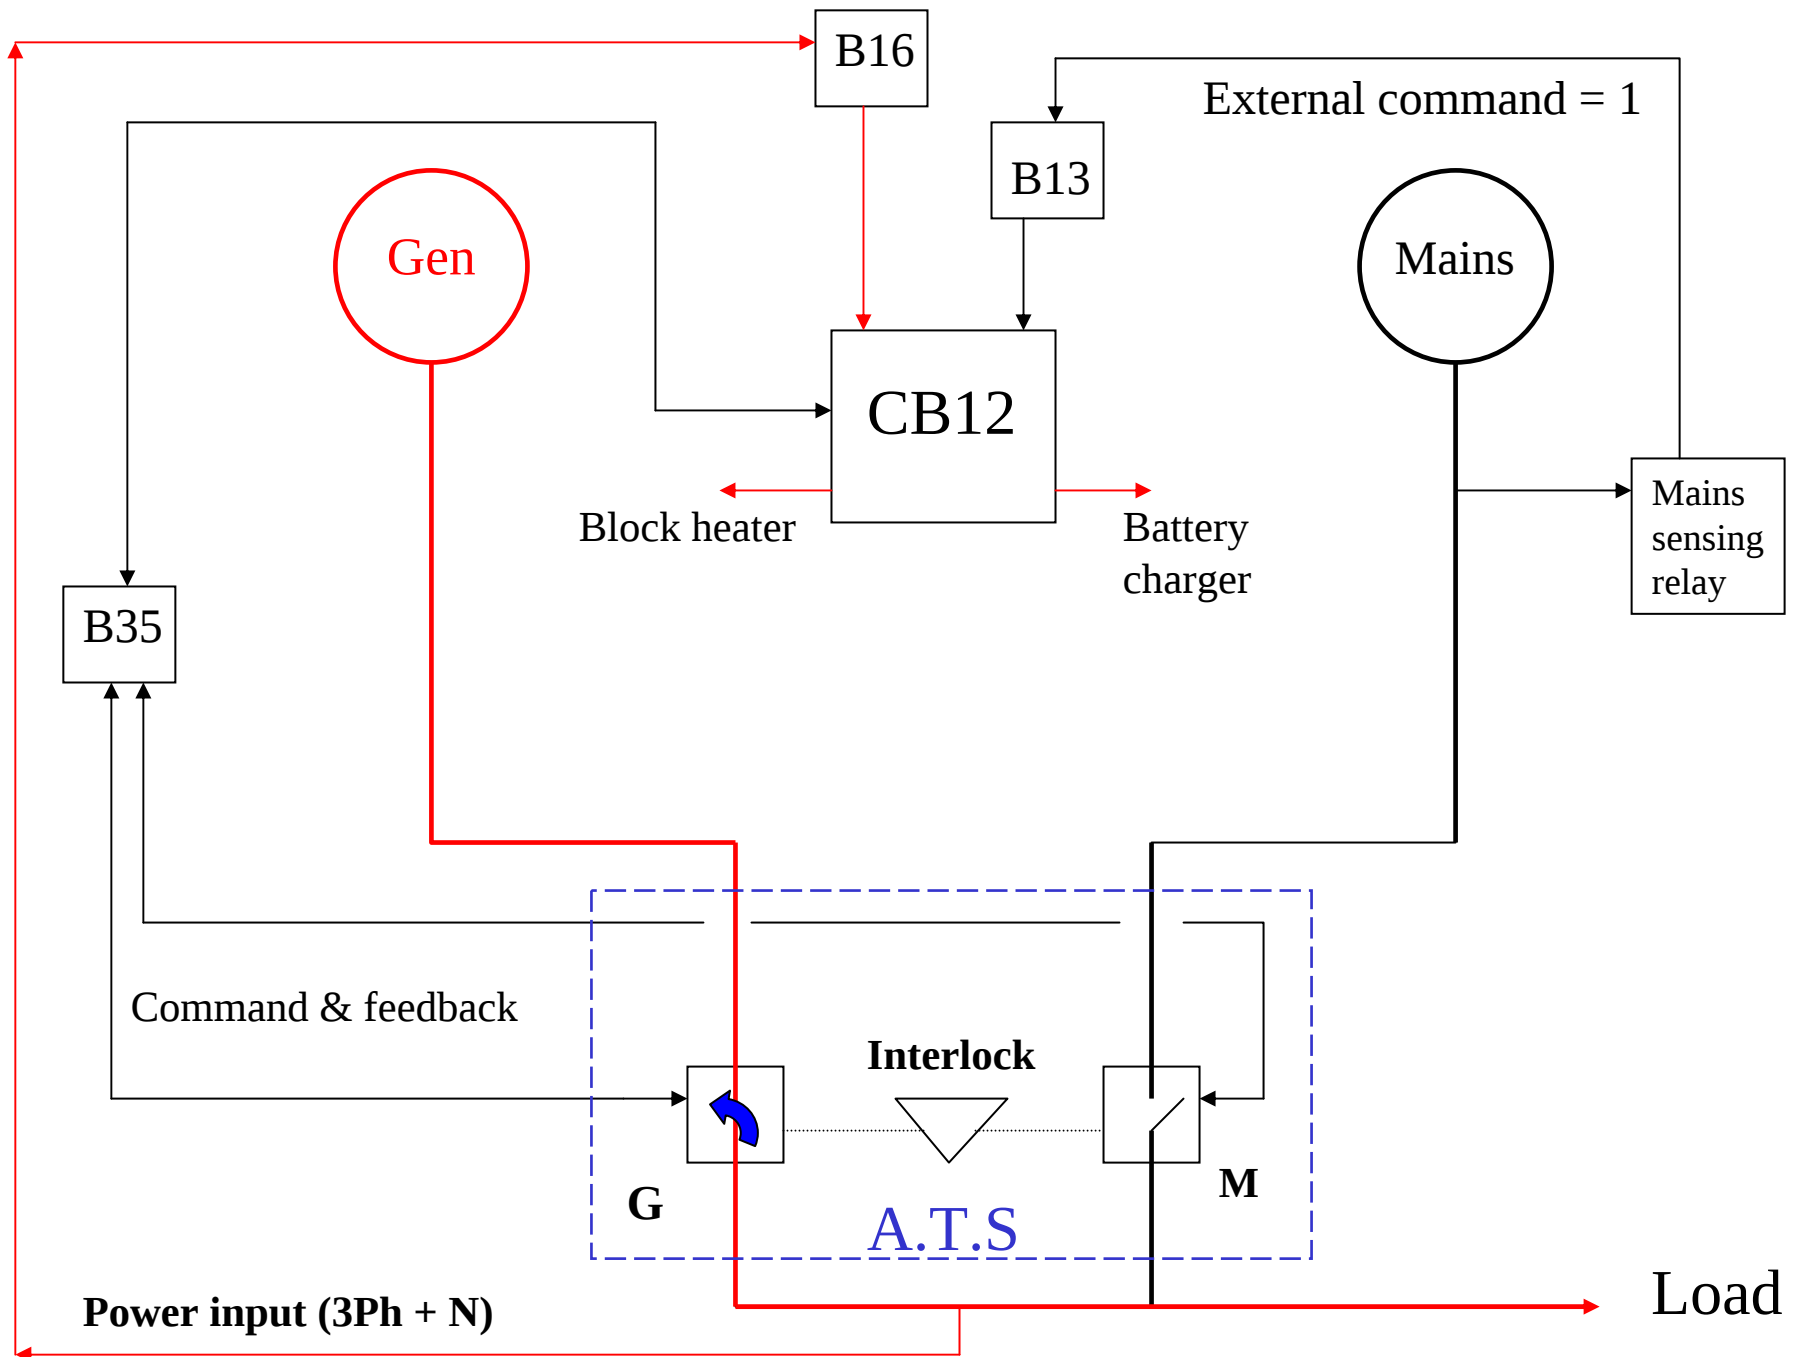


Generator

ATS

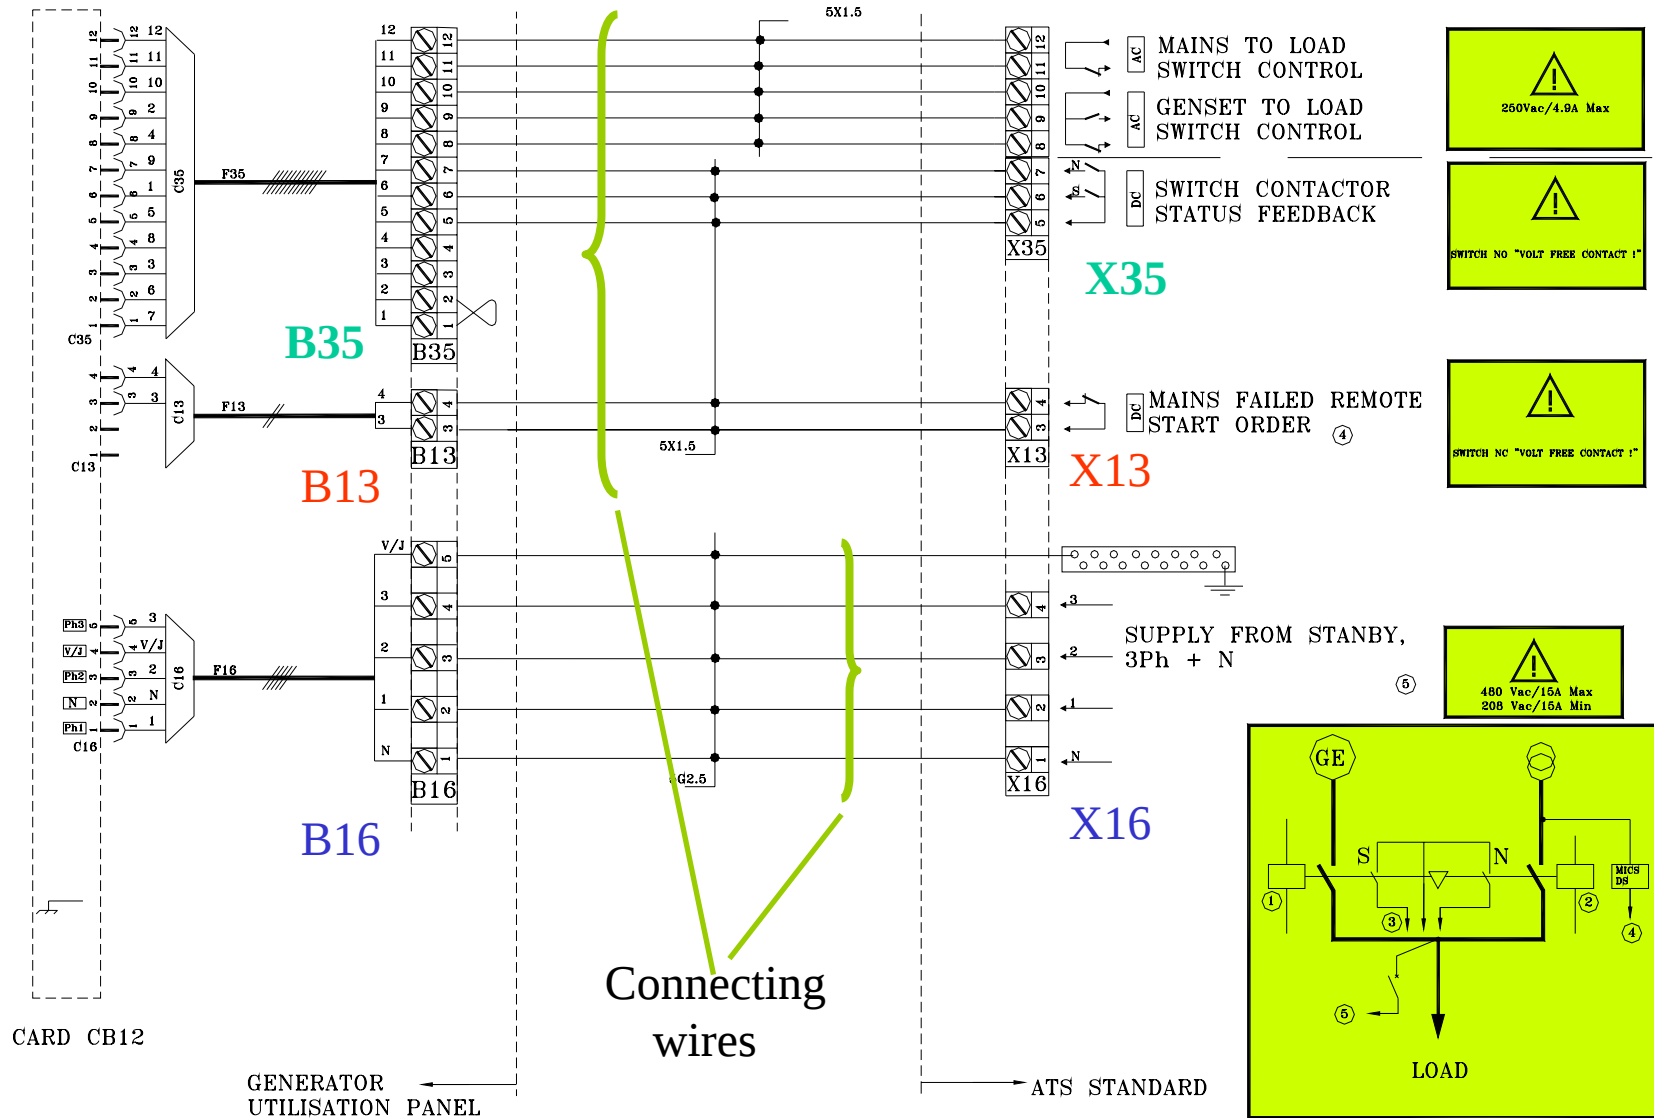

Connection between generator and ATS

Mains sensing relay

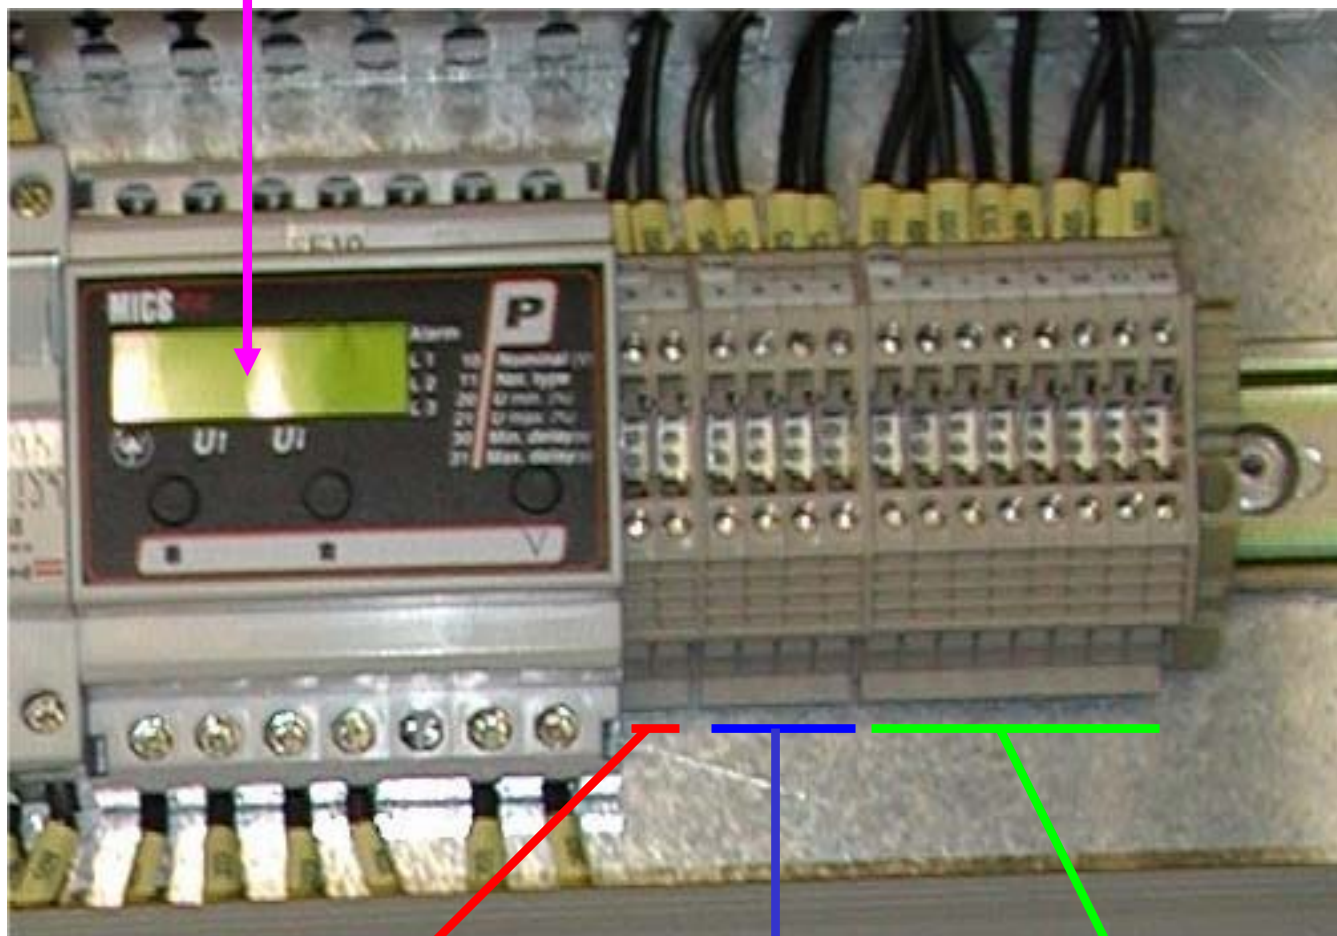

X13, - 3 & 4
start / stop
command

X16,
3Ph + N

X35 - 5 thru 12, switch
control / command

Utilisation Board

B110

B37


B35

B16

B13

Mains sensing
relay (C-mac)



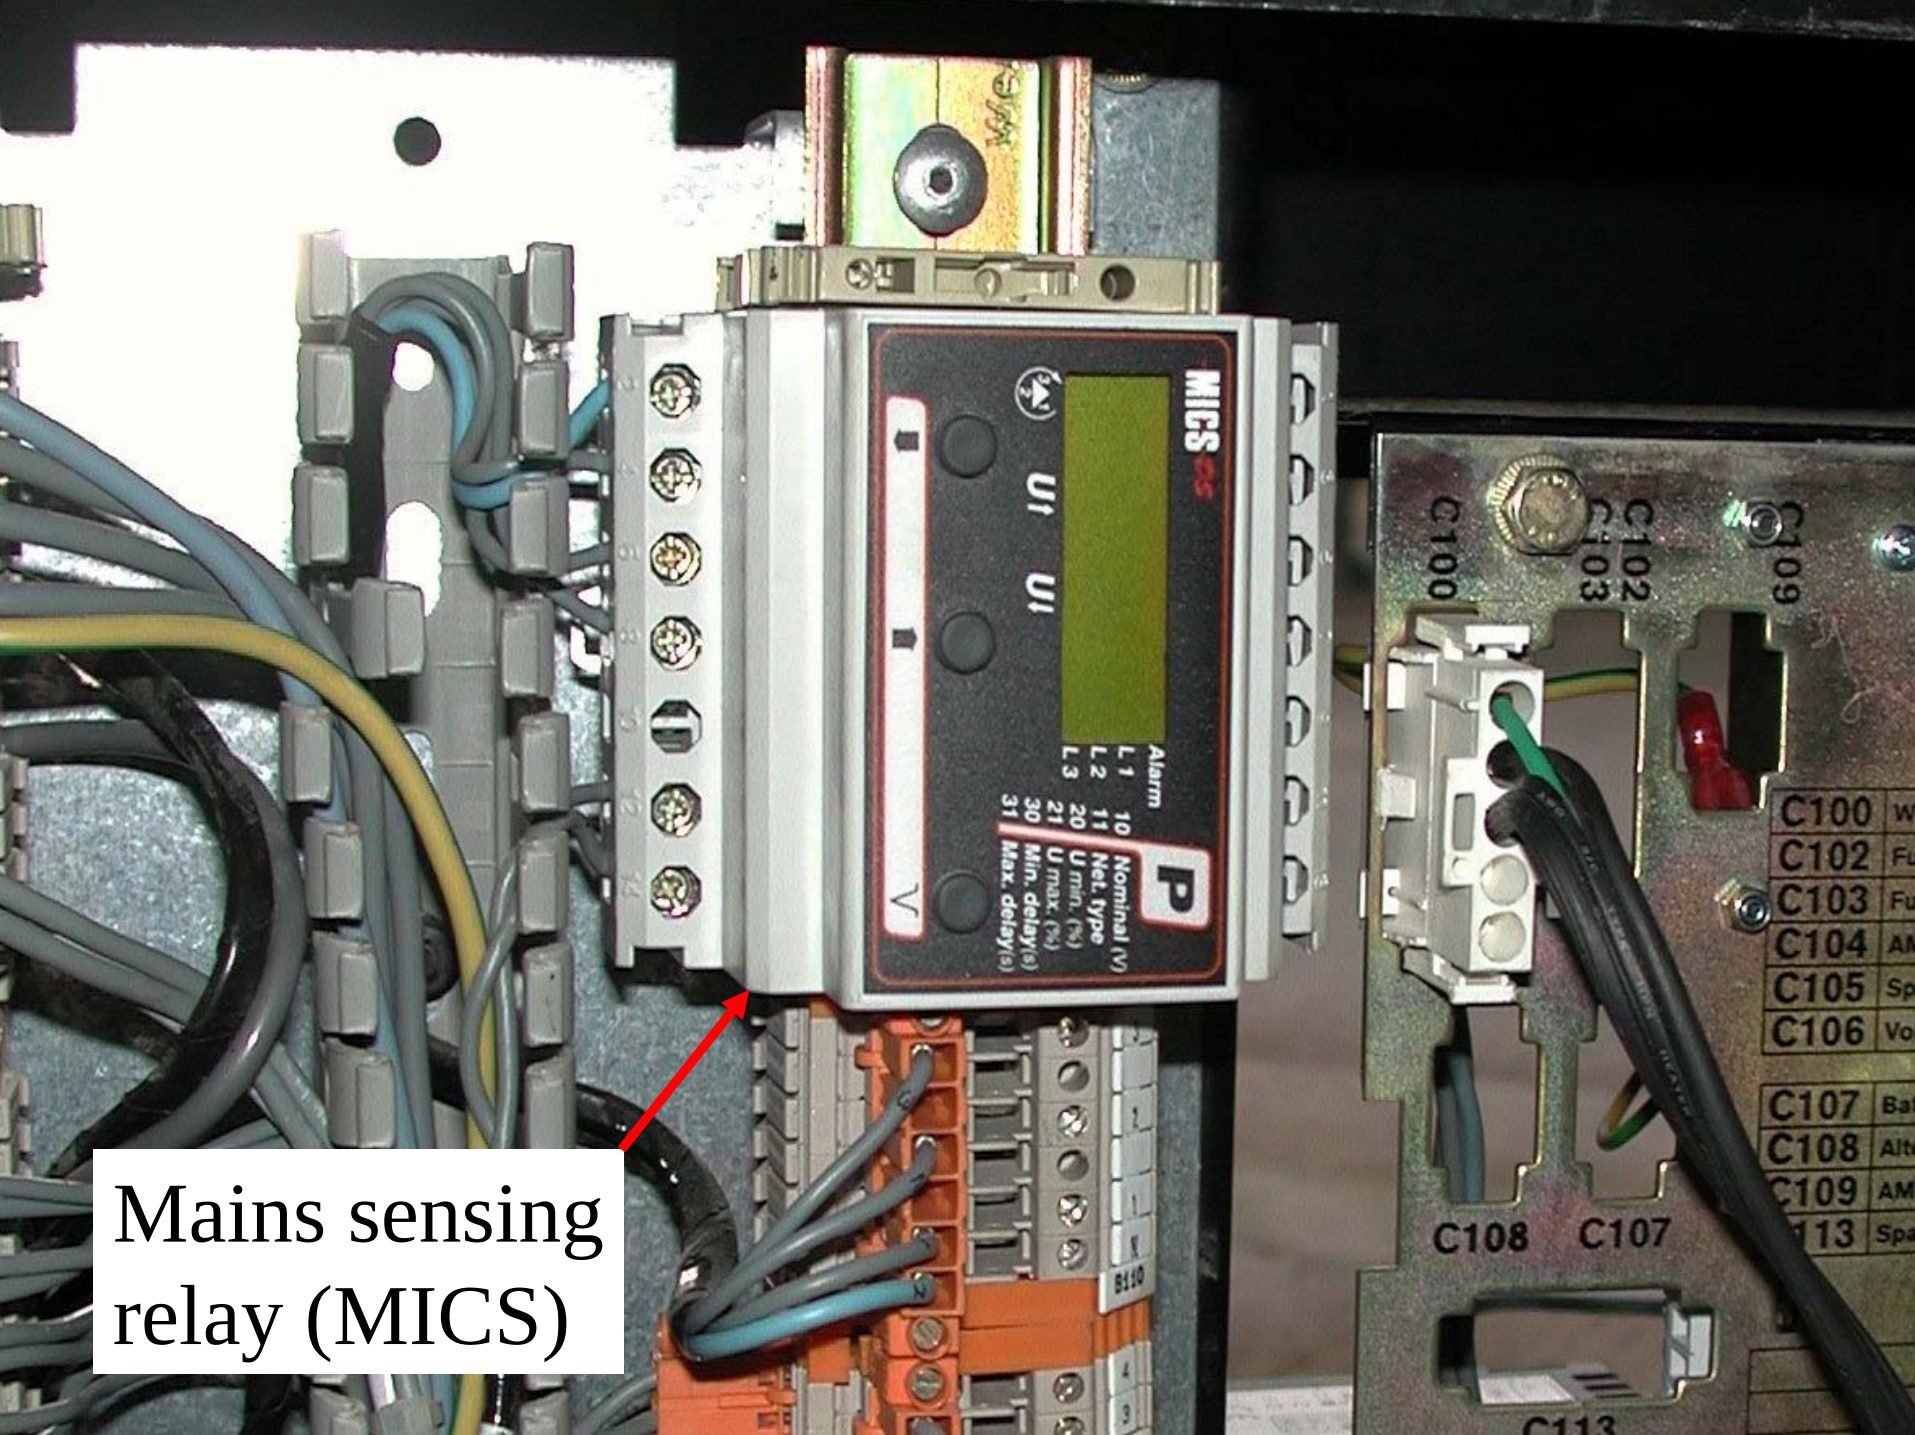

Mains sensing
relay (MICS)