



PARTS MANUAL

BALLOON LIGHT

BL2000

Code: B



This manual contains important safety information.

Do not destroy this manual.

This manual must be available to the personnel who operate and maintain this machine.



P.O. Box 868 - 501 Sanford Ave
Mocksville, N.C. 27028

Book 22669899 (05/05)
Revised (10-12)

Doosan purchased Bobcat Company from Ingersoll-Rand Company in 2007. Any reference to Ingersoll-Rand Company or use of trademarks, service marks, logos, or other proprietary identifying marks belonging to Ingersoll-Rand Company in this manual is historical or nominative in nature, and is not meant to suggest a current affiliation between Ingersoll-Rand Company and Doosan Company or the products of either.

TABLE OF CONTENTS

TITLE	PAGE
Section A - PARTS	
GENERAL ARRANGEMENT.....	A-2
ACCESSORIES.....	A-3
EXTERNAL PARTS.....	A-4
INTERNAL PARTS	A-5

TABLE OF CONTENTS

TITLE	PAGE
-------	------

Section - Parts Ordering



GENERAL

This publication, which contains an illustrated parts breakdown, has been prepared as an aid in locating those parts which may be required in the maintenance of the unit. Always insist on genuine Ingersoll-Rand Company parts for your compressor.

Ingersoll-Rand Company can bear no responsibility for injury or damages resulting directly from the use of non-approved repair parts.

Ingersoll-Rand Company service facilities and parts are available worldwide. Consult local yellow pages or visit: www.portablepower.irco.com.

Special order parts may not be included in this manual. Contact the Mocksville Parts Department with the unit serial number for assistance with these special parts.

Description

The illustrated parts breakdown illustrates and lists the various assemblies, subassemblies and detailed parts which make up this particular machine. This covers the standard models and the more popular options that are available.

In referring to the rear, the front or to either side of the unit, always consider the drawbar end of the unit as the front.

Standing at the rear of the unit facing the drawbar (front) will determine the right and left sides.

Fasteners

Both SAE/inch and ISO/metric hardware have been used in the design and assembly of these units. In the disassembly and reassembly of parts, extreme care must be taken to avoid damaging threads by the use of wrong fasteners.

How To Order


Always specify the model and serial number of the unit.

Specify the part number and description.

Section A - PARTS



GENERAL ARRANGEMENT
GENERAL ARRANGEMENT




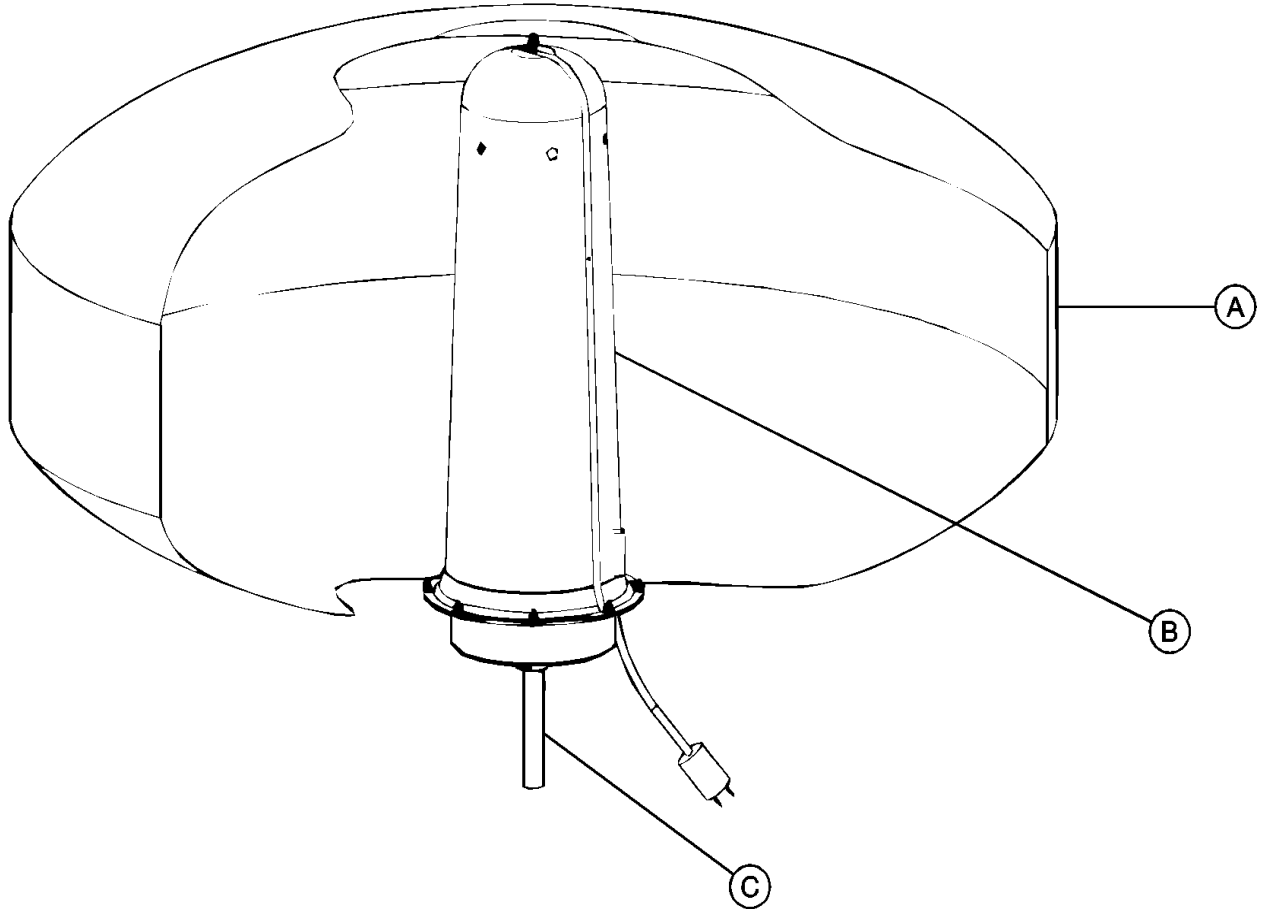


22669899_gen_arr_05/05_A

ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	17126368	ENVELOPE	1	
B	17126376	HARNESS, INTERNAL	1	
C	17126384	HARNESS, EXTERNAL	1	

ACCESSORIES


ACCESSORIES

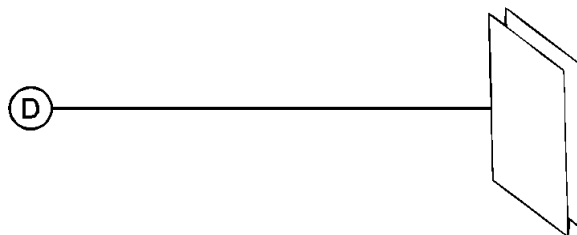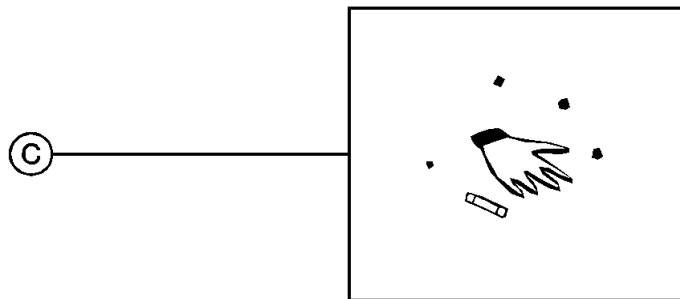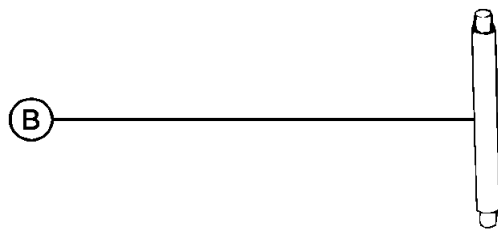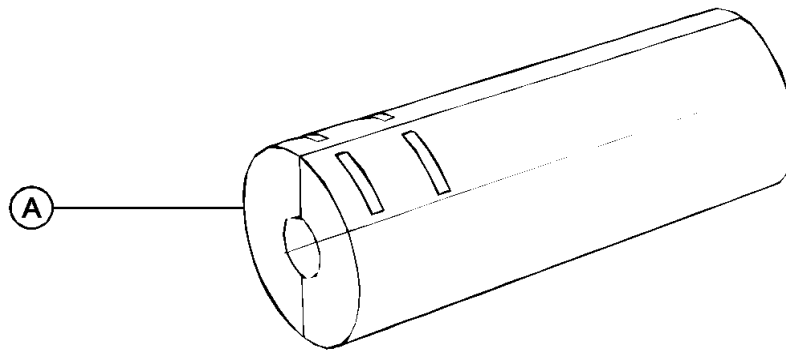

22669899_accessories_05/05_A

ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	17126319	BAG	1	
B	16534596	LAMP, 1000W	2	
C	17126335	KIT, SPARE PARTS	1	
D	16534570	KIT, REPAIR	1	


EXTERNAL PARTS
EXTERNAL PARTS

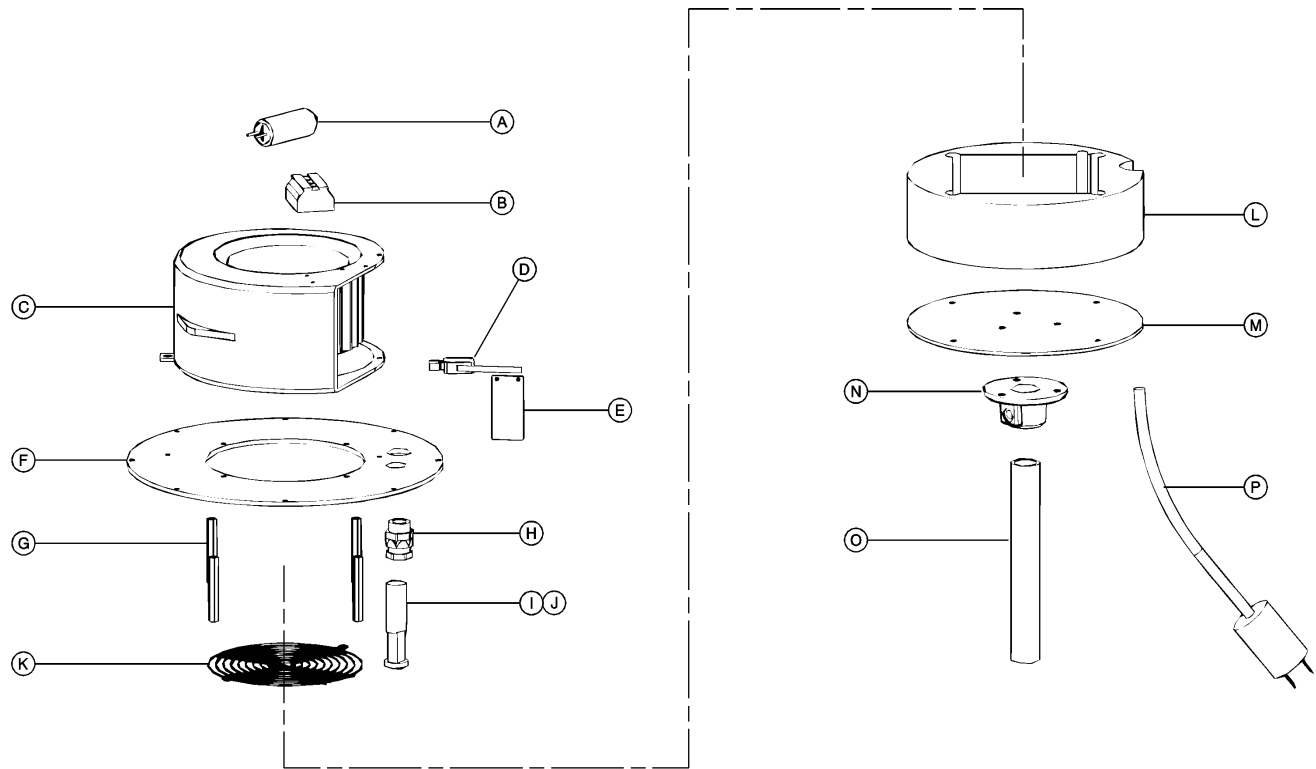

22669899_external parts_05/05_A

ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	17126186	CAPACITOR	1	
B	17126194	BLOCK, TERMINAL	1	
C	17126202	FAN	1	
D	17126210	SWITCH, MICRO	1	
E	17126343	SWITCH, SAFETY	1	
F	17126236	PLATE, SOUTH POLE	1	
G	17126244	SPACER	4	
H	16534455	NUT, POWER CABLE	1	
I	17123738	HOLDER, FUSE and FUSE	1	
J	16534430	FUSE, 20 A	1	
K	17126269	GUARD, FAN	1	
L	17126277	FILTER, FAN	1	
M	17126285	PLATE, BOTTOM	1	
N	17126293	MOUNT, POLE	1	
O	17126301	POLE, MOUNTING	1	
P	17126350	CABLE, ELECTRICAL	1	18 FT

INTERNAL PARTS
INTERNAL PARTS

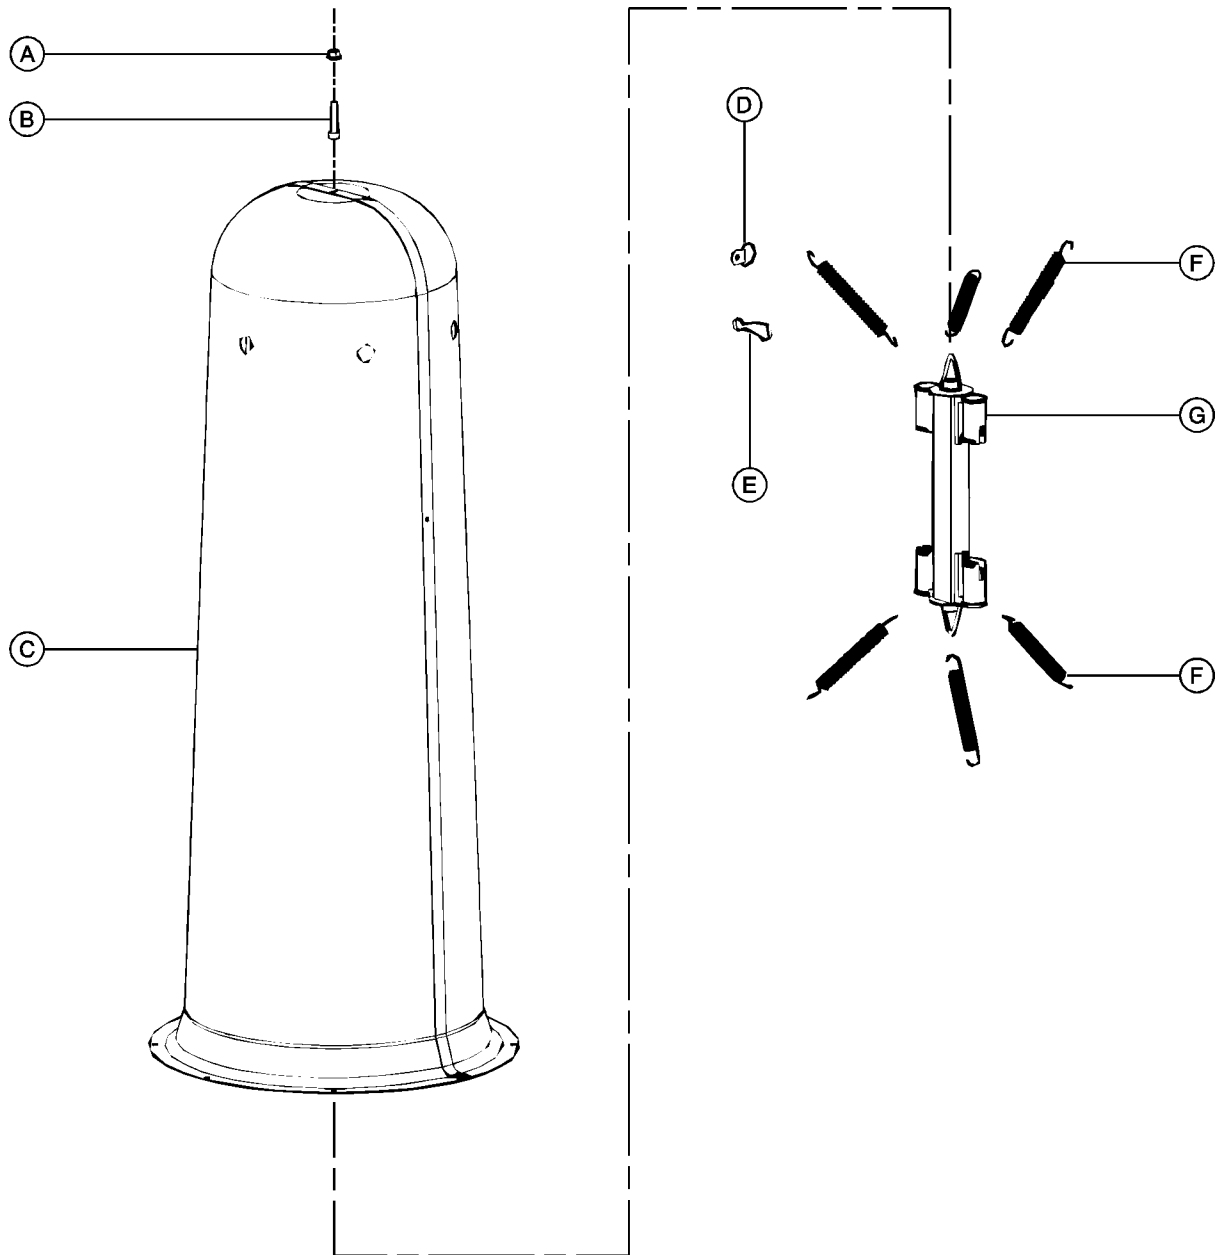

22669899_internal parts_05/05_A

ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	17126392	SCREW	1	
B	17126145	SCREW	1	
C	17126152	BOWL, POLYCARBONATE	1	
D	17126160	CONNECTOR, CLIP	6	
E	17126178	CLIP, LIGHT HARNESS	6	
F	16534299	SPRING	6	
G	16534273	KIT, LAMP HOLDER and SPRINGS	1	

INTERNAL PARTS

NUMERICAL INDEX

COMM.NO.	PAGE	COMM.NO.	PAGE	COMM.NO.	PAGE	COMM.NO.	PAGE
16534273	 A-5						
16534299	 A-5						
16534430	 A-4						
16534455	 A-4						
16534570	 A-3						
16534596	 A-3						
17123738	 A-4						
17126145	 A-5						
17126152	 A-5						
17126160	 A-5						
17126178	 A-5						
17126186	 A-4						
17126194	 A-4						
17126202	 A-4						
17126210	 A-4						
17126236	 A-4						
17126244	 A-4						
17126269	 A-4						
17126277	 A-4						
17126285	 A-4						
17126293	 A-4						
17126301	 A-4						
17126319	 A-3						
17126335	 A-3						
17126343	 A-4						
17126350	 A-4						
17126368	 A-2						
17126376	 A-2						
17126384	 A-2						
17126392	 A-5						

NUMERICAL INDEX

COMM.NO.	PAGE	COMM.NO.	PAGE	COMM.NO.	PAGE	COMM.NO.	PAGE
----------	------	----------	------	----------	------	----------	------

WORD INDEX

A

ACCESSORIESA-3

B

BAGA-3

BLOCK

 TERMINALA-4

BOWL

 POLYCARBONATEA-5

C

CABLE

 ELECTRICALA-4

CAPACITORA-4

CLIP

 LIGHT HARNESSA-5

CONNECTOR

 CLIPA-5

E

ENVELOPEA-2

EXTERNAL PARTSA-4

F

FANA-4

FILTER

 FANA-4

FUSE

 20 AA-4

G

GENERAL ARRANGEMENTA-2

GUARD

 FANA-4

H

HARNESS

 EXTERNALA-2

 INTERNALA-2

HOLDER

 FUSE and FUSEA-4

I

INTERNAL PARTSA-5

K

KIT

 LAMP HOLDER and SPRINGSA-5

 REPAIRA-3

 SPARE PARTSA-3

L

LAMP

 1000WA-3

M

MOUNT

 POLE A-4

N

NUT

 POWER CABLE A-4

P

Parts Ordering2-1

PLATE

 BOTTOM A-4

 SOUTH POLE A-4

POLE

 MOUNTING A-4

S

SCREW A-5

SPACER A-4

SPRING A-5

SWITCH

 MICRO A-4

 SAFETY A-4

WORD INDEX



Utility Equipment
Ingersoll-Rand Company
P.O. Box 868 - 501 Sanford Ave
Mocksville, N.C. 27028

