

Product Information

Printed: 12/12/2007


Product: Demolition handheld pneumatic tools

Action: Lubrication

Continuous oiling of the pneumatic tools is important in order to maintain high performances and to prevent damages on the piston and the cylinder.

**IR paving breakers
and IR PV pickhammers**

Use the **built-in lubricator**

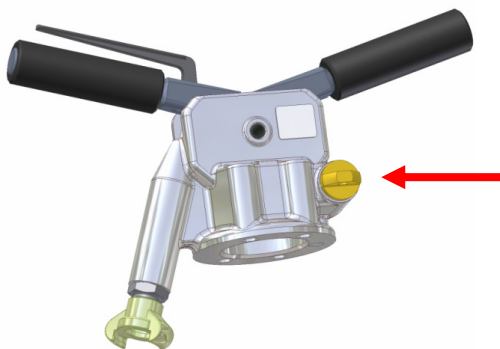

Check the oil level before using the tool:

- Unscrew the yellow cap
- Fill with oil if necessary
- Check oil levels every 2 hours of use

All other pneumatic tools

Use an **inline lubricator** (cpn 35371111)



- The inline lubricator is located between 3 and 5 metres upstream of the tool.
- The oil level must be controlled daily.
- Also valid for paving breakers if the built-in lubricator is not used

- We recommend 10W40 PRO-TEC oil for lubrication (cpn 85448405, 5 l)
- In case of ice blocking the piston, use special oil: 'Kill-Frost' (cpn 35379718, 500 ml).
- Make sure that the tool is not over-lubricated as this might create moving parts to stick.
- Always close open air hoses in order to prevent sand and dirt from entering.



Doosan purchased Bobcat Company from Ingersoll-Rand Company in 2007. Any reference to Ingersoll-Rand Company or use of trademarks, service marks, logos, or other proprietary identifying marks belonging to Ingersoll-Rand Company in this manual is historical or nominative in nature, and is not meant to suggest a current affiliation between Ingersoll-Rand Company and Doosan Company or the products of either.