




Portable Power

7/125 - 9/115, 7/125 - 10/110, 14/90

PARTS MANUAL

SERIAL No : 660000 ->

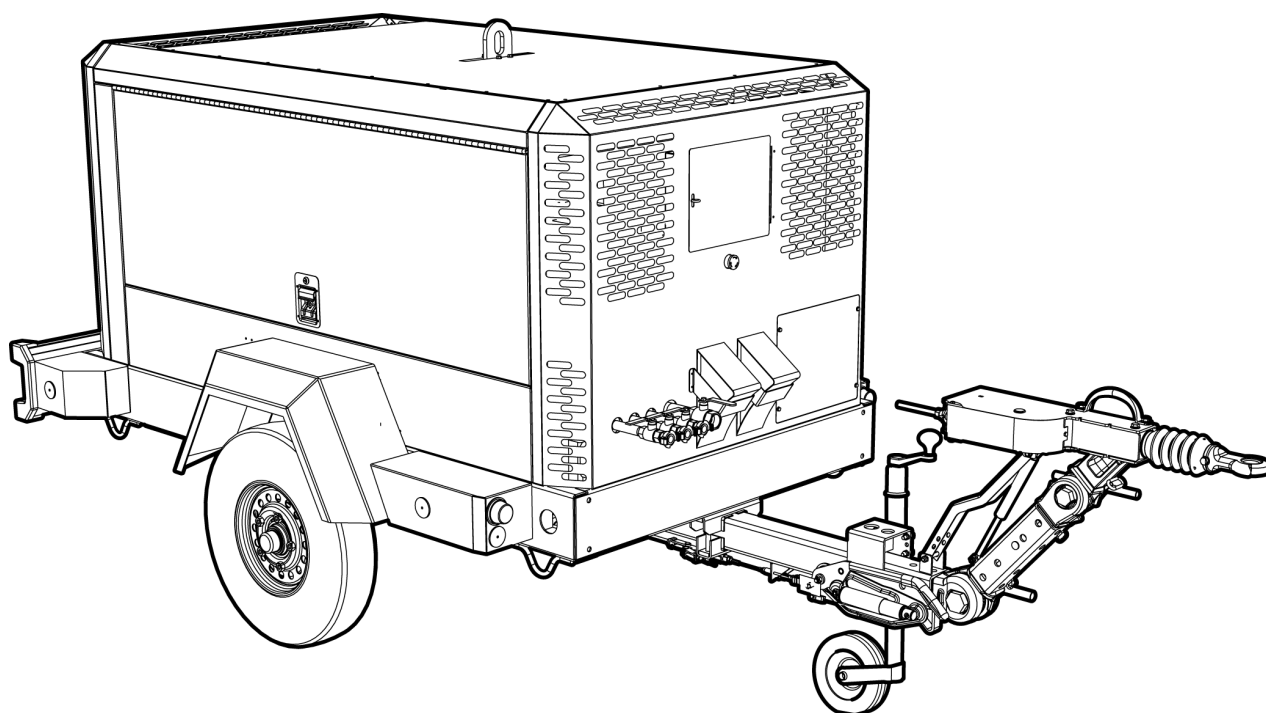



Portable Power

CONTENTS

RUNNING GEAR

RUNNING GEAR - (Fixed Height Braked)	3
RUNNING GEAR - (Fixed Height Braked)	5
RUNNING GEAR - (Variable Height Braked)	11
RUNNING GEAR - (Variable Height Braked)	13
RUNNING GEAR - (Variable Height Braked - KHD)	21
RUNNING GEAR - (Variable Height Braked - KHD)	23

MAIN FRAME

FRAME	31
ENCLOSURE	33
DECALS AND DOCUMENTATION	37
DECALS AND DOCUMENTATION	39
DECALS AND DOCUMENTATION	41

CONTROL AND ELECTRICAL SYSTEM

BRAKE LIGHTS AND WIRING	43
BATTERY AND MOUNTING	45
INSTRUMENT PANEL	47
CONTROL UNIT	49
RELAY AND FUSE BOX	51

AIR END

AIREND MOUNTING	53
AIREND PIPING	55
AIREND PIPING	57
AIREND GEARCASE ASSEMBLY	59
AIREND ROTOR HOUSING ASSEMBLY	61
AIREND REAR BEARING HOUSING ASSEMBLY	63
UNLOADER AND MOUNTING	65
UNLOADER ASSEMBLY	67
SEPARATOR TANK	69
SEPARATOR TANK - (service air)	71
MINIMUM PRESSURE VALVE	73
REGULATION SYSTEM	75
OIL PIPING	79
OIL TEMPERATURE BYPASS VALVE	81

POWER UNIT

ENGINE ASSEMBLY	83
REMOTE ENGINE OIL FILTER	85
EXHAUST SYSTEM	87
AIR INTAKE SYSTEM	89
FUEL SYSTEM	91
CRANKCASE BREATHER	95
ALTERNATOR	97
EXHAUST RECIRCULATION	99
EXHAUST GASKET	101
FUEL FILTER	103
FUEL PUMP	105

FUEL SYSTEM ACCESSORIES	107
AIR INTAKE CONNECTION	109
AIR TRANSFER CONNECTION	111
AIR INTAKE MANIFOLD	113
ENGINE OIL COOLER	115
OIL LEVEL GAUGE	117
OIL FILL ARRANGEMENT	119
OIL PAN	121
ENGINE CONTROL MODULE	123
FUEL INJECTOR	125
INJECTOR PIPING	127
TURBOCHARGER	129
STARTING MOTOR AND MOUNTING	131
EXHAUST MANIFOLD	133
VALVE COVER	135
WATER PUMP	137
BELT TENSIONER	139
EXHAUST OUTLET CONNECTION	141
WIRING HARNESS	143
COOLING SYSTEM	145
COOLING SYSTEM	147

ACCESSORIES & OPTIONS


OPTION - CENTRAL DRAINS	149
OPTION - SHIPPING MOUNT - (includes central drains)	151
OPTION - SHOCK MOUNTS - (includes central drains)	153
OPTION - AFTERCOOLER AND WATER SEPARATOR	155
OPTION - IQ FILTERS	159
OPTION - WHEEL CHOCKS	163
OPTION - LUBRICATOR	165
OPTION - WHEEL NUT INDICATORS	167
OPTION - SPARK ARRESTOR	169
OPTION - OVERSPEED VALVE	171
OPTION - LIGHTING PROTECTION	173

MAINTENANCE ITEMS

MAINTENANCE KIT - (500 hours)	175
MAINTENANCE KIT - (1000 hours)	177
RECOMMENDED SPARE PARTS - FLUIDS, FILTERS AND MAINTENANCE KITS - (1 machine	179
RECOMMENDED SPARE PARTS - IQ FILTERS - (1 machine for 2 years)	181
RECOMMENDED SPARE PARTS - (1 machine for 2 years)	183
RECOMMENDED SPARE PARTS - (1 machine for 2 years)	185
RECOMMENDED SPARE PARTS - (1 machine for 2 years)	187
RECOMMENDED SPARE PARTS - FLUIDS, FILTERS AND MAINTENANCE KITS - (5	189
RECOMMENDED SPARE PARTS - IQ FILTERS - (5 machines for 2 years)	191
RECOMMENDED SPARE PARTS - (5 machines for 2 years)	193
RECOMMENDED SPARE PARTS - (5 machines for 2 years)	195
RECOMMENDED SPARE PARTS - (5 machines for 2 years)	197
HARNESS - SPARE PARTS	199
FLUIDS	201
AIR DELIVERY HOSE	203
AIR HOSE FITTINGS	205
SERVICE TOOLS	207
CONNECTOR REPAIR KITS	211

**7/125-9/115_7/125-10/110_14/90_46641809-
C_06/16**

RUNNING GEAR (Fixed Height Braked)

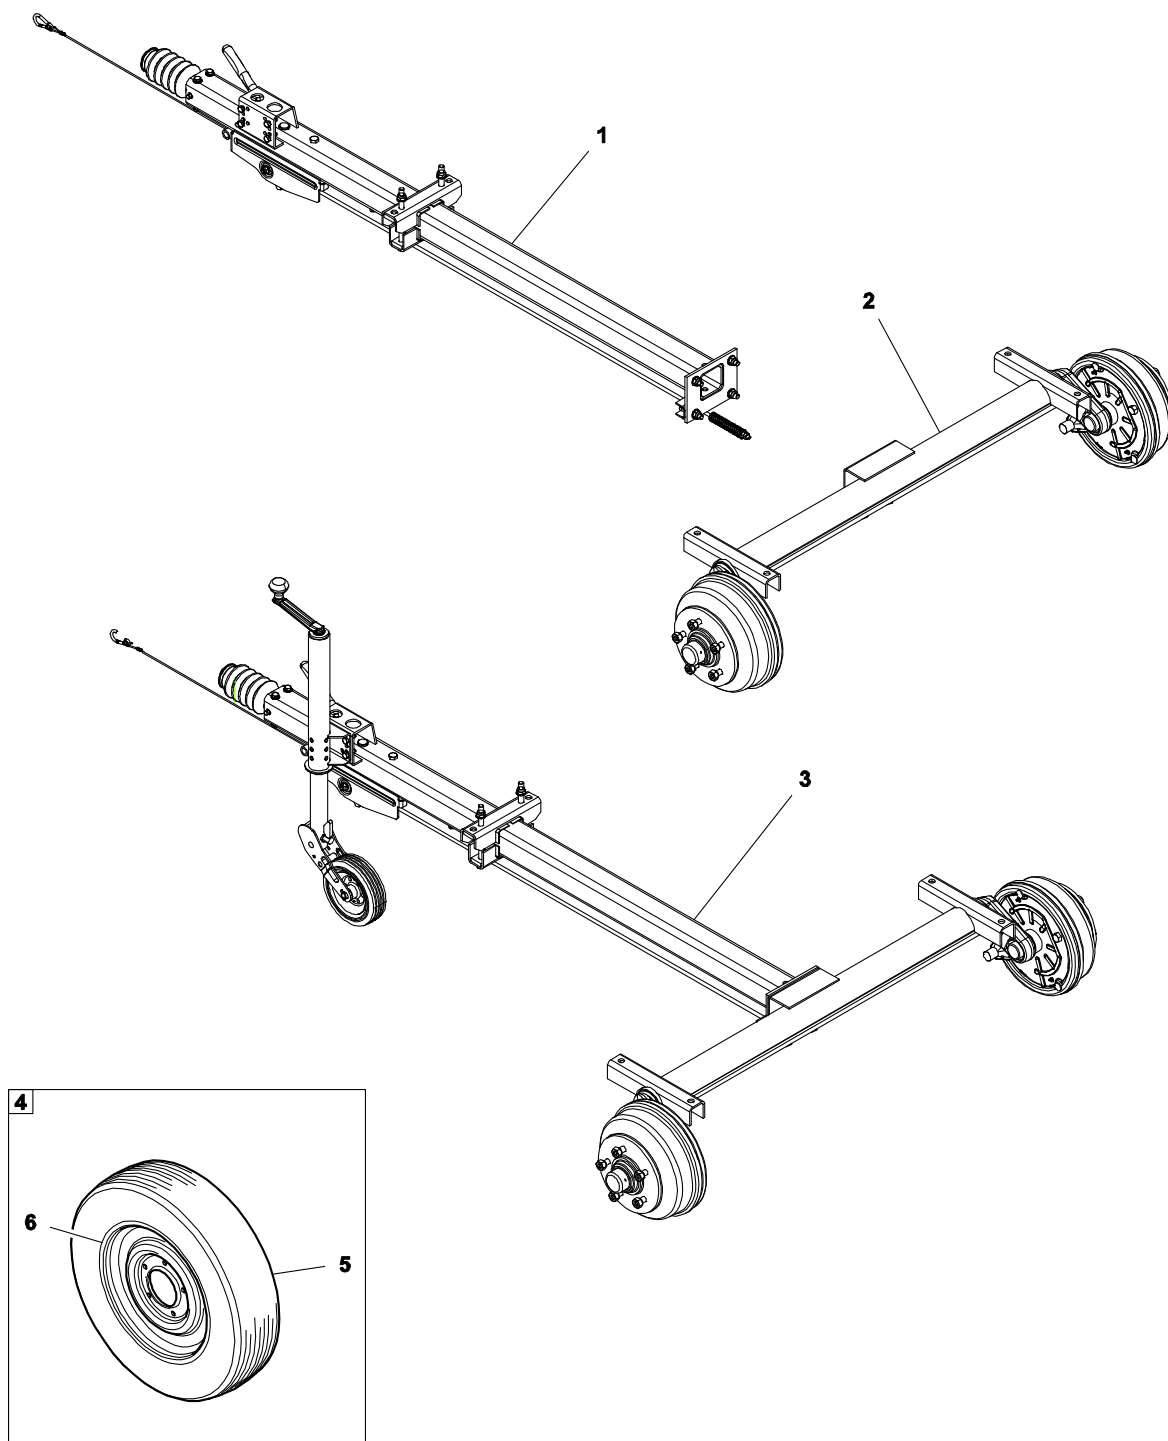


T3901_00
06/13

RUNNING GEAR (Fixed Height Braked)

[illegible]

RUNNING GEAR (Fixed Height Braked)

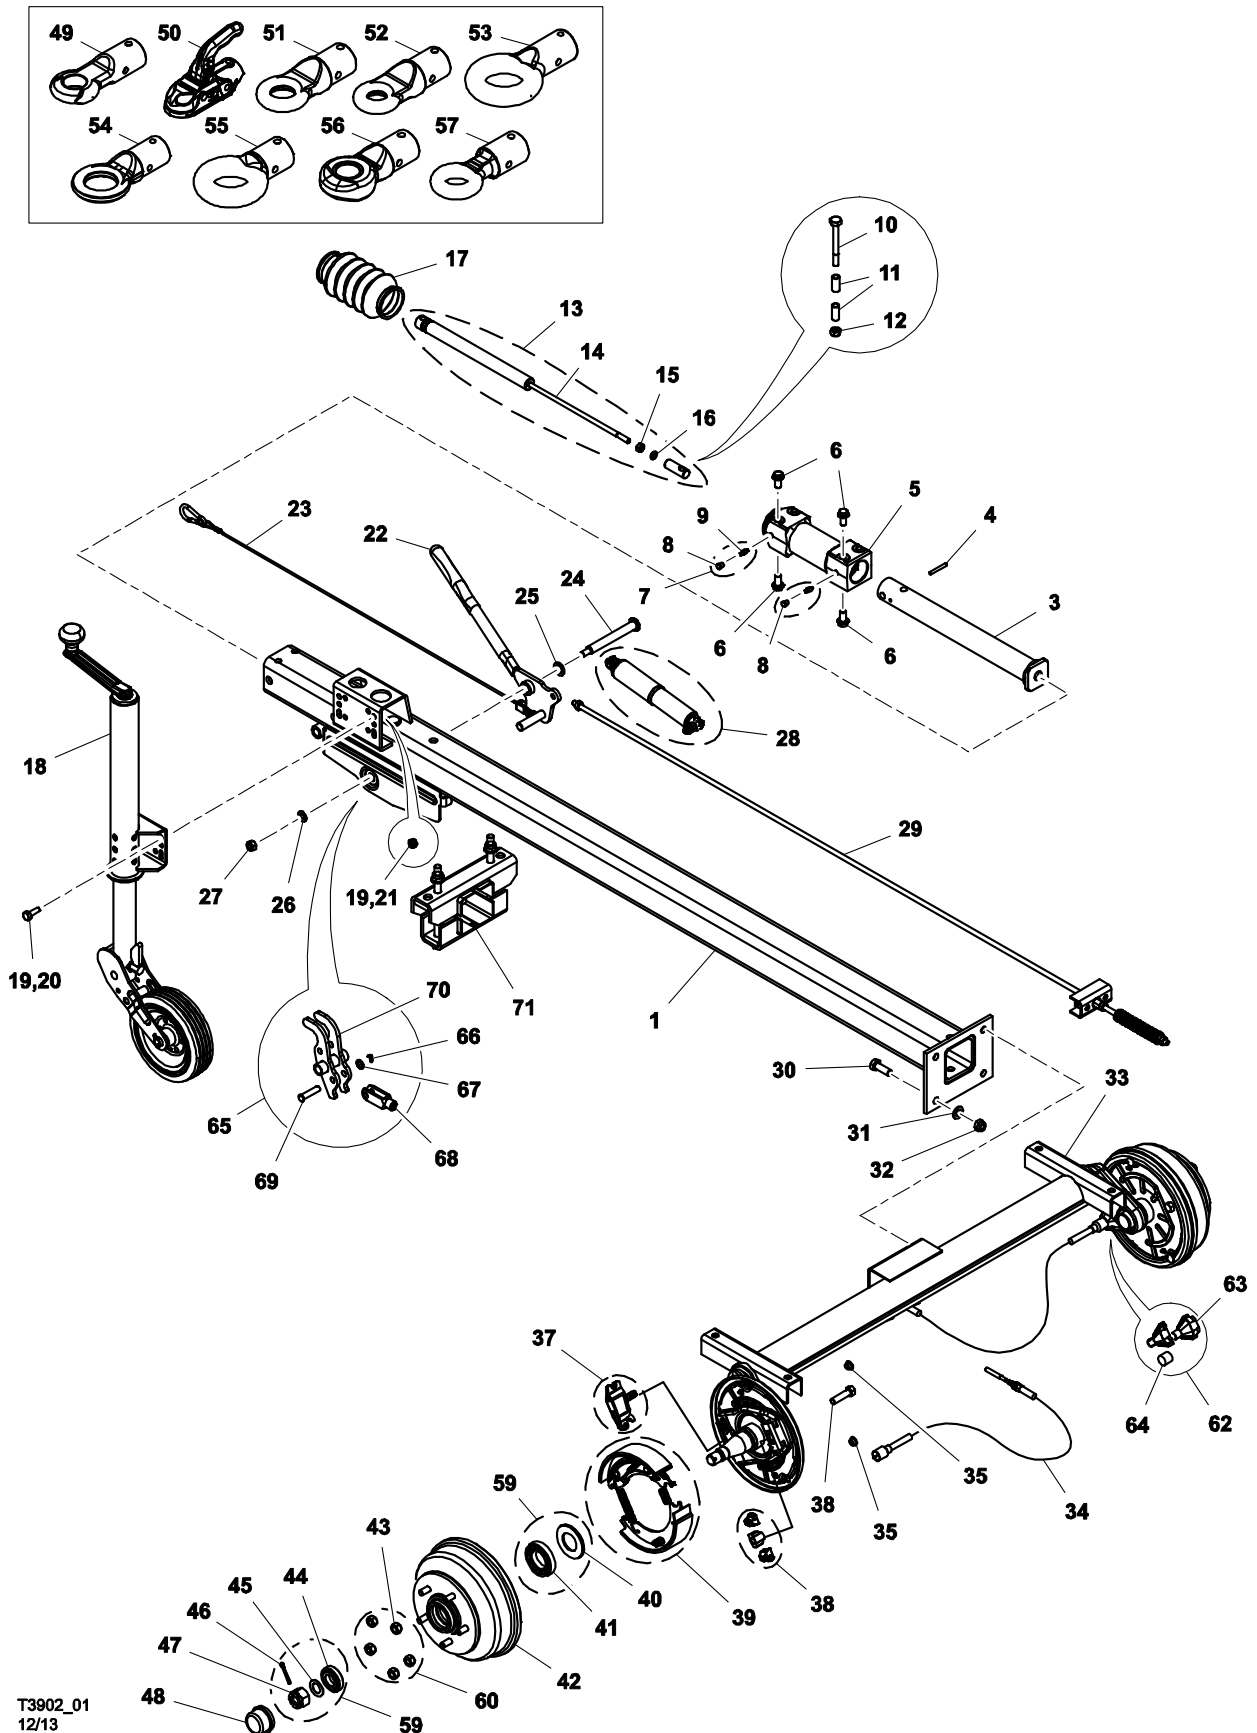


T3902_01
12/13

RUNNING GEAR (Fixed Height Braked)

Item	Part Number	Description	Remarks	Serial Number	Qty
1	22250468	DRAWBAR			1
2	46651377	GUIDE ASSEMBLY	W/Ref. 3-5		1
3		SLIDER	NAP - Order Ref. 2		1
4	22251599	PIN	NAP - Order Ref. 2		1
5	22250401	TUBE			1
6	22241350	BOLT			1
7	46551800	GREASE NIPPLE	W/Ref. 8-9 - (including cover)		2
8	22391858	CAP, GREASE NIPPLE	NAP - Order Ref. 7		2
9	22241095	NIPPLE, GREASE	NAP - Order Ref. 7		2
10	22251409	BOLT	NAP - Order Ref. 73		1
11		TUBE	NAP - Order Ref. 73		2
12	22051494	NUT	NAP - Order Ref. 73		1
13	46651378	SHOCK ABSORBER ASSEMBLY	W/Ref. 14-16		1
14		SHOCK ABSORBER			1
15	22051577	NUT			1
16	22051585	RING			1
17	22051510	COVER			1
18	22182075	JOCKEY WHEEL ASSEMBLY			1
19	46551498	KIT, CONNECTING	W/Ref. 20-21		1
20		BOLT	NAP - Order Ref. 19		4
21	22392260	NUT	NAP - Order Ref. 19		4
22	46651463	HANDBRAKE LEVER ASSEMBLY	W/Ref. 23		1
23	46517702	CABLE, HANDBRAKE			1
24		BOLT	NAP - Order Ref. 72		1
25	22241376	WASHER			1
26	22104806	WASHER	NAP - Order Ref. 72		1
27	22051494	NUT	NAP - Order Ref. 72		1
28	22251292	SPRING			1
29	22250773	COMPENSATOR			1
30		BOLT	NAP - Order Ref. 36		4
31		WASHER	NAP - Order Ref. 36		4

RUNNING GEAR (CONT'D) **(Fixed Height Braked)**

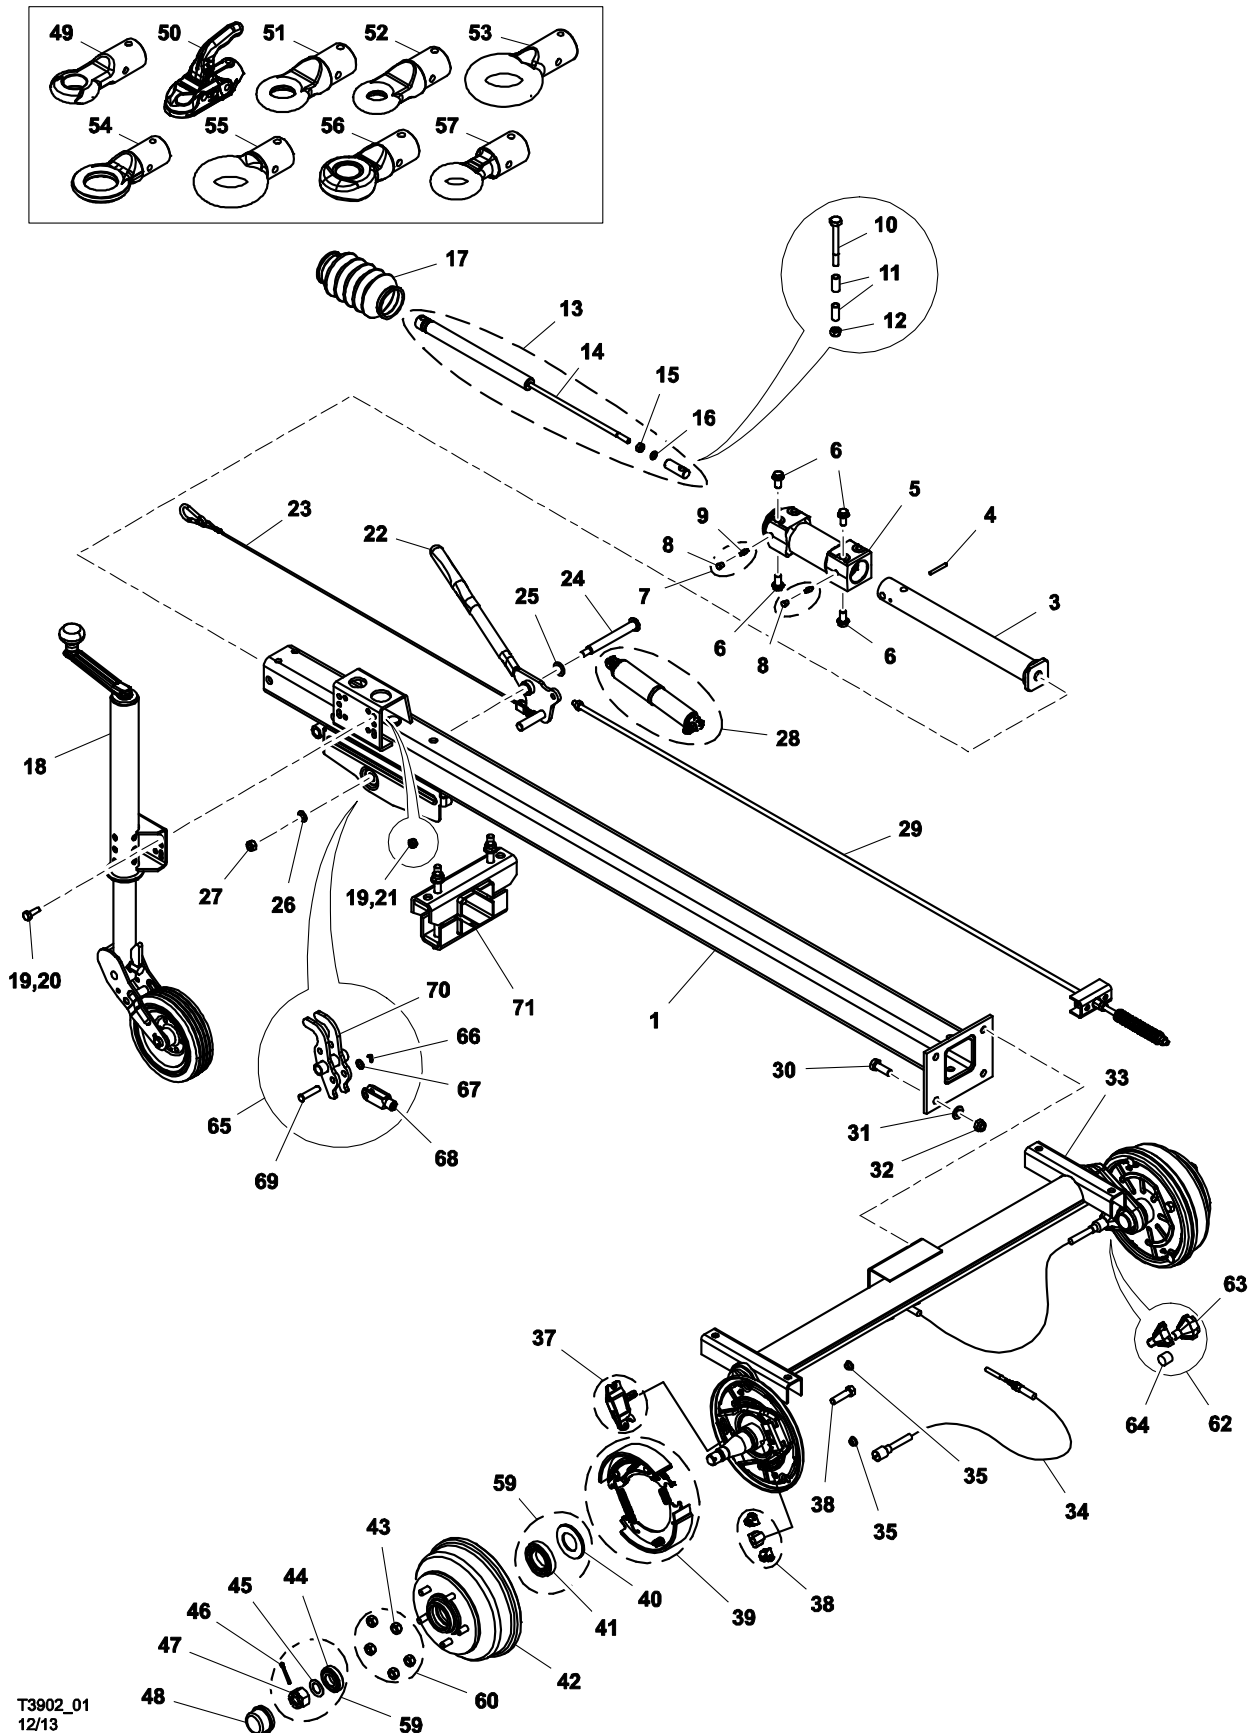


T3902_01
12/13

RUNNING GEAR (CONT'D) (Fixed Height Braked)

Item	Part Number	Description	Remarks	Serial Number	Qty
32		LOCKNUT	NAP - Order Ref. 36		4
33	46556777	AXLE ASSEMBLY			1
34	22250633	CABLE			2
35		COVER	NAP - Order Ref. 61		4
36	46651380	KIT, CONNECTING	W/Ref. 30-32		1
37	46651381	KIT, EXPANDING KEY	NAP - Order Ref. 61		2
38		KIT, ADJUSTING WEDGE	NAP - Order Ref. 61		2
39	80027980	KIT, BRAKE SHOE			1
40		SPACER	NAP - Order Ref. 59		2
41		BEARING	NAP - Order Ref. 59		2
42	46651384	BRAKE HUB ASSEMBLY			2
43		NUT	NAP - Order Ref. 60		5
44		BEARING	NAP - Order Ref. 59		2
45		WASHER	NAP - Order Ref. 59		2
46		PIN	NAP - Order Ref. 59		2
47		LOCKNUT	NAP - Order Ref. 59		2
48	22392153	CAP, DUST			2
49	22177588	EYE, TOWING	(Ø 40 mm)		1
50	46569661	HITCH, BALL	(50 mm)		1
50	22207815	HITCH, BALL	(optional) - (non-standard) - (50 mm)		
51	22177687	EYE, TOWING	(Ø 50 mm)		1
52	46569700	EYE, TOWING	(non-standard)(UK) - (non-standard)(UK) - (Ø 40 mm)		1
53	22177620	EYE, TOWING	(Ø 76 mm)		1
54	22207823	EYE, TOWING	(Ø 68 mm)		1
55	46569682	EYE, TOWING	(non-standard) - (non-standard) - (Ø 68 mm)		1
56	46569685	EYE, TOWING	(non-standard) - (non-standard) - (Ø 50 mm)		1
57	46569701	EYE, TOWING	(non-standard)(Italy) - (non-standard)(Italy) - (Ø 45 mm)		1
59	46551499	KIT, BEARING	W/Ref. 40,41,44-74		2
60	46636762	KIT, CONNECTING	W/Ref. 43		2
61	46651386	KIT, BRAKE OVERHAUL	W/Ref. 35-38		2
62	46551497	KIT, COVER	W/Ref. 62-63		2


RUNNING GEAR (CONT'D) **(Fixed Height Braked)**

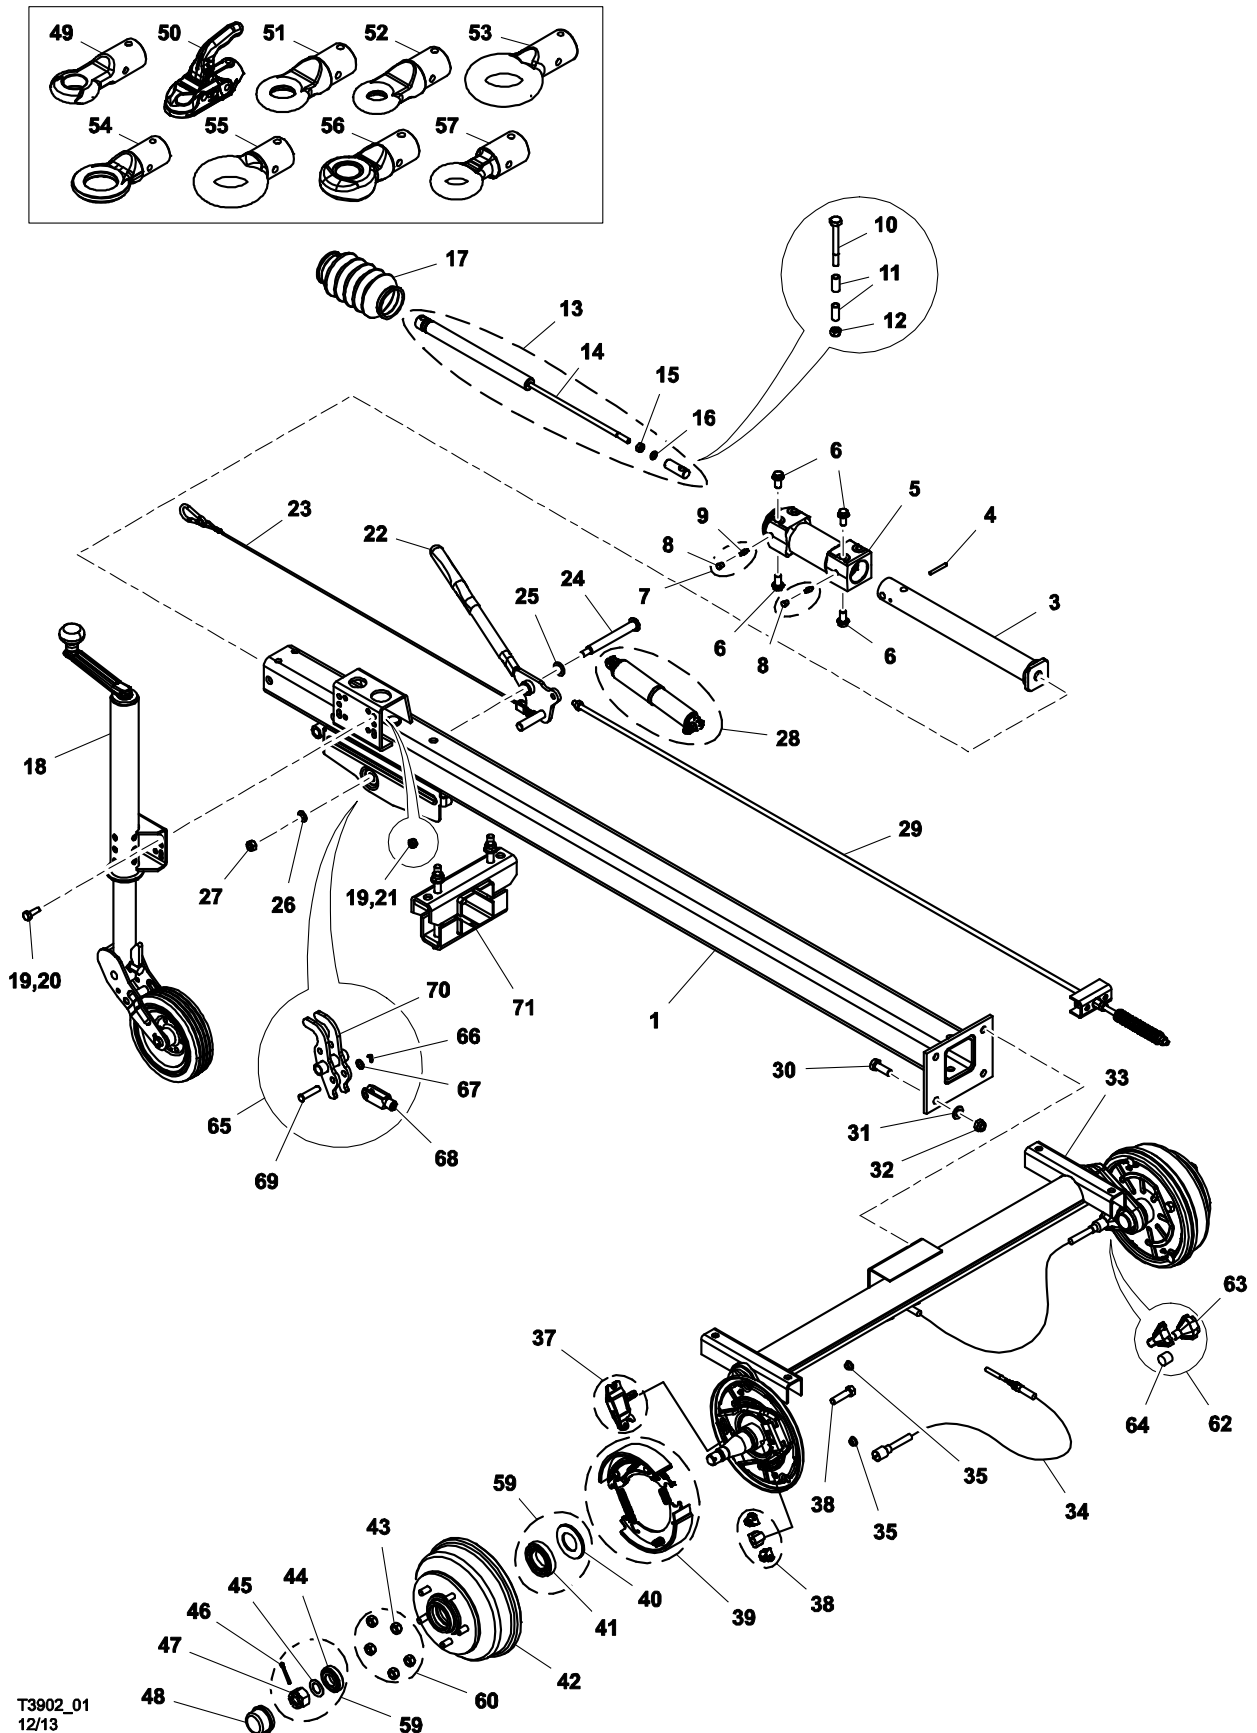

T3902_01
 12/13

[illegible][illegible]




RUNNING GEAR (Variable Height Braked)

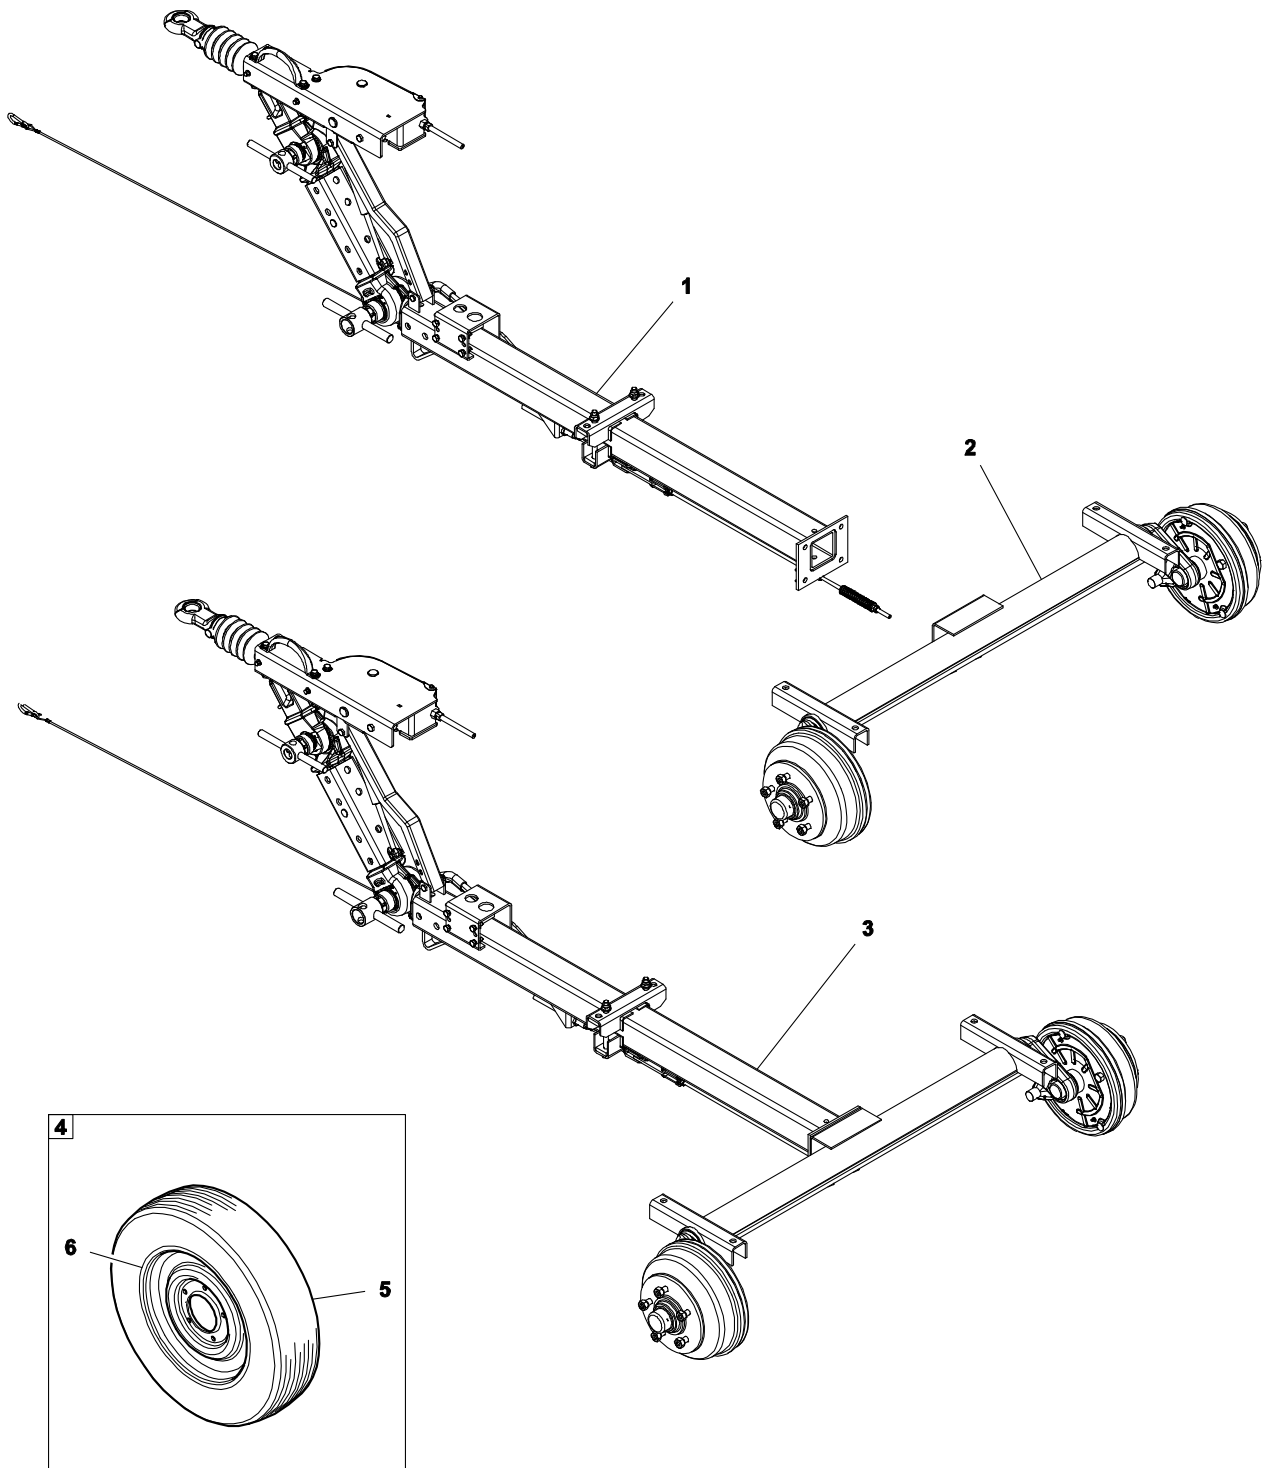

T3903_00
06/13

[illegible][illegible]

RUNNING GEAR (Variable Height Braked)

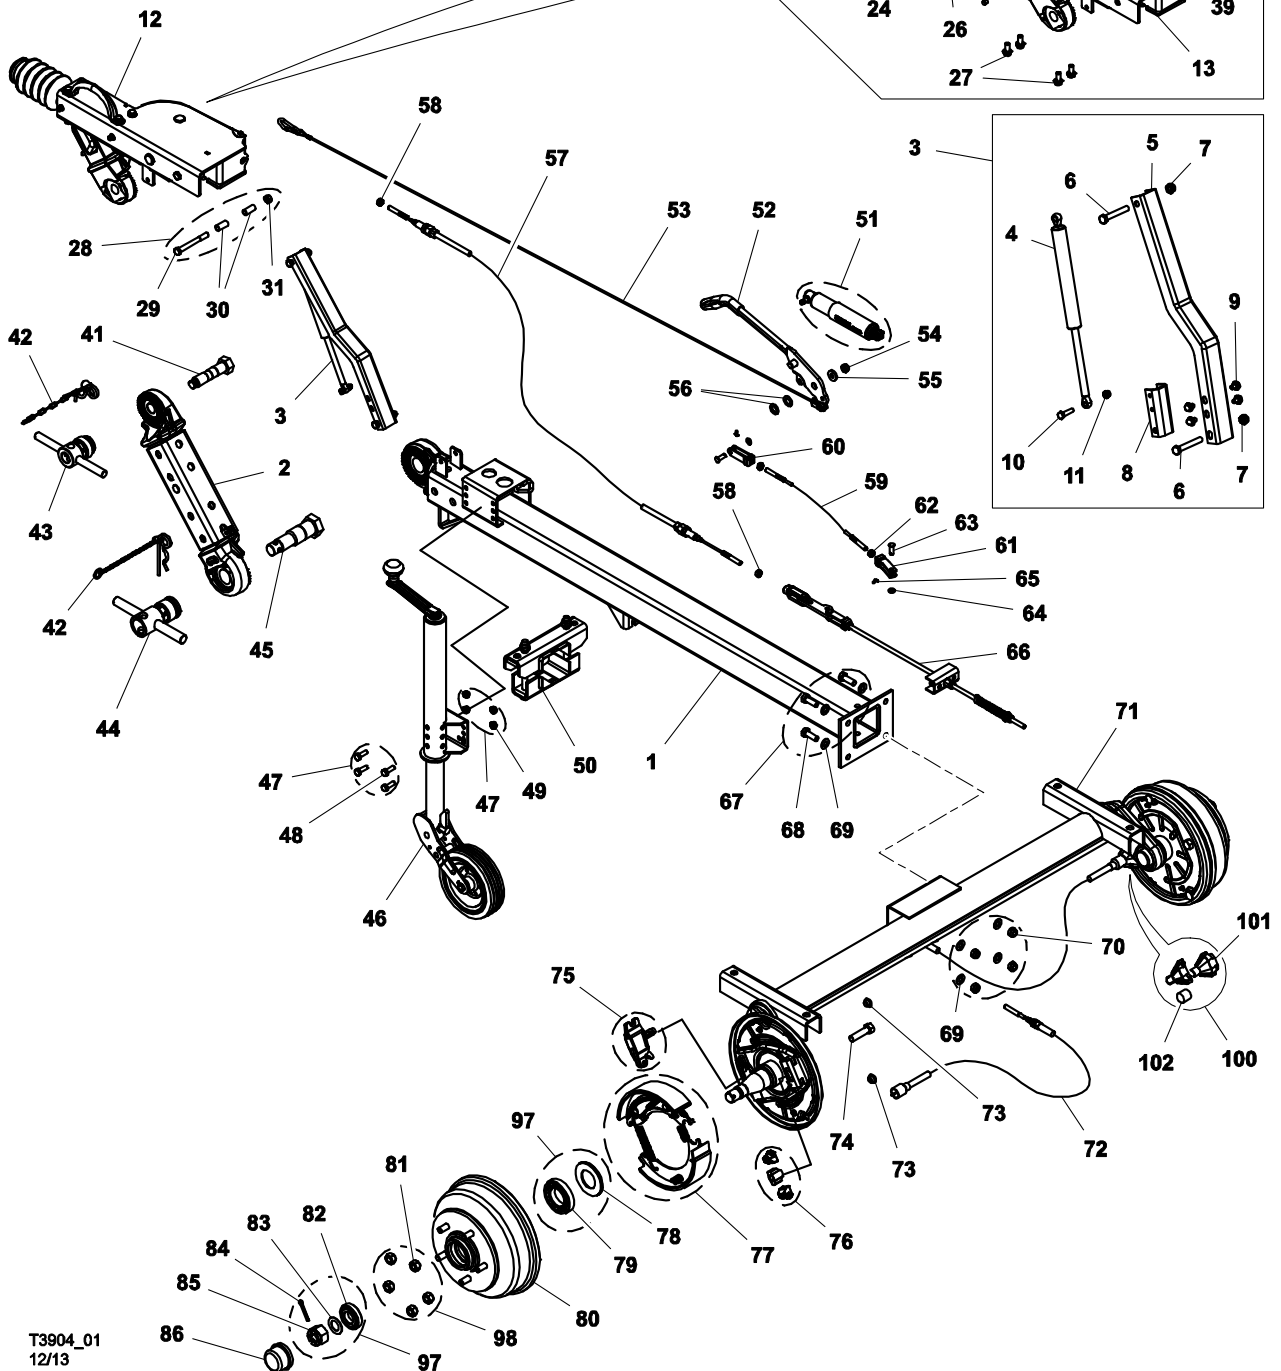
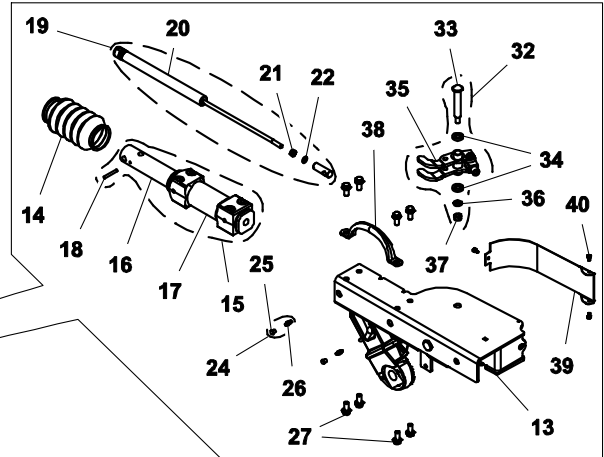
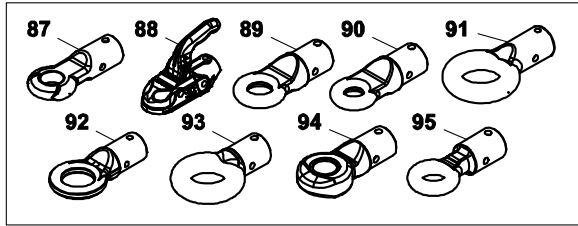


T3904_01
12/13

RUNNING GEAR (Variable Height Braked)

Item	Part Number	Description	Remarks	Serial Number	Qty
1	46651387	DRAWBAR			1
2	22250526	ARM ASSEMBLY			1
3	22251326	LINK ASSEMBLY	W/Ref. 4-11		1
4	23179310	DAMPER			1
5		ARM	NAP - Order Ref. 3		1
6		SCREW	NAP - Order Ref. 3		2
7	22392260	NUT	NAP - Order Ref. 3		2
8		U-PROFILE	NAP - Order Ref. 3		1
9		SCREW	NAP - Order Ref. 3		4
10		SCREW	NAP - Order Ref. 3		1
11		NUT	NAP - Order Ref. 3		1
12	46651393	COUPLING ASSEMBLY	W/Ref. 13-40		1
13	22250534	COUPLING			1
14	22051510	COVER			1
15	46651395	GUIDE ASSEMBLY	W/Ref. 16-18		1
16		SLIDER	NAP - Order Ref. 15		1
17	22250401	TUBE			1
18	22251599	PIN	NAP - Order Ref. 15		1
19	46651378	SHOCK ABSORBER ASSEMBLY	W/Ref. 20-22		1
20		SHOCK ABSORBER	NAP - Order Ref. 19		1
21	22051577	NUT	NAP - Order Ref. 19		1
22	22051585	RING	NAP - Order Ref. 19		1
23	22051544	JOINT			1
24	46551800	GREASE NIPPLE	W/Ref. 25-26 - (including cover)		2
25	22241095	NIPPLE, GREASE	NAP - Order Ref. 24		2
26	22391858	CAP, GREASE NIPPLE	NAP - Order Ref. 24		2
27	22241368	SCREW			8
28	46651399	KIT, CONNECTING	W/Ref. 29-31		1
29	22251409	BOLT	NAP - Order Ref. 28		1
30		TUBE	NAP - Order Ref. 28		2
31	22051494	NUT			1

RUNNING GEAR (CONT'D) (Variable Height Braked)

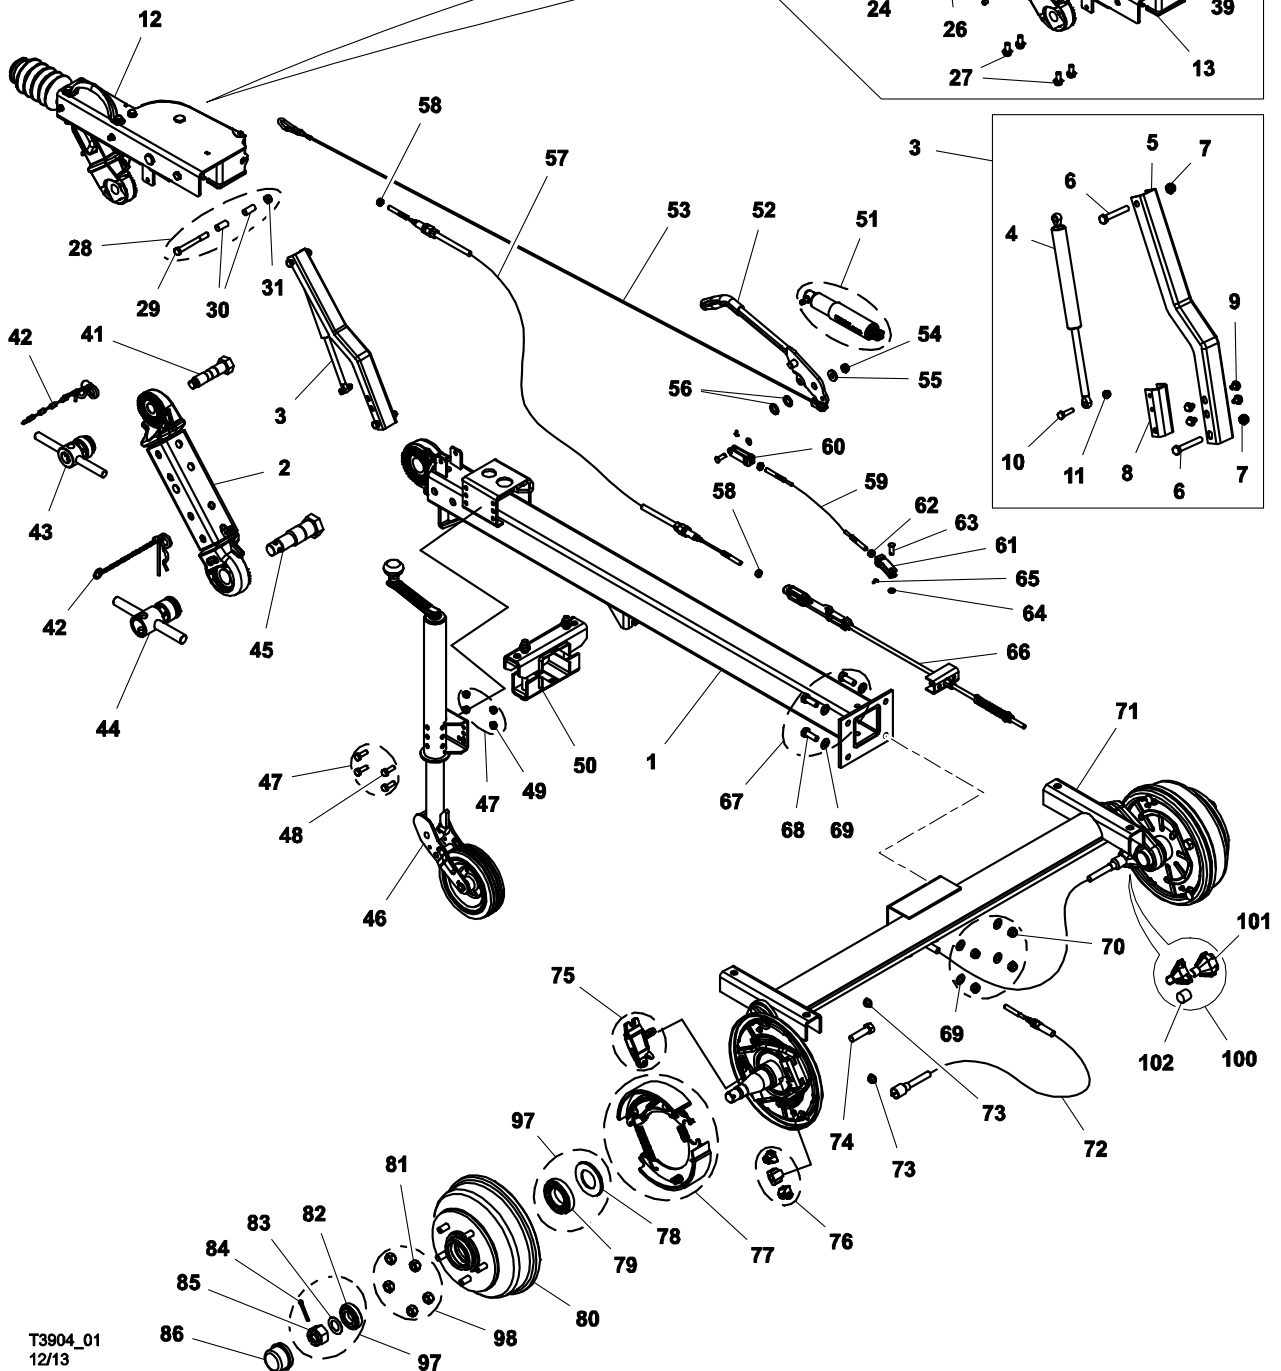
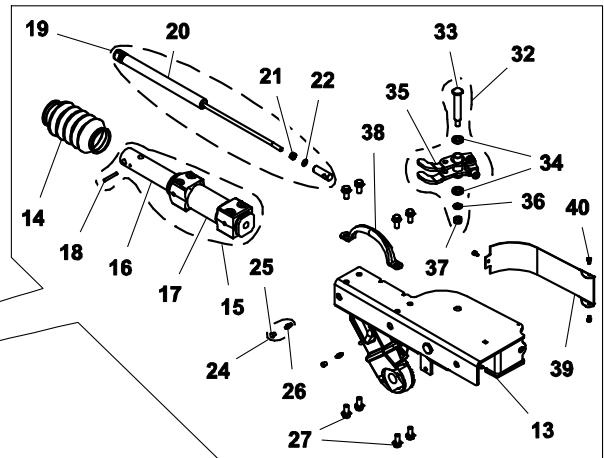
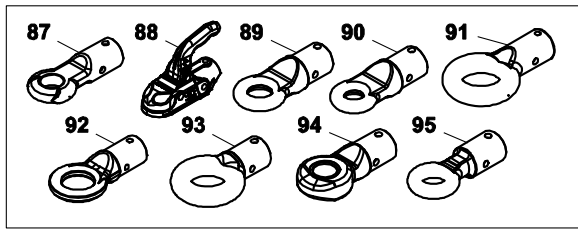


T3904_01
12/13

RUNNING GEAR (CONT'D)
(Variable Height Braked)

Item	Part Number	Description	Remarks	Serial Number	Qty
32	46651400	KIT, LEVER	W/Ref. 33-37		1
33		BOLT	NAP - Order Ref. 32		1
34	22051882	WASHER	NAP - Order Ref. 32		2
35	46670255	CONVERSION LEVER ASSEMBLY	NAP - Order Ref. 32		1
36	22104806	WASHER	NAP - Order Ref. 32		1
37	22051494	NUT			1
38	22250864	HANDLE			1
39	22250443	COVER			1
40	22241533	SCREW			3
41		BOLT	NAP - Order Ref. 103		1
42	22051734	CLIP ASSEMBLY			2
43		HANDLE	NAP - Order Ref. 103		1
44		HANDLE	NAP - Order Ref. 104		1
45		BOLT	NAP - Order Ref. 104		1
46	22182075	JOCKEY WHEEL ASSEMBLY			1
47	46551498	KIT, CONNECTING	W/Ref. 48-49		1
48		BOLT	NAP - Order Ref. 47		4
49	22392260	NUT	NAP - Order Ref. 47		4
50	22250567	CLAMP ASSEMBLY			1
51	46651401	SET, SPRING			1
52	46651397	LEVER ASSEMBLY			1
53	46551206	CABLE			1
54	22051494	NUT			1
55	22241525	WASHER			1
56	22241376	WASHER			2
57	46551207	CABLE	W/Ref. 58		1
58	22051577	NUT			2
59	46651464	CABLE			1
60		CLEVIS			1
61	22241483	CLEVIS			1
62	22051577	NUT			2

RUNNING GEAR (CONT'D) (Variable Height Braked)

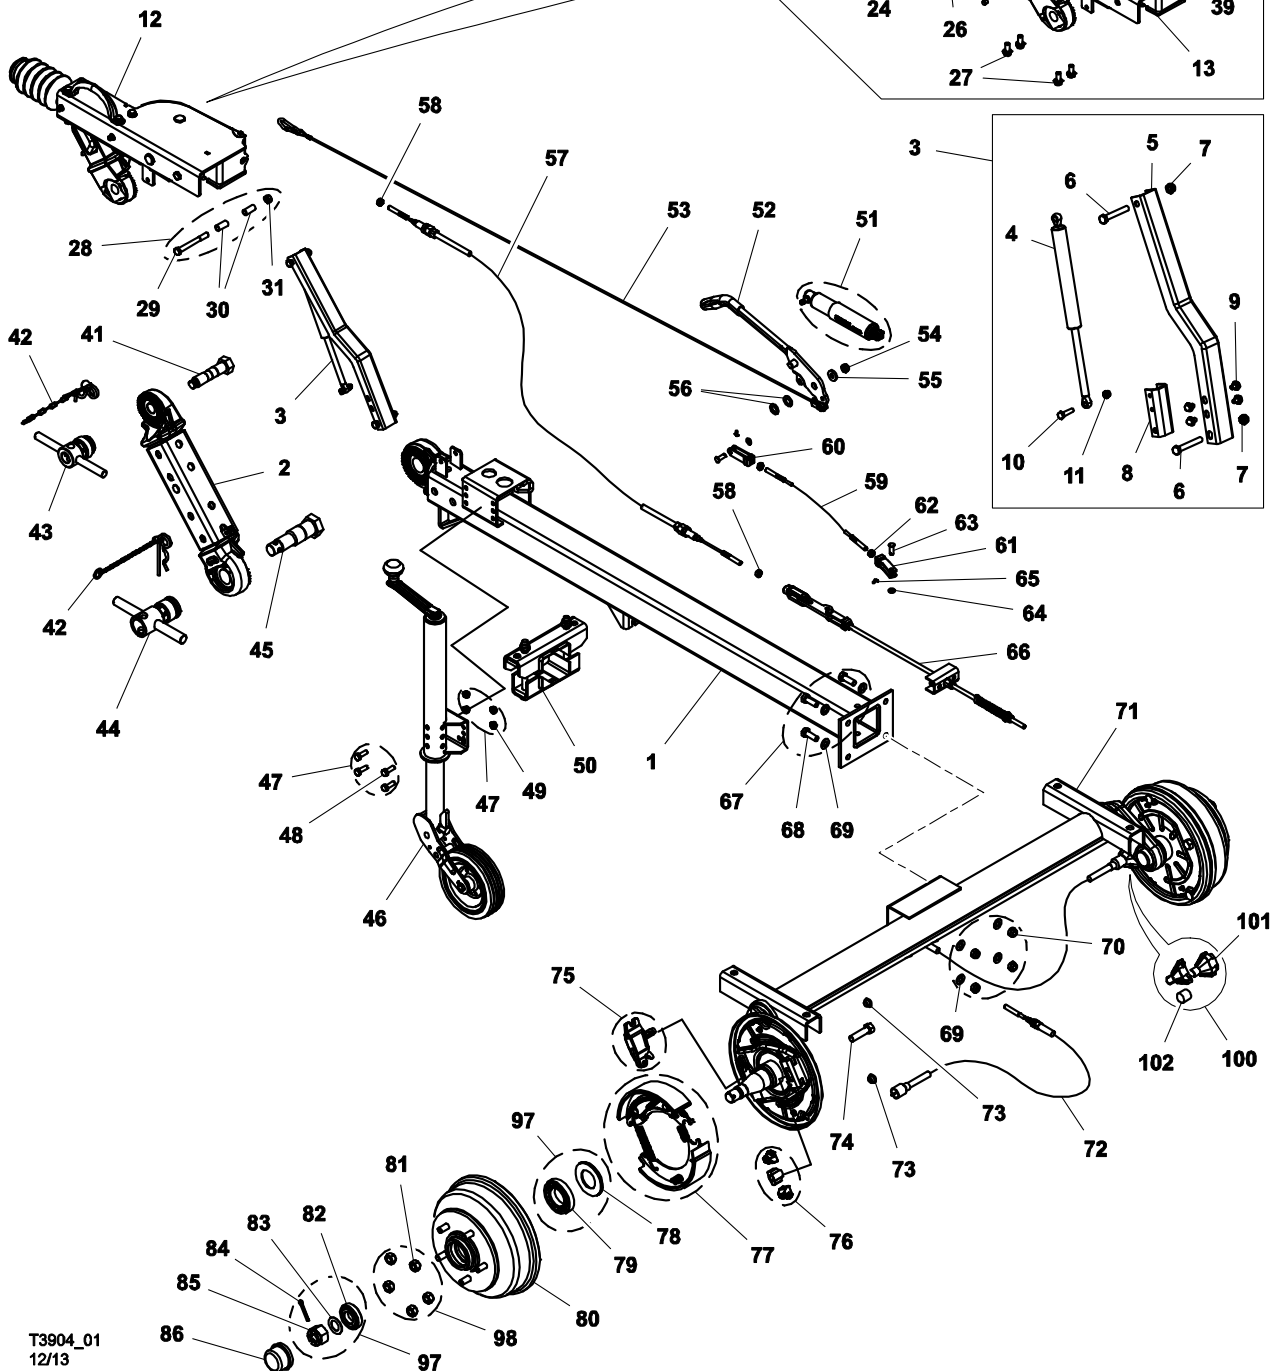
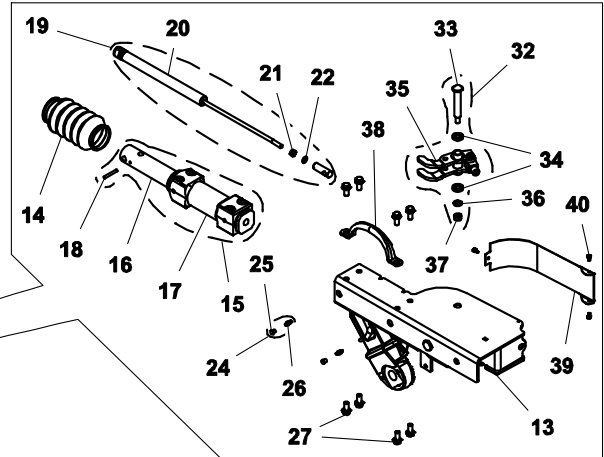
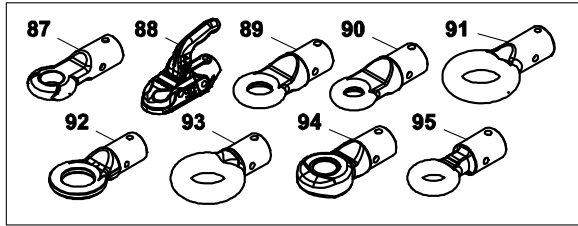


T3904_01
12/13

RUNNING GEAR (CONT'D) (Variable Height Braked)

Item	Part Number	Description	Remarks	Serial Number	Qty
63	22241160	PIN			2
64	22241491	WASHER			2
65	22357693	PIN			2
66	46651404	BRAKE ROD ASSEMBLY			1
67	46651380	KIT, CONNECTING	W/Ref. 68-70		1
68		BOLT	NAP - Order Ref. 67		4
69		WASHER	NAP - Order Ref. 67		8
70		LOCKNUT	NAP - Order Ref. 67		4
71	46556777	AXLE ASSEMBLY			1
72	22250633	CABLE			2
73		COVER	NAP - Order Ref. 99		4
74		SCREW	NAP - Order Ref. 99		2
75	46651381	KIT, EXPANDING KEY	NAP - Order Ref. 99		2
76		KIT, ADJUSTING WEDGE	NAP - Order Ref. 99		2
77	80027980	KIT, BRAKE SHOE			1
78		SPACER	NAP - Order Ref. 97		2
79		BEARING	NAP - Order Ref. 97		2
80	46651384	BRAKE HUB ASSEMBLY			2
81		NUT	NAP - Order Ref. 98		5
82		BEARING	NAP - Order Ref. 97		2
83		WASHER	NAP - Order Ref. 97		2
84		PIN	NAP - Order Ref. 97		2
85		LOCKNUT	NAP - Order Ref. 97		2
86	22392153	CAP, DUST			2
87	22177588	EYE, TOWING	(Ø 40 mm)		1
88	46569661	HITCH, BALL	(50 mm)		1
88	22207815	HITCH, BALL	(optional) - (non-standard) - (50 mm)		1
89	22177687	EYE, TOWING	(Ø 50 mm)		1
90	46569700	EYE, TOWING	(non-standard)(UK) - (non-standard)(UK) - (Ø 40 mm)		1
91	22177620	EYE, TOWING	(Ø 76 mm)		1
92	22097823	EYE, TOWING	(Ø 68 mm)		1



RUNNING GEAR (CONT'D) **(Variable Height Braked)**

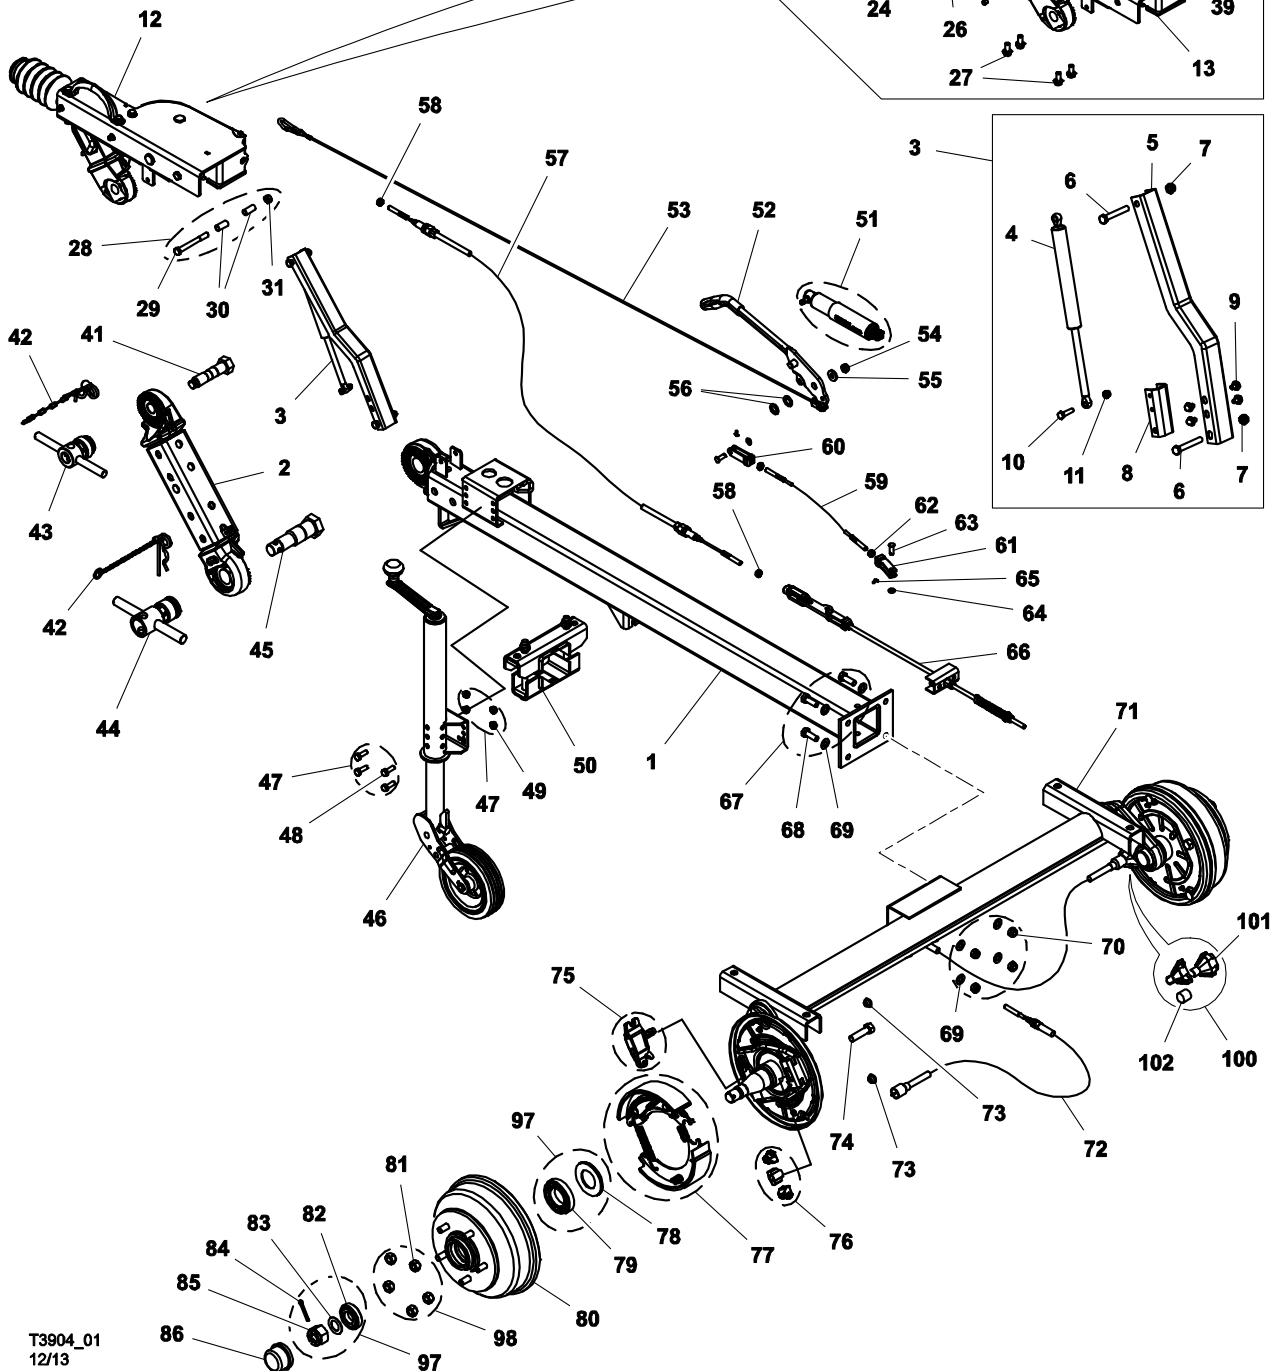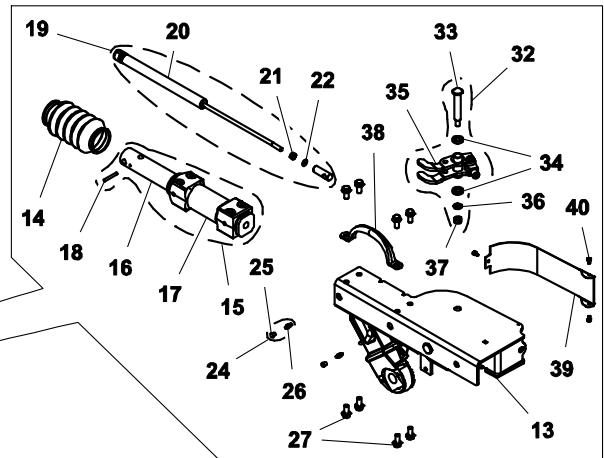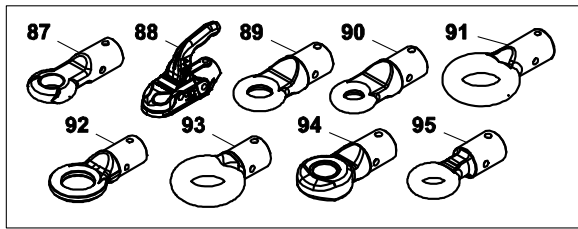

T3904_01
 12/13

[illegible][illegible]


RUNNING GEAR (Variable Height Braked - KHD)

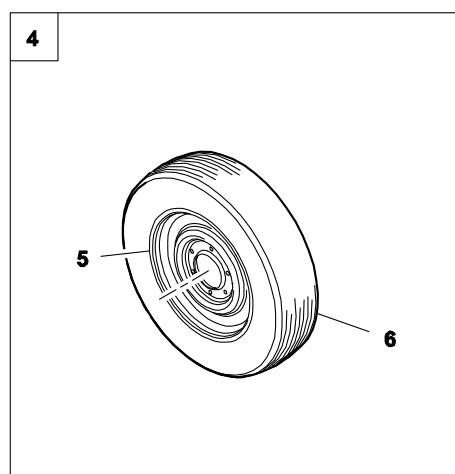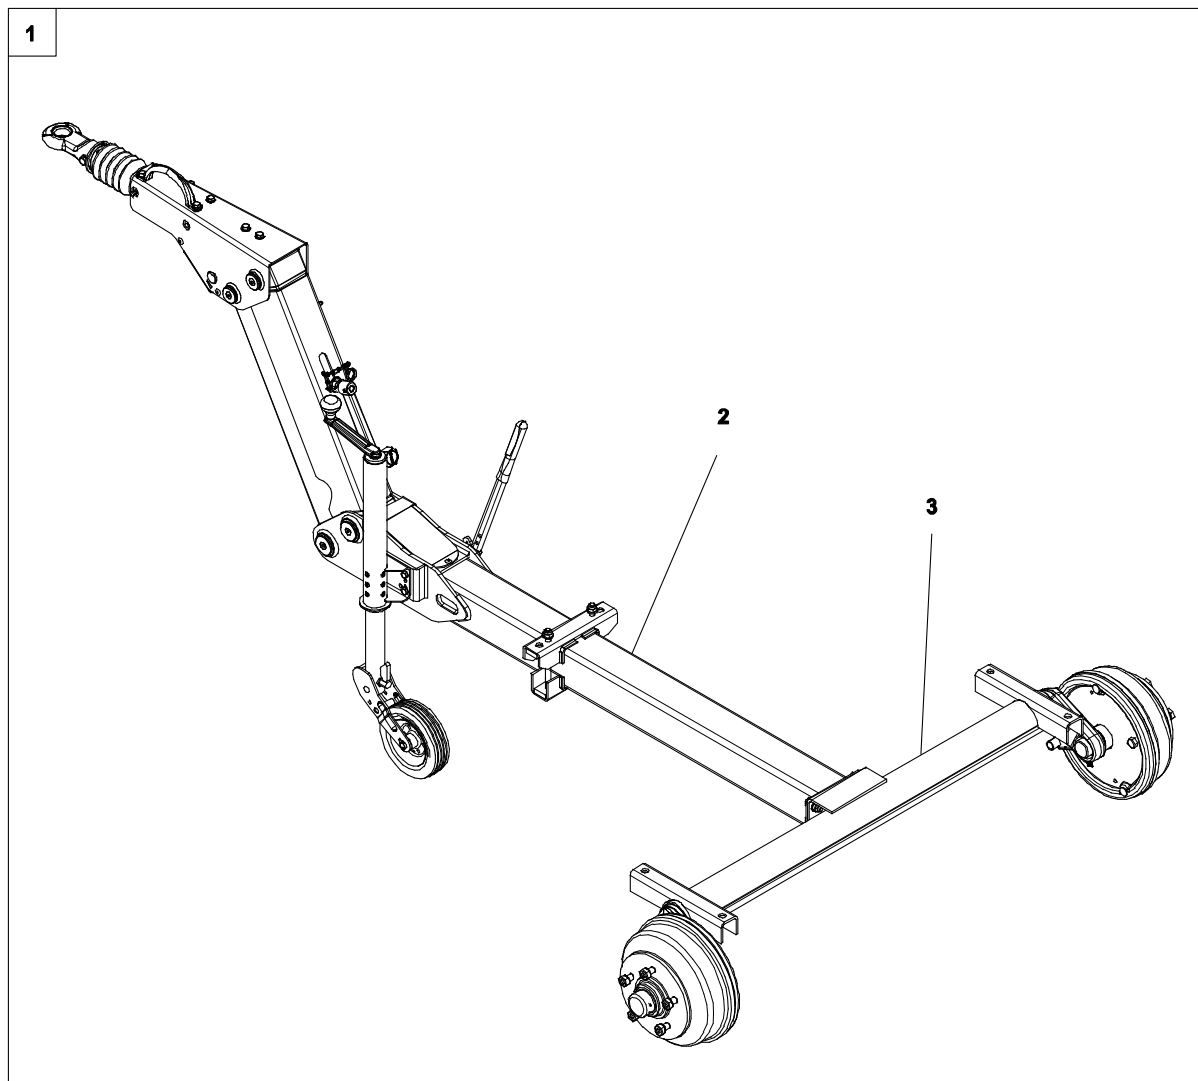

T4444_00
02/13

[illegible][illegible]


RUNNING GEAR (Variable Height Braked - KHD)

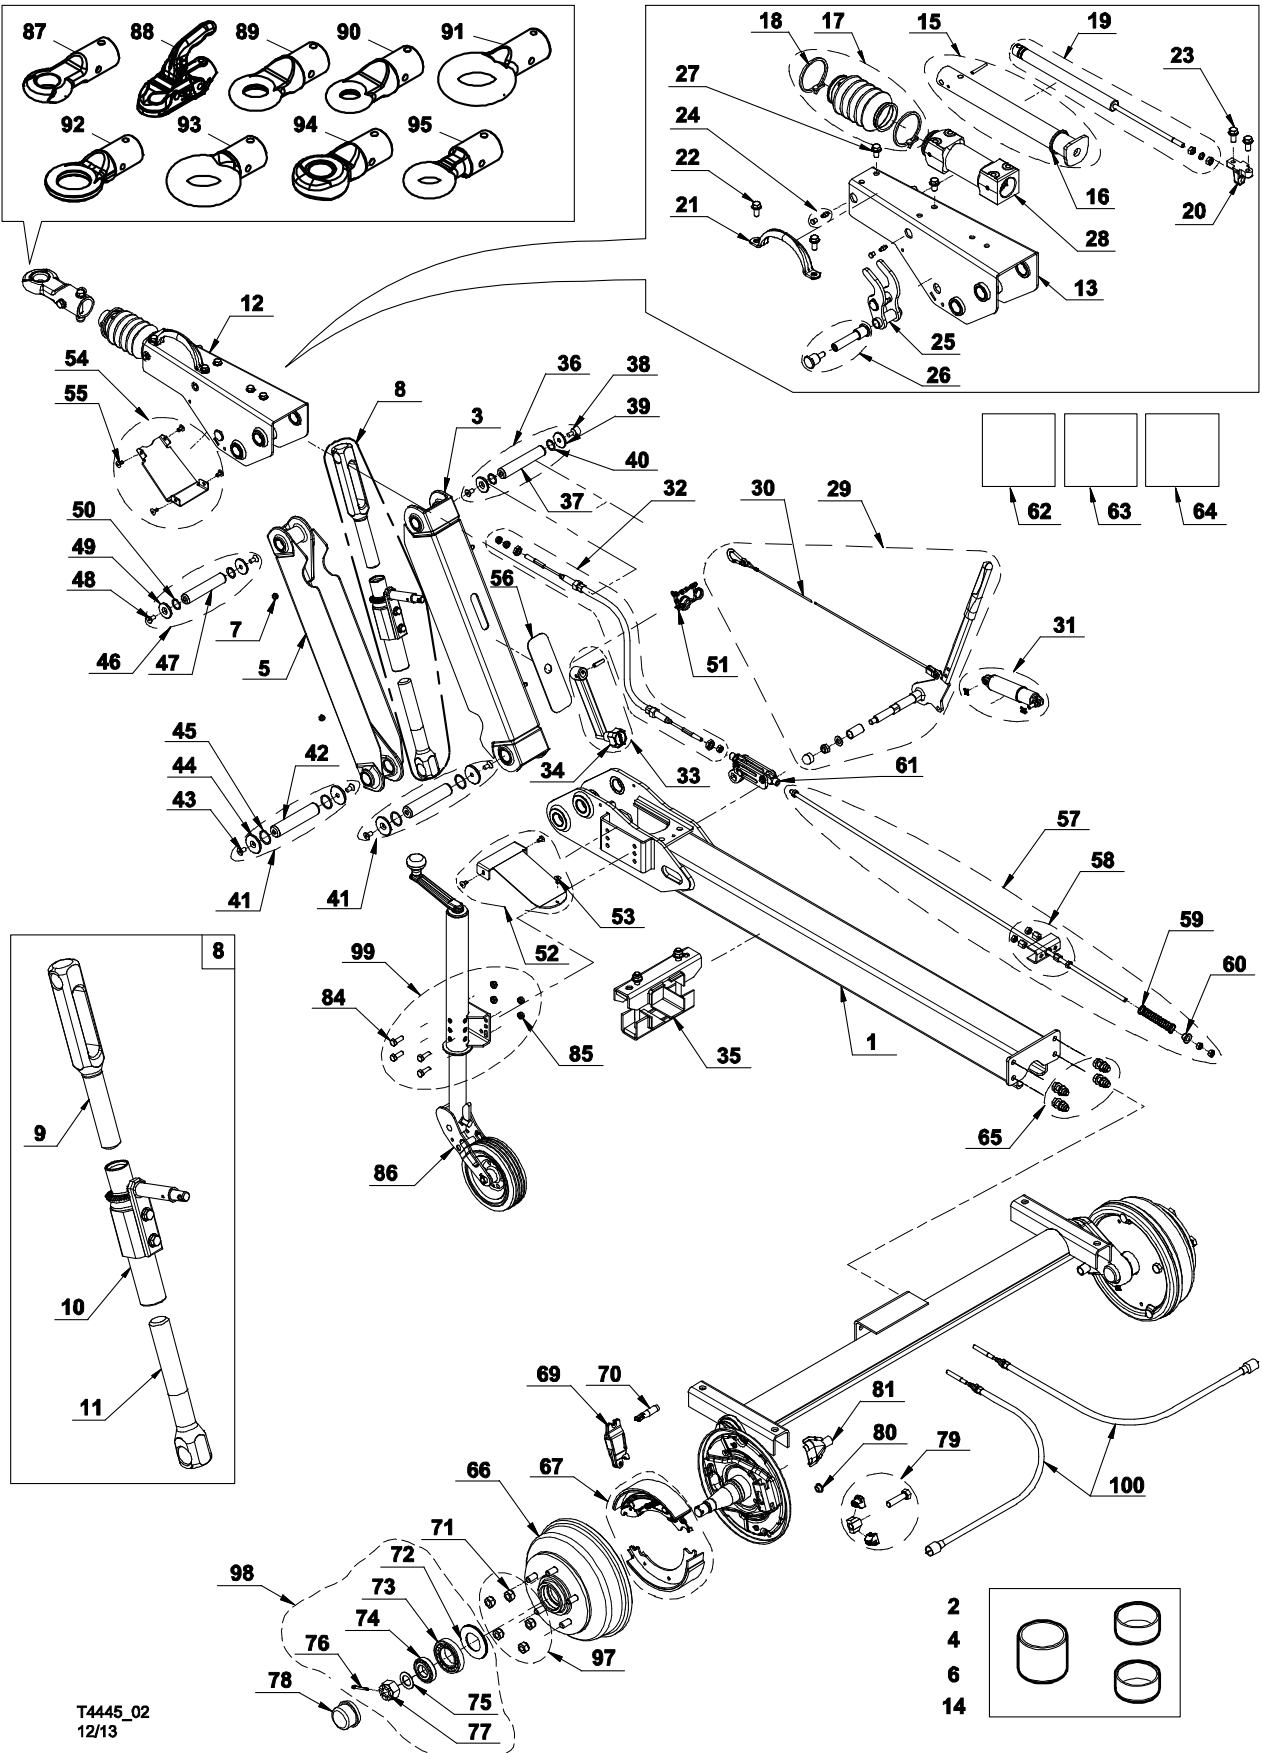

RUNNING GEAR
(Variable Height Braked - KHD)

Item	Part Number	Description	Remarks	Serial Number	Qty
1	46641714	DRAWBAR, COMPLETE	W/Ref. 2		1
2	46641715	SET, BUSH			1
3	46641716	ARM ASSEMBLY UPPER	W/Ref. 4		1
4	46641754	SET, BUSH			1
5	46641753	ARM ASSEMBLY LOWER	W/Ref. 6-7		1
6	46641717	SET, BUSH			1
7		COVER	NAP - Order Ref. 5		2
8	46641718	CENTERING MECHANISM ASSEMBLY	W/Ref. 9-11		1
9		SCREW, UPPER	NAP - Order Ref. 8		1
10		NUT, ADJUSTMENT	NAP - Order Ref. 8		1
11		SCREW, LOWER	NAP - Order Ref. 8		1
12	46641752	HOUSING ASSEMBLY	W/Ref. 13-28		1
13	46641751	HOUSING			1
14	46641750	SET, BUSH			1
15	46641749	ROD, PISTON			1
16	46641748	RING, STOP			1
17	46641747	KIT, COVER	W/Ref. 18		1
18		TIE, CABLE	NAP - Order Ref. 17		2
19	46641746	ABSORBER, SHOCK			1
20	46641745	BRACKET			1
21	22250864	HANDLE			1
22	22241368	SCREW			2
23	22241368	SCREW			2
24	46551409	NIPPLE, GREASE			2
25	46551417	LEVER ASSEMBLY			1
26	46641744	PIVOT ASSEMBLY			1
27	22241350	BOLT			6
28	22250401	TUBE			1
29	46641728	HANDBRAKE LEVER ASSEMBLY	W/Ref. 30		1
30		CABLE	NAP - Order Ref. 29		1
31	46641727	SPRING ASSEMBLY			1


RUNNING GEAR (CONT'D) (Variable Height Braked - KHD)

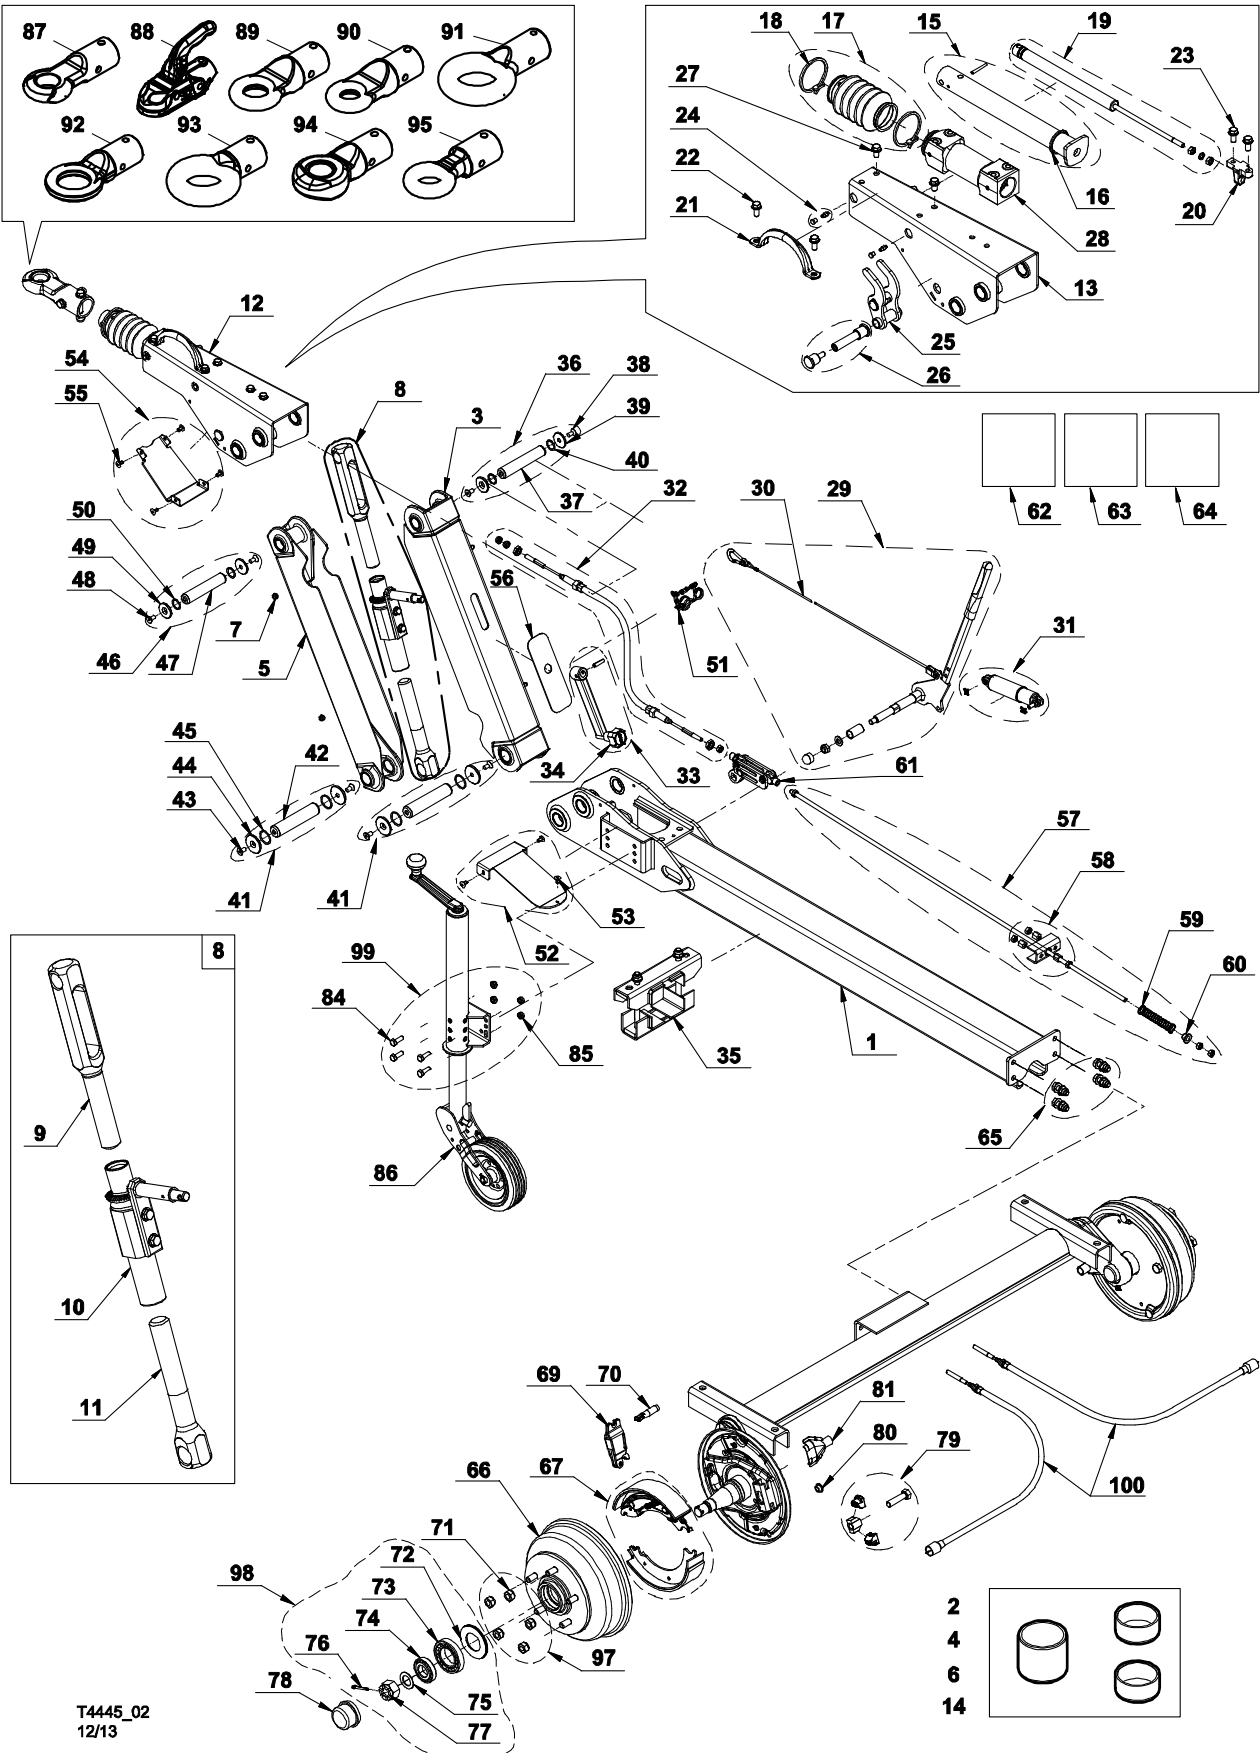

RUNNING GEAR (CONT'D)
(Variable Height Braked - KHD)

Item	Part Number	Description	Remarks	Serial Number	Qty
32	46551416	BRAKE CABLE ASSEMBLY			1
33	46551411	HANDLE ASSEMBLY	W/Ref. 34		1
34		KNOB	NAP - Order Ref. 33		1
35	46641726	JIG, CLAMPING			1
36	46641724	PIVOT ASSEMBLY	W/Ref. 37-40		1
37		BOLT	NAP - Order Ref. 36		1
38		SCREW	NAP - Order Ref. 36		2
39		WASHER	NAP - Order Ref. 36		2
40		RING, SEAL	NAP - Order Ref. 36		2
41	46641725	PIVOT ASSEMBLY	W/Ref. 42-45		2
42		BOLT	NAP - Order Ref. 41		1
43		SCREW	NAP - Order Ref. 41		2
44		WASHER	NAP - Order Ref. 41		2
45		SEAL	NAP - Order Ref. 41		2
46	46641723	PIVOT ASSEMBLY	W/Ref. 47-50		1
47		BOLT	NAP - Order Ref. 46		1
48		SCREW	NAP - Order Ref. 46		2
49		WASHER	NAP - Order Ref. 46		2
50		RING, SEAL	NAP - Order Ref. 46		2
51	46551422	CLIP, SPRING			1
52	46641722	SHIELD ASSEMBLY	W/Ref. 53		1
53		RIVET	NAP - Order Ref. 52		3
54	46641721	SHIELD ASSEMBLY	W/Ref. 55		1
55		RIVET	NAP - Order Ref. 54		4
56	46641720	SHIELD			1
57	46641719	ROD ASSEMBLY	W/Ref. 58-60		1
58		COUPLING ASSEMBLY	W/Ref. 59-60 - NAP - Order Ref. 57		1
59		SPRING	NAP - Order Ref. 57		1
60		BUSH	NAP - Order Ref. 57		1
61	46551415	LEVER ASSEMBLY			1
62	46551406	DECAL	(English/German)		1


RUNNING GEAR (CONT'D) (Variable Height Braked - KHD)

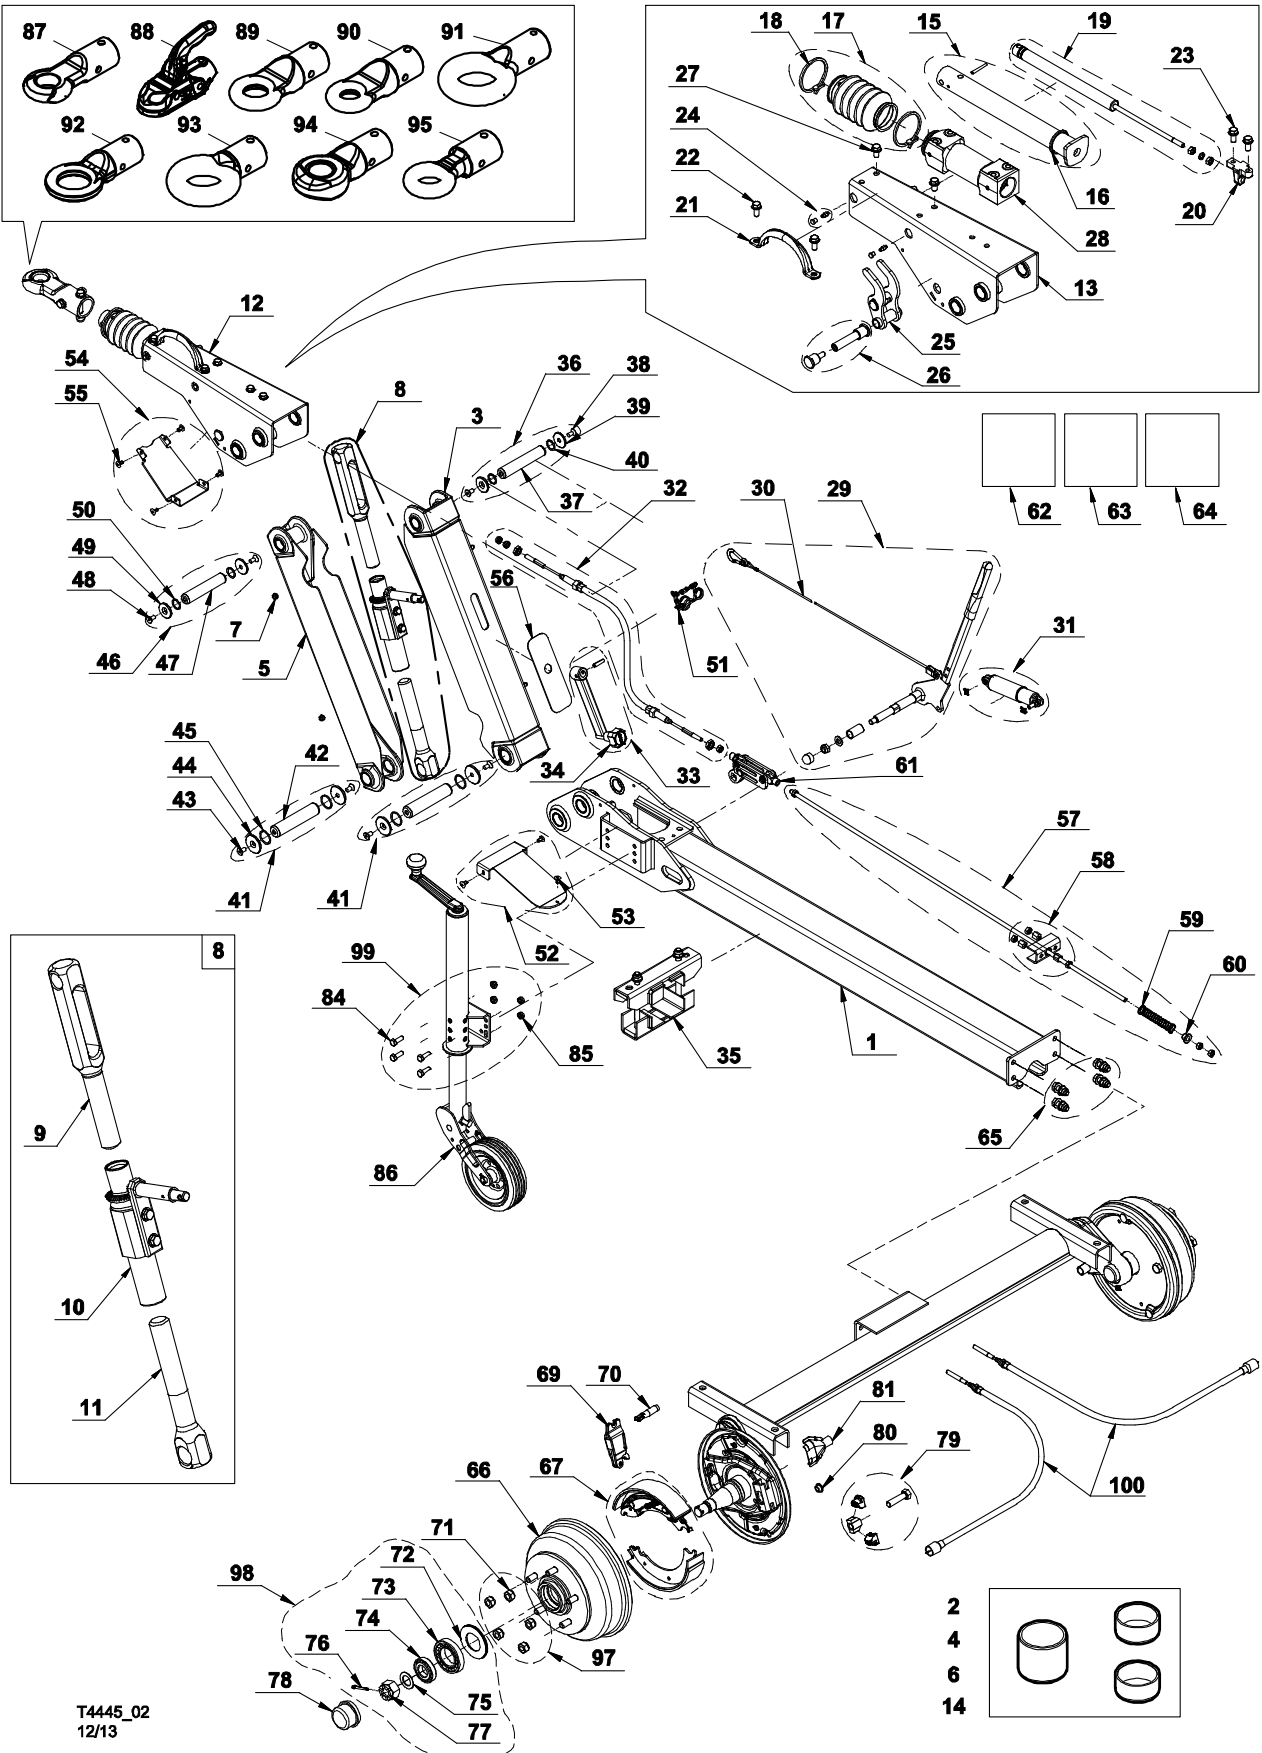

RUNNING GEAR (CONT'D)
(Variable Height Braked - KHD)


Item	Part Number	Description	Remarks	Serial Number	Qty
63	46551407	DECAL	(English/French)		1
64	46551405	DECAL	(English/German)		1
65	46551493	KIT, CONNECTING			1
66	22250385	HUB ASSEMBLY	(order two per machine)		2
67	80027980	KIT, BRAKE SHOE	(order one per machine)		1
68	46551496	KIT, BRAKE OVERHAUL	W/Ref. 69,70,79,80 (order one per machine)		1
69		EXPANDER	NAP - Order Ref. 68		1
70		CONNECTOR	NAP - Order Ref. 68		1
71		NUT	NAP - Order Ref. 97		5
72		SPACER	NAP - Order Ref. 98		1
73		BEARING	NAP - Order Ref. 98		1
74		BEARING	NAP - Order Ref. 98		1
75		WASHER	NAP - Order Ref. 98		1
76		PIN	NAP - Order Ref. 98		1
77		LOCKNUT	NAP - Order Ref. 98		1
78	22392153	CAP, DUST			1
79		KIT, ADJUSTING	NAP - Order Ref. 68		1
80		COVER	NAP - Order Ref. 68		2
81	46551497	KIT, COVER	W/Ref. 82-83		2
82		COVER	NAP - Order Ref. 81		2
83		CAP	NAP - Order Ref. 81		1
84		BOLT	NAP - Order Ref. 99		4
85	22392260	NUT	NAP - Order Ref. 99		4
86	22182075	JOCKEY WHEEL ASSEMBLY			1
87	22177588	EYE, TOWING	(Ø 40 mm)		1
88	46569661	HITCH, BALL	(50 mm)		1
88	22207815	HITCH, BALL	(optional) - (non-standard) - (50 mm)		1
89	22177687	EYE, TOWING	(Ø 50 mm)		1
90	46569700	EYE, TOWING	(non-standard)(UK) - (non-standard)(UK) - (Ø 40 mm)		1
91	22177620	EYE, TOWING	(Ø 76 mm)		1
92	22207823	EYE, TOWING	(Ø 68 mm)		1

RUNNING GEAR (CONT'D) (Variable Height Braked - KHD)

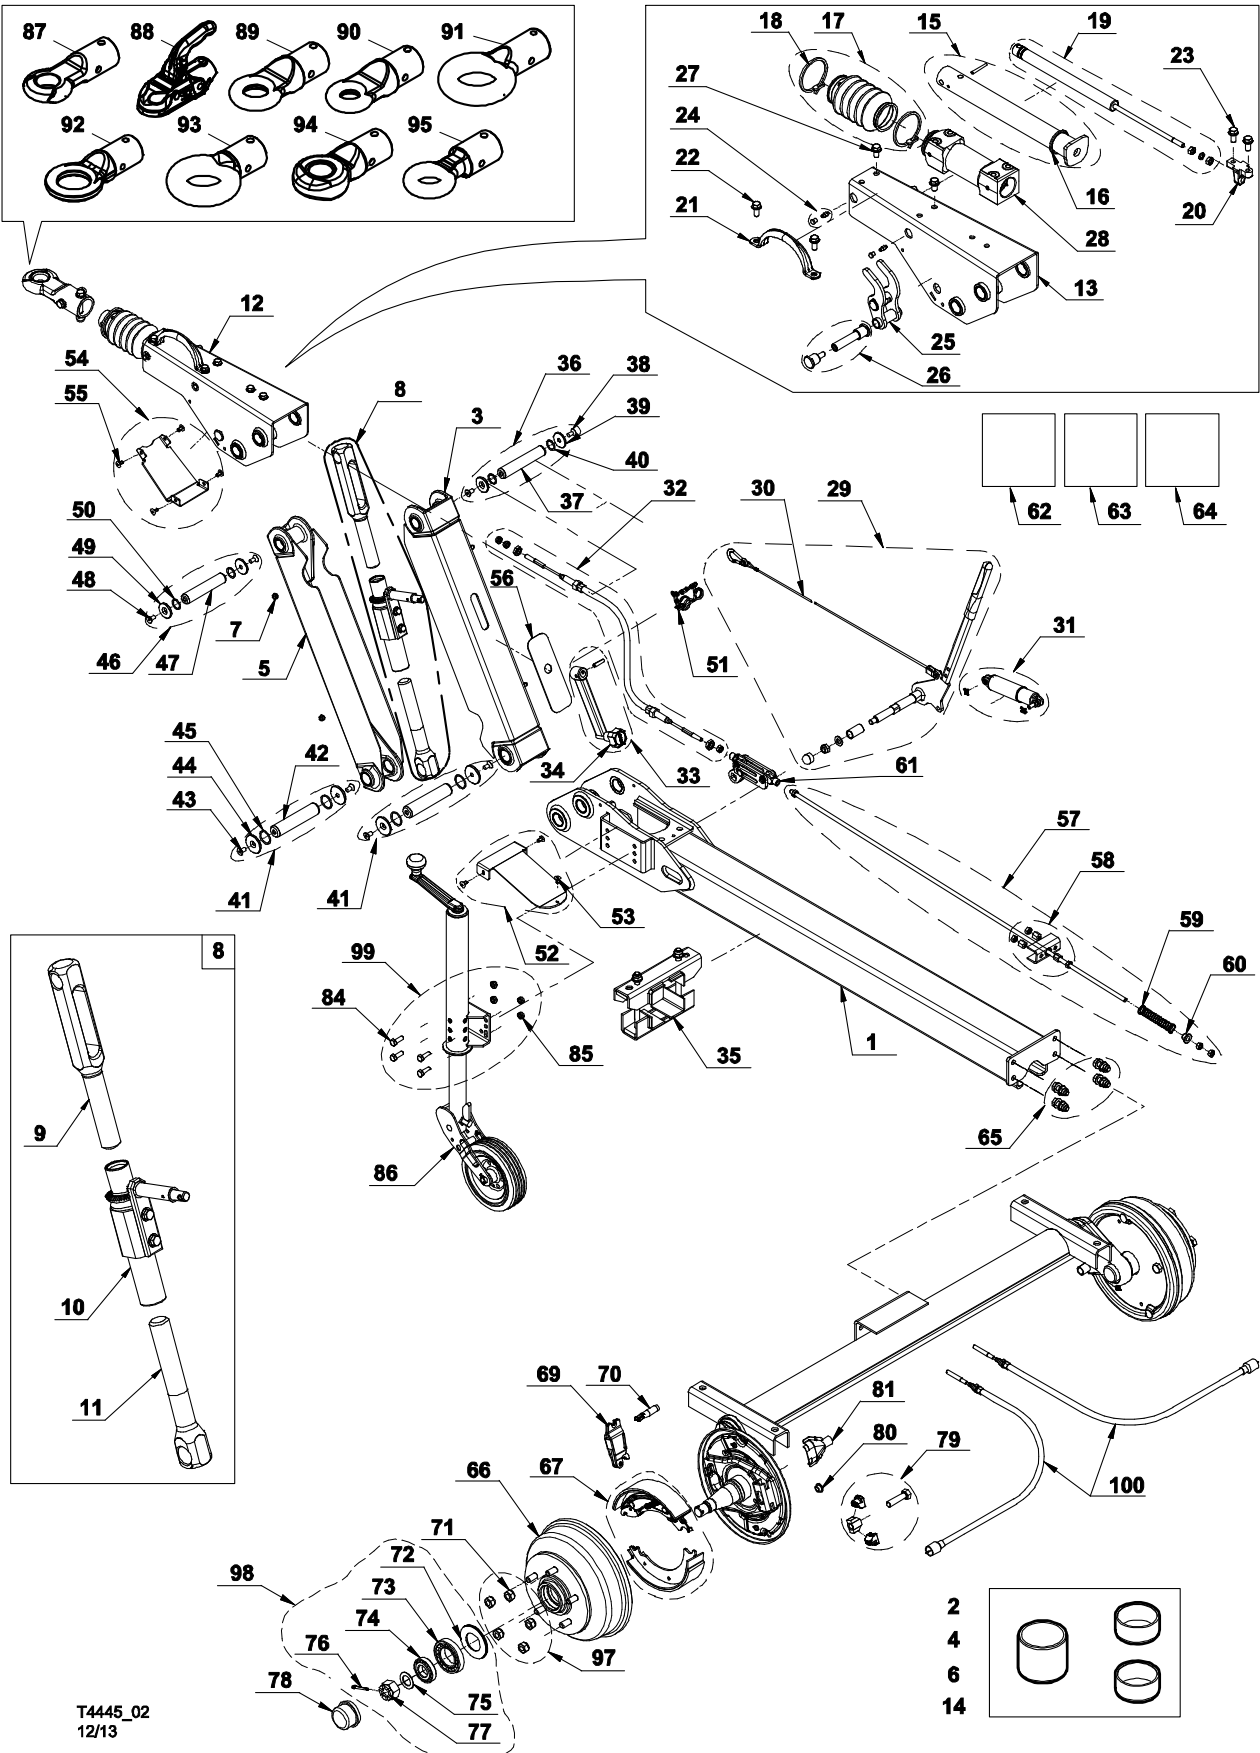

[illegible][illegible]

FRAME

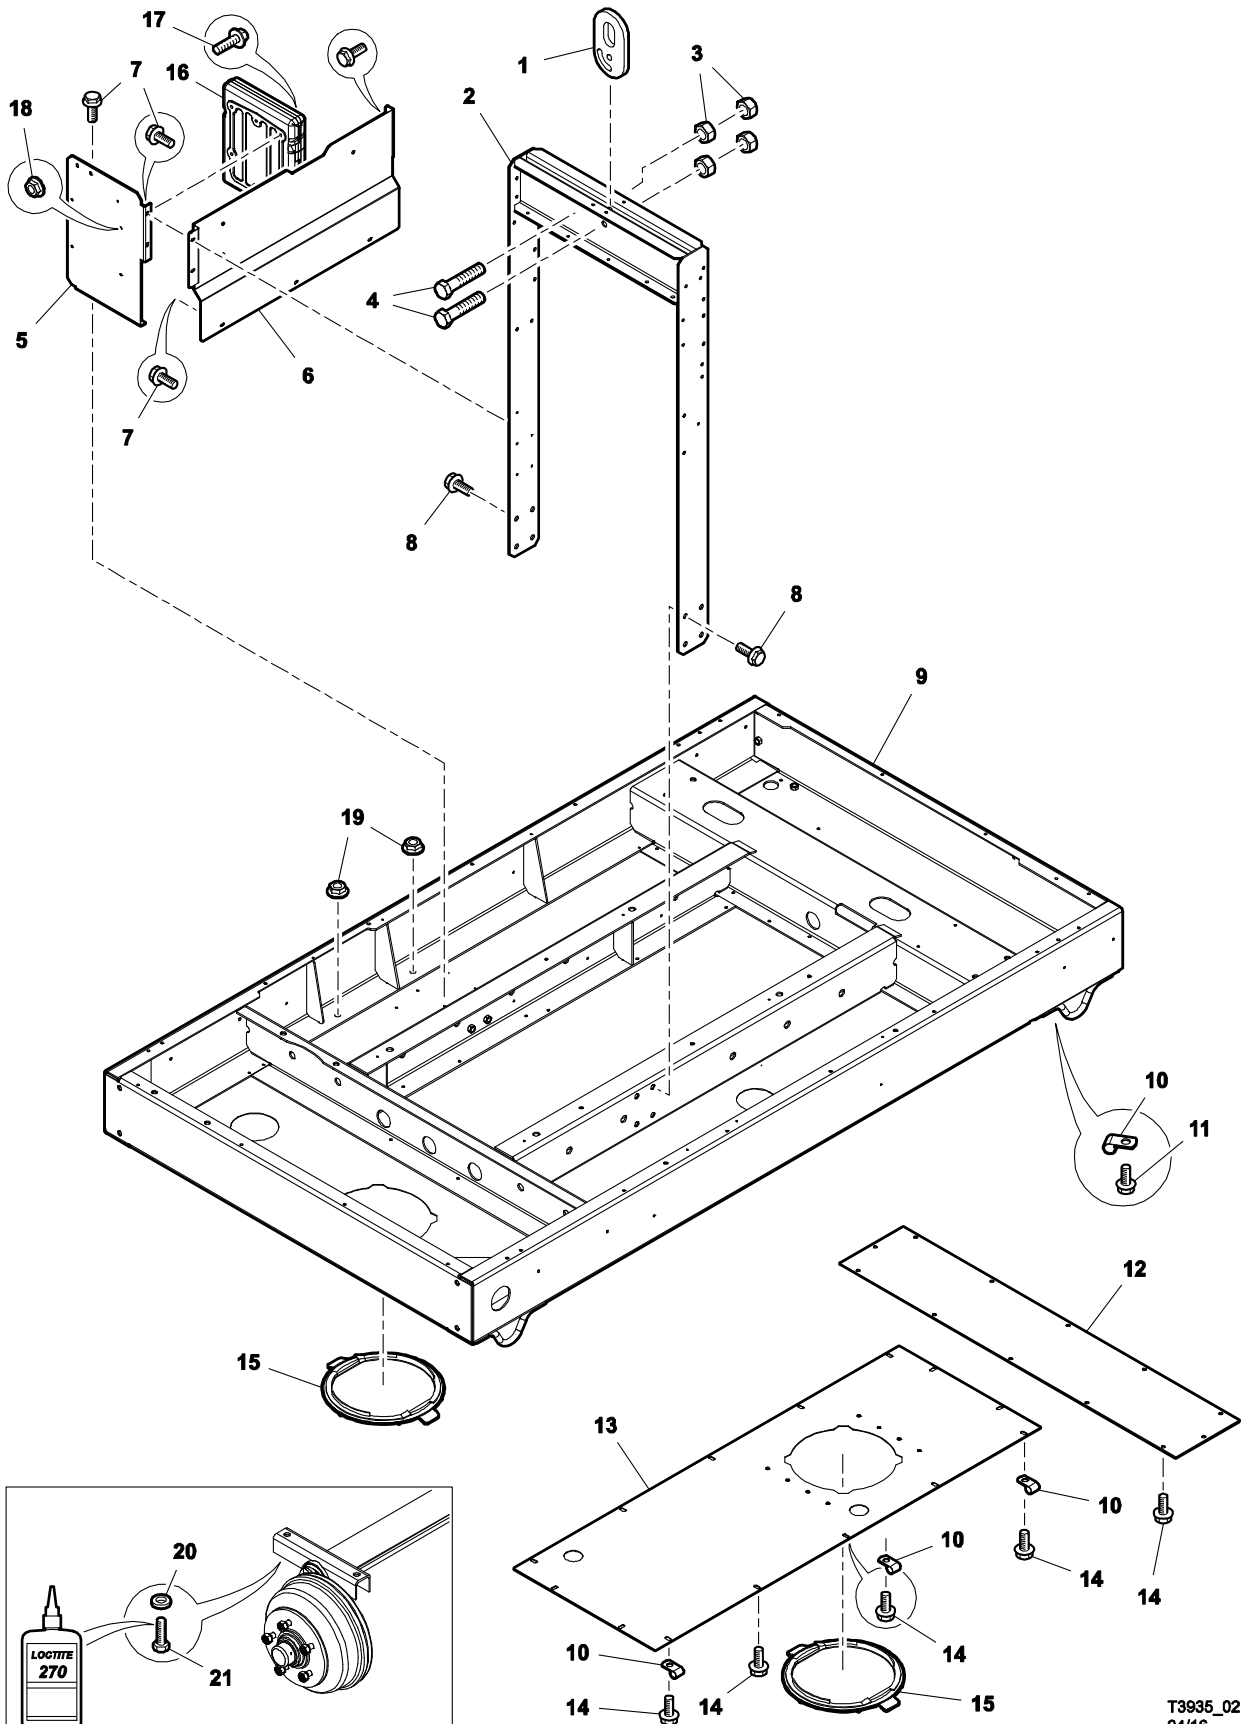


T3935_02
04/16

FRAME

[illegible]

ENCLOSURE

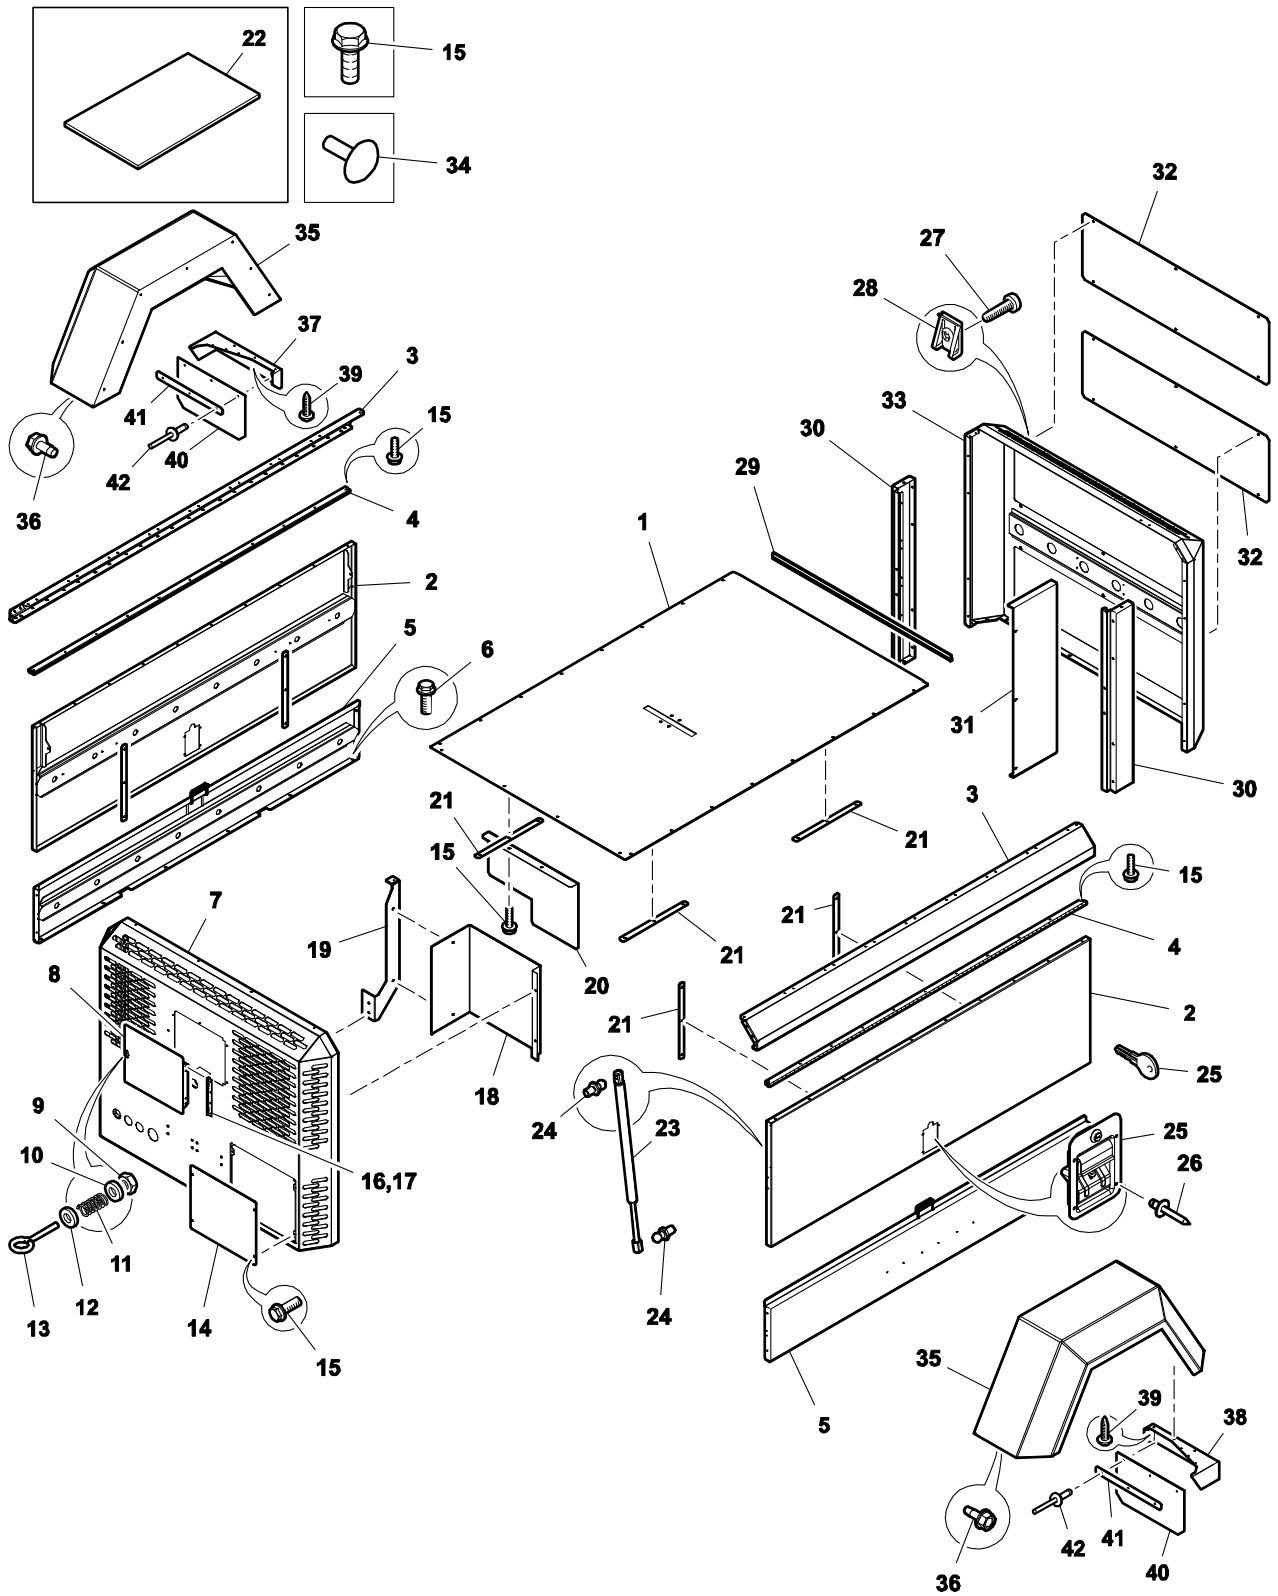


T3936_02
03/16

ENCLOSURE

Item	Part Number	Description	Remarks	Serial Number	Qty
1	46623715	PANEL, ROOF ASSEMBLY			1
2	54629993	PANEL			2
3	46663639	RAIL			2
4	54639174	HINGE, SIDE DOOR			2
5	54694823	PANEL			2
6	35279025	SCREW			26
7	46634245	PANEL			1
8	54743265	DOOR, CONTROL PANEL			1
9	92304542	NUT			1
10	95935029	WASHER			1
11	35607837	SPRING			1
12	36772028	WASHER			1
13	46629499	PIN			1
14	46636744	PANEL			1
15	36797652	SCREW			109
16	22107478	HINGE, SPRING CONTROL PANEL			1
17	92271923	RIVET			4
18	54720834	BAFFLE			1
19	54737622	BRACKET, FRONT INTAKE			1
20	46621742	PANEL			1
21	54718184	STRAP, FOAM RETAINING			8
22	92949742	FOAM FIELD KIT (with adhesive)	1,9 m x 1,5 m x 25 mm (7' x 5' x 1")		1
22	92949759	FOAM FIELD KIT (with adhesive)	0,95 m x 1,5 m x 25 mm (3' x 5' x 1")		1
22	92949767	FOAM FIELD KIT (with adhesive)	1,9 m x 1,5 m x 50 mm (7' x 5' x 2")		1
22	92949775	FOAM FIELD KIT (with adhesive)	0,95 m x 1,5 m x 50 mm (3' x 5' x 2")		1
22	46592579	FOAM FIELD KIT (no adhesive)	1,9 m x 1,5 m x 50 mm (7' x 5' x 2")		1
22	46592580	FOAM FIELD KIT (no adhesive)	0,95 m x 1,5 m x 50 mm (3' x 5' x 2")		1
23	35600261	SPRING			4
24	35337328	STUD, BALL			8
25	36793602	LATCH			2
25	35612746	KEY, REPLACEMENT	(optional)		2

ENCLOSURE (CONT'D)

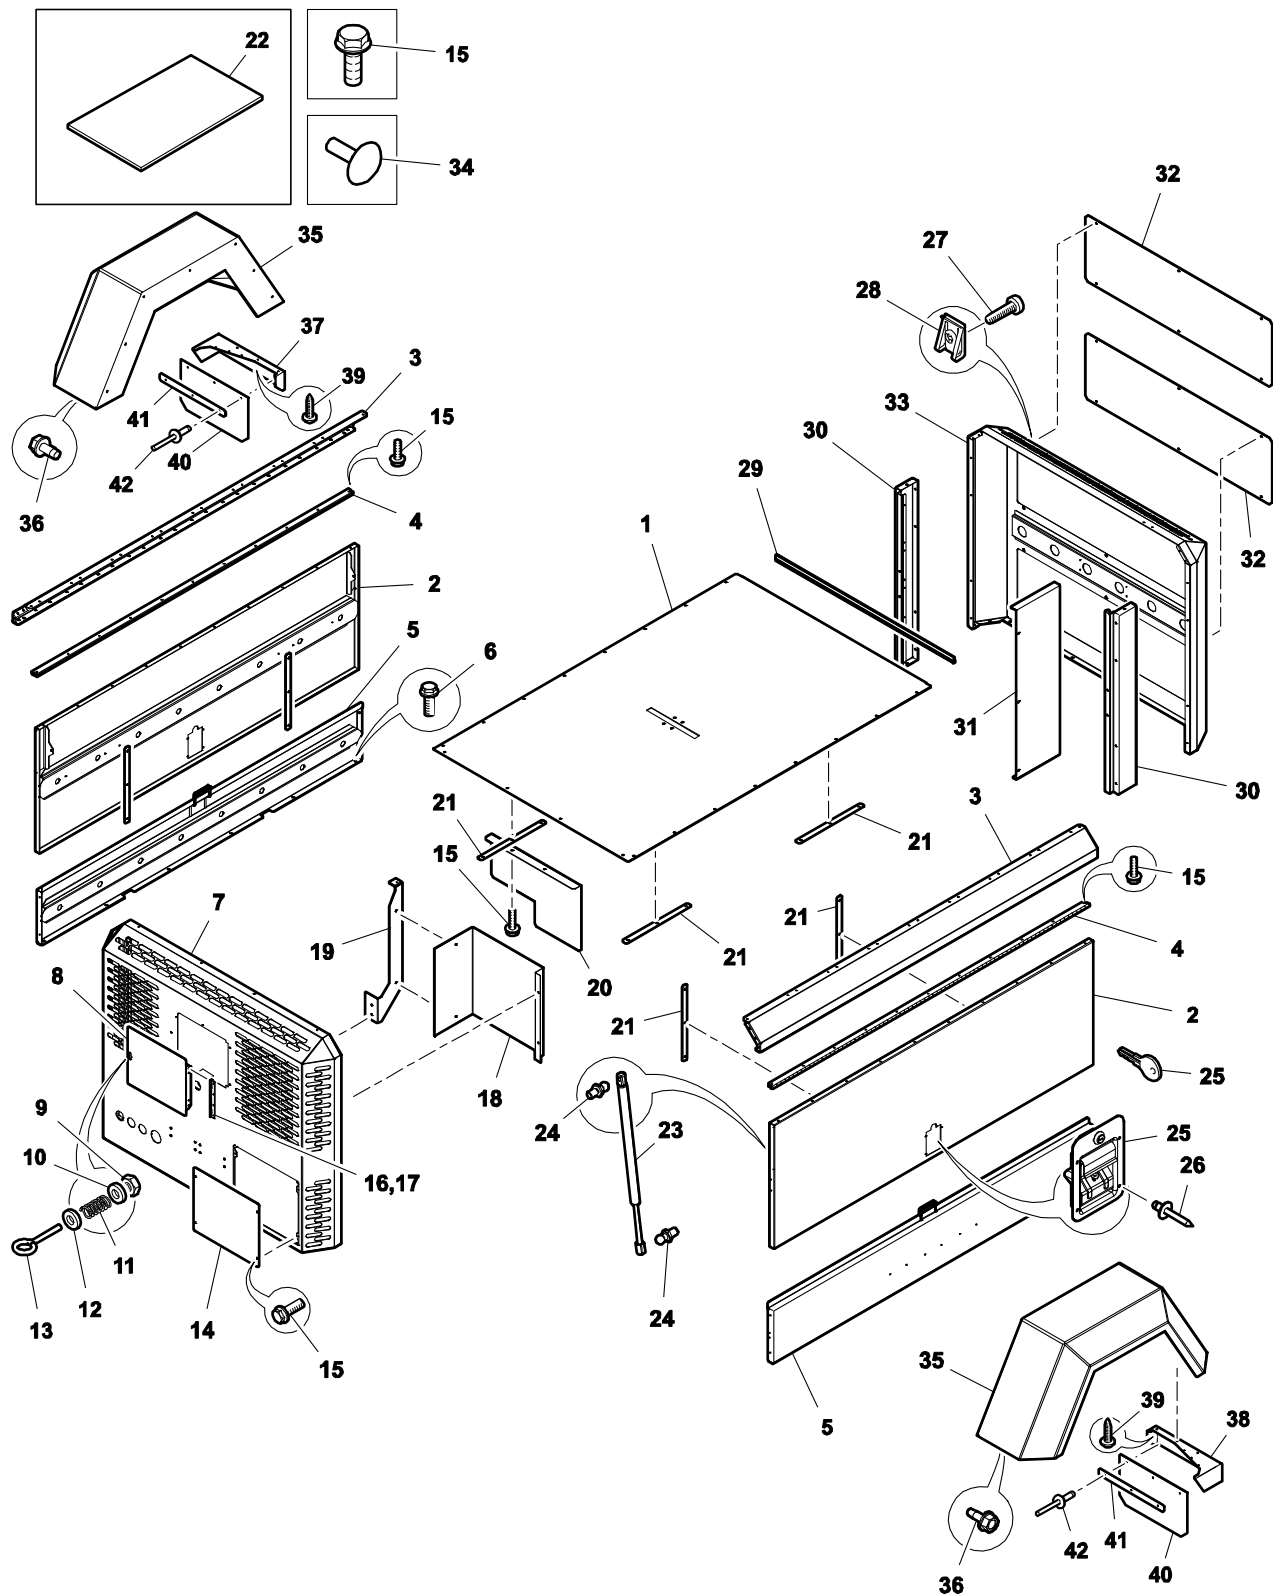


T3936_02
03/16



ENCLOSURE (CONT'D)

[illegible]


DECALS AND DOCUMENTATION

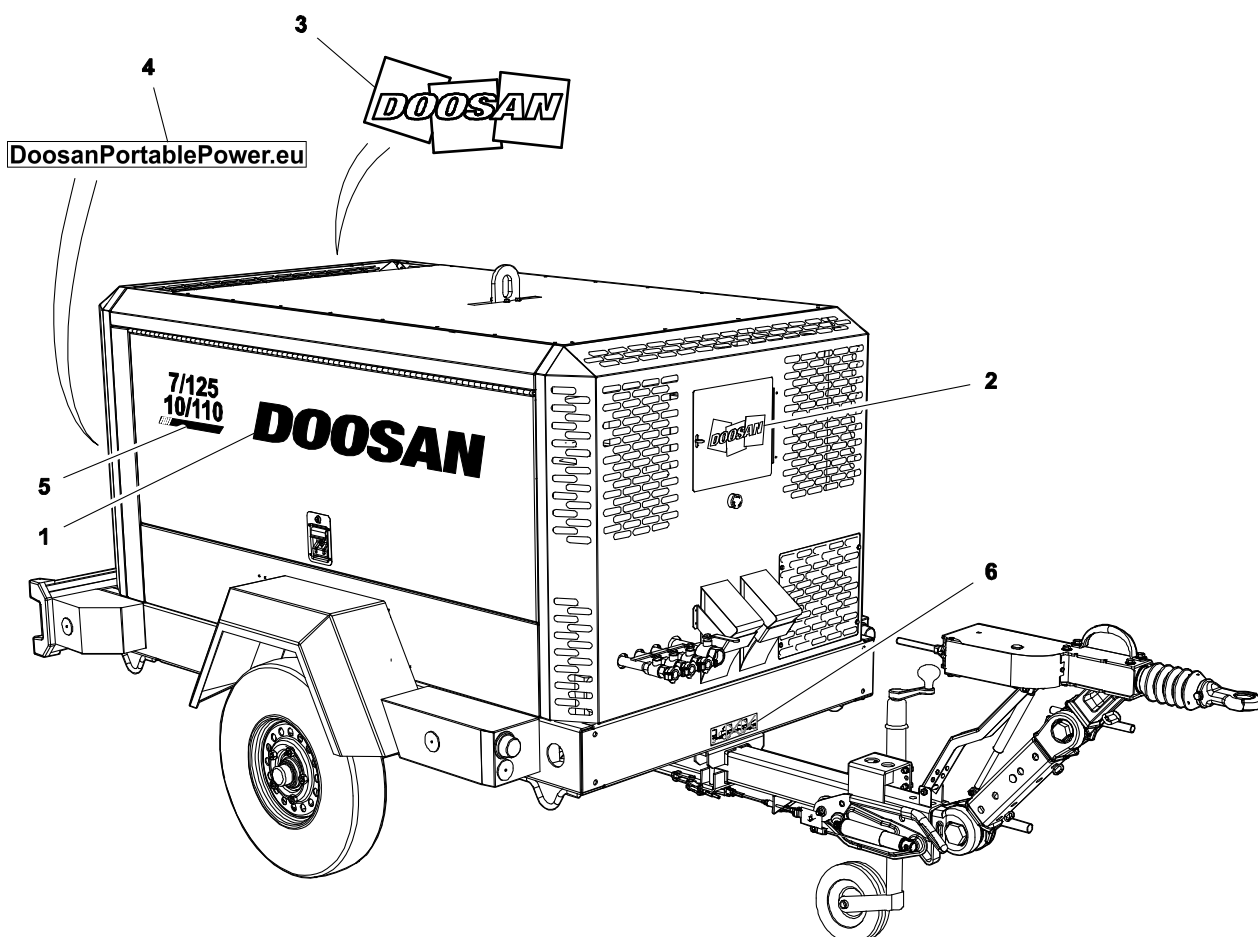

T3932_02
03/16

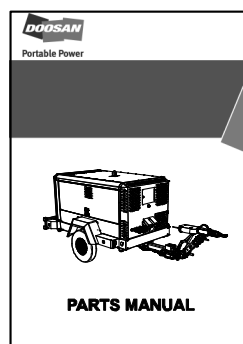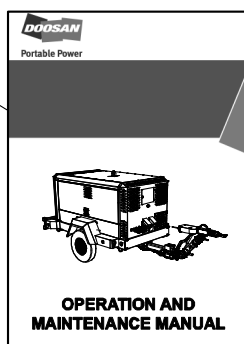

DECALS AND DOCUMENTATION

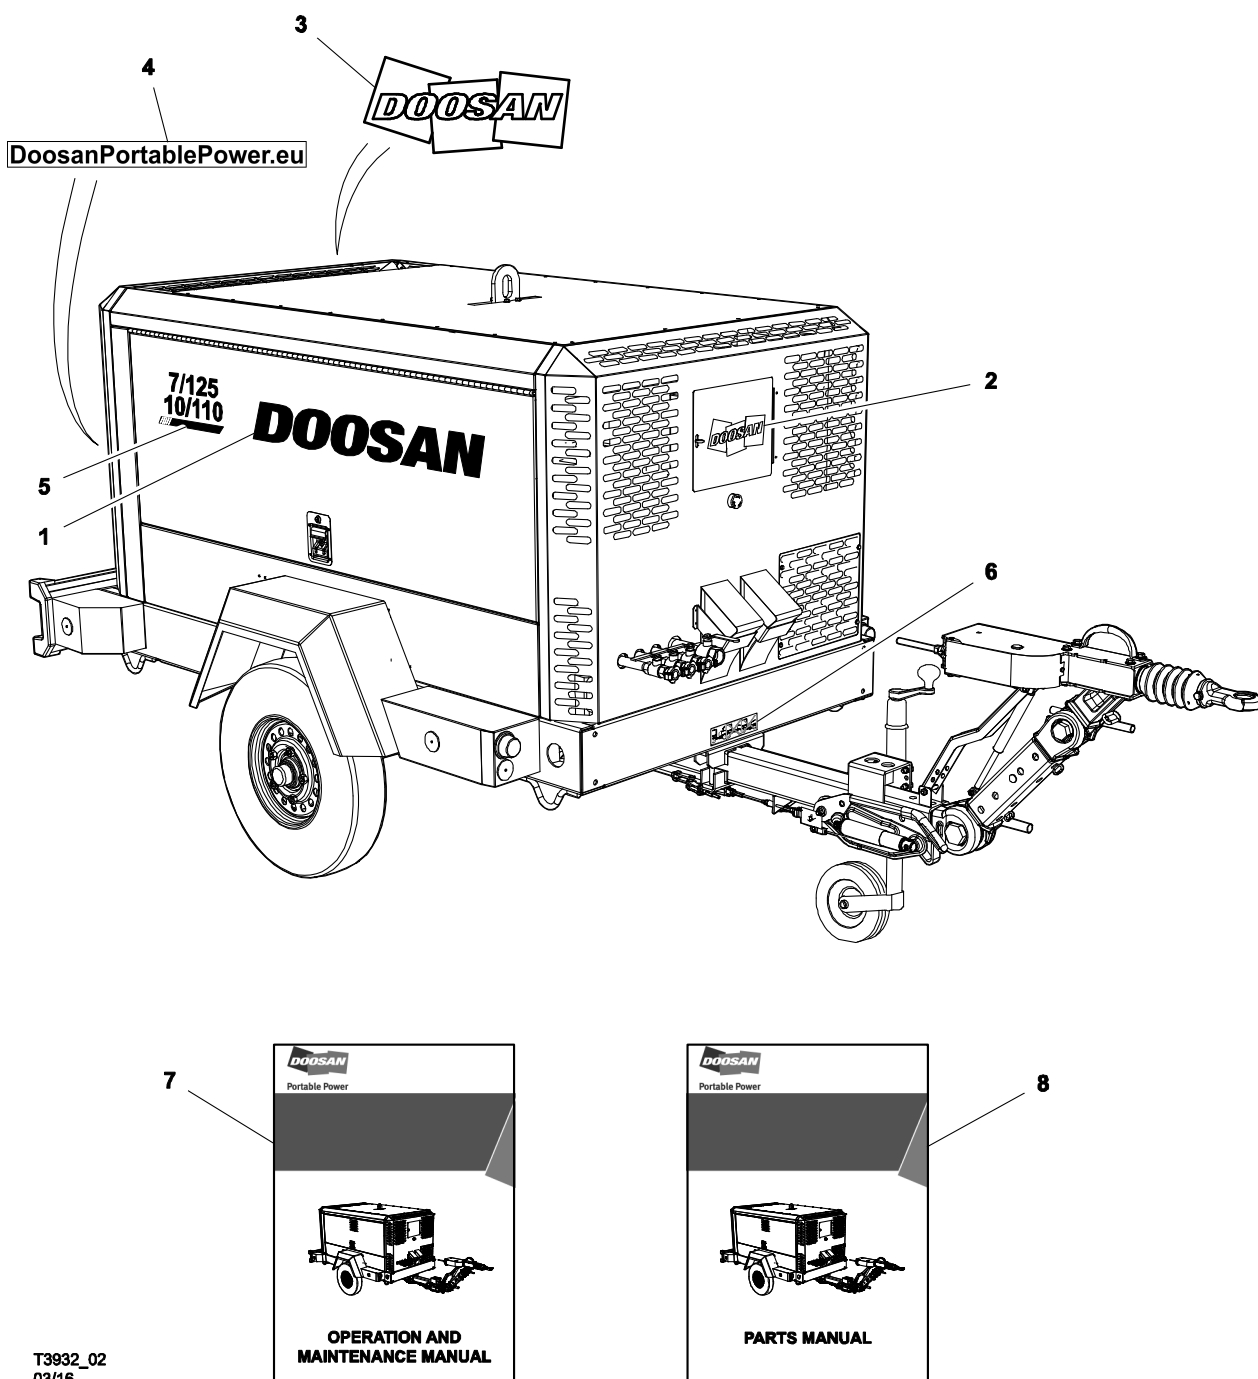


T3932_02
03/16

[illegible]

DECALS AND DOCUMENTATION

[illegible]


DECALS AND DOCUMENTATION

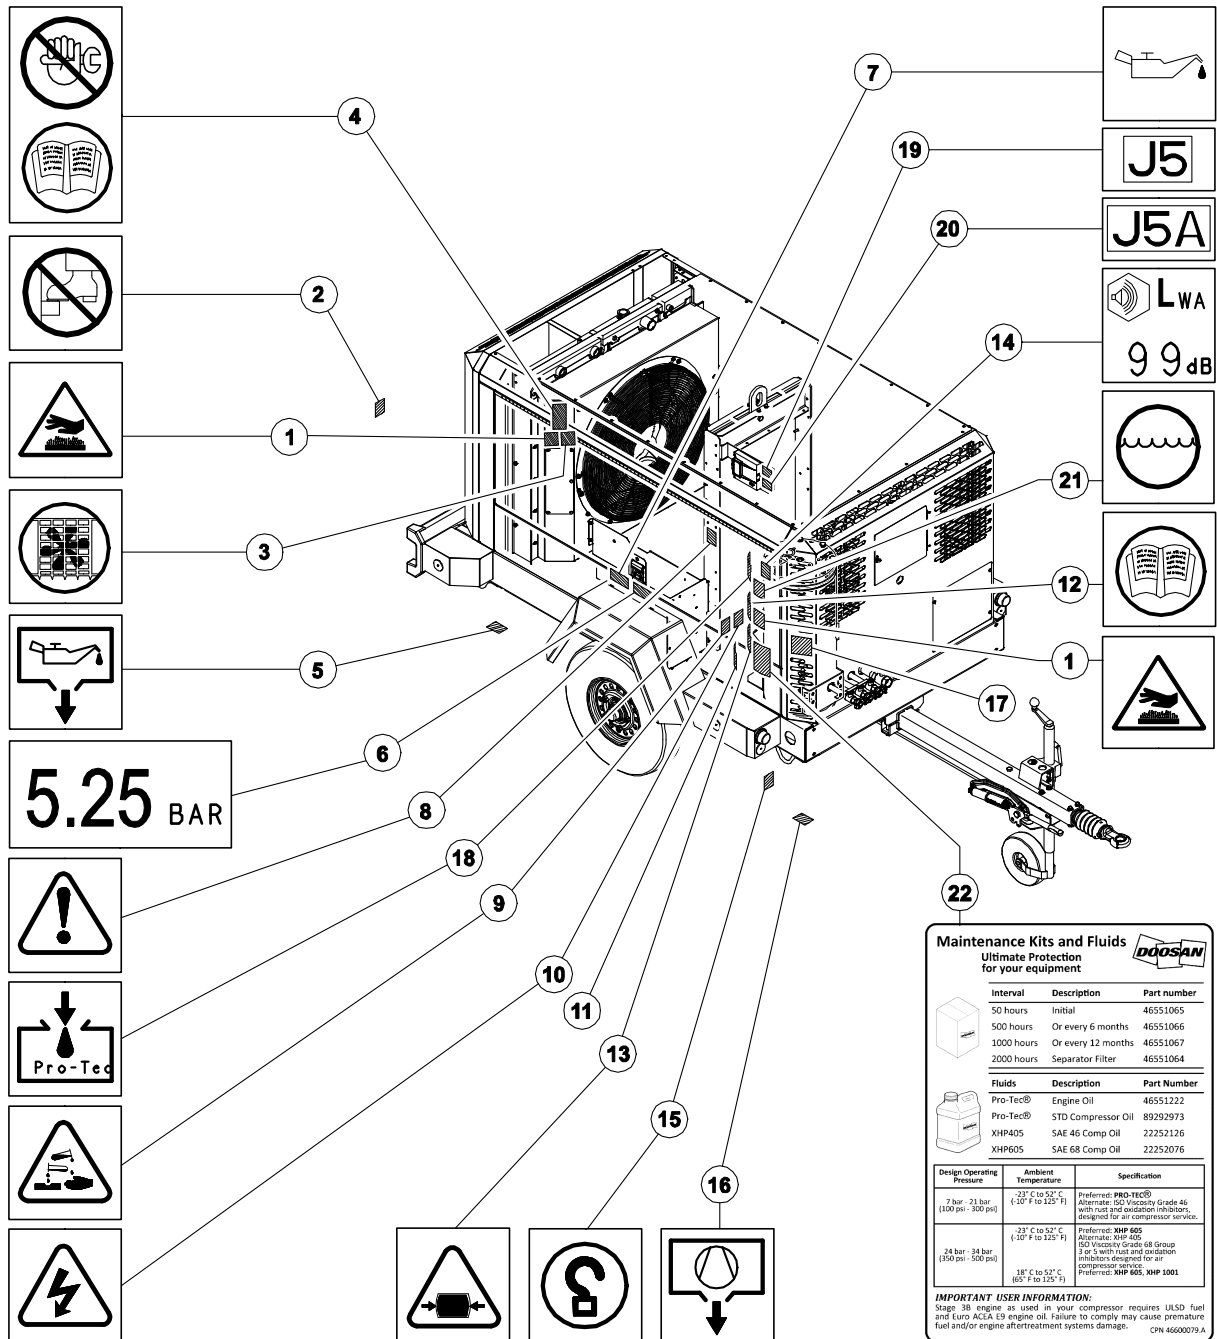

T3928_01
11/13

[illegible]

BRAKE LIGHTS AND WIRING


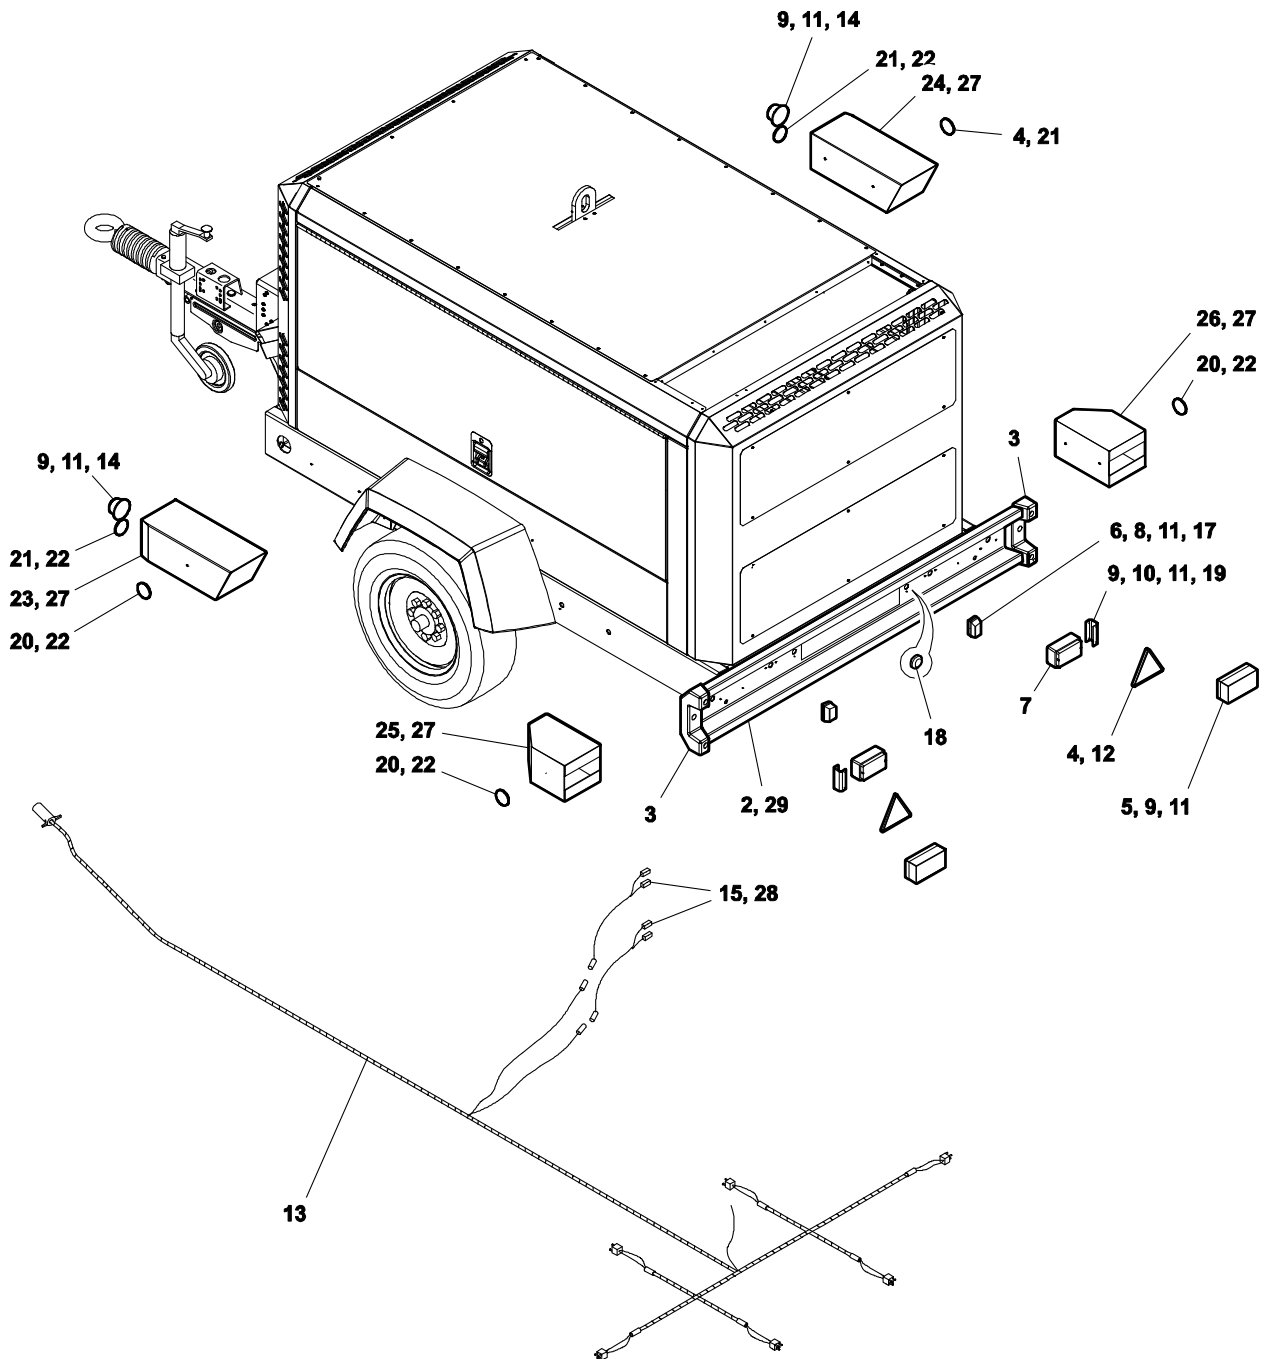


T3923_00
12/13


BRAKE LIGHTS AND WIRING

Item	Part Number	Description	Remarks	Serial Number	Qty
1	54738091	BAR ASSEMBLY, BUMPER / LIGHTS	W/Ref. 2-19		1
2	54737630	BUMPER			1
3	54614870	BUMPER, END STOP			2
4	92721331	REFLECTOR, RED			2
5	92901222	LAMP, TAIL/STOP/FLASH			2
6	92901230	LAMP, REGISTRATION PLATE			2
7	93477388	LAMP, FOG			2
8	23251705	SCREW			4
9	46556647	SCREW			12
10	46556648	WASHER			4
11	92304492	NUT			16
12	92271915	RIVET			4
13	22173454	HARNESS, REAR BUMPER			1
14	92121250	LIGHT, FRONT SIDE			2
15	54477740	HARNESS, FRONT SIDE			2
16	23181704	BULB			2
17	46540217	PLINTH			2
18	46500021	GROMMET			6
19	22073183	BRACKET			2
20	92121243	REFLECTOR, AMBER			4
21	92085729	REFLECTOR, WHITE			2
22	92271915	RIVET			4
23	54715891	POD, LH FRONT SIDE			1
24	54716592	POD, RH FRONT SIDE			1
25	22074538	POD, LH REAR SIDE			1
26	22084024	POD, RH REAR SIDE			1
27	35279025	SCREW			8
28	92253194	CLAMP, HOSE			8
29	35323021	SCREW			4
30	92962547	CLIP, NUMBER PLATE	optional		2
31	92281369	RIVET	optional		6

BATTERY AND MOUNTING

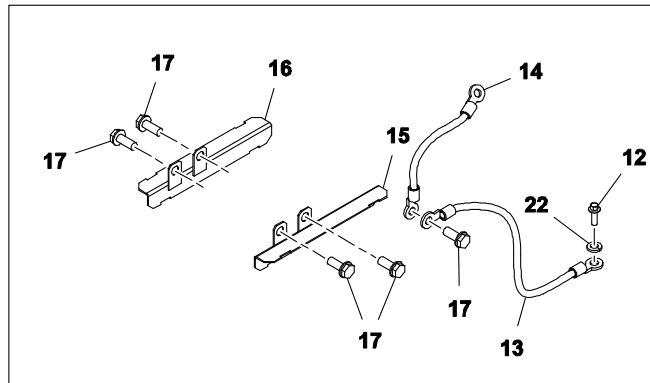






23

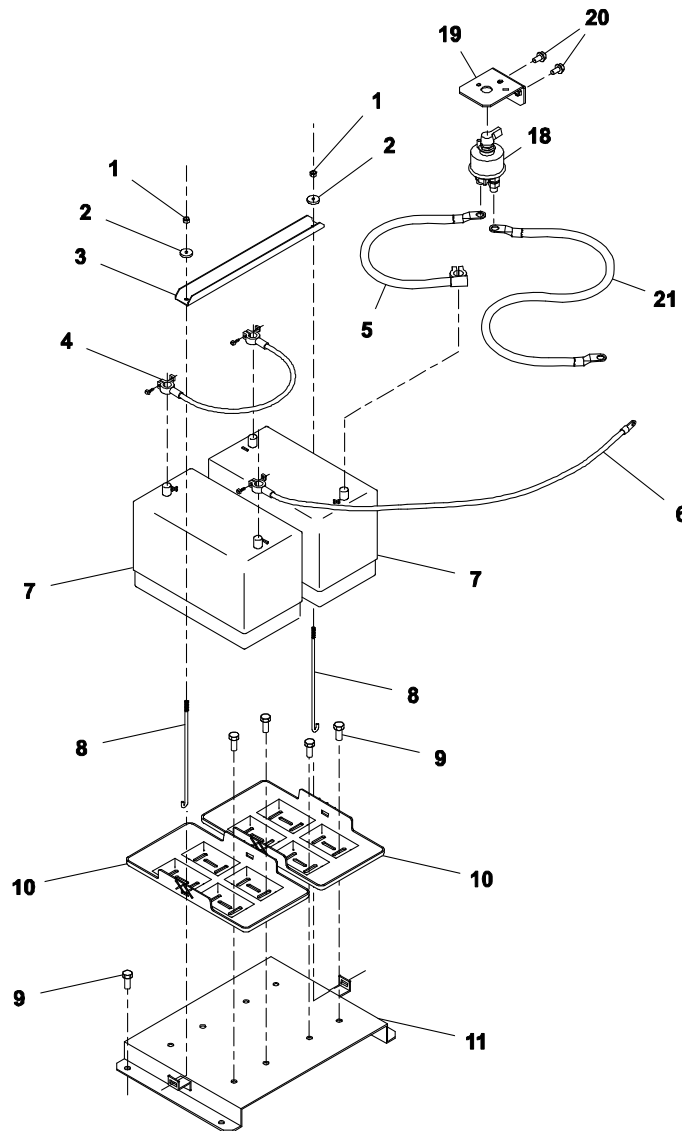

T3925_01
03/16

[illegible]


INSTRUMENT PANEL

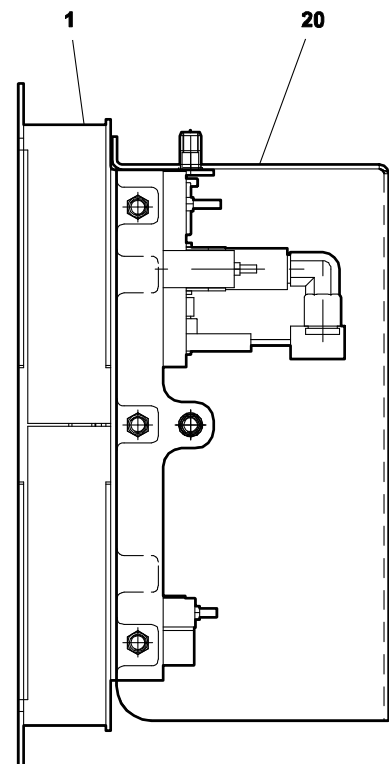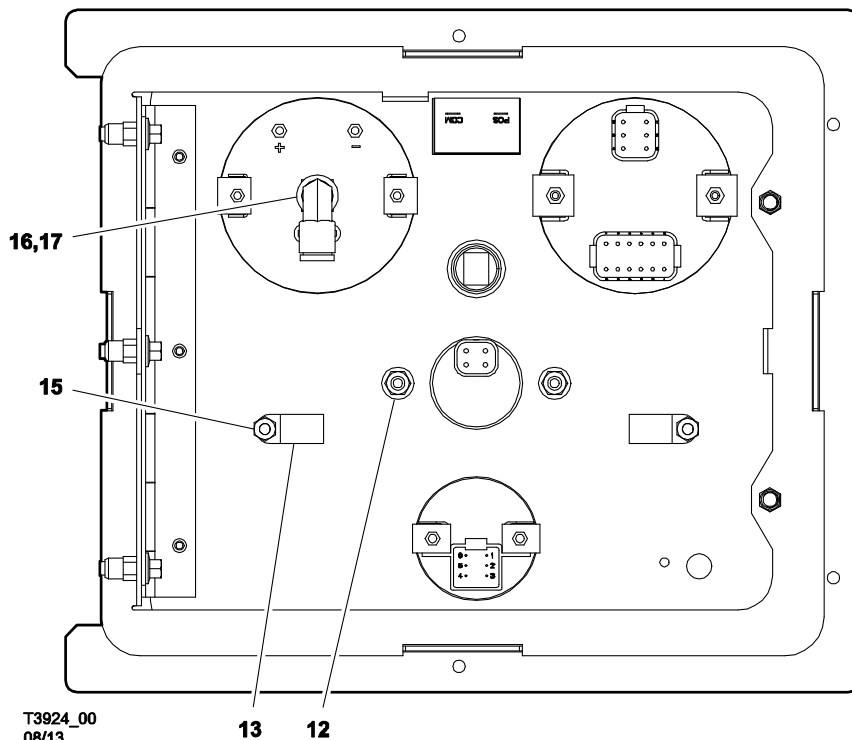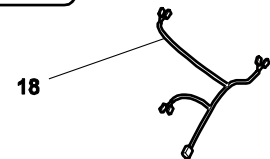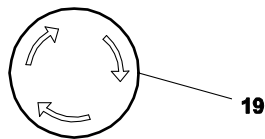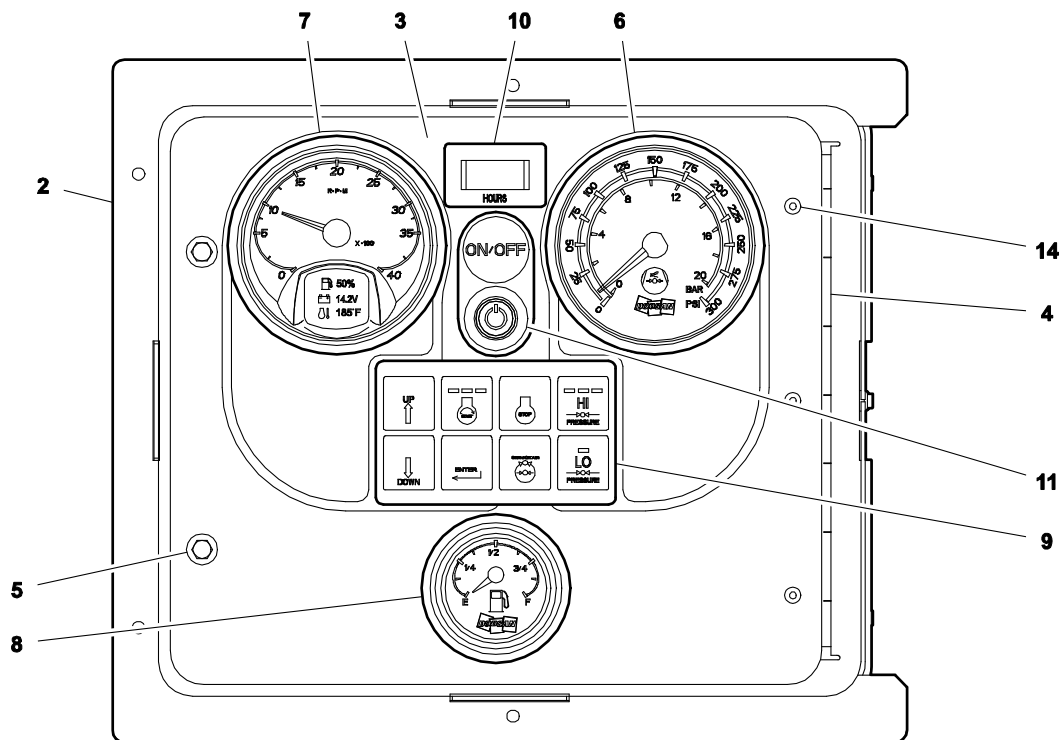

T3924_00
08/13

[illegible]

CONTROL UNIT

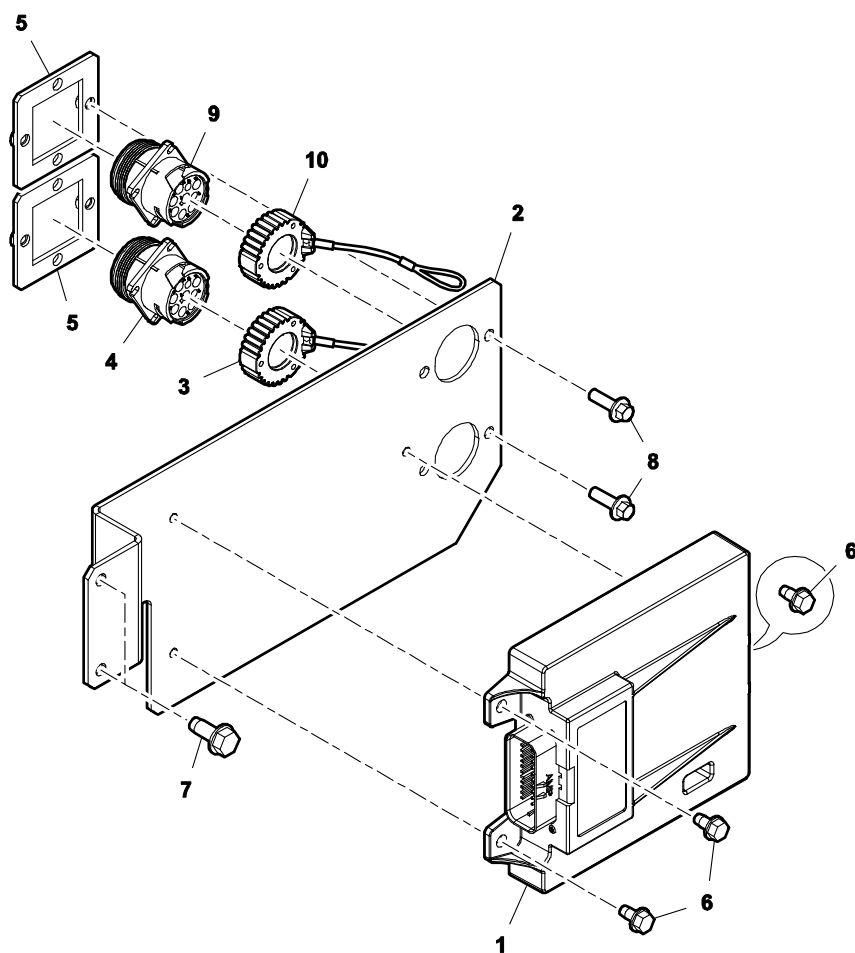


T3969_00
09/13

CONTROL UNIT

[illegible]

RELAY AND FUSE BOX

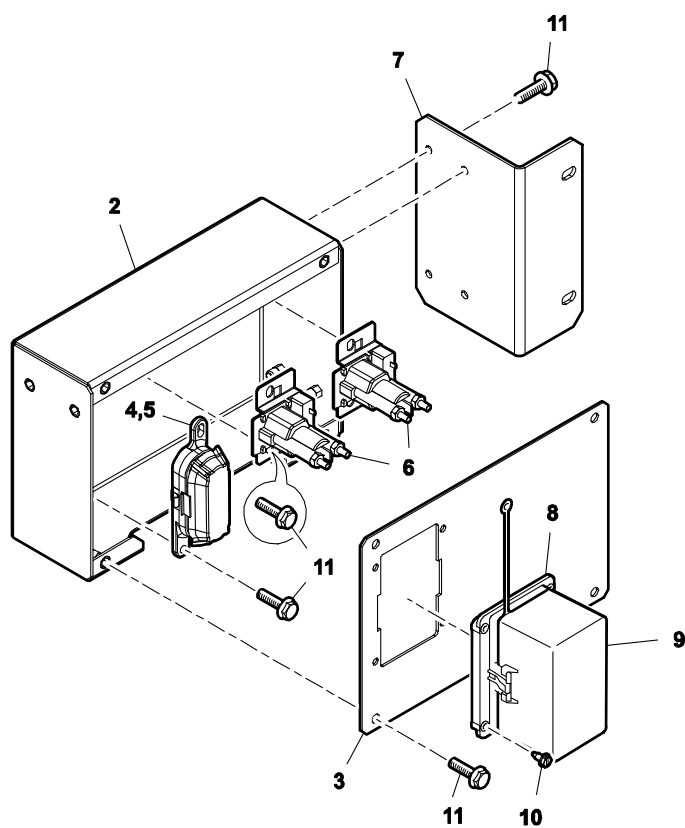


T3944_00
09/13

RELAY AND FUSE BOX

[illegible]

AIREND MOUNTING

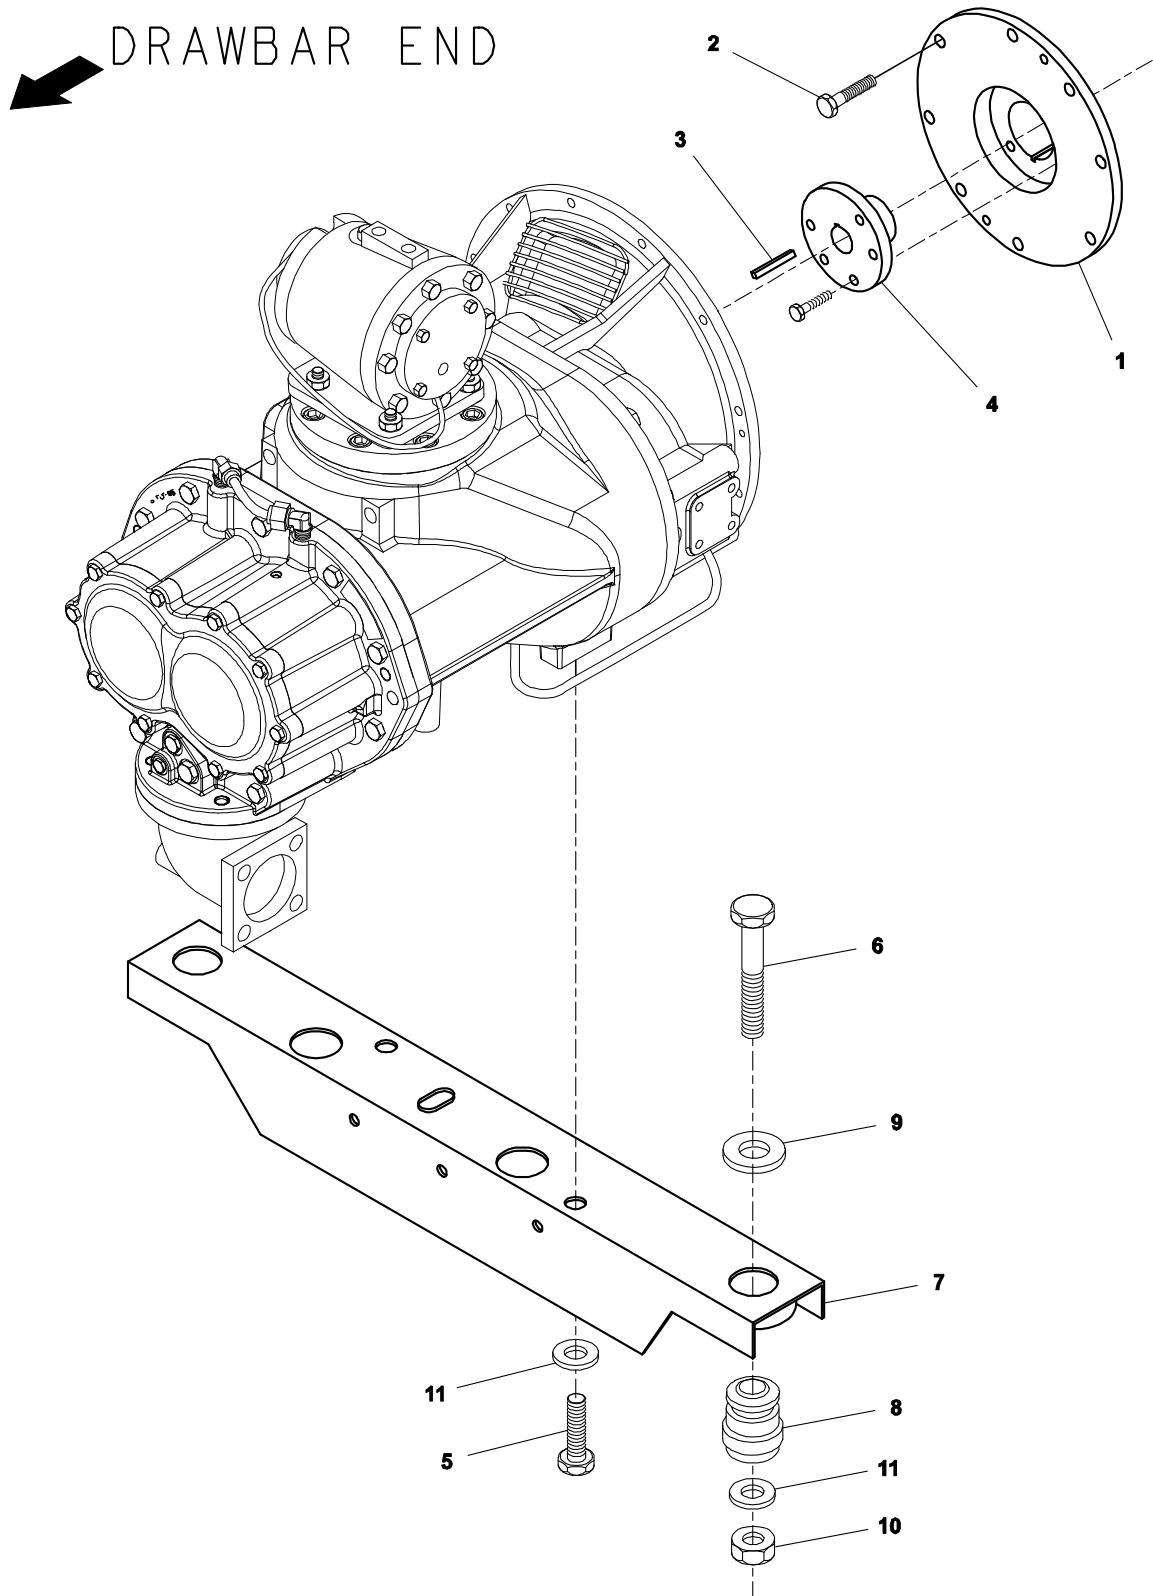


T3908_00
06/13

AIREND MOUNTING

[illegible]

AIREND PIPING

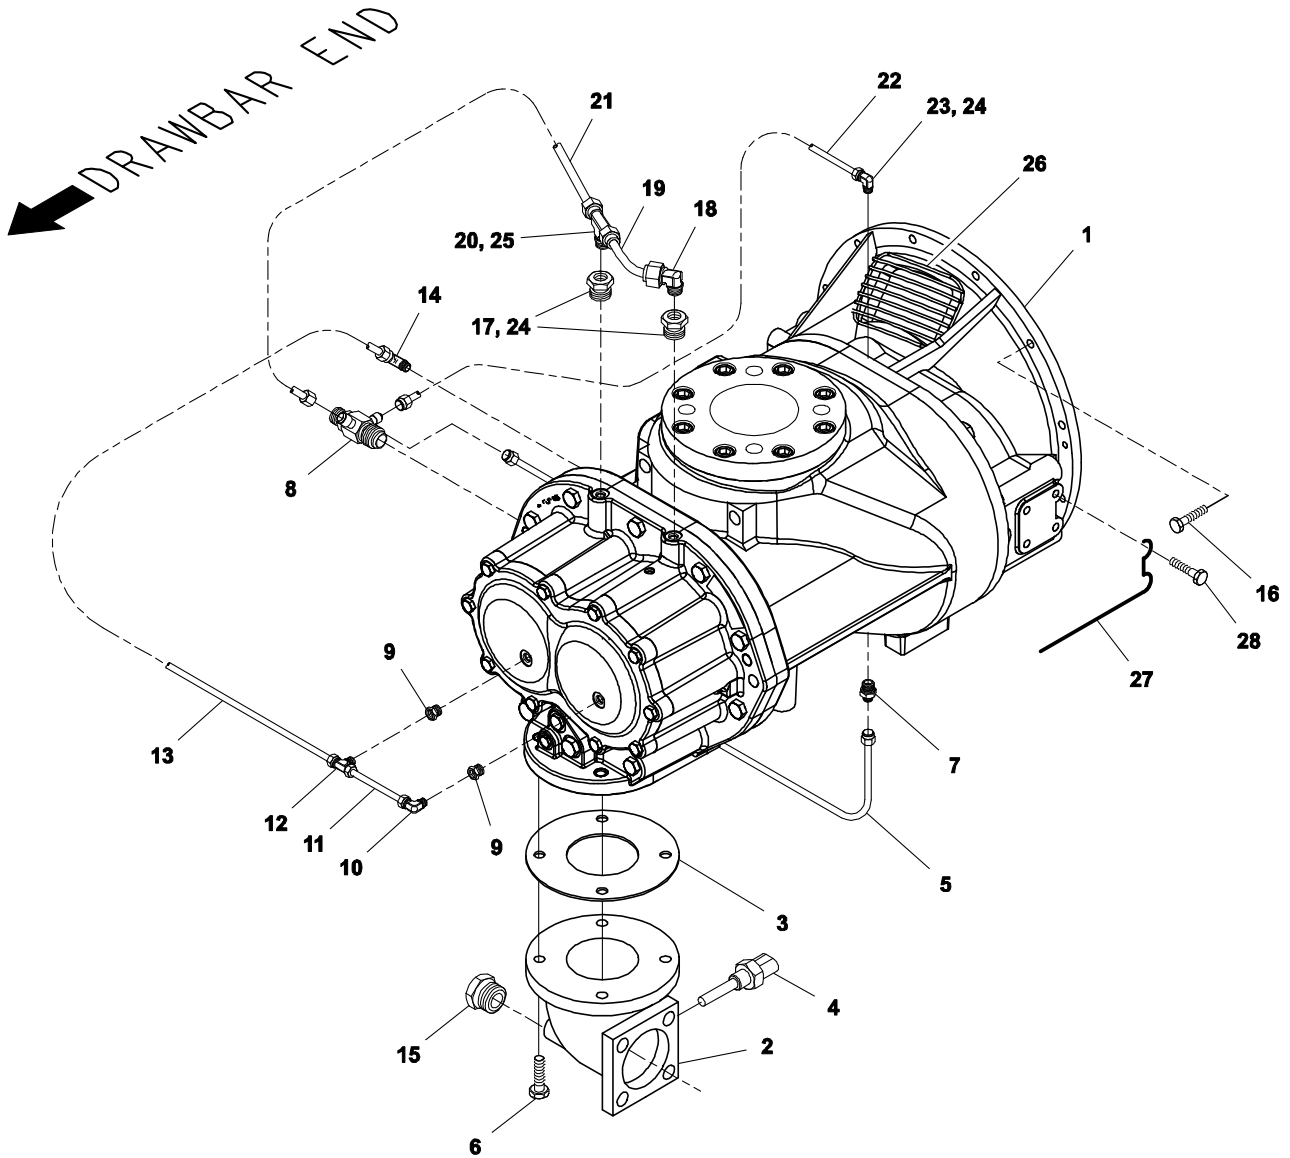


T3909_01
09/13

AIREND PIPING

Item	Part Number	Description	Remarks	Serial Number	Qty
1	36084184	AIREND ASSEMBLY	(7/125, 9/115, 10/110)		1
1	42665679	AIREND ASSEMBLY, REBUILT	(7/125, 9/115, 10/110)		1
1	44021491	AIREND ASSEMBLY	(14/90)		1
1	42665646	AIREND ASSEMBLY, REBUILT	(14/90)		1
2	22247340	ELBOW, DISCHARGE			1
3	35575570	GASKET, AIREND DISCHARGE			1
4	23294820	SENSOR, TEMPERATURE			1
5	22189609	TUBE, AIREND OIL			1
6	35375385	SCREW			4
7	95402806	ADAPTOR			1
8	36845154	MANIFOLD, OIL			1
9	36846095	CONNECTOR, O-RING			2
10	35286491	ELBOW			1
11	36846111	TUBE ASSEMBLY			1
12	36846129	TEE			1
13	36846103	TUBE, BEARING OIL SCAVENGE			1
14	35305622	ELBOW			1
15	95949491	PLUG			1
16	96701917	SCREW			12
17	35287945	BUSH, REDUCING	W/Ref. 24		2
18	35279827	ELBOW			1
19	36795482	TUBE ASSEMBLY			1
20	35279843	TEE	W/Ref. 25		1
21	36846087	TUBE, BEARING OIL SUPPLY			1
22	36846152	TUBE, FRONT OIL SEAL			1
23	35279884	ELBOW			1
24	35279959	O-RING	included with item 17		2
25	35278571	O-RING	included with item 20		1
26	36798346	GUARD			2
27	22983001	SUPPORT, WIRE HARNESS			1
28	36879492	SCREW			2


AIREND PIPING

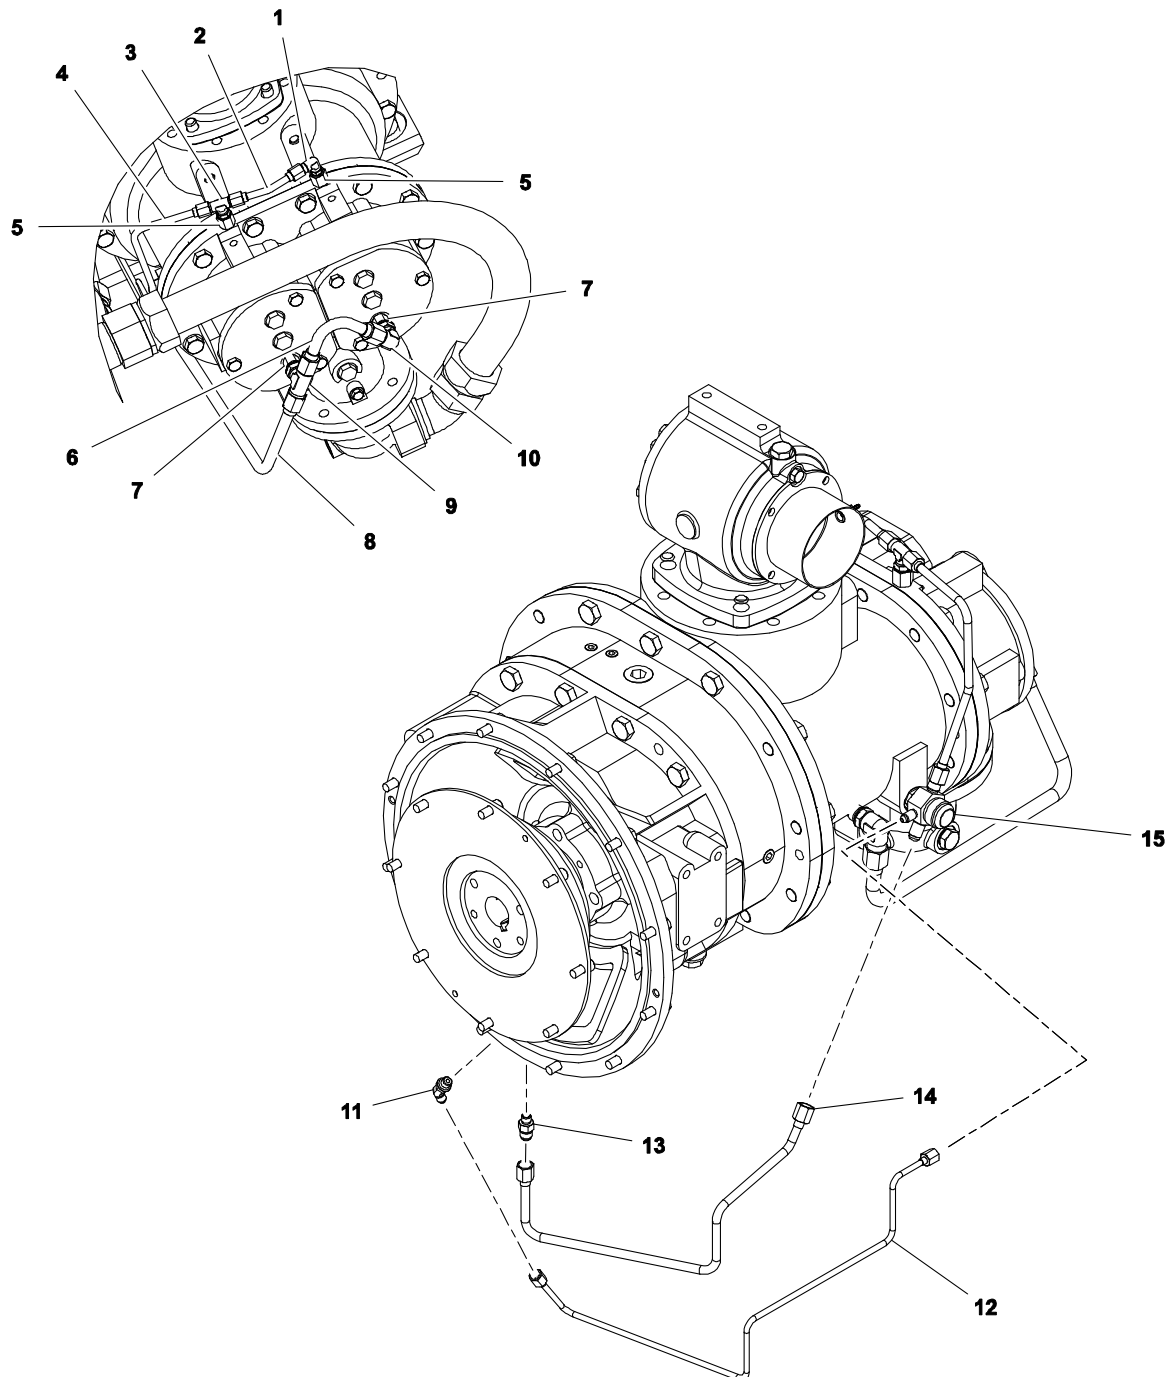

T3920_00
07/13

AIREND PIPING	
---------------	--

AIREND GEARCASE ASSEMBLY

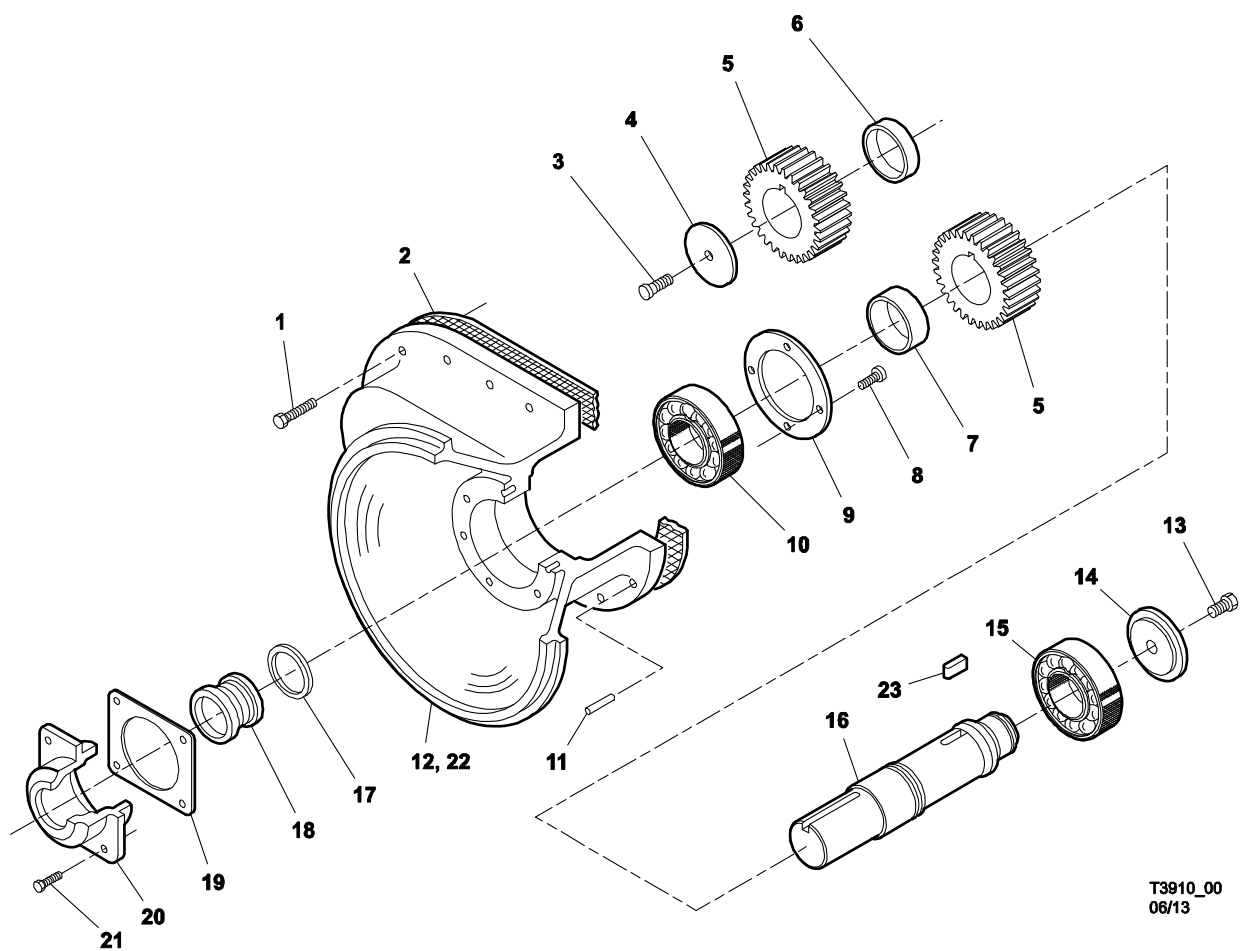


T3910_00
06/13

AIREND GEARCASE ASSEMBLY	
---	--

[illegible]


AIREND ROTOR HOUSING ASSEMBLY

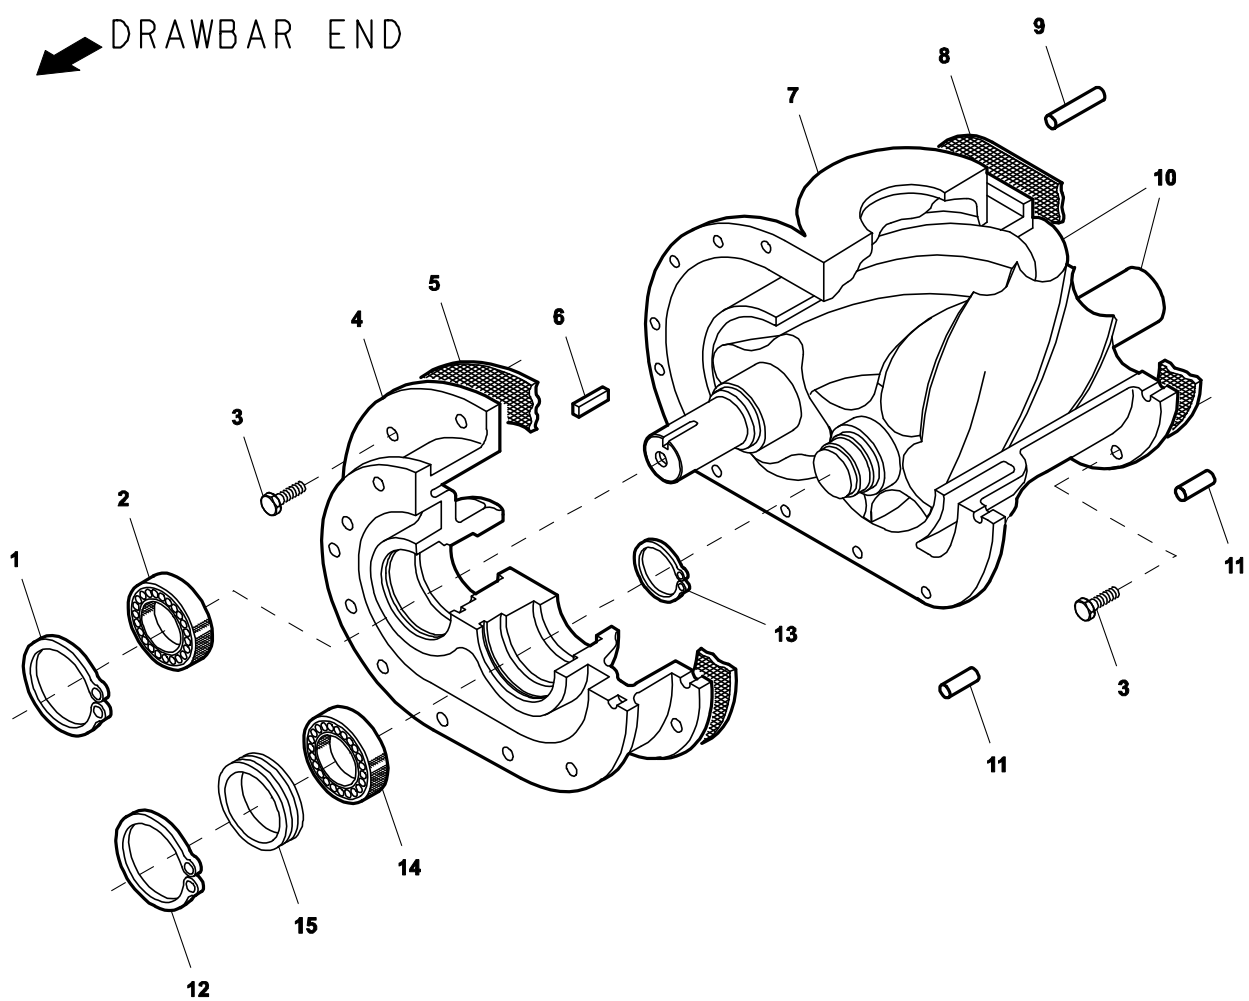

T3911_00
06/13

[illegible]


AIREND REAR BEARING HOUSING ASSEMBLY

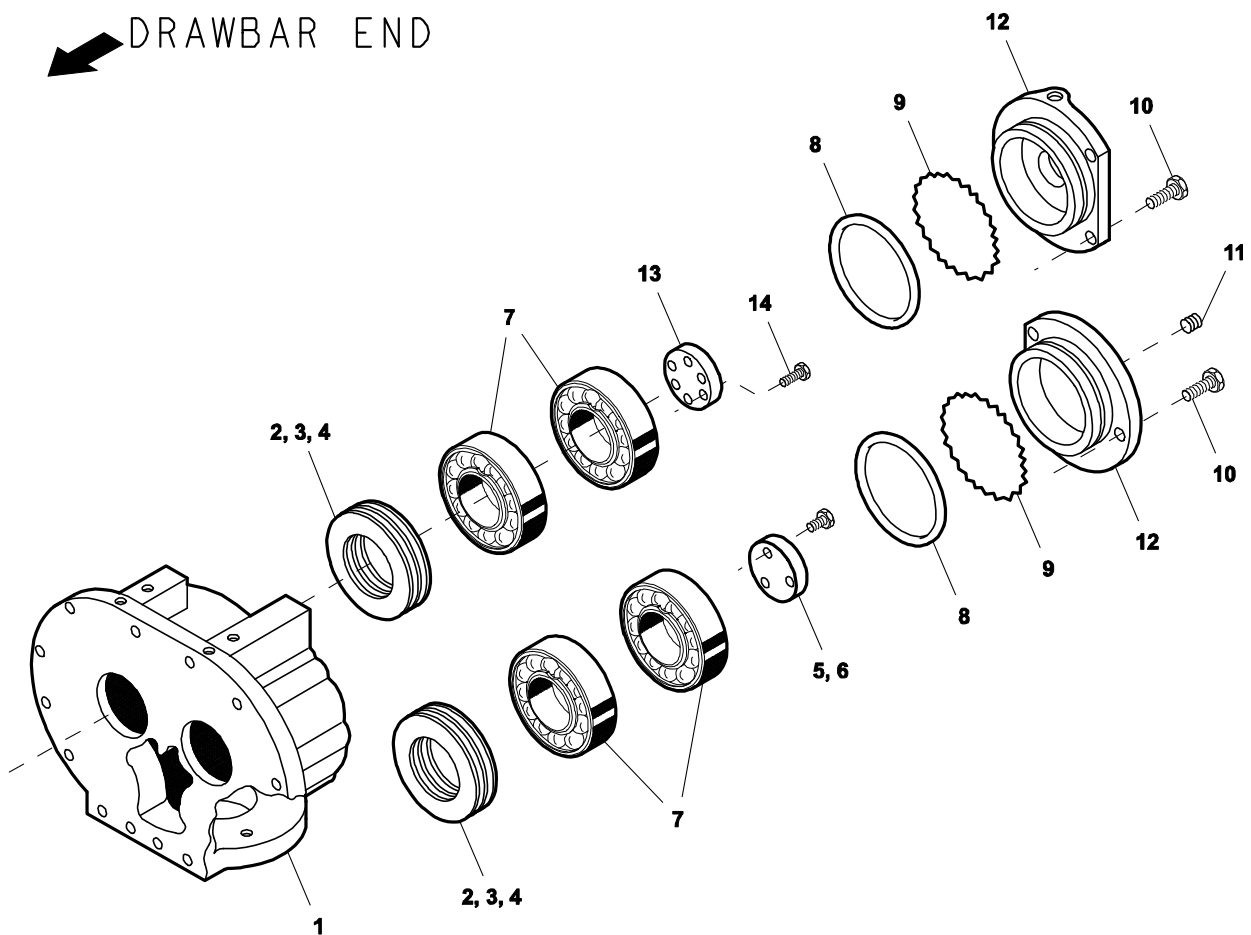

T3912_00
06/13

[illegible]

UNLOADER AND MOUNTING

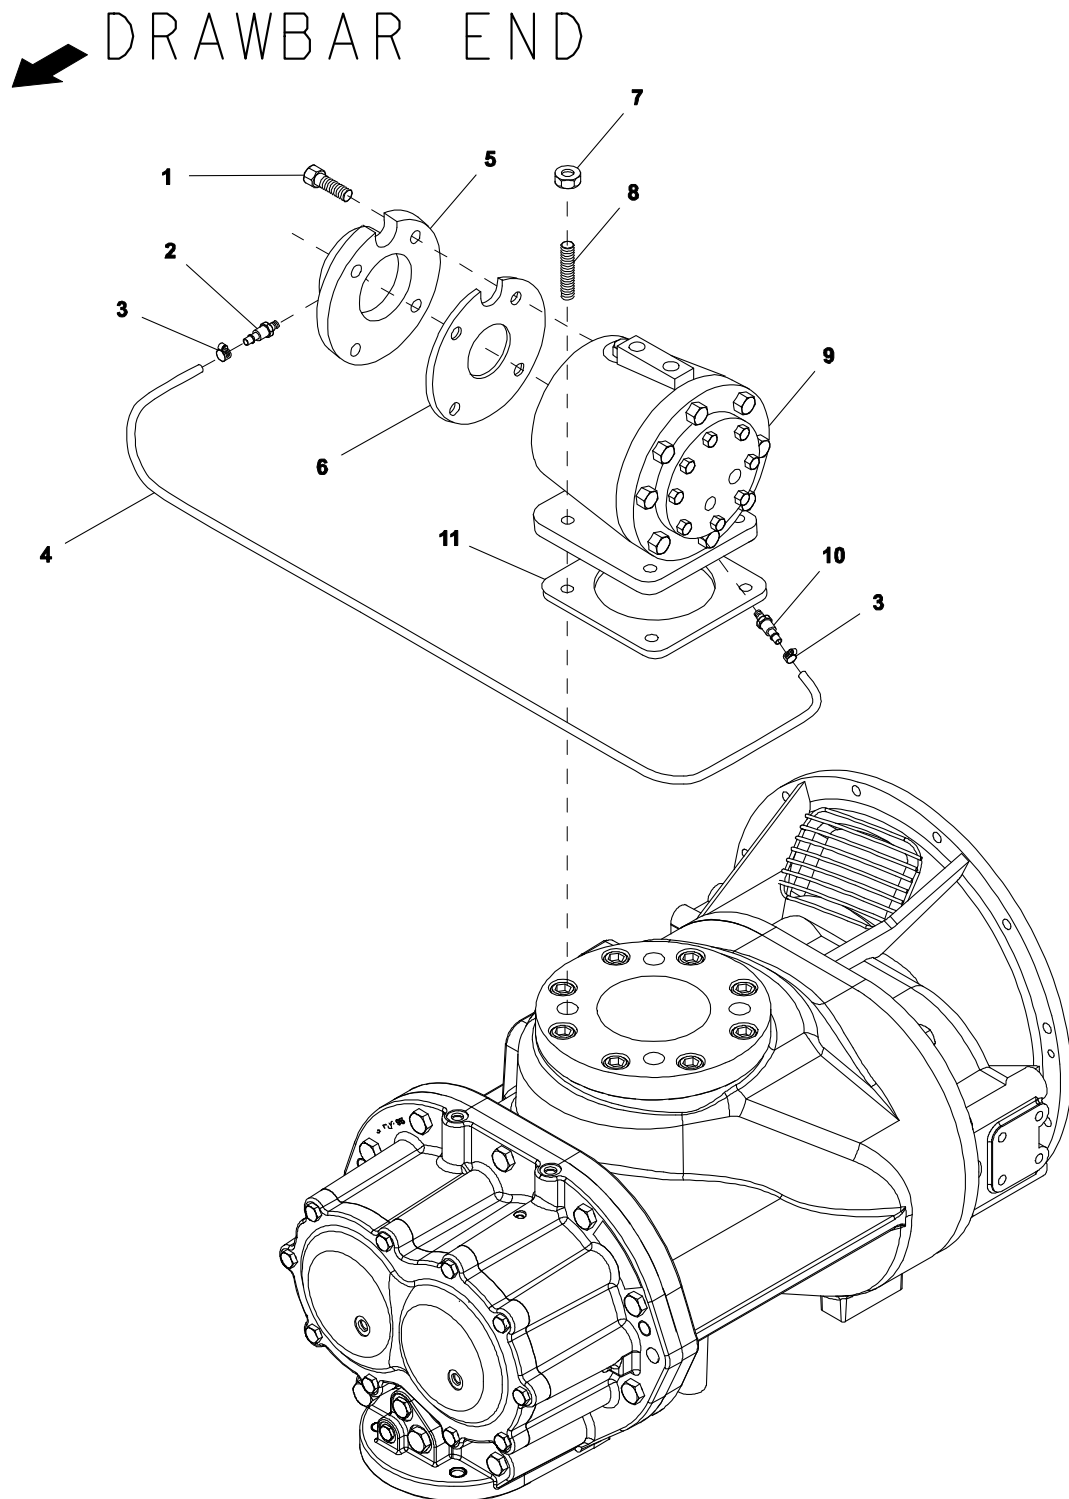


T3913_00
06/13

UNLOADER AND MOUNTING

[illegible]


UNLOADER ASSEMBLY

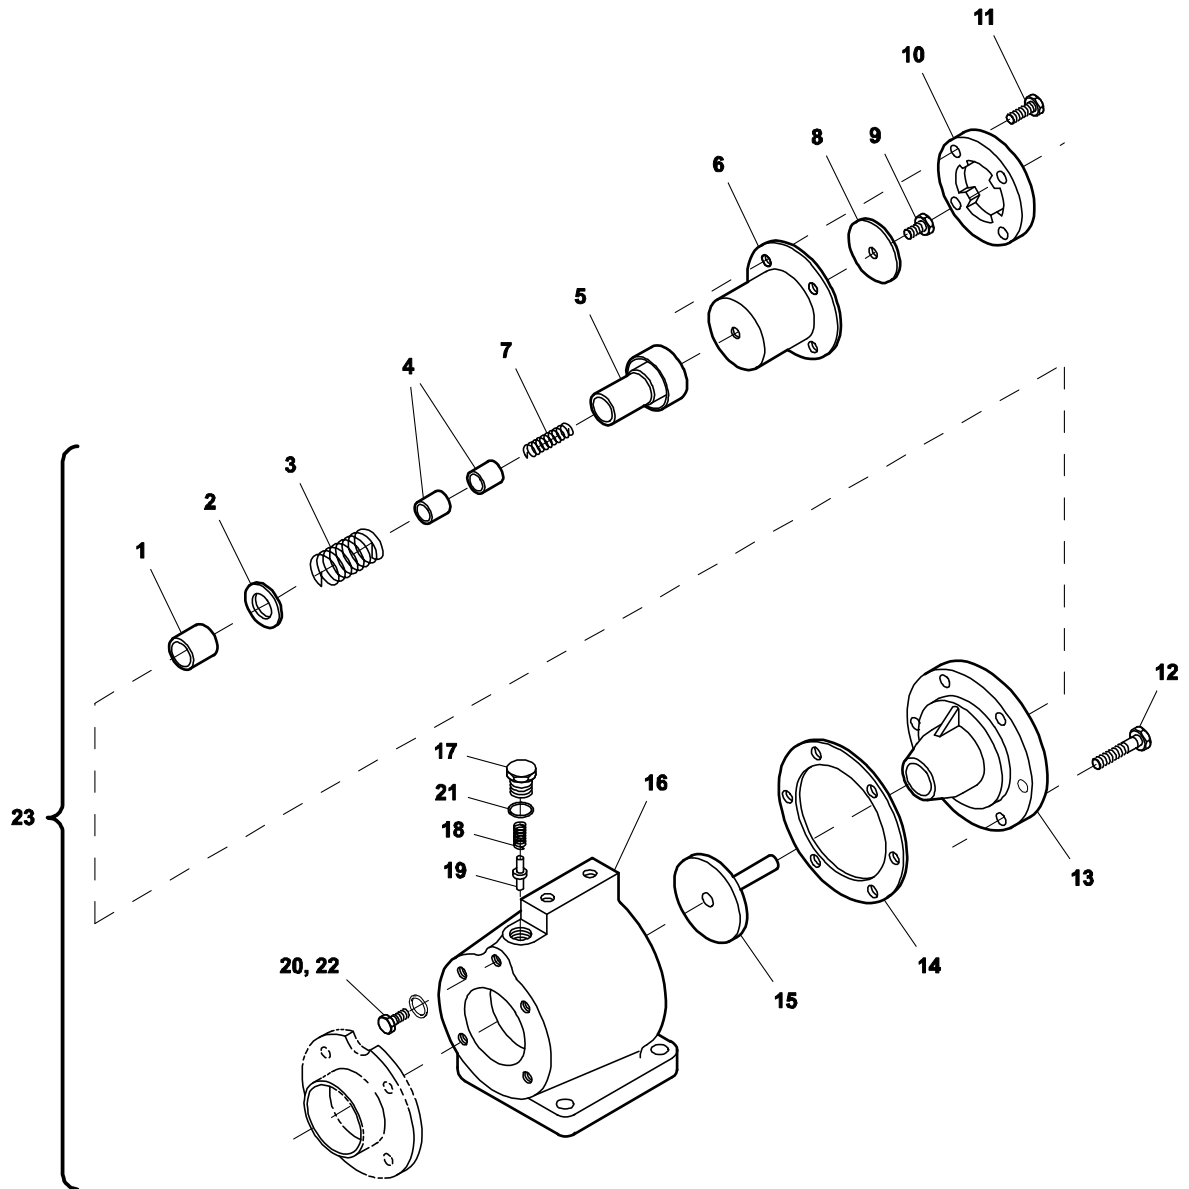

T3914_00
06/13

[illegible]

SEPARATOR TANK

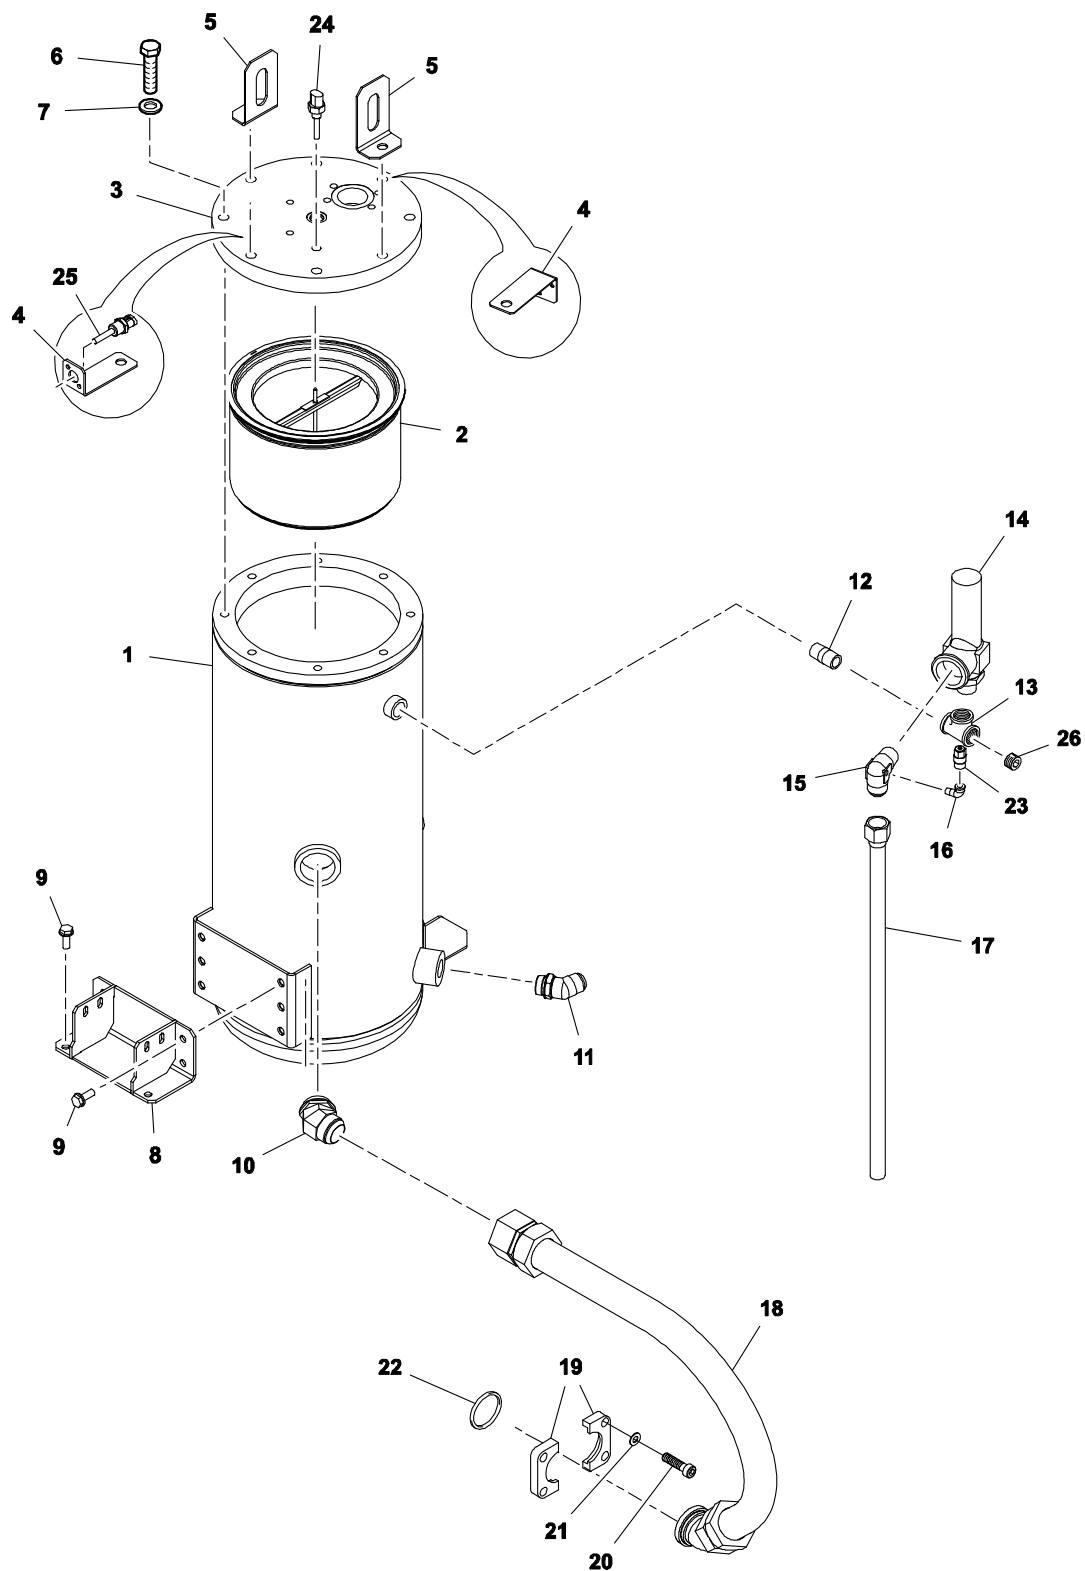


T3916_01
09/13

SEPARATOR TANK

Item	Part Number	Description	Remarks	Serial Number	Qty
1	46620439	TANK, SEPARATOR			1
2	22111975	ELEMENT, SEPARATOR			1
3	46620438	COVER			1
4	46623448	BRACKET			2
5	36785012	BRACKET			2
6	96727557	SCREW			8
7	95935052	WASHER			8
8	46622531	SUPPORT			1
9	92398627	SCREW			6
10	95944732	ELBOW			1
11	95992632	ELBOW			1
12	95953576	NIPPLE			1
13	95954210	TEE			1
14	22299747	VALVE, SAFETY			1
15	46623741	ELBOW			1
16	95757183	ELBOW			1
17	22060073	TUBE ASSEMBLY			1
18	54688015	HOSE, DISCHARGE			1
19	35292143	CLAMP			2
20	96719810	SCREW			4
21	95934683	WASHER, LOCK			4
22	95357976	O-RING			1
23	46568519	SWITCH, PRESSURE			1
24	23294820	SENSOR, TEMPERATURE			1
25	23294838	SENSOR, TEMPERATURE			1
26	95947149	PLUG			1
27	22685481	ELBOW			1
28	22685507	INSERT, TUBE			2
29	22685523	TUBE, SIGHT GAUGE			1
30	22685499	ELBOW			1

SEPARATOR TANK (service air)

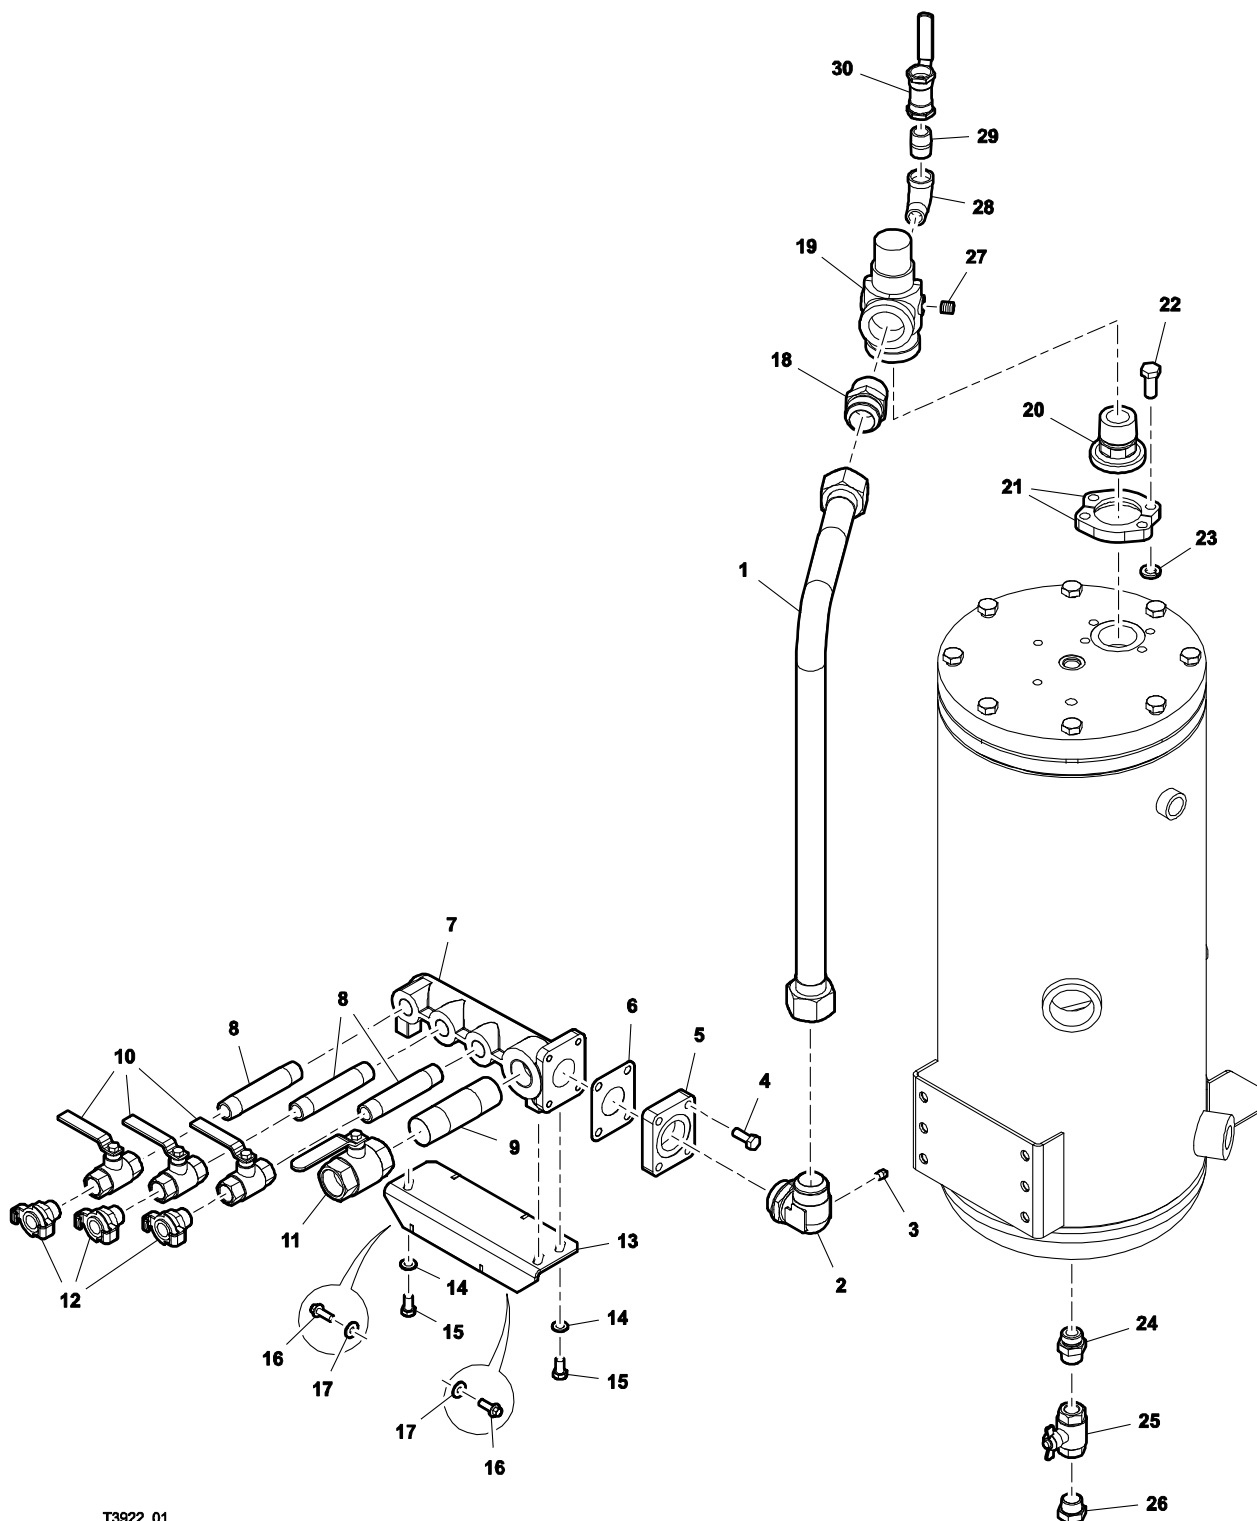


T3922_01
06/16

**SEPARATOR TANK
(service air)**

Item	Part Number	Description	Remarks	Serial Number	Qty
1	46620852	TUBE ASSEMBLY			1
2	22321129	ELBOW			1
3	92354653	PLUG			1
4	96701487	SCREW			4
5	54694815	COVER, MANIFOLD			1
6	35294628	GASKET, MANIFOLD			1
7	36710036	MANIFOLD, SERVICE			1
8	92076447	NIPPLE			3
9	92076454	NIPPLE			1
10	92294461	VALVE, BALL	(3/4" BSP)		3
11	92111228	VALVE, BALL	(1 1/4" BSP)		1
12	92178524	COUPLING, CLAW	(19 mm - 3/4"BSPT)		3
13	46622530	BRACKET			1
14	96701404	WASHER			3
15	96702279	SCREW			3
16	36889608	SCREW	(M8-1.25 x 25)		4
17	92304609	WASHER			4
18	95208682	ADAPTOR			1
19	22146641	MINIMUM PRESSURE VALVE ASSEMBLY			1
20	46620600	CONNECTOR			1
21	35292143	CLAMP			2
22	46551501	BOLT			4
23	95934683	WASHER, LOCK			4
24	22446744	CONNECTOR			1
25	22477301	VALVE, BALL			1
26	22481832	PLUG			1
27	95928230	PLUG			1
28	95928172	ELBOW			1
29	95928040	NIPPLE			1
30	35576115	VALVE			1

MINIMUM PRESSURE VALVE

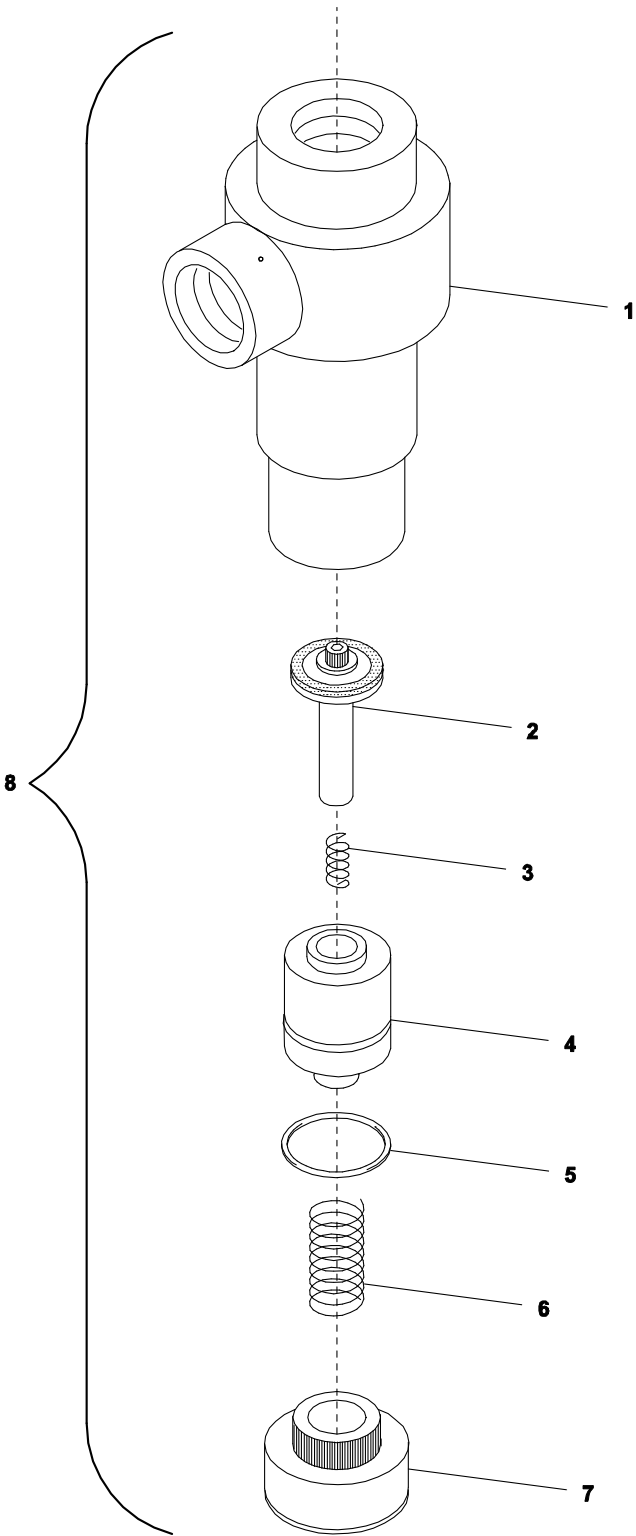


T3907_00
06/13

MINIMUM PRESSURE VALVE

[illegible]

REGULATION SYSTEM

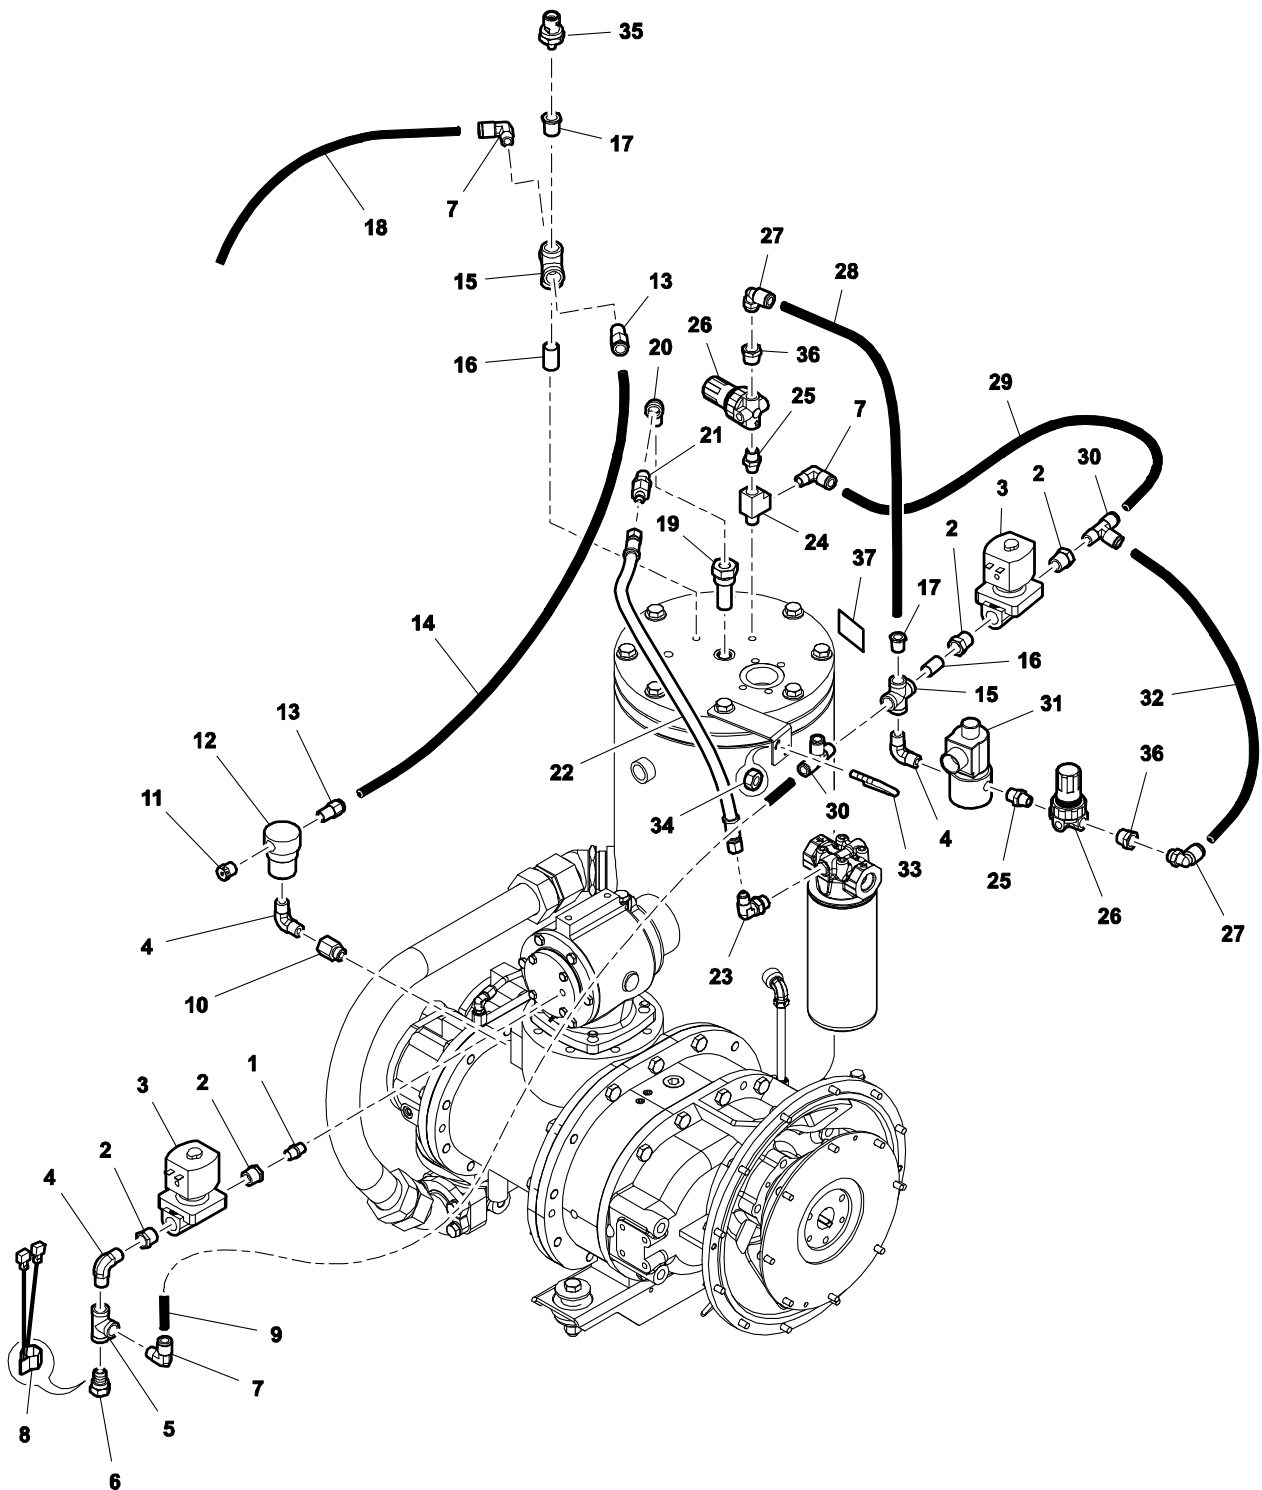


T3921_02
04/16

REGULATION SYSTEM

Item	Part Number	Description	Remarks	Serial Number	Qty
1	95944575	NIPPLE			1
2	95940748	BUSH, REDUCING			4
3	36840841	VALVE, SOLENOID			2
4	95364469	ELBOW			2
5	95954194	TEE			1
6	46622654	ADAPTOR, ORIFICE			1
7	35369354	ELBOW			3
8	36841526	HEATER			1
9	35356484	TUBE, NYLON	(0,64 m long)		1
10	35302314	ADAPTOR			1
11	36766756	ORIFICE, SILENCER			1
12	35322379	VALVE, BLOWDOWN			1
13	35369347	CONNECTOR			2
14	35356484	TUBE, NYLON	(0,84 m long)		1
15	95954293	CROSS			2
16	95667341	NIPPLE			2
17	95930301	BUSH			1
18	35356484	TUBE, NYLON	(0,72 m long)		1
19	54721337	ADAPTOR			1
20	95944666	ELBOW			1
21	36840411	VALVE, CHECK			1
22	35315407	HOSE ASSEMBLY			1
23	95365094	ELBOW			1
24	35114545	TEE			1
25	46622211	ADAPTOR			2
26	46553810	REGULATOR, PRESSURE			2
27	35369354	ELBOW			2
28	35356484	TUBE, NYLON	(0,41 m long)		1
29	35356484	TUBE, NYLON	(0,3 m long)		1
30	35369503	TEE			2
31	46578941	VALVE, SOLENOID			1


REGULATION SYSTEM (CONT'D)

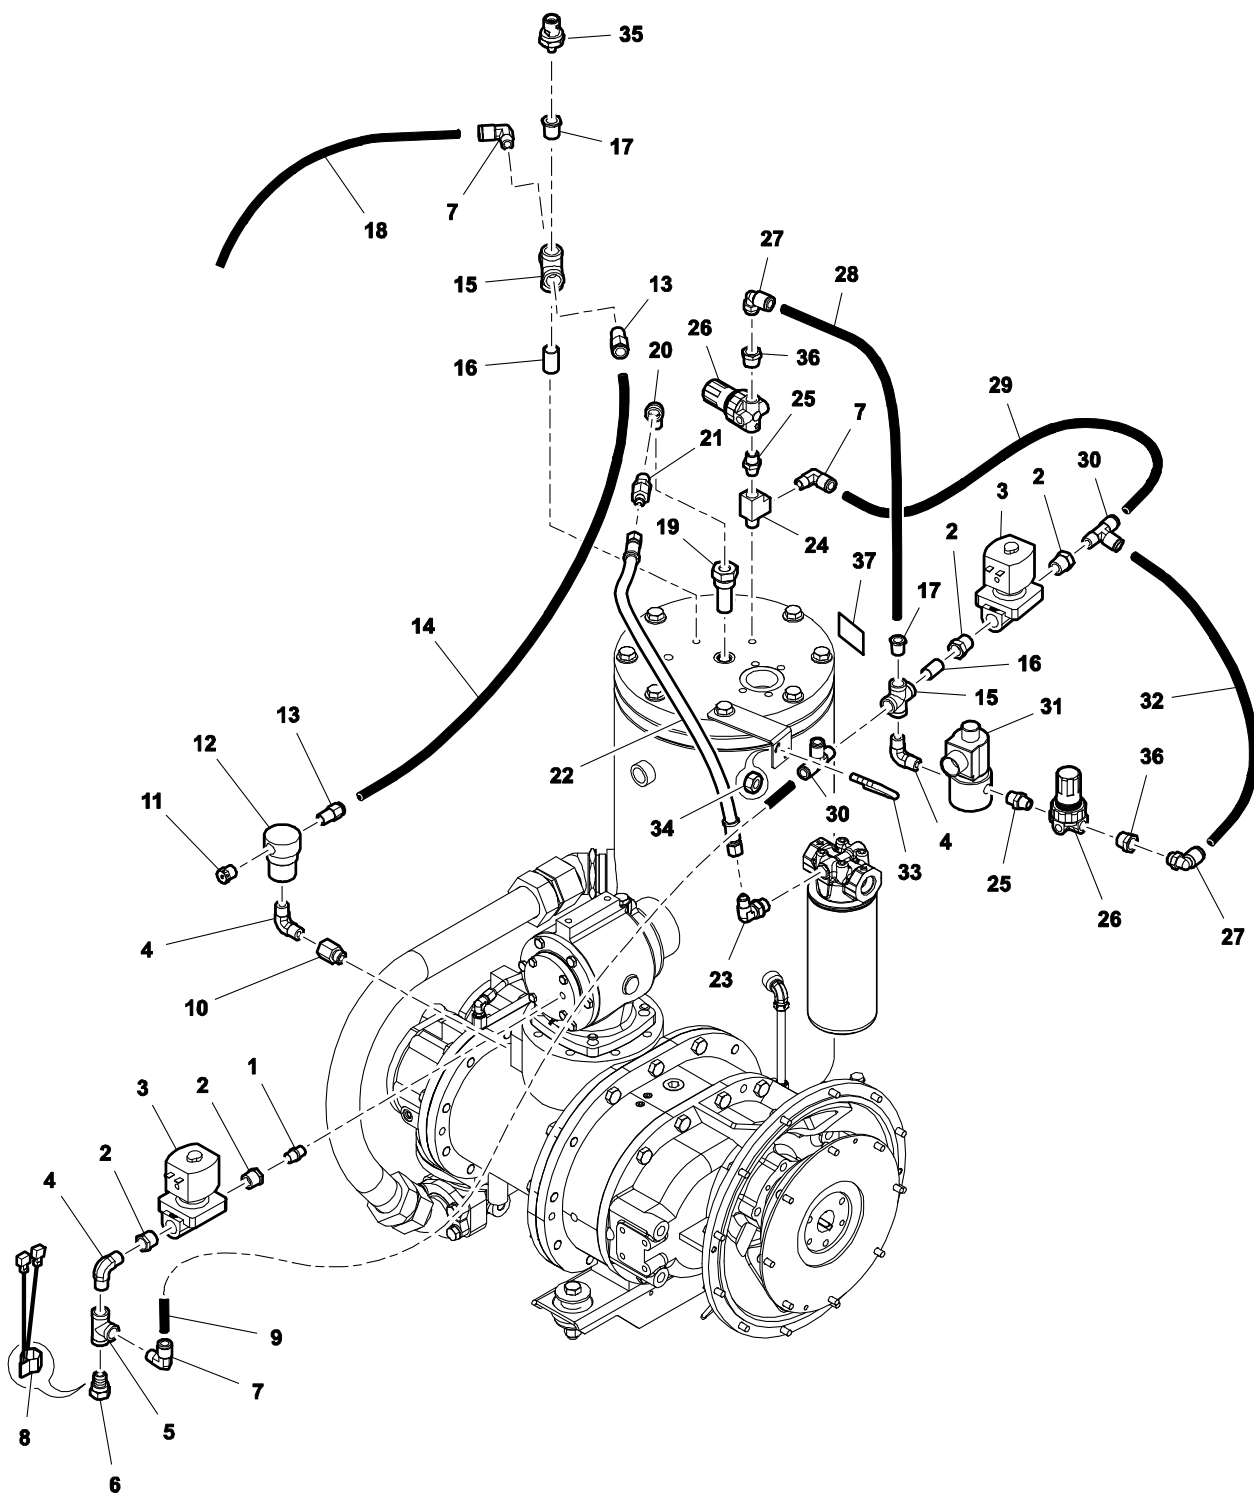

T3921_02
04/16

[illegible][illegible]

OIL PIPING

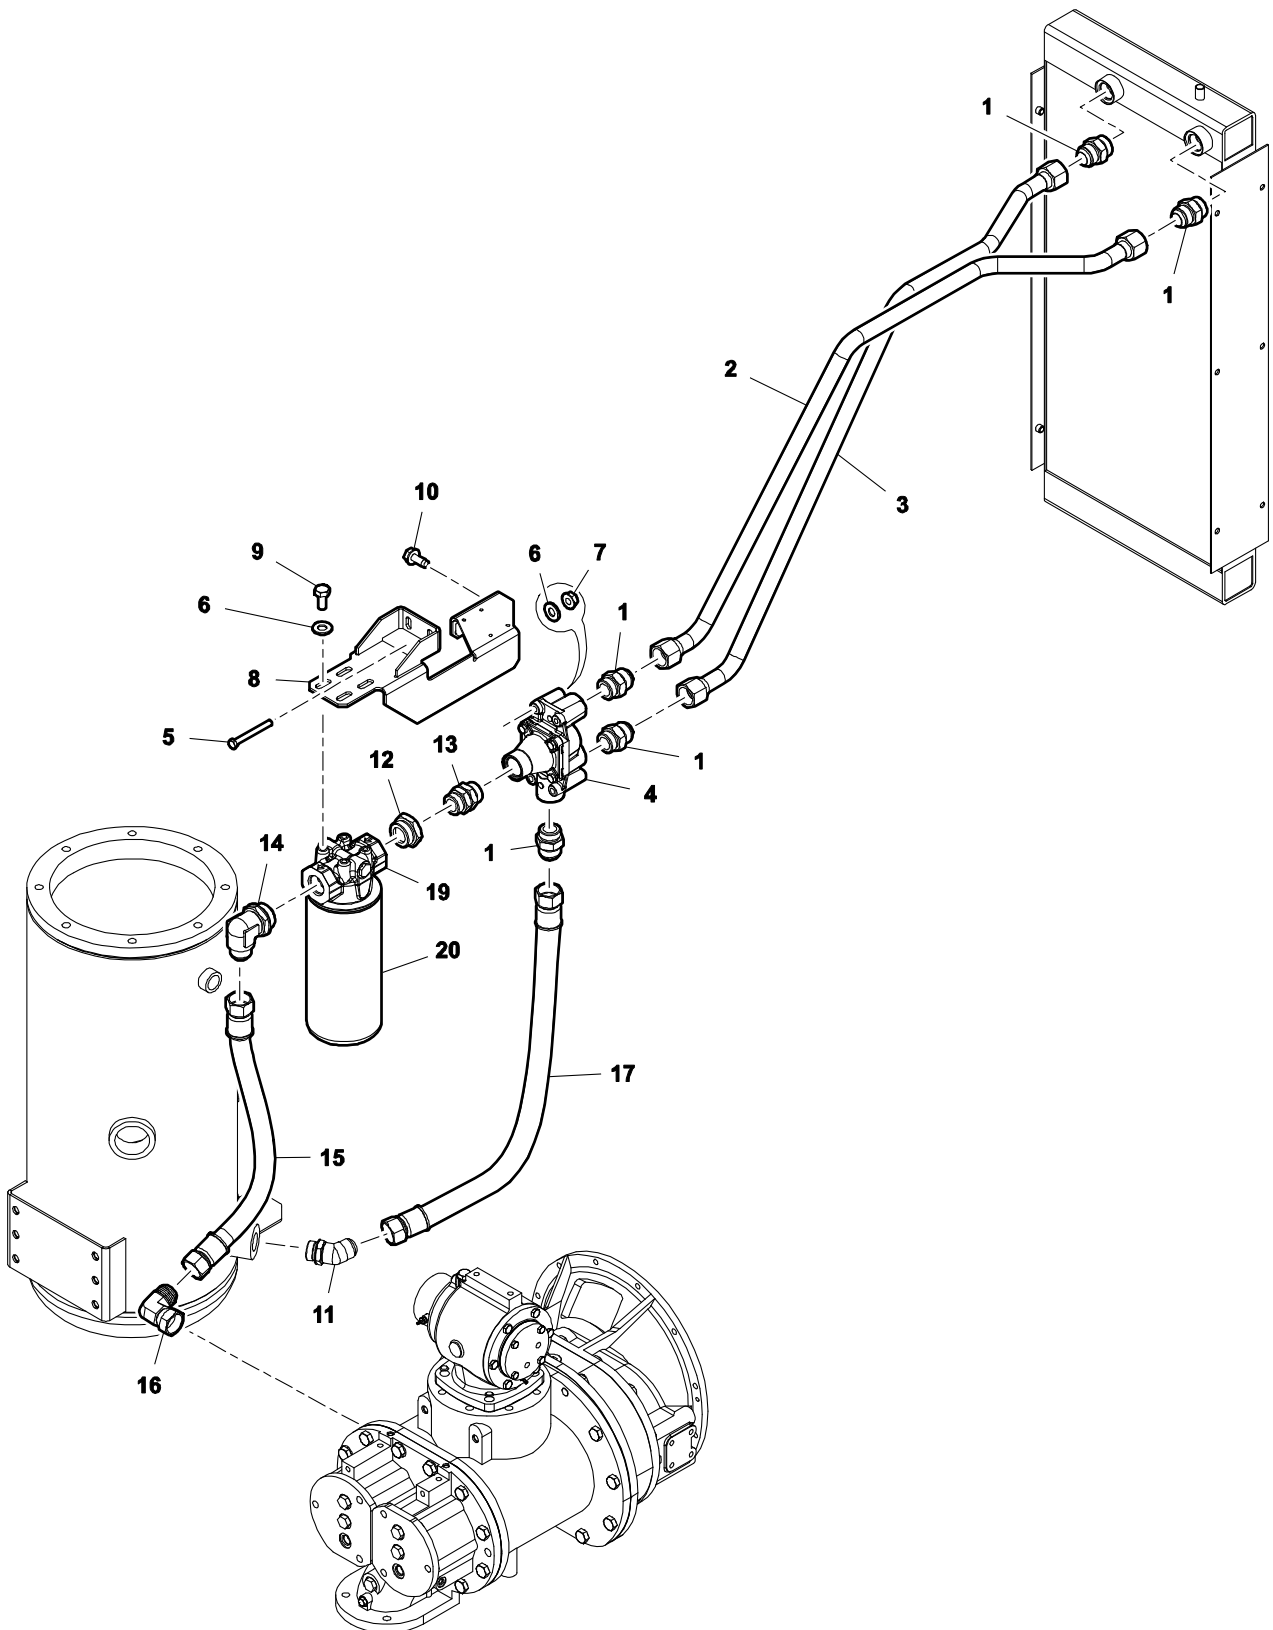


T3919_00
07/13

OIL PIPING	
------------	--

[illegible]


OIL TEMPERATURE BYPASS VALVE

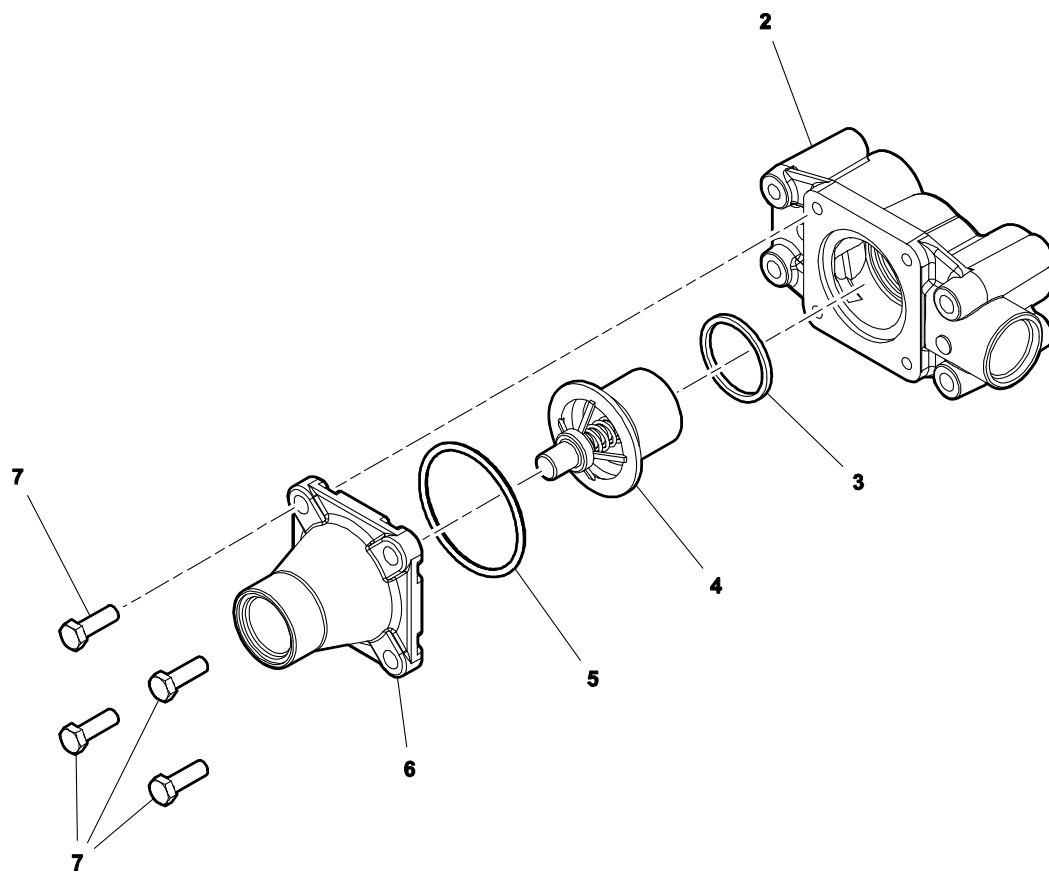

T3980_00
09/13

[illegible]


ENGINE ASSEMBLY

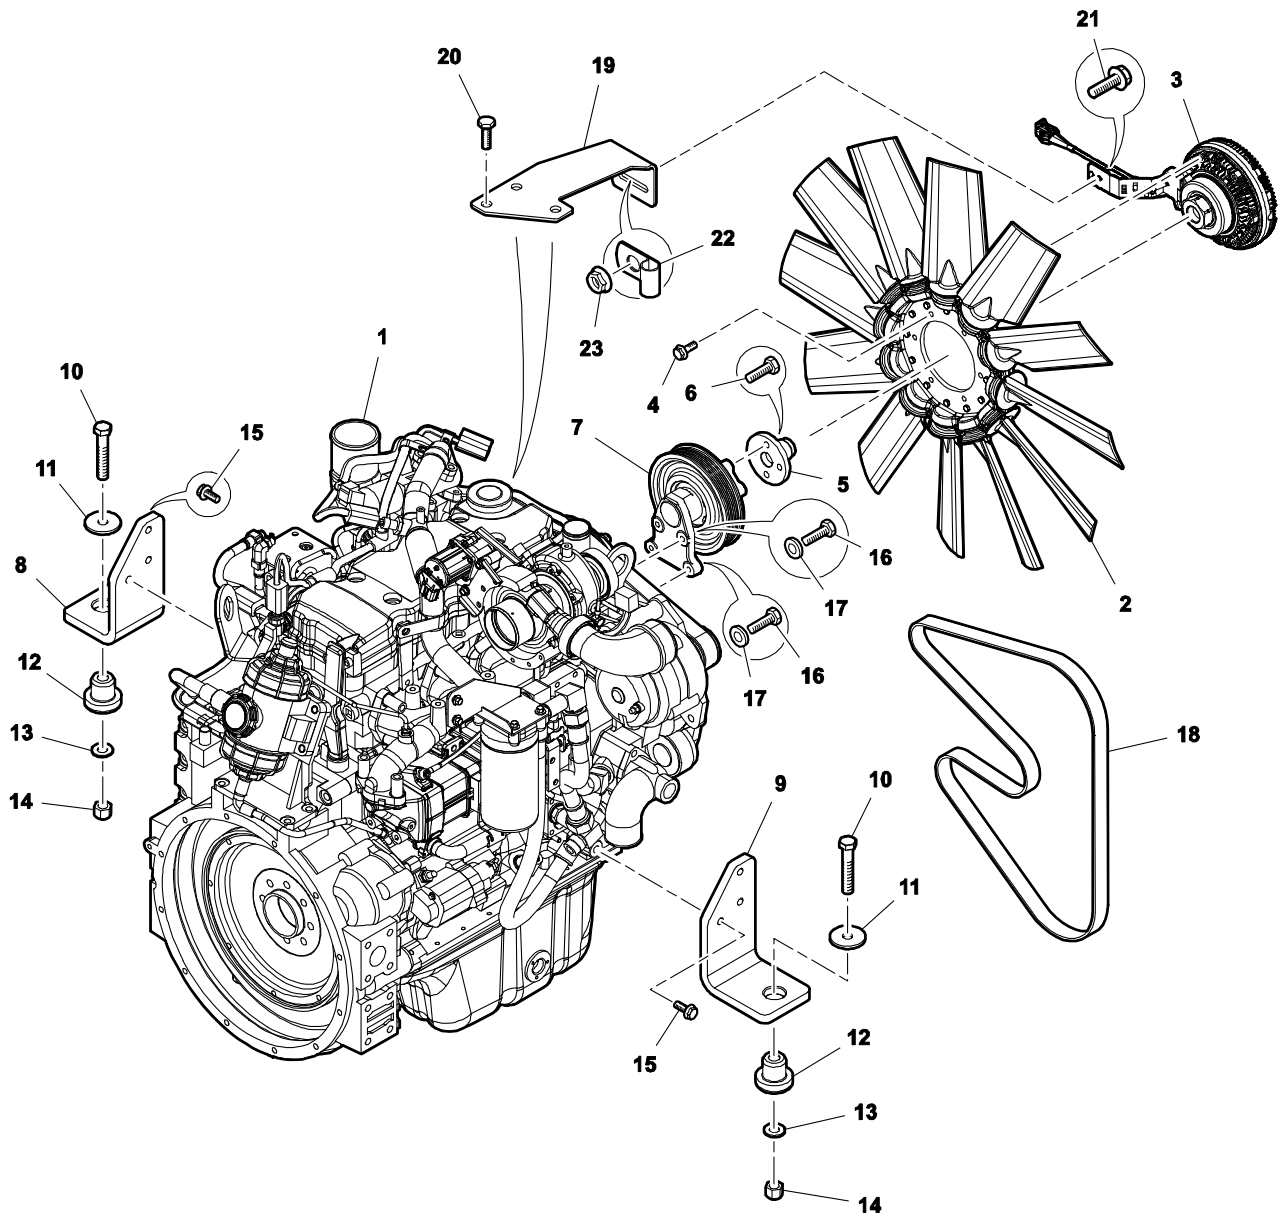

T3926_00
06/13

[illegible]

REMOTE ENGINE OIL FILTER

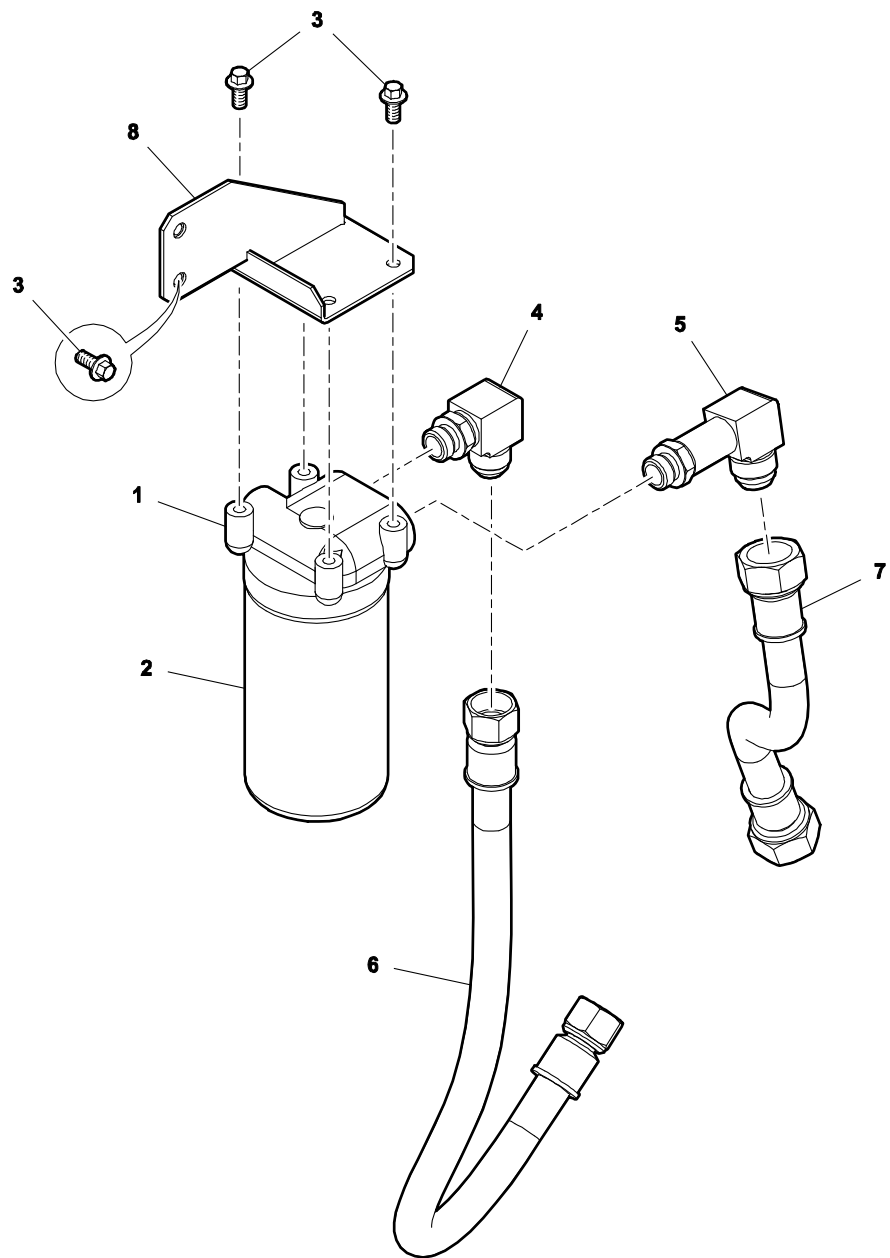


T3968_00
09/13

REMOTE ENGINE OIL FILTER

[illegible]

EXHAUST SYSTEM

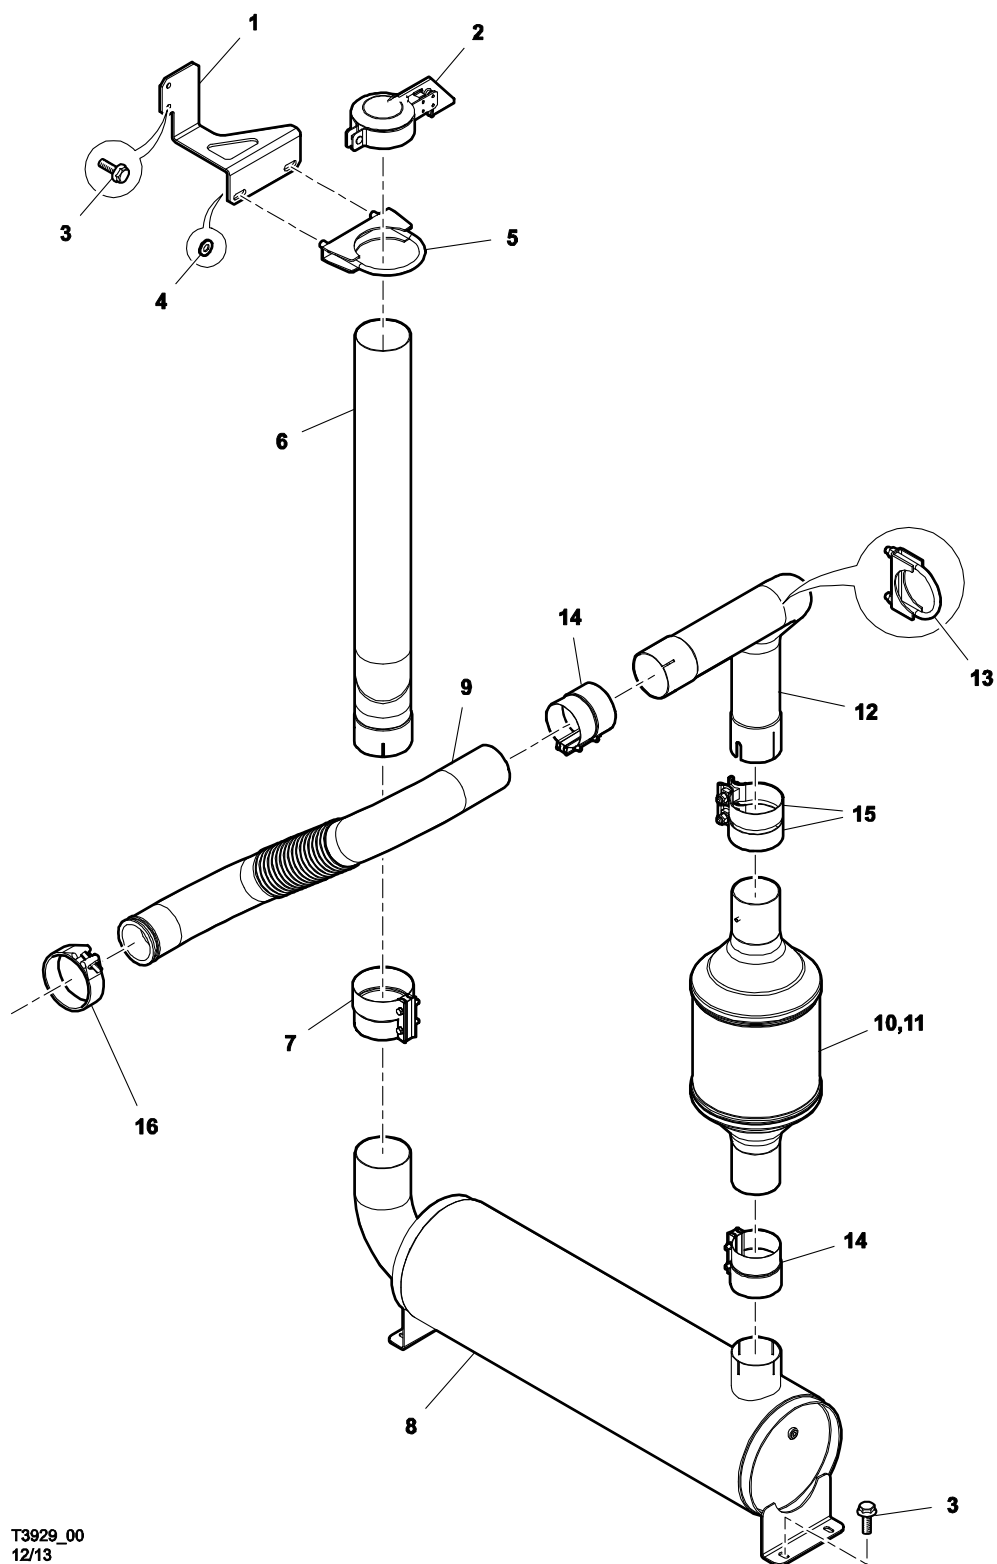


T3929_00
12/13

EXHAUST SYSTEM	
----------------	--

[illegible]


AIR INTAKE SYSTEM

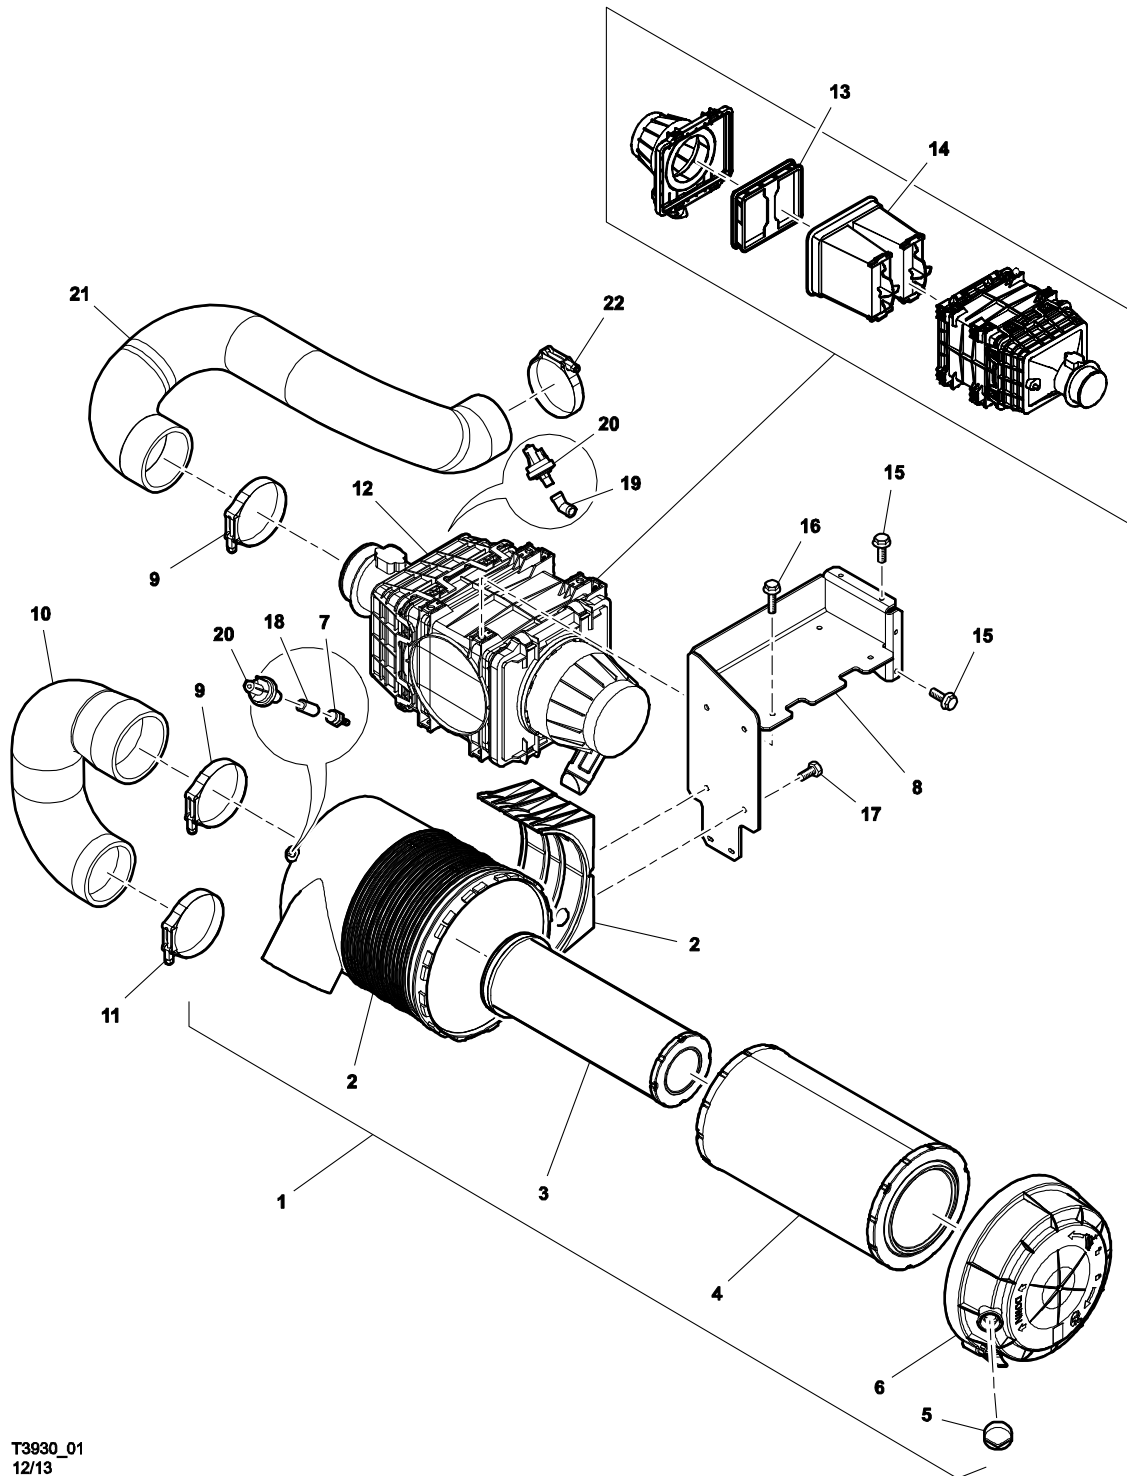

T3930_01
12/13

[illegible]

FUEL SYSTEM

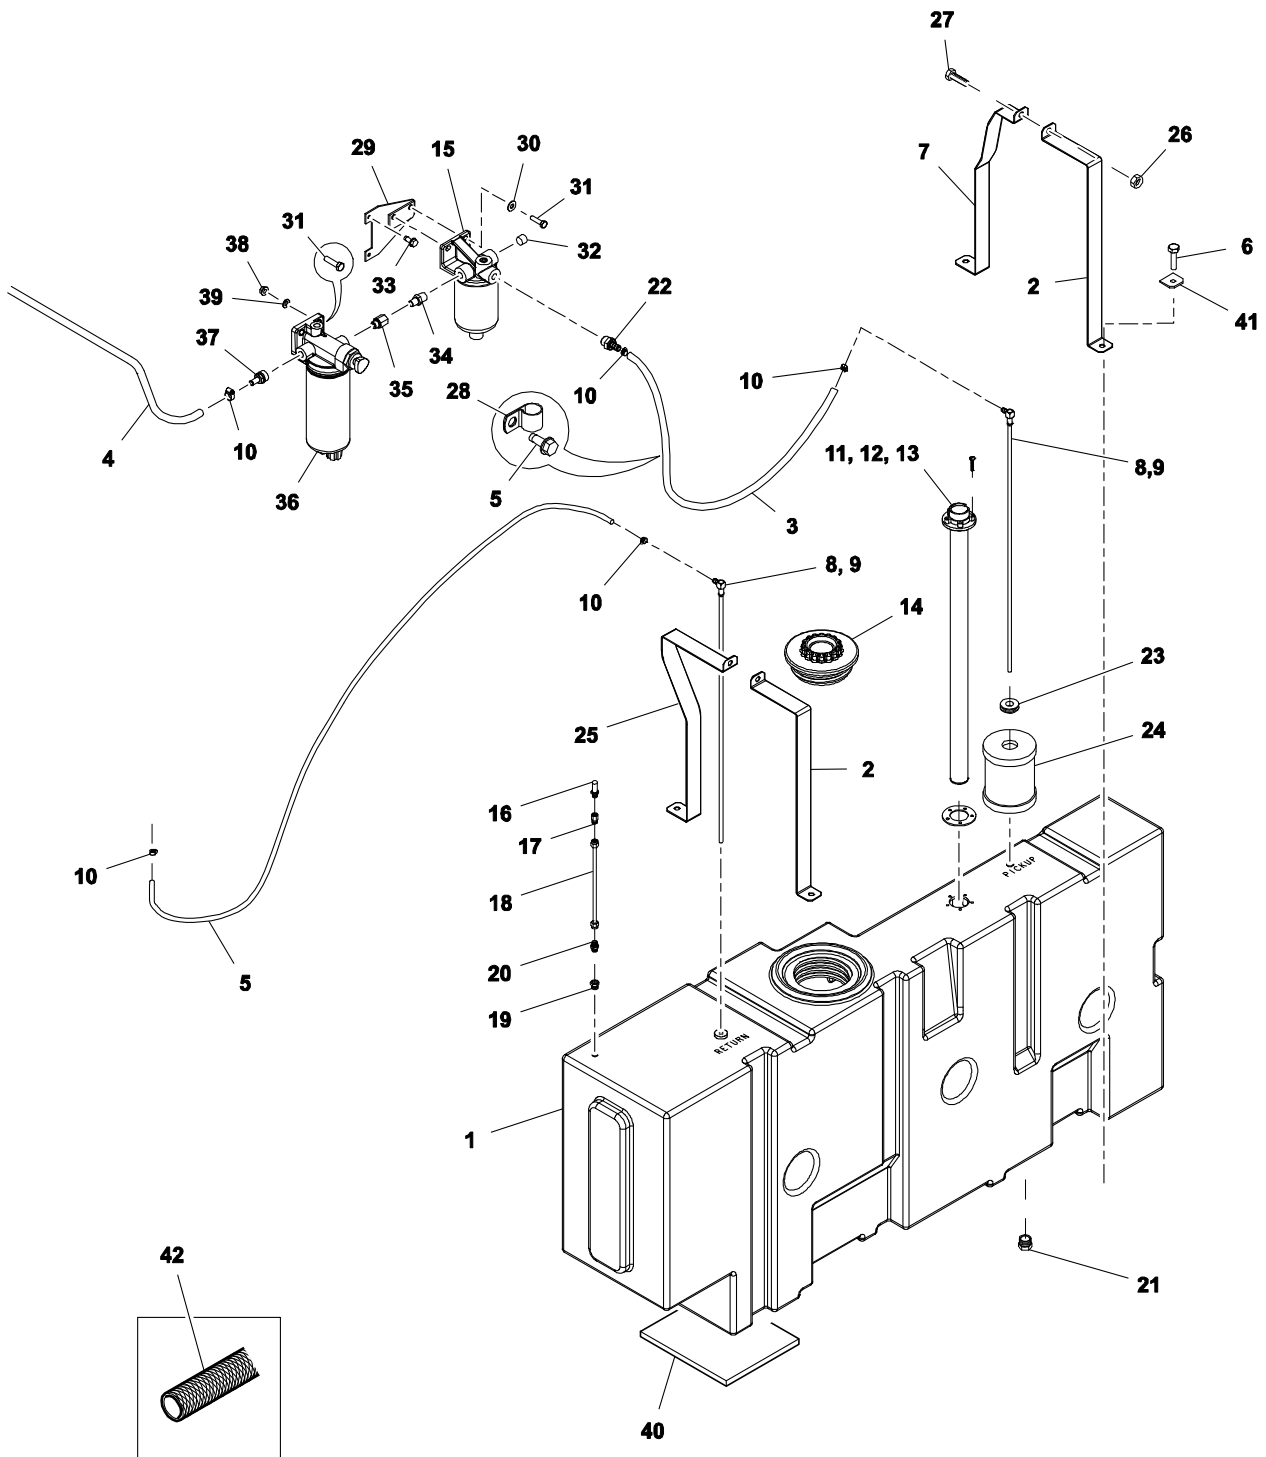


T3934_02
03/16

FUEL SYSTEM

Item	Part Number	Description	Remarks	Serial Number	Qty
1	54633938	TANK, FUEL	W/Ref. 8-9		1
2	46568219	STRAP, FUEL TANK			2
3	35285600	HOSE	(1270 mm long) - (9.5 mm (3/8") ID)		1
4	35285600	HOSE	(1422 mm long) - (9.5 mm (3/8") ID)		1
5	35285600	HOSE	(1422 mm long) - (9.5 mm (3/8") ID)		1
6	35279025	SCREW			5
7	46568222	STRAP, FUEL TANK			1
8	54675863	STANDPIPE ASSEMBLY			2
9	35384577	BUSH			2
10	35296342	CLIP, RETAINING			6
11	46570900	SENDER, FUEL LEVEL			1
12	35361849	GASKET			1
13	95916532	SCREW			5
14	54660089	CAP, FUEL TANK			1
15	46625174	FUEL FILTER ASSEMBLY			1
16	35322395	SILENCER, PNEUMATIC			1
17	35369339	CONNECTOR			1
18	35356484	TUBE, NYLON	(216 mm long)		1
19	95940748	BUSH, REDUCING			1
20	35369347	CONNECTOR			1
21	95280541	PLUG			1
23	92726017	GROMMET			1
24	92808666	FILTER, FUEL			1
25	46568221	STRAP, FUEL TANK			1
26	35273366	NUT			2
27	92280981	SCREW			2
28	35225077	CLAMP			1
29	46627969	BRACKET			1
30	92304609	WASHER			2
31	35271162	SCREW			4
32	95928222	PLUG			2

FUEL SYSTEM (CONT'D)

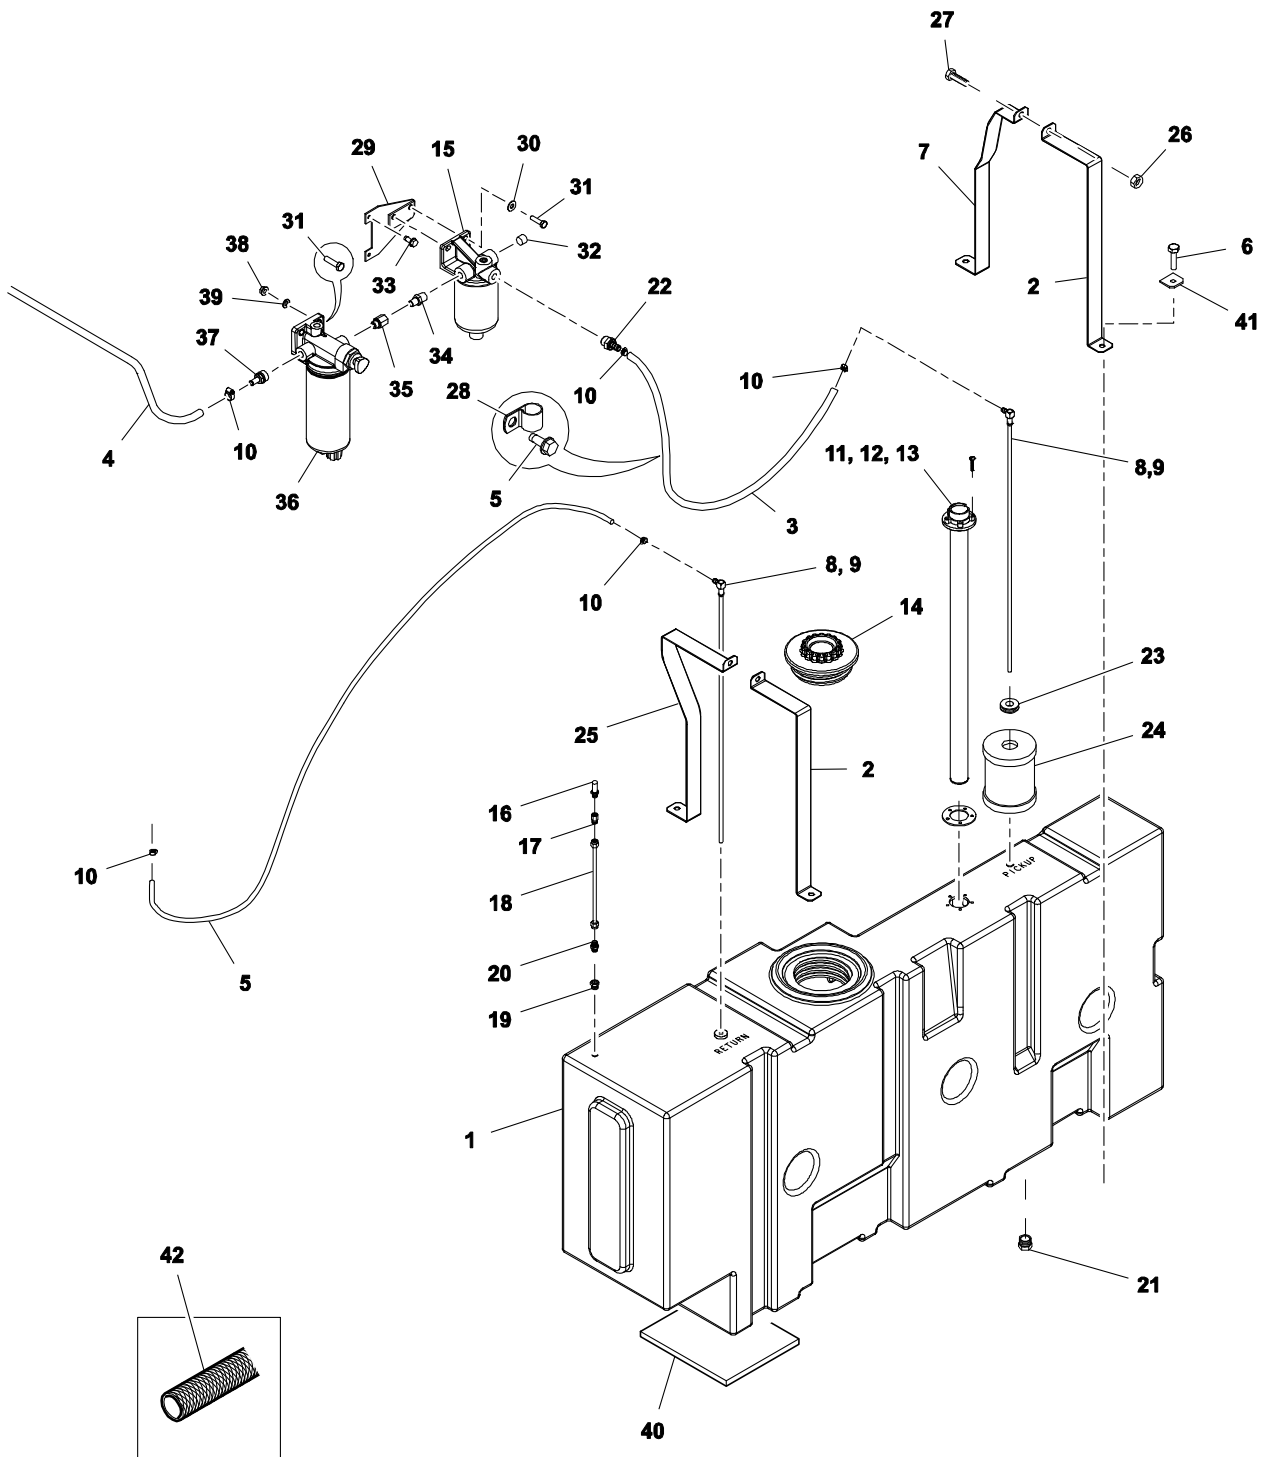


T3934_02
03/16

FUEL SYSTEM (CONT'D)	
----------------------	--

[illegible]

CRANKCASE BREATHER

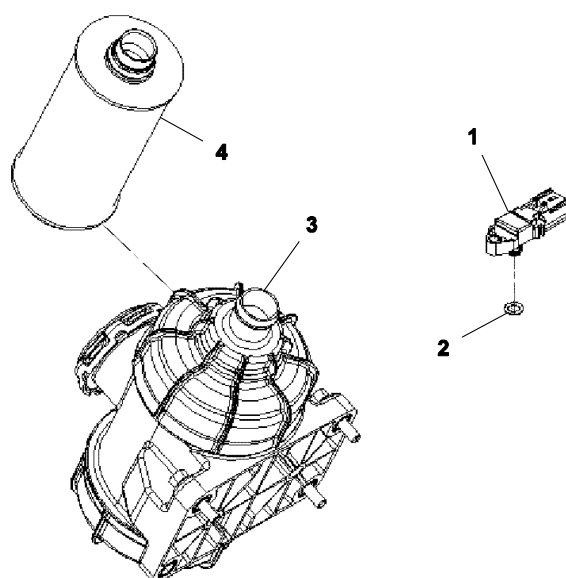


T3945_00
06/13

CRANKCASE BREATHER

[illegible]


ALTERNATOR

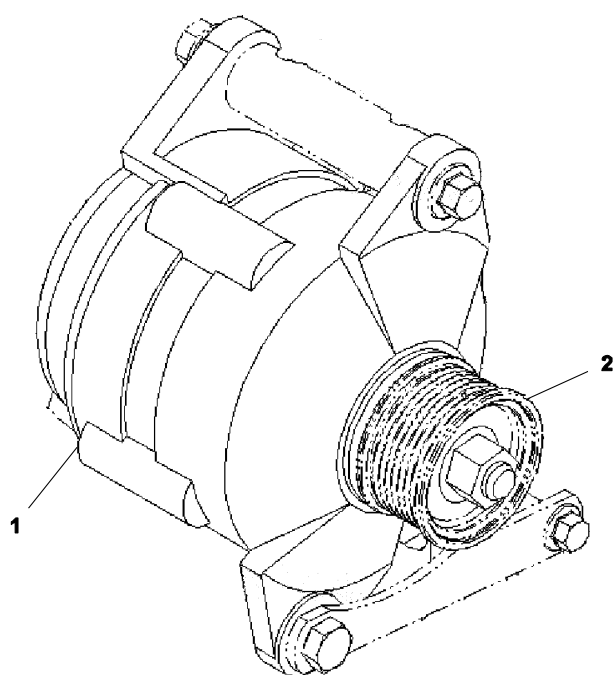

T3946_00
06/13

ALTERNATOR


EXHAUST RECIRCULATION

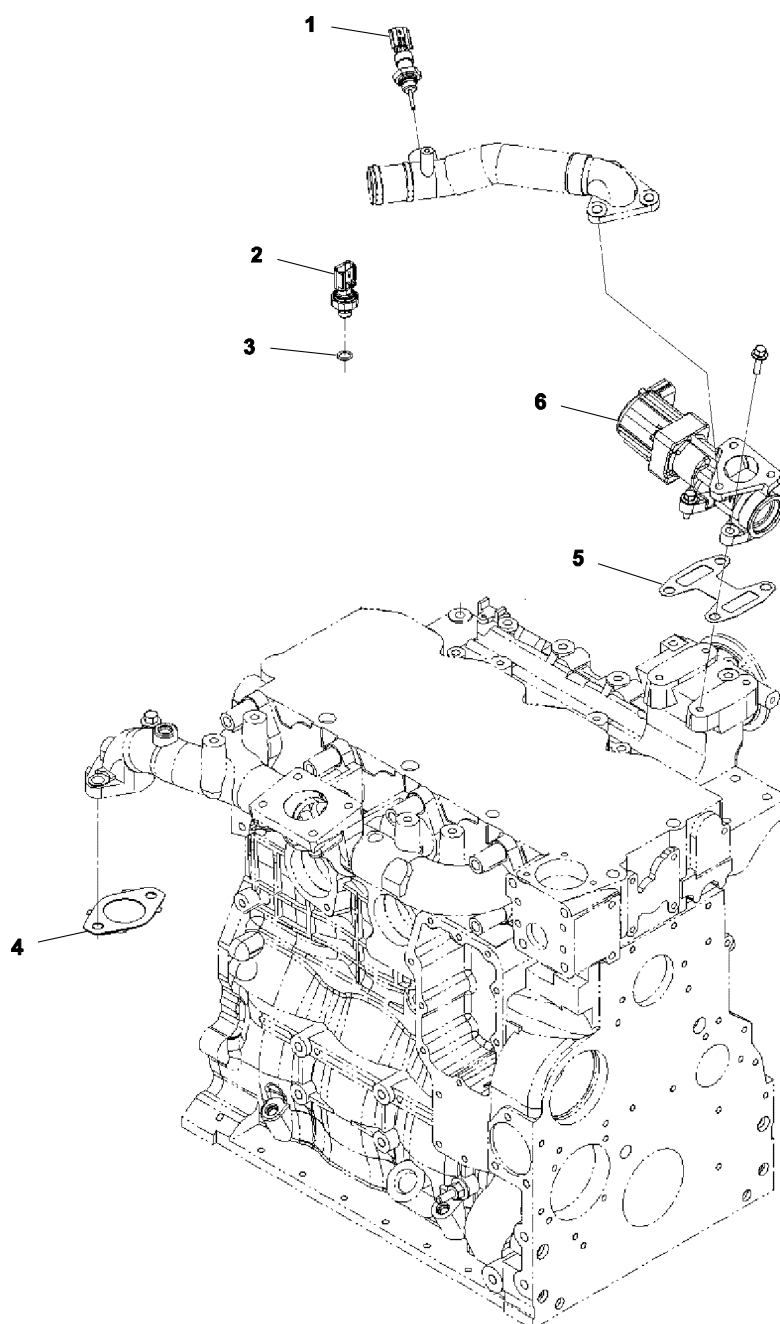

T3947_00
06/13

EXHAUST RECIRCULATION	
-----------------------	--


EXHAUST GASKET

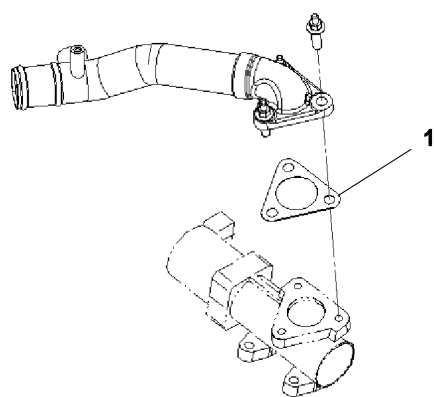

T3978_00
09/13

EXHAUST GASKET


FUEL FILTER

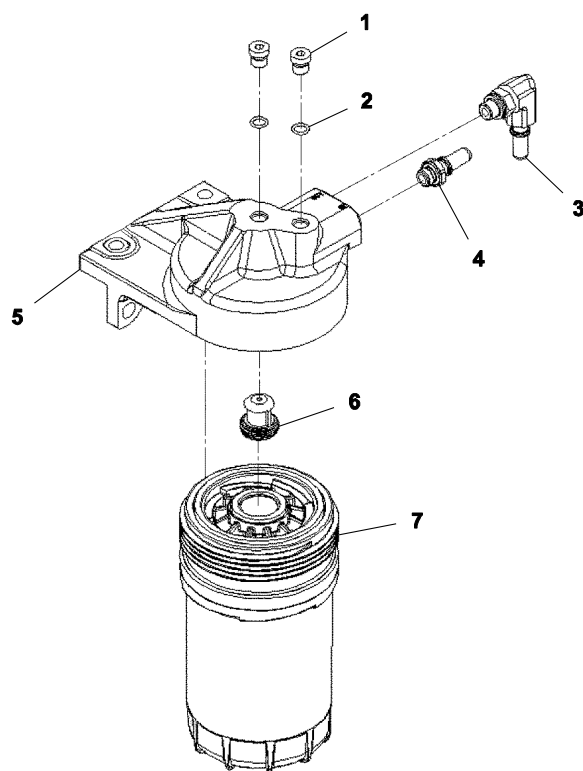

T3948_00
06/13

FUEL FILTER

FUEL PUMP

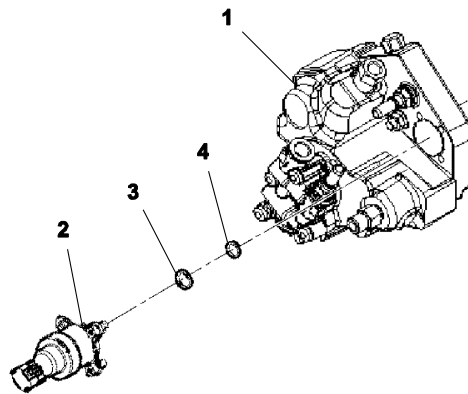


T3949_00
06/13

FUEL PUMP	
-----------	--

[illegible]

FUEL SYSTEM ACCESSORIES

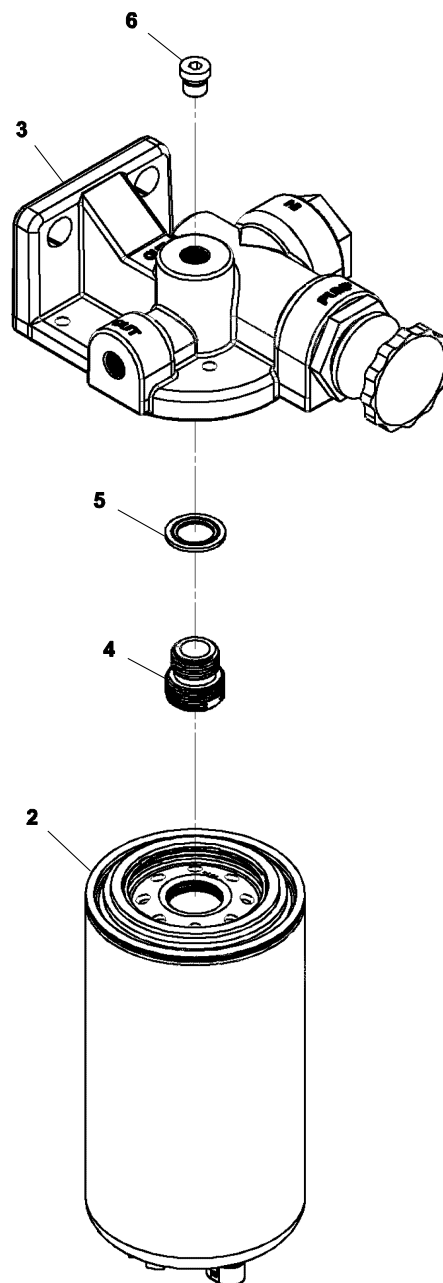


T3950_00
06/13

FUEL SYSTEM ACCESSORIES	
1	FUEL INJECTOR
2	FUEL INJECTOR
3	FUEL INJECTOR
4	FUEL INJECTOR
5	FUEL INJECTOR
6	FUEL INJECTOR
7	FUEL INJECTOR
8	FUEL INJECTOR
9	FUEL INJECTOR
10	FUEL INJECTOR
11	FUEL INJECTOR
12	FUEL INJECTOR
13	FUEL INJECTOR
14	FUEL INJECTOR
15	FUEL INJECTOR
16	FUEL INJECTOR
17	FUEL INJECTOR
18	FUEL INJECTOR
19	FUEL INJECTOR
20	FUEL INJECTOR
21	FUEL INJECTOR
22	FUEL INJECTOR
23	FUEL INJECTOR
24	FUEL INJECTOR
25	FUEL INJECTOR
26	FUEL INJECTOR
27	FUEL INJECTOR
28	FUEL INJECTOR
29	FUEL INJECTOR
30	FUEL INJECTOR
31	FUEL INJECTOR
32	FUEL INJECTOR
33	FUEL INJECTOR
34	FUEL INJECTOR
35	FUEL INJECTOR
36	FUEL INJECTOR
37	FUEL INJECTOR
38	FUEL INJECTOR
39	FUEL INJECTOR
40	FUEL INJECTOR
41	FUEL INJECTOR
42	FUEL INJECTOR
43	FUEL INJECTOR
44	FUEL INJECTOR
45	FUEL INJECTOR
46	FUEL INJECTOR
47	FUEL INJECTOR
48	FUEL INJECTOR
49	FUEL INJECTOR
50	FUEL INJECTOR
51	FUEL INJECTOR
52	FUEL INJECTOR
53	FUEL INJECTOR
54	FUEL INJECTOR
55	FUEL INJECTOR
56	FUEL INJECTOR
57	FUEL INJECTOR
58	FUEL INJECTOR
59	FUEL INJECTOR
60	FUEL INJECTOR
61	FUEL INJECTOR
62	FUEL INJECTOR
63	FUEL INJECTOR
64	FUEL INJECTOR
65	FUEL INJECTOR
66	FUEL INJECTOR
67	FUEL INJECTOR
68	FUEL INJECTOR
69	FUEL INJECTOR
70	FUEL INJECTOR
71	FUEL INJECTOR
72	FUEL INJECTOR
73	FUEL INJECTOR
74	FUEL INJECTOR
75	FUEL INJECTOR
76	FUEL INJECTOR
77	FUEL INJECTOR
78	FUEL INJECTOR
79	FUEL INJECTOR
80	FUEL INJECTOR
81	FUEL INJECTOR
82	FUEL INJECTOR
83	FUEL INJECTOR
84	FUEL INJECTOR
85	FUEL INJECTOR
86	FUEL INJECTOR
87	FUEL INJECTOR
88	FUEL INJECTOR
89	FUEL INJECTOR
90	FUEL INJECTOR
91	FUEL INJECTOR
92	FUEL INJECTOR
93	FUEL INJECTOR
94	FUEL INJECTOR
95	FUEL INJECTOR
96	FUEL INJECTOR
97	FUEL INJECTOR
98	FUEL INJECTOR
99	FUEL INJECTOR
100	FUEL INJECTOR

[illegible]

AIR INTAKE CONNECTION

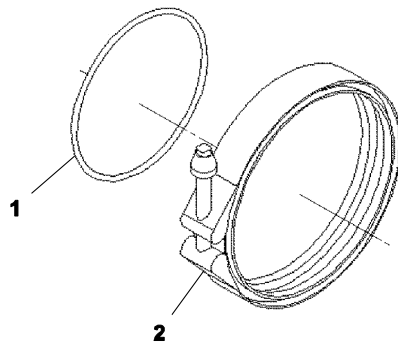


T3951_00
06/13

AIR INTAKE CONNECTION

[illegible]

AIR TRANSFER CONNECTION

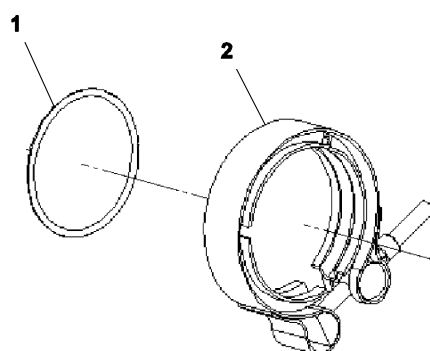


T3952_00
06/13

AIR TRANSFER CONNECTION

[illegible]

AIR INTAKE MANIFOLD

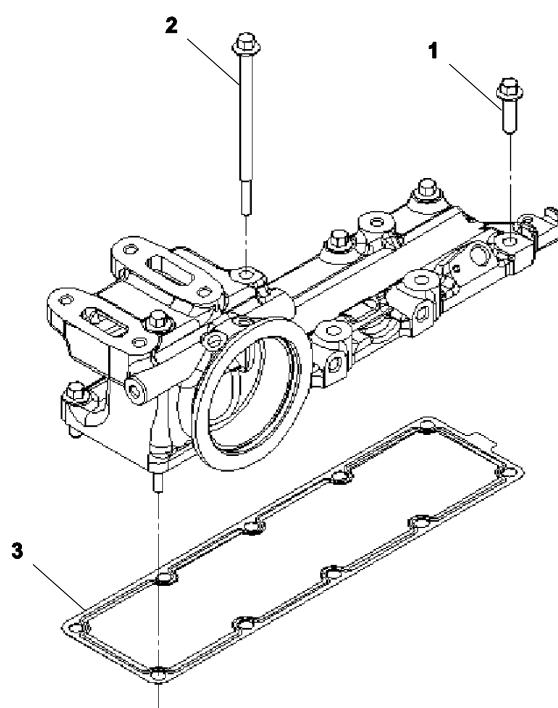


T3953_00
06/13

AIR INTAKE MANIFOLD

[illegible]

ENGINE OIL COOLER

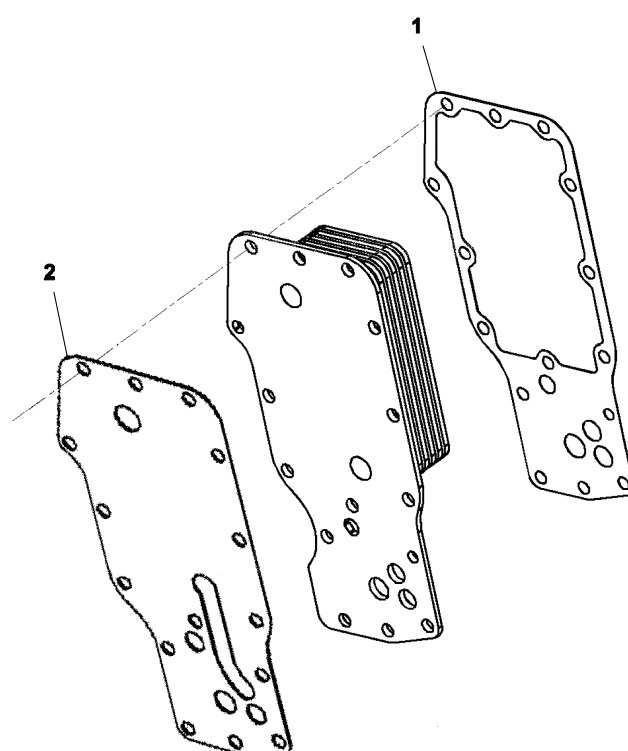


T3954_00
06/13

ENGINE OIL COOLER

[illegible]

OIL LEVEL GAUGE

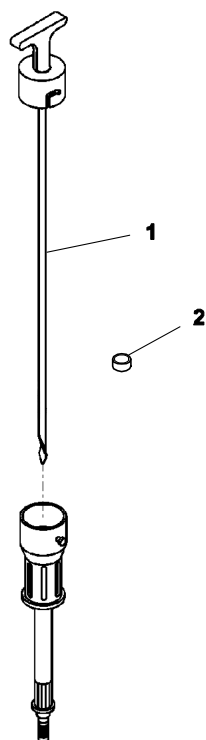


T3956_00
06/13

OIL LEVEL GAUGE

[illegible]

OIL FILL ARRANGEMENT

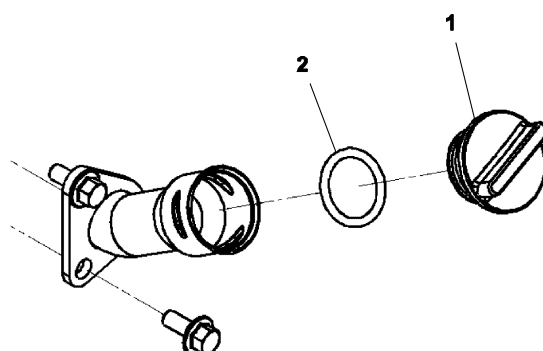


T3957_00
06/13

OIL FILL ARRANGEMENT	
----------------------	--

[illegible]

OIL PAN

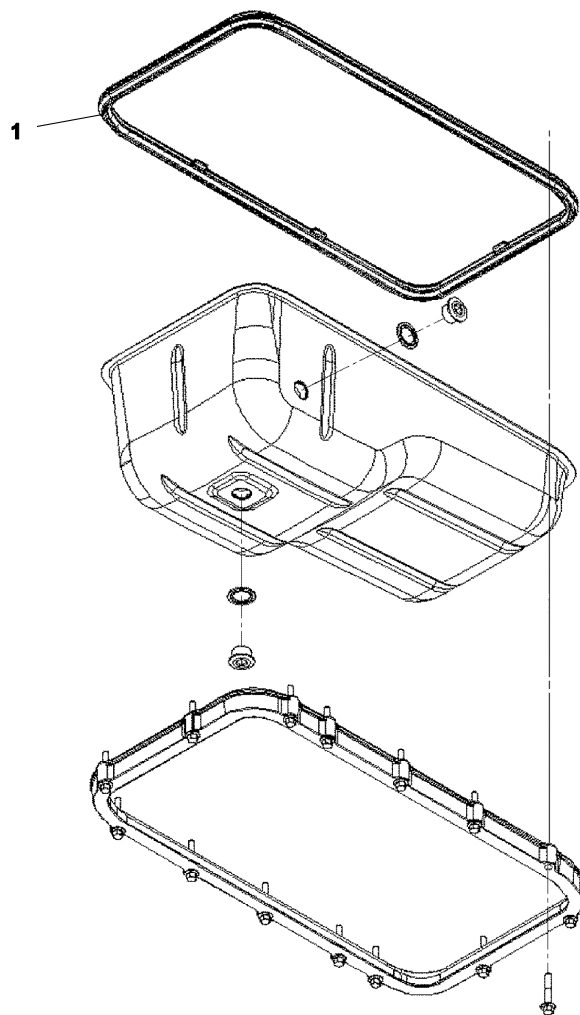


T3958_00
06/13

OIL PAN

[illegible]

ENGINE CONTROL MODULE

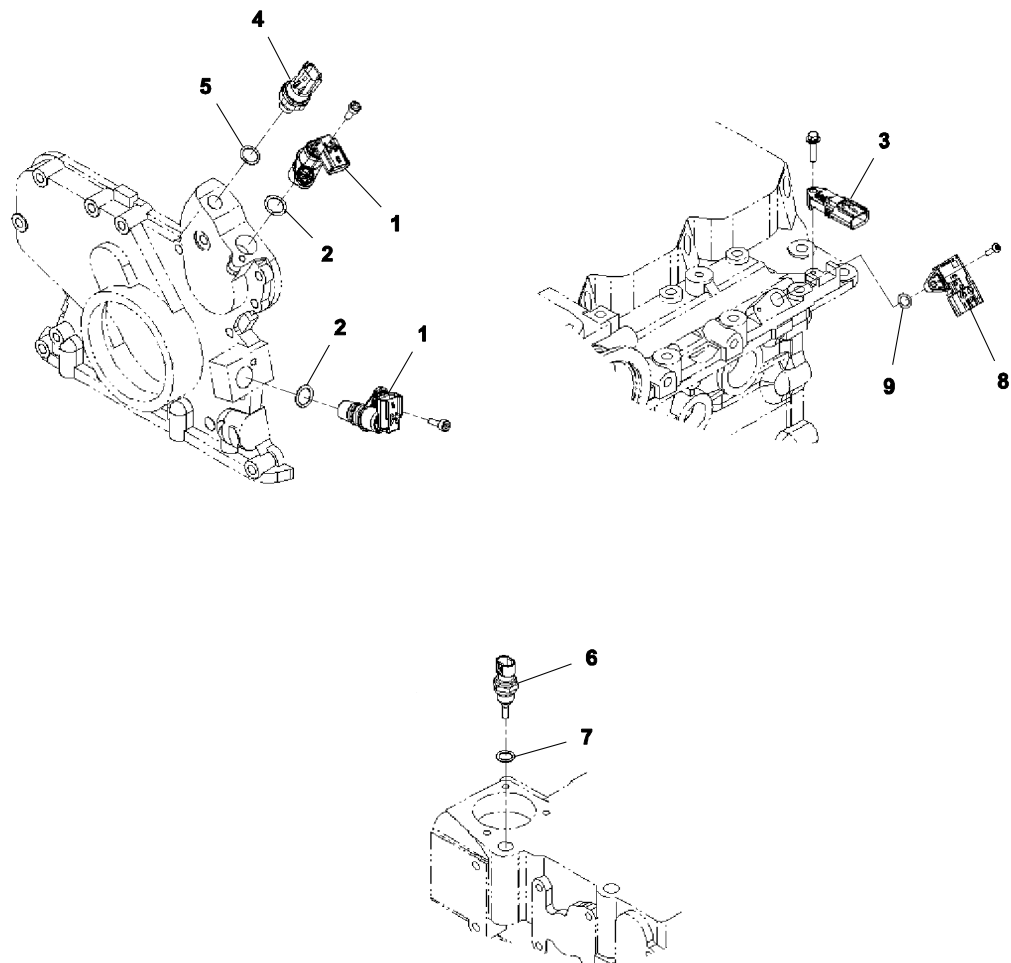


T3959_02
09/13

ENGINE CONTROL MODULE

[illegible]

FUEL INJECTOR

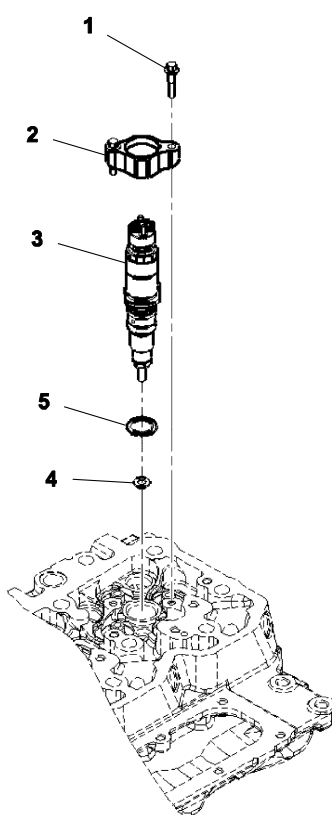


T3960_00
06/13

FUEL INJECTOR	
---------------	--

[illegible]

INJECTOR PIPING

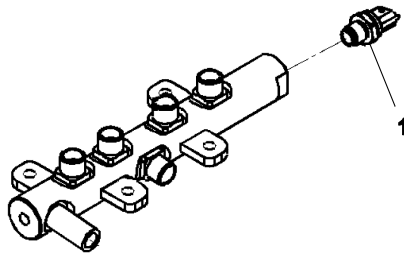


T3979_00
09/13

INJECTOR PIPING	
-----------------	--

[illegible]

TURBOCHARGER

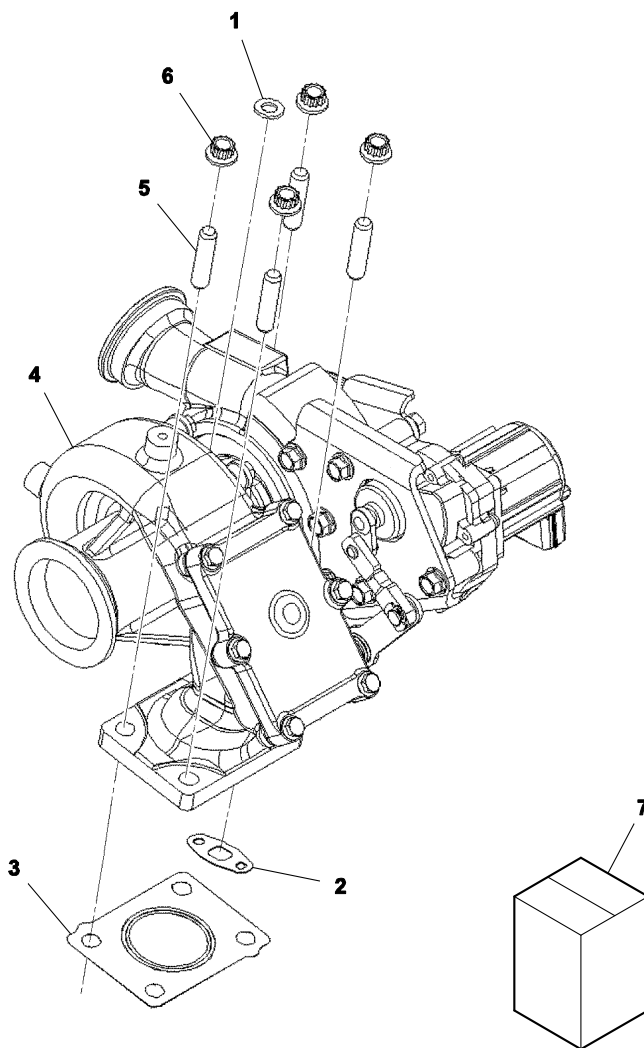


T3961_00
06/13

TURBOCHARGER	
--------------	--

[illegible]

STARTING MOTOR AND MOUNTING

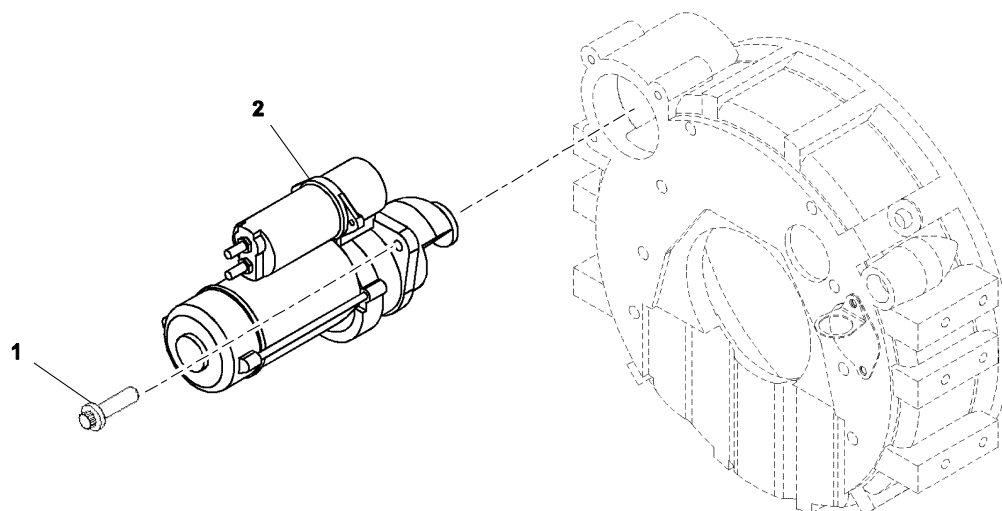


T3962_00
06/13

STARTING MOTOR AND MOUNTING

[illegible]

EXHAUST MANIFOLD

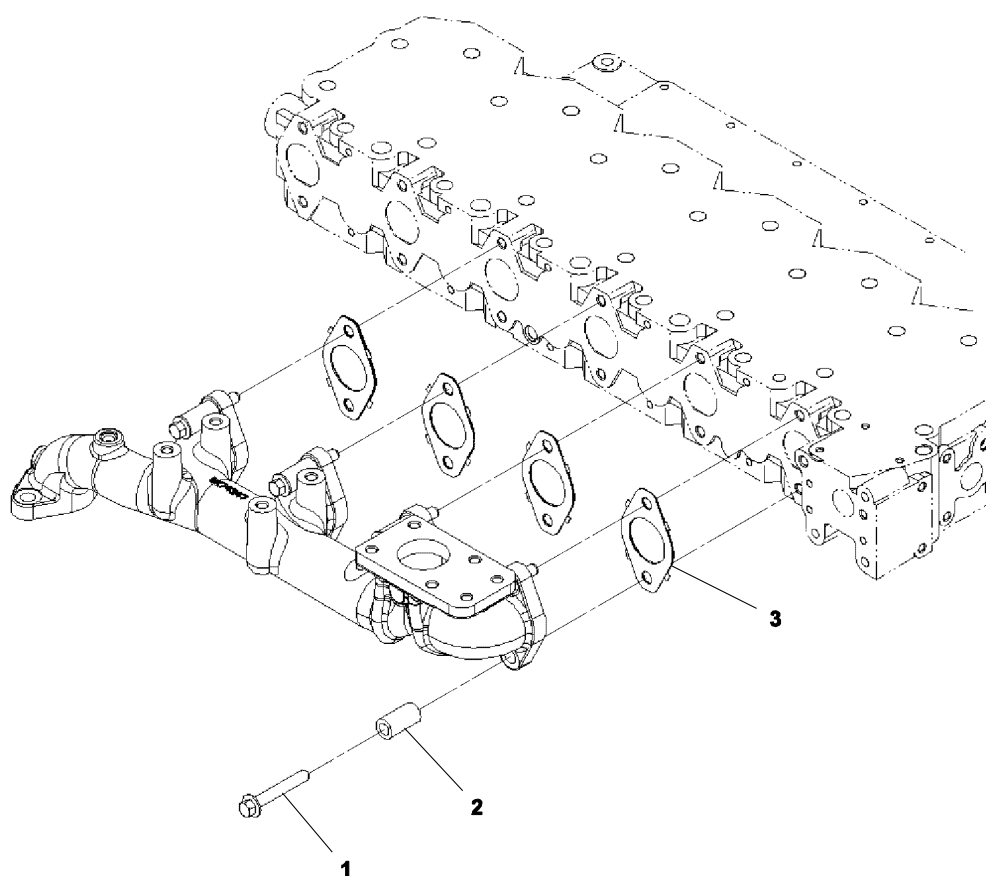


T3963_00
06/13

EXHAUST MANIFOLD	
------------------	--

[illegible]

VALVE COVER

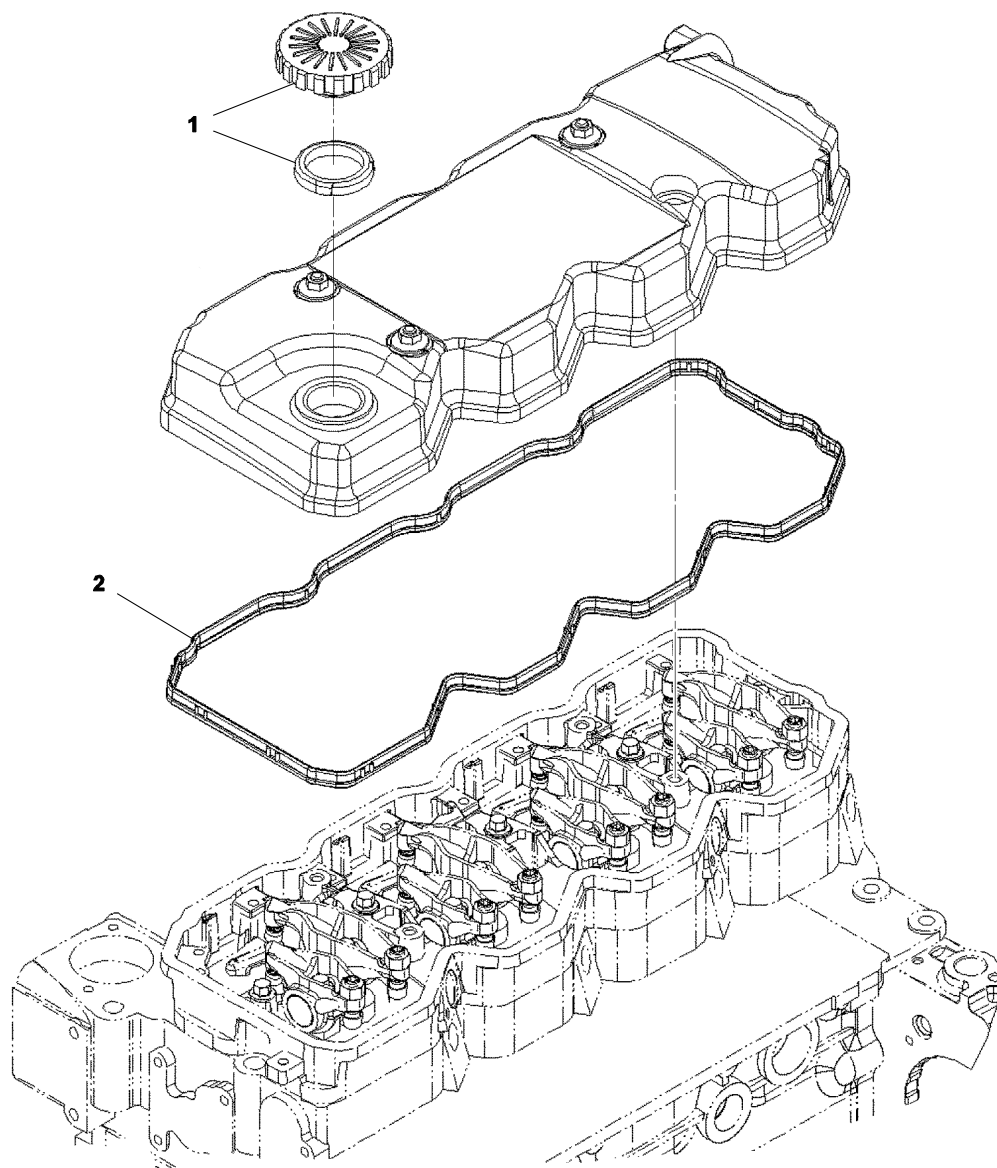


T3964_00
06/13

VALVE COVER	
-------------	--

[illegible]

WATER PUMP

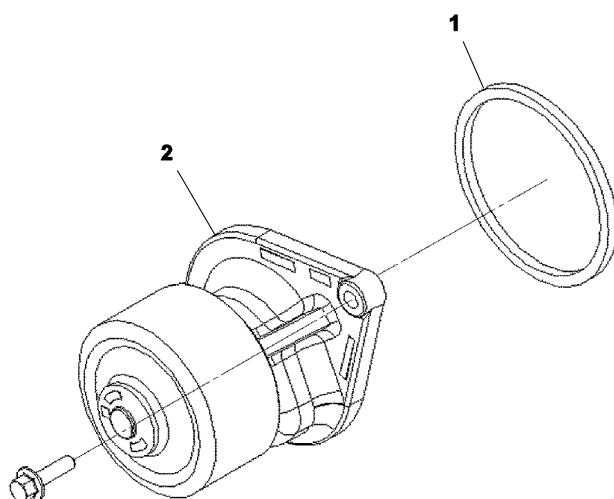


T3965_00
06/13

WATER PUMP	
------------	--

[illegible]

BELT TENSIONER

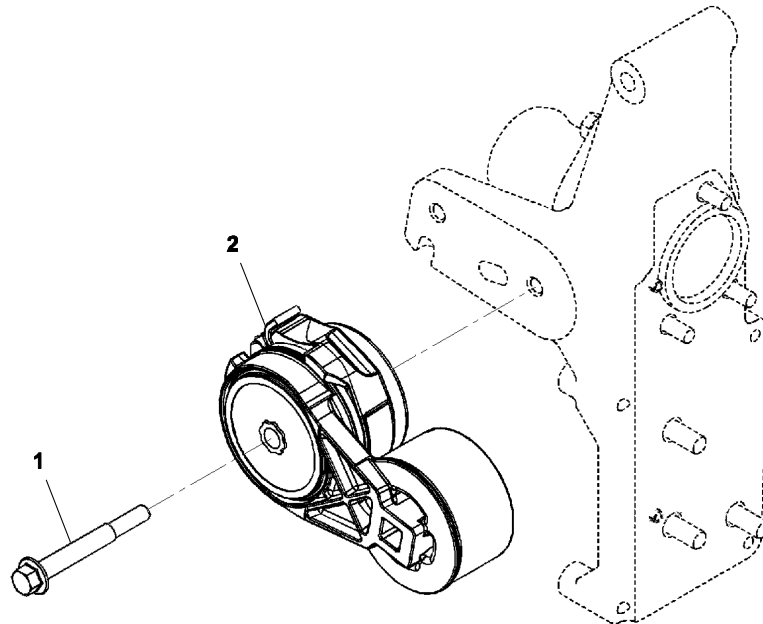


T3966_00
06/13

BELT TENSIONER

[illegible]

EXHAUST OUTLET CONNECTION

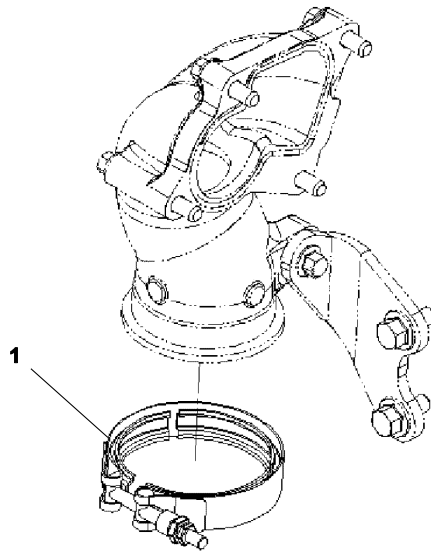


T3967_00
06/13

EXHAUST OUTLET CONNECTION

[illegible]

WIRING HARNESS

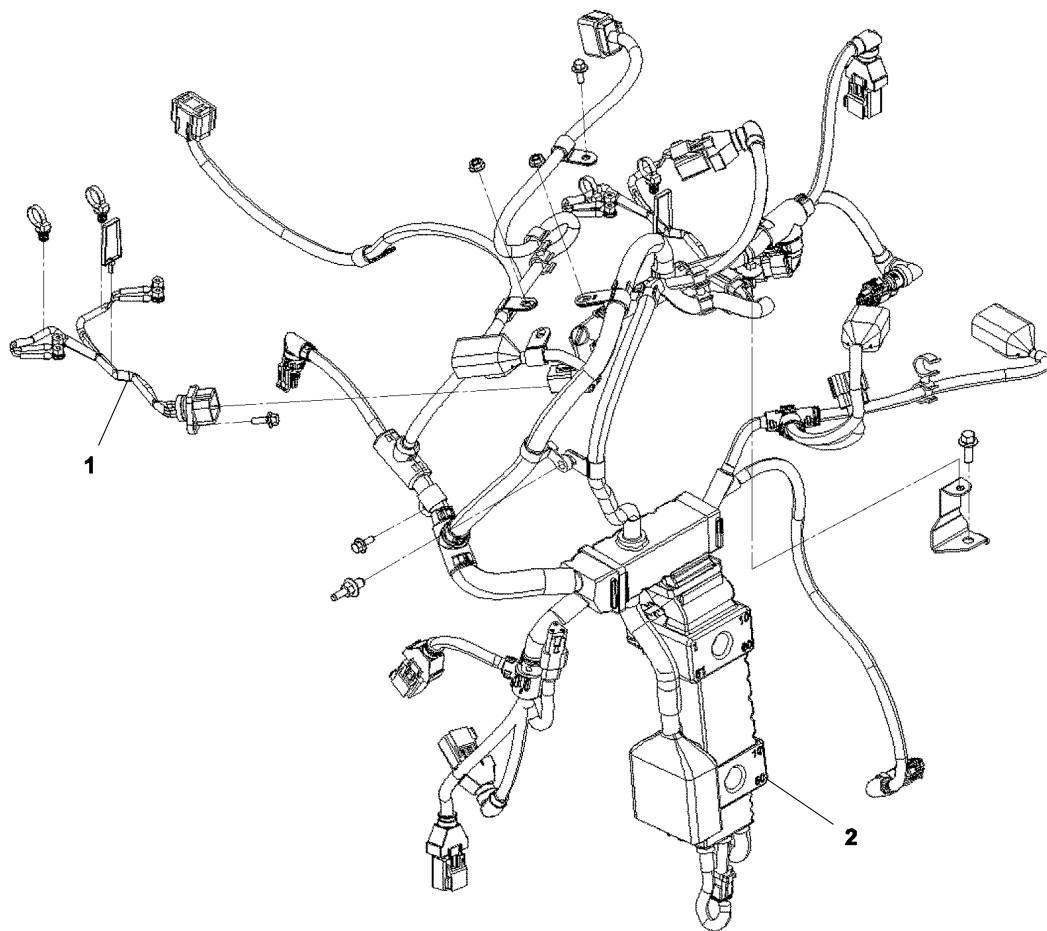


T3977_00
09/13

WIRING HARNESS

[illegible]


COOLING SYSTEM

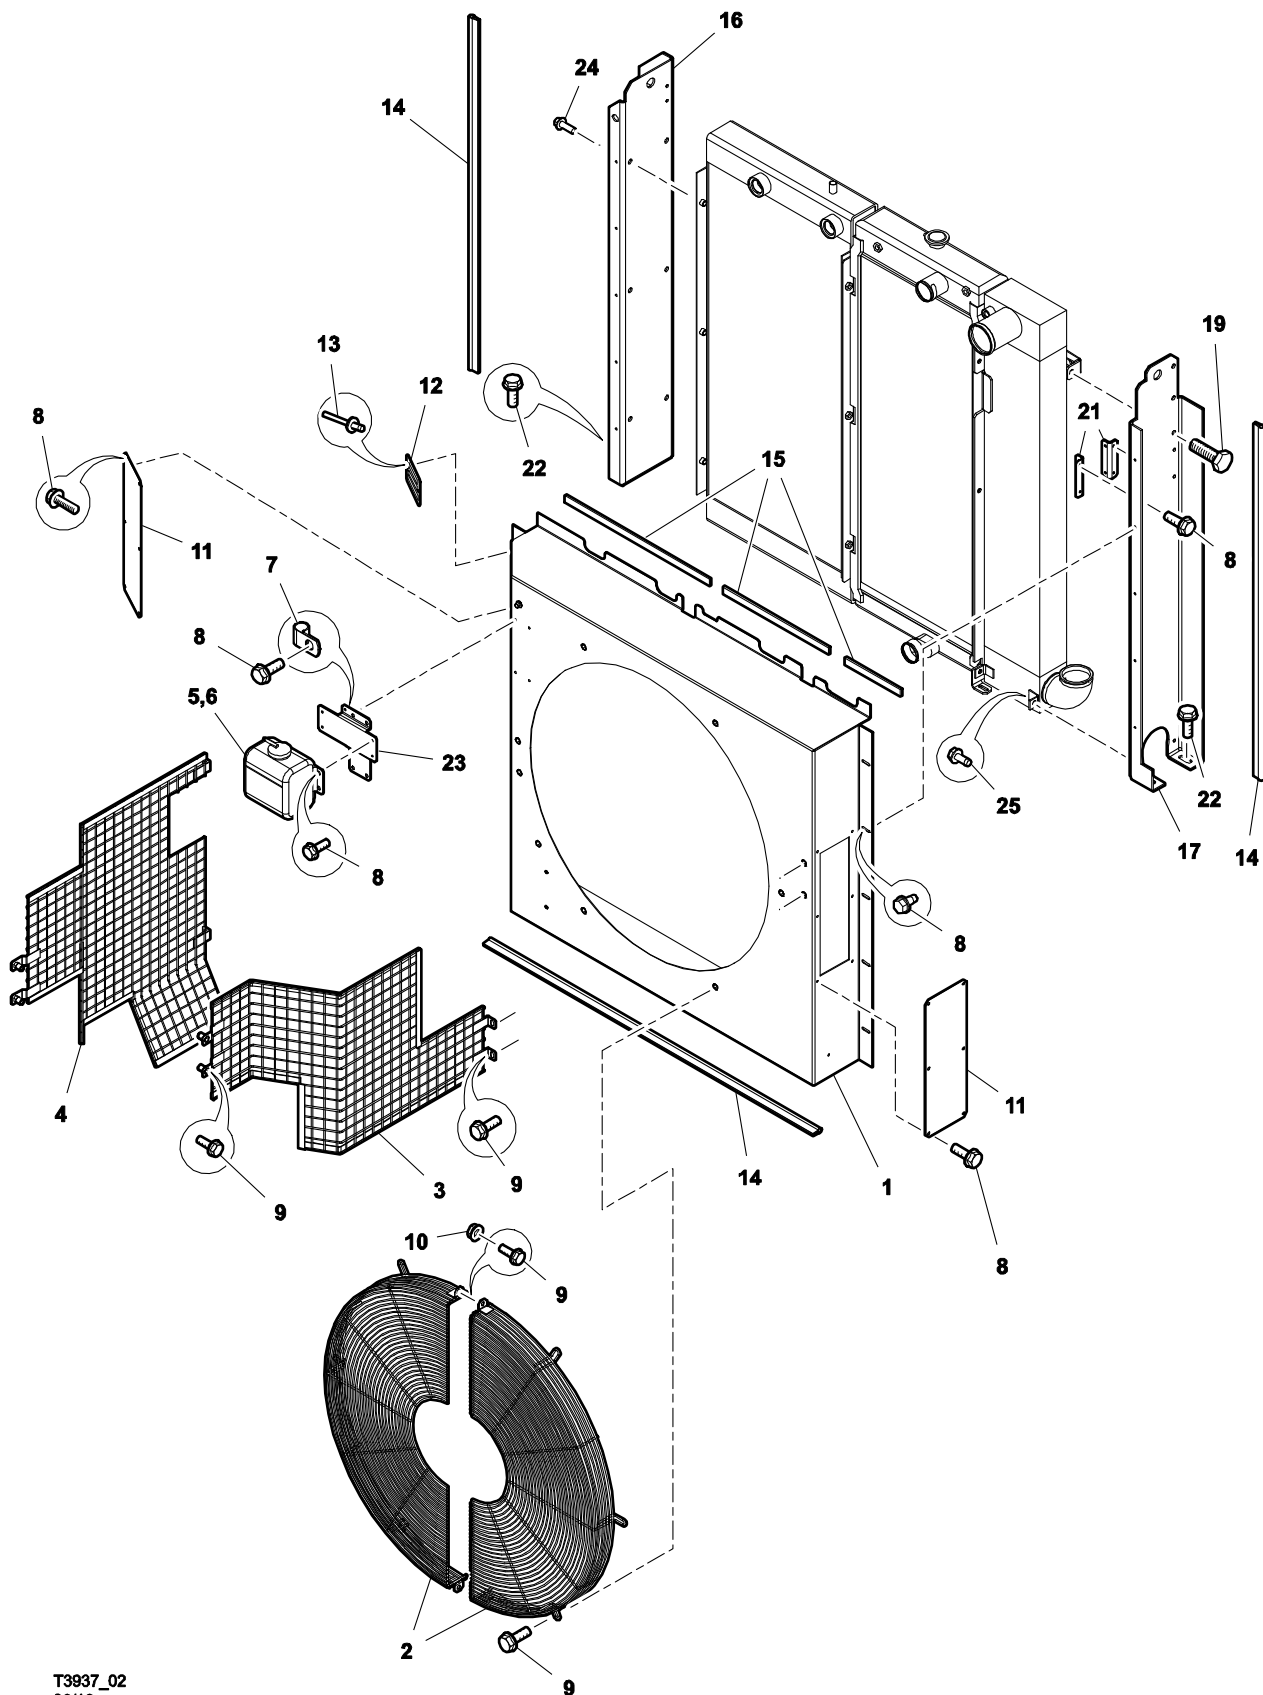

T3937_02
06/16

[illegible]

COOLING SYSTEM

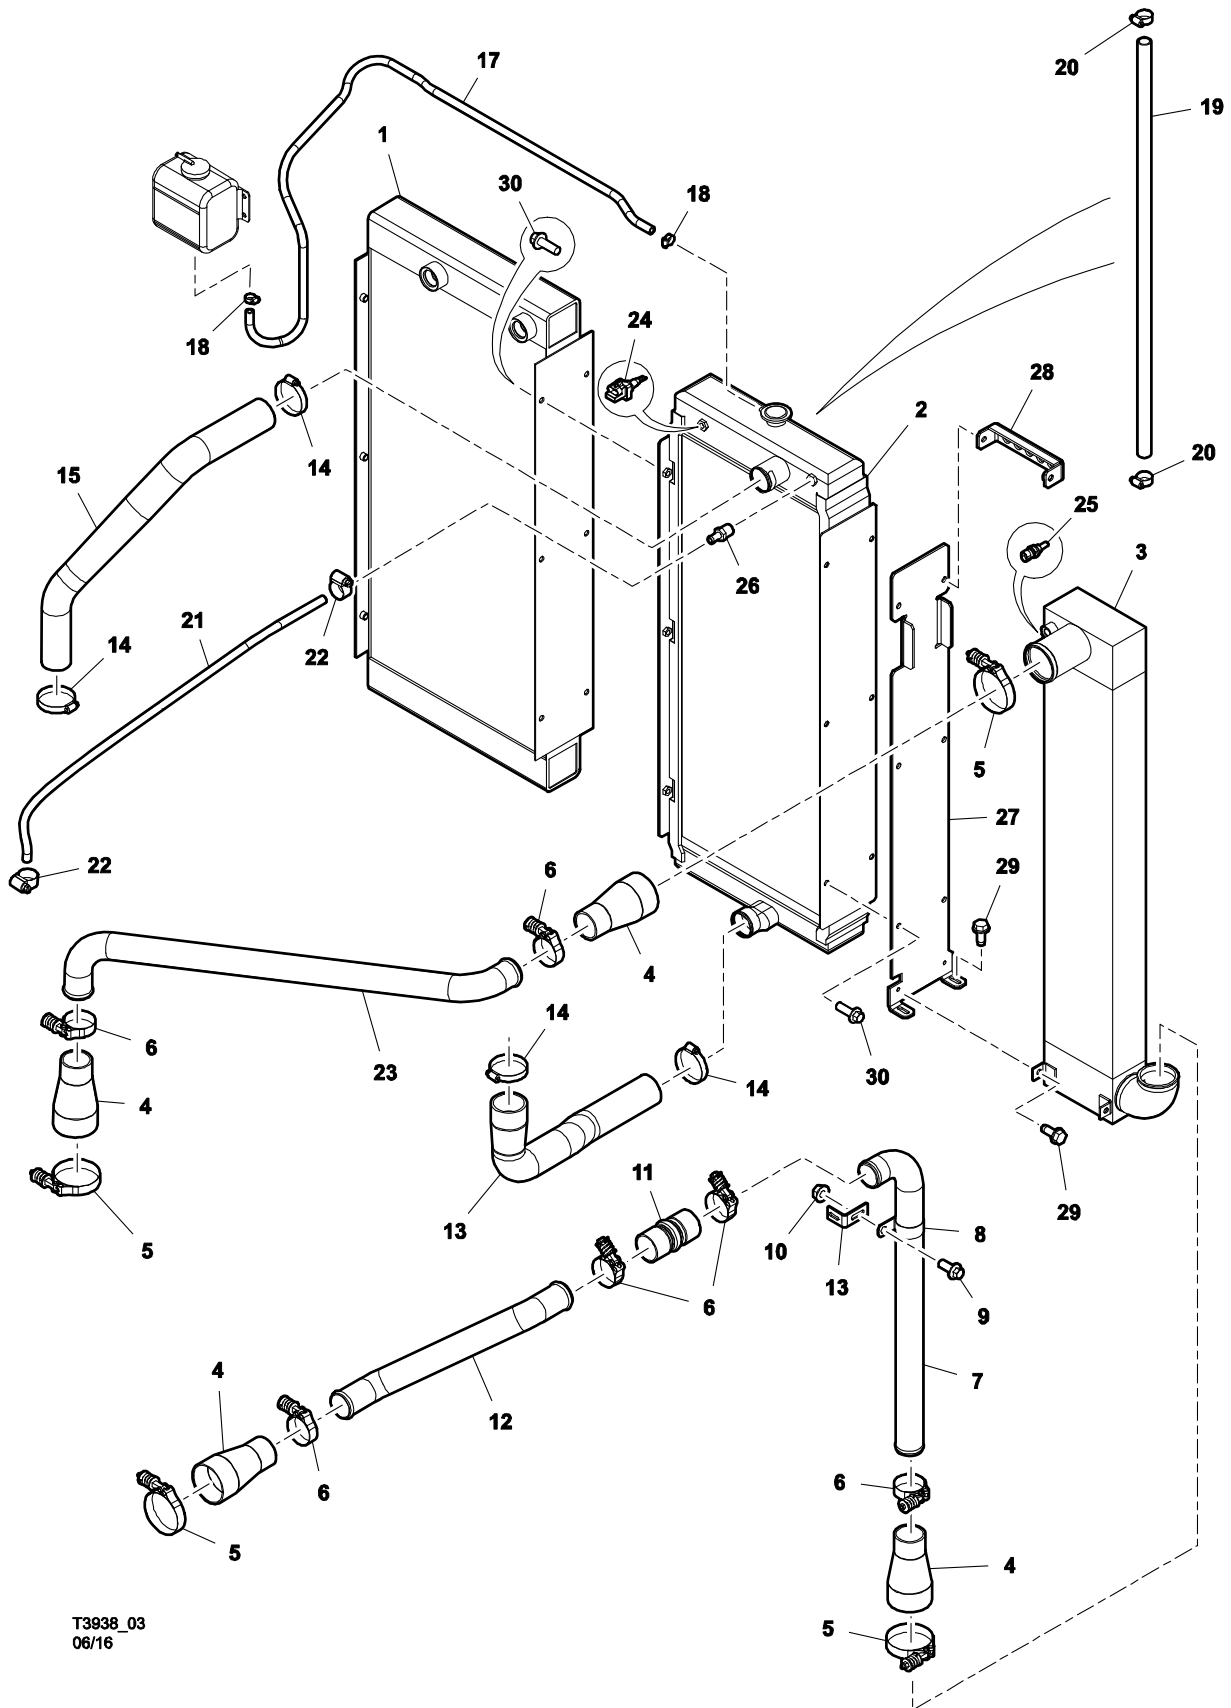


T3938_03
06/16

COOLING SYSTEM

Item	Part Number	Description	Remarks	Serial Number	Qty
1	46569980	COOLER, OIL			1
2	46569979	RADIATOR			1
3	46569981	COOLER, CHARGE AIR			1
4	22189310	REDUCER			4
5	22144513	CLAMP			6
6	22189302	CLAMP			6
7	22174742	PIPE, CHARGE AIR COOLER VERTICAL			1
8	35119718	CLIP, RETAINING			1
9	96704408	SCREW			1
10	36881886	NUT			1
11	22940621	CONNECTOR			1
12	46572923	PIPE			1
13	46572924	PIPE			1
14	35221639	CLIP, RETAINING			4
15	46572925	PIPE			1
17	35363498	HOSE	(1,57 m long) - (8 mm (5/16") ID)		1
18	35296342	CLIP, RETAINING			2
19	35286327	HOSE			1
20	95220851	CLAMP			2
21	35285600	HOSE	(0,81 m long) - (9.5 mm (3/8") ID)		1
22	95264776	CLAMP			2
23	46572921	PIPE			1
24	22769186	SENSOR, COOLANT LEVEL			1
25	46571299	SENSOR, TEMPERATURE			1
26	35369511	ADAPTER			1
27	46572764	BRACKET			1
28	46623402	BRACE, COOLER			1
29	35279025	SCREW			4
30	96702279	SCREW			12

OPTION - CENTRAL DRAINS

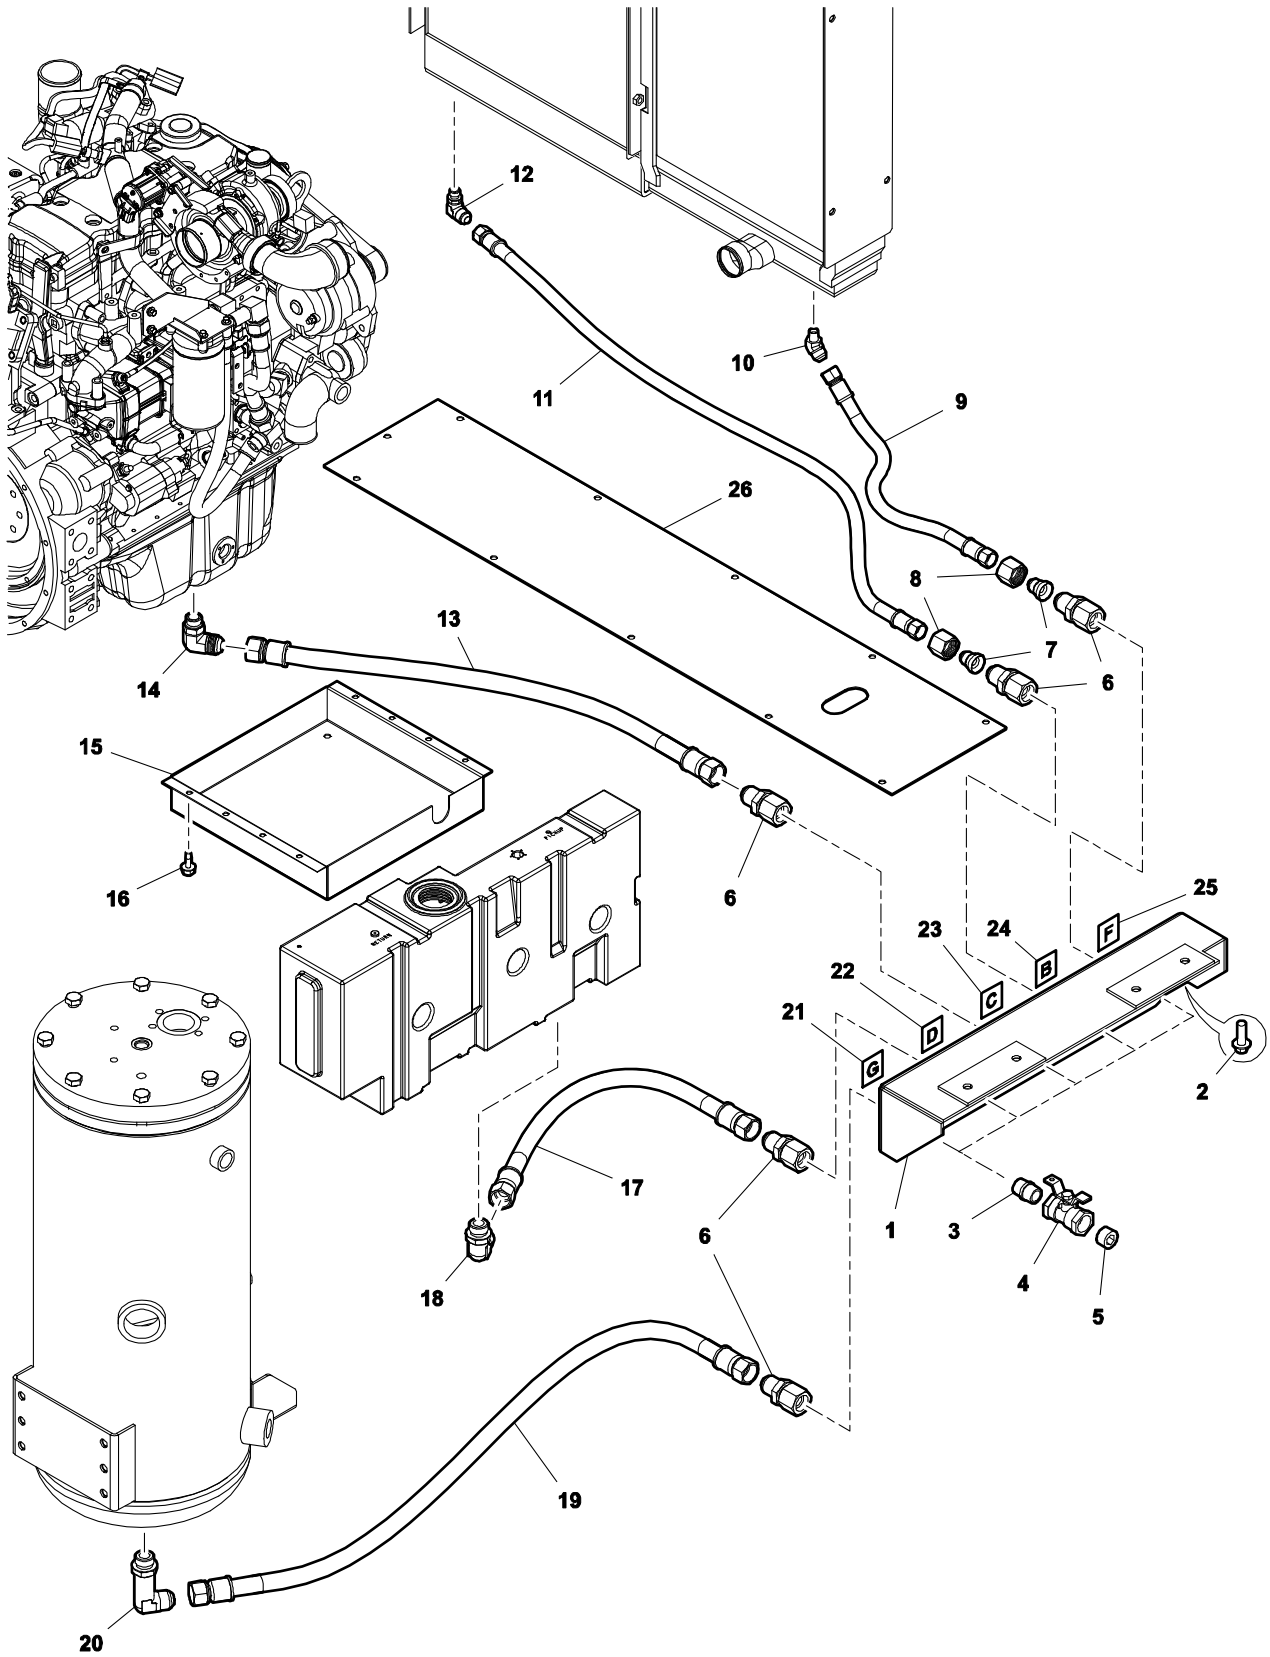


T3933_00
08/13

OPTION - CENTRAL DRAINS

Item	Part Number	Description	Remarks	Serial Number	Qty
1	46622023	BRACKET			1
2	96744891	SCREW			4
3	95928040	NIPPLE			5
4	36777399	VALVE, BALL			5
5	95947149	PLUG			5
6	35287747	CONNECTOR, BULKHEAD			5
7	35365774	ADAPTOR			2
8	35324987	NUT			2
9	46642198	HOSE ASSEMBLY			1
10	35376995	ELBOW			1
11	35305473	HOSE ASSEMBLY			1
12	35287937	ELBOW			1
13	35294693	HOSE ASSEMBLY			1
14	22869143	ELBOW			1
15	46620875	COVER			1
16	96738695	SCREW			8
17	35295807	HOSE ASSEMBLY			1
18	35294750	ELBOW			1
19	35323807	HOSE ASSEMBLY			1
20	36885093	ELBOW			1
21	54629977	DECAL, ISO CENTRAL DRAIN	(separator tank drain) 'G'		1
22	54629977	DECAL, ISO CENTRAL DRAIN	(fuel tank drain) 'D'		1
23	54629977	DECAL, ISO CENTRAL DRAIN	(engine oil drain) 'C'		1
24	54629977	DECAL, ISO CENTRAL DRAIN	(engine coolant drain) 'B'		1
25	54629977	DECAL, ISO CENTRAL DRAIN	(compressor coolant drain) 'F'		1
26	46621508	PAN, BELLY COOLER			1

OPTION - SHIPPING MOUNT
(includes central drains)

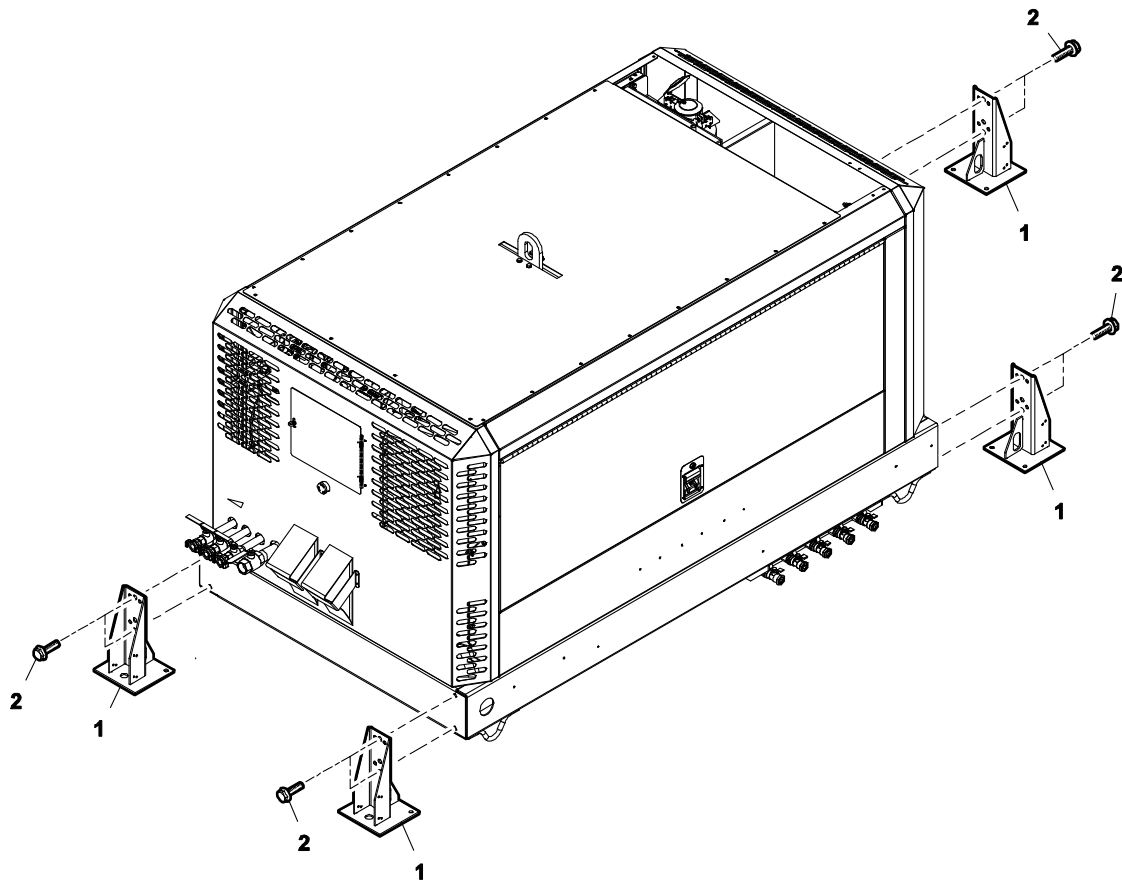


T3974_00
09/13

OPTION - SHIPPING MOUNT (includes central drains)

[illegible]

OPTION - SHOCK MOUNTS
(includes central drains)

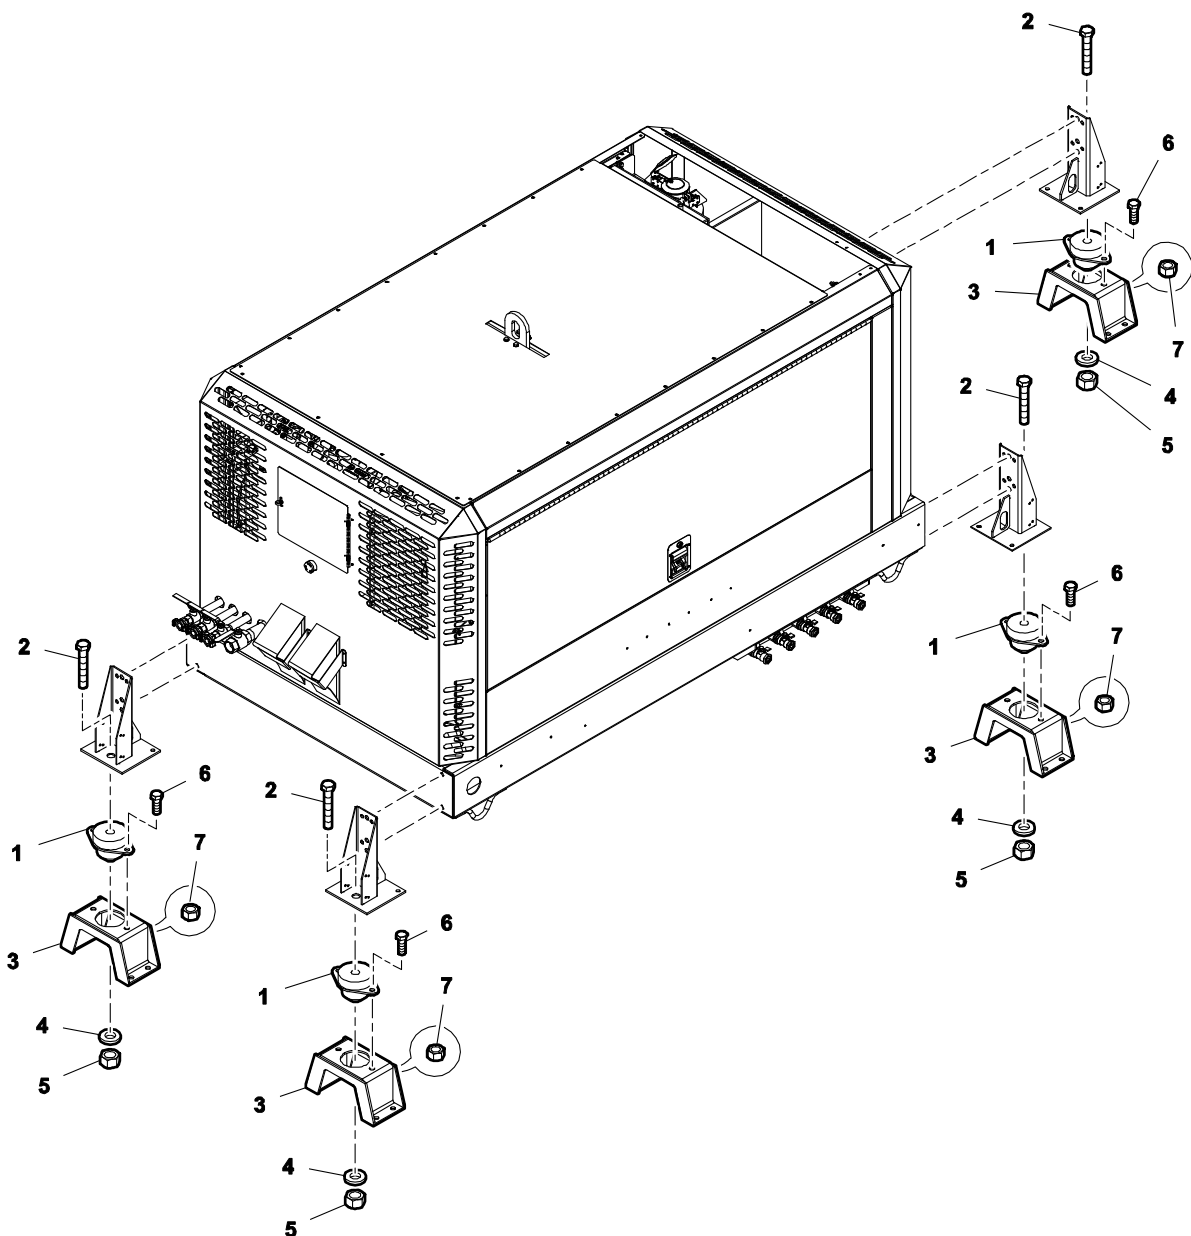


T3997_00
05/14

OPTION - SHOCK MOUNTS (includes central drains)

[illegible]

OPTION - AFTERCOOLER AND WATER SEPARATOR

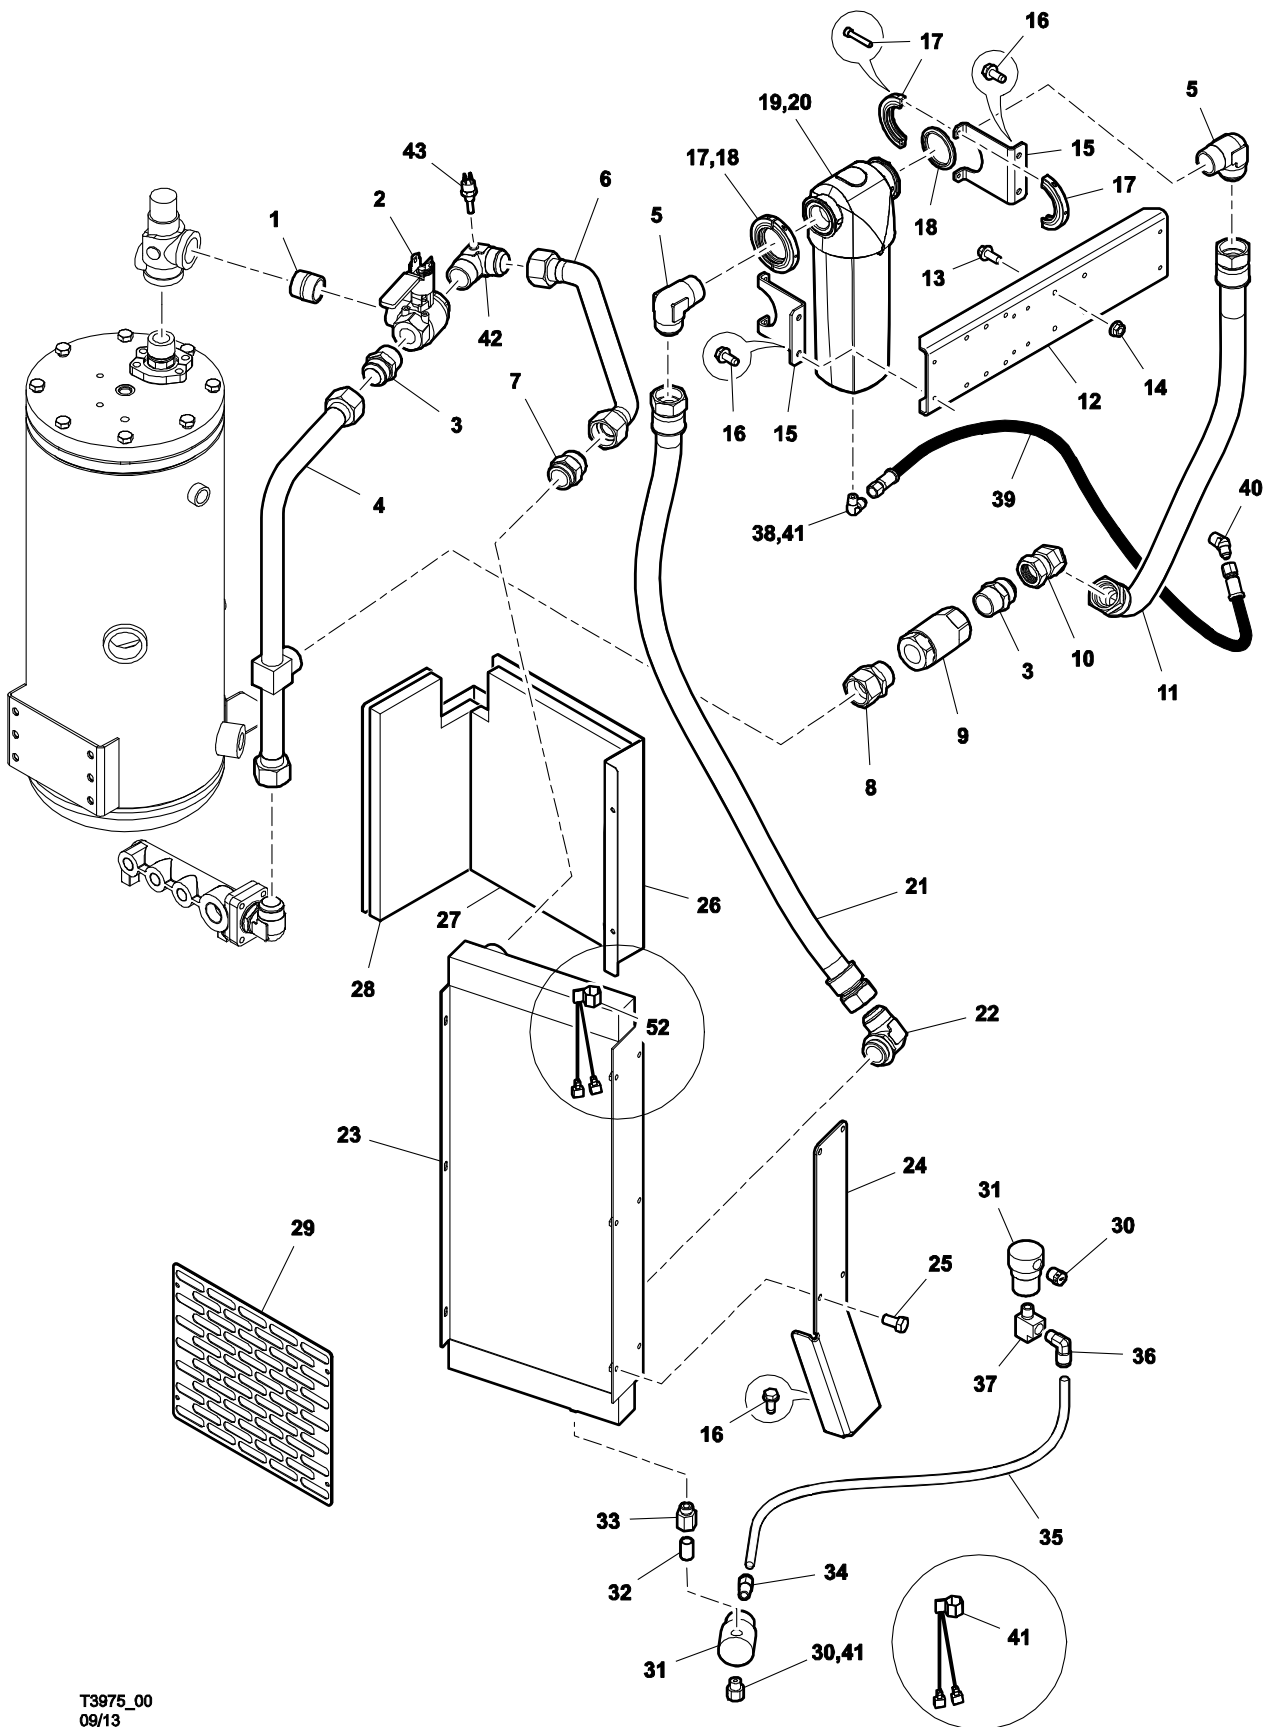


T3975_00
09/13

OPTION - AFTERCOOLER AND WATER SEPARATOR

Item	Part Number	Description	Remarks	Serial Number	Qty
1	95487773	NIPPLE			1
2	22258339	VALVE, 3-WAY			1
3	95208682	ADAPTOR			2
4	46621432	TUBE ASSEMBLY			1
5	95949749	ELBOW			2
6	46636399	TUBE ASSEMBLY			1
7	35296409	ADAPTOR			1
8	36883155	ADAPTOR			1
9	36786820	VALVE			1
10	35326172	ELBOW			1
11	35130871	HOSE ASSEMBLY			1
12	54761630	BRACKET			1
13	96704408	SCREW			4
14	36881886	NUT			4
15	23194210	BRACKET			2
16	35279025	SCREW			6
17	23187420	KIT, CLAMP	W/Ref. 17-18		2
18	23187446	SEAL			1
19	23186729	SEPARATOR, WATER	W/Ref. 19-20		1
20	23343221	FLOAT, DRAIN			1
21	36799245	HOSE ASSEMBLY			1
22	95431292	ELBOW			1
23	54660162	AFTERCOOLER			1
24	54761622	BRACKET			1
25	96702279	SCREW			4
26	22070908	BAFFLE			1
27	22074504	PANEL, ACOUSTIC			1
28	22074488	PANEL, ACOUSTIC			1
29	46634620	PANEL			1
30	35248319	ORIFICE			2
31	35322379	VALVE, BLOWDOWN			2

OPTION - AFTERCOOLER AND WATER SEPARATOR (CONT'D)

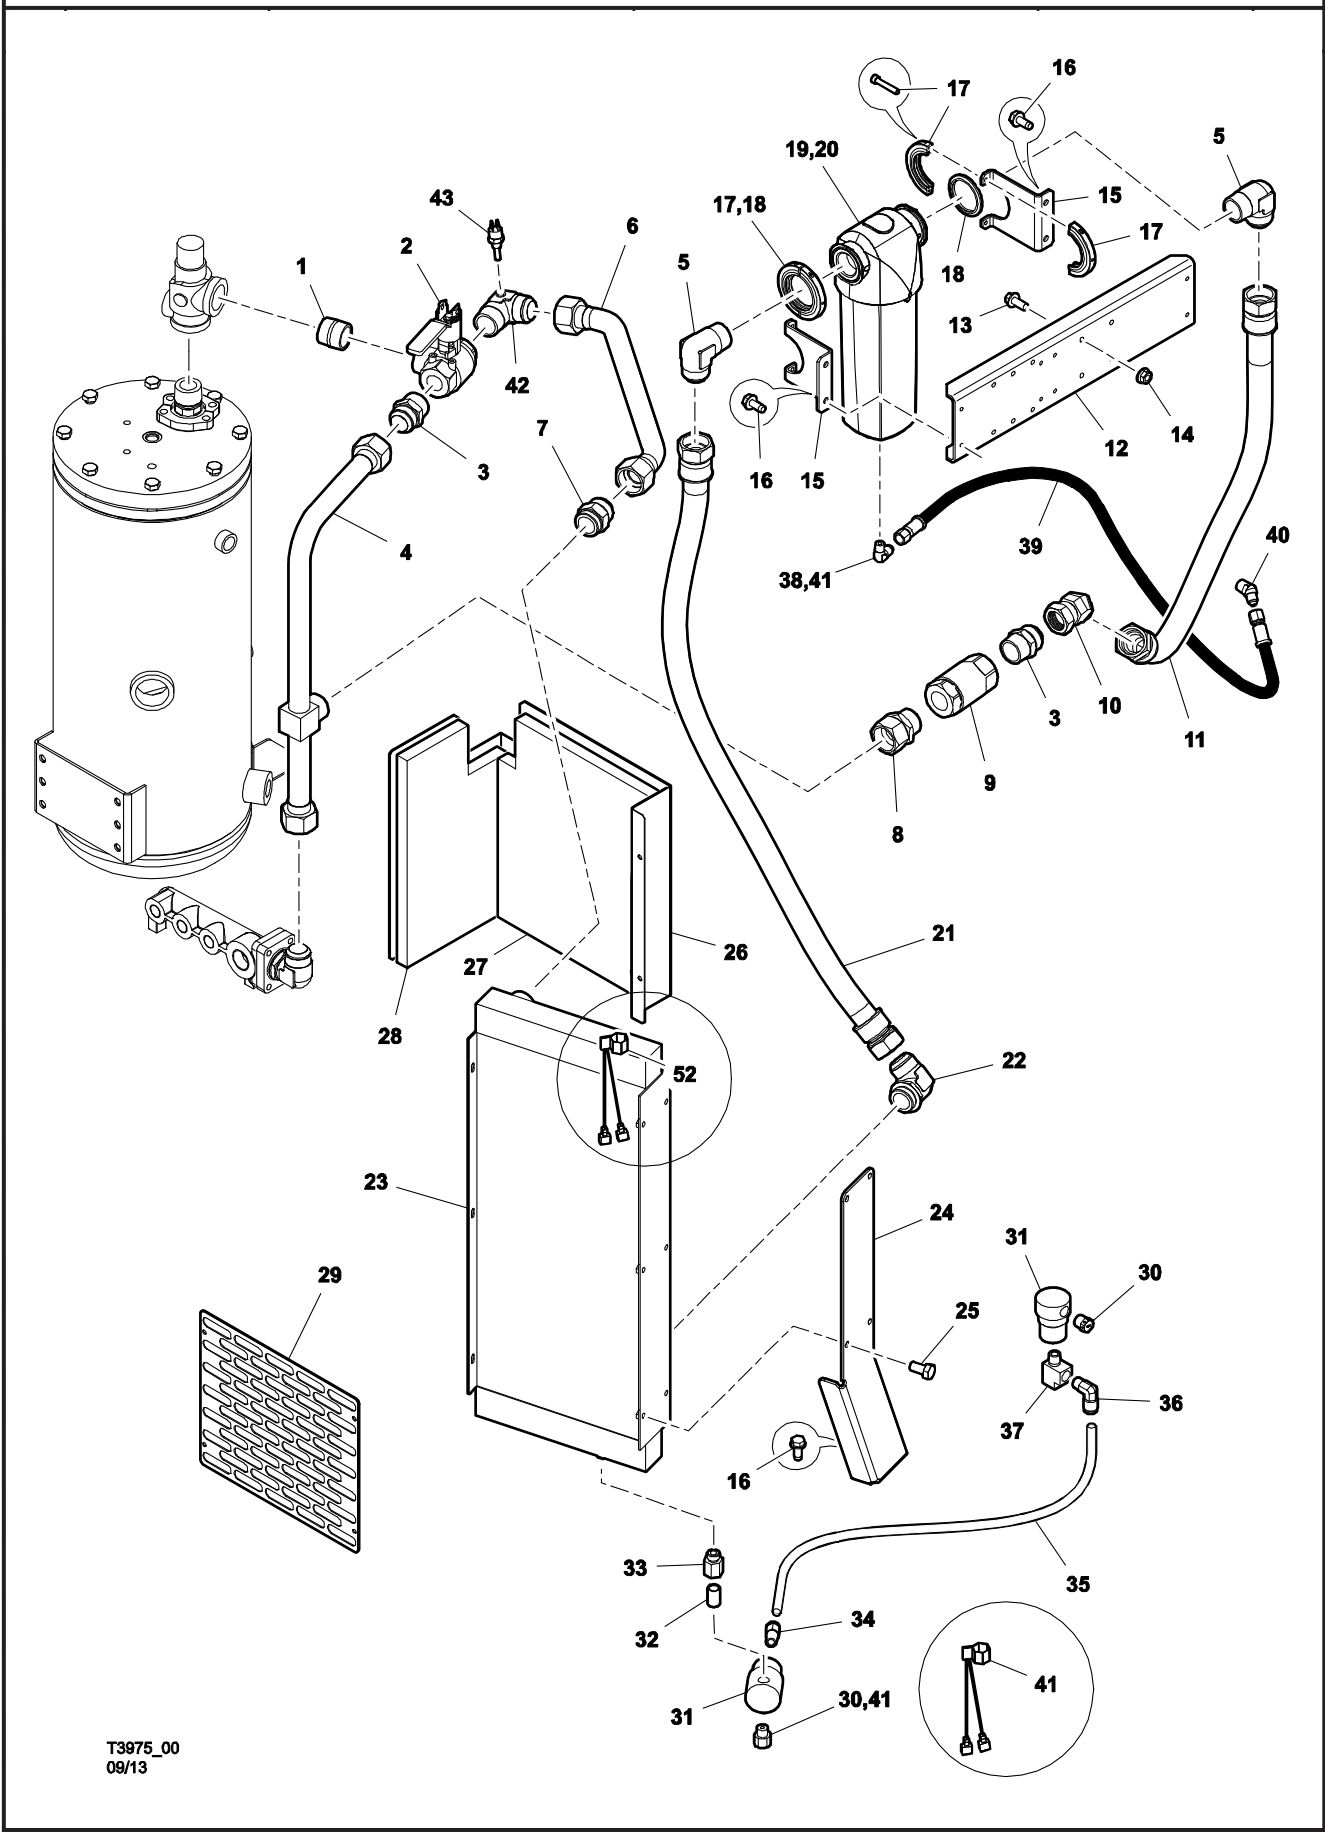


T3975_00
09/13

OPTION - AFTERCOOLER AND WATER SEPARATOR (CONT'D)

[illegible]

OPTION - IQ FILTERS

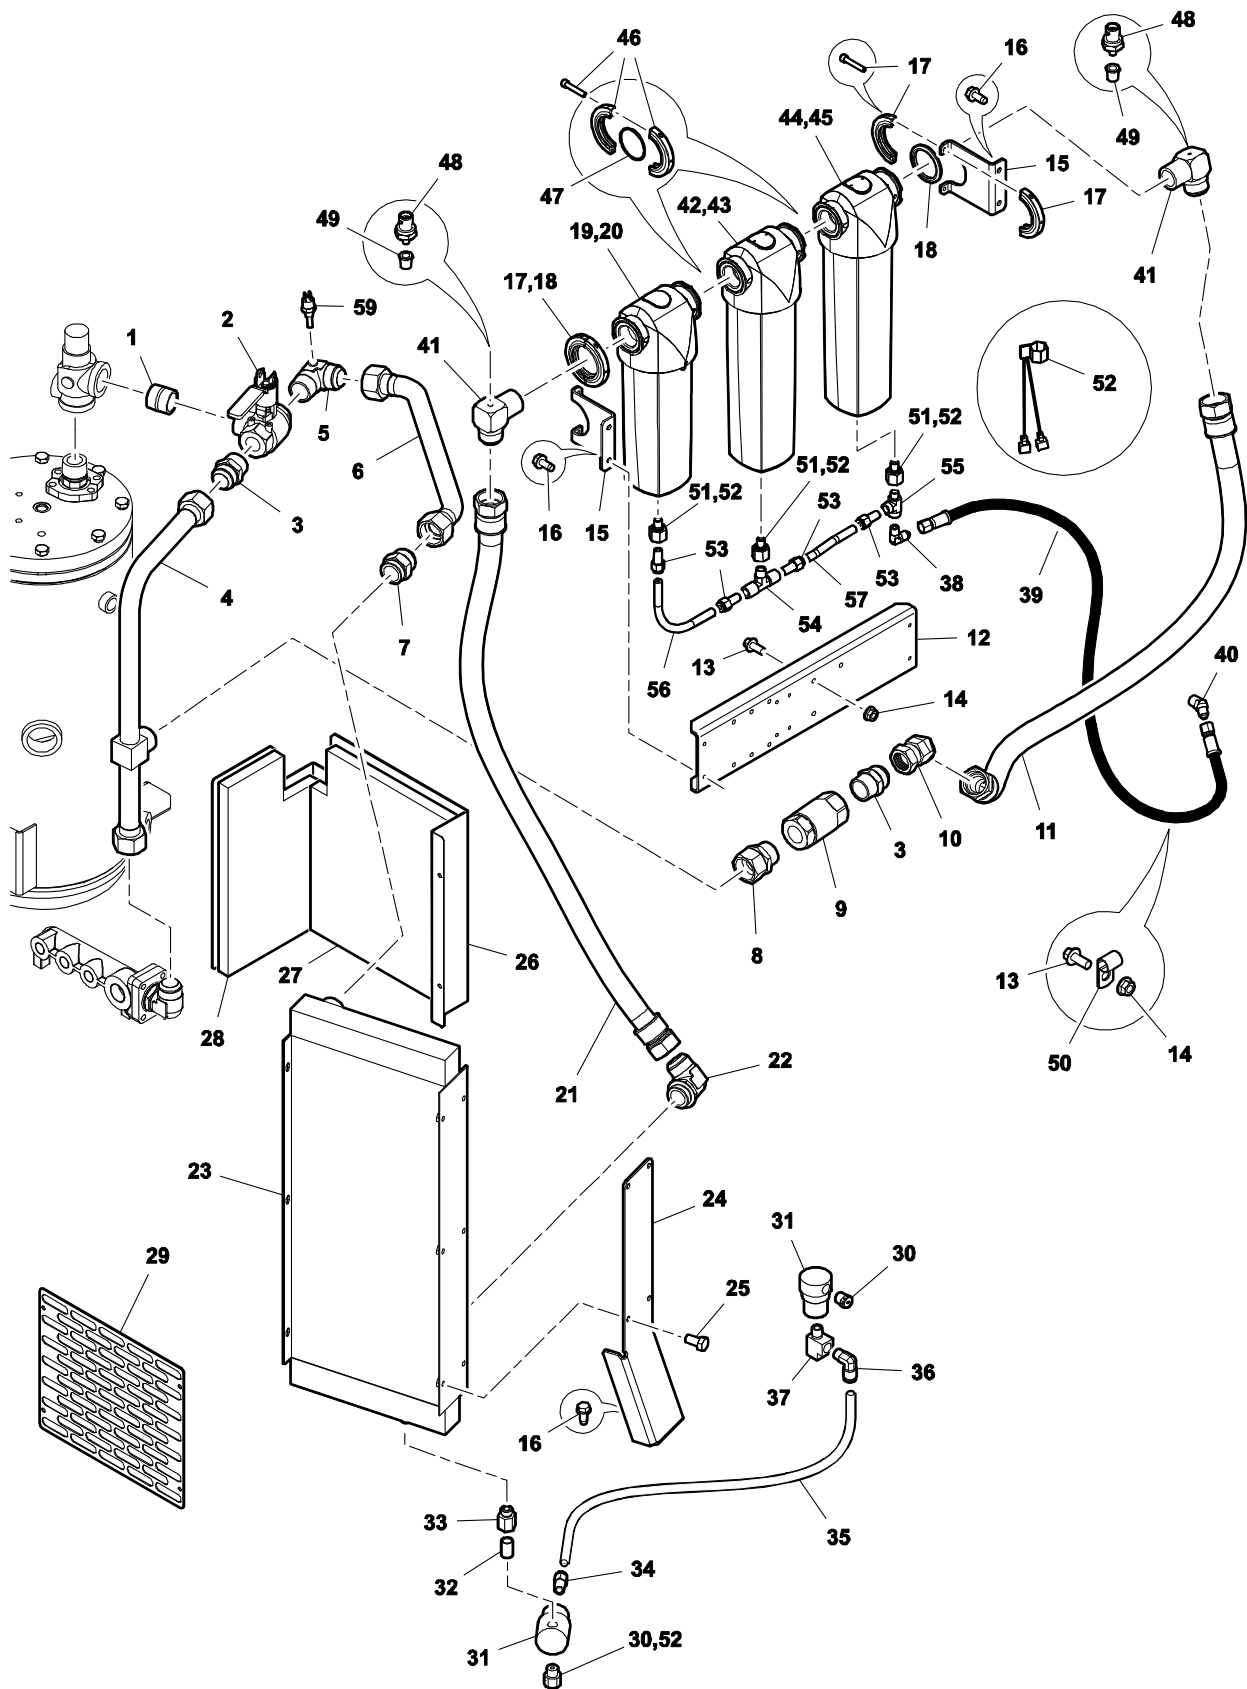


T3976_00
09/13

OPTION - IQ FILTERS

Item	Part Number	Description	Remarks	Serial Number	Qty
1	95487773	NIPPLE			1
2	22258339	VALVE, 3-WAY			1
3	95208682	ADAPTOR			2
4	46621432	TUBE ASSEMBLY			1
5	46670199	ELBOW			1
6	46636399	TUBE ASSEMBLY			1
7	35296409	ADAPTOR			1
8	36883155	ADAPTOR			1
9	36786820	VALVE			1
10	35326172	ELBOW			1
11	35130855	HOSE ASSEMBLY			1
12	54761630	BRACKET			1
13	96704408	SCREW			5
14	36881886	NUT			5
15	23194210	BRACKET			2
16	35279025	SCREW			6
17	23187420	KIT, CLAMP			2
18	23187446	SEAL			2
19	23186729	SEPARATOR, WATER	W/Ref. 19-20		1
20	23343221	FLOAT, DRAIN			1
21	36799245	HOSE ASSEMBLY			1
22	95431292	ELBOW			1
23	54660162	AFTERCOOLER			1
24	54761622	BRACKET			1
25	96702279	SCREW			4
26	22070908	BAFFLE			1
27	22074504	PANEL, ACOUSTIC			1
28	22074488	PANEL, ACOUSTIC			1
29	46634620	PANEL			1
30	35248319	ORIFICE			2
31	35322379	VALVE, BLOWDOWN			2

OPTION - IQ FILTERS (CONT'D)

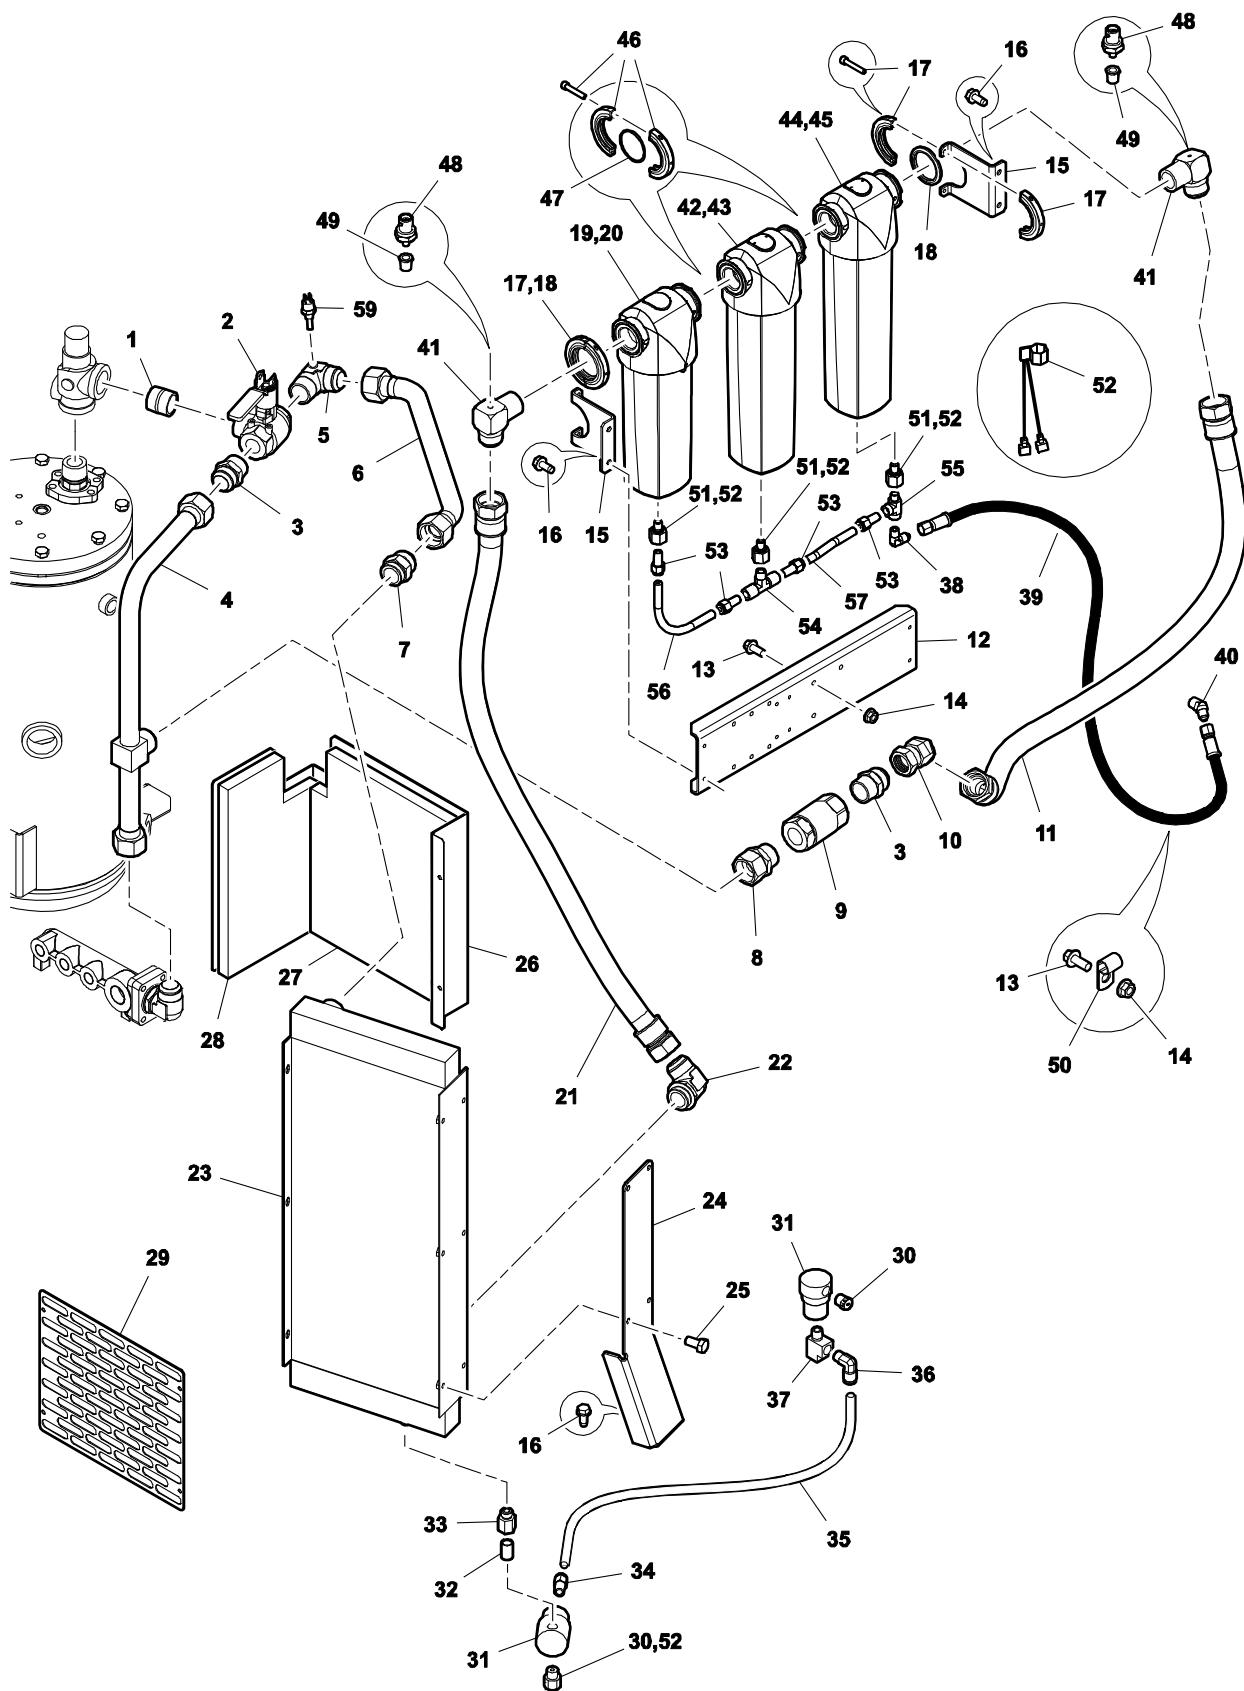


T3976_00
09/13

OPTION - IQ FILTERS (CONT'D)

Item	Part Number	Description	Remarks	Serial Number	Qty
32	95667341	NIPPLE			1
33	35302314	ADAPTOR			1
34	35369347	CONNECTOR			1
35	35356484	TUBE, NYLON			1
36	35369354	ELBOW			1
37	35114545	TEE			1
38	35306687	ELBOW			1
39	36920650	HOSE ASSEMBLY			1
40	35321223	ELBOW			1
41	39495148	ELBOW			2
42	23186737	FILTER IQ, PRIMARY	W/Ref. 42-43		1
43	23343221	FLOAT, DRAIN			1
44	23186752	FILTER IQ, SECONDARY	W/Ref. 44-45		1
45	23343221	FLOAT, DRAIN			1
46	23187388	KIT, CLAMP	W/Ref. 46-47		2
47	23187438	O-RING			2
48	54496773	TRANSDUCER, PRESSURE	(0-225 psi)		2
49	95930301	BUSH			2
50	35225093	CLIP, RETAINING			1
51	46619480	ADAPTOR			3
52	36841526	HEATER			4
53	35379700	CONNECTOR			4
54	39127287	TEE			1
55	35369396	TEE			1
56	35356484	TUBE, NYLON			1
57	35356484	TUBE, NYLON			1
58	46669371	SENSOR			1

OPTION - WHEEL CHOCKS

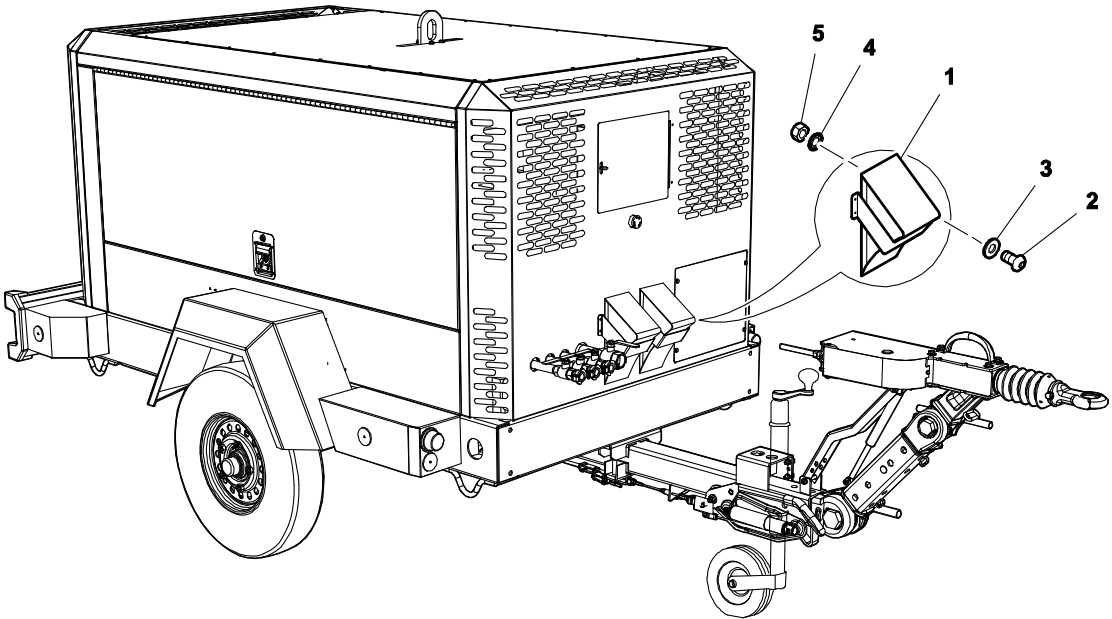


T3994_00
05/14

OPTION - WHEEL CHOCKS	
-----------------------	--

[illegible]

OPTION - LUBRICATOR

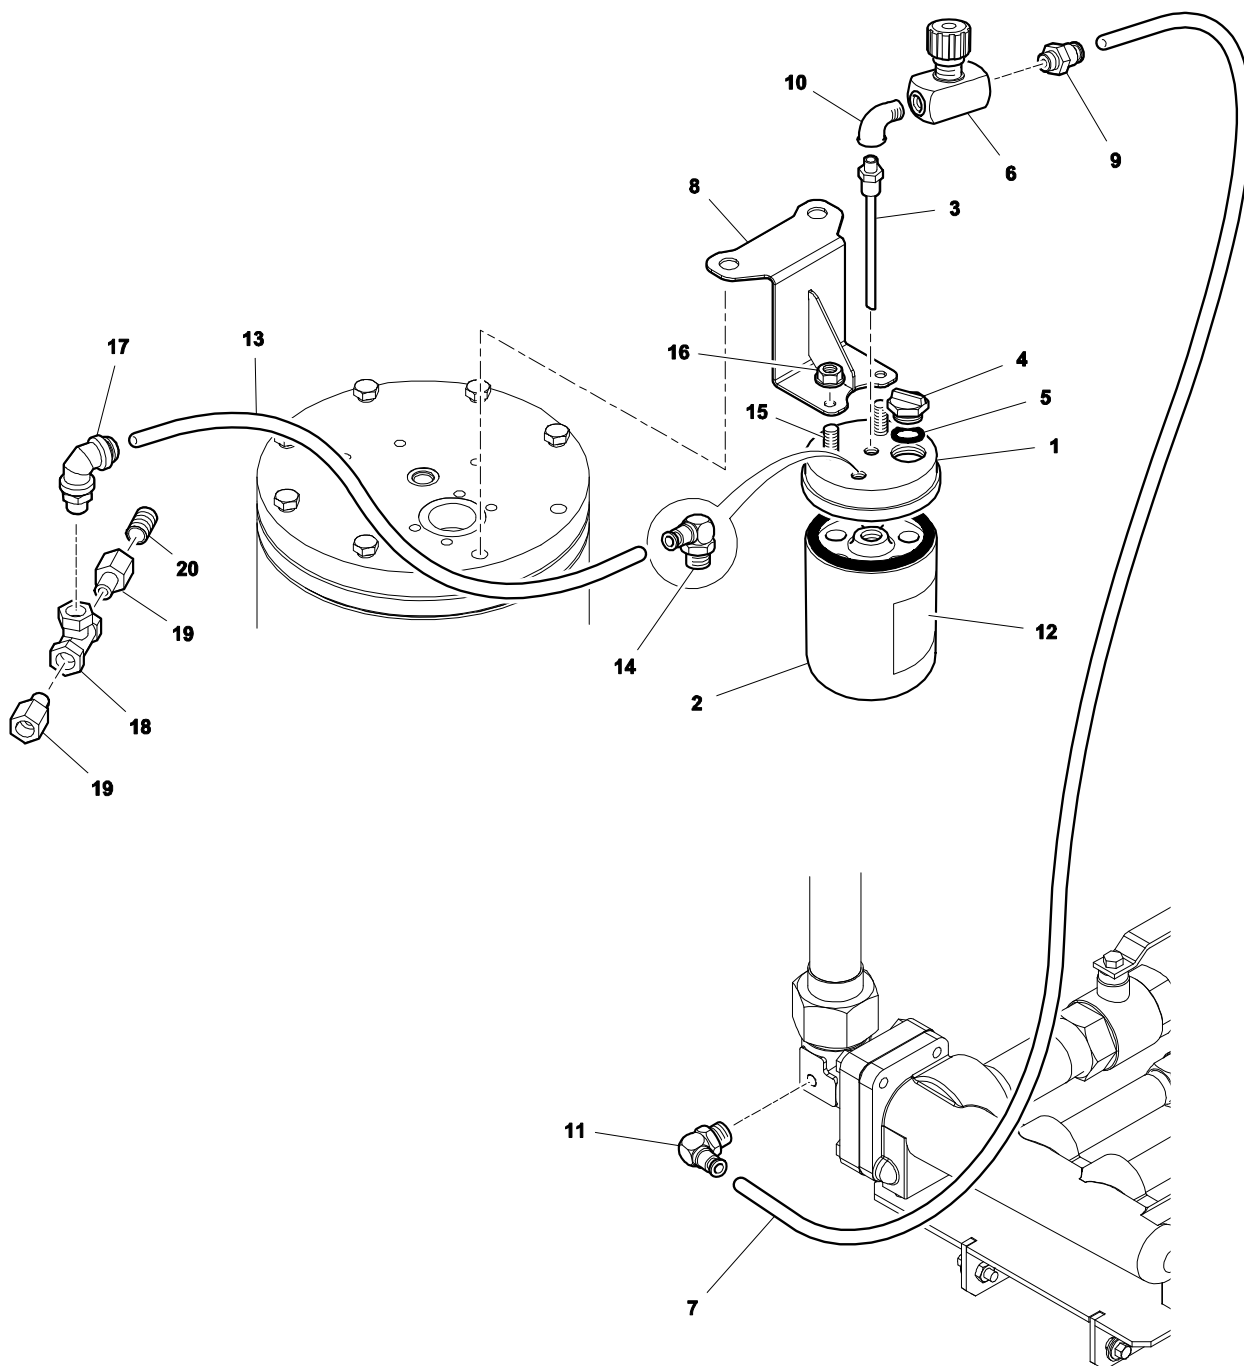


T3995_00
05/14

OPTION - LUBRICATOR

[illegible]

OPTION - WHEEL NUT INDICATORS

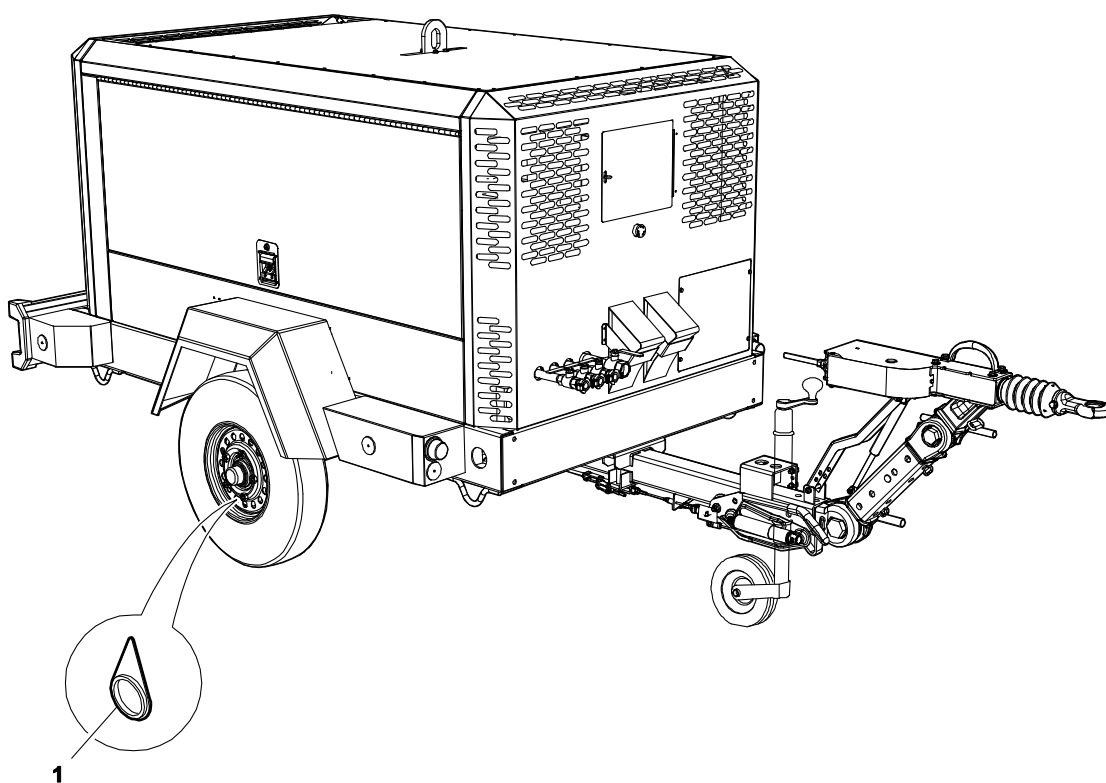


T3993_00
05/14

OPTION - WHEEL NUT INDICATORS	
--	--

[illegible]

OPTION - SPARK ARRESTOR

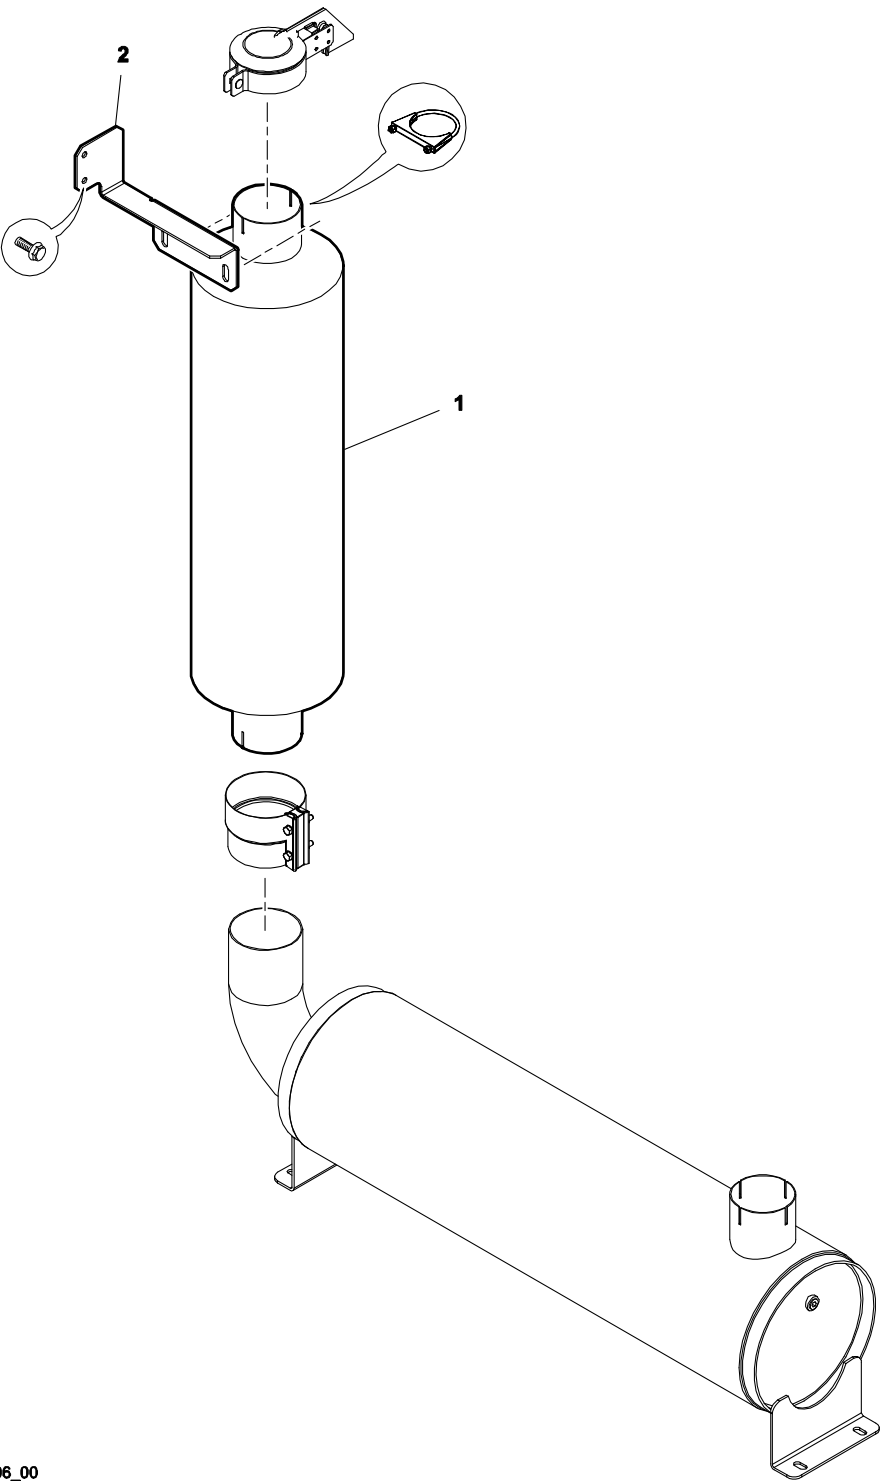


T3996_00
05/14

OPTION - SPARK ARRESTOR	
--	--

[illegible]

OPTION - OVERSPEED VALVE

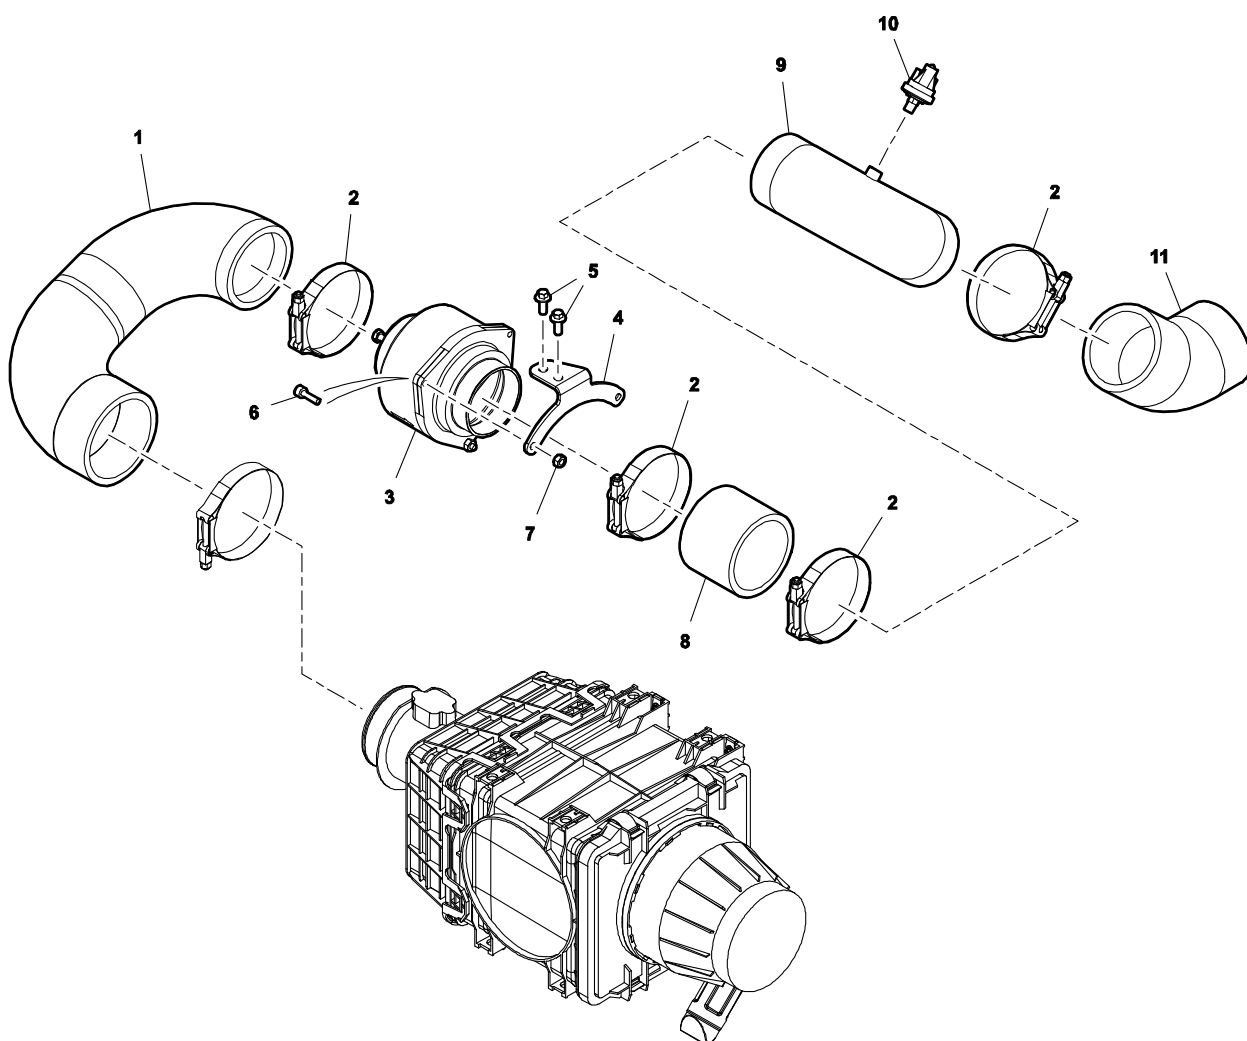


T3998_00
04/16

OPTION - OVERSPEED VALVE

[illegible]

OPTION - LIGHTING PROTECTION








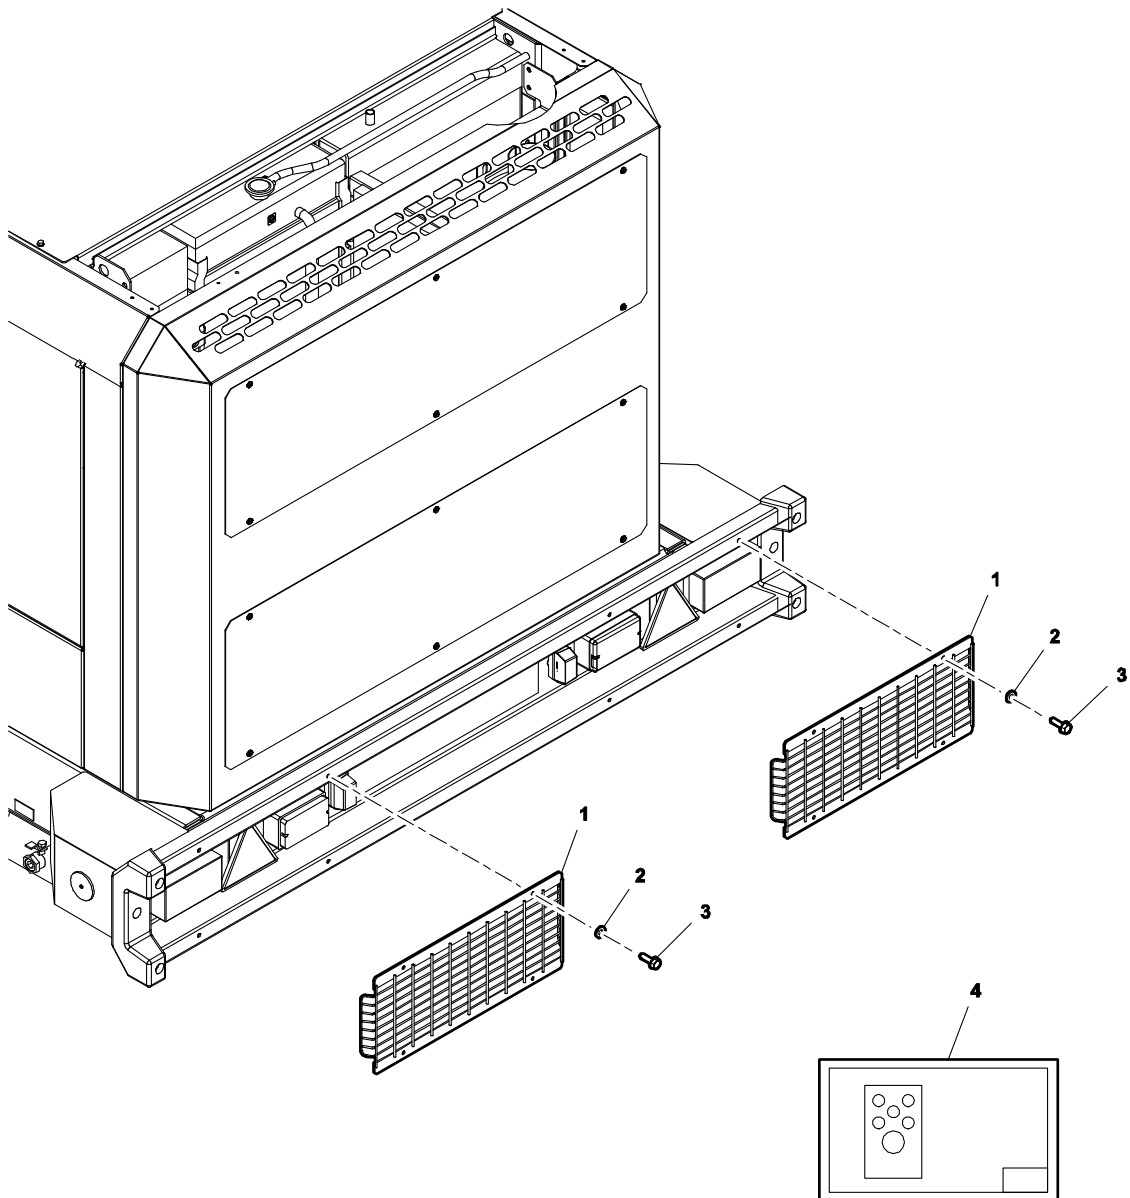


T3999_00
04/16

OPTION - LIGHTING PROTECTION

[illegible]

MAINTENANCE KIT (500 hours)




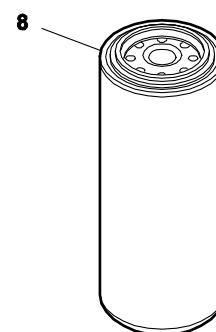
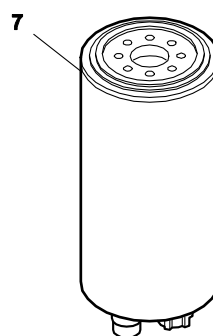
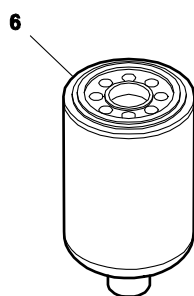
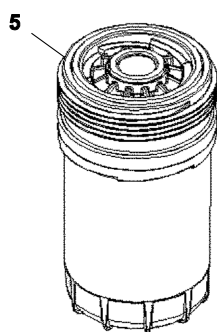
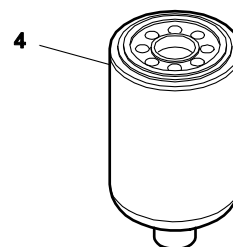
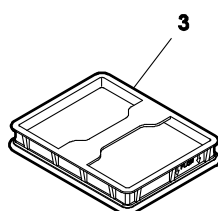
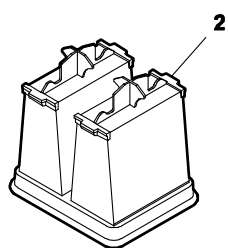
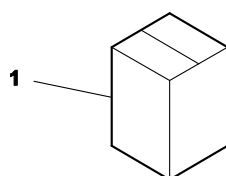


T3982_00
12/13

MAINTENANCE KIT (500 hours)	
---	--

[illegible]

MAINTENANCE KIT (1000 hours)


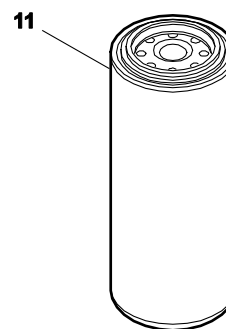
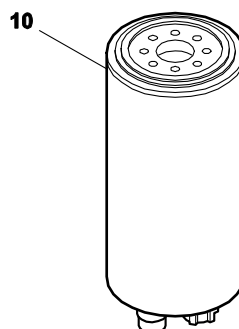
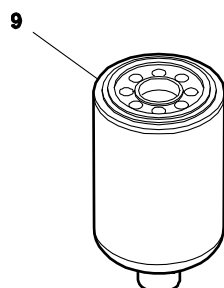
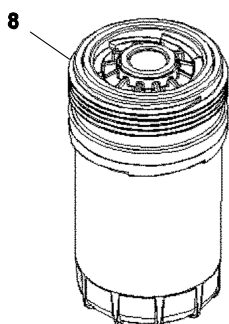
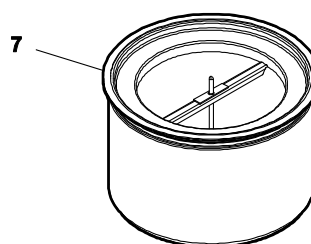
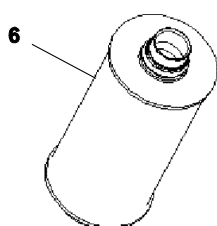
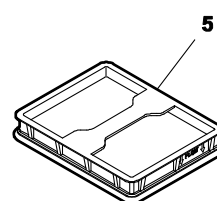
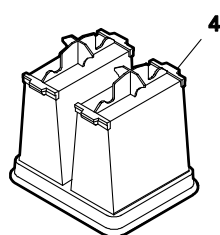
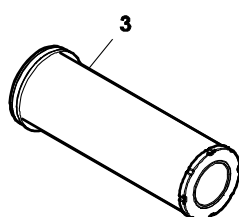
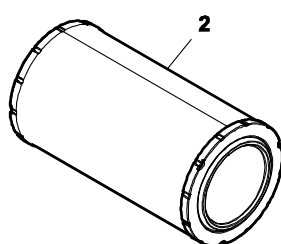
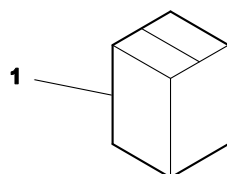


T3983_00
12/13

MAINTENANCE KIT (1000 hours)

[illegible]


**RECOMMENDED SPARE PARTS
FLUIDS, FILTERS AND MAINTENANCE KITS
(1 machine for 2 years)**

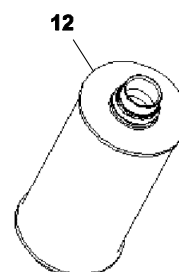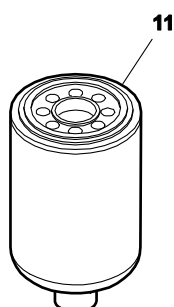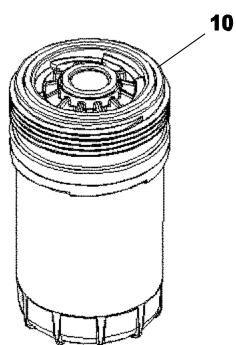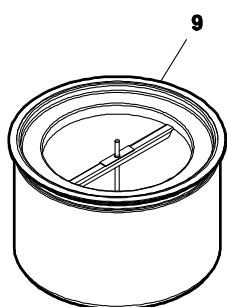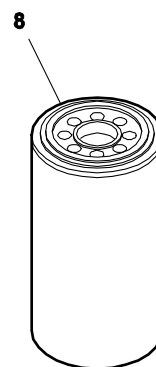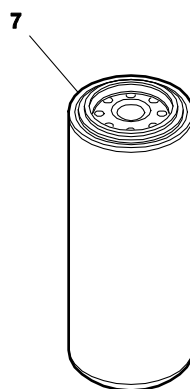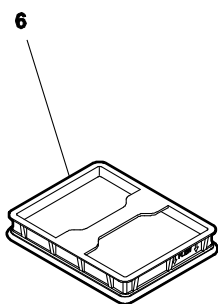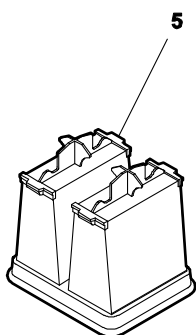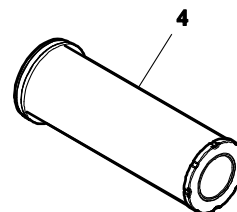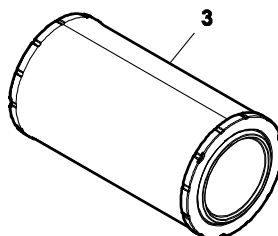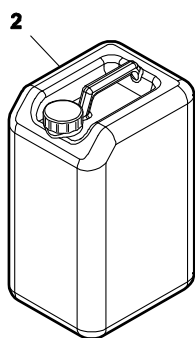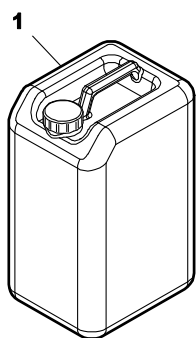

T3981_00
12/13

[illegible]

RECOMMENDED SPARE PARTS
IQ FILTERS
(1 machine for 2 years)

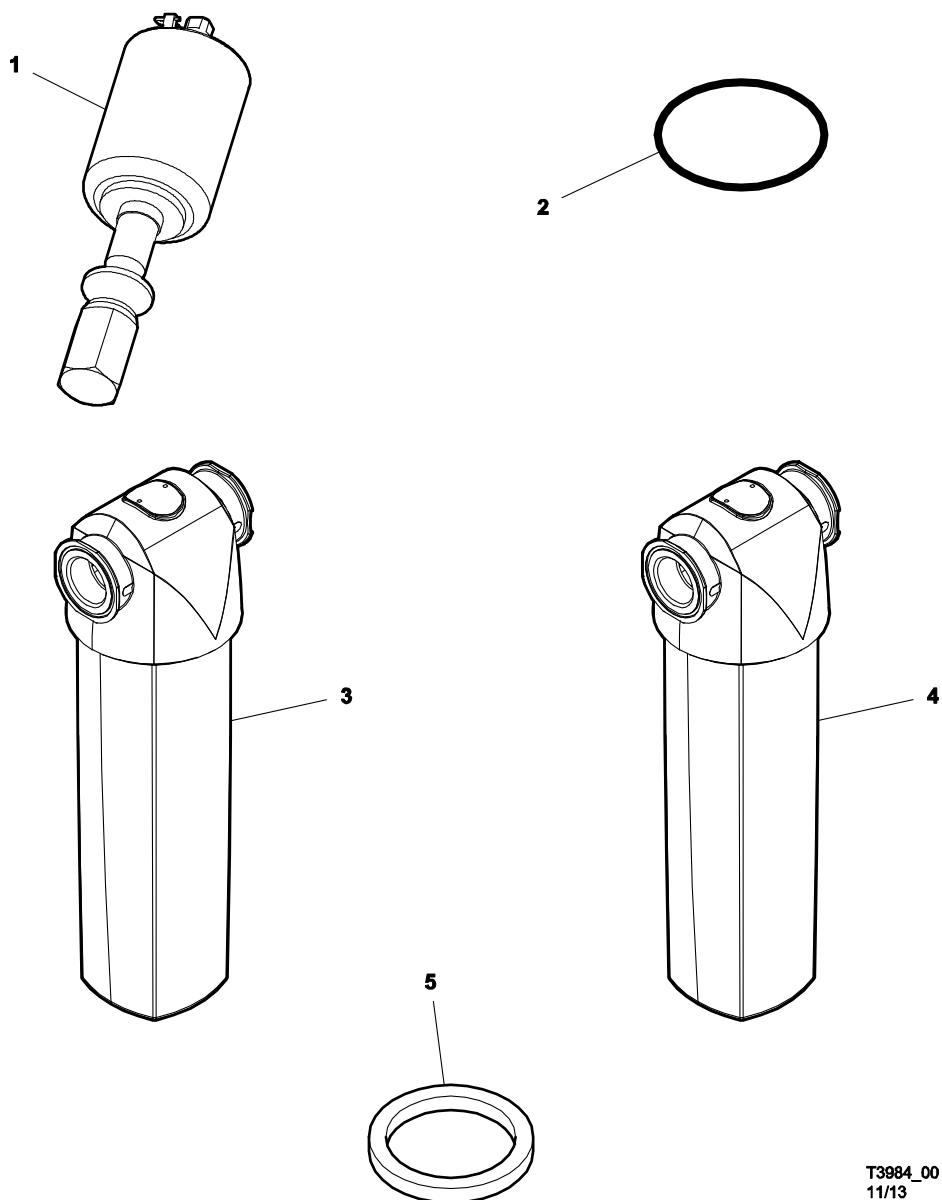












T3984_00
11/13

RECOMMENDED SPARE PARTS
IQ FILTERS
(1 machine for 2 years)

[illegible]

RECOMMENDED SPARE PARTS

(1 machine for 2 years)

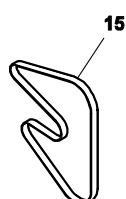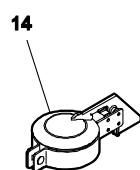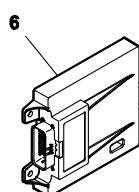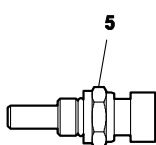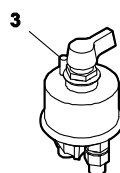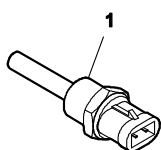

T3989_00
11/13















(1 machine for 2 years)

(1 machine for 2 years)

[illegible]

RECOMMENDED SPARE PARTS

(1 machine for 2 years)

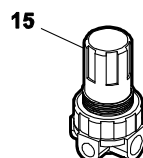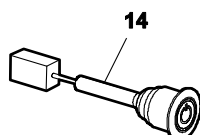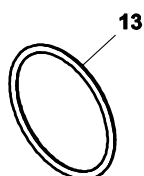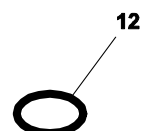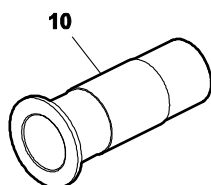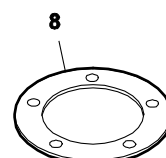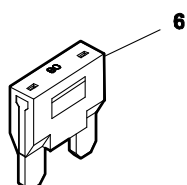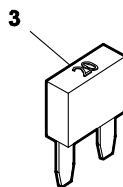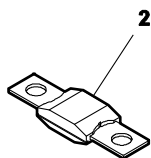




















T3990_00
11/13

(1 machine for 2 years)

[illegible]

RECOMMENDED SPARE PARTS

(1 machine for 2 years)

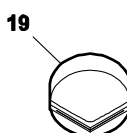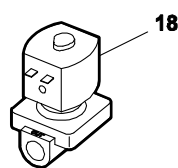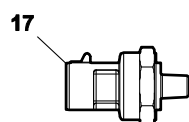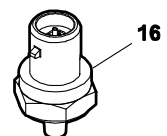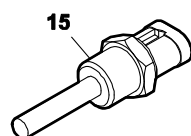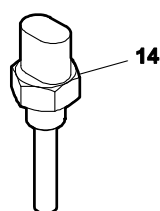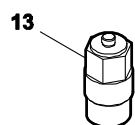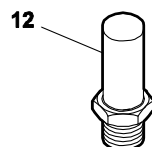
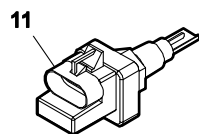
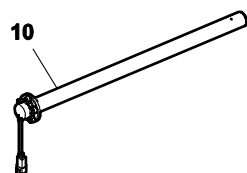
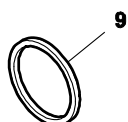
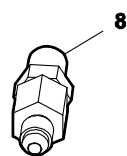
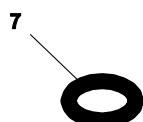
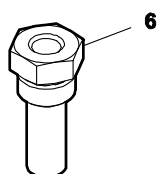
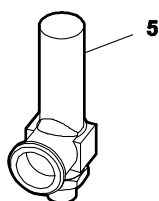
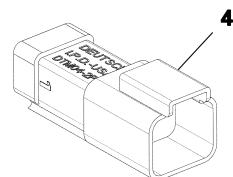
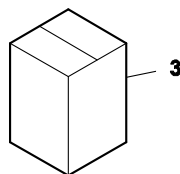
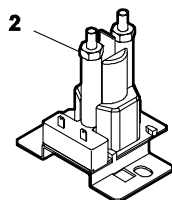
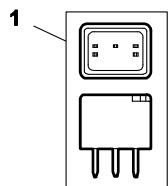


T3991_00
11/13

(1 machine for 2 years)

[illegible]


**RECOMMENDED SPARE PARTS
FLUIDS, FILTERS AND MAINTENANCE KITS
(5 machines for 2 years)**

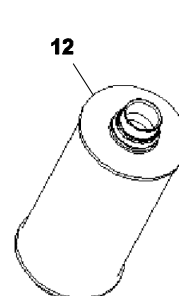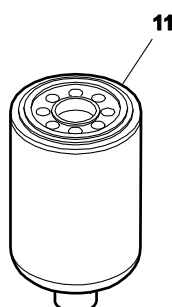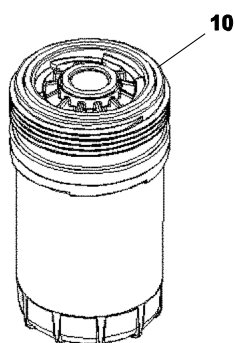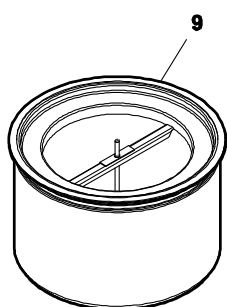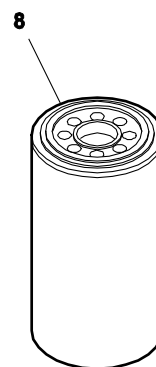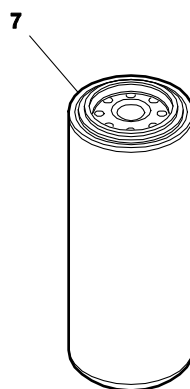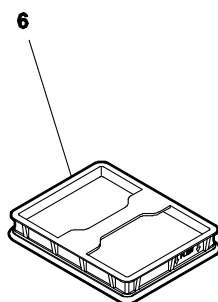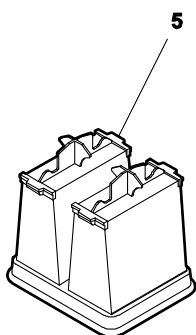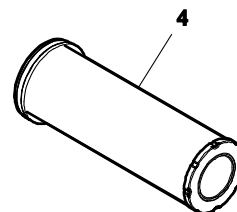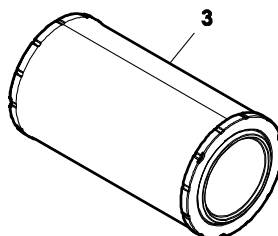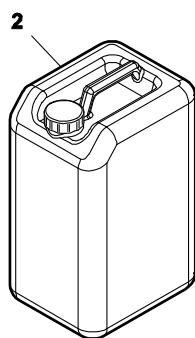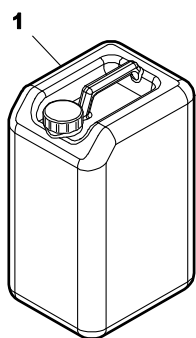

T3981_00
12/13

[illegible]

RECOMMENDED SPARE PARTS
IQ FILTERS
(5 machines for 2 years)






















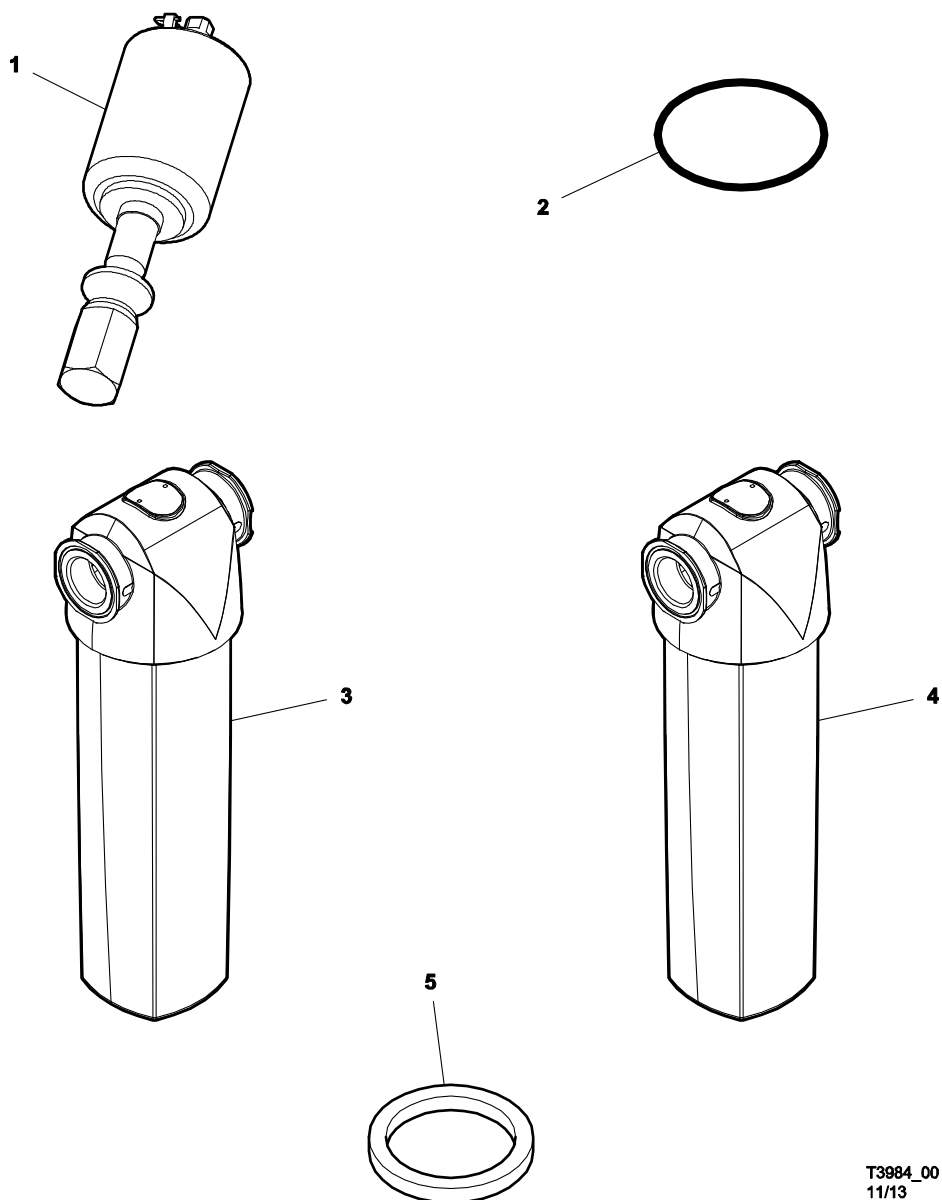


RECOMMENDED SPARE PARTS
IQ FILTERS
(5 machines for 2 years)

[illegible]

RECOMMENDED SPARE PARTS

(5 machines for 2 years)

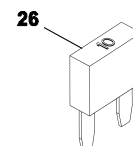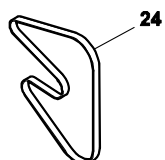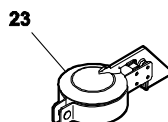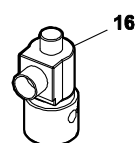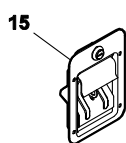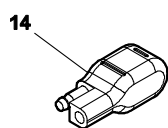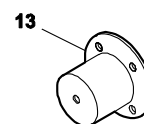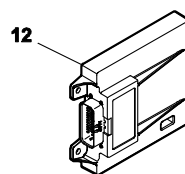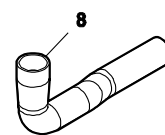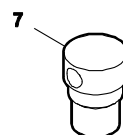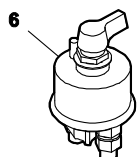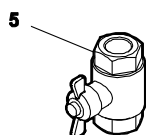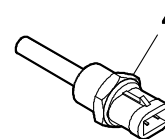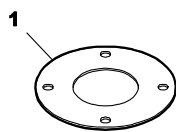

T3985_00
10/13


























RECOMMENDED SPARE PARTS

(5 machines for 2 years)

Item	Part Number	Description	Remarks	Serial Number	Qty
1	35575570	GASKET, AIREND DISCHARGE			2
2	95357976	O-RING	(airend discharge hose)		2
3	35318229	MOUNT	(airend)		2
4	23294838	SENSOR, TEMPERATURE			3
5	22477301	VALVE, BALL	(separator tank drain)		3
6	36896975	SWITCH, BATTERY ISOLATOR			3
7	35322379	VALVE, BLOWDOWN			2
8	46572924	PIPE	(to bottom of radiator)		2
9	35318013	BUSH, HOUSING	(unloader)		2
10	35318005	BUSH, PISTON	(unloader)		2
11	46571299	CAC SENSOR			3
12	46587079	CONTROLLER			2
13	35317197	DIAPHRAGM	(unloader)		2
14	35376169	DIODE ASSEMBLY			2
15	36793602	LATCH	(door)		3
16	46578941	VALVE, SOLENOID			3
17	22685499	ELBOW	(to bottom of sight tube)		2
18	22685481	ELBOW	(to top of sight tube)		2
19	89303127	SWITCH, EMERGENCY STOP			2
20	54756697	MOUNT, ENGINE			2
23	36869337	CAP, RAIN	(exhaust)		2
24	46631402	BELT, FAN			2
24	46663477	BELT, ANTI-STATIC	(optional)		1
25	54660089	CAP, FUEL TANK			3
26	23091812	FUSE	(10 A)		5

RECOMMENDED SPARE PARTS

(5 machines for 2 years)

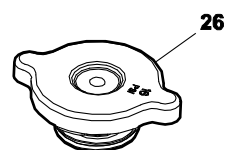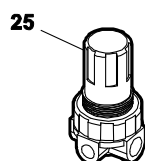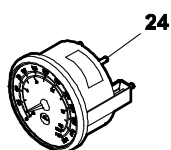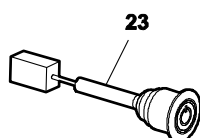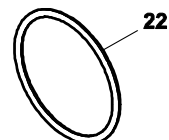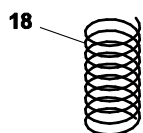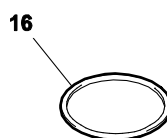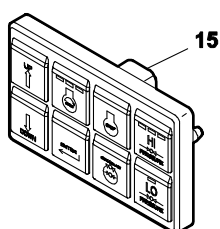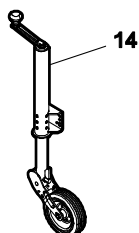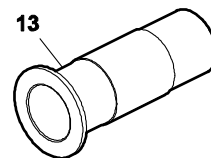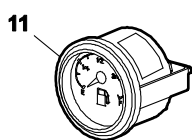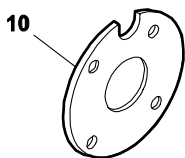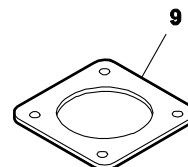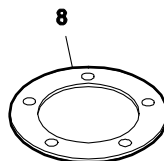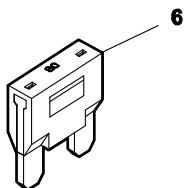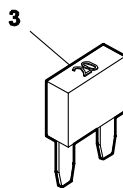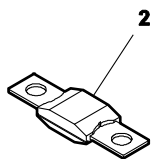

T3986_00
10/13



























RECOMMENDED SPARE PARTS

(5 machines for 2 years)

Item	Part Number	Description	Remarks	Serial Number	Qty
1	23091820	FUSE	(15 A)		5
2	46561563	FUSE	(150 A)		5
3	35298041	FUSE	(20 A)		5
4	23091853	FUSE	(30 A)		5
5	23326069	FUSE	(5 A)		5
6	46568839	FUSE	(80 A)		5
7	35600261	SPRING	(door)		5
8	35361849	GASKET	(fuel sender)		5
9	35588318	GASKET, UNLOADER INLET			3
10	35589589	GASKET, UNLOADER TO AIREND			3
11	46565479	GAUGE, FUEL LEVEL			2
12	35316868	SEAL, GREASE			4
13	22685507	INSERT, TUBE			4
14	22182075	JOCKEY WHEEL ASSEMBLY			1
15	46585699	KEYPAD			2
16	35380724	O-RING	(minimum pressure valve)		2
17	35380732	SPRING	(minimum pressure valve)		2
18	35380740	SPRING	(minimum pressure valve)		2
19	36766756	ORIFICE, SILENCER			2
20	95358024	O-RING	(airend seal)		2
21	35279942	O-RING	(oil filler plug)		4
22	95022307	O-RING	(oil temperature bypass valve)		2
23	46605159	SWITCH			3
24	46558800	GAUGE, PRESSURE			2
25	46553810	REGULATOR, PRESSURE			2
26	23264096	CAP	(radiator)		3

RECOMMENDED SPARE PARTS

(5 machines for 2 years)

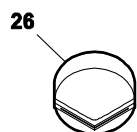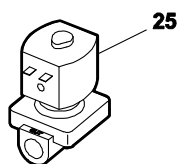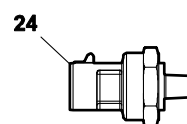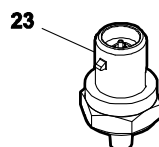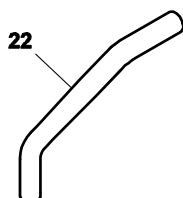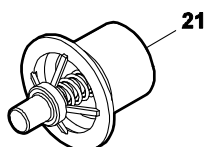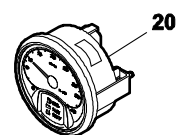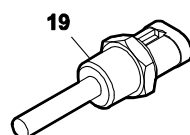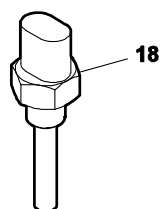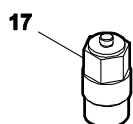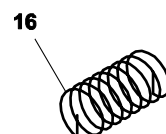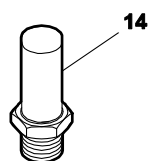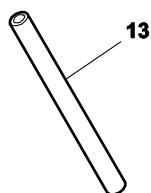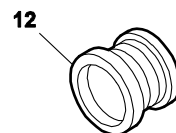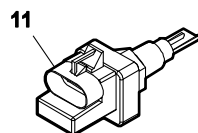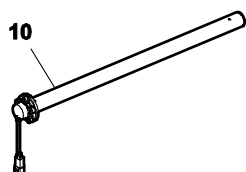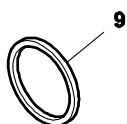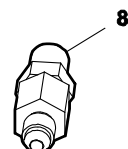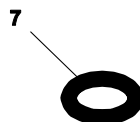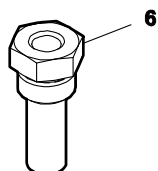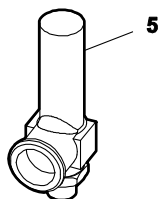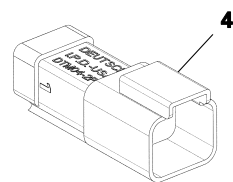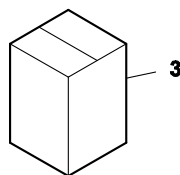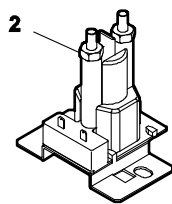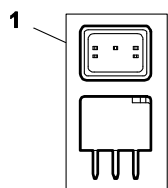


T3987_00
10/13

RECOMMENDED SPARE PARTS

(5 machines for 2 years)

Item	Part Number	Description	Remarks	Serial Number	Qty
1	23316250	RELAY			5
2	36853521	RELAY, STARTER / AIR PREHEAT			5
3	35379064	KIT, REPAIR	(valve, blowdown)		3
4	23091804	RESISTOR, CAN TERMINATING			2
5	22299747	VALVE, SAFETY			2
6	54721337	ADAPTOR	(scavenge)		3
7	92877620	O-RING	(scavenge adaptor)		5
8	36840411	VALVE, CHECK			2
9	36788172	SEAL	(oil temperature bypass valve)		2
10	46570900	SENDER, FUEL LEVEL			3
11	22769186	SENSOR, COOLANT LEVEL			3
12	35593490	SEAL	(airend shaft)		3
13	22685523	TUBE, SIGHT GAUGE	(separator tank)		3
14	35322395	SILENCER, PNEUMATIC	(fuel tank vent)		5
15	35321603	SPRING	(compression unloader)		2
16	35322767	SPRING, PISTON	(unloader)		2
17	46568519	SWITCH, PRESSURE			5
18	23294820	SENSOR, TEMPERATURE	(air discharge)		5
19	23294838	SENSOR, TEMPERATURE	(separator tank)		5
20	46594639	GAUGE, TACHOMETER W/DISPLAY	(CAN BUSS MASTER 24VDC)		3
21	22195820	ELEMENT, THERMOSTATIC VALVE			3
22	46572925	PIPE	(to top of radiator)		3
23	54496773	TRANSDUCER, PRESSURE	(0-225 psi)		3
24	36920825	TRANSDUCER, PRESSURE	(0-100 psi)		3
25	36840841	VALVE, SOLENOID			3
26	35393677	VALVE, DUST EJECTOR			5

HARNESS - SPARE PARTS

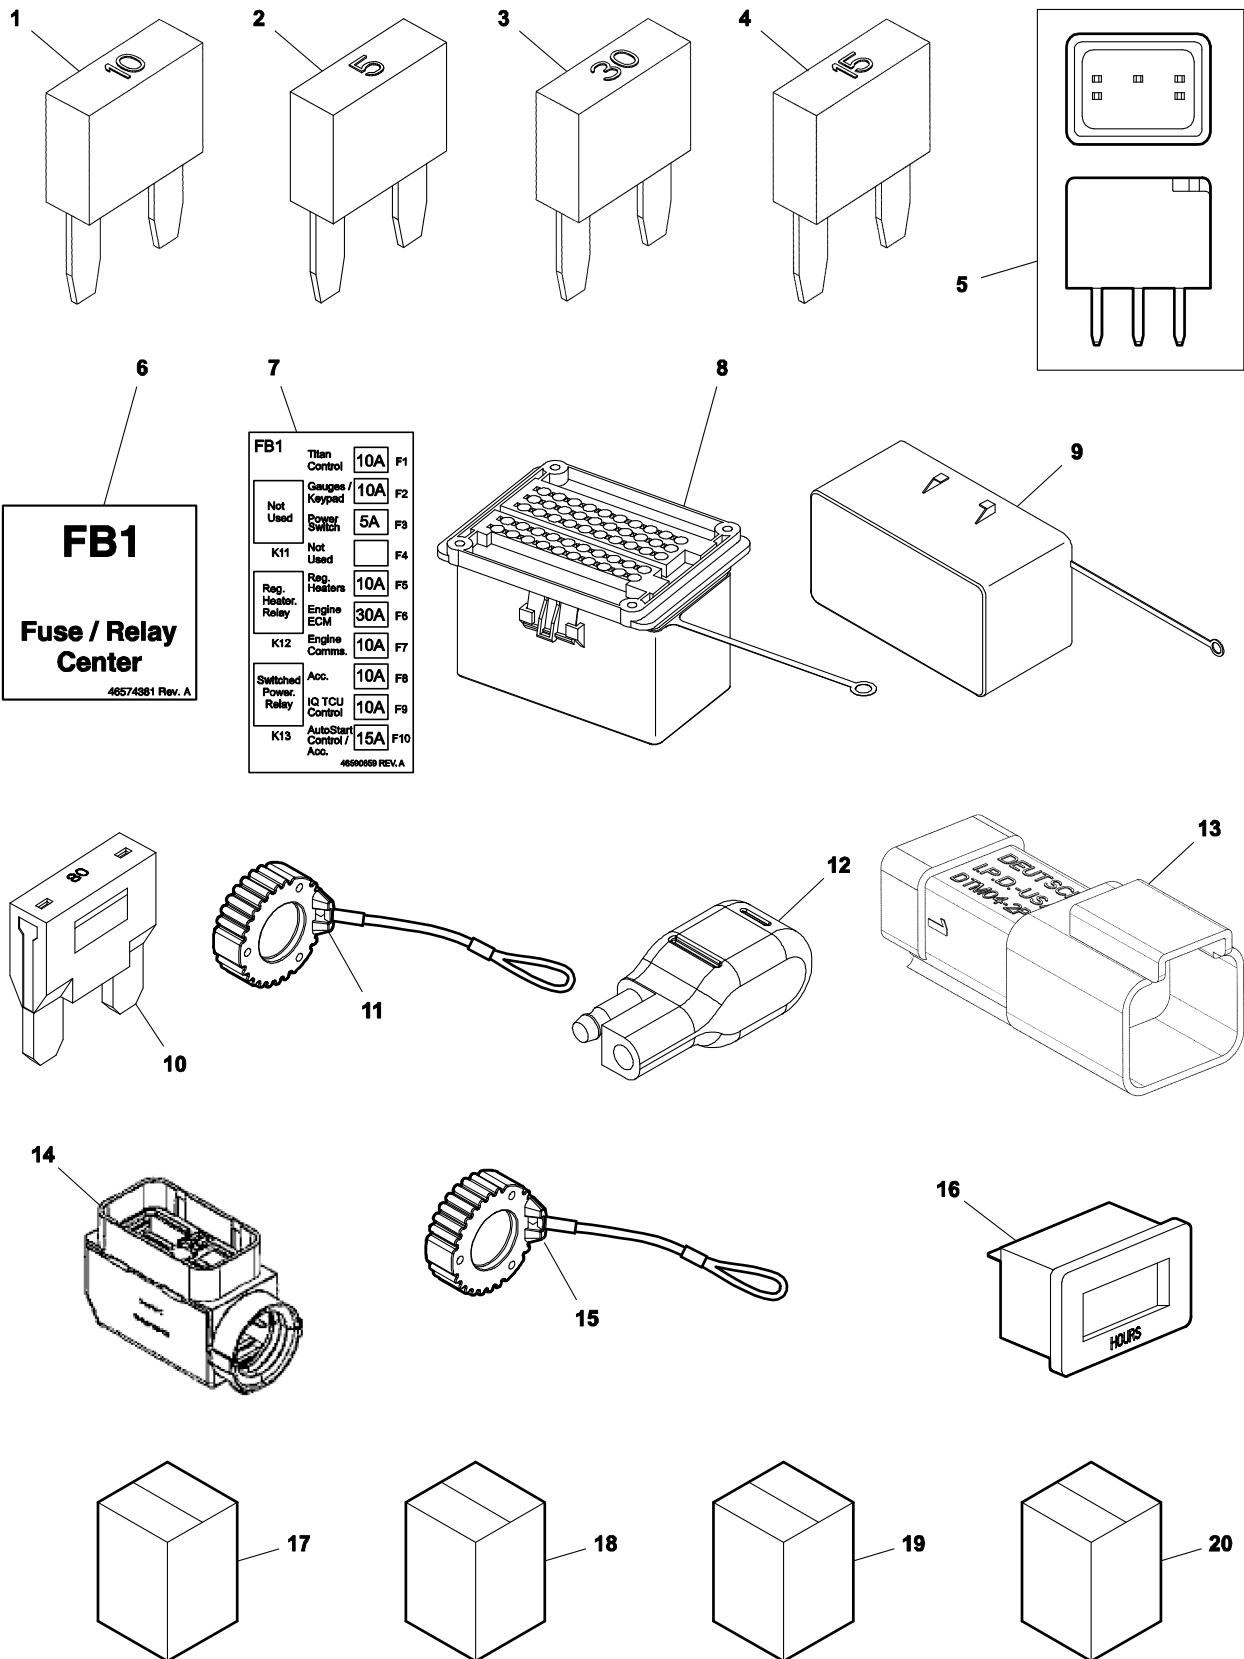


T3939_00
09/13

HARNESS - SPARE PARTS	
-----------------------	--

[illegible]

FLUIDS

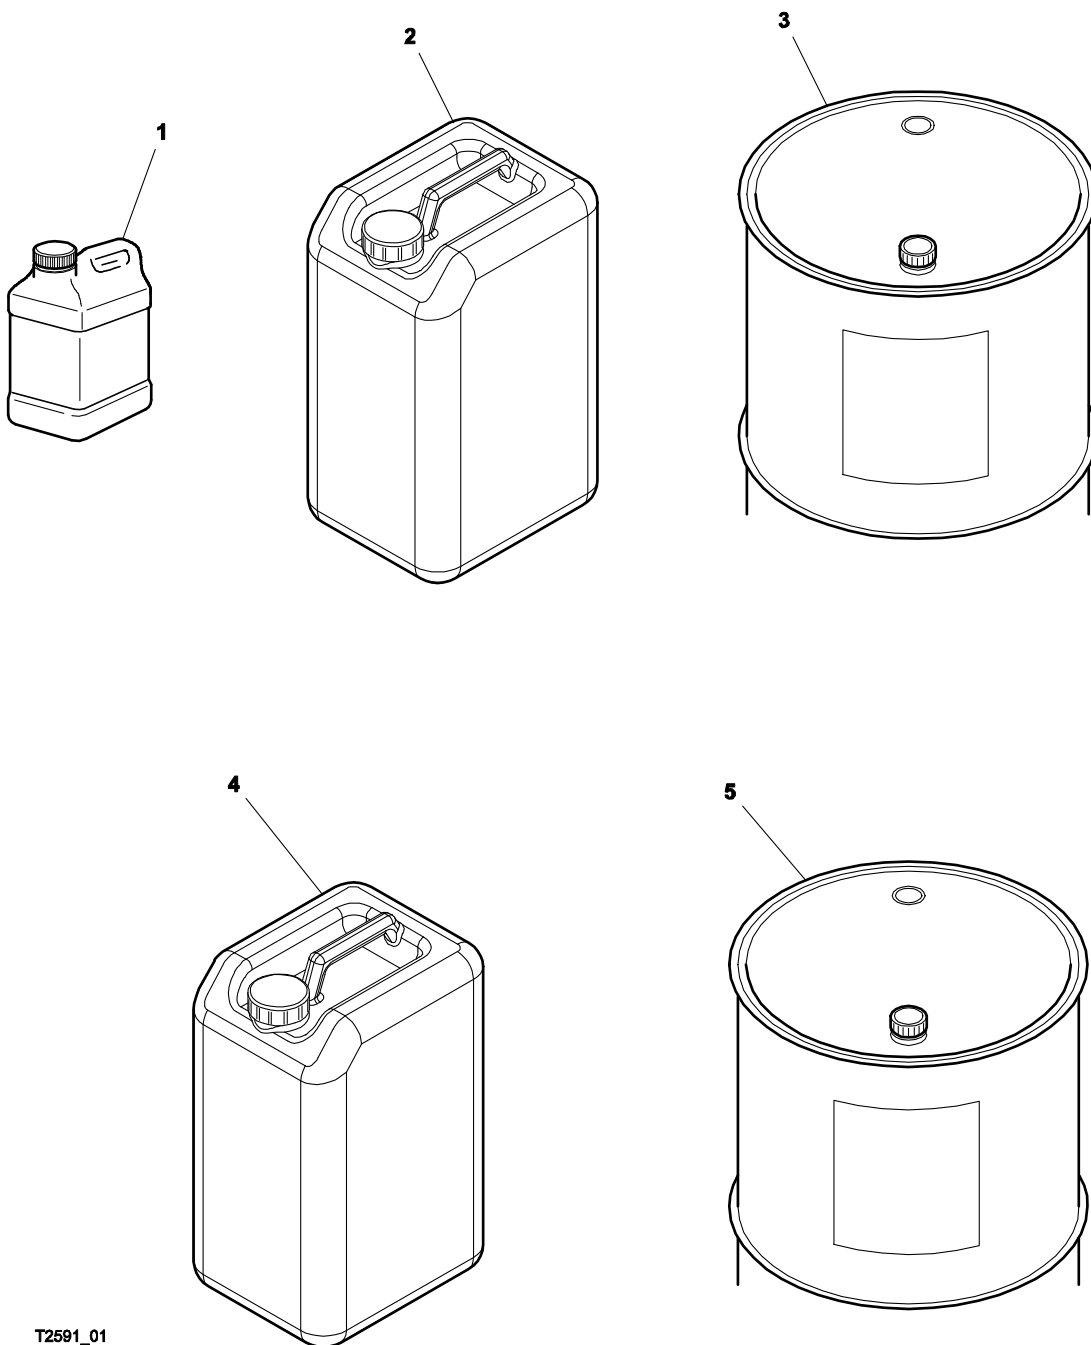

T2591_01
07/12


FLUIDS

[illegible]


AIR DELIVERY HOSE

This range of air delivery hose is readily available in the two most commonly used sizes of 3/4" and 1" I/D, in three lengths; 15m (50') complete with fittings, 4m (13') complete with fittings and random lengths. Please note the CPN given for the random lengths is a per metre measurement, therefore when ordering please specify the number of metres required.

The chart is by no means exhaustive, additional sizes or fitted lengths can be made available on request to suit your individual needs. Similarly the chart only gives details of air delivery hose at 15.5 bar (225 psi) working pressures. Should you require higher working pressures or different types of hose please contact Portable Power Aftermarket, via your normal channels.

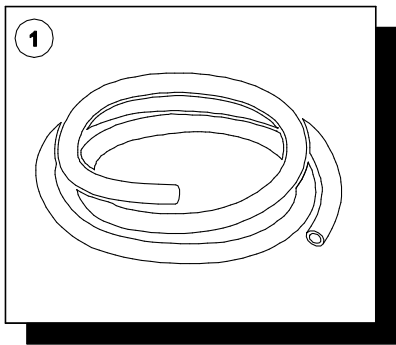

Hose
I.D.: 19 mm (3/4")
O.D.: 30 mm
Working pressure: 15.5 bar (225 psi)
Burst pressure: 46.54 bar (675 psi)
Weight: 0.580 kg/m

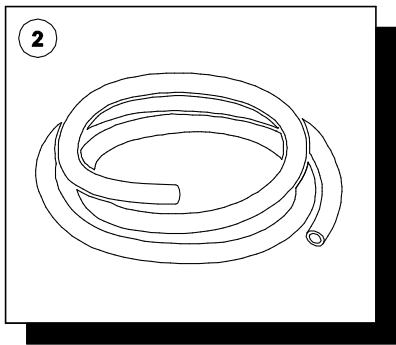


Hose
I.D.: 25 mm (1")
O.D.: 36 mm
Working pressure: 15.5 bar (225 psi)
Burst pressure: 46.54 bar (675 psi)
Weight: 0.830 kg/m

T2593_00
02/11

AIR DELIVERY HOSE	
-------------------	--

[illegible]

AIR HOSE FITTINGS

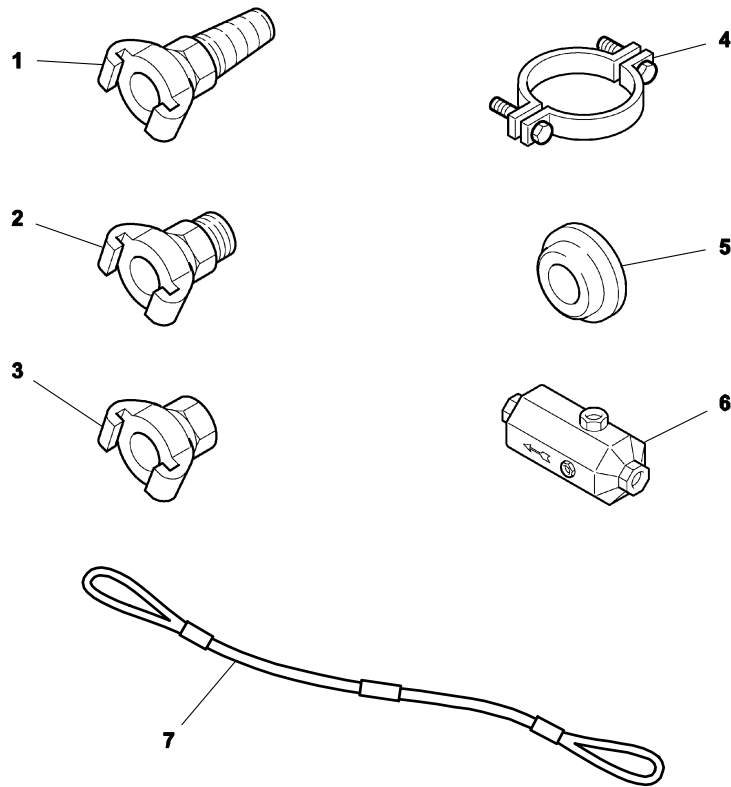

Some air tools are manufactured with an integral oil supply built into the handle. In cases where no such supply exists a lubricator installed within the air line ensures that air tools operate at peak efficiency and reduce costly repair and downtime.




The lubricator should be located as near to the tool as possible but satisfactory lubrication will be provided if installed as far away as 25ft (7.62m). Immediately upon operation of an air tool a fog of oil is automatically injected into the air stream and lubrication of the tool will continue as long as there is oil in the lubricator.

The oil supply, which is adjustable, is easily checked through the pressure proof window, and refilling is made simple by use of a large filler cap. Whenever the cap is removed it automatically vents the reservoir pressure allowing refilling without shutting down the air supply.

T2594_01
07/12

[illegible]

SERVICE TOOLS

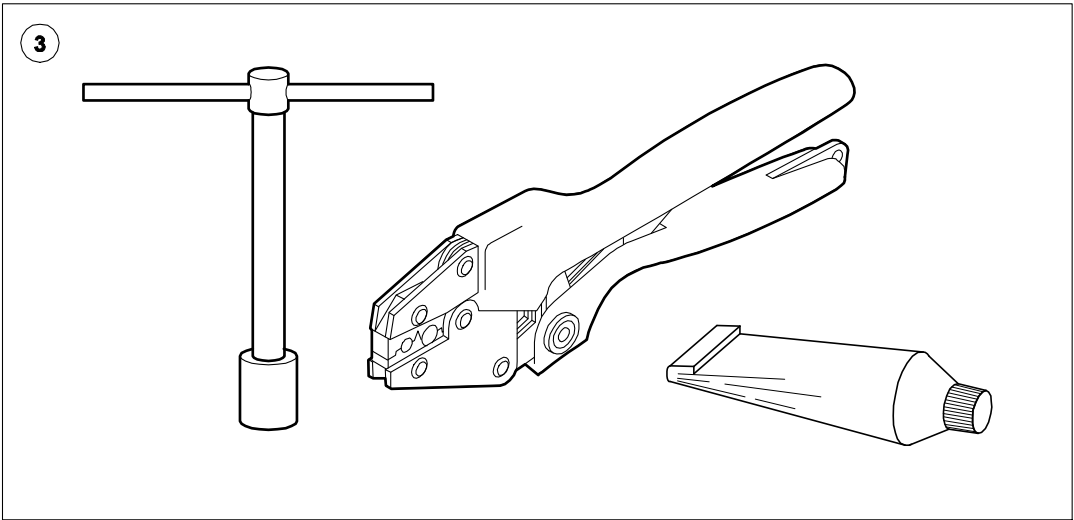
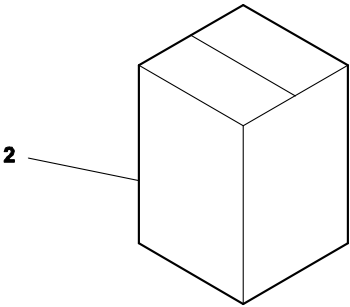
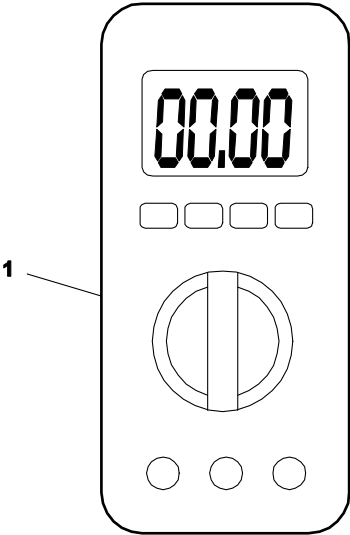


T2595_01
08/12

SERVICE TOOLS

Item	Part Number	Description	Remarks	Serial Number	Qty
1	22216691	DIGITAL MULTIMETER	(fluke 87)		1
1	22216733	METER CASE, FLUKE			1
1	22216709	TEST LEAD SET, FLUKE			1
1	22216725	WIRE INSULATION PIERCING PROBE, FLUKE			1
2	22147540	KIT, TEST ADAPTERS			1
2	22146393	KIT, DEUTSCH TERMINAL REMOVAL TOOL	(size 20 through 8)		1
3	22281588	WRENCH, T- HANDLE HEX	5/32"		1
3	22282107	SCREW DRIVER, HEX	5/32"		1
3	22282172	FLEX DRIVER	3/4"		1
3	54740675	SERIAL CABLE, HEAVY DUTY	RS232		1
3	54699640	DEUTCH TERMINAL REMOVAL	tool size 20		1
3	54699632	DEUTCH TERMINAL REMOVAL	size 16		1
3	46490942	DEUTCH TERMINAL REMOVAL	size 14		1
3	54699624	DEUTCH TERMINAL REMOVAL	size 12		1
3	54699616	DEUTCH TERMINAL REMOVAL	size 8		1
3	54699657	DEUTCH WEDGELOCK AND TERMINAL REMOVAL TOOL			1
3	22216667	DEUTSCH TERMINAL CRIMP TOOL			1
3	54729660	PACKARD WEATHER- PACK TERMINAL REMOVAL TOOL			1
3	54749643	PACKARD METRI- PACK TERMINAL REMOVAL TOOL			1
3	46490959	PACKARD METRI- PACK TERMINAL REMOVAL TOOL			1
3	22254734	PACKARD WEATHER- PACK TERMINAL CRIMP TOOL			1
3	22216683	PACKARD METRI- PACK TERMINAL CRIMP TOOL			1
3	22255974	PACKARD METRI- PACK TERMINAL CRIMP TOOL			1
3	46490967	PACKARD METRI- PACK TERMINAL CRIMP TOOL			1
3	46490975	PACKARD METRI- PACK TERMINAL CRIMP TOOL			1
3	54749544	RTD SIMULATOR			1
3	54749551	THERMISTOR SIMULATOR			1
3	22073878	THERMISTOR SIMULATOR			1
3	22168868	PRESSURE TRANSDUCER SIMULATOR			1
3	54729710	ELECTRICAL CONTACT CLEANER			1
3	22409114	ELECTRICAL GREASE			1


SERVICE TOOLS (CONT'D)

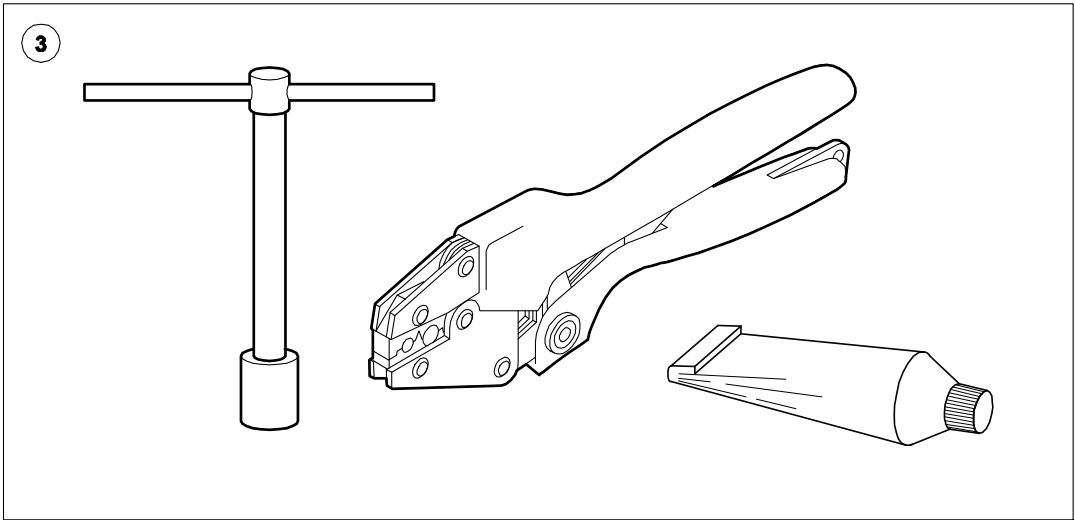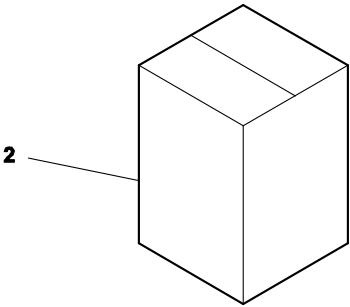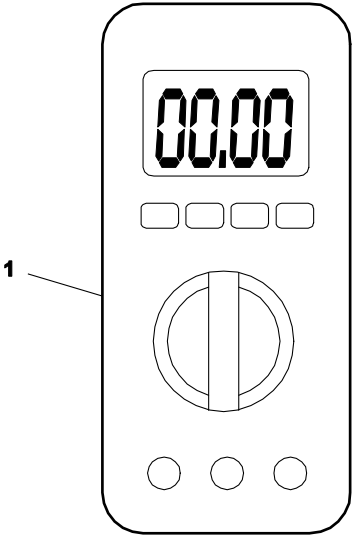

T2595_01
08/12

[illegible][illegible]

CONNECTOR REPAIR KITS

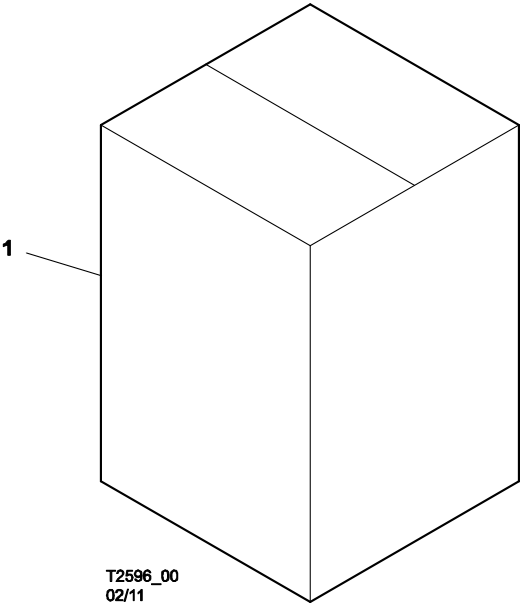

[illegible]

Intentionally left blank

NUMERICAL INDEX

Part Number	Denomination	WAS	Page	Subgroup
15900079	O-RING		103	FUEL FILTER
15901028	SCREW		133	EXHAUST MANIFOLD
15901655	SPACER		133	EXHAUST MANIFOLD
15901770	SCREW		125	FUEL INJECTOR
15901945	SWITCH, OIL PRESSURE		123	ENGINE CONTROL MODULE
15901952	O-RING		99 123	EXHAUST RECIRCULATION ENGINE CONTROL MODULE
15902505	STUD		129	TURBOCHARGER
15904253	SCREW		113	AIR INTAKE MANIFOLD
22051494	NUT		5 13	RUNNING GEAR RUNNING GEAR
22051510	COVER		5 13	RUNNING GEAR RUNNING GEAR
22051544	JOINT		13	RUNNING GEAR
22051577	NUT		5 13	RUNNING GEAR RUNNING GEAR
22051585	RING		5 13	RUNNING GEAR RUNNING GEAR
22051734	CLIP ASSEMBLY		13	RUNNING GEAR
22051882	WASHER		13	RUNNING GEAR
22060073	TUBE ASSEMBLY		69	SEPARATOR TANK
22062335	DECAL, SOUND POWER		39 41	DECALS AND DOCUMENTATION DECALS AND DOCUMENTATION
22067714	CLAMP		89	AIR INTAKE SYSTEM
22070908	BAFFLE		155 159	OPTION - AFTERCOOLER AND WATER SEP OPTION - IQ FILTERS
22073183	BRACKET		43	BRAKE LIGHTS AND WIRING
22073878	THERMISTOR SIMULATOR		207	SERVICE TOOLS
22074488	PANEL, ACOUSTIC		155 159	OPTION - AFTERCOOLER AND WATER SEP OPTION - IQ FILTERS
22074504	PANEL, ACOUSTIC		155 159	OPTION - AFTERCOOLER AND WATER SEP OPTION - IQ FILTERS
22074538	POD, LH REAR SIDE		43	BRAKE LIGHTS AND WIRING
22084024	POD, RH REAR SIDE		43	BRAKE LIGHTS AND WIRING
22097823	EYE, TOWING		13	RUNNING GEAR
22104806	WASHER		5 13	RUNNING GEAR RUNNING GEAR
22107478	HINGE, SPRING CONTROL P		33	ENCLOSURE
22111975	ELEMENT, SEPARATOR		69 177 179 189	SEPARATOR TANK MAINTENANCE KIT RECOMMENDED SPARE PARTS RECOMMENDED SPARE PARTS
22144513	CLAMP		147	COOLING SYSTEM
22146393	KIT, DEUTSCH TERMINAL R		207	SERVICE TOOLS
22146617	PISTON		73	MINIMUM PRESSURE VALVE
22146625	BODY, MINIMUM PRESSURE		73	MINIMUM PRESSURE VALVE
22146633	CV ASSEMBLY		73	MINIMUM PRESSURE VALVE

Part Number	Denomination	WAS	Page	Subgroup
22146641	MINIMUM PRESSURE VALVE		71 73	SEPARATOR TANK MINIMUM PRESSURE VALVE
22147540	KIT, TEST ADAPTERS		207	SERVICE TOOLS
22168868	PRESSURE TRANSDUCER S		207	SERVICE TOOLS
22169437	MOUNT		153	OPTION - SHOCK MOUNTS
22173454	HARNESS, REAR BUMPER		43	BRAKE LIGHTS AND WIRING
22174742	PIPE, CHARGE AIR COOLER		147	COOLING SYSTEM
22177588	EYE, TOWING		5 13 23	RUNNING GEAR RUNNING GEAR RUNNING GEAR
22177620	EYE, TOWING		5 13 23	RUNNING GEAR RUNNING GEAR RUNNING GEAR
22177687	EYE, TOWING		5 13 23	RUNNING GEAR RUNNING GEAR RUNNING GEAR
22182075	JOCKEY WHEEL ASSEMBLY		5 13 23 195	RUNNING GEAR RUNNING GEAR RUNNING GEAR RECOMMENDED SPARE PARTS
22189302	CLAMP		147	COOLING SYSTEM
22189310	REDUCER		147	COOLING SYSTEM
22189609	TUBE, AIREND OIL		55 57	AIREND PIPING AIREND PIPING
22195820	ELEMENT, THERMOSTATIC		81 197	OIL TEMPERATURE BYPASS VALVE RECOMMENDED SPARE PARTS
22207815	HITCH, BALL		5 13 23	RUNNING GEAR RUNNING GEAR RUNNING GEAR
22207823	EYE, TOWING		5 23	RUNNING GEAR RUNNING GEAR
22216667	DEUTSCH TERMINAL CRIMP		207	SERVICE TOOLS
22216683	PACKARD METRI- PACK TE		207	SERVICE TOOLS
22216691	DIGITAL MULTIMETER		207	SERVICE TOOLS
22216709	TEST LEAD SET, FLUKE		207	SERVICE TOOLS
22216725	WIRE INSULATION PIERCIN		207	SERVICE TOOLS
22216733	METER CASE, FLUKE		207	SERVICE TOOLS
22241095	NIPPLE, GREASE		5 13	RUNNING GEAR RUNNING GEAR
22241160	PIN		13	RUNNING GEAR
22241350	BOLT		5 23	RUNNING GEAR RUNNING GEAR
22241368	SCREW		13 23	RUNNING GEAR RUNNING GEAR
22241376	WASHER		5 13	RUNNING GEAR RUNNING GEAR
22241483	CLEVIS		13	RUNNING GEAR
22241491	WASHER		13	RUNNING GEAR
22241525	WASHER		13	RUNNING GEAR
22241533	SCREW		13	RUNNING GEAR

Part Number	Denomination	WAS	Page	Subgroup
22250385	HUB ASSEMBLY		23	RUNNING GEAR
22250401	TUBE		5 13 23	RUNNING GEAR RUNNING GEAR RUNNING GEAR
22250443	COVER		13	RUNNING GEAR
22250468	DRAWBAR		5	RUNNING GEAR
22250526	ARM ASSEMBLY		13	RUNNING GEAR
22250534	COUPLING		13	RUNNING GEAR
22250567	CLAMP ASSEMBLY		13	RUNNING GEAR
22250633	CABLE		5 13	RUNNING GEAR RUNNING GEAR
22250773	COMPENSATOR		5	RUNNING GEAR
22250864	HANDLE		13 23	RUNNING GEAR RUNNING GEAR
22251292	SPRING		5	RUNNING GEAR
22251318	LEVER ASSEMBLY		5	RUNNING GEAR
22251326	LINK ASSEMBLY		13	RUNNING GEAR
22251409	BOLT		5 13	RUNNING GEAR RUNNING GEAR
22251599	PIN		5 13	RUNNING GEAR RUNNING GEAR
22252050	XHP 605 COMPRESSOR OIL		201	FLUIDS
22252076	XHP 605 COMPRESSOR OIL		201	FLUIDS
22252100	XHP 405 COMPRESSOR OIL		201	FLUIDS
22252126	XHP 405 COMPRESSOR OIL		201	FLUIDS
22252969	KIT, WIRE TERMINAL REPAI		211	CONNECTOR REPAIR KITS
22252993	KIT, WEDGE CONNECTOR R		211	CONNECTOR REPAIR KITS
22253017	KIT, ADHESIVE LINED HEAT		211	CONNECTOR REPAIR KITS
22254734	PACKARD WEATHER- PACK		207	SERVICE TOOLS
22254775	KIT, FUSES ASSORTMENT O		211	CONNECTOR REPAIR KITS
22255974	PACKARD METRI- PACK TE		207	SERVICE TOOLS
22258339	VALVE, 3-WAY		155 159	OPTION - AFTERCOOLER AND WATER SEP OPTION - IQ FILTERS
22281588	WRENCH, T- HANDLE HEX		207	SERVICE TOOLS
22282107	SCREW DRIVER, HEX		207	SERVICE TOOLS
22282172	FLEX DRIVER		207	SERVICE TOOLS
22299747	VALVE, SAFETY		69 187 197	SEPARATOR TANK RECOMMENDED SPARE PARTS RECOMMENDED SPARE PARTS
22307433	SEAL		165	OPTION - LUBRICATOR
22321129	ELBOW		71	SEPARATOR TANK
22357693	PIN		5 13	RUNNING GEAR RUNNING GEAR
22377949	GEAR SET		59	AIREND GEARCASE ASSEMBLY
22377998	GEAR SET		59	AIREND GEARCASE ASSEMBLY
22391858	CAP, GREASE NIPPLE		5 13	RUNNING GEAR RUNNING GEAR
22392153	CAP, DUST		5	RUNNING GEAR

Part Number	Denomination	WAS	Page	Subgroup
			23	RUNNING GEAR
22392260	NUT		5	RUNNING GEAR
			13	RUNNING GEAR
			23	RUNNING GEAR
22409114	ELECTRICAL GREASE		207	SERVICE TOOLS
22413876	BATTERY		45	BATTERY AND MOUNTING
22425821	BRACKET, BATTERY MOUN		45	BATTERY AND MOUNTING
22431936	HOLD DOWN, BATTERY		45	BATTERY AND MOUNTING
22444384	DRAWBAR		3	RUNNING GEAR
22446744	CONNECTOR		71	SEPARATOR TANK
22477301	VALVE, BALL		71	SEPARATOR TANK
			183	RECOMMENDED SPARE PARTS
			193	RECOMMENDED SPARE PARTS
22481832	PLUG		71	SEPARATOR TANK
22538508	SCREW		173	OPTION - LIGHTING PROTECTION
22685481	ELBOW		69	SEPARATOR TANK
			193	RECOMMENDED SPARE PARTS
22685499	ELBOW		69	SEPARATOR TANK
			193	RECOMMENDED SPARE PARTS
22685507	INSERT, TUBE		69	SEPARATOR TANK
			185	RECOMMENDED SPARE PARTS
			195	RECOMMENDED SPARE PARTS
22685523	TUBE, SIGHT GAUGE		69	SEPARATOR TANK
			197	RECOMMENDED SPARE PARTS
22745517	PAN, COOLER BELLY		31	FRAME
22746630	COVER, COOLER ACCESS		145	COOLING SYSTEM
22769186	SENSOR, COOLANT LEVEL		147	COOLING SYSTEM
			187	RECOMMENDED SPARE PARTS
			197	RECOMMENDED SPARE PARTS
22869143	ELBOW		149	OPTION - CENTRAL DRAINS
22871875	SOCKET, ELECTRICAL		49	CONTROL UNIT
22895460	HOSE		89	AIR INTAKE SYSTEM
22940621	CONNECTOR		147	COOLING SYSTEM
22983001	SUPPORT, WIRE HARNESS		55	AIREND PIPING
22990816	POUCH, LITERATURE		31	FRAME
23027097	COVER, STEEL BRAID		91	FUEL SYSTEM
23061898	SENSOR, TEMPERATURE		123	ENGINE CONTROL MODULE
23091804	RESISTOR, CAN TERMINATI		187	RECOMMENDED SPARE PARTS
			197	RECOMMENDED SPARE PARTS
			199	HARNESS - SPARE PARTS
23091812	FUSE		183	RECOMMENDED SPARE PARTS
			193	RECOMMENDED SPARE PARTS
			199	HARNESS - SPARE PARTS
23091820	FUSE		185	RECOMMENDED SPARE PARTS
			195	RECOMMENDED SPARE PARTS
			199	HARNESS - SPARE PARTS
23091853	FUSE		185	RECOMMENDED SPARE PARTS
			195	RECOMMENDED SPARE PARTS
			199	HARNESS - SPARE PARTS
23128523	INDICATOR, WHEEL NUT		167	OPTION - WHEEL NUT INDICATORS

Part Number	Denomination	WAS	Page	Subgroup
23137961	VALVE, OIL TEMPERATURE		79 81	OIL PIPING OIL TEMPERATURE BYPASS VALVE
23179310	DAMPER		13	RUNNING GEAR
23181704	BULB		43	BRAKE LIGHTS AND WIRING
23186729	SEPARATOR, WATER		155 159	OPTION - AFTERCOOLER AND WATER SEP OPTION - IQ FILTERS
23186737	FILTER IQ, PRIMARY		159	OPTION - IQ FILTERS
23186745	ELEMENT, PRIMARY FILTER		181 191	RECOMMENDED SPARE PARTS RECOMMENDED SPARE PARTS
23186752	FILTER IQ, SECONDARY		159	OPTION - IQ FILTERS
23186760	ELEMENT, SECONDARY FIL		181 191	RECOMMENDED SPARE PARTS RECOMMENDED SPARE PARTS
23187388	KIT, CLAMP		159	OPTION - IQ FILTERS
23187420	KIT, CLAMP		155 159	OPTION - AFTERCOOLER AND WATER SEP OPTION - IQ FILTERS
23187438	O-RING		159	OPTION - IQ FILTERS
23187438	O-RING		181 191	RECOMMENDED SPARE PARTS RECOMMENDED SPARE PARTS
23187446	SEAL		155 159 181 191	OPTION - AFTERCOOLER AND WATER SEP OPTION - IQ FILTERS RECOMMENDED SPARE PARTS RECOMMENDED SPARE PARTS
23194210	BRACKET		155 159	OPTION - AFTERCOOLER AND WATER SEP OPTION - IQ FILTERS
23251705	SCREW		43	BRAKE LIGHTS AND WIRING
23259195	CLAMP		87	EXHAUST SYSTEM
23264096	CAP		195	RECOMMENDED SPARE PARTS
23275944	PANEL		33	ENCLOSURE
23294820	SENSOR, TEMPERATURE		55 69 187 197	AIREND PIPING SEPARATOR TANK RECOMMENDED SPARE PARTS RECOMMENDED SPARE PARTS
23294838	SENSOR, TEMPERATURE		69 183 187 193 197	SEPARATOR TANK RECOMMENDED SPARE PARTS RECOMMENDED SPARE PARTS RECOMMENDED SPARE PARTS RECOMMENDED SPARE PARTS
23296445	HOLDER, SOCKET		49	CONTROL UNIT
23316250	RELAY		187 197 199	RECOMMENDED SPARE PARTS RECOMMENDED SPARE PARTS HARNESS - SPARE PARTS
23326069	FUSE		185 195 199	RECOMMENDED SPARE PARTS RECOMMENDED SPARE PARTS HARNESS - SPARE PARTS
23343221	FLOAT, DRAIN		155 159 181 191	OPTION - AFTERCOOLER AND WATER SEP OPTION - IQ FILTERS RECOMMENDED SPARE PARTS RECOMMENDED SPARE PARTS
23366172	COVER		51 199	RELAY AND FUSE BOX HARNESS - SPARE PARTS
23366768	CAP, DUST W/LANYARD		49 199	CONTROL UNIT HARNESS - SPARE PARTS

Part Number	Denomination	WAS	Page	Subgroup
			67	UNLOADER ASSEMBLY
35104108	SCREW, HEX HEAD		63	AIREND REAR BEARING HOUSING ASSEMB
35108372	SCREW, SOCKET HEAD		59	AIREND GEARCASE ASSEMBLY
35113646	CLAMP		87	EXHAUST SYSTEM
35114149	HOSE ASSEMBLY		79	OIL PIPING
35114545	TEE		75	REGULATION SYSTEM
			155	OPTION - AFTERCOOLER AND WATER SEP
			159	OPTION - IQ FILTERS
35119718	CLIP, RETAINING		147	COOLING SYSTEM
35130830	HOSE ASSEMBLY		79	OIL PIPING
35130855	HOSE ASSEMBLY		159	OPTION - IQ FILTERS
35130871	HOSE ASSEMBLY		155	OPTION - AFTERCOOLER AND WATER SEP
35140409	FOAM		145	COOLING SYSTEM
35166404	BOLT, U		75	REGULATION SYSTEM
35210087	GASKET		59	AIREND GEARCASE ASSEMBLY
35221639	CLIP, RETAINING		147	COOLING SYSTEM
35225077	CLAMP		91	FUEL SYSTEM
35225093	CLIP, RETAINING		31	FRAME
			145	COOLING SYSTEM
			159	OPTION - IQ FILTERS
35248319	ORIFICE		155	OPTION - AFTERCOOLER AND WATER SEP
			159	OPTION - IQ FILTERS
35252279	SCREW		51	RELAY AND FUSE BOX
35253038	CLAMP		83	ENGINE ASSEMBLY
35255827	PLATE, CLAMP		59	AIREND GEARCASE ASSEMBLY
35256429	STUD		33	ENCLOSURE
35256452	RECEPTACLE		33	ENCLOSURE
35258789	CABLE		45	BATTERY AND MOUNTING
35262690	PLATE, CLAMP		63	AIREND REAR BEARING HOUSING ASSEMB
35262716	SPACER		59	AIREND GEARCASE ASSEMBLY
35270131	SPACER, BEARING		61	AIREND ROTOR HOUSING ASSEMBLY
35271162	SCREW		67	UNLOADER ASSEMBLY
			91	FUEL SYSTEM
35273366	NUT		91	FUEL SYSTEM
35278555	PLUG, ADAPTER		67	UNLOADER ASSEMBLY
35278571	O-RING		55	AIREND PIPING
35278589	O-RING		67	UNLOADER ASSEMBLY
35279025	SCREW		31	FRAME
			33	ENCLOSURE
			43	BRAKE LIGHTS AND WIRING
			49	CONTROL UNIT
			79	OIL PIPING
			87	EXHAUST SYSTEM
			89	AIR INTAKE SYSTEM
			91	FUEL SYSTEM
			145	COOLING SYSTEM
			147	COOLING SYSTEM
			155	OPTION - AFTERCOOLER AND WATER SEP
			159	OPTION - IQ FILTERS
35279553	CLAMP, HOSE		171	OPTION - OVERSPEED VALVE

Part Number	Denomination	WAS	Page	Subgroup
35279827	ELBOW		55 57	AIREND PIPING AIREND PIPING
35279843	TEE		55 57	AIREND PIPING AIREND PIPING
35279884	ELBOW		55 57	AIREND PIPING AIREND PIPING
35279942	O-RING		185 195	RECOMMENDED SPARE PARTS RECOMMENDED SPARE PARTS
35279959	O-RING		55 67	AIREND PIPING UNLOADER ASSEMBLY
35282292	TUBING, TYGON		65	UNLOADER AND MOUNTING
35285600	HOSE		91 147	FUEL SYSTEM COOLING SYSTEM
35286327	HOSE		147	COOLING SYSTEM
35286491	ELBOW		55 57	AIREND PIPING AIREND PIPING
35287747	CONNECTOR, BULKHEAD		149	OPTION - CENTRAL DRAINS
35287937	ELBOW		149	OPTION - CENTRAL DRAINS
35287945	BUSH, REDUCING		55 57	AIREND PIPING AIREND PIPING
35288422	BOLT		79	OIL PIPING
35289057	PLUG		67	UNLOADER ASSEMBLY
35289495	HOSE ASSEMBLY		85	REMOTE ENGINE OIL FILTER
35290113	SCREW		31	FRAME
35292051	ELBOW		79	OIL PIPING
35292143	CLAMP		69 71	SEPARATOR TANK SEPARATOR TANK
35293059	CLAMP		87	EXHAUST SYSTEM
35294628	GASKET, MANIFOLD		71	SEPARATOR TANK
35294693	HOSE ASSEMBLY		149	OPTION - CENTRAL DRAINS
35294750	ELBOW		149	OPTION - CENTRAL DRAINS
35295757	SCREW		45	BATTERY AND MOUNTING
35295807	HOSE ASSEMBLY		149	OPTION - CENTRAL DRAINS
35296342	CLIP, RETAINING		91 147	FUEL SYSTEM COOLING SYSTEM
35296409	ADAPTOR		155 159	OPTION - AFTERCOOLER AND WATER SEP OPTION - IQ FILTERS
35298041	FUSE		185 195	RECOMMENDED SPARE PARTS RECOMMENDED SPARE PARTS
35302314	ADAPTOR		75 155 159	REGULATION SYSTEM OPTION - AFTERCOOLER AND WATER SEP OPTION - IQ FILTERS
35305473	HOSE ASSEMBLY		149	OPTION - CENTRAL DRAINS
35305622	ELBOW		55	AIREND PIPING
35306687	ELBOW		155 159	OPTION - AFTERCOOLER AND WATER SEP OPTION - IQ FILTERS
35313535	BEARING, CYLINDRICAL RO		61	AIREND ROTOR HOUSING ASSEMBLY
35313568	BEARING		59	AIREND GEARCASE ASSEMBLY
35313600	SHIM, .002		63	AIREND REAR BEARING HOUSING ASSEMB

Part Number	Denomination	WAS	Page	Subgroup
35315407	HOSE ASSEMBLY		75	REGULATION SYSTEM
35316587	ADAPTOR, BARBED		65	UNLOADER AND MOUNTING
35316868	SEAL, GREASE		185 195	RECOMMENDED SPARE PARTS RECOMMENDED SPARE PARTS
35317197	DIAPHRAGM		67 183 193	UNLOADER ASSEMBLY RECOMMENDED SPARE PARTS RECOMMENDED SPARE PARTS
35317205	WASHER, PISTON		67	UNLOADER ASSEMBLY
35317213	PIN		67	UNLOADER ASSEMBLY
35317239	WASHER, PISTON		67	UNLOADER ASSEMBLY
35318005	BUSH, PISTON		67 193	UNLOADER ASSEMBLY RECOMMENDED SPARE PARTS
35318013	BUSH, HOUSING		67 193	UNLOADER ASSEMBLY RECOMMENDED SPARE PARTS
35318229	MOUNT		53 193	AIREND MOUNTING RECOMMENDED SPARE PARTS
35318914	SPRING		67	UNLOADER ASSEMBLY
35321223	ELBOW		155 159	OPTION - AFTERCOOLER AND WATER SEP OPTION - IQ FILTERS
35321421	KEY		53	AIREND MOUNTING
35321595	SCREW		67	UNLOADER ASSEMBLY
35321603	SPRING		67 197	UNLOADER ASSEMBLY RECOMMENDED SPARE PARTS
35322379	VALVE, BLOWDOWN		75 155 159 183 193	REGULATION SYSTEM OPTION - AFTERCOOLER AND WATER SEP OPTION - IQ FILTERS RECOMMENDED SPARE PARTS RECOMMENDED SPARE PARTS
35322395	SILENCER, PNEUMATIC		91 187 197	FUEL SYSTEM RECOMMENDED SPARE PARTS RECOMMENDED SPARE PARTS
35322767	SPRING, PISTON		67 197	UNLOADER ASSEMBLY RECOMMENDED SPARE PARTS
35323021	SCREW		43	BRAKE LIGHTS AND WIRING
35323450	STUD		65	UNLOADER AND MOUNTING
35323542	ADAPTOR, UNLOADER		65	UNLOADER AND MOUNTING
35323807	HOSE ASSEMBLY		149	OPTION - CENTRAL DRAINS
35324987	NUT		149	OPTION - CENTRAL DRAINS
35326172	ELBOW		155 159	OPTION - AFTERCOOLER AND WATER SEP OPTION - IQ FILTERS
35326602	PLATE, RETAINING		59	AIREND GEARCASE ASSEMBLY
35327212	WASHER		53 83	AIREND MOUNTING ENGINE ASSEMBLY
35327543	BEARING, BALL		59	AIREND GEARCASE ASSEMBLY
35327550	SCREW		59	AIREND GEARCASE ASSEMBLY
35327626	SPACER, BEARING		59	AIREND GEARCASE ASSEMBLY
35328475	COVER		59	AIREND GEARCASE ASSEMBLY
35329192	KEY		59	AIREND GEARCASE ASSEMBLY
35332915	PIN, LOCATOR		61	AIREND ROTOR HOUSING ASSEMBLY

Part Number	Denomination	WAS	Page	Subgroup
35337328	STUD, BALL		33	ENCLOSURE
35354448	SHIM SET		63	AIREND REAR BEARING HOUSING ASSEMB
35356484	TUBE, NYLON		75 91 155 159	REGULATION SYSTEM FUEL SYSTEM OPTION - AFTERCOOLER AND WATER SEP OPTION - IQ FILTERS
35361849	GASKET		91 185 195	FUEL SYSTEM RECOMMENDED SPARE PARTS RECOMMENDED SPARE PARTS
35363498	HOSE		147	COOLING SYSTEM
35364306	LUBRICATOR, AIR LINE		205	AIR HOSE FITTINGS
35364314	LUBRICATOR, AIR LINE		205	AIR HOSE FITTINGS
35364322	LUBRICATOR, AIR LINE		205	AIR HOSE FITTINGS
35364769	SHIM, .010		63	AIREND REAR BEARING HOUSING ASSEMB
35365774	ADAPTOR		149	OPTION - CENTRAL DRAINS
35369339	CONNECTOR		91	FUEL SYSTEM
35369347	CONNECTOR		75 91 155 159	REGULATION SYSTEM FUEL SYSTEM OPTION - AFTERCOOLER AND WATER SEP OPTION - IQ FILTERS
35369354	ELBOW		47 75 155 159	INSTRUMENT PANEL REGULATION SYSTEM OPTION - AFTERCOOLER AND WATER SEP OPTION - IQ FILTERS
35369396	TEE		159	OPTION - IQ FILTERS
35369503	TEE		75	REGULATION SYSTEM
35369511	ADAPTER		147	COOLING SYSTEM
35371103	LUBRICATOR, AIR LINE		205	AIR HOSE FITTINGS
35371111	LUBRICATOR, AIR LINE		205	AIR HOSE FITTINGS
35371129	LUBRICATOR, AIR LINE		205	AIR HOSE FITTINGS
35375385	SCREW		55	AIREND PIPING
35375591	SCREW		31 53	FRAME AIREND MOUNTING
35376169	DIODE ASSEMBLY		183 193 199	RECOMMENDED SPARE PARTS RECOMMENDED SPARE PARTS HARNESS - SPARE PARTS
35376995	ELBOW		149	OPTION - CENTRAL DRAINS
35377621	CLAMP, SPRING		65	UNLOADER AND MOUNTING
35379064	KIT, REPAIR		187 197	RECOMMENDED SPARE PARTS RECOMMENDED SPARE PARTS
35379700	CONNECTOR		159	OPTION - IQ FILTERS
35380724	O-RING		73 195	MINIMUM PRESSURE VALVE RECOMMENDED SPARE PARTS
35380732	SPRING		73 195	MINIMUM PRESSURE VALVE RECOMMENDED SPARE PARTS
35380740	SPRING		73 195	MINIMUM PRESSURE VALVE RECOMMENDED SPARE PARTS
35380757	CAP		73	MINIMUM PRESSURE VALVE
35384577	BUSH		91	FUEL SYSTEM
35393677	VALVE, DUST EJECTOR		89	AIR INTAKE SYSTEM

Part Number	Denomination	WAS	Page	Subgroup
			197	RECOMMENDED SPARE PARTS
35393719	CAP, PLUG		89	AIR INTAKE SYSTEM
35393990	HOSE		203	AIR DELIVERY HOSE
35518497	GASKET, FRONT BEARING		61	AIREND ROTOR HOUSING ASSEMBLY
35575570	GASKET, AIREND DISCHAR		55	AIREND PIPING
35575570	GASKET, AIREND DISCHAR		193	RECOMMENDED SPARE PARTS
35588193	PISTON, UNLOADER		67	UNLOADER ASSEMBLY
35588300	GASKET, PISTON		67	UNLOADER ASSEMBLY
35588318	GASKET, UNLOADER INLET		65	UNLOADER AND MOUNTING
			195	RECOMMENDED SPARE PARTS
35589589	GASKET, UNLOADER TO AIR		65	UNLOADER AND MOUNTING
			195	RECOMMENDED SPARE PARTS
35589621	BUSH, CLUTCH		53	AIREND MOUNTING
35591122	VALVE, UNLOADER		67	UNLOADER ASSEMBLY
35593490	SEAL		59	AIREND GEARCASE ASSEMBLY
			197	RECOMMENDED SPARE PARTS
35600261	SPRING		33	ENCLOSURE
			185	RECOMMENDED SPARE PARTS
			195	RECOMMENDED SPARE PARTS
35607837	SPRING		33	ENCLOSURE
35609361	BEARING, CYLINDRICAL RO		61	AIREND ROTOR HOUSING ASSEMBLY
35610856	CABLE, NEGATIVE		45	BATTERY AND MOUNTING
35612746	KEY, REPLACEMENT		33	ENCLOSURE
35833227	HOUSING, PISTON		67	UNLOADER ASSEMBLY
35834779	COUPLING, CLUTCH		53	AIREND MOUNTING
35836949	COVER, PISTON		67	UNLOADER ASSEMBLY
35843168	FLANGE, UNLOADER INLET		65	UNLOADER AND MOUNTING
36008241	ROTOR SET		61	AIREND ROTOR HOUSING ASSEMBLY
36084184	AIREND ASSEMBLY		55	AIREND PIPING
36136562	CAP, OVERFLOW		145	COOLING SYSTEM
36500832	COVER, REAR BEARING		63	AIREND REAR BEARING HOUSING ASSEMB
36710036	MANIFOLD, SERVICE		71	SEPARATOR TANK
36718427	BODY, UNLOADER		67	UNLOADER ASSEMBLY
36723641	CASE, GEAR		59	AIREND GEARCASE ASSEMBLY
36764785	CAP, GUIDE		59	AIREND GEARCASE ASSEMBLY
36764827	SHAFT, DRIVE		59	AIREND GEARCASE ASSEMBLY
36766756	ORIFICE, SILENCER		75	REGULATION SYSTEM
			185	RECOMMENDED SPARE PARTS
			195	RECOMMENDED SPARE PARTS
36769404	HOUSING, REAR BEARING		63	AIREND REAR BEARING HOUSING ASSEMB
36772028	WASHER		33	ENCLOSURE
36777399	VALVE, BALL		149	OPTION - CENTRAL DRAINS
36785012	BRACKET		69	SEPARATOR TANK
36786820	VALVE		155	OPTION - AFTERCOOLER AND WATER SEP
			159	OPTION - IQ FILTERS
36788172	SEAL		81	OIL TEMPERATURE BYPASS VALVE
			187	RECOMMENDED SPARE PARTS
			197	RECOMMENDED SPARE PARTS

Part Number	Denomination	WAS	Page	Subgroup
36793602	LATCH		33	ENCLOSURE
			183	RECOMMENDED SPARE PARTS
			193	RECOMMENDED SPARE PARTS
36794816	RIVET		33	ENCLOSURE
			145	COOLING SYSTEM
36795482	TUBE ASSEMBLY		55	AIREND PIPING
			57	AIREND PIPING
36797652	SCREW		31	FRAME
			33	ENCLOSURE
			45	BATTERY AND MOUNTING
			49	CONTROL UNIT
			145	COOLING SYSTEM
36798346	GUARD		55	AIREND PIPING
			59	AIREND GEARCASE ASSEMBLY
36799245	HOSE ASSEMBLY		155	OPTION - AFTERCOOLER AND WATER SEP
			159	OPTION - IQ FILTERS
36840411	VALVE, CHECK		75	REGULATION SYSTEM
			187	RECOMMENDED SPARE PARTS
			197	RECOMMENDED SPARE PARTS
36840841	VALVE, SOLENOID		75	REGULATION SYSTEM
			187	RECOMMENDED SPARE PARTS
			197	RECOMMENDED SPARE PARTS
36841526	HEATER		75	REGULATION SYSTEM
			155	OPTION - AFTERCOOLER AND WATER SEP
			159	OPTION - IQ FILTERS
36845154	MANIFOLD, OIL		55	AIREND PIPING
			57	AIREND PIPING
36846087	TUBE, BEARING OIL SUPPL		55	AIREND PIPING
			57	AIREND PIPING
36846095	CONNECTOR, O-RING		55	AIREND PIPING
			57	AIREND PIPING
36846103	TUBE, BEARING OIL SCAVE		55	AIREND PIPING
			57	AIREND PIPING
36846111	TUBE ASSEMBLY		55	AIREND PIPING
			57	AIREND PIPING
36846129	TEE		55	AIREND PIPING
			57	AIREND PIPING
36846152	TUBE, FRONT OIL SEAL		55	AIREND PIPING
			57	AIREND PIPING
36847838	SENSOR, AIR RESTRICTION		89	AIR INTAKE SYSTEM
36853265	WASHER		45	BATTERY AND MOUNTING
36853521	RELAY, STARTER / AIR PRE		51	RELAY AND FUSE BOX
			187	RECOMMENDED SPARE PARTS
			197	RECOMMENDED SPARE PARTS
36860005	J-BOLT		45	BATTERY AND MOUNTING
36869337	CAP, RAIN		87	EXHAUST SYSTEM
			183	RECOMMENDED SPARE PARTS
			193	RECOMMENDED SPARE PARTS
36876779	COVER, OTBV		81	OIL TEMPERATURE BYPASS VALVE
36878064	TRAY, BATTERY		45	BATTERY AND MOUNTING
36879211	NUT, FLANGE		31	FRAME
36879492	SCREW		31	FRAME

Part Number	Denomination	WAS	Page	Subgroup
36880623	COVER, FLEXIBLE ACCESS		31	FRAME
36881886	NUT		79	OIL PIPING
			83	ENGINE ASSEMBLY
			91	FUEL SYSTEM
			145	COOLING SYSTEM
			147	COOLING SYSTEM
			155	OPTION - AFTERCOOLER AND WATER SEP
			159	OPTION - IQ FILTERS
36882355	SUPPORT		151	OPTION - SHIPPING MOUNT
36883155	ADAPTOR		155	OPTION - AFTERCOOLER AND WATER SEP
			159	OPTION - IQ FILTERS
36884948	TANK, EXPANSION		145	COOLING SYSTEM
36885093	ELBOW		149	OPTION - CENTRAL DRAINS
36888055	SCREW		145	COOLING SYSTEM
36889608	SCREW		45	BATTERY AND MOUNTING
			71	SEPARATOR TANK
			145	COOLING SYSTEM
36896975	SWITCH, BATTERY ISOLATO		45	BATTERY AND MOUNTING
			183	RECOMMENDED SPARE PARTS
			193	RECOMMENDED SPARE PARTS
36897346	ELEMENT, OIL FILTER		79	OIL PIPING
			175	MAINTENANCE KIT
			177	MAINTENANCE KIT
			179	RECOMMENDED SPARE PARTS
			189	RECOMMENDED SPARE PARTS
36897429	OIL FILTER ASSEMBLY		79	OIL PIPING
36897437	HEAD, OIL FILTER		79	OIL PIPING
36897668	CLAMP		89	AIR INTAKE SYSTEM
36898096	SCREW		31	FRAME
			47	INSTRUMENT PANEL
			49	CONTROL UNIT
			51	RELAY AND FUSE BOX
			89	AIR INTAKE SYSTEM
36898104	NUT		47	INSTRUMENT PANEL
36899706	PRO-TEC COMPRESSOR OI		179	RECOMMENDED SPARE PARTS
36920650	HOSE ASSEMBLY		155	OPTION - AFTERCOOLER AND WATER SEP
			159	OPTION - IQ FILTERS
36920825	TRANSDUCER, PRESSURE		187	RECOMMENDED SPARE PARTS
			197	RECOMMENDED SPARE PARTS
39127287	TEE		159	OPTION - IQ FILTERS
39307871	CLAMP		89	AIR INTAKE SYSTEM
39435441	PLATE, CLAMP		63	AIREND REAR BEARING HOUSING ASSEMB
39437595	BEARING, TAPERED ROLLE		63	AIREND REAR BEARING HOUSING ASSEMB
39437629	GASKET, REAR BEARING H		61	AIREND ROTOR HOUSING ASSEMBLY
39437637	GASKET		59	AIREND GEARCASE ASSEMBLY
39495148	ELBOW		159	OPTION - IQ FILTERS
39703921	HOUSING, FRONT BEARING		61	AIREND ROTOR HOUSING ASSEMBLY
39748942	HOUSING, ROTOR		61	AIREND ROTOR HOUSING ASSEMBLY
42665646	AIREND ASSEMBLY, REBUIL		55	AIREND PIPING
42665679	AIREND ASSEMBLY, REBUIL		55	AIREND PIPING

Part Number	Denomination	WAS	Page	Subgroup
44021491	AIREND ASSEMBLY		55	AIREND PIPING
46490942	DEUTCH TERMINAL REMOV		207	SERVICE TOOLS
46490959	PACKARD METRI- PACK TE		207	SERVICE TOOLS
46490967	PACKARD METRI- PACK TE		207	SERVICE TOOLS
46490975	PACKARD METRI- PACK TE		207	SERVICE TOOLS
46490983	KIT, DEUTSCH CONNECTOR		211	CONNECTOR REPAIR KITS
46491296	KIT, PACKARD CONNECTOR		211	CONNECTOR REPAIR KITS
46491304	KIT, CATERPILLAR C9, C15,		211	CONNECTOR REPAIR KITS
46491312	KIT, OTC AND AUTOSTART		211	CONNECTOR REPAIR KITS
46491320	AMP AMPSEAL TERMINAL C		207	SERVICE TOOLS
46491338	MOLEX 1.5 TERMINAL CRIM		207	SERVICE TOOLS
46491346	MOLEX 0.6 TERMINAL CRIM		207	SERVICE TOOLS
46491361	MOLEX 0.6 TERMINAL REMO		207	SERVICE TOOLS
46491411	KIT, JOHN DEERE AND YAN		211	CONNECTOR REPAIR KITS
46491429	KIT, CUMMINS QSX15 ENGIN		211	CONNECTOR REPAIR KITS
46491502	KIT, SECU AND REMOTE CO		199 211	HARNESS - SPARE PARTS CONNECTOR REPAIR KITS
46491569	KIT, CUMMINS OSL9 AND Q		211	CONNECTOR REPAIR KITS
46491653	MOLEX 1.5 TERMINAL REMO		207	SERVICE TOOLS
46500021	GROMMET		43	BRAKE LIGHTS AND WIRING
46517702	CABLE, HANDBRAKE		5	RUNNING GEAR
46518700	PLUG		103	FUEL FILTER
46519146	O-RING		119	OIL FILL ARRANGEMENT
46519401	SEAL		125	FUEL INJECTOR
46519419	O-RING		125	FUEL INJECTOR
46519575	SCREW		131	STARTING MOTOR AND MOUNTING
46519831	SCREW		139	BELT TENSIONER
46519849	BELT, TENSIONER		139	BELT TENSIONER
46519856	SEAL		137	WATER PUMP
46519872	HARNESS, WIRING		143	WIRING HARNESS
46540217	PLINTH		43	BRAKE LIGHTS AND WIRING
46540795	BRACKET		45	BATTERY AND MOUNTING
46551037	NUT		129	TURBOCHARGER
46551089	GASKET		99 133	EXHAUST RECIRCULATION EXHAUST MANIFOLD
46551096	SENSOR, CRANK POSITION		123	ENGINE CONTROL MODULE
46551098	SCREW		113	AIR INTAKE MANIFOLD
46551102	SENSOR, TEMPERATURE		99	EXHAUST RECIRCULATION
46551104	SENSOR, PRESSURE		95	CRANKCASE BREATHER
46551109	ACTUATOR		105	FUEL PUMP
46551111	SENSOR, PRESSURE		99	EXHAUST RECIRCULATION
46551206	CABLE		13	RUNNING GEAR
46551207	CABLE		13	RUNNING GEAR
46551221	CJ4 ENGINE OIL (CJ-4 15W-4		201	FLUIDS
46551222	CJ4 ENGINE OIL (CJ-4 15W-4		179 189	RECOMMENDED SPARE PARTS RECOMMENDED SPARE PARTS

Part Number	Denomination	WAS	Page	Subgroup
46551223	CJ4 ENGINE OIL (CJ-4 15W-4		201	FLUIDS
46551336	SEAL		107	FUEL SYSTEM ACCESSORIES
46551405	DECAL		23	RUNNING GEAR
46551406	DECAL		23	RUNNING GEAR
46551407	DECAL		23	RUNNING GEAR
46551409	NIPPLE, GREASE		23	RUNNING GEAR
46551411	HANDLE ASSEMBLY		23	RUNNING GEAR
46551415	LEVER ASSEMBLY		23	RUNNING GEAR
46551416	BRAKE CABLE ASSEMBLY		23	RUNNING GEAR
46551417	LEVER ASSEMBLY		23	RUNNING GEAR
46551422	CLIP, SPRING		23	RUNNING GEAR
46551493	KIT, CONNECTING		23	RUNNING GEAR
46551496	KIT, BRAKE OVERHAUL		13	RUNNING GEAR
			23	RUNNING GEAR
46551497	KIT, COVER		5	RUNNING GEAR
			13	RUNNING GEAR
			23	RUNNING GEAR
46551498	KIT, CONNECTING		5	RUNNING GEAR
			13	RUNNING GEAR
			23	RUNNING GEAR
46551499	KIT, BEARING		5	RUNNING GEAR
			13	RUNNING GEAR
			23	RUNNING GEAR
46551501	BOLT		71	SEPARATOR TANK
46551517	CABLE, BRAKE		23	RUNNING GEAR
46551800	GREASE NIPPLE		5	RUNNING GEAR
			13	RUNNING GEAR
46553256	ELEMENT, WATER SEPARA		179	RECOMMENDED SPARE PARTS
			189	RECOMMENDED SPARE PARTS
46553725	RUNNING GEAR, VARIABLE		11	RUNNING GEAR
46553734	RUNNING GEAR ASSEMBLY		21	RUNNING GEAR
46553810	REGULATOR, PRESSURE		75	REGULATION SYSTEM
			185	RECOMMENDED SPARE PARTS
			195	RECOMMENDED SPARE PARTS
46554959	ELEMENT, FUEL FILTER		107	FUEL SYSTEM ACCESSORIES
			175	MAINTENANCE KIT
			177	MAINTENANCE KIT
46556466	PLATE, SERIAL NUMBER		145	COOLING SYSTEM
46556587	WHEEL & TYRE ASSEMBLY		3	RUNNING GEAR
			11	RUNNING GEAR
			21	RUNNING GEAR
46556647	SCREW		43	BRAKE LIGHTS AND WIRING
46556648	WASHER		43	BRAKE LIGHTS AND WIRING
46556775	DRAWBAR		11	RUNNING GEAR
46556776	DRAWBAR ASSEMBLY		21	RUNNING GEAR
46556777	AXLE ASSEMBLY		3	RUNNING GEAR
			5	RUNNING GEAR
			11	RUNNING GEAR
			13	RUNNING GEAR
46556778	AXLE TUBE ASSEMBLY		21	RUNNING GEAR

Part Number	Denomination	WAS	Page	Subgroup
46556990	DECAL, ULTRA LOW SULFU		39	DECALS AND DOCUMENTATION
46557109	HOURLMETER		47 199	INSTRUMENT PANEL HARNESS - SPARE PARTS
46557424	DECAL, TYRE PRESSURE		39 41	DECALS AND DOCUMENTATION DECALS AND DOCUMENTATION
46558720	ELEMENT, OIL FILTER		85 175 177 179 189	REMOTE ENGINE OIL FILTER MAINTENANCE KIT MAINTENANCE KIT RECOMMENDED SPARE PARTS RECOMMENDED SPARE PARTS
46558800	GAUGE, PRESSURE		47 195	INSTRUMENT PANEL RECOMMENDED SPARE PARTS
46560579	BRACKET, ENGINE		83	ENGINE ASSEMBLY
46560699	RIVET		33	ENCLOSURE
46561563	FUSE		51 185 195	RELAY AND FUSE BOX RECOMMENDED SPARE PARTS RECOMMENDED SPARE PARTS
46561862	HOLDER, FUSE		51	RELAY AND FUSE BOX
46564986	CLAMP		47	INSTRUMENT PANEL
46565479	GAUGE, FUEL LEVEL		47 195	INSTRUMENT PANEL RECOMMENDED SPARE PARTS
46568219	STRAP, FUEL TANK		91	FUEL SYSTEM
46568221	STRAP, FUEL TANK		91	FUEL SYSTEM
46568222	STRAP, FUEL TANK		91	FUEL SYSTEM
46568519	SWITCH, PRESSURE		69 187 197	SEPARATOR TANK RECOMMENDED SPARE PARTS RECOMMENDED SPARE PARTS
46568839	FUSE		185 195 199	RECOMMENDED SPARE PARTS RECOMMENDED SPARE PARTS HARNESS - SPARE PARTS
46569661	HITCH, BALL		5 13 23	RUNNING GEAR RUNNING GEAR RUNNING GEAR
46569682	EYE, TOWING		5 13 23	RUNNING GEAR RUNNING GEAR RUNNING GEAR
46569685	EYE, TOWING		5 13 23	RUNNING GEAR RUNNING GEAR RUNNING GEAR
46569700	EYE, TOWING		5 13 23	RUNNING GEAR RUNNING GEAR RUNNING GEAR
46569701	EYE, TOWING		5 13 23	RUNNING GEAR RUNNING GEAR RUNNING GEAR
46569979	RADIATOR		147	COOLING SYSTEM
46569980	COOLER, OIL		147	COOLING SYSTEM
46569981	COOLER, CHARGE AIR		147	COOLING SYSTEM
46570819	RETAINER		33	ENCLOSURE
46570900	SENDER, FUEL LEVEL		91 187 197	FUEL SYSTEM RECOMMENDED SPARE PARTS RECOMMENDED SPARE PARTS

Part Number	Denomination	WAS	Page	Subgroup
			193	RECOMMENDED SPARE PARTS
46571299	SENSOR, TEMPERATURE		147	COOLING SYSTEM
46571300	CLUTCH, FAN		83	ENGINE ASSEMBLY
46571324	FAN		83	ENGINE ASSEMBLY
46572219	BRACKET, ENGINE		83	ENGINE ASSEMBLY
46572764	BRACKET		147	COOLING SYSTEM
46572919	TUBE ASSEMBLY		79	OIL PIPING
46572920	TUBE ASSEMBLY		79	OIL PIPING
46572921	PIPE		147	COOLING SYSTEM
46572922	PIPE		87	EXHAUST SYSTEM
46572923	PIPE		147	COOLING SYSTEM
46572924	PIPE		147	COOLING SYSTEM
			193	RECOMMENDED SPARE PARTS
46572925	PIPE		147	COOLING SYSTEM
			197	RECOMMENDED SPARE PARTS
46573860	DECAL, DOOSAN TRI-COLO		37	DECALS AND DOCUMENTATION
46573861	DECAL, DOOSAN TRI-COLO		37	DECALS AND DOCUMENTATION
46573924	DECAL, DOOSAN LOGO		37	DECALS AND DOCUMENTATION
46574381	DECAL		199	HARNESS - SPARE PARTS
46575479	GUARD, FAN		145	COOLING SYSTEM
46575639	BRACKET		145	COOLING SYSTEM
46577659	PIPE		87	EXHAUST SYSTEM
46578519	CONVERTOR, CATALYTIC		87	EXHAUST SYSTEM
46578941	VALVE, SOLENOID		75	REGULATION SYSTEM
			183	RECOMMENDED SPARE PARTS
			193	RECOMMENDED SPARE PARTS
46580959	HOSE		89	AIR INTAKE SYSTEM
46584939	CLAMP		87	EXHAUST SYSTEM
46585699	KEYPAD		47	INSTRUMENT PANEL
			195	RECOMMENDED SPARE PARTS
46586939	AIR CLEANER ASSEMBLY		89	AIR INTAKE SYSTEM
46587079	CONTROLLER		49	CONTROL UNIT
			183	RECOMMENDED SPARE PARTS
			193	RECOMMENDED SPARE PARTS
46587383	FILTER, FUEL		91	FUEL SYSTEM
			175	MAINTENANCE KIT
			177	MAINTENANCE KIT
46588899	CLAMP		87	EXHAUST SYSTEM
46590279	ADAPTOR		91	FUEL SYSTEM
46590659	DECAL		199	HARNESS - SPARE PARTS
46592579	FOAM FIELD KIT (no adhesiv		33	ENCLOSURE
46592580	FOAM FIELD KIT (no adhesiv		33	ENCLOSURE
46594639	GAUGE, TACHOMETER W/DI		47	INSTRUMENT PANEL
			197	RECOMMENDED SPARE PARTS
46595499	FILTER, DIRECT FLOW PRIM		89	AIR INTAKE SYSTEM
			175	MAINTENANCE KIT
			177	MAINTENANCE KIT
			179	RECOMMENDED SPARE PARTS
			189	RECOMMENDED SPARE PARTS

Part Number	Denomination	WAS	Page	Subgroup
			175	MAINTENANCE KIT
			177	MAINTENANCE KIT
			179	RECOMMENDED SPARE PARTS
			189	RECOMMENDED SPARE PARTS
46595899	BACKSHELL		199	HARNESS - SPARE PARTS
46595939	DECAL, EXHAUST GAS WAR		39	DECALS AND DOCUMENTATION
46599302	KIT, ECM CONNECTOR REP		199	HARNESS - SPARE PARTS
46599319	KIT, TACHOMETER CONNec		199	HARNESS - SPARE PARTS
46600079	DECAL, T4 ENGINE & COMP		39	DECALS AND DOCUMENTATION
			41	DECALS AND DOCUMENTATION
46603079	KIT, BREAKOUT CONNECTO		199	HARNESS - SPARE PARTS
46605159	SWITCH		47	INSTRUMENT PANEL
			185	RECOMMENDED SPARE PARTS
			195	RECOMMENDED SPARE PARTS
46611559	FUSE / RELAY CENTER ASS		51	RELAY AND FUSE BOX
			199	HARNESS - SPARE PARTS
46618699	FRAME		31	FRAME
46619480	ADAPTOR		159	OPTION - IQ FILTERS
46620436	MUFFLER		87	EXHAUST SYSTEM
46620438	COVER		69	SEPARATOR TANK
46620439	TANK, SEPARATOR		69	SEPARATOR TANK
46620600	CONNECTOR		71	SEPARATOR TANK
46620852	TUBE ASSEMBLY		71	SEPARATOR TANK
46620875	COVER		149	OPTION - CENTRAL DRAINS
46621040	PANEL		31	FRAME
46621144	NIPPLE		91	FUEL SYSTEM
46621218	SUPPORT, OIL FILTER		85	REMOTE ENGINE OIL FILTER
46621288	HOSE ASSEMBLY		85	REMOTE ENGINE OIL FILTER
46621381	BRACKET		171	OPTION - OVERSPEED VALVE
46621425	VALVE, OVERSPEED		171	OPTION - OVERSPEED VALVE
46621428	HOSE		171	OPTION - OVERSPEED VALVE
46621429	HOSE		171	OPTION - OVERSPEED VALVE
46621430	HOSE		171	OPTION - OVERSPEED VALVE
46621432	TUBE ASSEMBLY		155	OPTION - AFTERCOOLER AND WATER SEP
			159	OPTION - IQ FILTERS
46621508	PAN, BELLY COOLER		149	OPTION - CENTRAL DRAINS
46621647	BRACKET		169	OPTION - SPARK ARRESTOR
46621648	BAFFLE		33	ENCLOSURE
46621742	PANEL		33	ENCLOSURE
46621959	HOSE		171	OPTION - OVERSPEED VALVE
46622023	BRACKET		149	OPTION - CENTRAL DRAINS
46622024	BAIL, LIFTING		31	FRAME
46622211	ADAPTOR		75	REGULATION SYSTEM
46622530	BRACKET		71	SEPARATOR TANK
46622531	SUPPORT		69	SEPARATOR TANK
46622654	ADAPTOR, ORIFICE		75	REGULATION SYSTEM
46623402	BRACE, COOLER		147	COOLING SYSTEM

Part Number	Denomination	WAS	Page	Subgroup
46623444	PANEL		31	FRAME
46623448	BRACKET		69	SEPARATOR TANK
46623715	PANEL, ROOF ASSEMBLY		33	ENCLOSURE
46623741	ELBOW		69	SEPARATOR TANK
46623744	BOX, RELAY		51	RELAY AND FUSE BOX
46623745	COVER		51	RELAY AND FUSE BOX
46623747	RELAY BOX ASSEMBLY		51	RELAY AND FUSE BOX
46623748	SUPPORT		51	RELAY AND FUSE BOX
46623771	SUPPORT		79	OIL PIPING
46623794	BRACKET		89	AIR INTAKE SYSTEM
46623799	BRACKET		145	COOLING SYSTEM
46623830	SUPPORT, EXHAUST		87	EXHAUST SYSTEM
46623858	BRACKET		49	CONTROL UNIT
46624115	BRACKET		145	COOLING SYSTEM
46624391	GUARD		145	COOLING SYSTEM
46624392	GUARD		145	COOLING SYSTEM
46624473	ENGINE		83	ENGINE ASSEMBLY
46625174	FUEL FILTER ASSEMBLY		91	FUEL SYSTEM
46627422	BRACKET		45	BATTERY AND MOUNTING
46627424	BRACKET		45	BATTERY AND MOUNTING
46627615	DECAL, HORIZONTAL POSIT		37	DECALS AND DOCUMENTATION
46627719	HINGE		47	INSTRUMENT PANEL
46627920	PANEL		31	FRAME
46627969	BRACKET		91	FUEL SYSTEM
46628720	ELBOW		85	REMOTE ENGINE OIL FILTER
46628721	ELBOW		85	REMOTE ENGINE OIL FILTER
46628859	HEAD, OIL FILTER		85	REMOTE ENGINE OIL FILTER
46629119	CABLE, GROUND		45	BATTERY AND MOUNTING
46629120	CABLE, GROUND		45	BATTERY AND MOUNTING
46629319	BRACKET		165	OPTION - LUBRICATOR
46629499	PIN		33	ENCLOSURE
46631399	ALTERNATOR		97	ALTERNATOR
46631400	MOTOR, STARTING		131	STARTING MOTOR AND MOUNTING
46631402	BELT, FAN		83 183 193	ENGINE ASSEMBLY RECOMMENDED SPARE PARTS RECOMMENDED SPARE PARTS
46631779	DECAL, MODEL NUMBER 7/1		37	DECALS AND DOCUMENTATION
46631780	DECAL, MODEL NUMBER 7/1		37	DECALS AND DOCUMENTATION
46631782	DECAL, MODEL NUMBER 14/		37	DECALS AND DOCUMENTATION
46632002	SUPPORT		47	INSTRUMENT PANEL
46634245	PANEL		33	ENCLOSURE
46634519	PANEL, FRONT		47	INSTRUMENT PANEL
46634620	PANEL		155 159	OPTION - AFTERCOOLER AND WATER SEP OPTION - IQ FILTERS
46634720	CONTROL PANEL ASSEMBL		47	INSTRUMENT PANEL
46635360	SCREW		83	ENGINE ASSEMBLY

Part Number	Denomination	WAS	Page	Subgroup
46636399	TUBE ASSEMBLY		155 159	OPTION - AFTERCOOLER AND WATER SEP OPTION - IQ FILTERS
46636559	WASHER		83	ENGINE ASSEMBLY
46636744	PANEL		33	ENCLOSURE
46636762	KIT, CONNECTING		5 13 23	RUNNING GEAR RUNNING GEAR RUNNING GEAR
46640199	COVER		47	INSTRUMENT PANEL
46640279	HARNESS		47	INSTRUMENT PANEL
46641199	DECAL, DUAL MODE		39	DECALS AND DOCUMENTATION
46641279	SHROUD, FAN		145	COOLING SYSTEM
46641714	DRAWBAR, COMPLETE		23	RUNNING GEAR
46641715	SET, BUSH		23	RUNNING GEAR
46641716	ARM ASSEMBLY UPPER		23	RUNNING GEAR
46641717	SET, BUSH		23	RUNNING GEAR
46641718	CENTERING MECHANISM A		23	RUNNING GEAR
46641719	ROD ASSEMBLY		23	RUNNING GEAR
46641720	SHIELD		23	RUNNING GEAR
46641721	SHIELD ASSEMBLY		23	RUNNING GEAR
46641722	SHIELD ASSEMBLY		23	RUNNING GEAR
46641723	PIVOT ASSEMBLY		23	RUNNING GEAR
46641724	PIVOT ASSEMBLY		23	RUNNING GEAR
46641725	PIVOT ASSEMBLY		23	RUNNING GEAR
46641726	JIG, CLAMPING		23	RUNNING GEAR
46641727	SPRING ASSEMBLY		23	RUNNING GEAR
46641728	HANDBRAKE LEVER ASSEM		23	RUNNING GEAR
46641744	PIVOT ASSEMBLY		23	RUNNING GEAR
46641745	BRACKET		23	RUNNING GEAR
46641746	ABSORBER, SHOCK		23	RUNNING GEAR
46641747	KIT, COVER		23	RUNNING GEAR
46641748	RING, STOP		23	RUNNING GEAR
46641749	ROD, PISTON		23	RUNNING GEAR
46641750	SET, BUSH		23	RUNNING GEAR
46641751	HOUSING		23	RUNNING GEAR
46641752	HOUSING ASSEMBLY		23	RUNNING GEAR
46641753	ARM ASSEMBLY LOWER		23	RUNNING GEAR
46641754	SET, BUSH		23	RUNNING GEAR
46641809	MANUAL, PARTS		37	DECALS AND DOCUMENTATION
46641810	MANUAL, OPERATIONS AND		37	DECALS AND DOCUMENTATION
46642198	HOSE ASSEMBLY		149	OPTION - CENTRAL DRAINS
46645079	ELEMENT, BREATHER		95 177 179 189	CRANKCASE BREATHER MAINTENANCE KIT RECOMMENDED SPARE PARTS RECOMMENDED SPARE PARTS
46645080	GASKET		99	EXHAUST RECIRCULATION
46645081	VALVE, EGR		99	EXHAUST RECIRCULATION

Part Number	Denomination	WAS	Page	Subgroup
46645083	HEAD		103	FUEL FILTER
46645084	SCREEN, FILTER		103	FUEL FILTER
46645085	ELEMENT, FUEL FILTER		103	FUEL FILTER
			175	MAINTENANCE KIT
			177	MAINTENANCE KIT
			179	RECOMMENDED SPARE PARTS
			189	RECOMMENDED SPARE PARTS
46645086	O-RING		105	FUEL PUMP
46645087	O-RING		105	FUEL PUMP
46645088	FUEL FILTER ASSEMBLY		107	FUEL SYSTEM ACCESSORIES
46645089	PLUG, EXPANSION		117	OIL LEVEL GAUGE
46645090	DIPSTICK		117	OIL LEVEL GAUGE
46645091	CAP, OIL FILLER		119	OIL FILL ARRANGEMENT
46645092	ELEMENT, CATALYST		87	EXHAUST SYSTEM
46645093	O-RING		123	ENGINE CONTROL MODULE
46645094	SENSOR, PRESSURE		127	INJECTOR PIPING
46645095	KIT, TURBOCHARGER		129	TURBOCHARGER
46645096	CAP ASSEMBLY		135	VALVE COVER
46645097	HARNESS, CONTROL MODU		143	WIRING HARNESS
46646939	SPACER, CLUTCH		83	ENGINE ASSEMBLY
46646940	FAN DRIVE		83	ENGINE ASSEMBLY
46647879	CABLE, POSITIVE		45	BATTERY AND MOUNTING
46650454	O-RING		95	CRANKCASE BREATHER
46650455	BREATHER, CRANKCASE		95	CRANKCASE BREATHER
46650456	PULLEY		97	ALTERNATOR
46650457	CONNECTOR		103	FUEL FILTER
46650458	CONNECTOR		103	FUEL FILTER
46650459	ADAPTOR		107	FUEL SYSTEM ACCESSORIES
46650460	PUMP, FUEL		105	FUEL PUMP
46650461	FUEL FILTER ASSEMBLY		103	FUEL FILTER
46650462	HEAD		107	FUEL SYSTEM ACCESSORIES
46650464	O-RING		109	AIR INTAKE CONNECTION
46650465	GASKET		115	ENGINE OIL COOLER
46650466	CLAMP		111	AIR TRANSFER CONNECTION
46650467	O-RING		111	AIR TRANSFER CONNECTION
46650468	GASKET		113	AIR INTAKE MANIFOLD
46650470	GASKET		115	ENGINE OIL COOLER
46650471	INJECTOR, FUEL		125	FUEL INJECTOR
46650472	GASKET		121	OIL PAN
46650473	CLAMP, INJECTOR		125	FUEL INJECTOR
46650474	TURBOCHARGER		129	TURBOCHARGER
46650475	GASKET		129	TURBOCHARGER
46650476	WASHER, SEALING		129	TURBOCHARGER
46650478	GASKET		129	TURBOCHARGER
46650479	GASKET		135	VALVE COVER
46650480	PUMP, WATER		137	WATER PUMP

Part Number	Denomination	WAS	Page	Subgroup
46651378	SHOCK ABSORBER ASSEM		5 13	RUNNING GEAR RUNNING GEAR
46651380	KIT, CONNECTING		5 13	RUNNING GEAR RUNNING GEAR
46651381	KIT, EXPANDING KEY		5 13	RUNNING GEAR RUNNING GEAR
46651382	KIT, CONNECTING		5	RUNNING GEAR
46651383	CLAMP		5	RUNNING GEAR
46651384	BRAKE HUB ASSEMBLY		5 13	RUNNING GEAR RUNNING GEAR
46651386	KIT, BRAKE OVERHAUL		5	RUNNING GEAR
46651387	DRAWBAR		13	RUNNING GEAR
46651393	COUPLING ASSEMBLY		13	RUNNING GEAR
46651395	GUIDE ASSEMBLY		13	RUNNING GEAR
46651397	LEVER ASSEMBLY		13	RUNNING GEAR
46651399	KIT, CONNECTING		13	RUNNING GEAR
46651400	KIT, LEVER		13	RUNNING GEAR
46651401	SET, SPRING		13	RUNNING GEAR
46651402	PIVOT ASSEMBLY		13	RUNNING GEAR
46651403	KIT, PIVOT		13	RUNNING GEAR
46651404	BRAKE ROD ASSEMBLY		13	RUNNING GEAR
46651463	HANDBRAKE LEVER ASSEM		5	RUNNING GEAR
46651464	CABLE		13	RUNNING GEAR
46651762	KIT, 500HR MAINTENANCE		175	MAINTENANCE KIT
46651763	KIT, 1000HR MAINTENANCE		177	MAINTENANCE KIT
46652105	PRO-TEC ENGINE OIL		201	FLUIDS
46652106	PRO-TEC ENGINE OIL		201	FLUIDS
46652167	DECAL, REGULATION		75	REGULATION SYSTEM
46652200	BRACKET		83	ENGINE ASSEMBLY
46652296	DECAL, J5		41	DECALS AND DOCUMENTATION
46652297	DECAL, J5A		41	DECALS AND DOCUMENTATION
46652307	WASHER		91	FUEL SYSTEM
46652308	PAD, RUBBER		91	FUEL SYSTEM
46652338	SEAL, RUBBER STRIP		145	COOLING SYSTEM
46652650	CAP, DUST W/LANYARD		49 199	CONTROL UNIT HARNESS - SPARE PARTS
46652827	SOCKET, ELECTRICAL		49	CONTROL UNIT
46655090	SUPPORT		153	OPTION - SHOCK MOUNTS
46656616	PLATE, DATA		41	DECALS AND DOCUMENTATION
46656744	DECAL, WEB SITE		37	DECALS AND DOCUMENTATION
46663477	BELT, ANTI-STATIC		83 183 193	ENGINE ASSEMBLY RECOMMENDED SPARE PARTS RECOMMENDED SPARE PARTS
46663638	SWITCH, VACUUM		171	OPTION - OVERSPEED VALVE
46663639	RAIL		33	ENCLOSURE
46663819	BOLT		153	OPTION - SHOCK MOUNTS
46666161	ARRESTOR, SPARK		169	OPTION - SPARK ARRESTOR

Part Number	Denomination	WAS	Page	Subgroup
46669371	SENSOR		155 159	OPTION - AFTERCOOLER AND WATER SEP OPTION - IQ FILTERS
46669621	PIPE		87	EXHAUST SYSTEM
46670199	ELBOW		155 159	OPTION - AFTERCOOLER AND WATER SEP OPTION - IQ FILTERS
46670249	CLEVIS		5	RUNNING GEAR
46670255	CONVERSION LEVER ASSE		13	RUNNING GEAR
46670619	PIN		5	RUNNING GEAR
46671616	BRACKET		33	ENCLOSURE
46671617	BRACKET		33	ENCLOSURE
46671620	PLATE		33	ENCLOSURE
46679400	DECAL, BATTERY DISCONN		45	BATTERY AND MOUNTING
46680257	FLAP, RAIN		33	ENCLOSURE
46687700	GRILLE, LIGHT PROTECTIO		173	OPTION - LIGHTING PROTECTION
46687833	DIAGRAM, BUMPER MODIFI		173	OPTION - LIGHTING PROTECTION
54403191	ELBOW		165	OPTION - LUBRICATOR
54403209	ELBOW		165	OPTION - LUBRICATOR
54477740	HARNESS, FRONT SIDE		43	BRAKE LIGHTS AND WIRING
54496773	TRANSDUCER, PRESSURE		75 159 187 197	REGULATION SYSTEM OPTION - IQ FILTERS RECOMMENDED SPARE PARTS RECOMMENDED SPARE PARTS
54511282	CABLE, POSITIVE		45	BATTERY AND MOUNTING
54614870	BUMPER, END STOP		43	BRAKE LIGHTS AND WIRING
54625702	ADAPTOR		75 165	REGULATION SYSTEM OPTION - LUBRICATOR
54629977	DECAL, ISO CENTRAL DRAI		149	OPTION - CENTRAL DRAINS
54629993	PANEL		33	ENCLOSURE
54633938	TANK, FUEL		91	FUEL SYSTEM
54639174	HINGE, SIDE DOOR		33	ENCLOSURE
54660089	CAP, FUEL TANK		91 193	FUEL SYSTEM RECOMMENDED SPARE PARTS
54660162	AFTERCOOLER		155 159	OPTION - AFTERCOOLER AND WATER SEP OPTION - IQ FILTERS
54661889	AIR CLEANER ASSEMBLY		89	AIR INTAKE SYSTEM
54675863	STANDPIPE ASSEMBLY		91	FUEL SYSTEM
54688015	HOSE, DISCHARGE		69	SEPARATOR TANK
54688254	PANEL, REAR END CAP		33	ENCLOSURE
54692967	BODY, AIR CLEANER		89	AIR INTAKE SYSTEM
54692975	COVER, AIR CLEANER		89	AIR INTAKE SYSTEM
54694815	COVER, MANIFOLD		71	SEPARATOR TANK
54694823	PANEL		33	ENCLOSURE
54694831	PANEL, REAR ACCESS		33	ENCLOSURE
54699616	DEUTCH TERMINAL REMOV		207	SERVICE TOOLS
54699624	DEUTCH TERMINAL REMOV		207	SERVICE TOOLS
54699632	DEUTCH TERMINAL REMOV		207	SERVICE TOOLS
54699640	DEUTCH TERMINAL REMOV		207	SERVICE TOOLS

Part Number	Denomination	WAS	Page	Subgroup
54715891	POD, LH FRONT SIDE		43	BRAKE LIGHTS AND WIRING
54716592	POD, RH FRONT SIDE		43	BRAKE LIGHTS AND WIRING
54717145	ELEMENT, AIR FILTER		89 177 179 189	AIR INTAKE SYSTEM MAINTENANCE KIT RECOMMENDED SPARE PARTS RECOMMENDED SPARE PARTS
54717152	ELEMENT, AIR FILTER		89 177 179 189	AIR INTAKE SYSTEM MAINTENANCE KIT RECOMMENDED SPARE PARTS RECOMMENDED SPARE PARTS
54718184	STRAP, FOAM RETAINING		33	ENCLOSURE
54720719	ADAPTOR		91	FUEL SYSTEM
54720834	BAFFLE		33	ENCLOSURE
54721337	ADAPTOR		75 187 197	REGULATION SYSTEM RECOMMENDED SPARE PARTS RECOMMENDED SPARE PARTS
54729660	PACKARD WEATHER- PACK		207	SERVICE TOOLS
54729710	ELECTRICAL CONTACT CLE		207	SERVICE TOOLS
54732508	RUNNING GEAR, FIXED HEI		3	RUNNING GEAR
54737622	BRACKET, FRONT INTAKE		33	ENCLOSURE
54737630	BUMPER		43	BRAKE LIGHTS AND WIRING
54738091	BAR ASSEMBLY, BUMPER /		43	BRAKE LIGHTS AND WIRING
54740675	SERIAL CABLE, HEAVY DUT		207	SERVICE TOOLS
54742028	PLATE, BAIL EYE		31	FRAME
54743265	DOOR, CONTROL PANEL		33	ENCLOSURE
54749544	RTD SIMULATOR		207	SERVICE TOOLS
54749551	THERMISTOR SIMULATOR		207	SERVICE TOOLS
54749643	PACKARD METRI- PACK TE		207	SERVICE TOOLS
54756697	ISOLATOR, CENTRE BOND		83	ENGINE ASSEMBLY
54756697	MOUNT, ENGINE		193	RECOMMENDED SPARE PARTS
54761622	BRACKET		155 159	OPTION - AFTERCOOLER AND WATER SEP OPTION - IQ FILTERS
54761630	BRACKET		155 159	OPTION - AFTERCOOLER AND WATER SEP OPTION - IQ FILTERS
80026297	CLAMP		109	AIR INTAKE CONNECTION
80027923	PLUG		107	FUEL SYSTEM ACCESSORIES
80027980	KIT, BRAKE SHOE		5 13 23	RUNNING GEAR RUNNING GEAR RUNNING GEAR
80028053	SENSOR, PRESSURE		123	ENGINE CONTROL MODULE
80028202	O-RING		123	ENGINE CONTROL MODULE
80028210	SENSOR, PRS TEMPERATU		123	ENGINE CONTROL MODULE
80028293	SEAL		123	ENGINE CONTROL MODULE
88106224	FENDER		33	ENCLOSURE
88122593	CLAMP		87 141	EXHAUST SYSTEM EXHAUST OUTLET CONNECTION
89292973	PRO-TEC COMPRESSOR OI		201	FLUIDS
89292981	PRO-TEC COMPRESSOR OI		201	FLUIDS

Part Number	Denomination	WAS	Page	Subgroup
89303127	SWITCH, EMERGENCY STO		47 183 193	INSTRUMENT PANEL RECOMMENDED SPARE PARTS RECOMMENDED SPARE PARTS
89310718	HOSE		203	AIR DELIVERY HOSE
92047331	HOSE		203	AIR DELIVERY HOSE
92061456	LOCKWASHER		45	BATTERY AND MOUNTING
92063296	COUPLING, MALE		205	AIR HOSE FITTINGS
92063379	COUPLING, HOSE		205	AIR HOSE FITTINGS
92063387	CLAMP, HOSE		205	AIR HOSE FITTINGS
92076447	NIPPLE		71	SEPARATOR TANK
92076454	NIPPLE		71	SEPARATOR TANK
92085729	REFLECTOR, WHITE		43	BRAKE LIGHTS AND WIRING
92111228	VALVE, BALL		71	SEPARATOR TANK
92112226	HOSE		203	AIR DELIVERY HOSE
92121243	REFLECTOR, AMBER		43	BRAKE LIGHTS AND WIRING
92121250	LIGHT, FRONT SIDE		43	BRAKE LIGHTS AND WIRING
92150978	COUPLING, HOSE		205	AIR HOSE FITTINGS
92150986	CLAMP, HOSE		205	AIR HOSE FITTINGS
92178524	COUPLING, CLAW		71 205	SEPARATOR TANK AIR HOSE FITTINGS
92178532	COUPLING, FEMALE		205	AIR HOSE FITTINGS
92178565	SEAL		205	AIR HOSE FITTINGS
92185016	ELBOW		165	OPTION - LUBRICATOR
92253194	CLAMP, HOSE		43	BRAKE LIGHTS AND WIRING
92271915	RIVET		43	BRAKE LIGHTS AND WIRING
92271923	RIVET		33 47	ENCLOSURE INSTRUMENT PANEL
92280981	SCREW		91	FUEL SYSTEM
92281369	RIVET		43	BRAKE LIGHTS AND WIRING
92294461	VALVE, BALL		71	SEPARATOR TANK
92304492	NUT		43	BRAKE LIGHTS AND WIRING
92304542	NUT		33	ENCLOSURE
92304609	WASHER		71 91	SEPARATOR TANK FUEL SYSTEM
92341981	WASHER		173	OPTION - LIGHTING PROTECTION
92354653	PLUG		71	SEPARATOR TANK
92354729	TEE		165	OPTION - LUBRICATOR
92398627	SCREW		69 83 151	SEPARATOR TANK ENGINE ASSEMBLY OPTION - SHIPPING MOUNT
92473594	NUT		165	OPTION - LUBRICATOR
92490358	TUBE, NYLON		165	OPTION - LUBRICATOR
92721331	REFLECTOR, RED		43	BRAKE LIGHTS AND WIRING
92726017	GROMMET		91	FUEL SYSTEM
92737840	HOSE		203	AIR DELIVERY HOSE
92737857	HOSE		203	AIR DELIVERY HOSE
92737972	COUPLING, FEMALE		205	AIR HOSE FITTINGS

Part Number	Denomination	WAS	Page	Subgroup
92737980	COUPLING, MALE		205	AIR HOSE FITTINGS
92737998	COUPLING, FEMALE		205	AIR HOSE FITTINGS
92738004	COUPLING, FEMALE		205	AIR HOSE FITTINGS
92789205	SCREW		33	ENCLOSURE
92793173	ADAPTOR		165	OPTION - LUBRICATOR
92808666	FILTER, FUEL		91	FUEL SYSTEM
92823913	ELBOW		165	OPTION - LUBRICATOR
92867415	DECAL, CLOSE DOORS		39	DECALS AND DOCUMENTATION
92867449	DECAL, REFER TO HANDBO		39 41	DECALS AND DOCUMENTATION DECALS AND DOCUMENTATION
92867530	DECAL, HOT SURFACE		39 41	DECALS AND DOCUMENTATION DECALS AND DOCUMENTATION
92877620	O-RING		187 197	RECOMMENDED SPARE PARTS RECOMMENDED SPARE PARTS
92896158	SCREW		165	OPTION - LUBRICATOR
92899293	WHEEL CHOCK AND HOLDE		163	OPTION - WHEEL CHOCKS
92899699	SEAL		33	ENCLOSURE
92901222	LAMP, TAIL/STOP/FLASH		43	BRAKE LIGHTS AND WIRING
92901230	LAMP, REGISTRATION PLAT		43	BRAKE LIGHTS AND WIRING
92911288	TUBE		165	OPTION - LUBRICATOR
92919380	HOUSING		165	OPTION - LUBRICATOR
92919398	HEAD		165	OPTION - LUBRICATOR
92919554	VALVE		165	OPTION - LUBRICATOR
92919810	PLUG		165	OPTION - LUBRICATOR
92930585	DECAL, PRESSURISED VES		41	DECALS AND DOCUMENTATION
92930593	DECAL, ELECTRIC SHOCK		41	DECALS AND DOCUMENTATION
92930601	DECAL, CORROSIVE SUBST		41	DECALS AND DOCUMENTATION
92930627	DECAL, GENERAL WARNING		39 41	DECALS AND DOCUMENTATION DECALS AND DOCUMENTATION
92930650	DECAL, EMERGENCY STOP		39	DECALS AND DOCUMENTATION
92930668	DECAL, NO MAINT/READ MA		39 41	DECALS AND DOCUMENTATION DECALS AND DOCUMENTATION
92949742	FOAM FIELD KIT (with adhesi		33	ENCLOSURE
92949759	FOAM FIELD KIT (with adhesi		33	ENCLOSURE
92949767	FOAM FIELD KIT (with adhesi		33	ENCLOSURE
92949775	FOAM FIELD KIT (with adhesi		33	ENCLOSURE
92962547	CLIP, NUMBER PLATE		43	BRAKE LIGHTS AND WIRING
92976042	DECAL, EXHAUST GAS DISC		39	DECALS AND DOCUMENTATION
93163897	DECAL		165	OPTION - LUBRICATOR
93165959	DECAL, ROTATING FAN		39 41	DECALS AND DOCUMENTATION DECALS AND DOCUMENTATION
93171239	DECAL, ENGINE OIL DRAIN		41	DECALS AND DOCUMENTATION
93171247	DECAL, COOLANT DRAIN		41	DECALS AND DOCUMENTATION
93171262	DECAL, LIFT/TIE POINT		39 41	DECALS AND DOCUMENTATION DECALS AND DOCUMENTATION
93171270	DECAL, ENGINE OIL FILL		41	DECALS AND DOCUMENTATION
93171288	DECAL, COOLANT FILL		39	DECALS AND DOCUMENTATION

Part Number	Denomination	WAS	Page	Subgroup
93190486	DECAL, COOLANT LEVEL		41	DECALS AND DOCUMENTATION
93194413	DECAL, DO NOT STAND		41	DECALS AND DOCUMENTATION
93465383	DECAL, SERVICE VALVE		39	DECALS AND DOCUMENTATION
93477388	LAMP, FOG		43	BRAKE LIGHTS AND WIRING
95022307	O-RING		81 185 195	OIL TEMPERATURE BYPASS VALVE RECOMMENDED SPARE PARTS RECOMMENDED SPARE PARTS
95078549	PIN		59	AIREND GEARCASE ASSEMBLY
95208682	ADAPTOR		71 155 159	SEPARATOR TANK OPTION - AFTERCOOLER AND WATER SEP OPTION - IQ FILTERS
95220604	SCREW		53	AIREND MOUNTING
95220851	CLAMP		147	COOLING SYSTEM
95223178	RING, SNAP		61	AIREND ROTOR HOUSING ASSEMBLY
95223194	RING, SNAP		61	AIREND ROTOR HOUSING ASSEMBLY
95223806	RING, SNAP		61	AIREND ROTOR HOUSING ASSEMBLY
95239927	PIN		61	AIREND ROTOR HOUSING ASSEMBLY
95264776	CLAMP		147	COOLING SYSTEM
95280541	PLUG		91	FUEL SYSTEM
95357976	O-RING		69 193	SEPARATOR TANK RECOMMENDED SPARE PARTS
95358024	O-RING		59 195	AIREND GEARCASE ASSEMBLY RECOMMENDED SPARE PARTS
95358131	O-RING		63	AIREND REAR BEARING HOUSING ASSEMB
95364469	ELBOW		75	REGULATION SYSTEM
95365094	ELBOW		75	REGULATION SYSTEM
95376133	ELBOW		79	OIL PIPING
95381109	KEY		61	AIREND ROTOR HOUSING ASSEMBLY
95402806	ADAPTOR		55 57	AIREND PIPING AIREND PIPING
95431292	ELBOW		155 159	OPTION - AFTERCOOLER AND WATER SEP OPTION - IQ FILTERS
95487773	NIPPLE		155 159	OPTION - AFTERCOOLER AND WATER SEP OPTION - IQ FILTERS
95494167	SCREW		63	AIREND REAR BEARING HOUSING ASSEMB
95667341	NIPPLE		75 155 159 165	REGULATION SYSTEM OPTION - AFTERCOOLER AND WATER SEP OPTION - IQ FILTERS OPTION - LUBRICATOR
95757183	ELBOW		69	SEPARATOR TANK
95916532	SCREW		91	FUEL SYSTEM
95923298	NUT		45	BATTERY AND MOUNTING
95928040	NIPPLE		149	OPTION - CENTRAL DRAINS
95928222	PLUG		91	FUEL SYSTEM
95928321	WASHER		153	OPTION - SHOCK MOUNTS
95928800	NUT		47	INSTRUMENT PANEL
95930301	BUSH		75 159	REGULATION SYSTEM OPTION - IQ FILTERS

Part Number	Denomination	WAS	Page	Subgroup
95934550	SCREW		79	OIL PIPING
95934683	WASHER, LOCK		69 71	SEPARATOR TANK SEPARATOR TANK
95934998	WASHER		91	FUEL SYSTEM
95935029	WASHER		33	ENCLOSURE
95935037	WASHER		79 87	OIL PIPING EXHAUST SYSTEM
95935052	WASHER		31 53 69 83	FRAME AIREND MOUNTING SEPARATOR TANK ENGINE ASSEMBLY
95935599	COUPLING		89	AIR INTAKE SYSTEM
95935607	COUPLING		47	INSTRUMENT PANEL
95938148	CONNECTOR		79	OIL PIPING
95938205	PLUG		63	AIREND REAR BEARING HOUSING ASSEMB
95940748	BUSH, REDUCING		75 91	REGULATION SYSTEM FUEL SYSTEM
95944575	NIPPLE		75	REGULATION SYSTEM
95944666	ELBOW		75	REGULATION SYSTEM
95944732	ELBOW		69	SEPARATOR TANK
95947149	PLUG		69 149	SEPARATOR TANK OPTION - CENTRAL DRAINS
95949491	PLUG		55	AIREND PIPING
95949749	ELBOW		155	OPTION - AFTERCOOLER AND WATER SEP
95953576	NIPPLE		69	SEPARATOR TANK
95954194	TEE		75	REGULATION SYSTEM
95954210	TEE		69	SEPARATOR TANK
95954293	CROSS		75	REGULATION SYSTEM
95954913	REDUCER		79	OIL PIPING
95954921	ADAPTOR		79	OIL PIPING
95956199	ELBOW		89	AIR INTAKE SYSTEM
95992632	ELBOW		69 79	SEPARATOR TANK OIL PIPING
96701404	WASHER		71	SEPARATOR TANK
96701487	SCREW		71	SEPARATOR TANK
96701503	BOLT		53 83	AIREND MOUNTING ENGINE ASSEMBLY
96701750	NUT, HEX		31 65	FRAME UNLOADER AND MOUNTING
96701917	SCREW		55	AIREND PIPING
96702279	SCREW		71 145 147 155 159	SEPARATOR TANK COOLING SYSTEM COOLING SYSTEM OPTION - AFTERCOOLER AND WATER SEP OPTION - IQ FILTERS
96702287	SCREW		67 83	UNLOADER ASSEMBLY ENGINE ASSEMBLY
96702295	SCREW		59	AIREND GEARCASE ASSEMBLY
96702659	SCREW		81	OIL TEMPERATURE BYPASS VALVE

Part Number	Denomination	WAS	Page	Subgroup
			89	AIR INTAKE SYSTEM
96704176	NUT		31	FRAME
96704408	SCREW		83	ENGINE ASSEMBLY
			85	REMOTE ENGINE OIL FILTER
			147	COOLING SYSTEM
			155	OPTION - AFTERCOOLER AND WATER SEP
			159	OPTION - IQ FILTERS
			171	OPTION - OVERSPEED VALVE
96704630	NUT		53	AIREND MOUNTING
			83	ENGINE ASSEMBLY
96704671	WASHER		163	OPTION - WHEEL CHOCKS
96708060	BOLT		171	OPTION - OVERSPEED VALVE
96712187	SCREW		63	AIREND REAR BEARING HOUSING ASSEMB
96716162	SCREW		59	AIREND GEARCASE ASSEMBLY
			61	AIREND ROTOR HOUSING ASSEMBLY
96719810	SCREW		69	SEPARATOR TANK
			153	OPTION - SHOCK MOUNTS
96720933	NUT		153	OPTION - SHOCK MOUNTS
96727557	SCREW		69	SEPARATOR TANK
96728480	SCREW		45	BATTERY AND MOUNTING
96735543	NUT		163	OPTION - WHEEL CHOCKS
			171	OPTION - OVERSPEED VALVE
96738695	SCREW		31	FRAME
			33	ENCLOSURE
			149	OPTION - CENTRAL DRAINS
96744891	SCREW		149	OPTION - CENTRAL DRAINS
96745211	SCREW		163	OPTION - WHEEL CHOCKS
96745229	WASHER		163	OPTION - WHEEL CHOCKS
96747068	NUT		153	OPTION - SHOCK MOUNTS
97319941	CHECK, SAFETY		205	AIR HOSE FITTINGS



Portable Power



Portable Power