



Doosan Infracore
Portable Power

PARTS MANUAL

HP935WCU-EX-T1 (708)
XP1050WCU-EX-T1 (709)
HP935WCU-EX-T1 (E78)
XP1050WCU-EX-T1 (E80)

COMPRESSOR MODEL

Doosan Infracore Portable Power
1293 Glenway Drive
Statesville, N.C. 28625
DoosanPortablePower.com

Book: 46497798 (04/2013) Rev E

TABLE OF CONTENTS

Parts Book

TITLE	PAGE
Parts Ordering	

COMPRESSOR PARTS

Fast Trac Frame and Running Gear	8
Steerable Frame and Running Gear	10
Jack Assembly	12
Hydraulic Brake Actuator Assembly	14
Hydraulic Brake Lines	16
Parking Brake	18
Running Gear - Fast Trac	20
Running Gear - Steerable Front Axle	22
Running Gear - Steerable Rear Axle	24
Engine and Air Cylinder Mount	26
Exhaust Mount	28
Airend and Unloader Mount	30
Unloader Assembly	32
Airend Gear Case Housing	34
Airend Rotor Housing	36
Airend Rear Bearing Housing	38
Airend Piping	40
Cooler Package	42
Radiator Piping	44
Separator Tank	46
Minimum Pressure Valve	48
Oil Filter Mount	50
Fuel Tank	52
Air Piping	54
Air Piping	56
Oil Piping	58
Oil Piping	60
Cold Starting Aid	62
Air Intake	64
Battery Mount	66
Control Panel	68
Control Panel Mount	70
Enclosure Side Panels	72
Enclosure Top Corner Panels	74
Enclosure Roof and Baffles	76
Enclosure Belly Pans	78
Acoustic Foam Roof and Sides	80
Acoustic Foam Doors and Baffles	82

OPTION PARTS

Aftercooler and Water Separator	90
Drains - Aftercooler	92
Drain - Water Separator	94

WIRING DIAGRAMS

TABLE OF CONTENTS
Parts Book

TITLE	PAGE
--------------	-------------



Parts Ordering

GENERAL

This publication, which contains an illustrated parts breakdown, has been prepared as an aid in locating those parts which may be required in the maintenance of the unit. Always insist on genuine Doosan parts for your unit.

Doosan Infracore Portable Power can bear no responsibility for injury or damages resulting directly from the use of non-approved repair parts.

Doosan Portable Power service facilities and parts are available worldwide. Consult local yellow pages or visit: www.doosanportablepower.com.

Special order parts may not be included in this manual. Contact the Portable Power Parts Department with the unit serial number for assistance with these special parts.

Description

The illustrated parts breakdown illustrates and lists the various assemblies, subassemblies and detailed parts which make up this particular machine. This covers the standard models and the more popular options that are available.

In referring to the rear, the front or to either side of the unit, always consider the drawbar end of the unit as the front.

Standing at the rear of the unit facing the drawbar (front) will determine the right and left sides.

Fasteners

Both SAE/inch and ISO/metric hardware have been used in the design and assembly of these units. In the disassembly and reassembly of parts, extreme care must be taken to avoid damaging threads by the use of wrong fasteners.

How To Order


Always specify the model and serial number of the unit.

Specify the part number and description.




COMPRESSOR PARTS

Fast Trac Frame and Running Gear

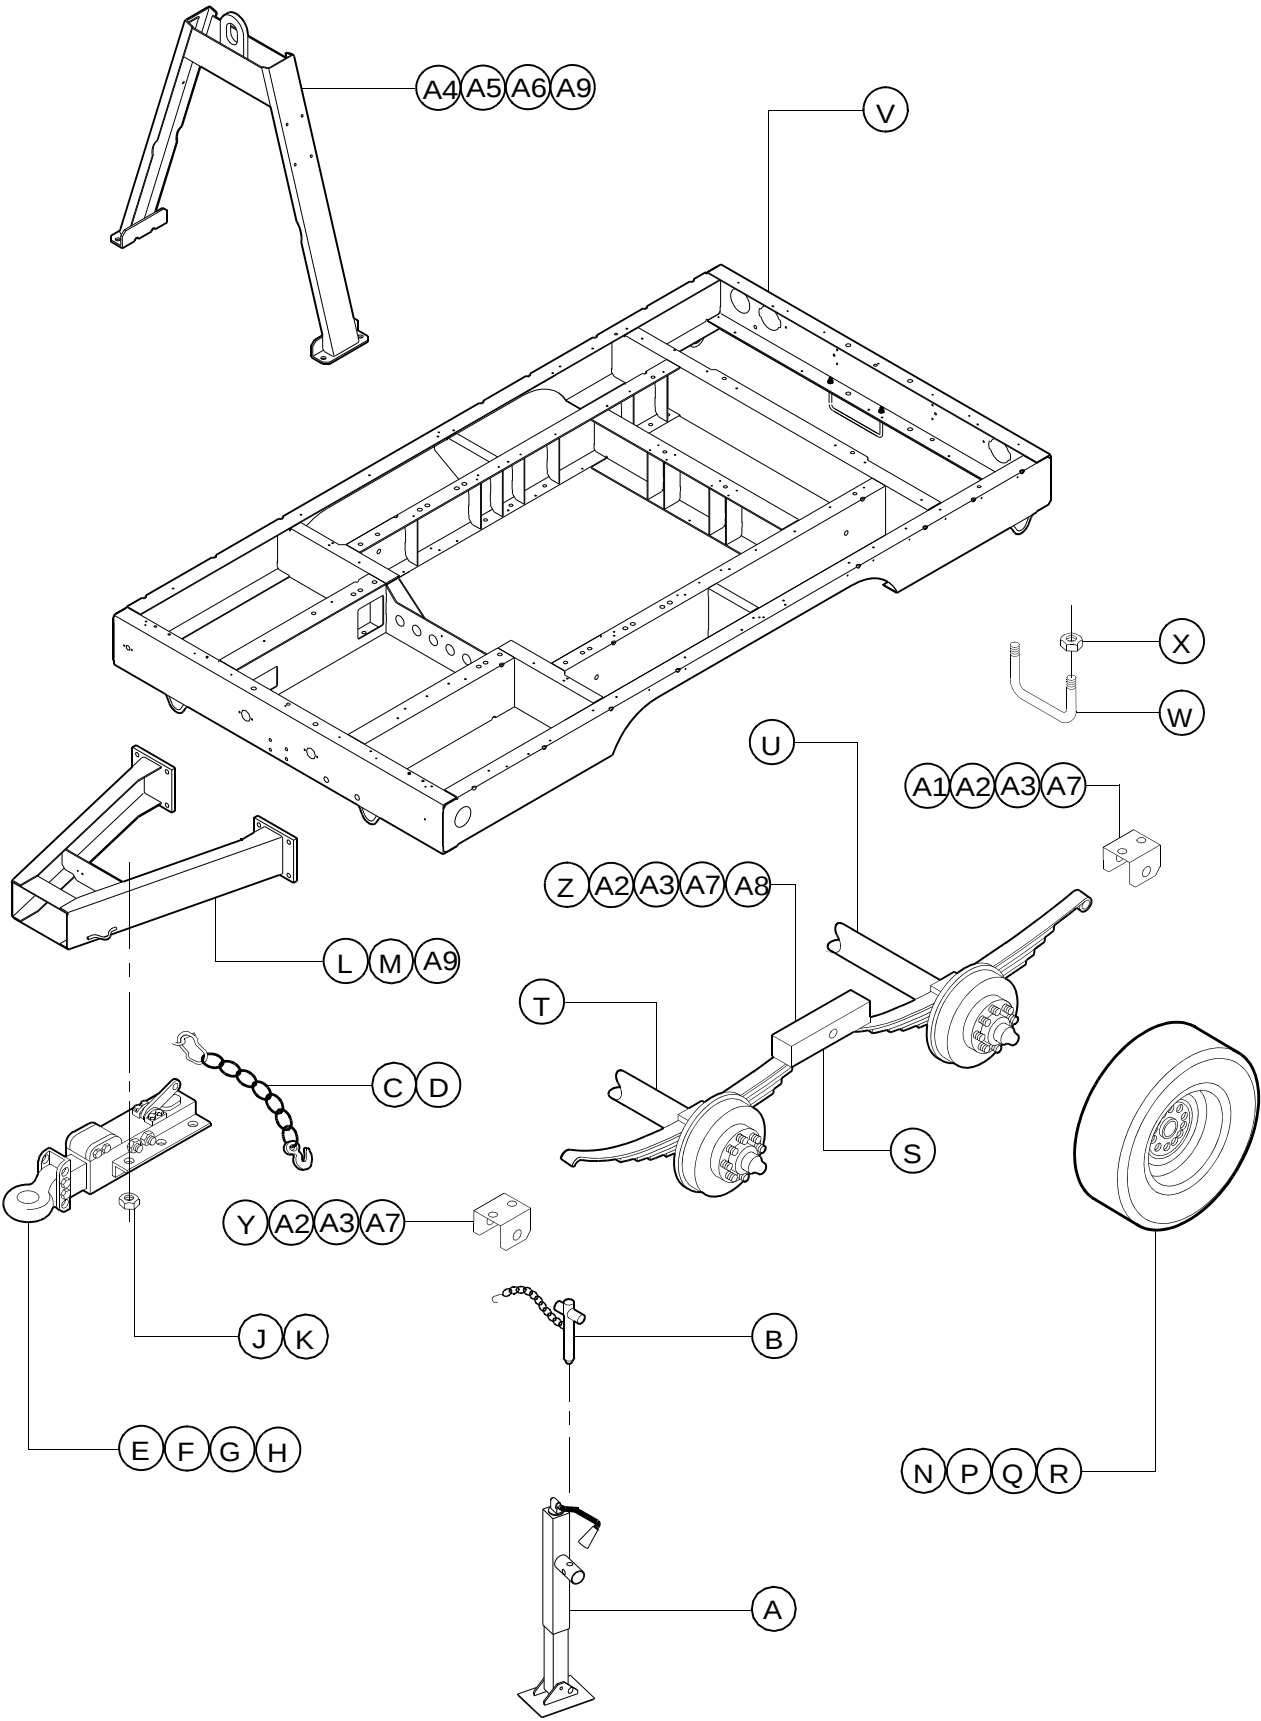


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	36870111	Jack		
B	35609544	Pin		
C	35610377	Chain		
D	35369800	Coupling		
E	36734879	Actuator, Brake		
F	35605187	Eye, Pintle		
G	35376094	Screw		
H	96700885	Nut		
J	35272558	Screw		
K	35356526	Nut, Lock		
L	36893725	Drawbar		
M	36763670	Screw		
N	36042893	Tire & Wheel Assy		
P	36894061	Tire		
Q	36882785	Wheel		
R	35148204	Valve Stem		
S	35385434	Kit, Equalizer		
T	36891794	Front Axle Assy		
U	36891786	Rear Axle Assy		
V	36892701	Frame		
W	35304666	Step		
X	95922910	Nut		
Y	35326958	Hanger, Front		
Z	36895225	Hanger, Center		
A1	35326966	Hanger, Rear		
A2	36877793	Screw		
A3	35304047	Nut		
A4	36893733	Lifting Bail		
A5	36763670	Screw		
A6	35297340	Nut		
A7	95935003	Washer		
A8	36895225	Equalizer		
A9	95935011	Washer		

Steerable Frame and Running Gear

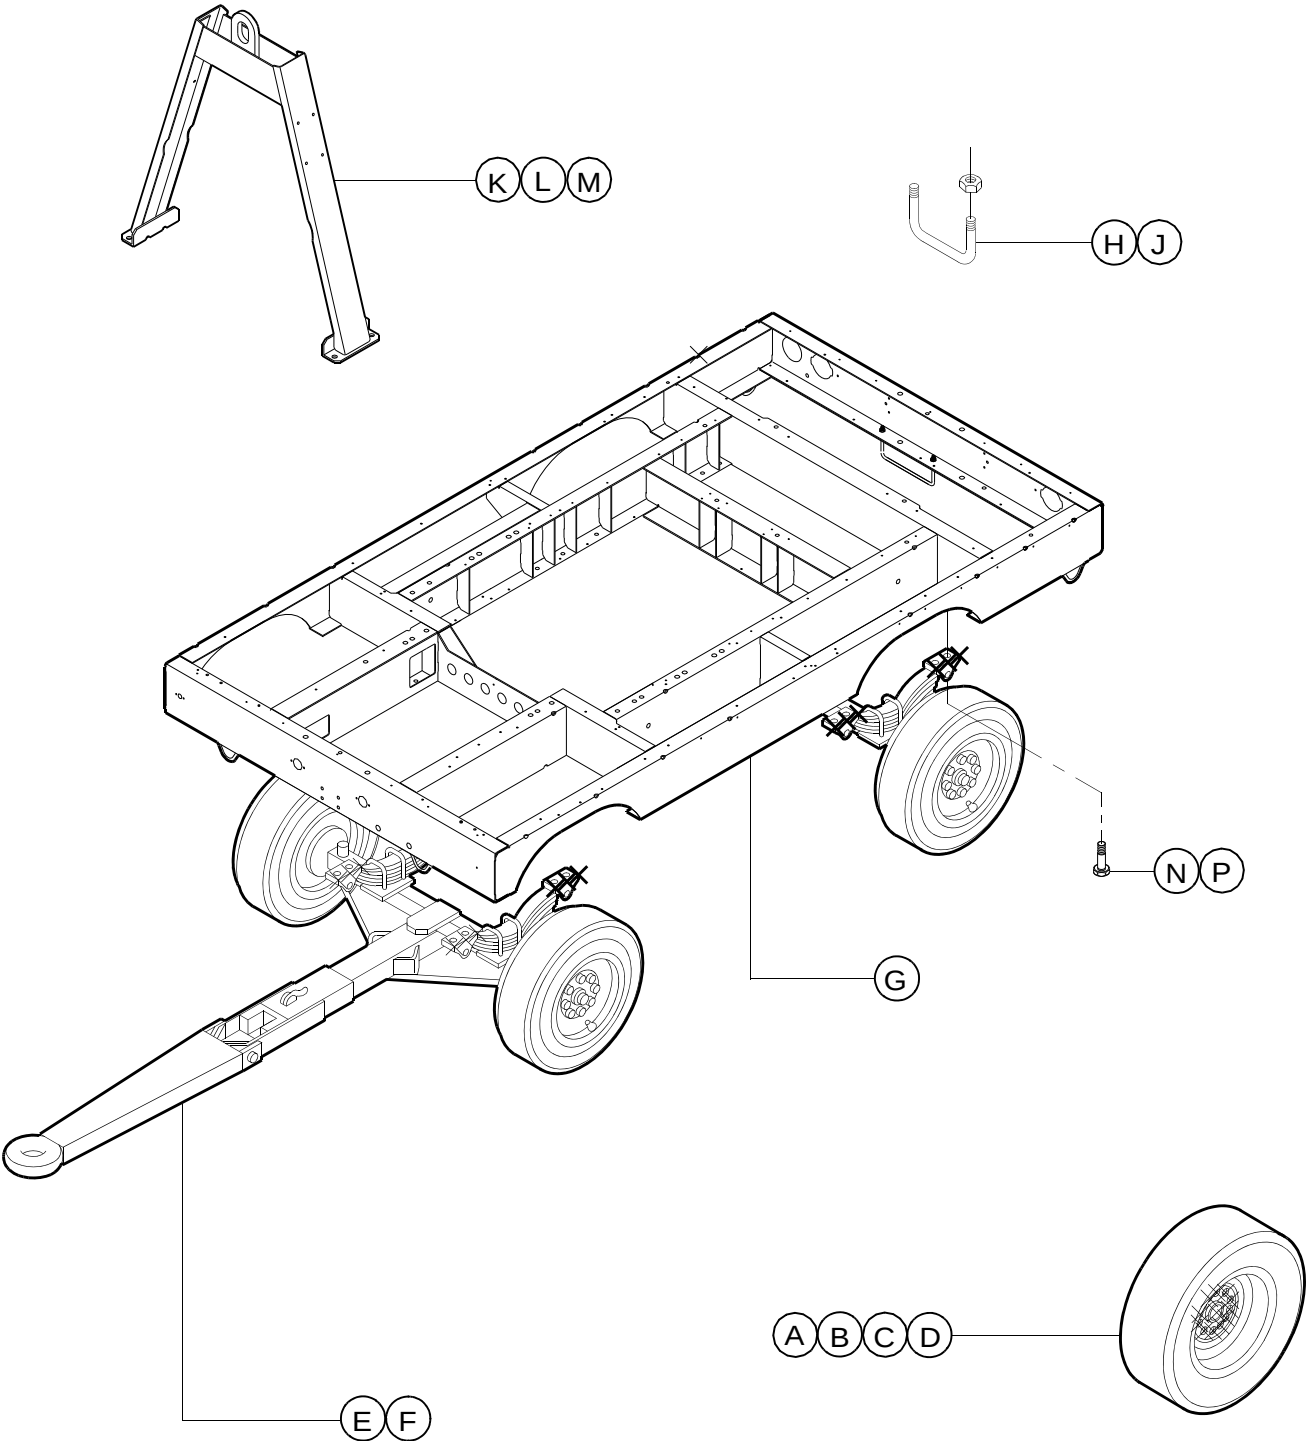


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	36042893	Tire & Wheel Assy		
B	36894061	Tire		
C	36882785	Wheel		
D	35148204	Valve Stem		
E	36891513	Front Axle Assy		
F	36895399	Rear Axle Assy		
G	36892719	Frame		
H	35304666	Step		
J	95922910	Nut		
K	36893733	Lifting Bail		
L	36763670	Screw		
M	35297340	Nut		
N	95930723	Screw		
P	35374453	Nut		

Jack Assembly

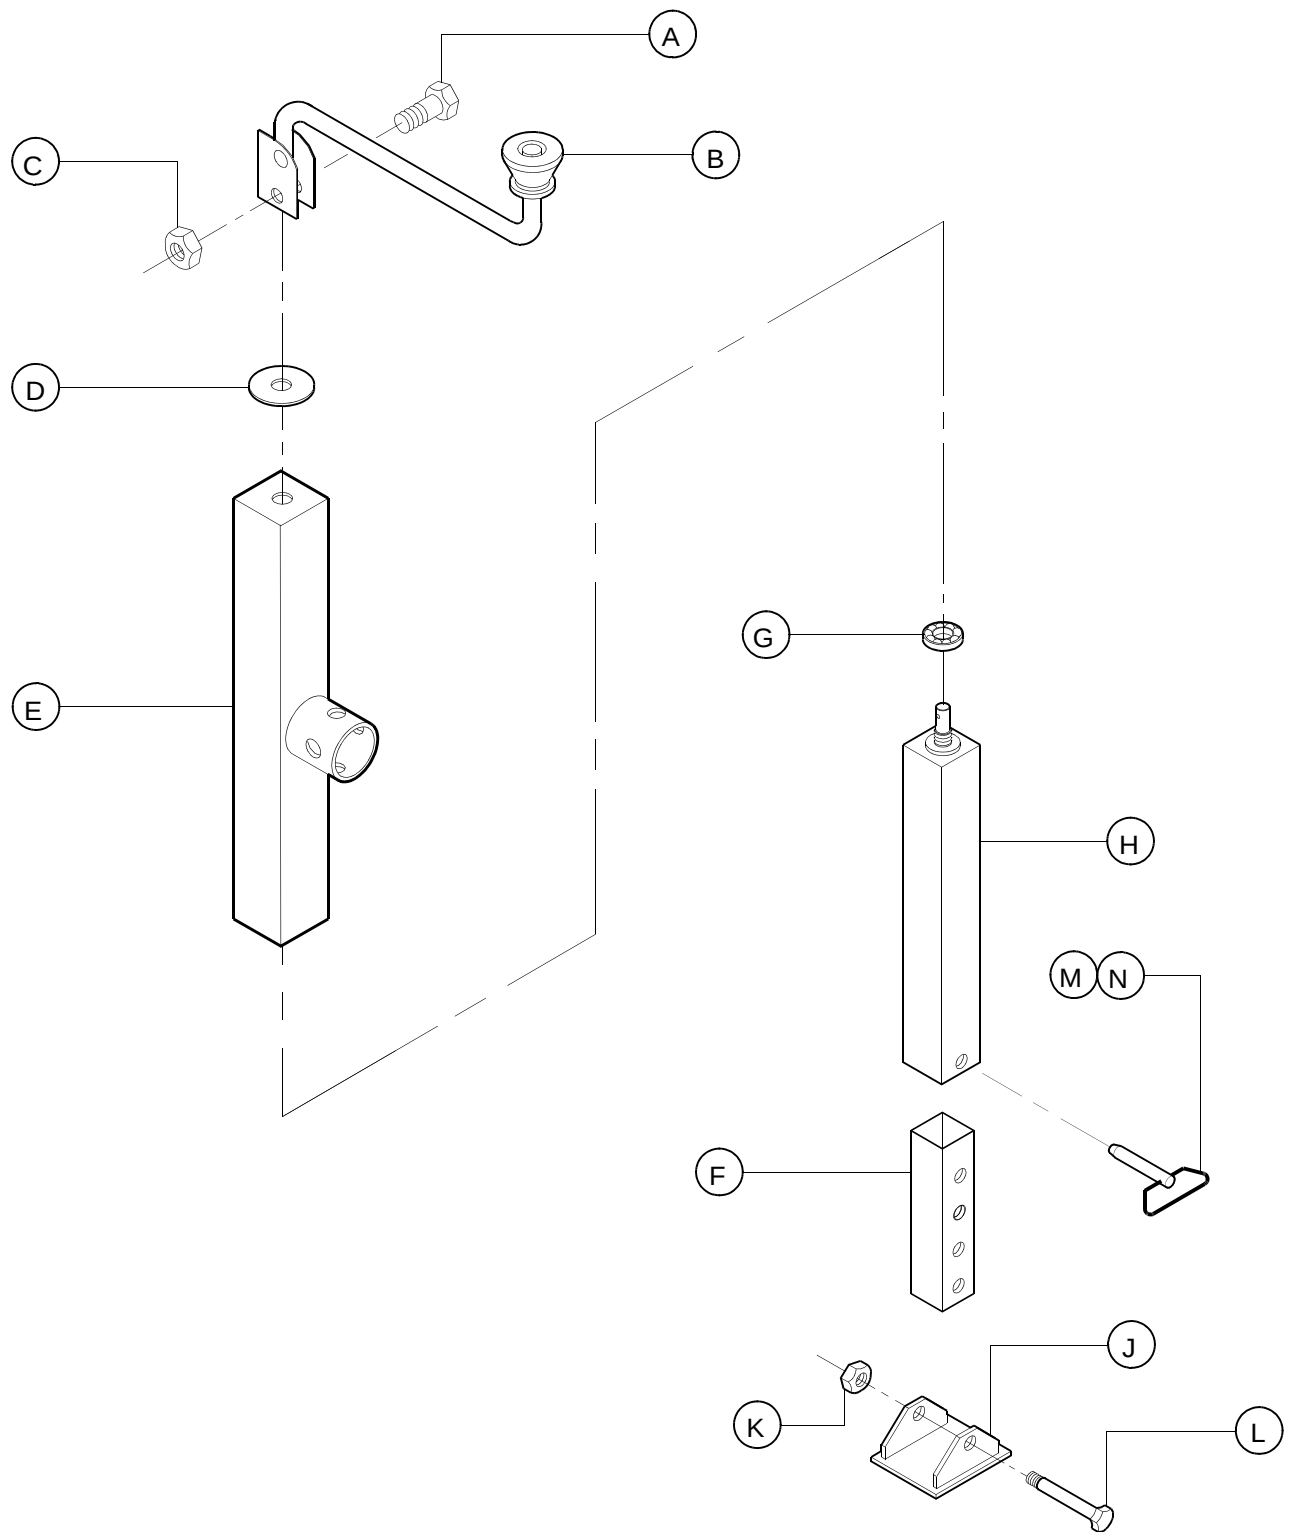


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	95935235	Bolt		
B	36870061	Crank Assy		
C	95923314	Nut, Lock		
D	95935011	Washer		
E	36870129	Tube, Outer		
F	36870087	Drop Leg & Sleeve		
G	36870079	Bearing, Thrust		
H	36870053	Tube, Inner		
J	36870145	Base		
K	35336700	Nut, Lock		
L	95954087	Bolt		
M	36870095	Pin, Pull		
N	36870103	Clip		

Hydraulic Brake Actuator Assembly

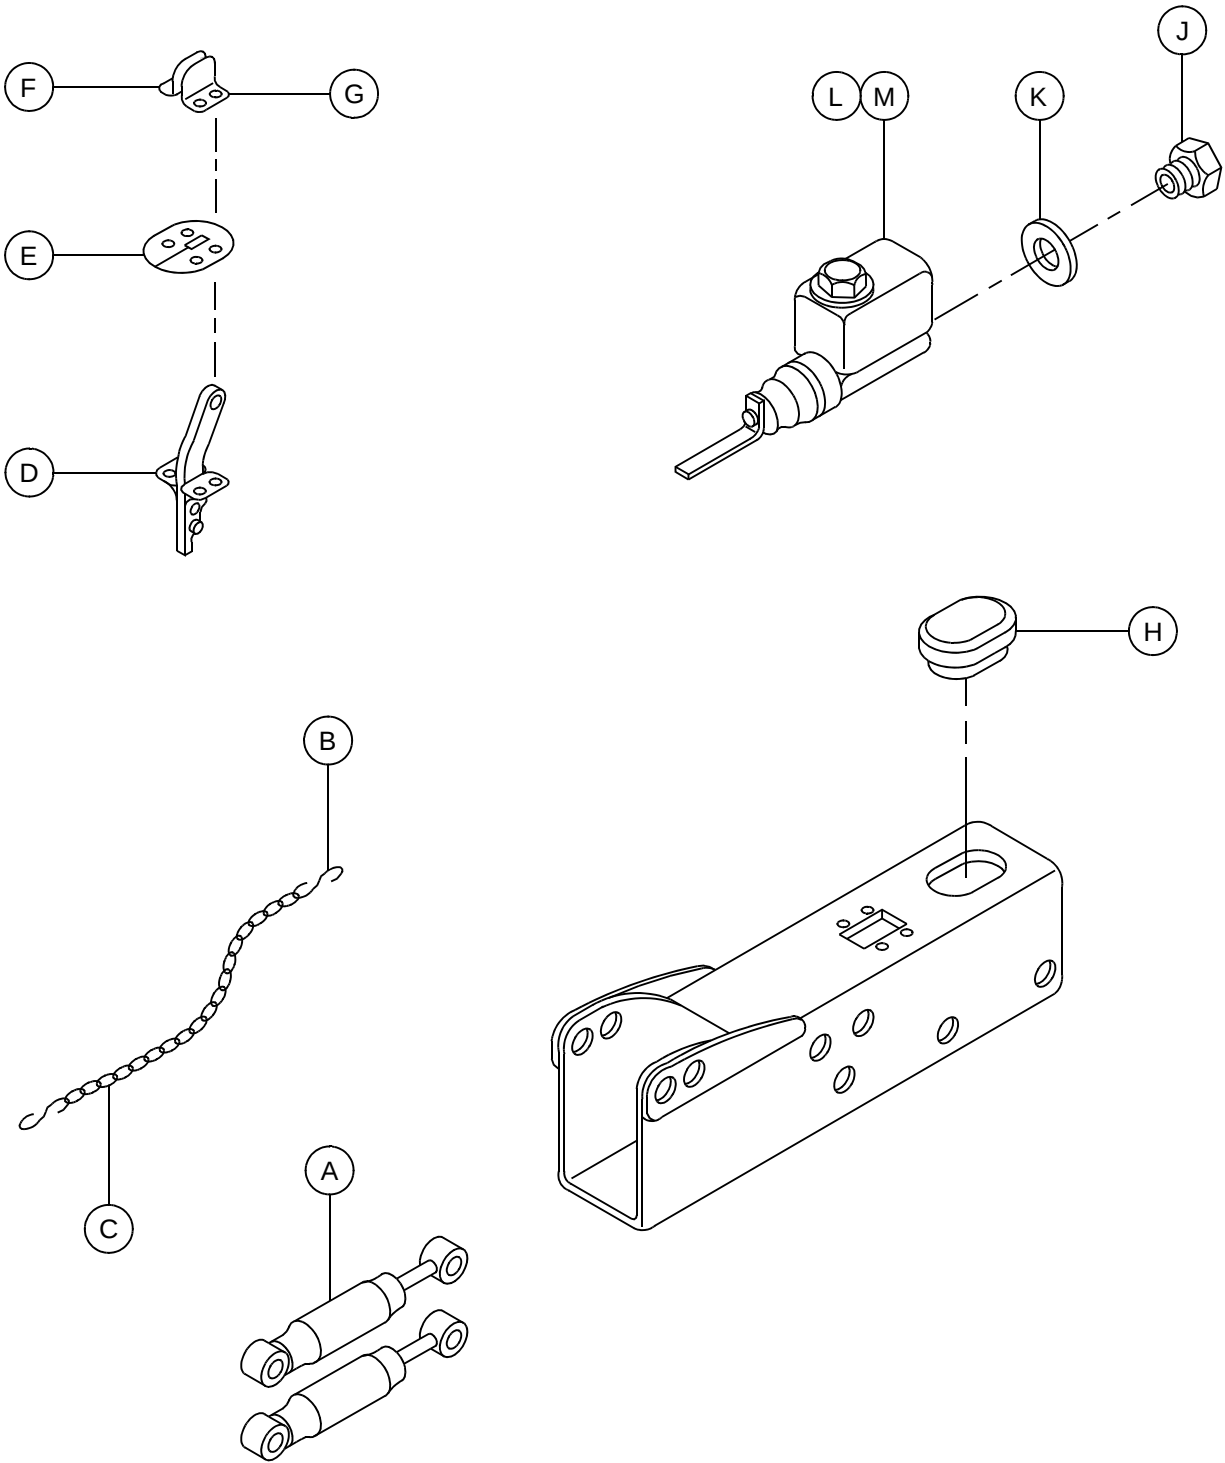


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	35373026	Damper		
B	35373083	S-Hook		
C	35373091	Chain		
D	35373042	Leveler Assy		
E	35373059	Seal, Weather		
F	35373067	Lock, RH		
G	35373075	Lock, LH		
H	35373034	Cover		
J	35373109	Connector		
K	35373125	Gasket		
L	35373117	Master Cylinder		
M	35376433	Repair Kit		

Hydraulic Brake Lines

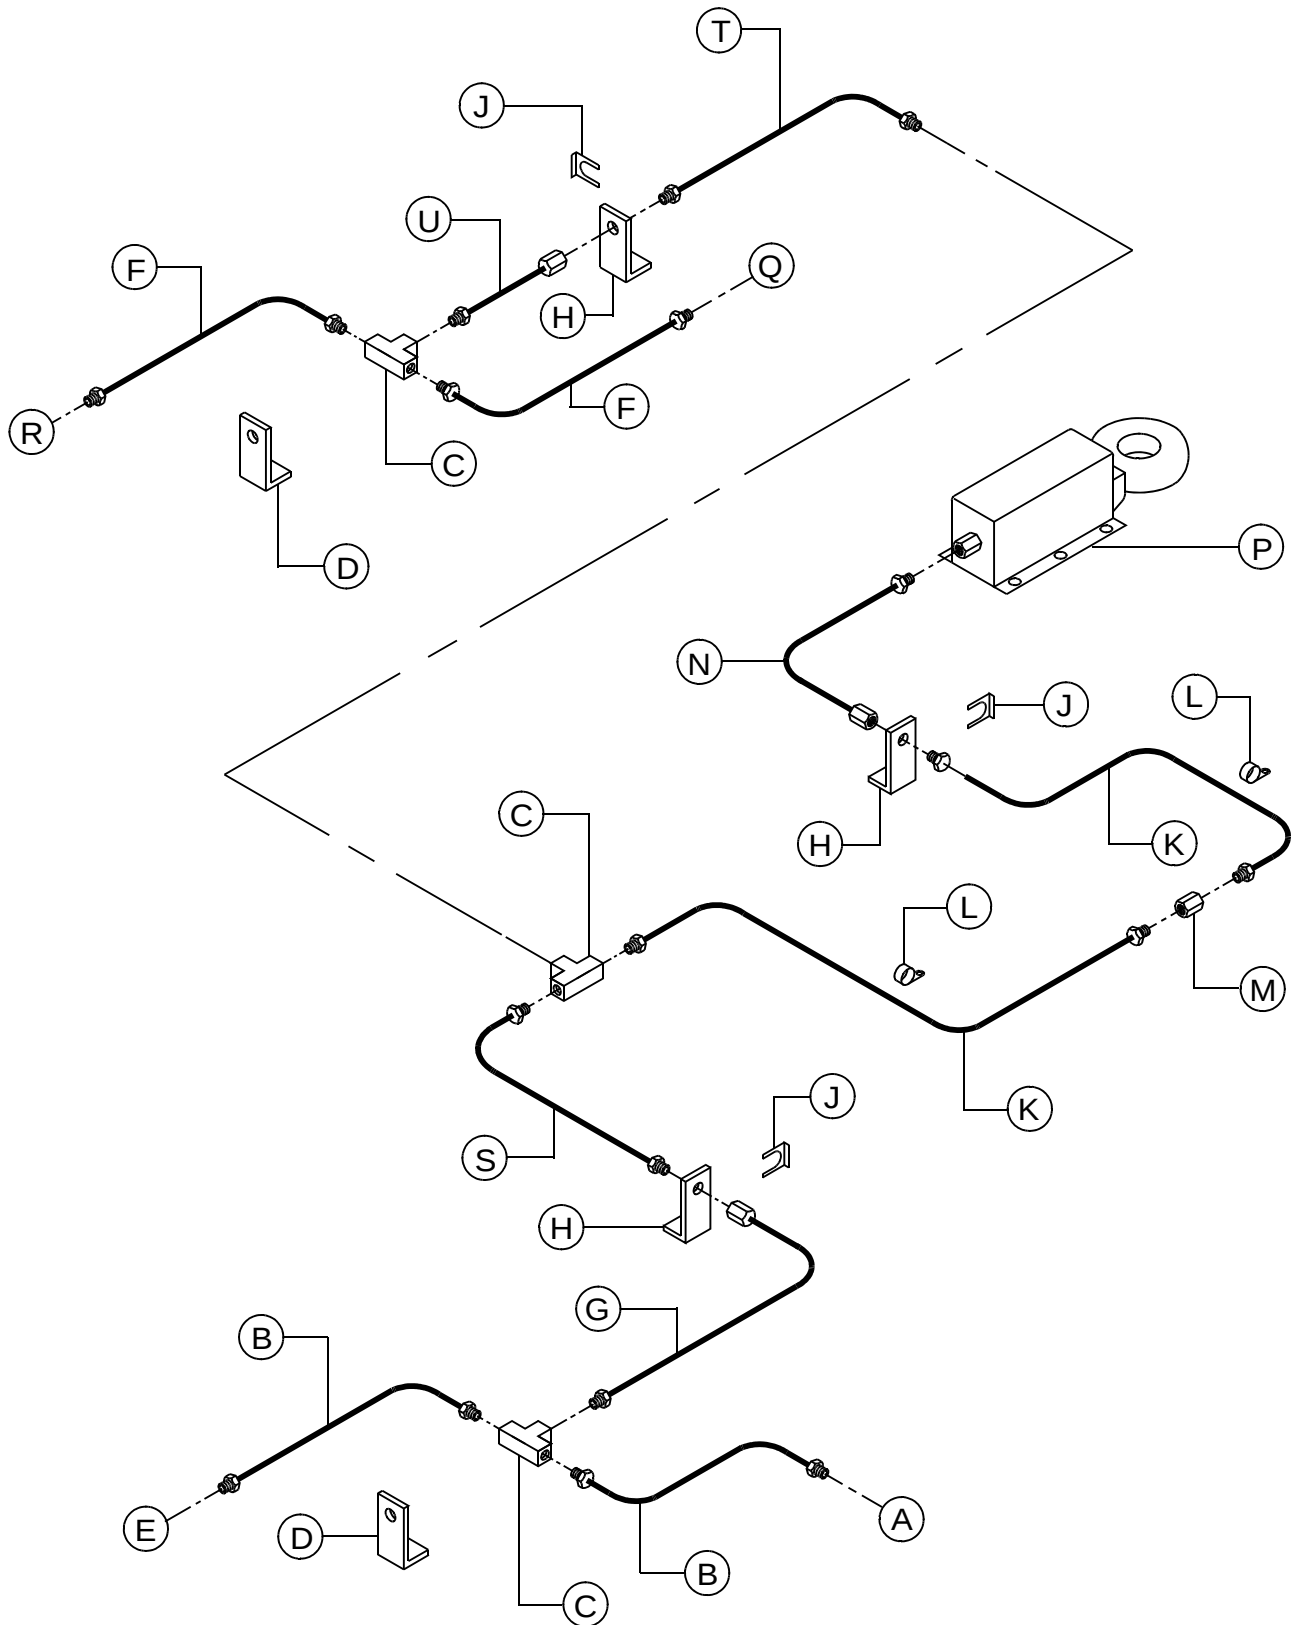


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A		To LH Side/Rear Axle		
B	35356419	Tube Assy		
C	35356328	Tee		
D	36867471	Bracket, Tee		
E		To RH Side/Rear Axle		
F	36894665	Tube Assy		
G	35356377	Hose, Flex		
H	35356310	Bracket, Hose Mounting		
J	35356302	Clip, Hose		
K	36894681	Tube Assy		
L	X1182T23	Clamp, Tube		
M	35356336	Union		
N	35356369	Hose, Flex		
P	36734879	Brake Actuator Assy		
Q		To RH Side/Front Axle		
R		To LH Side/Front Axle		
S	36894673	Tube Assy		
T	35356377	Tube Assy		
U	36894699	Tube Assy		

Parking Brake

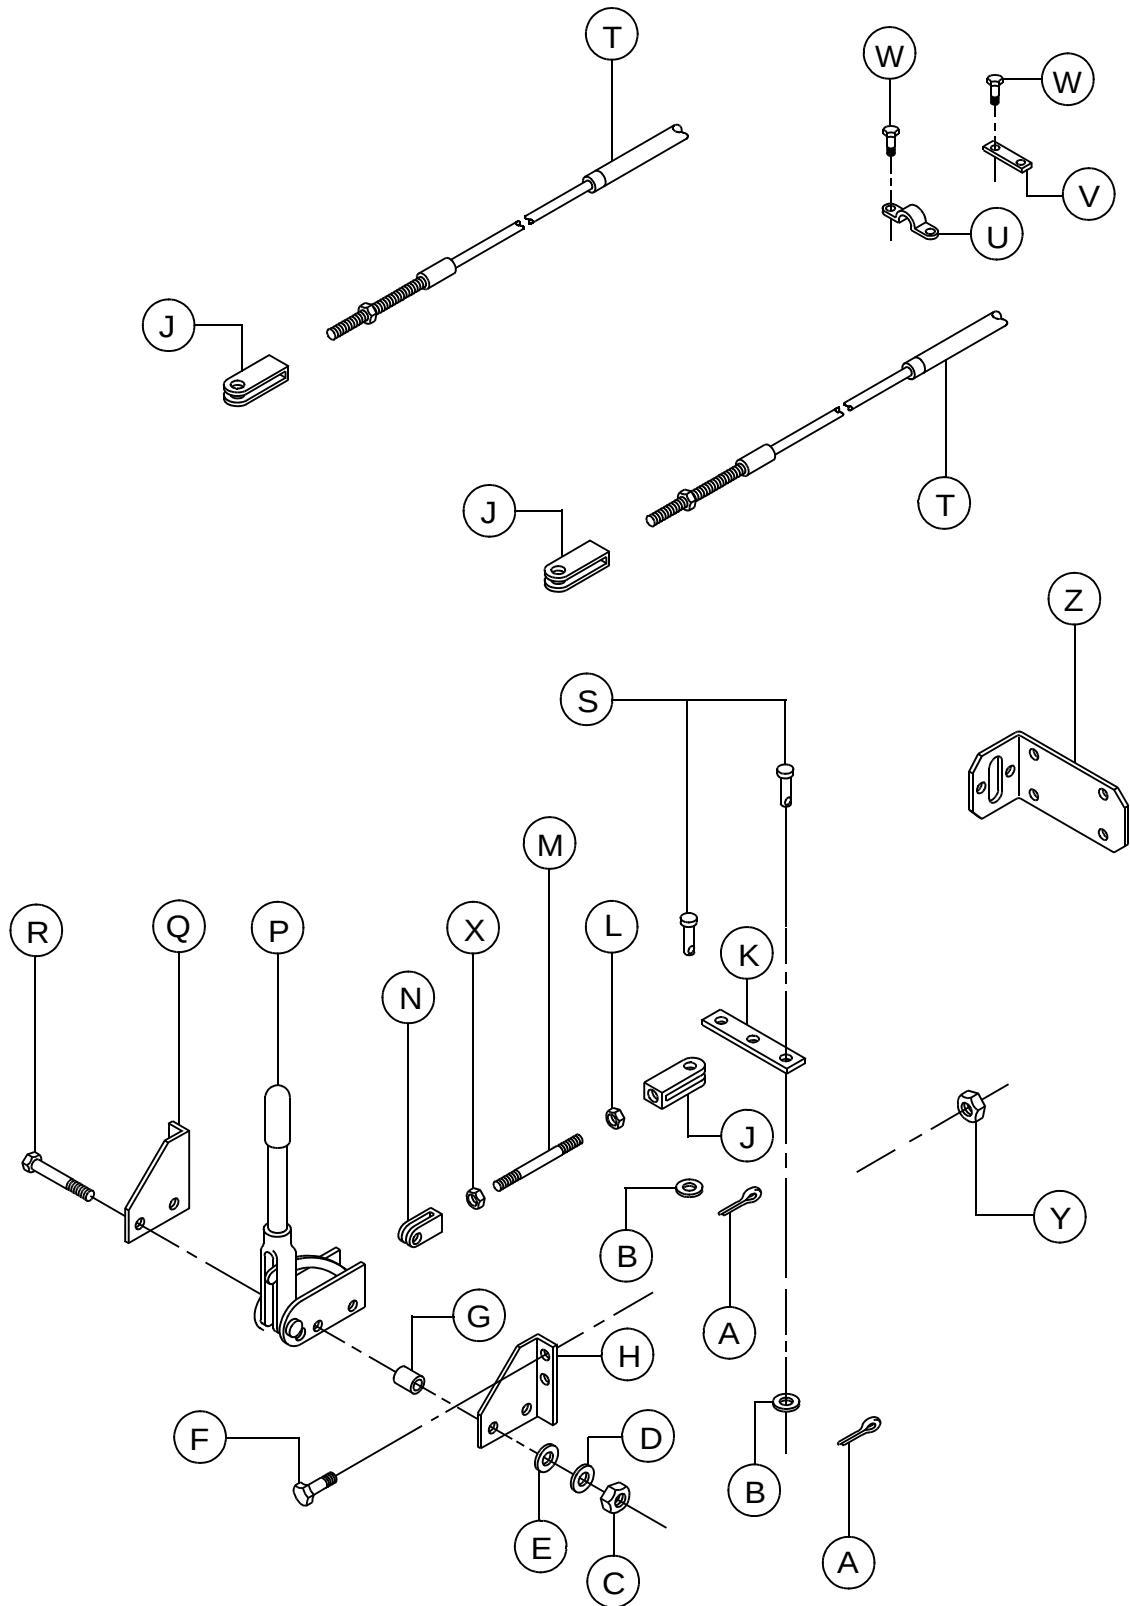


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	95928867	Pin, Cotter		
B	95934998	Washer		
C	35145077	Nut		
D	92304674	Washer		
E	95934998	Washer		
F	36763704	Screw		
G	35603224	Spacer		
H	36847440	Bracket, LH		
J	35603208	Clevis		
K	35602846	Bracket		
L	35118728	Nut		
M	35603182	Rod, Link		
N	35603216	Clevis		
P	35857382	Lever		
Q	36847432	Bracket, RH		
R	95935136	Screw		
S	35357151	Pin		
T	36895407	Cable		
U	35602895	Clip		
V	35602903	Spacer		
W	35279025	Screw		
X	95935086	Nut		
Y	96700877	Nut		
Z		Bracket		

Running Gear - Fast Trac

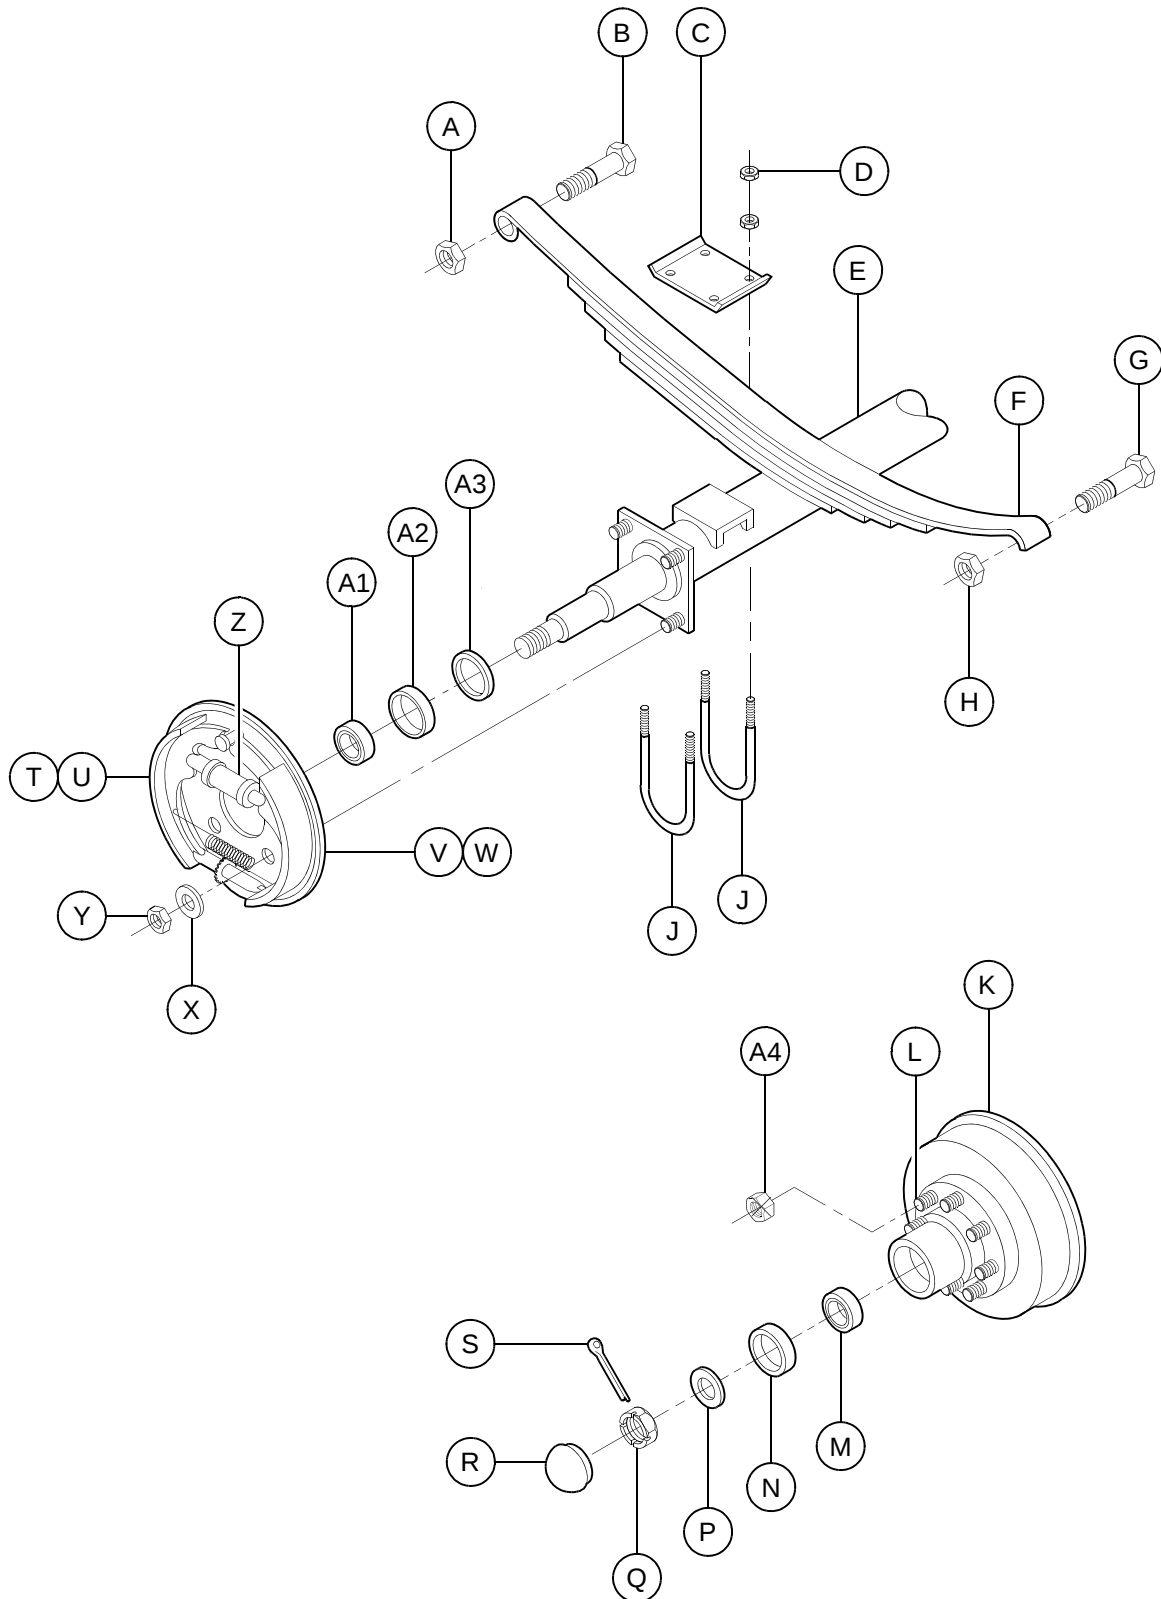


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	35315357	Nut		
B	35315340	Bolt		
C	35359389	Plate, Tie		
D	35359397	Nut		
E	36891794	Front Axle Assy		
	36891786	Rear Axle Assy		
F	35385392	Spring		
G	35315365	Bolt		
H	35315373	Nut		
J	35356922	U-Bolt		
K	35385236	Hub		
L	35385244	Stud		
M	35385293	Bearing, Outer		
N	35385277	Cup, Outer		
P	35356914	Washer		
Q	35315217	Nut		
R	35379395	Cap, Grease		
	35379387	Cap, E-Z Lube		
S	35315225	Pin, Cotter		
T	35359413	Shoe, Front		
U	35359421	Shoe, Rear		
V	36895241	Brake Assy, LH		
W	36895258	Brake Assy, RH		
X	35356864	Washer		
Y	35356872	Nut		
Z	35359405	Kit, Wheel Cylinder		
A1	35316876	Bearing, Inner		
A2	35316884	Cup, Inner		
A3	35316868	Seal, Grease		
A4	35315274	Nut		

Running Gear - Steerable Front Axle

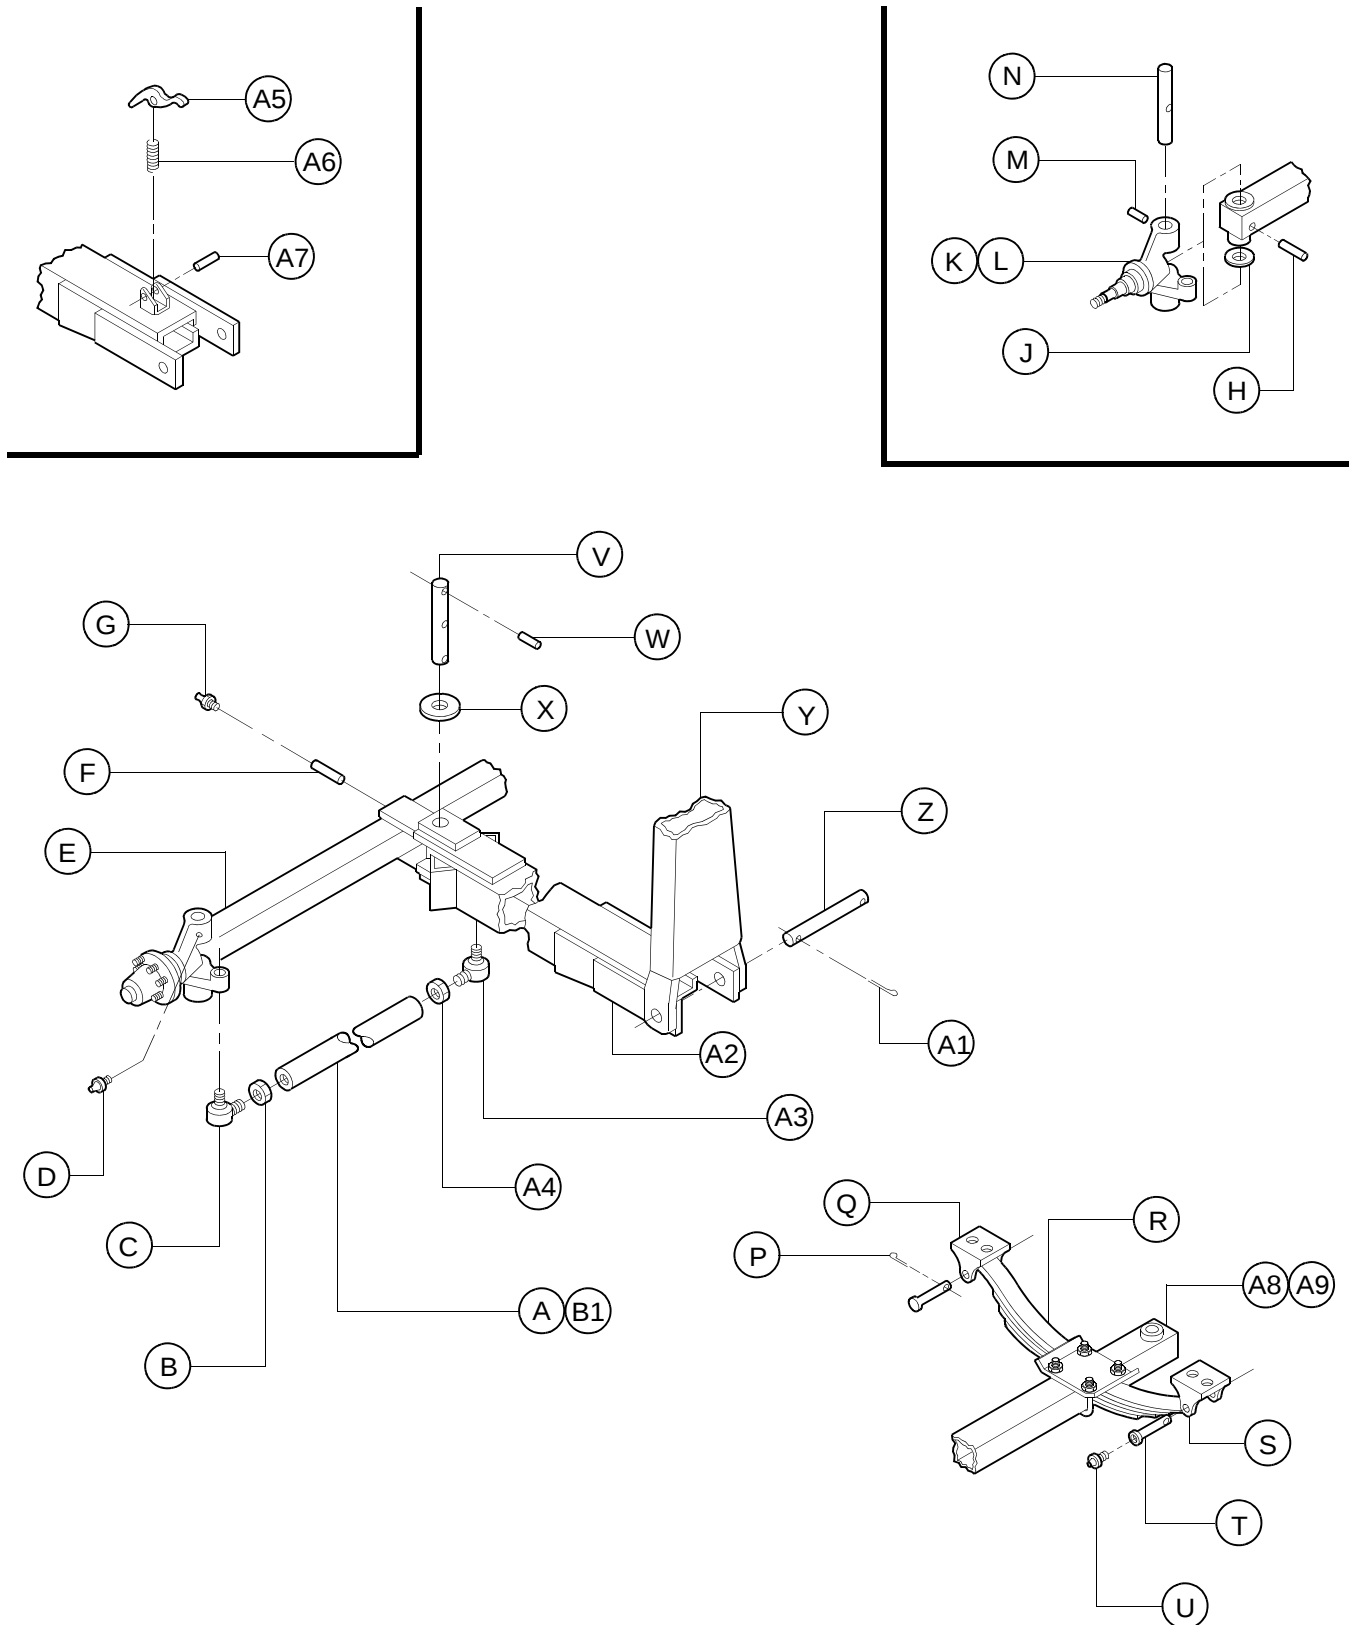


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	36504389	Rod, Tie		
B	36140730	Nut, Jam		
C	35588961	Ball Joint, Outer		
D	W86707	Fitting, Lube		
E	36753259	Axle, Front		
F	25A13C283	Pin, Roll		
G	W86707	Fitting, Lube		
H	25A13C301	Pin, Roll		
J	95239927	Washer		
K	36851566	Knuckle Assy, LH		
L	36851574	Knuckle Assy, RH		
M	25A13C281	Pin, Roll		
N	35319045	Pin, King		
P	11A13C66E	Pin, Cotter		
Q	36719169	Bracket		
R	36719466	Spring		
S	36719177	Bracket		
T	35111590	Bolt, Shackle		
U	95318556	Fitting, Lube		
V	35588755	Pin, Center		
W	25A13C298	Pin, Roll		
X	12A5D13Z1	Washer		
Y	36719557	Drawbar		
Z	35107168	Pin, Hinge		
A1	11A13C83E	Pin, Cotter		
A2	36753242	Arm, Center		
A3	35588953	Balljoint, Inner		
A4	35140722	Nut, Jam		
A5	36719219	Latch		
A6	35141167	Spring		
A7	25A13C332	Pin, Roll		
A8	36851376	Axle Assy, Front		
A9	36845766	Axle Assy, Rear		
B1	36853042	Tie Rod Assy (Includes A, B, C, A3, and A4)		

Running Gear - Steerable Rear Axle

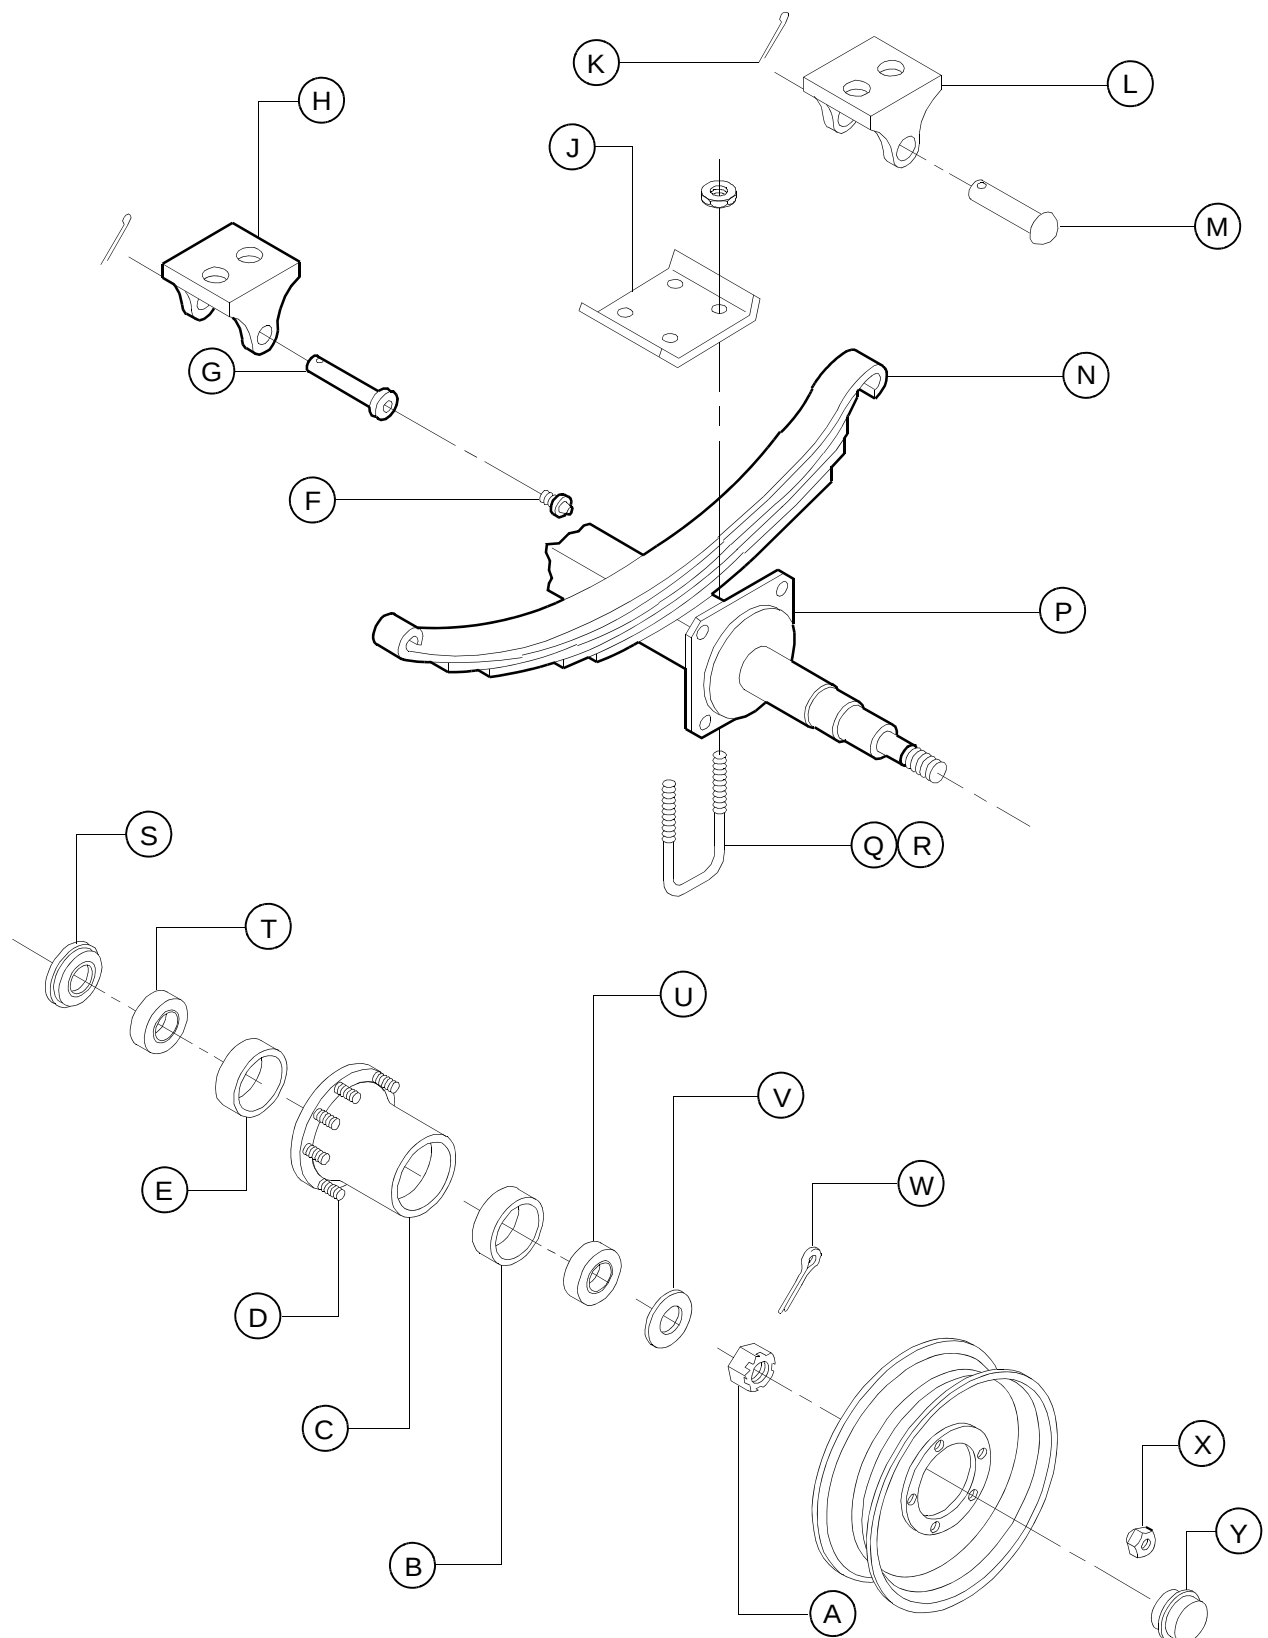


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	35106806	Nut		
B	35608360	Outer Race		
C	35379916	Hub Assy (Includes B, D, and E)		
D	36764983	Stud		
E	35308352	Inner Race		
F	95318556	Fitting, Lube		
G	35111590	Bolt		
H	36719177	Bracket		
J	35589241	Plate, Clamp		
K	11A13C66E	Pin, Cotter		
L	36719169	Bracket		
M	35588839	Rivet		
N	36719466	Spring		
P	36777209	Axle, Rear		
Q	35834621	U-Bolt		
R	35111566	Nut		
S	35589126	Seal		
T	36851608	Bearing		
U	36851590	Bearing		
V	35106814	Washer		
W	11A13C413E	Pin, Cotter		
X	36776821	Nut		
Y	36776813	Cap, Grease		

Engine and Air Cylinder Mount

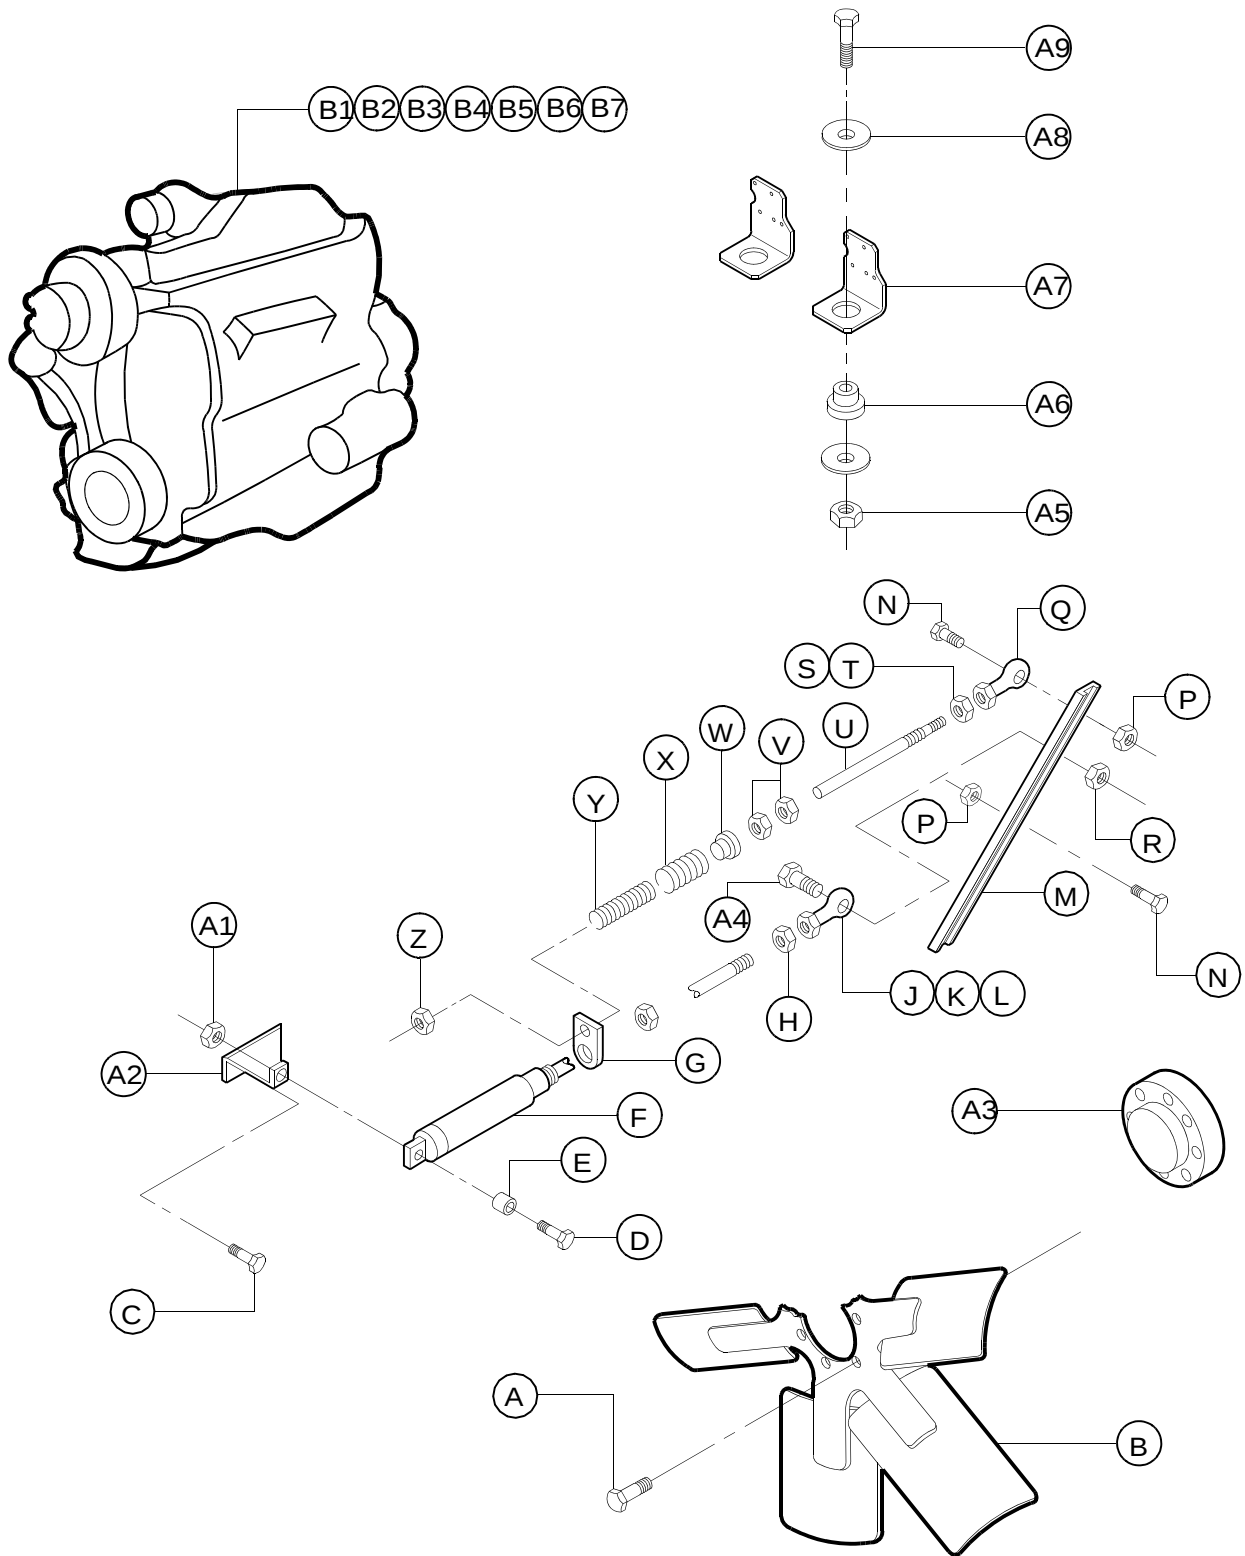


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	36893709	Fan		44 Inch Dia.
B	36877793	Screw		
C	36761476	Screw		
D	95326609	Screw		
E	35288885	Bushing		
F	35594225	Cylinder		
G	35322445	Guide		
H	95923108	Nut		
J	35300532	Bearing		
K	95245288	Nut		
L	35322452	Bushing		
M	35601475	Lever		
N	35144492	Nut		
P	35144492	Nut		
Q	35322635	Joint, Ball		
R	35145242	Screw		
S	95043196	Washer		
T	95923082	Nut, Hex Jam 3/8"-24		
U	35322429	Rod		
V	95098356	Nut		
W	35322437	Mount		
X	35322411	Spring		
Y	35329721	Spring		
Z	35324664	Collar		
A1	95923314	Nut		
A2	35855089	Bracket		
A3	36898807	Spacer, Fan		
A4	35145242	Screw		
A5	35297340	Nut		
A6	35273812	Mount, Rubber		
A7	36894012	Bracket, Engine		
A8	35273937	Washer		
A9	96700919	Screw		
B1	36893519	Engine, M11-335		Prior to S/N 434181 After S/N 434181
	46592099	Engine, M11-335		
B2	23020407	Element, Eng. Lube		
B3	35357268	Filter, Fuel		
B4	36896314	Filter, Water		
B5	95930301	Bushing (Above Starter)		
B6	19A7J19Z1	Nipple		
B7	95930301	Bushing		

Exhaust Mount

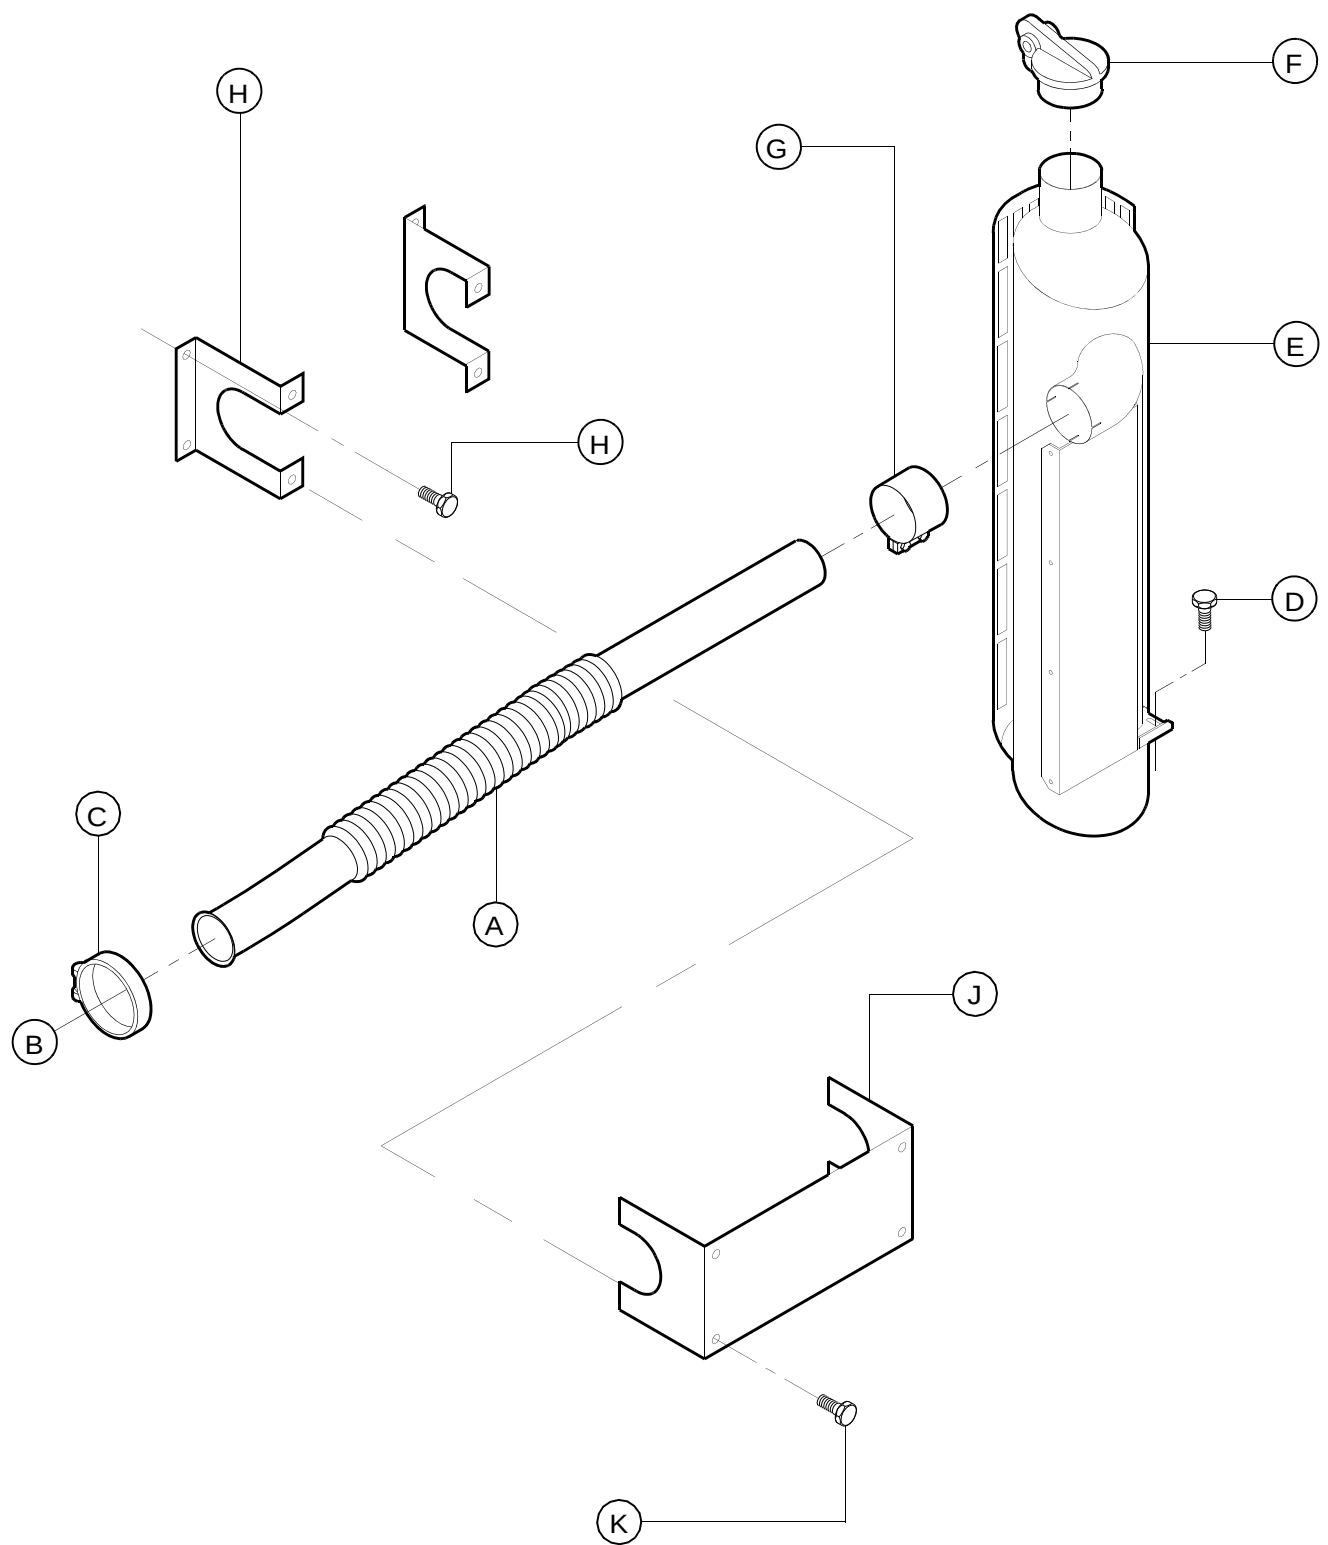


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	36893717	Tube, Exhaust		Flexible
B		To Engine Turbo		
C	35602796	Clamp, V-Band		
D	35279025	Screw		
E	36893675	Muffler		
F	35857036	Cap, Rain		
G	35127653	Clamp, Seal		
H	36897783	Support, Exhaust Tube		
J	36897791	Cover		
K	35279023	Screw		

Airend and Unloader Mount

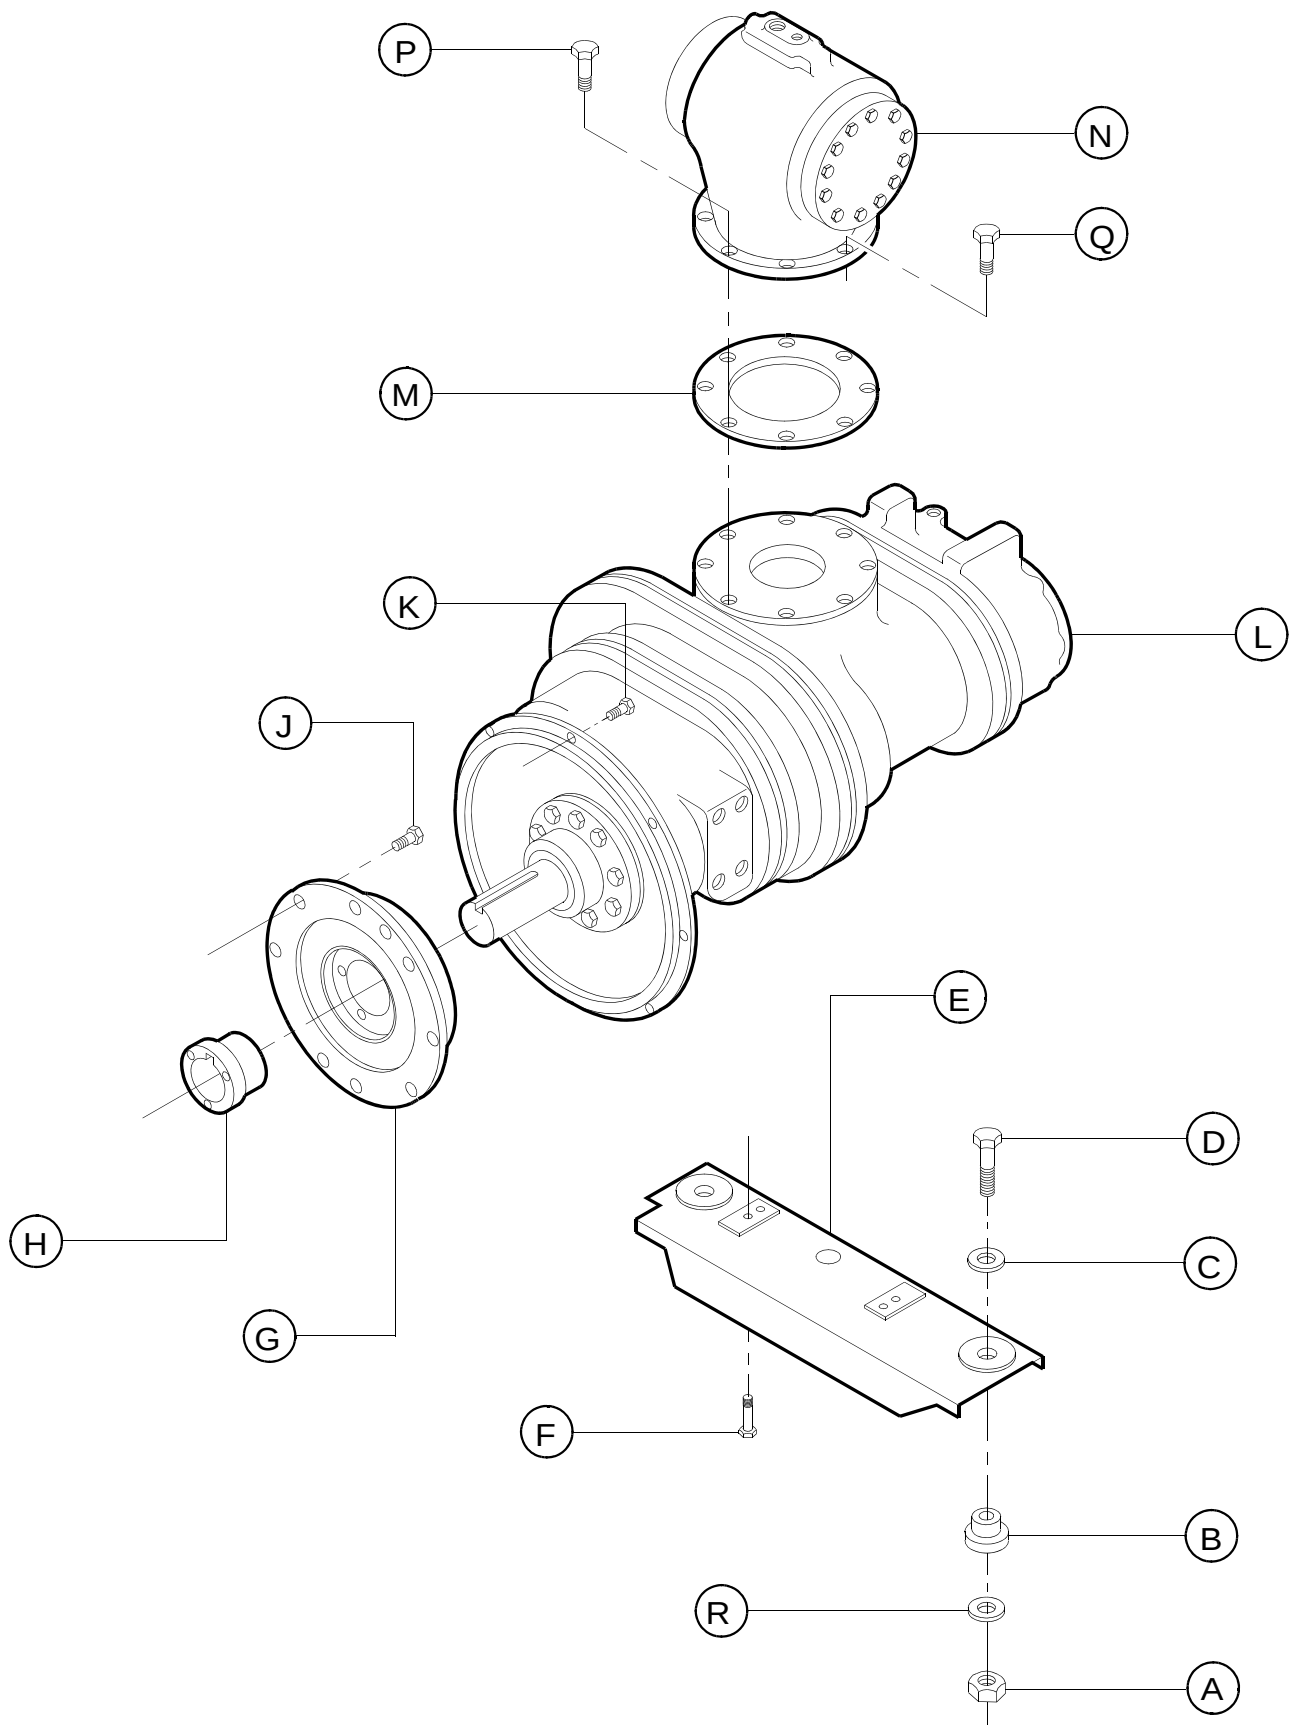


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	95923363	Nut		
B	35599950	Mount, Rubber		
C	35273937	Washer		
D	95934253	Screw		
E	36894087	Bracket, A/E Mounting		
F	35358274	Screw		
G	35834795	Coupling, Drive		
H	35103852	Bushing		
J	95220604	Screw		
K	36880995	Screw		
L	36046480	Air End Assy		
	36043206	Air End Assy		
M	36786572	Gasket		
N	36734515	Unloader Assy		
P	35272558	Screw		
Q	96700901	Screw		
R	35101476	Washer		

Unloader Assembly

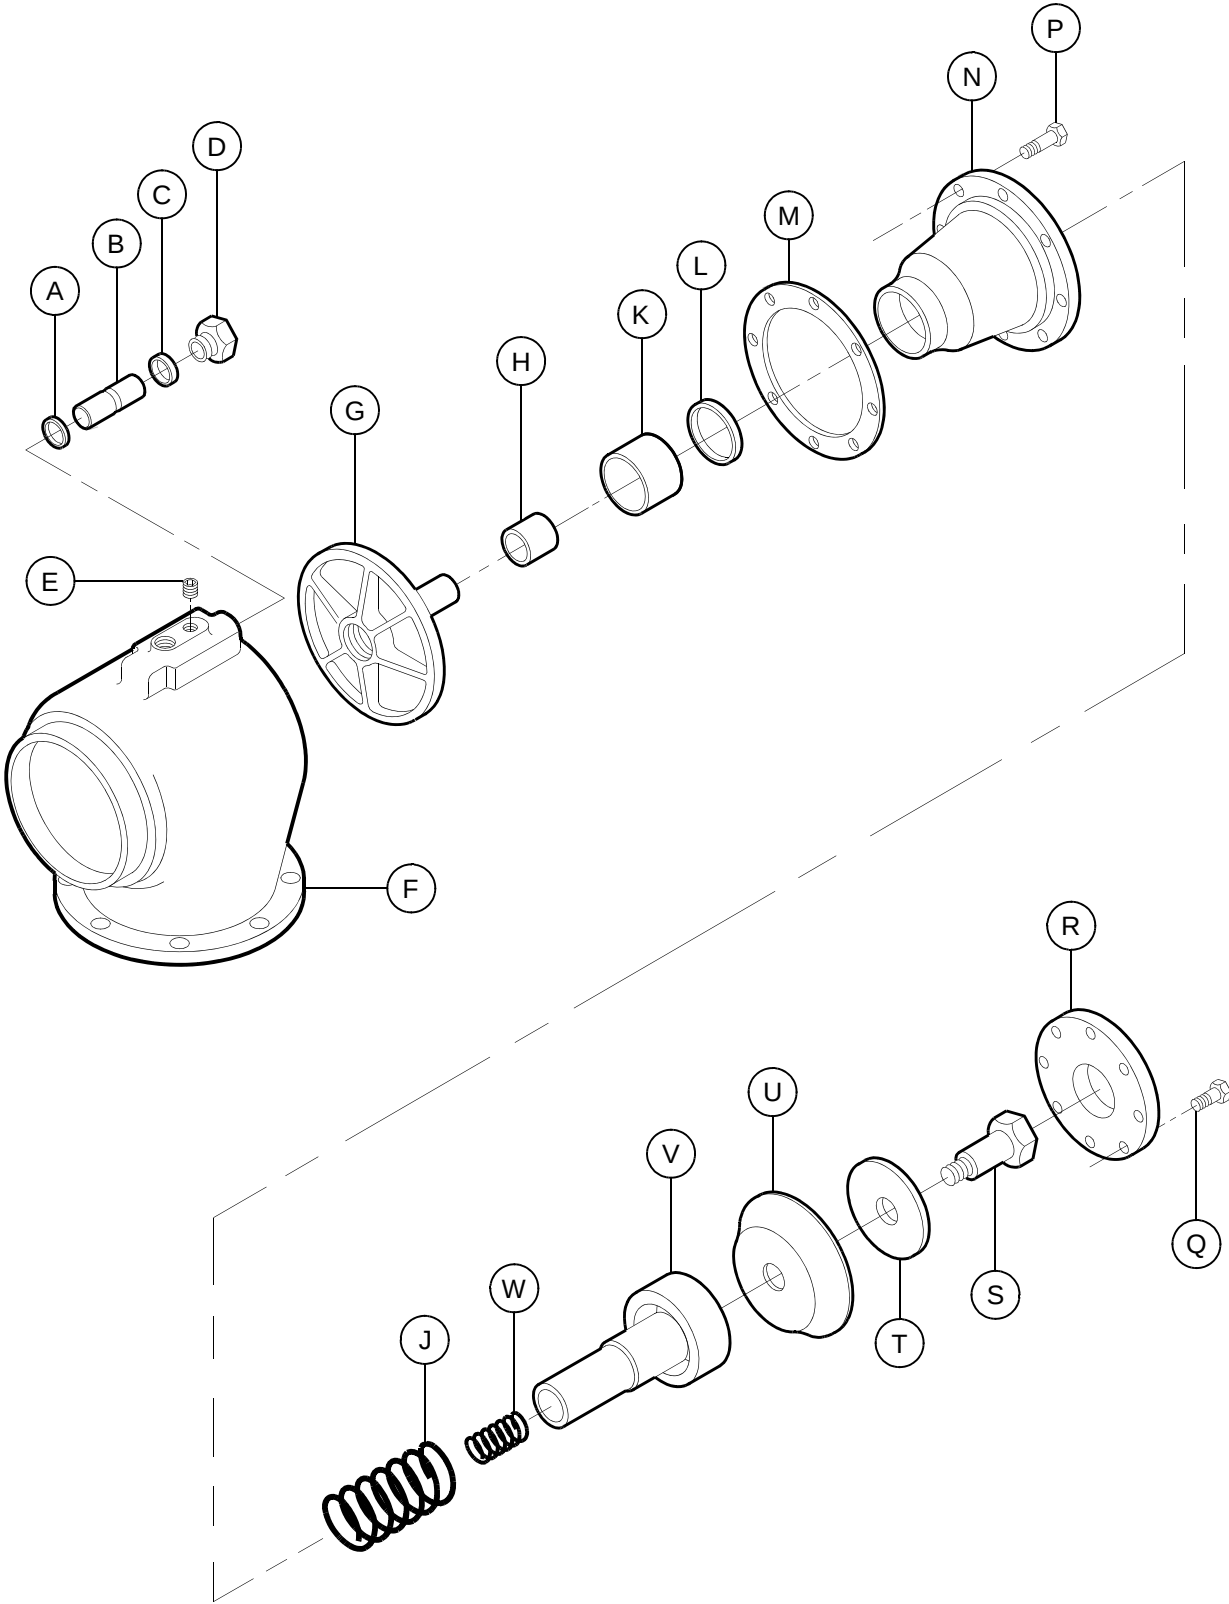


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	35331586	Grommet		
B	36897148	Valve, Anti-Rumble		
C	35331578	Grommet		
D	35328236	Adapter		
E	95928255	Plug		
F	36734507	Body		
G	35597509	Valve Assy		
H	35328269	Bushing		
J	35332691	Spring		
K	35328228	Bushing		
L	35328244	Seal		
M	35328251	Gasket		
N	36722460	Housing		
P	35374842	Screw		
Q	35374834	Screw		
R	35591189	Cover, Piston		
S	95934642	Screw		
T	35327204	Washer		
U	35592534	Diaphragm		
V	35591163	Piston		
W	35332683	Spring		

Airend Gear Case Housing

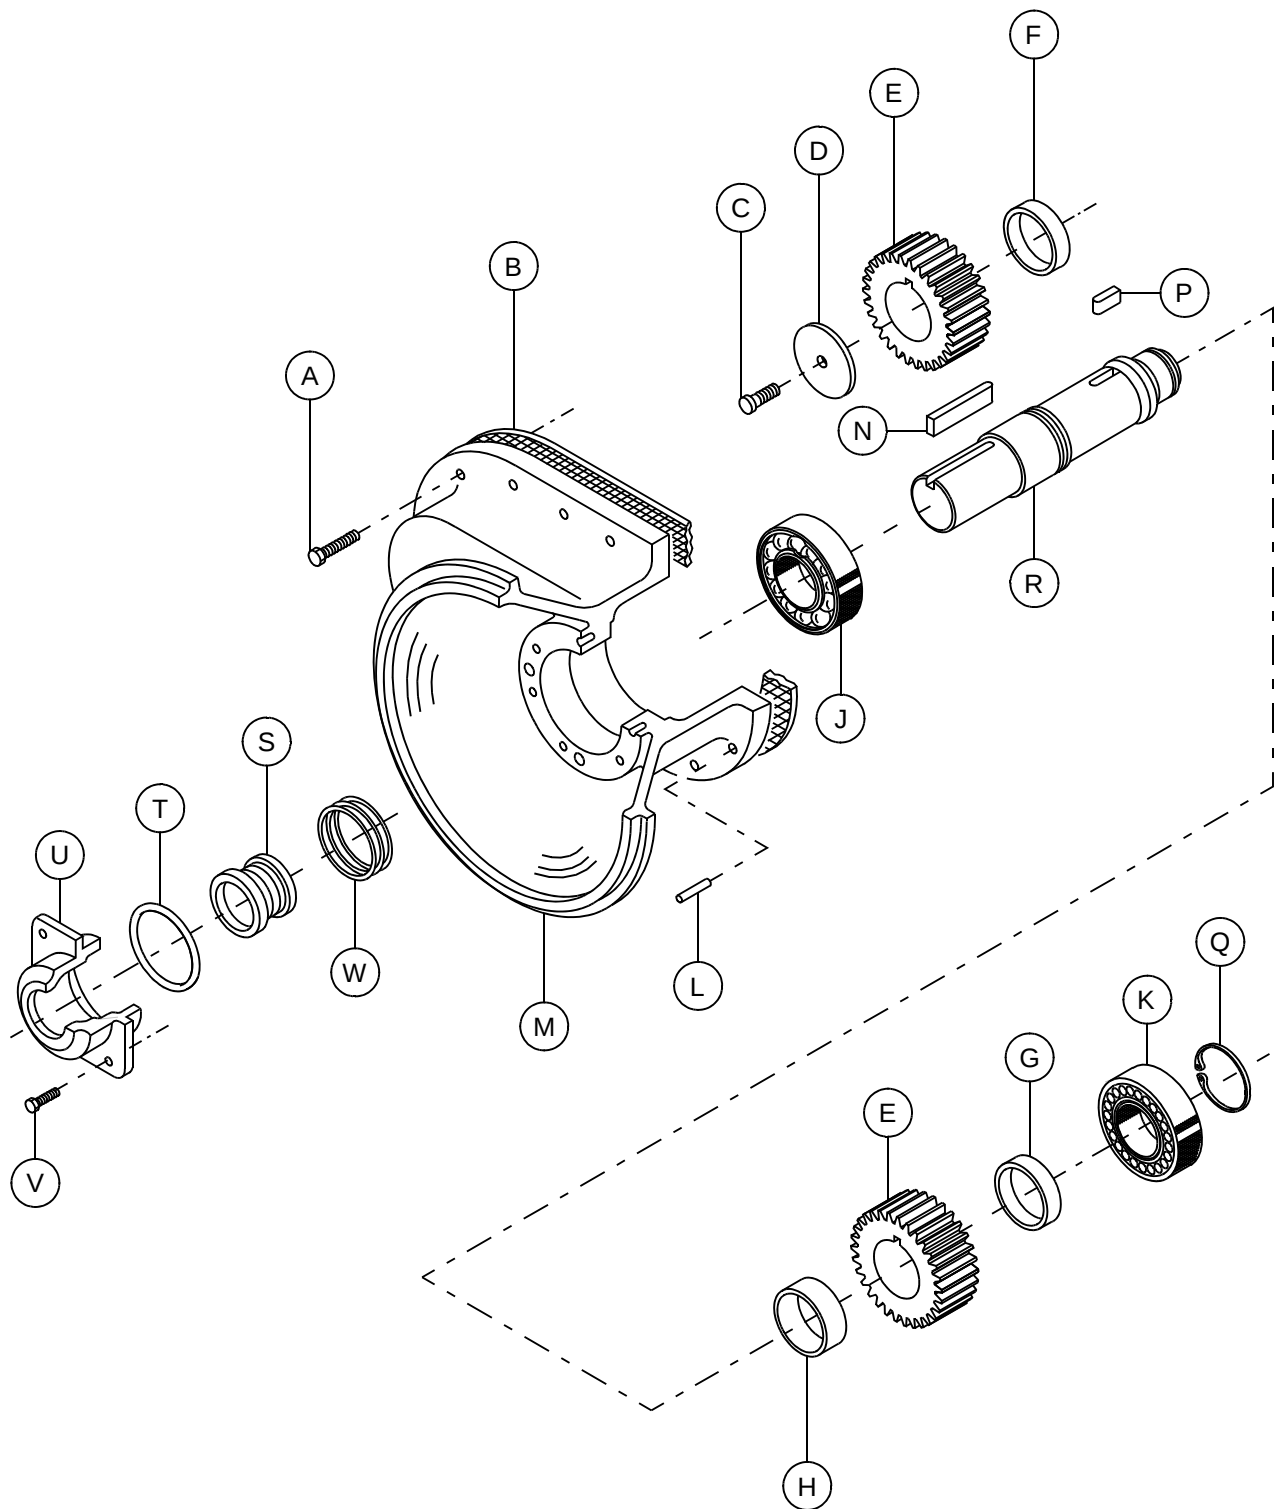


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	35375385	Screw		
B	35611359	Gasket		
C	92367663	Screw		
D	35255819	Plate, Clamping		
E	36893360	Gear Set - HP-935		
	93488732	Gear Set - XP-1050		
F	35299346	Spacer		
G	36851681	Spacer		
H	36846418	Spacer		
J	36846426	Bearing, Tapered Roller		
K	36854925	Bearing, tapered Roller		
L	17A13A289	Pin, Dowel		
M	36851459	Case, Gear		
N	35364975	Key		
P	35361328	Key		
Q	35223145	Ring, Retaining		
R	36846400	Shaft, Drive		
S	35593508	Seal, Shaft		
T	95358164	O-Ring		
U	36507515	Cover		
V	96712187	Screw		
W	36846442	Shim Set		

Airend Rotor Housing

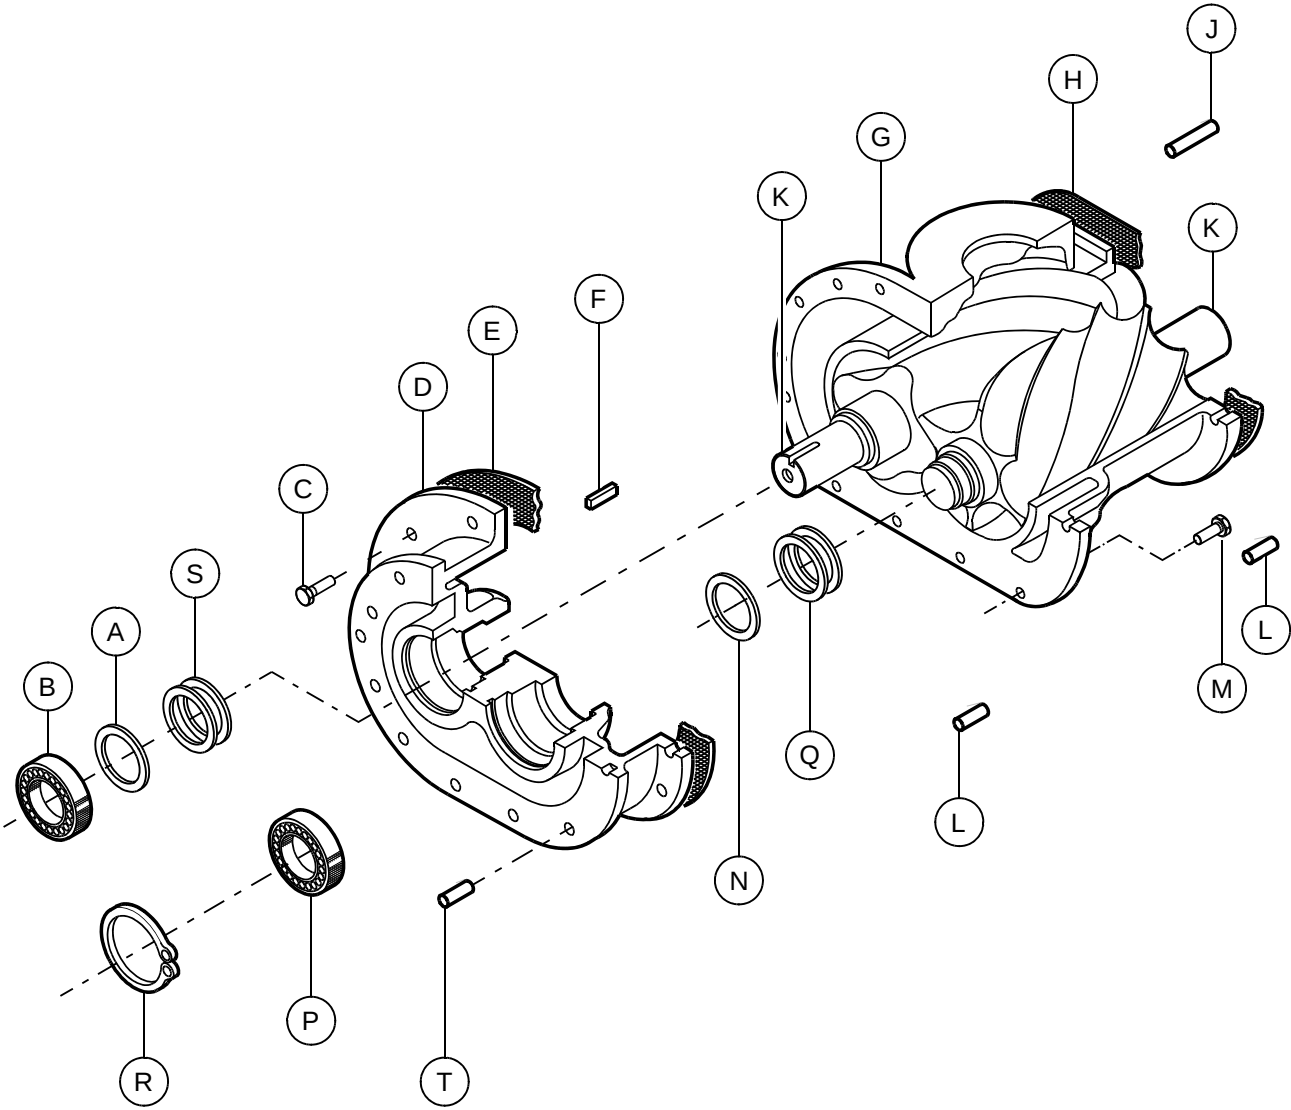

ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	35299296	Spacer		
B	35299262	Bearing, Roller		
C	35272541	Screw		
D	36711620	Housing, Front Bearing		
E	36506699	Gasket		
F	35361310	Key		
G	36794287	Housing, Rotor		
H	35611342	Gasket		
J	95239927	Pin, Locating		
K	36005023	Rotor Set		
L	95239919	Pin, Locating		
M	96706429	Screw		
N	35299312	Spacer		
P	35299270	Bearing, Roller		
Q	35364728	Spring Set		
R	35299338	Snap-Ring		
S	35365261	Pin, Locating		
T	35364710	Spring Set		


Airend Rear Bearing Housing

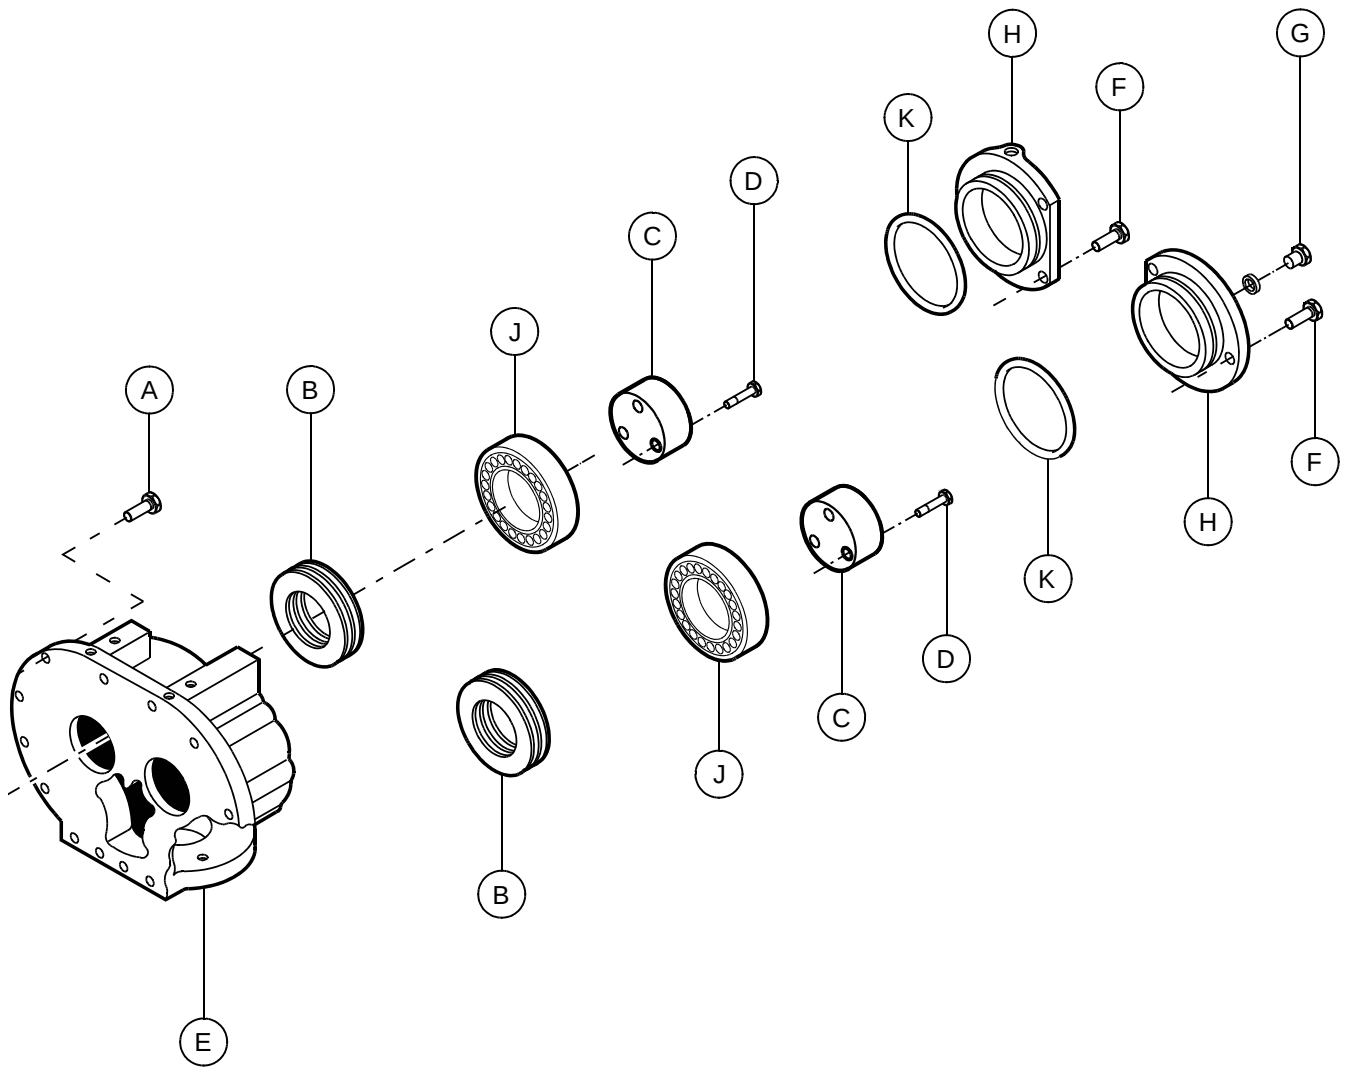

ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	96706429	Screw		
B	35299361	Shim Set		
C	35299320	Plate, Clamping		
D	35293869	Screw		
E	36866069	Housing, Rear Bearing		
F	35272533	Screw		
G	35278555	Plug		
H	35579309	Cover, Rear Bearing		
J	35299254	Bearing, Roller		
K	95358198	O-Ring		


Airend Piping

STARTS AT SERIAL NO. 291411

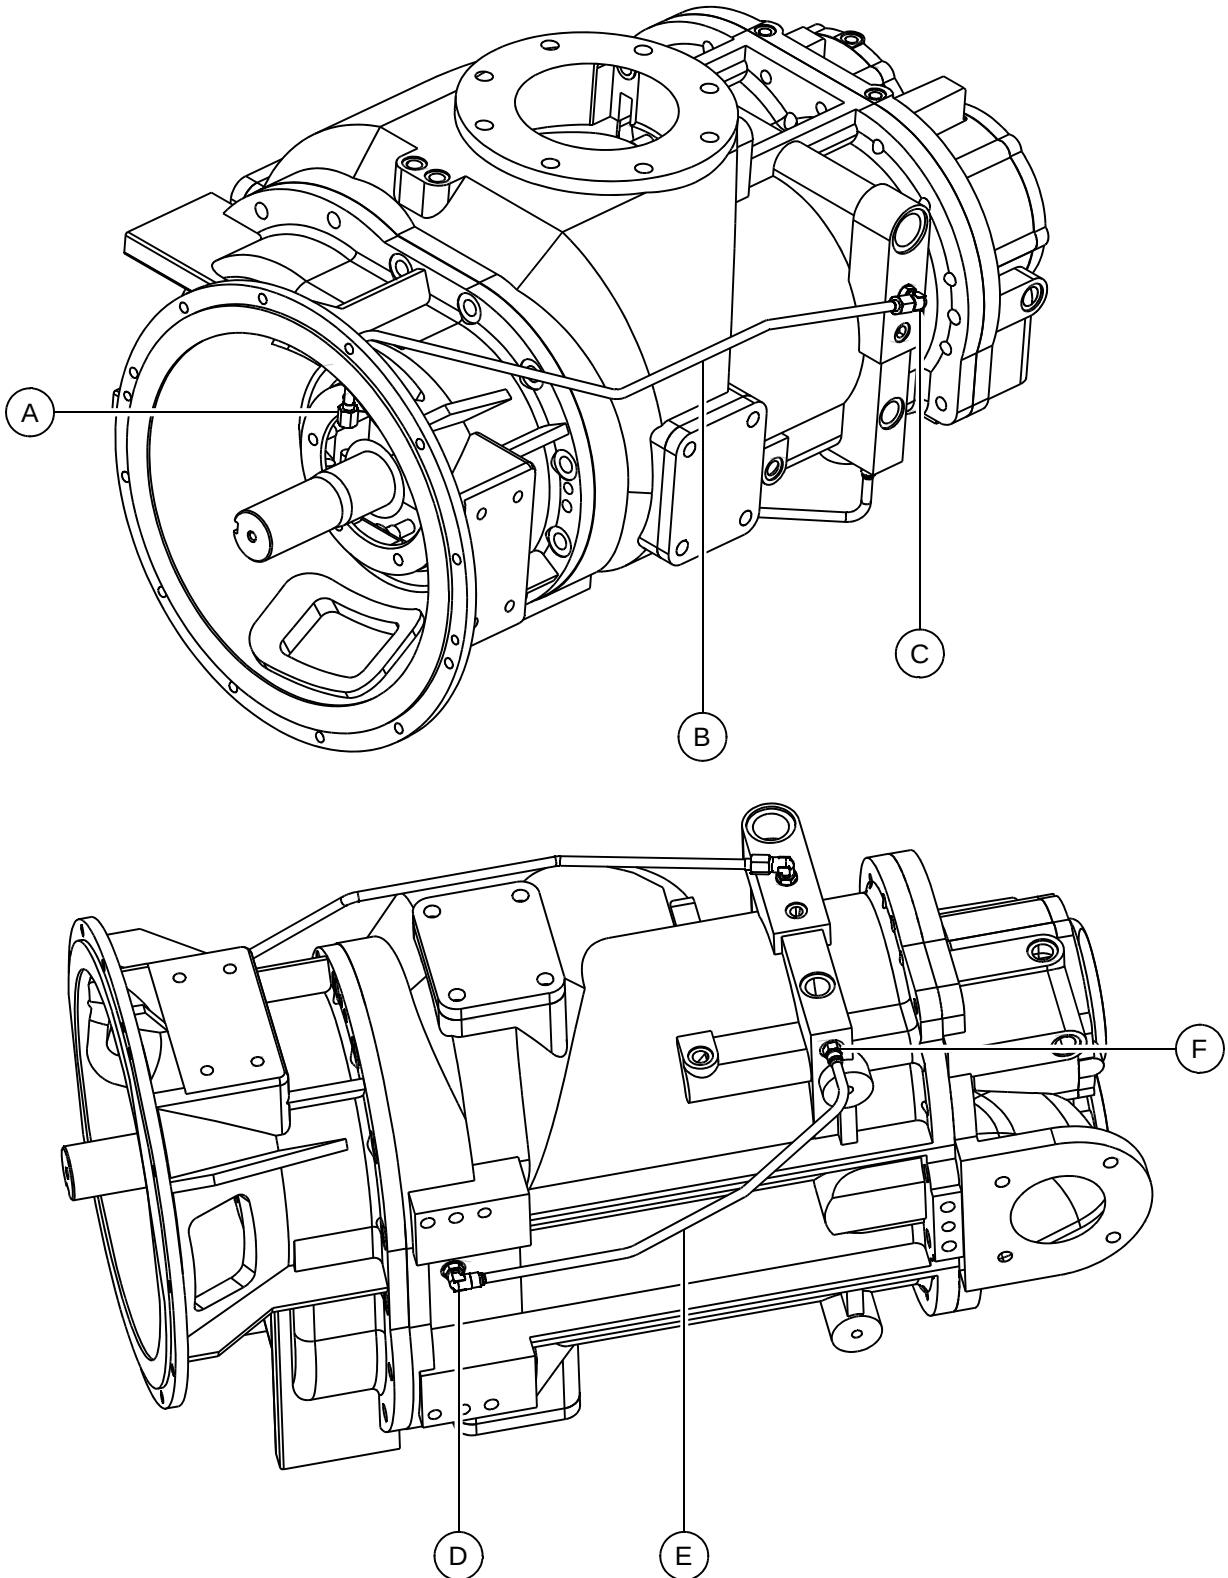


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	95959607	Connector		
B	39911284	Tube Assy		
C	95959730	Elbow, Tube		
D	35279827	Elbow, Tube		
E	39911292	Tube Assy		
F	95974663	Connector		

Cooler Package

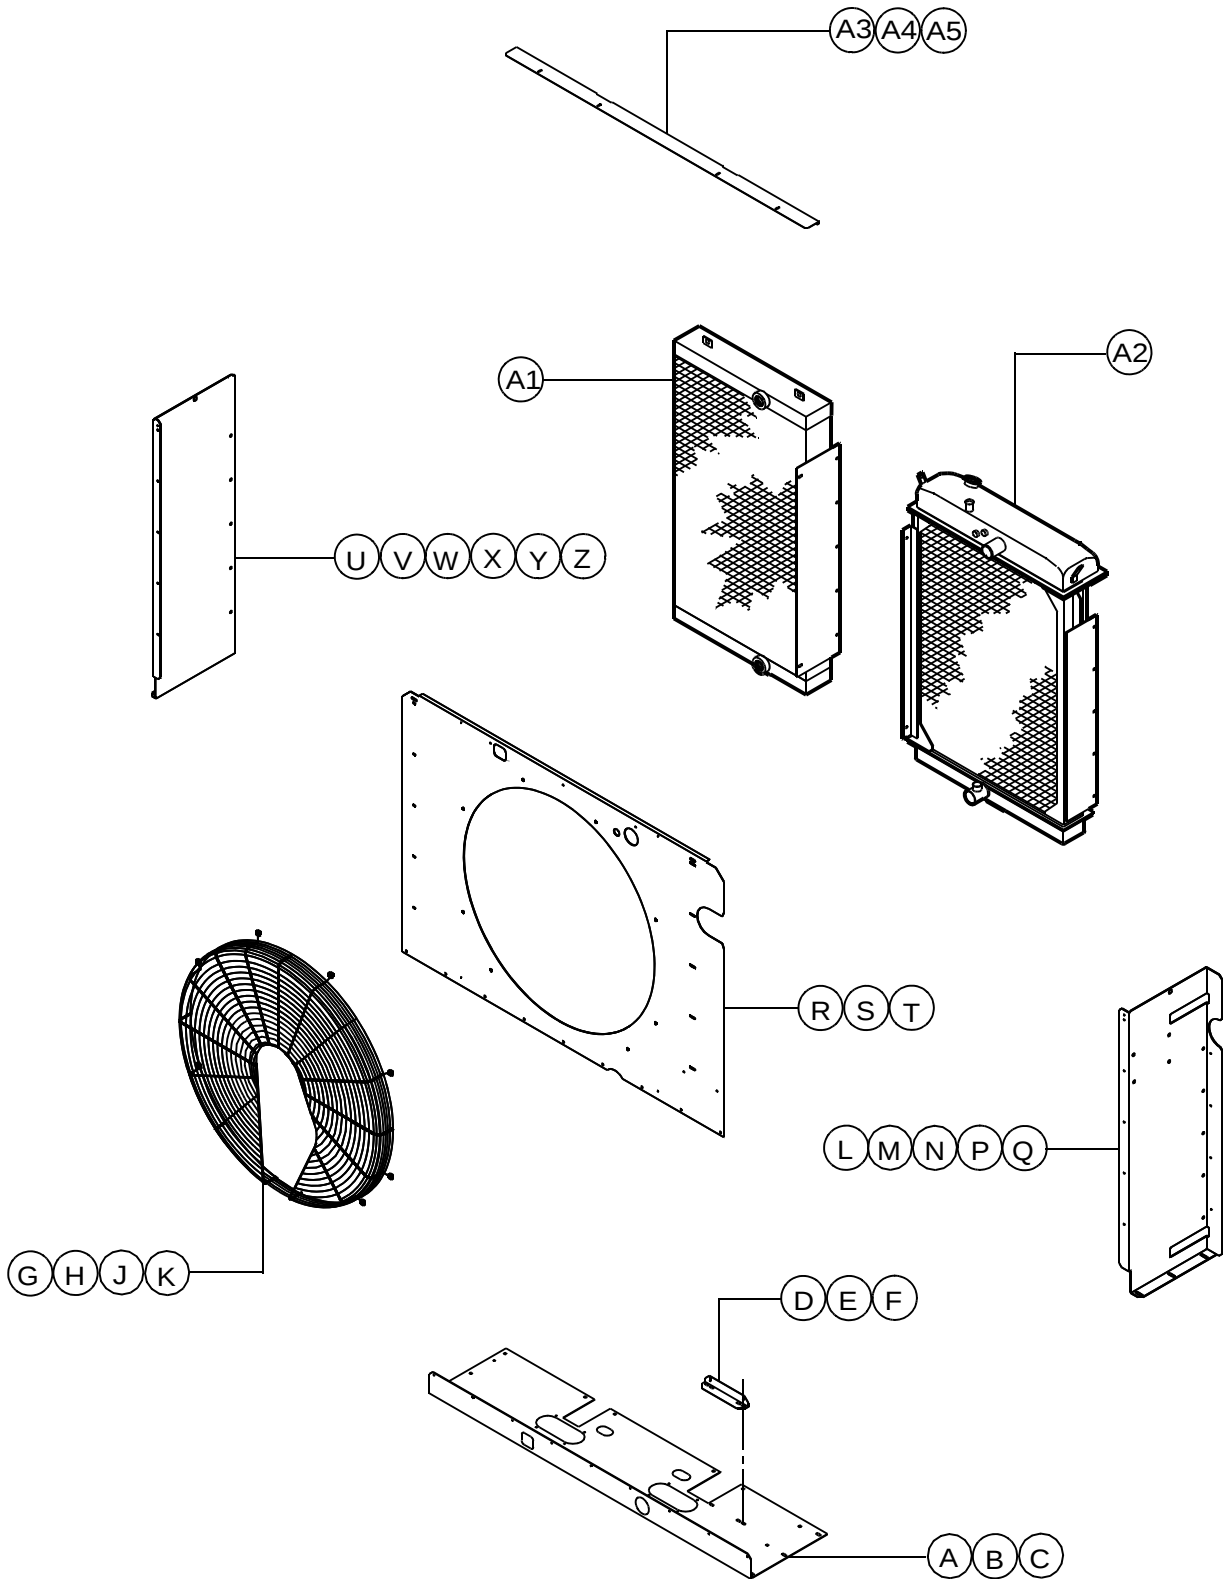


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	36894830	Panel, Bottom		
B	36797652	Screw		
C	35279025	Screw		
D	36895308	Bracket, Fuel Tank		
E	36797652	Screw		
F	35279025	Screw		
G	36893550	Guard, Fan		
H	35144336	Screw		
J	35371558	Screw		
K	36881886	Nut		
L	36894822	Support, Radiator		
M	35371558	Screw		
N	35371558	Screw		
P	36879302	Screw		
Q	36879211	Nut		
R	36894806	Plate, Orifice		
S	36797652	Screw		
T	35346741	Nut		
U	36894814	Support, Oil Cooler		
V	35371558	Screw		
W	36880995	Screw		
X	36879195	Nut		
Y	35279025	Screw		
Z	35279025	Screw		
A1	36891703	Oil Cooler		
A2	36891687	Radiator		
A3	35335140	Cap, Radiator		
A4	36894848	Support, Roof		
A5	36797652	Screw		
A6	36797652	Screw		

Radiator Piping

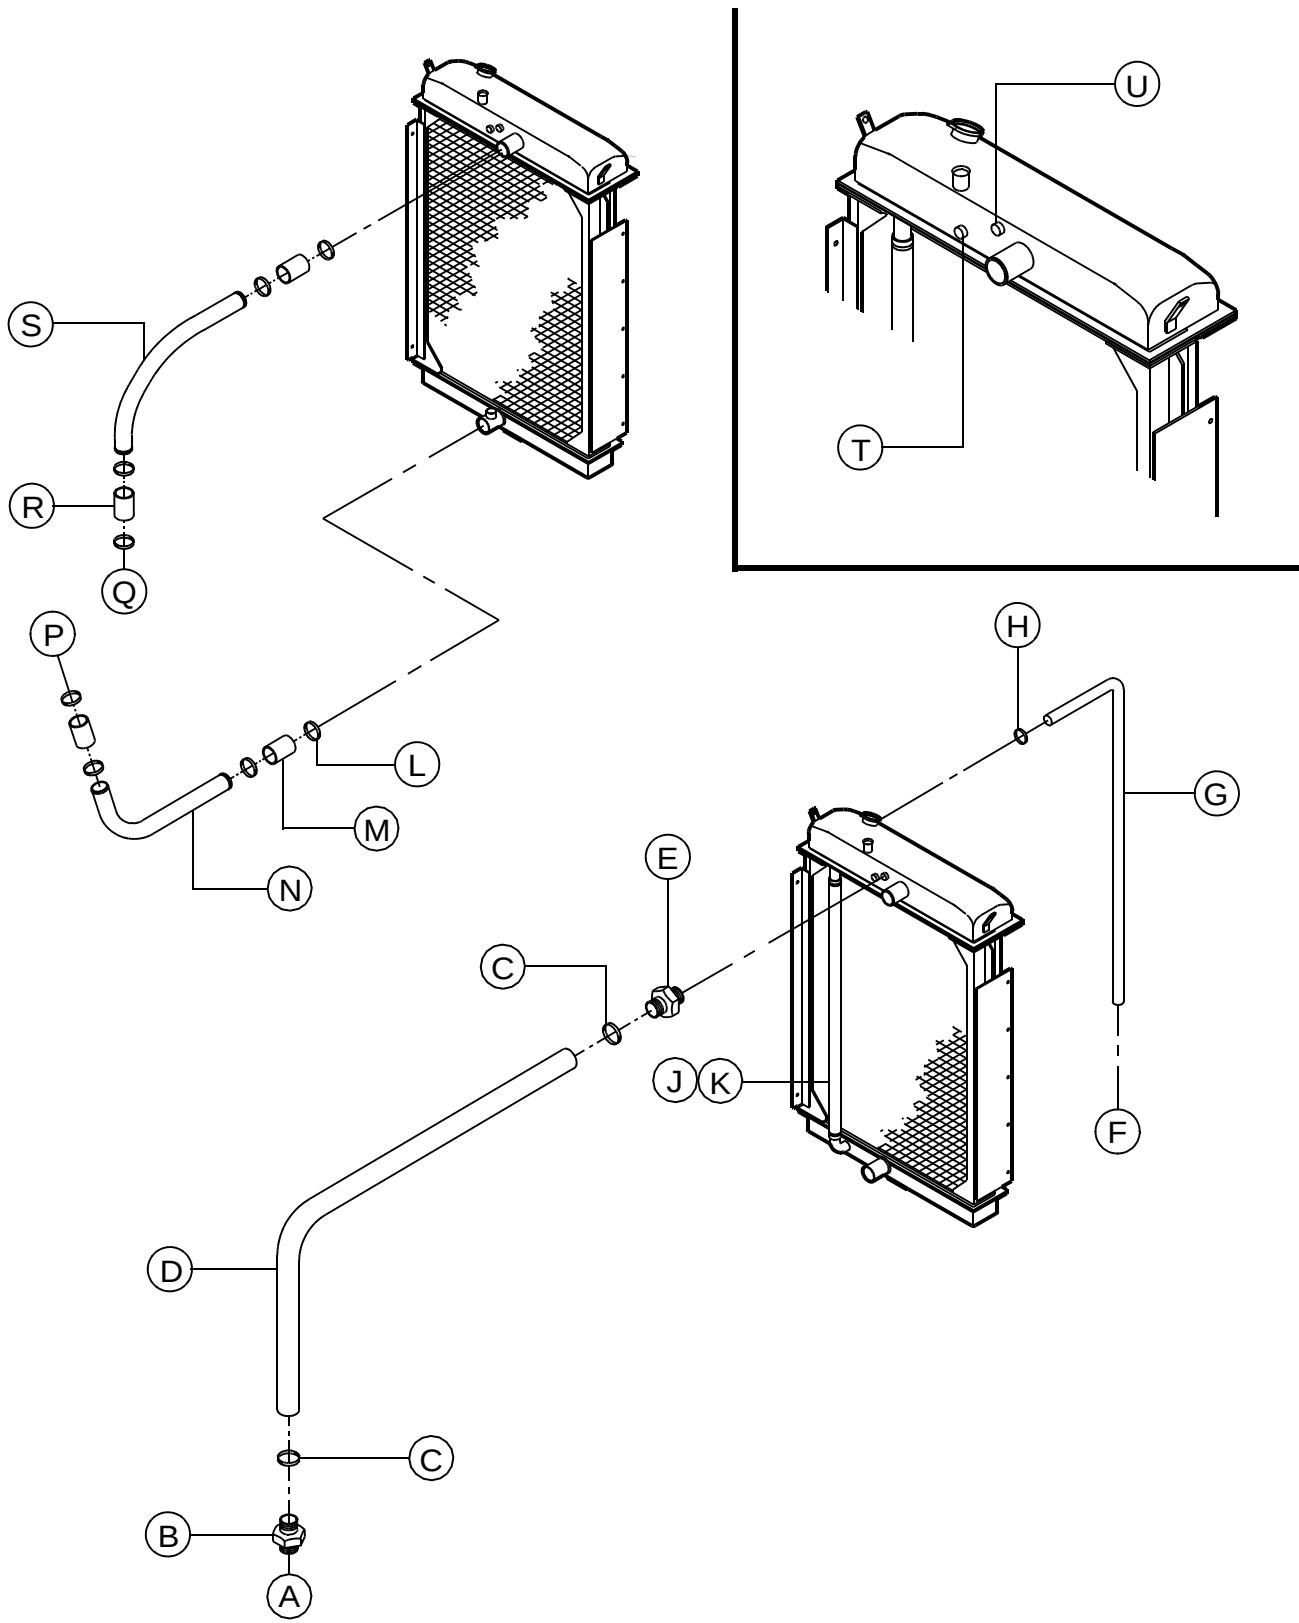


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A		To Engine, Near Water Outlet		
B	36840627	Adapter		
C	35296342	Clamp		
D	35286772	Hose		
E	35369511	Adapter		
F		Through Belly Pan		
G	35360775	Tube		
H	36845592	Clamp		
J	35135458	Hose		
K	95235131	Clamp		
L	35222017	Clamp		
M	35330570	Hose		
N	36894772	Tube		
P		To Bottom of Engine		
Q		To Top of Engine		
R	35356534	Hose		
S	36894764	Tube		
T		To Low Coolant Level Sensor		
U		To Vent Line		

Separator Tank

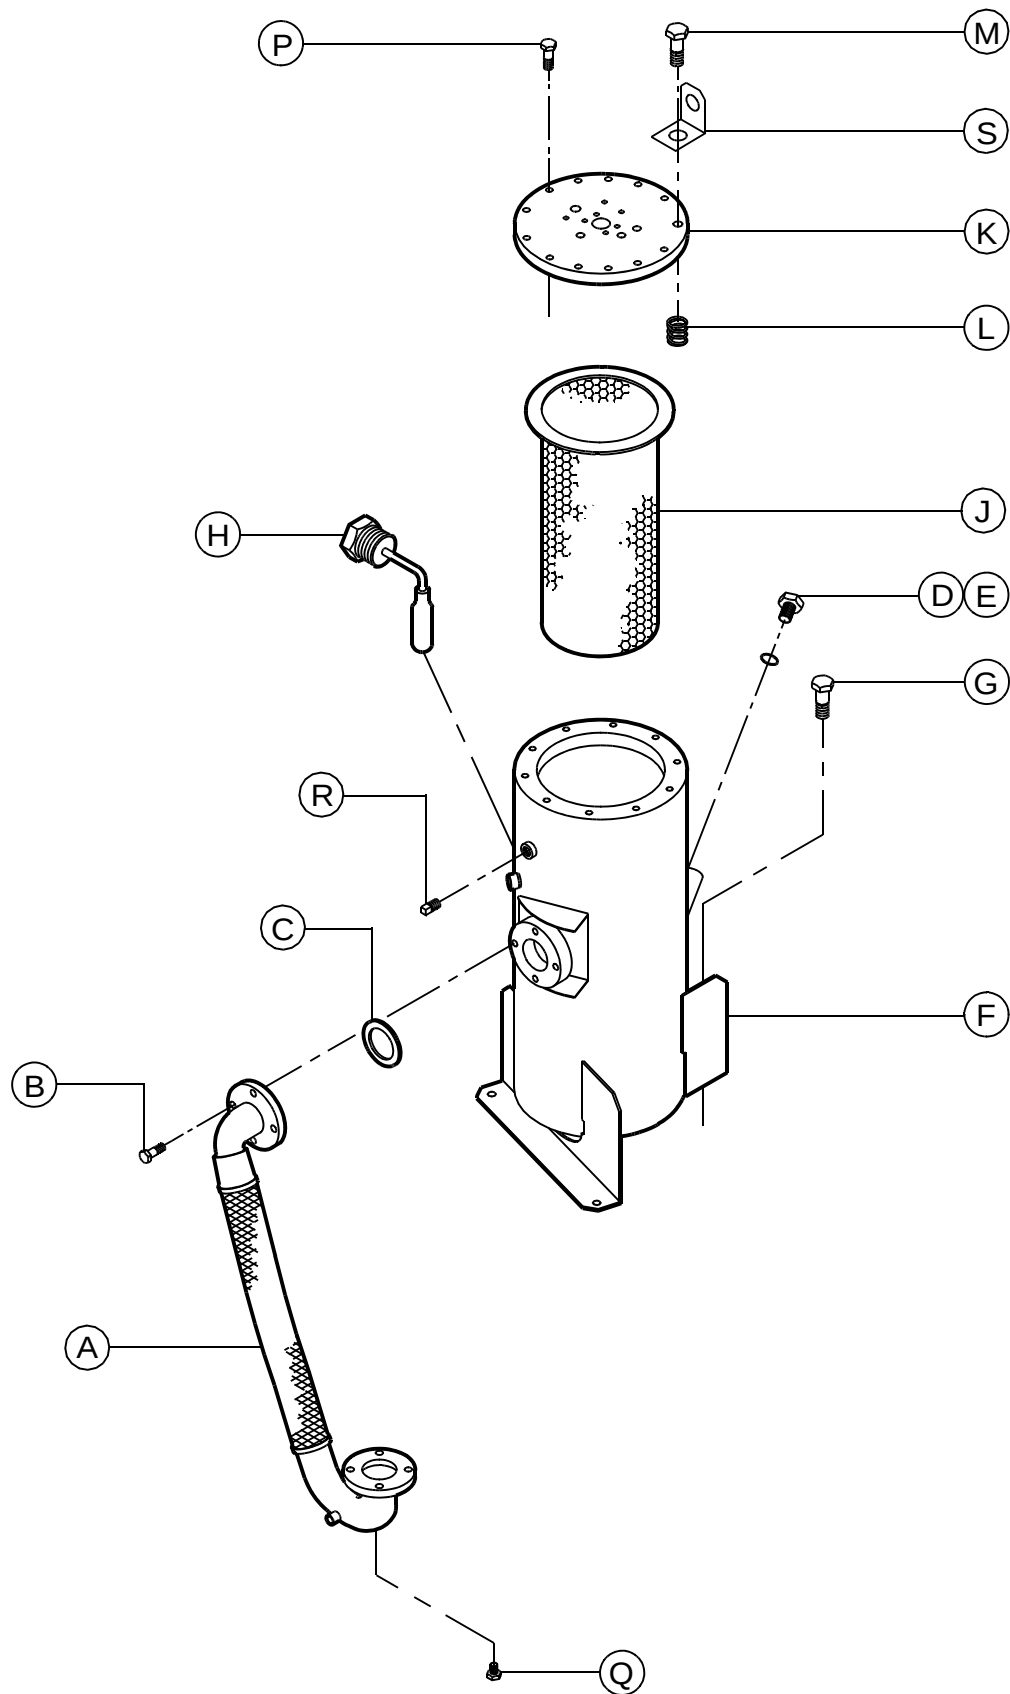


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	36893691	Hose, Discharge		
B	36765121	Screw		
C	35575570	Gasket		
D	35579630	Plug		
E	35279942	O-Ring		
F	36891307	Tank, Separator (Standard)		
	36898476	Tank, Separator (EEC)		
G	36879302	Screw		
H	36891083	Gauge, Oil Level		
J	36891315	Element		
K	36891323	Cover		
L	35602325	Spring		
M	35375377	Screw		
N	95252409	Plug		
P	36879302	Screw		
Q	95280541	O-Ring		
R	95252409	Plug		
S	36785012	Bracket		

Minimum Pressure Valve

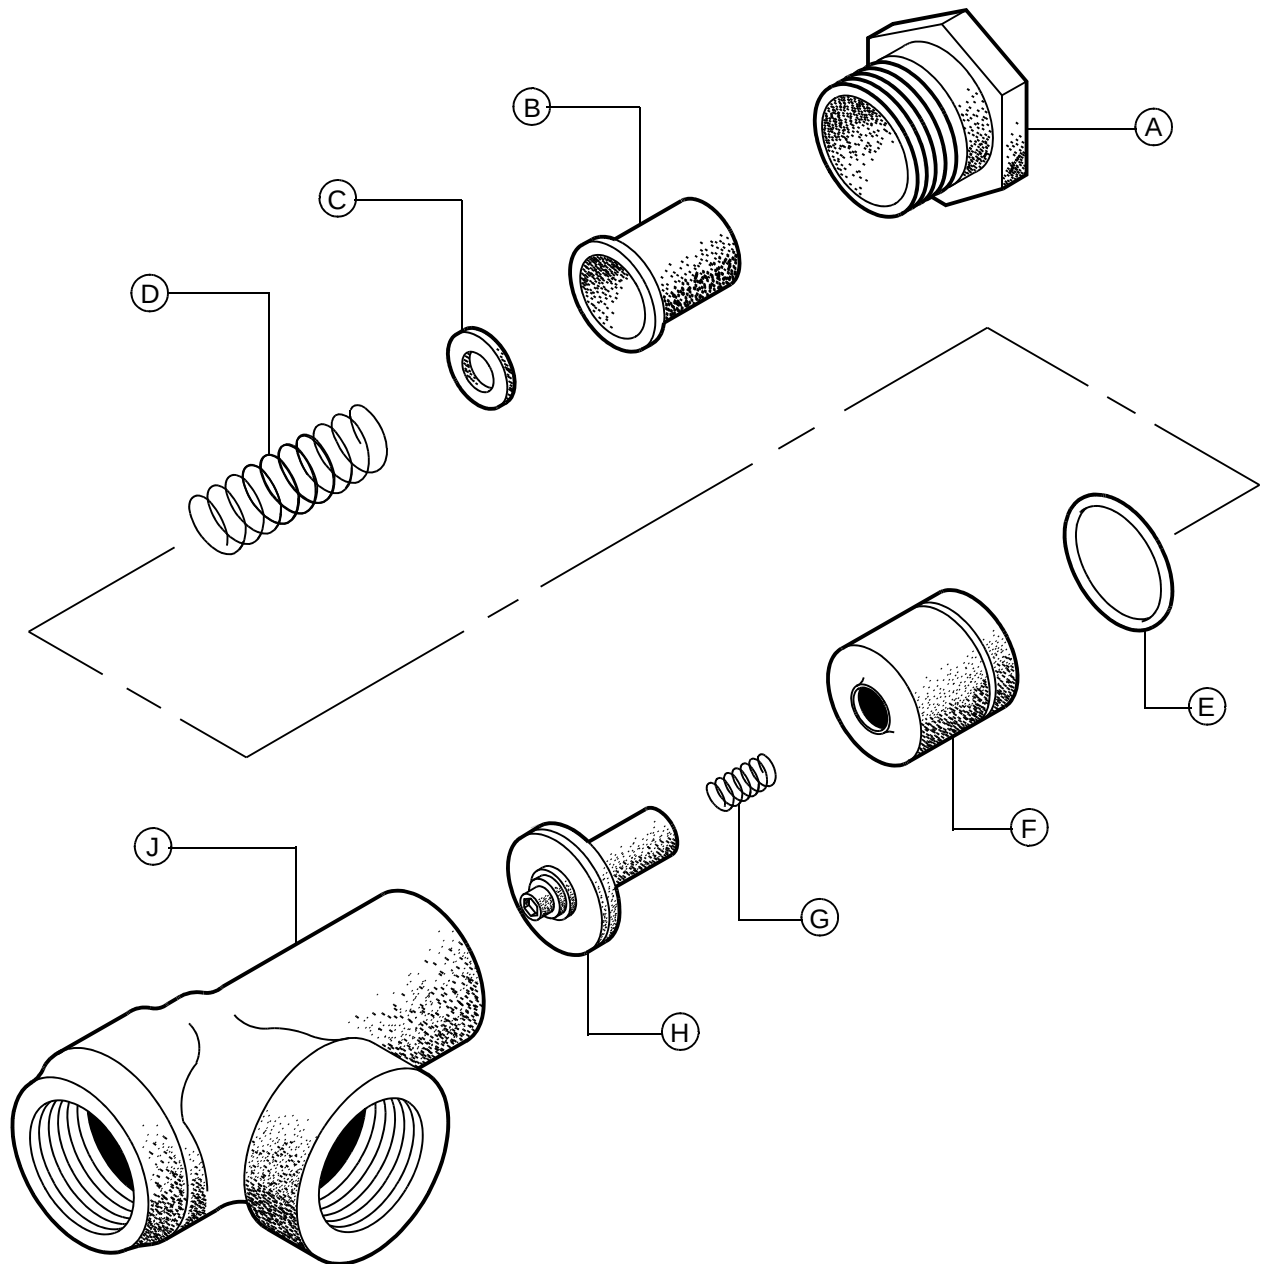


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	35677341	Cap		
B	35367390	Insert		
C	11A5D6Z1	Washer		
D	35367366	Spring		
E	35367374	O-Ring		
F	35367325	Piston		
G	35367358	Spring		
H	35367317	Check Valve Assy		
J	35367333	Body		

Oil Filter Mount

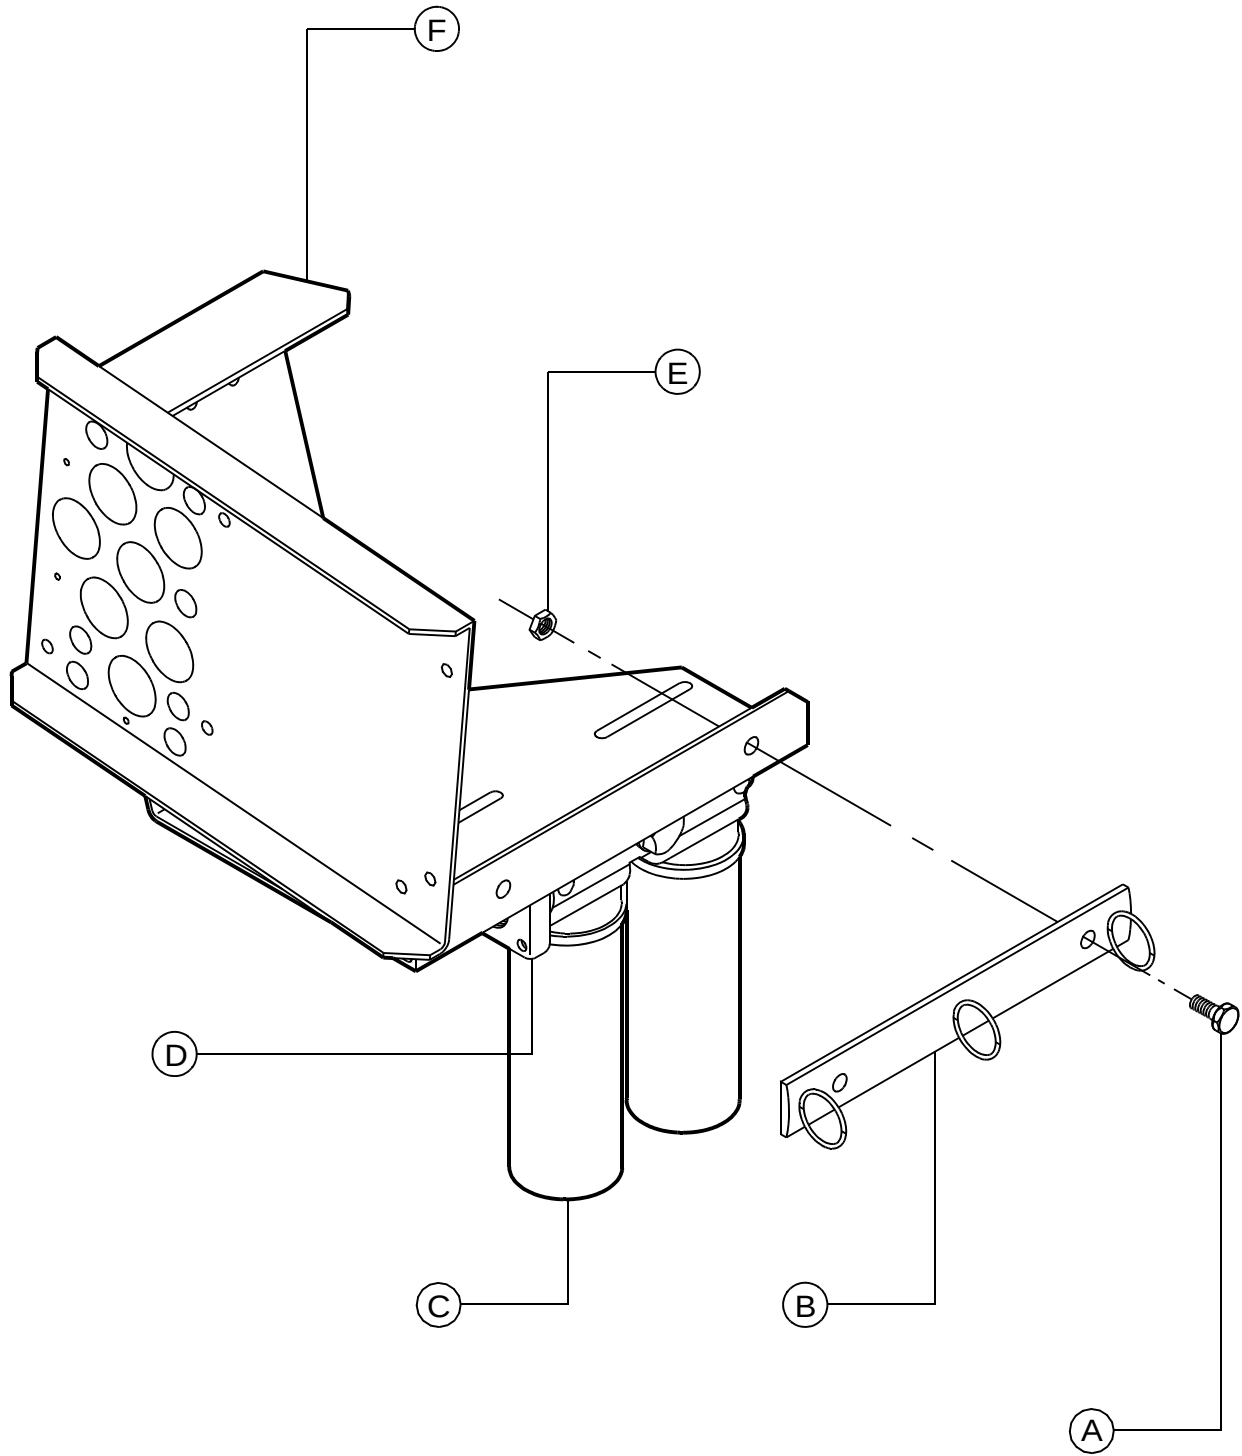

ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	95942553	Screw		
B	36788982	Binder, 3-Ring		
C	36860336	Element, Filter		
D	36756120	Filter Head Assy		
E	95923033	Nut		
F	36893766	Support, A/E Air Cleaner		


Fuel Tank

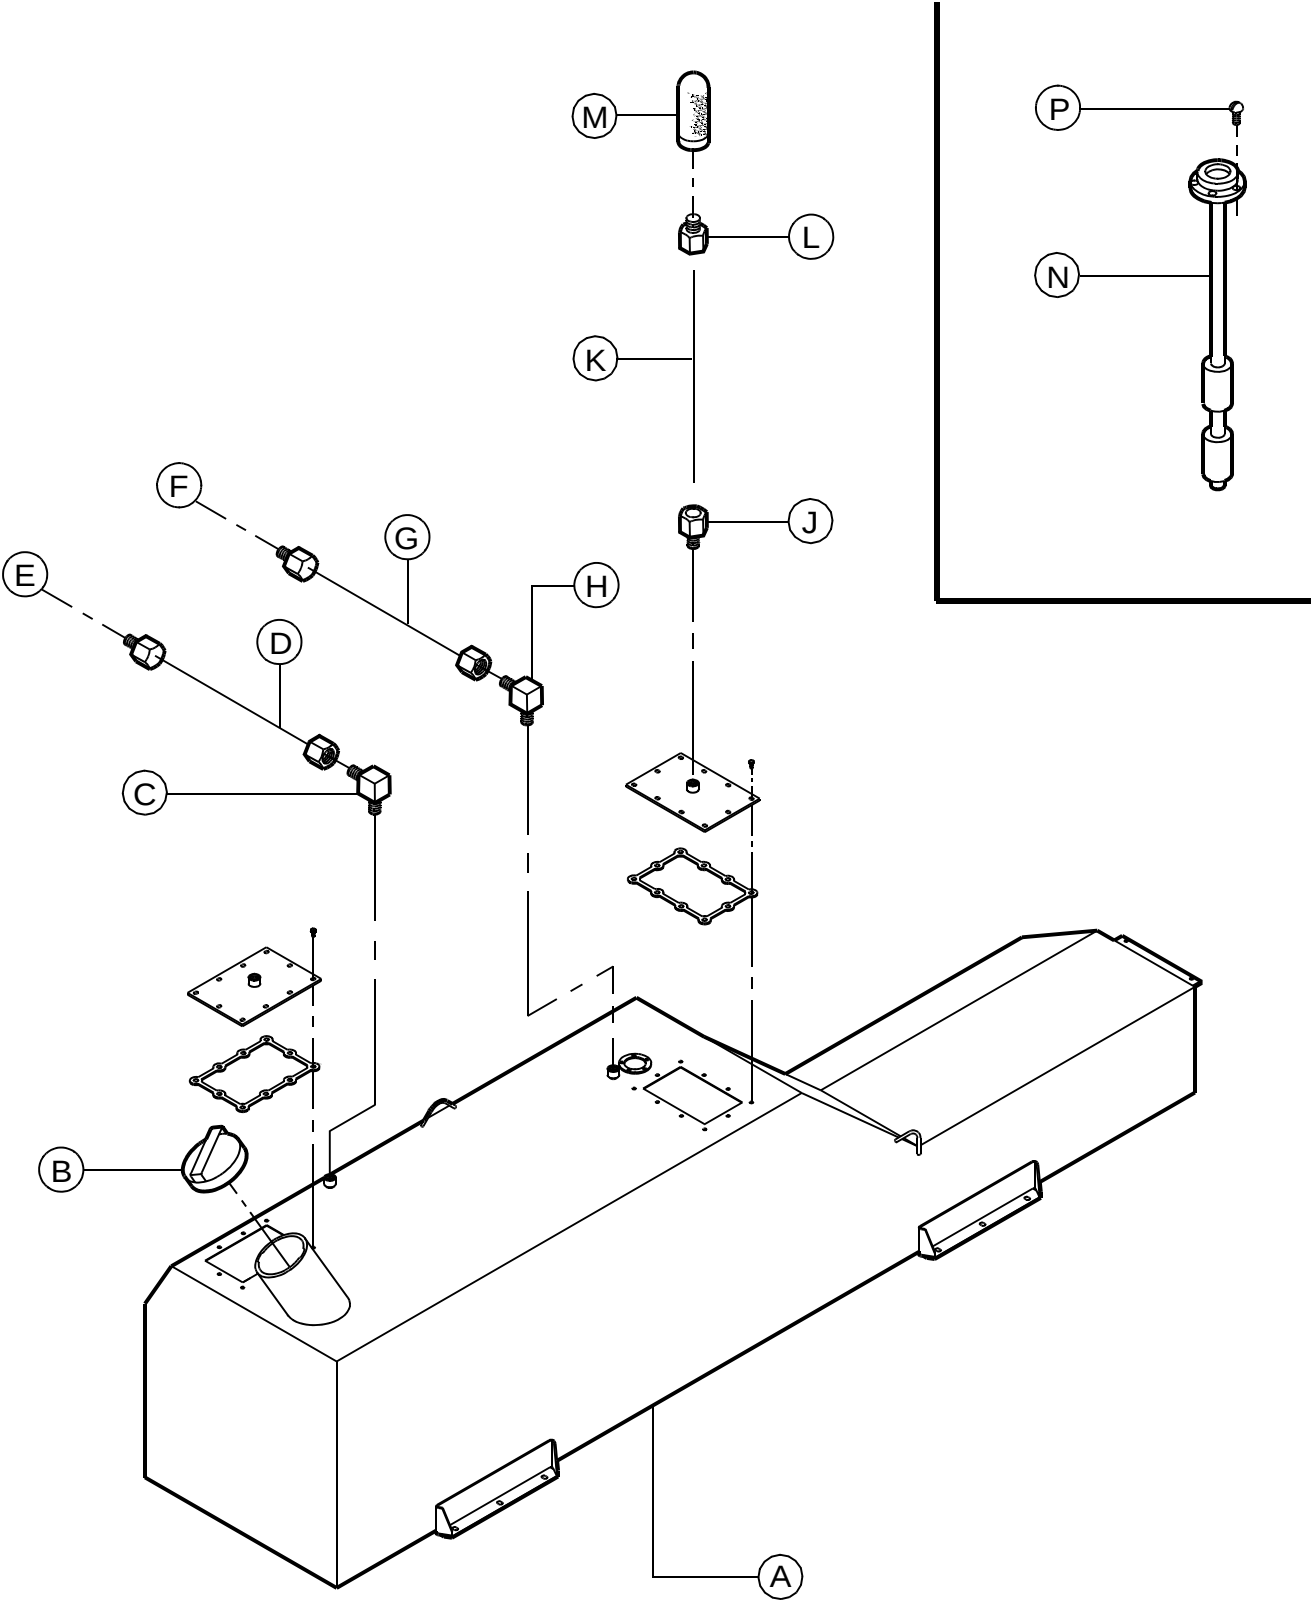

ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	36893667	Tank, Fuel		
B	36845014	Cap, Fuel Tank		
C	35286756	Elbow, 90 Deg.		
D	35136548	Hose Assy		
E		Fuel Supply		
F		Fuel Return		
G	36881928	Hose Assy		
H	35283118	Elbow, 90 Deg.		
J	35369347	Connector		
K	35356484	Tube		
L	35369339	Connector		
M	35322395	Muffler		
N	36893949	Sender, Fuel		
P	36842102	Screw		

Air Piping


STARTS AT SERIAL NO. 291411

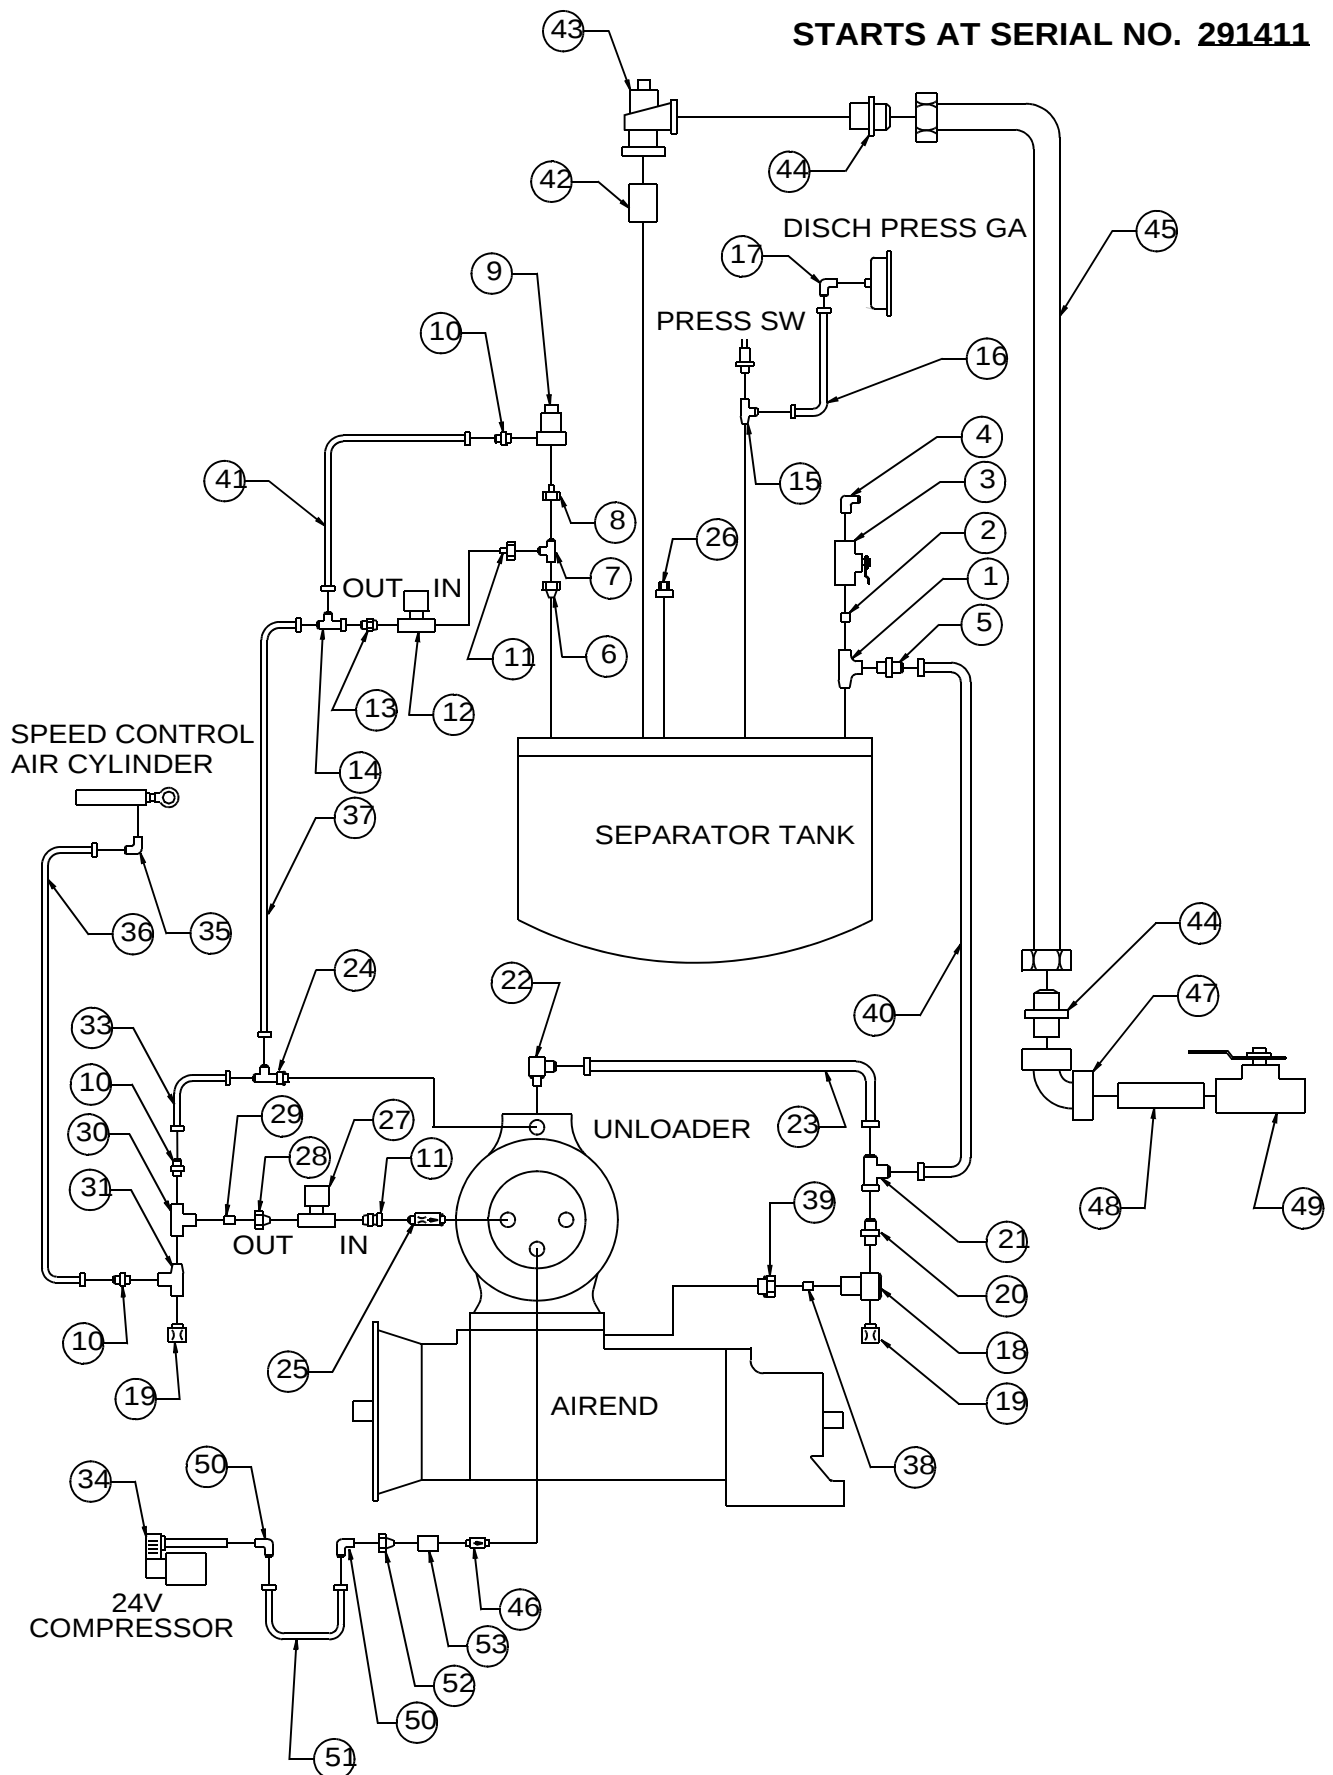

ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
1	95954269	Tee, Street, .75 NPT		
2	95928040	Nipple, Close, .75 NPT		
3	35576115	Valve, Ball, .75 NPT		
4	95928172	Elbow, Street 90, .75 NPT		
5	35313287	Adapter, .75 NPT x -8 JIC		
6	95944625	Bushing, .50 NPT x .25 NPT		
7	35283050	Tee, Run, .25 NPT x -6 JIC		
8	35367846	Nut, Swivel, .25 NPT x -6 JIC		
9	36854495	Valve, Pressure Regulator, 150 PSI (HP 935)		
	36854149	Valve, Pressure Regulator, 100 PSI (XP 1050)		
10	35284082	Connector, .25 NPT x -6 JIC		
11	35368927	Swivel, Female, .38 NPT x -6 JIC		
12	36840841	Valve, Solenoid, 24V, .38 NPT		
13	35290147	Connector, .38 NPT x -6 JIC		
14	35283084	Tee, Run, Swivel Nut, -6 JIC		
15	35326503	Tee, .125 NPT x -4 JIC		
16	35127083	Hose, -4 JIC x 72.00 Long		
17	35301225	Elbow, 90, .125 NPT x -4 JIC		
18	35322379	Valve, Blowdown		
19	35322346	Connector, orifice, .156		
20	35283134	Connector, .25 NPT x -8 JIC		
21	35287929	Tee, Run, Swivel Nut, -8 JIC		
22	35287937	Elbow, 90, .56-18 x -8 JIC		
23	35857176	Tube, Flared, -8 JIC		
24	35279850	Tee, Run, .56-18 x -6 JIC		
25	36840460	Valve, Relief/Check, .040 Orifice		
26	95954038	Plug, .25 NPT		

Air Piping


STARTS AT SERIAL NO. 291411

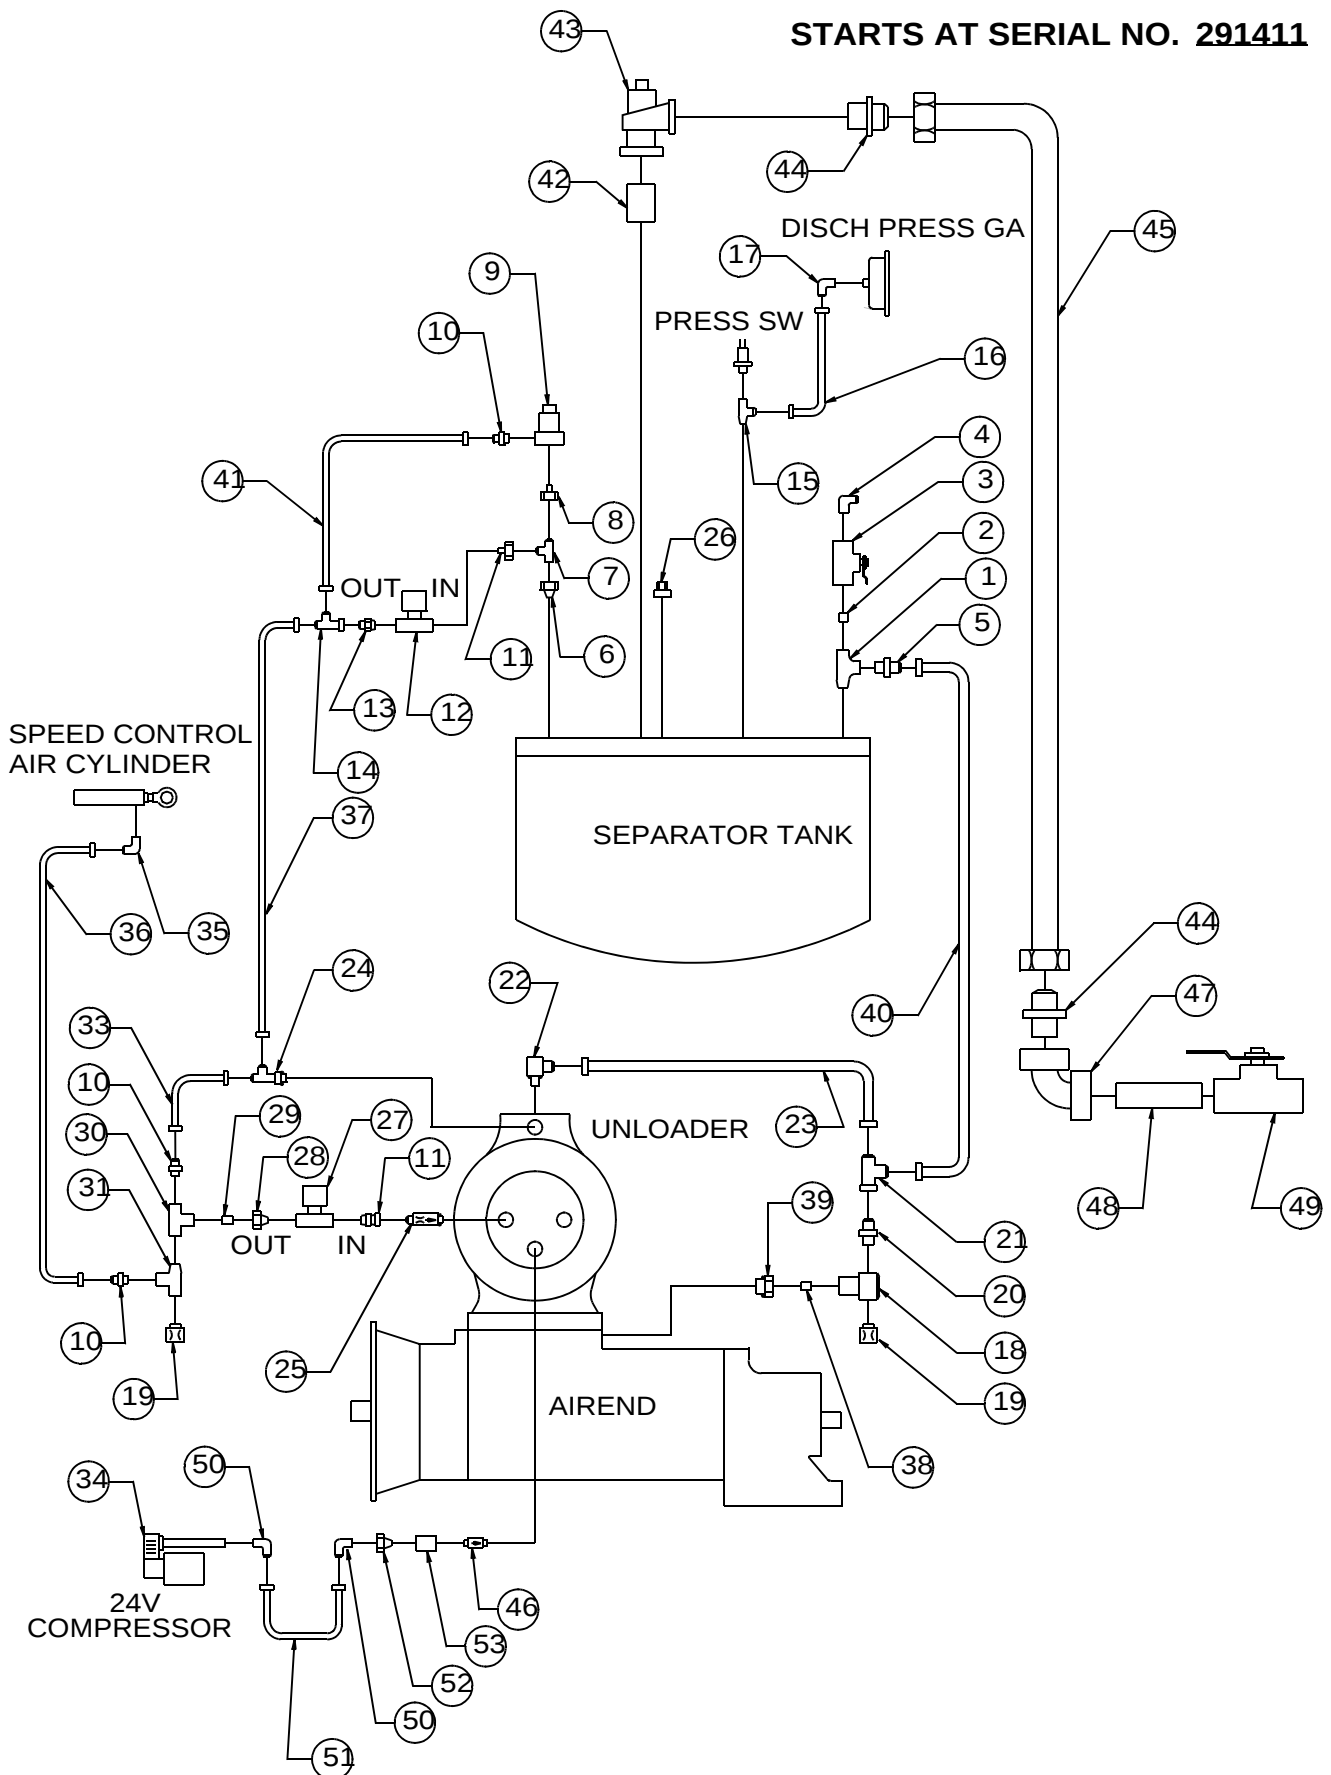

ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
27	36881944	Valve, Solenoid, Start/Run		
28	95940748	Bushing, .38 NPT x .25 NPT		
29	95944575	Nipple, Close, .25 NPT		
30	95954194	Tee, .25 NPT		
31	95944690	Tee, Street, .25 NPT		
32	35284082	Connector, .25 NPT x -6 JIC		
33	36843464	Tube, Flared, -38 JIC		
34	36046308	Kit, Compressor, 24V		
35	35301126	Elbow, 90, .125 NPT x -6 JIC		
36	36844074	Hose, -6 JIC x 52.00 Long		
37	35311471	Hose, -6 x 30.00 Long		
38	95667341	Nipple, Close, .25 NPT		
39	35302314	Adapter		
40	35141902	Hose, -8 JIC x 50.00 Long		
41	35282953	Hose, -6 JIC x 11.00 Long		
42	95953808	Nipple, 2.00 NPT x 3.00 Long		
43	35598770	Valve, check, 2.00 NPT, Minimum Pressure		
44	35335124	Connector, Male, -32 JIC x 2.00 NPT		
45	36893923	Tube, Service		
46	35248145	Valve, Check, .25 NPT		
47	95946281	Elbow, 90, 2.00 NPT		
48	95944658	Nipple, 2.00 NPT x 12.00 Long		
49	35602473	Valve, Ball, 2.00 NPT		
50	35306687	Elbow, 90, .125 NPT x -4 JIC		
51	35283258	Hose, -4 JIC x 34.00 Long		
52	95930301	Bushing, reducing, .25 NPT x .12 NPT		
53	95953444	Coupling, .25 NPT		

Oil Piping


STARTS AT SERIAL NO. 291411

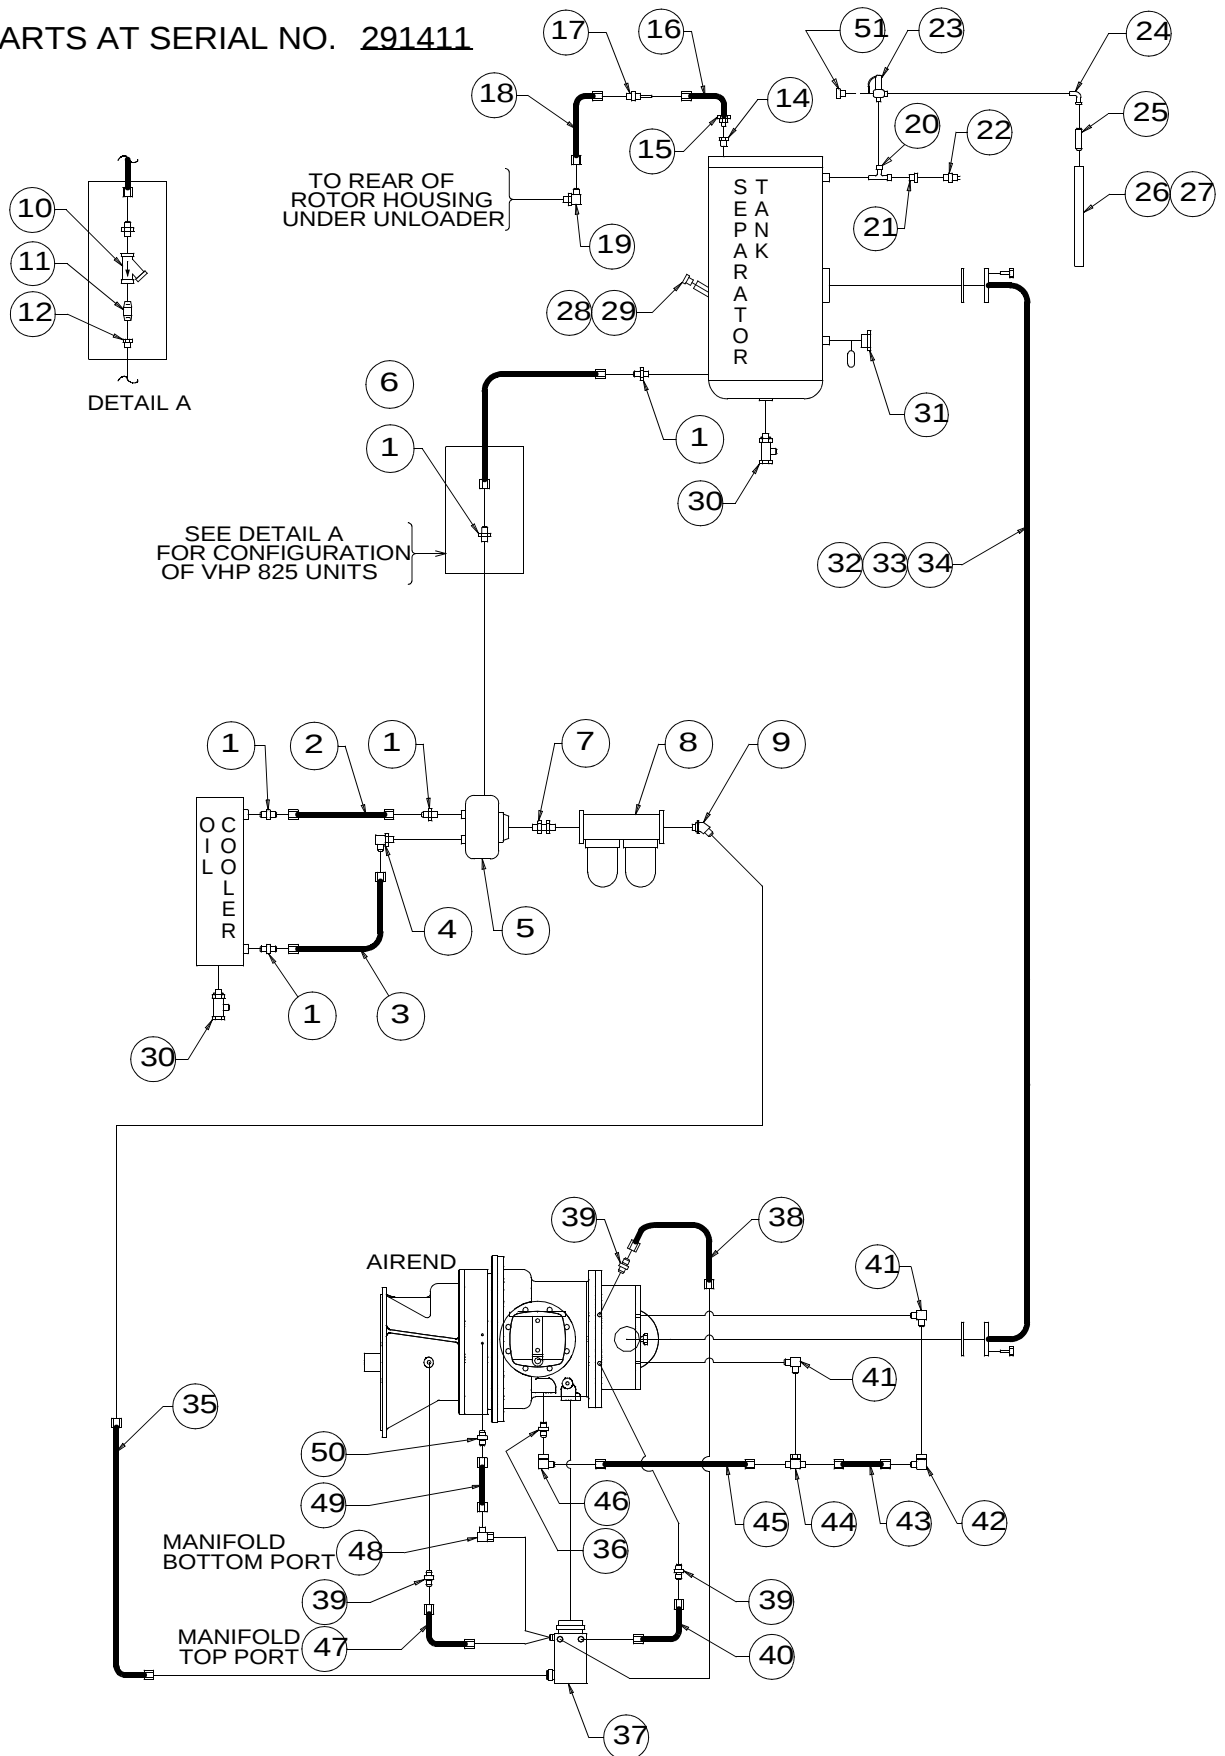

ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
1	35296409	Connector, Straight, 1.88-12 x -24 JIC, w/O-Ring		
2	36894749	Tube Assy, Upper		
3	36894731	Tube Assy, Lower		
4	95431292	Elbow, 90, 1.88-12 x -24 JIC, w/O-Ring		
5	36893824	Valve, Oil Temperature Bypass		
6	35130863	Hose Assy		
7	95867933	Union, 1.88-12 x -24 JIC, w/O-Ring		
8	36756120	Dual Filter Assy		
9	35296425	Elbow, 45, 1.88-12 x -24 JIC, w/O-Ring		
10				
11				
12				
13				
14	95037347	Bushing, .50 NPT x .38 NPT		
15	35329309	Lenz Fitting		
16	22072219	Tube Assy		
17	36840411	Valve, Check, .25		
18	35127034	Hose Assy		
19	95365094	Elbow, 90, .44-20 x -4 JIC, w/O-Ring		
20	95954277	Tee, Street, 1.25 NPT		
21	95940912	Bushing, 1.25 NPT x .50 NPT		
22	36865756	Switch, temperature		
23	39225511	Valve, Safety, 200 PSI		
24	95953311	Elbow, Street, 90, 1.50 NPT		
25	36764389	Tube Adapter, 1.50 Pipe x 2.00 Tube		


Oil Piping

STARTS AT SERIAL NO. 291411

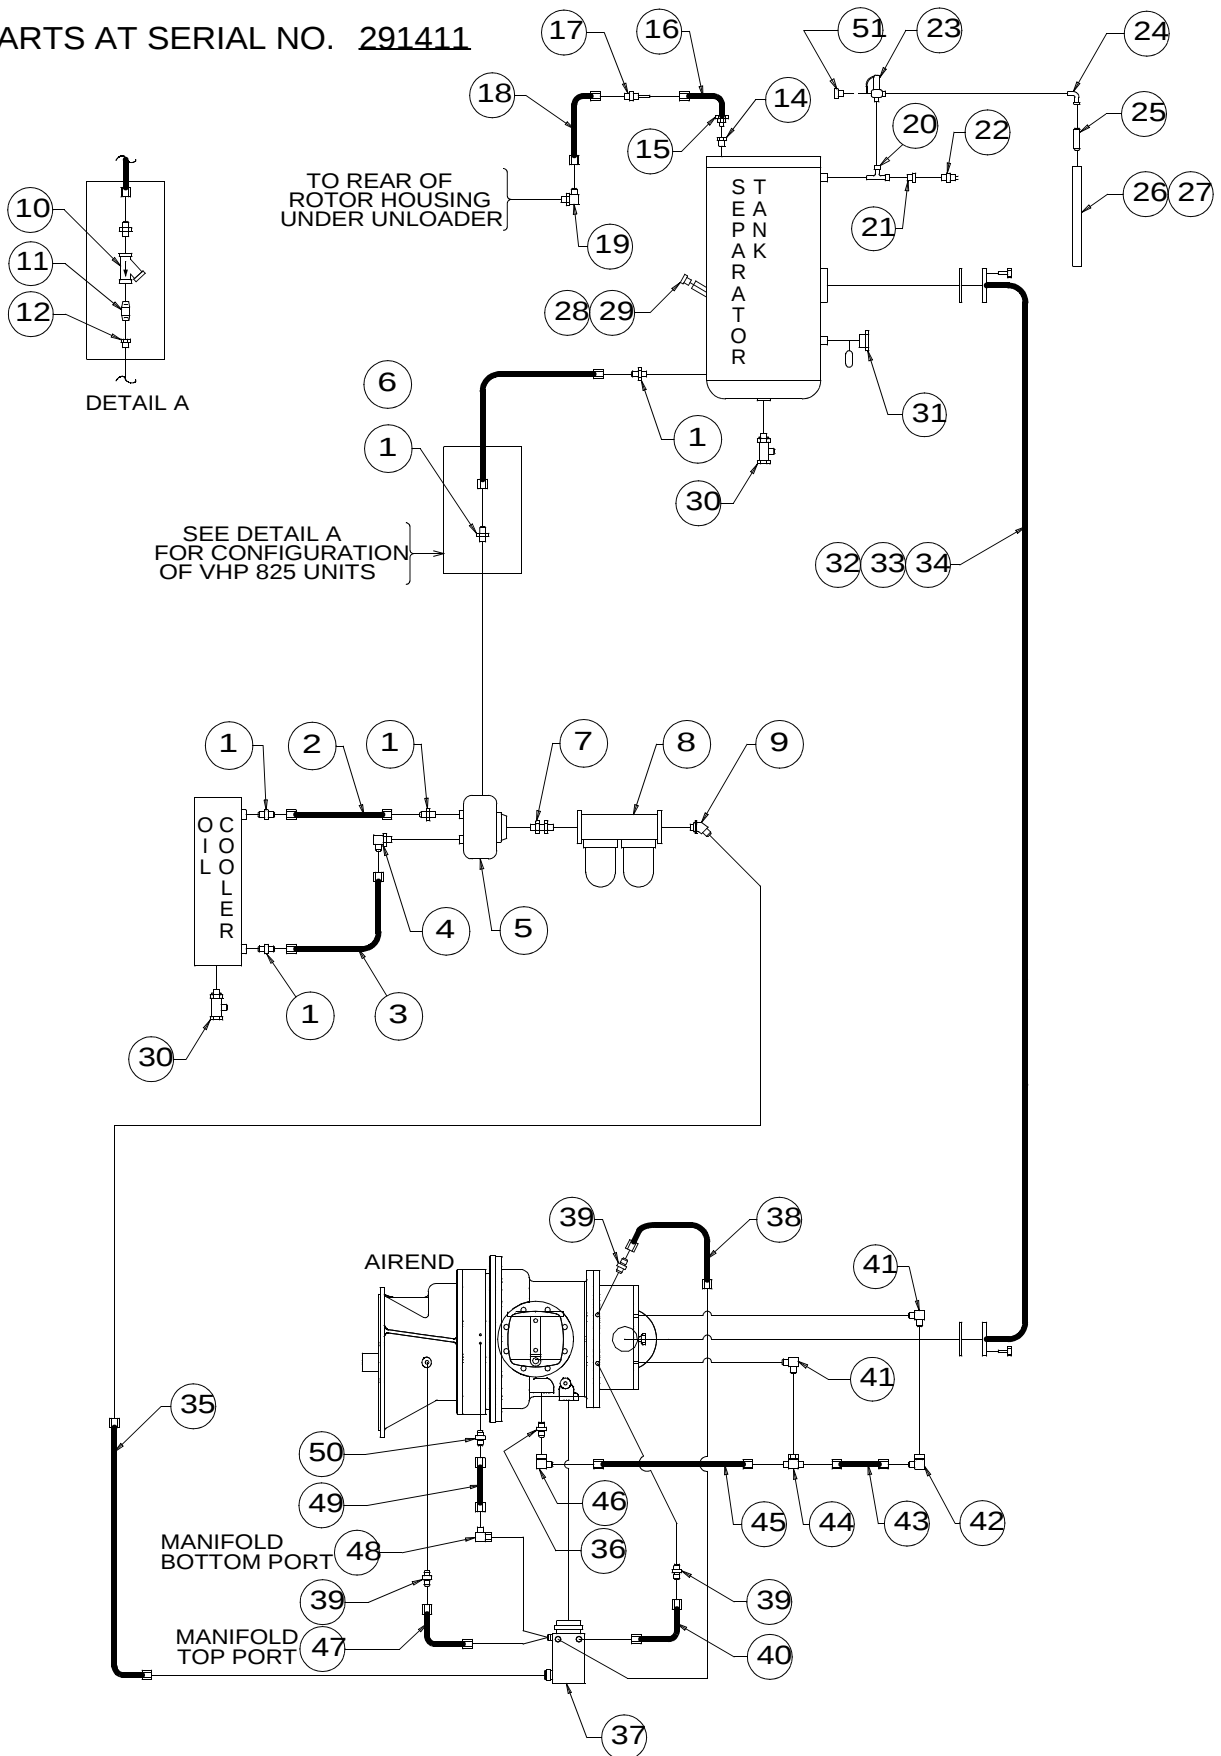


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
26	36764884	Tube, Vent		
27	35192178	Clamp, Saddle, 2.00		
28	35579630	Plug, Vent, 1.62-12		
29	35279942	O-Ring		
30	36795680	Valve, Drain, w/O-Ring		
31	36891083	Gauge Assy, Oil Level		
32	36893691	Hose Assy, Discharge		
33	35575570	Gasket		
34	36765121	Screw, Hex, M16-2.00 x 55LG		
35	35130871	Hose Assy		
36	35286954	Connector, Straight, .88-14 x -10 JIC, w/O-Ring		
37	36866531	Manifold, w/O-Ring		
38	36865889	Tube Assy		
39	36866564	Connector, Straight, .44-18 x -6 JIC, w/O-Ring		
40	36865897	Tube Assy		
41	35305622	Elbow, 90, .75-16 x -10 JIC, w/O-Ring		
42	35305648	Elbow, Swivel, 90, .75-16 x -10 JIC		
43	36865921	Tube Assy		
44	35356450	Tee, Swivel, .88-14 x -10 JIC		
45	35856251	Tube Assy		
46	35305648	Elbow, 90, .75-16 x -10 JIC		
47	36865905	Tube Assy		
48	35283068	Elbow, 90, .56-18 x -6 JIC		
49	36894780	Tube Assy		
50	36866564	Connector, Straight, .44-20 x -6 JIC, w/O-Ring		

Cold Starting Aid

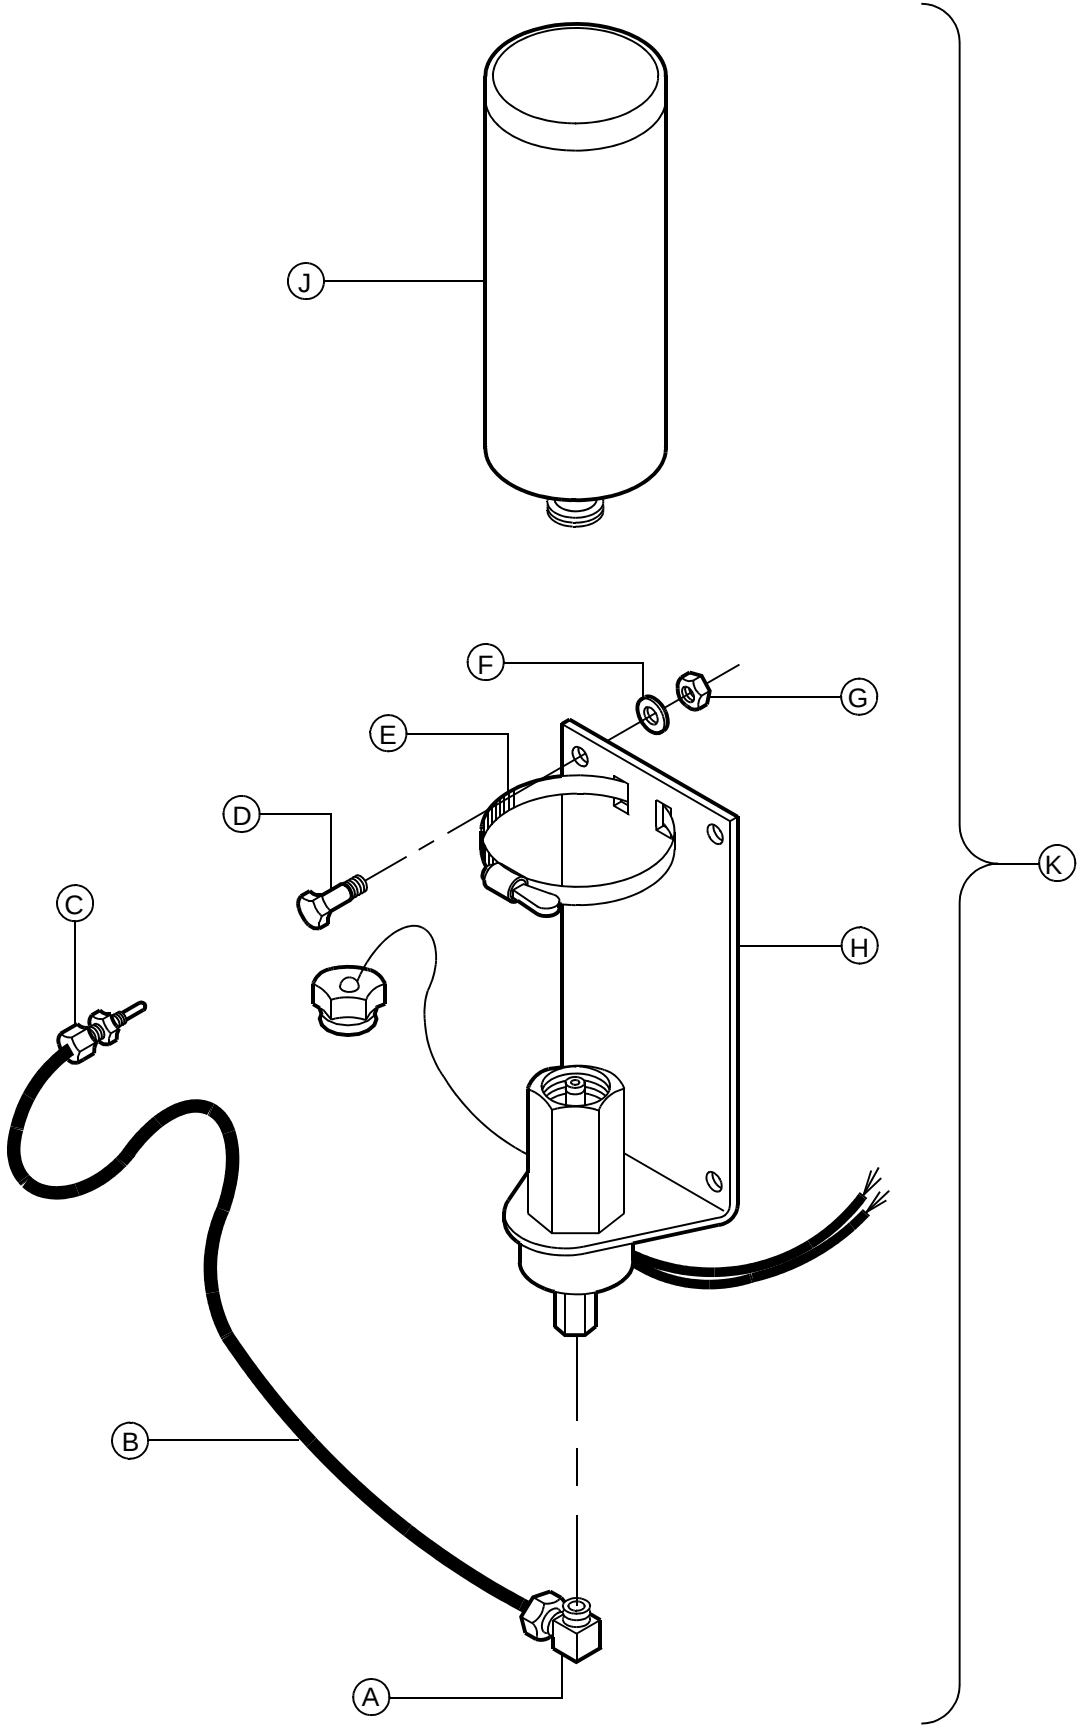


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	35103498	Elbow, 90 Deg.		
B	35132166	Tube		
C	35602812	Atomizer		
D	35322908	Screw		
E	35103506	Clamp		
F	14A5C55	Washer		
G	92304500	Nut		
H	35357961	Valve and Bracket Assy		
J	35112911	Cylinder, Ether		
K	35357052	Kit, Starting Aid		

Air Intake

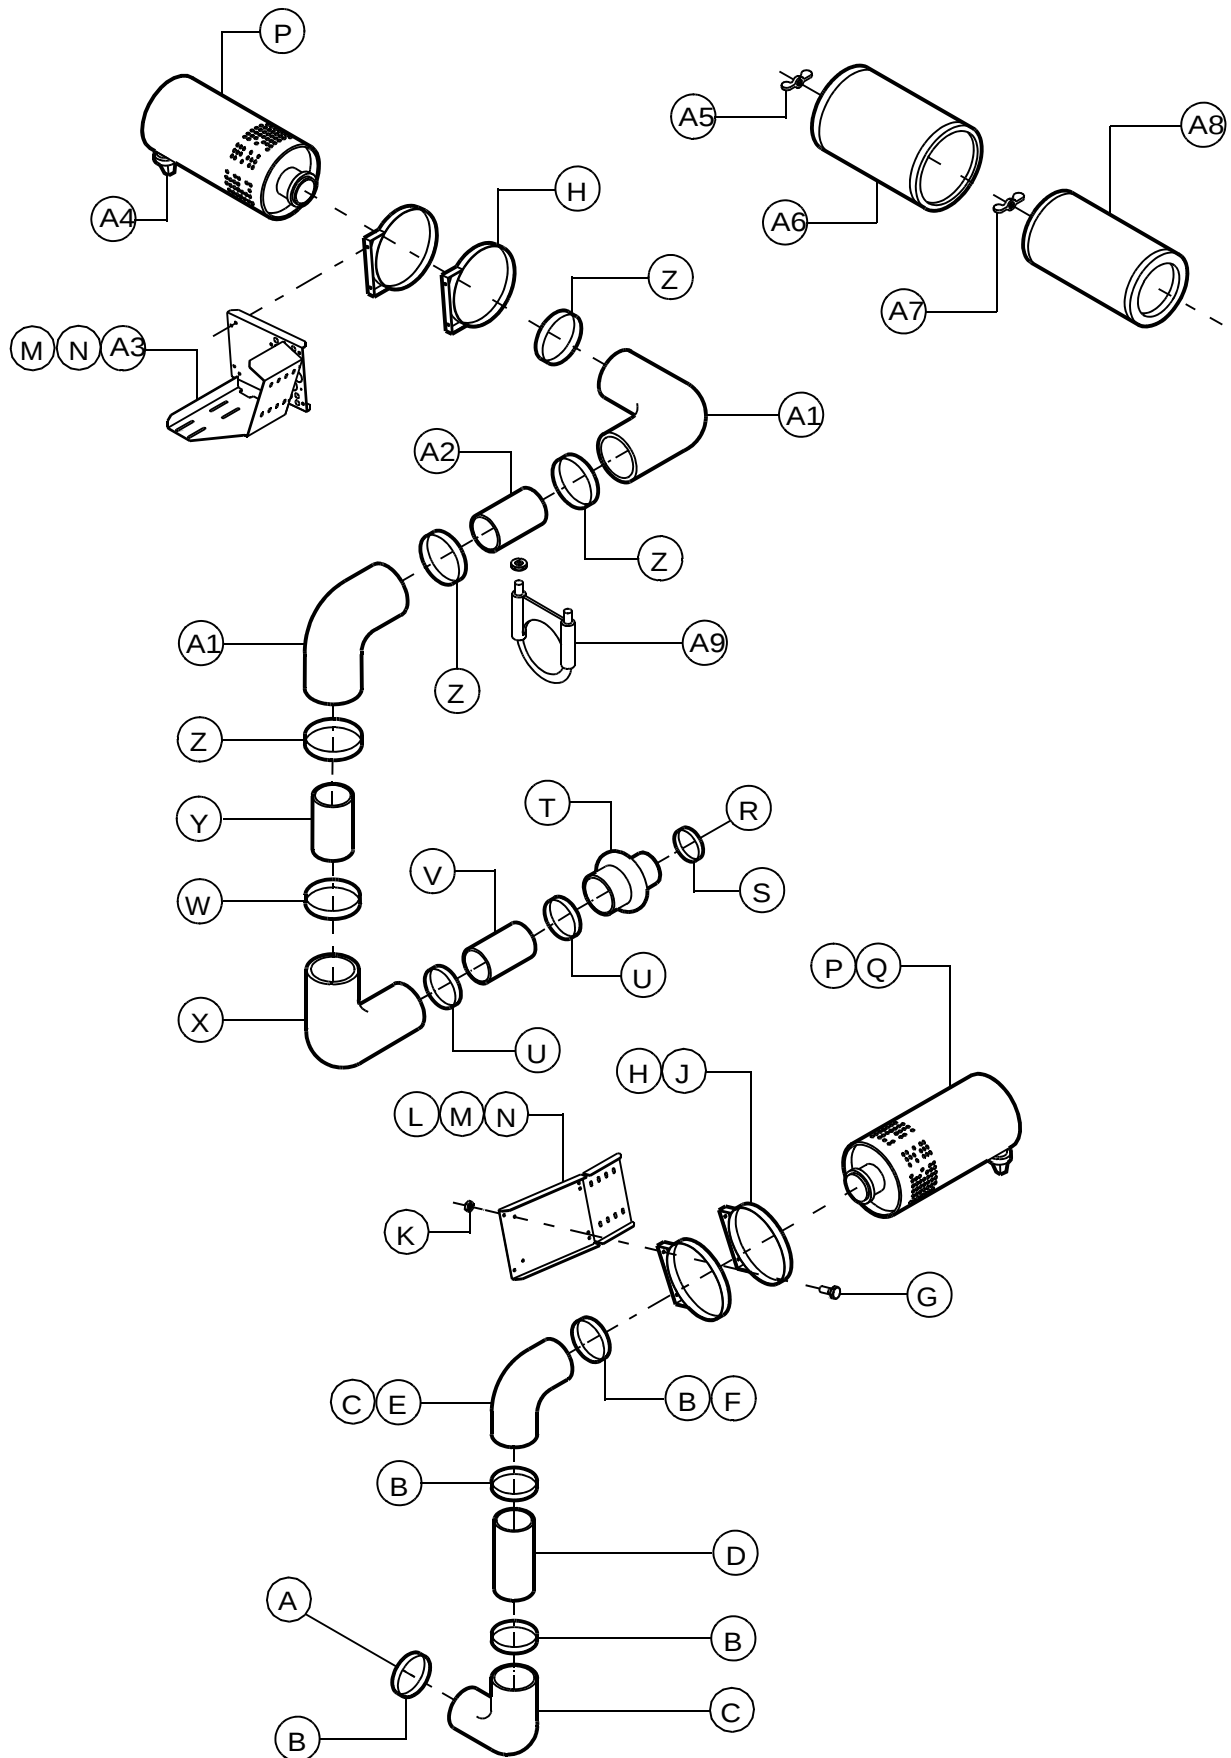


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A		To Unloader Inlet		
B	35119858	Clamp		
C	35598838	Elbow		
D	35112648	Tube		
E	35315894	Elbow		
F	35123496	Clamp		
G	36880995	Screw		
H	35863638	Band, Mounting		
J	35502608	Band, Mounting		
K	36879195	Nut		
L	36893766	Support, A/E Air Cleaner		
M	36880995	Screw		
N	36879195	Nut		
P	36866242	Air Cleaner Assy (HP 935)		
Q	36893832	Air Cleaner Assy (XP 1050)		
R		To Engine Turbo		
S	35279553	Clamp		
T	35274406	Reducer		
U	35161025	Clamp		
V	36895639	Tube		
W	35116615	Clamp		
X	35281328	Elbow		
Y	36895647	Tube		
Z	35116615	Clamp		
A1	35117605	Elbow		
A2	35596493	Tube		
A3	36893758	Support, Engine Air Cleaner		
A4	36867778	Ejector, Dust		
A5	36867794	Nut, Wing		
A6	36867786	Element, Primary		
	36893840	Element, Primary		
A7	36867794	Nut, Wing		
A8	36876019	Element, Safety		
	36893857	Element, Safety		
A9	36896579	Clamp		

Battery Mount

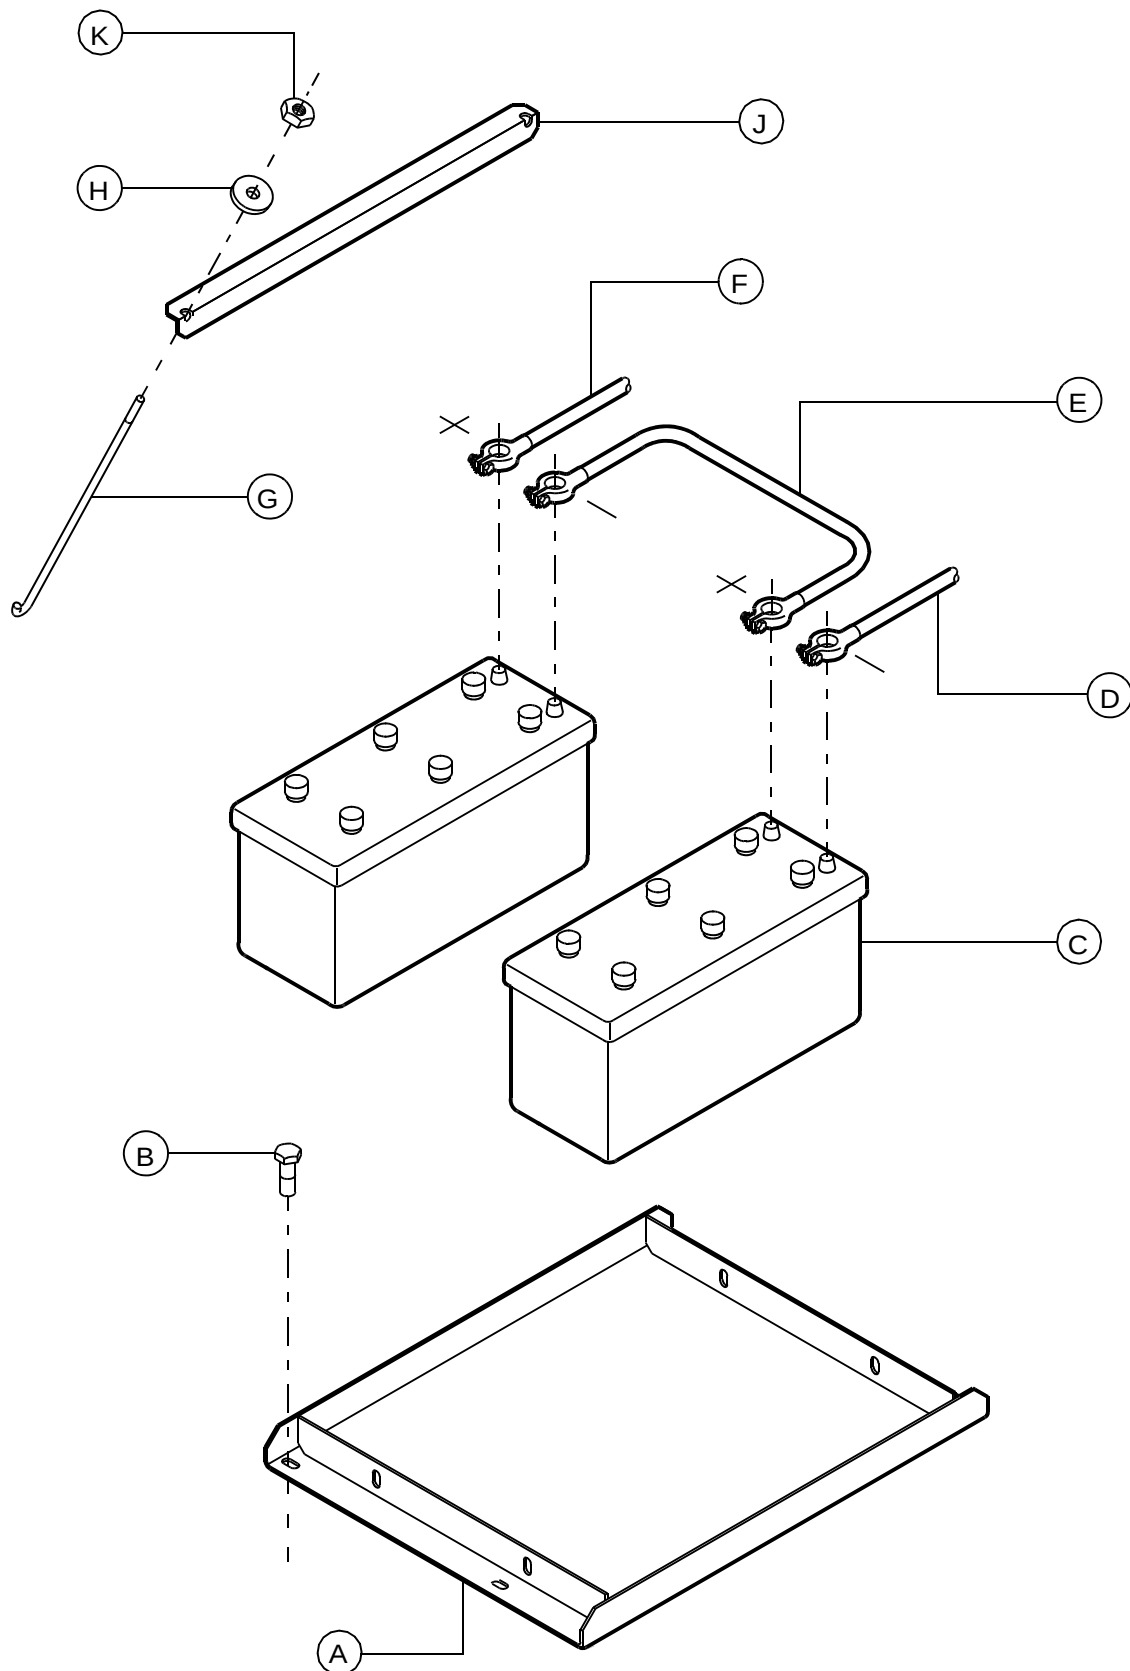


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	36894798	Tray, Battery		
B	35279025	Screw		
C	36793545	Battery (Wet)		
	36892523	Battery (Dry)		
D	35579143	Cable, Negative		
E	35128982	Cable, Jumper		
F	35512425	Cable, Positive		
G	36860005	J-Bolt		
H	36853265	Washer		
J	36895456	Bracket, Hold-Down		
K	95923298	Nut		

Control Panel

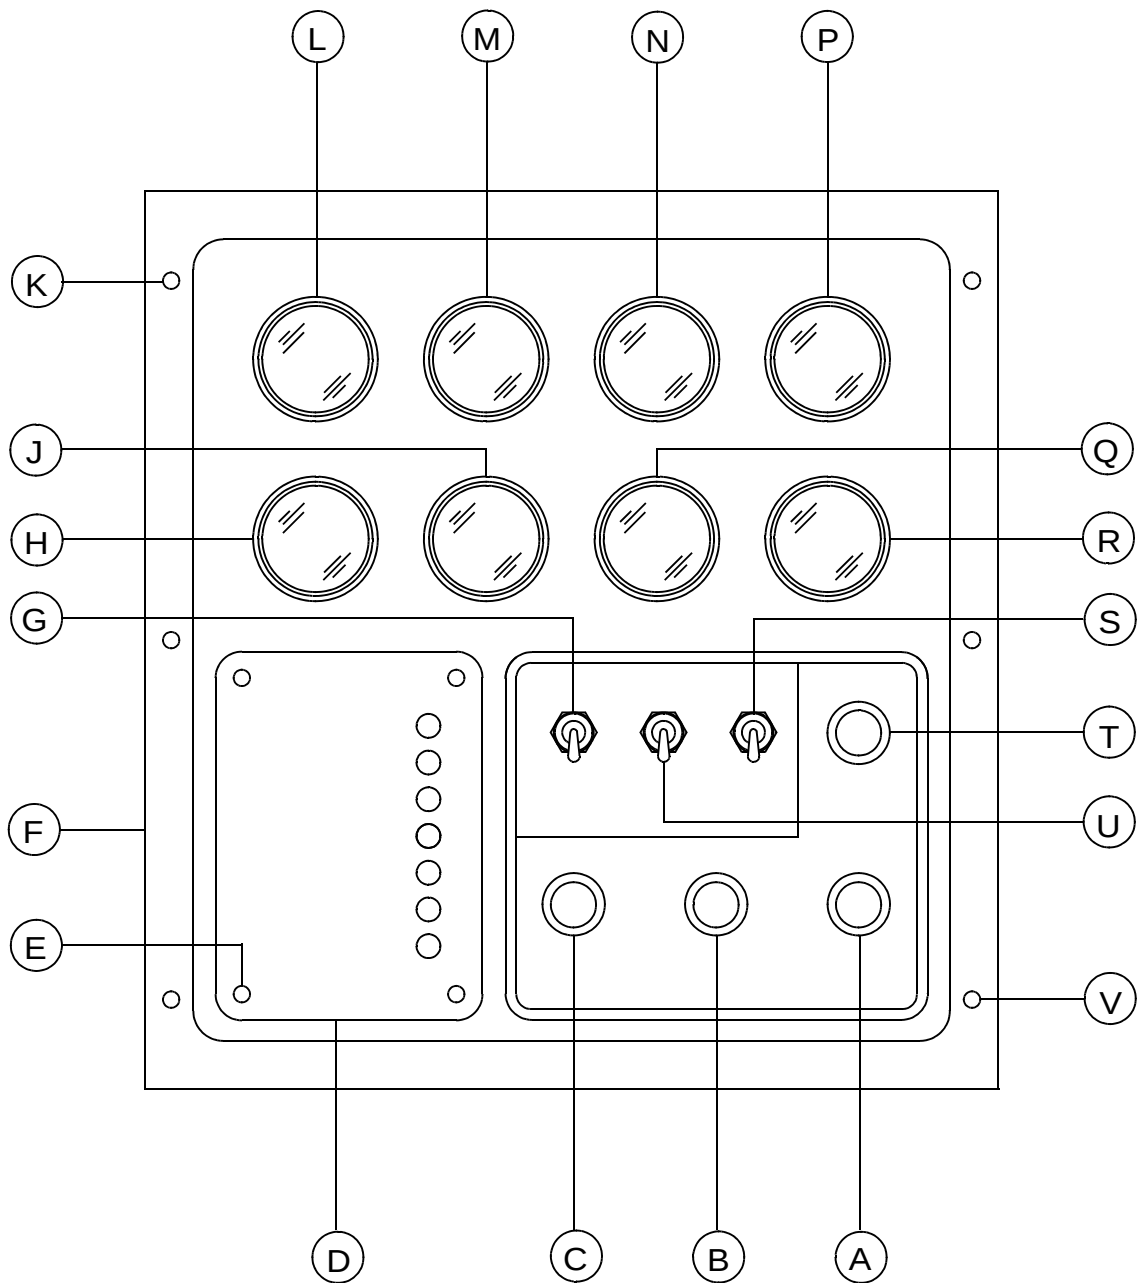


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	35255561	Switch, bypass		
B	35255553	Switch, Start		
C	35255553	Switch, Ether Injection		
D	36771434	Module, 7-Light		
E	36775484	Rivet, Plastic		
F	36842656	Panel, Instrument/Control		
G	35337435	Switch, Power, On/Off		
H	36841245	Gauge, Hourmeter		
J	35604099	Gauge, Fuel Level		
K	36844124	Stud, 1/4-Turn		
	35369180	Retainer		
	35314582	Receptacle		
L	35377878	Gauge, Discharge Pressure (HP 915)		
	36789535	Gauge, Discharge pressure (XP 1000)		
M	35604115	Gauge, Discharge Air Temperature		
	36841146	Kit, Resistor/Bulb		
N	36870590	Gauge, Engine Oil Pressure		
P	35372416	Gauge, Tachometer		
Q	35604115	Gauge, Engine Water Temperature		
R	36841153	Gauge, Voltmeter		
S		Switch, Accessory (Optional)		
T	35255561	Switch, Service Air		
U	35337435	Switch, Light		
V	35144328	Screw		
	35144492	Nut		
	36891455	Harness, Panel (NOT SHOWN)		
	36892370	Module, Low Water (NOT SHOWN)		
	36842128	Bulb, Gauge (NOT SHOWN)		

Control Panel Mount

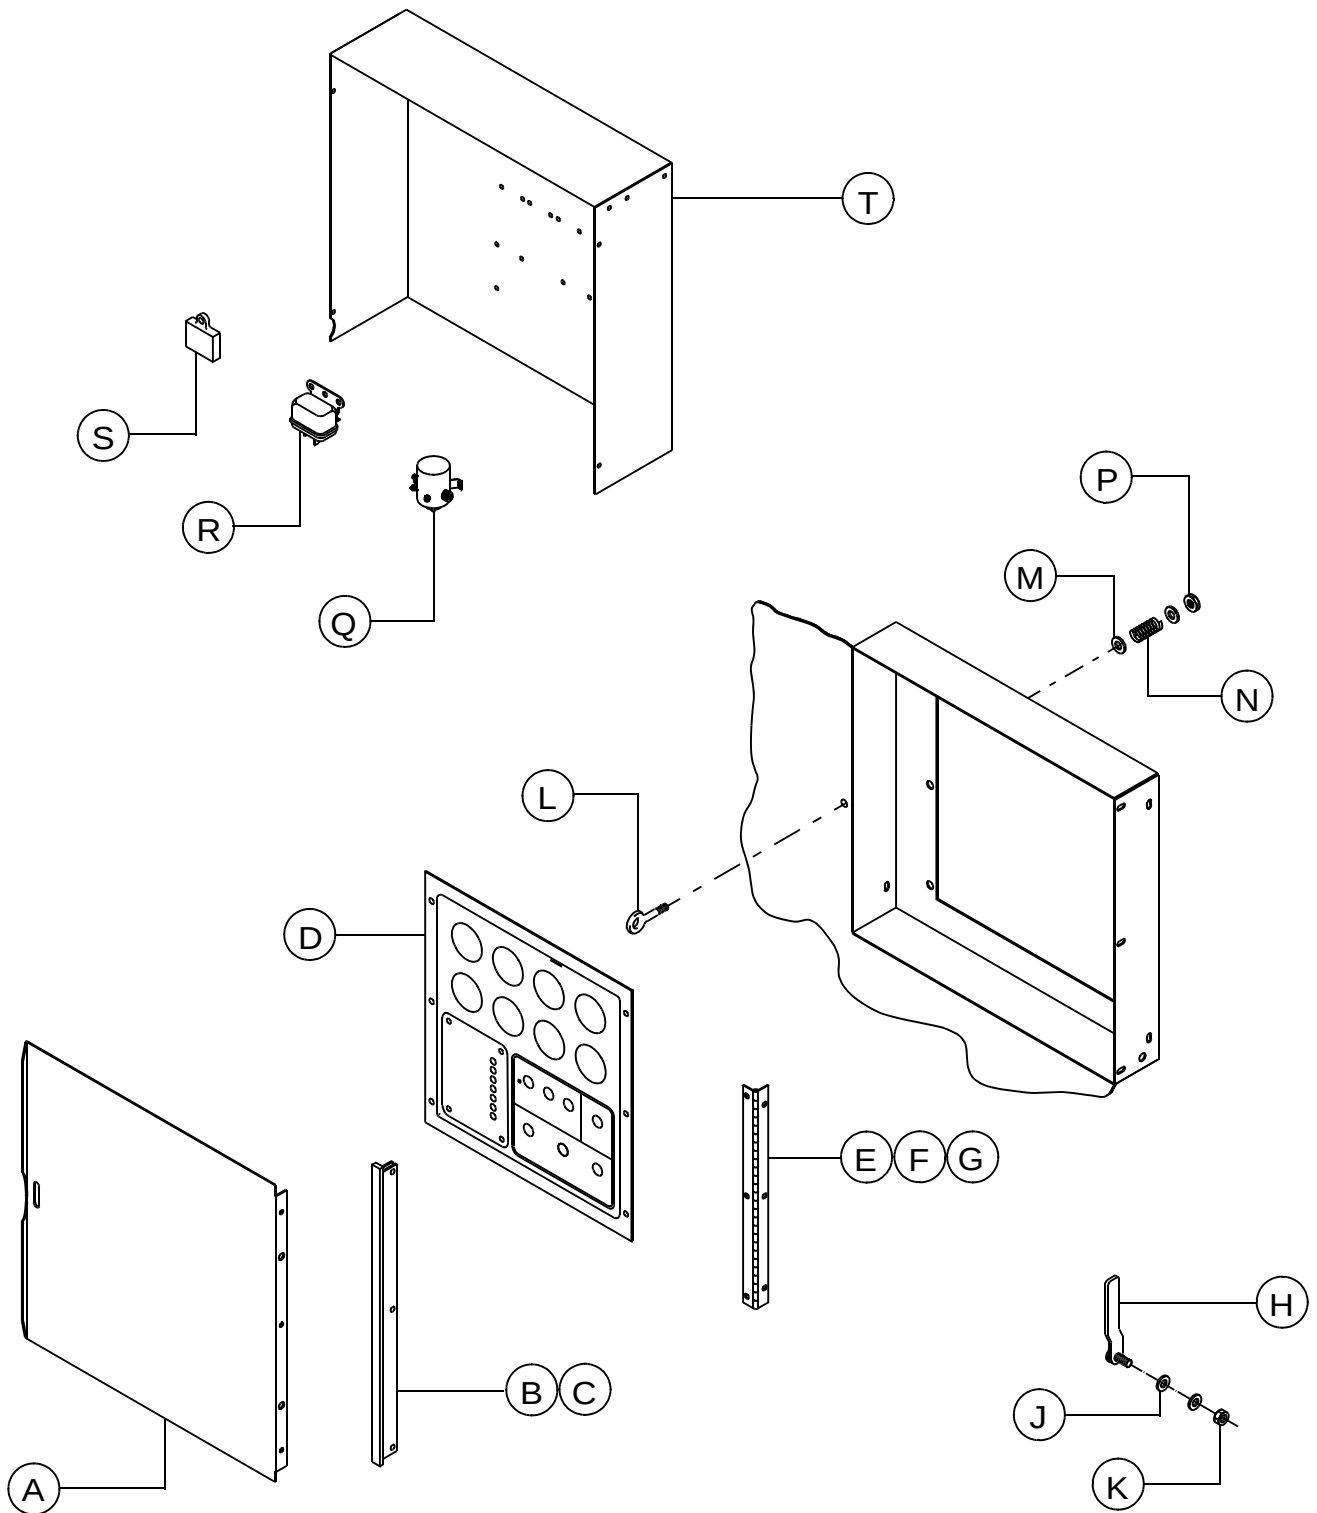


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	36845394	Door, Control Panel		
B	36845733	Hinge		
C	35356617	Rivet		
D	36842656	Panel, Instrument/Control		
E	36845725	Hinge		
F	35144328	Screw		
G	35144492	Nut		
H	35603349	Holder		
J	95935037	Washer		
K	35273366	Nut		
L	35327303	Eyebolt		
M	95923314	Washer		
N	35327311	Spring		
P	95923314	Nut		
Q	35577873	Switch, Mag.		
R	36878361	Relay, 24V		
	36892362	Relay, 24V		
S	36892370	Module, Low Water		
T	36844595	Enclosure, Instrument Panel		

Enclosure Side Panels

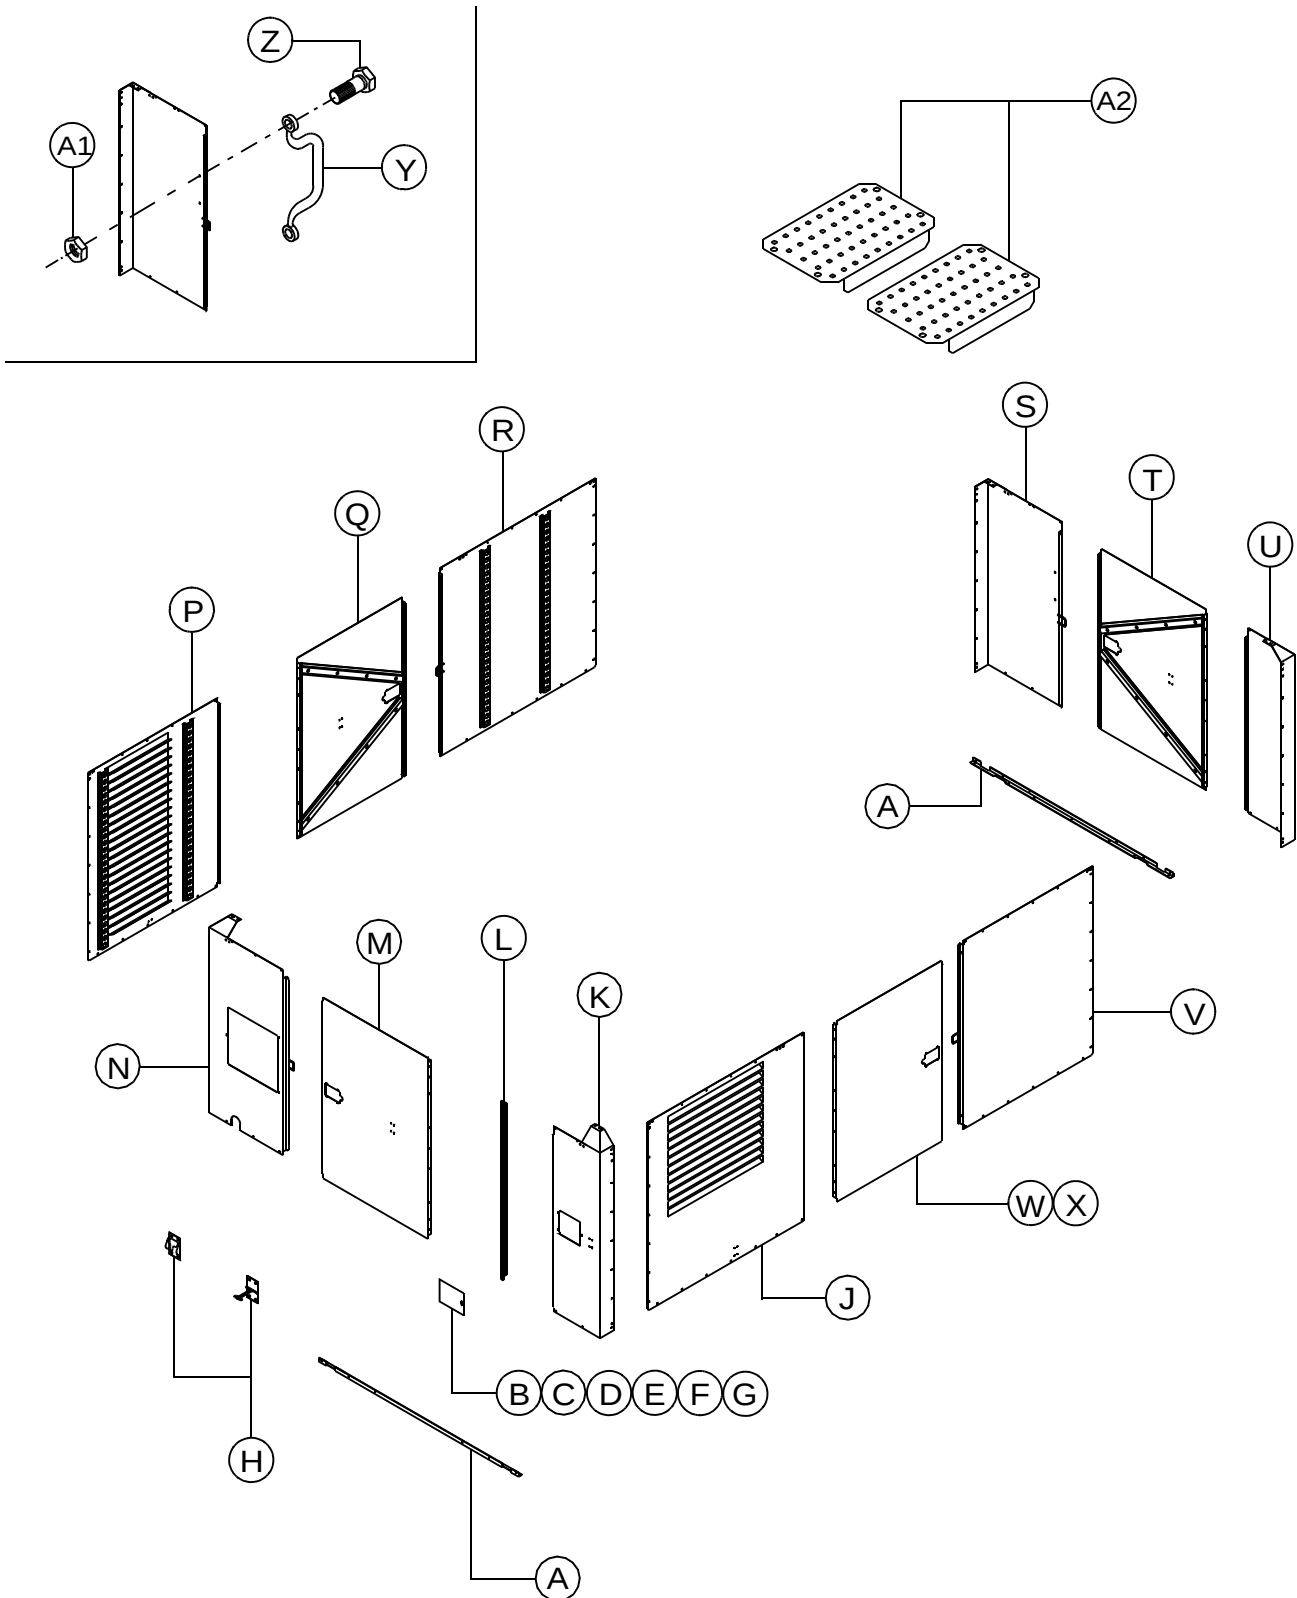


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	36894590	Bracket, Mounting		
B	36894467	Door, Fuel Filler		
C	36501500	Hinge		
D	35327303	Eyebolt		
E	35327311	Spring		
F	95934998	Washer		
G	95923314	Nut		
H	36849925	Latch, Door		
J	36894434	Panel, Front, LH		
K	36894459	Panel, Front, LH		
L	36740421	Hinge		
M	36894400	Door		
N	36894475	Panel, Front Side, RH		
P	36894442	Panel, Front, RH		
Q	36894418	Door		
R	36894368	Panel, Rear, RH		
S	36894384	Panel, Rear, RH		
T	36894400	Door		
U	36894376	Panel, Rear, LH		
V	36894350	Panel, Rear Side, LH		
W	36894426	Door		
X	36793602	Latch, Door		
Y	35130707	Hand Hold		
Z	35374834	Screw		
A1	36769743	Nut		
A2	36897619	Step, Rear		

Enclosure Top Corner Panels

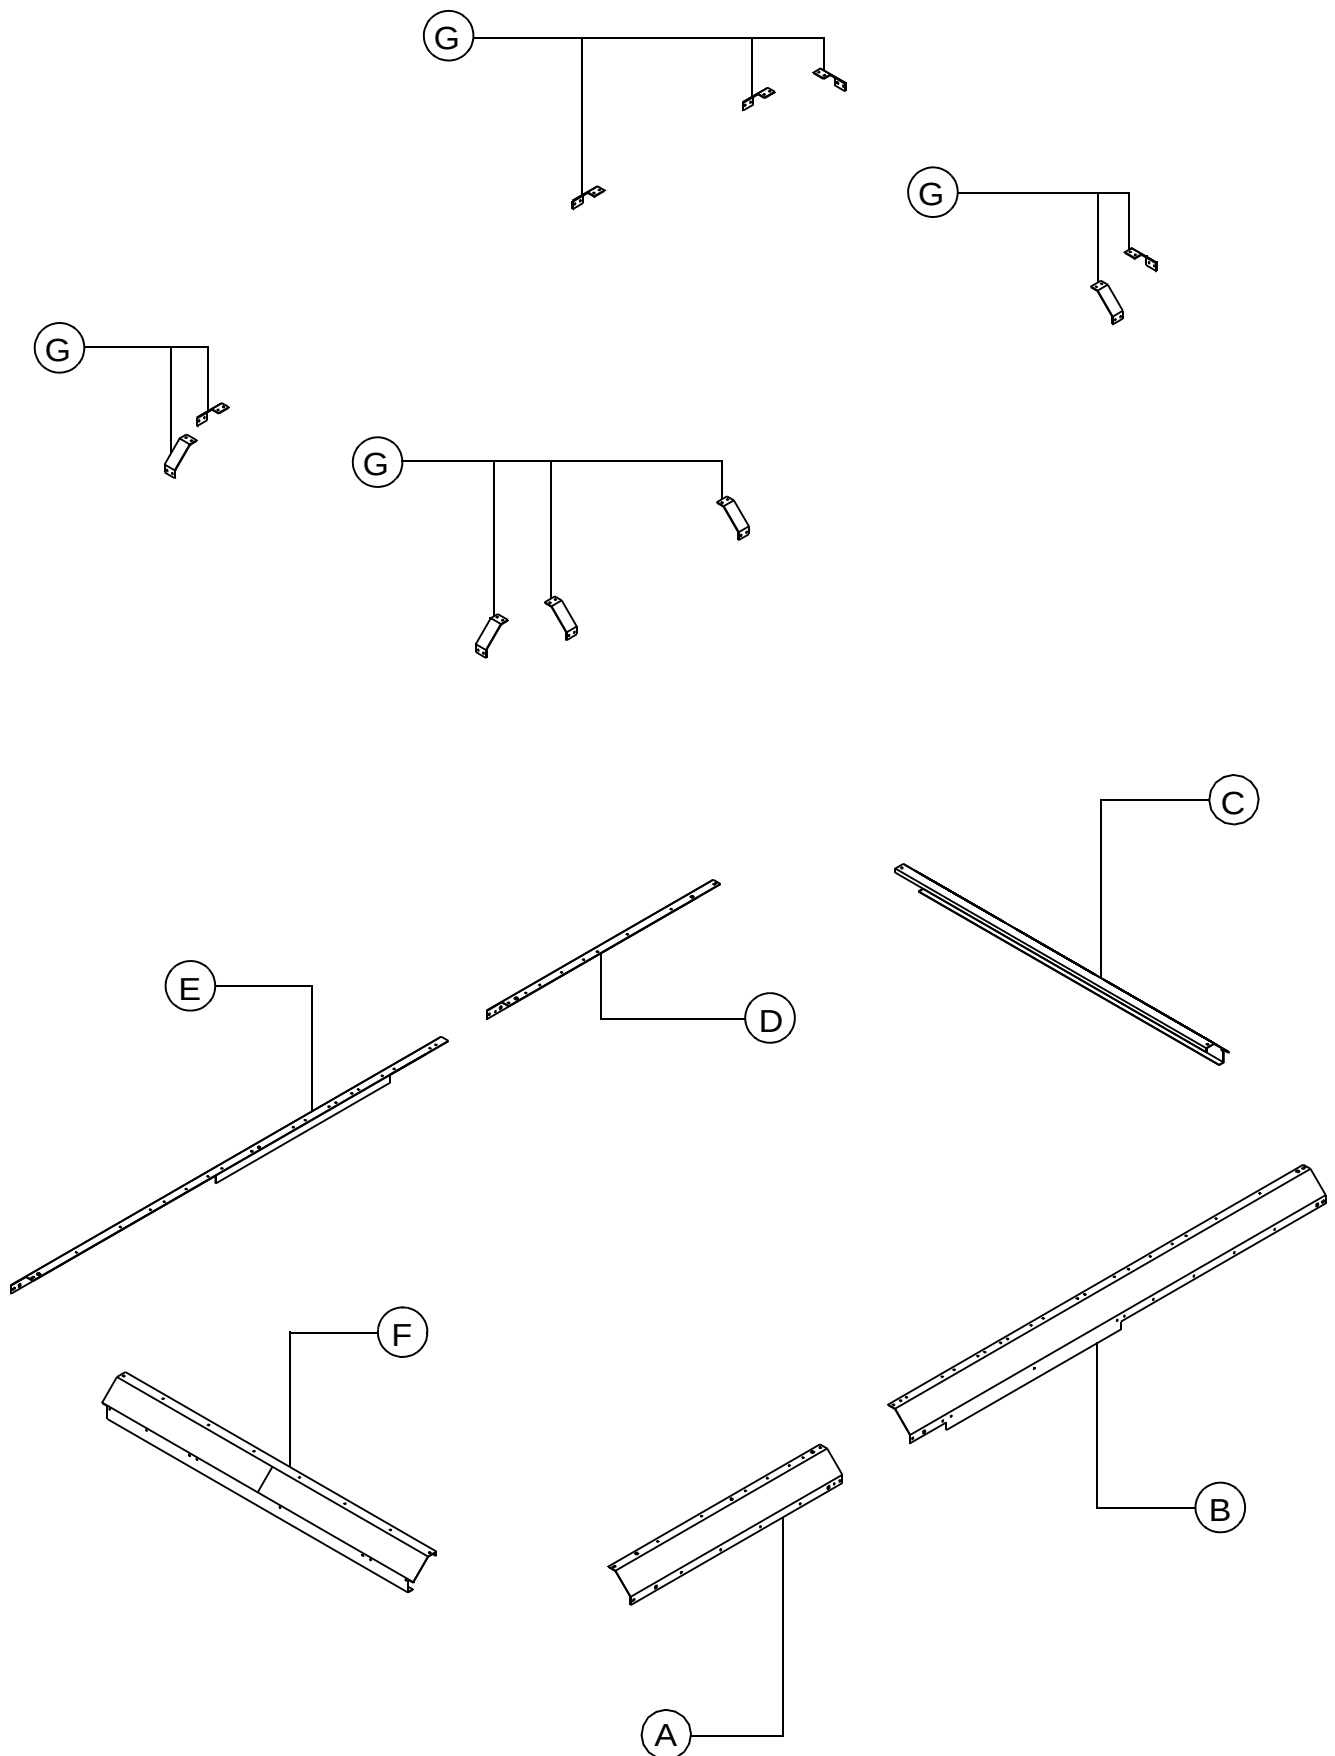


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	36894533	Rail, Top, LH		
B	36894525	Rail, Long, LH		
C	36894392	Rail, Top, Rear		
D	36894533	Rail, Rear, RH		
E	36894525	Rail, Long, RH		
F	36894483	Rail, Top, Front		
G	36755742	Strip, Connector		

Enclosure Roof and Baffles

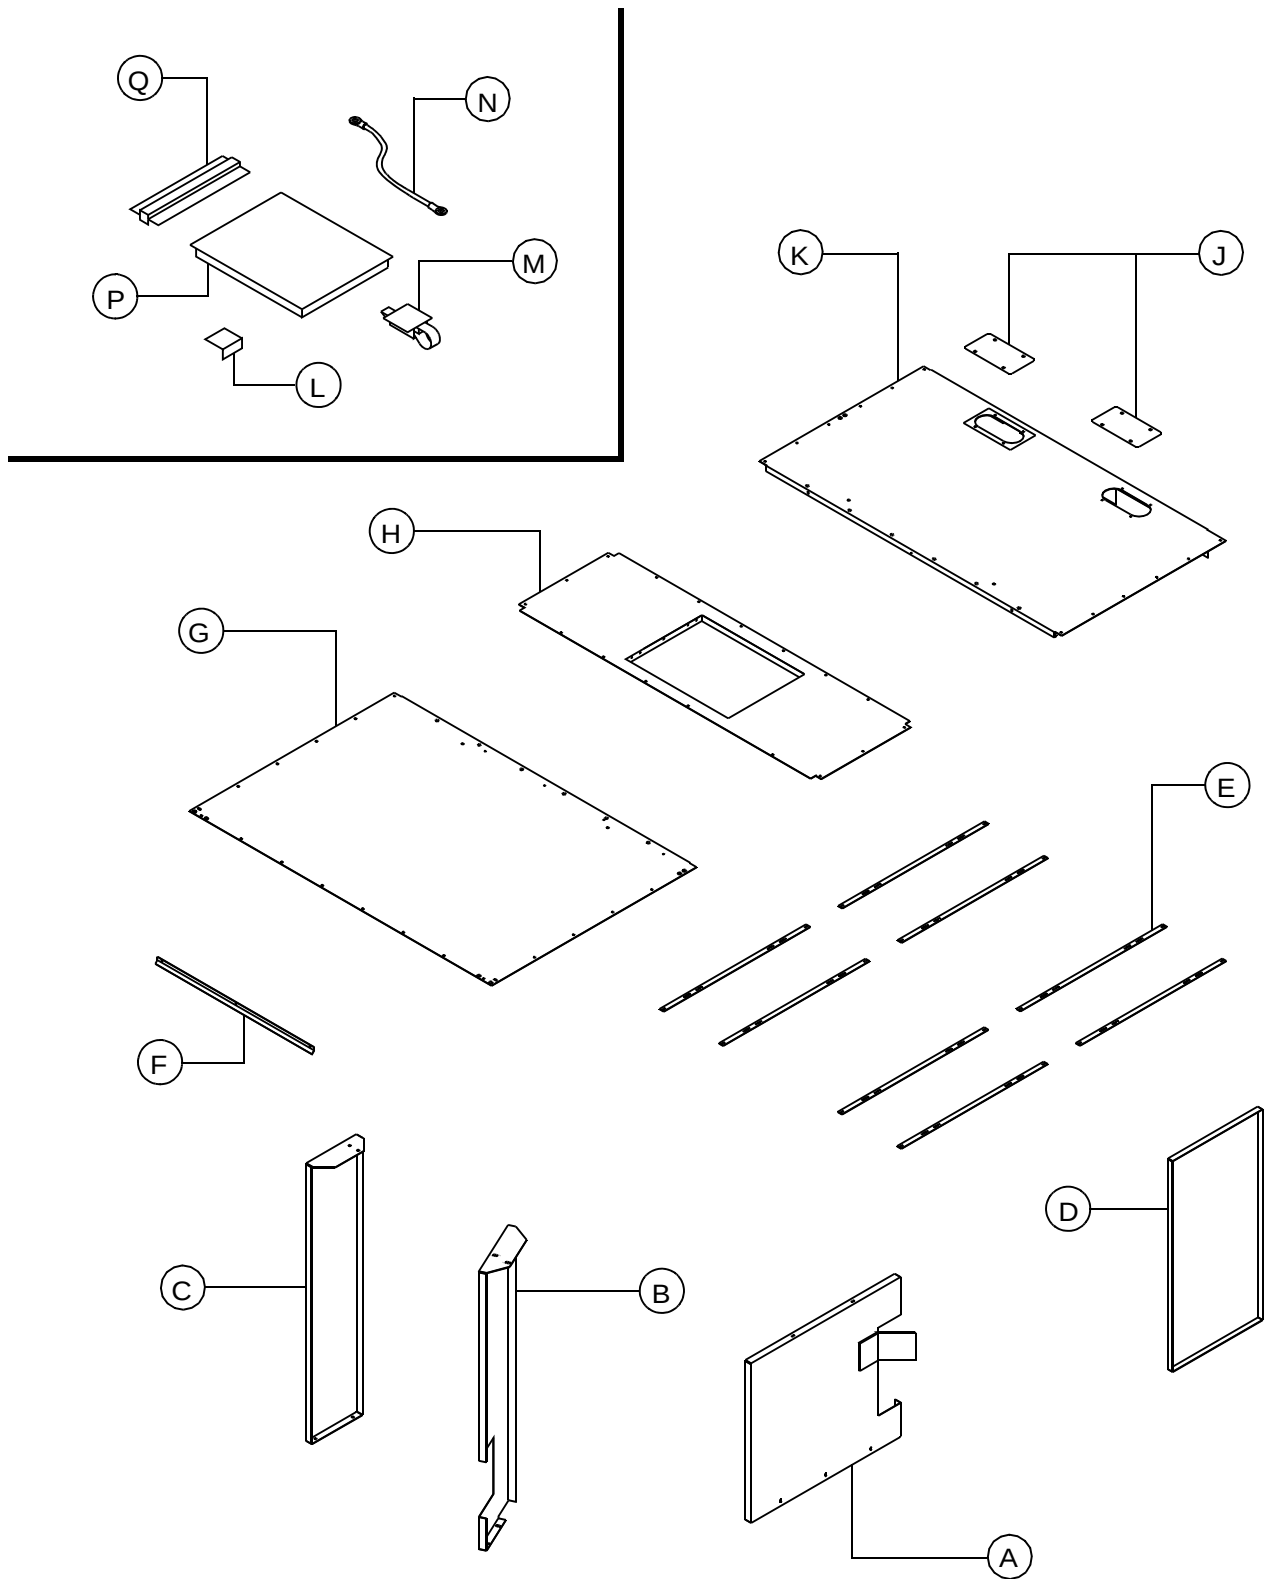


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	36894558	Baffle, Intake, LH		
B	36894574	Baffle, Intake, Inside RH		
C	36894566	Baffle, Intake, RH		
D	36894541	Baffle, Exhaust		
E	36883421	Retainer, Roof		
F	36894582	Gutter		
G	36894491	Panel, Roof, Front		
H	36894509	Panel, Roof, Middle		
J	36879104	Cover, Cooler		
K	36894517	Panel, Roof, Rear		
L	35305416	Plate, Strike		
M	35131051	Latch, Door		
N	36771186	Cable		
P	36798635	Door, Roof		
Q	36756773	Hinge		

Enclosure Belly Pans

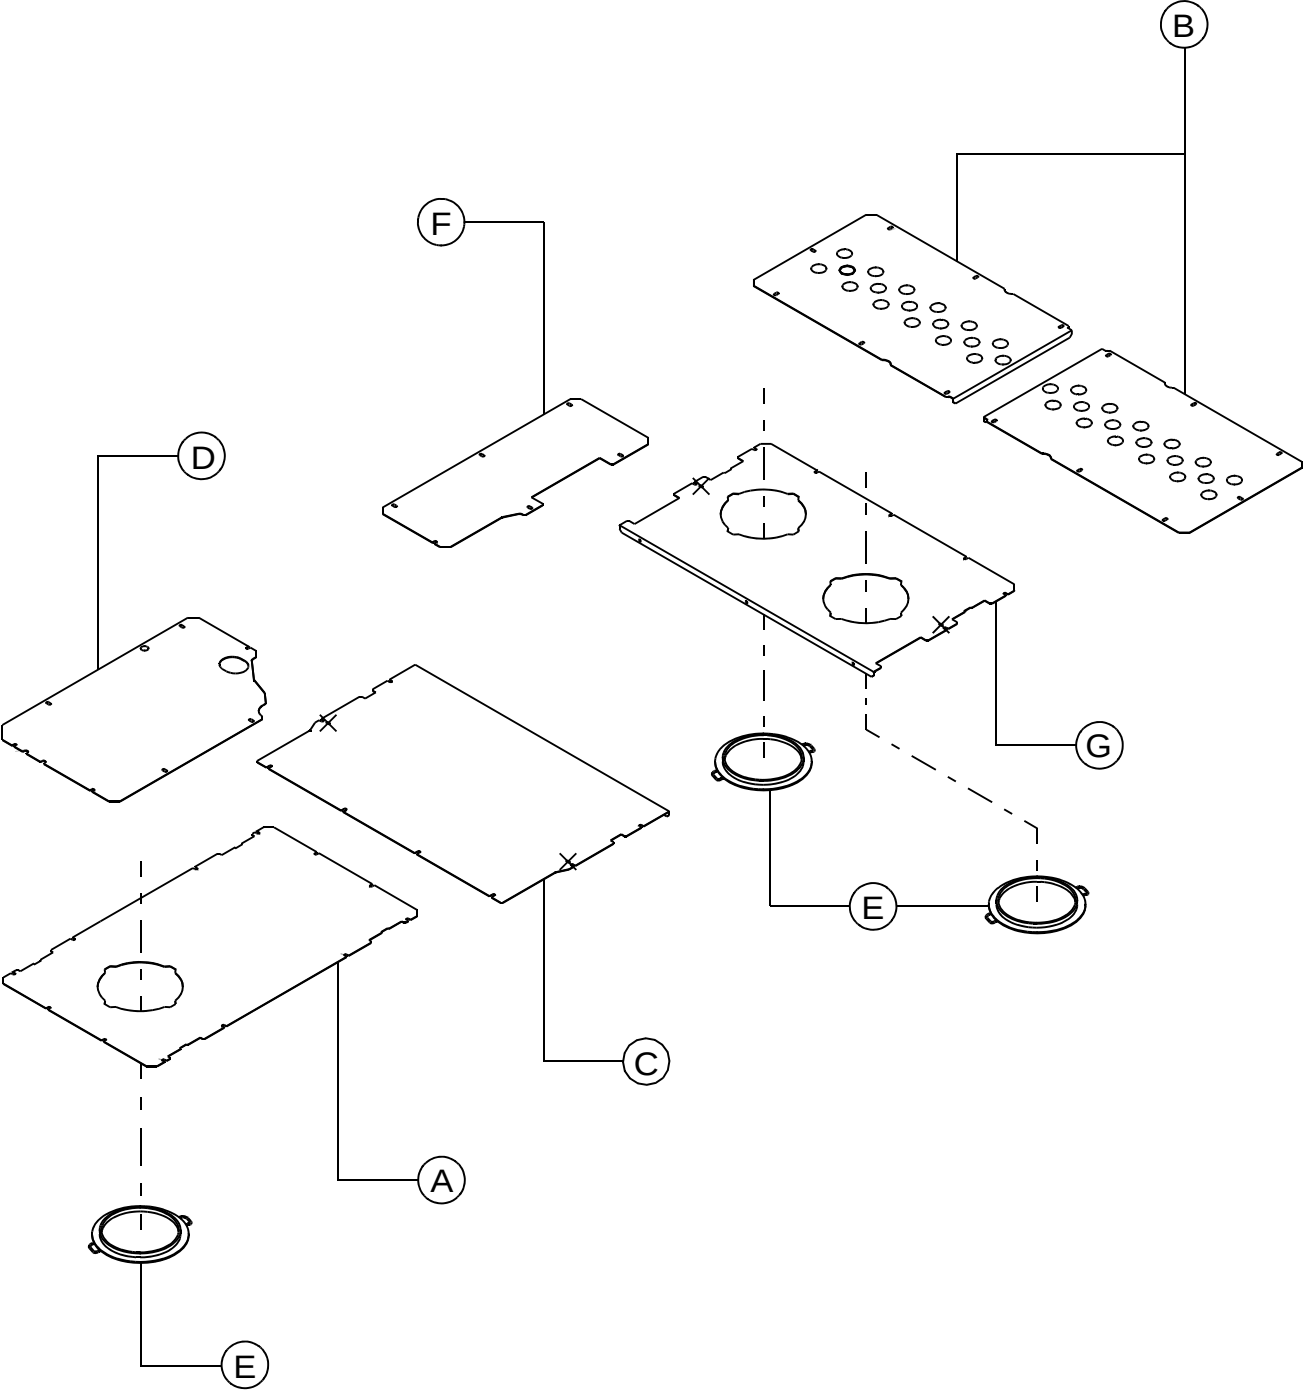


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	36895555	Pan, A/E Belly, Front		
B	36895621	Pan, Exhaust Belly		
C	36895597	Pan, Engine Belly, Front		
D	36895571	Pan, RH Belly, Front		
E	36880623	Cover, Flex		
F	36895589	Pan, RH Belly, Middle		
G	36895605	Pan, Engine Belly, Rear		

Acoustic Foam Roof and Sides

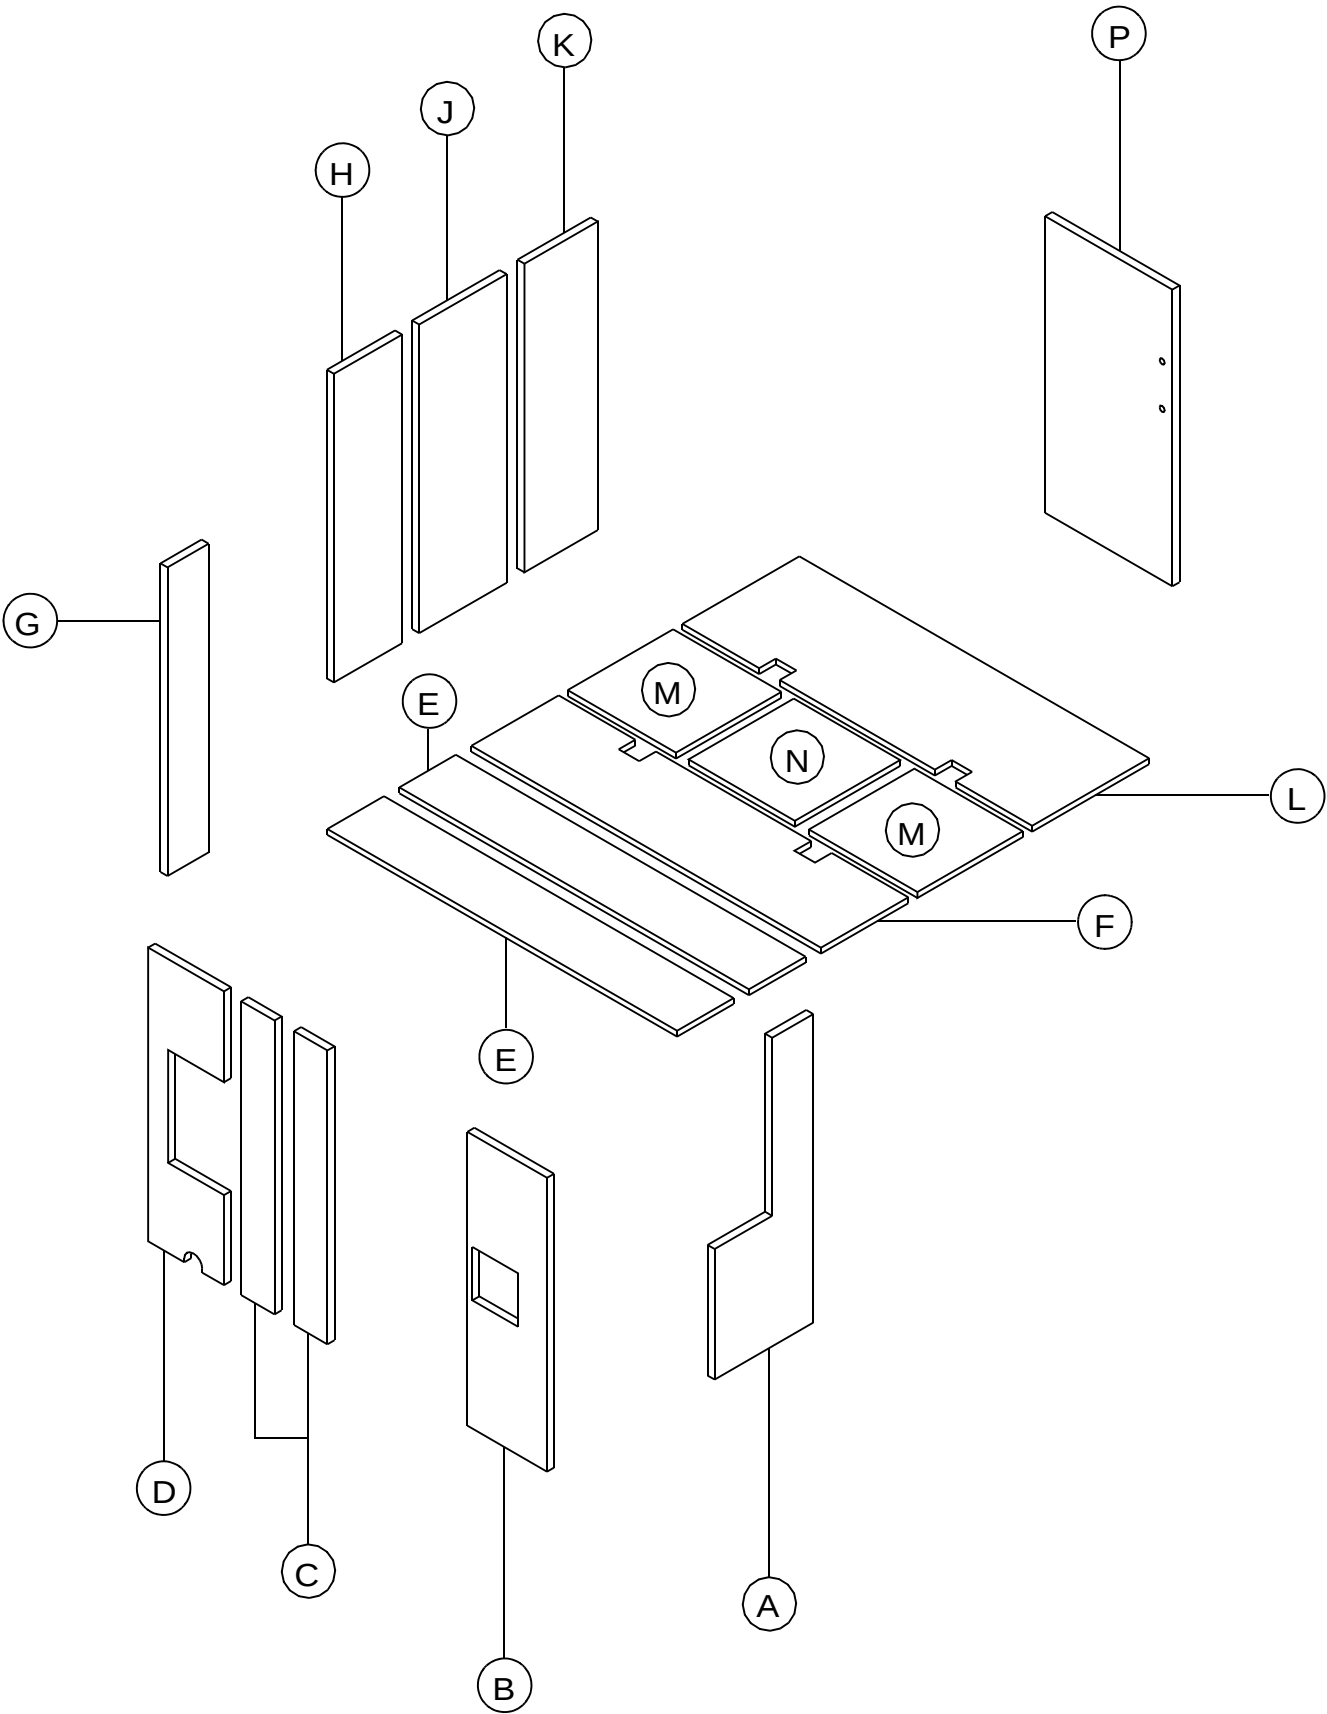


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	36894947	Panel, Front, LH		
B	36894871	Panel, Front Endcap, LH		
C	36894889	Panel, Front Endcap, RH		
D	36894897	Panel, Front Endcap, RH		
E	36894954	Panel, Roof, Front		
F	36894962	Panel, Roof, Middle		
G	36894905	Panel, Front, RH		
H	36894939	Panel, Side, RH		
J	36894921	Panel, Middle, RH		
K	36894913	Panel, Rear, RH		
L	36894988	Panel, Roof, Rear		
M	36894970	Panel, Roof, LH & RH		
N	36846822	Panel, Roof Door		
P	36894996	Panel, Rear Endcap		

Acoustic Foam Doors and Baffles


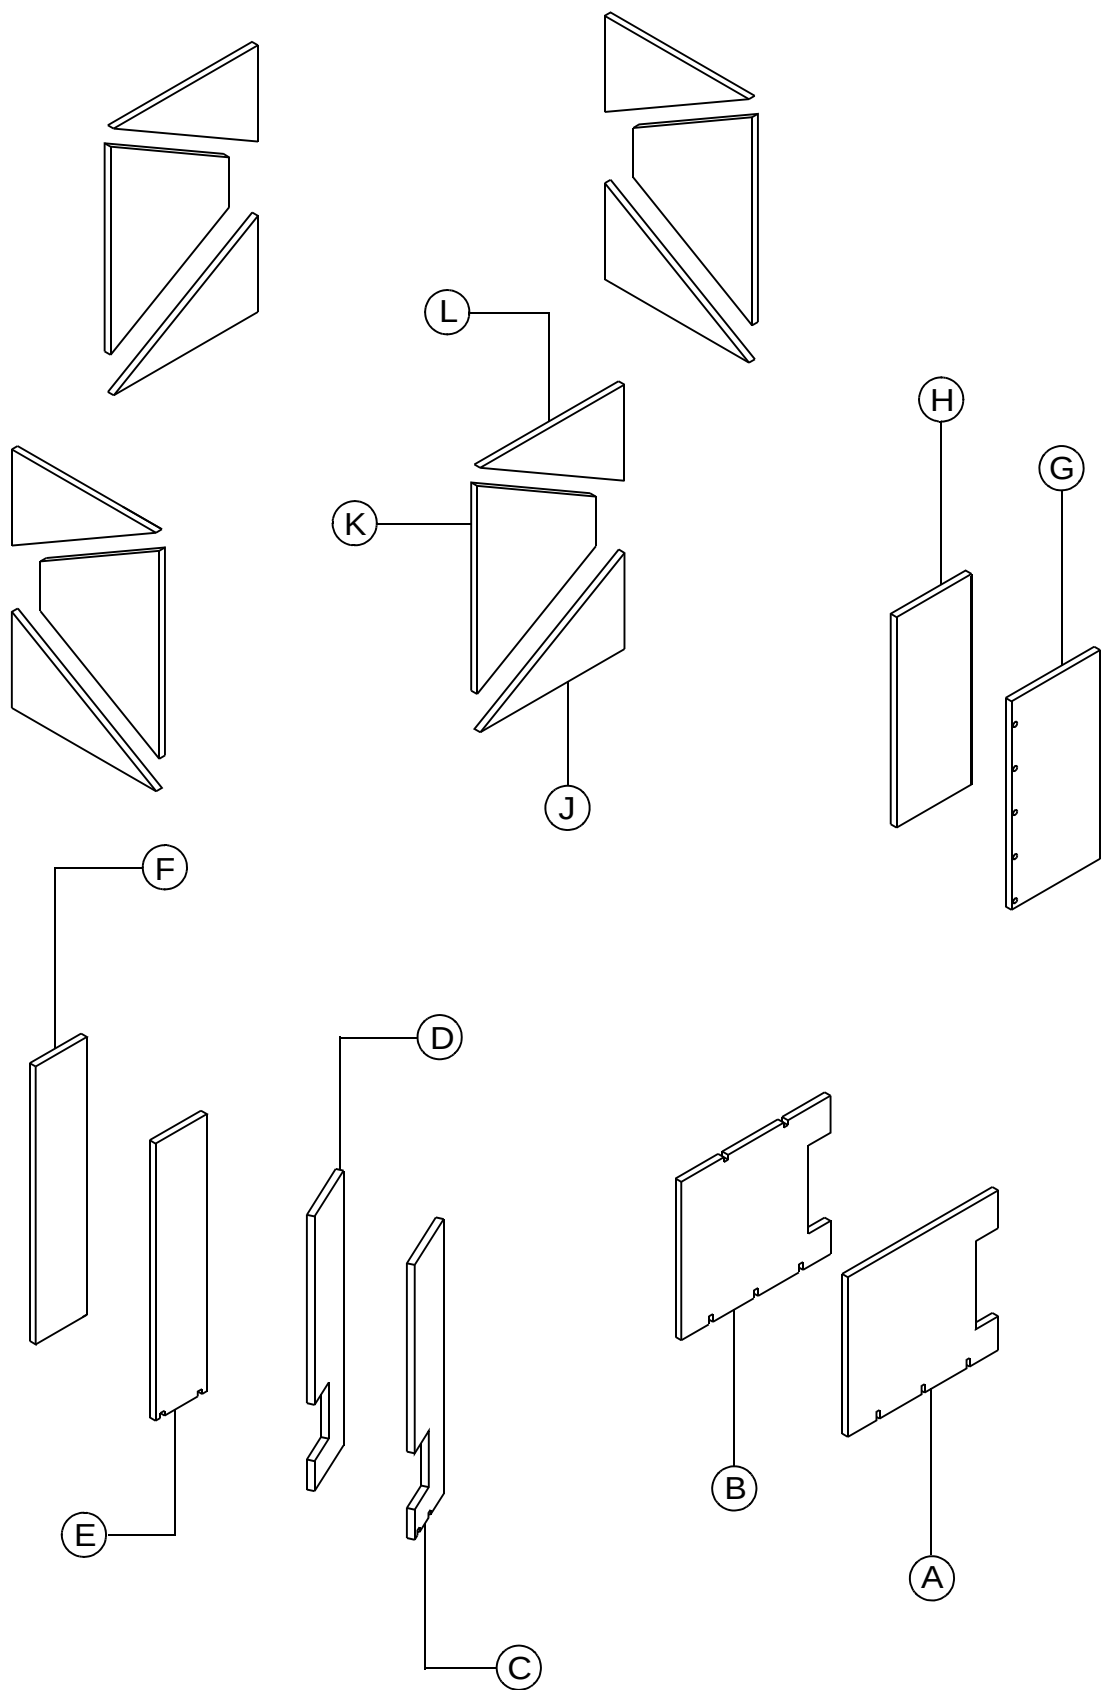


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	36895035	Panel, Baffle, Outside		
B	36895027	Panel, Baffle, Inside		
C	36895019	Panel, Intake, LH		
D	36895001	Panel, Intake, RH		
E	36895050	Panel, Intake Baffle, RH		
F	36895043	Panel, Intake Baffle, RH		
G	36894855	Panel, Exhaust Baffle, LH		
H	36894863	Panel, Exhaust Baffle, RH		
J	36854040	Panel, Door, Bottom		
K	36854065	Panel, Door, Middle		
L	36854024	Panel, Door, Top		



Decal Location Side Branding

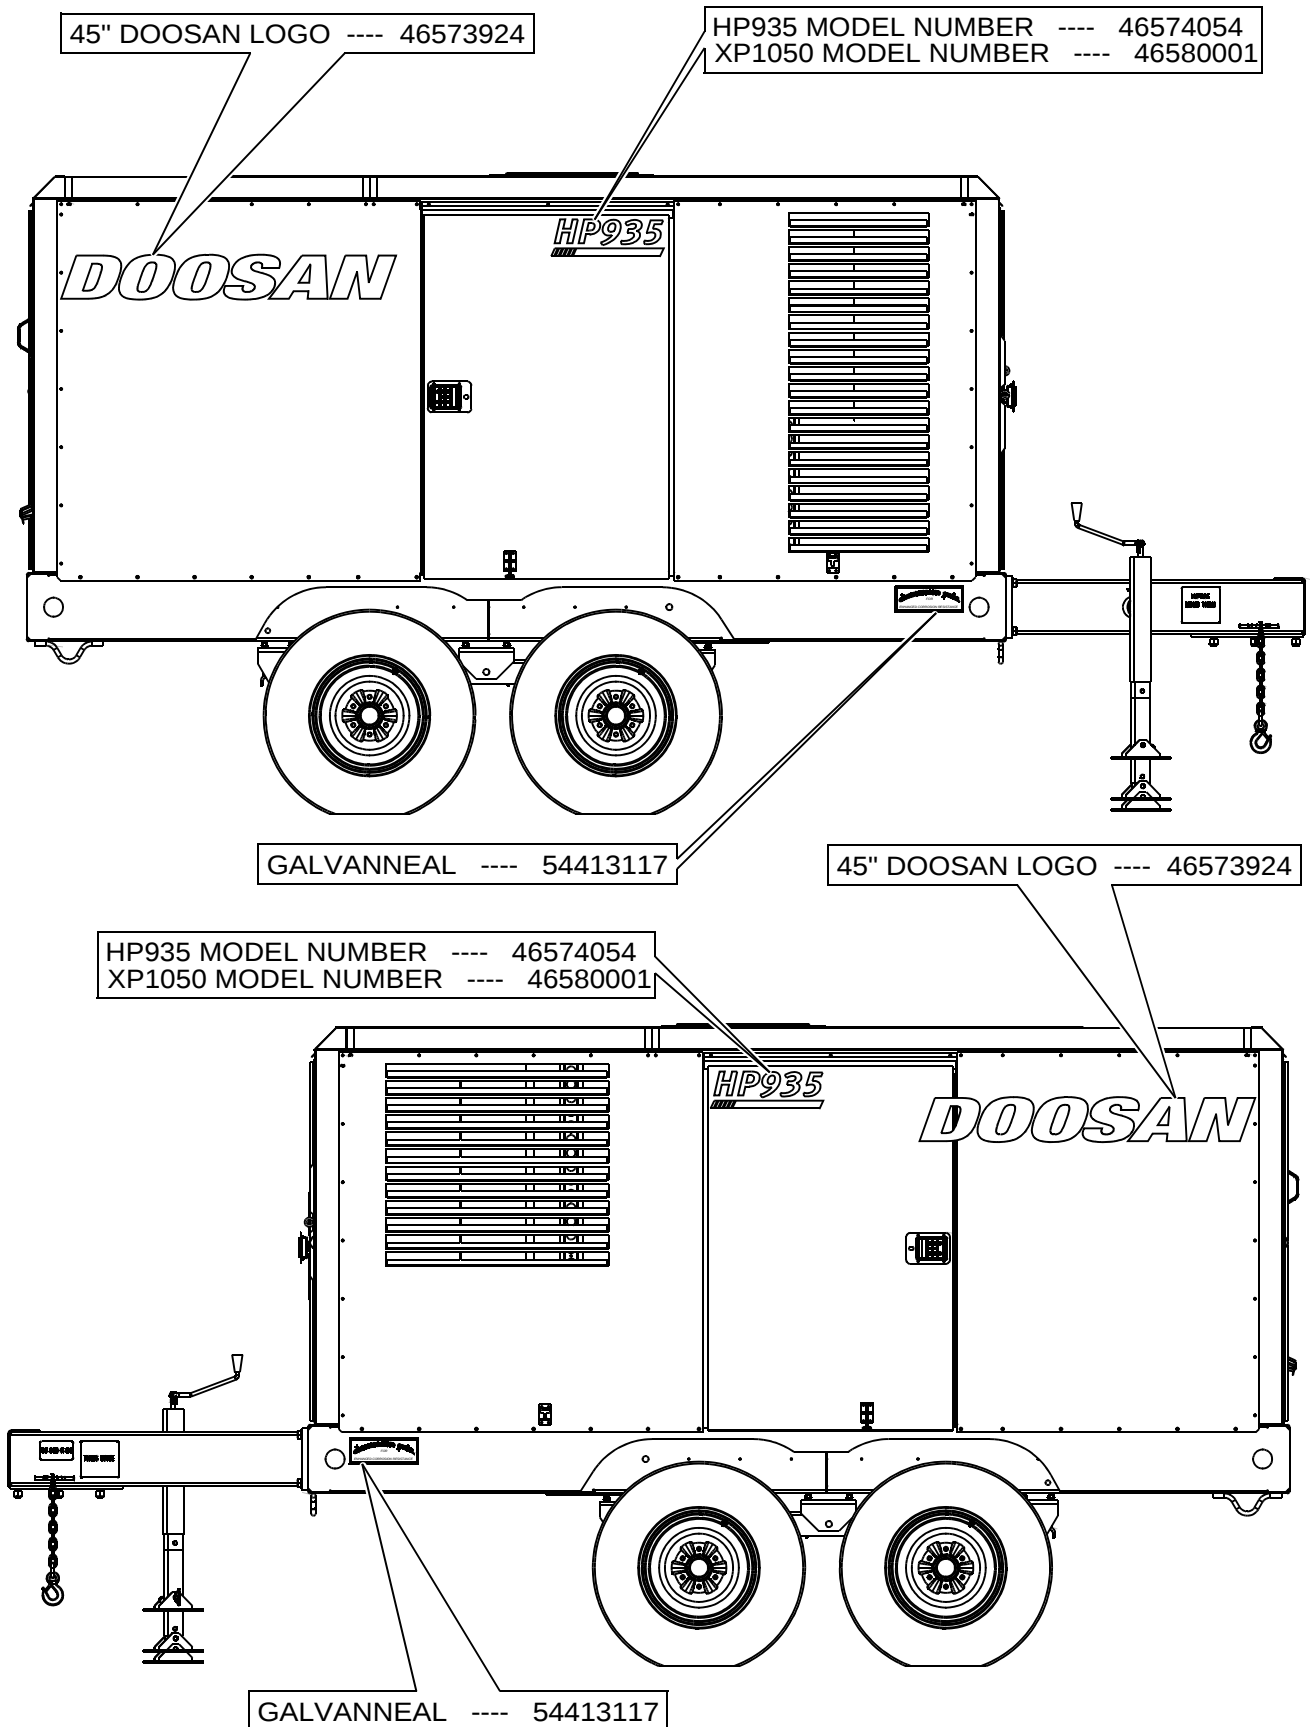





Decal Location Endcap Branding

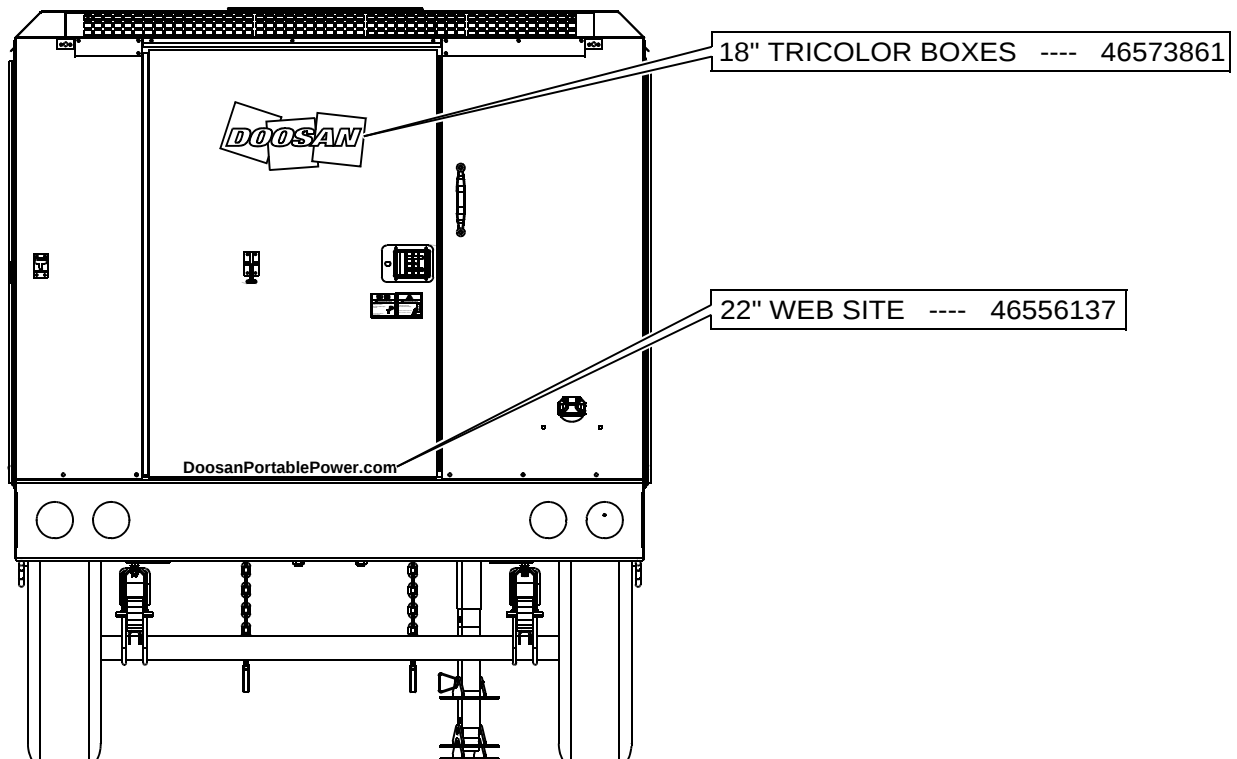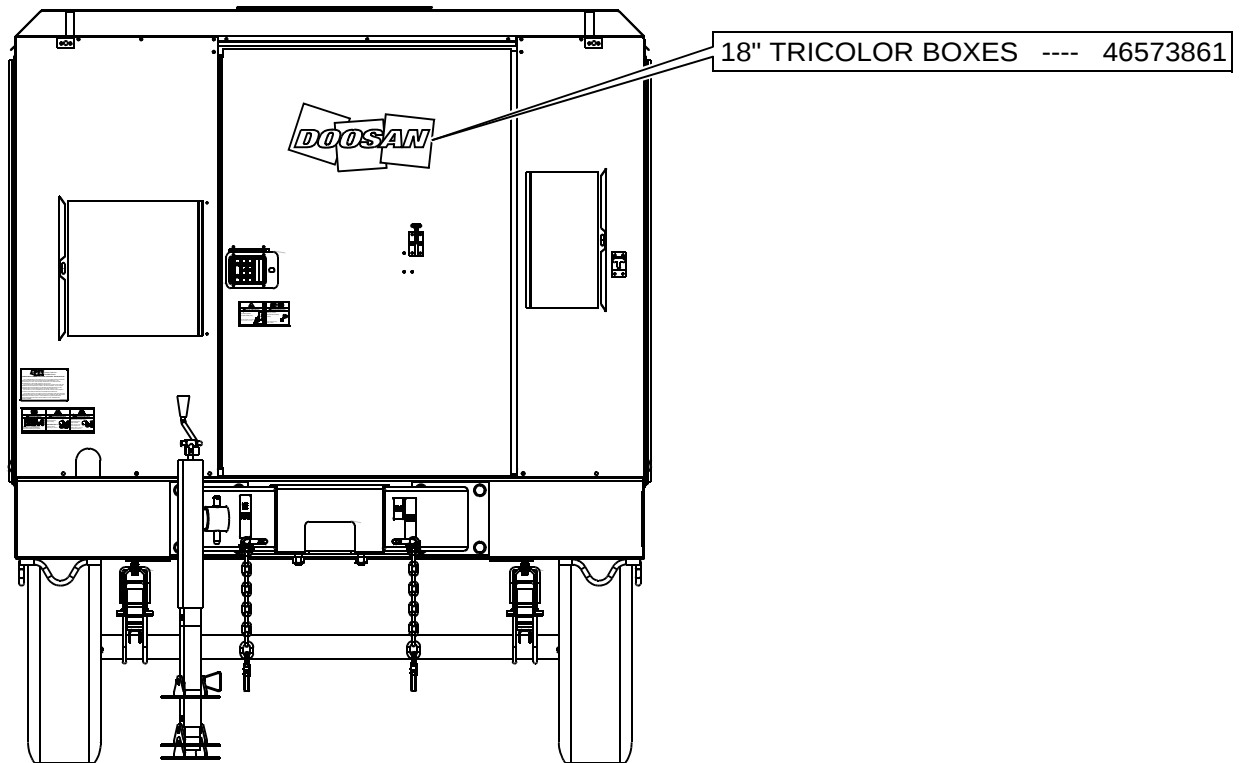

Decal Location Street Side

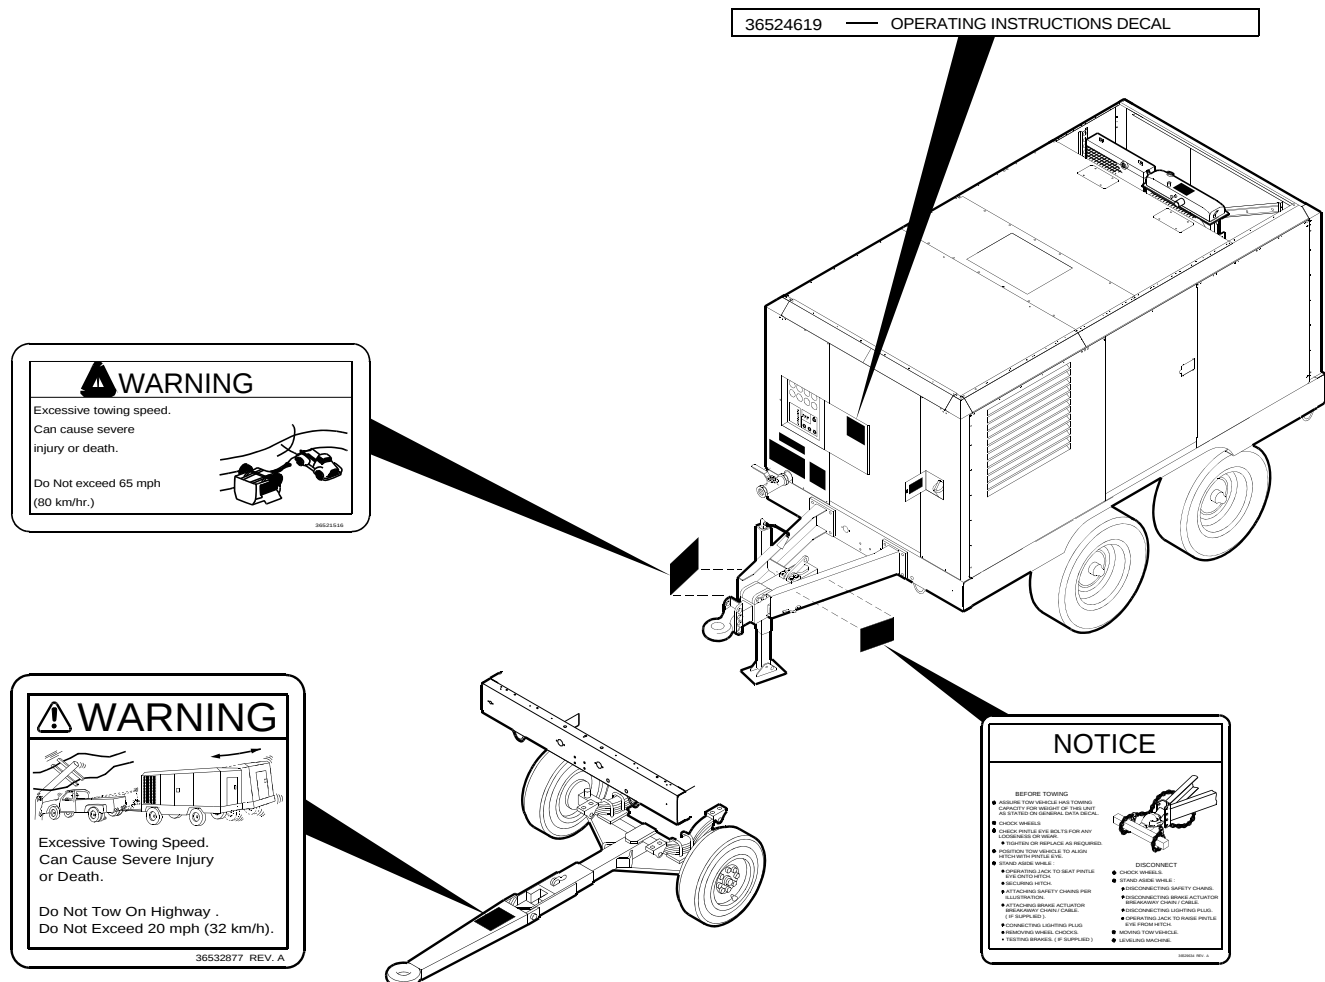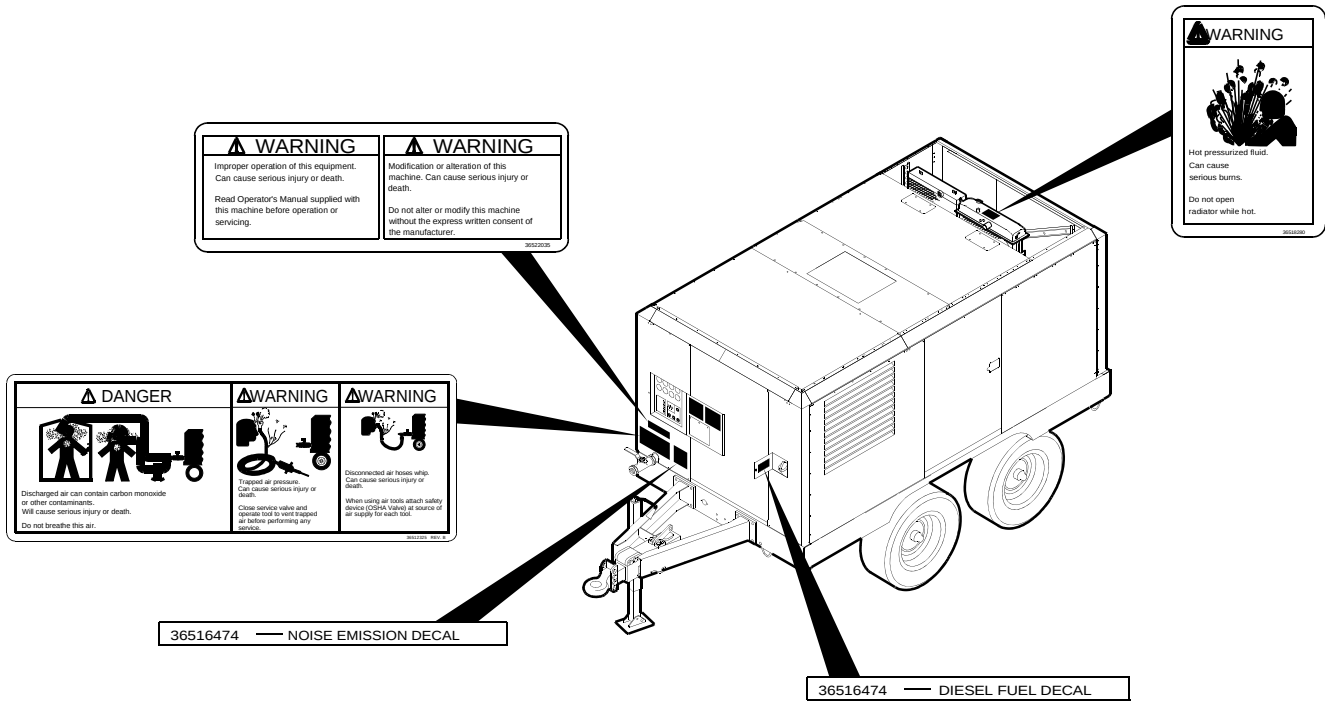

Decal Location Interior

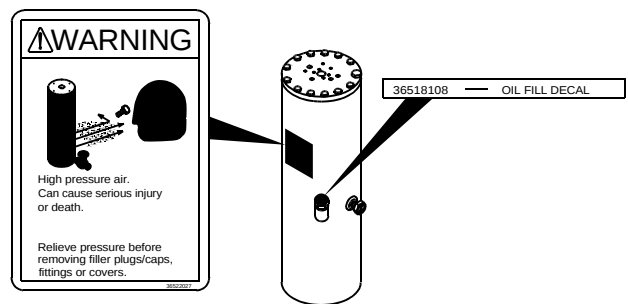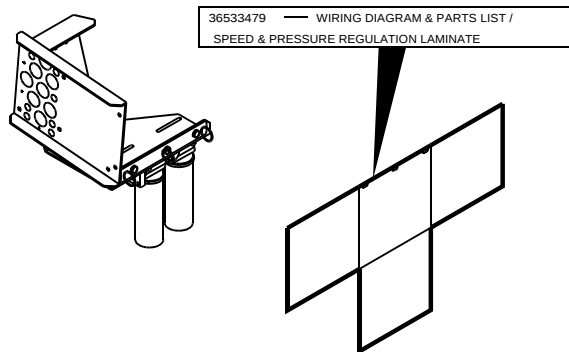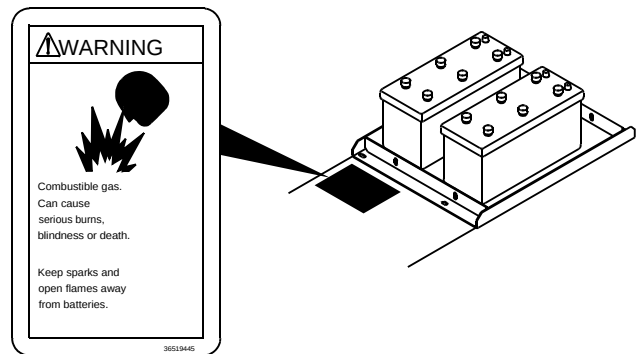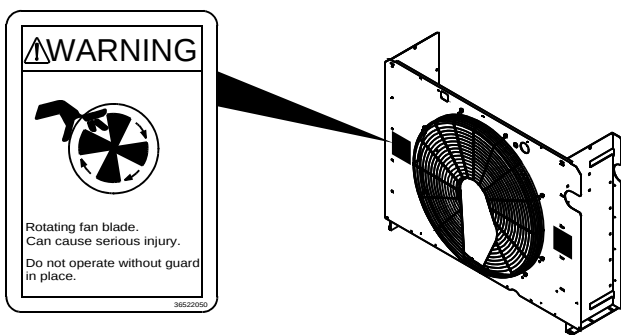


36518108 — OIL FILL DECAL




OPTION PARTS

Aftercooler and Water Separator

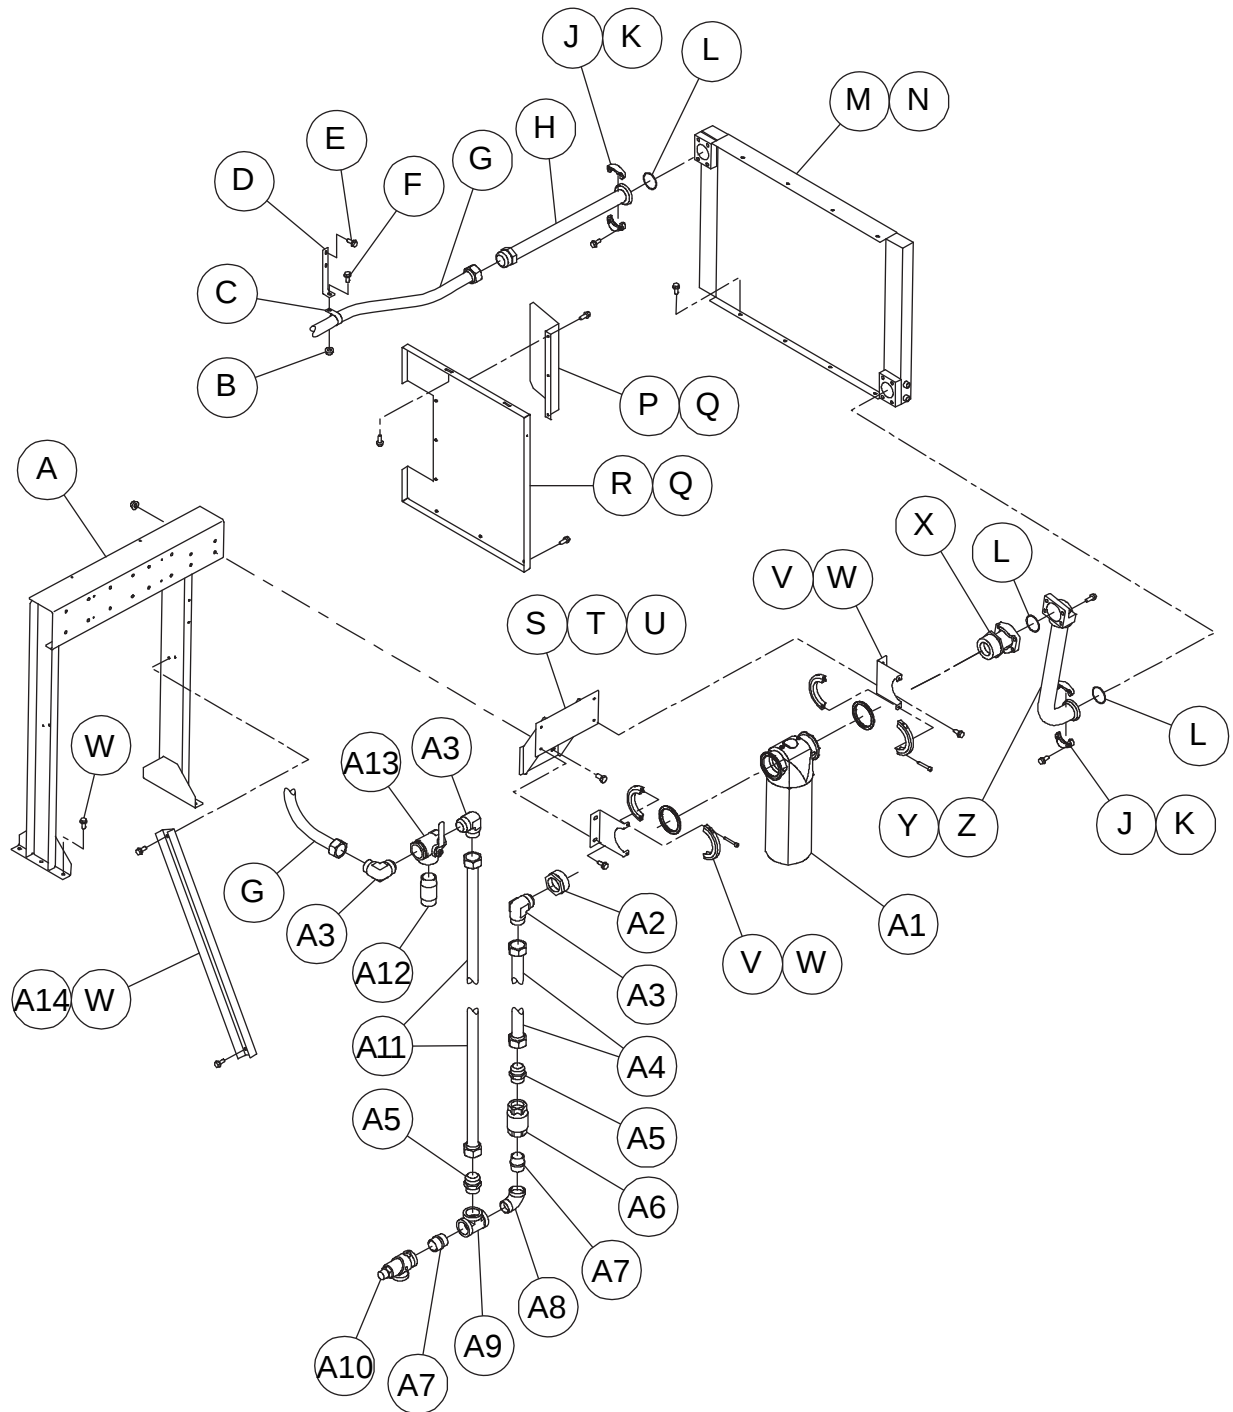


ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	36897528	Support, Filter	1	
B	36879195	Nut, M10	1	
C	35119718	Clamp, Support, 2.00	1	
D	36764736	Bracket, Support	1	
E	36797652	Screw, Tapping, M06 - 100 x 12	1	
F	96702279	Screw, Hex, M10 - 150 x 20	1	
G	35356443	Hose Assy, -32 x 58.00	1	
H	36895928	Tube, Aftercooler Inlet	1	
J	36866010	Flange, Split	4	
K	95920708	Screw, Hex, 500-13 x 150	8	
L	36866028	O-Ring	3	
M	36895498	Aftercooler	1	
N	92368687	Screw, Tapping, M6-100 x 14	4	
P	36896611	Baffle, Intake, Street Side	1	
Q	36797652	Screw, Tapping, M6-100 x 12	8	
R	36897882	Baffle, intake, Street Side	1	
S	23334063	Bracket, Water Separator	1	
T	96702279	Screw, Hex, M10-150 x 20	4	
U	36879195	Nut, M10	4	
V	23181605	Kit, Mounting w/Bracket	2	
W	35279025	Screw, Hex, M8-125 x 20	14	
X	36920908	Adapter, 3.00 NPT	1	
Y	36895910	Tube, Aftercooler Outlet	1	
Z	95940920	Screw, Hex, 500-13 x 500	4	
A1	23178924	Separator, Moisture	1	
A2	95037354	Bushing, Reducing, 3.00 x 2.00	1	
A3	36786127	Elbow, 90, 200 NPT x -32	3	
A4	35141423	Hose Assy, 32 x 64.50	1	
A5	35335124	Connector, male, -32 x 2.00 NPT	2	
A6	36920221	Valve, Check, Ball Cone, 2.00	1	
A7	95953790	Nipple, 2.00 x 2.50	2	
A8	95944674	Elbow, 90, NPT 200	1	
A9	95944682	Tee, NPT 200	1	
A10	36920130	Valve, Check, Minimum Pressure	1	
A11	36897502	Tube, Service Aftercooler	1	
A12	95953816	Nipple, 2.00 x 4.50	1	
A13	36856045	Valve, 3-Way	1	
A14	36897536	Brace, Filter Support	1	

Drains - Aftercooler

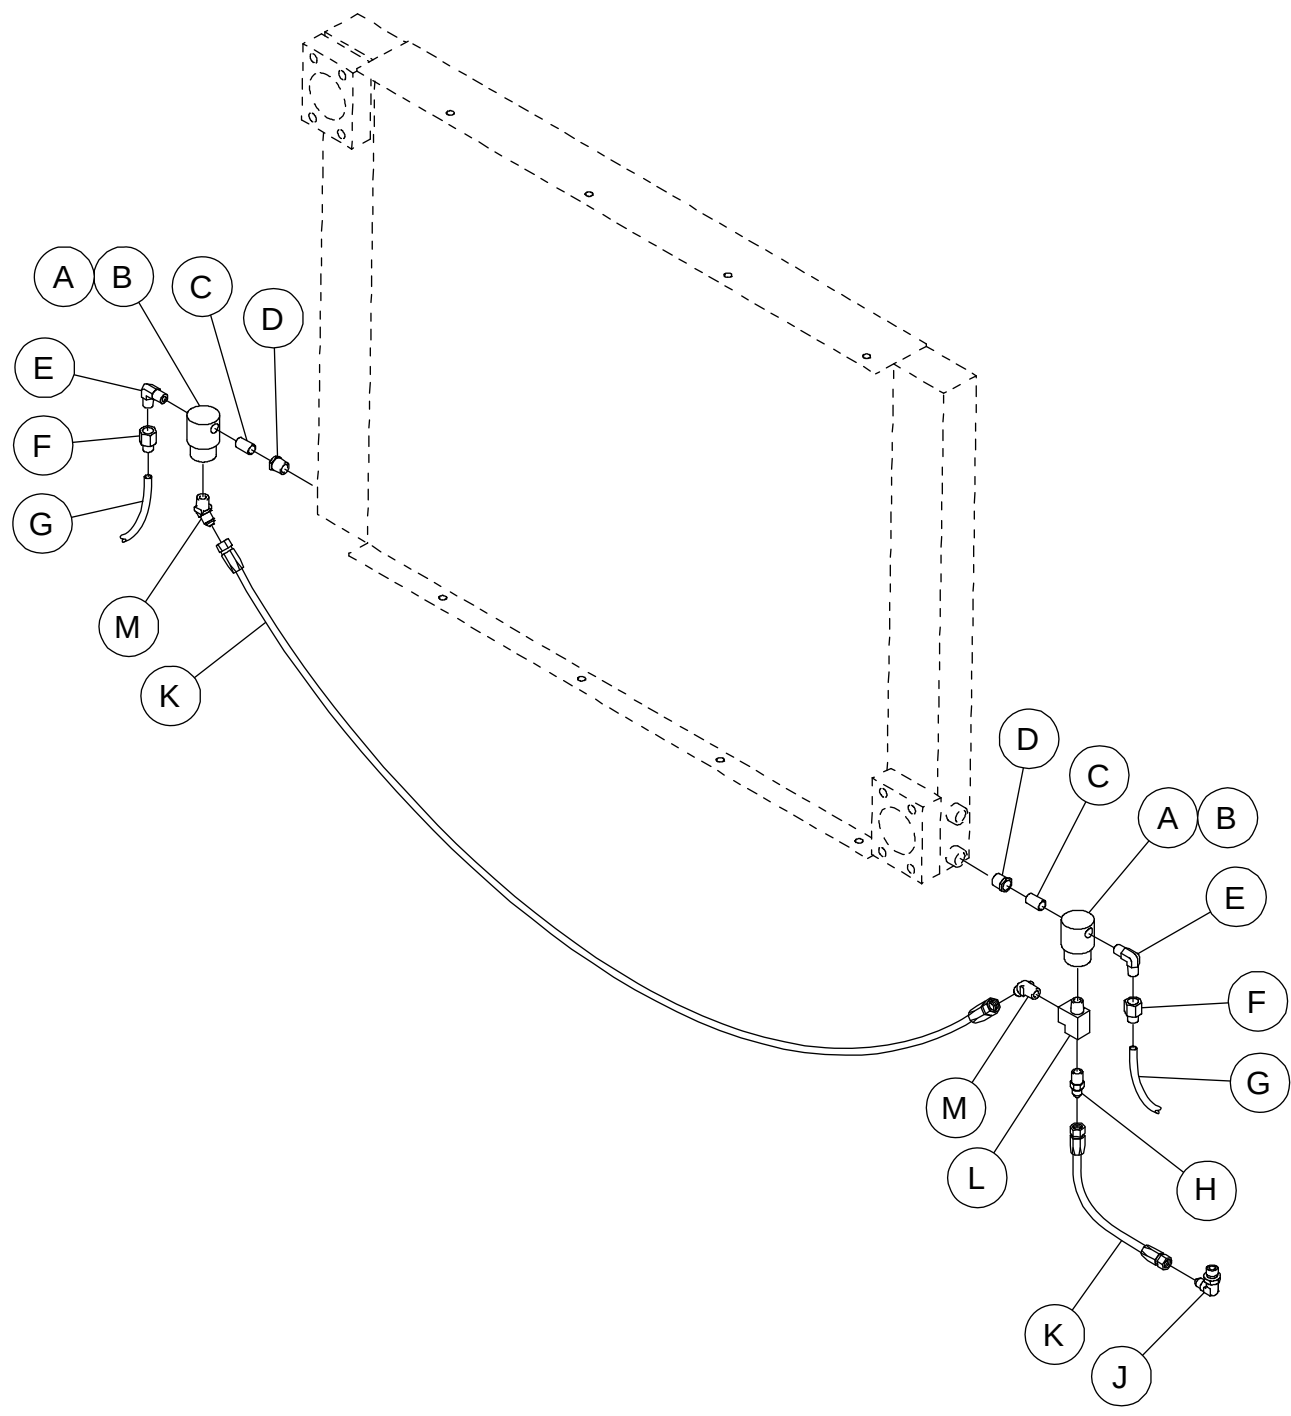

ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	35322379	Valve, Blowdown	2	
B	35379064	Kit, Diaphragm Repair	-	
C	95667341	Nipple, Closed, NPT 0.25 x 0.88	2	
D	95929998	Bushing, Reducing, NPT 0.38 x 0.25	2	
E	35369354	Elbow, Male, NPT 0.25 x 0.38	2	
F	35322346	Connector, Female, 0.156 Orifice	2	
G	35356484	Tube, Drain, 32.00	2	
H	35283472	Connector, 0.25 NPT x -4 JIC	1	
J	95365094	Elbow, 90, .5625 x -4 JIC	1	
K	35283498	Hose Assy, 4 JIC	2	
L	35114545	Tee, Street	1	
M	35321223	Elbow, 45, 0.25 NPT x -4 JIC	2	

Drain - Water Separator

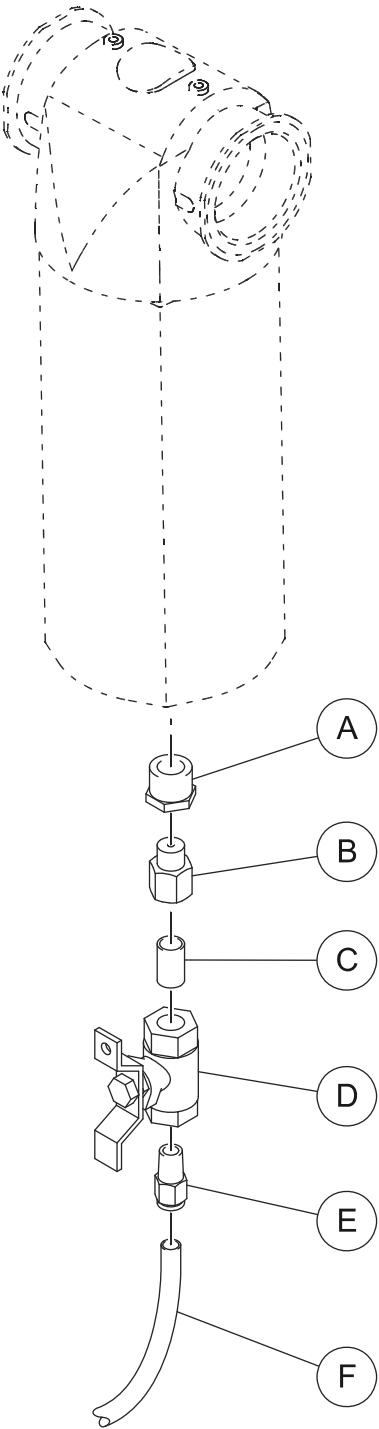

ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSIONS/NOTES
A	95245361	Bushing, Reducing, NPT .38 x .25	1	
B	35248319	Orifice, .094	1	
C	95667341	Nipple, Closed, NPT .25 x .88	1	
D	35324839	Valve, Ball, NPT .25	1	
E	35369347	Connector, Male, NPT .25 x .38	1	
F	35356484	Tube, Drain, 48.00	1	

NUMERICAL INDEX

COMM.NO.	PAGE	COMM.NO.	PAGE	COMM.NO.	PAGE
11A13C413E	25	35148204	9	35299270	37
11A13C66E	23		11	35299296	37
.....	25	35161025	65	35299312	37
11A13C83E	23	35192178	61	35299320	39
11A5D6Z1	49	35222017	45	35299338	37
12A5D13Z1	23	35223145	35	35299346	35
14A5C55	63	35248145	57	35299361	39
17A13A289	35	35255553	69	35300532	27
19A7J19Z1	27	35255561	69	35301126	57
22072219	59	35255819	35	35301225	55
23020407	27	35272533	39	35302314	57
25A13C281	23	35272541	37	35304047	9
25A13C283	23	35272558	9	35304666	9
25A13C298	23		31		11
25A13C301	23	35273366	71	35305416	77
25A13C332	23	35273812	27	35305622	61
35101476	31	35273937	27	35305648	61
35103498	63		31	35306687	57
35103506	63	35274406	65	35308352	25
35103852	31	35278555	39	35311471	57
35106806	25	35279023	29	35313287	55
35106814	25	35279025	19	35314582	69
35107168	23		29	35315217	21
35111566	25		43	35315225	21
35111590	23		67	35315274	21
.....	25	35279553	65	35315340	21
35112648	65	35279827	41	35315357	21
35112911	63	35279850	55	35315365	21
35116615	65	35279942	47	35315373	21
35117605	65		61	35315894	65
35118728	19	35281328	65	35316868	21
35119858	65	35282953	57	35316876	21
35123496	65	35283050	55	35316884	21
35127034	59	35283068	61	35319045	23
35127083	55	35283084	55	35322346	55
35127653	29	35283118	53	35322379	55
35128982	67	35283134	55	35322395	53
35130707	73	35283258	57	35322411	27
35130863	59	35284082	55	35322429	27
35130871	61		57	35322437	27
35131051	77	35286756	53	35322445	27
35132166	63	35286772	45	35322452	27
35135458	45	35286954	61	35322635	27
35136548	53	35287929	55	35322908	63
35140722	23	35287937	55	35324664	27
35141167	23	35288885	27	35326503	55
35141902	57	35290147	55	35326958	9
35144328	69	35293869	39	35326966	9
.....	71	35296342	45	35327204	33
35144336	43	35296409	59	35327303	71
35144492	27	35296425	59		73
.....	69	35297340	9	35327311	71
.....	71		11		73
35145077	19		27	35328228	33
35145242	27	35299254	39	35328236	33
		35299262	37	35328244	33

NUMERICAL INDEX

COMM.NO.	PAGE	COMM.NO.	PAGE	COMM.NO.	PAGE
35328251	33	35369180	69	35594225	27
35328269	33	35369339	53	35596493	65
35329309	59	35369347	53	35597509	33
35329721	27	35369511	45	35598770	57
35330570	45	35369800	9	35598838	65
35331578	33	35371558	43	35599950	31
35331586	33	35372416	69	35601475	27
35332683	33	35373026	15	35602325	47
35332691	33	35373034	15	35602473	57
35335124	57	35373042	15	35602796	29
35335140	43	35373059	15	35602812	63
35336700	13	35373067	15	35602846	19
35337435	69	35373075	15	35602895	19
35346741	43	35373083	15	35602903	19
35356302	17	35373091	15	35603182	19
35356310	17	35373109	15	35603208	19
35356328	17	35373117	15	35603216	19
35356336	17	35373125	15	35603224	19
35356369	17	35374453	11	35603349	71
35356377	17	35374834	33	35604099	69
35356419	17		73	35604115	69
35356450	61	35374842	33	35605187	9
35356484	53	35375377	47	35608360	25
35356526	9	35375385	35	35609544	9
35356534	45	35376094	9	35610377	9
35356617	71	35376433	15	35611342	37
35356864	21	35377878	69	35611359	35
35356872	21	35379387	21	35677341	49
35356914	21	35379395	21	35834621	25
35356922	21	35379916	25	35834795	31
35357052	63	35385236	21	35855089	27
35357151	19	35385244	21	35856251	61
35357268	27	35385277	21	35857036	29
35357961	63	35385293	21	35857176	55
35358274	31	35385392	21	35857382	19
35359389	21	35385434	9	35863638	65
35359397	21	35502608	65	36005023	37
35359405	21	35512425	67	36042893	9
35359413	21	35575570	47		11
35359421	21		61	36043206	31
35360775	45	35576115	55	36046308	57
35361310	37	35577873	71	36046480	31
35361328	35	35579143	67	36140730	23
35364710	37	35579309	39	36501500	73
35364728	37	35579630	47	36504389	23
35364975	35		61	36506699	37
35365261	37	35588755	23	36507515	35
35367317	49	35588839	25	36711620	37
35367325	49	35588953	23	36719169	23
35367333	49	35588961	23		25
35367358	49	35589126	25	36719177	23
35367366	49	35589241	25		25
35367374	49	35591163	33	36719219	23
35367390	49	35591189	33	36719466	23
35367846	55	35592534	33		25
35368927	55	35593508	35	36719557	23

NUMERICAL INDEX

COMM.NO.	PAGE	COMM.NO.	PAGE	COMM.NO.	PAGE
36722460	33	36845725	71	36879195	43
36734507	33	36845733	71		65
36734515	31	36845766	23	36879211	43
36734879	9	36846400	35	36879302	43
.....	17	36846418	35		47
36740421	73	36846426	35	36880623	79
36753242	23	36846442	35	36880995	31
36753259	23	36846822	81		43
36755742	75	36847432	19		65
36756120	51	36847440	19	36881886	43
.....	59	36849925	73	36881928	53
36756773	77	36851376	23	36881944	57
36761476	27	36851459	35	36882785	9
36763670	9	36851566	23		11
.....	11	36851574	23	36883421	77
36763704	19	36851590	25	36891083	47
36764389	59	36851608	25		61
36764884	61	36851681	35	36891307	47
36764983	25	36853042	23	36891315	47
36765121	47	36853265	67	36891323	47
.....	61	36854024	83	36891455	69
36769743	73	36854040	83	36891513	11
36771186	77	36854065	83	36891687	43
36771434	69	36854149	55	36891703	43
36775484	69	36854495	55	36891786	9
36776813	25	36854925	35		21
36776821	25	36860005	67	36891794	9
36777209	25	36860336	51		21
36785012	47	36865756	59	36892362	71
36786572	31	36865889	61	36892370	69
36788982	51	36865897	61		71
36789535	69	36865905	61	36892523	67
36793545	67	36865921	61	36892701	9
36793602	73	36866069	39	36892719	11
36794287	37	36866242	65	36893360	35
36795680	61	36866531	61	36893519	27
36797652	43	36866564	61	36893550	43
36798635	77	36867471	17	36893667	53
36840411	59	36867778	65	36893675	29
36840460	55	36867786	65	36893691	47
36840627	45	36867794	65		61
36840841	55	36870053	13	36893709	27
36841146	69	36870061	13	36893717	29
36841153	69	36870079	13	36893725	9
36841245	69	36870087	13	36893733	9
36842102	53	36870095	13		11
36842128	69	36870103	13	36893758	65
36842656	69	36870111	9	36893766	51
.....	71	36870129	13		65
36843464	57	36870145	13	36893824	59
36844074	57	36870590	69	36893832	65
36844124	69	36876019	65	36893840	65
36844595	71	36877793	9	36893857	65
36845014	53		27	36893923	57
36845394	71	36878361	71	36893949	53
36845592	45	36879104	77	36894012	27

NUMERICAL INDEX

COMM.NO.	PAGE	COMM.NO.	PAGE	COMM.NO.	PAGE
36894061	9	36894988	81	95431292	59
.....	11	36894996	81	95667341	57
36894087	31	36895001	83	95867933	59
36894350	73	36895019	83	95922910	9
36894368	73	36895027	83		11
36894376	73	36895035	83	95923033	51
36894384	73	36895043	83	95923082	27
36894392	75	36895050	83	95923108	27
36894400	73	36895225	9	95923298	67
36894418	73	36895241	21	95923314	13
36894426	73	36895258	21		27
36894434	73	36895308	43		71
36894442	73	36895399	11		73
36894459	73	36895407	19	95923363	31
36894467	73	36895456	67	95928040	55
36894475	73	36895555	79	95928172	55
36894483	75	36895571	79	95928255	33
36894491	77	36895589	79	95928867	19
36894509	77	36895597	79	95930301	27
36894517	77	36895605	79		57
36894525	75	36895621	79	95930723	11
36894533	75	36895639	65	95934253	31
36894541	77	36895647	65	95934642	33
36894558	77	36896314	27	95934998	19
36894566	77	36896579	65		73
36894574	77	36897148	33	95935003	9
36894582	77	36897619	73	95935011	9
36894590	73	36897783	29		13
36894665	17	36897791	29	95935037	71
36894673	17	36898476	47	95935086	19
36894681	17	36898807	27	95935136	19
36894699	17	39225511	59	95935235	13
36894731	59	39911284	41	95940748	57
36894749	59	39911292	41	95940912	59
36894764	45	46592099	27	95942553	51
36894772	45	92304500	63	95944575	57
36894780	61	92304674	19	95944625	55
36894798	67	92367663	35	95944658	57
36894806	43	93488732	35	95944690	57
36894814	43	95037347	59	95946281	57
36894822	43	95043196	27	95953311	59
36894830	43	95098356	27	95953444	57
36894848	43	95220604	31	95953808	57
36894855	83	95235131	45	95954038	55
36894863	83	95239919	37	95954087	13
36894871	81	95239927	23	95954194	57
36894889	81		37	95954269	55
36894897	81	95245288	27	95954277	59
36894905	81	95252409	47	95959607	41
36894913	81	95280541	47	95959730	41
36894921	81	95318556	23	95974663	41
36894939	81		25	96700877	19
36894947	81	95326609	27	96700885	9
36894954	81	95358164	35	96700901	31
36894962	81	95358198	39	96700919	27
36894970	81	95365094	59		

NUMERICAL INDEX

COMM.NO.	PAGE	COMM.NO.	PAGE	COMM.NO.	PAGE
96706429	37				
.....	39				
96712187	35				
W86707	23				
X1182T23	17				

NUMERICAL INDEX

COMM.NO.	PAGE	COMM.NO.	PAGE	COMM.NO.	PAGE

WORD INDEX

A

Actuator	
Brake	9
Adapter	33, 45, 57
.75 NPT x -8 JIC	55
Air Cleaner Assy (HP 935)	65
Air Cleaner Assy (XP 1050)	65
Air End Assy	31
Arm	
Center	23
Atomizer	63
Axle	
Front	23
Rear	25
Axle Assy	
Front	23
Rear	23

B

Baffle	
Exhaust	77
Intake	
Inside RH	77
LH	77
RH	77
Ball Joint	
Outer	23
Balljoint	
Inner	23
Band	
Mounting	65
Base	13
Battery (Dry)	67
Battery (Wet)	67
Bearing	25, 27
Inner	21
Outer	21
Roller	37, 39
Tapered Roller	35
tapered Roller	35
Thrust	13
Binder	
3-Ring	51
Body	33, 49
Bolt	13, 21, 25
Shackle	23
Bracket	19, 23, 25, 27, 47
A/E Mounting	31
Engine	27
Fuel Tank	43
Hold-Down	67
Hose Mounting	17
LH	19
Mounting	73
RH	19
Tee	17
Brake Actuator Assy	17

Brake Assy	
LH	21
RH	21
Bulb	
Gauge (NOT SHOWN)	69
Bushing	27, 31, 33
.38 NPT x .25 NPT	57
.50 NPT x .25 NPT	55
.50 NPT x .38 NPT	59
1.25 NPT x .50 NPT	59
reducing	
.25 NPT x .12 NPT	57
Bushing (Above Starter)	27

C

Cable	19, 77
Jumper	67
Negative	67
Positive	67
Cap	49
E-Z Lube	21
Fuel Tank	53
Grease	21, 25
Radiator	43
Rain	29
Case	
Gear	35
Chain	9, 15
Check Valve Assy	49
Clamp	45, 63, 65
Saddle	
2.00	61
Seal	29
Tube	17
V-Band	29
Clevis	19
Clip	13, 19
Hose	17
Collar	27
Connector	15, 41, 53
.25 NPT x -6 JIC	55, 57
.25 NPT x -8 JIC	55
.38 NPT x -6 JIC	55
Male	
-32 JIC x 2.00 NPT	57
orifice	
.156	55
Straight	
.44-18 x -6 JIC	
w/O-Ring	61
.44-20 x -6 JIC	
w/O-Ring	61
.88-14 x -10 JIC	
w/O-Ring	61
1.88-12 x -24 JIC	
w/O-Ring	59

WORD INDEX

Coupling	9
.25 NPT	57
Drive	31
Cover	15, 29, 35, 47
Cooler	77
Flex	79
Piston	33
Rear Bearing	39
Crank Assy	13
Cup	
Inner	21
Outer	21
Cylinder	27
Ether	63

D

Damper	15
Diaphragm	33
Door	73
Control Panel	71
Fuel Filler	73
Roof	77
Drawbar	9, 23
Drop Leg & Sleeve	13
Dual Filter Assy	59

E

Ejector	
Dust	65
Elbow	65
45	
1.88-12 x -24 JIC	
w/O-Ring	59
90	
.125 NPT x -4 JIC	55, 57
.125 NPT x -6 JIC	57
.44-20 x -4 JIC	
w/O-Ring	59
.56-18 x -6 JIC	61
.56-18 x -8 JIC	55
.75-16 x -10 JIC	61
w/O-Ring	61
1.88-12 x -24 JIC	
w/O-Ring	59
2.00 NPT	57
90 Deg.	53, 63
Street	
90	
1.50 NPT	59
Street 90	
.75 NPT	55
Swivel	
90	
.75-16 x -10 JIC	61
Tube	41

Element	47
Eng. Lube	27
Filter	51
Primary	65
Safety	65
Enclosure	
Instrument Panel	71
Engine	
M11-335	27
Equalizer	9
Eye	
Pintle	9
Eyebolt	71, 73

F

Fan	27
Filter	
Fuel	27
Water	27
Filter Head Assy	51
Fitting	
Lube	23, 25
Frame	9, 11
Front Axle Assy	9, 11, 21
Fuel Return	53
Fuel Supply	53

G

Gasket	15, 31, 33, 35, 37, 47, 61
Gauge	
Discharge Air Temperature	69
Discharge Pressure (HP 915)	69
Discharge pressure (XP 1000)	69
Engine Oil Pressure	69
Engine Water Temperature	69
Fuel Level	69
Hourmeter	69
Oil Level	47
Tachometer	69
Voltmeter	69
Gauge Assy	
Oil Level	61
Gear Set - HP-935	35
Gear Set - XP-1050	35
Grommet	33
Guard	
Fan	43
Guide	27
Gutter	77

H

Hand Hold	73
Hanger	
Center	9
Front	9
Rear	9

WORD INDEX

Harness	
Panel (NOT SHOWN)	69
Hinge	71, 73, 77
Holder	71
Hose	45
-4 JIC x 34.00 Long	57
-4 JIC x 72.00 Long	55
-6 JIC x 11.00 Long	57
-6 JIC x 52.00 Long	57
-6 x 30.00 Long	57
-8 JIC x 50.00 Long	57
Discharge	47
Flex	17
Hose Assy	53, 59, 61
Discharge	61
Housing	33
Front Bearing	37
Rear Bearing	39
Rotor	37
Hub	21
Hub Assy (Includes B	
D	
and E)	25

I	
Inner Race	25
Insert	49

J	
Jack	9
J-Bolt	67
Joint	
Ball	27

K	
Key	35, 37
Kit	
Compressor	
24V	57
Equalizer	9
Resistor/Bulb	69
Starting Aid	63
Wheel Cylinder	21
Knuckle Assy	
LH	23
RH	23

L	
Latch	23
Door	73, 77
Lenz Fitting	59
Leveler Assy	15
Lever	19, 27
Lifting Bail	9, 11
Lock	
LH	15
RH	15

M	
Manifold	
w/O-Ring	61
Master Cylinder	15
Module	
7-Light	69
Low Water	71
Low Water (NOT SHOWN)	69
Mount	27
Rubber	27, 31
Muffler	29, 53

N	
Nipple	27
2.00 NPT x 12.00 Long	57
2.00 NPT x 3.00 Long	57
Close	
.25 NPT	57
.75 NPT	55
Nut .9, 11, 19, 21, 25, 27, 31, 43, 51, 63, 65, 67, 69,	
71, 73	
Hex Jam 3/8"-24	27
Jam	23
Lock	9, 13
Swivel	
.25 NPT x -6 JIC	55
Wing	65

O	
Oil Cooler	43
O-Ring	35, 39, 47, 49, 61
Outer Race	25

P	
Pan	
A/E Belly	
Front	79
Engine Belly	
Front	79
Rear	79
Exhaust Belly	79
RH Belly	
Front	79
Middle	79

WORD INDEX

Panel	Plug	33, 39, 47
Baffle	.25 NPT	55
Inside	Vent	
Outside	1.62-12	61
Bottom		
Door	R	
Bottom	Radiator	43
Middle	Rail	
Top	Long	
Exhaust Baffle	LH	75
LH	RH	75
RH	Rear	
Front	RH	75
LH	Top	
RH	Front	75
Front Endcap	LH	75
LH	Rear	75
RH	Rear Axle Assy	9, 11, 21
Front Side	Receptacle	69
RH	Reducer	65
Instrument/Control	Relay	
Intake	24V	71
LH	Repair Kit	15
RH	Retainer	69
Intake Baffle	Roof	77
RH	Ring	
Middle	Retaining	35
RH	Rivet	25, 71
Rear	Plastic	69
LH	Rod	27
RH	Link	19
Rear Endcap	Tie	23
Rear Side	Rotor Set	37
LH		
Roof	S	
Front	Screw	9, 11, 19, 27, 29, 31, 33, 35, 37, 39, 43, 47, 51, 53, 63, 65, 67, 69, 71, 73
LH & RH	Hex	
Middle	M16-2.00 x 55LG	61
Rear	Seal	25, 33
Roof Door	Grease	21
Side	Shaft	35
RH	Weather	15
Pin	Sender	
Center	Fuel	53
Cotter	Shaft	
Dowel	Drive	35
Hinge	Shim Set	35, 39
King	Shoe	
Locating	Front	21
Pull	Rear	21
Roll	S-Hook	15
Piston	Snap-Ring	37
Plate	Spacer	19, 35, 37
Clamp	Fan	27
Clamping	Spring	21, 23, 25, 27, 33, 47, 49, 71, 73
Orifice	Spring Set	37
Strike		
Tie		

WORD INDEX

Step	9, 11
Rear	73
Strip	
Connector	75
Stud	21, 25
1/4-Turn	69
Support	
A/E Air Cleaner	51, 65
Engine Air Cleaner	65
Exhaust Tube	29
Oil Cooler	43
Radiator	43
Roof	43
Switch	
Accessory (Optional)	69
bypass	69
Ether Injection	69
Light	69
Mag.	71
Power	
On/Off	69
Service Air	69
Start	69
temperature	59
Swivel	
Female	
.38 NPT x -6 JIC	55

T

Tank	
Fuel	53
Separator (EEC)	47
Separator (Standard)	47
Tee	17
.125 NPT x -4 JIC	55
.25 NPT	57
Run	
.25 NPT x -6 JIC	55
.56-18 x -6 JIC	55
Swivel Nut	
-6 JIC	55
-8 JIC	55
Street	
.25 NPT	57
.75 NPT	55
1.25 NPT	59
Swivel	
.88-14 x -10 JIC	61
Through Belly Pan	45
Tie Rod Assy (Includes A	
B	
C	
A3	
and A4)	23
Tire	9, 11
Tire & Wheel Assy	9, 11
To Bottom of Engine	45

To Engine	
Near Water Outlet	45
To Engine Turbo	29, 65
To LH Side/Front Axle	17
To LH Side/Rear Axle	17
To Low Coolant Level Sensor	45
To RH Side/Front Axle	17
To RH Side/Rear Axle	17
To Top of Engine	45
To Unloader Inlet	65
To Vent Line	45
Tray	
Battery	67
Tube	45, 53, 63, 65
Exhaust	29
Flared	
-38 JIC	57
-8 JIC	55
Inner	13
Outer	13
Service	57
Vent	61
Tube Adapter	
1.50 Pipe x 2.00 Tube	59
Tube Assy	17, 41, 59, 61
Lower	59
Upper	59

U

U-Bolt	21, 25
Union	17
1.88-12 x -24 JIC	
w/O-Ring	59
Unloader Assy	31

WORD INDEX

V

Valve	
Anti-Rumble	33
Ball	
.75 NPT	55
2.00 NPT	57
Blowdown	55
Check	
.25	59
.25 NPT	57
check	
2.00 NPT	
Minimum Pressure	57
Drain	
w/O-Ring	61
Oil Temperature Bypass	59
Pressure Regulator	
100 PSI (XP 1050)	55
150 PSI (HP 935)	55
Relief/Check	
.040 Orifice	55
Safety	
200 PSI	59
Solenoid	
24V	
.38 NPT	55
Start/Run	57
Valve and Bracket Assy	63
Valve Assy	33
Valve Stem	9, 11


W

Washer	9, 13, 19, 21, 23, 25, 27, 31, 33, 49, 63, 67, 71, 73
Wheel	9, 11




WIRING DIAGRAMS

Compressor Wiring Schematic

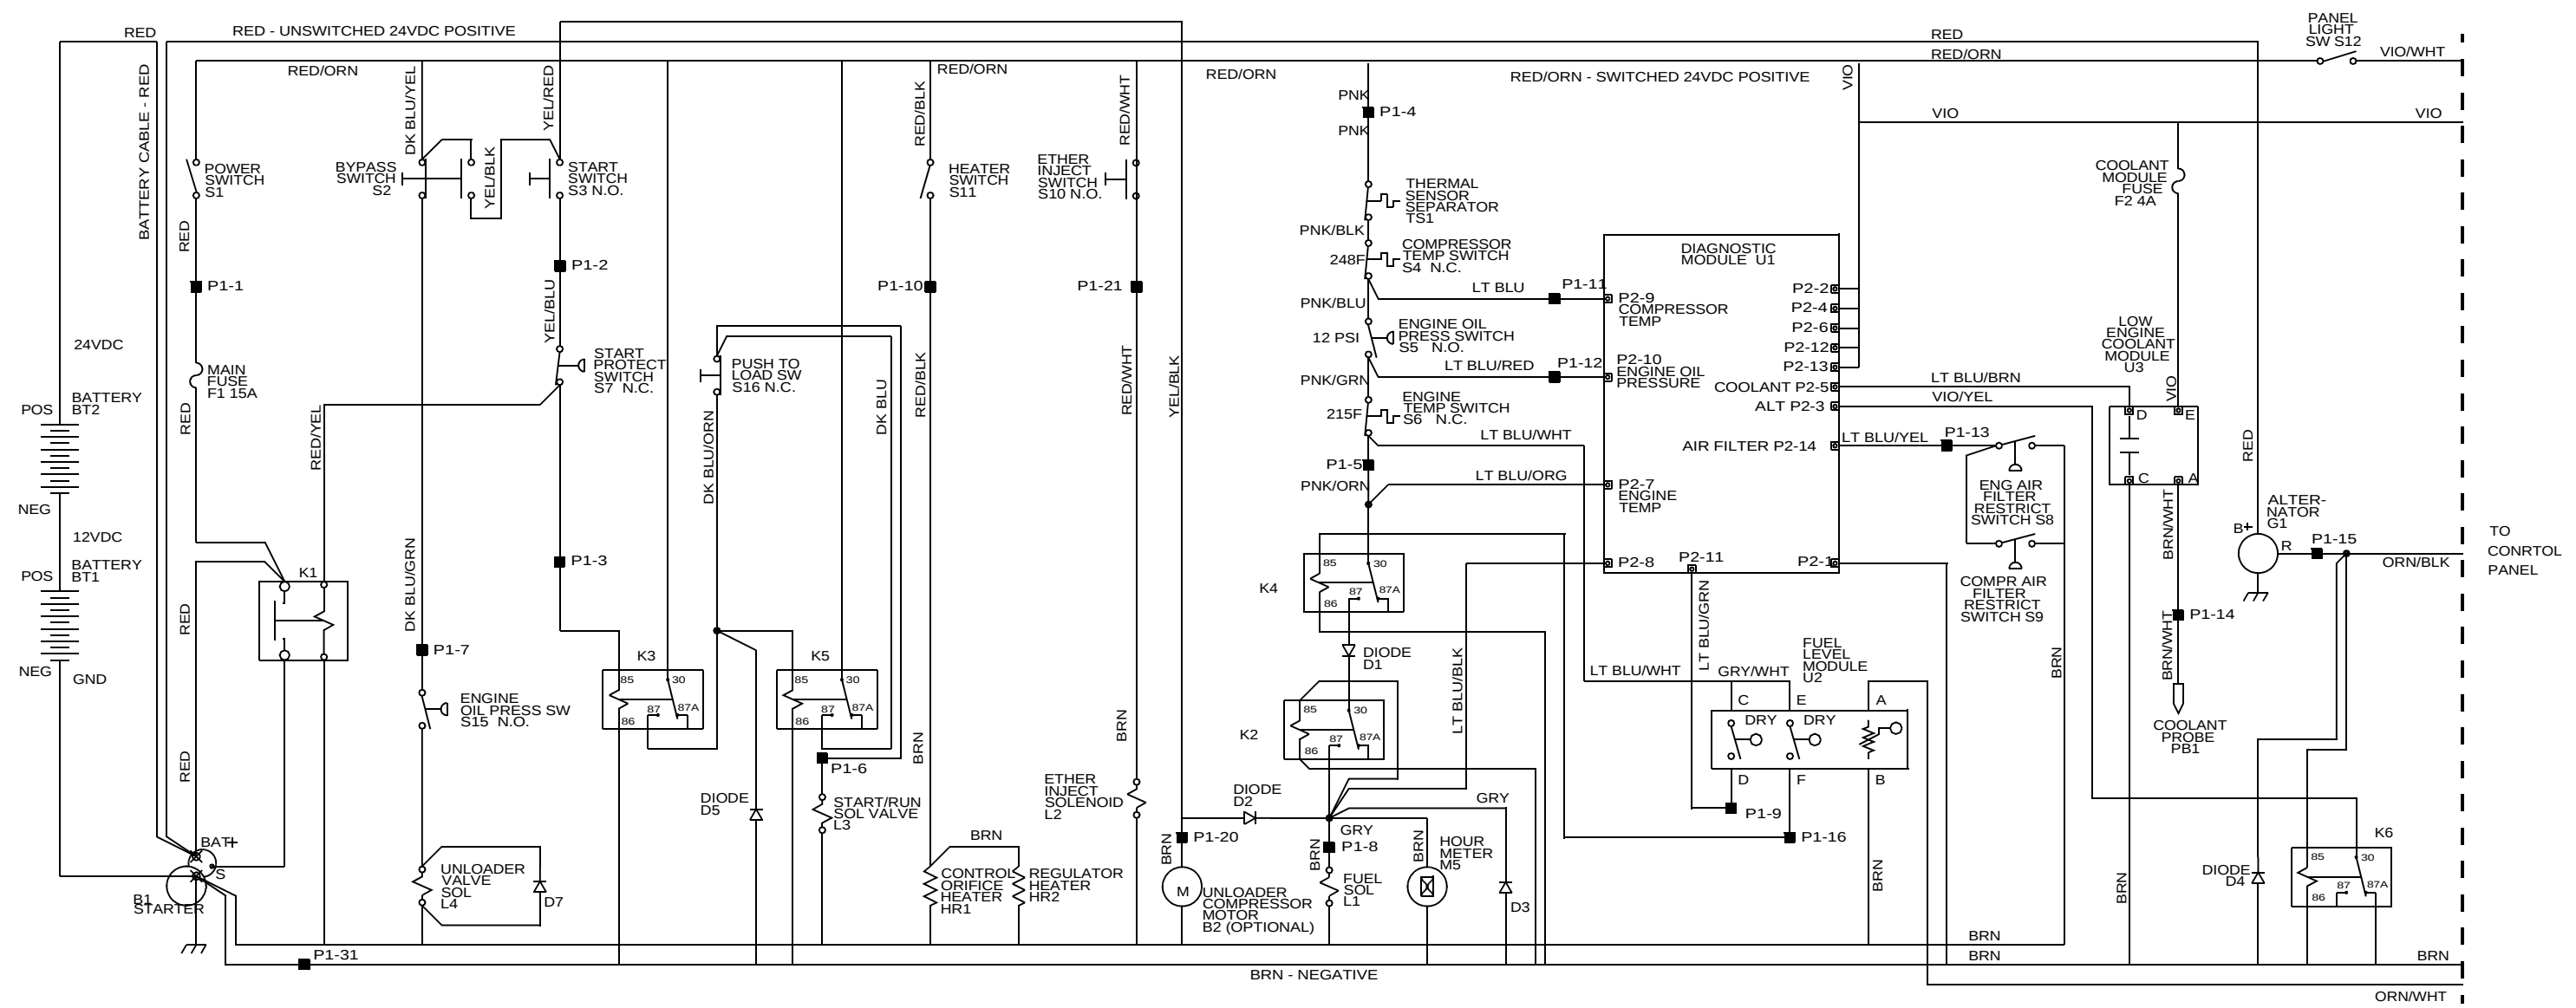

Control Panel Wiring Schematic

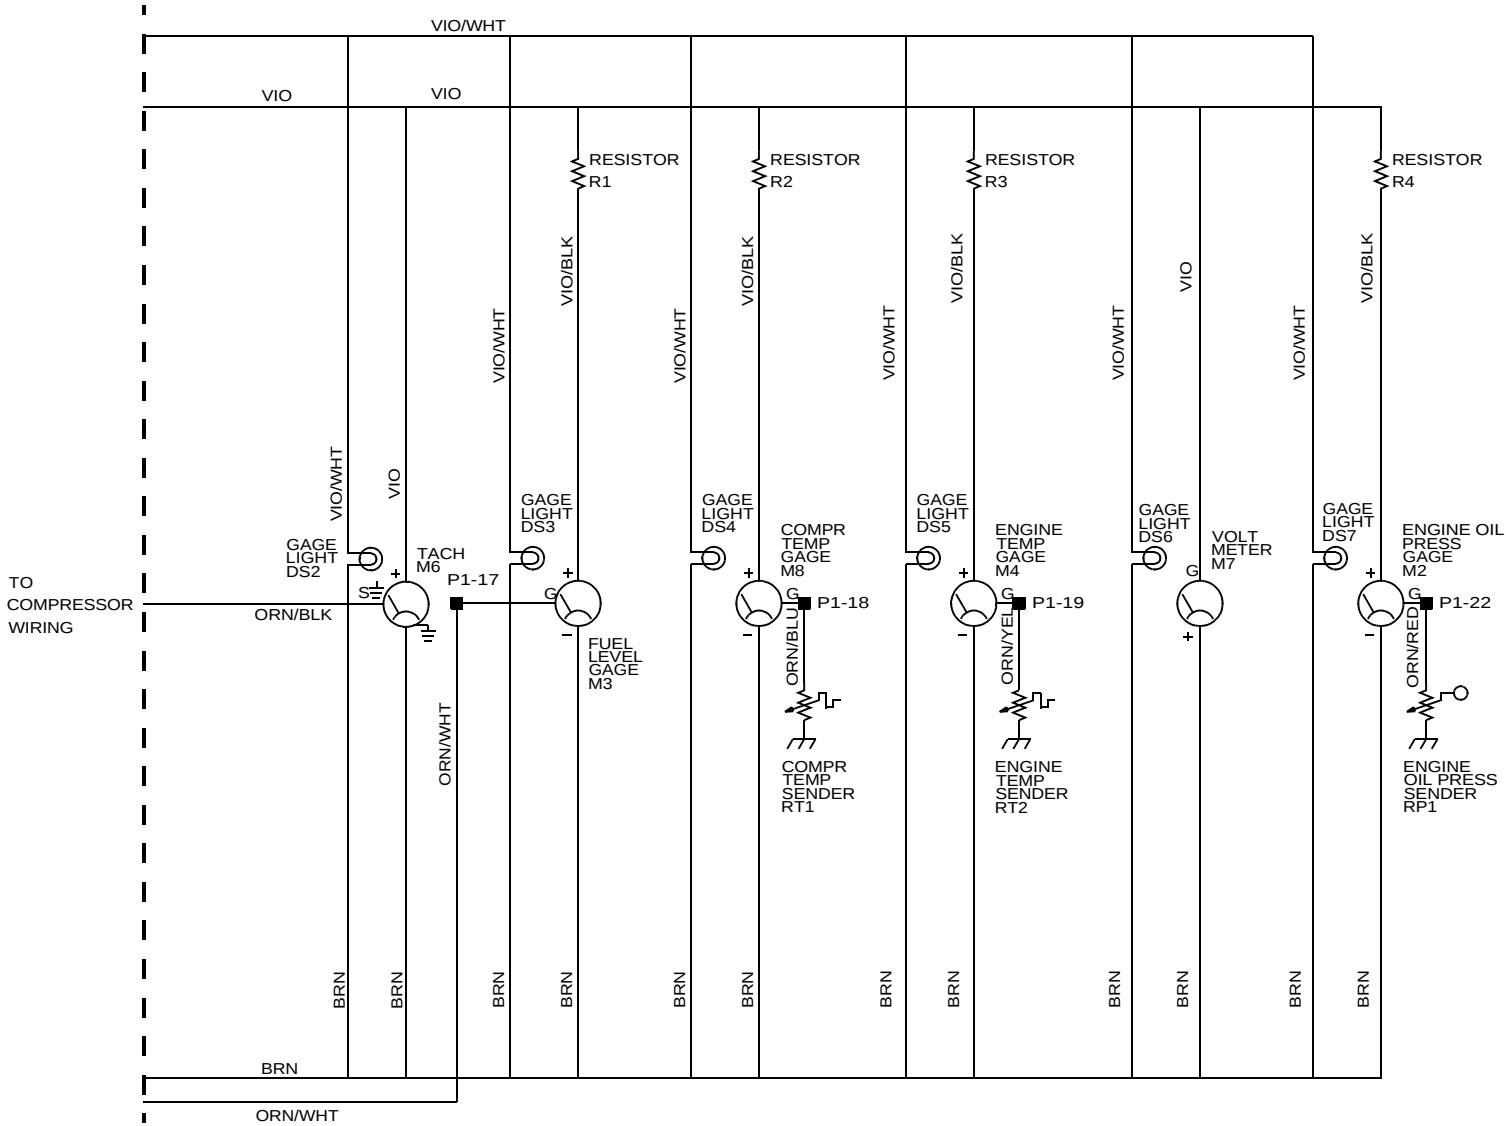

WIRING PARTS LIST

ITEM	COMM. NO.	DESCRIPTION	ITEM	COMM. NO.	DESCRIPTION	ITEM	COMM. NO.	DESCRIPTION
B1	Cummins Part	Starter	PB1	35356799	Probe, Low Water			
B2	36850691	Motor, Start Compressor	R1	~	Resistor			
BT1	36793545	Battery, 12VDC	R2	~	Resistor			
BT2	36793545	Battery, 12VDC	R3	~	Resistor			
D1	35376169	Diode	R4	~	Resistor			
D2	35376169	Diode	RP1	36870608	Sender, Pressure			
D3	35376169	Diode	RT1	35367218	Sensor, Temperature 0°-300° F			
D4	35376169	Diode	RT2	35604180	Sensor, Temperature 0°-300° F			
D5	35376169	Diode	S1	35337435	Switch, Ignition			
D7	35376169	Diode	S2	35255561	Switch, Bypass			
DS2	36842128	Lamp, Panel	S3	35255553	Switch, Start			
DS3	36842128	Lamp, Panel	S4	36865756	Switch, Temperature (Airend)			
DS4	36842128	Lamp, Panel	S5	36878379	Switch, Pressure 12PSI			
DS5	36842128	Lamp, Panel	S6	35371673	Switch, Temperature 215° F			
DS6	36842128	Lamp, Panel	S7	36757573	Switch, Pressure 20PSI			
DS7	36842128	Lamp, Panel	S8	36847838	Switch, Vacuum			
F1		Fuse, 15 A	S9	36847838	Switch, Vacuum			
F2		Fuse, 4 A	S10	35255553	Switch, Ether			
G1	Cummins Part	Alternator	S11	36847838	Switch, Heater			
HR1	36841526	Heater, Hex Orifice 24VDC	S12	35337435	Switch, Panel			
HR2	36854677	Heater, Regulator 24VDC	S15	36843423	Switch, Pressure 25PSI			
K1	35577873	Relay, 24V Mag Switch	S16	35255561	Switch, Service Air			
K2	36892362	Relay	TS1	36865756	Switch, Temperature 248° F			
K3	36892362	Relay	U1	36771434	Module, Diagnostic			
K4	36892362	Relay	U2	36893949	Sender, Fuel Level			
K5	36892362	Relay	U3	36892370	Module, Coolant Level			
K6	36878361	Relay						
L1	Cummins Part	Valve, Solenoid (Fuel)	~	36899359	Harness, Chassis			
L2	35357961	Valve, Solenoid (Ether)	~	36891455	Harness, Control Panel			
L3	36840841	Valve, Solenoid (Start/Run)						
L4	36881944	Valve, Solenoid (Unloader)						
M2	36870590	Gauge, Pressure (Engine Oil)						
M3	35604099	Gauge, Fuel						
M4	35604115	Gauge, Temperature 0°-300° F (Engine Coolant)						
M5	36841245	Hourmeter						
M6	35372416	Tachometer						
M7	36841153	Voltmeter						
M8	35604115	Gauge, Temperature (Dischg Air)						

Revision History

[illegible]



Doosan Infracore Portable Power
1293 Glenway Drive
Statesville, N.C. 28625
www.doosanportablepower.com

Doosan Infracore
Portable Power