




Portable Power

G20-SIIIA

PARTS MANUAL

SERIAL No : G02030001 ->

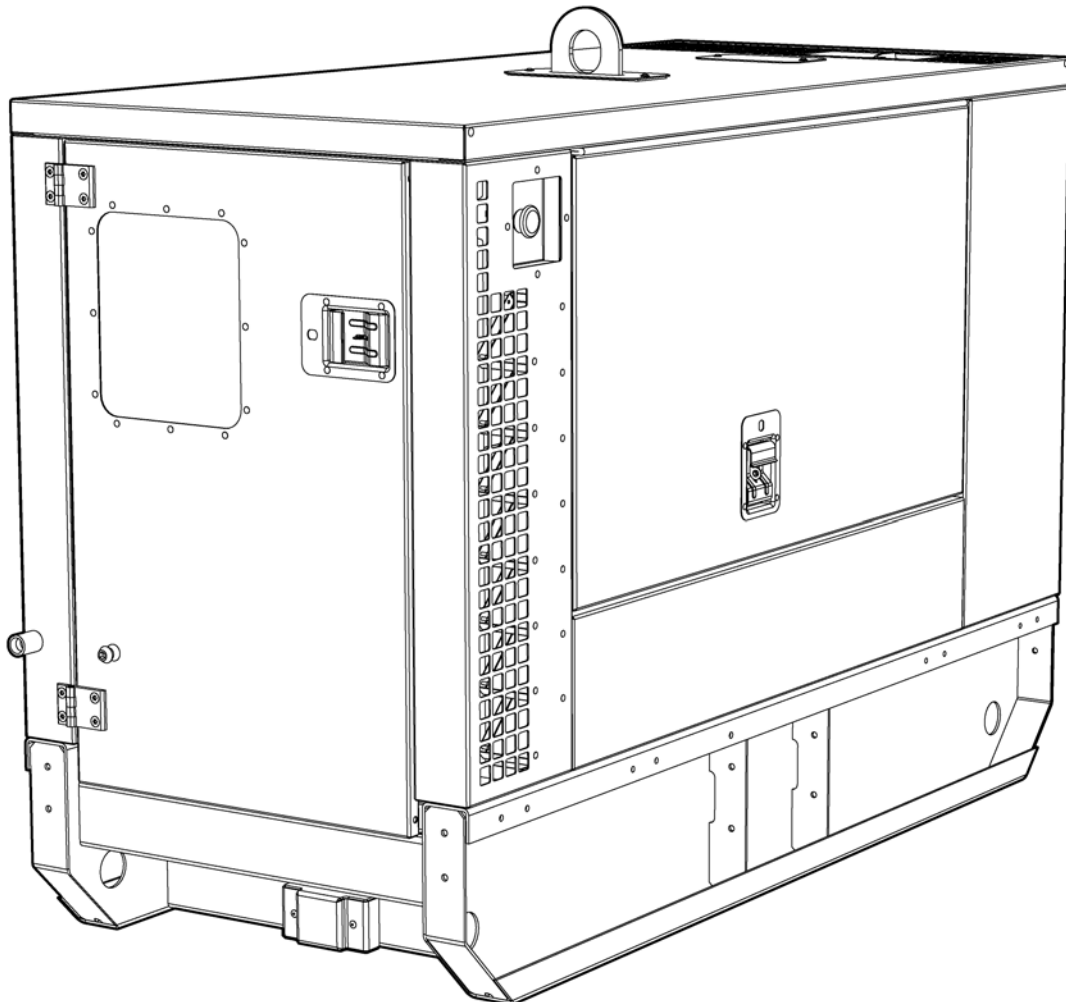



Portable Power

CONTENTS

MAIN FRAME

FRAME	3
FORKLIFT SKID	5
ENCLOSURE	7
DECALS AND DOCUMENTATION	11
DECALS AND DOCUMENTATION	13

ELECTRICAL SYSTEM

ALTERNATOR ASSEMBLY	15
ALTERNATOR PARTS	17
BATTERY	19
CONTROL PANEL - (analogue)	21
CONTROL PANEL - (digital)	23
POWER PEDESTAL ASSEMBLY	25
POWER PEDESTAL ELECTRICAL LAYOUT	27
POWER PEDESTAL ASSEMBLY - (TNS-30mA)	31
POWER PEDESTAL ASSEMBLY - (TNS-300mA)	33
POWER PEDESTAL ASSEMBLY - (TNS-ADJUSTABLE)	35

POWER UNIT

ENGINE ASSEMBLY	37
AIR INTAKE SYSTEM	39
EXHAUST SYSTEM	41
FUEL SYSTEM	43
FUEL SYSTEM	45
COOLING SYSTEM	47
ROCKER COVER	49
DIPSTICK	51
OIL FILTER ASSEMBLY	53
FUEL INJECTION PUMP	55
STOP SOLENOID	57
INJECTION VALVE	59
FUEL FILTER	61
FUEL/WATER SEPARATOR	63
FUEL FEED PUMP	65
ALTERNATOR	67
GASKET SET	69
BELT TRANSMISSION	71
THERMOSTAT	73
WATER PUMP	75
STARTER MOTOR	77

ACCESSORIES & OPTIONS

OPTION - FRAME PROTECTION	79
OPTION - NO CONTAINMENT DRAIN PLUG	81
OPTION - SOCKETS - (CE)	83
OPTION - NO SOCKETS	85
OPTION - OIL SUMP PUMP - (manual)	87
OPTION - 3 WAY FUEL VALVE	89
OPTION - SUPER START PACKAGE	91


OPTION - EARTH CONNECTING ROD	95
-------------------------------------	----

MAINTENANCE ITEMS

MAINTENANCE KIT - (250 hours)	97
MAINTENANCE KIT - (500 hours)	99
RECOMMENDED SPARE PARTS - (maintenance and repair items)	101
RECOMMENDED SPARE PARTS - (extended downtime prevention)	103

G20-SIIIA_46698235-A_03-17

FRAME

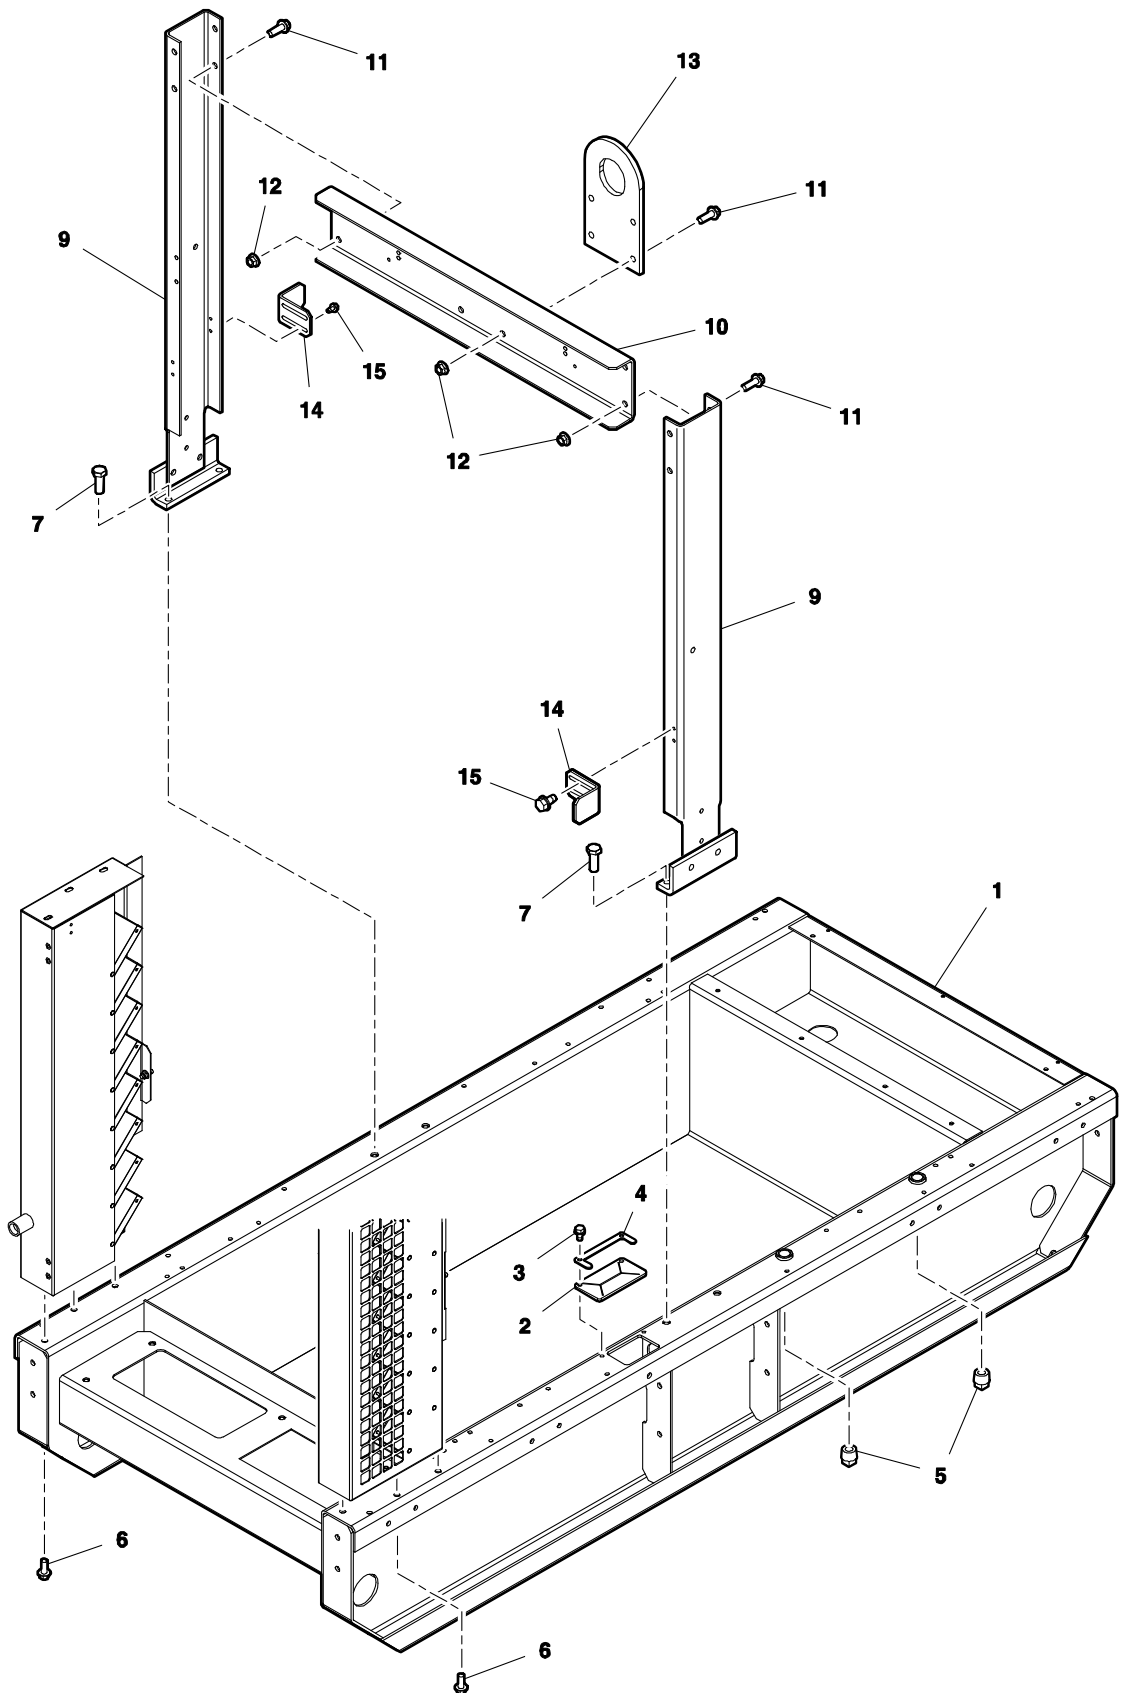


T7046_00
01/17

FRAME

[illegible]

FORKLIFT SKID

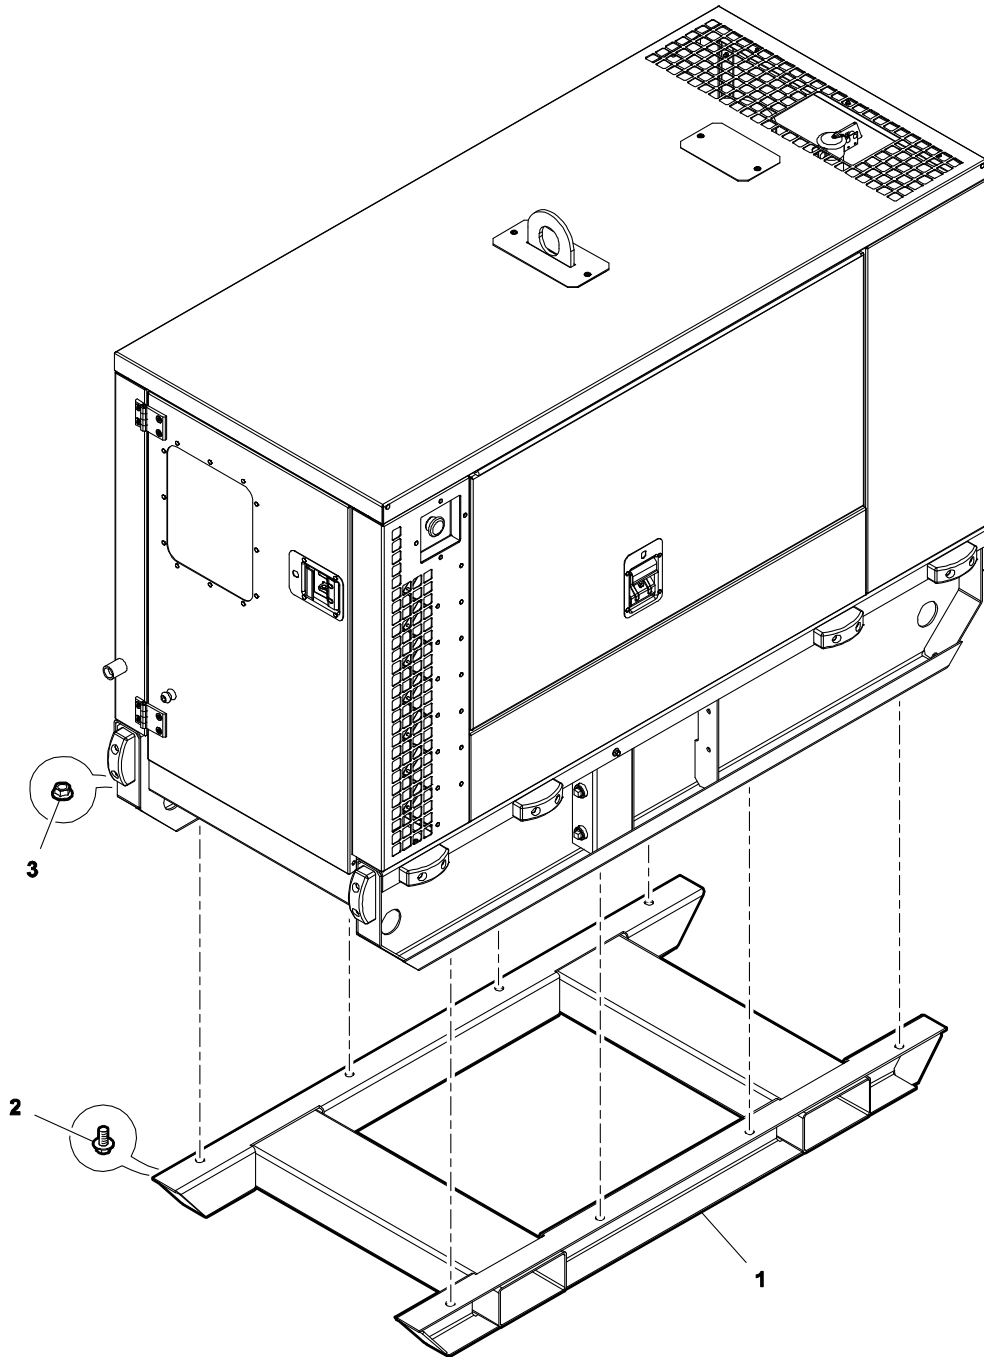


T7062_00
01/17

FORKLIFT SKID	
--	--

[illegible]

ENCLOSURE

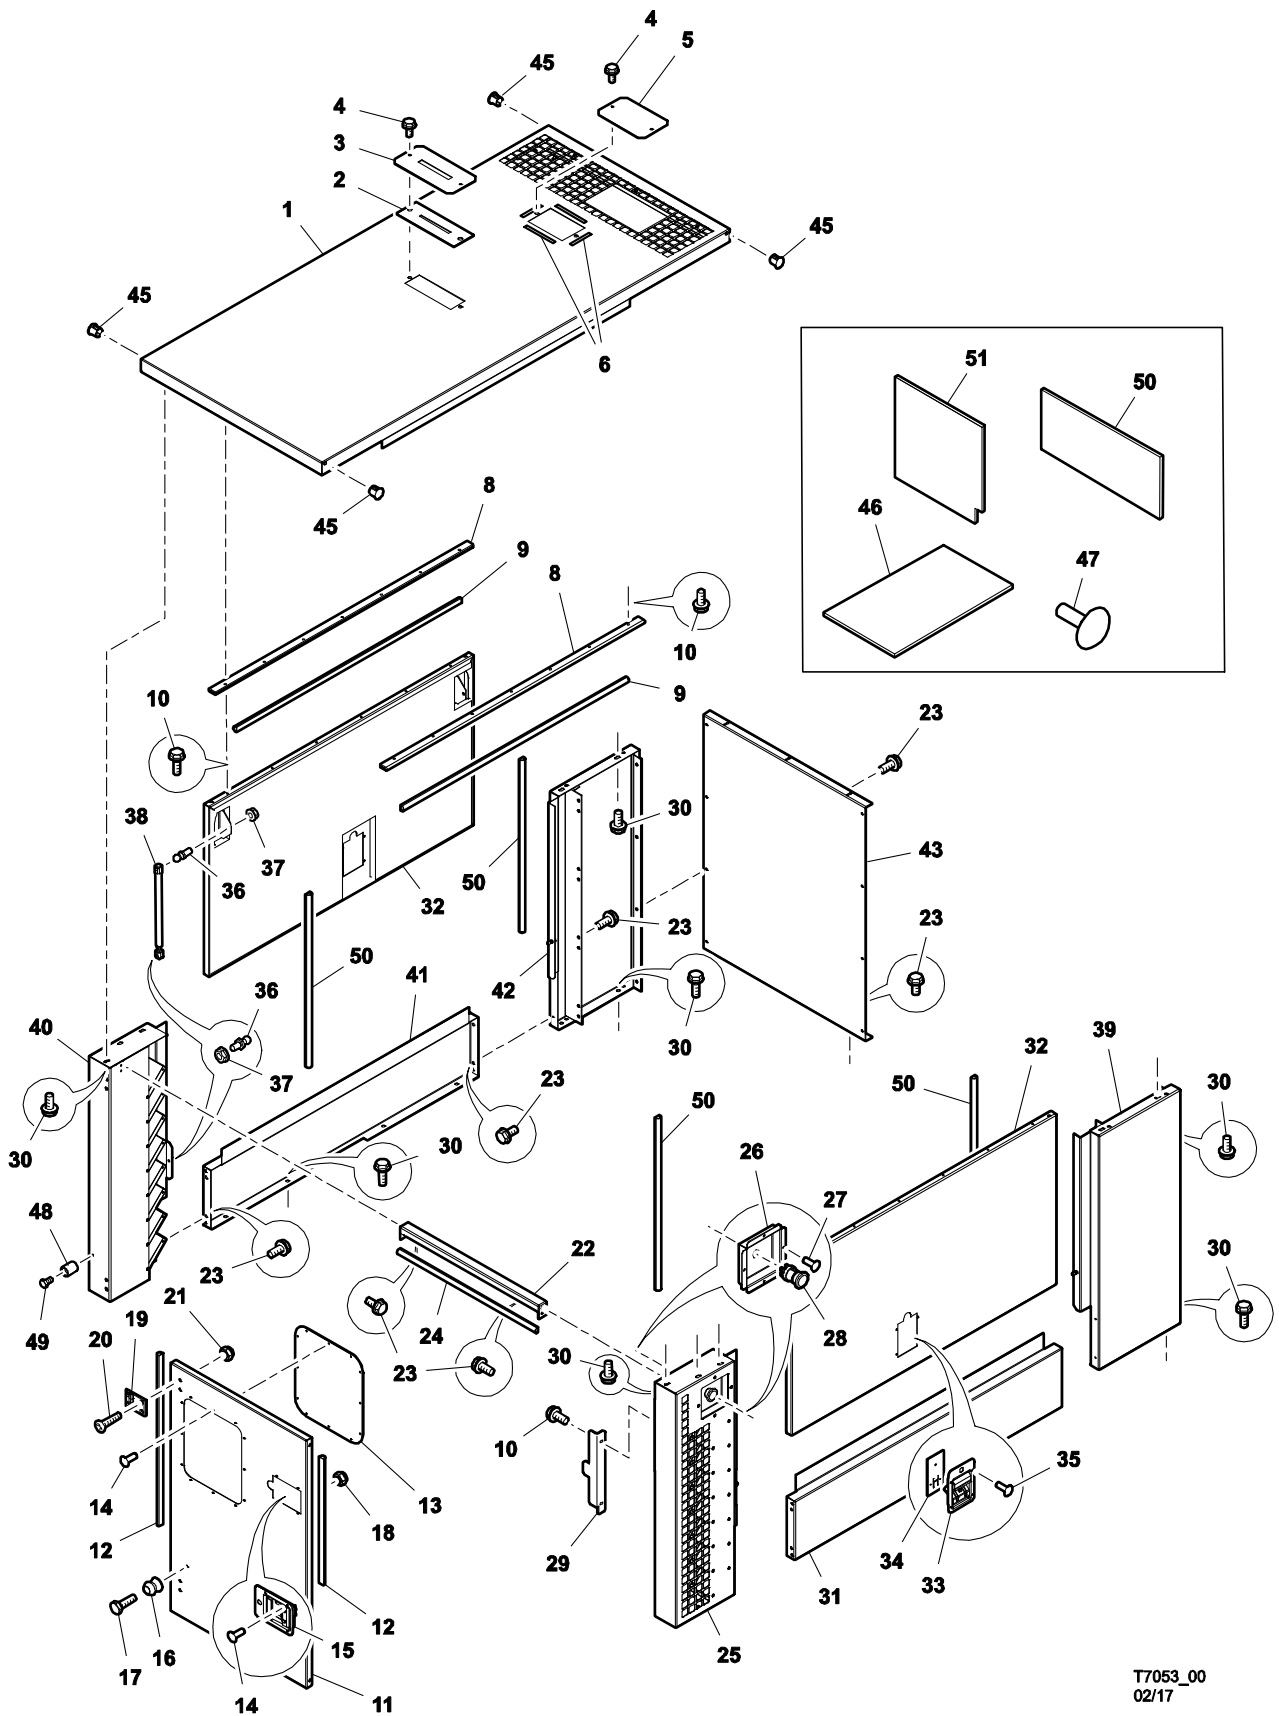


T7053_00
02/17

ENCLOSURE

Item	Part Number	Description	Remarks	Serial Number	Qty
1	46696181	PANEL ASSEMBLY			1
1	46696182	PANEL, PAINTED			1
2	22896666	SEAL, COVER			1
3	22682488	COVER			1
4	23330491	SCREW			4
5	22312409	COVER			1
6	22617666	SEAL			4
8	22513840	HINGE			2
9	22617674	STRIP, RUBBER SEAL			2
10	36797652	SCREW			62
11	46696189	DOOR ASSEMBLY	W/Ref. 11-21		1
11	46696190	DOOR, PAINTED			1
12	22617674	STRIP, RUBBER SEAL			2
13	22635973	PLEXIGLASS			1
14	22684971	RIVET			16
15	36793602	LATCH			1
16	92922863	CATCH			1
17	96701461	SCREW			1
18	96703806	NUT			1
19	46556610	HINGE			2
20	46561404	SCREW			8
21	35278530	NUT			4
22	22638282	SUPPORT			1
23	36797652	SCREW			34
24	22617674	STRIP, RUBBER SEAL			1
25	46696154	PANEL	W/Ref. 25-29		1
25	46696155	PANEL, PAINTED			1
26	22682512	BOX, E-STOP			1
27	22684971	RIVET			4
28	22503692	SWITCH, EMERGENCY STOP			1
29	22628770	SUPPORT			1

ENCLOSURE (CONT'D)



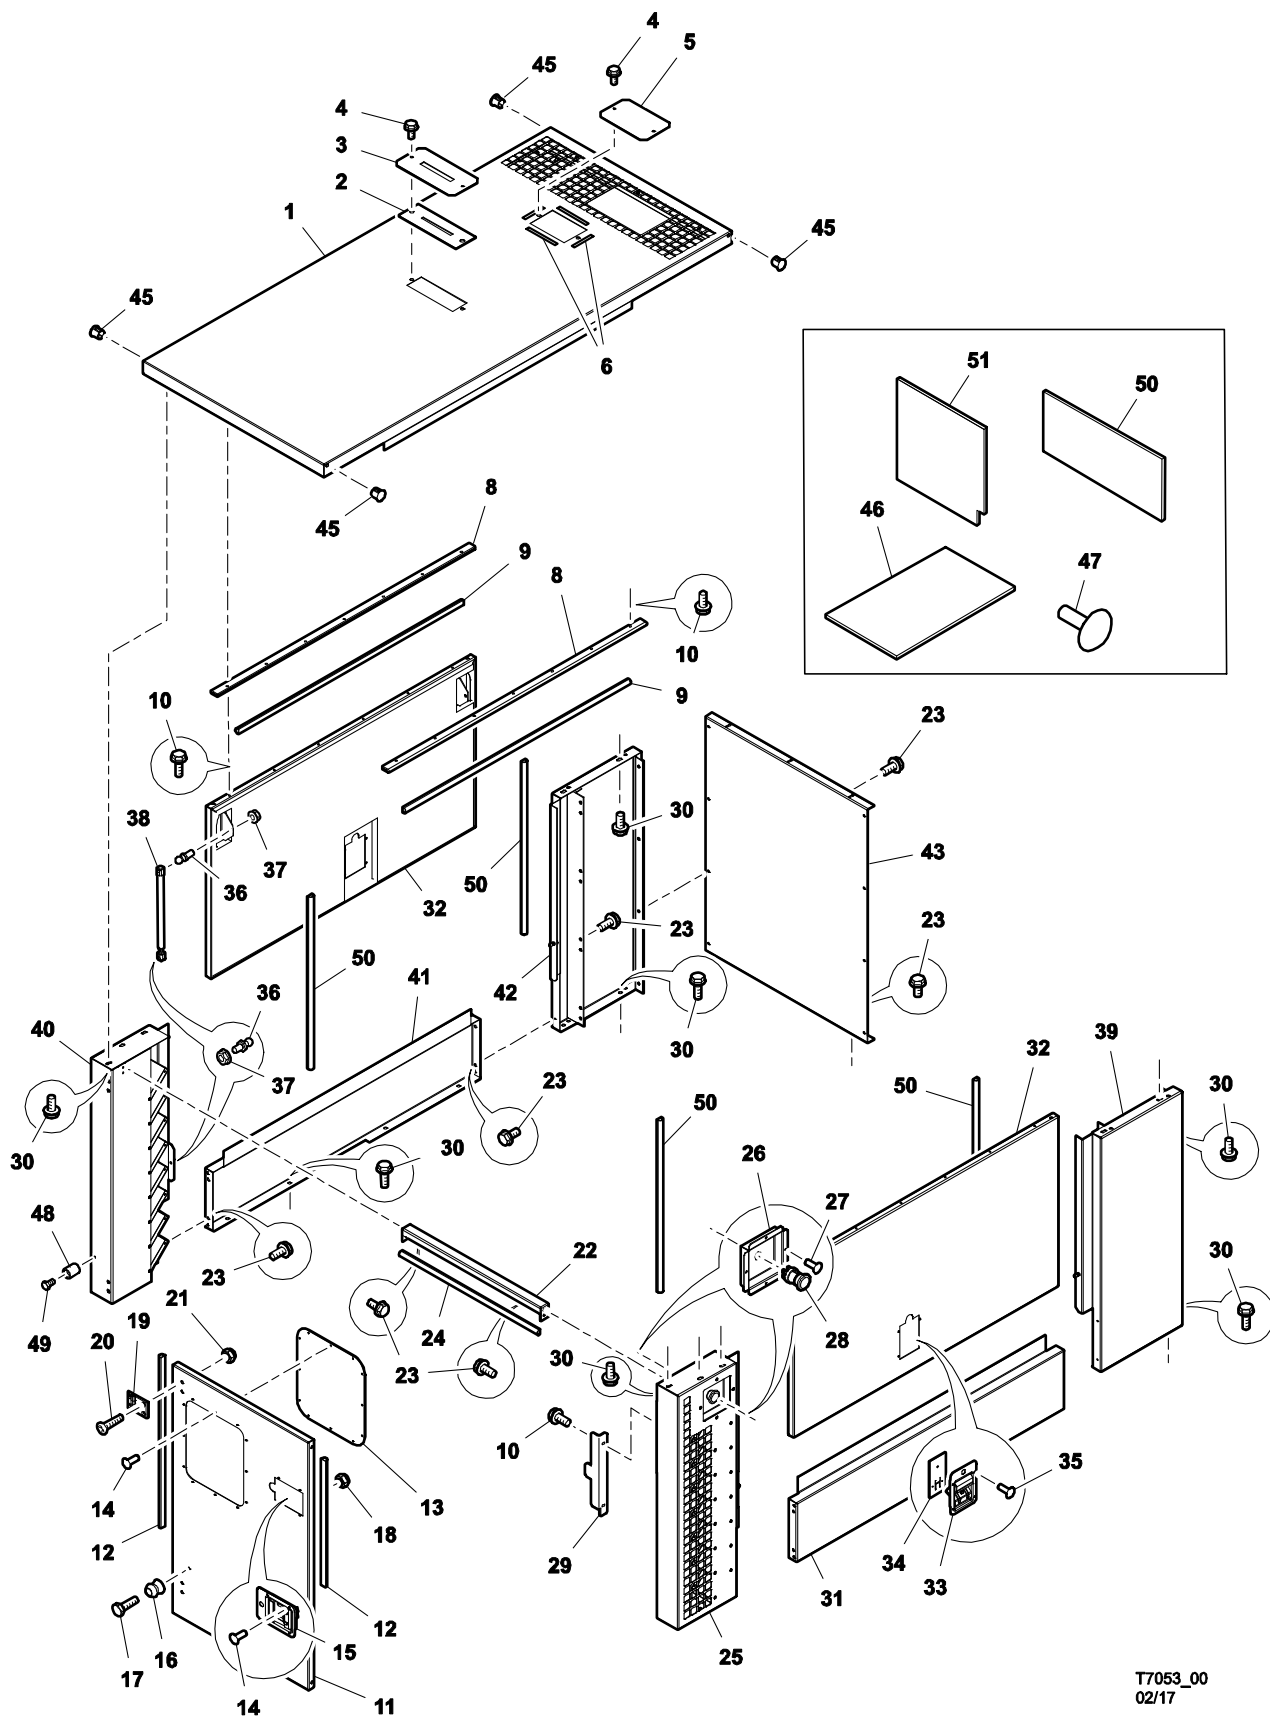


T7053_00
02/17

ENCLOSURE (CONT'D)

Item	Part Number	Description	Remarks	Serial Number	Qty
30	22959936	SCREW			16
31	46696391	PANEL			1
32	46696183	DOOR ASSEMBLY	W/Ref. 32-37		2
32	46696184	DOOR, PAINTED			2
33	36793602	LATCH			2
34	22869937	SEAL			2
35	22684971	RIVET			8
36	35337328	STUD, BALL			8
37	36881886	NUT			8
38	35600261	SPRING			4
39	46696217	PANEL ASSEMBLY			1
39	22874754	PANEL, PAINTED			1
40	46696152	PANEL ASSEMBLY			1
40	46696153	PANEL, PAINTED			1
41	46696392	PANEL			1
42	46696216	PANEL ASSEMBLY			1
42	22874762	PANEL, PAINTED			1
43	22610562	PANEL, FRONT			1
45	36896462	PLUG			4
46	92949742	FOAM FIELD KIT (with adhesive)	1,9 m x 1,5 m x 25 mm (7' x 5' x 1")		1
46	92949767	FOAM FIELD KIT (with adhesive)	1,9 m x 1,5 m x 50 mm (7' x 5' x 2")		1
46	92949759	FOAM FIELD KIT (with adhesive)	0,95 m x 1,5 m x 25 mm (3' x 5' x 1")		1
46	92949775	FOAM FIELD KIT (with adhesive)	0,95 m x 1,5 m x 50 mm (3' x 5' x 2")		1
46	46592579	FOAM FIELD KIT (no adhesive)	1,9 m x 1,5 m x 50 mm (7' x 5' x 2")		1
46	46592580	FOAM FIELD KIT (no adhesive)	0,95 m x 1,5 m x 50 mm (3' x 5' x 2")		1
47	46570819	RETAINER	order as required		x
48	92922855	CATCH			1
49	96701461	SCREW			1
50	22617674	STRIP, RUBBER SEAL			4
51	22559033	FIBREGLASS, SIDE			2
52	22800460	FIBREGLASS, FRONT PANEL			1


DECALS AND DOCUMENTATION

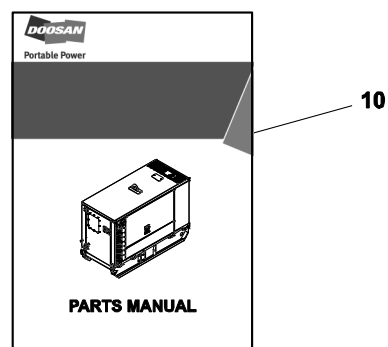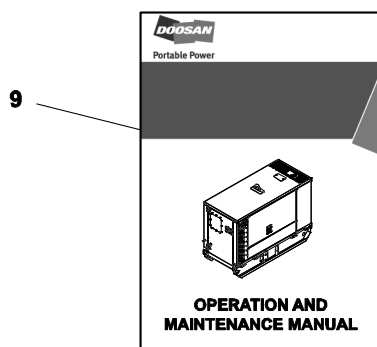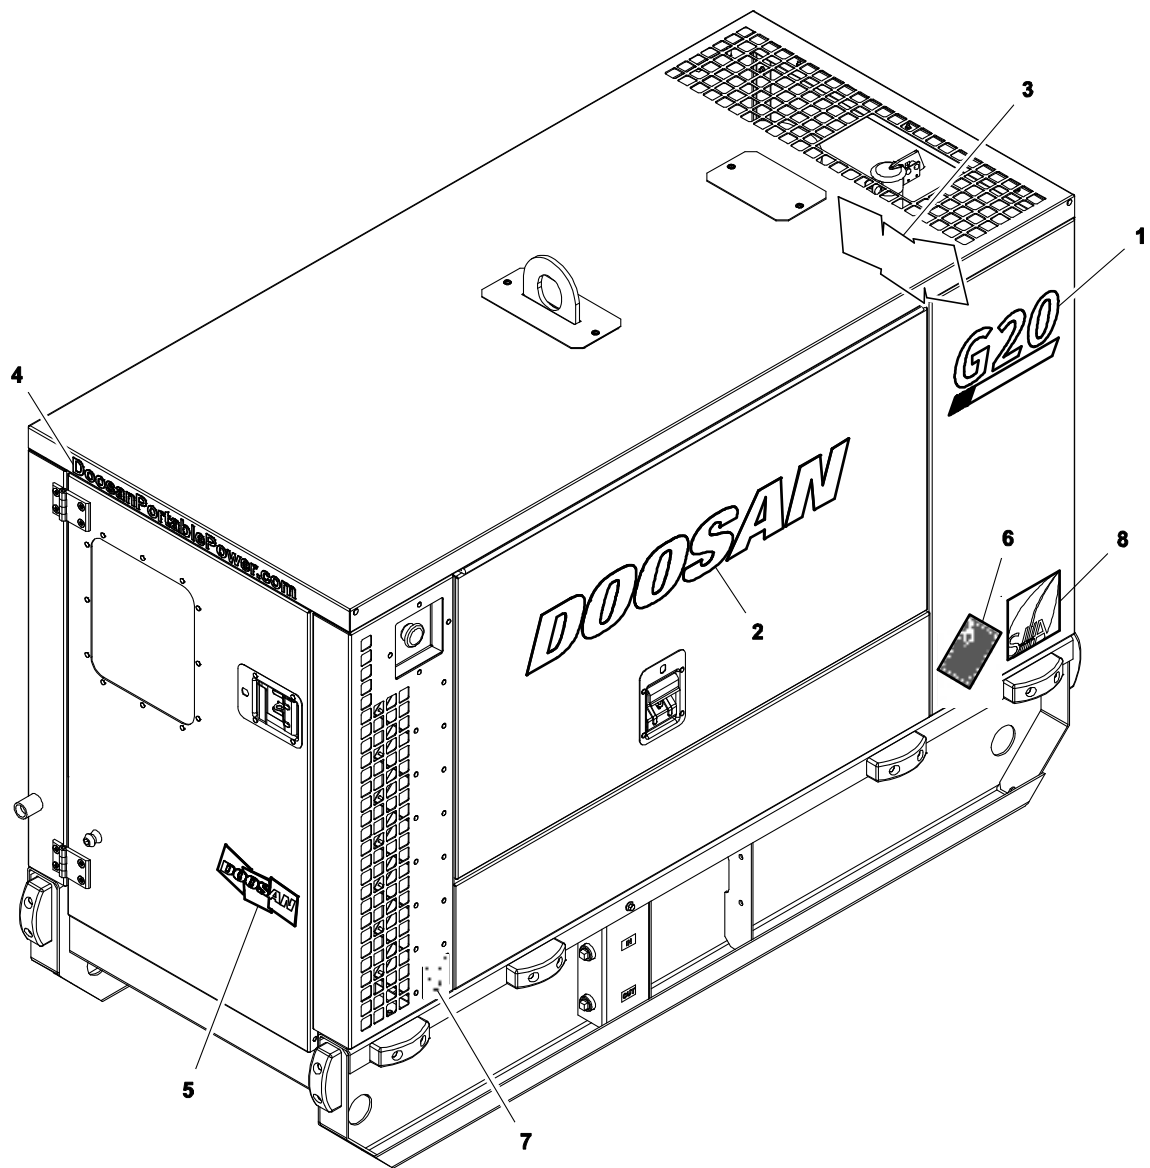

T7070_00
01/17

[illegible]


DECALS AND DOCUMENTATION

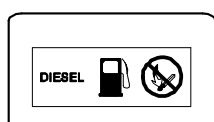


1



2

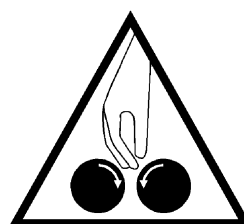

3

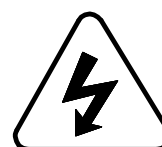


4




5



6

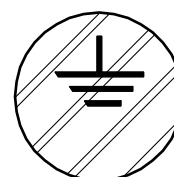

7

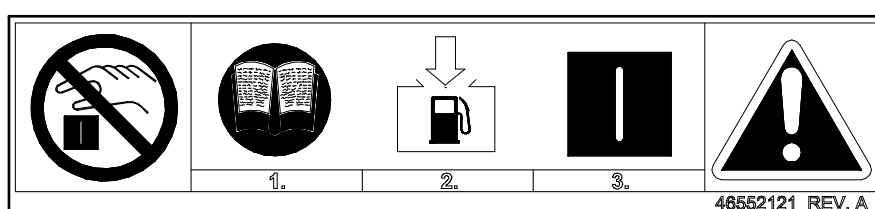


8

DECALS AND DOCUMENTATION

[illegible]

ALTERNATOR ASSEMBLY

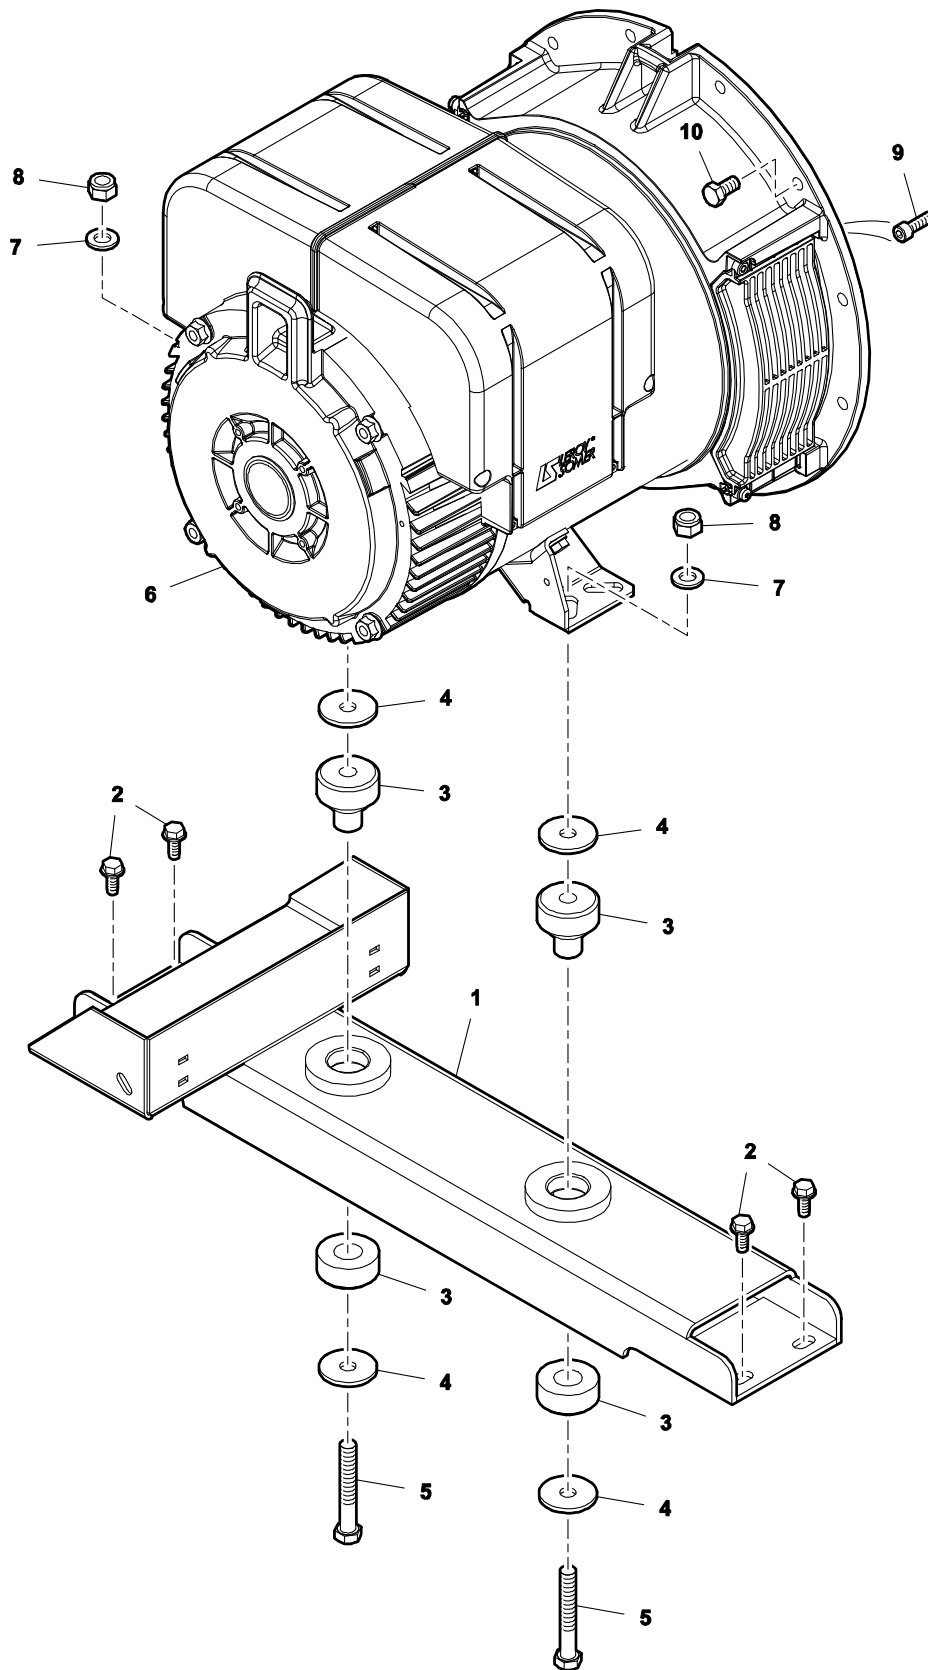


T7049_00
01/17

ALTERNATOR ASSEMBLY

[illegible]

ALTERNATOR PARTS

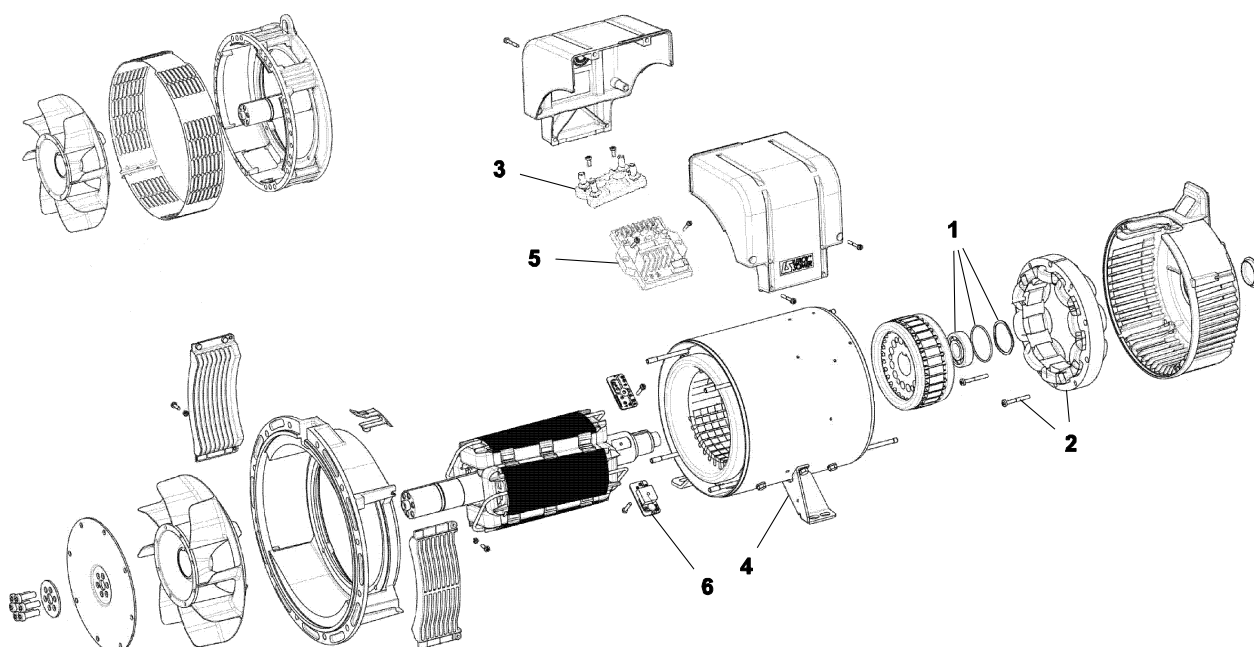


T7078_00
02/17

ALTERNATOR PARTS	
------------------	--

[illegible]

BATTERY


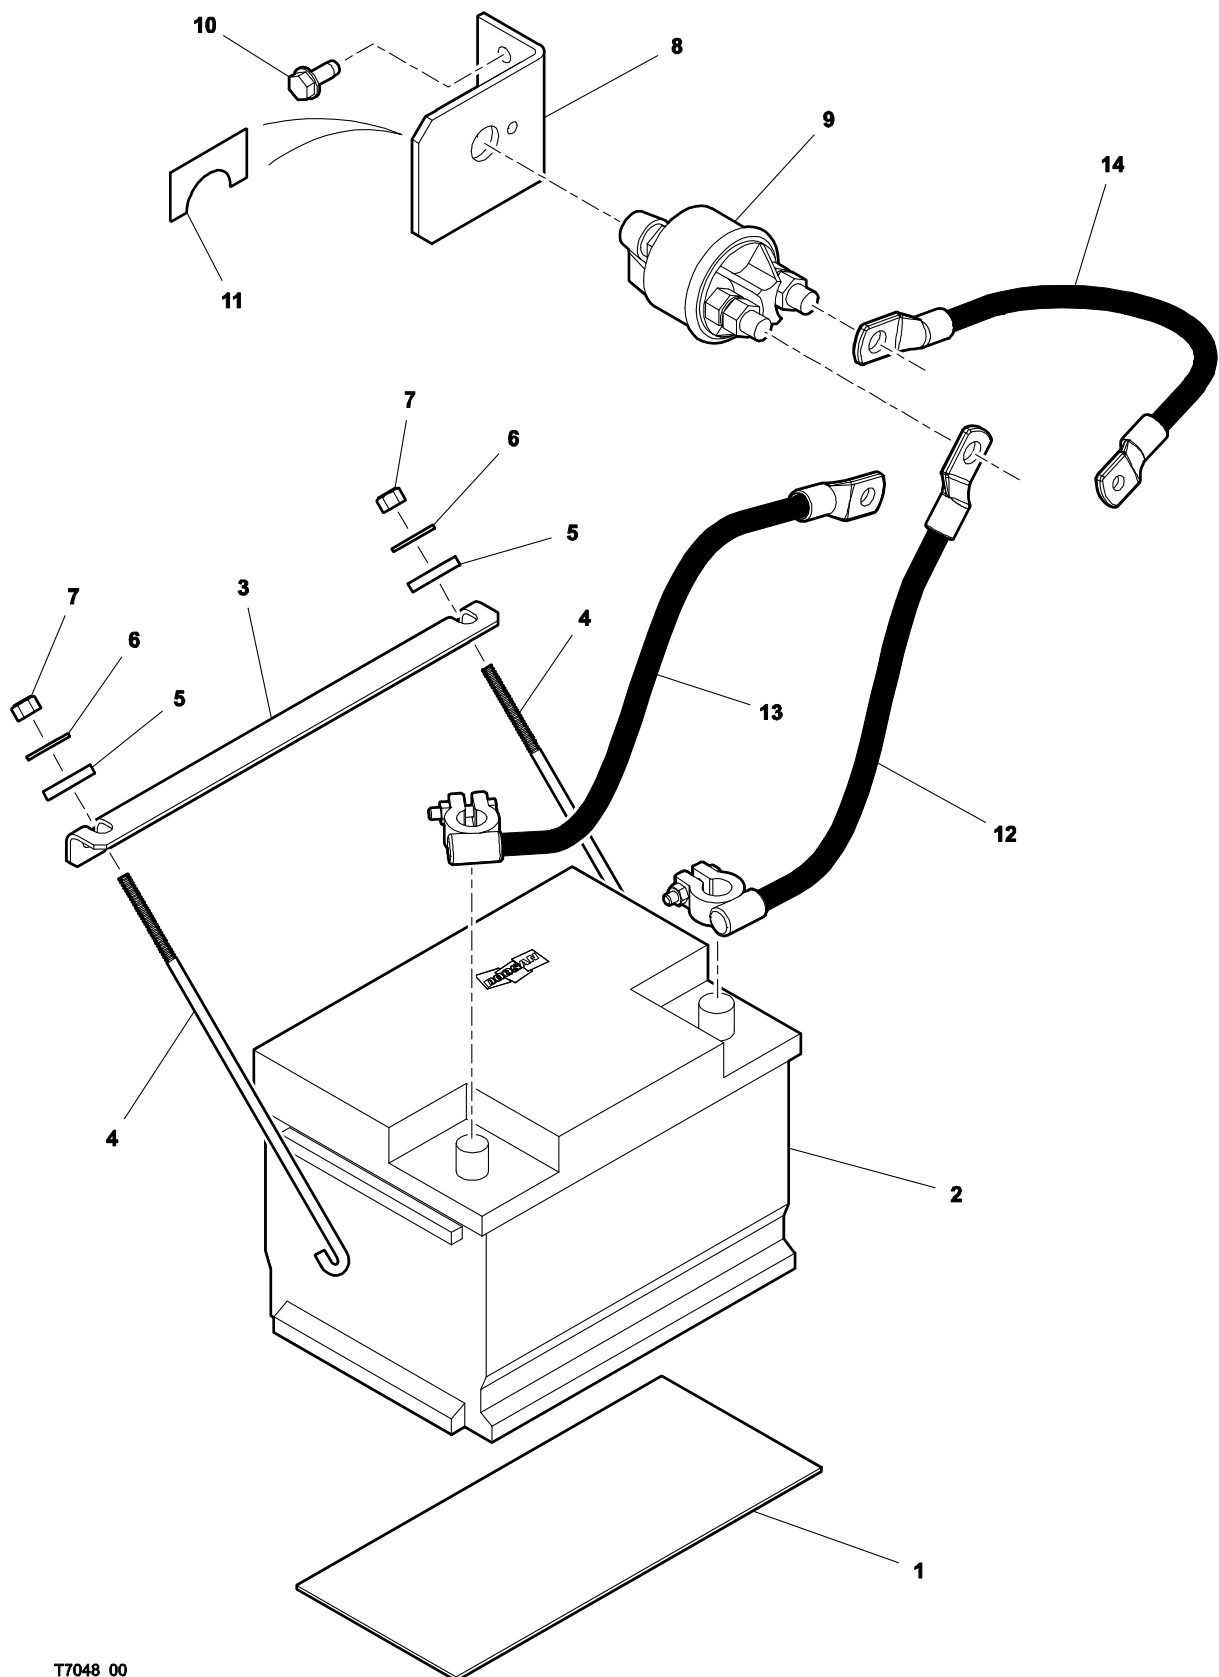


T7048_00
01/17

BATTERY	
---------	--

[illegible]

CONTROL PANEL (analogue)

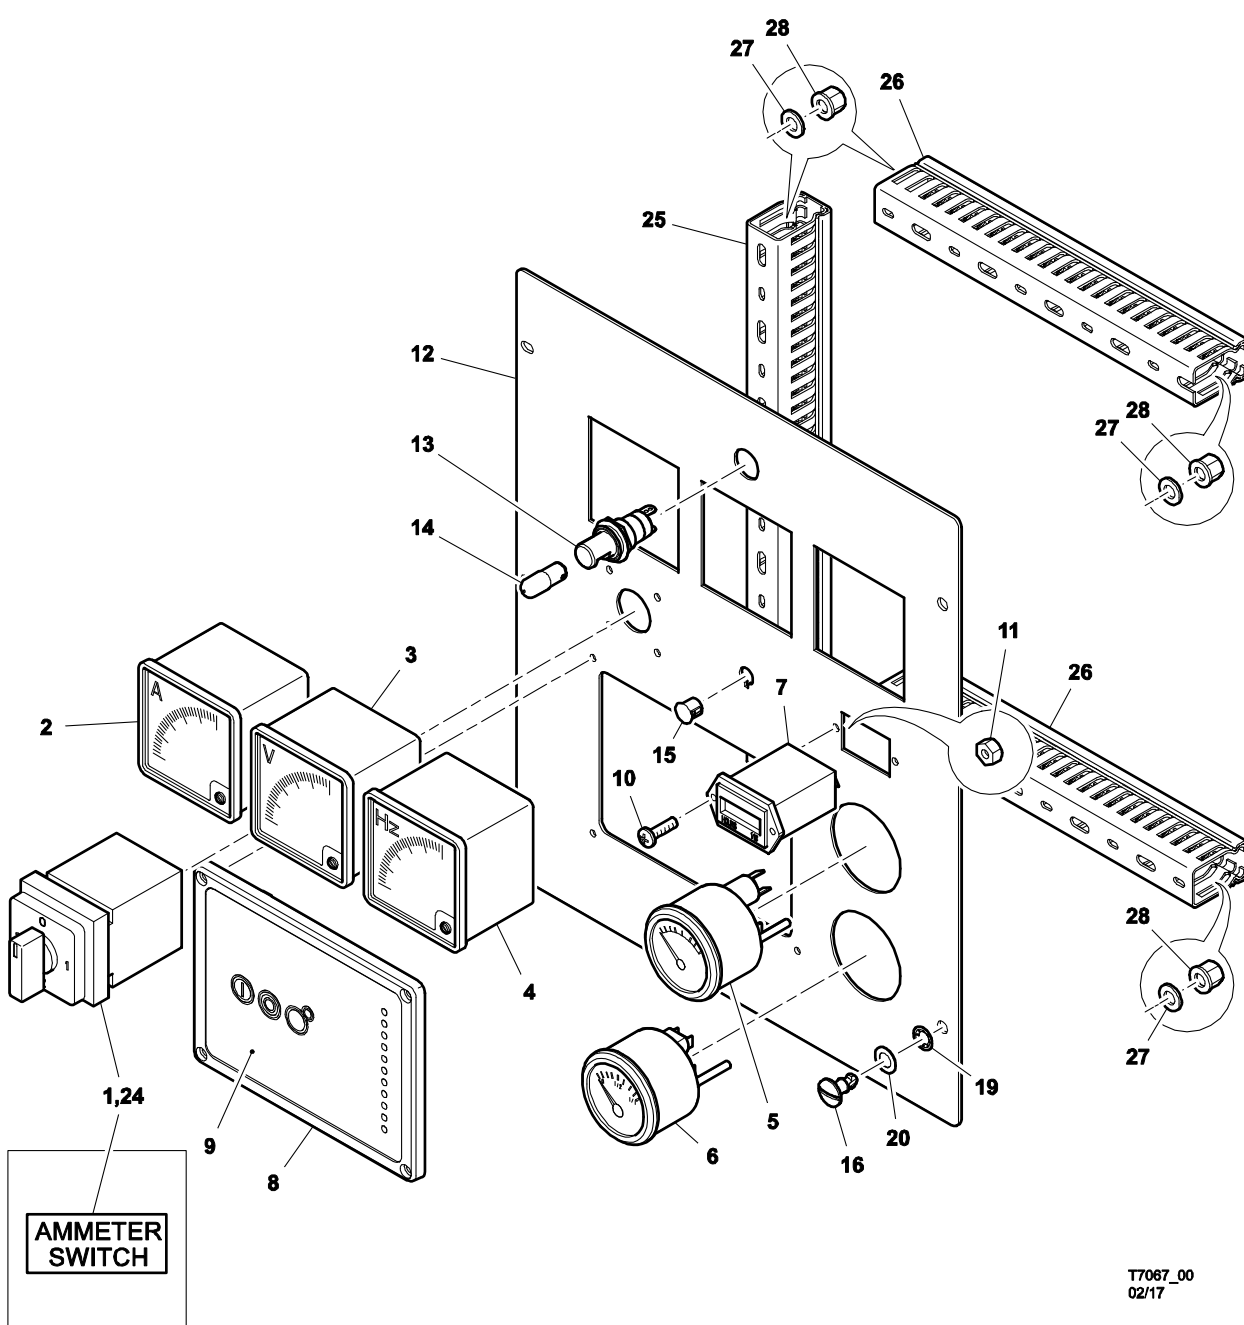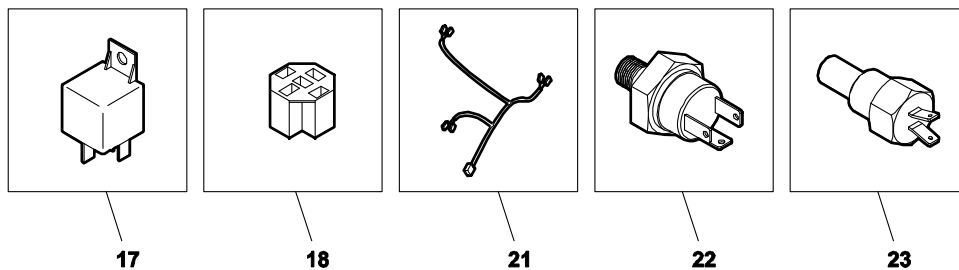


T7067_00
02/17

CONTROL PANEL (analogue)

Item	Part Number	Description	Remarks	Serial Number	Qty
1	46651792	SWITCH, AMMETER			1
2	46588485	AMMETER			1
3	22672471	VOLTMETER			1
4	22672547	HERTZMETER			1
5	22773345	GAUGE, VOLTMETER			1
6	22773337	GAUGE, FUEL LEVEL			1
7	22780985	HOURLMETER			1
8	22778005	CONTROLLER	W/Ref. 9		1
9	22715395	DECAL, AUTO START CONTROLLER			1
10	95942520	SCREW			2
11	95930517	NUT			2
12	46697923	PANEL			1
13	36852622	LAMP ASSEMBLY			1
14	22503825	BULB, LAMP			1
15	46574759	PLUG, HOLE			1
16	22465165	STUD			2
17	46622121	RELAY			1
18	46541017	BASE, RELAY			1
19	22499495	RETAINER			2
20	22499487	WASHER			2
21	46696890	HARNESS			1
22	54757935	SWITCH, OIL PRESSURE			1
23	46697879	SWITCH, TEMPERATURE			1
24	22776611	DECAL, AMMETER SWITCH			1
25	46697678	MANAGER	0,35 m long		1
26	46697678	MANAGER	0,24 m long		2
27	92304583	WASHER			6
28	46699178	NUT			6

CONTROL PANEL (digital)

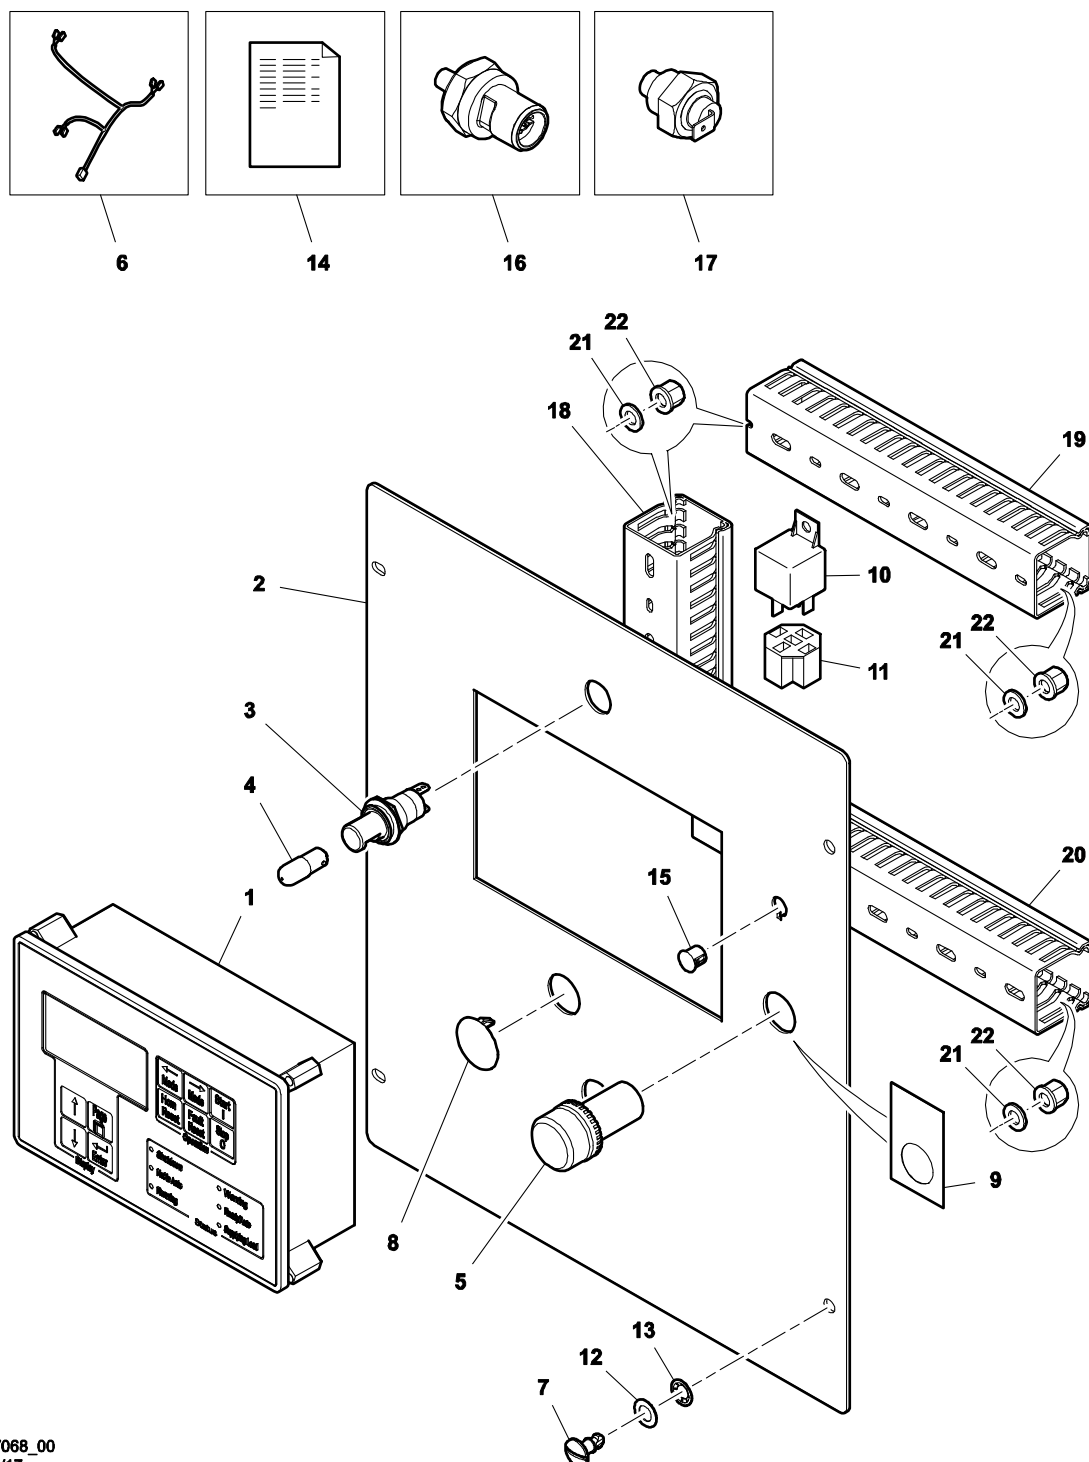


T7068_00
02/17

CONTROL PANEL (digital)

[illegible]

POWER PEDESTAL ASSEMBLY

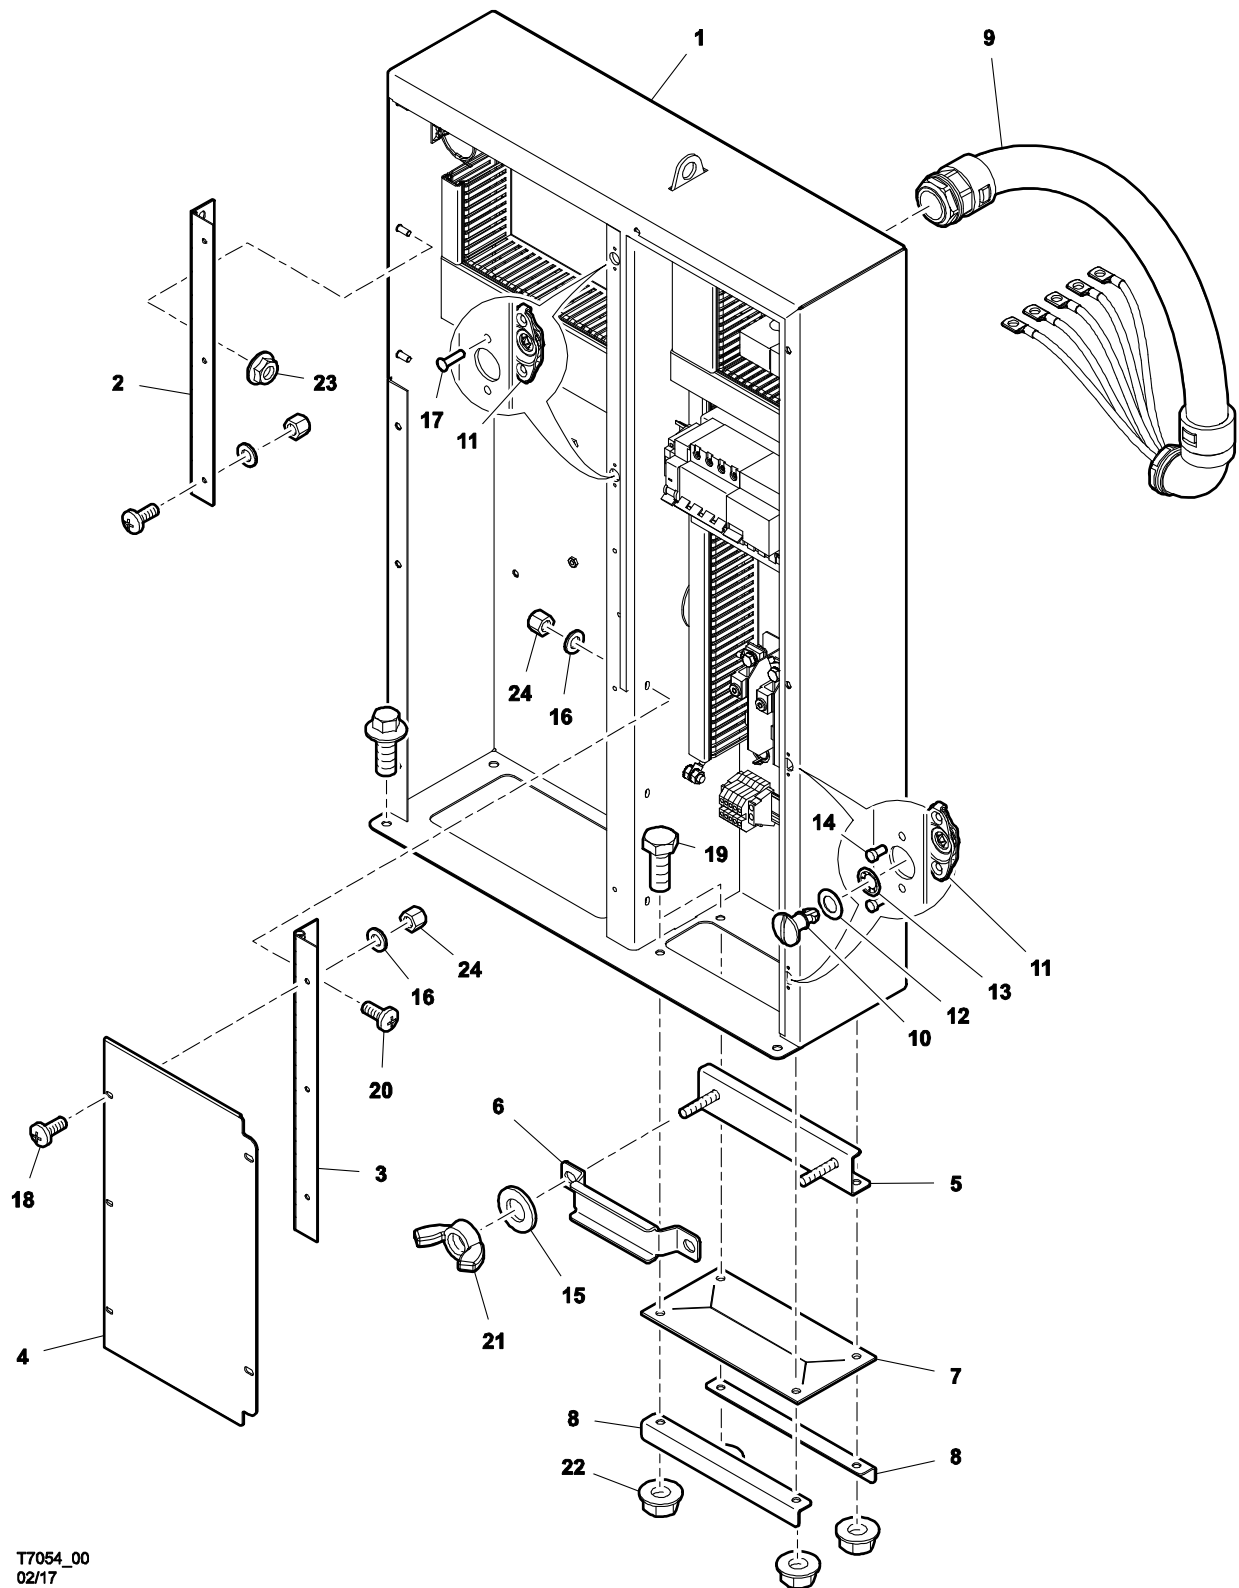

T7054_00
02/17


POWER PEDESTAL ASSEMBLY

Item	Part Number	Description	Remarks	Serial Number	Qty
1	46696528	ENCLOSURE			1
2	46587620	HINGE			1
3	46696608	HINGE			1
4	46696530	DOOR			1
5	46696550	SPACER			1
6	46696551	HOLDER			1
7	46696552	RUBBER			1
8	46696553	HOLDER			2
9	46696531	CONDUIT			1
10	22511901	STUD			2
11	22465207	RECEPTACLE			4
12	22499487	WASHER			2
13	22499495	RETAINER			2
14	22515605	RIVET			4
15	22787444	WASHER			2
16	92304583	WASHER			6
17	46651220	RIVET			4
18	46556647	SCREW			3
19	96702824	SCREW			4
20	96703251	SCREW			3
21	22787436	WINGNUT			2
22	36881886	NUT			4
23	96704176	NUT			3
24	96704580	NUT			6

POWER PEDESTAL ELECTRICAL LAYOUT

Item	Part Number	Description	Remarks	Serial Number	Qty
1	46696545	SPACER			1
2	46631381	RAIL, DIN			1
3	46551576	RAIL, DIN			1
4	22677017	RAIL, DIN			1
5	22721088	TRANSFORMER, CURRENT			3
6	23269186	BREAKER, CIRCUIT			1
7	23270325	TRIP, COIL 12V			1
8	22747299	HOLDER			3
9	22750970	TERMINAL			6
10	22768436	TERMINAL			3
11	22817522	TERMINAL			5
12	22832174	TERMINAL			5
13	46561639	TERMINAL			1
14	46561640	TERMINAL, EARTH			1
15	22825533	BARRIER			5
16	23189319	HORN			1
17	23339609	PLUG, BLANKING			1
18	92783281	PLUG			1
19	46696532	CABLE			3
20	46696533	CABLE			1
21	46696534	CABLE			1
22	46696638	HARNESS			1
23	36889608	SCREW	(M8-1.25 x 25)		1
24	36898096	SCREW			10
25	46652543	SCREW			2
26	23064587	SCREW			15
27	92304518	NUT			2
28	96745229	WASHER			2
29	46696639	MANGER	0,4 m long		2
30	46696640	MANGER	0,1 m long		1
31	46696640	MANGER	0,48 m long		1

POWER PEDESTAL ELECTRICAL LAYOUT (CONT'D)

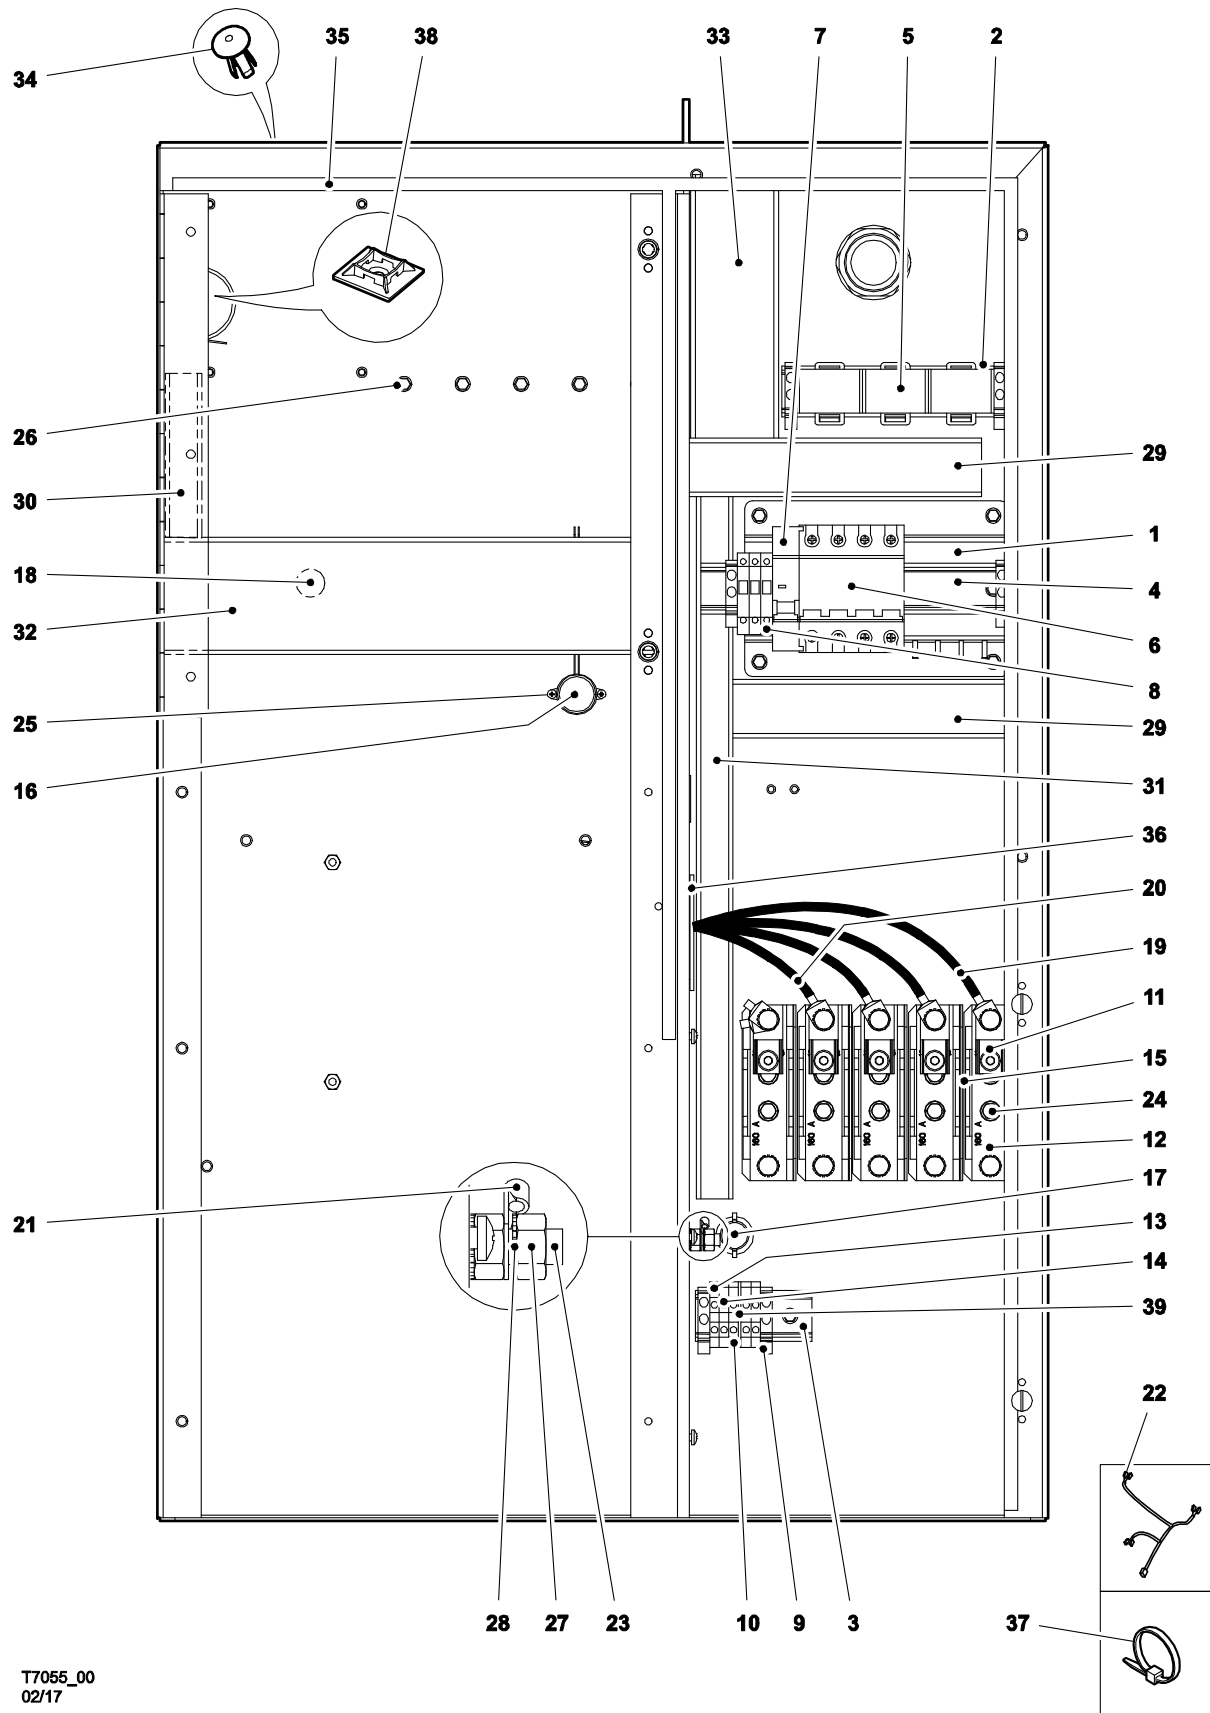


T7055_00
02/17

POWER PEDESTAL ELECTRICAL LAYOUT (CONT'D)

[illegible]

POWER PEDESTAL ASSEMBLY (TNS-30mA)

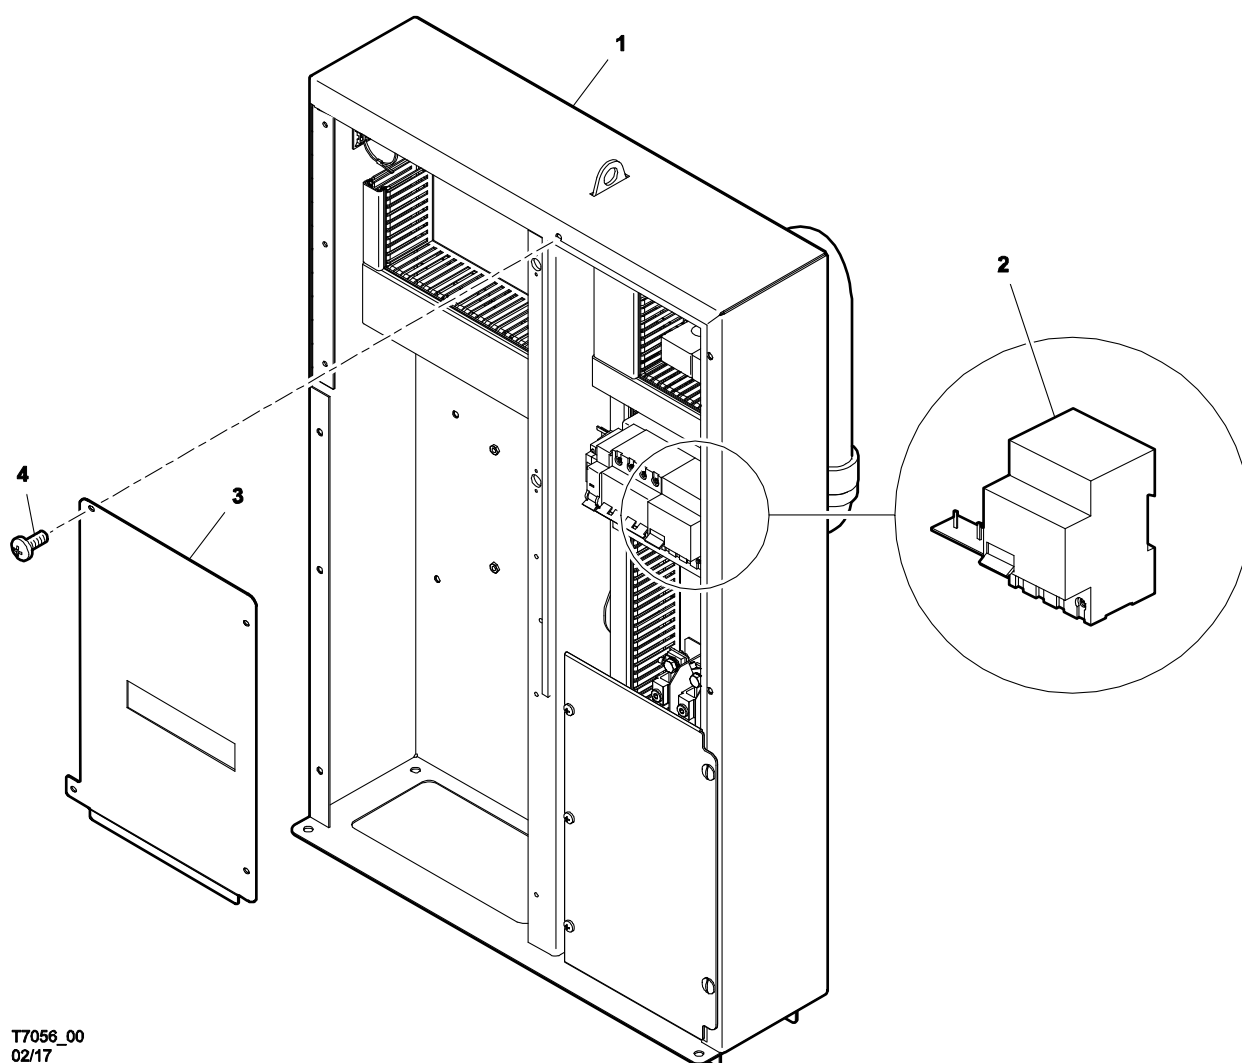


T7056_00
02/17

POWER PEDESTAL ASSEMBLY (TNS-30mA)

[illegible]

POWER PEDESTAL ASSEMBLY (TNS-300mA)

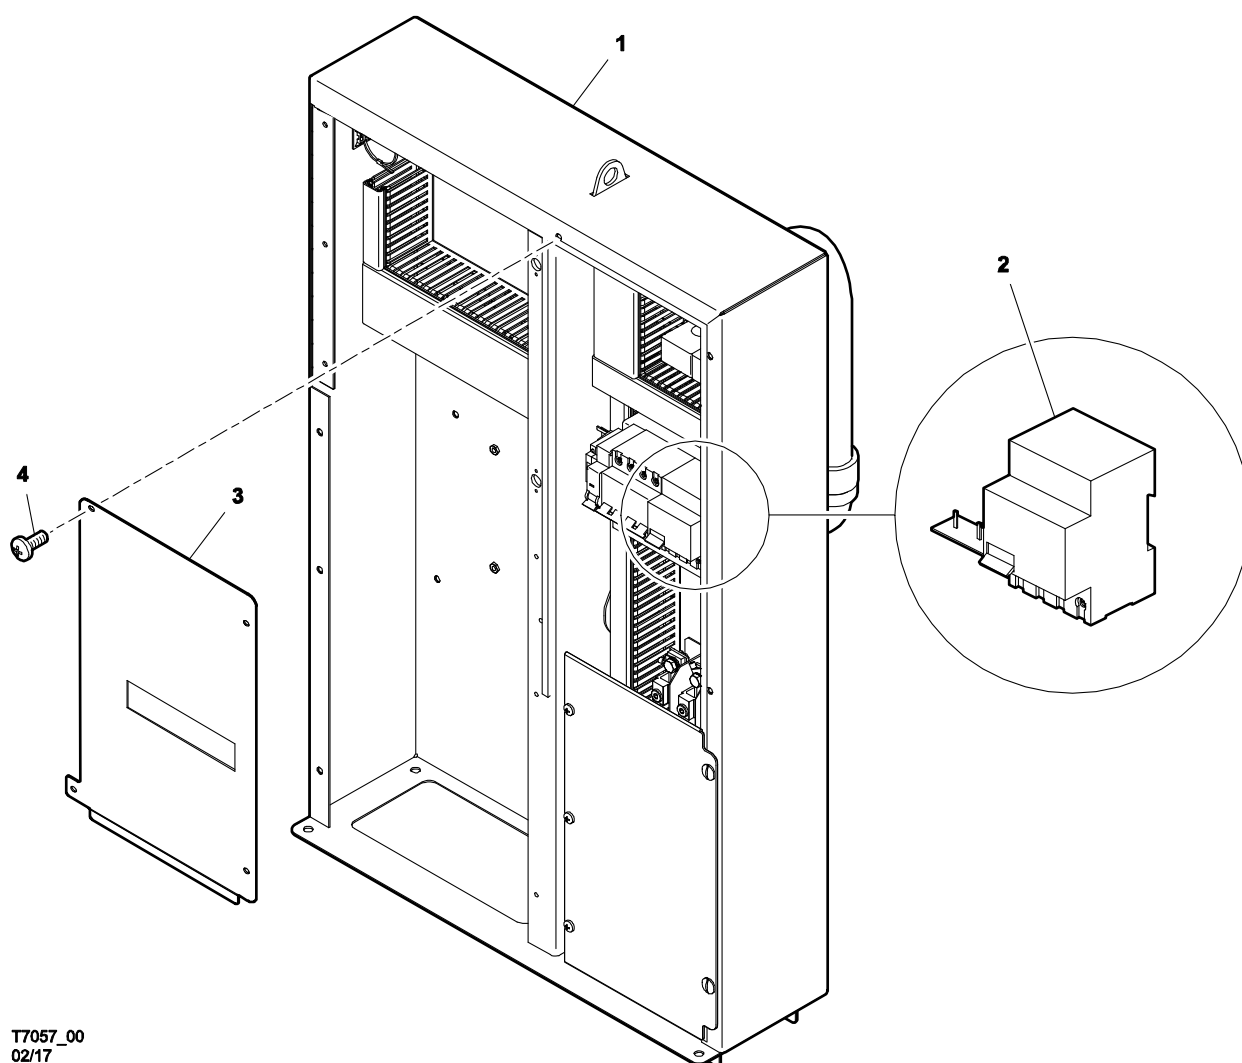


T7057_00
02/17

POWER PEDESTAL ASSEMBLY (TNS-300mA)

[illegible]

POWER PEDESTAL ASSEMBLY (TNS-ADJUSTABLE)

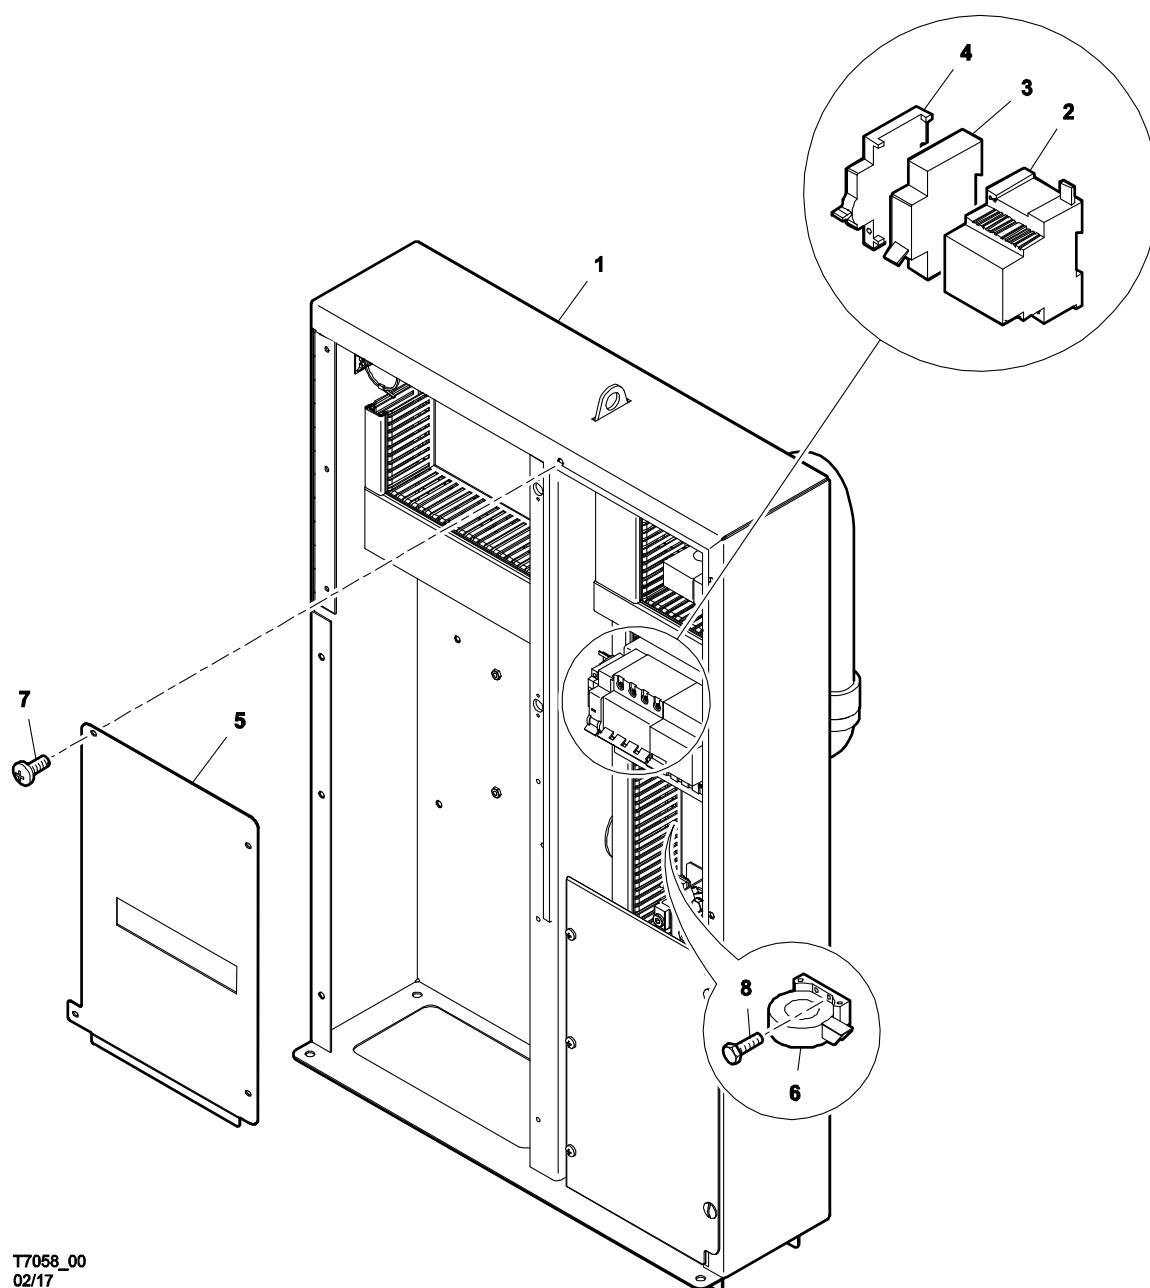


T7058_00
02/17

POWER PEDESTAL ASSEMBLY (TNS-ADJUSTABLE)

[illegible]

ENGINE ASSEMBLY

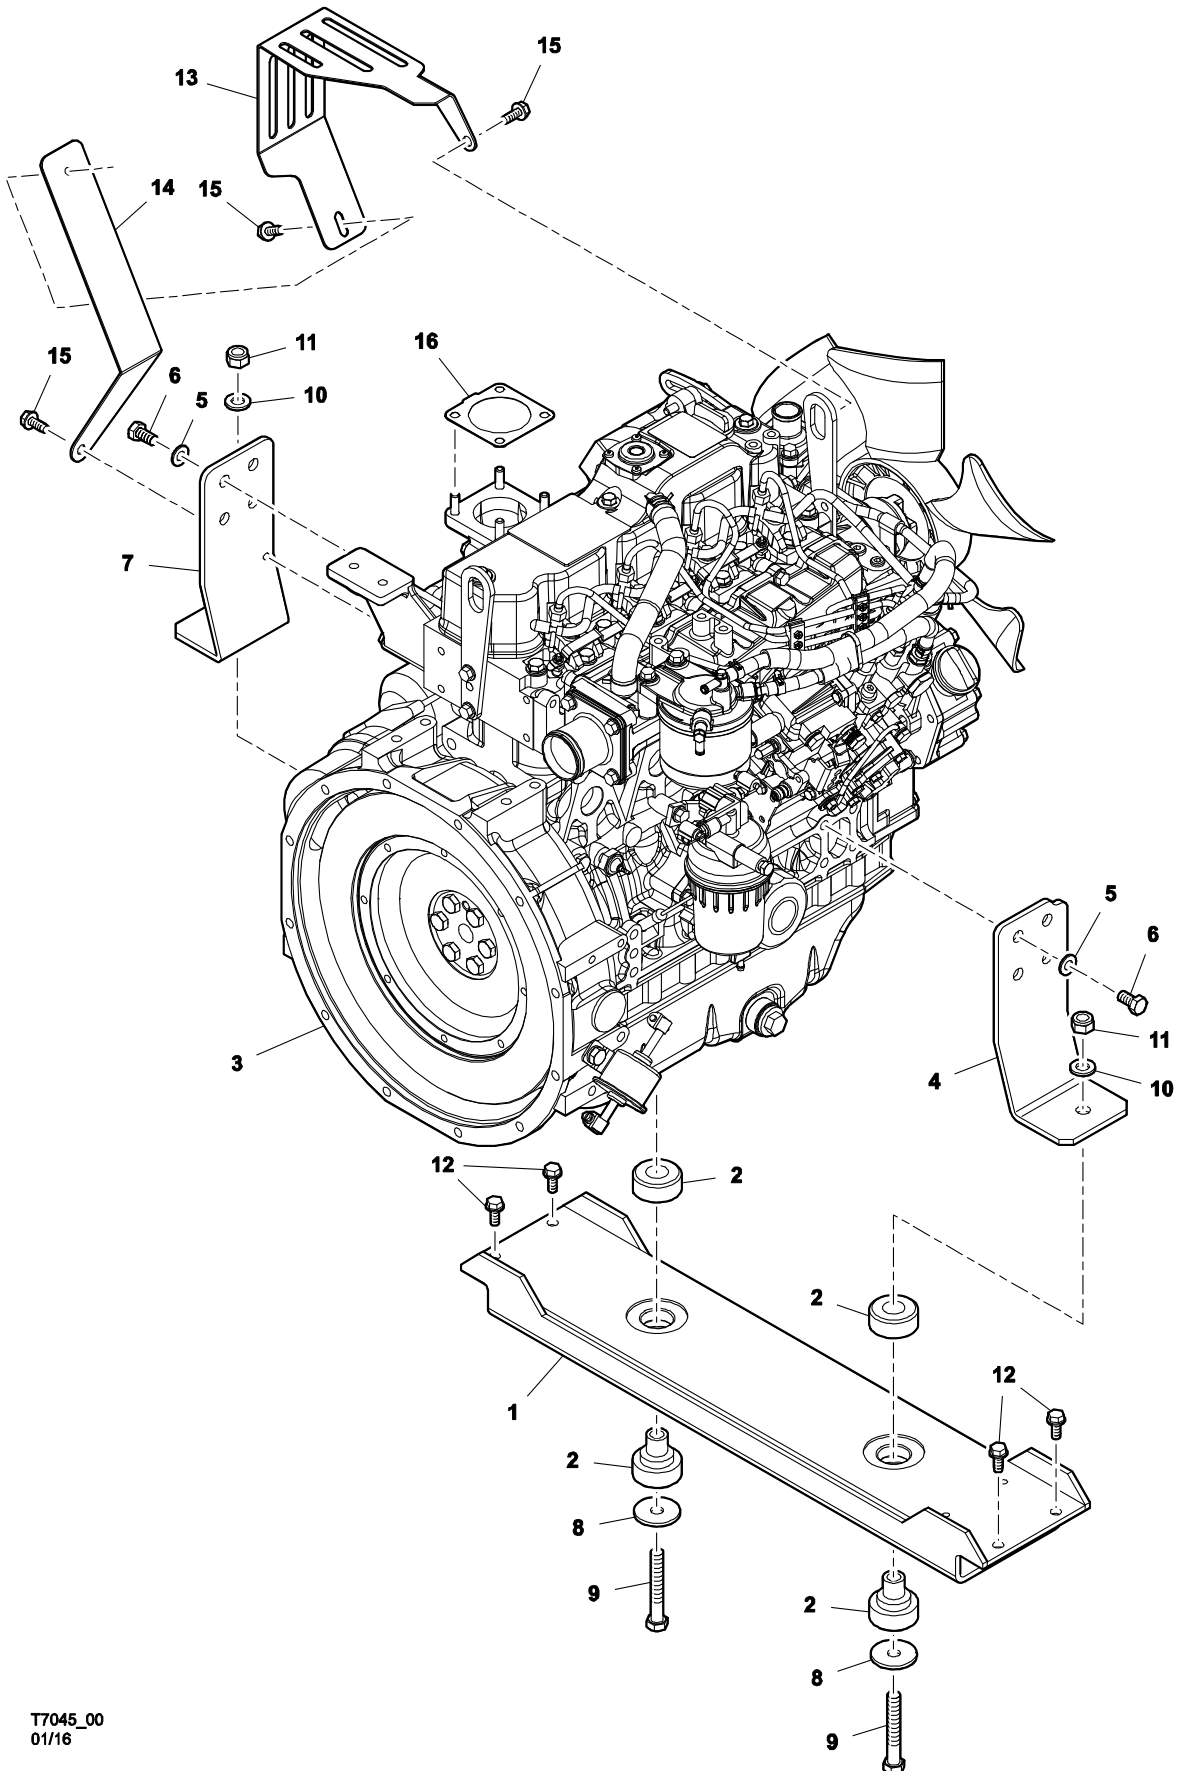


T7045_00
01/16

ENGINE ASSEMBLY

[illegible]


AIR INTAKE SYSTEM

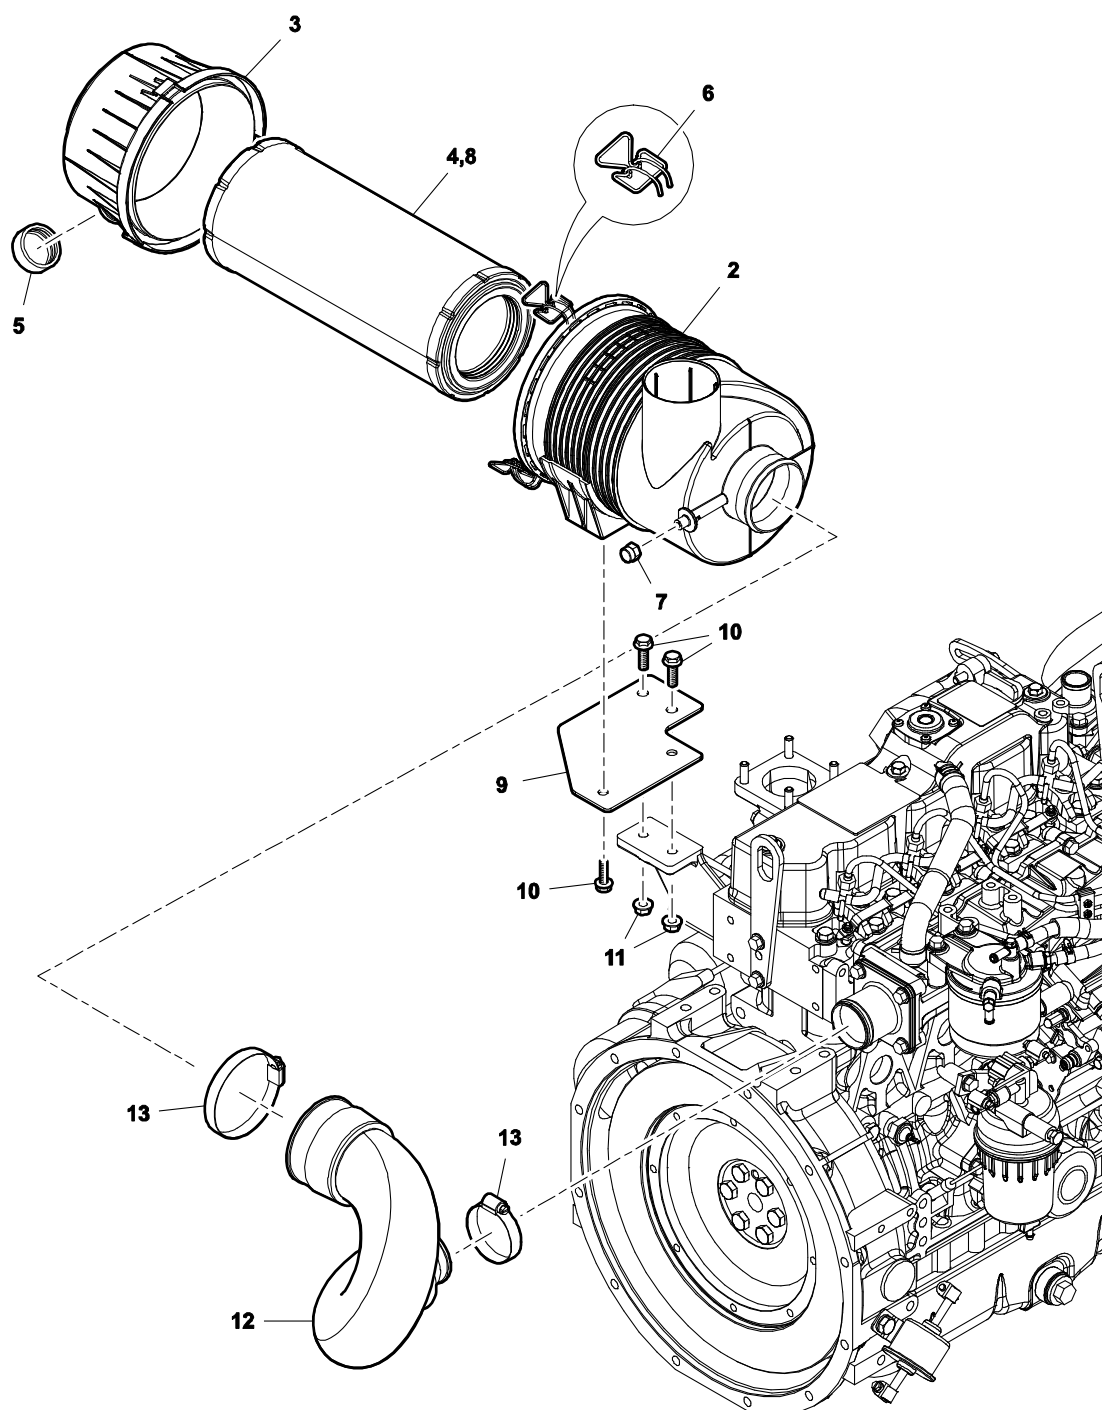

T7047_00
01/17

[illegible]

EXHAUST SYSTEM

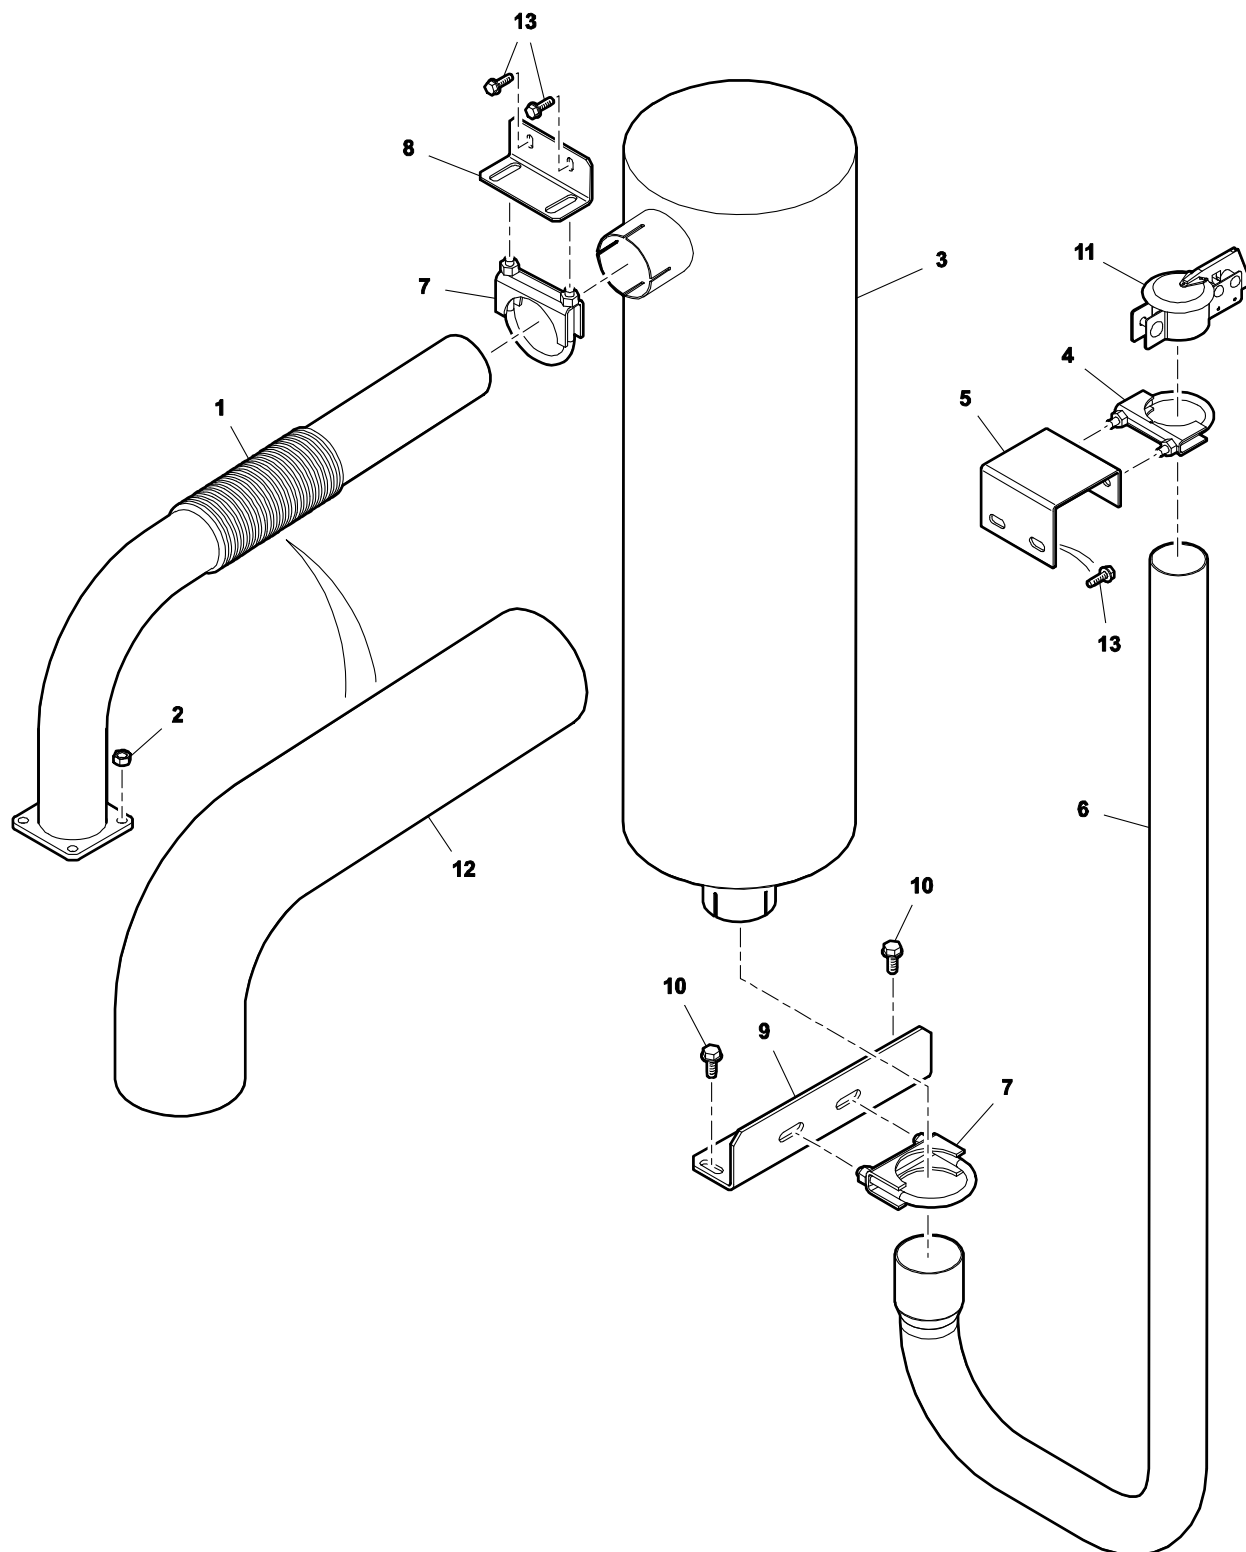


T7051_00
01/17

EXHAUST SYSTEM

[illegible]

FUEL SYSTEM

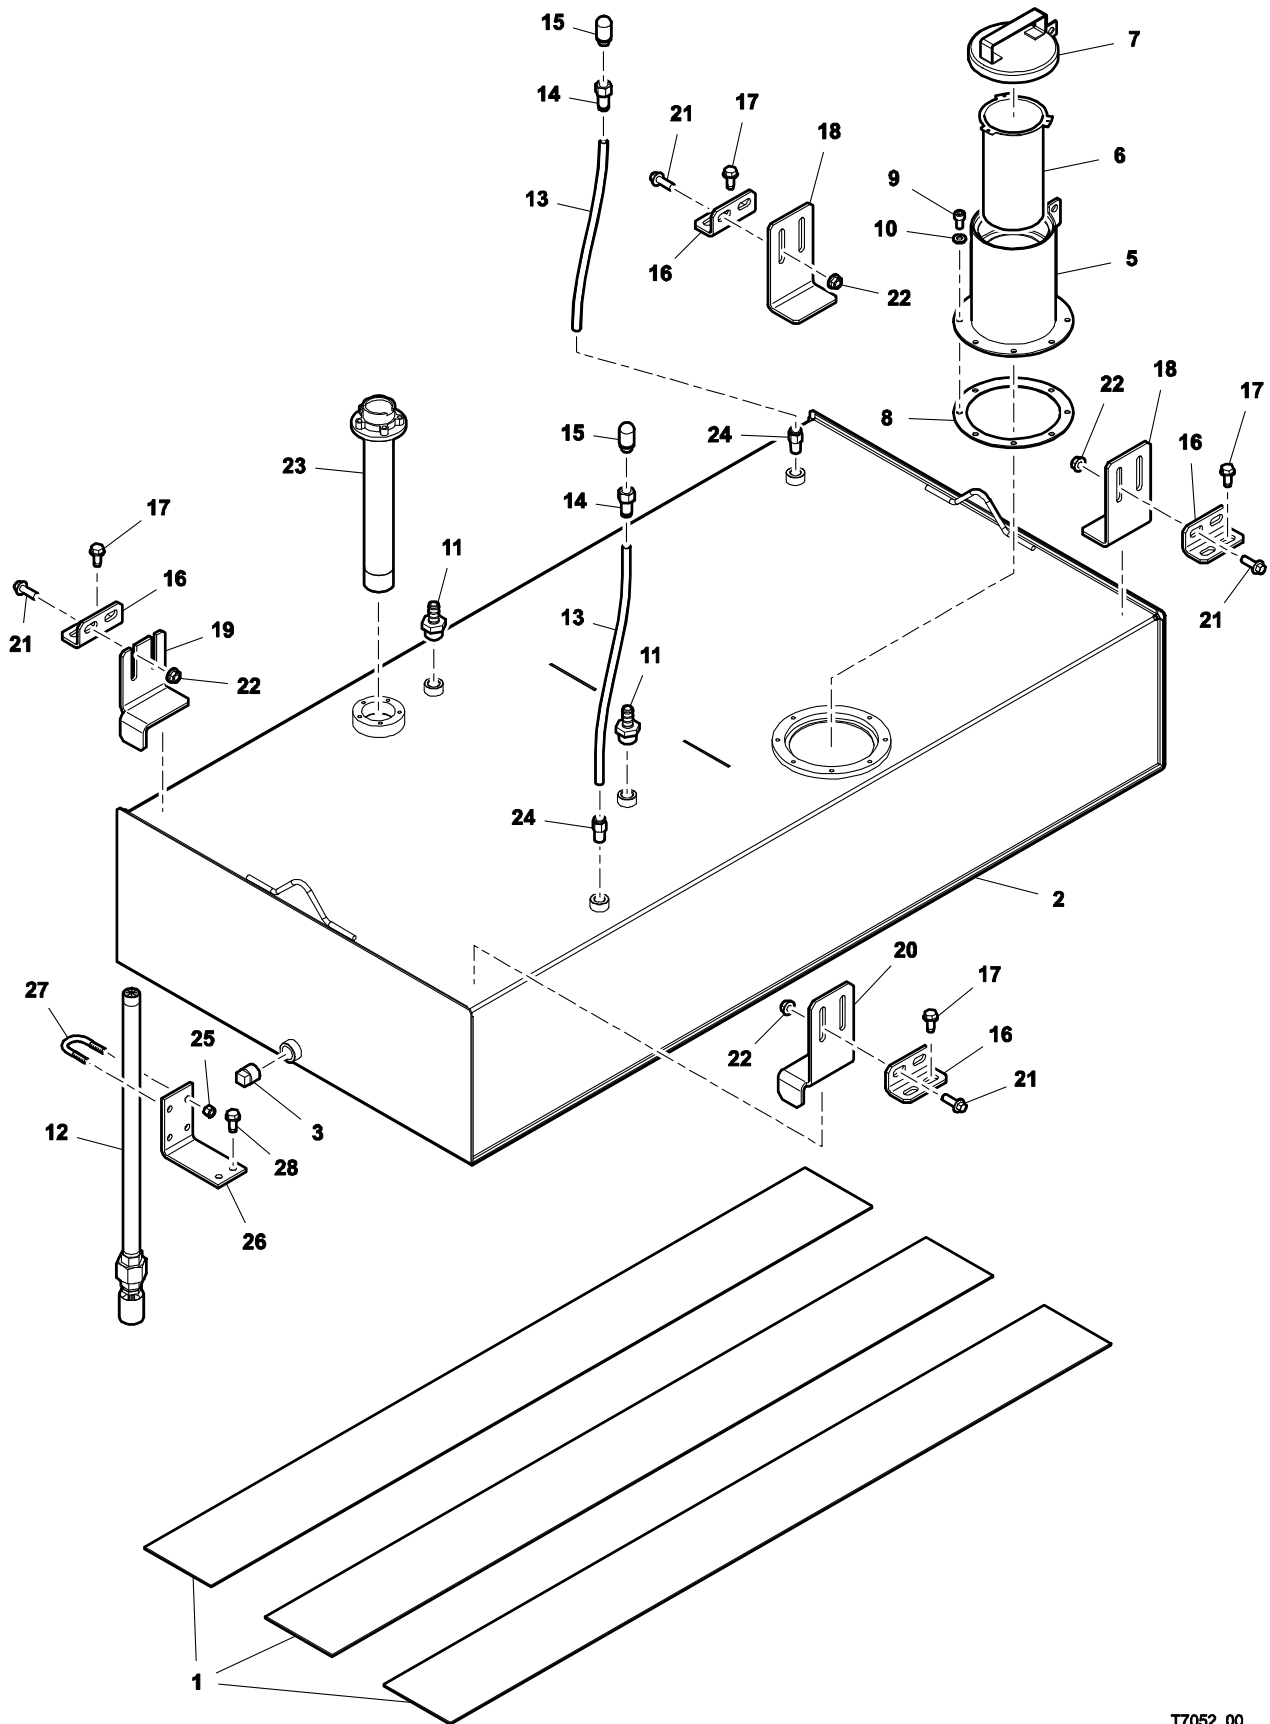


T7052_00
01/17

FUEL SYSTEM

Item	Part Number	Description	Remarks	Serial Number	Qty
1	22680771	PAD, FUEL TANK	1,2 m long		1
2	46696105	TANK, FUEL	W/Ref. 3-10		1
3	95992392	PLUG			1
4	46644139	FILLER NECK ASSEMBLY	W/Ref. 5-7		1
5	23015084	NECK, FILLER			1
6	36845022	STRAINER, FUEL			1
7	36845014	CAP			1
8	46553706	GASKET			1
9	35337070	SCREW			8
10	92341981	WASHER			8
11	46623638	CONNECTOR			2
12	22580351	SENSOR, CONTAINMENT LEVEL			1
13	35356484	TUBE, NYLON	0,8 m long		2
14	35369339	CONNECTOR			2
15	35322395	SILENCER, PNEUMATIC			2
16	22783245	BRACKET			4
17	35279025	SCREW			8
18	22765523	BRACKET			2
19	22785539	BRACKET			1
20	22765549	BRACKET			1
21	36889608	SCREW	(M8-1.25 x 25)		8
22	36881886	NUT			8
23	22579213	SENDER			1
24	35369347	CONNECTOR			2
25	95923298	NUT			4
26	22580336	BRACKET			1
27	22616353	U-BOLT			2
28	22959936	SCREW			2

FUEL SYSTEM

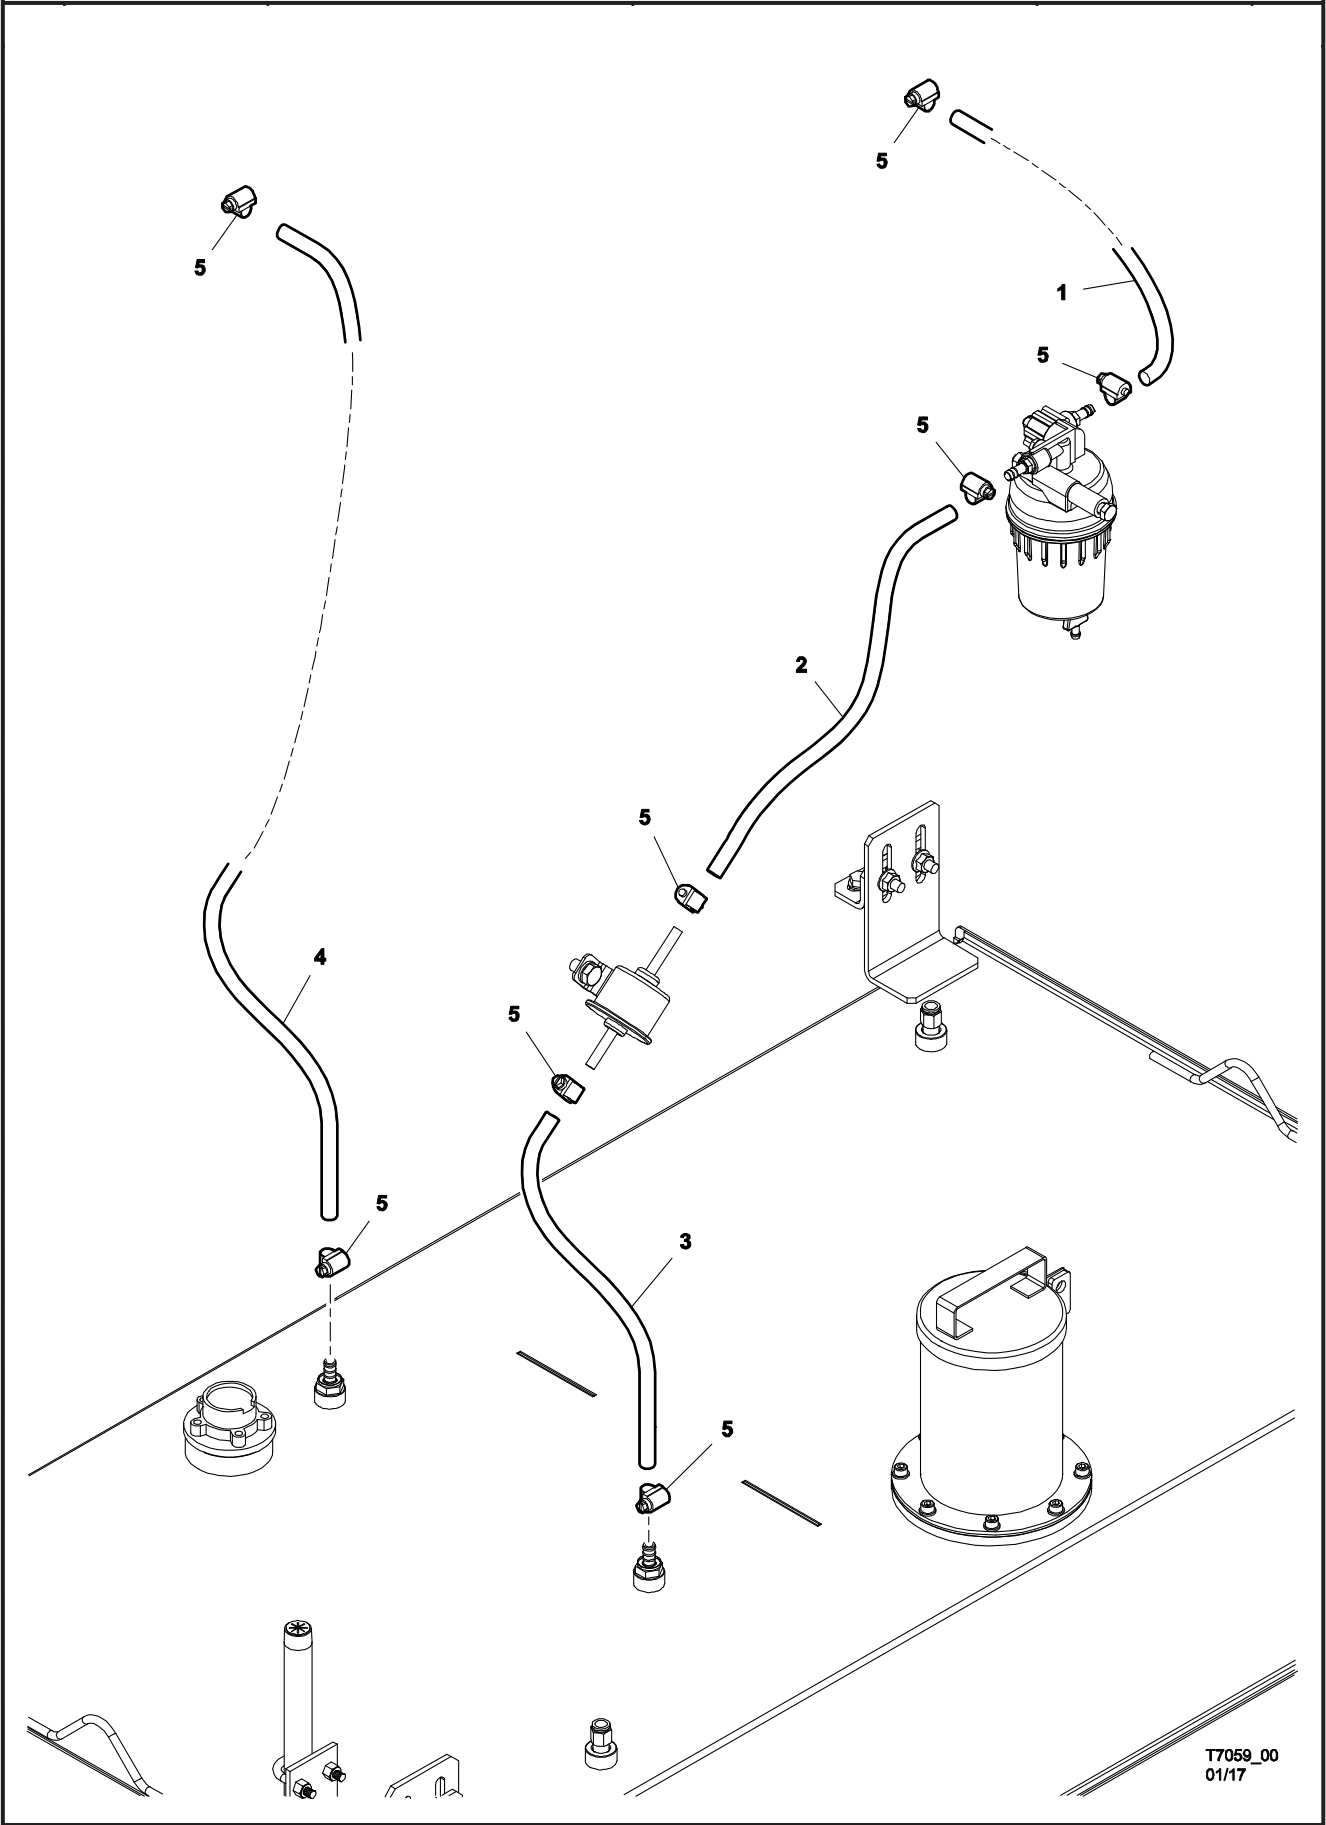


T7059_00
01/17

FUEL SYSTEM	
-------------	--

[illegible]

COOLING SYSTEM

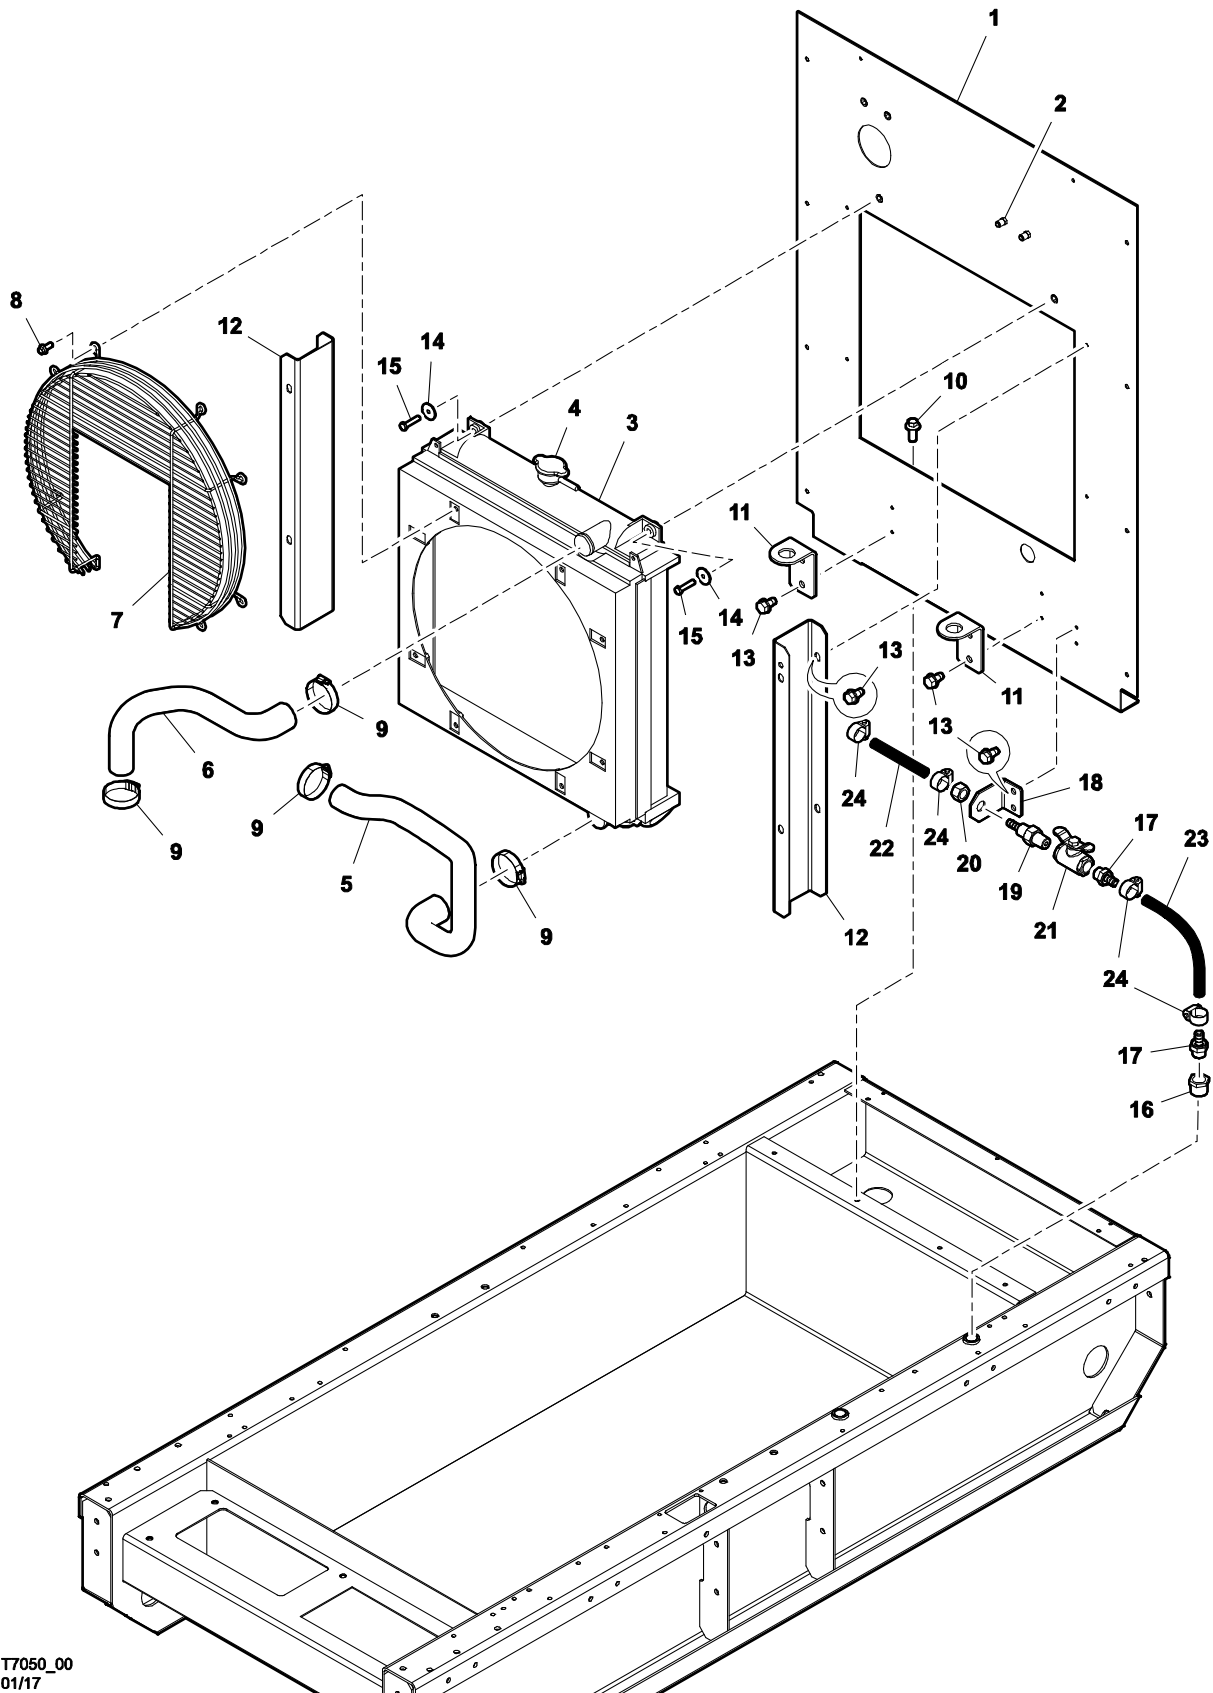


T7050_00
01/17

COOLING SYSTEM

Item	Part Number	Description	Remarks	Serial Number	Qty
1	46696296	SUPPORT, COOLER	W/Ref. 2		1
2	36921344	NUTSERT			6
3	46693291	RADIATOR ASSEMBLY			1
4		CAP			1
5	46698487	HOSE			1
6	46698485	HOSE			1
7	46698484	GUARD, FAN			1
8		SCREW			8
9	92253129	CLAMP			4
10	35279025	SCREW			3
11	46695376	BRACKET			2
12	46696354	BRACKET			2
13	36797652	SCREW			10
14	23076656	WASHER			2
15	36771178	SCREW			2
16	95952248	BUSH			1
17	46623638	CONNECTOR			2
18	46651963	BRACKET			1
19	46651966	FITTING			1
20	96701750	NUT, HEX			1
21	22375141	VALVE			1
22	54576624	HOSE	0,15 m long - (8 mm ID)		1
23	54576624	HOSE	0,25 m long - (8 mm ID)		1
24	95264776	CLAMP			6
25	54576624	HOSE	0,30 m long - (8 mm ID)		1

ROCKER COVER

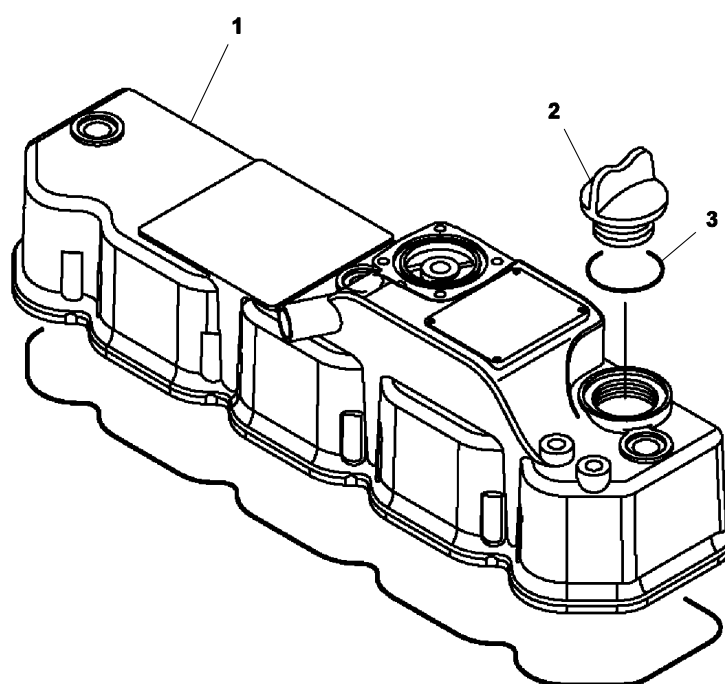


T7030_00
01/17

ROCKER COVER

[illegible]

DIPSTICK

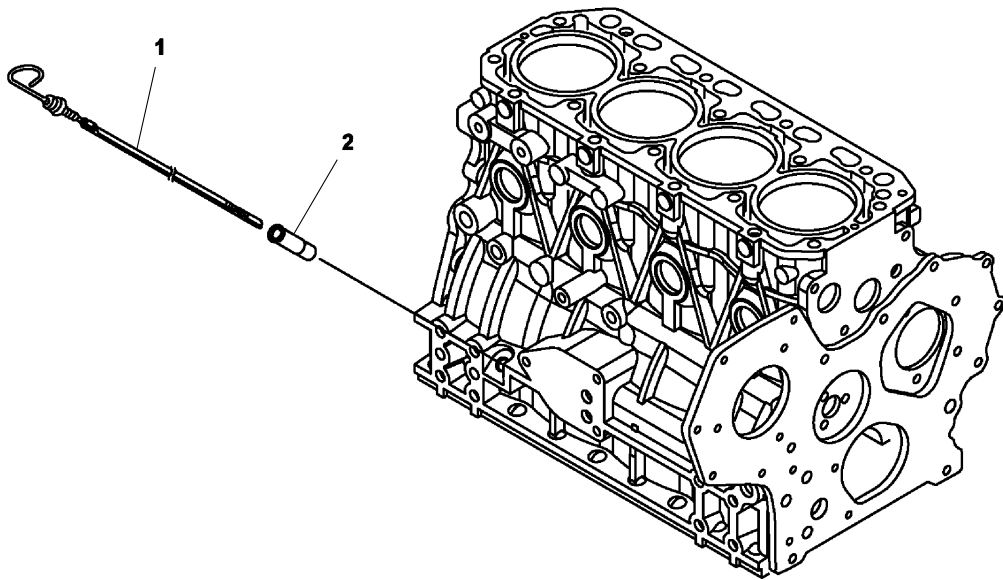


T7031_00
01/17

DIPSTICK

[illegible]

OIL FILTER ASSEMBLY

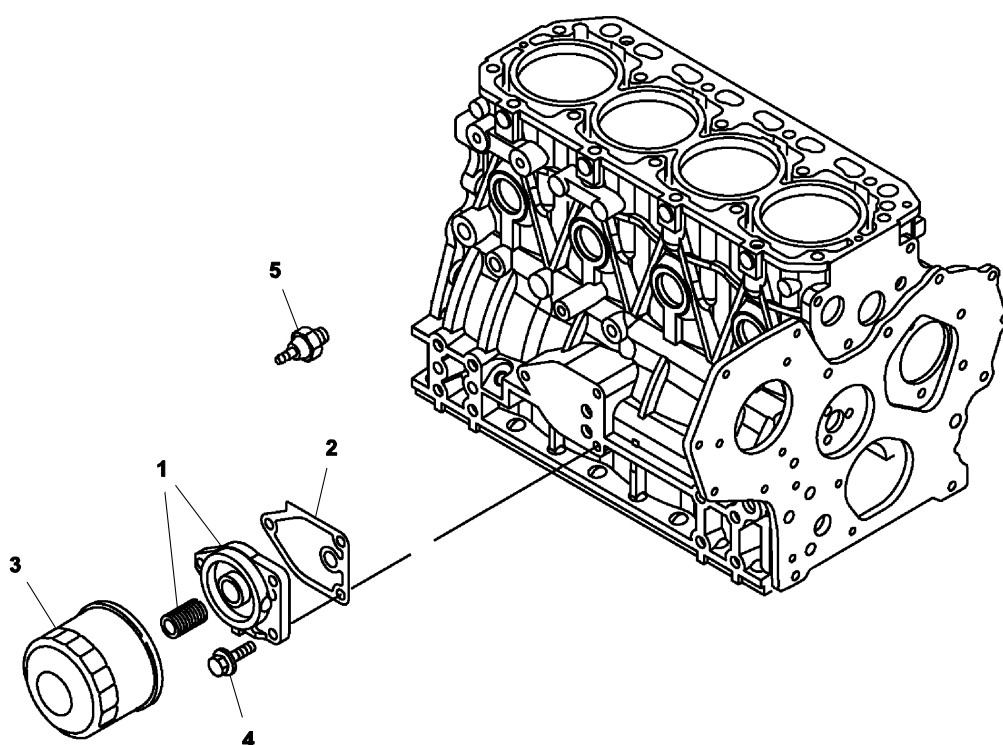


T7032_00
01/17

OIL FILTER ASSEMBLY	
---------------------	--

[illegible]

FUEL INJECTION PUMP

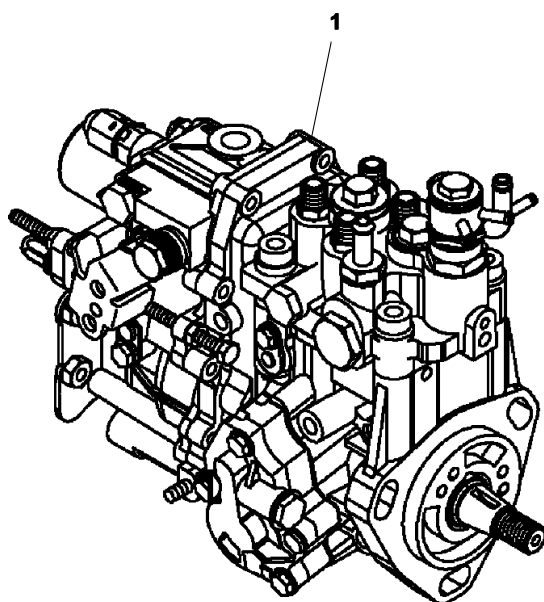


T7033_00
01/17

FUEL INJECTION PUMP	
---------------------	--

[illegible]

STOP SOLENOID


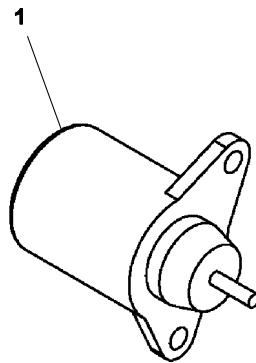


T7034_00
01/17

STOP SOLENOID

[illegible]

INJECTION VALVE

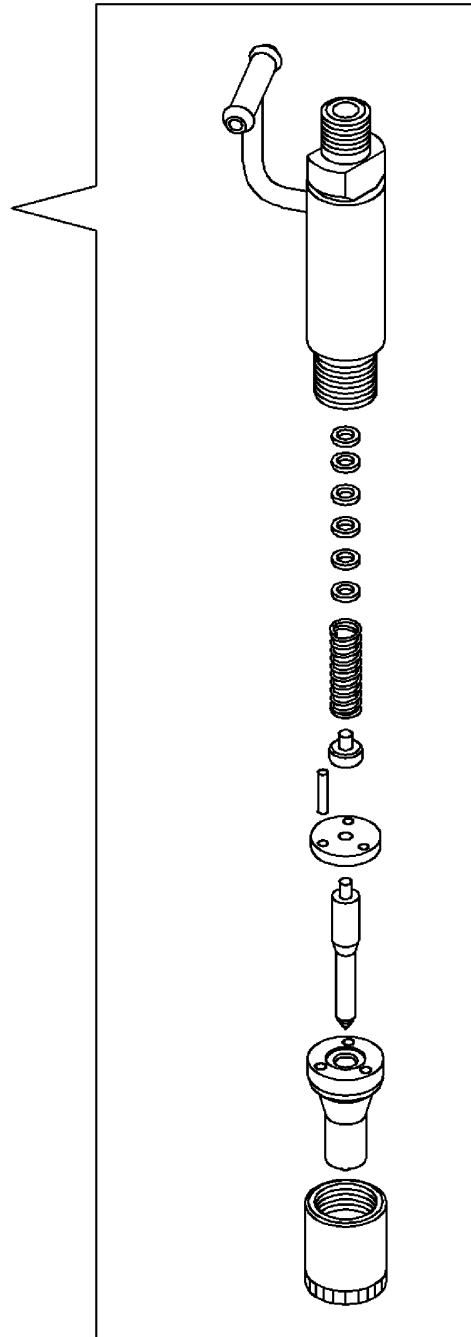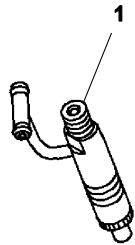


T7035_00
01/17

INJECTION VALVE

[illegible]

FUEL FILTER

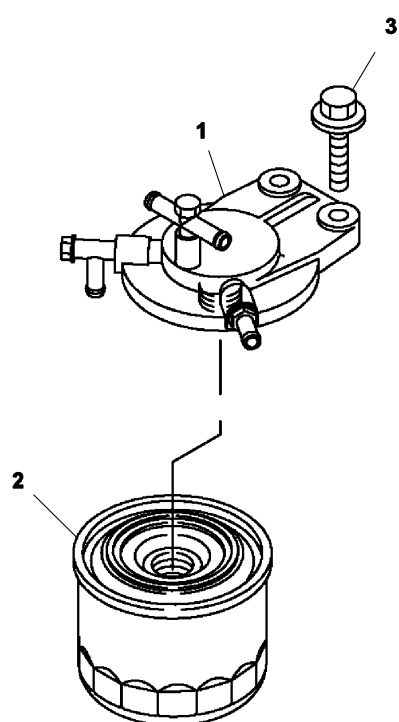


T7043_00
01/17

FUEL FILTER	
-------------	--

[illegible]

FUEL/WATER SEPARATOR

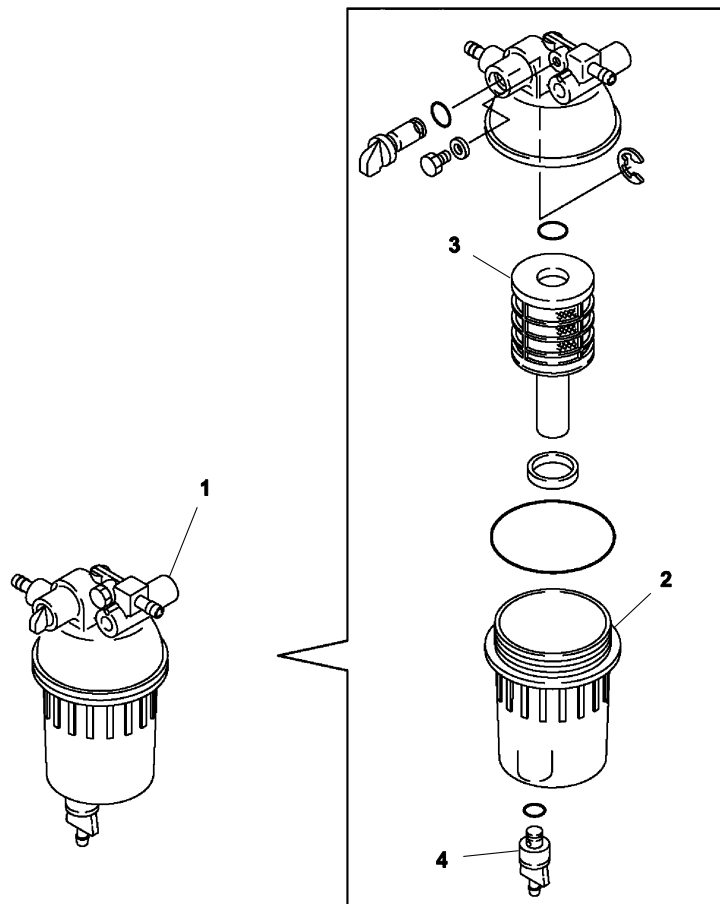


T7036_00
01/17

FUEL/WATER SEPARATOR	
----------------------	--

[illegible]

FUEL FEED PUMP

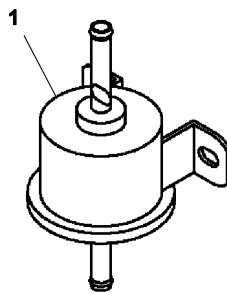


T7037_00
01/17

FUEL FEED PUMP	
----------------	--

[illegible]

ALTERNATOR

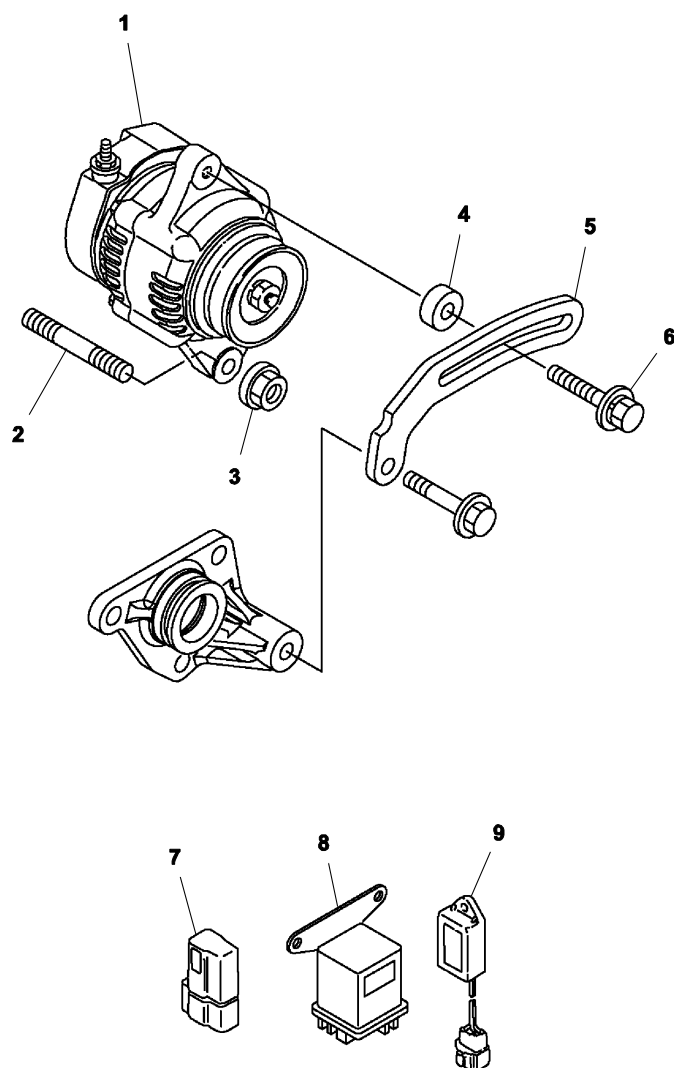


T7038_00
01/17

ALTERNATOR

[illegible]

GASKET SET

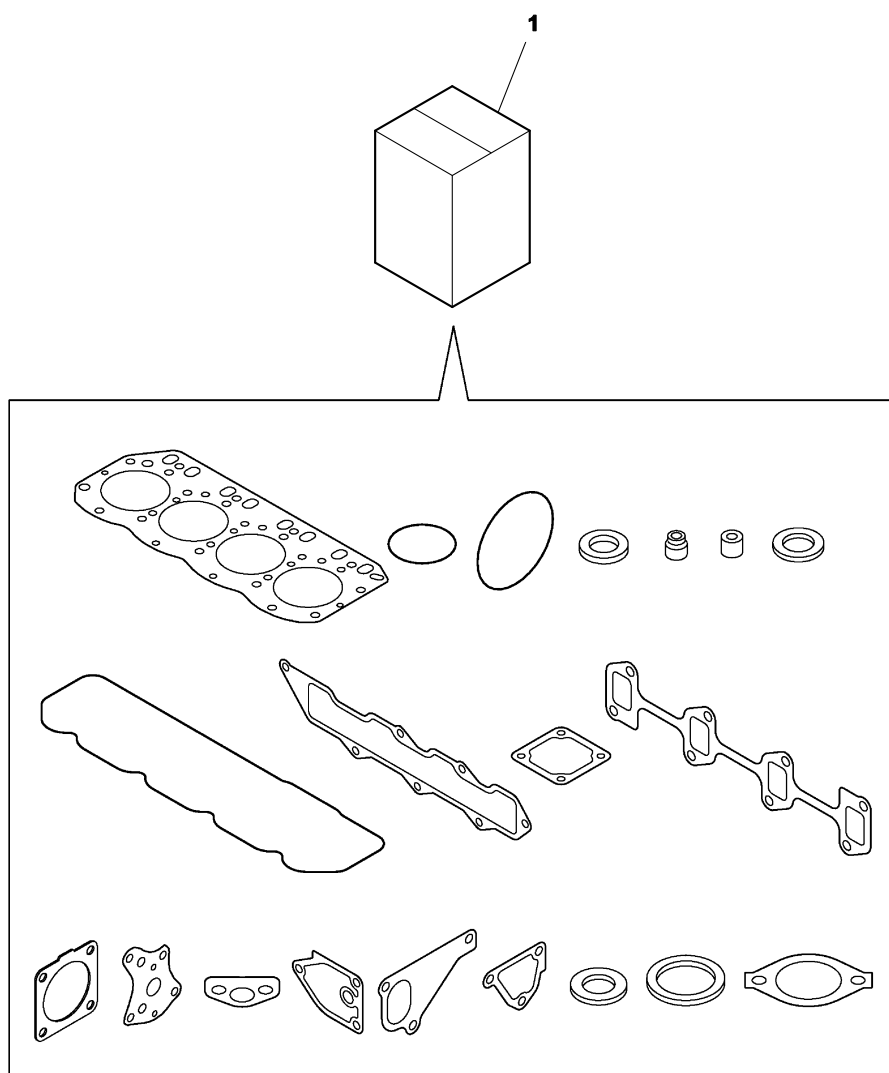


T7039_00
01/17

GASKET SET	
------------	--

[illegible]

BELT TRANSMISSION

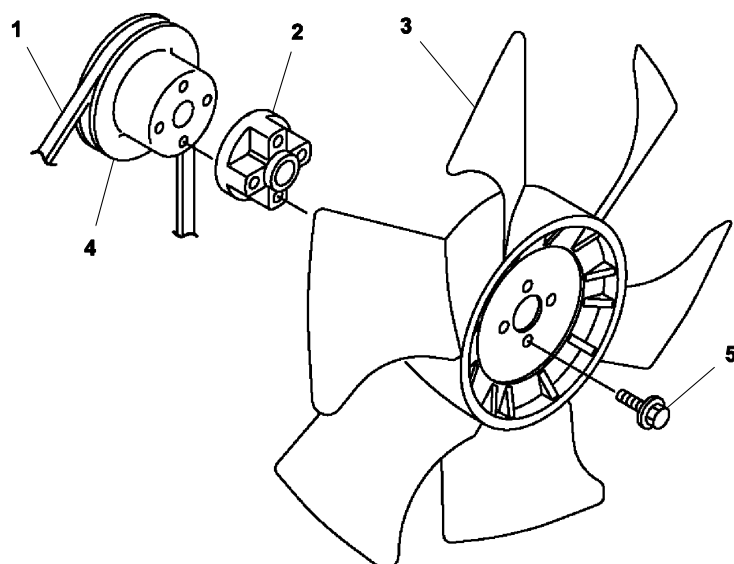


T7040_00
01/17

BELT TRANSMISSION

[illegible]

THERMOSTAT

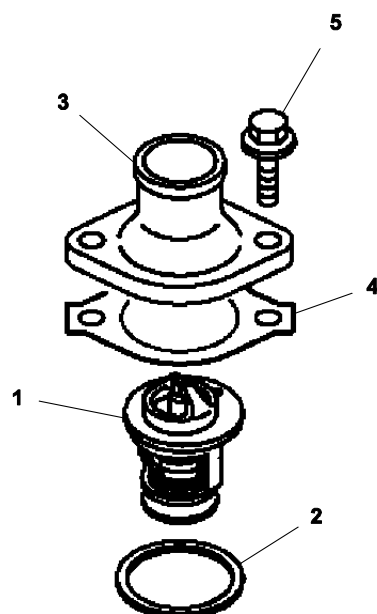


T7041_00
01/17

THERMOSTAT

[illegible]

WATER PUMP

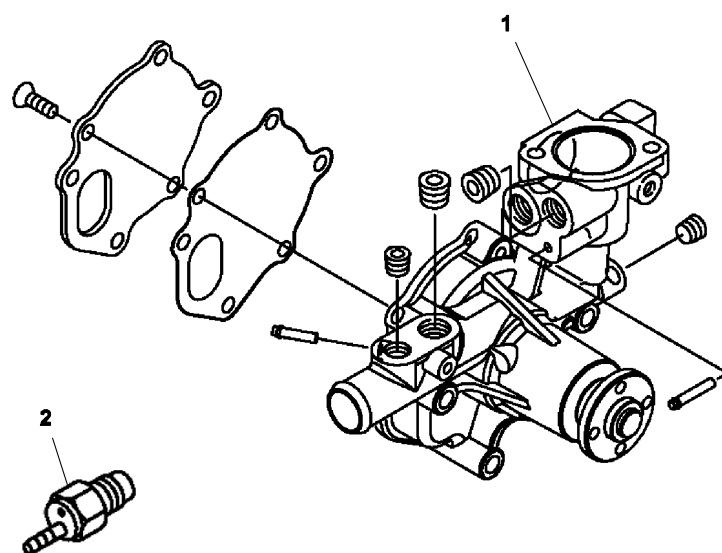


T7042_00
01/17

WATER PUMP	
------------	--

[illegible]

STARTER MOTOR

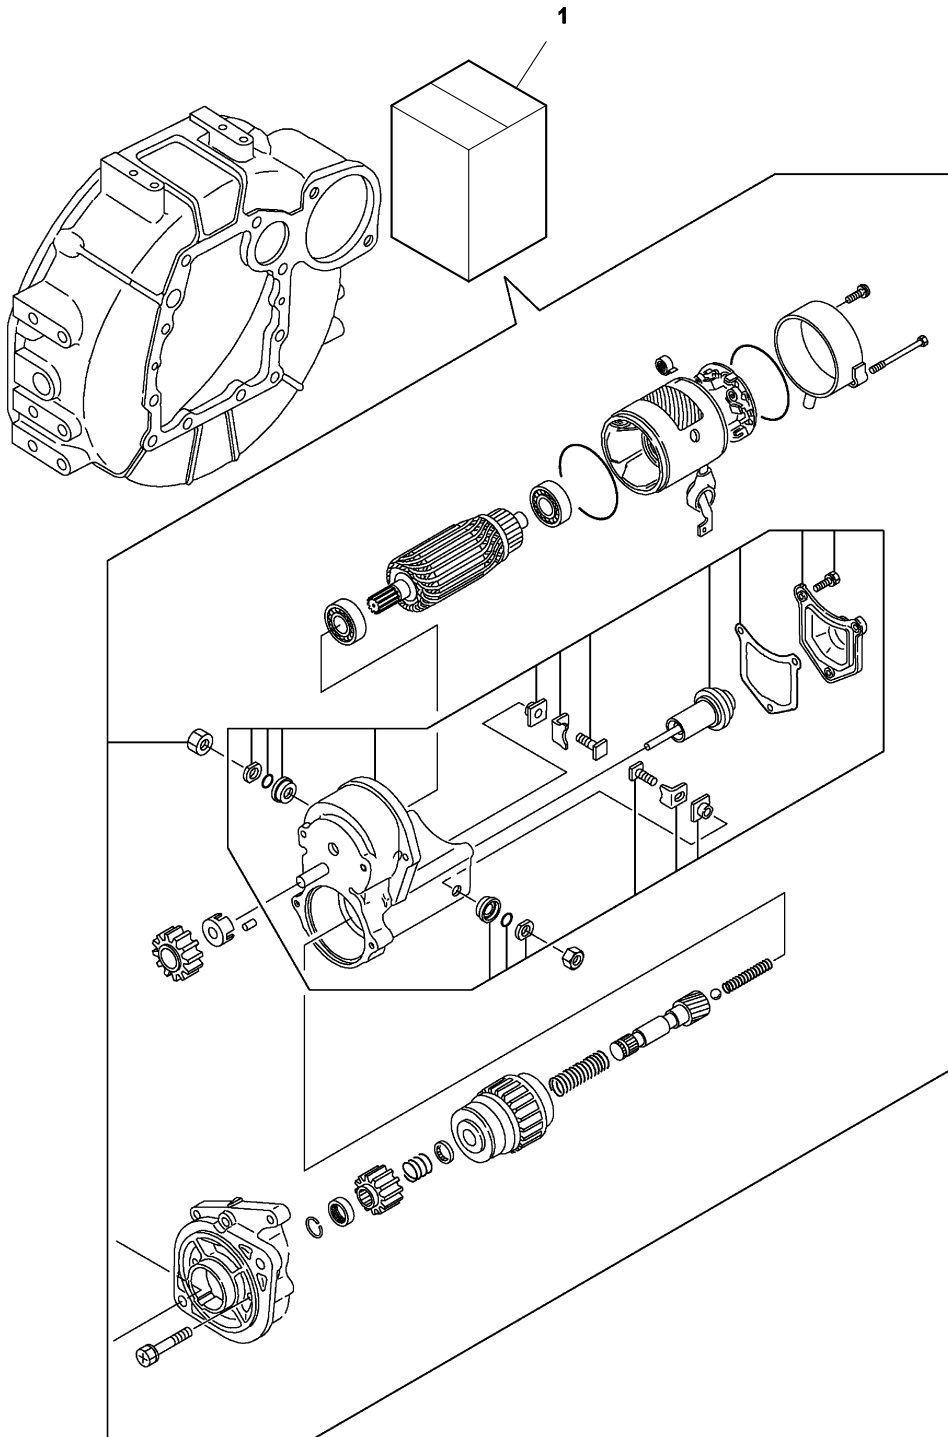


T7044_00
01/17

STARTER MOTOR

[illegible]

OPTION - FRAME PROTECTION

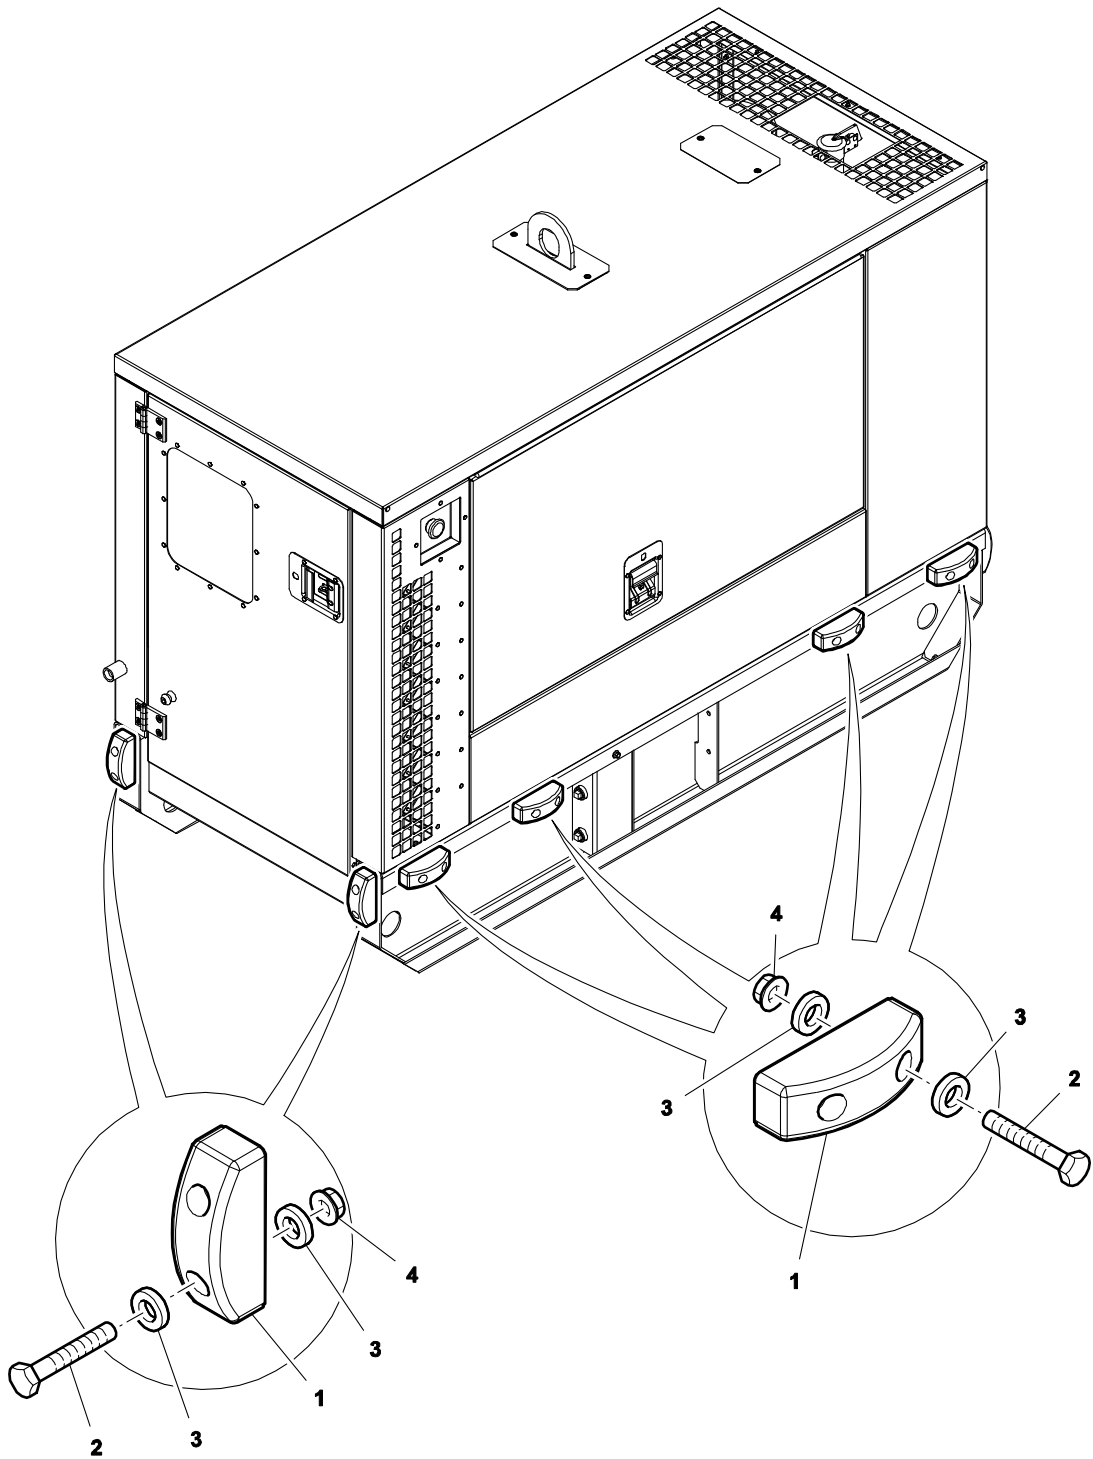


T7061_00
01/17

OPTION - FRAME PROTECTION

[illegible]

OPTION - NO CONTAINMENT DRAIN PLUG

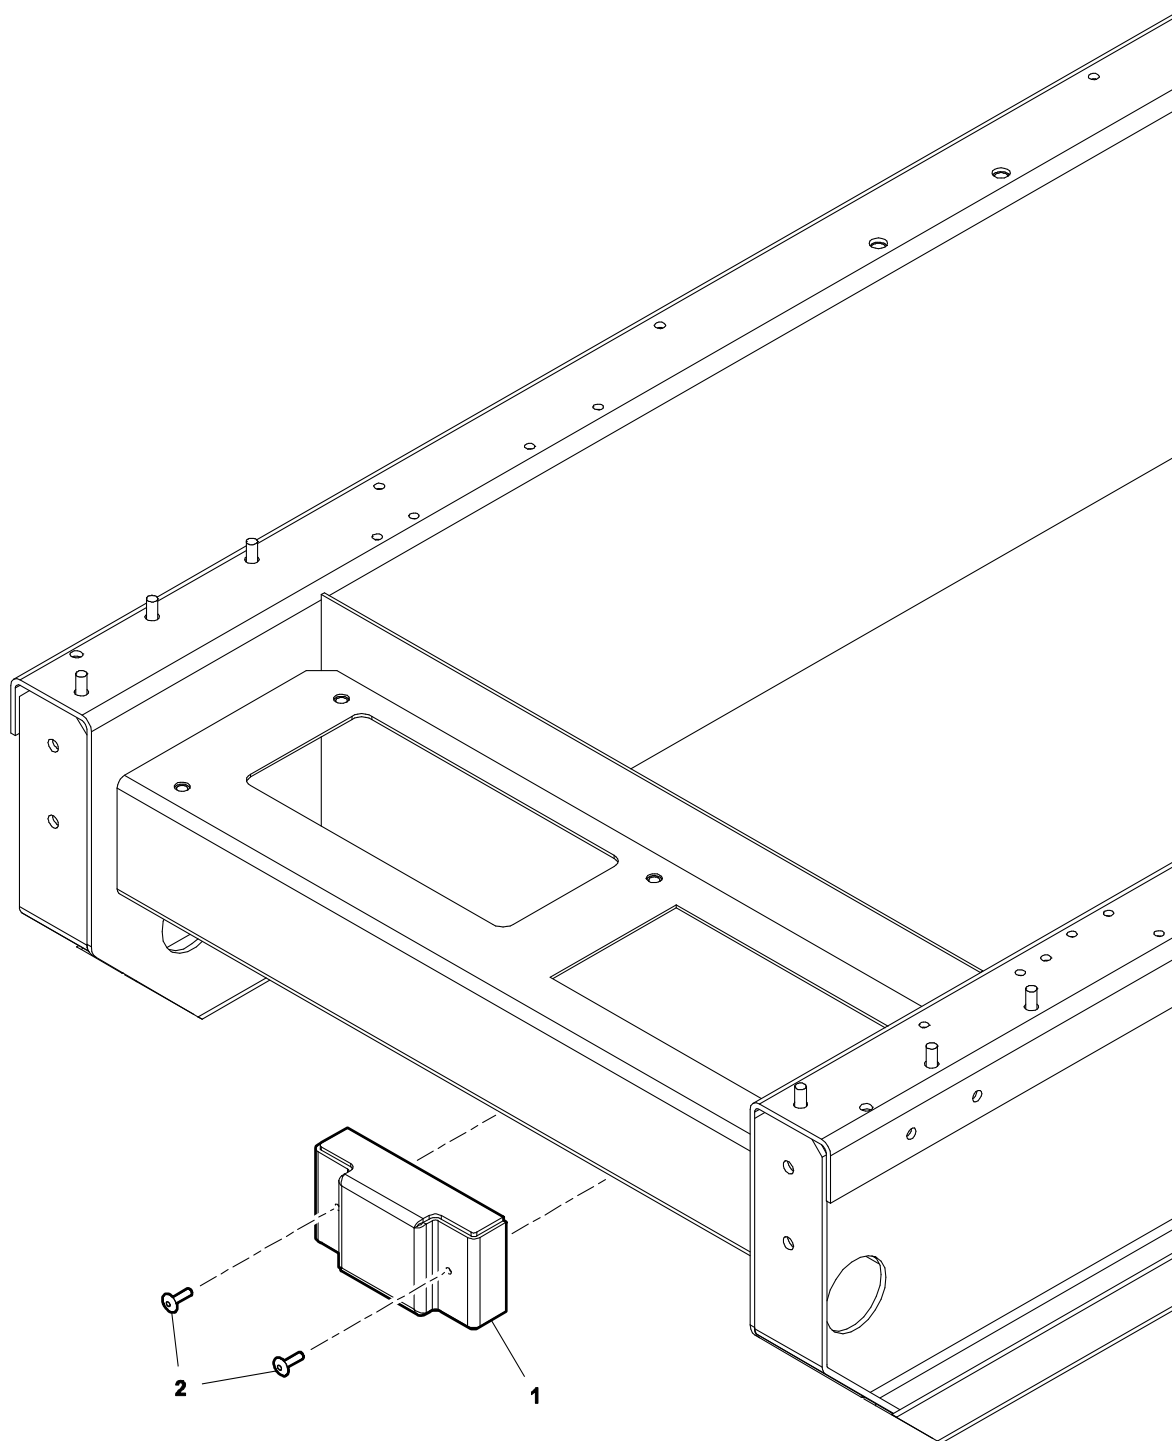


T7064_00
01/17

OPTION - NO CONTAINMENT DRAIN PLUG

[illegible]

OPTION - SOCKETS (CE)	
---	--

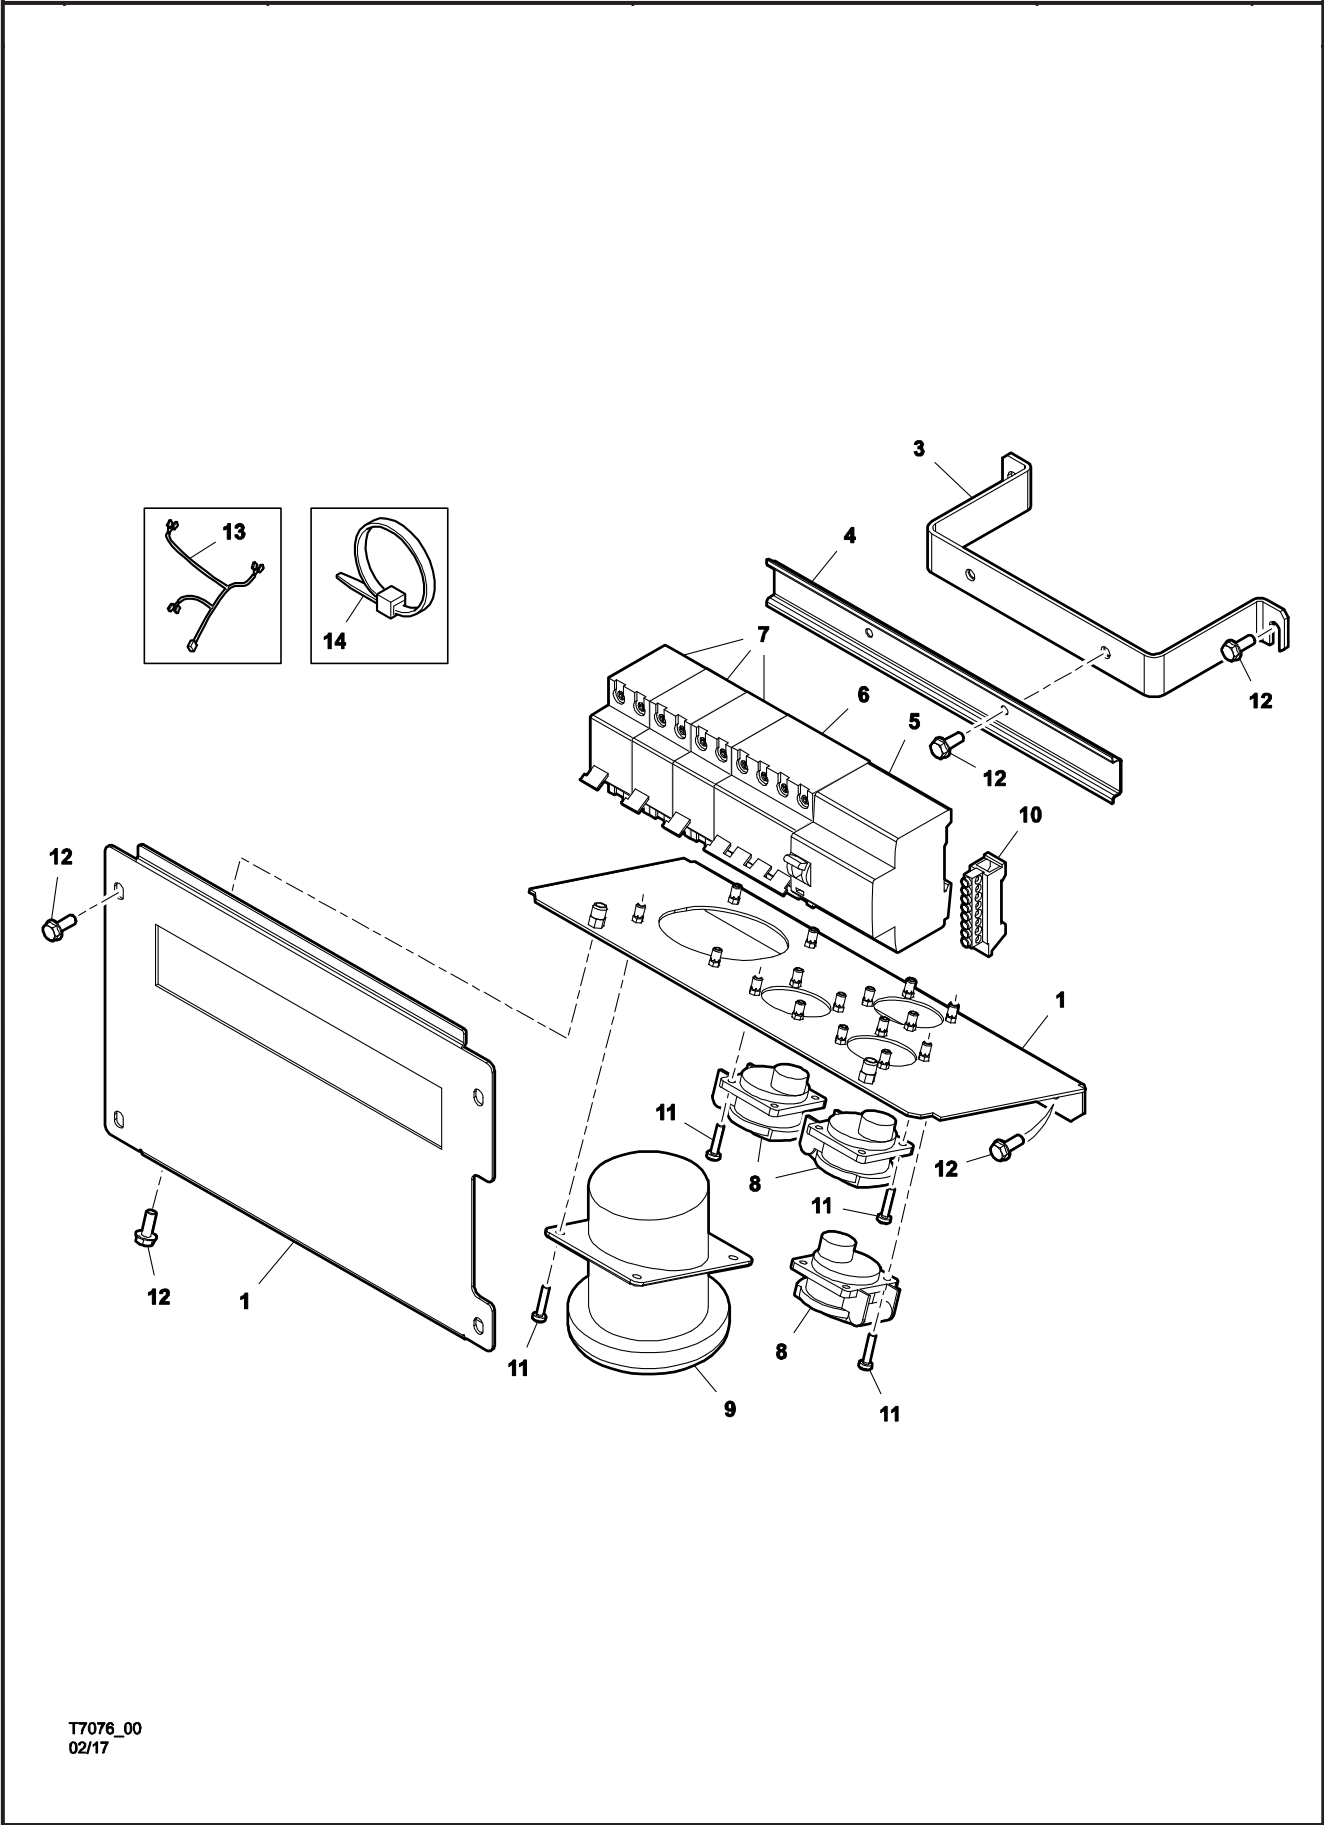


T7076_00
02/17

OPTION - SOCKETS (CE)	
---	--

[illegible]

OPTION - NO SOCKETS




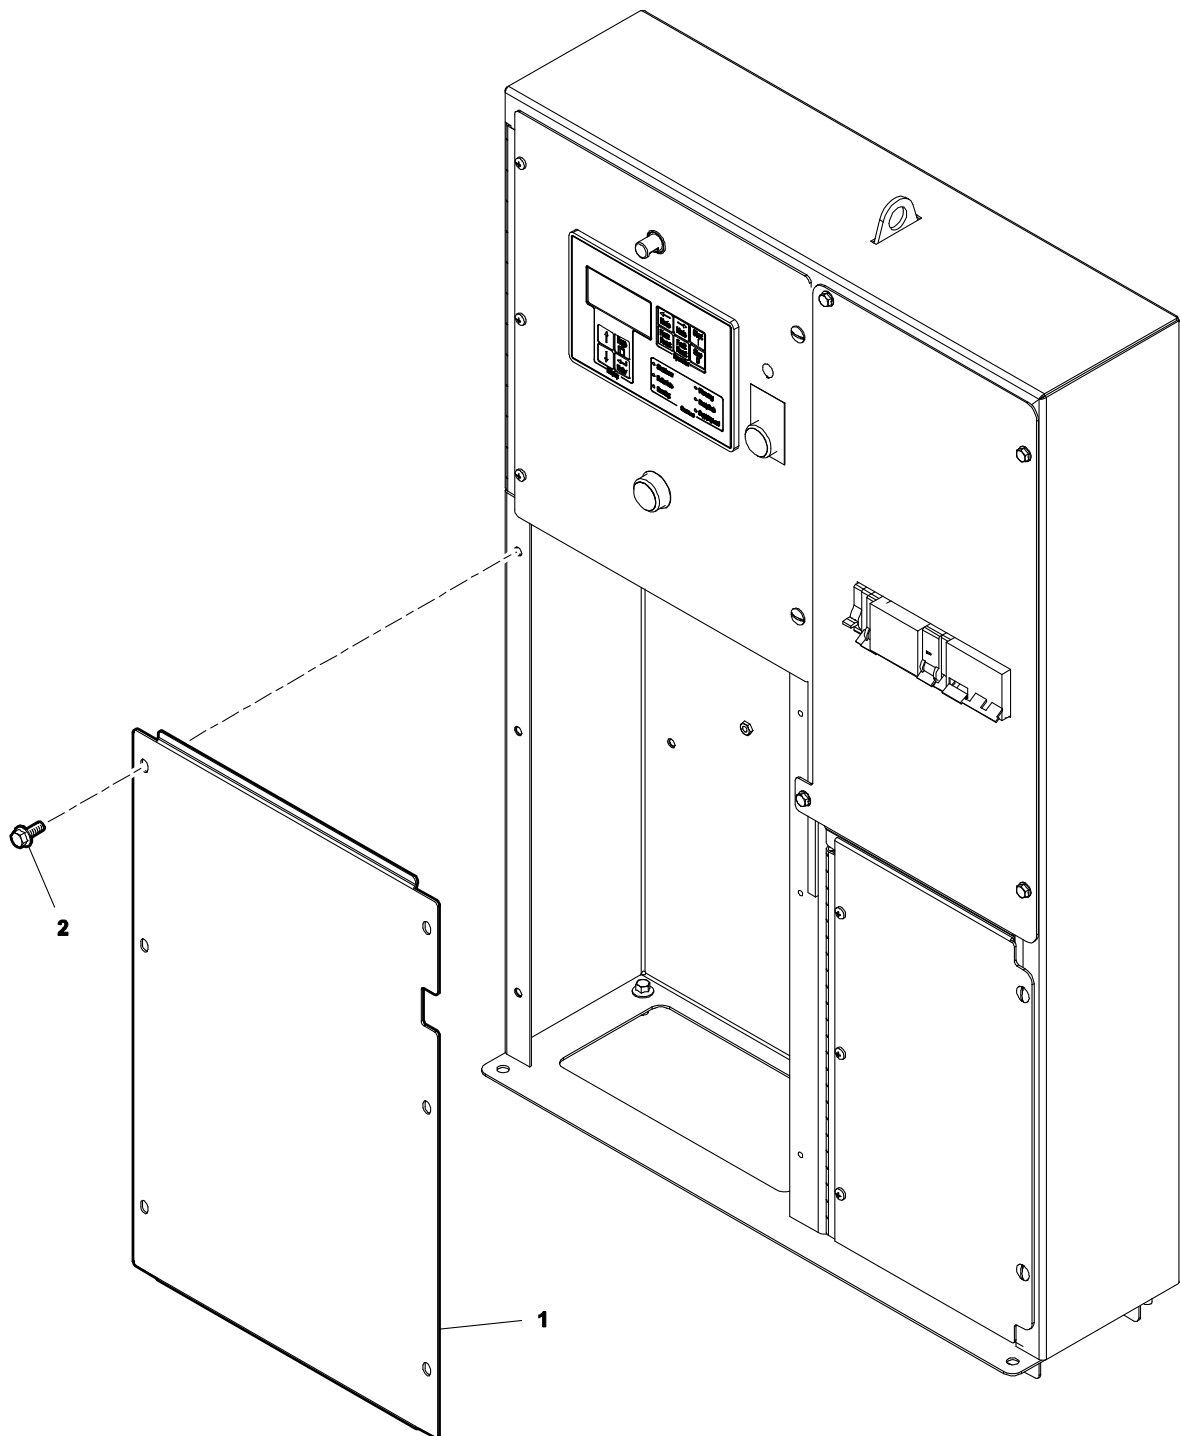


T7063_00
01/17

OPTION - NO SOCKETS	
--	--

[illegible]

OPTION - OIL SUMP PUMP (manual)

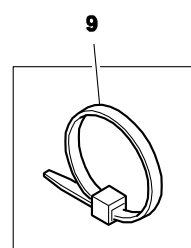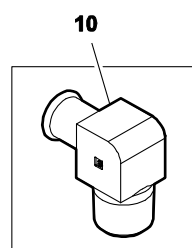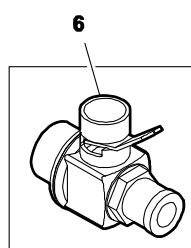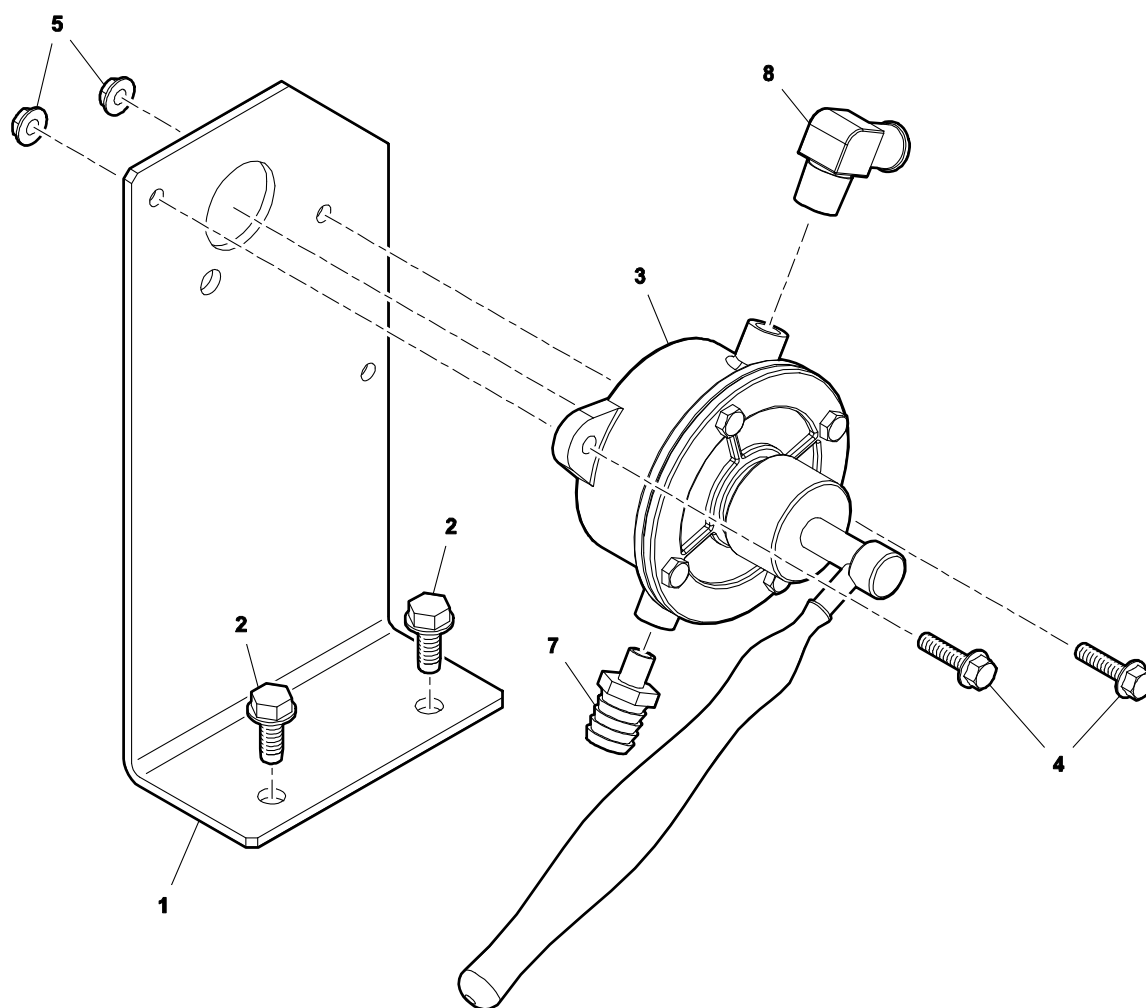


T7065_00
01/17

OPTION - OIL SUMP PUMP (manual)	
---	--

[illegible]


OPTION - 3 WAY FUEL VALVE

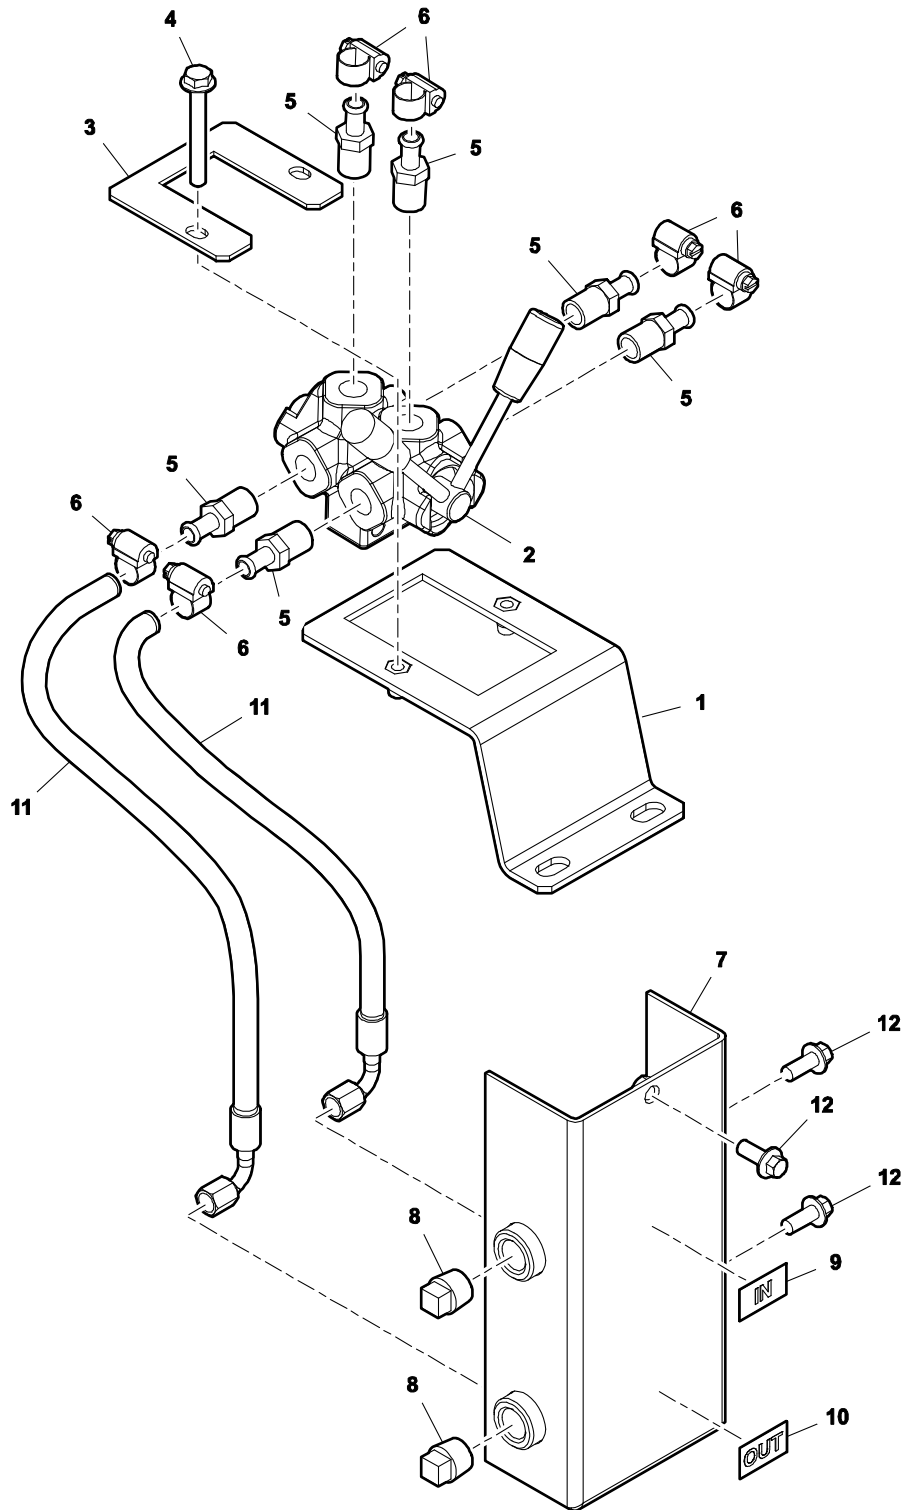

T7066_00
02/17

[illegible]

OPTION - SUPER START PACKAGE

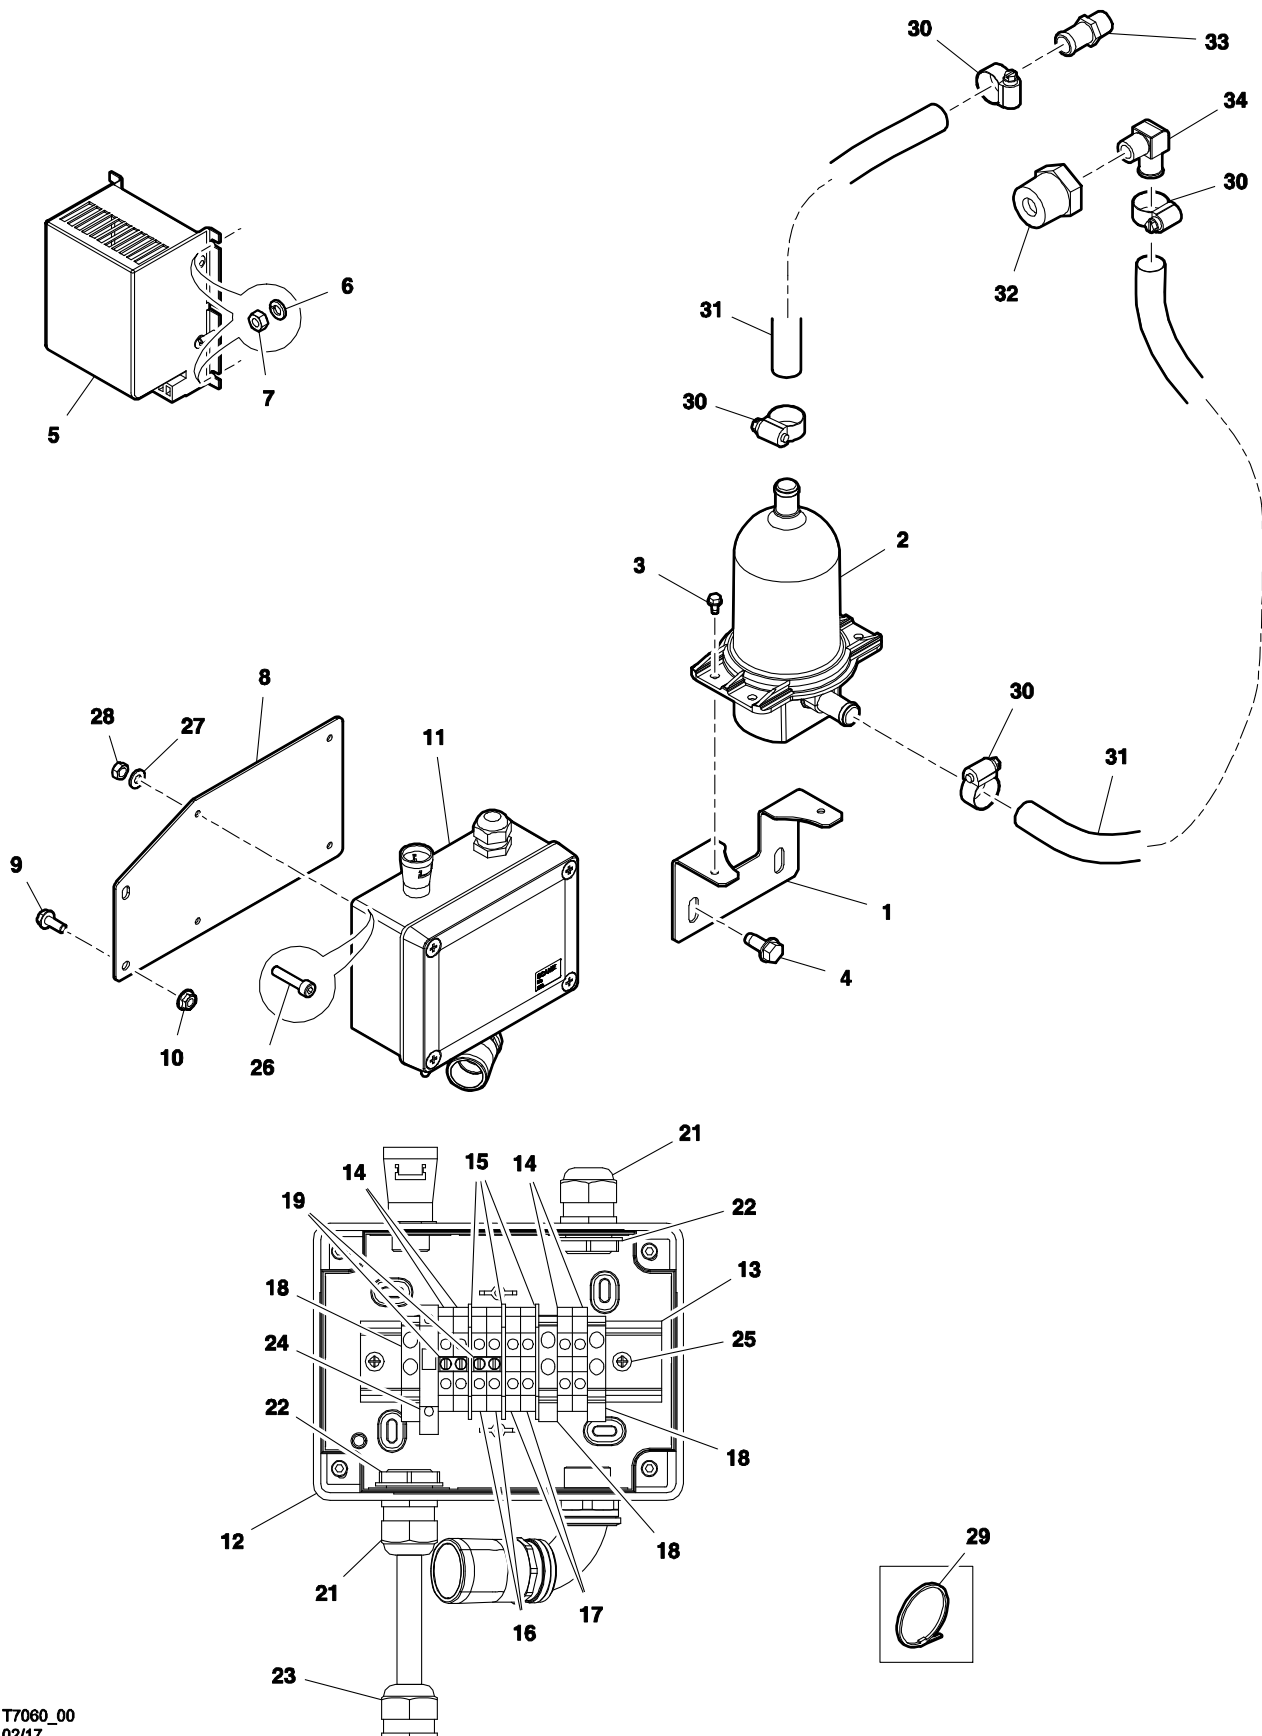


T7060_00
02/17

OPTION - SUPER START PACKAGE

Item	Part Number	Description	Remarks	Serial Number	Qty
1	46699421	BRACKET			1
2	22186548	HEATER, TANK			1
3	36797652	SCREW			2
4	22959936	SCREW			2
5	46623547	CHARGER, BATTERY			1
6	92304641	WASHER			4
7	96705132	NUT			4
8	46697963	BRACKET			1
9	92096015	SCREW			2
10	96704176	NUT			2
11	46698042	CONNECTION BOX ASSEMBLY	W/Ref. 12-25		1
12	23251986	BOX			1
13	23370729	RAIL			1
14	22768436	TERMINAL			4
15	46631806	PARTITION			3
16	46561639	TERMINAL			2
17	46561640	TERMINAL, EARTH			2
18	22750970	TERMINAL			3
19	46631807	CONNECTOR			2
20	46631826	CONNECTOR	W/Ref. 21-22		2
21	22950133	CONNECTOR, GLAND CABLE			2
22	46631808	NUT, CABLE GLAND			2
23	22938369	GLAND, CABLE			1
24	22747299	HOLDER			1
25	46631820	SCREW			2
26	96742283	SCREW			4
27	92340439	WASHER			4
28	92340454	NUT			4
29	92281427	TIE, CABLE			10
30	95220844	CLAMP			4
31	35326578	HOSE			2


OPTION - SUPER START PACKAGE (CONT'D)

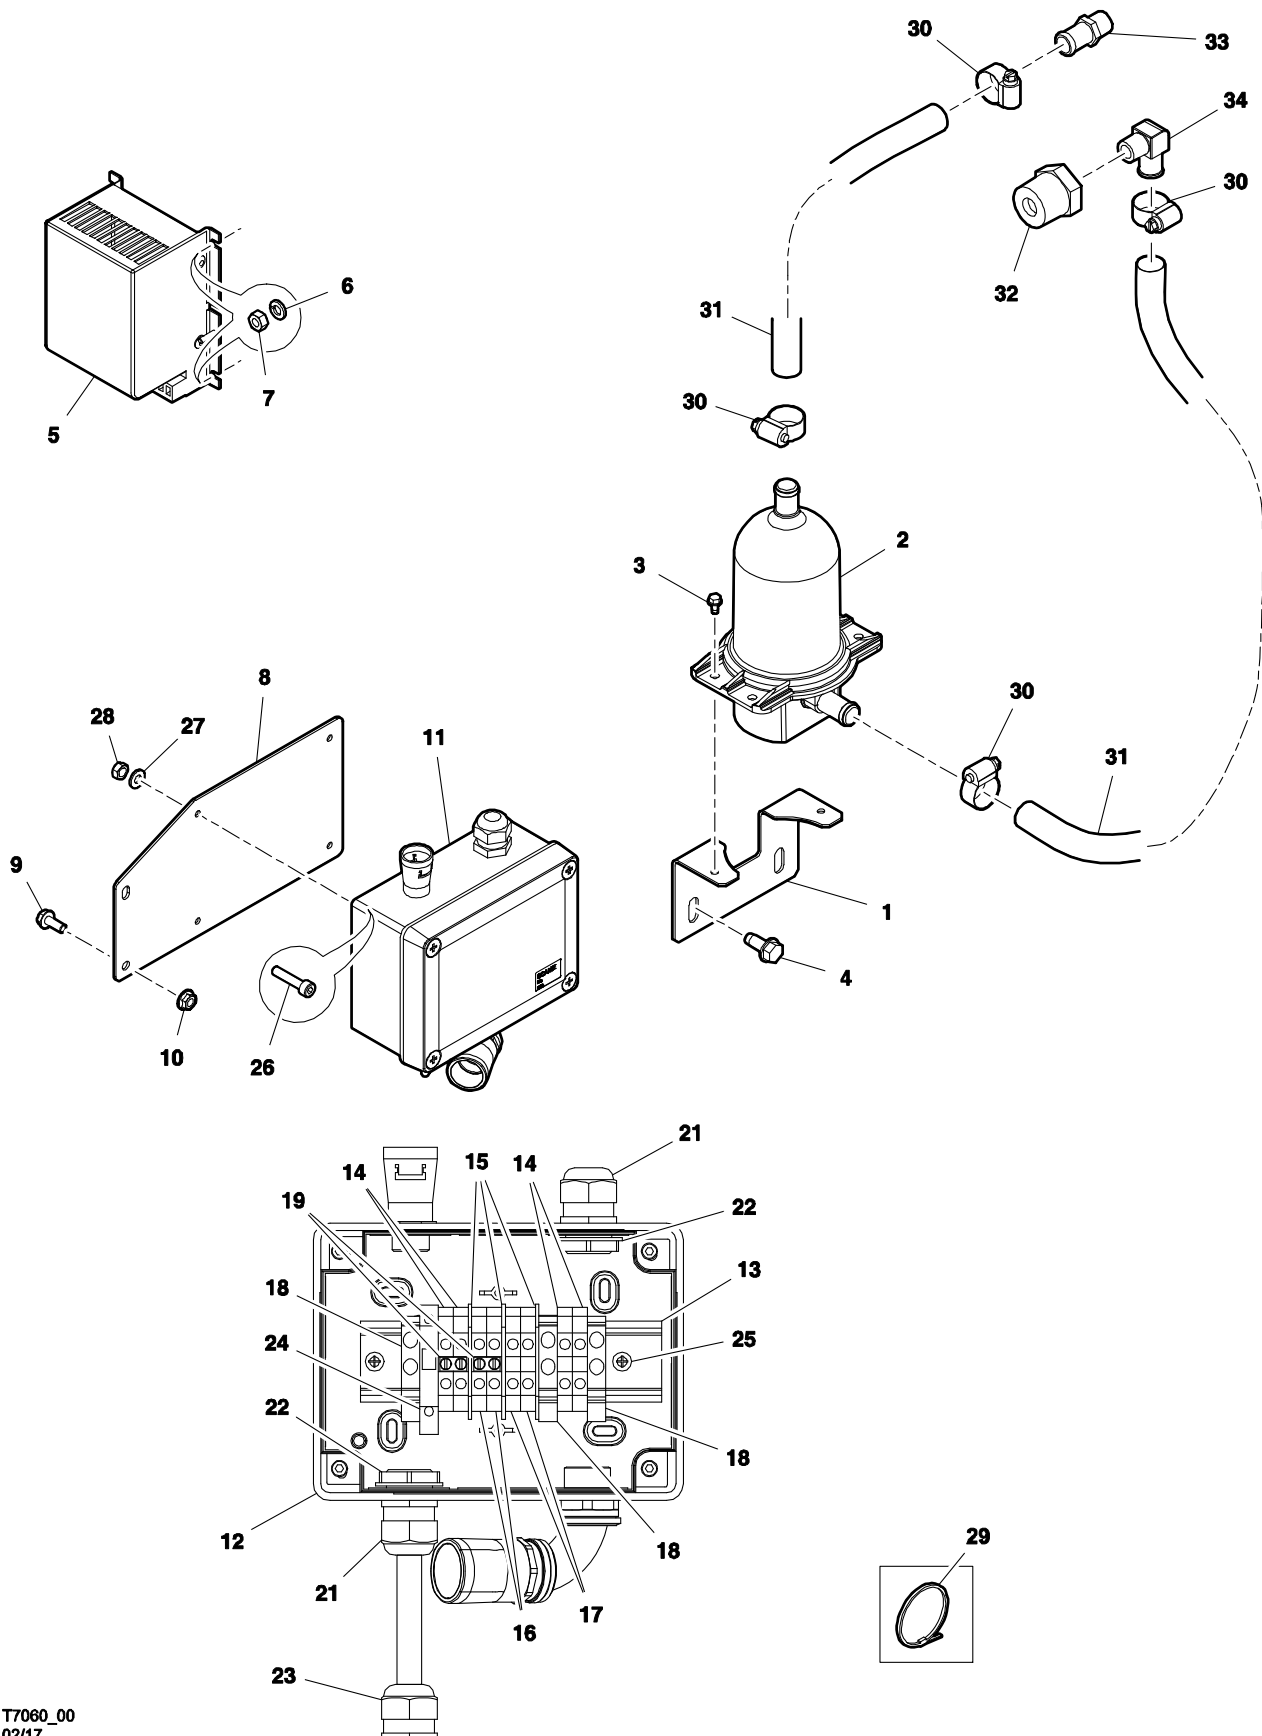

T7060_00
02/17

[illegible][illegible]

OPTION - EARTH CONNECTING ROD

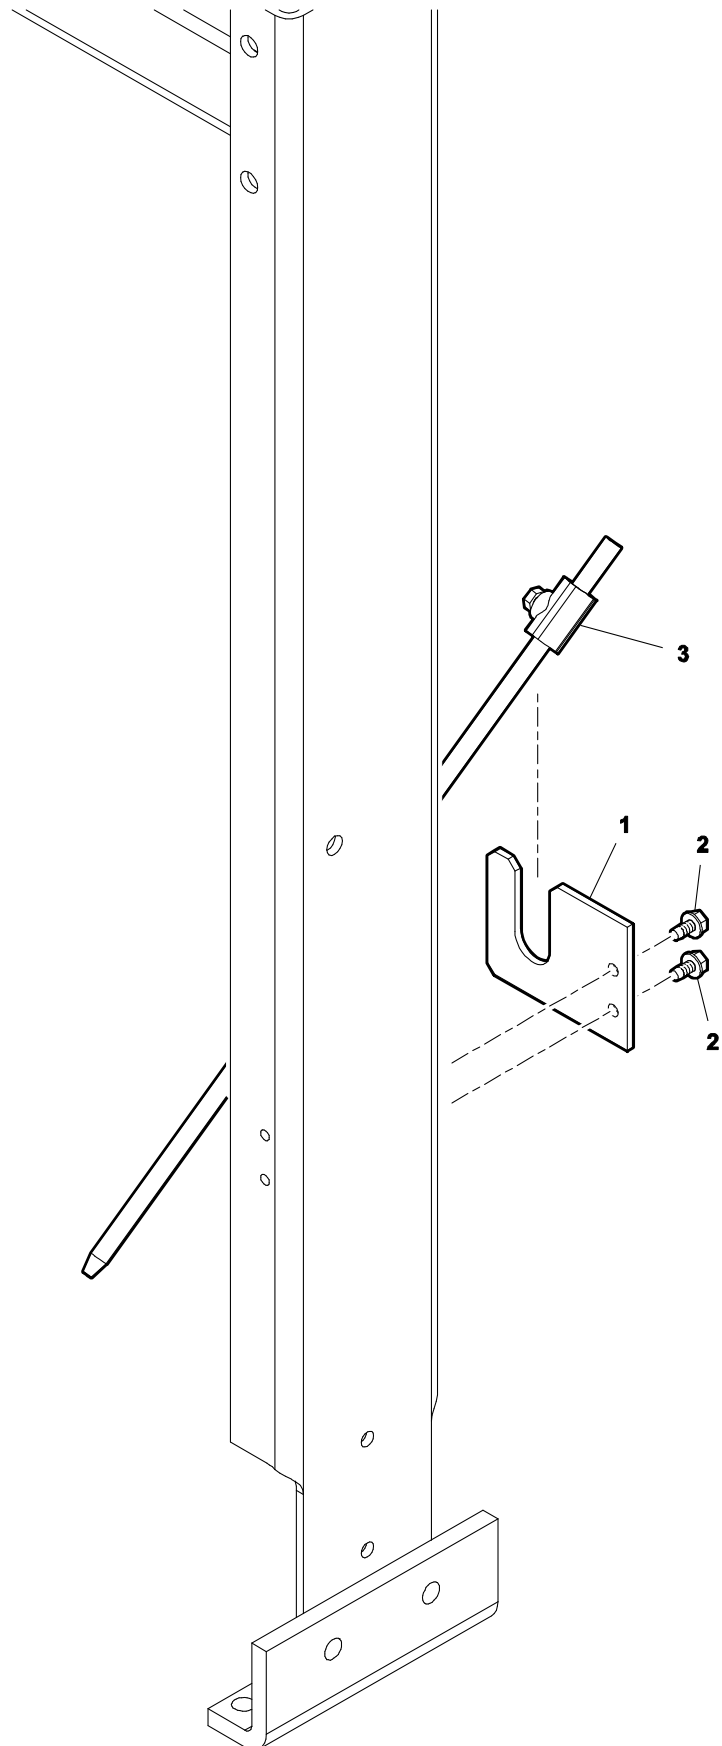


T7077_00
01/17

OPTION - EARTH CONNECTING ROD

[illegible]

MAINTENANCE KIT (250 hours)

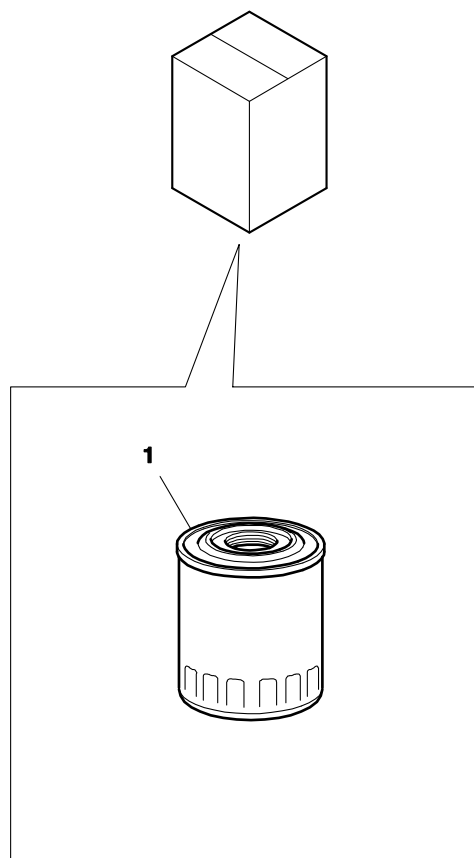


T7073_00
01/17

MAINTENANCE KIT (250 hours)

[illegible]

MAINTENANCE KIT (500 hours)

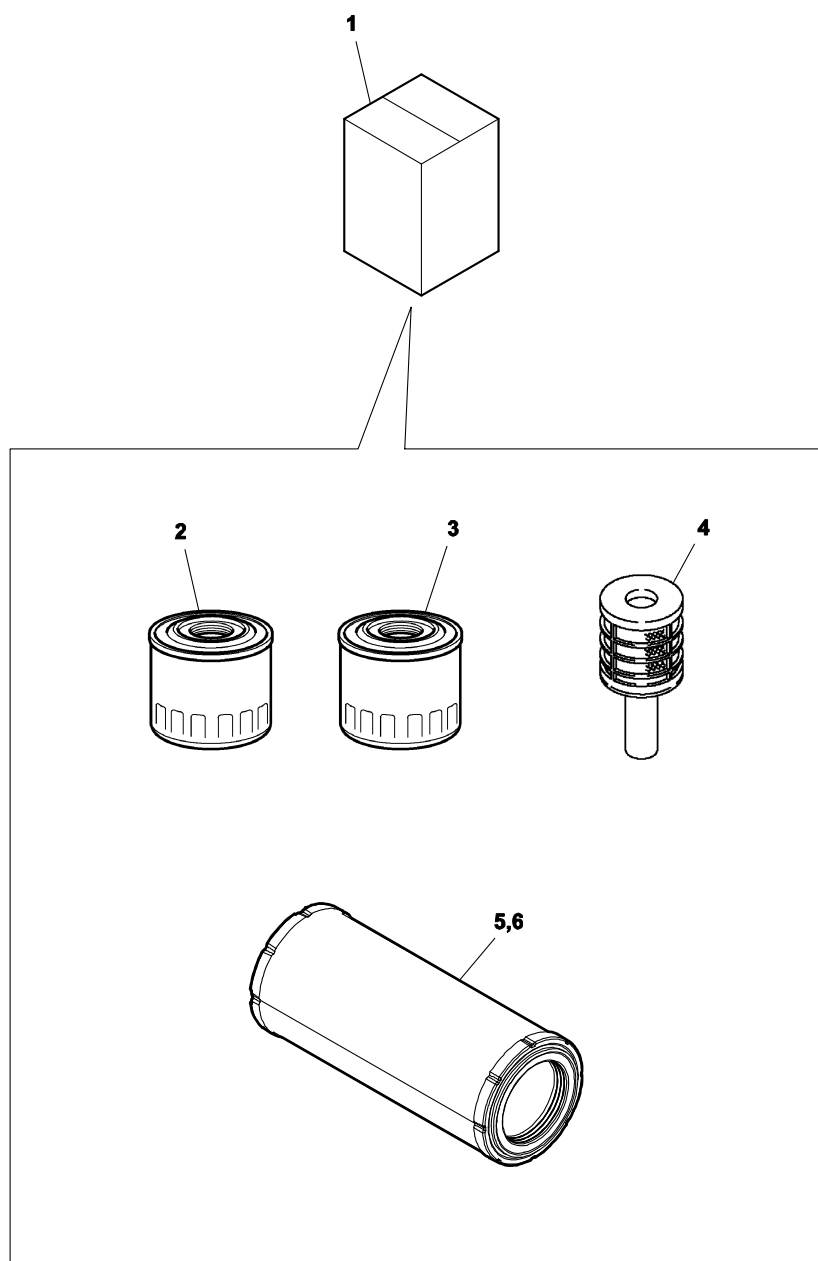


T7074_00
01/17

MAINTENANCE KIT (500 hours)

[illegible]

RECOMMENDED SPARE PARTS (maintenance and repair items)

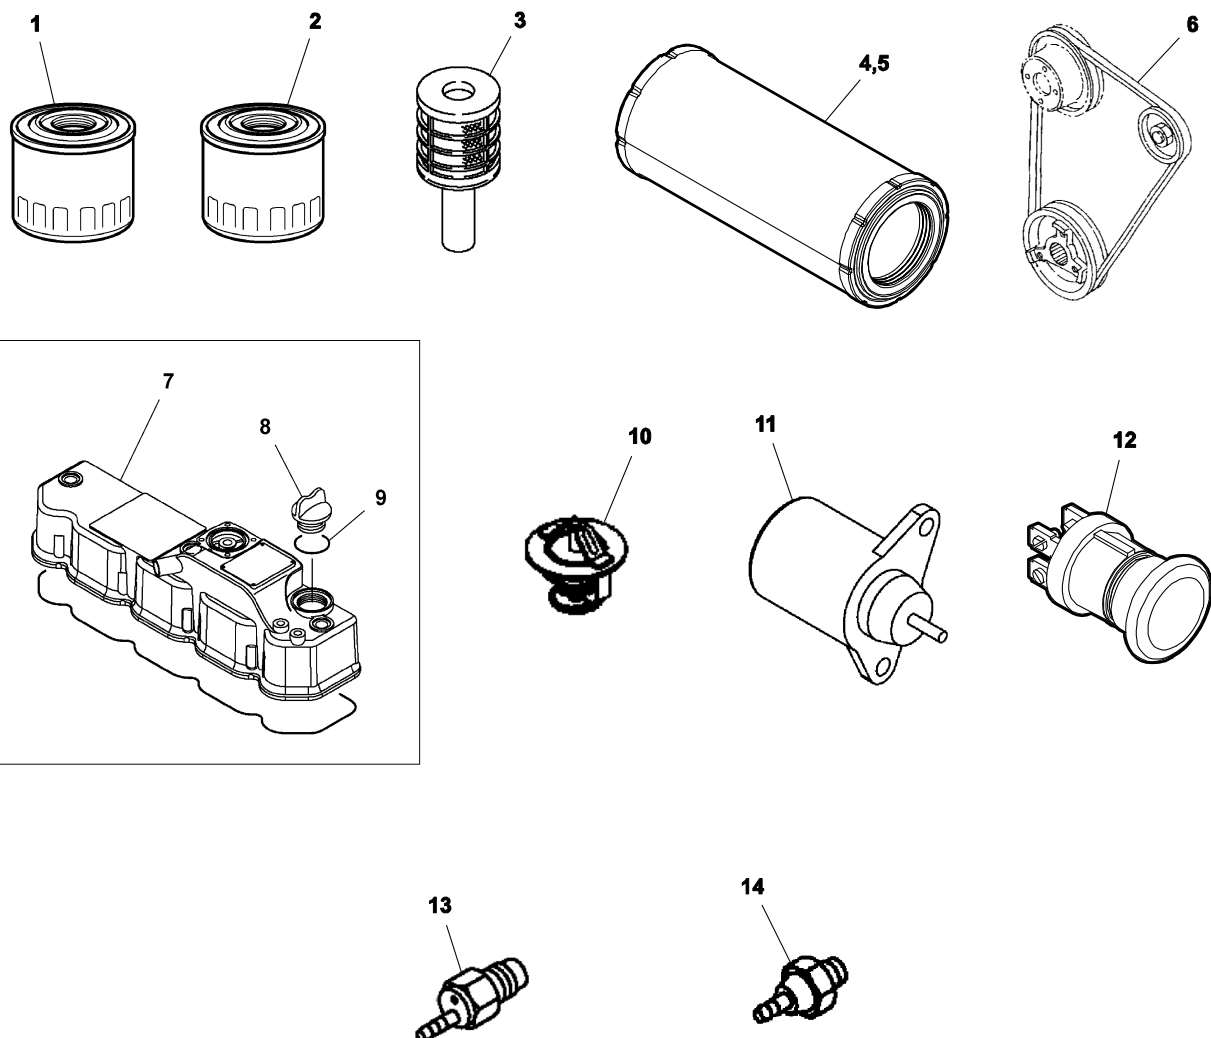


T7071_00
02/17

RECOMMENDED SPARE PARTS (maintenance and repair items)	
---	--

[illegible]

RECOMMENDED SPARE PARTS (extended downtime prevention)

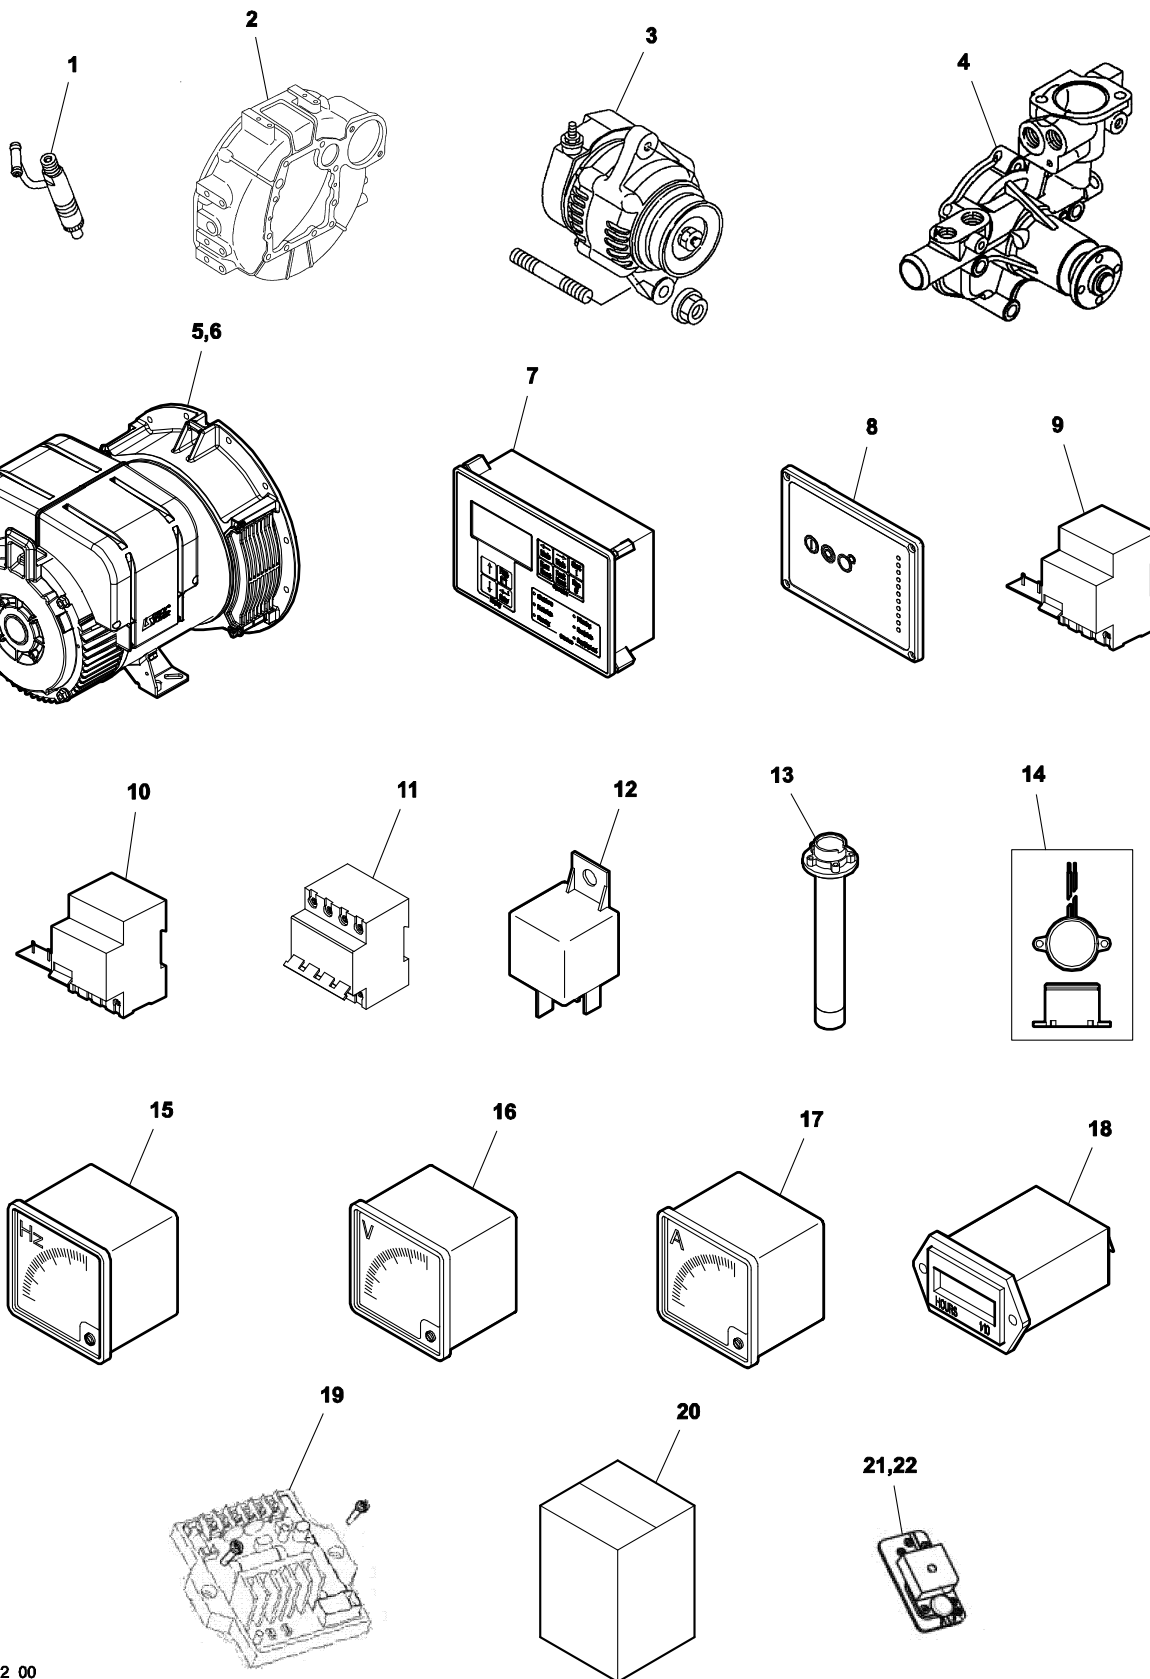

T7072_00
02/17

RECOMMENDED SPARE PARTS (extended downtime prevention)	
---	--

[illegible]

Intentionally left blank

NUMERICAL INDEX

Part Number	Denomination	WAS	Page	Subgroup
			49	ROCKER COVER
			101	RECOMMENDED SPARE PARTS
15896608	BOLT		71	BELT TRANSMISSION
15896830	BOLT		73	THERMOSTAT
15896996	SWITCH, OIL PRESSURE		53	OIL FILTER ASSEMBLY
			101	RECOMMENDED SPARE PARTS
15897077	PUMP, FUEL		65	FUEL FEED PUMP
15897614	BRACKET ASSEMBLY		53	OIL FILTER ASSEMBLY
15898117	GUIDE, DIPSTICK		51	DIPSTICK
15898182	CAP, OIL FILLER		49	ROCKER COVER
			101	RECOMMENDED SPARE PARTS
15898349	HEAD, FUEL FILTER		61	FUEL FILTER
15898513	GASKET		53	OIL FILTER ASSEMBLY
15898539	GASKET		73	THERMOSTAT
15898570	THERMOSTAT		73	THERMOSTAT
			101	RECOMMENDED SPARE PARTS
15898752	STUD		67	ALTERNATOR
15898794	GASKET		73	THERMOSTAT
15898984	O-RING		49	ROCKER COVER
			101	RECOMMENDED SPARE PARTS
15899073	BOLT		53	OIL FILTER ASSEMBLY
15899099	BOLT		61	FUEL FILTER
15899123	BOLT		67	ALTERNATOR
15899206	NUT		67	ALTERNATOR
15899636	DIPSTICK		51	DIPSTICK
15899644	WATER PUMP ASSEMBLY		75	WATER PUMP
			103	RECOMMENDED SPARE PARTS
22137632	BATTERY		19	BATTERY
22186548	HEATER, TANK		91	OPTION - SUPER START PACKAGE
22222798	FAN		71	BELT TRANSMISSION
22245468	TIMER		67	ALTERNATOR
22245492	RELAY		67	ALTERNATOR
22255434	ALTERNATOR		67	ALTERNATOR
			103	RECOMMENDED SPARE PARTS
22255442	STARTER ASSEMBLY		77	STARTER MOTOR
			103	RECOMMENDED SPARE PARTS
22291355	COVER, THERMOSTAT		73	THERMOSTAT
22306229	SCREW		89	OPTION - 3 WAY FUEL VALVE
22312409	COVER		7	ENCLOSURE
22363584	VALVE, DRAIN		87	OPTION - OIL SUMP PUMP
22375141	VALVE		47	COOLING SYSTEM
22465165	STUD		21	CONTROL PANEL
			23	CONTROL PANEL
22465207	RECEPTACLE		25	POWER PEDESTAL ASSEMBLY
22494983	ANGLE		19	BATTERY

Part Number	Denomination	WAS	Page	Subgroup
			23	CONTROL PANEL
			25	POWER PEDESTAL ASSEMBLY
22499495	RETAINER		21	CONTROL PANEL
			23	CONTROL PANEL
			25	POWER PEDESTAL ASSEMBLY
22499768	STRIKER, DOOR		3	FRAME
22503692	SWITCH, EMERGENCY STO		7	ENCLOSURE
			101	RECOMMENDED SPARE PARTS
22503825	BULB, LAMP		21	CONTROL PANEL
			23	CONTROL PANEL
22511901	STUD		25	POWER PEDESTAL ASSEMBLY
22513840	HINGE		7	ENCLOSURE
22515605	RIVET		25	POWER PEDESTAL ASSEMBLY
22559033	FIBREGLASS, SIDE		7	ENCLOSURE
22577100	PLATE, LIFTING EYE		3	FRAME
22579213	SENDER		43	FUEL SYSTEM
			103	RECOMMENDED SPARE PARTS
22580336	BRACKET		43	FUEL SYSTEM
22580351	SENSOR, CONTAINMENT LE		43	FUEL SYSTEM
22597306	BRACKET		19	BATTERY
22597595	MUFFLER, EXHAUST		41	EXHAUST SYSTEM
22610562	PANEL, FRONT		7	ENCLOSURE
22616353	U-BOLT		43	FUEL SYSTEM
22617666	SEAL		7	ENCLOSURE
22617674	STRIP, RUBBER SEAL		7	ENCLOSURE
22628770	SUPPORT		7	ENCLOSURE
22635973	PLEXIGLASS		7	ENCLOSURE
22638282	SUPPORT		7	ENCLOSURE
22650451	SOCKET		83	OPTION - SOCKETS
22666093	BRIDGE		83	OPTION - SOCKETS
22672471	VOLTMETER		21	CONTROL PANEL
			103	RECOMMENDED SPARE PARTS
22672547	HERTZMETER		21	CONTROL PANEL
			103	RECOMMENDED SPARE PARTS
22677017	RAIL, DIN		27	POWER PEDESTAL ELECTRICAL LAYOUT
22680771	PAD, FUEL TANK		43	FUEL SYSTEM
22682488	COVER		7	ENCLOSURE
22682512	BOX, E-STOP		7	ENCLOSURE
22684971	RIVET		7	ENCLOSURE
22706360	BRACKET		41	EXHAUST SYSTEM
22715395	DECAL, AUTO START CONT		21	CONTROL PANEL
22716716	PAD		19	BATTERY
22719223	SKID		5	FORKLIFT SKID
22721088	TRANSFORMER, CURRENT		27	POWER PEDESTAL ELECTRICAL LAYOUT
22730972	CABLE, JUMPER		19	BATTERY
22747299	HOLDER		27	POWER PEDESTAL ELECTRICAL LAYOUT
			91	OPTION - SUPER START PACKAGE

Part Number	Denomination	WAS	Page	Subgroup
			91	OPTION - SUPER START PACKAGE
22765523	BRACKET		43	FUEL SYSTEM
22765549	BRACKET		43	FUEL SYSTEM
22768436	TERMINAL		27 91	POWER PEDESTAL ELECTRICAL LAYOUT OPTION - SUPER START PACKAGE
22773337	GAUGE, FUEL LEVEL		21	CONTROL PANEL
22773345	GAUGE, VOLTMETER		21	CONTROL PANEL
22776611	DECAL, AMMETER SWITCH		21	CONTROL PANEL
22778005	CONTROLLER		21 103	CONTROL PANEL RECOMMENDED SPARE PARTS
22780985	HOURLMETER		21 103	CONTROL PANEL RECOMMENDED SPARE PARTS
22783245	BRACKET		43	FUEL SYSTEM
22785539	BRACKET		43	FUEL SYSTEM
22787436	WINGNUT		25	POWER PEDESTAL ASSEMBLY
22787444	WASHER		25	POWER PEDESTAL ASSEMBLY
22799936	CHANNEL, HORIZONTAL		3	FRAME
22800460	FIBREGLASS, FRONT PANEL		7	ENCLOSURE
22817522	TERMINAL		27	POWER PEDESTAL ELECTRICAL LAYOUT
22825533	BARRIER		27	POWER PEDESTAL ELECTRICAL LAYOUT
22832174	TERMINAL		27	POWER PEDESTAL ELECTRICAL LAYOUT
22855258	RIVET		81	OPTION - NO CONTAINMENT DRAIN PLUG
22869937	SEAL		7	ENCLOSURE
22874754	PANEL, PAINTED		7	ENCLOSURE
22874762	PANEL, PAINTED		7	ENCLOSURE
22896633	PIPE, EXHAUST		41	EXHAUST SYSTEM
22896666	SEAL, COVER		7	ENCLOSURE
22897136	GROUND ROD		95	OPTION - EARTH CONNECTING ROD
22899074	BRACKET		95	OPTION - EARTH CONNECTING ROD
22938369	GLAND, CABLE		91	OPTION - SUPER START PACKAGE
22950133	CONNECTOR, GLAND CABL		91	OPTION - SUPER START PACKAGE
22959936	SCREW		7 19 37 43 87 91	ENCLOSURE BATTERY ENGINE ASSEMBLY FUEL SYSTEM OPTION - OIL SUMP PUMP OPTION - SUPER START PACKAGE
23015084	NECK, FILLER		43	FUEL SYSTEM
23047566	DECAL, NO WATER		13	DECALS AND DOCUMENTATION
23047582	DECAL, CRUSH HAZARD		13	DECALS AND DOCUMENTATION
23062893	DECAL 91dB SOUND POWE		11	DECALS AND DOCUMENTATION
23064587	SCREW		27	POWER PEDESTAL ELECTRICAL LAYOUT
23076656	WASHER		19 47	BATTERY COOLING SYSTEM
23103468	CONTROLLER		23 103	CONTROL PANEL RECOMMENDED SPARE PARTS
23146905	CAP, RAIN		41	EXHAUST SYSTEM
23149438	SWITCH		23	CONTROL PANEL

Part Number	Denomination	WAS	Page	Subgroup
23189319	HORN		27 103	POWER PEDESTAL ELECTRICAL LAYOUT RECOMMENDED SPARE PARTS
23251986	BOX		91	OPTION - SUPER START PACKAGE
23269186	BREAKER, CIRCUIT		27 83 103	POWER PEDESTAL ELECTRICAL LAYOUT OPTION - SOCKETS RECOMMENDED SPARE PARTS
23269228	TRANSFORMER		35	POWER PEDESTAL ASSEMBLY
23269244	RELAY		35	POWER PEDESTAL ASSEMBLY
23269269	BREAKER		31 103	POWER PEDESTAL ASSEMBLY RECOMMENDED SPARE PARTS
23270325	TRIP, COIL 12V		27	POWER PEDESTAL ELECTRICAL LAYOUT
23293764	BREAKER		35	POWER PEDESTAL ASSEMBLY
23293772	CONTACT		35	POWER PEDESTAL ASSEMBLY
23330491	SCREW		7	ENCLOSURE
23339609	PLUG, BLANKING		23 27	CONTROL PANEL POWER PEDESTAL ELECTRICAL LAYOUT
23370729	RAIL		91	OPTION - SUPER START PACKAGE
35192178	CLAMP		41	EXHAUST SYSTEM
35209048	CLAMP		41	EXHAUST SYSTEM
35278530	NUT		7	ENCLOSURE
35279025	SCREW		15 37 41 43 47	ALTERNATOR ASSEMBLY ENGINE ASSEMBLY EXHAUST SYSTEM FUEL SYSTEM COOLING SYSTEM
35300771	SCREW		41	EXHAUST SYSTEM
35304047	NUT		15 37	ALTERNATOR ASSEMBLY ENGINE ASSEMBLY
35322395	SILENCER, PNEUMATIC		43	FUEL SYSTEM
35326578	HOSE		91	OPTION - SUPER START PACKAGE
35337070	SCREW		43	FUEL SYSTEM
35337328	STUD, BALL		7	ENCLOSURE
35356484	TUBE, NYLON		43	FUEL SYSTEM
35369339	CONNECTOR		43	FUEL SYSTEM
35369347	CONNECTOR		43	FUEL SYSTEM
35393651	ELEMENT, SAFETY		39 99 101	AIR INTAKE SYSTEM MAINTENANCE KIT RECOMMENDED SPARE PARTS
35393669	CLIP, RETAINING		39	AIR INTAKE SYSTEM
35393677	VALVE, DUST EJECTOR		39	AIR INTAKE SYSTEM
35393685	ELEMENT, AIR FILTER		39 99 101	AIR INTAKE SYSTEM MAINTENANCE KIT RECOMMENDED SPARE PARTS
35393693	COVER, AIR CLEANER		39	AIR INTAKE SYSTEM
35393701	BODY, AIR CLEANER		39	AIR INTAKE SYSTEM
35393719	CAP, PLUG		39	AIR INTAKE SYSTEM
35600261	SPRING		7	ENCLOSURE
36771178	SCREW		47	COOLING SYSTEM
36793602	LATCH		7	ENCLOSURE

Part Number	Denomination	WAS	Page	Subgroup
36797652	SCREW		3 7 47 91 95	FRAME ENCLOSURE COOLING SYSTEM OPTION - SUPER START PACKAGE OPTION - EARTH CONNECTING ROD
36845014	CAP		43	FUEL SYSTEM
36845022	STRAINER, FUEL		43	FUEL SYSTEM
36852622	LAMP ASSEMBLY		21 23	CONTROL PANEL CONTROL PANEL
36853265	WASHER		19	BATTERY
36860005	J-BOLT		19	BATTERY
36879195	NUT		3	FRAME
36879211	NUT, FLANGE		5	FORKLIFT SKID
36880995	SCREW		3	FRAME
36881886	NUT		7 25 39 43	ENCLOSURE POWER PEDESTAL ASSEMBLY AIR INTAKE SYSTEM FUEL SYSTEM
36889608	SCREW		27 39 43	POWER PEDESTAL ELECTRICAL LAYOUT AIR INTAKE SYSTEM FUEL SYSTEM
36896462	PLUG		7	ENCLOSURE
36896975	SWITCH, BATTERY ISOLATO		19	BATTERY
36897999	AIR CLEANER ASSEMBLY		39	AIR INTAKE SYSTEM
36898096	SCREW		27	POWER PEDESTAL ELECTRICAL LAYOUT
36898104	NUT		87	OPTION - OIL SUMP PUMP
36921344	NUTSERT		47	COOLING SYSTEM
46520342	V-BELT		71 101	BELT TRANSMISSION RECOMMENDED SPARE PARTS
46520367	SPACER, ALTERNATOR		67	ALTERNATOR
46540647	DECAL, FUEL IN		89	OPTION - 3 WAY FUEL VALVE
46540654	DECAL, FUEL OUT		89	OPTION - 3 WAY FUEL VALVE
46541017	BASE, RELAY		21 23	CONTROL PANEL CONTROL PANEL
46551455	KIT, BEARING		17 103	ALTERNATOR PARTS RECOMMENDED SPARE PARTS
46551576	RAIL, DIN		27	POWER PEDESTAL ELECTRICAL LAYOUT
46552121	DECAL, WARNING-NO FUEL		13	DECALS AND DOCUMENTATION
46553706	GASKET		43	FUEL SYSTEM
46555538	SOLENOID, STOP		57 101	STOP SOLENOID RECOMMENDED SPARE PARTS
46556137	DECAL, BLACK WEB SITE		11	DECALS AND DOCUMENTATION
46556610	HINGE		7	ENCLOSURE
46556647	SCREW		25	POWER PEDESTAL ASSEMBLY
46557455	SUPPORT, ALTERNATOR		15	ALTERNATOR ASSEMBLY
46558841	ELBOW		87	OPTION - OIL SUMP PUMP
46561404	SCREW		7	ENCLOSURE
46561639	TERMINAL		27 91	POWER PEDESTAL ELECTRICAL LAYOUT OPTION - SUPER START PACKAGE

Part Number	Denomination	WAS	Page	Subgroup
			91	OPTION - SUPER START PACKAGE
46570819	RETAINER		7	ENCLOSURE
46573859	DECAL, DOOSAN TRI-COLO		11	DECALS AND DOCUMENTATION
46573860	DECAL, DOOSAN TRI-COLO		11	DECALS AND DOCUMENTATION
46573923	DECAL, DOOSAN LOGO		11	DECALS AND DOCUMENTATION
46574759	PLUG, HOLE		21	CONTROL PANEL
			23	CONTROL PANEL
46582419	VALVE		89	OPTION - 3 WAY FUEL VALVE
46582639	BRACKET		89	OPTION - 3 WAY FUEL VALVE
46583600	ADAPTOR		89	OPTION - 3 WAY FUEL VALVE
46584219	BRACKET		83	OPTION - SOCKETS
46585919	DECAL, MODEL		11	DECALS AND DOCUMENTATION
46587620	HINGE		25	POWER PEDESTAL ASSEMBLY
46588485	AMMETER		21	CONTROL PANEL
			103	RECOMMENDED SPARE PARTS
46592579	FOAM FIELD KIT (no adhesive		7	ENCLOSURE
46592580	FOAM FIELD KIT (no adhesive		7	ENCLOSURE
46594481	DECAL, STAGE 3A		11	DECALS AND DOCUMENTATION
46611701	BRACKET		89	OPTION - 3 WAY FUEL VALVE
46612179	COVER		3	FRAME
46612180	HOLDER, COVER		3	FRAME
46614139	ELBOW		87	OPTION - OIL SUMP PUMP
			91	OPTION - SUPER START PACKAGE
46620539	BREAKER, CIRCUIT		83	OPTION - SOCKETS
46620540	BREAKER, CIRCUIT		83	OPTION - SOCKETS
46620677	SOCKET		83	OPTION - SOCKETS
46622121	RELAY		21	CONTROL PANEL
			23	CONTROL PANEL
			103	RECOMMENDED SPARE PARTS
46622288	SPEC, SETTING FILE		23	CONTROL PANEL
46622480	RAIL		83	OPTION - SOCKETS
46623547	CHARGER, BATTERY		91	OPTION - SUPER START PACKAGE
46623638	CONNECTOR		43	FUEL SYSTEM
			47	COOLING SYSTEM
46631381	RAIL, DIN		27	POWER PEDESTAL ELECTRICAL LAYOUT
46631806	PARTITION		27	POWER PEDESTAL ELECTRICAL LAYOUT
			91	OPTION - SUPER START PACKAGE
46631807	CONNECTOR		91	OPTION - SUPER START PACKAGE
46631808	NUT, CABLE GLAND		91	OPTION - SUPER START PACKAGE
46631820	SCREW		91	OPTION - SUPER START PACKAGE
46631826	CONNECTOR		91	OPTION - SUPER START PACKAGE
46639859	CABLE, POSITIVE		19	BATTERY
46644139	FILLER NECK ASSEMBLY		43	FUEL SYSTEM
46650949	BREAKER		33	POWER PEDESTAL ASSEMBLY
			103	RECOMMENDED SPARE PARTS
46651220	RIVET		25	POWER PEDESTAL ASSEMBLY
46651792	SWITCH, AMMETER		21	CONTROL PANEL

Part Number	Denomination	WAS	Page	Subgroup
46651966	FITTING		47	COOLING SYSTEM
46652363	COVER, DRAIN PLUG		81	OPTION - NO CONTAINMENT DRAIN PLUG
46652543	SCREW		27	POWER PEDESTAL ELECTRICAL LAYOUT
46653119	ADAPTOR		87	OPTION - OIL SUMP PUMP
46655654	DECAL, FLAMMABLE LIQUID		11	DECALS AND DOCUMENTATION
46669128	PUMP		87	OPTION - OIL SUMP PUMP
46669440	HOSE		89	OPTION - 3 WAY FUEL VALVE
46674362	ELEMENT, FUEL FILTER		63 99 101	FUEL/WATER SEPARATOR MAINTENANCE KIT RECOMMENDED SPARE PARTS
46674376	BOLT		67	ALTERNATOR
46674960	MANUAL, OPERATION & MAI		11	DECALS AND DOCUMENTATION
46676845	SET, GASKET		69	GASKET SET
46678336	MANUAL, OPERATION & MAI		11	DECALS AND DOCUMENTATION
46679058	MANUAL, OPERATION & MAI		11	DECALS AND DOCUMENTATION
46679059	MANUAL, OPERATION & MAI		11	DECALS AND DOCUMENTATION
46687966	CUP		63	FUEL/WATER SEPARATOR
46687967	PLUG, DRAIN		63	FUEL/WATER SEPARATOR
46689750	MANUAL, OPERATION & MAI		11	DECALS AND DOCUMENTATION
46691310	CABLE, NEGATIVE		19	BATTERY
46693287	ENGINE		37	ENGINE ASSEMBLY
46693291	RADIATOR ASSEMBLY		47	COOLING SYSTEM
46693430	COVER		83	OPTION - SOCKETS
46693431	BRACKET		83	OPTION - SOCKETS
46693461	HARNESS		83	OPTION - SOCKETS
46695100	ALTERNATOR		15 103	ALTERNATOR ASSEMBLY RECOMMENDED SPARE PARTS
46695299	GASKET		37	ENGINE ASSEMBLY
46695376	BRACKET		47	COOLING SYSTEM
46695428	BRACKET		87	OPTION - OIL SUMP PUMP
46696104	FRAME		3	FRAME
46696105	TANK, FUEL		43	FUEL SYSTEM
46696152	PANEL ASSEMBLY		7	ENCLOSURE
46696153	PANEL, PAINTED		7	ENCLOSURE
46696154	PANEL		7	ENCLOSURE
46696155	PANEL, PAINTED		7	ENCLOSURE
46696181	PANEL ASSEMBLY		7	ENCLOSURE
46696182	PANEL, PAINTED		7	ENCLOSURE
46696183	DOOR ASSEMBLY		7	ENCLOSURE
46696184	DOOR, PAINTED		7	ENCLOSURE
46696189	DOOR ASSEMBLY		7	ENCLOSURE
46696190	DOOR, PAINTED		7	ENCLOSURE
46696216	PANEL ASSEMBLY		7	ENCLOSURE
46696217	PANEL ASSEMBLY		7	ENCLOSURE
46696242	CROSSMEMBER, ENGINE		37	ENGINE ASSEMBLY
46696256	BRACKET		89	OPTION - 3 WAY FUEL VALVE

Part Number	Denomination	WAS	Page	Subgroup
46696260	BRACKET		37	ENGINE ASSEMBLY
46696268	BRACKET		37	ENGINE ASSEMBLY
46696285	GUARD		37	ENGINE ASSEMBLY
46696286	GUARD		37	ENGINE ASSEMBLY
46696287	TUBE ASSEMBLY, EXHAUST		41	EXHAUST SYSTEM
46696289	BRACKET		41	EXHAUST SYSTEM
46696294	INSULATION, EXHAUST		41	EXHAUST SYSTEM
46696295	BRACKET		41	EXHAUST SYSTEM
46696296	SUPPORT, COOLER		47	COOLING SYSTEM
46696354	BRACKET		47	COOLING SYSTEM
46696361	BRACKET		39	AIR INTAKE SYSTEM
46696362	HOSE		39	AIR INTAKE SYSTEM
46696385	CHANNEL, VERTICAL		3	FRAME
46696386	LIFTING BAIL ASSEMBLY		3	FRAME
46696391	PANEL		7	ENCLOSURE
46696392	PANEL		7	ENCLOSURE
46696527	POWER PEDESTAL, G20		31 33 35	POWER PEDESTAL ASSEMBLY POWER PEDESTAL ASSEMBLY POWER PEDESTAL ASSEMBLY
46696528	ENCLOSURE		25	POWER PEDESTAL ASSEMBLY
46696529	COVER		31 33	POWER PEDESTAL ASSEMBLY POWER PEDESTAL ASSEMBLY
46696530	DOOR		25	POWER PEDESTAL ASSEMBLY
46696531	CONDUIT		25	POWER PEDESTAL ASSEMBLY
46696532	CABLE		27	POWER PEDESTAL ELECTRICAL LAYOUT
46696533	CABLE		27	POWER PEDESTAL ELECTRICAL LAYOUT
46696534	CABLE		27	POWER PEDESTAL ELECTRICAL LAYOUT
46696545	SPACER		27	POWER PEDESTAL ELECTRICAL LAYOUT
46696549	COVER		85	OPTION - NO SOCKETS
46696550	SPACER		25	POWER PEDESTAL ASSEMBLY
46696551	HOLDER		25	POWER PEDESTAL ASSEMBLY
46696552	RUBBER		25	POWER PEDESTAL ASSEMBLY
46696553	HOLDER		25	POWER PEDESTAL ASSEMBLY
46696608	HINGE		25	POWER PEDESTAL ASSEMBLY
46696622	TERMINAL, EARTH		17	ALTERNATOR PARTS
46696637	COVER		35	POWER PEDESTAL ASSEMBLY
46696638	HARNESS		27	POWER PEDESTAL ELECTRICAL LAYOUT
46696639	MANGER		27	POWER PEDESTAL ELECTRICAL LAYOUT
46696640	MANGER		27	POWER PEDESTAL ELECTRICAL LAYOUT
46696658	MANGER		27	POWER PEDESTAL ELECTRICAL LAYOUT
46696660	MANGER		27	POWER PEDESTAL ELECTRICAL LAYOUT
46696888	DECAL, POWER ON		23	CONTROL PANEL
46696890	HARNESS		21	CONTROL PANEL
46696891	HARNESS		23	CONTROL PANEL
46697107	DIODE		67	ALTERNATOR
46697108	FILTER, FUEL		61	FUEL FILTER

Part Number	Denomination	WAS	Page	Subgroup
			101	RECOMMENDED SPARE PARTS
46697109	ADJUSTER		67	ALTERNATOR
46697110	SPACER		71	BELT TRANSMISSION
46697111	FILTER, OIL		53	OIL FILTER ASSEMBLY
			97	MAINTENANCE KIT
			99	MAINTENANCE KIT
			101	RECOMMENDED SPARE PARTS
46697114	V-PULLEY		71	BELT TRANSMISSION
46697115	SEPARATOR ASSEMBLY		63	FUEL/WATER SEPARATOR
46697118	INJECTION PUMP ASSEMBL		55	FUEL INJECTION PUMP
46697119	VALVE, INJECTION		59	INJECTION VALVE
			103	RECOMMENDED SPARE PARTS
46697264	RIVET		27	POWER PEDESTAL ELECTRICAL LAYOUT
46697657	TAPE, ADHESIVE		27	POWER PEDESTAL ELECTRICAL LAYOUT
46697658	GUARD, RUBBER		27	POWER PEDESTAL ELECTRICAL LAYOUT
46697678	MANAGER		21	CONTROL PANEL
46697679	MANAGER		23	CONTROL PANEL
46697879	SWITCH, TEMPERATURE		21	CONTROL PANEL
46697911	KIT, FIELD WINDING		17	ALTERNATOR PARTS
46697912	REGULATOR, VOLTAGE		17	ALTERNATOR PARTS
			103	RECOMMENDED SPARE PARTS
46697913	BRIDGE, DIODE		17	ALTERNATOR PARTS
			103	RECOMMENDED SPARE PARTS
46697914	BRIDGE, DIODE		17	ALTERNATOR PARTS
			103	RECOMMENDED SPARE PARTS
46697915	BLOCK, TERMINAL		17	ALTERNATOR PARTS
46697919	SENSOR, OIL TEMPERATUR		23	CONTROL PANEL
46697923	PANEL		21	CONTROL PANEL
46697924	PANEL		23	CONTROL PANEL
46697963	BRACKET		91	OPTION - SUPER START PACKAGE
46698042	CONNECTION BOX ASSEMB		91	OPTION - SUPER START PACKAGE
46698184	ALTERNATOR		15	ALTERNATOR ASSEMBLY
			103	RECOMMENDED SPARE PARTS
46698186	HARNESS		35	POWER PEDESTAL ASSEMBLY
46698235	MANUAL, PARTS		11	DECALS AND DOCUMENTATION
46698281	SWITCH, WATER TEMPERA		75	WATER PUMP
			101	RECOMMENDED SPARE PARTS
46698282	KIT, 500 HOUR		99	MAINTENANCE KIT
46698484	GUARD, FAN		47	COOLING SYSTEM
46698485	HOSE		47	COOLING SYSTEM
46698487	HOSE		47	COOLING SYSTEM
46699178	NUT		21	CONTROL PANEL
			23	CONTROL PANEL
46699421	BRACKET		91	OPTION - SUPER START PACKAGE
54429295	WASHER, SNUBBER		15	ALTERNATOR ASSEMBLY
			37	ENGINE ASSEMBLY
54439062	MOUNT		15	ALTERNATOR ASSEMBLY
			37	ENGINE ASSEMBLY

Part Number	Denomination	WAS	Page	Subgroup
54576624	HOSE		45 47	FUEL SYSTEM COOLING SYSTEM
54577770	ADAPTOR		91	OPTION - SUPER START PACKAGE
54642327	DECAL, BATTERY DISCONN		19	BATTERY
54757935	SWITCH, OIL PRESSURE		21	CONTROL PANEL
89257067	PROTECTOR		79	OPTION - FRAME PROTECTION
92050376	SCREW		35	POWER PEDESTAL ASSEMBLY
92061506	WASHER		15 37	ALTERNATOR ASSEMBLY ENGINE ASSEMBLY
92096015	SCREW		31 33 35 83 91	POWER PEDESTAL ASSEMBLY POWER PEDESTAL ASSEMBLY POWER PEDESTAL ASSEMBLY OPTION - SOCKETS OPTION - SUPER START PACKAGE
92179043	SCREW		87	OPTION - OIL SUMP PUMP
92253129	CLAMP		47	COOLING SYSTEM
92280981	SCREW		3	FRAME
92281427	TIE, CABLE		27 83 87 91	POWER PEDESTAL ELECTRICAL LAYOUT OPTION - SOCKETS OPTION - OIL SUMP PUMP OPTION - SUPER START PACKAGE
92304518	NUT		27	POWER PEDESTAL ELECTRICAL LAYOUT
92304583	WASHER		21 23 25	CONTROL PANEL CONTROL PANEL POWER PEDESTAL ASSEMBLY
92304641	WASHER		91	OPTION - SUPER START PACKAGE
92329119	NUT		79	OPTION - FRAME PROTECTION
92340439	WASHER		91	OPTION - SUPER START PACKAGE
92340454	NUT		91	OPTION - SUPER START PACKAGE
92341981	WASHER		43	FUEL SYSTEM
92659432	SCREW		83	OPTION - SOCKETS
92783281	PLUG		27	POWER PEDESTAL ELECTRICAL LAYOUT
92867449	DECAL, REFER TO HANDBO		13	DECALS AND DOCUMENTATION
92912559	DECAL, EARTH WARNING		13	DECALS AND DOCUMENTATION
92922855	CATCH		7	ENCLOSURE
92922863	CATCH		7	ENCLOSURE
92930593	DECAL, ELECTRIC SHOCK		13	DECALS AND DOCUMENTATION
92949742	FOAM FIELD KIT (with adhesi		7	ENCLOSURE
92949759	FOAM FIELD KIT (with adhesi		7	ENCLOSURE
92949767	FOAM FIELD KIT (with adhesi		7	ENCLOSURE
92949775	FOAM FIELD KIT (with adhesi		7	ENCLOSURE
93171254	DECAL, DIESEL FUEL		13	DECALS AND DOCUMENTATION
93171262	DECAL, LIFT/TIE POINT		13	DECALS AND DOCUMENTATION
93502128	PLUG		3 89	FRAME OPTION - 3 WAY FUEL VALVE
93524007	PLATE, CABLE TIE		27	POWER PEDESTAL ELECTRICAL LAYOUT
95220844	CLAMP		39 91	AIR INTAKE SYSTEM OPTION - SUPER START PACKAGE

Part Number	Denomination	WAS	Page	Subgroup
			47	COOLING SYSTEM
			89	OPTION - 3 WAY FUEL VALVE
95923298	NUT		19	BATTERY
			43	FUEL SYSTEM
95930517	NUT		21	CONTROL PANEL
95932802	BUSH, REDUCING		91	OPTION - SUPER START PACKAGE
95935037	WASHER		37	ENGINE ASSEMBLY
95942520	SCREW		21	CONTROL PANEL
95952248	BUSH		47	COOLING SYSTEM
95992392	PLUG		43	FUEL SYSTEM
96701396	WASHER		79	OPTION - FRAME PROTECTION
96701461	SCREW		7	ENCLOSURE
96701750	NUT, HEX		47	COOLING SYSTEM
96702261	SCREW		79	OPTION - FRAME PROTECTION
96702352	SCREW		15	ALTERNATOR ASSEMBLY
			37	ENGINE ASSEMBLY
96702824	SCREW		25	POWER PEDESTAL ASSEMBLY
96703251	SCREW		25	POWER PEDESTAL ASSEMBLY
96703806	NUT		7	ENCLOSURE
96704176	NUT		25	POWER PEDESTAL ASSEMBLY
			91	OPTION - SUPER START PACKAGE
96704408	SCREW		3	FRAME
			89	OPTION - 3 WAY FUEL VALVE
96704580	NUT		25	POWER PEDESTAL ASSEMBLY
96705132	NUT		91	OPTION - SUPER START PACKAGE
96708060	BOLT		15	ALTERNATOR ASSEMBLY
96735543	NUT		41	EXHAUST SYSTEM
96740782	SCREW		15	ALTERNATOR ASSEMBLY
			37	ENGINE ASSEMBLY
96742283	SCREW		91	OPTION - SUPER START PACKAGE
96742689	SCREW		85	OPTION - NO SOCKETS
96745229	WASHER		27	POWER PEDESTAL ELECTRICAL LAYOUT
96747142	SCREW		5	FORKLIFT SKID



Portable Power