

SECTION 17 - SPECIFICATIONS**ABSCHNITT 17 - SPEZIFIKATIONEN**

Contents	Page	Inhalt	Seite
SPECIFICATIONS	1	SPEZIFIKATIONEN	1
ENGINE RPM SETTINGS	1	MOTORDREHZAHL-EINSTELLUNGEN	1

SPECIFICATIONS

MODEL	RX-55
WEIGHT	121 pounds
VIBRATION FREQUENCY	550 to 600 RPM
AMPLITUDE	1.57 to 1.97 inches
TRAVEL SPEED	39 to 46 feet per minute
OVERALL LENGTH	25.2 inches
OVERALL HEIGHT	38.2 inches
FOOT PLATE SIZE	13 inches x 10.6 inches (standa
ENGINE (MAKE & MODEL)	Robin EC08D air cooled, 2 cycle, 4.79 cu. in.
ENGINE HORSEPOWER	3.3 HP
FUEL TANK CAPACITY	2 quarts
FUEL	25:1 gasoline/oil mixture
STARTING SYSTEM	Recoil starter

ENGINE RPM SETTINGS

WITHOUT LOAD	WITH LOAD	CLUTCH - IN RPM
4100 +/- 100	4000 +/- 100	2900 +/- 100

SPEZIFIKATIONEN

MODELL	RX-55
GEWICHT	55 kilos
VIBRIEREN FREQUENZ	550 zu 600 U/M
AMPLITUDE	3.98 zu 5.99 centimeters
FAHRGESCHWINDIGKEIT	12 zu 14 meters einer minuten
GESAMTLÄNGE	64 centimeters
GESAMTHÖHE	90 centimeters
FUSSPLATTE	33.0 cm x 27.0 cm (maßstab)
MOTOR (FABRIKAT & MODELL)	Robin EC08D luftgekühlt, 2 cycle, 4.79 cu. in.
MOTOR PS	3.3 PS
KRAFTSOFTANK-KAPAZITÄT	1.9 liters
KRAFTSTOFF	25:1 benzin/öl mischung
ANLASSERSYSTEM	Seilzugstarter

MOTORDREHZAHL-EINSTELLUNG

OHNE BELASTUNG	MIT BELASTUNG	EINKUPPLUNGS-UPM
4100 +/- 100	4000 +/- 100	2900 +/- 100

SECTION 18 - PARTS MANUAL

ABSCHNITT 18 - ERSATZTEILLISTEHANDBUCH

RX-55

TAMPER RAMMER STAMPFRAMMER

COMMUNICATION NO. 59013920

Doosan purchased Bobcat Company from Ingersoll-Rand Company in 2007. Any reference to Ingersoll-Rand Company or use of trademarks, service marks, logos, or other proprietary identifying marks belonging to Ingersoll-Rand Company in this manual is historical or nominative in nature, and is not meant to suggest a current affiliation between Ingersoll-Rand Company and Doosan Company or the products of either.

Revised (10-12)

RX-55
OPERATION AND PARTS MANUAL

*****Always use Ingersoll-Rand Replacement parts!*****

SECTION 18 - PARTS MANUAL

WHEN ORDERING REPLACEMENT PARTS

Find the appropriate part from those listed among the parts exploded views and furnish Ingersoll-Rand with the following information; Model, Serial Number, Part Number, Part Name and the Required Quantity. The number given in the REQD No. column indicates the quantity of parts used for one unit.

NOTE

The parts listed in the parts manual are subject to change without notice.

TABLE OF CONTENTS

UPPER SECTION	18-4
ENGINE, HANDLE AND LOWER CASING SECTION	18-8
ENGINE ASSEMBLY(59839696) - INTERNAL BREAKDOWN	18-12
FOOT PLATE ASSEMBLY, TOOLS AND DECALS	18-20
NUMERICAL INDEX	18-23

ABSCHNITT 18 - ERSATZTEILLISTEHANDBUCH

BESTELLUNG VON ERSATZTEILEN

Suchen Sie das entsprechende Teil aus den Auflistungen zwischen den Zeichnungen heraus und geben Sie das folgende bei ihrer Bestellung an: Modell, Werks-Nr., Teile-Nr., Teilebezeichnung und die benötigte Menge. Die in der Spalte BEN. ANZAHL angegebene Menge gilt für eine Maschine.


HINWEIS

Wir behalten uns Änderungen an der Ersatzteilliste ohne vorherige

TABLE OF CONTENTS

UPPER SECTION	18-4
ENGINE, HANDLE AND LOWER CASING SECTION	18-8
ENGINE ASSEMBLY(59839696) - INTERNAL BREAKDOWN	18-12
FOOT PLATE ASSEMBLY, TOOLS AND DECALS	18-20
NUMERICAL INDEX	18-23

RX-55
PARTS MANUAL

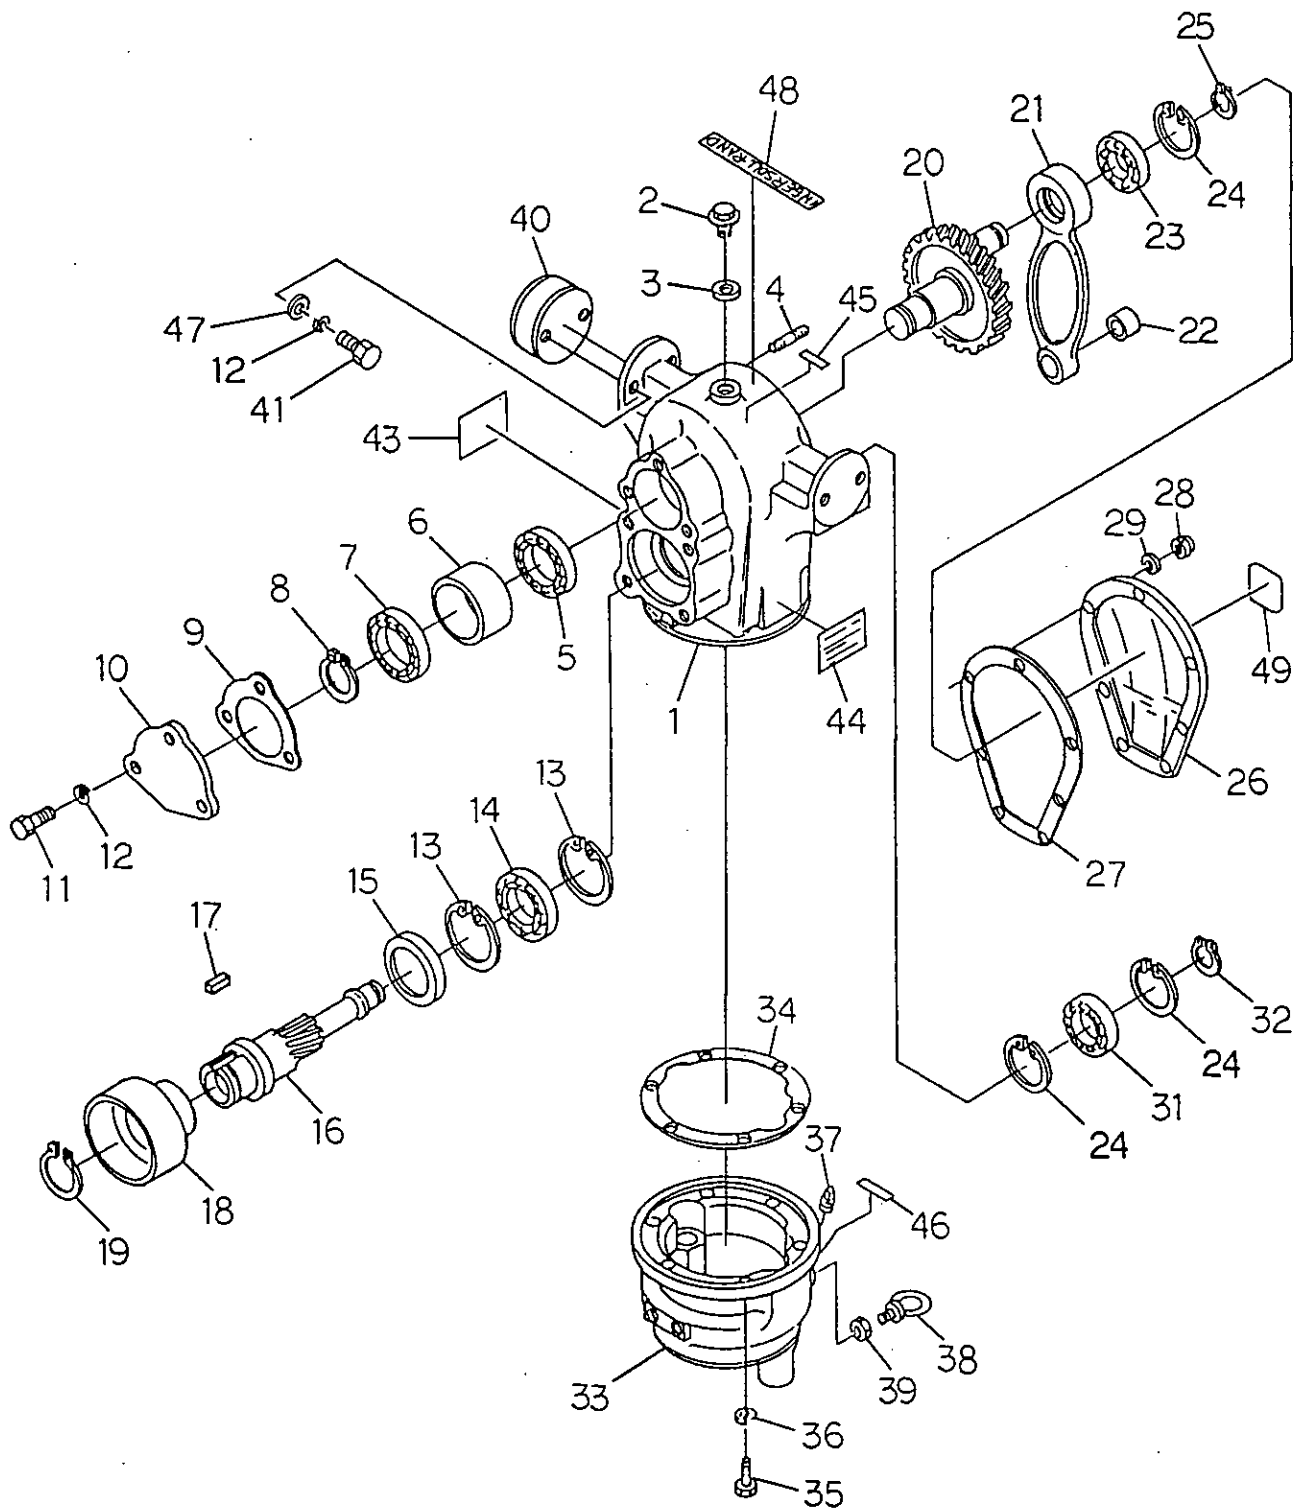

UPPER SECTION
Revision 4

UPPER SECTION

ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSION / NOTES
		Ref. RX55-PRL92-1		
1	59839217	Upper Casing	1	
2	59831123	Feed Plug	1	
3	59831131	Packing	1	
4	59842294	Stud Bolt	1	
5	59839258	Ball Bearing	1	No. 6206Z
6	59839266	Collar	1	
7	59839274	Ball Bearing	1	No. 6305Z
8	59839282	Snap Ring	1	S-25
9	59839290	Packing	1	
10	59839308	Bearing Cap	1	
11	59841627	Hex Bolt	3	M8 x 23
12	59831925	Spring Washer	7	M8
13	59839332	Snap Ring	1	R-62
14	59839340	Ball Bearing	1	No. 6206 C3
15	59839357	Oil Seal	1	SC-45629
16	59839365	Pinion Gear Shaft	1	
17	59839373	Key	1	7 x 7 x 18
18	59839381	Clutch Drum	1	
19	59839399	Snap Ring	1	S-42
20	59839407	Crank Gear	1	
21	59839415	Crank Rod Assembly	1	
22	59839423	Bushing	1	
23	59839431	Ball Bearing	1	No. 6204ZZ
24	59837948	Snap Ring	3	R-47
25	59839456	Snap Ring	1	S-20
26	59839464	Casing Cover	1	
27	59839472	Packing	1	
28	59831917	Nylon Nut	1	M8
29	59831560	Lock Washer	1	M8
30	----	----	----	----
31	59839514	Ball Bearing	1	No. 6303 C3
32	59838169	Snap Ring	1	S-17
33	59839530	Middle Casing	1	
34	59839548	Packing	1	
35	59831792	Hex Bolt	6	M10 x 35
36	59951632	Spring Washer	6	M10
37	59839571	Oil Gauge Plug	1	1/8"
38	59839589	Eye Bolt	2	M10
39	58835943	Lock Nut (Effective with S/N SR5057)	2	M10
40	59839605	Rubber Buffer	2	
41	59841627	Hex Bolt	4	M8 x 23
42	----	----	----	----
43	N.S.S.	Name Plate	4	
44	59839647	Caution Label	1	
45	59839654	Oil Feed Label	1	

CONTINUED


RX-55
OPERATION AND PARTS MANUAL

*****Always use Ingersoll-Rand Replacement parts!*****

UPPER SECTION

ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSION / NOTES
46	59839662	Oil Gauge Label	1	M8
47	59835371	Plain Washer	1	
48	59426247	Decal, 8" I-R Head (Eff. with S/N 9508)	1	
49	59484261	Decal, Emblem (Eff. with S/N 9508)	1	

RX-55
PARTS MANUAL

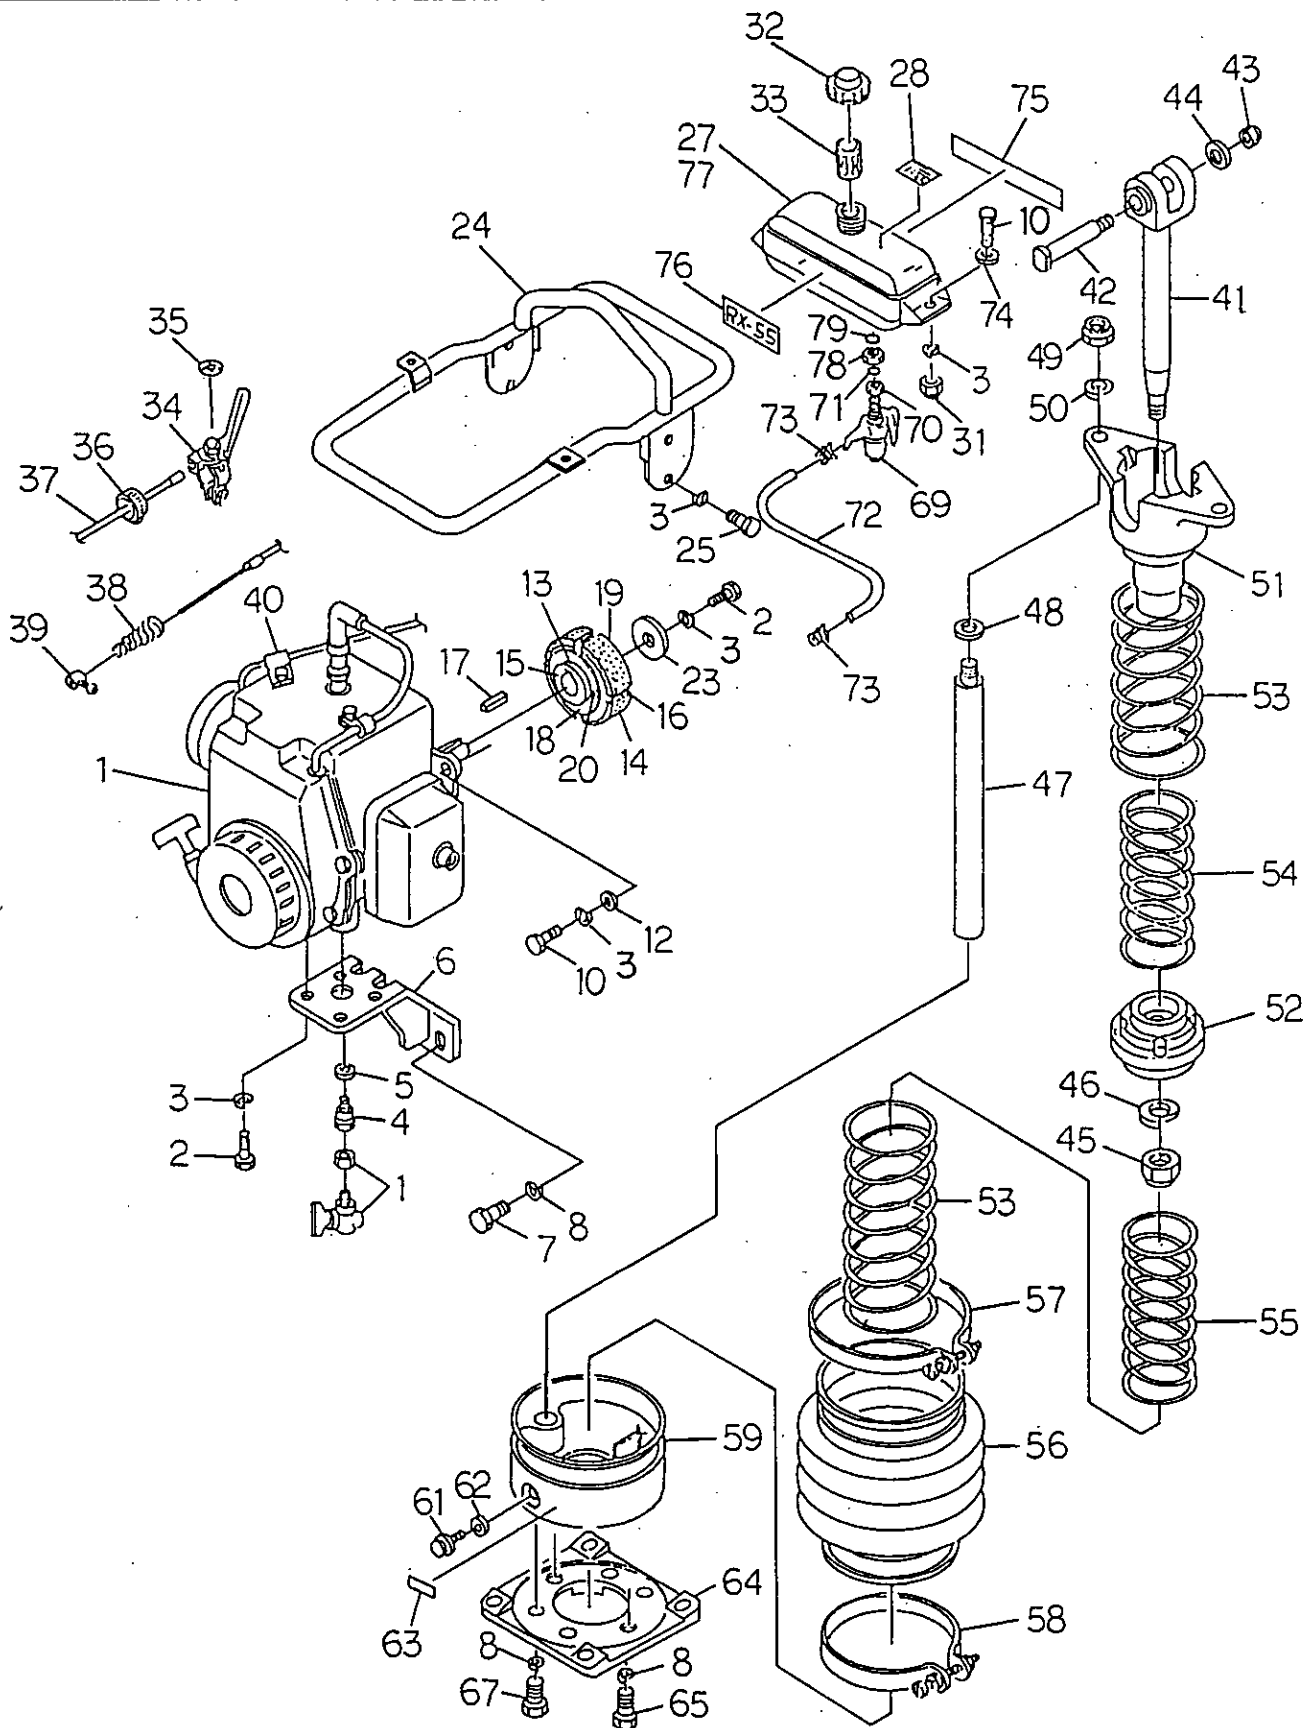

ENGINE, HANDLE, AND LOWER CASING SECTIONS

Revision 4

ENGINE, HANDLE, AND LOWER CASING SECTIONS

ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSION / NOTES
		Ref. RX55-PRL92-2		
1	59839696	ENGINE ASSEMBLY (EC08D 0358)	1	See Internal Breakdown
2	59832535	Hex Bolt	5	M8 x 20
3	59831925	Spring Washer	15	M8
4	59839720	Joint	1	
5	59839738	Packing	1	
6	59839746	Engine Support	1	
7	59831826	Hex Bolt	2	M10 x 20
8	59951632	Spring Washer	8	M10
9	----	----	----	----
10	59953935	Hex Bolt (Effective with S/N MR5085)	6	M8 x 30
-	59843169	Hex Bolt (Prior to S/N MR5085)	6	M8 x 30
11	----	----	----	----
12	59835371	Plain Washer	4	M8
13	59839811	Centrifugal Clutch Assembly	1	
14	59839829	Clutch Lining Shoe	1	4 Piece Set
15	59839837	Clutch Boss	1	
16	59839845	Clutch Spring	4	
17	59839852	Clutch Key	1	
18	59839860	Guide Plate	1	
19	59839878	Guide Plate	1	
20	59839886	Screw	1	M5 x 8
21	----	----	----	----
22	----	----	----	----
23	59843540	Washer	1	
24	58898222	Operating Handle (Eff. with S/N MR5085)	1	
-	59839928	Operating Handle (Prior to S/N MR5085)	1	
25	59831552	Hex Bolt	4	
26	----	----	----	M8 x 16
27	59444810	Fuel Tank (Effective with S/N IR5040)	1	----
-	59388545	Fuel Tank (Prior to S/N MR5085)	1	
28	59426270	Caution Label (Effective with S/N 9508)	1	
29	----	----	----	----
30	----	----	----	----
31	59831917	Nylon Nut	2	M8
32	59853226	Fuel Tank Cap	1	043-04400-33
33	59853358	Fuel Filter	1	064-13100-10
34	59831511	Throttle Lever Assembly	1	Dia. 25
35	59841767	High-Low Label	1	
36	59840041	Throttle Wire Band	1	B-25
37	59840058	Throttle Wire	1	
38	59840066	Return Spring	1	
39	59840074	Wire End Fitting	1	
40	59840082	Wire Clamp	1	
41	59840090	Connecting Rod	1	
42	59840108	Connecting Rod Pin	1	
CONTINUED				

RX-55
OPERATION AND PARTS MANUAL

*****Always use Ingersoll-Rand Replacement parts!*****

ENGINE, HANDLE, AND LOWER CASING SECTIONS

ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSION / NOTES
43	59840116	Nylon Nut	1	M10, P1.25
44	59840124	Washer	1	
45	59840132	Nylon Nut	2	M16, P1.25
46	59840140	Spring Washer	2	M16
47	59840157	Guide Shaft	2	
48	59840165	Collar	1	
49	59840173	Nylon Nut	1	M14, P1.5
50	59832618	Spring Washer	2	M14
51	59840199	Guide Shaft Head	1	
52	59840207	Spring Retainer	1	
53	59840215	Large Coil Spring	1	
54	59840223	Small Upper Coil Spring	1	
55	59840231	Small Lower Coil Spring	1	
56	58836560	Bellows (Effective with S/N SR5057)	1	
-	59840249	Bellows (Prior to S/N SR5057)	1	
57	58836578	Large Band (Effective with S/N SR5057)	1	
-	59840256	Large Band (Prior to S/N SR5057)	1	
58	58836586	Small Band (Effective with S/N SR5057)	1	
-	59839688	Small Band (Prior to S/N SR5057)	1	
59	59840264	Lower Casing Assembly	1	
60	----	----		----
61	59831123	Oil Drain Plug	1	
62	59831131	Packing	1	
63	59840306	Oil Drain Label	1	
64	59840314	Lower Connecting Plate	1	
65	59831792	Hex Bolt	2	M10 x 35
66	----	----		----
67	59832287	Hex Bolt	4	M10 x 30
68	----	----		----
69	59841676	Fuel Strainer (Effective with S/N IR5040)	1	064-20014-01
-	59843219	Fuel Strainer (Prior to S/N MR5085)	1	
70	59841684	Lock Nut (Effective with S/N IR5040)	1	064-20029-20
71	59841692	O-Ring (Effective with S/N IR5040)	1	064-20003-30
72	59872044	Rubber Pipe	1	
73	59841718	Hose Clamp	2	056-11000-30
74	58898230	Washer (Effective with S/N MR5085)	2	Dia 8.5 x 22 x 2.3
75	59426262	Decal, 8" I-R (Effective with S/N 9508)	1	
76	59386250	Decal, RX-55 (Effective with S/N 9508)	1	
77	58898347	Fuel Tank Assembly (Effective with S/N IR5040)	1	
78	59444828	Seal Nut (Effective with S/N IR5040)	1	
79	59444836	O-Ring (Effective with S/N IR5040)	1	P16, NO.2

This is a detailed exploded view diagram of a small engine assembly, likely for a lawnmower or similar outdoor power equipment. The diagram shows the following components and their assembly relationships:

- Engine Block and Cylinder Head:** The central component is the engine block (11) with the cylinder head (12) on top. The piston (14) and connecting rod (15) are shown in their relative positions. The spark plug (17) is shown being inserted into the cylinder head.
- Carburetor and Air Filter:** The carburetor (16) is shown below the engine block. The air filter (13) is shown to the right of the carburetor. The air filter housing (18) and its cover (19) are shown below the air filter.
- Clutch and Drive Shaft:** The clutch assembly (20) is shown to the left of the engine block. The drive shaft (21) is shown to the right of the clutch. The drive shaft pulley (22) and the clutch pulley (23) are shown in their relative positions.
- Ignition System:** The ignition coil (24) is shown to the right of the carburetor. The ignition switch (25) is shown below the ignition coil. The spark plug (26) is shown being inserted into the ignition coil.
- Exhaust System:** The exhaust manifold (27) is shown to the left of the engine block. The exhaust pipe (28) is shown below the exhaust manifold. The muffler (29) is shown to the right of the exhaust pipe.
- Other Components:** Various other components are shown, including the fuel tank (30), the fuel line (31), the fuel filter (32), the fuel pump (33), the fuel valve (34), the fuel nozzle (35), the fuel hose (36), the fuel connector (37), the fuel plug (38), the fuel cap (39), the fuel tank cover (40), the fuel tank bracket (41), the fuel tank mounting bracket (42), the fuel tank mounting screw (43), the fuel tank mounting nut (44), the fuel tank mounting washer (45), the fuel tank mounting gasket (46), the fuel tank mounting seal (47), the fuel tank mounting O-ring (48), the fuel tank mounting pin (49), the fuel tank mounting clip (50), the fuel tank mounting bracket (51), the fuel tank mounting screw (52), the fuel tank mounting nut (53), the fuel tank mounting washer (54), the fuel tank mounting gasket (55), the fuel tank mounting seal (56), the fuel tank mounting O-ring (57), the fuel tank mounting pin (58), the fuel tank mounting clip (59), the fuel tank mounting bracket (60), the fuel tank mounting screw (61), the fuel tank mounting nut (62), the fuel tank mounting washer (63), the fuel tank mounting gasket (64), the fuel tank mounting seal (65), the fuel tank mounting O-ring (66), the fuel tank mounting pin (67), the fuel tank mounting clip (68), the fuel tank mounting bracket (69), the fuel tank mounting screw (70), the fuel tank mounting nut (71), the fuel tank mounting washer (72), the fuel tank mounting gasket (73), the fuel tank mounting seal (74), the fuel tank mounting O-ring (75), the fuel tank mounting pin (76), the fuel tank mounting clip (77), the fuel tank mounting bracket (78), the fuel tank mounting screw (79), the fuel tank mounting nut (80), the fuel tank mounting washer (81), the fuel tank mounting gasket (82), the fuel tank mounting seal (83), the fuel tank mounting O-ring (84), the fuel tank mounting pin (85), the fuel tank mounting clip (86), the fuel tank mounting bracket (87), the fuel tank mounting screw (88), the fuel tank mounting nut (89), the fuel tank mounting washer (90), the fuel tank mounting gasket (91), the fuel tank mounting seal (92), the fuel tank mounting O-ring (93), the fuel tank mounting pin (94), the fuel tank mounting clip (95), the fuel tank mounting bracket (96), the fuel tank mounting screw (97), the fuel tank mounting nut (98), the fuel tank mounting washer (99), the fuel tank mounting gasket (100), the fuel tank mounting seal (101), the fuel tank mounting O-ring (102), the fuel tank mounting pin (103), the fuel tank mounting clip (104), the fuel tank mounting bracket (105), the fuel tank mounting screw (106), the fuel tank mounting nut (107), the fuel tank mounting washer (108), the fuel tank mounting gasket (109), the fuel tank mounting seal (110), the fuel tank mounting O-ring (111), the fuel tank mounting pin (112), the fuel tank mounting clip (113), the fuel tank mounting bracket (114), the fuel tank mounting screw (115), the fuel tank mounting nut (116), the fuel tank mounting washer (117), the fuel tank mounting gasket (118), the fuel tank mounting seal (119), the fuel tank mounting O-ring (120), the fuel tank mounting pin (121), the fuel tank mounting clip (122).

18-12

ENGINE ASSEMBLY (59839696) - INTERNAL BREAKDOWN

ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSION / NOTES
		Ref. 59839696		
1	59941245	Complete Crankcase	1	
2	59853325	-Bearing	1	
3	59853333	-Bearing	1	
4	59853275	-Oil Seal	1	
5	59853259	-Oil Seal	1	
6	59853234	-Oil Seal	1	
7	59542498	-Stud	1	
8	59317396	-Stud	4	
9	59965285	Drain Cock	1	
10	59872143	Gasket	1	
11	59853069	Complete Cylinder	1	
12	59317396	-Stud	2	
13	59853119	Cylinder Packing	1	
14	59853549	Insulator Gasket	2	
15	59853747	Insulator	1	
16	59853028	Muffler Gasket	1	
17	59542613	Spark Plug	1	
18	59853382	Spark Plug Cap	1	
19	59853143	Ignition Coil	1	
20	59317404	Grommet	1	
21	59853127	Piston	1	
22	59853051	Piston Ring Set	1	
23	59853135	Piston Pin	1	
24	59853309	Clip	2	
25	59853341	Needle Bearing	1	
26	59854216	Fan Cover	1	
27	59853044	Stop Button	1	
28	59853036	Guide Rubber	1	
29	59318683	Bolt Assembly	4	
30	59318691	Flange Nut	1	
31	59854224	Complete Muffler	1	
32	59318709	Washer	1	
33	59318725	Bolt Assembly	1	
34	59853077	Complete Carburetor	1	
35	59986901	-Needle Valve	1	
36	59986919	-Nozzle		
37	59853762	-Reverse Main Jet	1	
38	59853788	-Main Jet Packing	1	
39	59853770	-Guide Holder	1	
		CONTINUED		

RX-55
OPERATION AND PARTS MANUAL

*****Always use Ingersoll-Rand Replacement parts!*****

ENGINE ASSEMBLY (59839696) - INTERNAL BREAKDOWN

ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSION / NOTES
40	59941419	-Float Arm	1	
41	59580696	-Screw	2	
42	59318907	-Screw	1	
43	59318741	-Float Chamber Packing	1	
44	59318733	-Packing	1	
45	59318758	-Float Pin	1	
46	59318766	-Float	1	
47	59318774	-Float Chamber	1	
48	59318782	-Choke Spring	1	
49	59318790	-Seal	1	
50	59318808	-Steel Ball	1	
51	59318816	-Choke Valve	1	
52	59318824	-Choke Shaft Assembly	1	
53	59318832	-Spring	2	
54	59318840	-Guide Screw	1	
55	59318857	-Pilot Jet	1	
56	59318865	-Throttle Shaft Assembly	1	
57	59318873	-Throttle Valve	1	
58	59318881	-Pilot Screw	1	
59	59318899	-Screw and Washer	1	
60	59853085	Air Cleaner Assembly	1	
61	59853689	-Element Complete	1	
62	59853564	-Special Lock Washer	1	
63	59318915	-Cover Assembly	1	
64	59318923	-Air Cleaner Label	1	
65	59318931	-Bolt and Washer Assembly	1	
66	59853093	Complete Recoil Starter	1	
67	59318964	-Spiral Spring	1	
68	59853010	-Rope	1	
69	59853002	-Ratchet	1	
70	59986927	-Pulley	1	
71	59318972	-Reel	1	
72	59318980	-Return Spring	1	
73	59318998	-Friction Spring	1	
74	59319004	-Friction Plate	1	
75	59319012	-Center Screw	1	
76	59319020	-Starter Knob	1	
77	59319061	-Rope Starter	1	
78	59319038	Bolt Assembly	3	
CONTINUED				

RX-55
OPERATION AND PARTS MANUAL

*****Always use Ingersoll-Rand Replacement parts!*****

ENGINE ASSEMBLY (59839696) - INTERNAL BREAKDOWN

ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSION / NOTES
79	59319046	Bolt Assembly	2	
80	59318584	Governor Lever	1	
81	59853572	Rod Spring	1	
82	59853416	Rod	1	
83	59853754	Spring	1	
84	59318568	Yoke	1	
85	59318576	Shaft	1	
86	59542902	Friction Washer	2	
87	59318592	Lever	1	
88	59542944	Washer	1	
89	59318600	Stop Plate	1	
90	59318618	Wing Nut	1	
91	59318626	Clip	1	
92	59318634	Bolt	1	
93	59542852	Nut	1	
94	59318642	Spring Washer	1	
95	59542852	Nut	1	
96	59318659	Pan Head Screw	1	
97	59318667	Spring Washer	1	
98	59317453	Adjusting Screw	1	
99	59542589	Nut	2	
100	59542878	Washer	2	
101	59317461	Crankshaft	1	
102	59317479	Key	1	
103	59542654	Governor Plate Unit	1	
104	59317487	Governor Sleeve	1	
105	59317495	Spacer	1	
106	59318501	Nut	1	
107	59318519	Washer	1	
108	59318527	Spring Washer	3	
109	59318535	Spring Washer	1	
110	59318543	Pan Head Screw	3	
111	59318550	Key	1	
112	59888453	Complete Magneto	1	
113	59318949	Grommet	1	
114	59318956	Screw Assembly	2	
115	59317412	Bolt Assembly	4	
116	59317420	Nut	4	
117	59317438	Flange Nut	2	
CONTINUED				


RX-55
OPERATION AND PARTS MANUAL

*****Always use Ingersoll-Rand Replacement parts!*****

ENGINE ASSEMBLY (59839696) - INTERNAL BREAKDOWN

ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSION / NOTES
118	59542878	Washer	4	
119	59319053	Spring Washer	6	
120	59317446	U-Nut	2	
121	59318675	Cylinder Cover	1	
122	59318717	Clamp	1	

RX-55
PARTS MANUAL

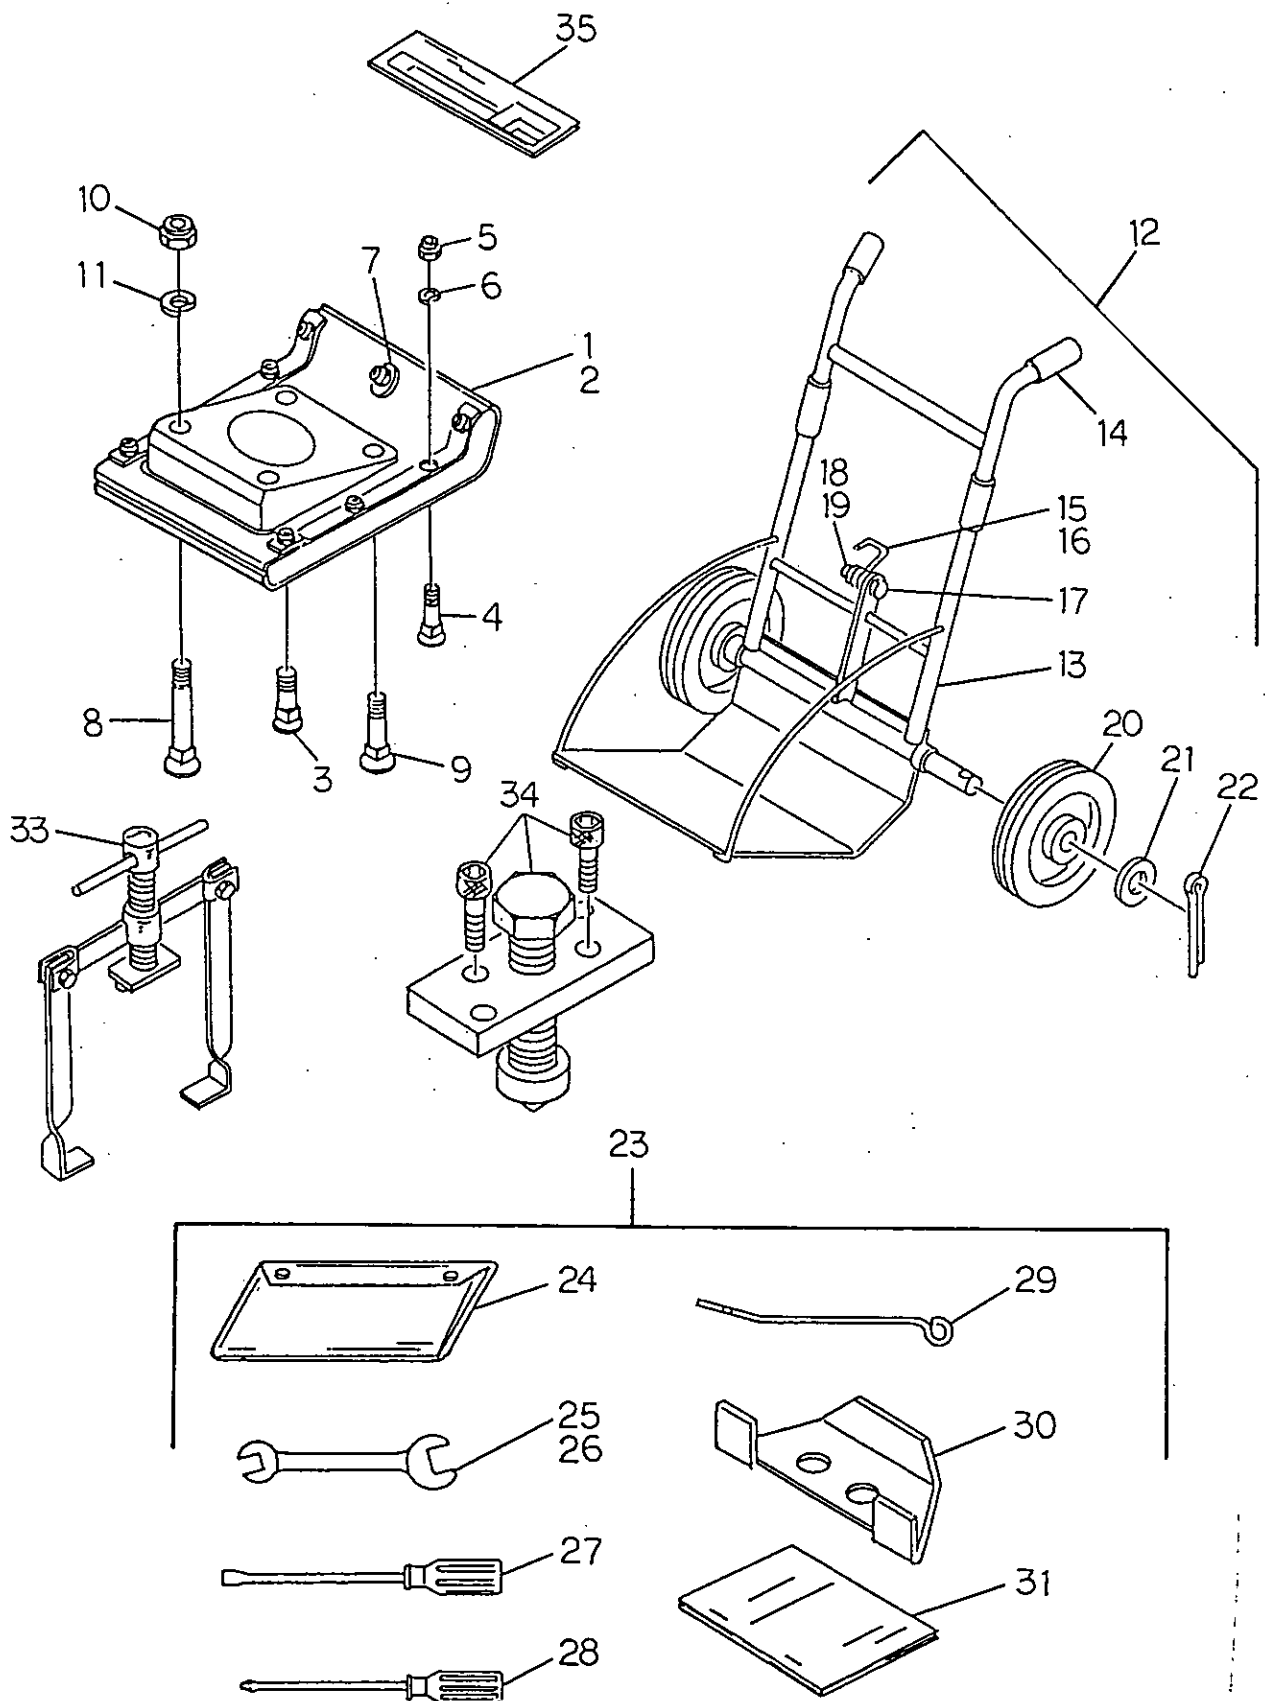

FOOT PLATE ASSEMBLY, TOOLS, AND DECALS

Revision 4

FOOT PLATE ASSEMBLY, TOOLS, AND DECALS

ITEM	COMM. NO.	DESCRIPTION	QTY	DIMENSION / NOTES
		Ref RX55-PRL92-3		
1	59840363	Foot Plate Assembly	1	
2	59840371	Foot Plate Assembly, Option	1	Narrow Type
3	59840389	Flush Bolt	2	M8 x 53
4	59840397	Flush Bolt	2	M8 x 50
5	59831917	Nylon Nut	4	M8
6	59831925	Spring Washer	4	M8
7	59840421	Washer	1	
8	59840439	Flush Bolt	2	M12 x 115
9	59840447	Flush Bolt	2	M12 x 74
10	59840454	Nylon Nut	4	M12
11	59831743	Spring Washer	4	M12
12	59840470	Carrying Cart Assembly, Option	1	
13	59840488	-Carrying Cart Body	1	
14	59840496	-Grip	2	1/2"
15	59840504	-Hook	1	
16	59842963	-Collar	1	
17	59953935	-Hex Bolt (Effective with S/N MR5085)	1	M8 x 30
-	59843169	-Hex Bolt (Prior to MR 5085)	1	M8 x 30
18	59832931	-Hex Nut	1	M8
19	59831057	-Washer	1	Dia. 8.5 x 25 x t3.2
20	59843706	-Wheel	2	8"
21	59839159	-Washer	2	M20
22	59840579	-Cotter Pin	2	Dia. 4 x 45L
23	59840587	Tool Kit for RX-55	1	
24	59839050	-Tool Bag	1	
25	59830018	-Double-Ended Spanner	1	17 x 19
26	59830000	-Double-Ended Spanner	1	10 x 13
27	59838805	-"Minus" Screwdriver	1	Regular Head
28	59840637	-"Plus" Screwdriver	1	Phillips Head
29	59840645	-Oil Gauge	1	
30	59843300	-Parallel Ruler	1	
31	58942152	-Instructions and Parts List	1	Old: 58898586
32	----	----	----	----
33	59843128	Disassembling Tool	1	
34	59843136	Clutch Puller	1	
35	59433367	Decal Set for RX-55 (Effective with S/N 9508)	1	

RX-55
OPERATION AND PARTS MANUAL

*****Always use Ingersoll-Rand Replacement parts!*****

NUMERICAL INDEX

COMM.NO.	PAGE	COMM.NO.	PAGE	COMM.NO.	PAGE	COMM.NO.	PAGE	COMM.NO.	PAGE
58835943	18-5	59318899	18-15	59832287	18-15	59832287	18-11	59843300	18-21
58836578	18-11	59318915	18-15	59832535	18-15	59832535	18-9	59843340	18-9
58836586	18-11	59318923	18-15	59832618	18-15	59832618	18-11	59843706	18-9
58898222	18-9	59318931	18-15	59832931	18-15	59832931	18-21	59853002	18-9
58898230	18-11	59318949	18-17	59835371	18-17	59835371	18-7	59853010	18-9
58898347	18-11	59318956	18-17	59837948	18-15	59837948	18-9	59853028	18-9
59317396	18-13	59318964	18-15	59838169	18-15	59838169	18-5	59853036	18-9
59317404	18-13	59318972	18-15	59838805	18-15	59838805	18-21	59853044	18-9
59317420	18-17	59318998	18-15	59839050	18-15	59839050	18-21	59853069	18-9
59317438	18-17	59319004	18-15	59839159	18-21	59840108	18-9	59853077	18-9
59317446	18-19	59319012	18-15	59839217	18-15	59840116	18-11	59853085	18-15
59317453	18-17	59319020	18-15	59839258	18-15	59840124	18-11	59853093	18-15
59317461	18-17	59319038	18-15	59839266	18-15	59840132	18-9	59853119	18-13
59317479	18-17	59319046	18-17	59839274	18-17	59840140	18-9	59853127	18-13
59317487	18-17	59319053	18-19	59839282	18-19	59840157	18-9	59853135	18-13
59317495	18-17	59319061	18-15	59839290	18-15	59840165	18-11	59853143	18-13
59318501	18-17	593886250	18-11	59839308	18-15	59840173	18-11	59853226	18-9
59318519	18-17	593888545	18-9	59839332	18-15	59840199	18-11	59853234	18-13
59318527	18-17	59426247	18-17	59839340	18-15	59840207	18-11	59853259	18-13
59318535	18-17	59426262	18-11	59839357	18-15	59840215	18-11	59853275	18-13
59318543	18-17	59426270	18-9	59839365	18-15	59840223	18-11	59853309	18-13
59318550	18-17	59433367	18-21	59839373	18-15	59840231	18-11	59853325	18-13
59318568	18-17	59444810	18-9	59839381	18-15	59840249	18-11	59853333	18-13
59318576	18-17	59444828	18-11	59839399	18-15	59840256	18-11	59853341	18-13
59318584	18-17	59444836	18-11	59839407	18-15	59840264	18-11	59853358	18-19
59318600	18-17	5944261	18-17	59839415	18-15	59840306	18-11	59853382	18-13
59318618	18-17	59542589	18-17	59839423	18-15	59840314	18-11	59853416	18-17
59318626	18-17	59542613	18-17	59839456	18-15	59840371	18-21	59853564	18-15
59318634	18-17	59542654	18-17	59839464	18-17	59840389	18-21	59853572	18-17
59318642	18-17	59542852	18-17	59839472	18-17	59840397	18-21	59853689	18-15
59318659	18-17	59542878	18-17	59839514	18-17	59840421	18-21	59853747	18-13
59318667	18-17	59542902	18-19	59839530	18-19	59840439	18-21	59853754	18-17
59318675	18-19	59542944	18-13	59839548	18-17	59840447	18-21	59853762	18-13
59318683	18-13	59542944	18-17	59839571	18-17	59840454	18-21	59853770	18-13
59318691	18-13	59580696	18-15	59839589	18-15	59840470	18-21	59853788	18-13
59318709	18-13	59830000	18-21	59839605	18-15	59840488	18-21	59854216	18-13
59318717	18-19	59830018	18-21	59839639	18-15	59840496	18-21	59854224	18-13
59318725	18-13	59831057	18-21	59839647	18-15	59840504	18-21	59872044	18-11
59318733	18-15	59831123	18-15	59839654	18-15	59840579	18-21	59872143	18-13
59318741	18-15	59831131	18-15	59839662	18-11	59840587	18-21	59888453	18-17
59318758	18-15	59831743	18-21	59839688	18-11	59840637	18-21	59899898	18-21
59318766	18-15	59831792	18-15	59839696	18-11	59840645	18-21	59941245	18-13
59318774	18-15	59831511	18-15	59839720	18-9	59841627	18-5	59941419	18-15
59318782	18-15	59831552	18-15	59839738	18-9	59841676	18-11	59951632	18-5
59318790	18-15	59831560	18-15	59839746	18-9	59841684	18-11	59953935	18-9
59318808	18-15	59831743	18-21	59839762	18-11	59841692	18-11	59953935	18-9
59318816	18-15	59831792	18-15	598397720	18-11	59841718	18-11	59953935	18-21
59318824	18-15	59831826	18-15	59839784	18-11	59841767	18-9	59965285	18-13
59318832	18-15	59831917	18-15	59839798	18-9	59842294	18-5	59986901	18-13
59318840	18-15	59831917	18-15	59839811	18-9	59842963	18-21	59986919	18-13
59318857	18-15	59831917	18-15	59839829	18-21	59843128	18-21	59986927	18-15
59318865	18-15	59831925	18-15	59839837	18-5	59843136	18-21		
59318873	18-15			59839845	18-9	59843169	18-9		

RX-55
Revision 4

18-23, 18-24