

Operation & Maintenance Manual

Compressor Models

XHP700WCAT MHP825WCAT VHP750WCAT SHP750WCAT

CODE:

CODE: B

CODE: D



This manual contains important safety information. Do not destroy this manual. This manual must be available to the personnel who operate and maintain this machine.



P.O. Box 868 - 501 Sanford Ave Mocksville, N.C. 27028

Book 22560825 (2/05) Revised (09-12) Doosan purchased Bobcat Company from Ingersoll-Rand Company in 2007. Any reference to Ingersoll-Rand Company or use of trademarks, service marks, logos, or other proprietary identifying marks belonging to Ingersoll-Rand Company in this manual is historical or nominative in nature, and is not meant to suggest a current affiliation between Ingersoll-Rand Company and Doosan Company or the products of either.



We will supply products and services that consistently meet the requirements of our customers and each other.

CALIFORNIA

Proposition 65 Warning

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

TITLE FOREWORD	PAGE 5
Foreword	6
WARRANTY	9
Warranty	. 11 . 14 . 14
NOISE EMISSION.	17
Noise Emission Control Maintenance Log Noise Emission Warranty Introduction Maintenance Schedule A. Compressed Air Leaks B. Safety and Control Systems C. Acoustic Materials D. Fasteners E. Enclosure Panels F. Air Intake and Engine Exhaust G. Cooling Systems H. Isolation Mounts I. Engine Operation J. Fuels and Lubricants	. 18 . 19 . 19 . 19 . 19 . 19 . 20 . 20 . 20 . 20 . 20 . 20 . 20
SAFETY SYMBOLS	23
Safety Symbols Safety General Information Compressed Air Materials Battery Radiator Engine Starting Fluid (Ether) Transport General Information – MSA (SRG/HRG)	. 28 . 28 . 28 . 29 . 29 . 29 . 29 . 29 31
General Information – MSA (SRG/HRG). Sound Level Data ('W' model) Site Running Gear (SRG) High Speed Running Gear (HSRG)	. 36 . 36

TITLE OPERATING INSTRUCTIONS	PAGE 37
	•••
Operating Instructions	
Prior to Starting	
Operating Controls and Instruments	
Wedge Diagnostic Display Codes.	44
Caterpillar C–9 Engine	
Diagnostic and Event Flash Codes	
Starting the Machine.	
Inlet Heater/Wait to Start Light	
Stopping the Machine	
Re-Starting After an Emergency	
Monitoring During Operation	
Decommissioning	54
Maintenance	56
Maintenance Interval Chart	56
Routine Maintenance	61
Protective Shutdown System	62
Low Engine Fuel Level Switch	62
Scavenge Line	
Compressor Oil Filter	
Removal	
Inspection	64
Reassembly	
Compressor Oil Separator Element	
Removal	64
Inspection	65
Reassembly	
Compressor Oil Cooler and Engine Radiator Air Charge Cooler	
Air Filter Element.	
Removal	
Inspection	67

TITLE		PAGE
	Reassembly	67
	Ventilation	
	Cooling Fan Drive	67
	Fuel System	
	Fuel Filter Water Separator.	
	Charge Cooler Pipework:	
	Hoses	
	Electrical System.	
	Battery	
	Pressure System.	
	Tyres/Tyre Pressure	
	Running Gear/Wheels.	
	Engine Lubricating Oil	
	Engine Lubricating Oil Specification	
	Engine Oil Filter Element	
	Compressor Lubricating Oil.	
	Running Gear Wheel Bearings	
	Speed and Pressure Regulation Adjustment	
	Speed and Pressure Regulation Adjustment	
	Portable Compressor Fluid Chart	78
	HINE SYSTEMS	
Ма	achine Systems	
	Control System Schematic	82
FAUL	T FINDING	89
Fa	ult Finding	90
	Fault Finding	
OPTI	ONS	95
Op	otions	96
	IQ System Operating Instructions – 1	96
	IQ System.	97
	IQ System Operating Instructions – 2	
	Low Ambient Option Operation	98
	Maintenance	
	Filter Replacement	
	Safety	

ITLE	PAGE
PARTS ORDERING	101
Parts Ordering	102
General	. 102
Description	. 102
Fasteners	
Markings and Decals.	. 103
How to Use Parts List	. 104
How to Order	. 104
Airend Exchange Program	. 105

Foreword



Foreword

The contents of this manual are considered to be proprietary and confidential to Ingersoll– Rand and should not be reproduced without the prior written permission of Ingersoll–Rand.

Nothing contained in this document is intended to extend any promise, warranty or representation, expressed or implied, regarding the Ingersoll-Rand products described herein. Any such warranties or other terms and conditions of sale of products shall be in accordance with the standard terms and conditions of sale for such products, which are available upon request.

This manual contains instructions and technical data to cover all routine operation and scheduled maintenance tasks by operation and maintenance staff. Major overhauls are outside the scope of this manual and should be referred to an authorized Ingersoll-Rand service department.

The design specification of this machine has been certified as complying with EC directives. As a result:

(a) Any machine modifications are strictly prohibited, and will invalidate EC certification.

(b) This machine may be used in USA/Canada, when configured with components bearing the appropriate certification. (Where ASME certification is valid).

All components, accessories, pipes and connectors added to the compressed air system should be:

- of good quality, procured from a reputable manufacturer and, wherever possible, be of a type approved by Ingersoll-Rand.
- clearly rated for a pressure at least equal to the machine maximum allowable working pressure.
- compatible with the compressor lubricant/coolant.
- accompanied with instructions for safe installation, operation and maintenance.

Details of approved equipment are available from Ingersoll-Rand Service departments.

The use of repair parts/lubricants/fluids other than those included within the Ingersoll–Rand approved parts list may create hazardous conditions over which Ingersoll–Rand has no control. Therefore Ingersoll–Rand cannot be held responsible for equipment in which non–approved repair parts are installed.

Ingersoll-Rand reserves the right to make changes and improvements to products without notice and without incurring any obligation to make such changes or add such improvements to products sold previously.

The intended uses of this machine are outlined below and examples of unapproved usage are also given, however, Ingersoll-Rand cannot anticipate every application or work situation that may arise.

If in Doubt, Consult Supervision.

This machine has been designed and supplied for use only in the following specified conditions and applications:

- Compression of normal ambient air containing no known or detectable additional gases, vapours or particles.
- Operation within the ambient temperature range specified in the GENERAL INFORMATION section of this manual.

The use of the machine in any of the situation types listed in table 1:-

- a. Is not approved by Ingersoll-Rand,
- b. May impair the safety of users and other persons, and
- c. May prejudice any claims made against Ingersoll-Rand.

TABLE 1 – IMPROPER USES

Use of the machine to produce compressed air for:

a) direct human consumption

b) indirect human consumption, without suitable filtration and purity checks.

Use of the machine outside the ambient temperature range specified in the *GENERAL INFORMATION SECTION* of this manual.

Use of this machine in potentially explosive atmospheres, including situations where flammable gases or vapours may be present.

Use of the machine fitted with non Ingersoll–Rand approved components/ lubricants/fluids.

Use of the machine with safety or control components missing or disabled.

Use of this machine in any underground application.

The company accepts no responsibility for errors in translation of this manual from the original English version.

Always use Ingersoll-Rand Replacement parts!



Warranty



Warranty

Ingersoll–Rand Portable Compressor Warranty

Ingersoll-Rand, through its distributors, warrants to the initial user that each portable air compressor manufactured by it, will be free of defects in material and workmanship for a period of the earlier of twelve (12) months from shipment to or the accumulation of 2,000 hours of service by the initial user.

Portable compressor airends will be free of defects in material and workmanship for a period of the earlier of twenty four months from shipment to or the accumulation of 4,000 hours of service by the initial user. The warranty against defects will include replacement of the complete airend, provided the original airend is returned assembled and unopened.

Portable Compressor Airend Limited Optional Warranty - The earlier of sixty (60) months from shipment to or the accumulation of 10,000 hours of service. The optional warranty is limited to defects in rotors, housings, bearings and gears and provided all the following conditions are met:

- 1. The original air end is returned assembled and unopened.
- 2. Continued use of genuine Ingersoll-Rand parts, fluids, oil and filters.
- 3. Maintenance is performed at prescribed intervals.

Oil-Free airends are fee-based and may require a maintenance agreement. Formal enrollment is required.

Ingersoll-Rand will provide a new part or repaired part, at its election, in place of any part, which is found upon its inspection to be defective in material and workmanship during the period prescribed above. Such part will be repaired or replaced without charge to the initial user during normal working hours at the place of business of an Ingersoll-Rand distributor authorized to sell the type of equipment involved or other establishment authorized by Ingersoll-Rand. User must present proof of purchase at the time of exercising warranty.

The above warranty does not apply to failures occurring as a result of abuse, misuse, negligent repairs, corrosion, erosion and normal wear and tear, alterations or modifications made to the product without express written consent of Ingersoll-Rand; or failure to follow the recommended operating practices and maintenance procedures as provided in the product's operating and maintenance publications.

Accessories or equipment furnished by Ingersoll-Rand, but manufactured by others, including, but not limited to, engines, shall carry whatever warranty the manufacturers have conveyed to Ingersoll-Rand and which can be passed on to the initial user.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED, (EXCEPT THAT OF TITLE), AND THERE ARE NO WARRANTIES OF MERCHANTABILITY OR OF FITNESS FOR A PARTICULAR PURPOSE.

		-	COMMENTS
PORTABLE COMPRESSOR	PACKAGE	12 MONTHS/2000 HOURS	COVERS CONTROLS, SWITCHES, SHEET METAL RADIATOR, OIL COOLER, RECEIVER, PIPEWORK,
	AIREND	24 MONTHS/4,000 HOURS	ELECTRICAL CIRCUIT ETC 60 MONTHS/10,000 HOURS EXTENDED LIMITED WARRANTY AVAILABLE ON MAJOR COMPONENTS. REFER TO OPERATOR'S MANUAL.
	ENGINE	SEE BELOW	
2.5kVA–8kVA GENERATORS	PACKAGE	12 MONTHS/2,000 HOURS	CONTACT IR NETWORK FOR WARRANTY (PARTS ONLY NO LABOUR).
	ALTERNATOR	12 MONTHS/2,000 HOURS	CONTACT IR NETWORK FOR WARRANTY (PARTS ONLY NO LABOUR).
	ENGINE	SEE BELOW	
LIGHT TOWER	PACKAGE	12 MONTHS/2,000 HOURS	COVERS CONTROLS, SWITCHES, SHEET METAL ELECTRICAL CIRCUIT ETC
	ALTERNATOR	12 MONTHS/2,000 HOURS	EXTENDED WARRANTY OI 24 MONTHS/4,000 HRS. FOR LIGHTSOURCE INTRODUCED 8/16/99.
	ENGINE	SEE BELOW	

	ENGINE	S	
	MONTHS	HOURS	COMMENTS
CATERPILLAR	12	UNLIMITED	EXTENDED WARRANTY PROVIDED VIA ENGINE SUPPLIER'S OWN APPROVED NETWORK AT TIME OF PURCHASE.
CUMMINS	24	2,000	EXTENDED WARRANTY PROVIDED VIA ENGINE SUPPLIER'S OWN APPROVED NETWORK AT TIME OF PURCHASE.
PERKINS	12	UNLIMITED	IF UNDER 500 HOURS IN FIRST YEAR THEN BELOW APPLIES.
	24	1,000	ALL COMPONENTS COVERED EXCLUDING INJECTORS.
JOHN DEERE (IN COMPRESSORS)	24	2,000	5 YRS/5000 HRS USING OEM FLUIDS AND FILTERS WITH \$250 DEDUCTABLE
(IN GENERATORS)	24	2,000	24 MONTHS/4,000 HRS. AVAILABLE FROM IR WITH USE OF GENUINE IR PARTS AND OILS AT PRESCRIBED SERVICE INTERVALS. CONTACT IR NETWORK.
DEUTZ	0 – 12	UNLIMITED	ALL COMPONENTS COVERED.
	13 – 24	UNLIMITED	MAJOR COMPONENTS COVERED. FURTHER EXTENDED WARRANTY ON MAJOR COMPONENTS PROVIDED VIA ENGINE SUPPLIER'S OWN APPROVED NETWORK AT TIME OF PURCHASE.
INGERSOLL-RAND	24	4,000	EXTENDED WARRANTY OF 60 MONTHS/10,000 HRS. WHEN USING GENUINE INGERSOLL-RAND FLUIDS AND PARTS ON MAJOR COMPONENTS.
KUBOTA (North America only)	24	2,000	EXTENDED WARRANTY OF 36 MONTHS/3,000 HRS. ON MAJOR COMPONENTS, PARTS ONLY, AVAILABLE FROM KUBOTA.

(Western Europe & Oceania)	24	2,000	NO EXTENDED WARRANTY AVAILABLE.
(Central & South America, Asia, Middle East & Africa)	12	1,000	NO EXTENDED WARRANTY AVAILABLE.
MITSUBISHI	24	2,000	2 YRS/4,000 HRS USING IR FLUIDS AND FILTERS
VOLVO	24	2,000	2 YRS/4,000 HRS USING IR FLUIDS AND FILTERS

PARTS				
MONTHS HOURS COMMENTS				
INGERSOLL-RAND	6		PARTS ONLY AVAILABLE FROM IR NETWORK.	

AIREND EXCHANGE					
MONTHS HOURS COMMENTS					
AIREND	60	10,000	24 MONTHS/4,000 HRS. AVAILABLE FROM IR NETWORK.		

CONSTRUCTION TOOLS					
MONTHS HOURS COMMENTS					
CONSTRUCTION TOOLS	12	N/A	OPTIONAL 36 MONTHS EXTENDED WARRANTY AVAILABLE FROM IR. ALL WARRANTY COVERS PARTS ONLY REPLACEMENT.		

NOTE: Actual warranty times may change. Consult the Manufacturer's warranty policy as shipped with each new product.

Warranty Registration

For Units Sourced From Mocksville, USA

Complete Machine Registration

<u>Machines shipped to locations within the United States</u> do not require a warranty registration unless the machine status changes (i.e. change of ownership).

<u>Machines shipped outside the United States</u> require notification be made to initiate the machine warranty.

Fill out the Warranty Registration Form in this section, keep a copy for your records and mail form to:

Ingersoll-Rand Company Portable Compressor Division P.O. Box 868 Mocksville, North Carolina 27028 Attn: Warranty Department

NOTE: Completion of this form validates the warranty.

Engine Registration:

I–R powered machines do not require separate engine registration.

John Deere requires a separate engine registration be completed and mailed direct to John Deere.

Separate engine registration material is included with this literature package for John Deere powered machines.

All other engine manufacturers do not require a separate engine registration.

You MUST present proof of in-service date at time of requesting engine warranty service.

Warranty

Selling Distribut	tor <u>Servicing</u>	<u>Distributor</u>	WARR	ANTY REGISTRATION
Name	Name		Owner/	User Name
Address	Address		Address	8
City	City		City	
County	County		County	
State	State		State _	
Zip code	Zip code		Zip cod	e
Telephone	Telephone		Telepho	ne
C	Complete the A wner/User Type of Bu			v)
 Construction-Heavy (highway, excavation, et 	Asphalt Contractor	•	-	Other Mining
 Construction-Light (carpentry, plumbing, pools, mason, etc.) 	 Government (municipal, state, co 		rry 🗆	Shallow Oil & Gas
Rental (rental center, rental fleet, etc.)	□ Building Contractor	Wate	er well	Utility Company (gas, electric, water, et
 Industrial (plant use) 	 Other specify 	□ Expl	oration	Utility Contractor
<i>l</i> lodel	Unit S/N	Engine S/N		Date delivered
Jnit-Hours	Airend S/N	Truck S/N		Truck Engine S/N
preventative main	as been instructed and/or tenance, general operation a	and safety precaution	ons.	
	limitation of liability has bee			
Ingersoll-Rand of	this unit is to be used with such use so that Ingersoll-R e owner-licensee of the facil	Rand may arrange for		
	serves the right to make de ne without incurring any obli units.			

fold	
Ingersoll- Rand Company Portable Compressor Division	
P.O. Box 868 Mocksville, North Carolina 27028	
Attention: Warranty Department	

Noise Emission



Noise Emission Con	trol Maintenance Log
COMPRESSOR MODEL	
UNIT IDENTIFICATION Engine Make & Model:	DEALER OR DISTRIBUTOR FROM WHOM PURCHASED:
Serial No.:	
Purchaser or Owner:	
Address:	Date Purchased:

The Noise Control Act of 1972 (86 Stat. 1234) prohibits tampering with the noise control system of any compressor manufactured and sold under the above regulations, specifically the following acts or the causing thereof:

(1) The removal or rendering inoperative by any persons, other than for purposes of maintenance, repair, or replacement, of any device or element of design incorporated into new compressor for the purpose of noise control prior to its sale or delivery to the ultimate purchaser or while it is in use; or (2) the use of the compressor after such a device or element of design has been removed or rendered inoperative by any person.

Noise Emission Warranty

The manufacturer warrants to the ultimate purchaser and each subsequent purchaser that this air compressor was designed, built and equipped to conform at the time of sale to the first retail purchaser, with all applicable U.S. EPA Noise Control Regulations.

This warranty is not limited to any particular part, component, or system of the air compressor. Defects in the design, assembly or in any part, component, or system of the compressor which, at the time of sale to the first retail purchaser, caused noise emissions to exceed Federal Standards are covered by this warranty for the life of the air compressor.(40FR204.58–1).

Introduction

The unit for which this Maintenance Log is provided conforms to U.S. E.P.A. Regulations for Noise Emissions, applicable to Portable Air Compressors.

The purpose of this book is to provide (1) the Maintenance Performance Schedule for all required noise emission controls and (2) space so that the purchaser or owner can record what maintenance was done, by whom, where and when. The Maintenance Schedule and detailed instructions on the maintenance items are given on following page.

Maintenance Schedule

ITEM	AREA	PERIOD	
Α.	Compressed Air Leaks	As Detected	
В.	Safety and Control Systems	As Detected	
C.	Acoustic Materials	Daily	
D.	Fasteners	100 hours	
E.	Enclosure Panels	100 hours	
F.	Air Intake & Engine Exhaust	100 hours	
G.	Cooling Systems	250 hours	
H.	Isolation Mounts	250 hours	
I.	Engine Operation	See Operator's Manual	
J.	Fuels & Lubricants	See Operator's Manual	

A. Compressed Air Leaks

Correct all compressed air leaks during the first shutdown period after discovery. If severe enough to cause serious noise problems and efficiency loss, shut down immediately and correct the leak(s).

B. Safety and Control Systems

Repair or replace all safety and control systems or circuits as malfunction occurs. No compressor should be operated with **either** system bypassed, disabled, or nonfunctional.

C. Acoustic Materials

In daily inspections, observe these materials. Maintain all acoustic material as nearly as possible in its original condition. Repair or replace all sections that have: 1) sustained damage, 2) have partially separated from panels to which they were attached, 3) are missing, or have otherwise deteriorated due to severe operating or storage conditions.

D. Fasteners

All fasteners such as hinges, nuts, bolts, clamps, screws, rivets, and latches should be inspected for looseness after each 100 hours of operation. They should be retightened, repaired, or if missing, replaced immediately to prevent subsequent damage and noise emission increase.

E. Enclosure Panels

Enclosure panels should also be inspected at 100 hour operational intervals. All panels that are warped, punctured, torn, or otherwise deformed, such that their noise containment function is reduced, should be repaired or replaced before the next operation interval. Doors, access panels, and hatch closures especially, should be checked and adjusted at this time to insure continuous sealing between gasket or acoustic material and the mating frame.

F. Air Intake and Engine Exhaust

Engine and compressor air intake and engine exhaust systems should be inspected after each 100 hours of operation for loose, damaged, or deteriorated components. Repairs or replacements should be made before the next period of use.

G. Cooling Systems

All components of the cooling system for engine water and compressor oil should be inspected every 250 hours of use. Any discrepancies found should be corrected before placing the unit back in operation. Unrestricted airflow over the radiator and oil cooler must be maintained at all times during operation.

H. Isolation Mounts

Engine/airend isolation mounts should be inspected after each 250 hours of operation. Those mounts with cracks or splits in the molded rubber, or with bent or broken bolts due to operation or storage in severe environments, all should be replaced with equivalent parts.

I. Engine Operation

Inspect and maintain engine condition and operation as recommended in the manuals supplied by the engine manufacturer.

J. Fuels and Lubricants

Use only the types and grades of fuels and lubricants recommended in the Ingersoll-Rand Company and Engine Manufacturer's Operator and Maintenance Manuals.

ITEM NO.	DESCRIPTION OF WORK OR COMMENTS	HOURMETER READING	MAINT/ INSPECT DATE	LOCATION CITY/STATE	WORK DONI BY (NAME)
					(
		_			
					1

Always use Ingersoll-Rand Replacement parts!



Safety Symbols





Safety Symbols


Look for these signs on machines manufactured in North America, which point out potential hazards to the safety of you and others. Read and understand thoroughly. Heed warnings and follow instructions. If you do not understand, inform your supervisor.





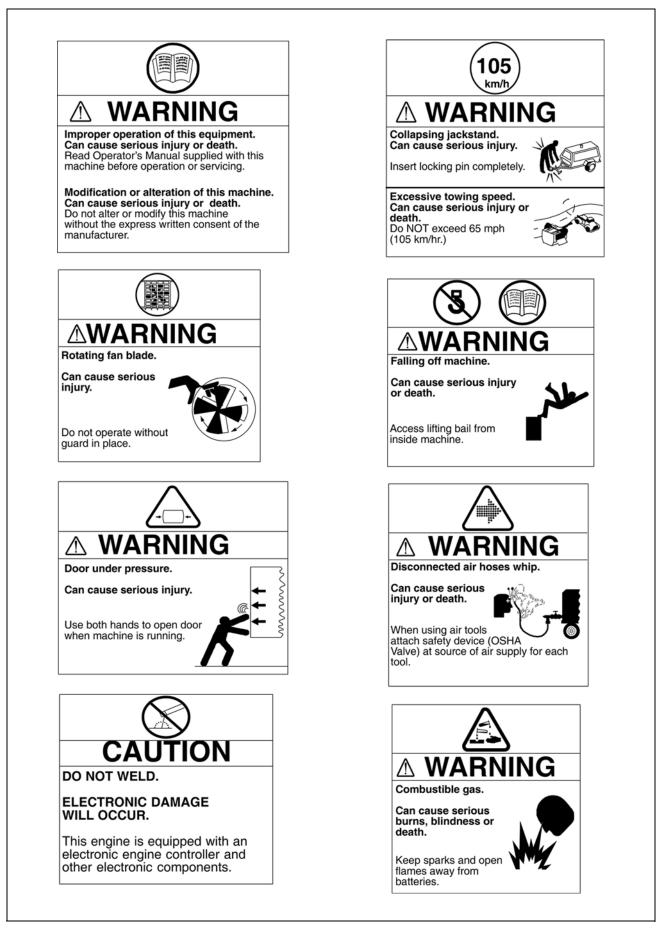

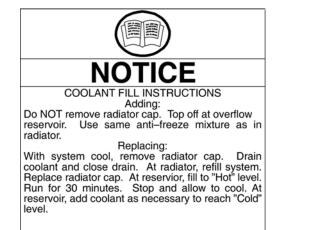

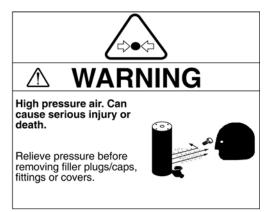



FREE SAFETY DECALS!

To promote communication of Safety Warnings on products manufactured by the Portable Compressor Division in Mocksville, N.C., Safety Decals are available <u>free</u> of charge. Safety decals are identified by the decal heading: **DANGER, WARNING or CAUTION.**

Decal part numbers are on the bottom of each decal and are also listed in the compressor's parts manual. Submit orders for Safety Decals to the Mocksville Parts Service Department. The no charge order should contain only Safety Decals. Help promote product safety! Assure that decals are present on the machines. Replace decals that are not readable.

Safety

General Information

Ensure that the operator reads and *understands* the decals and consults the manuals before maintenance or operation.

Ensure that the Operation and Maintenance manual, and the manual holder, are not removed permanently from the machine.

Ensure that maintenance personnel are adequately trained, competent and have read the Maintenance manuals.

Make sure that all protective covers are in place and that the canopy/doors are closed during operation.

The specification of this machine is such that the machine is not suitable for use in flammable gas risk areas. If such an application is required then all local regulations, codes of practice and site rules must be observed. To ensure that the machine can operate in a safe and reliable manner, additional equipment such as gas detection, exhaust spark arrestors, and intake *(shut-off)* valves may be required, dependent on local regulations or the degree of risk involved.

A weekly visual check must be made on all fasteners/fixing screws securing mechanical parts. In particular, safety–related parts such as coupling hitch, drawbar components, road–wheels, and lifting bail should be checked for total security.

All components which are loose, damaged or unserviceable, must be rectified without delay.

Compressed Air

Compressed air can be dangerous if incorrectly handled. Before doing any work on the unit, ensure that all pressure is vented from the system and that the machine cannot be started accidentally. Ensure that the machine is operating at the rated pressure and that the rated pressure is known to all relevant personnel.

All air pressure equipment installed in or connected to the machine must have safe working pressure ratings of at least the machine rated pressure.

If more than one compressor is connected to one common downstream plant, effective check valves and isolation valves must be fitted and controlled by work procedures, so that one machine cannot accidentally be pressurized or over pressurized by another.

Compressed air must not be used for a feed to any form of breathing apparatus or mask.

The discharged air contains a very small percentage of compressor lubricating oil and care should be taken to ensure that downstream equipment is compatible.

If the discharged air is to be ultimately released into a confined space, adequate ventilation must be provided.

When using compressed air, always use appropriate personal protective equipment.

All pressure containing parts, especially flexible hoses and their couplings, must be regularly inspected, be free from defects and be replaced according to the Manual instructions.

Avoid bodily contact with compressed air.

The safety valve located in the separator tank must be checked periodically for correct operation.

Materials

The following substances *may* be produced during the operation of this machine:

- brake lining dust
- engine exhaust fumes

Avoid Inhalation

Ensure that adequate ventilation of the cooling system and exhaust gases is maintained at all times.

The following substances are used in the manufacture of this machine and *may* be hazardous to health if used incorrectly:

- anti-freeze
- compressor lubricant
- engine lubricant
- preservative grease
- rust preventative
- diesel fuel
- battery electrolyte

Avoid Ingestion, Skin Contact and Inhalation of Fumes

Should compressor lubricant come into contact with the eyes, then irrigate with water for at least 5 minutes.

Should compressor lubricant come into contact with the skin, then wash off immediately.

Consult a physician if large amounts of compressor lubricant are ingested.

Consult a physician if compressor lubricant is inhaled.

Never give fluids or induce vomiting if the patient is unconscious or having convulsions.

Safety data sheets for compressor and engine lubricants should be obtained from the lubricant supplier.

Battery

Batteries contain corrosive liquid and produce explosive gas. Do not expose to naked lights. Always wear personal protective clothing when handling. When starting the machine from a slave battery ensure that the correct polarity is observed and that connections are secure.

DO NOT ATTEMPT TO SLAVE START A FROZEN BATTERY SINCE THIS MAY CAUSE IT TO EXPLODE.

Radiator

Hot engine coolant and steam can cause injury. Ensure that the radiator filler cap is removed with due care and attention.

Engine Starting Fluid (Ether)

Do not use ETHER.

Engines are fitted with inlet air heaters.

Avoid Ingestion, Inhalation, Hot Surfaces and Naked Lights

Transport

When loading or transporting machines ensure that the specified lifting and tie down points are used.

When loading or transporting machines ensure that the towing vehicle, its size, weight, towing hitch and electrical supply are all suitable to provide safe and stable towing at speeds either, up to the legal maximum for the country in which it is being towed or, as specified for the machine model if lower than the legal maximum.

Before towing the machine, ensure that:-

- the tyres and towing hitch are in a serviceable condition.
- the canopy is secure.
- all ancillary equipment is stored in a safe and secure manner.


When parking always use the handbrake and, if necessary, suitable wheel chocks.


Always use Ingersoll-Rand Replacement parts!



General Information - MSA (SRG/ HRG)



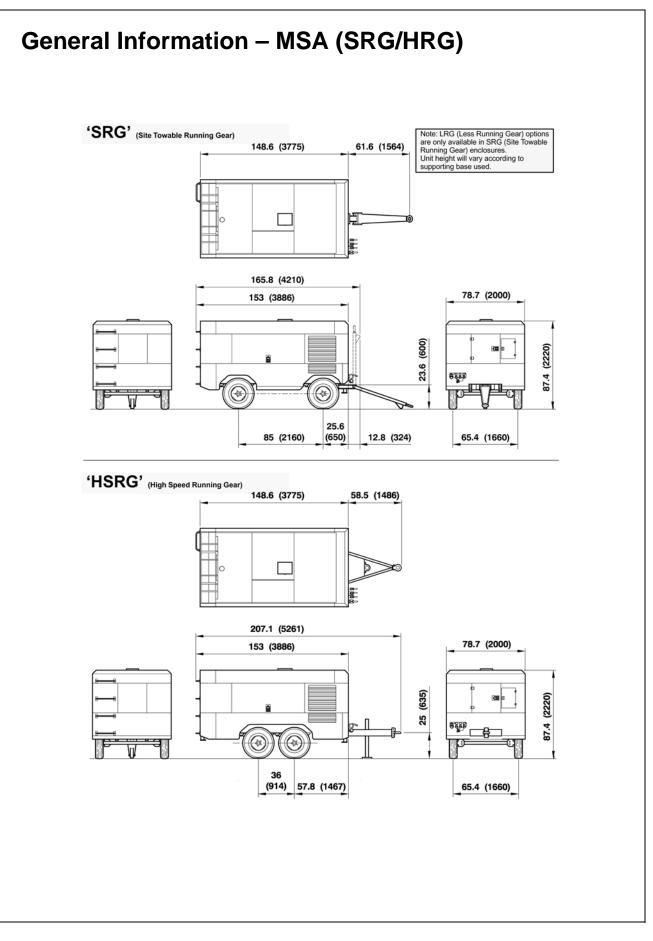

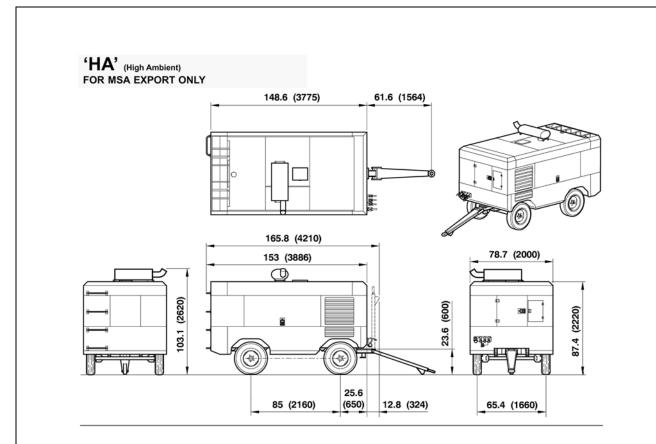

Operation & Maintenance Manual

MODEL		MHP825	SHP750	XHP700	VHP750	
COMPRESSOR	1	11			1	
Actual free air delivery.	cfm (m3/min)	825 (23,3)	750 (21,5)	700 (20,1)	750 (21,5)	
Normal operating discharge pressure.	psi (bar)	175 (12)	250 (17)	300 (21)	200 (14)	
Safety valve setting.	psi (bar)	217 (15)	362 (25)	362 (25)	250 (17)	
Whisperized (W) operating ambient temperature range.	°F (°C)	14/115 (-10/+46)	14/115 (-10/+46)	14/115 (-10/+46)	14/115 (-10/+46)	
High Ambient (HA) operating ambient temperature range.	°F (°C)	14/122 (-10/+50)	14/122 (-10/+50)	14/122 (-10/+50)	14/122 (-10/+50)	
Maximum discharge temperature.	°F (°C)	248 (120)	248 (120)	248 (120)	248 (120)	
COMPRESSOR	1	<u> </u>				
Cooling system.	Oil Injection					
Oil capacity.	Gallons/ Litres	18.5 (70)	19.8 (75)	19.8 (75)	18.5 (70)	
Maximum oil system temperature.	°F (°C)	248 (120)	248 (120)	248 (120)	248 (120)	
Maximum oil system pressure.	psi (bar)	217 (15)	362 (25)	362 (25)	250 (17)	
LUBRICATING OIL SPECIFICATION (for the specified ambient temperatures).	SEE NOTE -1	Protec	Protec	Protec	Protec	
ENGINE			· · ·		·	
MODEL		MHP825	SHP750	XHP700	VHP750	
Whisperized (W) Engine Type Displacement.	/litre	CAT C–9 (9)	CAT C–9 (9)	CAT C–9 (9)	CAT C–9 (9)	
Type/Displacement (HA).	/litre	NA	NA	NA	NA	
Number of cylinders.		6	6	6	6	
Oil capacity.	gal (litre)	6.3 (24)	6.3 (24)	6.3 (24)	6.3 (24)	
Speed at full load.	RPM	1800	1800	1800	1800	
Speed at idle.	RPM	1200	1350	1350	1200	
Electrical system.	V DC	24	24	24	24	

General Information - MSA (SRG/HRG)

MODEL		MHP825	SHP750	XHP700	VHP750
Power available at rated speed.	hp	275	275	275	275
	(KW)	(205)	(205)	(205)	(205)
Fuel tank capacity.	gal	145	145	145	145
	(litre)	(550)	(550)	(550)	(550)
Coolant capacity.	gal	12.7	12.7	12.7	12.7
	(litre)	(48)	(48)	(48)	(48)
Max. gross weight.	lb	10,560	10,560	10,560	10,560
Shipping weight.	lb	9460	9460	9460	9460

NOTE: – 1

Refer to Compressor Lubrication Chart.

NA = not available

Sound Level Data ('W' model)

A. To Pneurop code PN8NTC2.

Equivalent continuous sound pressure level.*

. Rated load 83 dB(A) Estimated

(Operator position : 1m from machine)

B. In compliance with 86/188/EEC.

Average sound pressure level at 10m

to 79/113/EEC.* 72dB(A)

(*Machine only :- at maximum load in open site conditions)

C. US EPA 76dB(A)

Site Running Gear (SRG)

Number of wheels.	4
Tire size.	750x16 LT/E
Tire pressure.	90 psi (6.2 bar)
Maximum towing speed	20mph (35kph)

High Speed Running Gear (HSRG)

Number of wheels:	4
Tire size	8–14.5 LT/G
Tire pressure	110 psi (7.6 bar)
Maximum Towing Speed	65 mph (105kph)

Further information may be obtained by request through Ingersoll–Rand customer services department.

Operating Instructions



Operating Instructions

Commissioning

Upon receipt of the unit, and prior to putting it into service, it is important to adhere strictly to the instructions given below in *PRIOR TO STARTING*.

Ensure that the operator reads and *understands* the decals and consults the manuals before maintenance or operation.

Ensure that the position of the *emergency stop* device is known and recognised by its markings. Ensure that it is functioning correctly and that the method of operation is known.

Before towing the unit, ensure that the tyre pressures are correct (refer to the *GENERAL INFORMATION* section of this manual) and that the handbrake is functioning correctly (refer to the *MAINTENANCE* section of this manual). Before towing the unit ensure that the lights are functioning correctly (where fitted).

Ensure that all transport and packing materials are discarded.

Ensure that the correct fork lift truck slots or marked lifting/tie down points are used whenever the machine is lifted or transported.

When selecting the working position of the machine ensure that there is sufficient clearance for ventilation and exhaust requirements, observing any specified minimum dimensions (to walls, floors etc.).

Adequate clearance needs to be allowed around and above the machine to permit safe access for specified maintenance tasks.

Ensure that the machine is positioned securely and on a stable foundation. Any risk of movement should be removed by suitable means, especially to avoid strain on any rigid discharge piping.

Attach the battery cables to the battery(s) ensuring that they are tightened securely. Attach the negative cable before attaching the positive cable.



All air pressure equipment installed in or connected to the machine must have safe working pressure ratings of at least the machine rated pressure, and materials compatible with the compressor lubricant (refer to the *GENERAL INFORMATION* section).



If more than one compressor is connected to one common downstream plant, effective check valves and isolation valves must be fitted and controlled by work procedures, so that one machine cannot accidently be pressurised/over pressurised by another.



If flexible discharge hoses are used, it is recommended that safety retaining wires are used on the hoses.

Prior to Starting

1. Place the unit in a position that is as level as possible. The design of the unit permits a 15 degree lengthways and sideways limit on out of level operation.

When the unit has to be operated out of level, it is important to keep the engine oil level near the high level mark (with the unit level).



Do not overfill either the engine or the compressor with oil.

- 2. Check the engine lubrication oil in accordance with the operating instructions in the *Engine Operator's Manual*.
- 3. Check the compressor oil level in the sight glass located on the separator tank. Liquid level should be in the green zone.
- 4. Check the diesel fuel level. A good rule is to top up at the end of each working day. This prevents condensation from occurring in the tank.



Use only a No. 2–D diesel fuel oil with a minimum octane number of 45 and a sulphur content not greater than 0.5%.



When refuelling:-


- switch off the engine.
- do not smoke.
- extinguish all naked lights.
- do not allow the fuel to come into contact with hot surfaces.
- wear personal protective equipment.
- 5. Drain fuel filter water separator of water ensuring that any released fuel is safely contained.
- 6. Check the radiator coolant level (with the unit level).
- 7. Open the service valve(s) to ensure that all pressure is relieved from the system. Close the service valve(s).




8. Do not operate the machine with the canopy/doors in the open position as this may cause overheating and operators to be exposed to high noise levels.

- 9. Check the emergency stop. Rotate knob as indicated to release.
- 10. Close the manual relief valve inside the service door near the emergency stop.

When starting or operating the machine in temperatures below or approaching 0°C (32°F), ensure that the operation of the regulation system, the unloader valve, the safety valve, and the engine are not impaired by ice or snow, and that all inlet and outlet pipes and ducts are clear of ice and snow.

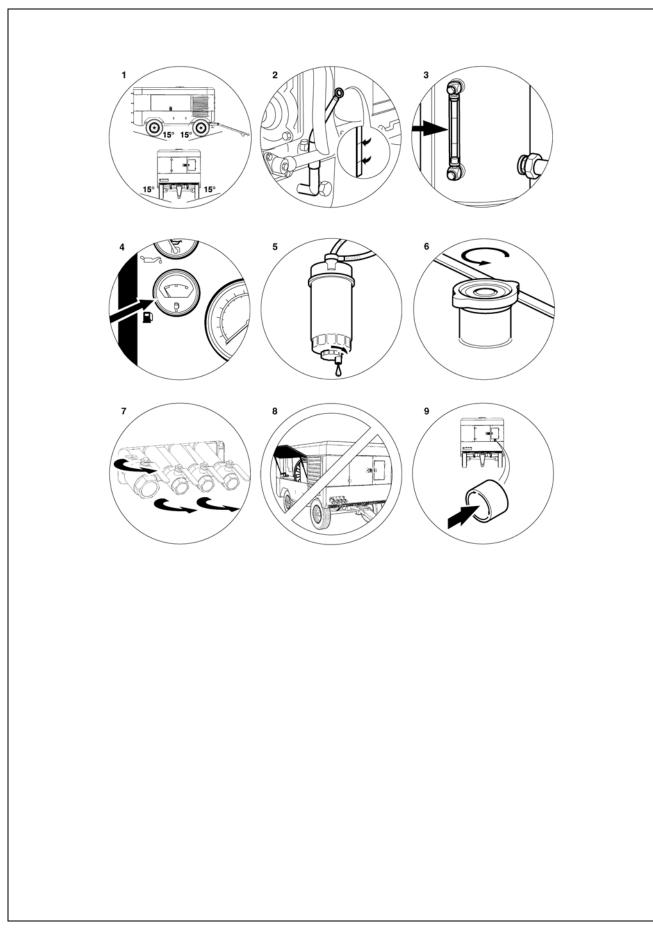

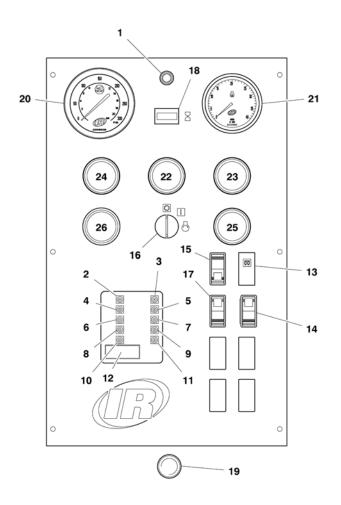


Operating Controls and Instruments

The operating controls and instruments are arranged on the control panel as shown above. A description of each panel device is as follows:


- 1. **Panel Light:** Illuminates the instrument control panel controlled by Switch 14.
- 2. **High Compressor Temp:** Fault indicator lamp. Indicates shutdown due to high compressor temperature.
- 3. Low Radiator Coolant Level: Alarm indicator lamp. Indicates engine coolant needs service.
- 4. Low Engine Oil Pressure: Fault indicator lamp. Indicates shutdown due to low engine oil pressure.
- 5. **Restricted Air Filter:** Alarm indicator lamp. Indicates engine/compressor air inlet filters need service.
- 6. **High Engine Coolant Temp:** Fault indicator lamp. Indicates shutdown due to high engine water temperature.

- 7. **Restricted IQ Air Filters:** Fault indicator lamp. Indicates shutdown due to high pressure in "IQ" air filters (if equipped).
- 8. Low Fuel Level: Fault indicator lamp. Indicates shutdown due to low fuel level. Lamp blinks at low fuel warning.
- 9. **Compressor Malfunction:** Fault indicator lamp. Indicates shutdown due to compressor system fault. Refer to Fault Code List.
- 10. Low Battery Voltage: Alarm indicator lamp. Indicates battery or charging system requires service.
- 11. **Engine Malfunction:** Engine Fault code. Refer to service card or engine manual for codes and service requirements.
- 12. **Malfunction Code (4 Digit):** Compressor or engine fault. Refer to manual for list of codes and service requirements.
- 13. Inlet Heater/Wait to Start Lamp: Indicates engine manifold pre heater is energized. Wait until lamp extinguishes before engaging starter.
- 14. Panel Light Switch: Controls panel lamp # 1.
- 15. **Service Air Switch:** Momentary contact switch. Allows engine to warm up at low compressor pressure.
- 16. ON/OFF Start Switch: Main Power Control Switch.
- 17. **Heater Switch:** ON/OFF Power Switch for regulation and IQ heaters. Prevents freeze up in cold weather.
- 18. Hourmeter: Indicates machine operating hours.
- 19. **E–STOP:** Emergency Stop Push Button (ESA units only). Push to stop, turn to release.
- 20. **Discharge Air Pressure Gage:** Indicates pressure in receiver tank, normally from 0 psi(kPa) to the rated pressure of the machine.
- 21. **Engine Tachometer:** Indicates engine speed in RPM from 0 when stopped to full speed.
- 22. Fuel Level Gage: Indicate fuel level in tank.
- 23. Engine Water Temp Gage
- 24. Compressor Oil Temp Gage
- 25. Engine Oil Pressure Gage
- 26. Battery Voltage Gage

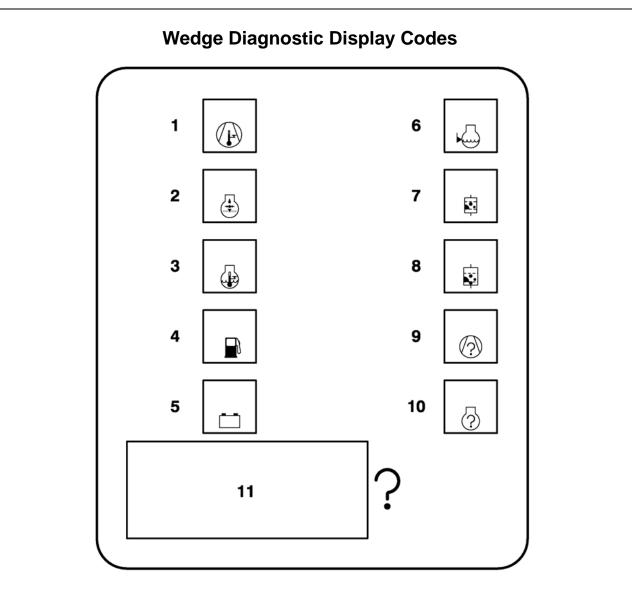

- 1. **High Compressor Temp:** Fault indicator lamp. Indicates shutdown due to high compressor temperature.
- 2. Low Engine Oil Pressure: Fault indicator lamp. Indicates shutdown due to low engine oil pressure.
- 3. **High Engine Coolant Temp:** Fault indicator lamp. Indicates shutdown due to high engine water temperature.
- 4. Low Fuel Level: Fault indicator lamp. Indicates shutdown due to low fuel level. Lamp blinks at low fuel warning.
- 5. Low Battery Voltage: Alarm indicator lamp. Indicates battery or charging system requires service.
- 6. Low Radiator Coolant Level: Alarm indicator lamp. Indicates engine coolant needs service.

- 7. **Restricted Air Filter:** Alarm indicator lamp. Indicates engine/compressor air inlet filters need service.
- 8. **Restricted IQ Air Filters:** Fault indicator lamp. Indicates shutdown due to high pressure in "IQ" air filters (if equipped).
- 9. **Compressor Malfunction:** Fault indicator lamp. Indicates shutdown due to compressor system fault. Refer to Fault Code List.
- 10. **Engine Malfunction:** Engine Fault code. Refer to service card or engine manual for codes and service requirements.
- 11. **Malfunction Code (4 Digit):** Compressor or engine fault. Refer to manual for list of codes and service requirements.

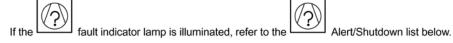



fault indicator lamp is illuminated, refer to the

Engine diagnostic list below.



ALERT/SHUTDOWN CONDITIONS

		ALERT	SH		
	CODE	LIGHT BLINKS	CODE	LIGHT STEADY	DELAY (sec)
Engine Speed <min. rpm<="" td=""><td></td><td></td><td>1</td><td>CPRSR Malfunction.</td><td>30</td></min.>			1	CPRSR Malfunction.	30
Engine Speed >Max. RPM			2	CPRSR Malfunction.	30
Engine Crank Time Exceeded			3	CPRSR Malfunction.	0
*Engine Oil Temperature > 252 deg. F	5	CPRSR Malfunction.			
*Intake Manifold Temperature >180 deg. F	6	CPRSR Malfunction.			
*Water In Fuel - CUMMINS	8	CPRSR Malfunction.			
Engine Not Responding To Throttle command	10	CPRSR Malfunction.			

		ALERT	SH	UTDOWN	
	CODE	LIGHT BLINKS	CODE	LIGHT STEADY	DELAY (sec)
Too Many Crank Attempts During Autostart			11	CPRSR Malfunction.	0
Engine Shut Itself Down: reason unknown			29	CPRSR Malfunction.	0
Low AE Oil Pressure			31	CPRSR Malfunction.	20
Disch. Temp (RT2) Sensor Fault			32	CPRSR Malfunction.	10
Sep. Tank Pressure (PT1) Sensor Fault	33	CPRSR Malfunction.			
Separator Tank Pressure >20 PSI During Start Attempt (Engine Will Not Crank)			34	CPRSR Malfunction.	0
Machine Over Pressure			35	CPRSR Malfunction.	1
Safety Valve Open			36	CPRSR Malfunction.	2
*CAN derived data					
Separator Tank Temp > (247 deg.F)			50	CPRSR Malfunction.	3
Machine ID Not Valid			51	CPRSR Malfunction.	0
Sep. Tank Temp (RT1) Sensor Fault			53	CPRSR Malfunction.	10
Reg. System Pressure (PT2) Sensor Fault	54	CPRSR Malfunction.			
Estop Button Pushed	55	CPRSR Malfunction.	55	CPRSR Malfunction.	3
Serial Comm. Problem	70	CPRSR Malfunction.			
CAN Bus Problem	71	CPRSR Malfunction.			
Communication With Autostart Module Lost	73	CPRSR Malfunction.			
Dedicated Lights:					
Low Fuel Level		Fuel Level		Fuel Level	3
Air Filter Restriction		Soiled Filter			

		ALERT	SH	UTDOWN	
	CODE	LIGHT BLINKS	CODE	LIGHT STEADY	DELAY (sec)
Low Battery Voltage		Battery Charging Condition			
*Engine Oil Pressure <18 PSI		Low Engine Oil Pressure			
*Low Coolant Level - CUMMINS		Engine Coolant Level			
*Engine Coolant Temperature > = 215 deg. F		High Engine Temp.			
*Engine Coolant Temperature > = 220 deg. F				High Engine Temp.	10
IQ Filter Restriction				IQ Filt. Rest	3
High Discharge Temp. (RT2>247 deg. F)				High Comp Temp.	3

*CAN derived data

Caterpillar C–9 Engine Diagnostic and Event Flash Codes

Flash codes are used to represent diagnostic codes in the electronic system in order to alert the operator that a problem exists.

Event codes refer to engine operating conditions and usually indicate a mechanical rather than an electrical system problem.

NOTE: Flash codes can represent more than one failure mode indicator. Use the engine manufacturers service tool to view failure modes.

DIAGNOSTIC	Description of Code						
Flash Code							
15	Injector Actuation Pressure Sensor Loss of signal						
	Injector Actuation Pressure open/short to +batt						
	Injector Actuation Pressure open/short to ground						
17	High Injection Actuation Pressure						
18	Injection Actuation Control Valve open/short						
21	5 Volt Sensor DC Power Supply short to +batt						
	5 Volt Sensor DC Power Supply short to ground						
	Digital Sensor Supply short to +batt						
	Digital Sensor supply short to ground						
24	Engine Oil Pressure open/short to +batt						
	Engine Oil Pressure short to ground						
25	Turbo Outlet Pressure above normal						
	Turbo Outlet Pressure open/short to +batt						
	Turbo Outlet Pressure short to ground						
26	Atmospheric Pressure open/short to +batt						
	Atmospheric Pressure short to ground						
27	Engine Coolant Temperature open short to +batt						
	Engine Coolant Temperature short to ground						
28	Throttle Position calibration required						
32	Throttle Position signal abnormal						

DIAGNOSTIC						
Flash Code	Description of Code					
34	Speed/Timing Sensor Loss of signal					
	Speed/Timing Sensor mechanical failure					
	Loss of Secondary Engine Speed signal					
	Secondary Engine Speed Sensor mechanical failure					
37	Engine Oil Temperature open/short to +batt					
	Engine Oil Temperature open/short to ground					
38	Intake Manifold Air Temp open/short to +batt					
	Intake Manifold Air Temp short to ground					
39	Injector Actuation Press Sensor mechanical failure					
42	Engine Timing calibration required					
51	System Voltage intermittent/erratic					
53	Electronic Control Module error					
56	Personality Module mismatch					
	Check Programmable Parameters					
58	J1939 Data Link communications					
72	Injector Cylinder #1 fault					
	Injector Cylinder #2 fault					
73	Injector Cylinder #3 fault					
	Injector Cylinder #4 fault					
74	Injector Cylinder #5 fault					
	Injector Cylinder #6 fault					

EVENT	Departmention of Code						
Flash Codes	Description of Code						
35	Engine Overspeed Shutdown						
63	Fuel Filter Restriction Derate						
	Fuel Filter Restriction Shutdown						
61	High Engine Coolant Temperature Derate						
	High Engine Coolant Temperature Shutdown						
	High Engine Coolant Temperature Warning						
64	High Inlet Air Temperature Derate						
	High Inlet Air Temperature Warning						
46	Low Engine Oil Pressure Derate						
	Low Engine Oil Pressure Shutdown						
62	Low Engine Coolant Level Derate						
	Low Engine Coolant Level Shutdown						
	Low Engine Coolant Level Warning						
63	Fuel Filter Restriction Warning						
46	Low Engine Oil Pressure Warning						
35	Engine Overspeed Warning						


Starting the Machine

Ensure emergency stop button is reset.



Under no circumstances should volatile fluids such as ether be used for starting this machine.

All normal starting functions are incorporated in the key operated switch.

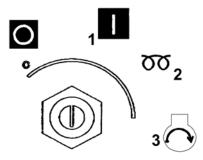

Turn the keyswitch to (position 1);

- The auxiliary start compressor will operate to close the inlet valve.
- The wedge controller will execute a lamp test.
- The low engine oil pressure and low battery lamps will flash indicating proper communication between wedge and engine ECM.

Inlet Heater/Wait to Start Light

• Turn the key switch to on (position 1) until the inlet heater warning light 13 extinguishes.

NOTE: Position 2 is not used

- Turn the key switch to crank position 3 (engine start position).
- Release to on (position 1) when the engine starts. The engine will now be running at a reduced speed.
- During warm up, the engine will idle at 1500RPM. After warm up the engine will idle at a lower speed.

NOTE: In order to allow the machine to start at a reduced load, a valve, which is operated by a service air switch located on the instrument panel, is incorporated in the regulation system. (The valve automatically returns to the start position when the machine is switched off and air pressure relieved from the system).

- Allow the engine to reach its operating temperature—then press the pressure control button **15**.
- At this point in the operation of the machine it is safe to apply *full load* to the engine.



If the engine does not start, repeat the above procedure after waiting for a minimum of one minute.

If the engine fails to start, refer to the *MAINTENANCE* section of this manual, and to the *ENGINE MANUFACTURER'S MANUAL*.

Stopping the Machine

- Close the service valve.
- Allow the machine to run unloaded for a short period of time to reduce the engine temperature.
- Turn the ON/OFF start switch to the 0 (off) position.

NOTE: As soon as the engine stops, the automatic blowdown valve will relieve all pressure from the system, except for the discharge pipe/ manifold area. This area should be depressurised by opening the discharge valve, keeping clear of any airflow from it.

If the automatic blowdown valve fails to operate, then pressure must be relieved from the system by means of the service valve(s).



When relieving system pressure by means of the service valve(s), a small amount of pressure will remain in the system. No maintenance work should be carried out if this situation exists. Relieve this pressure by opening the manual blowdown valve.



Never allow the machine to stand idle with pressure in the system.

Emergency Stopping

In the event that the unit has to be stopped in an emergency, **PRESS THE EMERGENCY STOP SWITCH ON THE FRONT OF THE MACHINE.**

If the unit is not fitted with an emergency stop switch, rotate the start switch to the (0) off position.

Re–Starting After an Emergency

Disengage emergency stop control from engaged (depressed) position. (IF FITTED)

If the machine has been switched off because of a machine malfunction, then identify and correct the fault before attempting to re-start.

If the machine has been switched off for reasons of safety, then ensure that the machine can be operated safely before re-starting.

Refer to the *PRIOR TO STARTING* and *STARTING THE UNIT* instructions earlier in this section before re-starting the machine.

Monitoring During Operation

Should any of the safety shut-down conditions occur, the unit will stop.

Refer to the wedge diagnostic display codes table for a listing of shutdown conditions.



CAUTION: To ensure an adequate flow of oil to the compressor at low temperature, never allow the discharge pressure to fall below 3.5 bar.

Decommissioning

When the machine is to be permanently decommissioned or dismantled, it is important to ensure that all hazard risks are either eliminated or notified to the recipient of the machine. In particular:-

- Do not destroy batteries or components containing asbestos without containing the materials safely.
- Do not dispose of any pressure vessel that is not clearly marked with its relevant data plate information or rendered unusable by drilling, cutting etc.
- Do not allow lubricants or coolants to be released into land surfaces or drains.
- Do not dispose of a complete machine without documentation relating to instructions for its use.

Maintenance



Maintenance

Maintenance Interval Chart

	M	lainten	ance Int	erval Ch	<u>nart</u>		
	Initial 500 miles /850 km	Daily	Weekly	Monthly	3 Monthly. 500 hrs.	6 Monthly. 1000 hrs.	12 Monthly. 2000 hrs.
Compressor Oil Level		С					
Engine Oil Level		С					
*Radiator Coolant Level		С					
Gauges/Lamps		С					
*Air Cleaner Service Indicators		С					
Fuel Tank (Fill at end of day)		С				D	
*Fuel/Water Separator Drain		С					
Oil Leaks		С					
Fuel Leaks		С					
Drain Water From Fuel Filters		D					
Coolant Leaks		С					
Radiator Filler Cap		С					
Air Cleaner Precleaner Dumps			С				
Fan/Alternator Belts			С				
Battery Connections/ Electrolyte			С				
Tire Pressure and Surface			С				
*Wheel Lug Nuts				С			
Hoses (Oil, Air, Intake, etc.)				С			
Automatic Shutdown System				С			

Maintenance Interval Chart									
	Initial 500 miles /850 km	Daily	Weekly	Monthly	3 Monthly. 500 hrs.	6 Monthly. 1000 hrs.	12 Monthly. 2000 hrs.		
Air Cleaner System				С					
Compressor Heat Exchanger Exterior				С					
* Engine Heat Exchanger Exterior				С					
Fasteners, Guards					С				
Air Cleaner Elements					1	R/WI			

*Disregard if not appropriate for this particular machine.

(1) or 3000 miles/5000km whichever is the sooner

(2) or as defined by local or national legislation

C = Check (adjust, clean or replace as necessary)

CBT = Check before towing.

- **CR** = Check and report
- **D** = Drain
- $\mathbf{G} = Grease$
- R= Replace
- T = Test

WI = or when indicated if earlier.

Refer to specific sections of the operator's manual for more information.

		Ma	intena	ince In	terva	I Chart	<u>.</u>		
	Initial 500 miles /850 km	Daily	Weekly	Monthly	250 hrs	3 Monthly 500 hrs	6 Monthly 1000 hrs	12 Monthly 1500 hrs	12 Monthly 2000 hrs
Engine Coolant Conditioner						R			
*Fuel/Water Separator Element						R			
Compressor Oil Filter Element						R			
Compressor Oil							R		
Engine Oil Change					R CAT				
Engine Oil Filter					R CAT				
*Water Pump Grease.							R		
*Wheels (Bearings, Seals, etc.)									С
*Engine Coolant							С		R
Fuel Filter Element (Service interval varies with fuel quality)					R CAT				
*Injection Nozzle Check								С	
Shutdown Switch Settings									т
Scavenger Orifice & Related Parts									С
Oil Separator Element									R
Lights (running, brake, & turn)		СВТ							
Pintle Eye Bolts		СВТ							
*Brakes		СВТ							
*Brake Linkage	С								
Emergency Stop				Т					

Maintenance Interval Chart									
	Initial 500 miles /850 km	Daily	Weekly	Monthly	250 hrs	3 Monthly 500 hrs	6 Monthly 1000 hrs	12 Monthly 1500 hrs	12 Monthly 2000 hrs
Fasteners					С				
Running Gear Linkage					G				
Running Gear Bolts(1)					С				

*Disregard if not appropriate for this particular machine.

(1) or 3000 miles/5000km whichever is the sooner

(2) or as defined by local or national legislation

C = Check (adjust, clean or replace as necessary)

CBT = Check before towing.

CR = Check and report

- **D** = Drain
- **G** = Grease
- R= Replace

T = Test

W I = or when indicated if earlier.

Refer to specific sections of the operator's manual for more information.

	Initial 500 miles /850 km	Daily	Weekly	Monthly	3 Monthly. 500 hrs.	6 Monthly. 1000 hrs	12 Monthly. 2000 hrs
Separator tank (2) exterior							CR
Lubricator (Fill) *		С					

	2 Yrs	4 Yrs	6 Yrs		
Safety valve	С				
Hoses		R			
Separator tank (2) interior			С		

*Disregard if not appropriate for this particular machine.

(1) or 3000 miles/5000km whichever is the sooner

(2) or as defined by local or national legislation

C = Check (adjust, clean or replace as necessary)

CBT = Check before towing.

CR = Check and report

 $\mathbf{D} = Drain$

 $\mathbf{G} = Grease$

 \mathbf{R} = Replace

T = Test

W I = or when indicated if earlier.

Refer to specific sections of the operator's manual for more information.

Routine Maintenance

This section refers to the various components which require periodic maintenance and replacement.

The SERVICE MAINTENANCE INTERVAL CHART indicates the various components' descriptions and the intervals when maintenance has to take place. Oil capacities, etc., can be found in the GENERAL INFORMATION section of this manual.

For any specification or specific requirement on service or preventative maintenance for the engine, refer to the *Engine Manufacturer's Manual*.

Compressed air can be dangerous if incorrectly handled. Before doing any work on the unit, ensure that all pressure is vented from the system and that the machine cannot be started accidentally.

If the automatic blowdown fails to operate, then pressure must be gradually relieved by operating the manual blowdown valve. Suitable personal protective equipment should be worn.

Ensure that maintenance personnel are adequately trained, competent and have read the Maintenance Manuals.

Prior to attempting any maintenance work, ensure that:-

• all air pressure is fully discharged and isolated from the system. If the automatic blowdown valve is used for this purpose, then allow enough time for it to complete the operation.

NOTE: Pressure will always remain in the part of the system between the minimum pressure valve and the discharge valve after operation of the auto blowdown valve.

THIS PRESSURE MUST BE RELIEVED BY CAREFULLY:

- a. DISCONNECTING ANY DOWNSTREAM EQUIPMENT.
- b. OPENING THE DISCHARGE VALVE TO ATMOSPHERE.

(USE HEARING PROTECTION IF NECESSARY).

- the machine cannot be started accidently or otherwise, by posting warning signs and/ or fitting appropriate anti-start devices.
- Disconnect batteries.

Prior to opening or removing panels or covers to work inside a machine, ensure that:-

- anyone entering the machine is aware of the reduced level of protection and the additional hazards, including hot surfaces and intermittently moving parts.
- the machine cannot be started accidently or otherwise, by posting warning signs and/ or fitting appropriate anti-start devices.

Prior to attempting any maintenance work on a running machine, ensure that:-

- the work carried out is limited to only those tasks which require the machine to run.
- the work carried out with safety protection devices disabled or removed is limited to only those tasks which require the machine to be running with safety protection devices disabled or removed.
- all hazards present are known (e.g. pressurised components, electrically live components, removed panels, covers and guards, extreme temperatures, inflow and outflow of air, intermittently moving parts, safety valve discharge etc.).
- appropriate personal protective equipment is worn.
- loose clothing, jewellery, long hair etc. is made safe.
- warning signs indicating that *Maintenance Work is in Progress* are posted in a position that can be clearly seen.

Upon completion of maintenance tasks and prior to returning the machine into service, ensure that:-

- the machine is suitably tested.
- all guards and safety protection devices are refitted.
- all panels are replaced, canopy and doors closed.
- hazardous materials are effectively contained and disposed of.

Protective Shutdown System

Refer to the Wedge diagnostic display codes table for a listing of shutdown conditions.

Low Engine Fuel Level Switch

At three month intervals, test the low engine fuel level switch circuit as follows:

• Start the machine.

NOTE: Do not press the load button.

- Disconnect the switch, the machine should shutdown.
- Re-connect the switch.

At twelve month intervals, test the low engine fuel level switch by removing and operating the float manually.



Never remove or replace switches when the machine is running.

Scavenge Line

The scavenge line runs from the combined orifice/drop tube in the separator tank, to the orifice fitting located in the airend.

Examine the orifice, check valve and hoses at every service or in the event of oil carryover into the discharge air.

It is good preventative maintenance to check that the scavenge line and tube are clear of any obstruction each time the compressor lubricant is changed as any blockage will result in oil carryover into the discharge air.

Compressor Oil Filter

Refer to the *MAINTENANCE INTERVAL CHART* in this section for the recommended servicing intervals.

Removal



Do not remove the filter(s) without first making sure that the machine is stopped and the system has been completely relieved of all air pressure. (Refer to *STOPPING THE UNIT* in the *OPERATING INSTRUCTIONS* section of this manual).

Clean the exterior of the filter housing and remove the *spin–on* element by turning it in a counter–clockwise direction.

Inspection

Examine the filter element.



If there is any indication of the formation of varnishes, shellacs or lacquers on the filter element, it is a warning that the compressor lubricating and cooling oil has deteriorated and that it should be changed immediately. Refer to LUBRICATION later in this section.

Reassembly

Clean the filter gasket contact area and install the new element by screwing in a clockwise direction until the gasket makes contact with the filter housing. Tighten a further 1/2 to 3/4 of a revolution.

A CAUTION

Start the machine (refer to PRIOR TO STARTING and STARTING THE UNIT in the OPERATING INSTRUCTIONS section of this manual) and check for leakage before the machine is put back into service.

Compressor Oil Separator Element

Refer to the SERVICE MAINTENANCE INTERVAL CHART in this section for service intervals.

Removal



Do not remove the filter(s) without first making sure that the machine is stopped and the system has been completely relieved of all air pressure. (Refer to *STOPPING THE UNIT* in the *OPERATING INSTRUCTIONS* section of this manual).

Disconnect all hoses and tubes from the separator tank cover plate. Remove the drop–tube from the separator tank cover plate and then remove the cover plate. Remove the separator element.

Inspection

Examine the filter element. Examine all hoses and tubes, and replace if necessary.

Reassembly

Thoroughly clean the orifice/drop tube and filter gasket contact area before reassembly. Install the new element.



Do not remove the staple from the anti-static gasket on the separator element since it serves to ground any possible static build-up. Do not use gasket sealant since this will affect electrical conductance.

Reposition the cover plate, taking care not to damage the gasket, and replace the cover plate screws tightening in a *criss–cross* pattern to the recommended torque (refer to the *TORQUE SETTING TABLE* later in this section).

Replace the drop-tube and reconnect all hoses and tubes to the separator tank cover plate.

Replace the compressor oil (refer to LUBRICATION later in this section).



Start the machine (refer to PRIOR TO STARTING and STARTING THE UNIT in the OPERATING INSTRUCTIONS section of this manual) and check for leakage before the machine is put back into service.

Compressor Oil Cooler and Engine Radiator Air Charge Cooler

When grease, oil and dirt accumulate on the exterior surfaces of the oil cooler and radiator, the efficiency is impaired. It is recommended that each month the oil cooler and radiator be cleaned by directing a jet of compressed air, (carrying if possible a non–flammable cleaning solvent) over the exterior core of the cooler/radiator. This should remove any accumulation of oil, grease and dirt from the exterior core of the cooler so that the entire cooling area can radiate the heat of the lubricating and cooling oil/water into the air stream.



Hot engine coolant and steam can cause injury. When adding coolant or antifreeze solution to the engine radiator, stop the engine at least one minute prior to releasing the radiator filler cap. Using a cloth to protect the hand, slowly release the filler cap, absorbing any released fluid with the cloth. Do not remove the filler cap until all excess fluid is released and the engine cooling system fully depressurised.



Follow the instructions provided by the antifreeze supplier when adding or draining the antifreeze solution. It is advisable to wear personal protective equipment to prevent skin and eye contact with the antifreeze solution.

Air Filter Element

The air filter should be inspected regularly (refer to the *SERVICE MAINTENANCE INTERVAL CHART*) and the element replaced when the restriction indicator lamp illuminates. The dust collector box(es) should be cleaned daily (more frequently in dusty operating conditions) and not allowed to become more than half full.

Removal



Never remove and replace element(s) when the machine is running.

Clean the exterior of the filter housing and remove the filter element by releasing the nut.

If the safety element is to be renewed, thoroughly clean the interior of the filter housing prior to removing the safety element.

Inspection

Check for cracks, holes or any other damage to the element by holding it up to a light source, or by passing a lamp inside.



If inspection reveals damage to the main element, the safety element *must* be replaced.

Check the seal at the end of the element and replace if any sign of damage is evident.

Reassembly

Assemble the new element into the filter housing ensuring that the seal seats properly.

Secure the element in the housing by hand tightening the nut.

Assemble the dust collector box parts, ensuring that they are correctly positioned.

Before restarting the machine, check that all clamps are tight.

Ventilation

Always check that the air inlets and outlets are clear of debris etc.



NEVER clean by blowing air inwards.

Cooling Fan Drive

Periodically check that the fan mounting bolt in the fan hub has not loosened. If, for any reason, it becomes necessary to remove the fan or re–tighten the fan mounting bolt, apply a good grade of commercially available thread locking compound to the bolt threads and tighten to the torque value shown in the *TORQUE SETTING TABLE* later in this section.

The fan belt(s) should be checked regularly for wear and correct tensioning.

Fuel System

The fuel tank should be filled daily or every eight hours. To minimise condensation in the fuel tank(s), it is advisable to top up after the machine is shut down or at the end of each working day. At six month intervals drain any sediment or condensate that may have accumulated in the tank(s).

Fuel Filter Water Separator

The fuel filter water separator contains a filter element which should be replaced at regular intervals (see the *SERVICE/MAINTENANCE CHART*).

Caterpillar powered units are equipped with primary and secondary fuel filters.

Charge Cooler Pipework:-

Inspect all hoses and clips on the charge cooler pipe work.

Engine damage will occur if the charge cooling system leaks.

Hoses

All components of the engine cooling air intake system should be checked periodically to keep the engine at peak efficiency.

At the recommended intervals, (see the SERVICE MAINTENANCE INTERVAL CHART), inspect all of the intake lines to the air filter, and all flexible hoses used for air lines, oil lines and fuel lines.

Periodically inspect all pipework for cracks, leaks, etc. and replace immediately if damaged.

Electrical System



Always disconnect the battery cables before performing any maintenance or service.

Inspect the safety shutdown system switches and the instrument panel relay contacts for evidence of arcing and pitting. Clean where necessary.

Check the mechanical action of the components.

Check the security of electrical terminals on the switches and relays i.e. nuts or screws loose, which may cause local hot spot oxidation.

Inspect the components and wiring for signs of overheating i.e. discolouration, charring of cables, deformation of parts, acrid smells and blistered paint.

Battery



Always disconnect the battery cables before performing any maintenance or service.

Keep the battery terminals and cable clamps clean and lightly coated with petroleum jelly to prevent corrosion.

The retaining clamp should be kept tight enough to prevent the battery from moving.

Pressure System

At 3 month intervals it is necessary to inspect the external surfaces of the system (from the airend through to the discharge valve(s)) including hoses, tubes, tube fittings and the separator tank, for visible signs of impact damage, excessive corrosion, abrasion, tightness and chafing. Any suspect parts should be replaced before the machine is put back into service.

Tire Pressure

See the GENERAL INFORMATION section of this manual.

Running Gear/Wheels

Check the wheel nut torque 20 miles (30 kilometres) after refitting the wheels. Refer to the *TORQUE SETTING TABLE* later in this section.

The bolts securing the running gear to the chassis should be checked periodically for tightness (refer to the *SERVICE/MAINTENANCE CHART* for frequency) and re—tightened where necessary. Refer to the *TORQUE SETTING TABLE* later in this section.

Lubrication

The engine is initially supplied with engine oil sufficient for a nominal period of operation (for more information, consult The *Engine Manufacturer's Manual*).



Always check the oil levels before a new machine is put into service.

If, for any reason, the unit has been drained, it must be re-filled with new oil before it is put into operation.

Engine Lubricating Oil

The engine oil should be changed at the engine manufacturer's recommended intervals. Refer to the *SERVICE/MAINTENANCE CHART*.

Engine Lubricating Oil Specification

Refer to the Engine Manufacturer's Manual or Portable Compressor Fluid Chart.

Engine Oil Filter Element

The engine oil filter element should be changed at the engine manufacturer's recommended intervals. Refer to the *SERVICE/MAINTENANCE CHART.*.

Compressor Lubricating Oil

Refer to the SERVICE/MAINTENANCE CHART in this section for service intervals.

NOTE: If the machine has been operating under adverse conditions, or has suffered long shutdown periods, then more frequent service intervals will be required.



DO NOT, under any circumstances, remove any drain plugs or the oil filler plug from the compressor lubricating and cooling system without first making sure that the machine is stopped and the system has been completely relieved of all air pressure (refer to *STOPPING THE UNIT* in the *OPERATING INSTRUCTIONS* section of this manual).

Completely drain the receiver/separator system including the piping and oil cooler by removing the drain plug(s) and collecting the used oil in a suitable container.

Replace the drain plug(s) ensuring that each one is secure.

NOTE: If the oil is drained immediately after the machine has been running, then most of the sediment will be in suspension and will therefore drain more readily.


Some oil mixtures are incompatible and result in the formation of varnishes, shellacs or lacquers which may be insoluble.

NOTE: Always specify INGERSOLL–RAND Pro–Tec[™] oil for use at all ambient temperatures above –23°C.

For extended warranty use only IR fluids. Refer to portable compressor fluids chart.

Running Gear Wheel Bearings

Wheel bearings should be packed with grease every 6 months. The type of grease used should conform to specification MIL–G–10924.

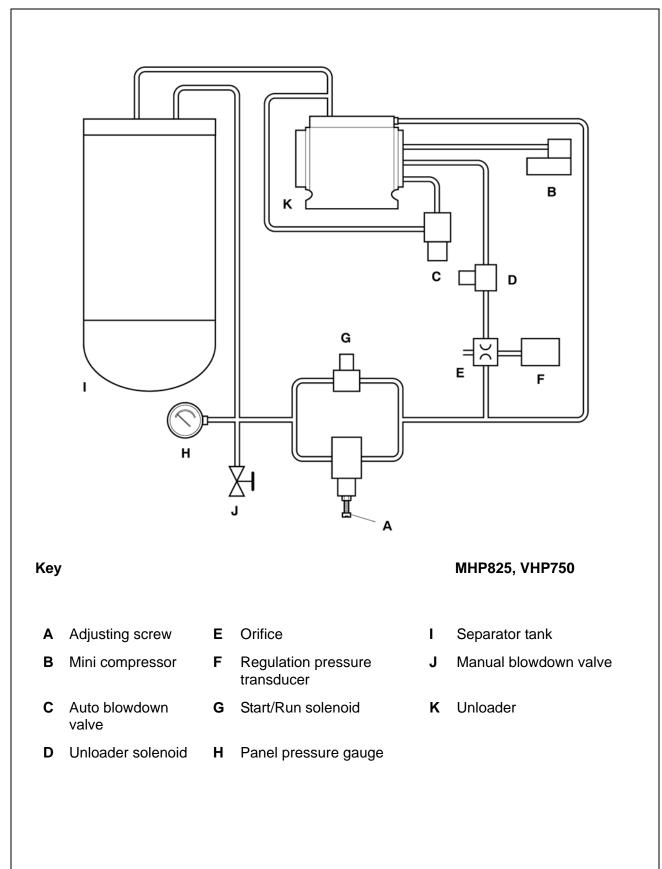

Speed and Pressure Regulation Adjustment

Normally, regulation requires no adjusting, but if correct adjustment is lost, proceed as follows:

Refer to the diagram above.

A Adjusting screw


Start the machine (Refer to STARTING INSTRUCTIONS in the OPERATING INSTRUCTIONS section of this manual).

Adjust the service valve on the outside of the machine to maintain normal operating discharge pressure (refer to *GENERAL INFORMATION*) and full speed position. If the tachometer moves away from the full speed position before normal operating discharge pressure is attained, then turn the adjusting screw '**A**' clockwise to increase the pressure. Optimum adjustment is achieved when the throttle just moves from its full speed position and the pressure increases slightly.

Close the service valve. The engine will slow to idle speed.



Never allow the idle pressure to exceed maximum allowable pressure(refer to GENERAL INFORMATION).

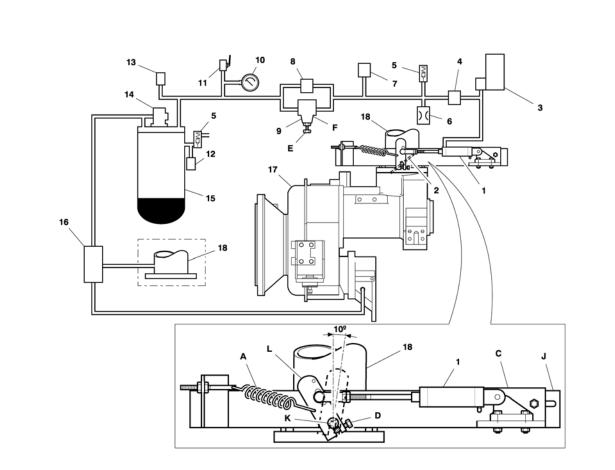

XHP700, SHP750

Key:

- 1 Air cylinder
- 2 Butterfly valve
- 3 Mini compressor
- 4 Unloader Solenoid
- 5 Relief valve
- 6 Orifice

- 7 Regulation pressure transducer8 Start/Run solenoid
- 9 Pressure regulator
- **10** Panel pressure guage
- **11** Manual blowdown valve
- **12** Temperature sensor

- **13** Pressure transducer
- **14** Minimum pressure valve
- 15 Separator tank
- **16** Auto blowdown valve
- 17 HR2 Airend
- 18 Air inlet

Speed and Pressure Regulation Adjustment

Normally, regulation requires no adjusting, but if correct adjustment is lost, proceed as follows:

Refer to the diagram above.

With the unit stopped, disconnect ballast spring '**A**' from the butterfly lever. Loosen the two screws securing bracket '**C**' to main bracket '**J**'.

Loosen screw 'D' and rotate the butterfly valve pivot shaft 'K' fully clockwise until the valve is closed. Position lever 'L' approximately 10° after vertical and tighten screw 'D'.

Keep the butterfly lever in the closed position and with the the air cylinder fully contracted tighten the screws holding bracket 'C' to the main bracket 'J'.

Allow the cylinder to return to its extended position and reconnect the ballast spring 'A'.

IMPORTANT: Ensure all components are aligned and move freely.

Start engine: Note receiver pressure. Warm up pressure should be 3, 5–5, 0 bar (50–70 p.s.i.).

To increase the warm up pressure, turn the air cylinder rod in an anti–clockwise direction to open the butterfly valve.

To reduce warm up pressure, turn air cylinder rod in clockwise direction to close butterfly valve.

When the engine is warmed up, press the service air switch on the control panel to commence normal regulation.

Set pressure by adjusting the screw 'E' on the pressure regulator 'F'. Turn the screw clockwise to increase pressure and anticlockwise to reduce pressure.

Rated Operating Pressure:

XHP700	300 psig

SHP750 300 psig

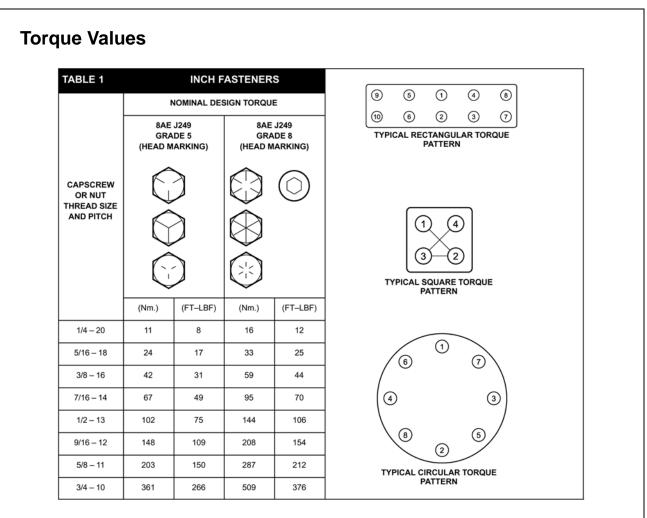


TABLE 2		METR	RIC FASTE	NERS			9	5	1	4	8
		N	OMINAL DE	SIGN TORQU	E		10	6	2	3	0
		PERTY DE 8.8 ARKING)	GRAD	PERTY DE 10.9 MARKING)	GRAD	PERTY DE 12.9 IARKING)	ТҮРК				RQUE
CAPSCREW OR NUT THREAD SIZE AND PITCH	8.8 * * 8.6		10. * 10.		12 x 12				\times	$\left[\right]$	
		\mathbf{D}					ΤY		QUARE		E
	(Nm.)	(FT-LBF)	(Nm.)	(FT-LBF)	(Nm.)	(FT-LBF)					
M6 X 1.0	11	8	15	11	18	13	/	6	(1)	$\overline{\mathcal{O}}$	\backslash
M8 X 1.25	26	19	36	27	43	31		\smile		\cup	
M10 X 1.5	52	38	72	53	84	62)		(3
M12 X 1.75	91	67	126	93	147	109	$ \setminus$	(8)		(5)	/
M14 X 2	145	107	200	148	234	173		\checkmark	2	۷	<i>,</i>
M16 X 2	226	166	313	231	365	270	ТҮР				E
M20 X 2.5	441	325	610	450	713	526					

Wheel Torque Chart - Inch		
1/2" lug nuts	Torque (Ft- Lbs)	
13" wheel	80-90	
15" wheel	105-115	
16" wheel	105-115	
16.5" wheel	105-115	
5/8" lug nuts		
16" wheel	190-210	
17" wheel	190-210	
9/16" Clamp nuts/ Demountable Wheels		
14.5" wheel	105-115	

Wheel Torque Chart - Metric			
	Torque (N-m)	Torque (Ft-Lbs)	
M12 bolts	85-95	62-70	
M14 bolts	145-155	107-115	
M16 bolts	175-185	129-137	
M18 bolts	205-215	151-159	


Portable Compressor Fluid Chart

Refer to these charts for correct compressor fluid required. Note that the selection of fluid is dependent on the design operating pressure of the machine and the ambient temperature expected to be encountered before the next oil change.

NOTE: Fluids listed as "preferred" are required for extended warranty.

Compressor oil carryover (oil consumption) may be greater with the use of alternative fluids.

Design Operating Pressure	Ambient Temperature	Specification
100 psi to 300 psi	-10°F to 125°F (-23°C to 52°C)	Preferred: IR Pro–Tec™
		Alternate: ISO Viscosity Grade 46 with rust and oxidation inhibitors, designed for air compressor service
350 psi	-10°F to 125°F (-23°C to 52°C)	Preferred: IR XHP 605
		Alternate: IR XHP405 ISO Viscosity Grade 68 Group 3 or 5 with rust and oxidation inhibitors designed for air compressor service
	65°F to 125°F (18°C to 52°C)	Preferred: XHP605 IR XHP1001

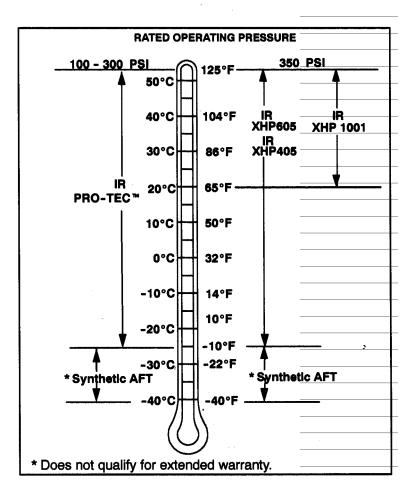

Recommended Ingersoll–Rand Fluids – Use of these fluids with original IR filters can extend airend warranty. Refer to operator's manual warranty section for details or contact your IR representative.


Ingersoll–Rand Preferred Fluids	1 gal. (3.8 Litre)	5 gal. (19.0 Litre)	55 gal. (208.2 Litre)	220 gal. (836 Litre)
Preferred:				
IR Pro–Tec™	36899698	36899706	36899714	36899722
IR XHP605		22252076	22252050	22252068
IR XHP1001		35612738	35300516	
XHP405		22252126	22252100	22252118
Engine Oil	54480918	36875938	36866903	

Always use Ingersoll-Rand Replacement parts!




Machine Systems



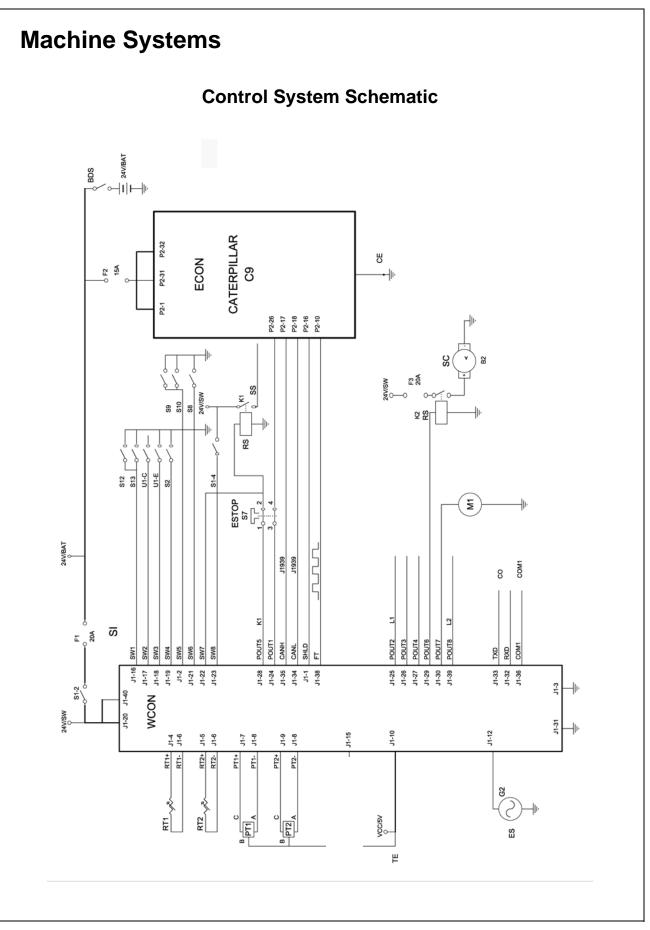

Key			
BAT	Battery	PT2	Pressure transducer, regulation system 0-100 PSIG
BDS	Battery disconnect switch	РМ	Plug, machine ID
СО	RS232C comms	RS	Relay-spst
ECON	Engine controller	RT1	Thermistor, separator tank temperature -30-255°F
ES	Engine speed	RT2	Thermistor, airend discharge temperature -30-255°F
CE	Caterpillar electronics ground stud	ESTOP	Emergency stop
FT	Frequency throttle. Range=500Hz Base frequency 10%-90% pwm, 1350-1800 RPM at 24VDC	SC	Start compressor
G2	Flywheel magnetic pickup	SI	Switch inputs
POUT1	Engine key switch	SS	Starter solenoid
POUT2	Solenoid, start/run	SW1	IQ filter restriction
POUT3	Low fuel warning beacon	SW2	Alert, low fuel
POUT4	Spare	SW3	Low fuel shutdown
POUT5	Start relay	SW4	Switch, service air
POUT6	Start compressor	SW5	Air filter rest (option)
POUT7	Hour meter	SW6	Switch, airend oil pressure (12PSI N.O.)
POUT8	Solenoid, unloader	SW7	Spare
PT1	Pressure transducer, separator tank.	SW8	Switch, start
0-225 PS	SIG-9/235, 9270, 0/300, 12/235	SWB	Switch battery disconnect
0-225 PS XP1060	SIG-HP935, VHP750, MHP825,	TE	Transducer excitation
0-500 PS	SIG-XHP750, XHP650, SHP825	WCON	Wedge controller

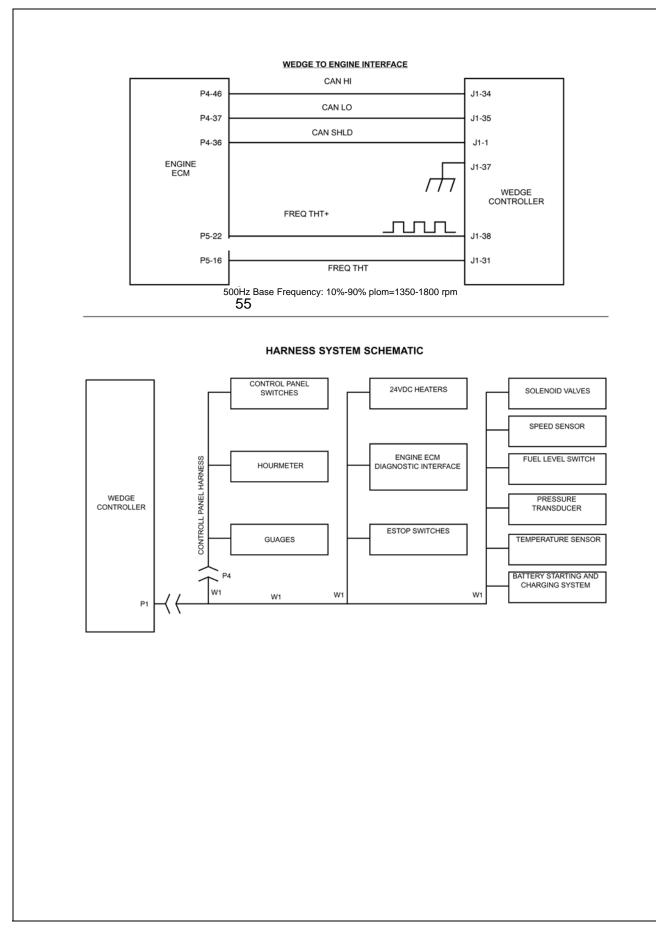

EMU CAT Low Pressure Electrical Parts MHP825, VHP750

PART NUMBERS	DESCRIPTION	QUANTITY PER MACHINE
22162572	IQ HARNESS OPTION	1
36899599	IQ FILTER SWITCH	1
36899615	IQ FILTER SWITCH	1
22102339	COOLANT LWL SWH	1
36896975	SW MASTER DISCONNECT	1
36920825	0–100 PRESS TRANS	1
54496773	0–225 PRESS TRANS	1
36892362	24V SEALED RELAY	2
36785319	MAG SPEED SENSOR	1
36898922	THERMISTOR PROBE	2
36840841	SOLENOID VALVE	2
36847838	AIR FILTER RESTRICTION INDICATOR SWITCH	2
36870608	ENGINE OIL PRESS SENDER	1
36841138	COMP. & ENGINE TEMP SENDER	2
36757581	COMP. OIL PRESS SW	1
36850691	COMPRESSOR MOTOR	1
35577873	RELAY MAGNETIC 24 VOLT K1	1
36841526	CONTROL HEATER	2
36854677	REGULATOR HEATER	1
22319735	NEGATIVE BATTERY CABLE	1
22319743	POSITIVE BATTERY CABLE	1
54511282	POSITIVE JUMPER BATTERY CABLE	1
35128982	BATTERY JUMPER	1
22132153	FRAME GROUND STRAP	1
22132153	ENGINE GROUND STRAP	1
22094759	FUEL LEVEL SENDER	1

PART NUMBERS	DESCRIPTION	QUANTITY PER MACHINE
22173579	WEDGE CONTROLLER	1
22202337	W1 CHASSIS HARNESS	1
54734116	W1 CHASSIS HARNESS DIAGRAM	N/A
22101968	INLET HEATER BREAKER 120 AMPS	1
36853521	INLET HEATER RELAY	1
89303127	EMERGENCY STOP OPERATOR	1
89303135	NC E-STOP CONTACT BLOCK	2

EMU CAT High Pressure Electrical Parts SHP750, XHP700

PART NUMBERS	DESCRIPTION	QUANTITY PER MACHINE
22162572	IQ HARNESS OPTION	1
36899599	IQ FILTER SWITCH	1
36899615	IQ FILTER SWITCH	1
22102339	COOLANT LWL SWH	1
36896975	SW MASTER DISCONNECT	1
36920825	0–100 PRESS TRANS	1
54765946	0–500 PRESS TRANS	1
36892362	24V SEALED RELAY	2
36785319	MAG SPEED SENSOR	1
36898922	THERMISTOR PROBE	1
36842300	START/RUN SOLENOID VALVE	1
36842318	COMPRESSOR SOLENOID VALVE	1
36847838	AIR FILTER RESTRICTION INDICATOR SWITCH	2
36870608	ENGINE OIL PRESS SENDER	1
36841138	COMP. & ENGINE TEMP SENDER	2
36757581	COMP. OIL PRESS SW	1
36850691	COMPRESSOR MOTOR	1
35577873	RELAY MAGNETIC 24 VOLT K1	1
36841526	CONTROL HEATER	2
22319735	NEGATIVE BATTERY CABLE	1
22319743	POSITIVE BATTERY CABLE	1
54511282	POSITIVE JUMPER BATTERY CABLE	1
35128982	BATTERY JUMPER	1
22132153	FRAME GROUND STRAP	1
22132153	ENGINE GROUND STRAP	1
22094759	FUEL LEVEL SENDER	1

PART NUMBERS	DESCRIPTION	QUANTITY PER MACHINE
22173579	WEDGE CONTROLLER	1
22202337	W1 CHASSIS HARNESS	1
54734116	W1 CHASSIS HARNESS DIAGRAM	N/A
22101968	INLET HEATER BREAKER 120AMPS	1
89303127	EMERGENCY STOP OPERATOR	1
89303135	NC E-STOP CONTACT BLOCK	2

Fault Finding



Fault Finding

Fault Finding

FAULT	CAUSE	REMEDY
No reaction	Emergency stop actuated.	Reset emergency stop button.
from instrument	Batteries not connected.	Connect batteries.
panel when key turned to (I) position.	Fuse at starter motor 'blown'.	Replace fuse.
Engine fails to start.	Low battery charge.	Check the fan belt tension, battery and cable connections.
	Bad earth connection.	Check the earth cables, clean as required.
	Loose connection.	Locate and make the connection good.
	Fuel starvation.	Check the fuel level and fuel system components. Replace the fuel filter if necessary.
	Relay failed.	Replace the relay.
	Faulty stop solenoid	Check the stop solenoid
Engine stops while in service or is	Low fuel level.	Fill fuel tank and bleed air from fuel system if necessary. (Refer to <i>MAINTENANCE SECTION)</i> .
reluctant to start.	Safety shut-down system in operation.	Check the safety shut-down switches.
Engine starts	Electrical fault.	Test the electrical circuits.
but stalls when the	Low engine oil pressure.	Check the oil level and the oil filter(s).
switch returns to position <i>I</i> .	Low water level.	Check if the low water lamp is extinguished.
	Faulty relay.	Check the relays.
	Faulty key–switch.	Check the key-switch.

FAULT	CAUSE	REMEDY
Engine starts but will not run or engine shuts down prematurely.	Electrical fault.	Test the electrical circuits.
	Low engine oil pressure.	Check the oil level and oil filter(s).
	Safety shut-down system in operation.	Check the safety shut-down switches.
	Fuel starvation.	Check the fuel level and fuel system components. Replace the fuel filter if necessary.
	Switch failure.	Test the switches.
	High compressor oil temperature.	Check the compressor oil level and oil cooler. Check the fan drive.
	Water present in fuel system.	Check the water separator and clean if required.
	Faulty relay.	Check the relay in the holder and replace if necessary.
Engine	Low water level.	Check the level and replenish if necessary
Overheats.	Blocked radiator.	Stop the machine and clean the cooling fins with compressed air or steam. Use reduced pressure for cleaning the fins.
	Reduced cooling air from fan.	Check the fan and the drive belts. Check for any obstruction inside the cowl.
	Faulty thermostat.	Check the thermostat and replace if necessary.
Engine speed	Blocked fuel filter.	Check and replace if necessary.
too low.	Blocked air filter.	Check and replace the element if necessary.
	Faulty regulator valve.	Check the regulation system.
	Premature unloading.	Check the regulation and the operation of the air cylinder.
Excessive vibration.	Engine speed too low.	See "Engine speed too low"
Leaking oil seal.	Improperly fitted oil seal.	Replace the oil seal.

FAULT	CAUSE	REMEDY
Air discharge capacity too low.	Engine speed too low.	Check the air cylinder and air filter(s).
	Blocked air cleaner.	Check the restriction indicators and replace the element(s) if necessary.
	High pressure air escaping.	Check for leaks.
	Incorrectly set regulation system.	Reset the regulation system. Refer to SPEED AND PRESSURE REGULATION ADJUSTMENT in the MAINTENANCE section of this manual.
Compressor	Low oil level.	Top up the oil level and check for leaks.
overheats.	Dirty or blocked oil cooler.	Clean the oil cooler fins.
	Incorrect grade of oil.	Use Ingersoll–Rand recommended oil.
	Defective by-pass valve.	Check the operation of the element and replace if necessary.
	Recirculation of cooling air.	Move the machine to avoid recirculation.
	Reduced cooling air from fan.	Check the fan and the drive belts. Check for any obstruction inside the fan cowl.
Excessive oil present in the discharge air.	Blocked scavenge line.	Check the scavenge line, drop tube and orifice. Clean and replace.
	Perforated separator element.	Replace the separator element.
	Pressure in the system is too low.	Check the minimum pressure valve.
Safety valve operates.	Operating pressure too high.	Check the setting and operation of the regulator valve piping.
	Incorrect setting of the regulator.	Adjust the regulator.
	Faulty regulator.	Replace the regulator.
	Inlet valve set incorrectly.	Refer to SPEED AND PRESSURE REGULATION ADJUSTMENT in the MAINTENANCE section of this manual.

FAULT	CAUSE	REMEDY
	Loose pipe/hose connections.	Check all pipe/hose connections.
	Faulty safety valve.	Check the relieving pressure. Replace the safety valve if faulty. DO NOT ATTEMPT A REPAIR.
Oil is forced back into the air filter.	Incorrect stopping procedure used.	Always employ the correct stopping procedure. Close the discharge valve and allow the machine to run on idle before stopping.
	Faulty inlet valve.	Check for free operation of the inlet valve(s).
Machine goes to full pressure when started.	Inlet valve set incorrectly. (17/235, 21/215)	Refer to SPEED AND PRESSURE REGULATION ADJUSTMENT in the MAINTENANCE section of this manual. (17/235, 21/215)
	Faulty load valve.	Replace the valve.
Machine fails to load when the load button is pressed.	Faulty load valve.	Replace the valve.

Refer also to the Engine Manufacturer's Manual.

Always use Ingersoll-Rand Replacement parts!




Options



Options

IQ System Operating Instructions – 1

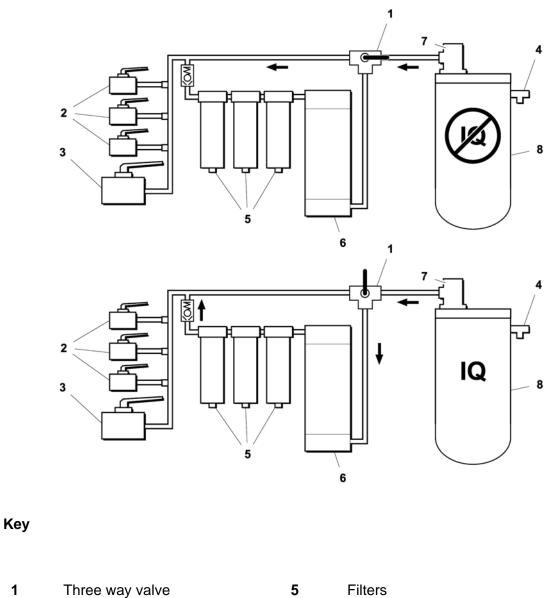

- 2 Ball valve 11/4"
- 3 Ball valve 2"

1

4 Safety valve Filters

6

7

8

- Aftercooler
- Minimum pressure valve
- Separator tank

IQ System

The IQ System is a complete, self-contained system which provides cooler, cleaner air than from a standard portable compressor. The system utilizes an integral aftercooler, high-efficiency filtration, and a patented condensate disposal system to provide the cool, clean air. The condensate disposal system injects all liquid condensed from the moisture separator and filters into the engine exhaust system where it is vaporized by heat. This eliminates the need for collecting the condensate, and the added cost of disposing of the condensate, which is often regulated by local, state, and/or federal regulations.

When equipped with the low ambient feature, the IQ System automatically adjusts movable louvers to control airflow through the aftercooler, ensuring that the compressed air temperature always remains above freezing temperatures (typically 45°F (7°C)) at any ambient temperature down to -10° F (-23° C). This prevents the need for 120V AC heat tracing systems, or any manual adjustment to prevent freezing of the compressed air system. All drain points for the condensate handling system are heated with 24VDC heaters, which are integral to the compressor heater system.

Standard Non–Louvered configuration not to be operated below freezing.

IQ System Operating Instructions – 2

The compressed air exits the separator tank through the top cover piping, and can then travel along one of two paths, selectable via manual valving.

One path allows Standard Operation, which bypasses the IQ System, and delivers air quality equivalent to a standard oil–flooded portable compressor. If the IQ System is enabled by proper setting of the selector valve, the compressed air first enters the aftercooler.

The aftercooler is cooled by the incoming compressor package air, which is controlled by movable louvers mounted on the aftercooler (if equipped with low ambient option). At most conditions, the louvers are fully open, and maximum aftercooling is available. The compressed air and condensate (water with a small amount of compressor lubricant) exits the aftercooler and enters the moisture separator, where most of the condensate is removed. The compressed air then flows through two stages of filtration, where the aerosol water and oil is removed down to approximately 0.01 ppm, and all particulates are removed down to 0.01 micron.

At the bottom of the moisture separator and both filters are strainers and constant–bleed orifices, which are sized to allow the maximum flow of condensate while minimizing compressed air loss.

The condensate lines are then piped together, and the condensate is injected at a single point into the engine exhaust piping. The compressed air then travels through the minimum pressure valve, and out through the service air valve. The air pressure gauge on the instrument panel indicates the pressure inside the separator tank. A service air pressure gauge is located inside the front door of the compressor on the filter support.

If the IQ System is bypassed (Standard Operation selected), the delivered air pressure will be approximately equal to the separator tank pressure. If the IQ System operation is selected, the delivered air pressure will be slightly less, depending on the restriction of the filters.

Low Ambient Option Operation

When the ambient temperature falls to the point that the aftercooler outlet temperature is approaching 45°F (7°C), the Temperature Control Unit (TCU), mounted on the rear of the control panel, will automatically adjust the louvers to control the cooling airflow through the aftercooler.

In the event that the unit is operating under abnormal conditions (i.e., an enclosure door open) which would cause excessive cooling of the aftercooler, a temperature sensor in the aftercooler outlet header will signal the TCU to further close the louvers if the compressed air temperature falls to approximately 36°F (2°C) or lower.

There are no user selectable or serviceable components in the TCU. Contact Ingersoll–Rand Service if any abnormal operation of the freeze protection control system occurs.

Maintenance

Daily Maintenance:

Verify, during full–load (maximum compressed air delivery) that the IQ System filter restriction indicators do not show excessive restriction. Restriction indicators for the filters are mounted inside the control panel, and will shut down the compressor if restriction exceeds recommended values.

Weekly Maintenance:

- Remove Y-strainer screens at the bottom of the moisture separator and both filters and clean out any residue.
- Verify that the orifices below the Y-strainers are not clogged.
- Verify that the piping from the orifice purge points to the exhaust system is not clogged.

Yearly Maintenance:

The normal maintenance interval on the primary and secondary IQ System filters is one year, or earlier if pressure drop becomes excessive. Restriction indicators for the filters are mounted on the filter support inside the front door, and will shut down the compressor if restriction exceeds recommended values.

Filter Replacement

- With engine stopped, ensure pressure is relieved from air system.
- Remove all wires and hoses connected to drains on bottom of each filter housing. Inspect fittings and hoses for any blockage. Clean if necessary.
- Using a chain wrench or similar tool, loosen the housing. The housing should be removed by hand after loosening, taking care to prevent the housing from falling to the floor panel.
- Lower the housing to floor panel and lean it against the airend. Remove and replace the filter element, being careful not to damage outer wrap.

Verify the part number of new element vs. old element, as the two IQ filters are of different media.

Safety



The compressor regulation system is adjusted to maintain regulated pressure at the separator tank. DO NOT adjust regulation to provide full regulation pressure at the service valve when the IQ System is enabled. This will result in operation at excessive horsepower levels, causing overheating, reduced engine life, and reduced airend life.



Excessively restricted filter elements may cause an increase in the amount of aerosol water and oil carryover, which could result in damage to downstream equipment. Normal service intervals should not be exceeded.

Blockage of the condensate will result in flooding of the vessels. If flooding occurs, excessive condensate may enter the air stream and could result in damage to downstream equipment.



Do not operate at temperatures less that 2°C (36°F) unless equipped with low ambient IQ option.

Always use Ingersoll-Rand Replacement parts!



Parts Ordering



Parts Ordering

<u>General</u>

This publication, which contains an illustrated parts breakdown, has been prepared as an aid in locating those parts which may be required in the maintenance of the unit. All of the compressor parts, listed in the parts breakdown, are manufactured with the same precision as the original equipment. For the greatest protection always insist on genuine Ingersoll–Rand Company parts for your compressor.



Ingersoll–Rand Company can bear no responsibility for injury or damages resulting directly from the use of non–approved repair parts.

Ingersoll–Rand Company service facilities and parts are available worldwide. There are Ingersoll–Rand Company Construction Equipment Group Sales Offices and authorized distributors located in the principle cities of the United States. In Canada our customers are serviced by the Canadian Ingersoll–Rand Company, Limited. There are also Ingersoll– Rand International autonomous companies and authorized distributors located in the principle cities throughout the free world.

Special order parts may not be included in this manual. Contact the Mocksville Parts Department with the unit serial number for assistance with these special parts.

Description

The illustrated parts breakdown illustrates and lists the various assemblies, subassemblies and detailed parts which make up this particular machine. This covers the standard models and the more popular options that are available.

A series of illustrations show each part distinctly and in location relative to the other parts in the assembly. The part number, the description of the part and the quantity of parts required are shown on each illustration or on adjacent page. The quantities specified are the number of parts used per one assembly and are not necessarily the total number of parts used in the machine. Where no quantity is specified the quantity is assumed to be one.

Each description of a part is based upon the "noun first" method, i.e., the identifying noun or item name is always the first part of the description. The noun name is generally followed by a single descriptive modifier. The descriptive modifier may be followed by words or abbreviations such as upper, lower, inner, outer, front, rear, RH, LH, etc. when they are essential.

In referring to the rear, the front or to either side of the unit, always consider the **drawbar end** of the unit as the **front**. Standing at the rear of the unit facing the drawbar (front) will determine the right and left sides.

Fasteners

Both SAE/inch, ISO/metric hardware have been used in the design and assembly of these units. In the disassembly and reassembly of parts, extreme care must be taken to avoid damaging threads by the use of wrong fasteners. In order to clarify the proper usage and for exact replacement parts, all standard fasteners have been identified by part number, size and description. This will enable a customer to obtain fasteners locally rather than ordering from the factory. These parts are identified in tables that will be found at the rear of the parts illustrations. Any fastener that has not been identified by both part number and size is a specially engineered part that must be ordered by part number to obtain the exact replacement part.

Markings and Decals



Do not paint over safety warnings or instructional decals. If safety warning decals become illegible, immediately order replacements from the factory.

Part numbers for original individual decals and their mounting locations are shown within Parts List Section. These are available as long as a particular model is in production.

Afterwards, service sets of exterior decals and current production safety warning decals are available. Contact the Product Support Group at Mocksville for your particular needs and availability.

How to Use Parts List

- a. Locate the area or system of the compressor in which the desired part is used and find illustration page number.
- b. Locate the desired part on the illustration by visual identification and make note of part number and description.

How to Order

The satisfactory ordering of parts by a purchaser is greatly dependent upon the proper use of all available information.

In order that all avoidable errors may be eliminated, the following instructions are offered as a guide to the purchaser when ordering replacement parts:

- a. Always specify the model number of the unit as shown on the general data decal attached to the unit.
- b. Always specify the serial number of the unit.
- c. Always specify the number of the parts list publication.
- d. Always specify the quantity of parts required.
- e. Always specify the part number, as well as the description of the part, or parts, exactly as it is given on the parts list illustration.

In the event parts are being returned to your nearest sales office, autonomous company or authorized distributor, for inspection or repair, it is important to include the serial number of the unit from which the parts were removed.

Airend Exchange Program

Ingersoll–Rand offers an airend exchange program to benefit portable compressor users.

Consult the Ingersoll–Rand representative for details.

For parts, service or information regarding your local U.S, Latin America or Asia Pacific distributor, please contact:

Facility:	Telephone:	Fax:
Ingersoll–Rand Company 501 Sanford Avenue P.O. Box 868 Mocksville, N.C. 27028	800–633–5206 (US & Canada) 305–222–0835 (Latin America) 65–860–6863 (Asia Pacific)	336–751–1579 (US & Canada) 336–751–4325 (Latin America) 336–751–4325 (Asia Pacific)

Office hours: Monday - Friday 8:00 a.m. to 5:30 p.m. (EST)

For information on how to order parts or information regarding your local distributor (Europe, Middle East, Africa) please contact:

Facility:	
Portable Power Aftermarket ESA Ingersoll–Rand European Sales Ltd	Telephone: +44 (0) 1942 257 171
Swan Lane, Hindley Green Wigan WN2 4 EZ	Emergency order telephone # +44 (0) 777 617 0921
United Kingdom	Fax: +44 (0) 1942 523 417

Office hours: Monday - Friday 8:00 a.m. to 4:30 p.m. (GMT)

Always use Ingersoll-Rand Replacement parts!



