


# Users guide and maintenance manual for the generating sets

Model(s) : G16

Control device: M150

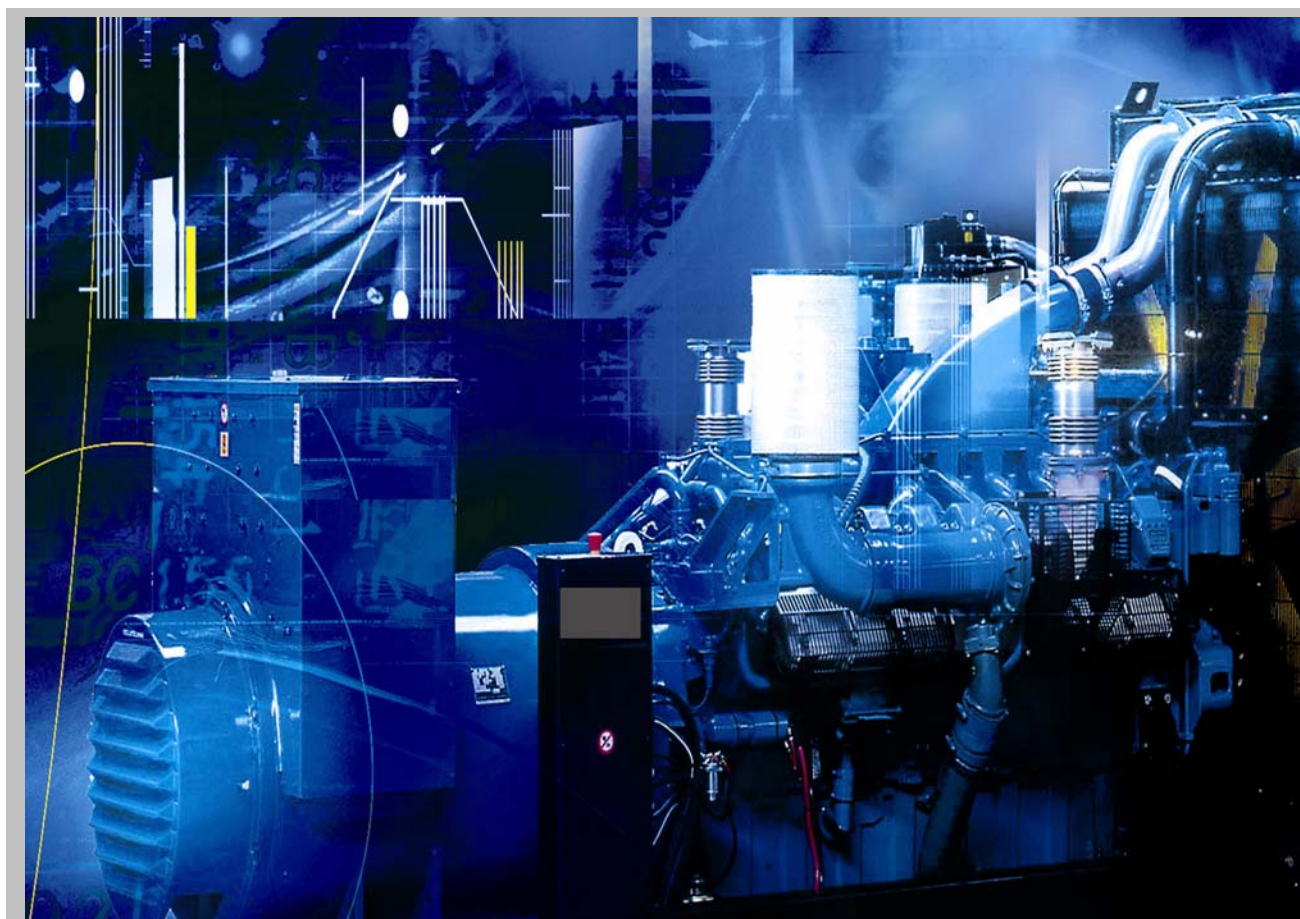

*Doosan purchased Bobcat Company from Ingersoll-Rand Company in 2007. Any reference to Ingersoll-Rand Company or use of trademarks, service marks, logos, or other proprietary identifying marks belonging to Ingersoll-Rand Company in this manual is historical or nominative in nature, and is not meant to suggest a current affiliation between Ingersoll-Rand Company and Doosan Company or the products of either.*

Réf. constructeur : 33501165301

Réf. GPAO : 33501165301NE

Revised (10-12)





# Users guide and maintenance manual

All generating sets  
General considerations  
Safety instructions

Réf. constructeur : MUE-IR A

Réf. GPAO : 33522051901

|   |           |
|---|-----------|
| <b>1. Preamble.....</b>                                       | <b>4</b>  |
| <b>1.1. Introduction .....</b>                                | <b>4</b>  |
| 1.1.1 General recommendations .....                           | 4         |
| 1.1.2. Structure of the reference material .....              | 5         |
| <b>1.2. Pictograms and their meanings.....</b>                | <b>5</b>  |
| <b>1.3. Safety instructions and regulations .....</b>         | <b>7</b>  |
| 1.3.1 General advice.....                                     | 7         |
| 1.3.2 Risks related to feed gas (concerns gas sets).....      | 9         |
| 1.3.3 Risks related to exhaust gases and fuels.....           | 9         |
| 1.3.4 Risks related to toxic products .....                   | 10        |
| 1.3.5 Risk of fire, burns and explosion .....                 | 10        |
| 1.3.6 Risks related to electrical networks.....               | 11        |
| 1.3.7 Dangers presented by electric currents (first aid)..... | 12        |
| 1.3.8 Risks related to moving the set .....                   | 12        |
| 1.3.9 Recommendation for the operator and environment.....    | 13        |
| <b>1.4. Identifying sets.....</b>                             | <b>14</b> |
| <b>2. Installation.....</b>                                   | <b>16</b> |
| <b>2.1. Unloading .....</b>                                   | <b>16</b> |
| 2.1.1 Safety during unloading .....                           | 16        |
| 2.1.2 Example of material .....                               | 16        |
| 2.1.3 Instructions for unloading .....                        | 16        |
| 2.1.3.1 Slings.....   | 16        |
| 2.1.3.2 Fork lift truck .....                                 | 17        |
| <b>3. Installation of mobile site sets.....</b>               | <b>18</b> |
| <b>3.1 Specific arrangements.....</b>                         | <b>18</b> |
| <b>4. Road trailer.....</b>                                   | <b>19</b> |
| <b>4.1 Trailer linkage .....</b>                              | <b>19</b> |
| <b>4.2 Check before towing.....</b>                           | <b>20</b> |
| <b>4.3 Driving.....</b>                                       | <b>20</b> |
| <b>4.4 Unhitching the trailer.....</b>                        | <b>20</b> |
| <b>4.5 Implementation for installation .....</b>              | <b>21</b> |
| <b>5. Battery maintenance.....</b>                            | <b>22</b> |
| <b>6. Fuel and consumables.....</b>                           | <b>23</b> |
| <b>6.1 Circuit capacities – Mitsubishi engines .....</b>      | <b>23</b> |
| <b>6.2 Circuit capacities – John Deere engines.....</b>       | <b>24</b> |
| <b>6.3 Circuit capacities – Volvo engines .....</b>           | <b>25</b> |



### Attached documents

User manual for the control unit

User and maintenance manual for the engine

User and maintenance manual and spare parts catalogue for the alternator

Wiring diagrams (supplied with the electrical generating set)

Genset parts catalog.

# **1. PREAMBLE**

## **1.1. Introduction**

### **1.1.1 General recommendations**

Thank you for choosing an electrical generating set from our company.

This manual has been designed to help you operate and maintain your electrical generating set correctly.

Read the safety instructions carefully in order to prevent any accident, incident or damage. These instructions must always be followed.

In order to obtain optimum efficiency and the longest possible life for the electrical generating sets, maintenance operations must be carried out according to the periods indicated in the attached preventative maintenance tables.

If the electrical generating set is used under dusty or unfavourable conditions, some of these periods will be shorter.

Ensure that all adjustments and repairs are carried out by personnel who have received the appropriate training. The dealers are suitably qualified and can answer all of your questions. They can also supply you with spare parts and other services.

The left and right sides can be seen from the back of the electrical generating set (the radiator is at the front).

Our electrical generating sets have been designed so that damaged or worn parts can be replaced by new or reconditioned parts thereby reducing the out of action period to a minimum.

For all parts replacement, contact your nearest dealer representing our company who will have the necessary equipment and properly trained and informed staff to carry out maintenance, parts replacement and even total reconditioning of generating sets.

Contact your local dealer for the available repair manuals and to make the necessary arrangements for training personnel in implementation and maintenance.

#### **IMPORTANT**

Some user manuals and maintenance manuals for the engines fitted to the electrical generator assemblies include information on the control units and detail the engine starting and stopping procedures.

As the electric generator assemblies are fitted with assembly-specific test and control panels, only the information in the documentation regarding the panels fitted to the assemblies should be taken into consideration.

### 1.1.2. Structure of the reference material

The reference material delivered with the generating sets enables you to get to know the equipment, operate it and maintain it, both on a daily basis and periodically.

The reference material for the engines and alternators fitted to the sets consists of engine user and maintenance manuals (from the manufacturer) and alternator user and maintenance manuals (from the manufacturer).

The reference material contains:

- the user and maintenance manual, containing among other things:
  - o general recommendations and safety regulations to be adhered to
  - o general recommendations for installing generating sets
  - o tables of capacities (lubricants and coolants) and fuel tanks of different engines that may be fitted to the sets according to their configurations
  - o general reference material for maintaining starter batteries
- user and maintenance manual for the engine fitted to the set
- maintenance manual for the alternator fitted to the set
- user manual for the control panel
- wiring diagrams (these diagrams are delivered with the generating set)

### 1.2. Pictograms and their meanings



Warning danger



Warning, risk of electric shock



Warning, toxic materials



Warning, pressurised liquids



Warning, high temperature, risk of burns



Publications delivered with the generating set must be referred to



Protective clothing must be worn



Your eyes and ears must be protected



Periodic maintenance must be carried out



Battery level must be checked



Warning, rotating or moving parts (risk of getting caught in the machinery)



Warning, corrosive product



Warning, risk of explosion



Entry prohibited to non-authorised persons



Power



Earth



Lifting point required



Stacking point required



Naked flames and unprotected lights prohibited.  
No smoking



Exinction by water prohibited



When on a trailer, earth the set before starting it



Emergency cut-out

Application of EU Machine Directive 98/37 of 22 June 1998 in relation to generating sets.

- access restricted to authorised personnel only according to the legislation in force
- live installation: possible automatic start-up.

## 1.3. Safety instructions and regulations

### THESE SAFETY PRECAUTIONS ARE IMPORTANT

If you do not understand or have any questions about any point in this manual, contact your dealer who will explain it to you or give you a demonstration. A list of risks and precautionary measures to take follows. You should also refer to any local and national regulations that apply in accordance with your own jurisdiction.

#### 1.3.1 General advice

- Read and understand the manuals provided with the generating set in full.
  - Do not wear loose clothing and do not go near the machines when operating. Note that the fans are not clearly visible when the engine is running.
  - Warn all people present to keep well back during operation.
- 
- The generating set should always be controlled by an experienced person.
  - Always test the generating set from the control panel.
  - Follow the maintenance table and its directions.
  - Never let anyone else use the generating set without having first given them the necessary instructions.
  - Do not run the engine without having refitted the protective covers.
  - Engine with turbocharger: never start the engine without fitting the air filter. The rotating compressor wheel in the turbocharger can cause severe physical injury. Foreign objects in the intake duct can cause mechanical damage.
  - Engine with air preheating (starter components): never use starter aerosol or similar product as starter assistance.  
When it comes into contact with the starter component, an explosion may occur in the inlet manifold and lead to physical injury.
  - Never let a child touch the generating set, even when not in use. Avoid using the generating set in the presence of animals (can distress the animal).
  - Never start the engine without an air filter or exhaust.
  - Always follow current local regulations regarding generating sets and use of fuel (petrol and gas) before using your generating set.
  - Never use sea water or any other electrolytic or corrosive product in the coolant circuit.



- Disconnect the battery and pneumatic starter (if there is one) before carrying out any repair, to prevent the engine from starting accidentally. Fit a panel over the controls to prevent any attempt at starting.
- Do not modify the engine.
- Only use the correct techniques for turning the crankshaft to rotate the crankshaft manually. Do not try to rotate the crankshaft by pulling or exerting force on the lever on the fan. This method can cause serious physical or material harm or damage the fan blade (s), leading to premature breakdown of the fan.
- Always use tools in good condition. Check that you have understood how to use them before starting a procedure.
- Only fit original spare parts.
- Use tools that correspond to the work being carried out.
- Clean all traces of oil or coolant with a clean cloth.
- Never use petrol or other flammable substances to clean parts. Use only approved cleaning solvents.
- Do not use a high-pressure cleaner for cleaning the engine and fittings. The radiator, hoses, electrical components etc. could be damaged.
- Avoid accidental contact with parts that reach high temperatures (exhaust manifold, exhaust)
- Engage the parking brake when the generating set on its trailer is installed on the operating site.
- When setting on a slope; check that no-one is behind the trailer.
- Protective eyewear must be worn when handling during maintenance operations. Operators should remove watches, chains, etc.

### 1.3.2 Risks related to feed gas (concerns gas sets)

**WARNING – DANGER**

The gas is explosive. It is forbidden to smoke, go near or create sparks when the tank is being filled and near to the generating set.

- Request the user technical notes and LPG or NG safety data sheets from your gas supplier.
- 
- Gas installations must be installed, maintained and repaired by recognised specialists.
- Do not attempt to open, unseal or intervene in gas supply pressure relief valves and on the gas line in general.
- 
- Gas supply procedures must be carried out in fresh air (outside) in accordance with local regulations, in an area well away from fire, people or animals.

### 1.3.3 Risks related to exhaust gases and fuels

**WARNING - DANGER**

generating sets should not be operated in unventilated areas.

- Always follow the local regulations in force regarding generating sets and use of fuel (petrol, diesel and gas) before using your generating set.
- Fuel filling should be carried out when the engine is stopped (except for sets with an automatic filling system)
- Engine exhaust gases are toxic: Do not operate the generating set in non ventilated areas. When installed in a ventilated area, the additional requirements for protection against fire and explosions must be observed.
- If a burnt gas exhaust leaks, the generating set may become more noisy. In order to be sure of its efficiency, you should periodically examine the burnt gas exhaust.
- Pipes must be replaced as soon as their condition requires it.

### 1.3.4 Risks related to toxic products

**WARNING – DANGER**

The corrosion inhibitor contains alkali. This substance should not come into contact with the eyes. Avoid any prolonged or repeated contact with skin. It should not be swallowed. In the event of skin contact, wash thoroughly with water and soap. In the event of contact with eyes, rinse immediately with plenty of water for at least 15 minutes. CALL A DOCTOR IMMEDIATELY. KEEP THE PRODUCT OUT OF THE REACH OF CHILDREN.

The anti-rust product is toxic and dangerous if absorbed. Avoid any contact with skin or eyes. Read the instructions on the packaging.

Glycol is a toxic product and dangerous if absorbed. Avoid any contact with skin or eyes. Read the instructions on the packaging.

- Never expose the equipment to liquid splashes or rainfall, and do not place it on wet ground.
- Always use the recommended fuels. Using low quality fuels risks damaging the engine and altering performance
- The battery electrolyte is harmful to skin and especially eyes. If splashes get into eyes, rinse immediately with running water and/or a 10% diluted boric acid solution.
- Wear protective eyewear and strong base resistant gloves for handling the electrolyte .

### 1.3.5 Risk of fire, burns and explosion

**WARNING – DANGER**

The engine should not be operated in areas containing explosive products. There is a risk of sparks forming where all electrical and mechanical components are not shielded.

- Beware of creating sparks or flames and do not smoke near batteries as the electrolyte gases are highly flammable (especially when the battery is being filled). Their acid is also harmful to the skin and particularly the eyes.
- Never clean, lubricate or adjust an engine when it is in operation ( unless you are qualified to do so, in which case extreme care must be taken to avoid accidents)
- Never make adjustments that you are not familiar with.
- Never cover the generating set with any material while it is working or just after it stops (wait until the engine has cooled)
- Do not touch hot components such as the exhaust pipe and do not put combustible material on them.
- Keep all flammable or explosive products (petrol, oil, cloth, etc.) well away when the set is running.



- Good ventilation is required for your generating set to work properly. Without ventilation, the engine will quickly reach an excessive temperature that could lead to accidents or damage to the equipment and surrounding items.
- Do not take off the radiator cap when the engine is hot and the coolant is pressurised due to risk of burns.
- Depressurise the air, oil and coolant circuits, before removing or disconnecting any unions, ducts or connected components. Be aware of any possible pressure that might be present when disconnecting a device from a pressurised system. Do not look for pressure leaks manually. High pressure oil can cause physical accidents.
- Some preservative oils are flammable. Also, some are dangerous to inhale. Check that ventilation is good. Use a protective mask.
- Hot oil causes burns. Avoid contact with hot oil. Check that the system is no longer pressurised before carrying out any procedures. Never start or run the engine when the oil filling cap is off as oil may be ejected.
- Never start or run the engine when the oil filling cap is off as oil may be ejected.
- Never cover the generating set with a fine layer of oil for anti-rust protection.
- Never fill up the oil or coolant when the generating set is running or when the engine is hot.

### 1.3.6 Risks related to electrical networks

- The electrical equipment supplied with the generating set complies with standard NF C15.100 or the standards of the relevant countries
  - Read the manufacturer's identification plate carefully. The values for voltage, power, current and frequency are shown. Check that these values match the supply use.
  - Never accidentally touch naked wires or disconnected connections.
  - Never handle a generating set with wet hands or feet.
  - Maintain electrical wires and connections in good condition. Using equipment in poor condition can lead to electrocution and damage to equipment.
- 
- Any procedure on the equipment must be carried out voltage free.
  - Electrical connections must be made in accordance with current standards and regulations in the country.
  - Do not use faulty, poorly insulated or provisionally connected wires.
  - Do not invert the positive and negative terminals of batteries when connecting them. Such an inversion can lead to severe damage to the electrical equipment. Follow the wiring diagram supplied by the manufacturer.
  - The generating set should not be connected to any other power sources, such as the public distribution network. In specific cases where there is a reserve connection to existing electrical networks, it must only be carried out by a qualified electrician, who should take the operating differences of the equipment into account, according to whether the public distribution network or generating set is being used.
  - Protection against electric shocks is ensured by an assembly of specific equipment. If this needs to be replaced, it should be by components with identical nominal values and specifications.
  - Due to strict mechanical specifications you should only use flexible resistant rubber sleeved wires, in compliance with CEI 245-4 or equivalent wires.

### 1.3.7 Dangers presented by electric currents (first aid)

#### First aid

In the event of an electric shock, cut off the voltage immediately and activate the set's emergency stop. If the voltage has not yet been cut off, move the victim out of contact with the live conductor as quickly as possible. Avoid direct contact both with the live conductor and the victim's body. Use a dry plank of wood, dry clothes or other non-conductive materials to move the victim away. The live wire may be cut with an axe. Take extreme care to avoid the electric arc that results from this.

#### Begin emergency procedures

#### Resuscitation

If breathing has stopped, begin artificial respiration at once in the same place the accident took place unless the victim or operator's life could be endangered by this.

In the event of cardiac arrest, carry out cardiac massage.

### 1.3.8 Risks related to moving the set

- Use lifting units to lift the generating set. Always make sure that the lifting equipment is in good condition and has a sufficient lifting capacity.
- In order to work in complete safety and prevent the components fitted to the top of the engine from being damaged, the engine should be lifted with an adjustable boom. All chains and cables should be parallel to one another and as perpendicular as possible to the top of the set.
- If other equipment fitted to the generating set alters its centre of gravity, special lifting devices may be required to maintain the correct balance for working in total safety.
- Never carry out work on a generating set that is suspended on a lifting device only.

### 1.3.9 Recommendation for the operator and environment


- Operating personnel should be aware of the safety and operating instructions. These will be regularly updated.
- Operating should be monitored, directly or indirectly, by someone designated by the operator who is familiar with the installation and dangers and problems regarding products stored and used in the installation.
- 
- Manufacturers' notes should be available to technical staff, on site if possible.
- Written operating instructions must be available for operations that involve dangerous handling procedures and driving installations. In particular, these instructions prescribe:
  - o Operating modes
  - o Frequency of testing for safety devices and devices for handling pollution and other harmful substances generated by the installation
  - o Methods for maintenance, checking and use of adjustment equipment and safety devices.
- The presence of dangerous or combustible materials on premises where combustion apparatus is sheltered is limited to what is required for the operation.
- The installations must be operated under the constant supervision of a qualified person. This person should periodically check that the safety devices are working properly and ensure the correct fuel supply to the combustion apparatus.
- Apart from combustion apparatus, flames in any form are prohibited. This should be displayed in bold on a sign.
- Residual water, mud and waste spray is prohibited.
- The fuels to be used should correspond to the ones in the declaration file and the specifications prescribed by the combustion apparatus manufacturer.
- The fuel is considered as being in the physical state that is introduced into the combustion chamber.
- Always protect your hands when detecting leaks. Pressurised fluids can enter body tissues and cause severe harm. Risk of blood poisoning.
- Drain and discard engine oil in a designated container (the fuel distributors can collect your used oil).

## 1.4. Identifying sets

generating sets and their components are identified by means of identification plates.  
The precise rules for identifying each major component (engine, alternator etc.) are set out in each manufacturer's documents contained in this manual.

Examples of identification plates

generating set
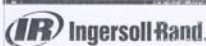
| PLAQUE CONSTRUCTEUR / MANUFACTURER PLATE<br>GROUPE ELECTROGENE / GENERATING SET  |        |   |         |         |         |        |         |       |      |   |   |  |                         |        |    |      |
|--|--------|---|---------|---------|---------|--------|---------|-------|------|---|---|--|-------------------------|--------|----|------|
|   |        | Type  | G200    |         |         |        |         |       |      |   |   |  |                         |        |    |      |
|  |        | Execution                                     | IV      |         |         |        |         |       |      |   |   |  |                         |        |    |      |
|  |        | Version                                       |         |         |         |        |         |       |      |   |   |  |                         |        |    |      |
|  |        | Masse (Kg)<br>Weight                          | 2980    |         |         |        |         |       |      |   |   |  |                         |        |    |      |
| <table border="1"> <thead> <tr> <th>V</th> <th>Hz</th> <th>rpm</th> <th>Cos Phi</th> <th>Phase</th> </tr> </thead> <tbody> <tr> <td>400/230</td> <td>50</td> <td>1500</td> <td>0.8</td> <td>3</td> </tr> </tbody> </table>   |        | V   | Hz      | rpm     | Cos Phi | Phase  | 400/230 | 50    | 1500 | 0.8   | 3 |  |                         |        |    |      |
| V  | Hz     | rpm   | Cos Phi | Phase   |         |        |         |       |      |   |   |  |                         |        |    |      |
| 400/230  | 50     | 1500  | 0.8     | 3       |         |        |         |       |      |   |   |  |                         |        |    |      |
| <table border="1"> <thead> <tr> <th>PRP</th> <th>ESP</th> </tr> </thead> <tbody> <tr> <td>Kva 180</td> <td>198</td> </tr> <tr> <td>Kw 144</td> <td>158.4</td> </tr> <tr> <td>A 260</td> <td>286</td> </tr> </tbody> </table> |        | PRP   | ESP     | Kva 180 | 198     | Kw 144 | 158.4   | A 260 | 286  | <table border="1"> <thead> <tr> <th>Ambiance(°C)<br/>Ambiant</th> <th>Alt(m)</th> </tr> </thead> <tbody> <tr> <td>25</td> <td>1000</td> </tr> </tbody> </table> |   |  | Ambiance(°C)<br>Ambiant | Alt(m) | 25 | 1000 |
| PRP  | ESP    |   |         |         |         |        |         |       |      |   |   |  |                         |        |    |      |
| Kva 180  | 198    |   |         |         |         |        |         |       |      |   |   |  |                         |        |    |      |
| Kw 144   | 158.4  |   |         |         |         |        |         |       |      |   |   |  |                         |        |    |      |
| A 260  | 286    |   |         |         |         |        |         |       |      |   |   |  |                         |        |    |      |
| Ambiance(°C)<br>Ambiant  | Alt(m) |   |         |         |         |        |         |       |      |   |   |  |                         |        |    |      |
| 25   | 1000   |   |         |         |         |        |         |       |      |   |   |  |                         |        |    |      |
| Année / Year: 2002   |        | Numéro de Série / Serial Number: 020002009371 |         |         |         |        |         |       |      |   |   |  |                         |        |    |      |
| INGERSOLL-RAND Co. Ltd. - Hindley Green<br>Wigan UK  |        |   |         |         |         |        |         |       |      |   |   |  |                         |        |    |      |

| CEE 84-536 PUISSANCE ACOUSTIQUE / SOUND POWER |  |                 |  |
|---|--|-----------------|--|
| L <sub>WA</sub>                               |  | 98.5            |  |
| Numéro Homologation                           |  | M216.6068HF160. |  |

| PRESSION ACOUSTIQUE / SOUND PRESSURE |       |      |     |      |
|--------------------------------------|-------|------|-----|------|
| dB(A)                                |       | 1 m  | 7 m | 15 m |
|                                      | 50 HZ | 80.5 | 71  | 67   |
|                                      | 60 HZ | 87   | 77  | 73   |

|                |  |
|----------------|--|
| 020002009371   |  |
| INGERSOLL-RAND |  |
| 020002009371   |  |
| INGERSOLL-RAND |  |

|              |              |
|--------------|--------------|
| S/N          | 020002009371 |
| TYPE         | G200         |
| Année / Year | 2002         |

Engines

| JOHN DEERE                                      |                  |
|---|------------------|
| Engine Serial Number                            |                  |
| *CD4045T123456*                                 |                  |
| CD4045TF150                                     | Abs. Coeff. X.XX |
| DEERE & COMPANY MOLINE, ILLINOIS MADE IN FRANCE |                  |


  

| VOLVO PENTA                       |                 |
|-----------------------------------|-----------------|
| ENGINE MODEL                      | XXXXXXXX        |
| SPEC. NO.                         | XXXXXX          |
| SERIAL NO.                        | XXXXXXXXXX      |
| RATED NET POWER without fan kW/hp | XXX/XXX         |
| with fan kW/hp                    | XXX/XXX         |
| SPEED AT RATED POWER rpm          | XXXX            |
| PRELIFT mm/INJ. TIMING            | X,X+X,X/XX±X,X° |
| MADE IN SWEDEN 3826077            |                 |

# Alternator


**ALTERNATEURS PARTNER ALTERNATORS**

|                            |                  |                   |       |
|----------------------------|------------------|-------------------|-------|
| LSA                        | 44.2S7 C 6/4     | Date              | 01/14 |
| N°                         | 117204 / 9       |                   | 60 Hz |
| Min-1/R.P.M.               | 1800             | Protection        | IP23  |
| Cos Ø / P.F.               | 0,8              | Cl.ther./Th.class | H     |
| Régulateur/A.V.R.          | R438 LS/C        | AREP              |       |
| Altit. < 1000m             | Masse/Weight     | 440 Kg            |       |
| Rlt AV/D.E bearing         |                  |                   |       |
| Rlt AR/N.D.E bearing       | 6309 2RS         |                   |       |
| Graisse/Grease             | Ecco UNIREX N3   |                   |       |
| Valeurs excit/Excit.values |                  | 480 V / 40°C      |       |
| on charge / full load      | 17,78 V / 3,84 A |                   |       |
| à vide / at no load        | 0,95 A           |                   |       |

| PUISSANCE / RATING |   |   |  |   |   |         |
|--------------------|---|---|--|---|---|---------|
| Tension Voltage    | 480   | 440   | 415  | 240   | 208   | 240 V   |
| Phase              | 3   | 3   | 3  | 3   | 3   | 1       |
| Conn.              |  |  |  |  |  | ZZ      |
| Cont.              | 150   | 135   | 130  | 150   | 130   | 78 kVA  |
| Base               | 120   | 108   | 104  | 120   | 104   | 62.4 KW |
| 40°C               | 180   | 177   | 180  | 361   | 361   | 325 A   |
| Secours            | 155   | 150   | 144  | 165   | 144   | 87 kVA  |
| Std by             | 132   | 120   | 115  | 132   | 115   | 69.6 KW |
| 27°C               | 198   | 197   | 200  | 397   | 400   | 363 A   |



LR 57008



Conforme à C.E.I 34-1(1994). According to I.E.C 34-1(1994).

Made by Leroy-Somer - 1 024 93046

## **2. INSTALLATION**

### **2.1. Unloading**

#### **2.1.1 Safety during unloading**

In order to unload generating sets from their transport mountings, under optimum conditions of safety and efficiency, you should check that the following points are being followed correctly.

- Suitable lifting vehicles or equipment for the work.
- Slings positioned in the rings provided for this procedure or lifting arms resting fully underneath the frame cross beams.
- Suitable ground to accommodate the load of the set and lifting vehicle, without strain (if not, put down sufficiently strong and stable boards).

Remove the set as close as possible to its place of use or transport, in a clear space with free access.

#### **2.1.2 Example of material**

- crane, slings, lifting beam, safety hook, shackles.
- fork lift truck.

#### **2.1.3 Instructions for unloading**

##### **2.1.3.1 Slings**


- attach the lifting vehicle slings to the rings on the generating set designed for this procedure.
- hang the slings carefully.
- check that the slings are correctly attached and the equipment is solid.
- lift the generating set carefully.
- direct and stabilise the set towards the chosen position.
- carefully set down the equipment while continuing to position it.
- release the slings, then detach and remove the lifting rings.

### 2.1.3.2 Fork lift truck

- position the arms of the fork lift under the frame, making sure that only the cross beams are resting on the arms.
- lift and handle the equipment carefully.
- set down the generating set in its unloading position.



It is recommended to use a fork lift truck with arms that are longer than the width of the frame

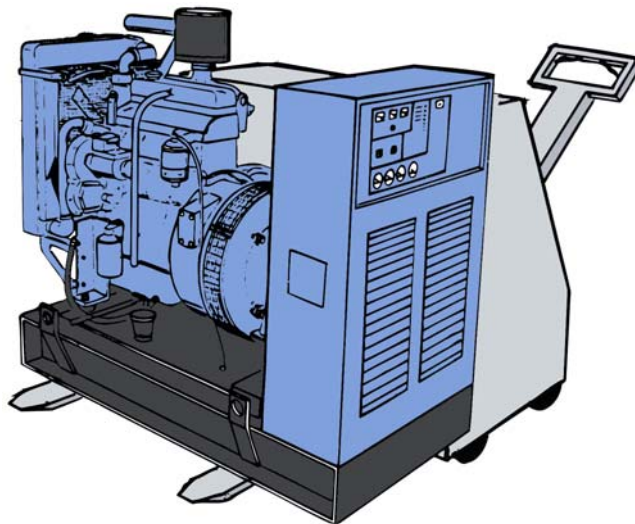

### 3. INSTALLATION OF MOBILE SITE SETS

#### 3.1 Specific arrangements

An area will be reserved to install the generating set. Its should be flat and strong enough so that the generator does not sink into it. It could be made of concrete or even large planks fitted together.

It should be noted that a generating set that does not rest correctly on its base (frame or trailer) will be subject to vibrations that could cause damage to all the equipment.

The location of the set on site should be chosen for ease of fuel supply and distribution of current to the users.

Access to the set's doors should be available at all times for safety and maintenance reasons. Ventilation of the generating set should not be affected if there are different objects close by. It will cause abnormal heating and reduced power.

Burnt gas evacuation will take place in such a way that there is no reaspiration into the air filter or cooling system.

The generating set's neutral speed must be used to protect people.

Earthing is carried out using a metal post buried deeply in the ground.

These sets are to be covered or protected from bad weather by a suitable construction (see previous sections).

Examples of problems that may be encountered :




Incorrect exhaust and ventilation




Ground too uneven or soft.  
Set incorrectly positioned



Reduced access

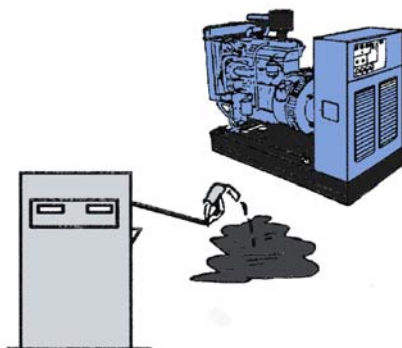

Fuel filling impossible

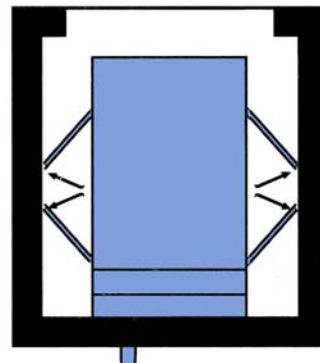

Opening cover doors impossible



## 4. ROAD TRAILER

### 4.1 Trailer linkage

Before attaching the trailer, check the trailer hook on the tow vehicle; it should fit the trailer ring perfectly.

#### **WARNING – DANGER**





Trying to tow a trailer with a non-matching device (bar, wires, cords, etc.) could lead to serious accidents.

Also check:

- no incipient fractures or excessive wear on the hitching system.
- locking system is operating properly

To hitch the trailer, proceed as follows:

- lock the wheels to stop the trailer from moving
- lift up the rear trailer supports and lock them
- release the parking brake
- release the locking levers for the draw bar arms and adjust the ring to the same height as the vehicle hook
- hitch the trailer, remove the locks on each side of the wheels then lift up the front wheel fully using its handle
- connect the electrical circuit of the trailer to that of the tow vehicle
- hook the handbrake safety wire onto the hook on the tow vehicle.

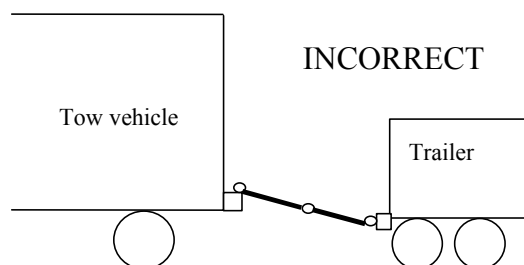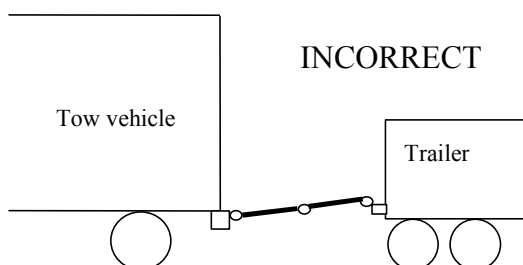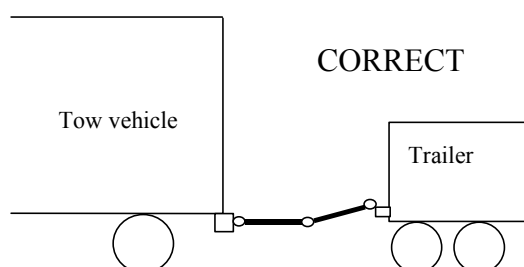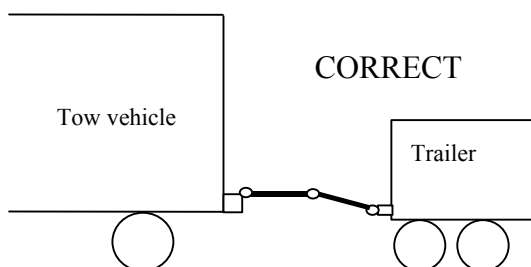

## 4.2 Check before towing

Before towing carry out the following checks:

- wheel torquing
- lock trailer hook
- tyre pressure
- light signals working
- cover doors closed
- parking brake off
- front wheels and rear supports lifted.
- tightening and fixing the draw bar arms locking levers
- brake test for "road" type trailers
- fitting brake safety cable.

## 4.3 Driving

- "On-site" type trailer

These trailers are not fitted with a main brake and so cannot brake when operating; the tyres are designed for a speed of 17 mph (27 Km/h). Therefore, it is absolutely forbidden to exceed this speed .

- "Road" type trailer

The driving speed should be adapted to road conditions and the trailer handling.

Driving at sustained speed causes tyres to heat up; therefore it is important to stop from time to time to check them. Excessive heating can lead to a blow out and hence a serious accident. When reversing, do not forget to lock the overrun brake.

### NOTE

Particular attention must be paid to wheel torquing on new vehicles. Indeed, during the first few miles, heat build-ups on the wheel hubs and brake drums lead to reduced wheel torquing. It is therefore essential to check the torquing every 6 miles (10 kilometres) until no further loosening is noted.

The torque test should nevertheless be carried out before towing.

## 4.4 Unhitching the trailer

This operation should be carried out on horizontal, flat, stable ground.

- lock the wheels
- lower the front wheel
- disconnect the road signals wire
- refit the hitch using the wheel to release the hook ring from the tow vehicle,
- release the tow vehicle
- engage the handbrake.

## **4.5 Implementation for installation**

Procedures to be carried out:

- check that the ground is strong enough for the assembly not to sink into it
- using the front wheel, position the set as horizontally as possible
- engage the handbrake.
- lower the rear trailer supports and lock them

## 5. BATTERY MAINTENANCE

### WARNING – DANGER

- install the battery so that it has the correct ventilation
- never place the battery close to a flame or fire
- use only insulated tools
- never use sulphuric acid or acid water to top up the electrolyte level.

### PROCEDURE FOR TESTING STARTER BATTERIES

| TEST TYPE   | PROCEDURE          | RESULT   | ACTION   |
|---|--------------------|--|--|
| <b>1</b><br><b>VISUAL INSPECTION</b><br><b>STEP 1</b>                     | TRAY AND TERMINALS | CHECK THAT THE TRAY IS NOT BROKEN, THAT THERE IS NO ELECTROLYTE LEAK AND CHECK THE CONDITION OF THE TERMINALS (DAMAGED, BLACK) | DAMAGE NOTED → REPLACE THE BATTERY<br>NO DAMAGE → CHECK THE ELECTROLYTE LEVEL  |
|   | ELECTROLYTE LEVEL  | BELOW THE PRESCRIBED LEVEL   | ADD WATER UP TO THE PRESCRIBED LEVEL, CHARGE FOR 4-5 HOURS AT 1/10 OF THE NOMINAL CAPACITY THEN CHECK THE ELECTROLYTE DENSITY (step 2) |
|   |                    | PRESCRIBED LEVEL OK  | CHECK THE ELECTROLYTE DENSITY (step 2)   |
|   |                    |  |  |
| <b>2</b><br><b>ELECTROLYTE DENSITY TEST</b><br><b>STEP 2</b>              |                    | < 1.22 kg/l OR VARIATION ABOVE 50 g/l BETWEEN CELLS  | REPLACE THE BATTERY  |
|   |                    | RECHARGE THE BATTERY FULLY   |  |
|   |                    | > 1.22 kg/l  | CARRY OUT QUICK ELECTRICAL PERFORMANCE TESTS (step 3)  |
|   |                    |  |  |
| <b>3</b><br><b>TEST OF QUICK ELECTRICAL PERFORMANCES</b><br><b>STEP 3</b> |                    | CHECK THE BATTERY USING A MIDTRONICS, WEGA OR SIMILAR TYPE OF TESTER   |  |
|   |                    | THE TESTER GIVES A POSITIVE RESULT   | FIT TO OPERATE   |
|   |                    | THE TESTER GIVES A NEGATIVE RESULT   | REPLACE THE BATTERY  |
|   |                    |  |  |

## 6. FUEL AND CONSUMABLES

All specifications (product features) are given in the engine and alternator maintenance manuals attached to this manual.

### 6.1 Circuit capacities – Mitsubishi engines

| Engines<br><br><br><br><br>CIRCUIT<br>AND TANK<br>CAPACITY | S4L2-SD<br>(series SL)     | S4Q2<br>(series SQ) | S4S<br>(series SS) |      |
|--|----------------------------|---------------------|--------------------|------|
|  | MODEL                      | G 16                | G 22               | G 33 |
|  | LUBRICATION<br>(in litres) | 5.4                 | 5.5                | 10   |
|  | COOLING<br>(in litres)     | 4.9                 | 8.1                | 8.9  |
|  | FUEL<br>(in litres)        | 100                 | 100                | 100  |

## 6.2 Circuit capacities – john Deere engines

| Engines<br><br>CIRCUIT<br>AND TANK<br>CAPACITY | 3029TF120 | 4045TF120    | 4045HF120 | 6068TF220 | 6068HF120<br>(153kW@1500rpm) | 6068HF160<br>(183kW@1500rpm) |
|--|-----------|--------------|-----------|-----------|------------------------------|------------------------------|
| MODEL  | G 44      | G 66<br>G 77 | G 110     | G 130     | G 160                        | G 200                        |
| LUBRICATION<br>(in litres)                     | 6         | 13.5         | 13.5      | 21.5      | 21.5                         | 31.5                         |
| COOLING<br>(in litres)                         | 16.1      | 23.6         | 20.2      | 27.3      | 25.8                         | 25.8                         |
| FUEL<br>(in litres)                            | 100       | 175          | 200       | 410       | 410                          | 410                          |

### 6.3 Circuit capacities – Volvo engines

|                                 |         |         |          |          |          |
|---------------------------------|---------|---------|----------|----------|----------|
| ENGINES                         |         |         |          |          |          |
| CIRCUIT<br>AND TANK<br>CAPACITY | TWD 740 | TAD 740 | TAD 1032 | TAD 1242 | TAD 1631 |
| MODEL                           | G 220   | G 270   | G 330    | G 440    | G 550    |
| LUBRICATION<br>(in litres)      | 29      | 29      | 36       | 35       | 64       |
| COOLING<br>(in litres)          | 41.9    | 36.9    | 37.3     | 44       | 64       |
| FUEL<br>(in litres)             | 350     | 700     | 700      | 800      | 800      |









# Instructions for use

M 50  
M150  
A50  
X200  
INS / ATS

Réf. constructeur :

Réf. GPAO : 33502013301

# SAFETY SYMBOLS



Caution : danger



Caution, refer to the publications supplied with the Genset



Caution : risk of electric shock




Protective clothing required.



Caution : toxic substances



Eye and hearings protection necessary

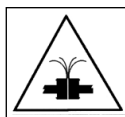


Caution : pressuried fluids




Periodic maintenance required



Caution : high temperature (risk of burning)

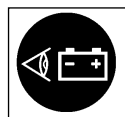

Check battery charge

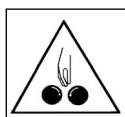


Caution : rotating or moving parts (risk of entanglement)



Recommended Lifting point



Caution : risk of corrosion

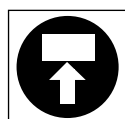

Fork lift stacking point



Caution : risk of explosion




Naked flame and non protected lightning forbidden, no smoking



Authorised personnel only



Do not use water based fire extinguishers

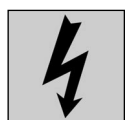

Power



Trailer : link up the earth before starting the generator



Earth




Emergency stop


## MACHINERY DIRECTIVE 98/37/EC INSTRUCTION FOR GENERATING SETS

- Access prohibited to unauthorized personnel
- Live installation, potential automatic starting.


# A50

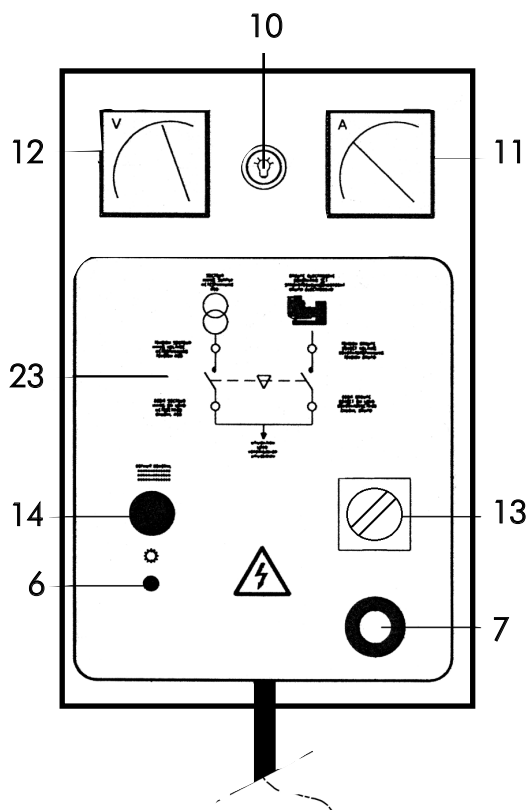


# INS/ATS

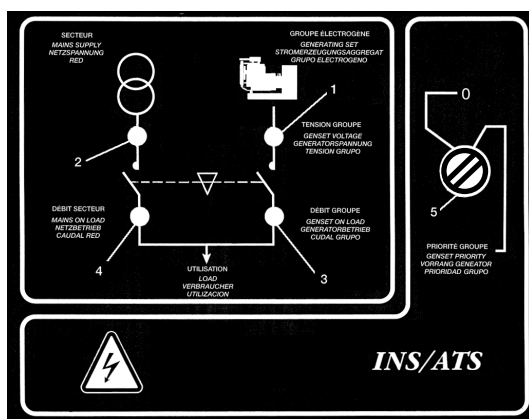


# X200

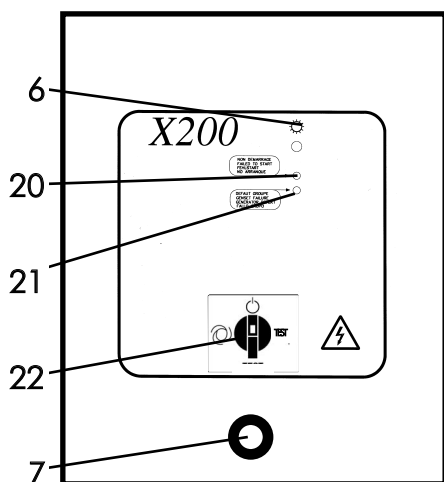

# M50

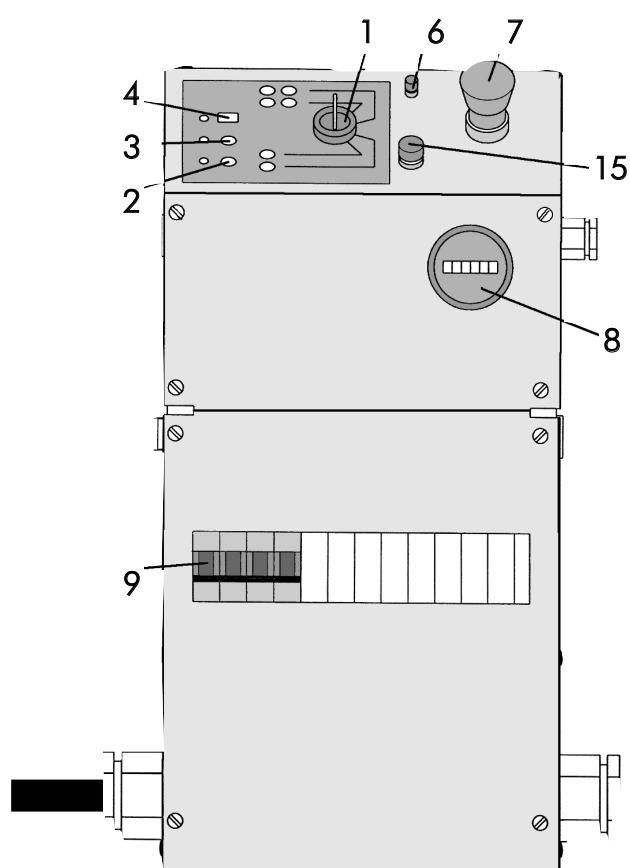

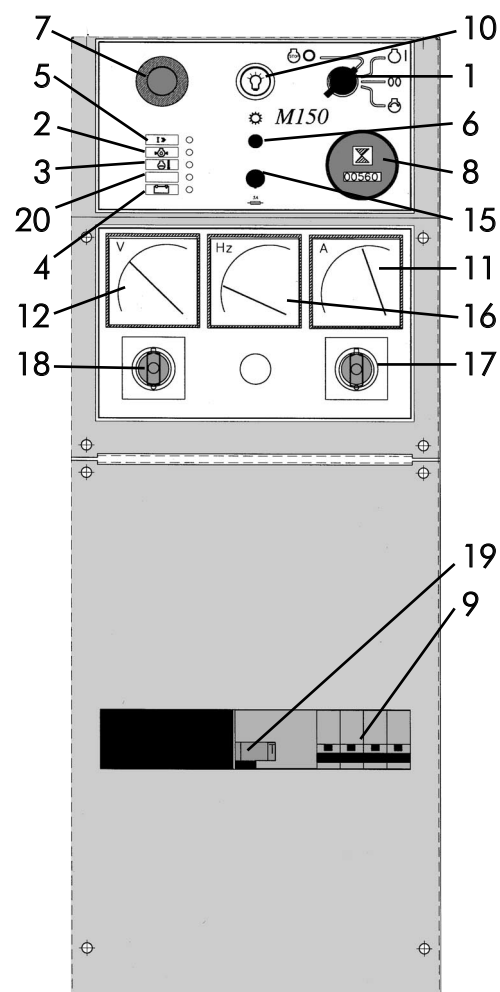


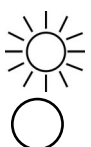


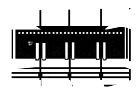

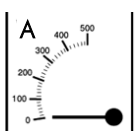


# M150



## A – DESCRIPTION

The manual control panels and the automatic control boxes are equipped with various switchgear and standard indicators. The following figures define the functions of the different switchgear.

- 1  M50 - STARTING AND STOPPING KEY:  
M150
- 2  - OIL PRESSURE WARNING LIGHT (M50-M150):
- 3  - COOLING SYSTEM WARNING LIGHT (M50-M150):
- 4  - VOLTAGE AND CHARGING ALTERNATOR EXCITATION WARNING LIGHT (M50-M150):
- 5  - «OVERCHARGE» WARNING LIGHT (M150):
- 6  - WARNING LIGHTS TEST (M150-A50-X200):
- 7  - EMERGENCY STOP PUSH BUTTON:
- 8  - HOURMETER (M50-M150):
- 9  - CIRCUIT BREAKER (M50 - M150):
- 10  - RACK LIGHTING (A50-M150):
- 11  - AMMETER (M50-M150):

The key has 4 positions :

⊖ : Position of the key when the generator set is not running. It also allows it to be stopped and the clearing of faults.

⊖ I : In this position, the electrical circuit of the generator set is energised (the fuel solenoid valve is energised). The battery charge warning light is on. The battery indicators and voltmeter are energised and indicate the state of the different organs under control.

⊖ II : Certain engines are equipped with cold weather starting aids. The key held on this position for 5 to 20 seconds is necessary before starting.

⊖ III : In this position, the starter is activated ; it turns the motor at a speed allowing starting.

Normally off during running of the generator set, this warning light comes on in the case of an abnormal drop in oil pressure. It indicates an operating incident like lack of oil, a fault with the lubricating system, etc. This fault stops the generating set instantly.

⚠ (The warning light can come on furtively during starting of the generator set.)

Normally off during running of the generator set, this warning light comes on in case of an abnormal rise in engine temperature. It indicates an operating incident like disturbance of airflow, etc. This fault stops the generator set instantly.

Normally off, this warning light comes on in case of a charging incident with the battery(ies) during running of the generator set. For generator sets equipped with a charging alternator, it highlights a fault in the system. This fault does not stop the generator set. During starting of the generator set, this warning light goes off as soon as the alternator has reached an excitation speed of 400 rpm..

Normally off, this warning light comes on when the circuit breaker has disconnected on an overcharge or a short circuit, so freeing the generator from its charge. When this fault arises, it is necessary to limit the charge on disconnecting some appliances or by eliminating the short circuit then re-closing the circuit breaker.

⚠ Trip time user adjustable.

By activating the push button, the warning lights which are normally off light up and signal that they are functioning (except for the battery charge light). The warning light test is always active on the A50 and is active only on position : « ⊖ I » of the X200 operating selection switch. « ⊖ II » of the M50 and M150 starting and stopping switch.

To be pressed in the event of an accident or incident, it instantly stops the running of the generator set and should be unlocked when put back into service.

⚠ : Type push/pull or push/turn

It totals the number of generator set running hours as soon as the starting key is in the « ⊖ I » position.

It interrupts output to the installations in the case of a short circuit or an overcharge or manual activation. In the « ON » position, the power circuit is closed and the generator can supply the installations.


This lights up (if no fault present) :

-the front of box A50 when the operating selection switch is in the auto position and if the order to start is present.

-The front of console M150, when the key is on « ⊖ I ».

It indicates the intensity in amps on a phase.

It indicates the power in Volts supplied by the generator set.

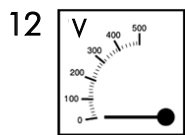

- VOLTMETER (A50-M150):




- OPERATING SELECTION SWITCH (A50):

It allows selection of the operating mode :


-STOP : manual operation from the console M50

-AUTO : automatic operation on external order or lack of mains supply.

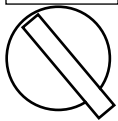

- GENERAL FAULT WARNING LIGHT (A50):

Normally off, this light comes on in case of a fault immobilising the generator set.

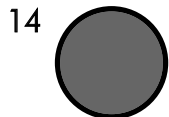


- FUSE (M150):

It protects the remote control circuit against eventual short circuits.




- FREQUENCY METER (M150):

It indicates the frequency in Hertz of the electrical current supplied by the generator set.

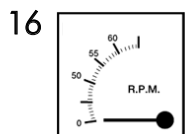


- AMMETER SWITCH (M150):

Its different positions allow reading of the amperage of the current produced by each phase.

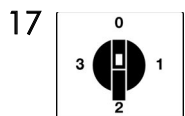


- VOLTMETER SWITCH (M150):

Its different positions allow reading of the voltage on the voltmeter between each phase or between phase and neutral.



- DIFFERENTIAL:

It ensures the safety of people (adjustment 30 mA instantaneous). The neutral rating of the installation should be TT Rating (an adjustment becomes necessary if an adjustable differential relay is used on option).

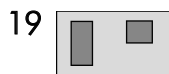


- OPTIONAL WARNING LIGHTS (M150):

These warning lights, normally off, are available for different optional functions.




- FAILED TO START WARNING LIGHT (X200):

Normally off, this light comes on, in the case of an operational fault of the generator set.

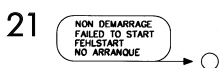

- GENERATOR FAULT WARNING LIGHT (X200):

Normally off, this warning light comes on in case of the presence of an operating fault with the generator.

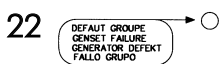


- OPERATING SELECTION SWITCH (X200):

The switch has 3 positions :

⏏ : In this position, the generator set will not start in the event of a mains power cut. The preheating resistance is still energised.


TEST : This operating mode is used for maintenance of the generator set (see manual starting switch).

⏻ : In this operating mode, the generator set is ready to start in the event of a mains power cut and/or an external order. Starting is regulated by a time delay to avoid starting on micro mains power cuts.

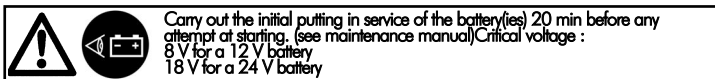

## B – USE

After having carried out the initial putting into service, and the preventive maintenance operation(s), proceed with starting as follows :

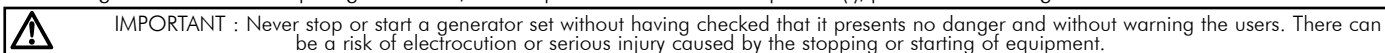

### I – M50 AND M150


#### A) STARTING

- Check that there is no danger of output to installations. I.E. : bare cables in contact, personnel carrying out work on electrical equipment connected to the generator, etc.
- Check that battery voltage is good and that the fuel level is sufficient.
- M50 : Open the circuit breaker in order not to have output to installations.
- M150 : Relieve the equipment without opening the circuit breaker (manual opening of the circuit breaker provokes a fault).
- Turn the switch key clockwise to position « ⏏ ».
- Check that the presence of voltage warning light and excitation of the charging alternator is on.
- Keep turning the key to position « ⏻ » (engine equipped with a starting aid). Remain in this position for 5 to 20 seconds depending on ambient temperature. The lower the temperature, the longer the preheating time (some engines are not equipped with preheating).
- Turn the key to position « ⏻ » and release it as soon as the engine starts ; it automatically returns to the « ⏏ » position.


- Let the generator set run empty for several minutes depending on the ambient temperature.
- M50 : Close the circuit breaker.
- From this moment the generator set is outputting to the installations.

#### B) NORMAL OPERATION

- During operation of the generator set, carry out a regular inspection to ensure there are no anomalies.
- Do not overload the generator set, its power is indicated on the manufacturer's plate. Any overloading could provoke an incident in the short term.

 Operating empty or on low charge is not advised. In case of doubt, consult our after sales service or our agents.

#### C) NORMAL STOPPING



- M50 : Open the circuit breaker and let it run empty for 3 minutes.
- M150 : Relieve the installation (manual opening of the circuit breaker provokes immediate stopping of the engine, with indication from the overcharging warning light) and let it run empty for 3 minutes.\*
- Stop the generator set by turning the key to the «» position.

#### D) EMERGENCY STOPPING

- Press the emergency stop push button in the event of an accident or incident. The engine will stop instantly.


 Do not forget to unlock the emergency stop push button when putting back in service.


#### E) CLEARING FAULTS

- Note the signalled fault and turn the starter switch to «».
- Make repairs and start up in «» mode to check for correct operation.

### II – A50 (connected to M50)

#### A) AUTOMATIC START «AUTO»

- Check that battery charge state is good and that the level of fuel is sufficient.
- Place the starting and stopping switch of the M50 in the «» position.
- Close the M50 circuit breaker.

-  If the circuit breaker closes during operation of the generator set, a general fault will be signalled after 30 seconds (stopping of generator).
- Place the operating selection switch in the «**AUTO**» (A50) position.
- In this position, the generator set is ready to start on shutting down of mains (single phase detection) or on external order. (clock, automaton, etc...).
- Check that the panel light warning light is on with the A50.

#### B) NORMAL STOPPING «STOP»

This position allows stopping of the generator set and the operation of the INS/ATS system and returning to mains supply.  
N.B. : the switch on the mains side will only close if mains power is present again.

#### C) EMERGENCY STOPPING

- Press the emergency stop push button in the event of an accident or incident. The engine will stop instantly.


 Do not forget to unlock the emergency stop push button when putting back in service.



#### D) RESTARTING AFTER STOPPING FOR A FAULT

- Note the fault and turn the operating selection switch to «**STOP**».
- Make repairs and start with the starting key of the M50.
- Then replace the operating selection switch to «**AUTO**» (A50).

### III – X200 (connected to the M150).

#### A) AUTOMATIC STARTING «»

- Check that battery charge state is good and that the level of fuel is sufficient.
- Place the starting and stopping switch of the M150 in the «» position.
- Close the M150 circuit breaker.

-  If the circuit breaker closes during operation of the generator set, a general fault will be signalled immediately.
- Place the operation selection switch in the «» position.
- In this position, the generator set is ready to start on shutting down of mains (mains detection) (three phase optional) or on external order. (clock, automaton, etc...).
- On starting check that the presence of mains voltage warning light is on with the M150.

#### B) OPERATION IN TEST MODE «TEST»

This mode of operation is used for simulating a lack of mains or an external order.

- Place the operating switch in the «**TEST**» position.
- The generator set will start automatically after the preheating plug has had time to operate. (If the preheating plug has been configured on the automatics board).

#### C) STOP «»



This position allows stopping of the generator set and the operation of the ins/ats system and to return to mains supply.  
N.B. : the switch on the «mains» side will only close if mains supply is present again.

#### D) EMERGENCY STOPPING

- Press the emergency stop push button in the event of an accident or incident. The engine will stop instantly.

 Do not forget to unlock the emergency stop push button when putting back in service.

#### E) RESTARTING AFTER STOPPING FOR A FAULT

- Note the fault and turn the operating selection switch to «».
- Make repairs and start with the starting key of the M150.
- Then replace the operating selection switch to «».



## V – REVERSER OF NORMAL/EMERGENCY SOURCES INS/ATS :

The reverser of normal / emergency sources allows the installation to be supplied by the generator set as soon as mains supply disappears. The synoptic allows the display of the presence of mains and generator voltage as well as mains generator output.

Coupled with the M2/3, it allows also, during a mains breakdown, to select a priority generator (see 5).

1 – Presence of generator voltage warning light (White) :

This warning light, when it is on, signals the operation and the presence of voltage from the generator set, which is ready to supply to the installations.

2 – Presence of mains voltage warning light (White) :

This warning light, when it is on, signals the presence of mains voltage.

3 – Generator output warning light (green) :

This warning light, when it is on, signals the closed position of the emergency contactor, therefore output is possible to the installations.

4 – Mains output warning light (green) :

This warning light, when it is on, signals the closed position of the normal contactor, therefore output is possible from the mains to the installation.


5 – Key switch :

This switch allows the selection of 2 modes :

- In the position «priority generator», to force the operation and the output of the generator set to the installations, and that, despite the return of the presence of mains voltage.

i.e. : This manoeuvre is used in the case of frequent and inopportune mains power cuts.


- In the «O» position the output is cut and the operation of the generating set is stopped as soon as mains voltage is restored.

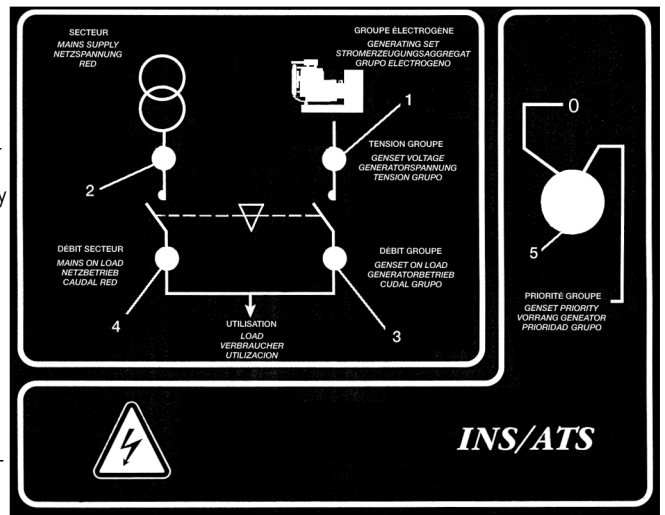

## C) M50 WIRING DIAGRAM


### I – POWER

#### SINGLE PHASE – TNS RATING SINGLE PHASE – TT RATING

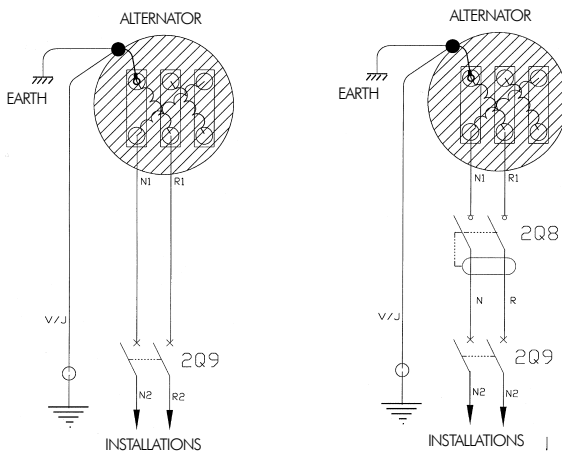


| MARK | DESCRIPTION                | REFERENCE   |
|------|----------------------------|-------------|
| 209  | CIRCUIT BREAKER 2 X 20A    | 31613020703 |
|      | CIRCUIT BREAKER 2 X 25A    | 31613020704 |
|      | CIRCUIT BREAKER 2 X 32A    | 31613020705 |
|      | CIRCUIT BREAKER 2 X 40A    | 31613020706 |
|      | CIRCUIT BREAKER 2 X 50A    | 31613020707 |
|      | CIRCUIT BREAKER 2 X 63A    | 31613020708 |
|      | CIRCUIT BREAKER 2 X 80A    | 31613020709 |
|      | CIRCUIT BREAKER 2 X 100A   | 31613020710 |
| 208  | INTER-DIF 2 x 25A - 30mA   | 31613043001 |
|      | INTER-DIF 2 x 25A - 300mA  | 31613061601 |
|      | INTER-DIF 2 x 40A - 30mA   | 31613043101 |
|      | INTER-DIF 2 x 40A - 300mA  | 31613021701 |
|      | INTER-DIF 2 x 63A - 30mA   | 31613043201 |
|      | INTER-DIF 2 x 63A - 300mA  | 31613061801 |
|      | INTER-DIF 2 x 100A - 30mA  | 31613043302 |
|      | INTER-DIF 2 x 100A - 300mA | 31613061901 |

#### THREE PHASE – TNS RATING THREE PHASE – TT RATING

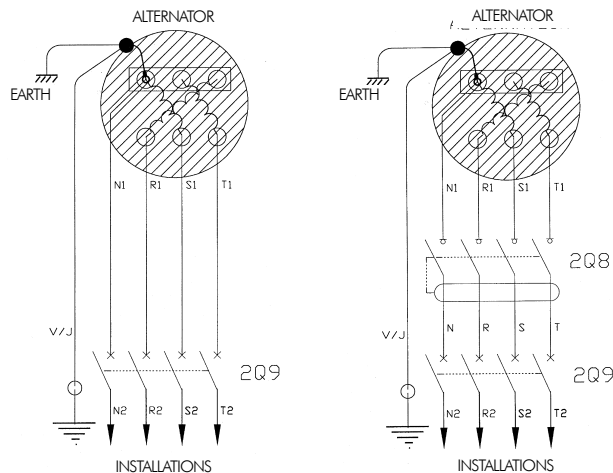


| MARK | DESCRIPTION                | REFERENCE   |
|------|----------------------------|-------------|
| 209  | CIRCUIT BREAKER 4 X 10A    | 31613020711 |
|      | CIRCUIT BREAKER 4 X 16A    | 31613020712 |
|      | CIRCUIT BREAKER 4 X 20A    | 31613020713 |
|      | CIRCUIT BREAKER 4 X 25A    | 31613020714 |
|      | CIRCUIT BREAKER 4 X 32A    | 31613020715 |
|      | CIRCUIT BREAKER 4 X 40A    | 31613020716 |
|      | CIRCUIT BREAKER 4 X 50A    | 31613020717 |
|      | CIRCUIT BREAKER 4 X 63A    | 31613020718 |
|      | CIRCUIT BREAKER 4 X 80A    | 31613020719 |
|      | CIRCUIT BREAKER 4 X 100A   | 31613020720 |
| 208  | CIRCUIT BREAKER 4 X 125A   | 31613020721 |
|      | INTER-DIF 4 x 25A - 30mA   | 31613043401 |
|      | INTER-DIF 4 x 25A - 300mA  | 31613062001 |
|      | INTER-DIF 4 x 40A - 30mA   | 31613043501 |
|      | INTER-DIF 4 x 40A - 300mA  | 31613062101 |
|      | INTER-DIF 4 x 63A - 30mA   | 31613043601 |
|      | INTER-DIF 4 x 63A - 300mA  | 31613062201 |
|      | INTER-DIF 4 x 100A - 30mA  |             |
|      | INTER-DIF 4 x 100A - 300mA | 31613043701 |
|      | INTER-DIF 4 x 125A - 30mA  |             |
|      | INTER-DIF 4 x 125A - 300mA | 31613050701 |

## II - AUTOMATICS

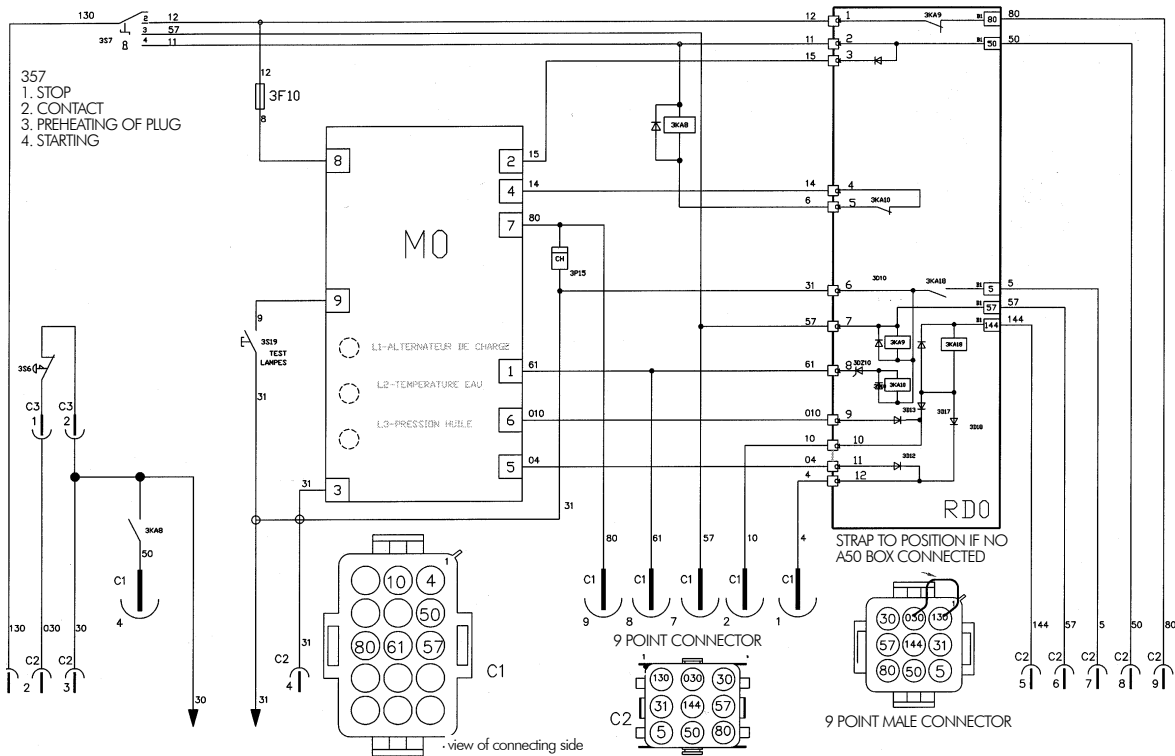

### III – TERMINAL BLOCK A50 CABINET

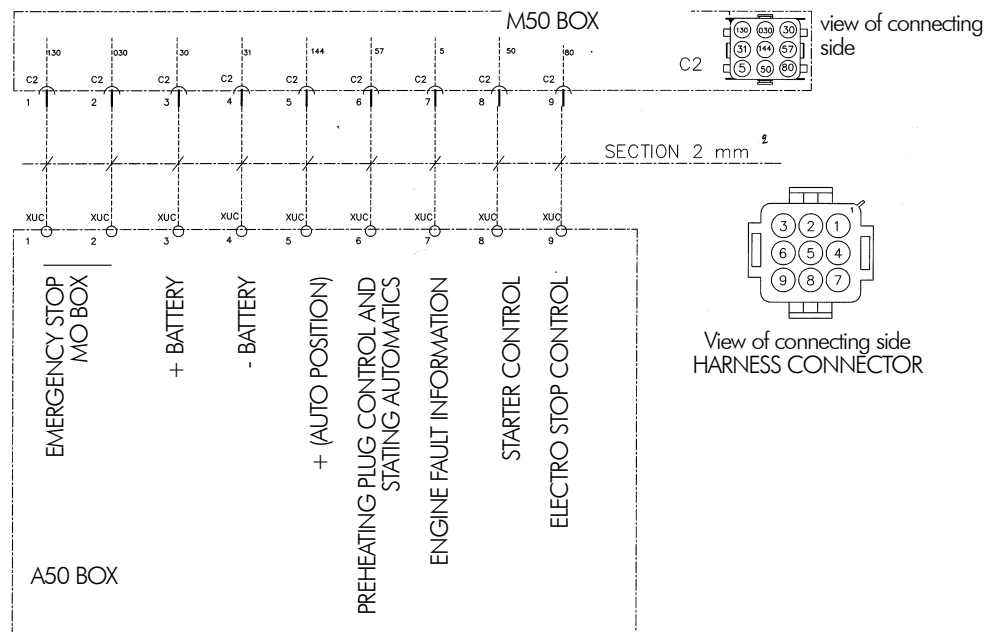

#### IV - NOMENCLATURE

| MARK | DESCRIPTION                        | Qty | REFERENCE     |
|------|------------------------------------|-----|---------------|
| RDO  | RELAY BOARD 12VCC                  | 1   | 3163044701    |
| MO   | SAFETY CARD 12VCC                  | 1   | 3163003801    |
| 3S7  | STARTING SWITCH                    | 1   | 30702001301NE |
| 3KA8 | RELAYS 12VCC / 30A AUTOMOBILE TYPE | 1   | 3163014401    |
|      | RELAY SOCKET                       | 1   | 3163055901    |
| 3P15 | HOURLMETER 12VCC                   | 1   | 3163042801    |
| 3S6  | EMERGENCY STOP BUTTON              | 1   | 3163042701    |
| 3S19 | LIGHTS TEST BUTTON                 | 1   | 3163042901    |
| 3F10 | CUT-OUT 5 X 20 – MOUNTED ON PANEL  | 1   | 3163004001    |
|      | FUSE CARTRIDGE 5X20 - 5A           | 1   | 3163004101    |
| C1   | MALE CONNECTOR – 15 WAY            | 1   | 3163060101    |
| C2   | FEMALE CONNECTOR – 9 WAY           | 1   | 3163057201    |
| C2   | MALE CONNECTOR – 9 WAY             | 1   | 3163057301    |
| C3   | FEMALE CONNECTOR – 2 WAY           | 1   | 163048501     |
| C3   | MALE CONNECTOR – 2 WAY             | 1   | 3163048601    |

## V - WIRING

|  |         |   |
|--|---------|---|
| CIRCUIT POWER  | NEUTRAL | COLOUR  |
|  | PHASE 1 | LIGHT BLUE  |
|  | PHASE 2 | BROWN   |
|  | PHASE 3 | BLACK   |
| ALTERNATING REMOTE CONTROL   | NEUTRAL | LIGHT BLUE  |
|  | PHASE 1 | BROWN   |
|  | PHASE 2 | BLACK   |
|  | PHASE 3 | BLACK   |
| INSULATED ALTERNATING REMOTE CONTROL CIRCUITS NOT CUT-OFF BY BREAKING DEVICE |         | BLACK   |
|  |         | COLOUR IDENTICAL TO DOWNSTREAM CIRCUIT OF THE SWITCH + PREVENTION LABEL |
| DIRECT REMOTE CONTROL  | MINUS   | BLUE  |
|  | PLUS    | RED   |
| EXCITATION OF CHARGING ALTERNATOR TRANSMITTER SIGNAL INTENSIVE CIRCUIT       |         | RED   |
|  |         | BLUE  |
|  |         | ORANGE  |

## D) WIRING DIAGRAM M150-A50-X200-INS/ATS






SCHEMA ELECTRIQUE  
ELECTRICAL DRAWING  
ESQUEMA ELECTRICO  
ESQUEMA ELECTRICO

M150

<=125A

|  |   |          |               |                          |   |
|--|---|----------|---------------|--------------------------|---|
|  |   |          |               |                          |   |
| B  | EVOLUTION...02/10G-02/11F-11/02B-26/01C-26/02C-26/02G44C-26/04C-25/05C-26/06C-26/06G44C-26/08C-26/09C-26/09G44C | 14/04/03 | BG            | 14/04/03                 | BG  |
| A  | FIRST ISSUE   | 19-09-02 | BERGOT Gilles | 19-11-02                 | BERGOT Gilles   |
| IND.   | DESIGNATION DE LA MODIFICATION  | DATE     | VISA          | DATE                     | VISA  |
|  |   | DESSINE  |               | VERIFIE                  |   |
| MATIERE :  |   |          |               | FORMAT : 4               |   |
| REVETEMENT :   |   |          |               | ECHELLE : 1              |   |
| TOLERANCE : JS13/Js13 sauf Indication Particulière   |   |          |               | FOLIO :                  |   |
| DESIGNATION : ELECTRICAL DRAWING<br>PEDESTAL M150 <= 125A INGERSOLL-RAND   |   |          |               | MASSE (Vide/Plein)<br>kg |   |
| 33513001701  |   |          |               |                          |  |
| 12 bis, rue de la Villeneuve 29272 BREST - Tel : 02.98.41.41.41 - Telex : 940757F - Telecopie : 02.98.41.63.07<br>CE PLAN EST LA PROPRIETE DE LA SOCIETE ; IL NE PEUT ETRE REPRODUIT , UTILISE OU COMMUNIQUE SANS SON AUTORISATION |   |          |               |                          |   |

E






















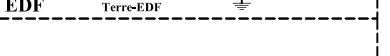

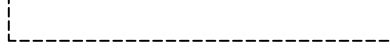

11

|         | FOLIO    | INDICE  | DESIGNATION  | M150                              |   |  |
|---------|----------|---------|--|-----------------------------------|---|--|
| A       | 00-GARDE | B       | PAGE. DE. GARDE                                      |                                   |   |  |
|         | 01/01    | B       | REGIME. DE. NEUTRE. POUR. GROUPES. TRI/TETRA. <=125A | X                                 |   |  |
|         | 01/02    | B       | REGIME. DE. NEUTRE. POUR. GROUPES. MONO/BI. <=125A   | X                                 |   |  |
|         | 02/01    | B       | PUISSANCE. ET. MESURE-4P                             | X                                 |   |  |
|         | 02/02    | B       | PUISSANCE. ET. MESURE-3P-TNC                         | X                                 |   |  |
|         | 02/03    | B       | PUISSANCE. ET. MESURE-3P                             | X                                 |   |  |
|         | 02/04    | B       | PUISSANCE. ET. MESURE-BI-TNC                         | X                                 |   |  |
|         | 02/05    | B       | PUISSANCE. ET. MESURE-MONO                           | X                                 |   |  |
|         | 02/10    | G       | OPTION. PRISES. 110V                                 | X                                 |   |  |
|         | 02/11    | F       | OPTION. PRISES. 110V-CTE                             | X                                 |   |  |
|         | B        | 03/01   | A  | MESURE-TRI/TETRA                  | X |  |
| 03/02   |          | A       | MESURE-2P+N  | X                                 |   |  |
| 03/03   |          | A       | MESURE-1P+N  | X                                 |   |  |
| 04/01   |          | B       | SURVITESSE   | X                                 |   |  |
| 05/03   |          | D       | REGUL. ELECTRONIQUE. GAC                             | X                                 |   |  |
| 05/04   |          | D       | REGUL. ELECTRONIQUE. BARBER. COLMAN                  | X                                 |   |  |
| 09/01   |          | C       | AUTOMATISME. DEMARRAGE. ET. ARRET                    | X                                 |   |  |
| 11/02   |          | C       | RELAIS. DIFFERENTIEL-GROUPE-LOCATION                 | X                                 |   |  |
| 14/03   |          | A       | POMPE-FUEL-TRIPHASÉ....SUR-CUVE                      | X                                 |   |  |
| 20/04   |          | E       | BI-FREQUENCE. 50/60HZ-REGUL. GAC                     | X                                 |   |  |
| 20/05   |          | E       | BI-FREQUENCE. 50/60HZ-REGUL. BARBER. COLMAN          | X                                 |   |  |
| C       | 26/01    | C       | PLASTRON. PRISES-TYPE-1.(PEU)                        | X                                 |   |  |
|         | 26/02    | C       | PLASTRON. PRISES-TYPE-2.(PEU)...G44                  | X                                 |   |  |
|         | 26/02    | C       | PLASTRON. PRISES-TYPE-2.(PEU)...G66->G160            | X                                 |   |  |
|         | 26/04    | C       | PLASTRON. PRISES-TYPE-4.(PFR)                        | X                                 |   |  |
|         | 26/05    | C       | PLASTRON. PRISES-TYPE-5.(PUK)                        | X                                 |   |  |
|         | 26/06    | C       | PLASTRON. PRISES-TYPE-6.(PUK)...G44                  | X                                 |   |  |
|         | 26/06    | C       | PLASTRON. PRISES-TYPE-6.(PUK).G66->G160              | X                                 |   |  |
|         | 26/08    | C       | PLASTRON. PRISES-TYPE-8.(PUK-CTE)                    | X                                 |   |  |
|         | 26/09    | C       | PLASTRON. PRISES-TYPE-9.(PUK-CTE)...G44              | X                                 |   |  |
|         | 26/09    | C       | PLASTRON. PRISES-TYPE-9.(PUK-CTE)....G66->G160       | X                                 |   |  |
|         | D        | MI-S4L2 | C  | CABLAGE. MOTEUR. MITSUBISHI. S4L2 | X |  |
| MI-S4Q2 |          | E       | CABLAGE. MOTEUR. MITSUBISHI. S4Q2                    | X                                 |   |  |
| MI-S4S  |          | E       | CABLAGE. MOTEUR. MITSUBISHI. S4S                     | X                                 |   |  |

[illegible]

EE |

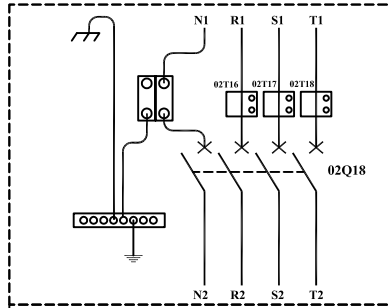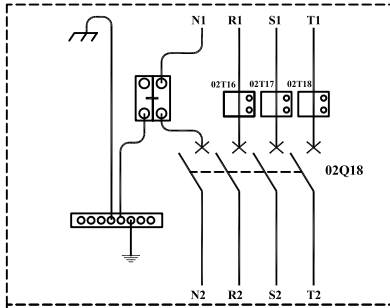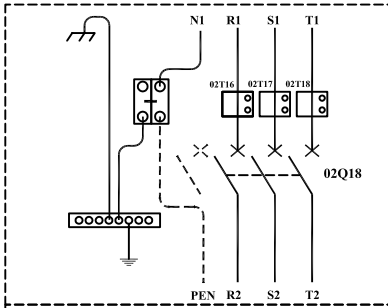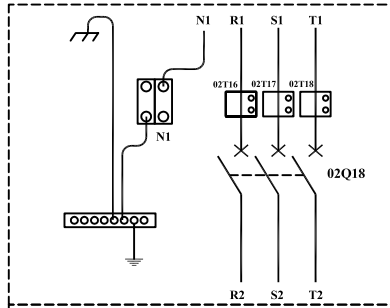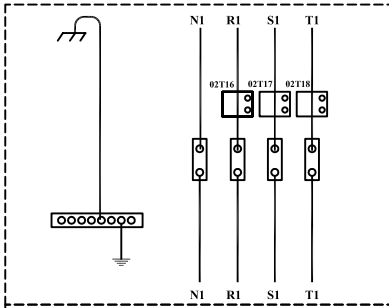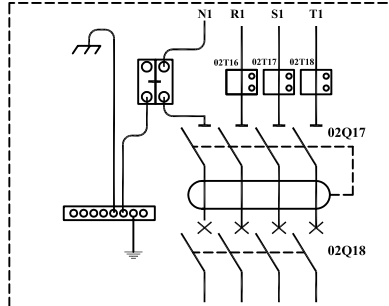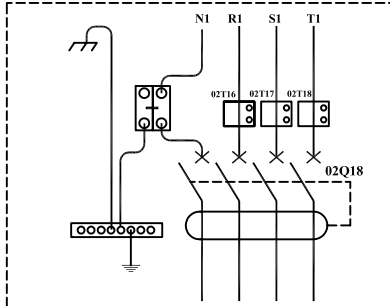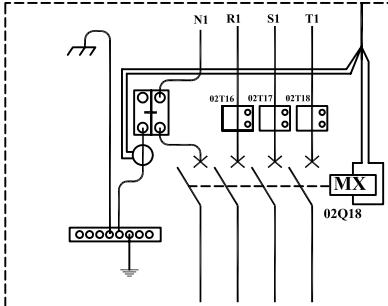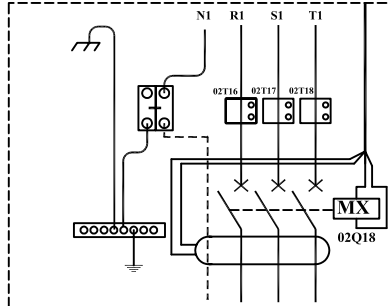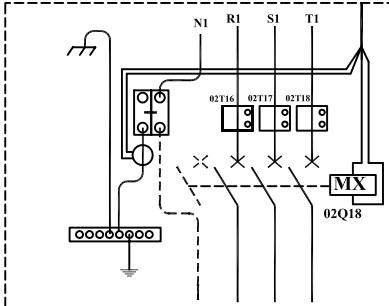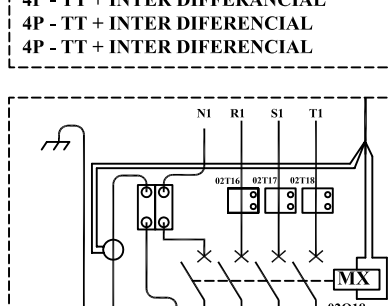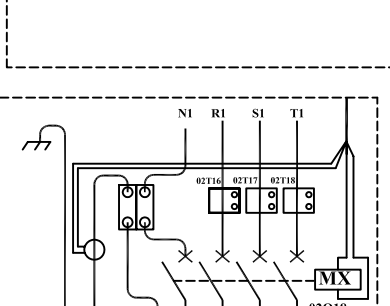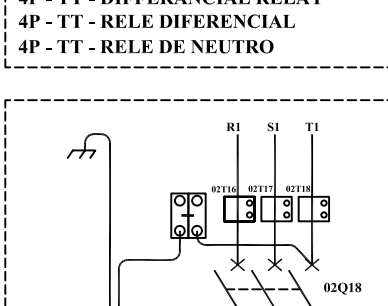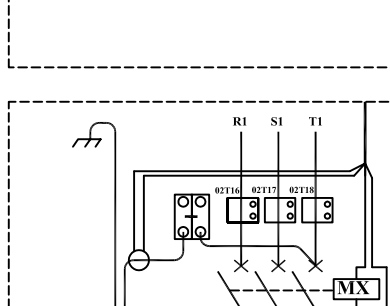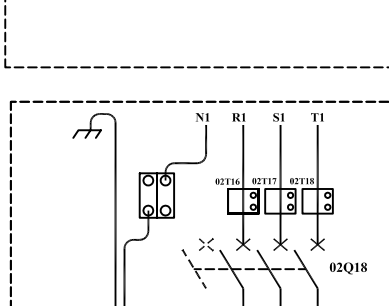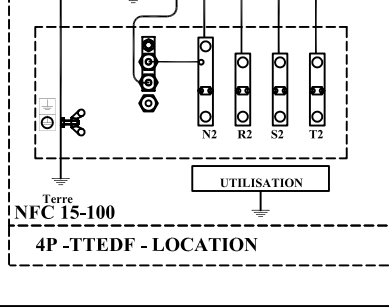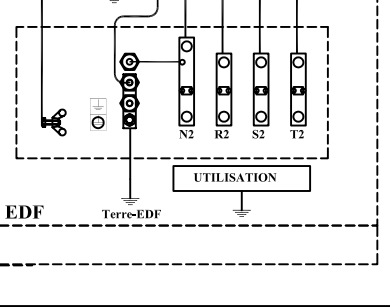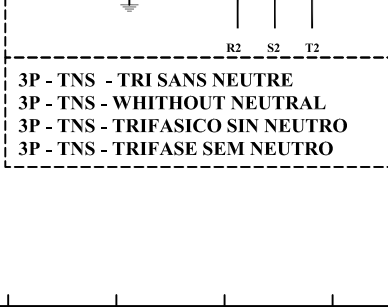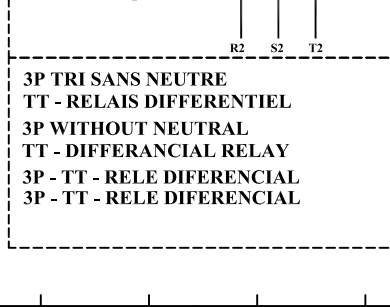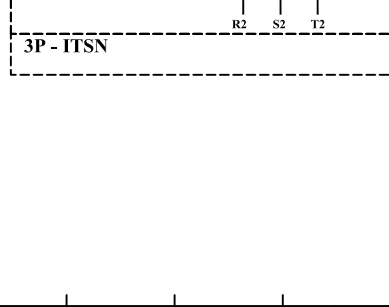

|  |  |    |    |    |   |    |    |    |  |    |    |    |   |    |    |    |  |    |    |    |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |         |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |                   |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |           |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |                |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |
|--|--|----|----|----|---|----|----|----|--|----|----|----|---|----|----|----|--|----|----|----|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|---------|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|-------------------|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|-----------|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|----------------|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|
|  | 00   | 01 | 02 | 03 | 04  | 05 | 06 | 07 | 08   | 09 | 10 | 11 | 12  | 13 | 14 | 15 | 16   | 17 | 18 | 19 |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |         |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |                   |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |           |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |                |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |
| A  |  <p>4P - ITAN</p>   |    |    |    |  <p>4P - TNS</p>                |    |    |    |  <p>3P - TNC</p>  |    |    |    |  <p>3P - TNS - IRLAND</p>   |    |    |    |  <p>4P - AUCUN</p>             |    |    |    | A  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |         |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |                   |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |           |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |                |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |
| B  |  <p>4P - TT + INTER DIFFERENTIEL<br/>4P - TT + INTER DIFFERENCIAL<br/>4P - TT + INTER DIFERENCIAL<br/>4P - TT + INTER DIFERENCIAL</p>  |    |    |    |  <p>4P - TT + VIGI</p>         |    |    |    |  <p>4P - TT - RELAIS DIFFERENTIEL<br/>4P - TT - DIFFERENCIAL RELAY<br/>4P - TT - RELE DIFERENCIAL<br/>4P - TT - RELE DE NEUTRO</p>         |    |    |    |  <p>3P - TNC - RESTRICTED</p>  |    |    |    |  <p>3P -TNC UNRESTRICTED</p>  |    |    |    | B  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |         |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |                   |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |           |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |                |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |
| C  |  <p>4P - TT + INTER DIFFERENTIEL<br/>4P - TT + INTER DIFFERENCIAL<br/>4P - TT + INTER DIFERENCIAL<br/>4P - TT + INTER DIFERENCIAL</p> |    |    |    |  <p>4P - TT + VIGI</p>        |    |    |    |  <p>4P - TT - RELAIS DIFFERENTIEL<br/>4P - TT - DIFFERENCIAL RELAY<br/>4P - TT - RELE DIFERENCIAL<br/>4P - TT - RELE DE NEUTRO</p>        |    |    |    |  <p>3P - TNC - RESTRICTED</p>   |    |    |    |  <p>3P -TNC UNRESTRICTED</p> |    |    |    | C  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |         |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |                   |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |           |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |                |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |
| D  |  <p>4P -TTEDF - LOCATION</p>   |    |    |    |  <p>4P -TTEDF - LOCATION</p> |    |    |    |  <p>3P - TNS - TRI SANS NEUTRE<br/>3P - TNS - WHITHOUT NEUTRAL<br/>3P - TNS - TRIFASICO SIN NEUTRO<br/>3P - TNS - TRIFASE SEM NEUTRO</p> |    |    |    |  <p>3P TRI SANS NEUTRE<br/>TT - RELAIS DIFFERENTIEL<br/>3P WITHOUT NEUTRAL<br/>TT - DIFFERENCIAL RELAY<br/>3P - TT - RELE DIFERENCIAL<br/>3P - TT - RELE DIFERENCIAL</p> |    |    |    |  <p>3P - ITSN</p>           |    |    |    | D  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |         |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |                   |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |           |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |                |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |
| E  |  <p>4P -TTEDF - LOCATION</p>   |    |    |    |  <p>4P -TTEDF - LOCATION</p> |    |    |    |  <p>3P - TNS - TRI SANS NEUTRE<br/>3P - TNS - WHITHOUT NEUTRAL<br/>3P - TNS - TRIFASICO SIN NEUTRO<br/>3P - TNS - TRIFASE SEM NEUTRO</p> |    |    |    |  <p>3P TRI SANS NEUTRE<br/>TT - RELAIS DIFFERENTIEL<br/>3P WITHOUT NEUTRAL<br/>TT - DIFFERENCIAL RELAY<br/>3P - TT - RELE DIFERENCIAL<br/>3P - TT - RELE DIFERENCIAL</p> |    |    |    |  <p>3P - ITSN</p>           |    |    |    | E  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |         |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |                   |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |           |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |                |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |
| DESIGNATION : NEUTRAL.SYSTEM..3P/4P<br>REGIME.DE.NEUTRE..3P/4P |  |    |    |    |   |    |    |    |  |    |    |    |   |    |    |    |  |    |    |    | REGIME.DE.NEUTRO..3P/4P<br>REGIME.DE.NEUTRO..3P/4P |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  | <= 125A |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  | DATE.<br>18/09/02 |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  | IND.<br>B |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  | SHEET<br>01/01 |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |

2P - ITAN


**2P - TNS**


2P+PEN - TNC


2P - TT + INTER DIFFERENTIAL  
2P - TT + INTER DIFFERANCIAL  
2P - TT + INTER DIFERENCIAL  
2P - TT + INTER DIFERENCIAL


**2P - TT + VIGI**


2P - TT - RELAIS DIFFERENTIEL  
2P - TT - DIFFERANCIAL RELAY  
2P - TT - RELE DIFERENCIAL  
2P - TT - RELE DE NEUTRO

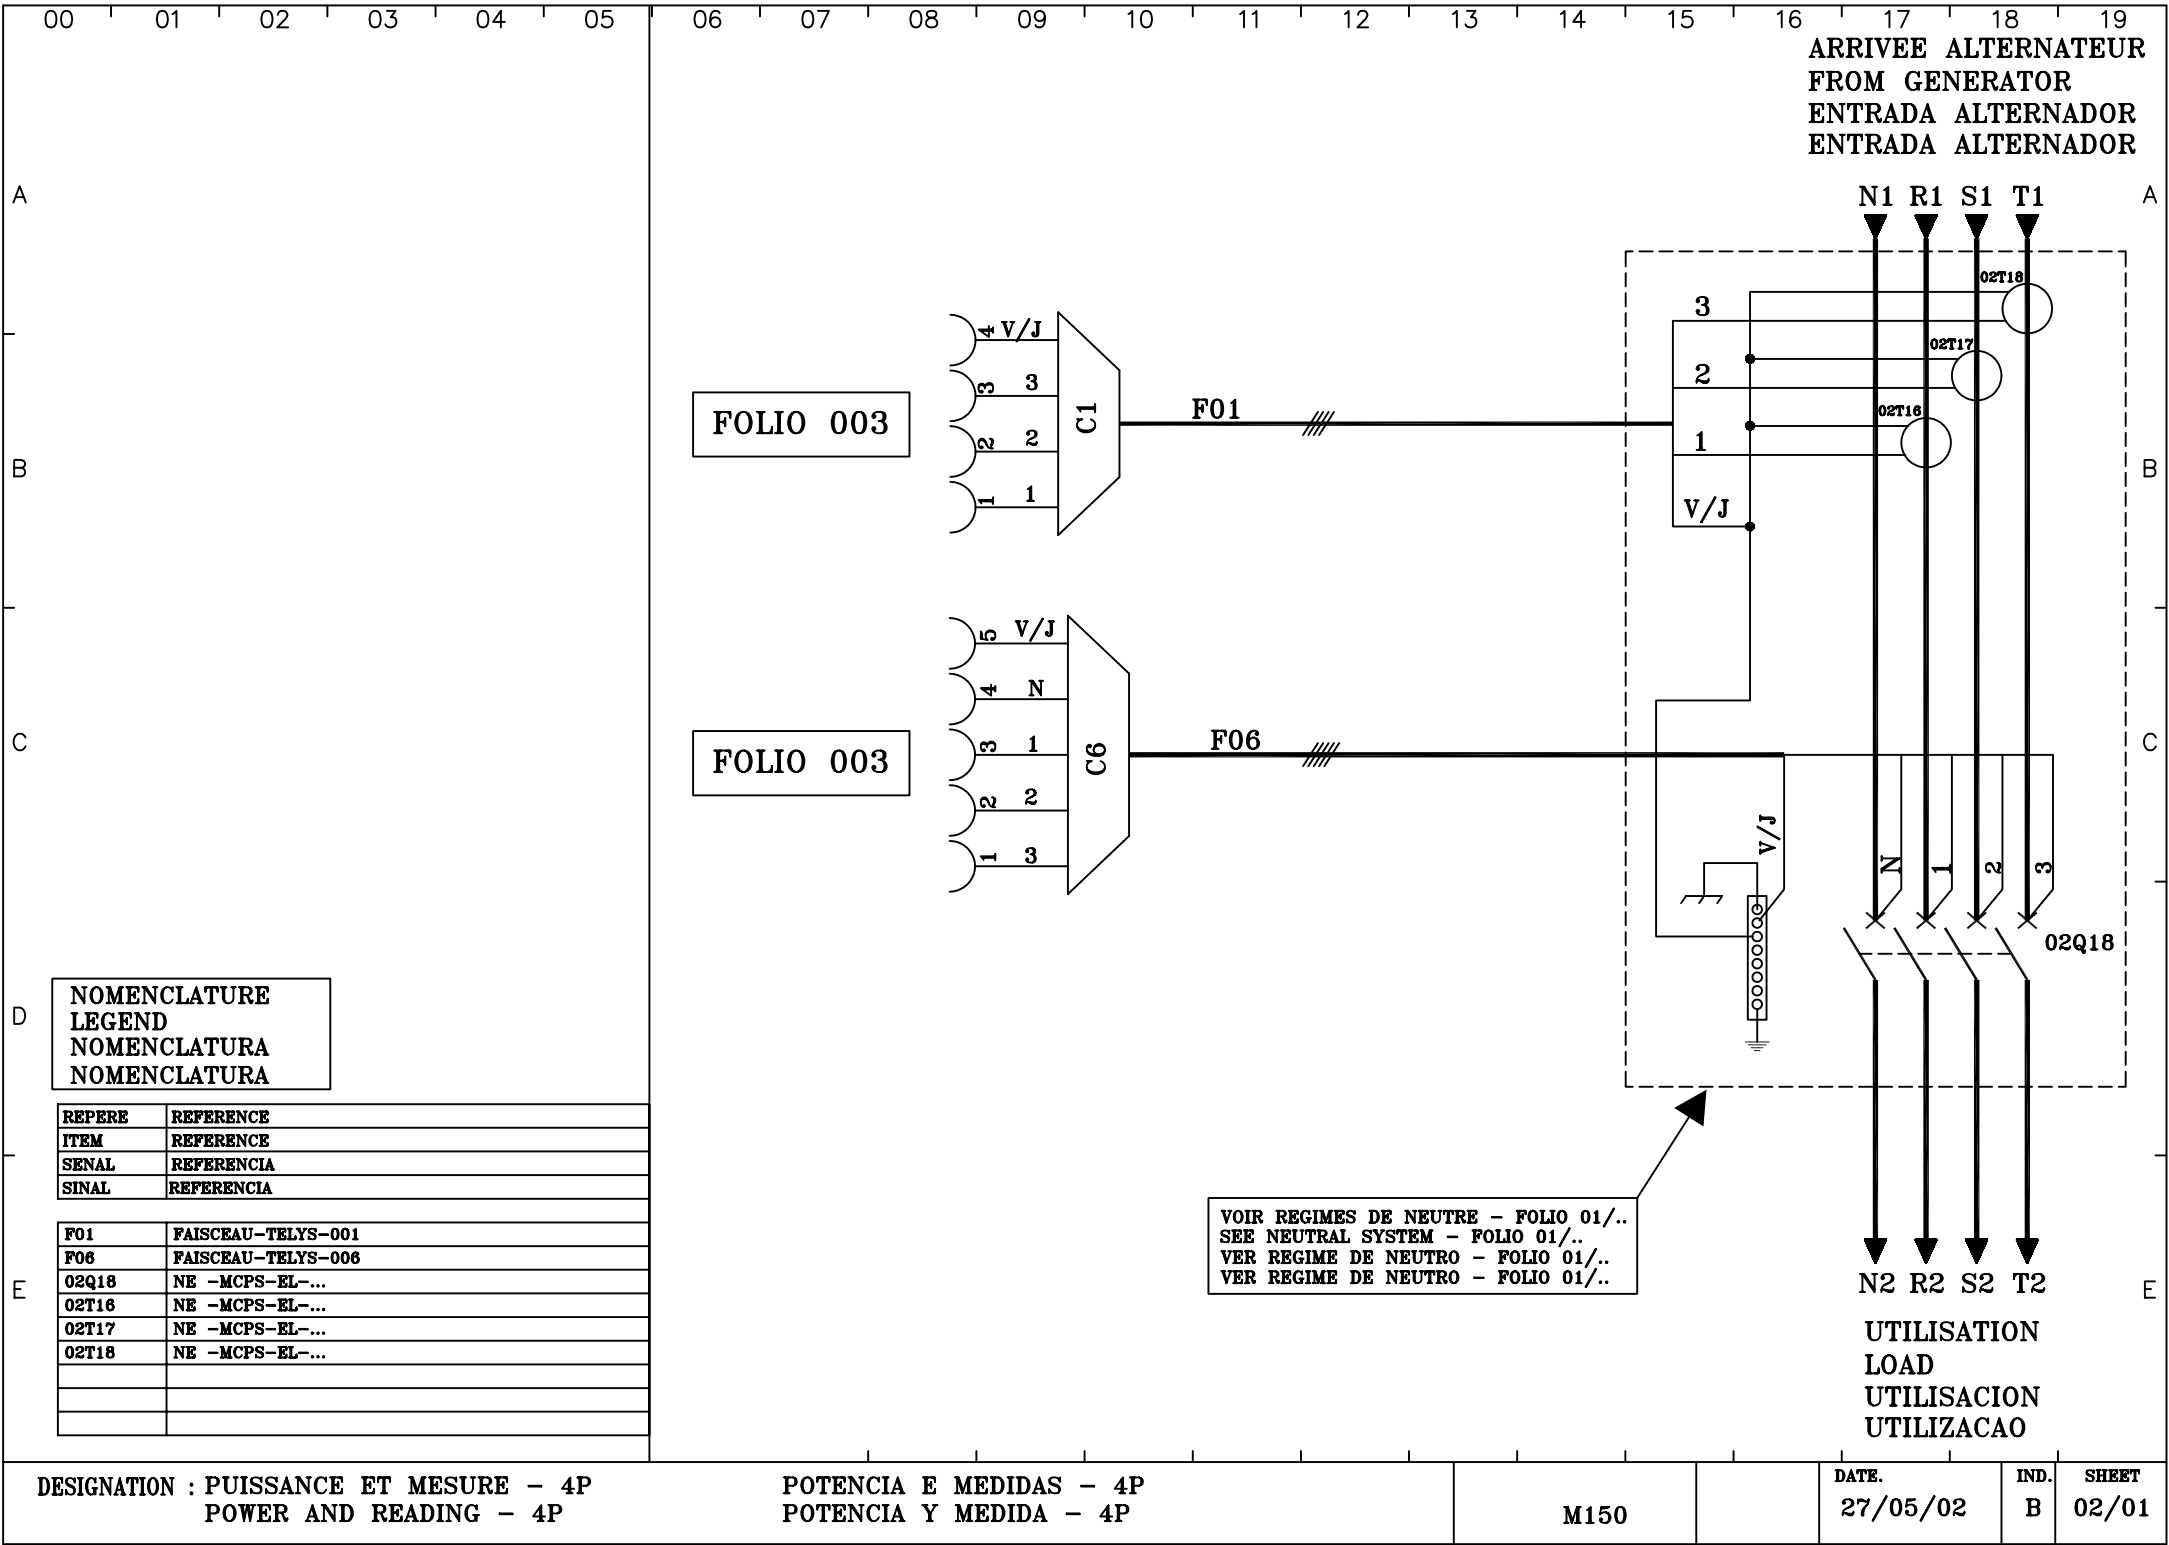

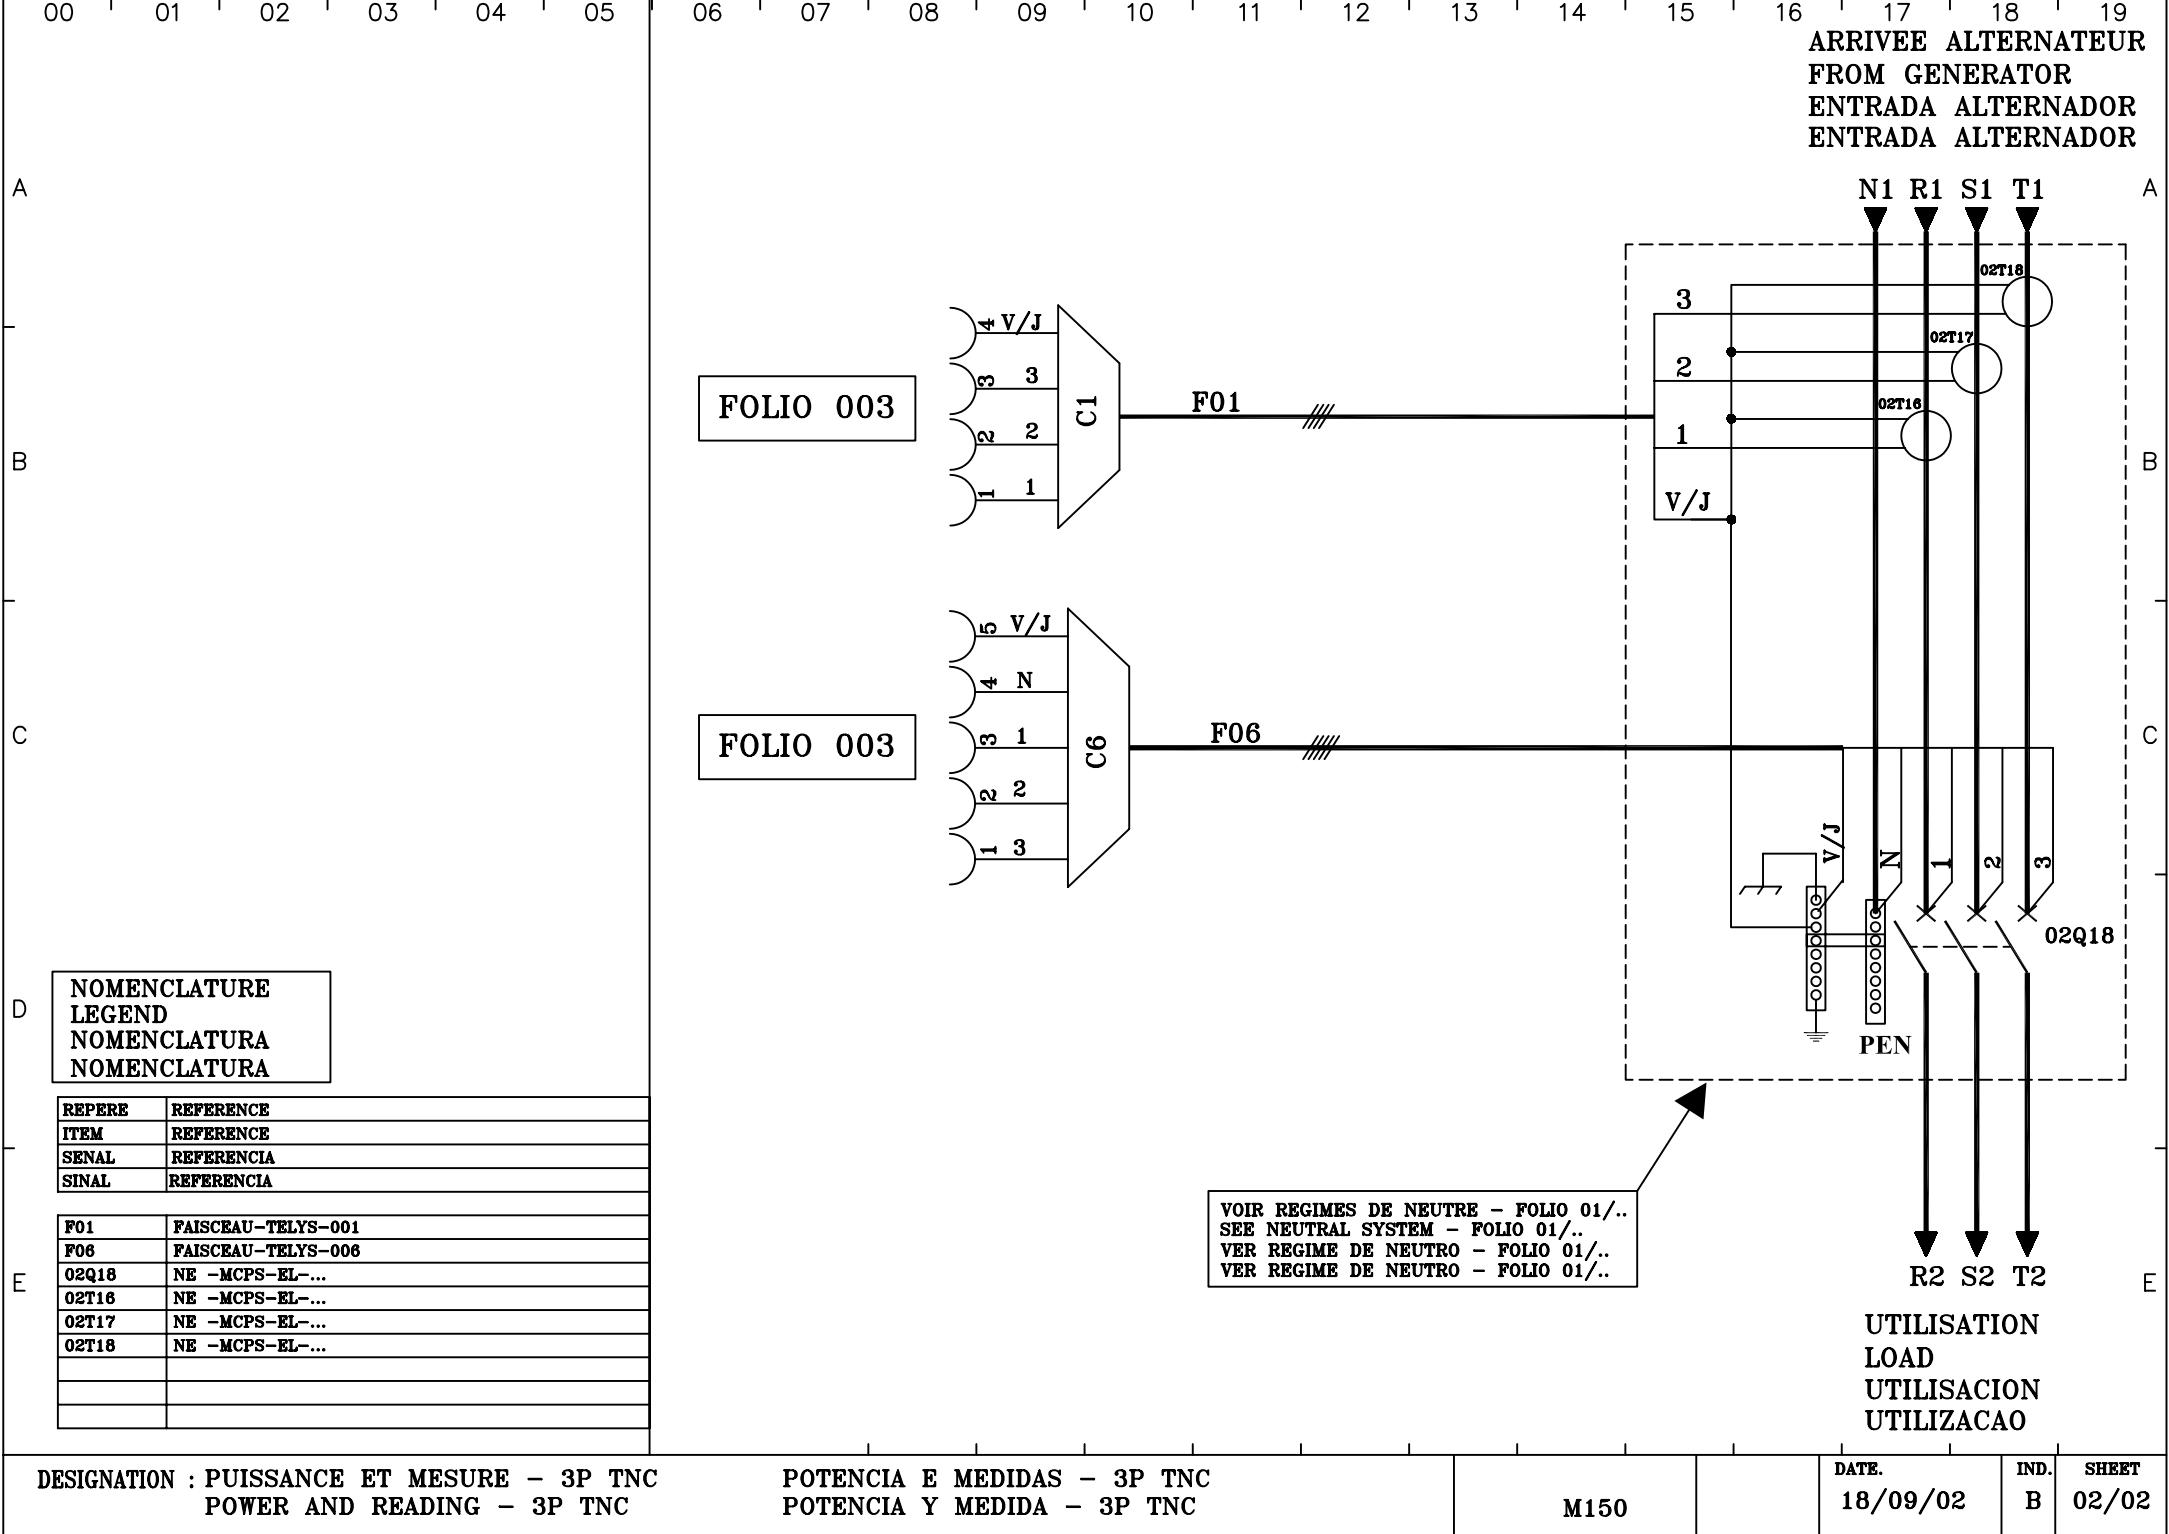

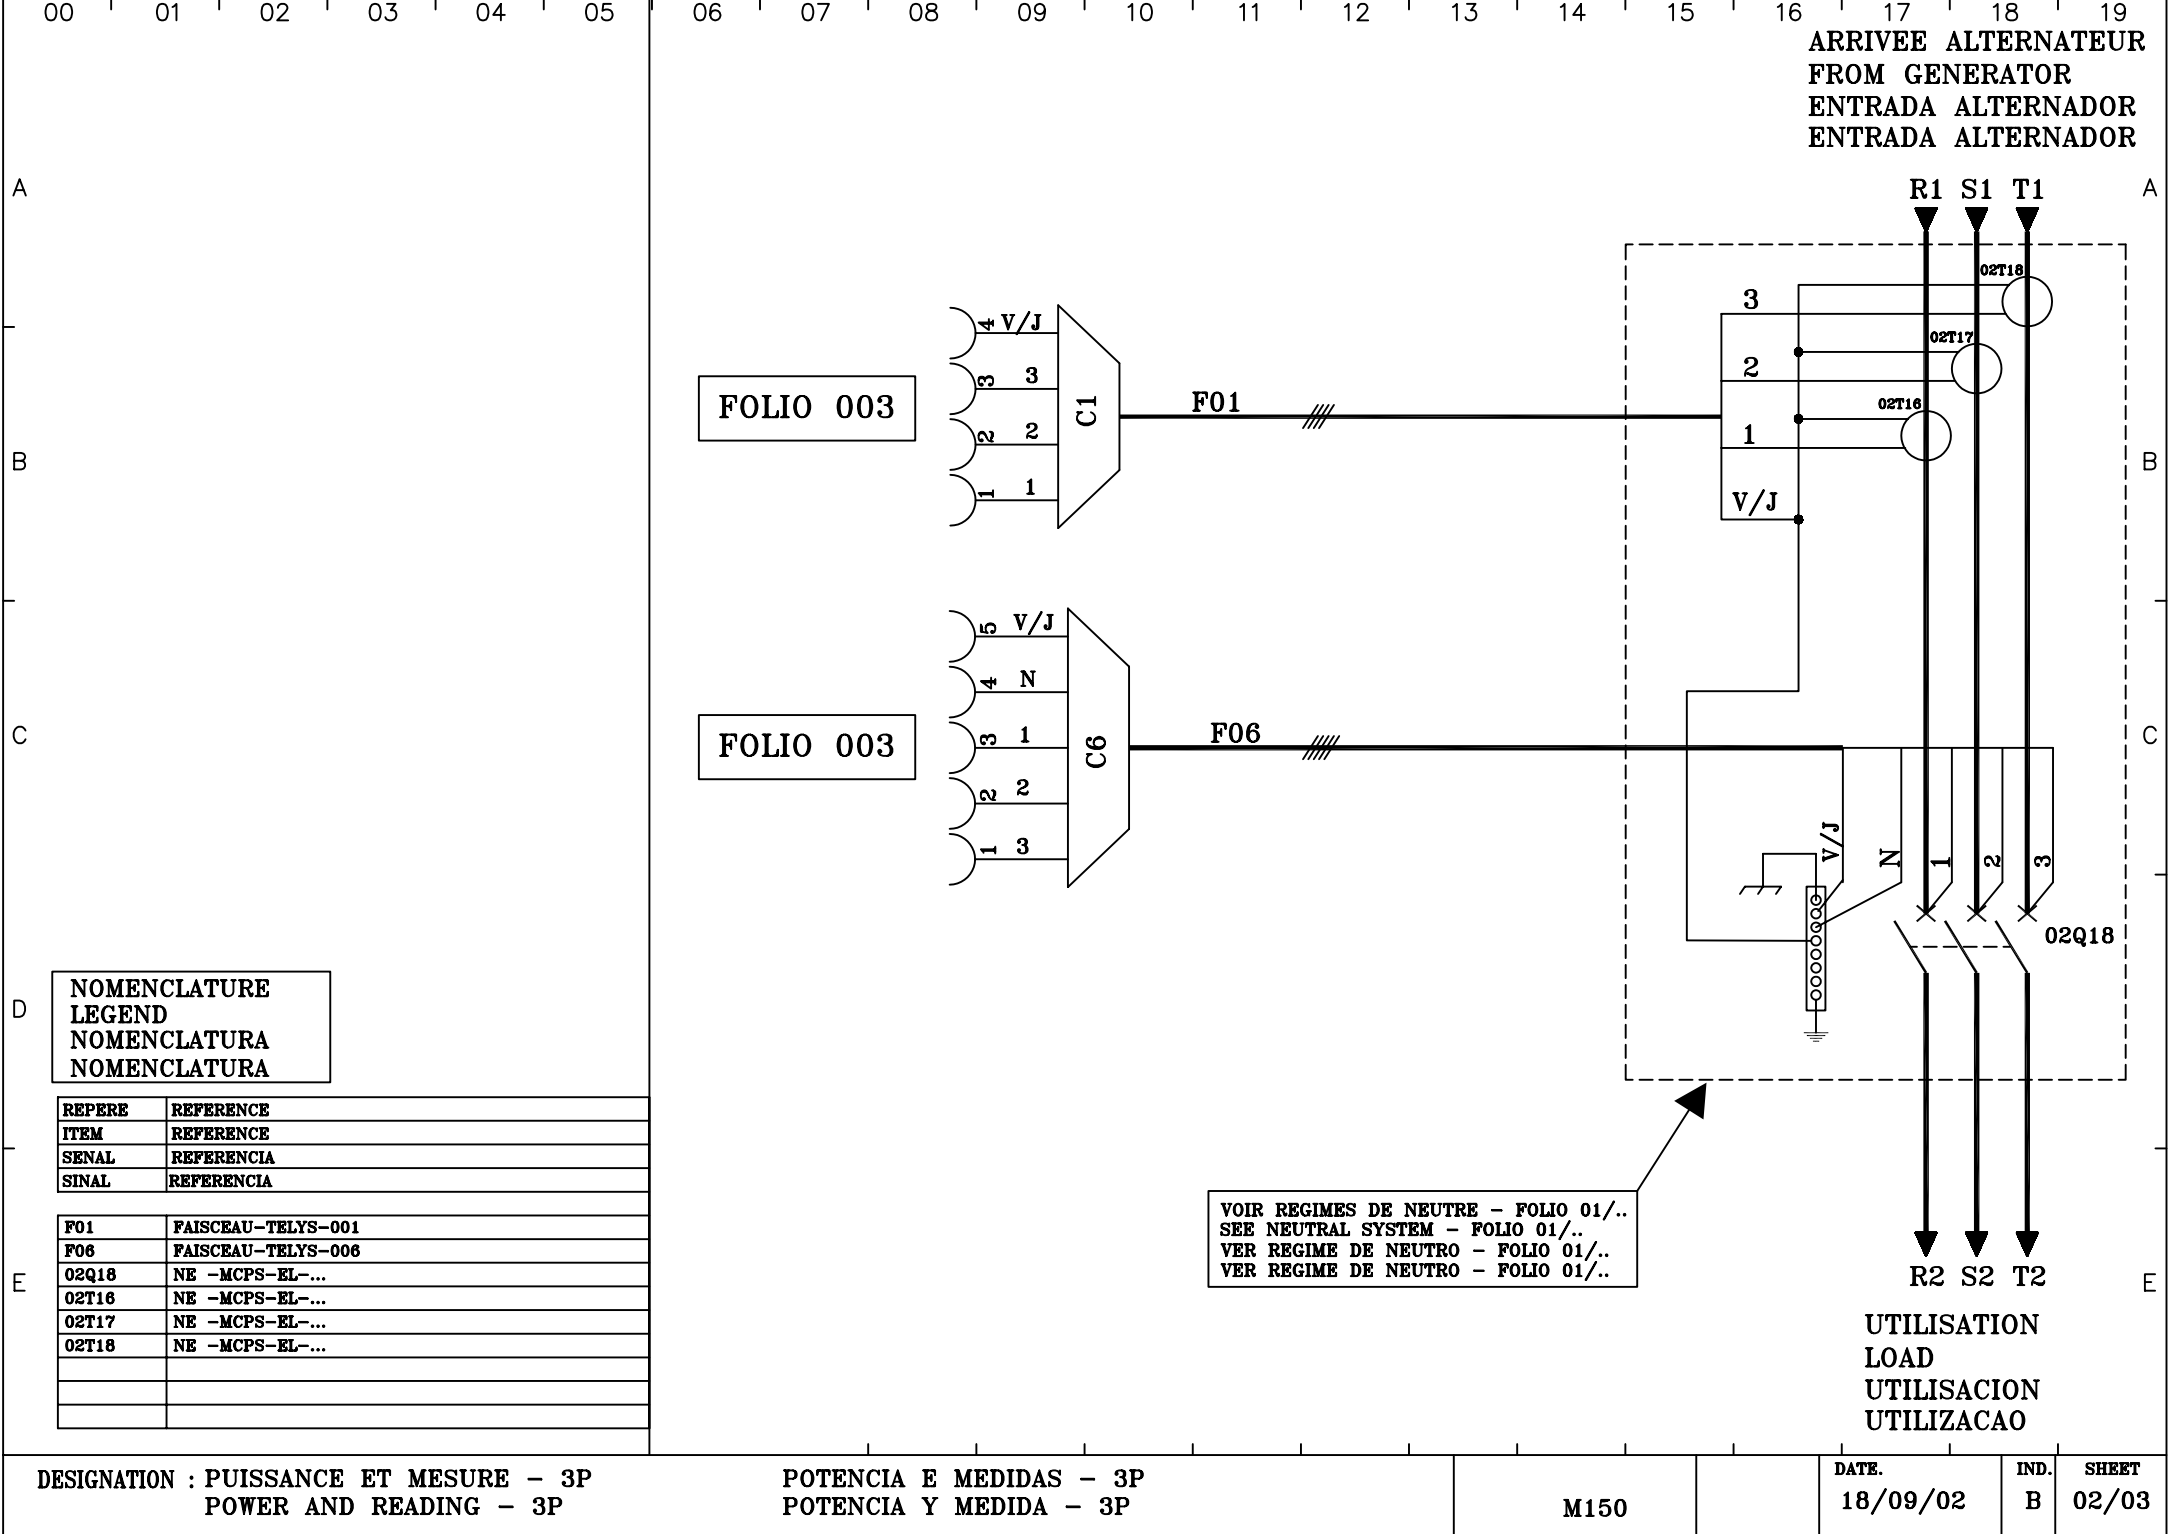


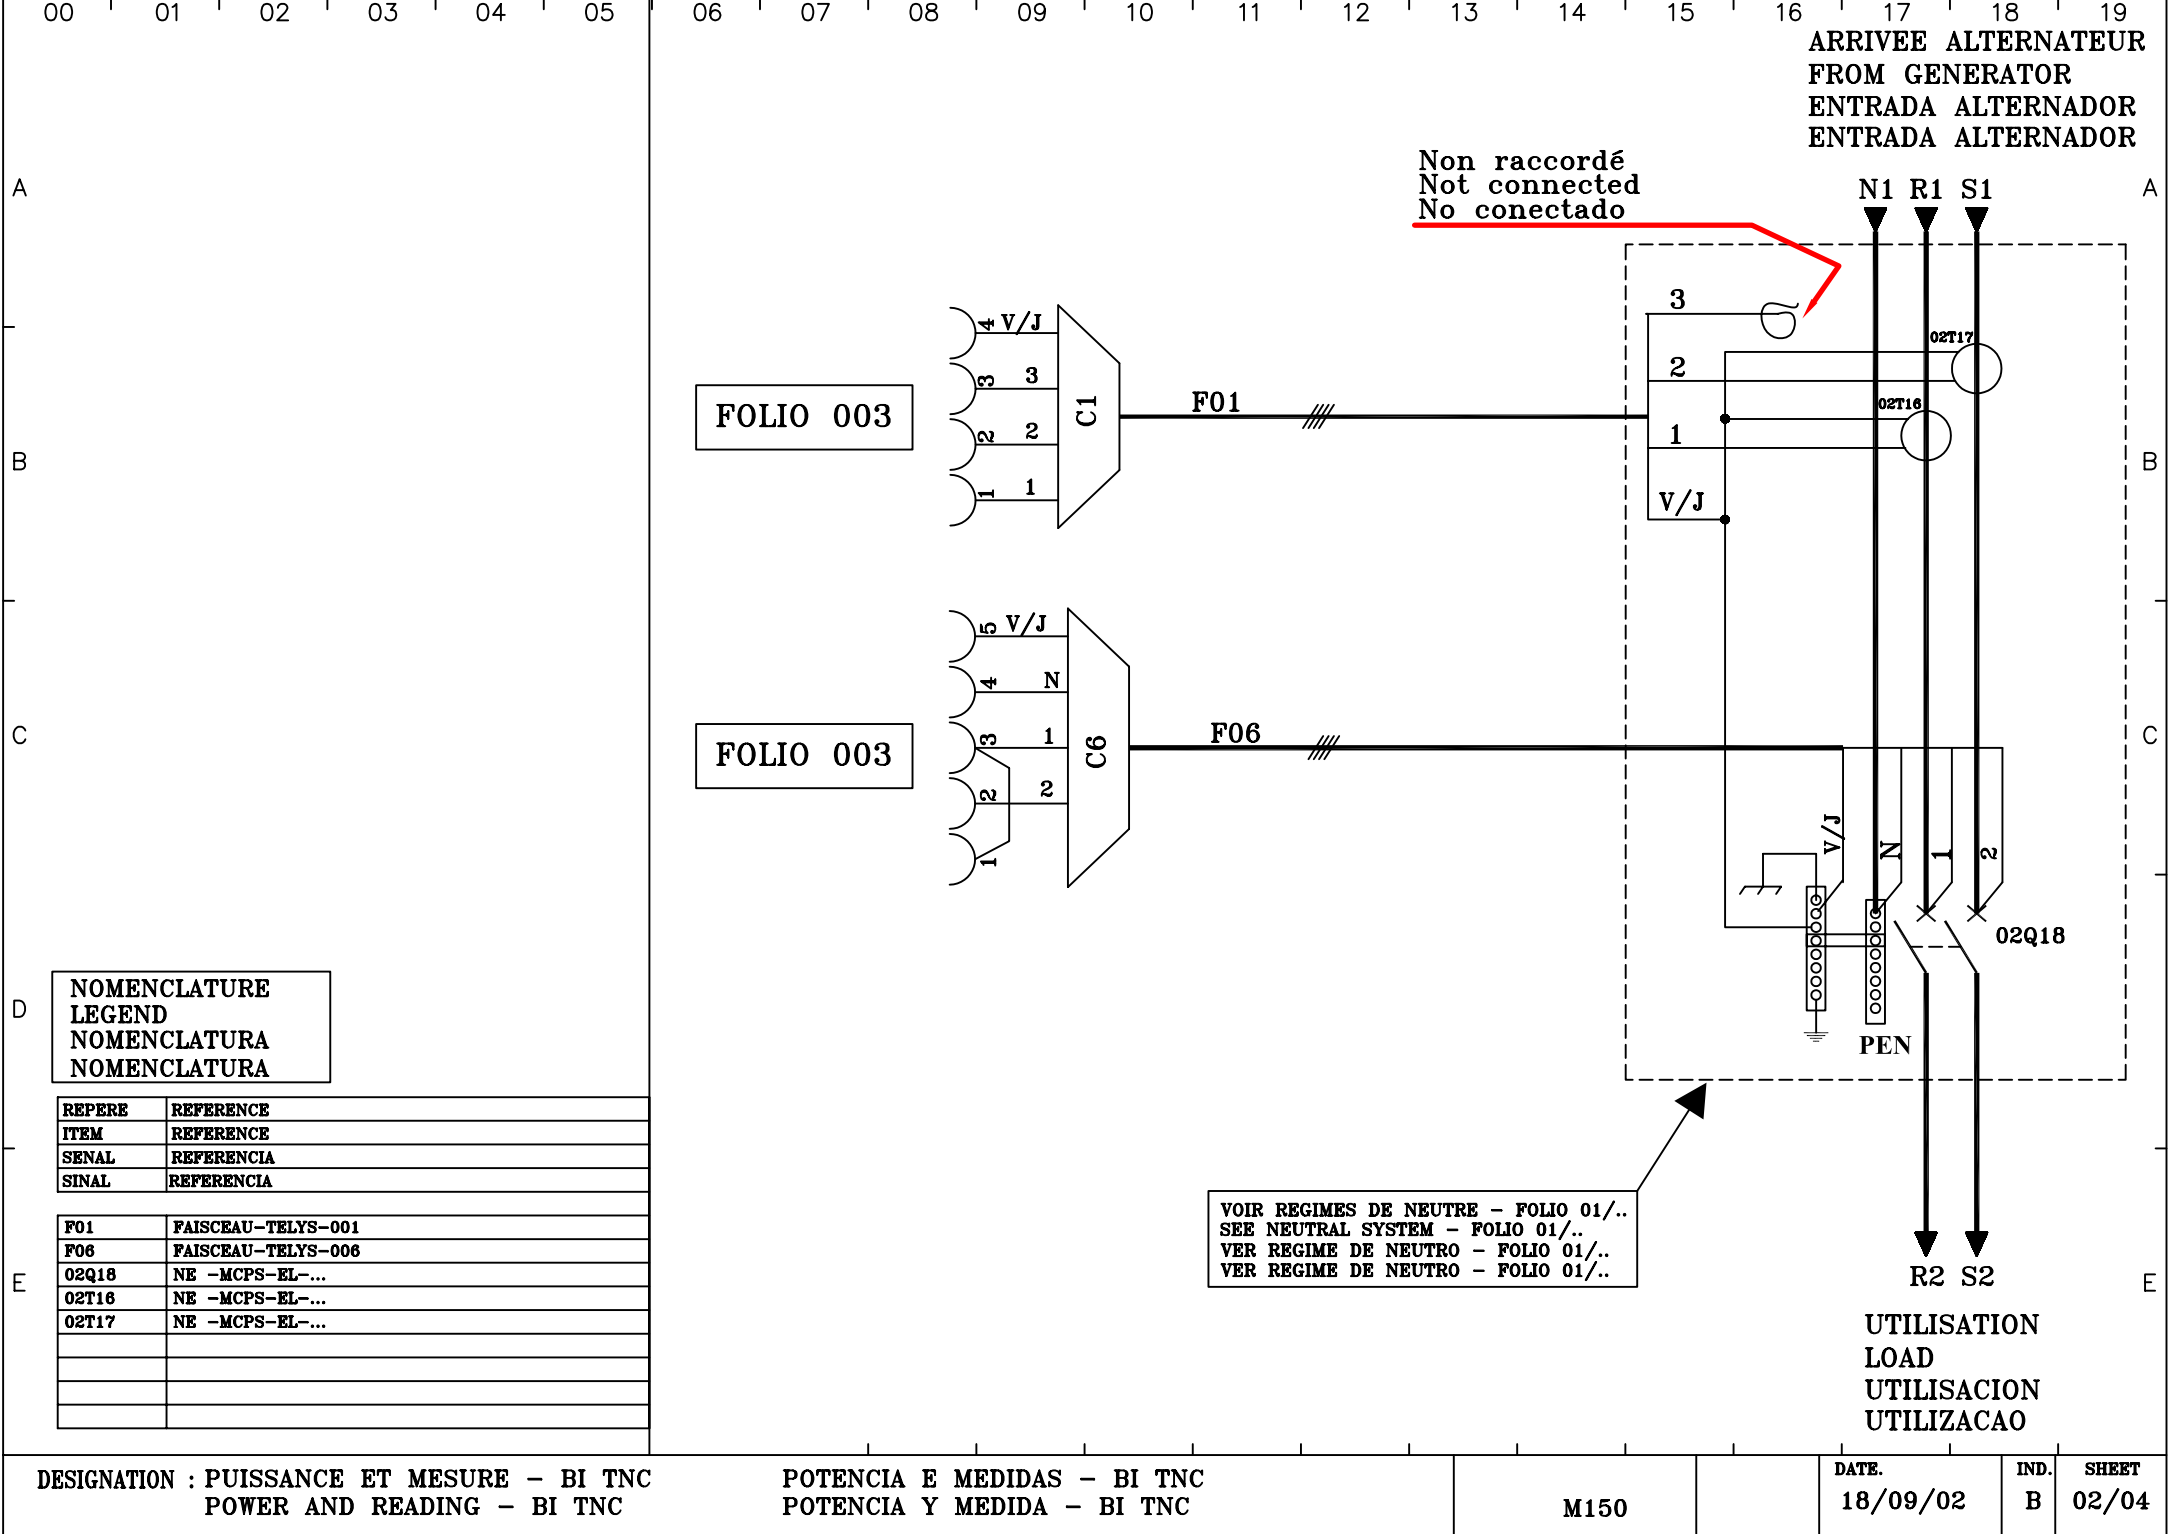

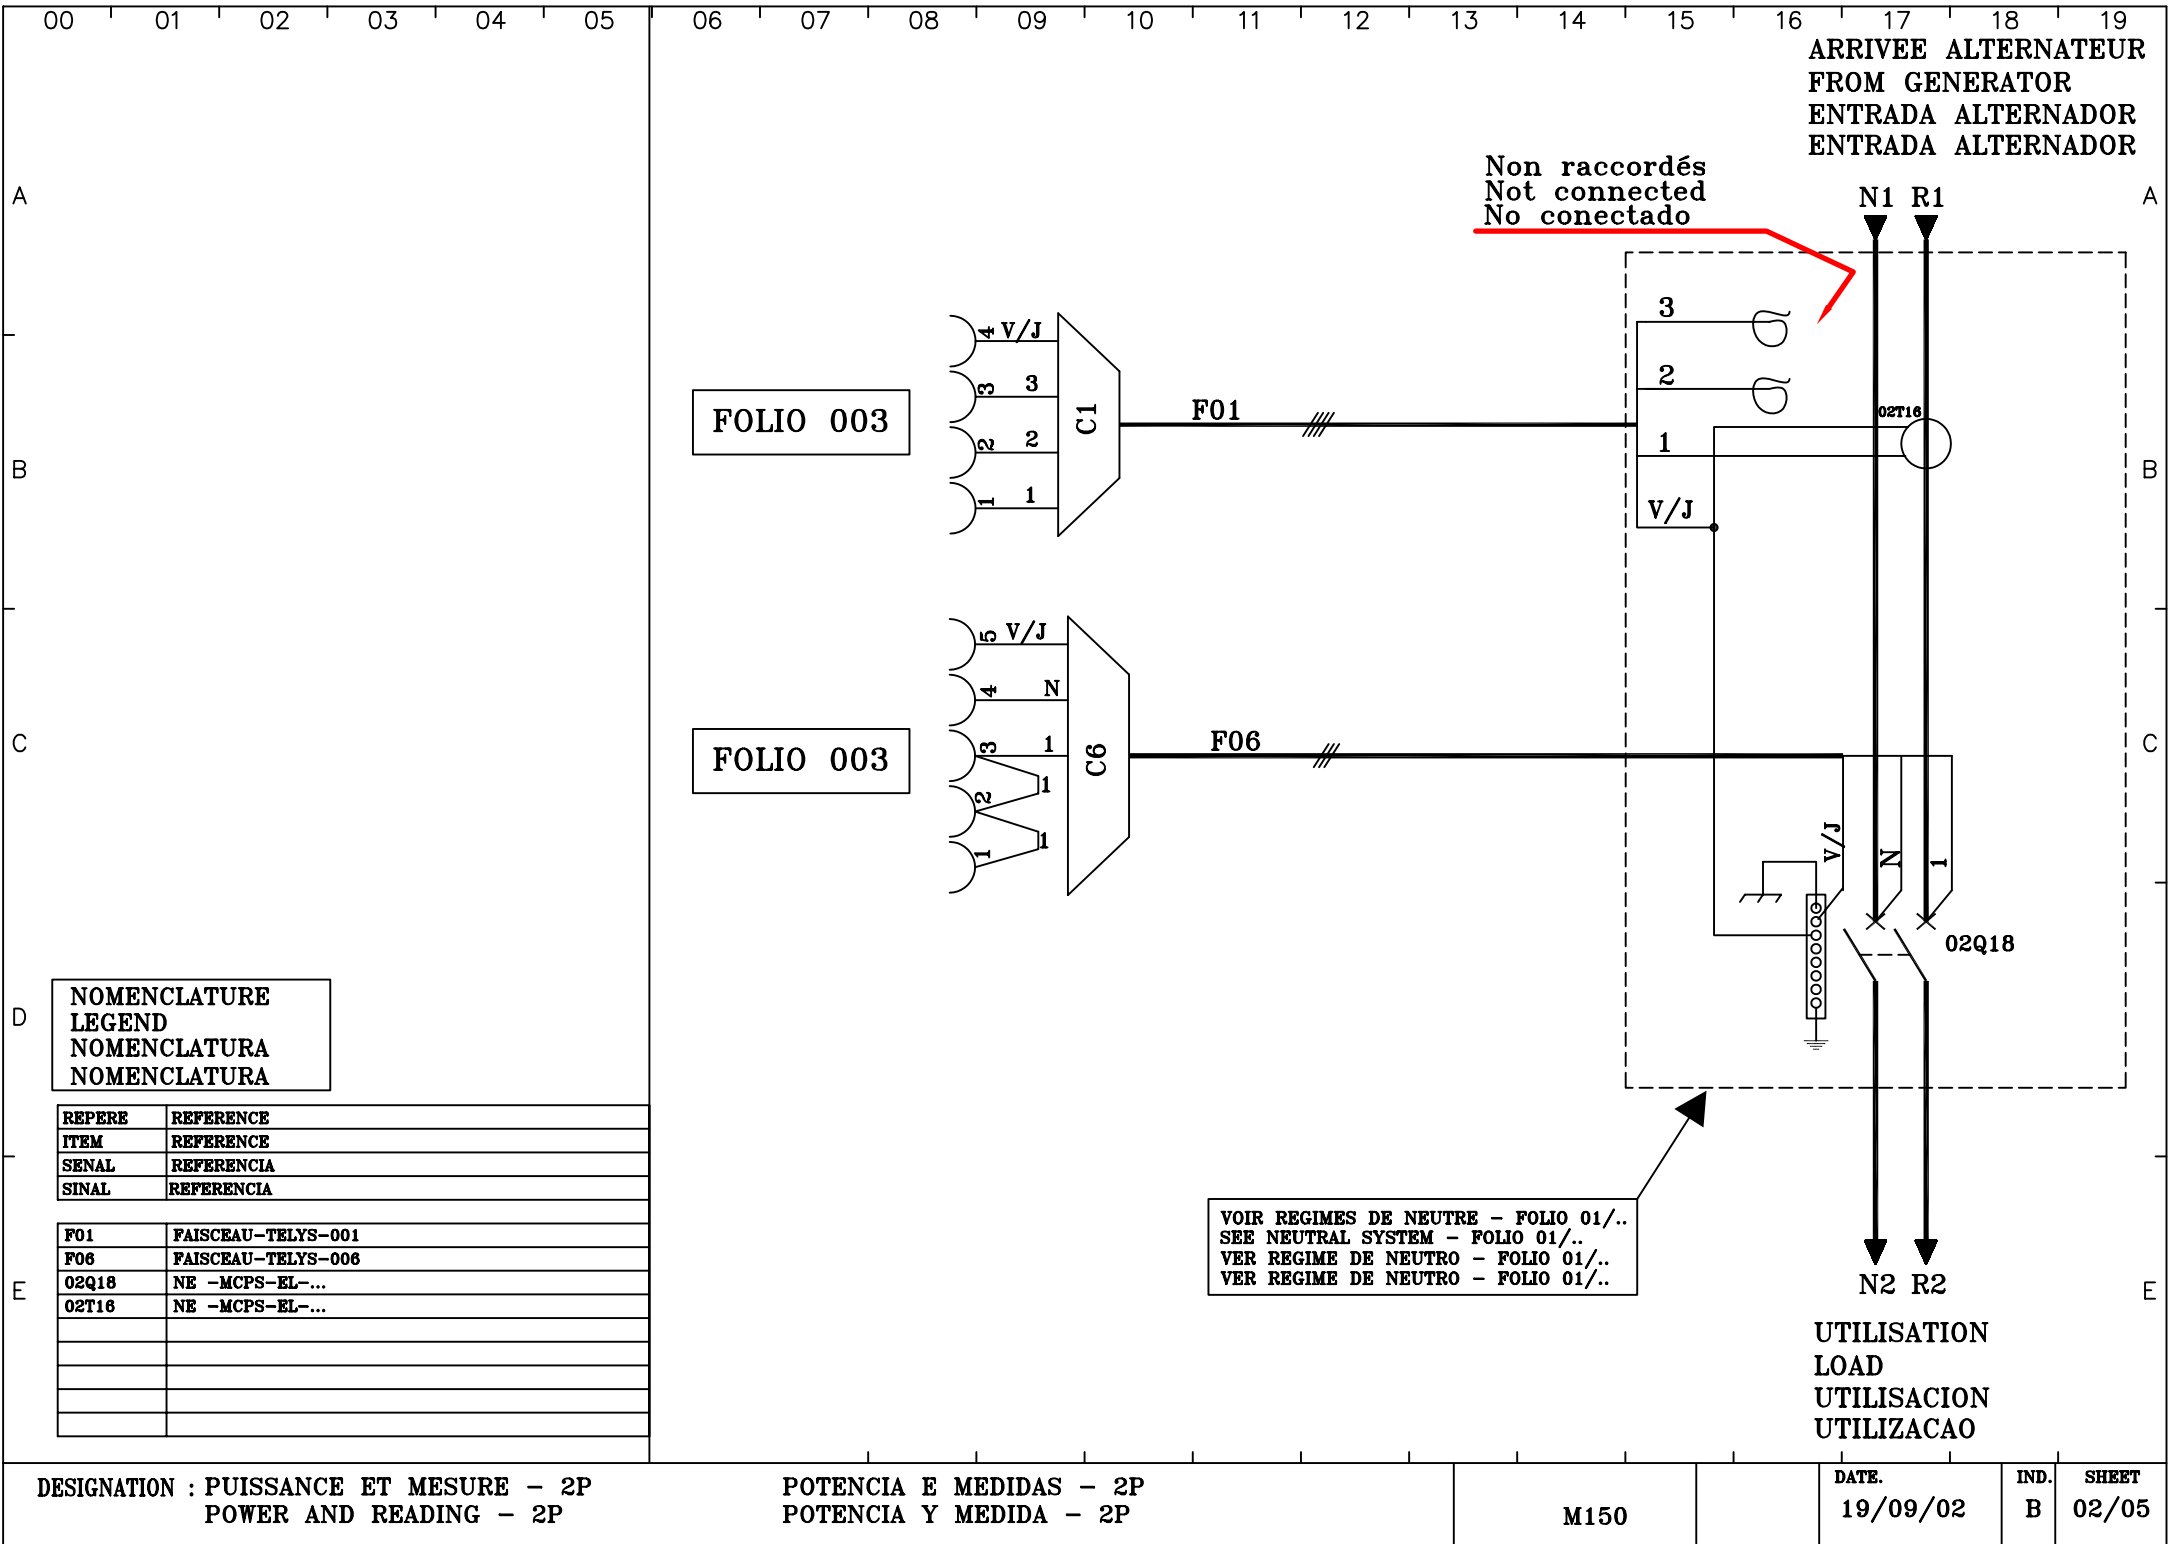

E

E




|             |                                    |
|-------------|------------------------------------|
| REPERE      | REFERENCE                          |
| ITEM        | REFERENCE                          |
| SENAL       | REFERENCIA                         |
| SINAL       | REFERENCIA                         |
|             |                                    |
| F01         | FAISCEAU-TELYS-001                 |
| F06         | FAISCEAU-TELYS-006                 |
| F138        | FAISCEAU-TELYS-138                 |
| F139        | FAISCEAU-TELYS-139                 |
| F140-M150   | FAISCEAU-M150-140                  |
| 2Q18        | NE-MCPS-EL...                      |
| 02T16.17.18 | NE-MCPS-EL...                      |
| 02E08       | DOLD IK9270.11/010                 |
| 02KM08      | (LC1K09004P7-230Vac) + TEL LA4KA1U |
| F28-M150    | FAISCEAU-M150-028                  |

|      |       |
|------|-------|
| IND. | SHEET |
| G    | 02/10 |




E


E





|             |                                   |
|-------------|-----------------------------------|
| REPERE      | REFERENCE                         |
| ITEM        | REFERENCE                         |
| SENAL       | REFERENCIA                        |
| SINAL       | REFERENCIA                        |
|             |                                   |
| F01         | FAISCEAU-TELYS-001                |
| F06         | FAISCEAU-TELYS-006                |
| F138        | FAISCEAU-TELYS-138                |
| F139        | FAISCEAU-TELYS-139                |
| F140-M150   | FAISCEAU-M150-140                 |
| 2Q18        | NE-MCPS-EL...                     |
| 02T16.17.18 | NE-MCPS-EL...                     |
| 02E08       | DOLD IK9270.11/010                |
| 02KM08      | (LC1K09004P7-230Vac) + TEL L4KA1U |
| F28-M150    | FAISCEAU-M150-028                 |




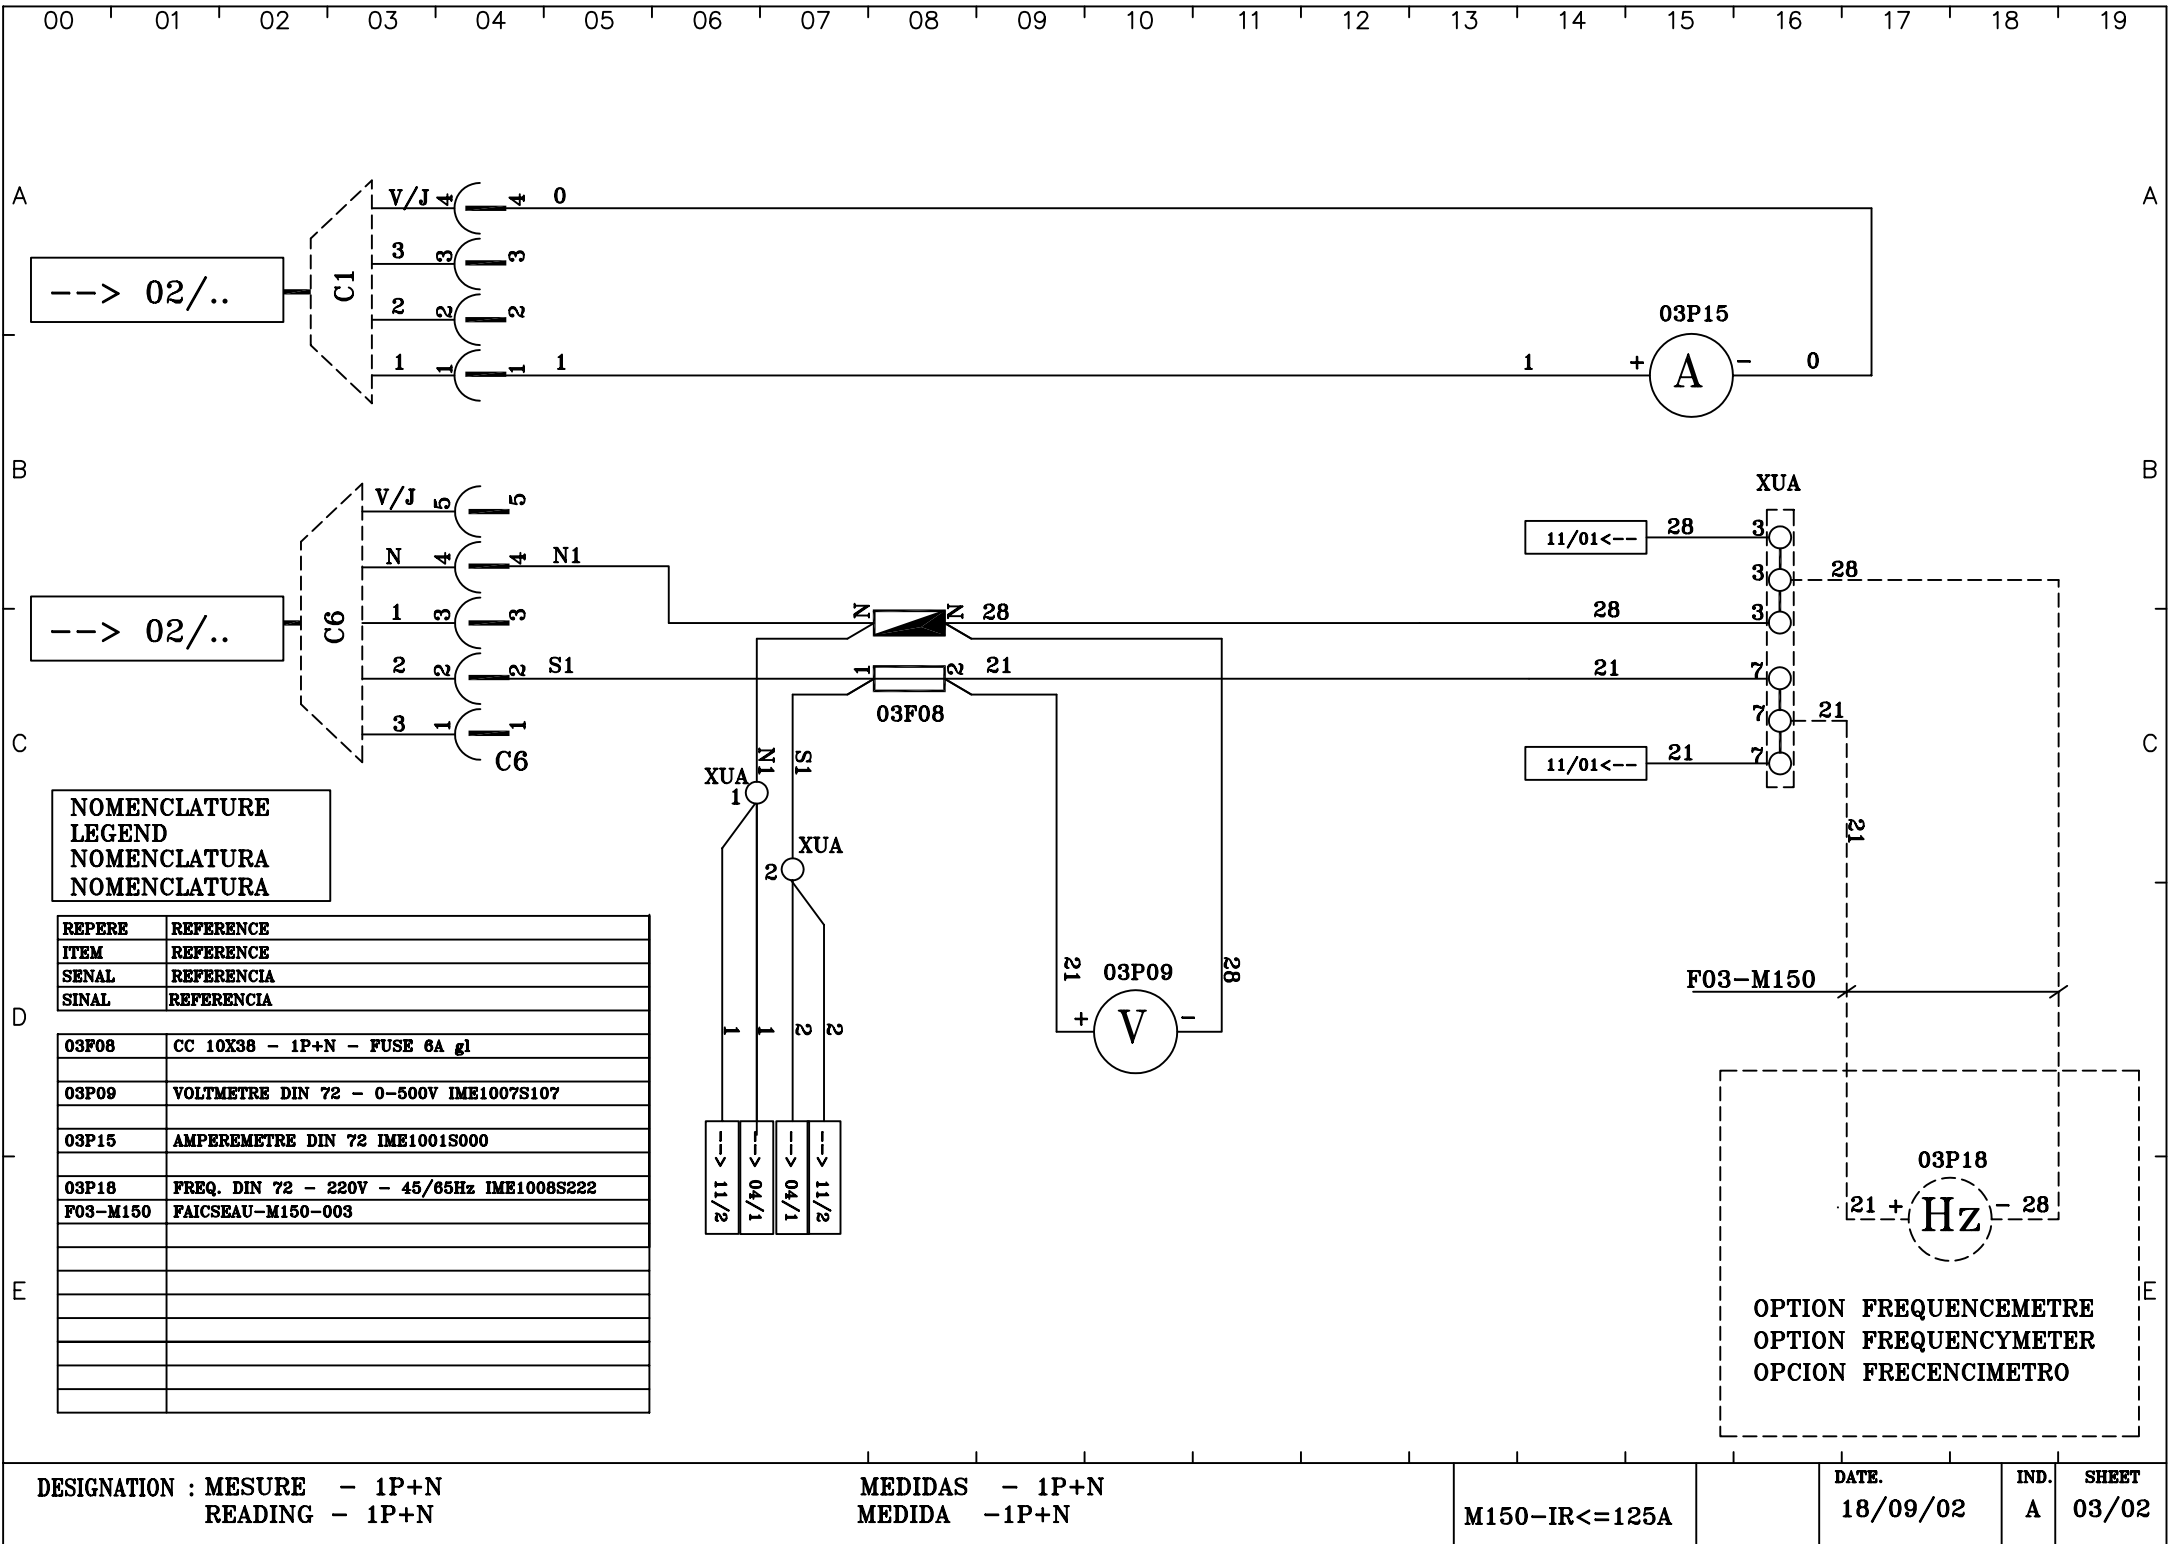

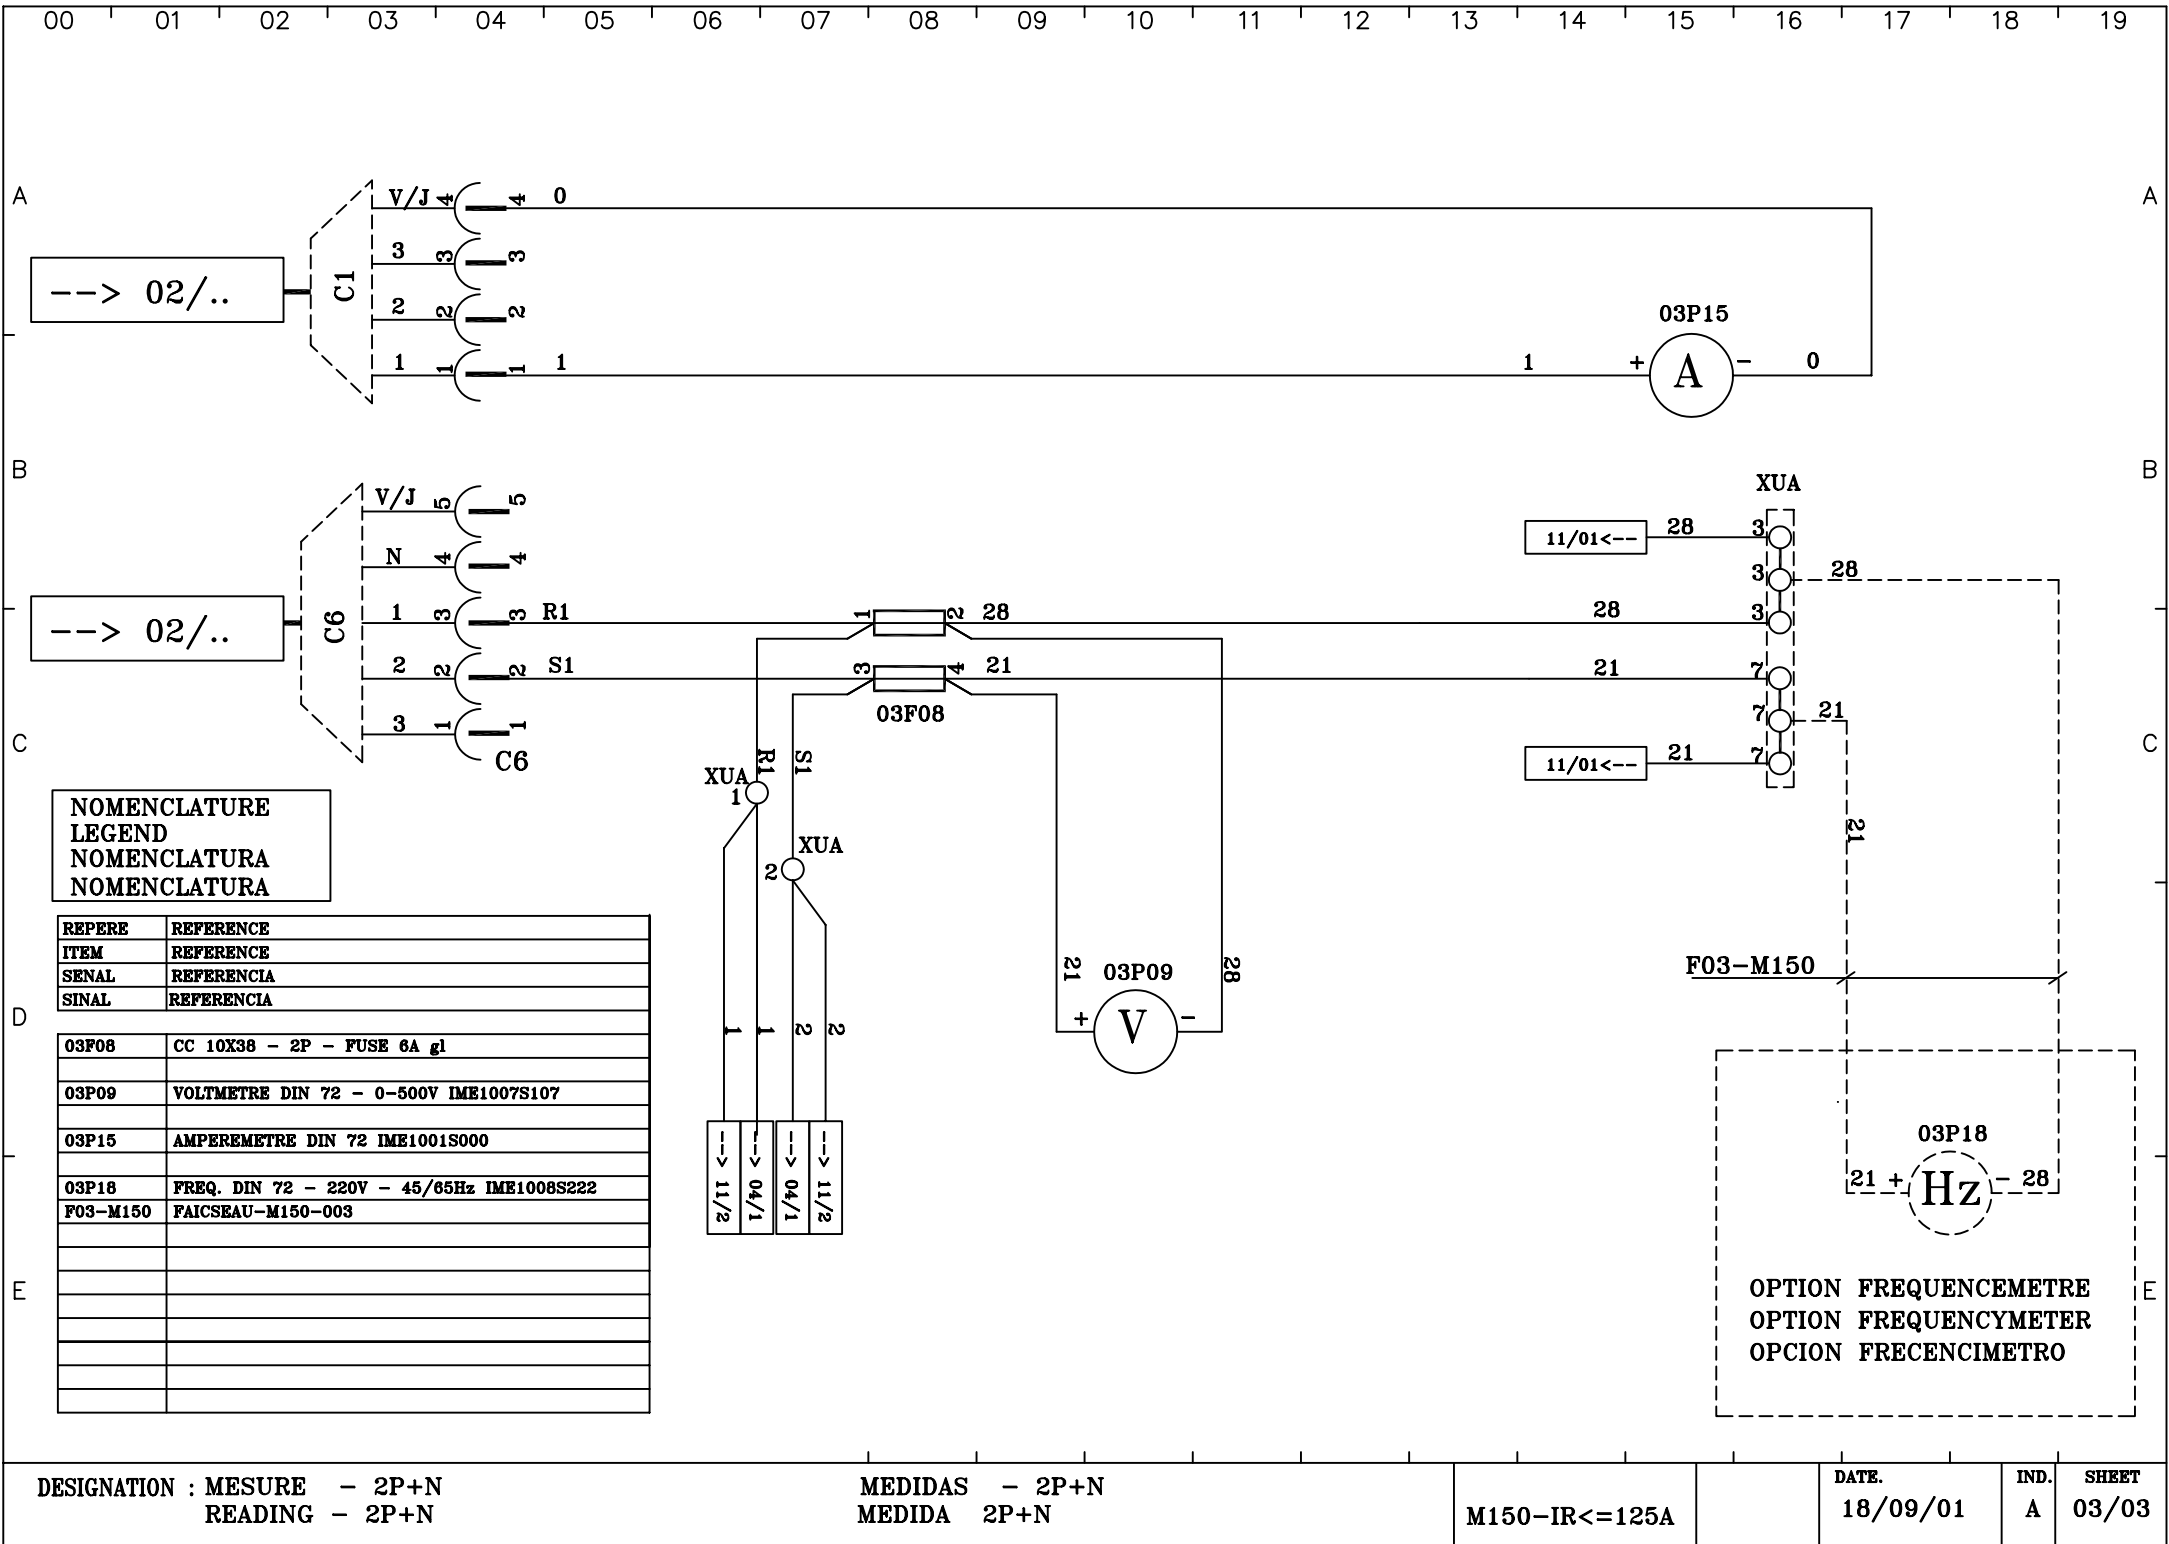

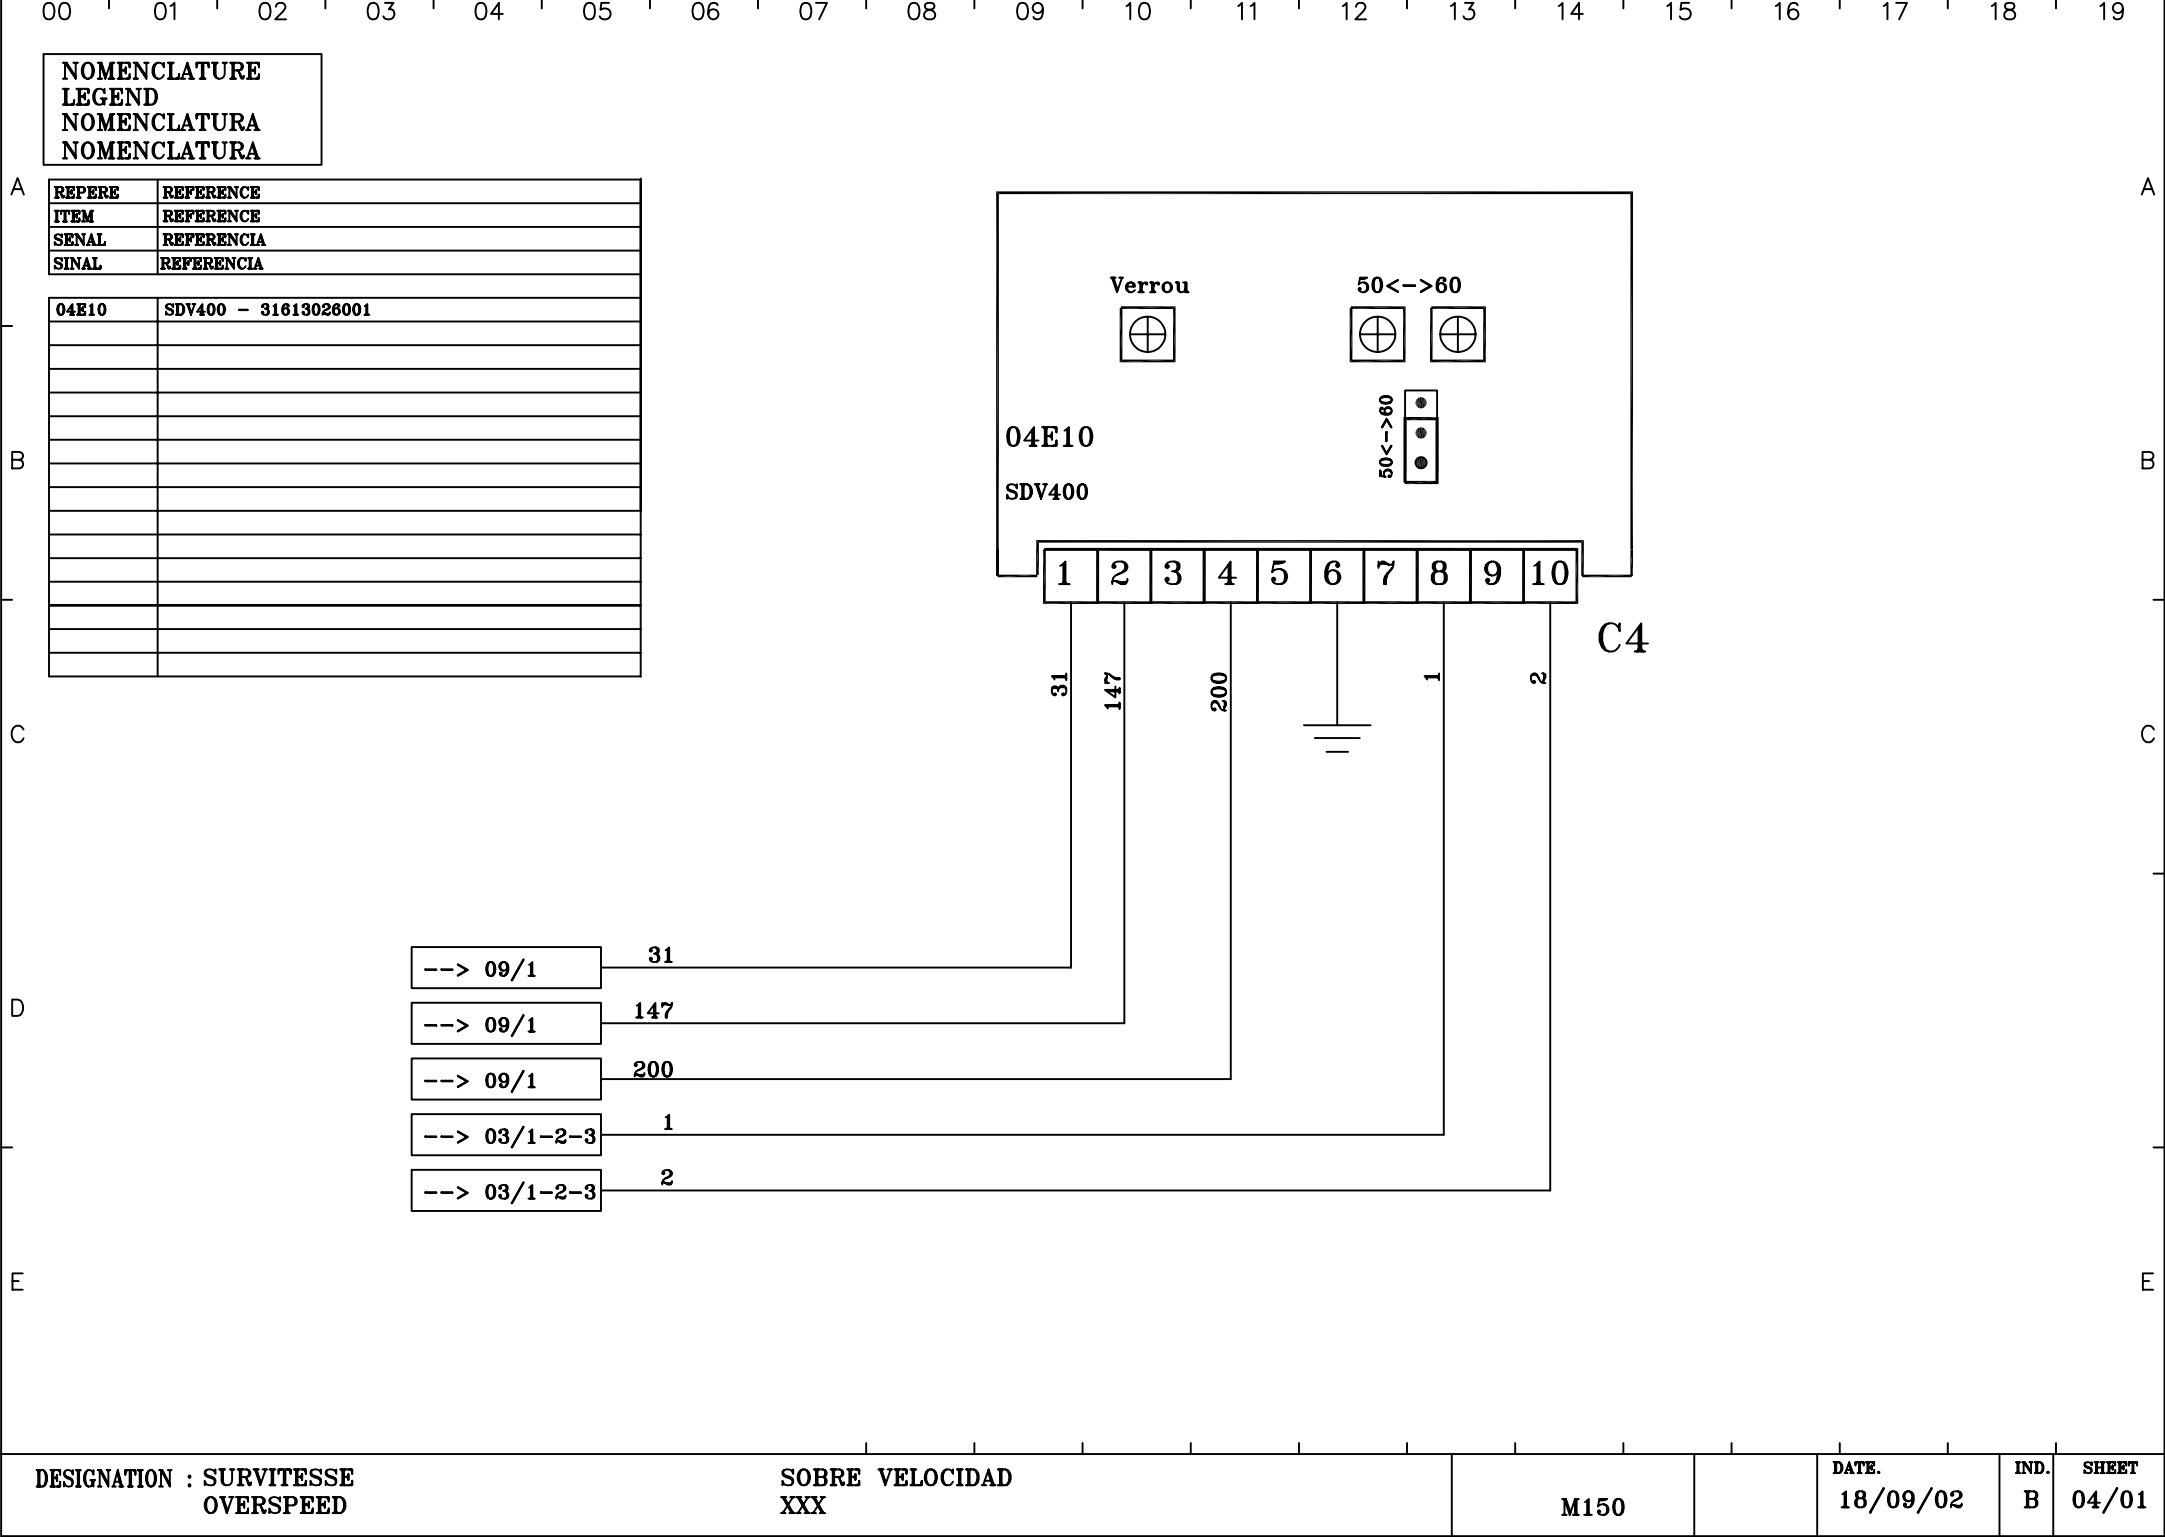


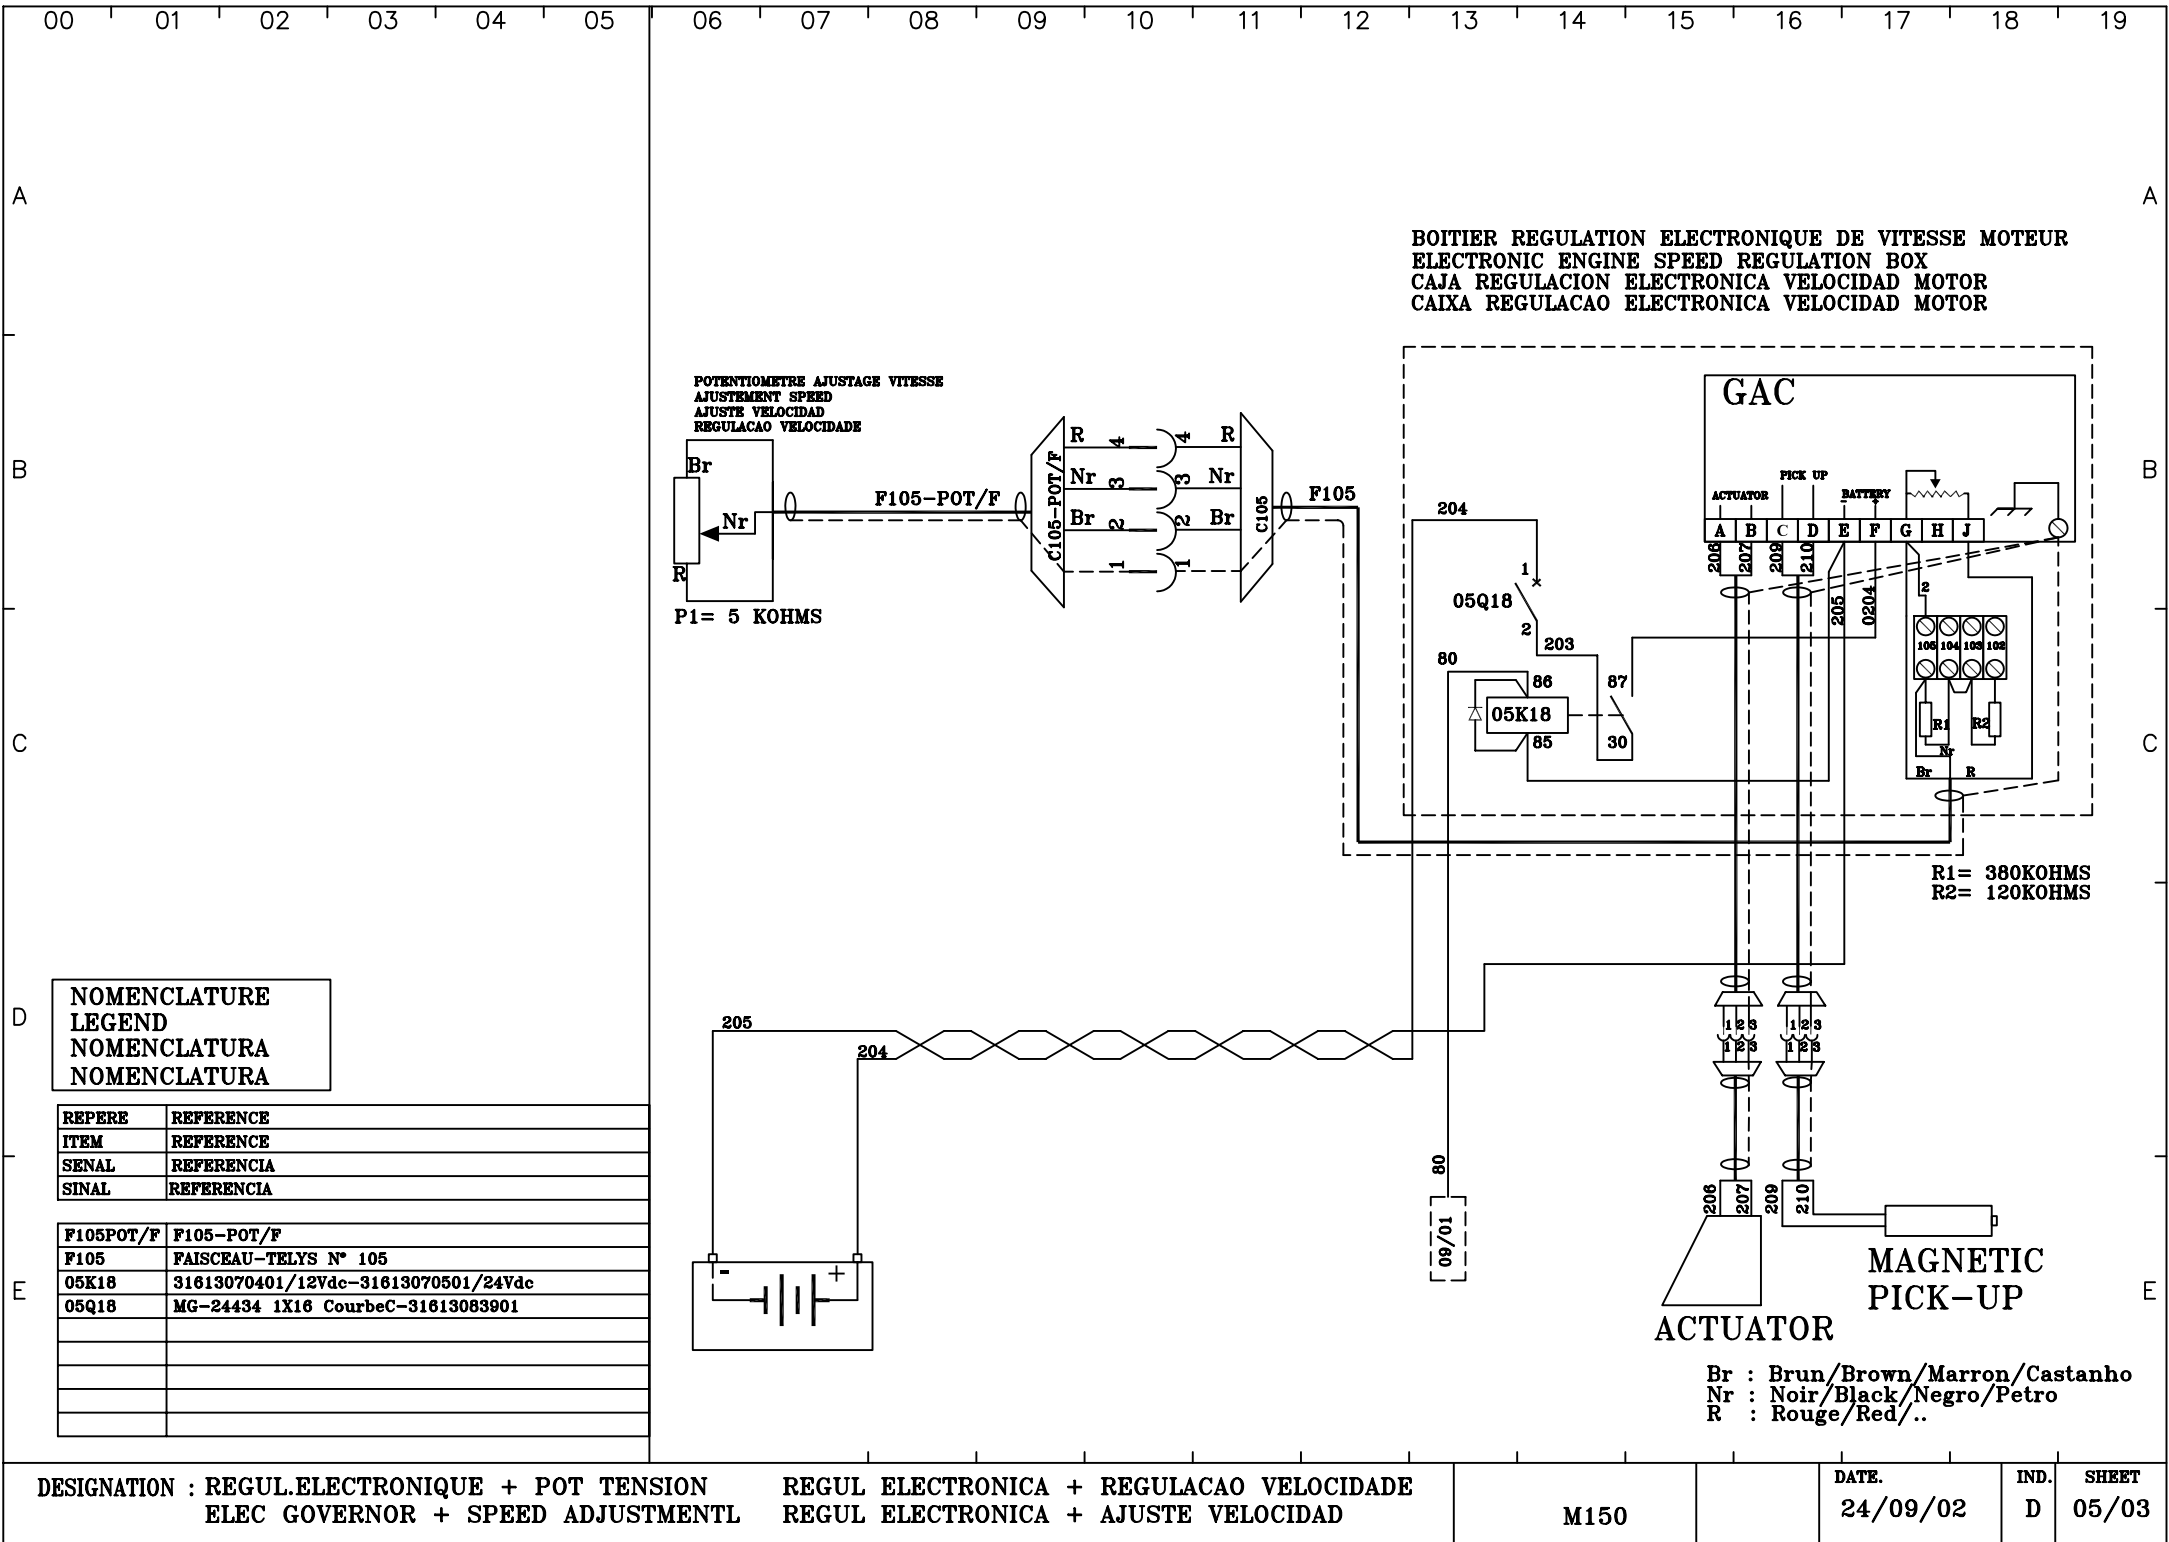

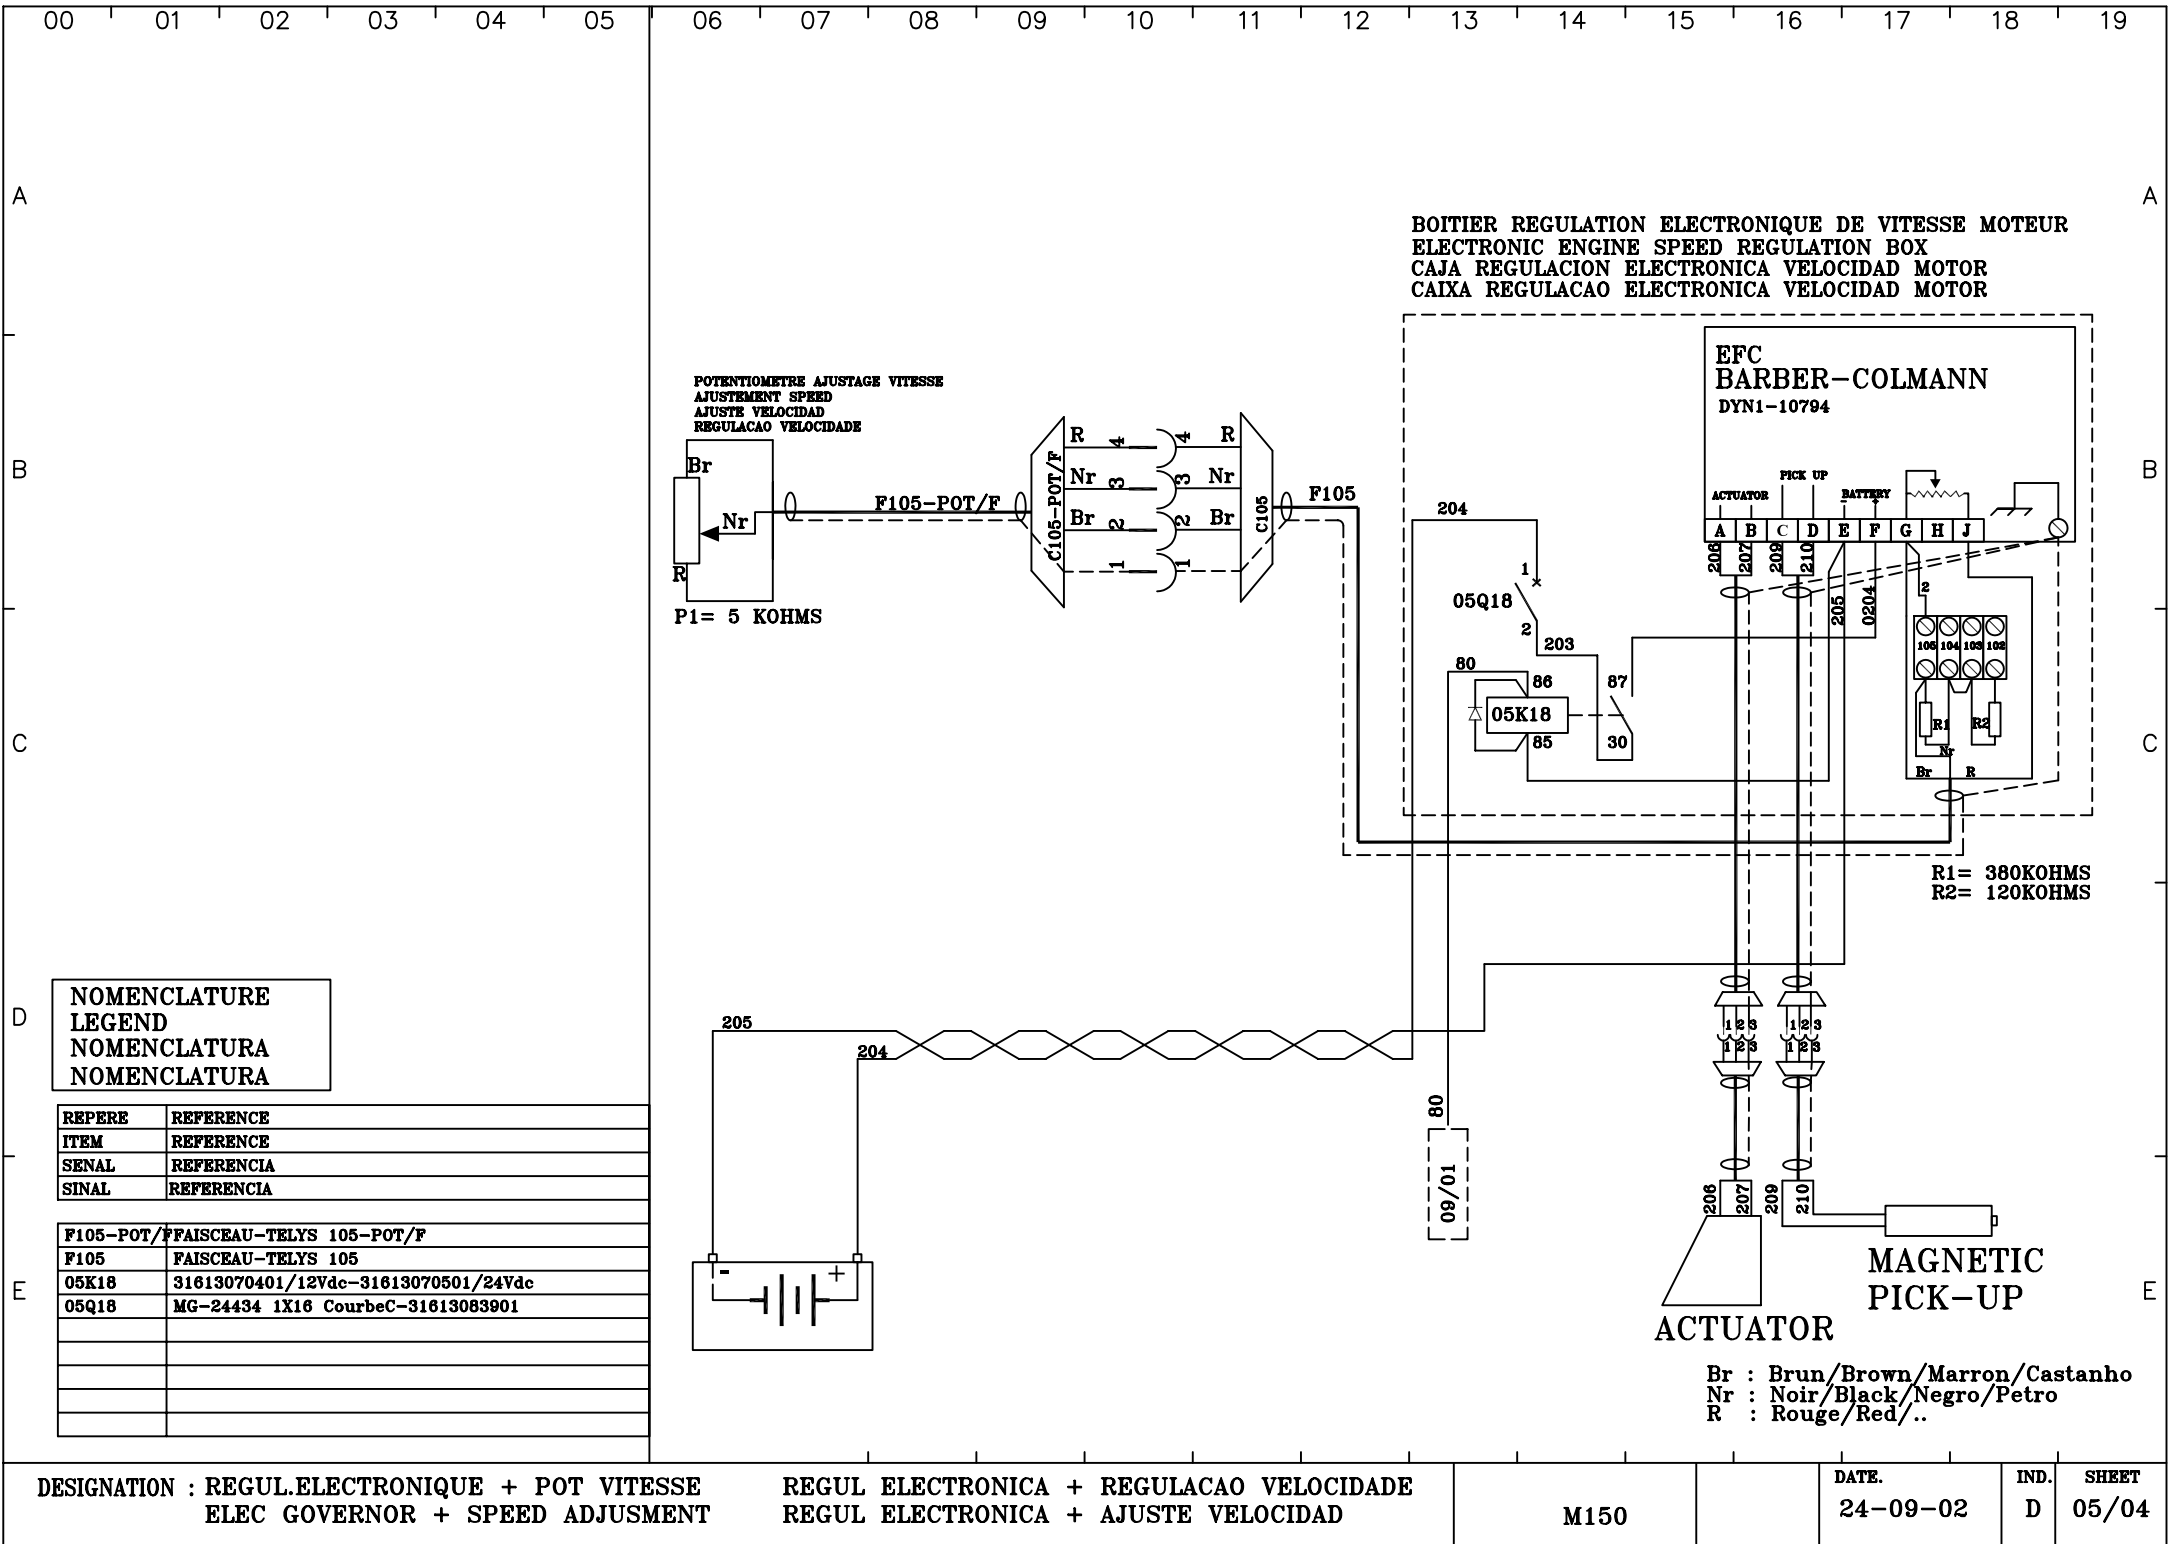








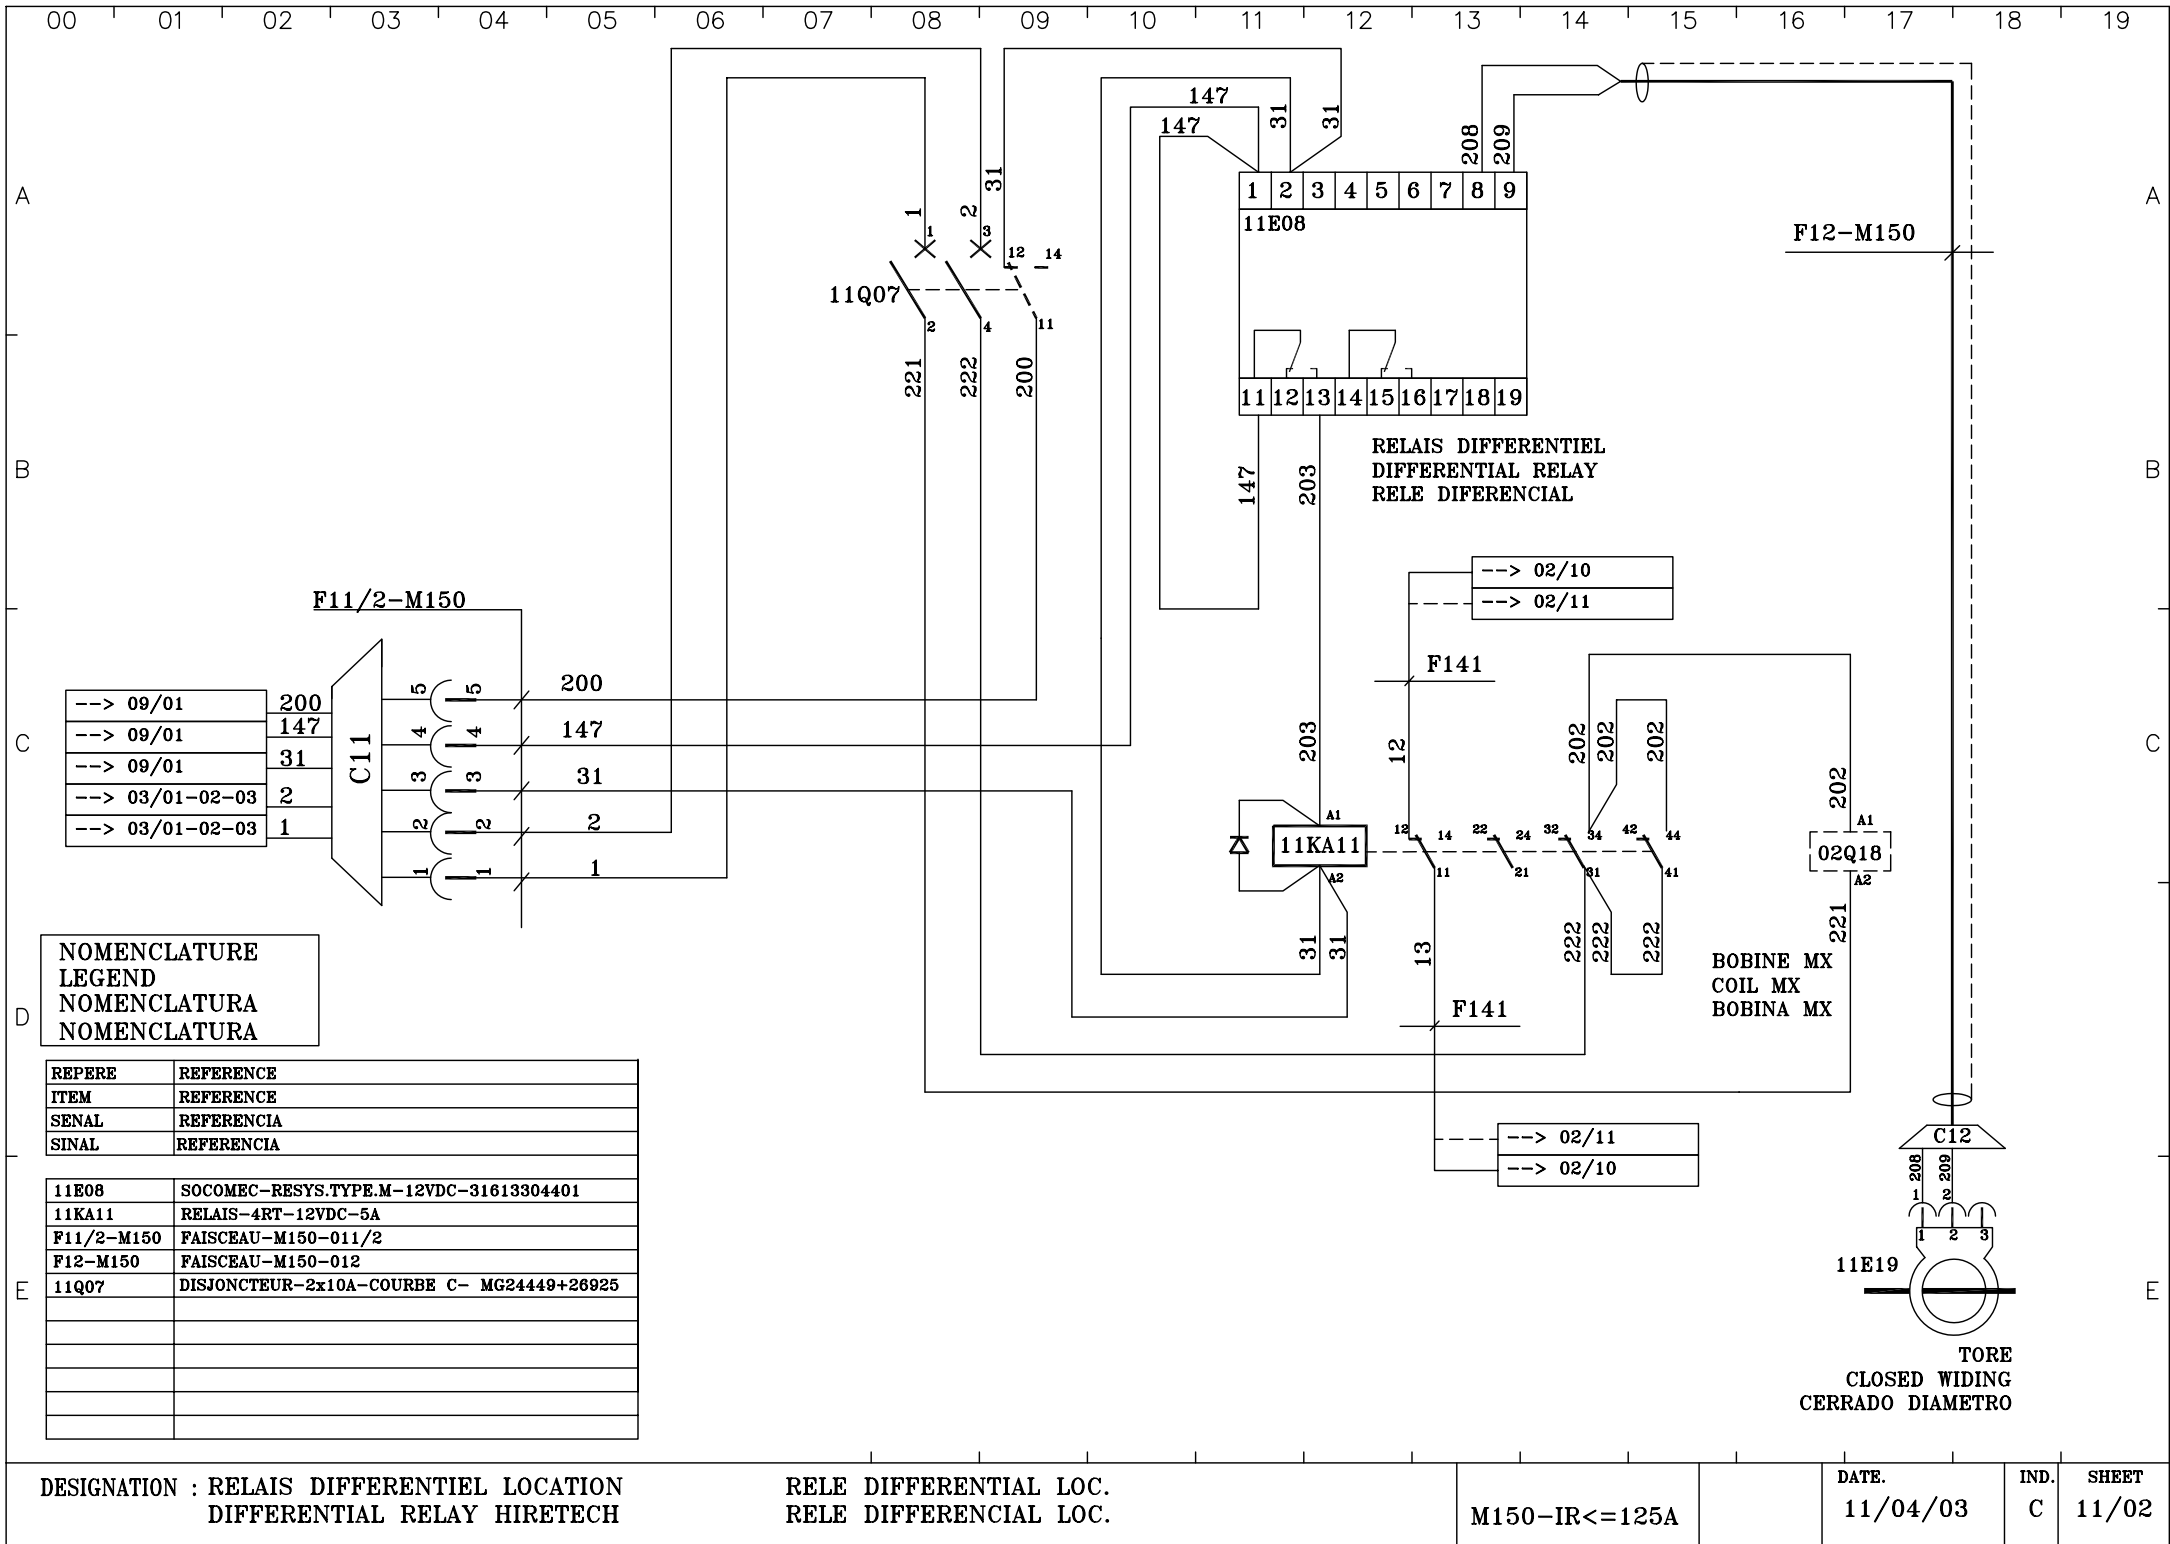



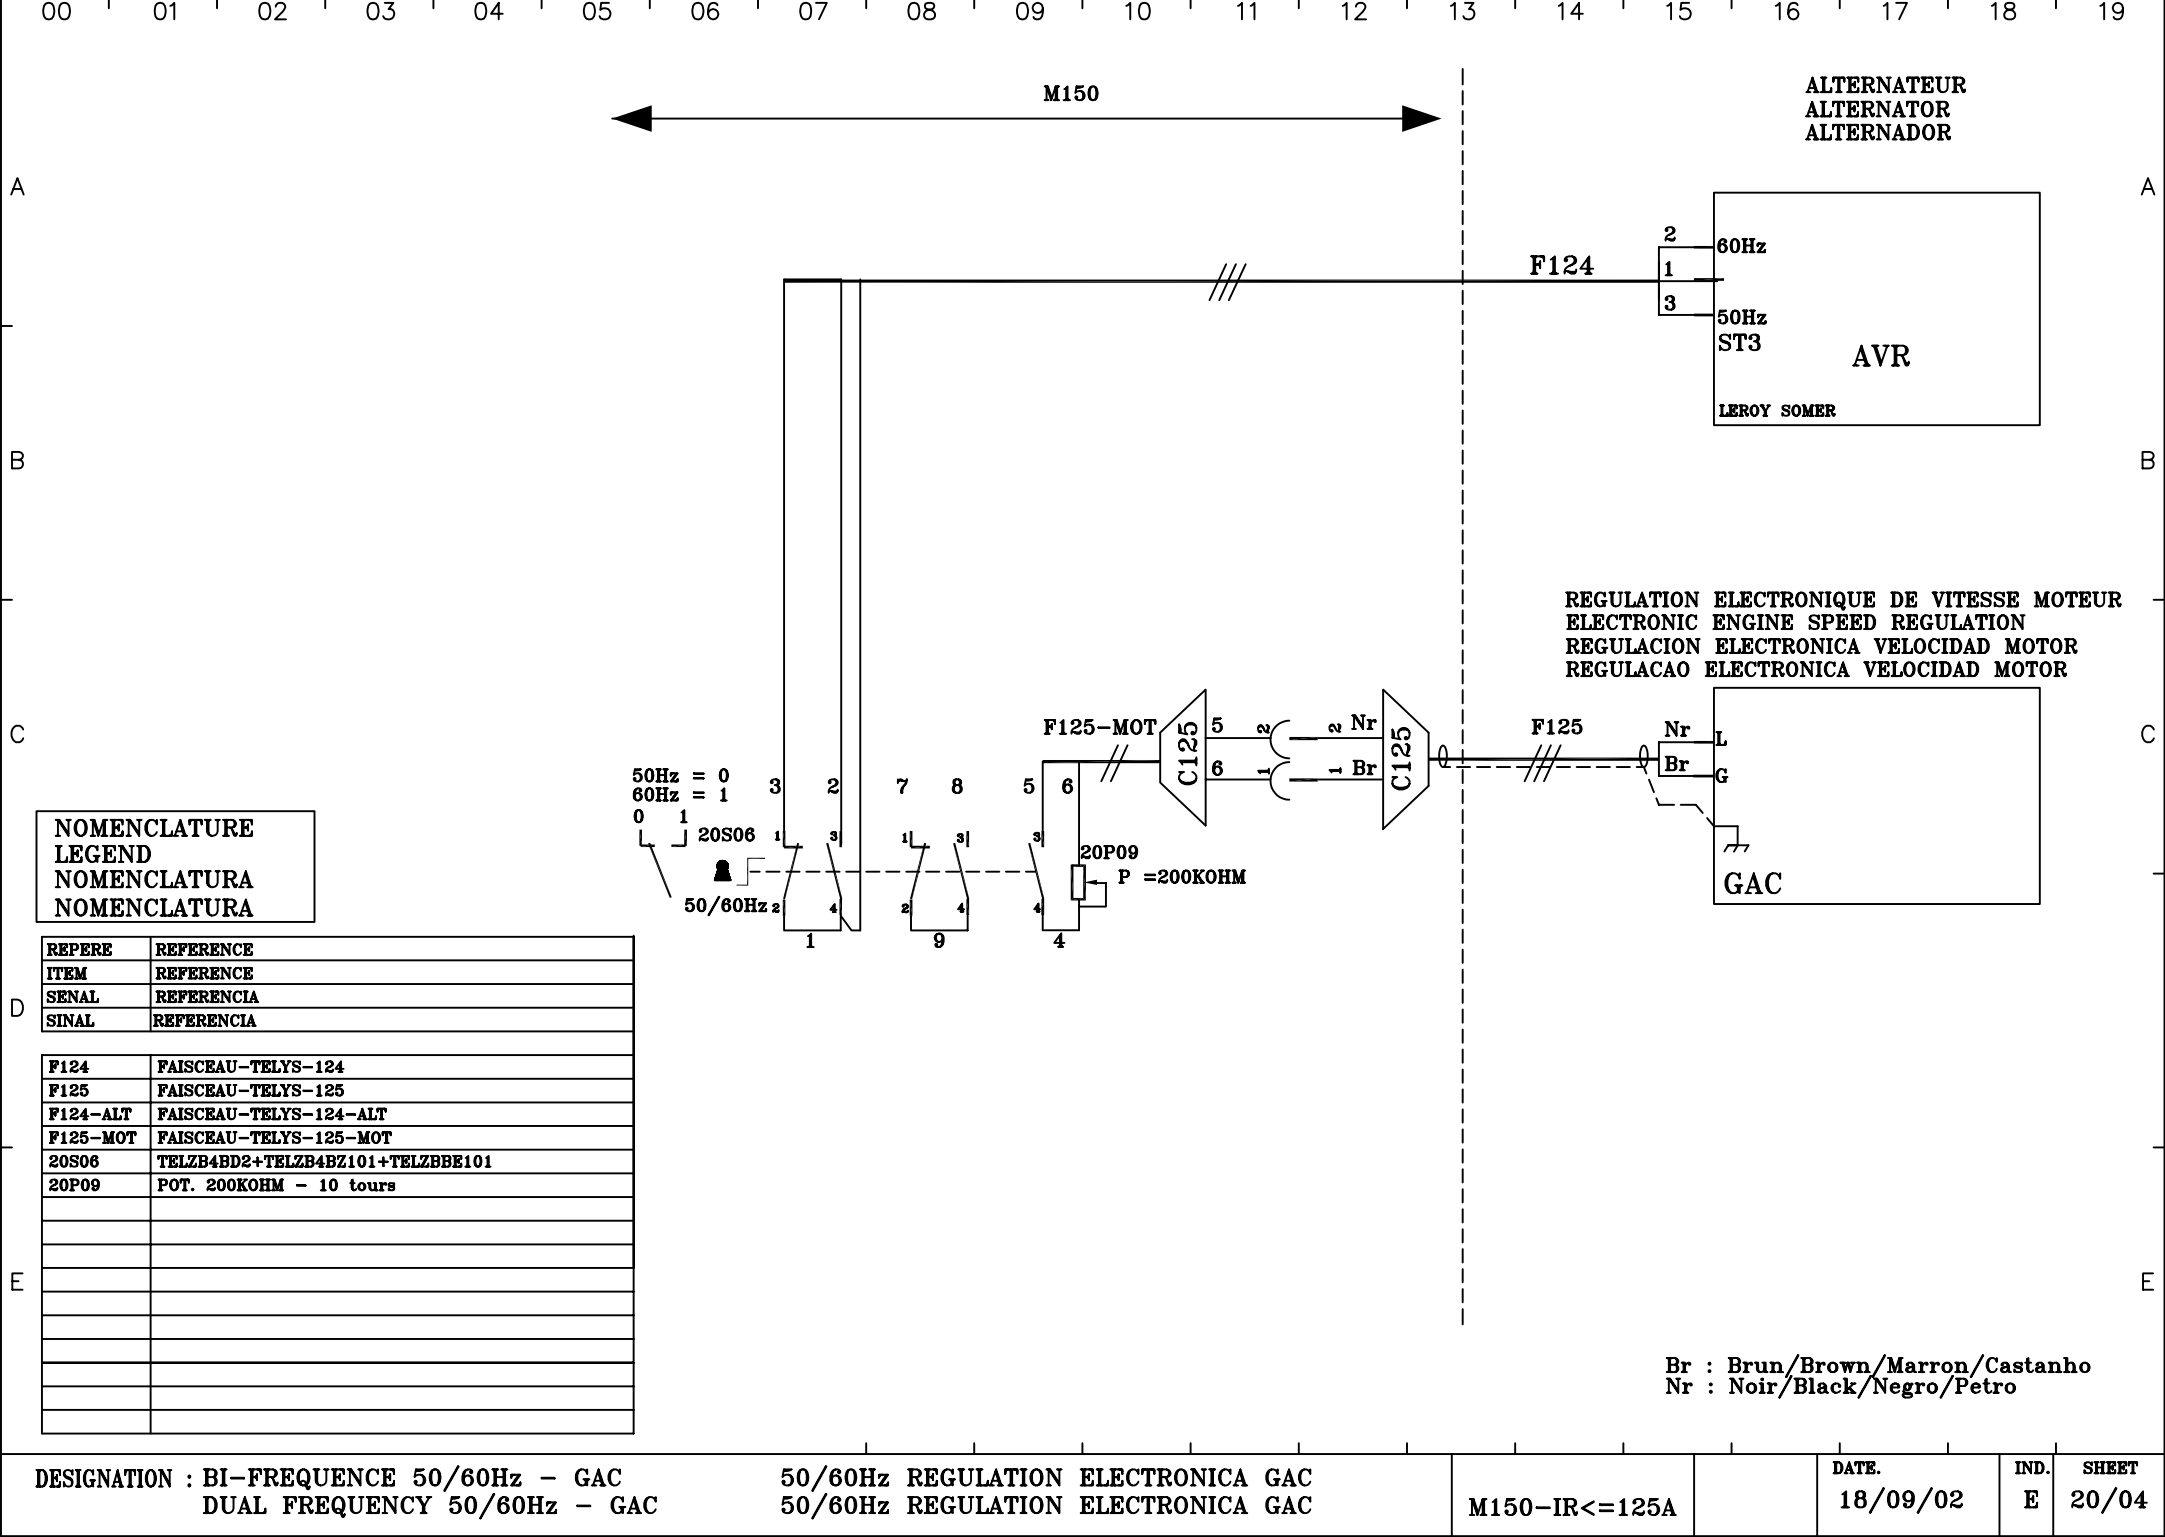

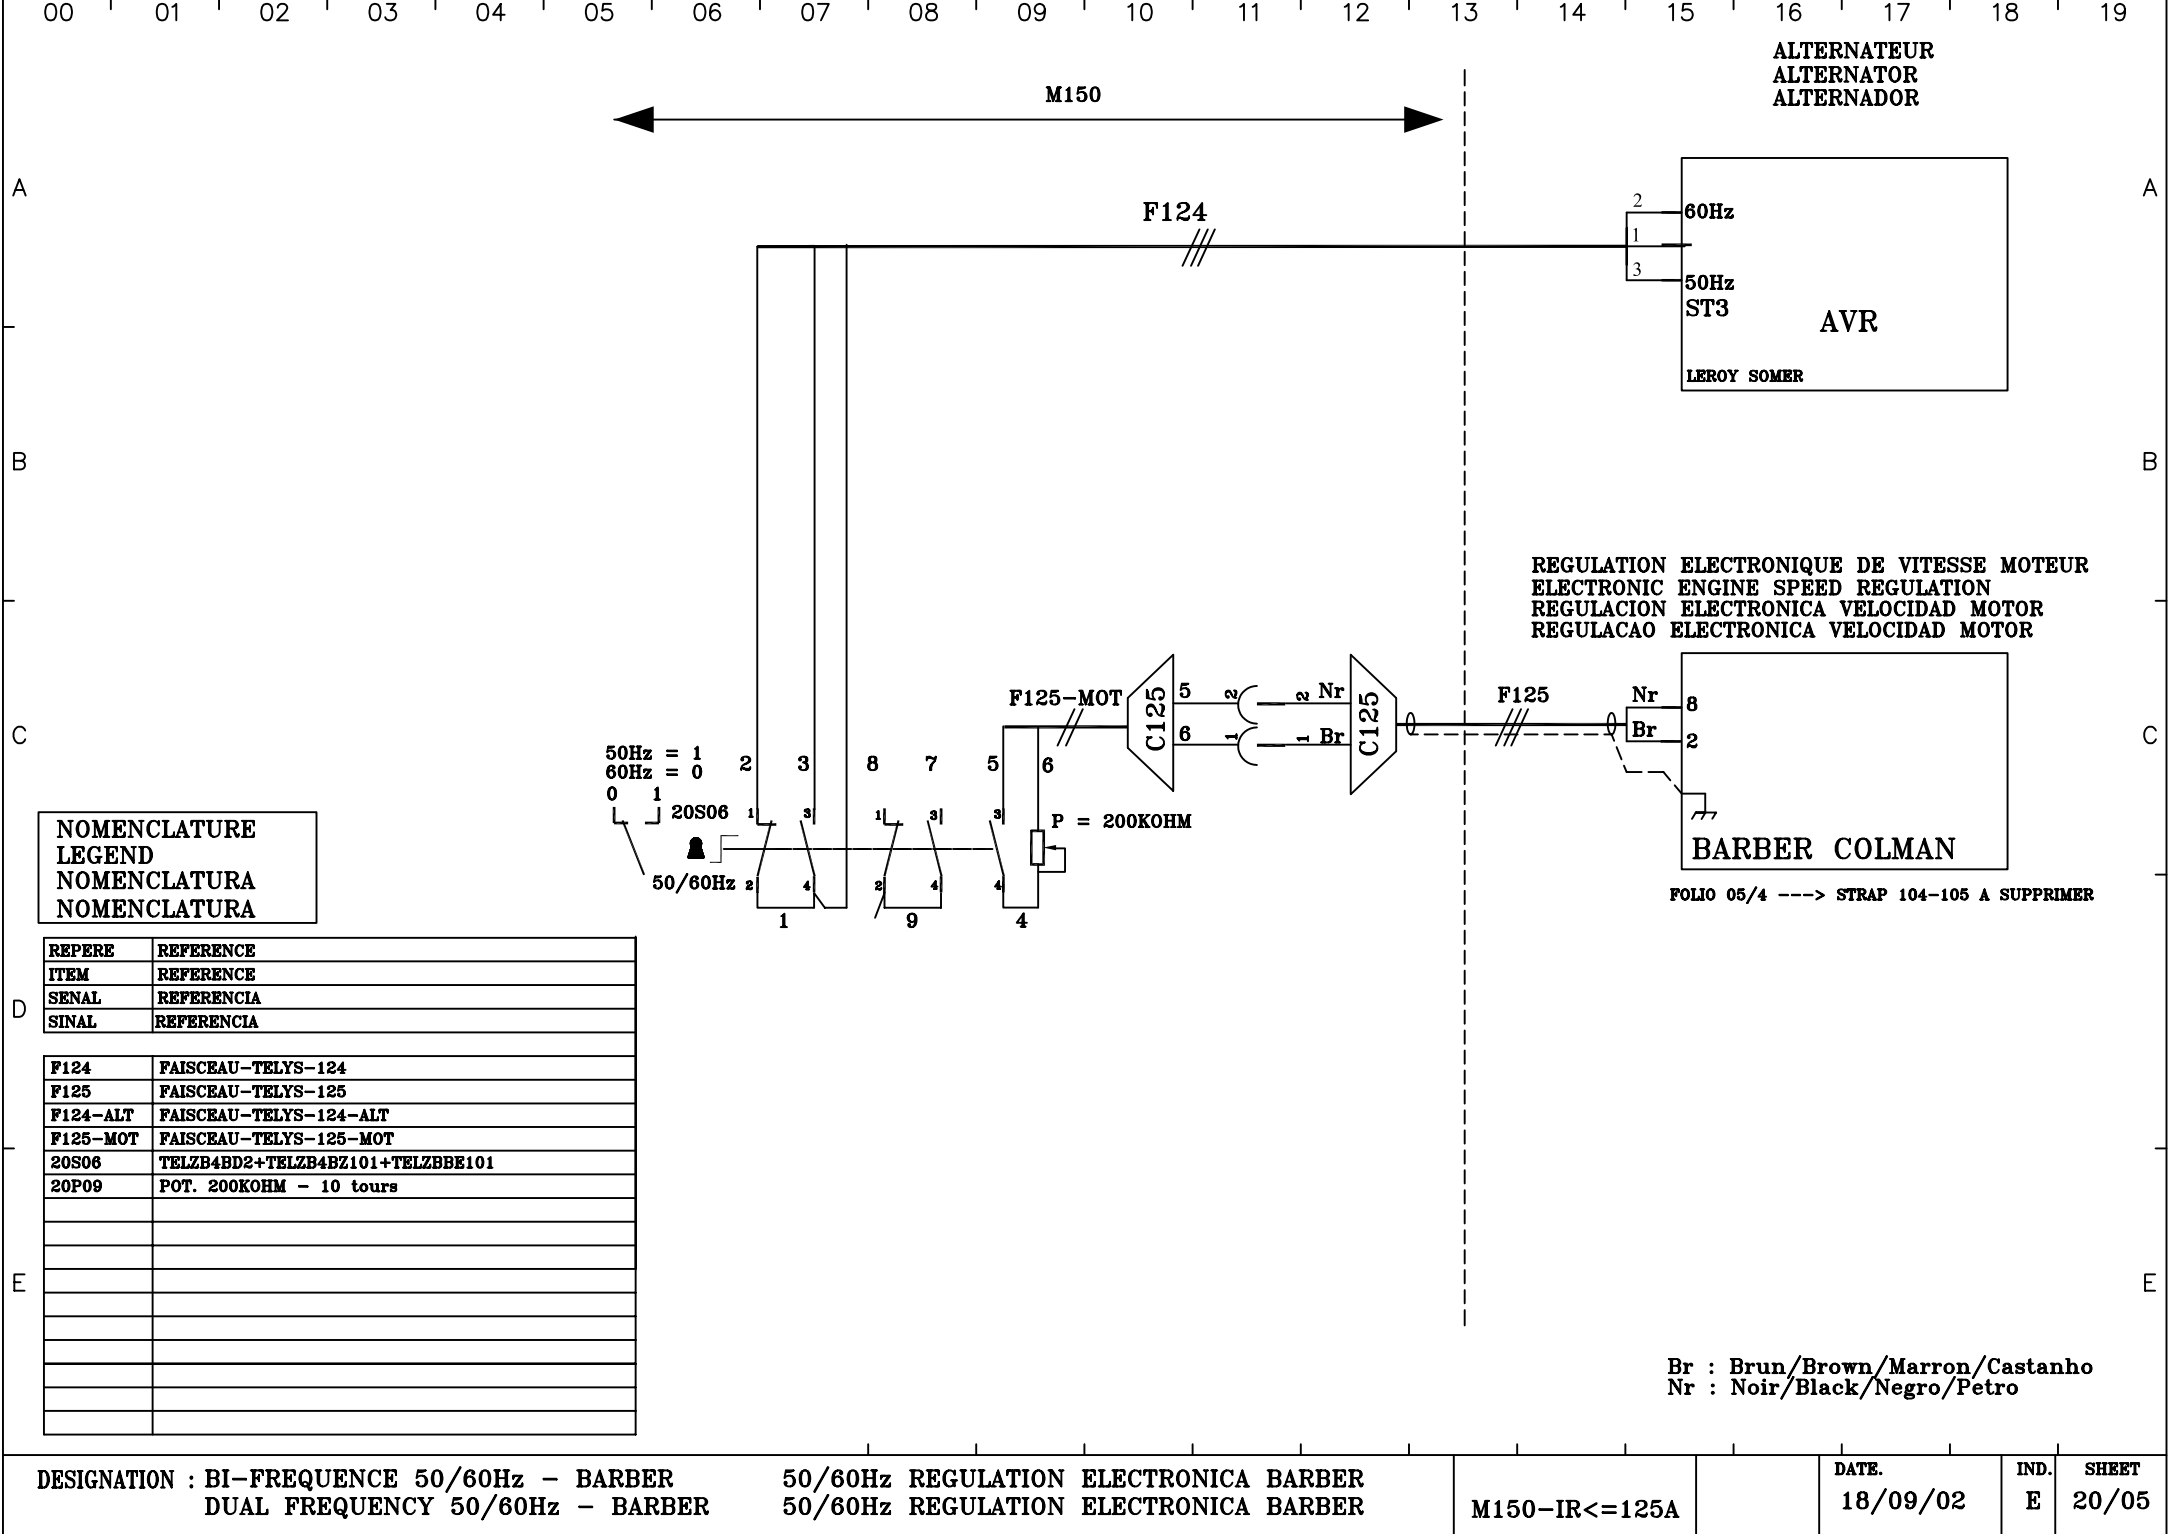

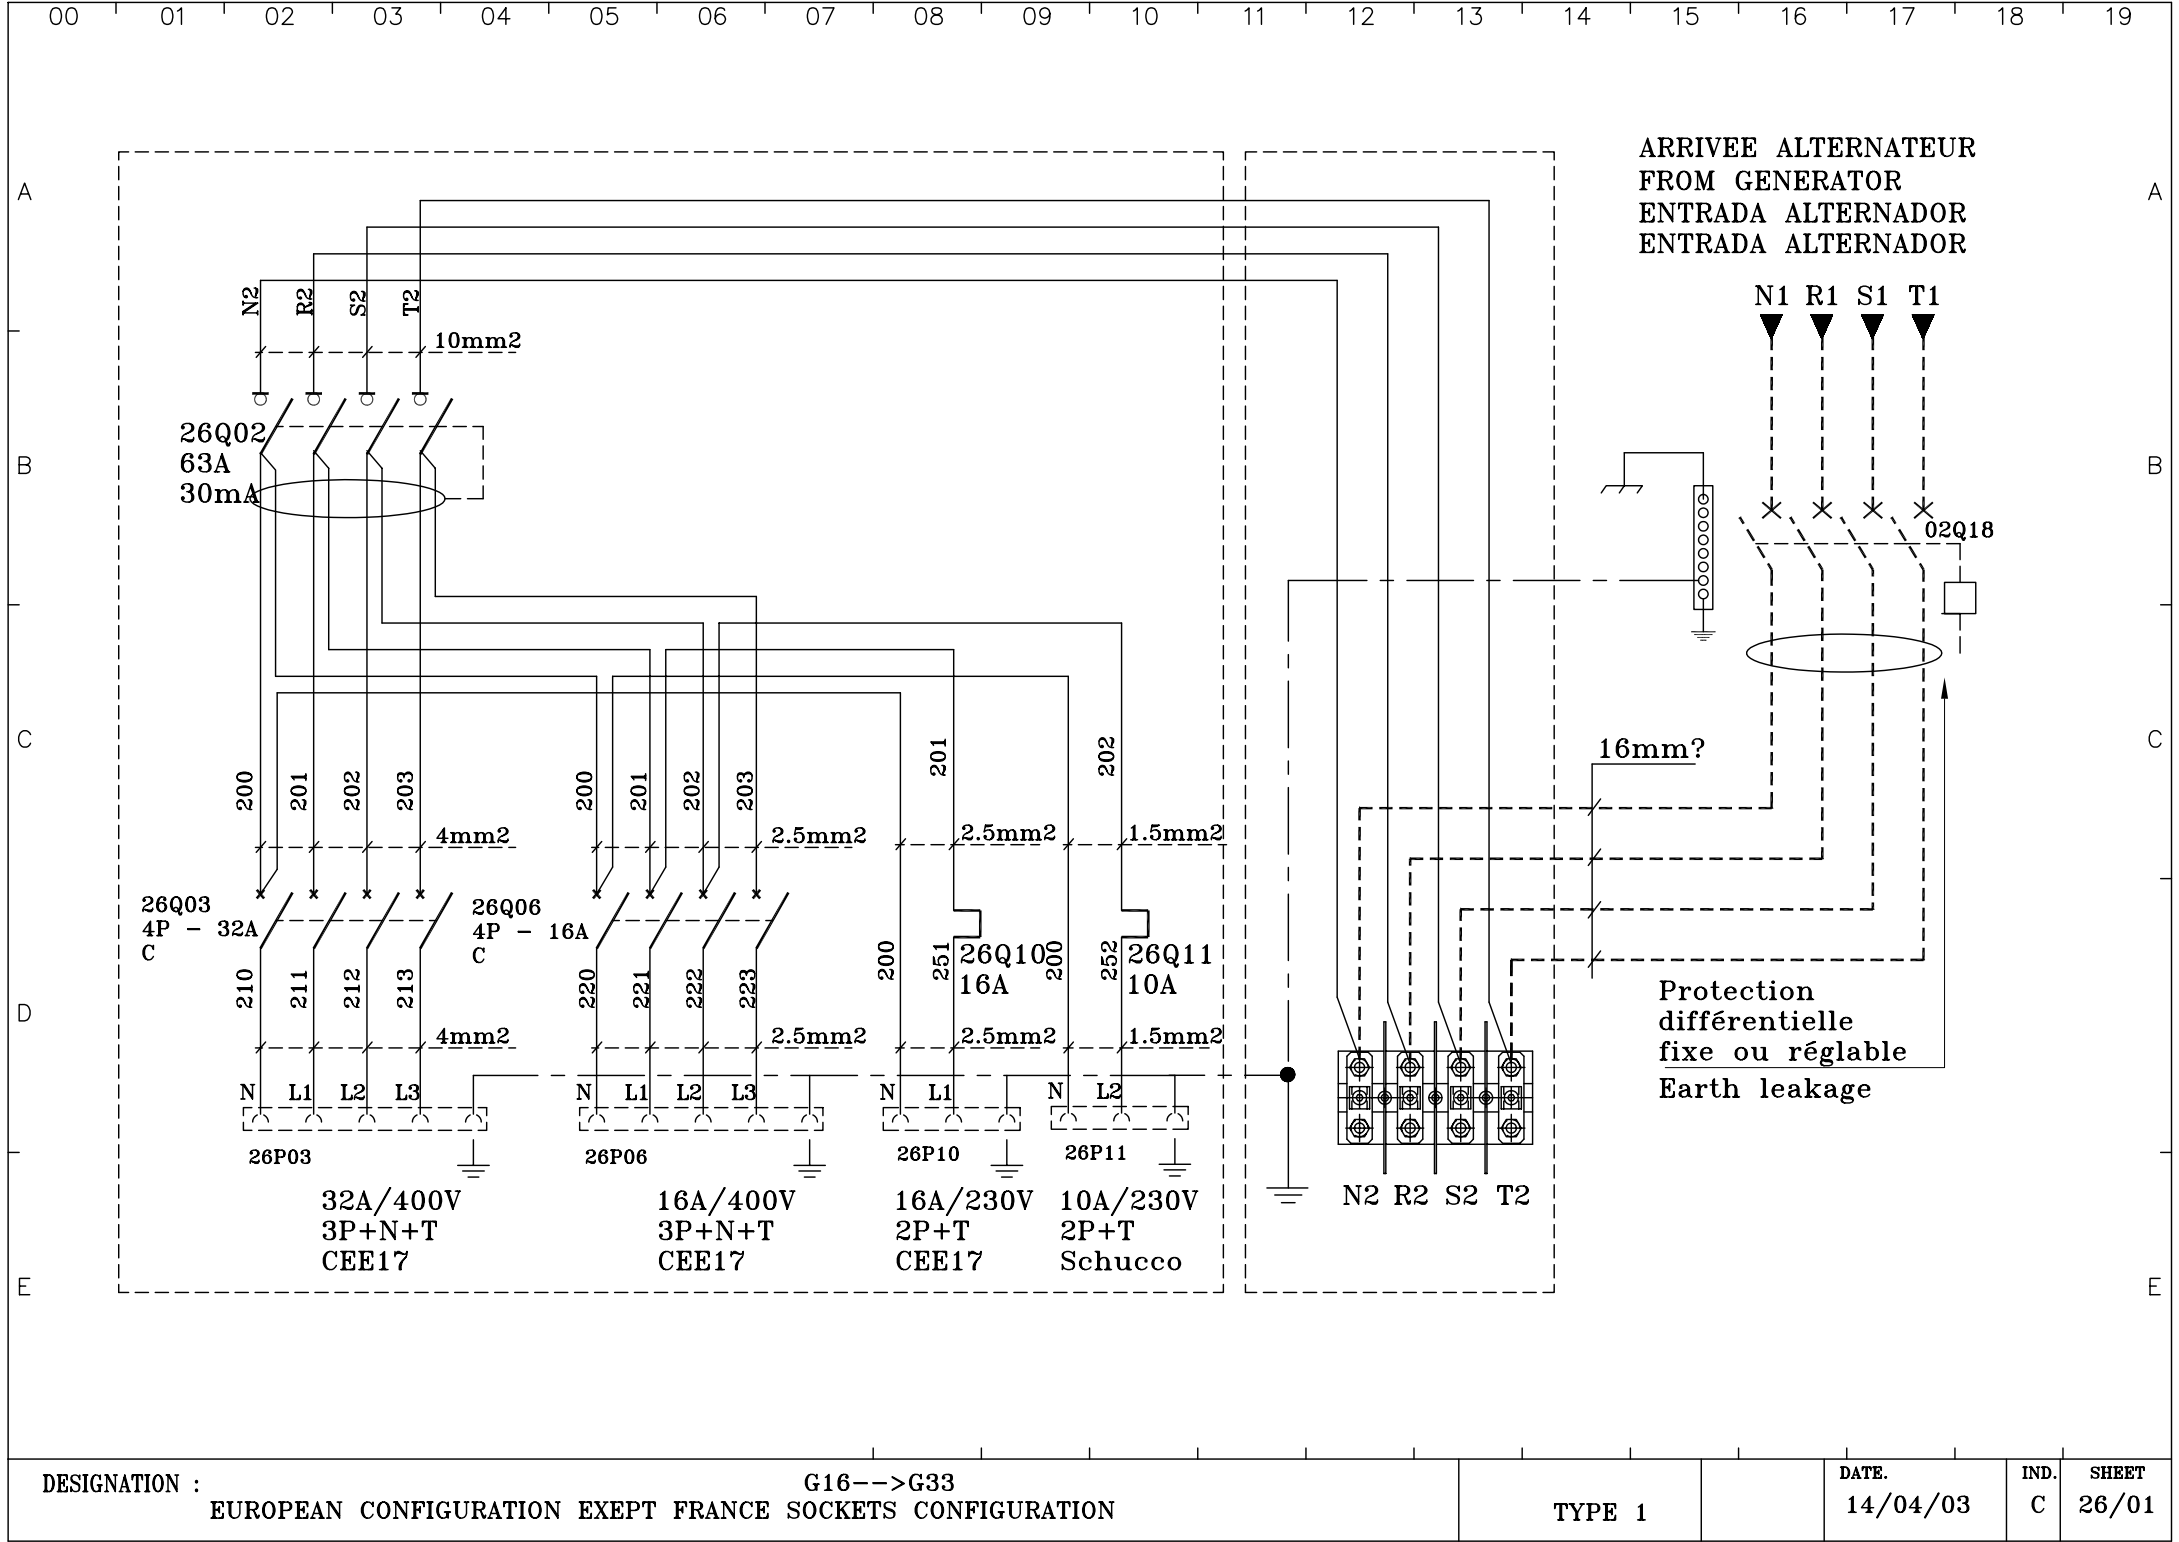

ARRIVEE ALTERNATEUR  
FROM GENERATOR  
ENTRADA ALTERNADOR  
ENTRADA ALTERNADOR


N1 R1 S1 T1

02Q18

16mm²

Protection  
différentielle  
fixe ou réglable  
Earth leakage

N2 R2 S2 T2

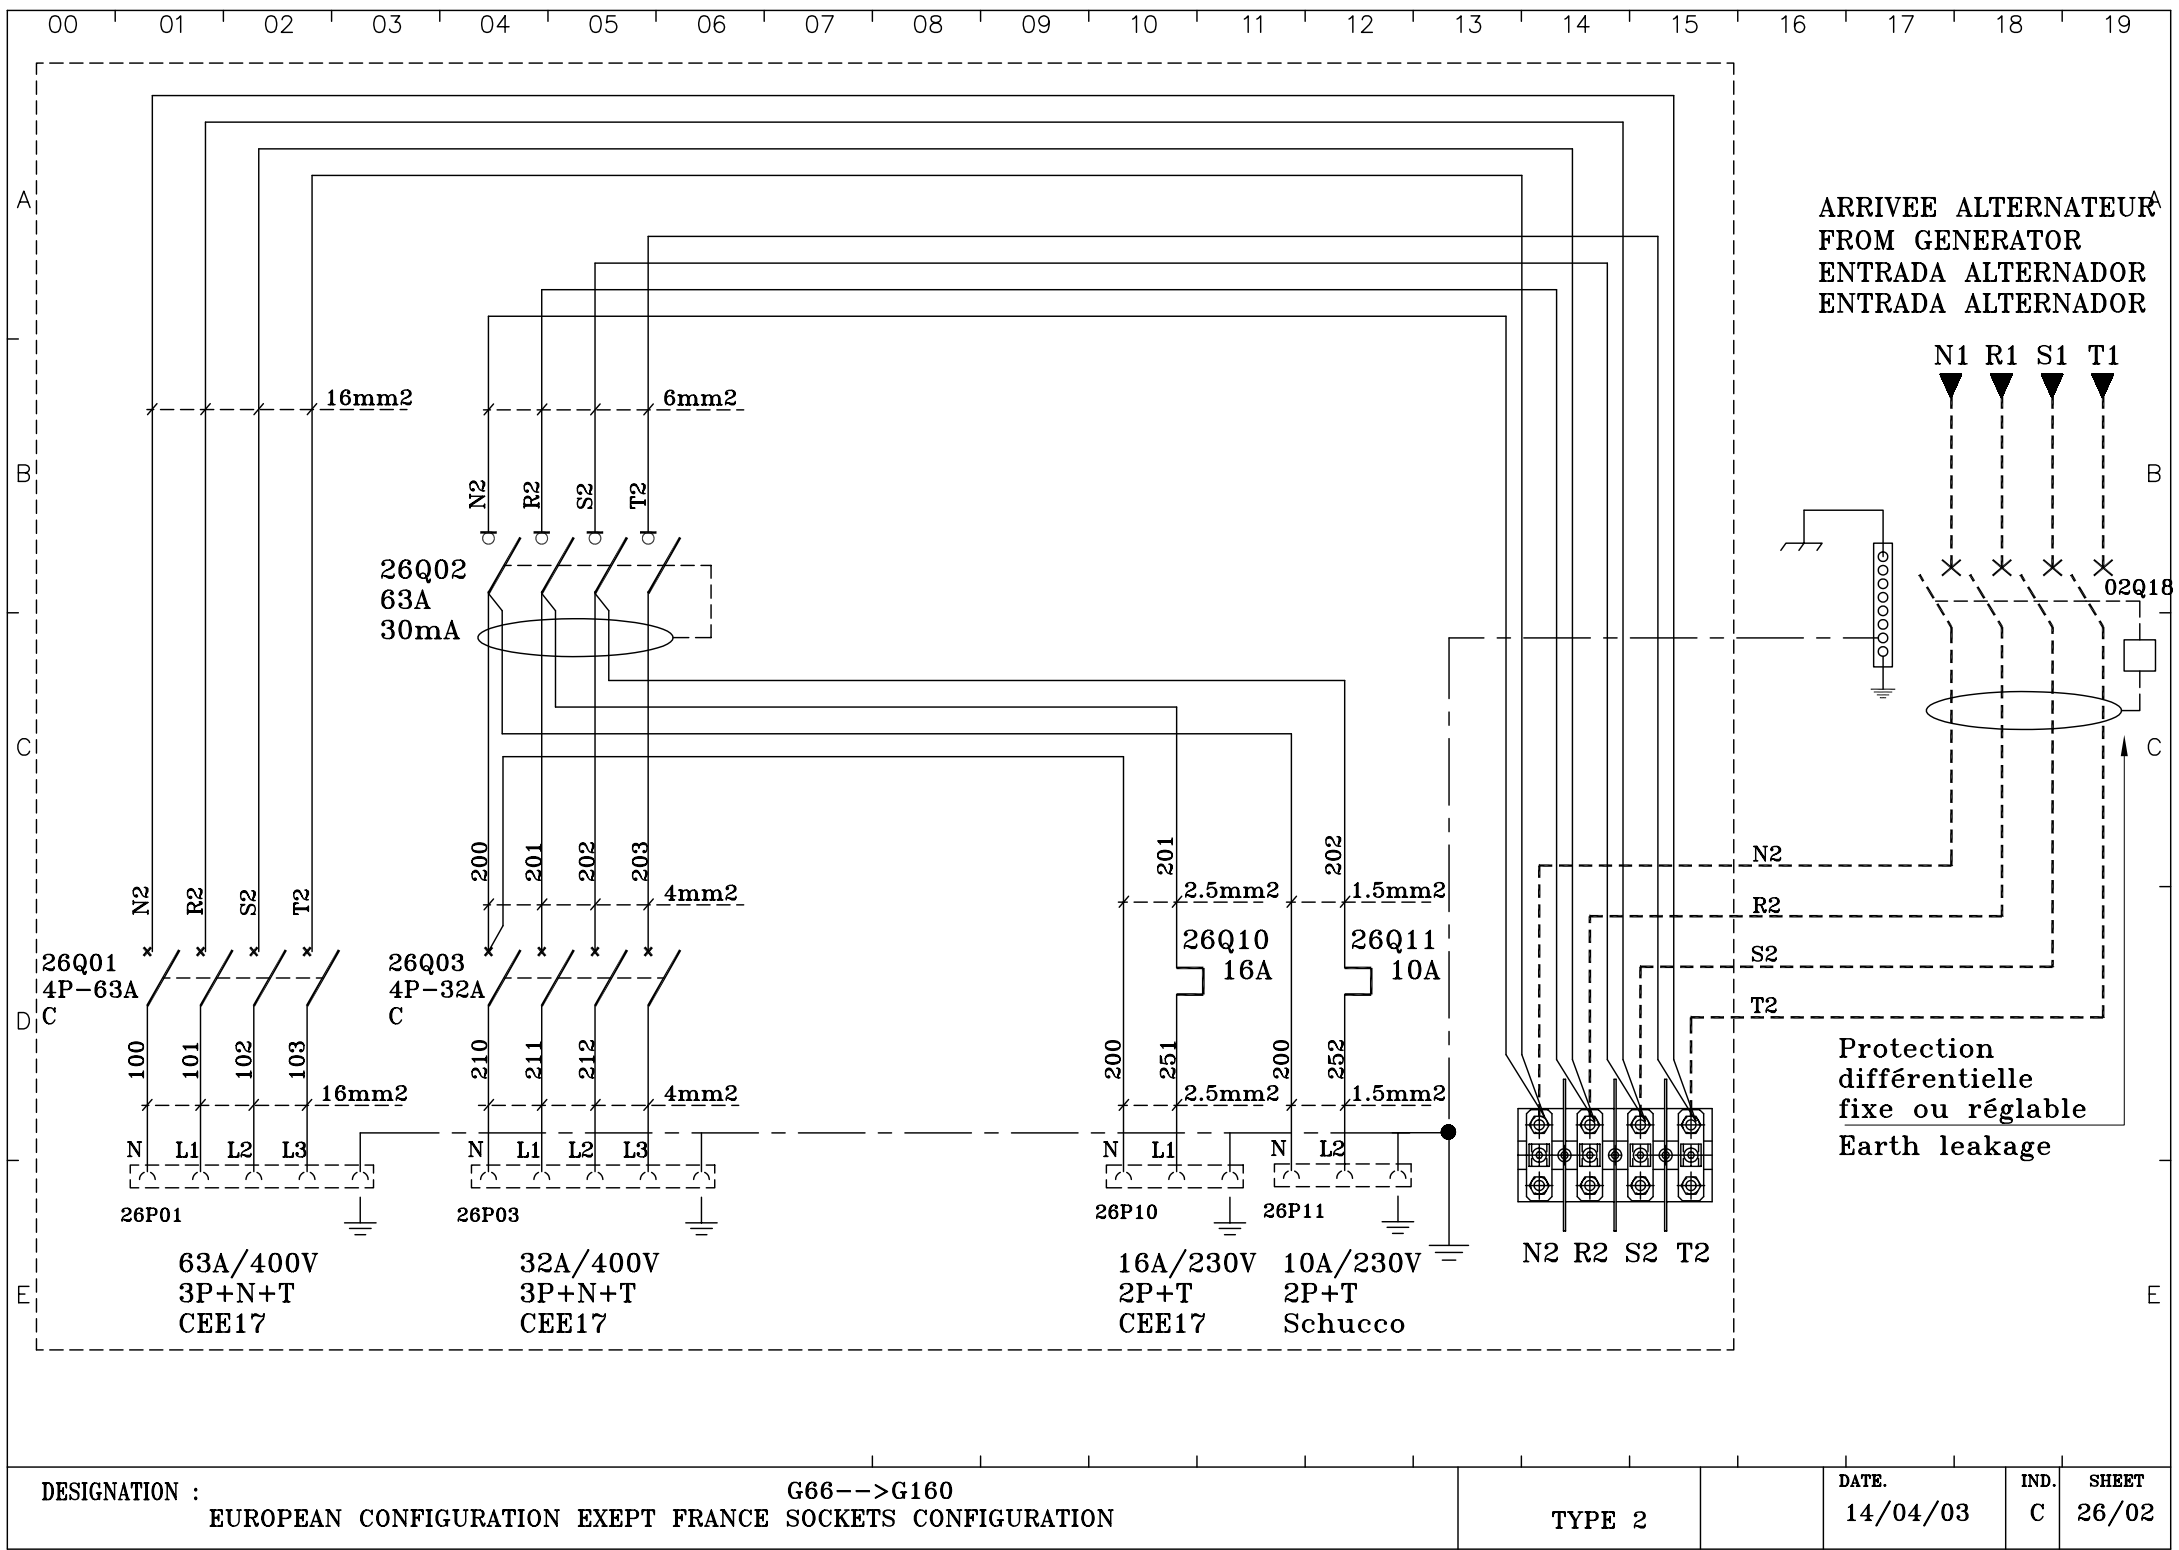


DESIGNATION : G66-->G160  
EUROPEAN CONFIGURATION EXEPT FRANCE SOCKETS CONFIGURATION


TYPE 2

DATE.  
14/04/03

IND.  
C

SHEET  
26/02

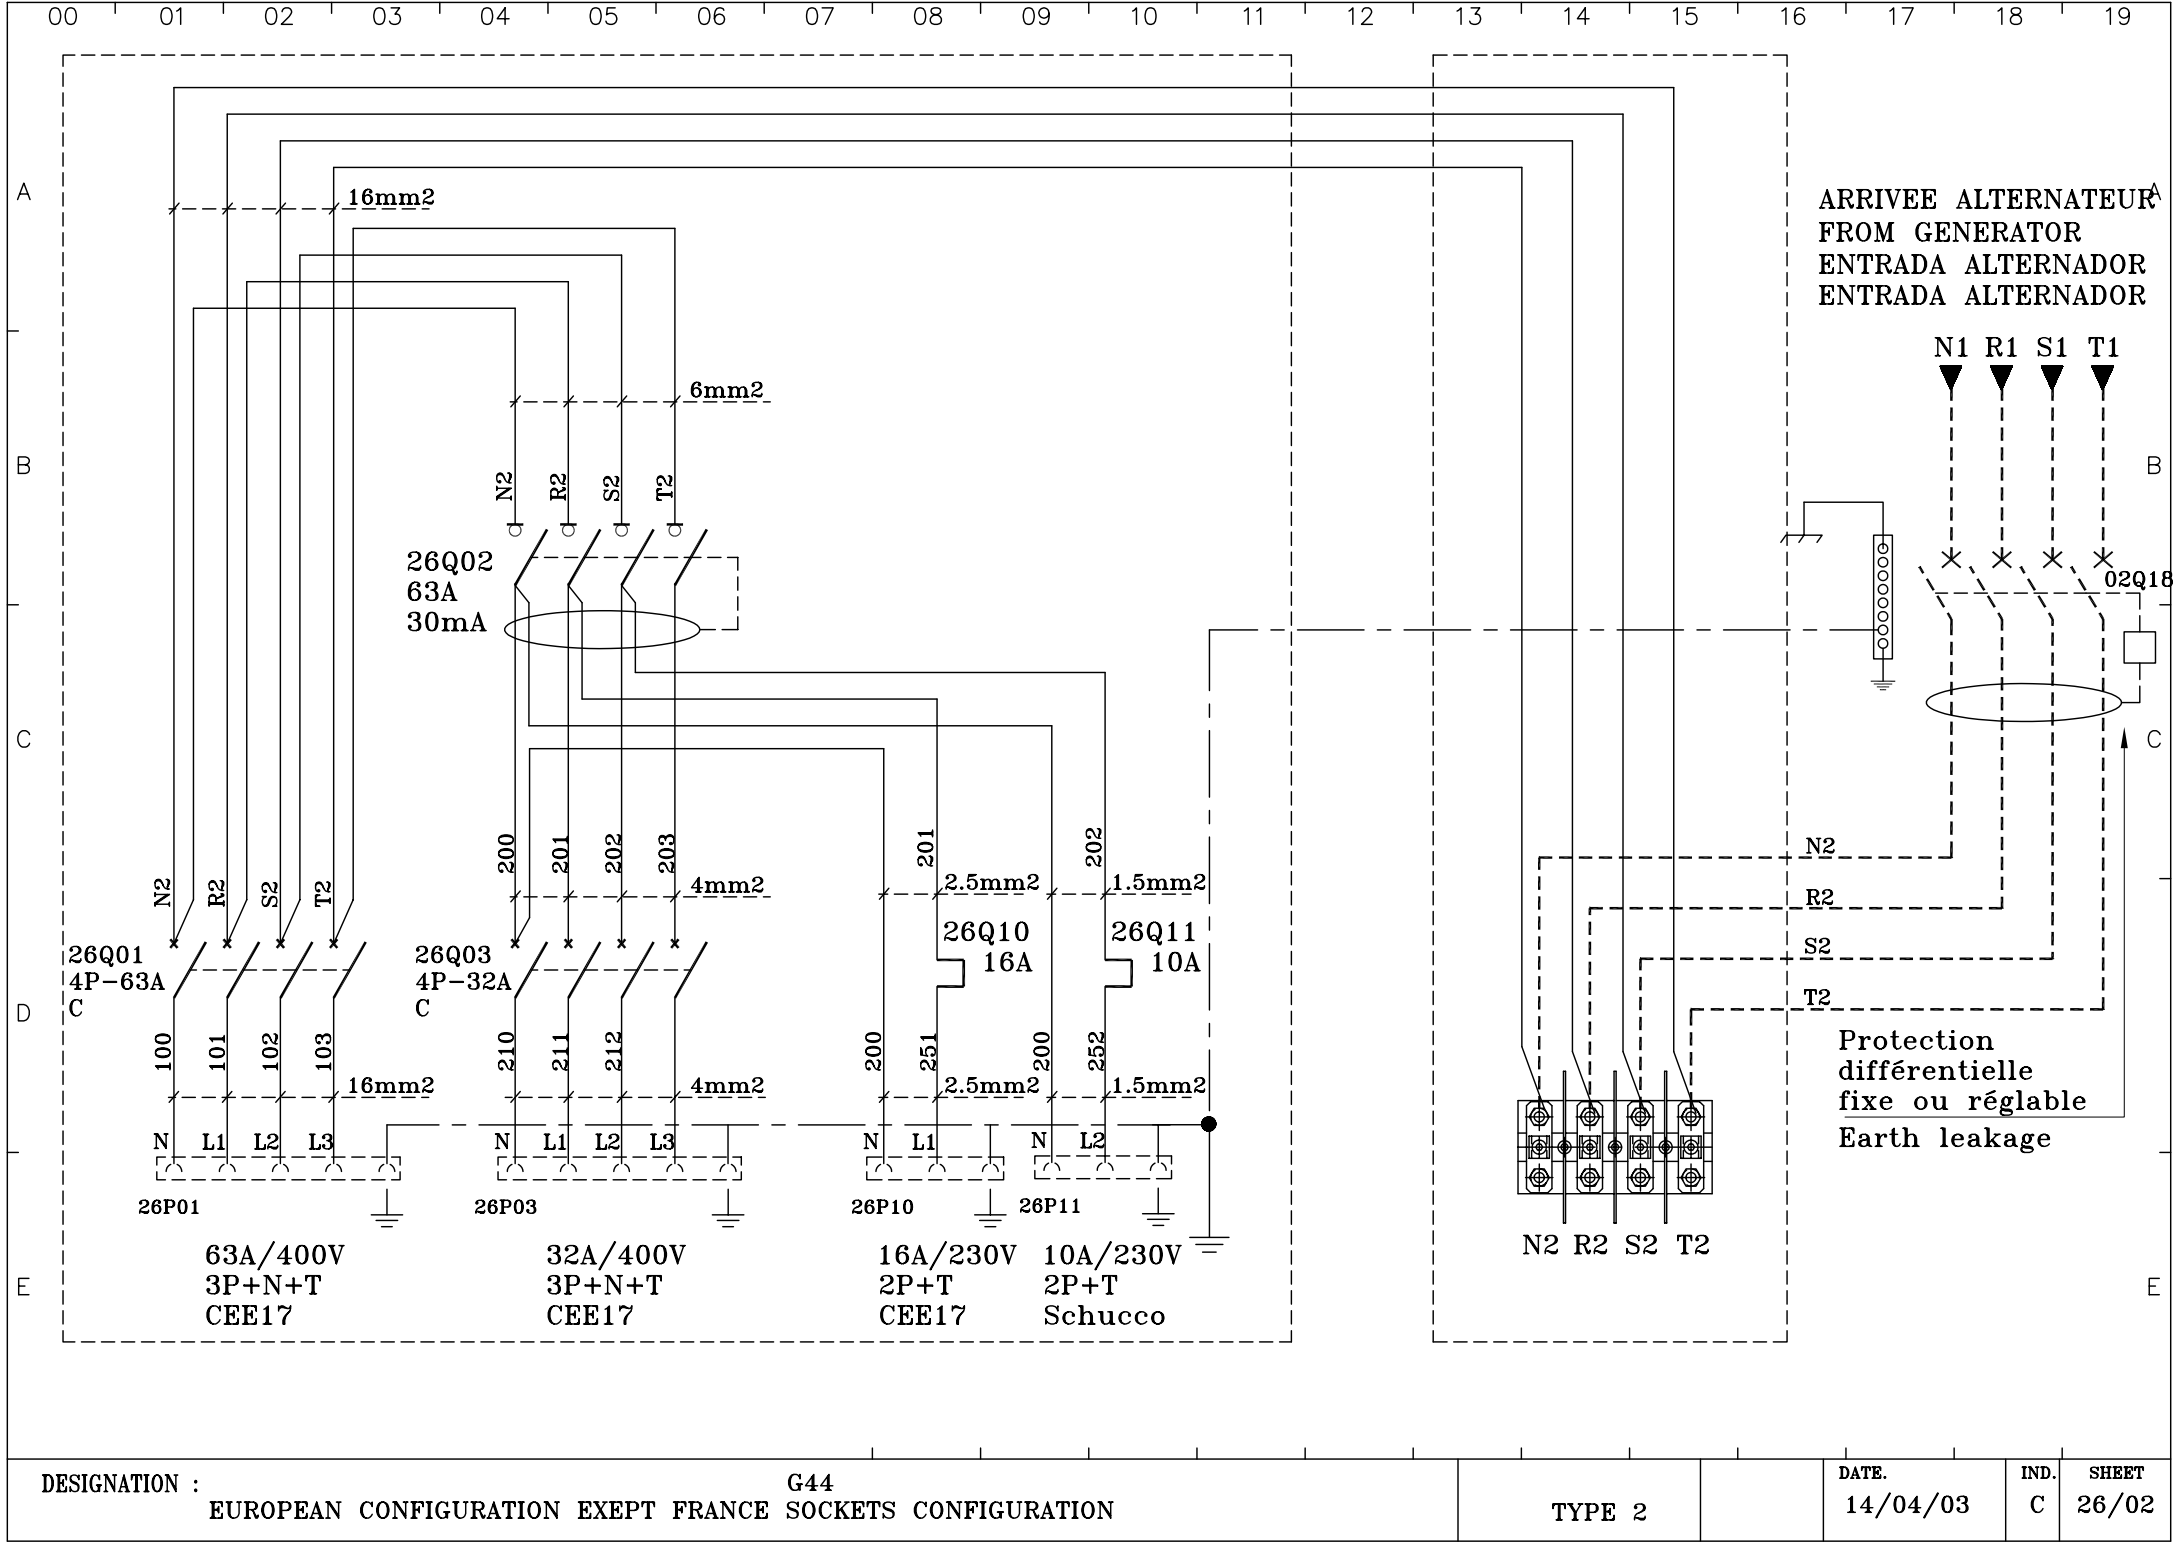

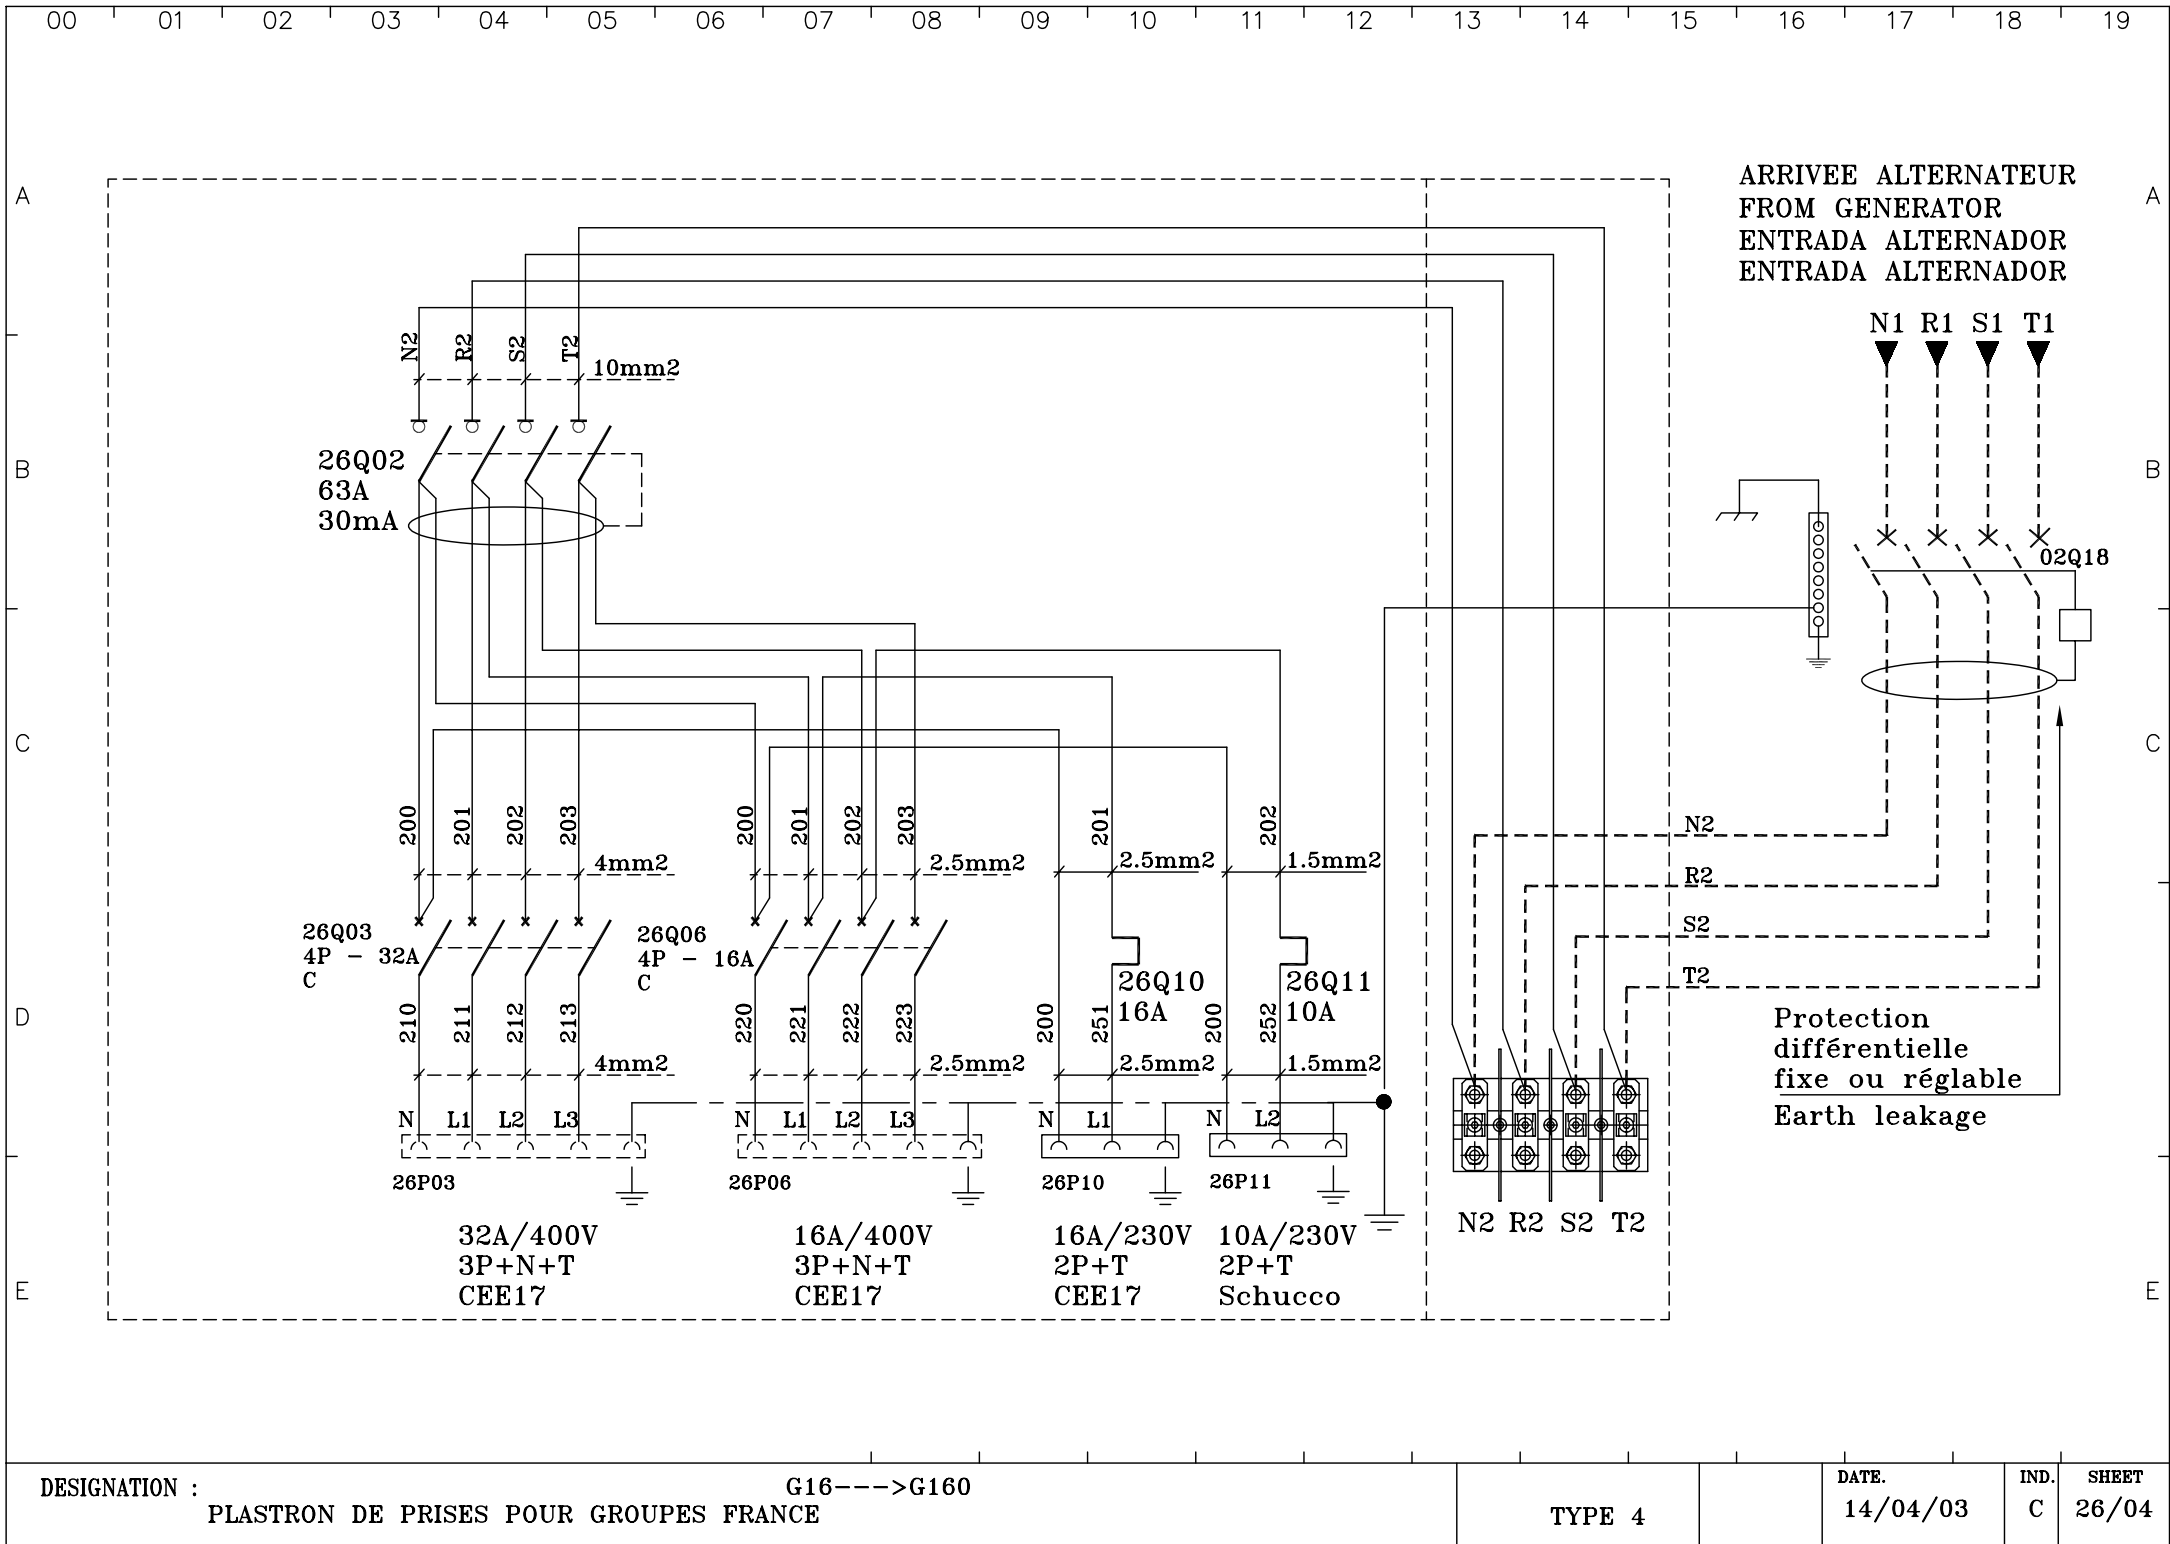

DESIGNATION : G16--->G160  
PLASTRON DE PRISES POUR GROUPES FRANCE


TYPE 4

DATE.  
14/04/03

IND.  
C

SHEET  
26/04



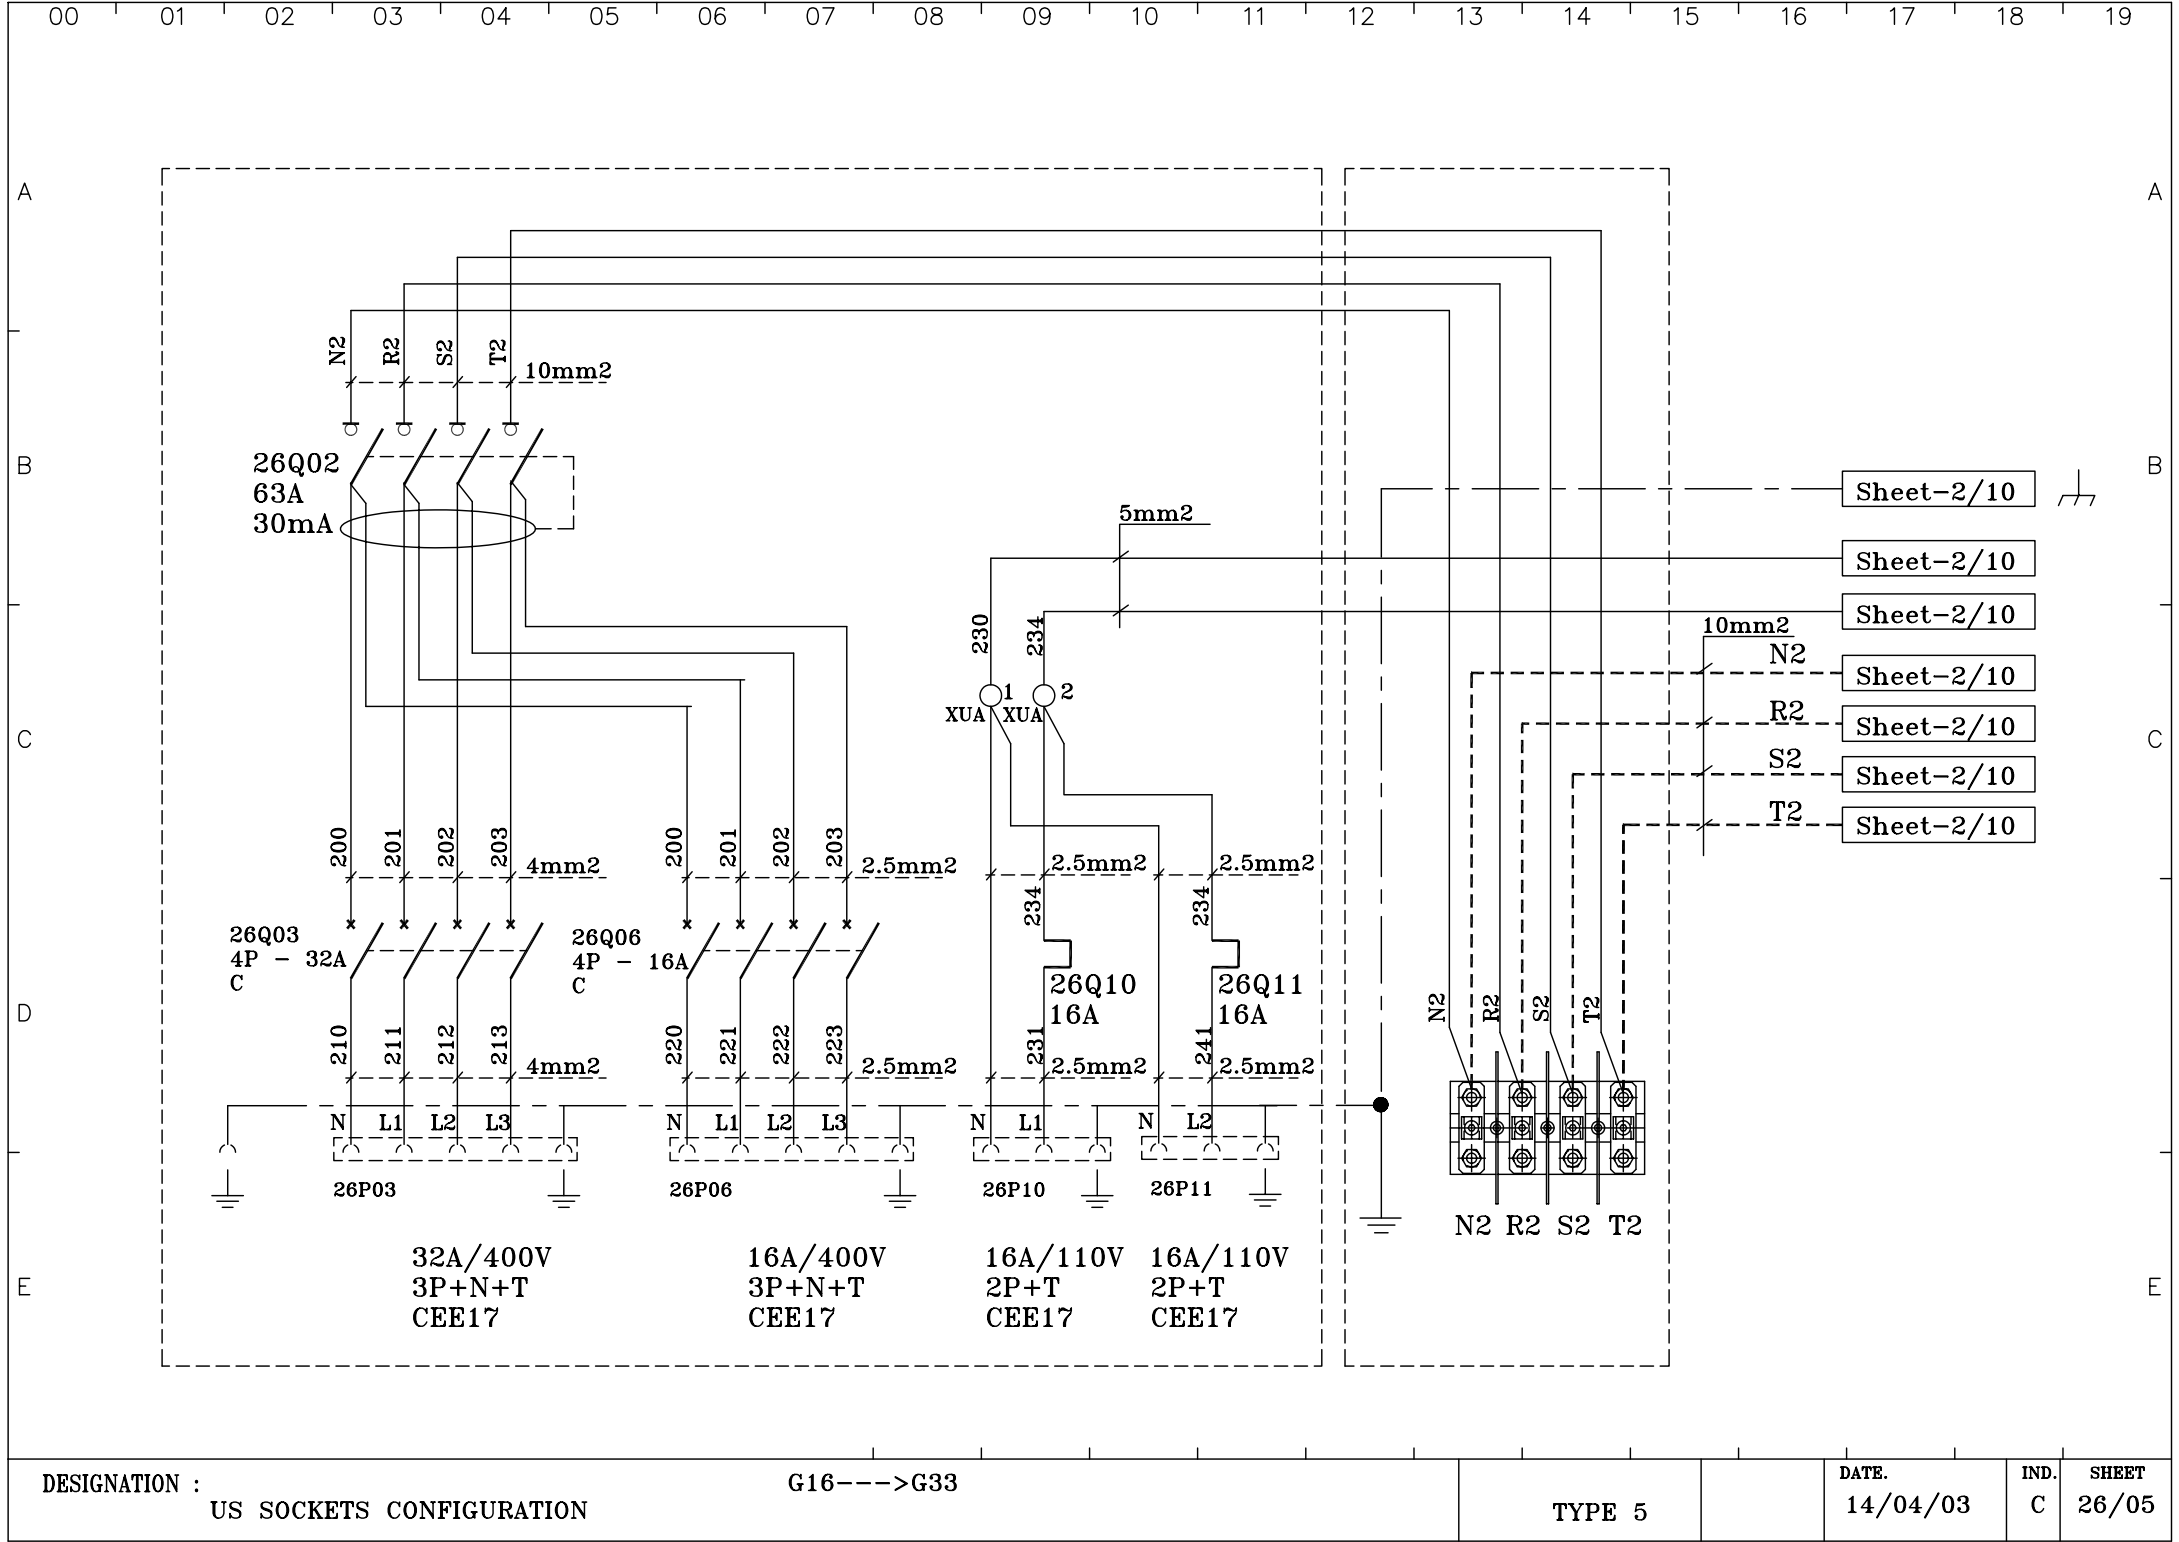

DESIGNATION :  
US SOCKETS CONFIGURATION


G16--->G33

TYPE 5


DATE.  
14/04/03

IND.  
C

SHEET  
26/05


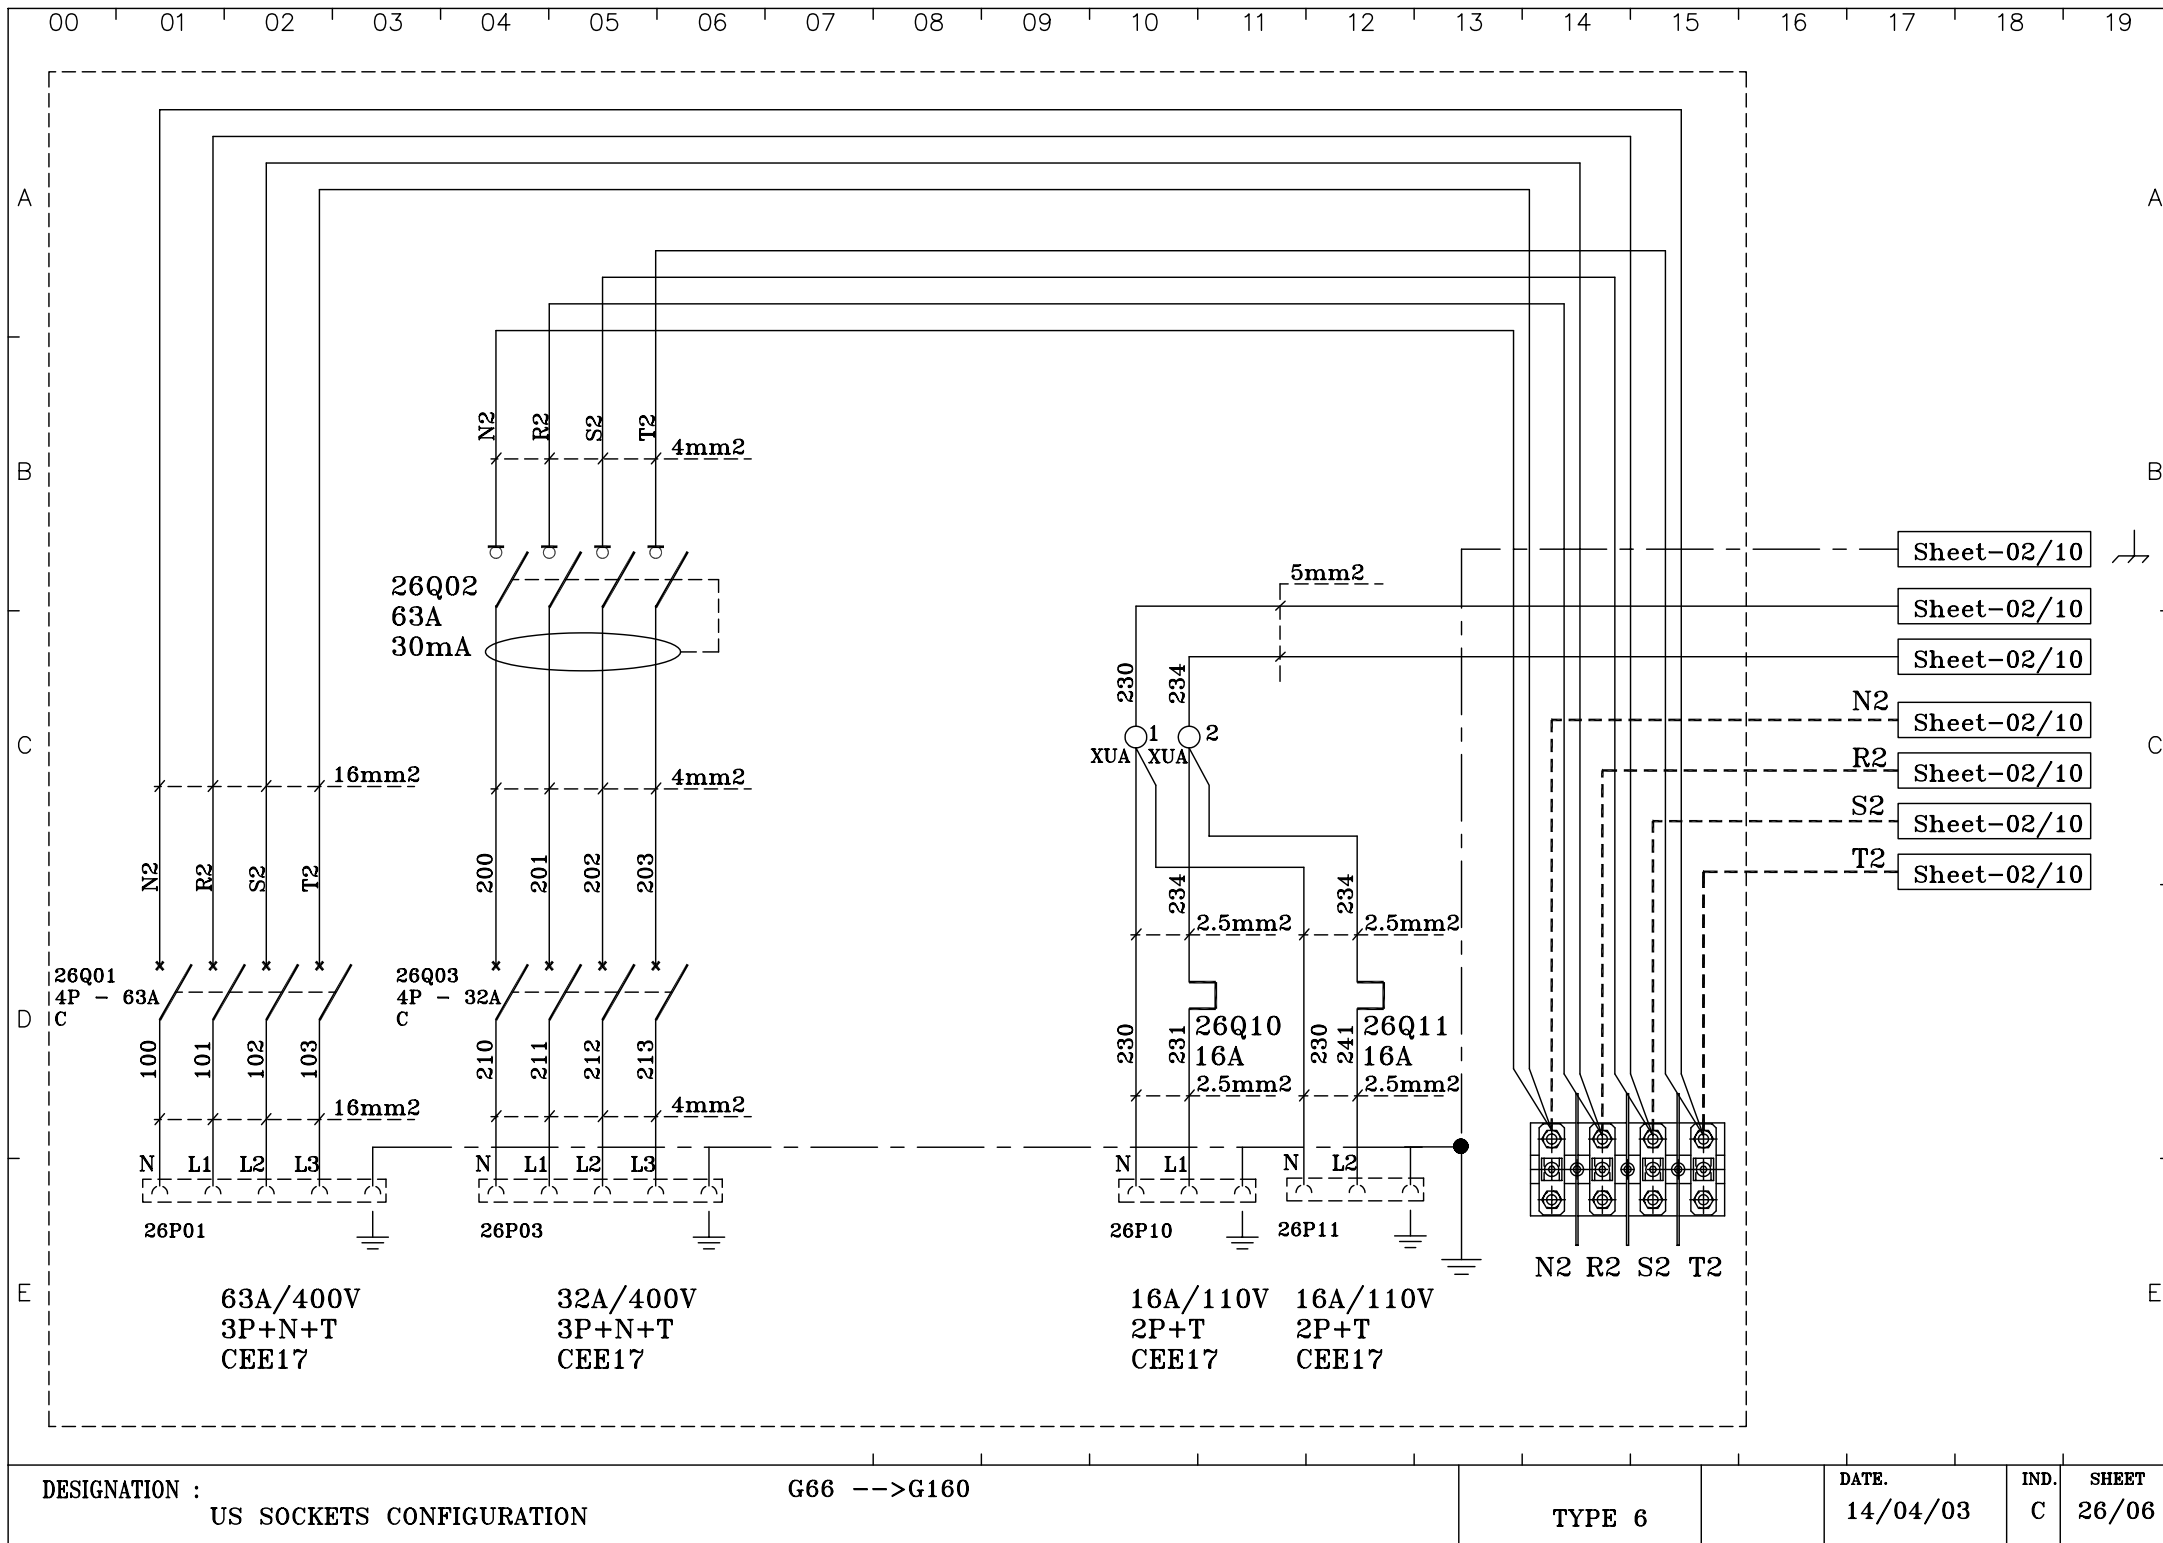




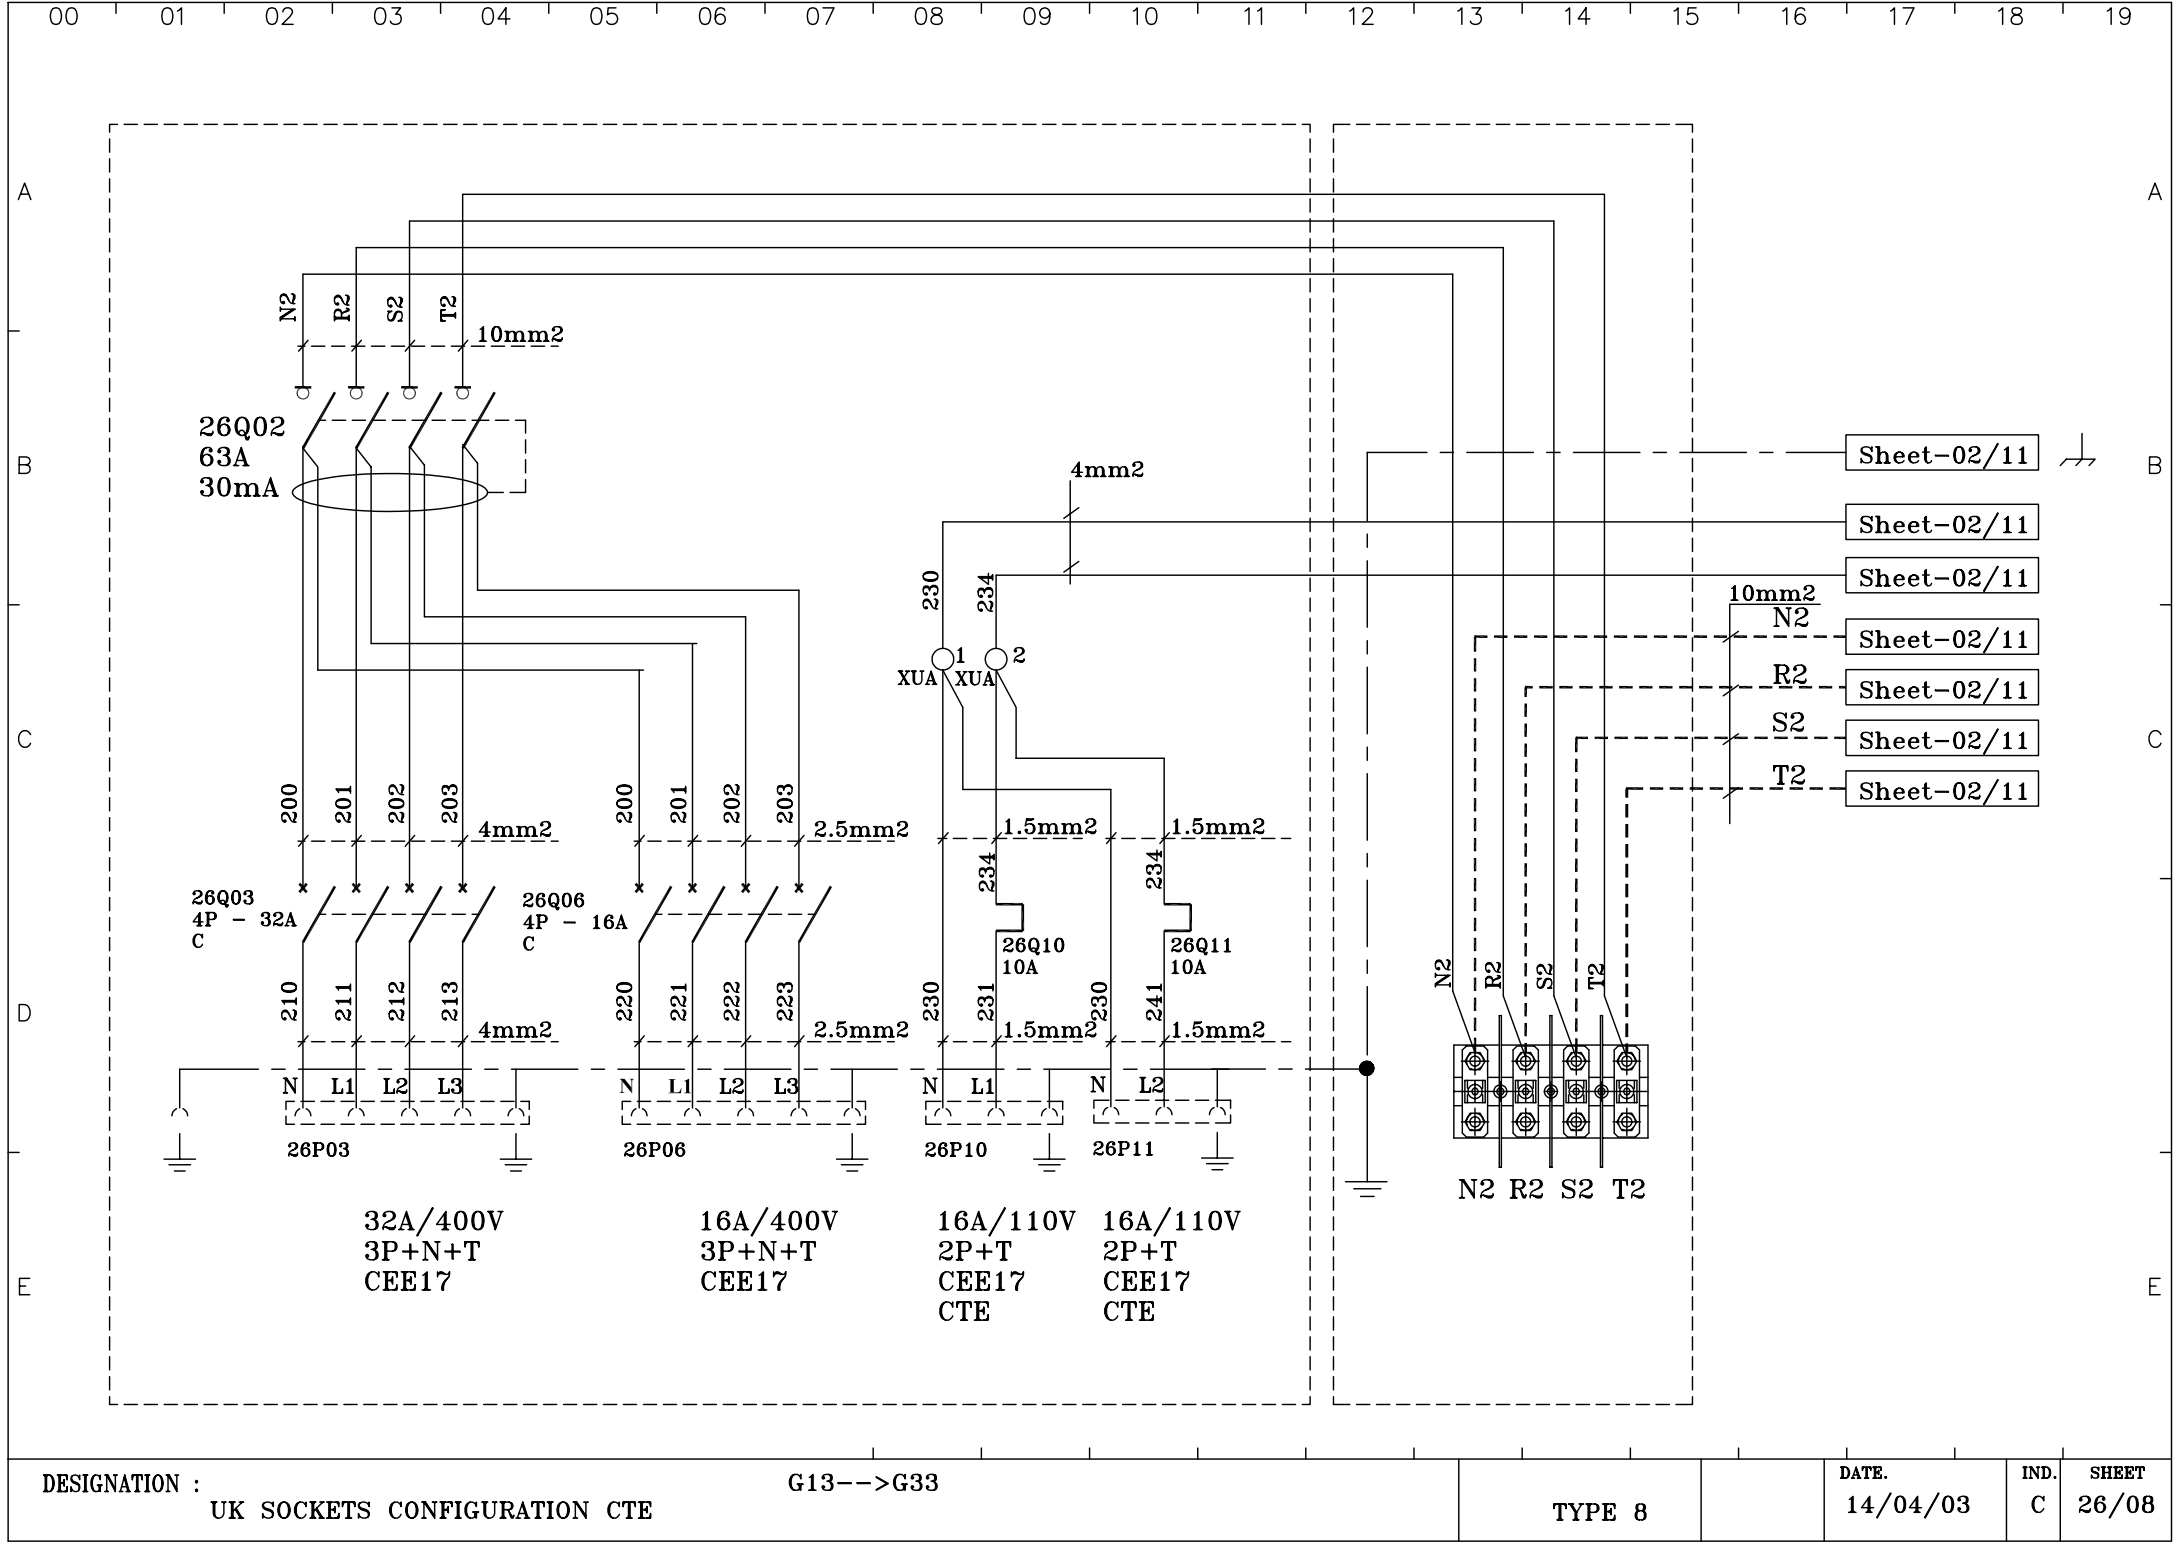






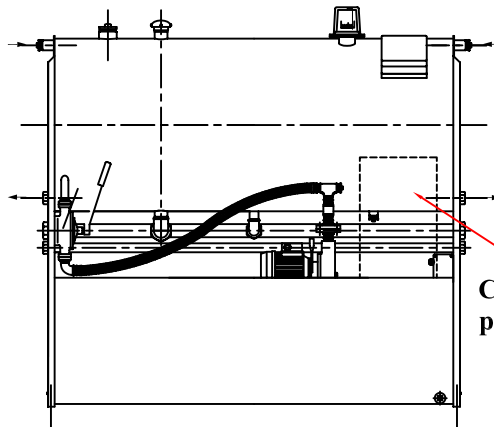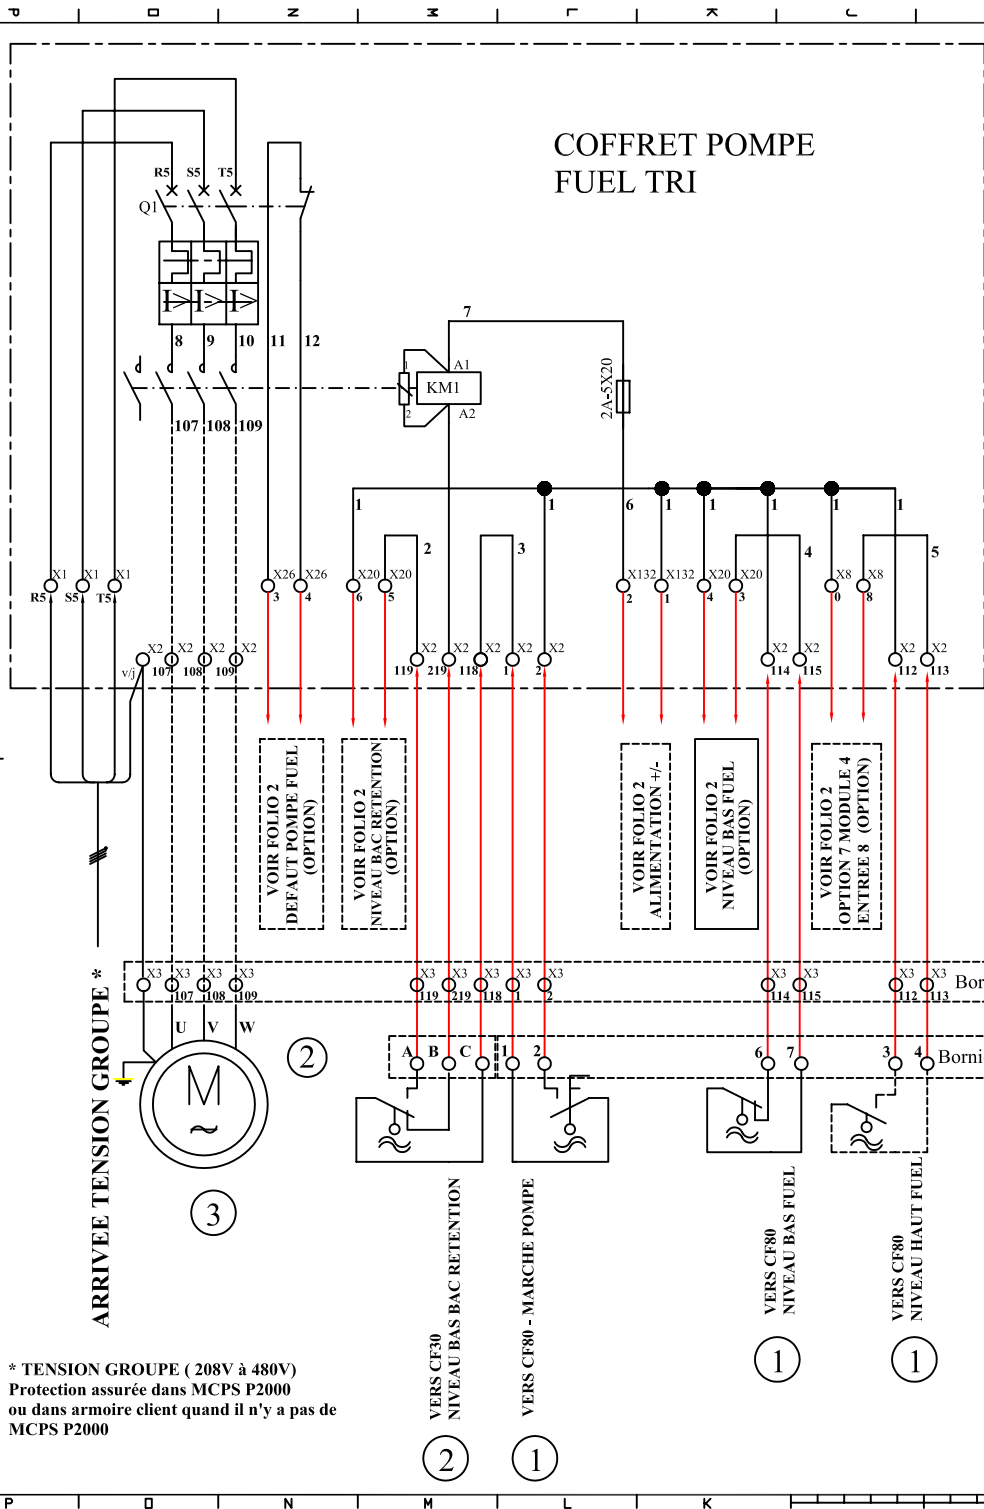

**Coffret pompe fuel tri**

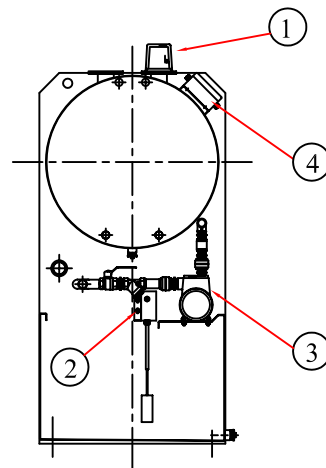

|                                       |  |          |               |                       |      |
|---------------------------------------|--|----------|---------------|-----------------------|------|
| D                                     | AJOUT DIODE ROUE LIBRE SUR KM1                         | 28/03/02 | CALVEZ G.     |                       |      |
| C                                     | AJOUT CONTACT SUR Q1-MODIFICATION NUMEROTATION BORNIER | 05/03/02 | CALVEZ G.     |                       |      |
| B                                     | MISE EN CONFORMITE NUMEROS                             | 22/05/01 | BERGOT Gilles |                       |      |
| A                                     | CREATION DOCUMENT                                      | 30/11/98 | BERGOT.G      |                       |      |
| IND.                                  | DESIGNATION DE LA MODIFICATION                         | DATE     | VISA          | DATE                  | VISA |
|                                       |  | DESSINE  |               | VERIFIE               |      |
| MATIERE :                             |  |          |               | FORMAT :              |      |
| REVETEMENT :                          |  |          |               | ECHELLE :             |      |
| TOLERANCE :                           |  |          |               | FOLIO : 1/2           |      |
| DESIGNATION :                         |  |          |               | MASSE (Vide/Plein) kg |      |
| NOTICE RACCORDEMENT - FOLIO1          |  |          |               |                       |      |
| COFFRET POMPE FUEL SIMPLE- 1 ou 4m3/h |  |          |               |                       |      |
| 3-35-03-0037-01-D                     |  |          |               |                       |      |




12 bis, rue de la Villeneuve 29272 BREST - Tel : 02.98.41.41.41 - Telex : 940757F - Telecopie : 02.98.41.63.07  
CE PLAN EST LA PROPRIETE DE LA SOCIETE ; IL NE PEUT ETRE REPRODUIT, UTILISE OU COMMUNIQUE SANS SON AUTORISATION







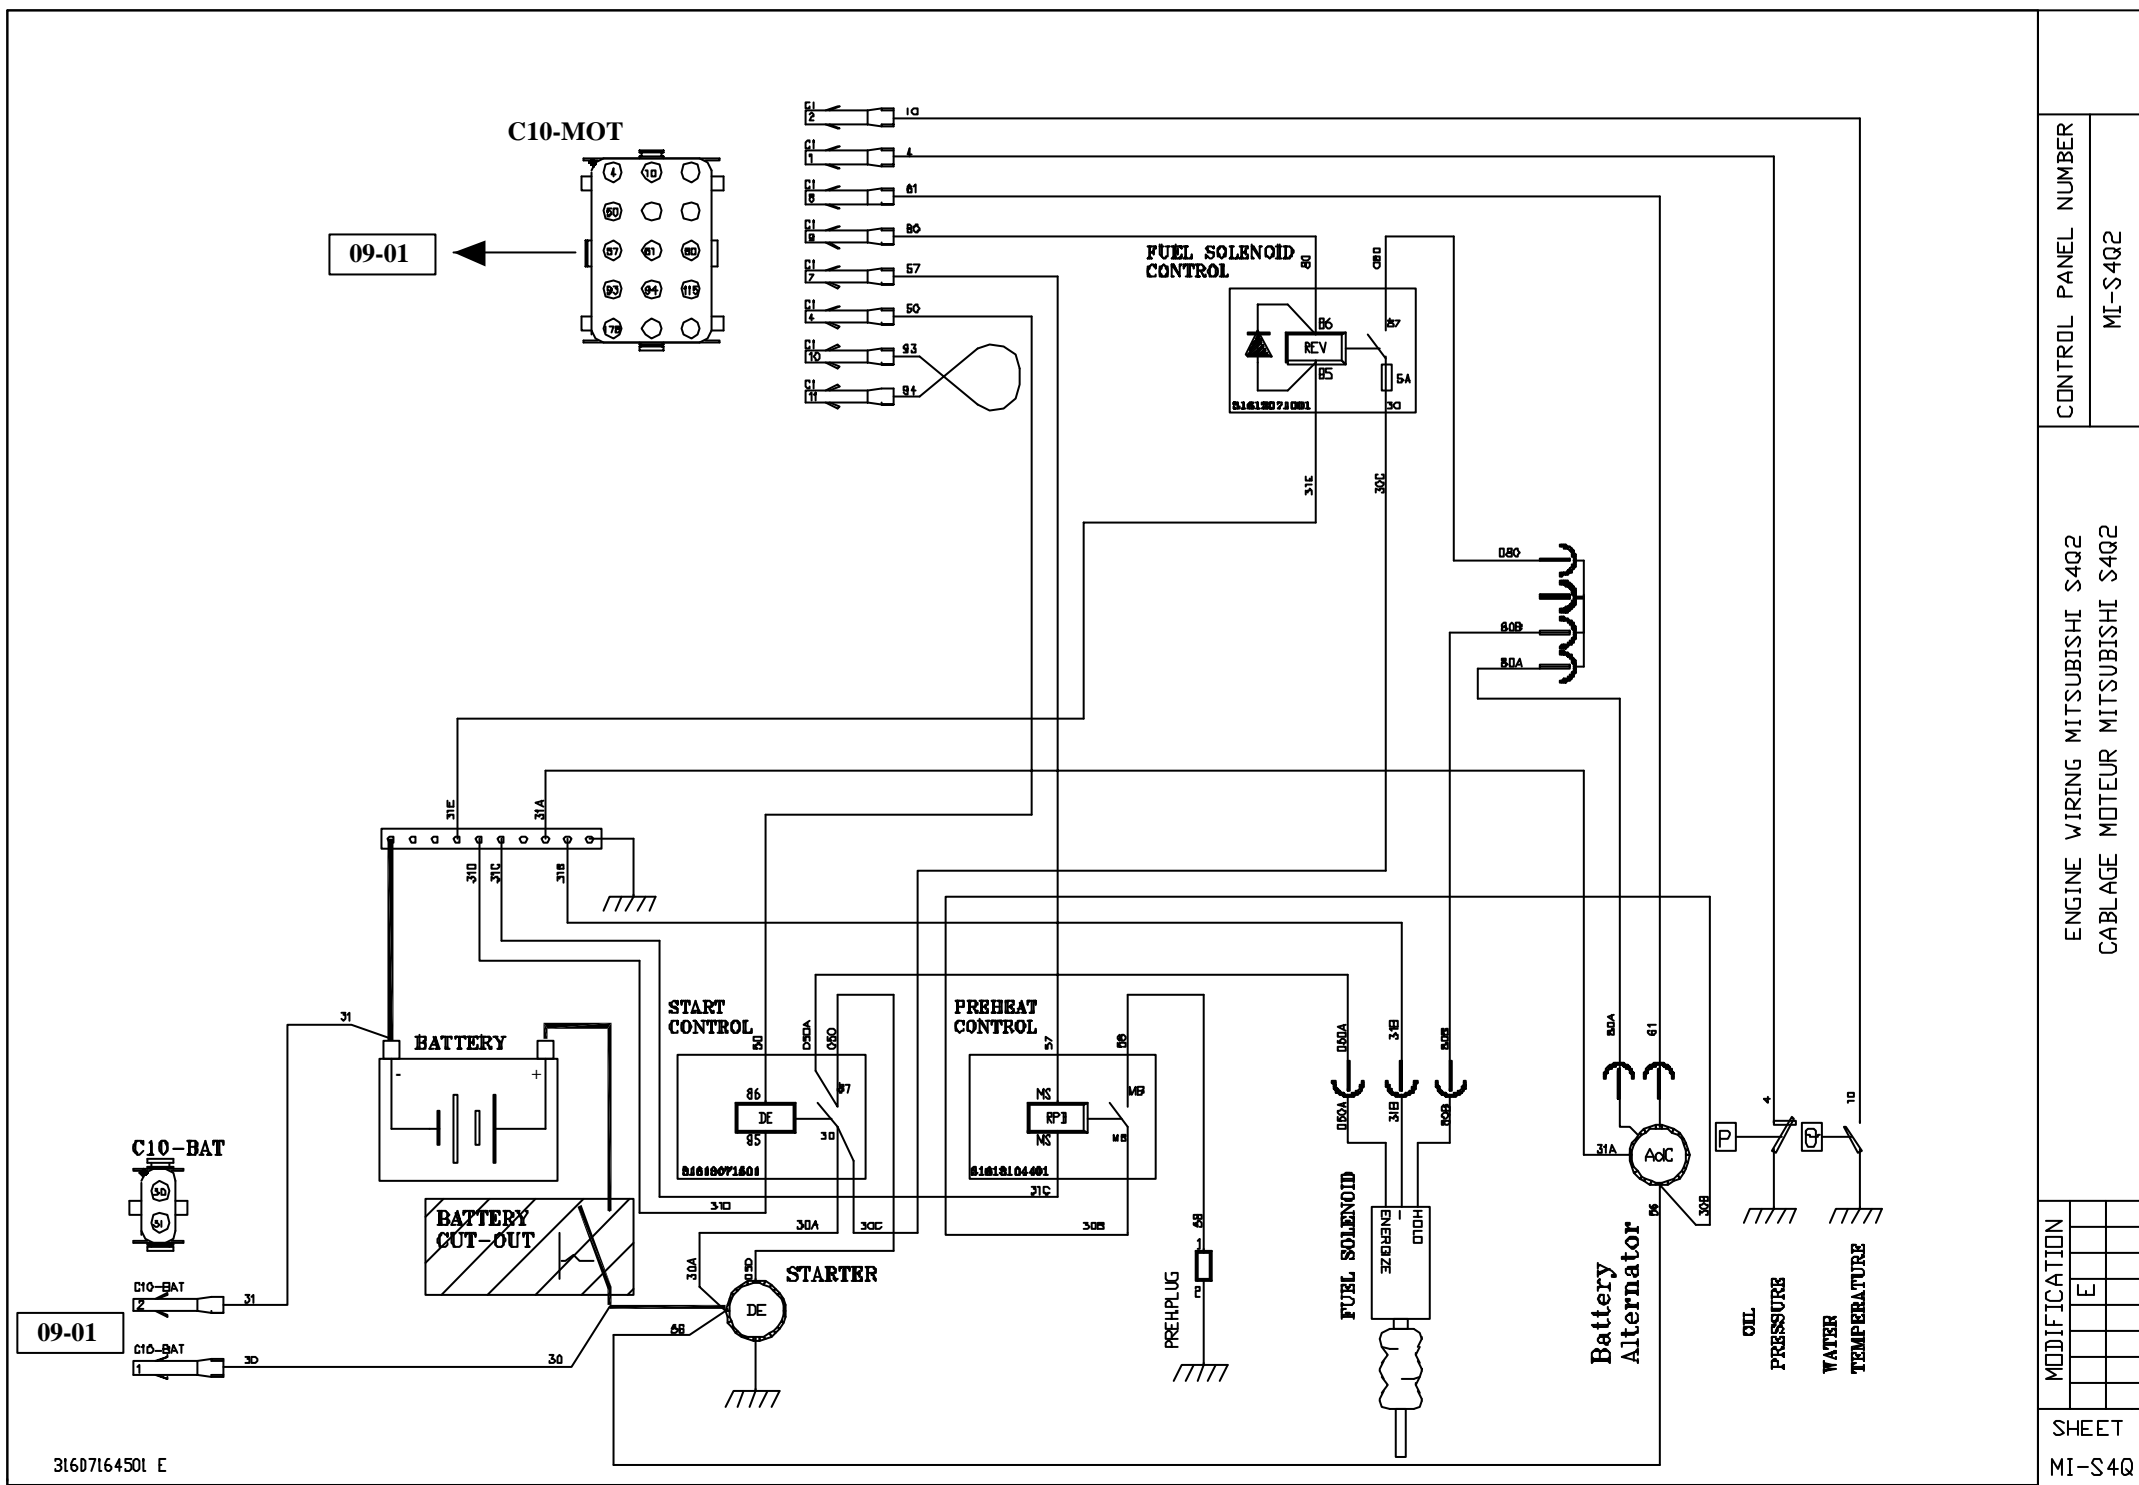









# Users guide and maintenance manual

Mitsubishi

SL series

Réf. constructeur :  
Version 02/2003

Réf. GPAO : 33522049401 ind1

# INTRODUCTION

This publication covers the standard specification model for the Mitsubishi SL-Series diesel engines. The information, specifications, and illustrations in this publication are based on the information that was current at the time this issue was written.

This manual contains operation instructions, lubrication and maintenance information.

The OPERATION section is a reference for the new operator and a refresher for the experienced operator. Read — study — and keep it handy. Illustrations guide the operator through correct procedures of checking, starting, operating, and stopping the engine. Operating techniques outlined in this manual are basic. Skills and techniques develop as the operator gains knowledge of the engine.

The MAINTENANCE section is a guide to engine care. The illustrated, step-by-step instructions are grouped by service intervals. Items without specific intervals are listed under "When Required." Items in the Lubrication and Maintenance Chart are referred to in the detailed instructions which follow.

Notice that the technical information in this manual depends on the specification of the engine and the accessories. All specifications are subject to change without any prior notice.

For items other than those in this publication, please refer to the operation manual of the equipment in which this engine is installed.



# WARNING SIGNS

The following safety related signs are used in this manual to emphasize important and critical instructions:



Indicates the most serious specific potential hazard which could result in serious personal injury or death.



Indicates a specific potential hazard which could result in personal injury.



Indicates operating procedures, practices, etc. which could result in personal injury or damage causing destruction to the engine. Some of the CAUTION signs also indicate a specific potential hazard which could result in serious personal injury or death.



Indicates procedures, conditions, etc. which are important to highlight.

## Symbols



Indicates a proper action or "DO".




Indicates a prohibited action or "DON'T".

## Recommendation of daily operation records

It is obvious to every engine user and operator that an engine should not be run to destruction. Daily recording is a preventive maintenance program and will serve as a guide for:


- Effective troubleshooting (to help a serviceman from your Mitsubishi dealer to pin-point a problem).
- Quick service and less downtime (to help a serviceman from your Mitsubishi dealer save time (and costs for service))
- Grasp of operating conditions (to help you recognize conditions, signs or indications of approaching trouble)

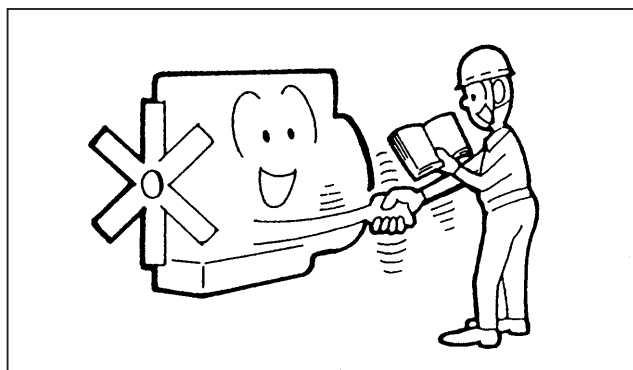

## Items to be recorded

The following items are recommended to be recorded:

1. Operating hours (service hour meter reading)
2. The amount of oil, fuel, and coolant (soft water) required for refilling
3. Oil and coolant change intervals
4. Engine oil pressure, exhaust temperature, coolant temperature, and inlet air temperature
5. Parts serviced, kinds of service (adjustment, repairs or replacement), and the results of each service
6. Changes in operating conditions (for example, "Exhaust smoke turned black," etc.)

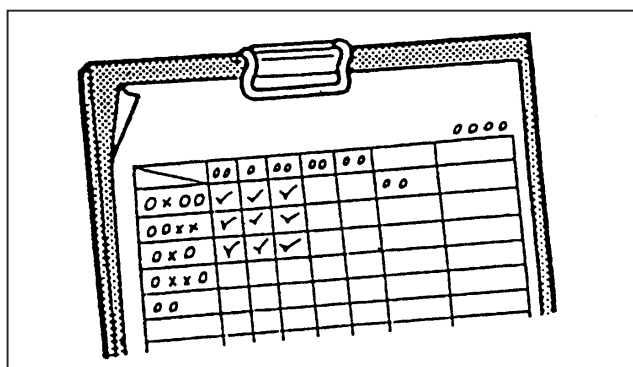

# TABLE OF CONTENTS

|          |  |           |
|----------|--|-----------|
| <b>1</b> | <b>SAFETY</b>                                  | <b>5</b>  |
| 1.1      | Preventing fire and explosions                 | 5         |
| 1.2      | Prevent burns                                  | 6         |
| 1.3      | Lifting precautions                            | 7         |
| 1.4      | Exhaust fumes                                  | 7         |
| 1.5      | Prevention of cuts and other injuries          | 7         |
| 1.6      | Maintenance precautions                        | 9         |
| 1.7      | Operating precaution                           | 10        |
| 1.8      | Maintenance precautions                        | 12        |
| 1.9      | If any trouble should occur                    | 13        |
| <b>2</b> | <b>IMPORTANT INFORMATION</b>                   | <b>14</b> |
| 2.1      | Operating the engine properly                  | 14        |
| 2.2      | Service the engine properly                    | 14        |
| 2.3      | If any trouble should occur                    | 15        |
| <b>3</b> | <b>SPECIFICATIONS</b>                          | <b>16</b> |
| <b>4</b> | <b>NOMENCLATURE</b>                            | <b>17</b> |
| 4.1      | Engine S3L/S3L2                                | 17        |
| 4.2      | Engine S3L-T/S3L2-T                            | 18        |
| 4.3      | Engine S4L/S4L2                                | 19        |
| 4.4      | Engine S4L-T/S4L2-T                            | 20        |
| <b>5</b> | <b>OPERATION</b>                               | <b>21</b> |
| 5.1      | Pre-start inspection                           | 21        |
| 5.2      | Starting the engine                            | 22        |
| 5.3      | Warming up the engine                          | 23        |
| 5.4      | Starting the load                              | 23        |
| 5.5      | Stopping the engine                            | 23        |
| <b>6</b> | <b>MAINTENANCE</b>                             | <b>25</b> |
| 6.1      | Every 50 service hours                         | 26        |
| 6.2      | Every 100 service hours                        | 27        |
| 6.3      | Every 250 service hours or once a year         | 27        |
| 6.4      | Every 500 service hours                        | 28        |
| 6.5      | Every 1000 service hours                       | 29        |
| 6.6      | Every 2 years                                  | 29        |
| 6.7      | When required                                  | 30        |
| <b>7</b> | <b>FUEL SPECIFICATIONS</b>                     | <b>32</b> |
| 7.1      | Recommended types of fuels                     | 32        |
| 7.2      | Caring for the diesel fuel tank                | 32        |
| 7.3      | Caring for the fuel supply                     | 32        |
| <b>8</b> | <b>LUBRICANT SPECIFICATIONS</b>                | <b>33</b> |
| 8.1      | Recommended types of engine oils               | 33        |
| 8.2      | Recommended oil viscosities                    | 33        |
| 8.3      | Limiting requirements for engine oils          | 34        |
| <b>9</b> | <b>COOLANT AND ANTIFREEZE SPECIFICATIONS</b>   | <b>35</b> |
| 9.1      | Coolant specifications                         | 35        |
| 9.2      | Recommended types of LLC's (Long Life Coolant) | 35        |

## TABLE OF CONTENTS


---

|           |   |           |
|-----------|---|-----------|
| 9.3       | How to use non-amine type LLC.....  | 36        |
| 9.4       | Why LLC? .....  | 36        |
| 9.5       | How LLC works.....  | 36        |
| 9.6       | Practical reported cases of circuit trouble for which additive is blamed..... | 37        |
| <b>10</b> | <b>STORAGE .....</b>  | <b>38</b> |
| 10.1      | Storage of the engine in a non-operational condition .....                    | 38        |
| 10.2      | Storage of the engine in an operational condition.....                        | 38        |
| <b>11</b> | <b>TROUBLESHOOTING .....</b>  | <b>39</b> |
| 11.1      | General .....   | 39        |
| 11.2      | Problems.....   | 40        |
| <b>12</b> | <b>ADDITIONAL INFORMATION .....</b>   | <b>43</b> |

# 1 SAFETY

## 1.1 Preventing fire and explosions

### ⚠ Fire hazards!

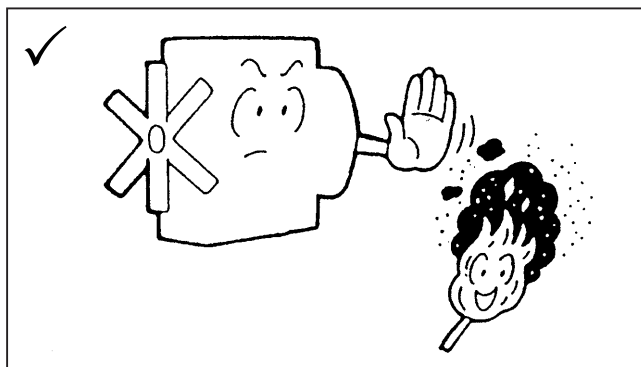


Do not smoke while refueling, or when handling fuel containers. Do not use gasoline or diesel fuel for cleaning parts. Good quality commercial, non-flammable, and non-toxic solvents are recommended. Do not spill any fuel on hot surfaces. Clean up any spillage immediately.

### ⚠ Do not fill fuel tank while the engine is running!


Shut off the engine when fueling and use extra caution if the engine is hot.

### ⚠ Do not bring close to flammable materials!

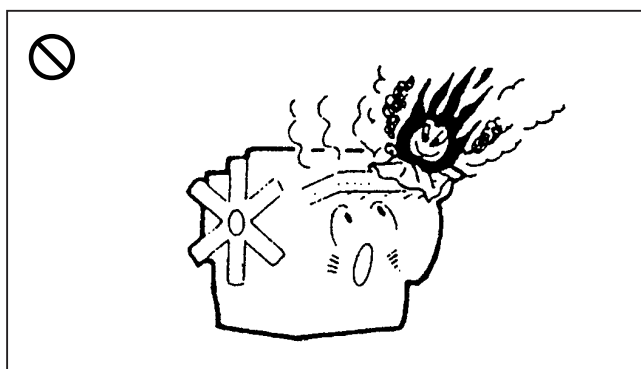


Do not put flammable materials on hot parts of the exhaust pipe. Keep them away from the pipe. In addition, do not operate the engine in areas where flammable materials are present.

### ⚠ Connect the battery earth cable carefully!

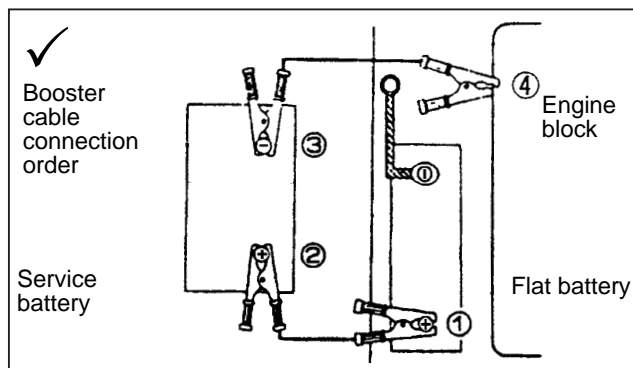

Finally, connect the earth cable (negative terminal) to the engine block, when starting the engine using another battery. If it is accidentally connected to the negative terminal of the mounted battery, a spark may occur, igniting the explosive gas produced by the battery. After starting the engine, first disconnect the earth cable.

### ⚠ Always be alert to any fuel or oil leaks!

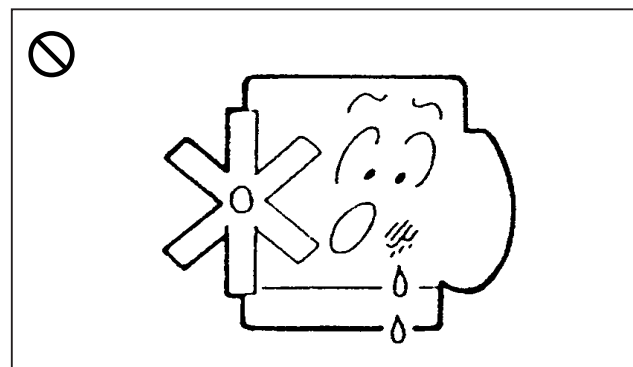


If you discover any leaks, take counter-measures immediately. If there are fuel or oil spills on the hot engine, fire may occur, resulting in personal injury or damage to the equipment.

## SAFETY



**Keep the engine and its compartment clean!**

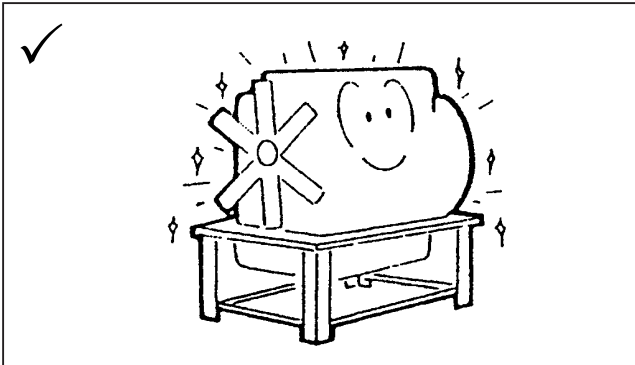


Remove all flammable materials such as fuel, oil, and other debris, before they accumulate on the engine.

### 1.2 Prevent burns




**Remove the radiator filler cap carefully!**

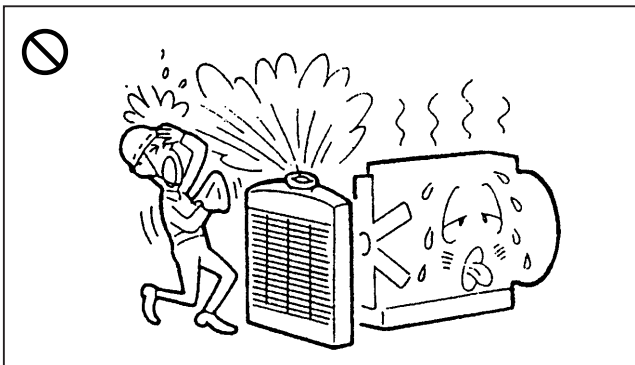

Under operating temperatures, the engine coolant is hot and under pressure. The steam can cause personal injury. Check the coolant level only after the engine has been turned off and the filler cap is cool enough to touch with your bare hands. If necessary grip the cap with a cloth and remove it slowly in order to gradually relieve the pressure.




**Do not touch any hot components!**

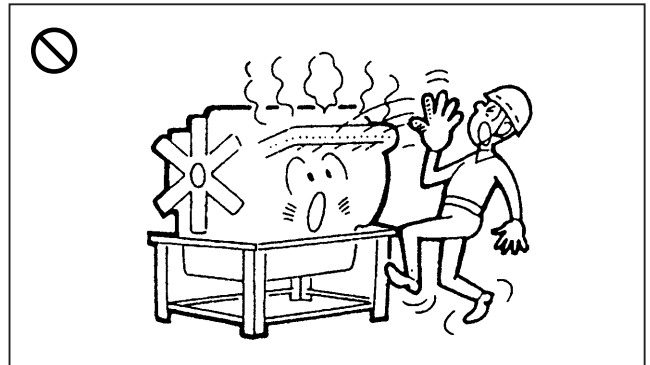

At operating temperature, the engine components become very hot. Avoid any contact during operation. Service the engine only after it has been stopped and the components are cool enough to touch with your bare hands.




**Avoid burns!**

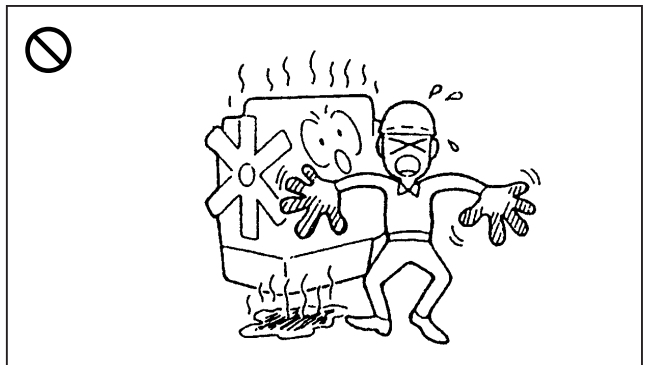

Immediately after completing operations do not change the oil or the coolant. Hot oil or coolant may burn the skin. Allow the engine to cool down to room temperature before replacement.

- ⚠ Turn off the battery switch before servicing!**

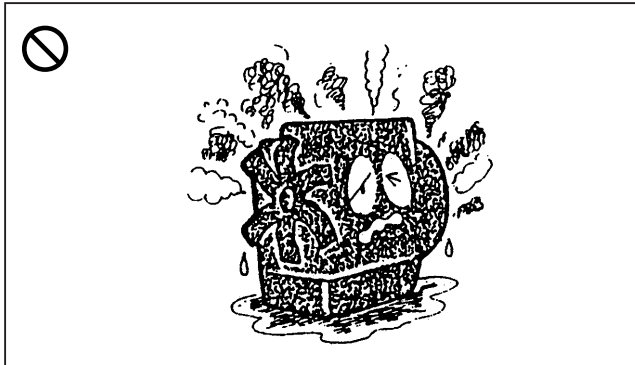


Be sure to turn OFF the battery switch before servicing.

If electrical equipment, including the starter or alternator, is serviced with the battery switch turned ON, it may be shortcircuited by the current from the battery's positive terminal, resulting in burns or in fire.

### **1.3 Lifting precautions**


- ⚠ Lift the engine carefully!**

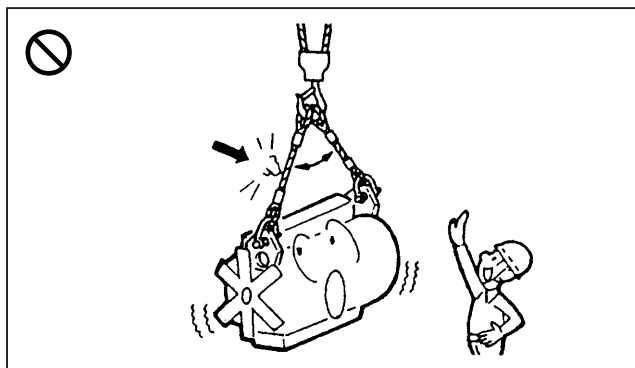

Never allow anyone to walk or stand underneath a suspended engine. Operate the hoist carefully without jerking it. Remember, sudden impact of loads can cause serious accidents.

### **1.4 Exhaust fumes**


- ⚠ Exhaust fumes**

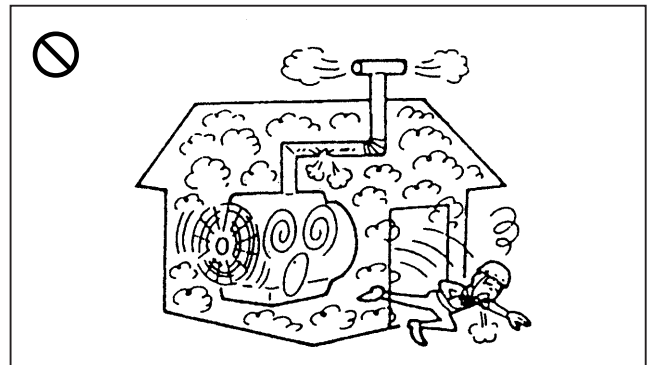

Operate the engine in safe areas only! Operate the engine in a well ventilated area. Never operate it in an enclosed area. In particular, do not operate it near an air inlet port on the downwind side.

### **1.5 Prevention of cuts and other injuries**


- ⚠ Stay clear of all rotating and moving parts!**

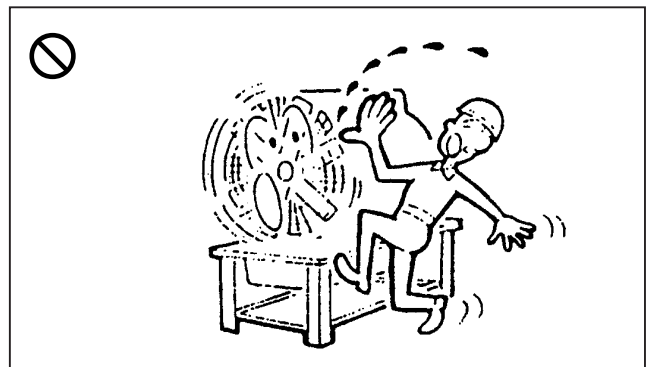

The rotating parts of the engine are dangerous. Always stay clear of them during operation.


## SAFETY

- ⚠ **Use care during checking and servicing!**

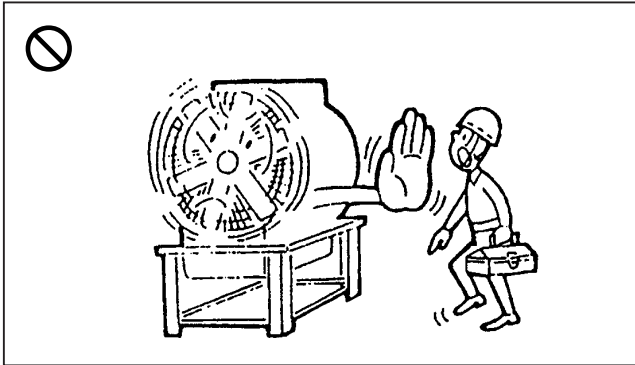


Before performing maintenance, remove the starter switch key and turn OFF the battery switch. Attach a "DO NOT OPERATE" or similar warning tag to the starter switch.

- ⚠ **Ensure that everything is in order before restarting the engine!**

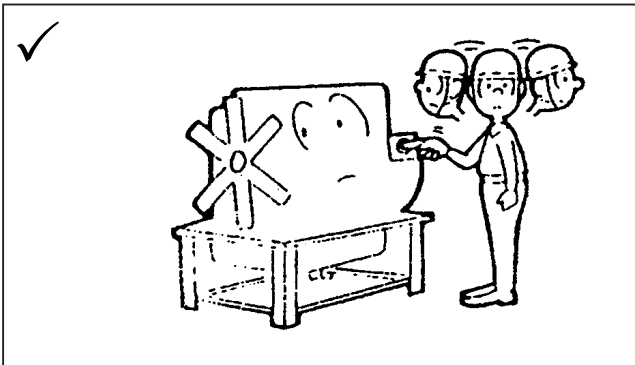


Before starting the engine, make sure that no one is working on or close to the engine. Remove all foreign material from the engine, such as debris, oil, tools, and other items which are not part of the engine.

- ⚠ **Install the protective covers!**

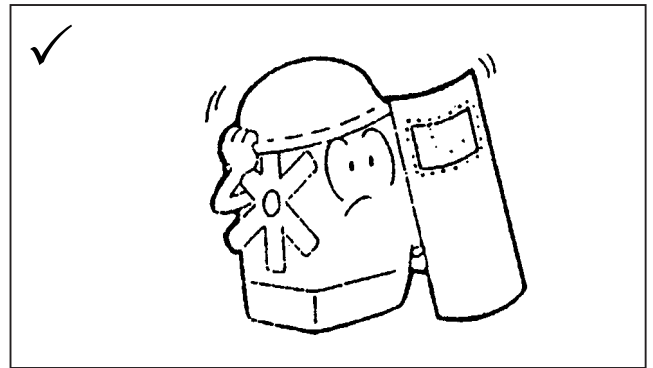

To prevent personal injury, make sure all protective covers and guards are placed on the rotating parts.


- ⚠ **Keep the turning tool disengaged when it is not in use!**

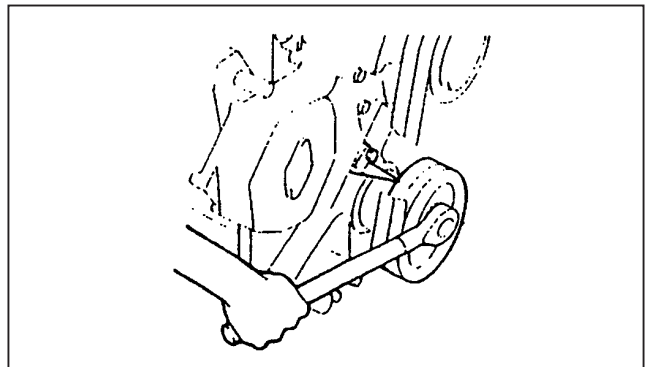

When not in use, properly lock the turning gear in the disengaged position. Failure to follow this recommendation can cause personal injury and engine damage.

## 1.6 Maintenance precautions

 **Stop the engine before servicing it!**

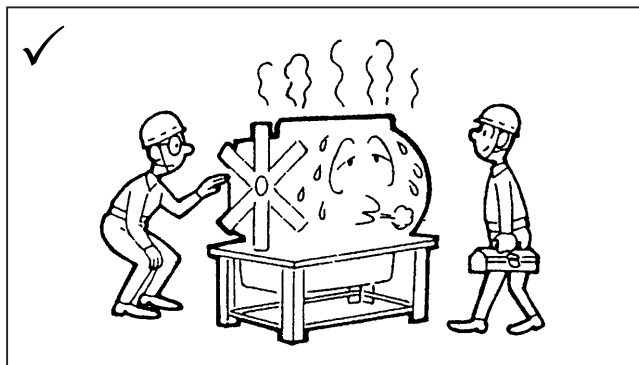

Always stop the engine before adding or changing oil, coolant, or fuel. Check the coolant level only after the engine has been stopped and the radiator filler cap is cool enough to remove it with bare hands. Never attempt to adjust the fan belt while the engine is running.

 **Handle battery electrolyte carefully!**




If battery electrolyte comes into contact with the eyes or skin, wash them clean immediately by using plenty of water. If it comes into contact with the eyes, wash out your eyes immediately and then see a doctor.

 **Handle antifreeze carefully!**



If you accidentally drink antifreeze, make yourself vomit and see a doctor immediately. If antifreeze comes into contact with the eyes, immediately wash them clean by using plenty of water and then go and see a doctor.

 **Dress properly for the job!**

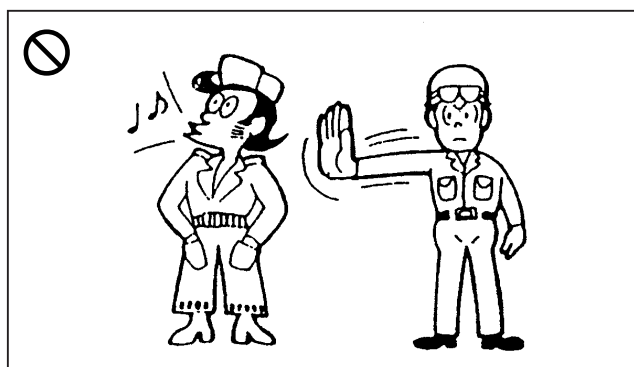


For your own protection, you may need any number of special items - hard hat, face shield, safety shoes, goggles, heavy gloves, ear protectors, etc. Please do use these when required.



## SAFETY


### 1.7 Operating precaution

⚠ **Be sure to break in the engine!**

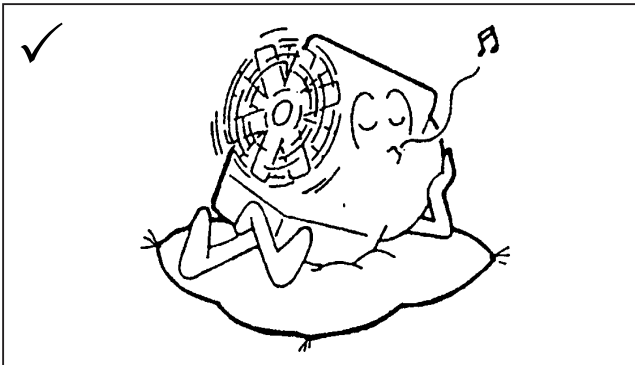

During the first 50 hours of operation, break in the engine by using lighter loads and lower speeds than normal. A proper break in contributes to the maximum service life of the engine.


⚠ **Warm up the engine before operation!**

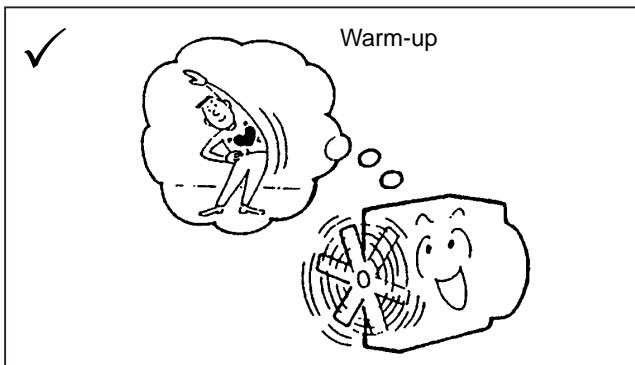

After starting the engine, leave it idling for 5 to 10 minutes before operating under full load, for maximum engine life.


**NOTE:** Long periods of warming up the engine are not recommended. They can deposit carbon in cylinders and cause incomplete fuel combustion.

⚠ **Stop the engine only after it has cooled down!**

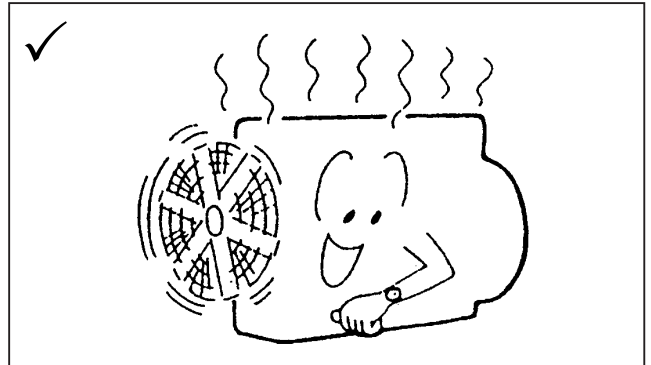

Stopping the engine immediately after it has been working under a load, can result in overheating and accelerated wear of the engine components. Before stopping the engine, leave it idling for 5 to 10 minutes. This allows the hot areas in the engine to cool down gradually, which extends engine life. While the engine is running, make a walk-around inspection to make sure everything is functioning properly.

⚠ **Use the starting motor correctly!**

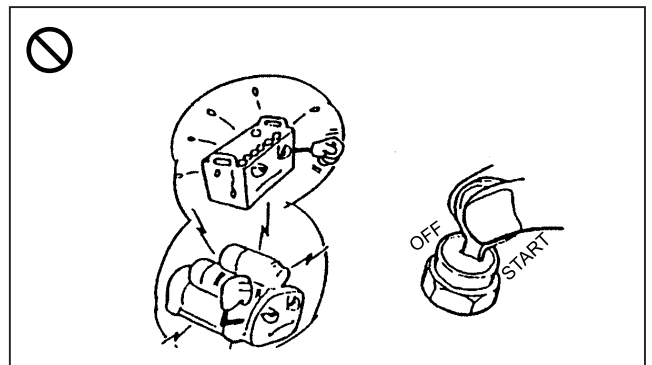

When starting the engine, do not crank it for more than 10 seconds at a time. After every 10 seconds of engine cranking, allow 30 seconds for the starting motor to cool before cranking it again.


**⚠ Do not break any seals for settings!**



Never attempt to break the seals of the fuel injection pump (governor) controlling injection quantity and minimum and maximum speed settings. Breaking these seals and varying settings could result in:


- Accelerated wear of the engine components
- Seizure of or damage to the engine components
- Increase in fuel and oil consumption
- Maladjusted injection quantity and poor engine performance
- Violation to emission regulations

**⚠ Do not turn OFF the battery switch during operation!**

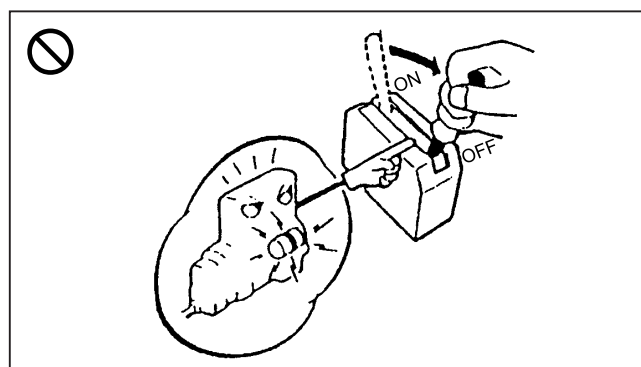


To avoid damage to the alternator diodes and the transistors, do not turn OFF the battery switch when the engine is running. This could also result in a failure of instruments to work properly.

**⚠ Always keep the engine compartment well ventilated!**

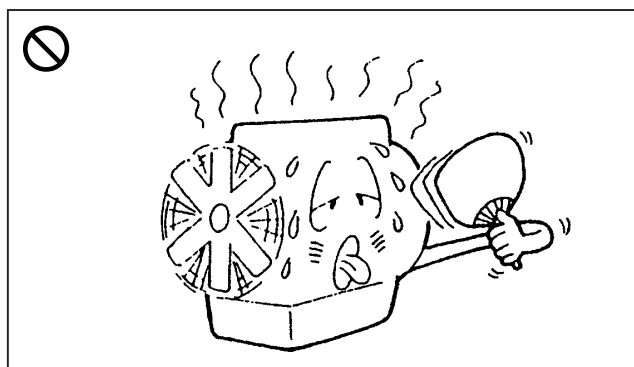

Unless the engine compartment is properly ventilated, the air supply will be inadequate, resulting in a shortage of air for fuel combustion and the loss of power.


**⚠ Avoid overloading!**

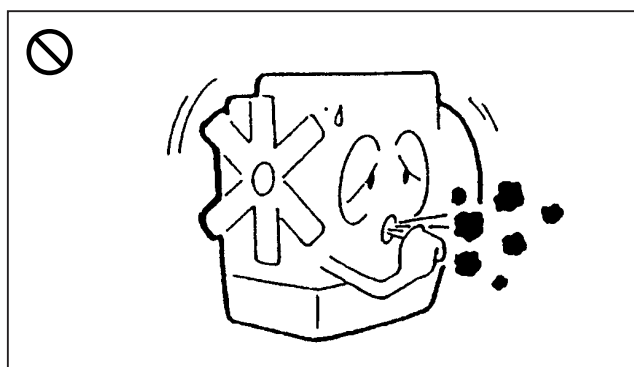

Overloading can cause incomplete combustion, often indicated by black smoke, high fuel consumption, and carbon deposits in the combustion chambers, adversely affecting the engine lifespan.


## 1.8 Maintenance precautions

⚠ **Use the recommended fuel, oil, and coolant!**

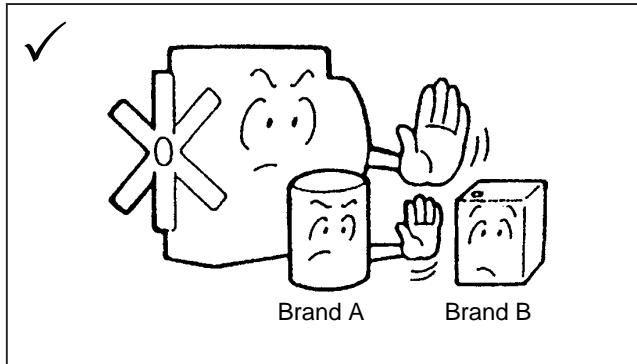


Use of any other fuel, oil, or coolant can cause engine damage and reduce the engine service life.

⚠ **Perform all recommended inspections!**

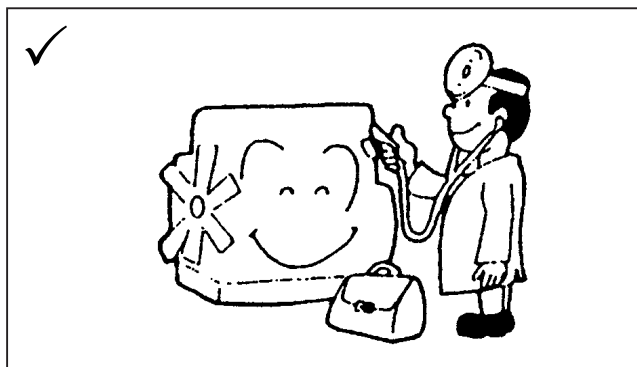


Perform pre-start inspection and periodic inspection on items listed in this manual. Failure to follow this recommendation can cause engine damage, injury, or death.

⚠ **Keep water out of the engine!**

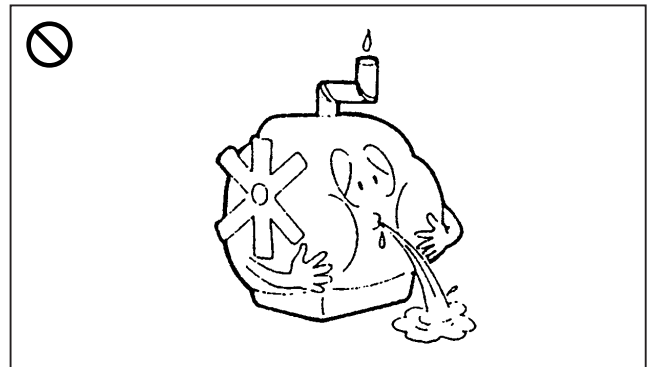


When washing the engine, cover the air inlet and exhaust opening with tape to prevent water or cleaning agent from getting inside the engine. Do not wash the engine while it is running. If water or cleaning agents get inside the combustion chambers, the hammering action of water can damage the engine.

⚠ **Keep grit-laden air out of the engine!**

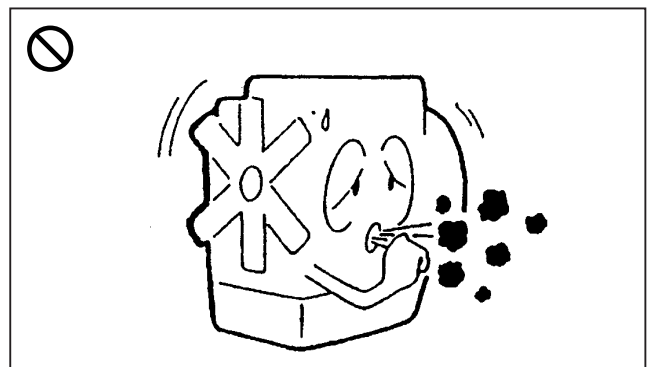

Dust and dirt entering the engine will cause early wear of the moving parts. This could result in a loss of power, high oil consumption, starting problems, or other failures. Service the air filter as instructed.


1. Do not service the air filter while the engine is running.
2. When removing the air filter element for service, prevent any dust from entering the air intake to the cylinders.

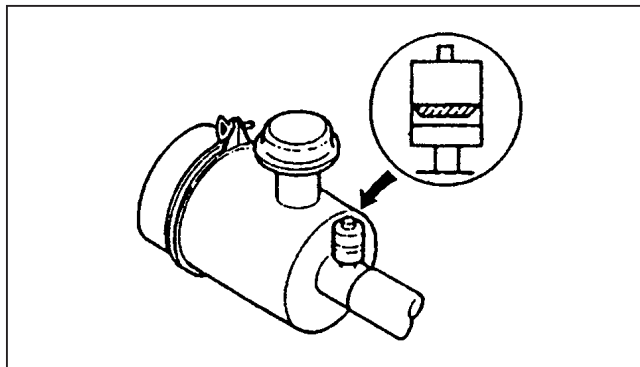

3. Service the air filter equipped with a dust indicator when red is shown. Under-frequent service can cause damage.


## 1.9 If any trouble should occur

**⚠ If the engine suddenly stops:**

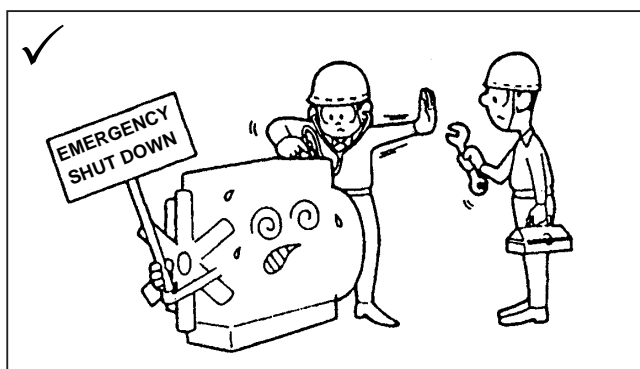


Do not restart the engine immediately after it has suddenly stopped. Check for the cause and make the necessary repairs before restarting the engine. A failure to follow this precaution can cause serious engine problems.

**⚠ If the engine oil pressure is low:**

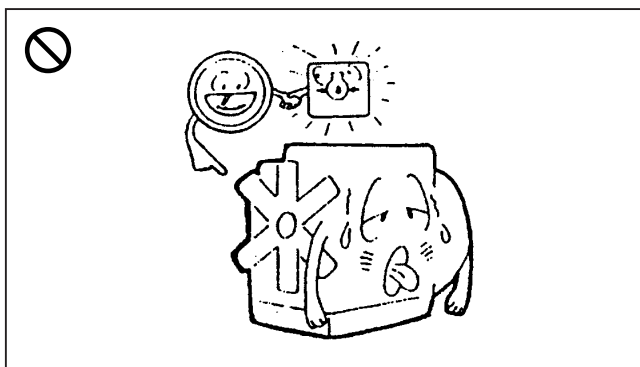


Stop the engine immediately and check the lubrication system. Operating the engine with low oil pressure can cause bearings and other parts to seize.

**⚠ If the engine overheats:**

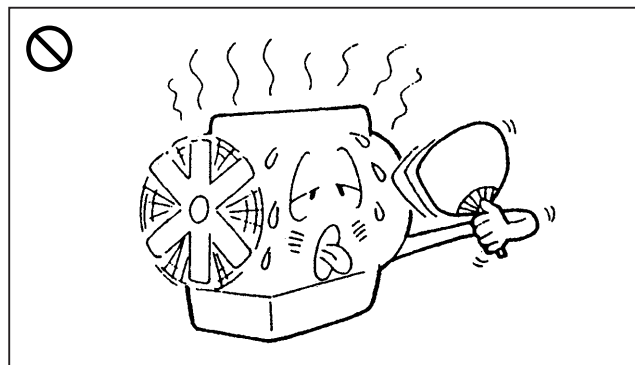

If the engine overheats, do not turn it off immediately. Suddenly stopping an overheated engine can result in a steep rise in the coolant temperatures and the seizure of running parts. First leave the engine idling to allow the hot areas in the engine to cool down, then gradually add the coolant. Remember, adding coolant to an overheated engine can cause damage to the cylinder head.

**⚠ If the fan belt is broken:**

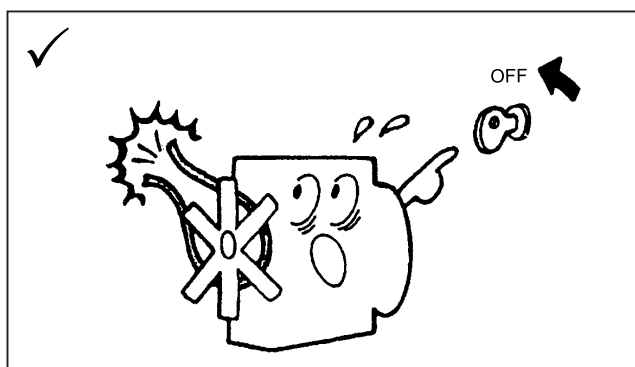

Stop the engine immediately. Operating the engine with a broken fan belt can cause engine overheating, which, in its turn, can cause the coolant to burst out of the reservoir tank and the radiator cap.

## 2 IMPORTANT INFORMATION

### 2.1 Operating the engine properly

1. Never attempt to break the seals of the injection pump governor for maximum speed and maximum injection quantity settings. Breaking these seals and varying the settings could result in:
  - Accelerated wear of engine components
  - Increase in fuel and oil consumption
  - Maladjusted injection quantity and poor engine performance
  - A violation to emission regulations
2. Always keep the engine room well ventilated. If it is not properly ventilated, the air supply will be inadequate, resulting in lack of air for fuel combustion and loss of power.
3. Start the engine properly. After every 10 seconds of engine cranking, allow 30 seconds for the starting motor to cool before cranking it again.
4. After starting the engine, leave it idling for 5 to 10 minutes before operating it at full load, for maximum engine life.



### NOTE

Long periods of warming up the engine are not recommended. They can result in carbon deposits in the combustion chambers and incomplete fuel combustion.

5. To avoid damage to the alternator, do not turn OFF the battery switch when the engine is running.
6. Avoid overloading. Overloading can cause incomplete combustion, often indicated by black exhaust, high fuel consumption, and carbon deposits in the combustion chambers, affecting engine lifespan.
7. It is advised to break in the engine within the first 50 hours of operation. The way to do this is by operating the engine under a lighter load and lower speeds than normal. When an engine is properly broken in, it contributes to the maximum service life of the engine.
8. Stopping the engine immediately after it has been working under load can result in accelerated wear of engine components. Before stopping, leave the engine idling for about 5 minutes. This allows hot areas of the engine to cool down gradually, extending the engine life. Whilst the engine is running, make a walk-around inspection and check for oil, fuel, or coolant leaks.

### 2.2 Service the engine properly

1. Use the recommended fuel, oil, and coolant listed in this manual. The use of any other fuel, oil, or coolant can result in higher maintenance costs and can reduce the engine service life.
2. Be sure to perform pre-start inspection and periodic service on items specified in this manual. Improper inspection or service is dangerous and could result in damage to the engine, injury, or death.
3. At the end of each day of operation, check the engine for broken, defective, or missing parts. If you discover any items that need attention, repair, replacement, or adjustment after your daily check, report it as soon as possible. Keep in mind that even minor defects could result in very serious trouble.
4. When washing the engine, cover the air inlet and the exhaust openings with tape to prevent water or cleaning agent from getting inside the engine. Do not attempt to wash the engine when it is running. If water or cleaning agent gets inside the combustion chambers, the hammering action of water could cause damage to the engine.
5. Clean air is essential to a satisfactory engine operation and to a long engine life. This is also the reason why it is very important to service the air cleaner properly. The air cleaner prevents dust and grit-laden air from getting into the engine. Dust and dirt entering the engine will cause rapid wear of piston rings, cylinders, and pistons, resulting in loss of power and high oil consumption. Also, if dust and dirt are allowed to build up in the air cleaner passages, then this will eventually restrict the air supply to the engine and result in heavy carbon deposits on the pistons and valves due to an incomplete combustion. Therefore:
  - Do not service the air cleaner when the engine is running.
  - When removing the air cleaner from the engine for servicing, prevent dust from entering the air passage to the cylinders.
  - Service the air cleaner element at reasonable intervals, or whenever the signal of the indicator is visible. That is, if your engine is equipped with an indicator signal.
  - Do not use the element if any tears, rips, or damage are evident.

## **2.3 If any trouble should occur**

1. If the engine stops abruptly, try to find the problem and its source and make the necessary repairs before starting the engine again.
2. If the engine overheats, a warning light will come on and, at the same time, the engine will stop. When this happens, do not ever add coolant to the overheated engine. First allow the engine to cool down, then add the coolant gradually.
3. If the engine oil pressure becomes low, stop the engine and check for the cause. Operating the engine while the oil pressure is low can cause seizure of the bearings and other parts.

## 3 SPECIFICATIONS<sup>1</sup>



| System             | Item  | Model  |       |         |        |   |       |         |        |
|--------------------|---|--|-------|---------|--------|---|-------|---------|--------|
|                    |   | S3L  | S3L-T | S3L2    | S3L2-T | S4L   | S4L-T | S4L2    | S4L2-T |
| ENGINE PROPER      | Type  | 4-cycle, water-cooled, vertical, overhead valve, diesel engine |       |         |        |   |       |         |        |
|                    | Combustion chamber  | Swirl chamber type   |       |         |        |   |       |         |        |
|                    | No. of cylinders  | 3  |       |         |        | 4   |       |         |        |
|                    | Bore x Stroke (mm)  | 78x78.5  |       | 78x92   |        | 78x78.5   |       | 78x92   |        |
|                    | Total displacement (l)  | 1.125  |       | 1.318   |        | 1.500   |       | 1.758   |        |
|                    | Compression ratio   | 22   |       |         |        |   |       |         |        |
|                    | Firing order  | 1-3-2  |       |         |        | 1-3-4-2   |       |         |        |
|                    | Dry weight (kg)   | 135  | 139   | 135     | 139    | 155   | 159   | 155     | 159    |
| LUBRICATING SYSTEM | Lubricating method  | Forced lubrication   |       |         |        |   |       |         |        |
|                    | Oil pump  | Trochoid pump  |       |         |        |   |       |         |        |
|                    | Oil filter  | Paper element type   |       |         |        |   |       |         |        |
|                    | Oil capacity:<br>FULL level/EMPTY level (l)<br>(Exclusive of oil filter capacity 0.5 l) | Shallow type oil pan: 3.7/2.3<br>Deep type oil pan: 5.7/3.1    |       |         |        | Shallow type oil pan: 5.5/3.7<br>Deep type oil pan: 7.6/4.2 |       |         |        |
| FUEL SYSTEM        | Fuel injection pump   | Bosch M  |       |         |        |   |       |         |        |
|                    | Nozzle  | Throttle type  |       |         |        |   |       |         |        |
|                    | Fuel injection pressure   | 140 kgf/cm <sup>2</sup>  |       |         |        |   |       |         |        |
|                    | Fuel to be used   | Diesel fuel; see chapter 7                                     |       |         |        |   |       |         |        |
|                    | Governor  | Centrifugal weight type  |       |         |        |   |       |         |        |
| INTAKE SYSTEM      | Air cleaner   | Paper-element type   |       |         |        |   |       |         |        |
|                    | Turbocharger model  | Without  | TD025 | Without | TD025  | Without   | TD025 | Without | TD03   |
| COOLING SYSTEM     | Cooling method  | Forced circulation of water                                    |       |         |        |   |       |         |        |
|                    | Water pump  | Centrifugal type   |       |         |        |   |       |         |        |
|                    | Coolant capacity (l)<br>(Engine proper only)  | 1.8  |       |         |        | 2.5   |       |         |        |
| ELECTRICAL SYSTEM  | Starter (V - kW)  | 12 - 1.6 or 12 - 1.7 or 12 - 2.0                               |       |         |        |   |       |         |        |
|                    | Alternator (V - A)  | AC generator (12 - 50)   |       |         |        |   |       |         |        |
|                    | Glow plug   | Sheathed type  |       |         |        |   |       |         |        |
|                    | Battery<br>(capacity depends on application)  | 12V, 65 Ah or more   |       |         |        | 12V, 80 Ah or more  |       |         |        |

**Table 1** Specifications

<sup>1</sup> All specifications are subject to change without any prior notice.



## 4 NOMENCLATURE

### 4.1 Engine S3L/S3L2

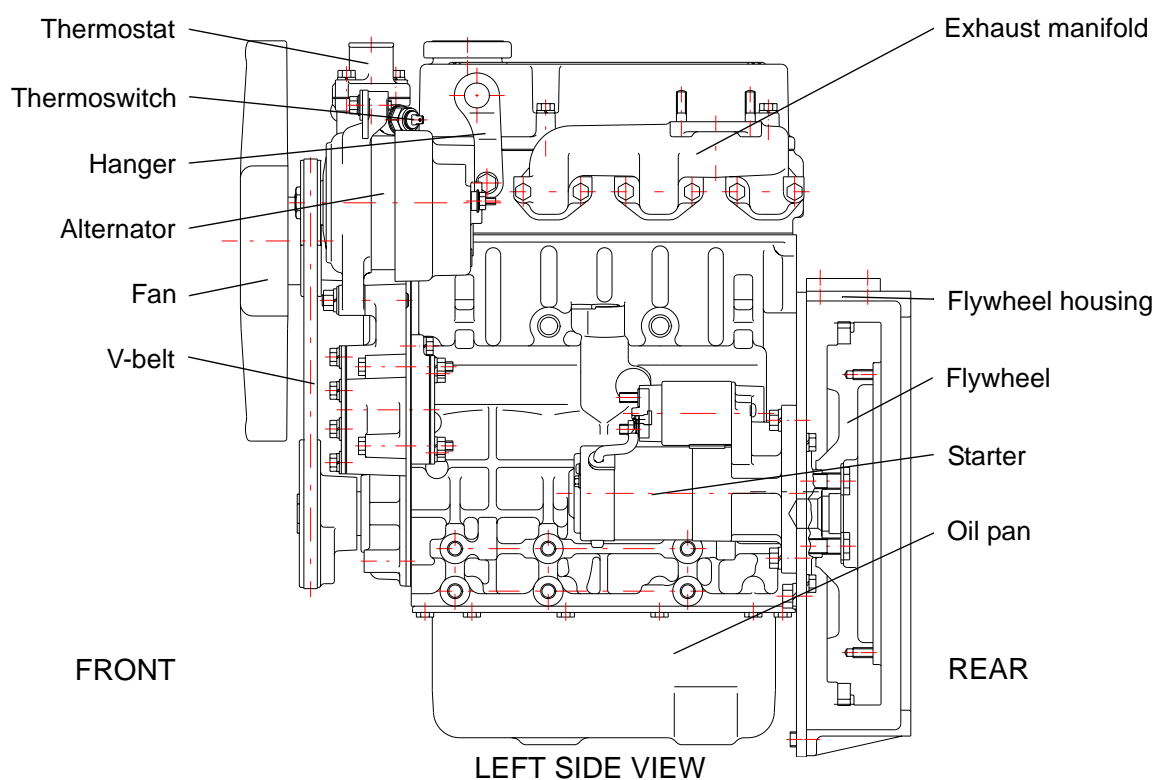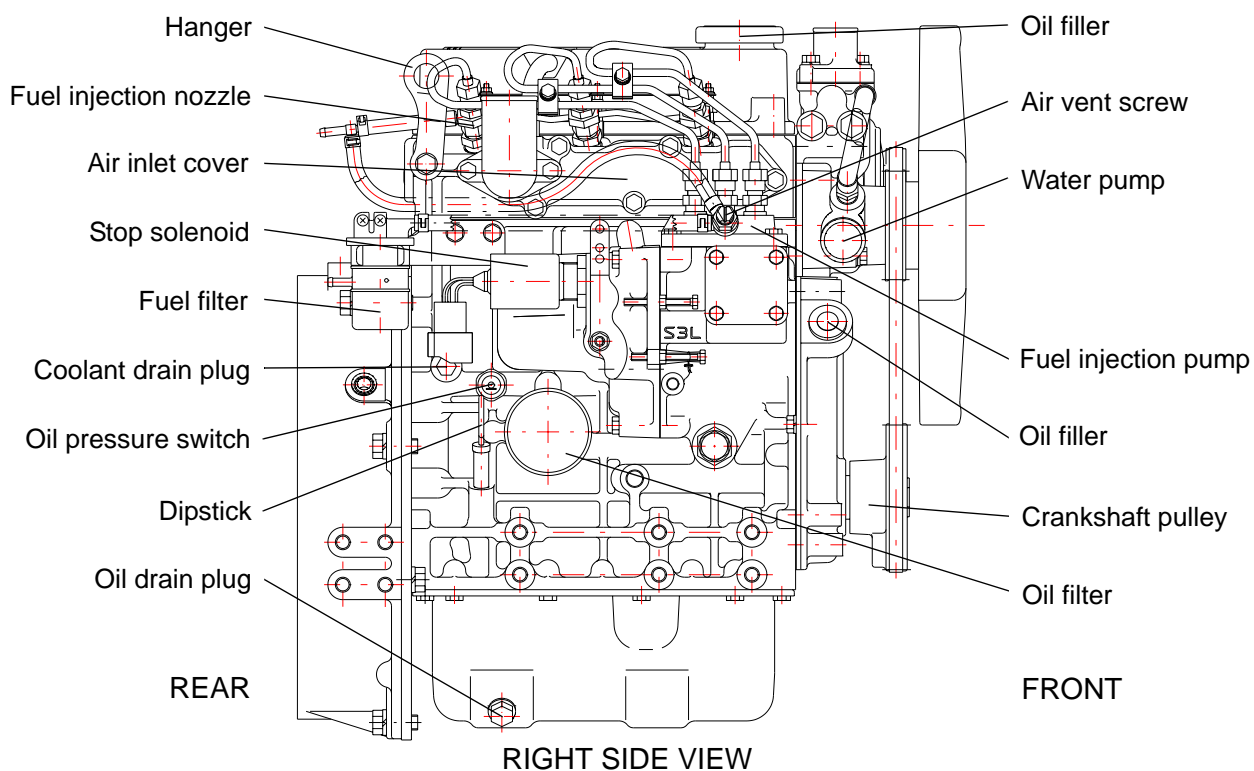





## 4.2 Engine S3L-T/S3L2-T

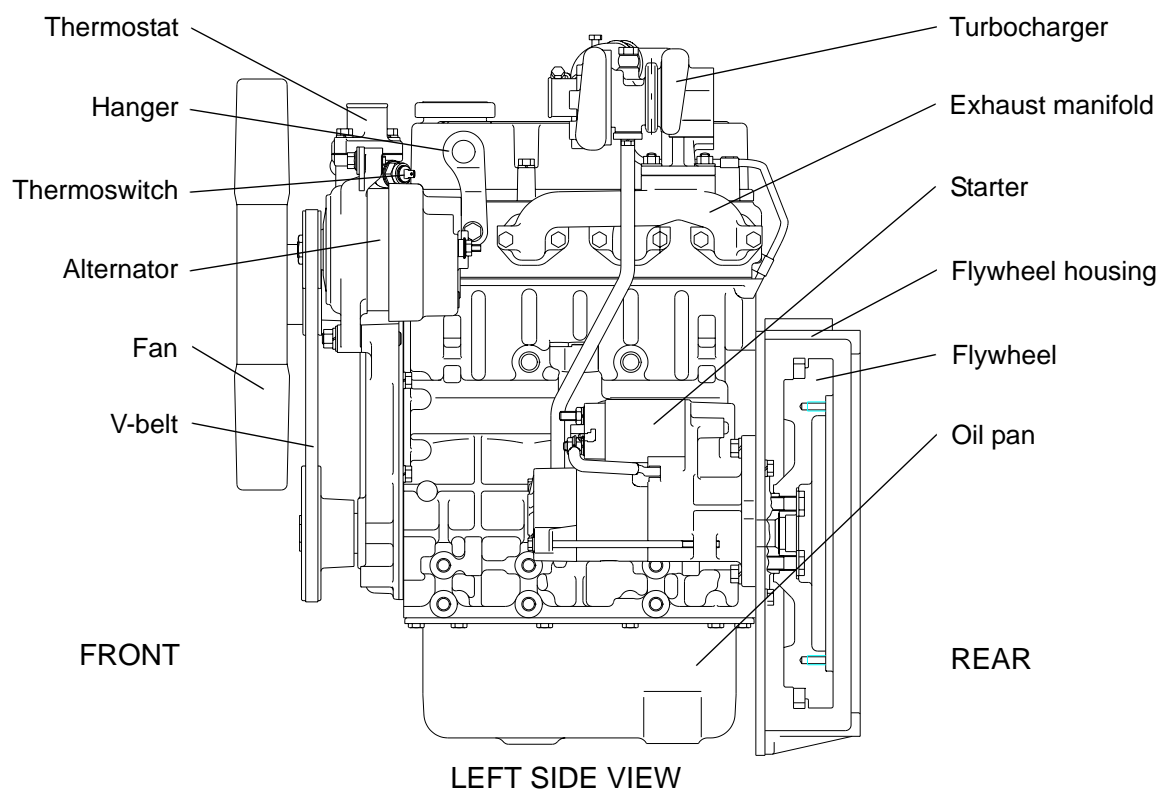
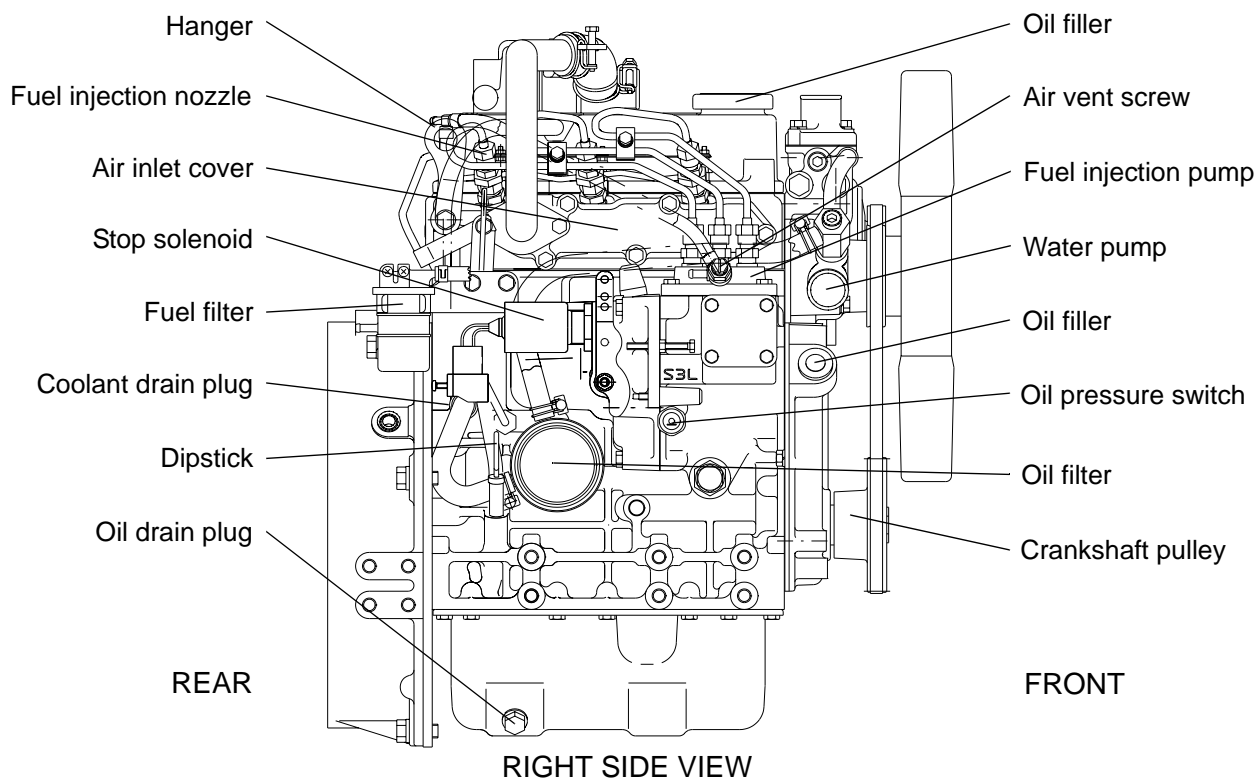


# NOMENCLATURE

## 4.3 Engine S4L/S4L2

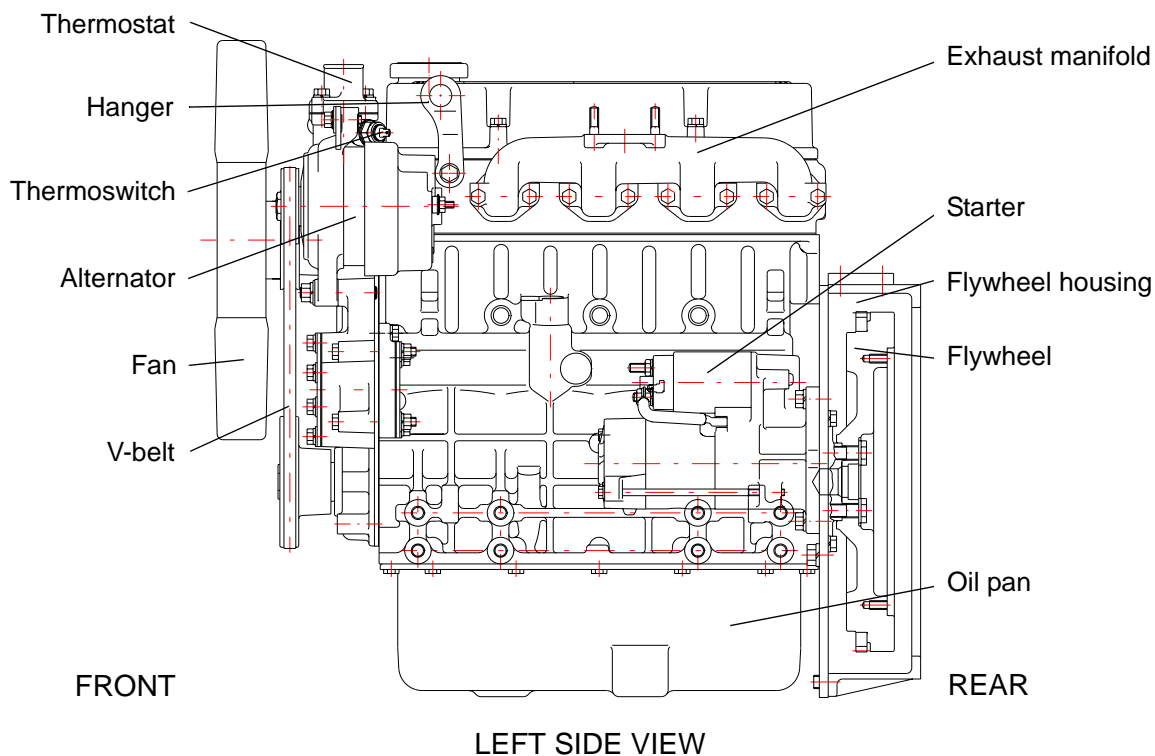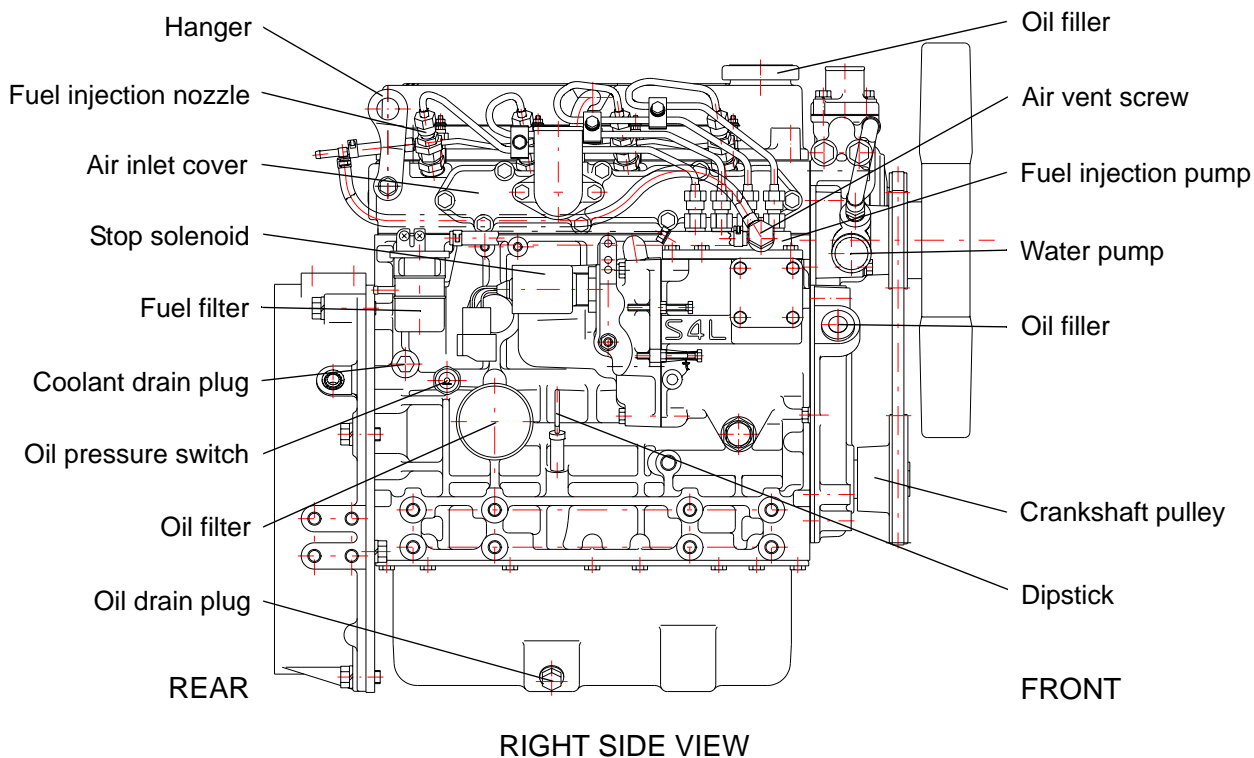

## 4.4 Engine S4L-T/S4L2-T

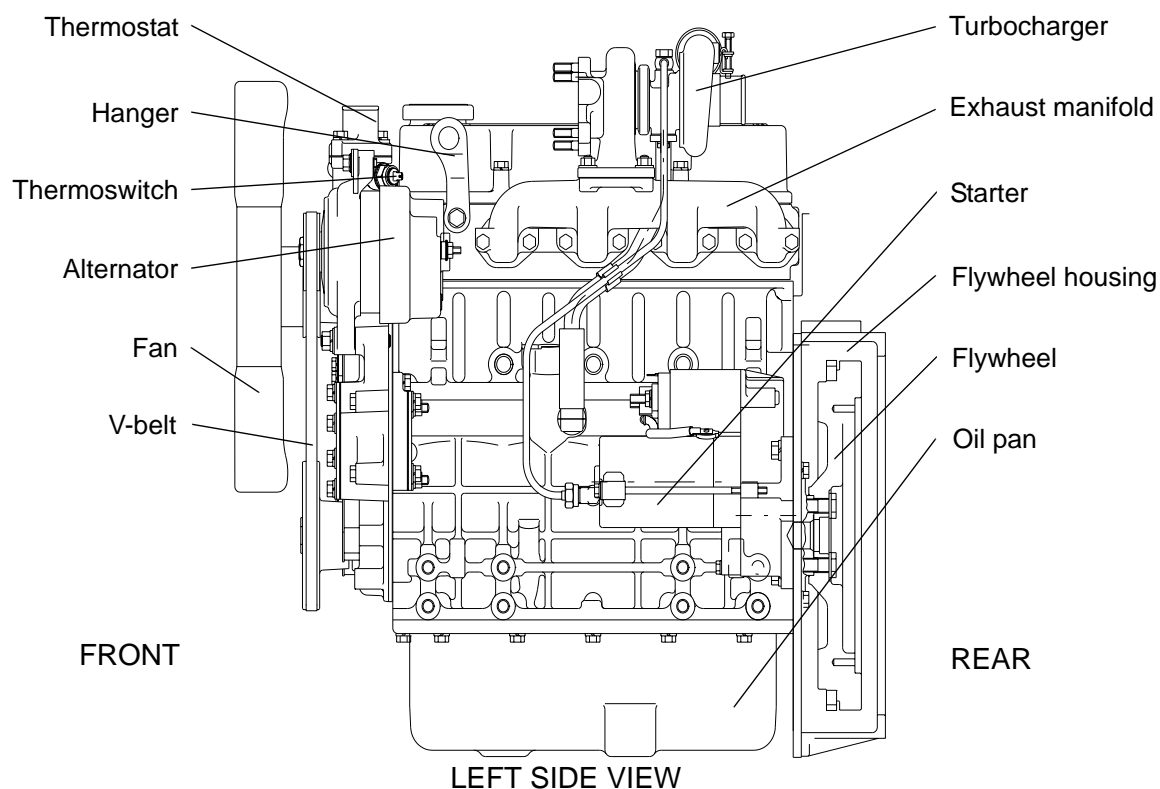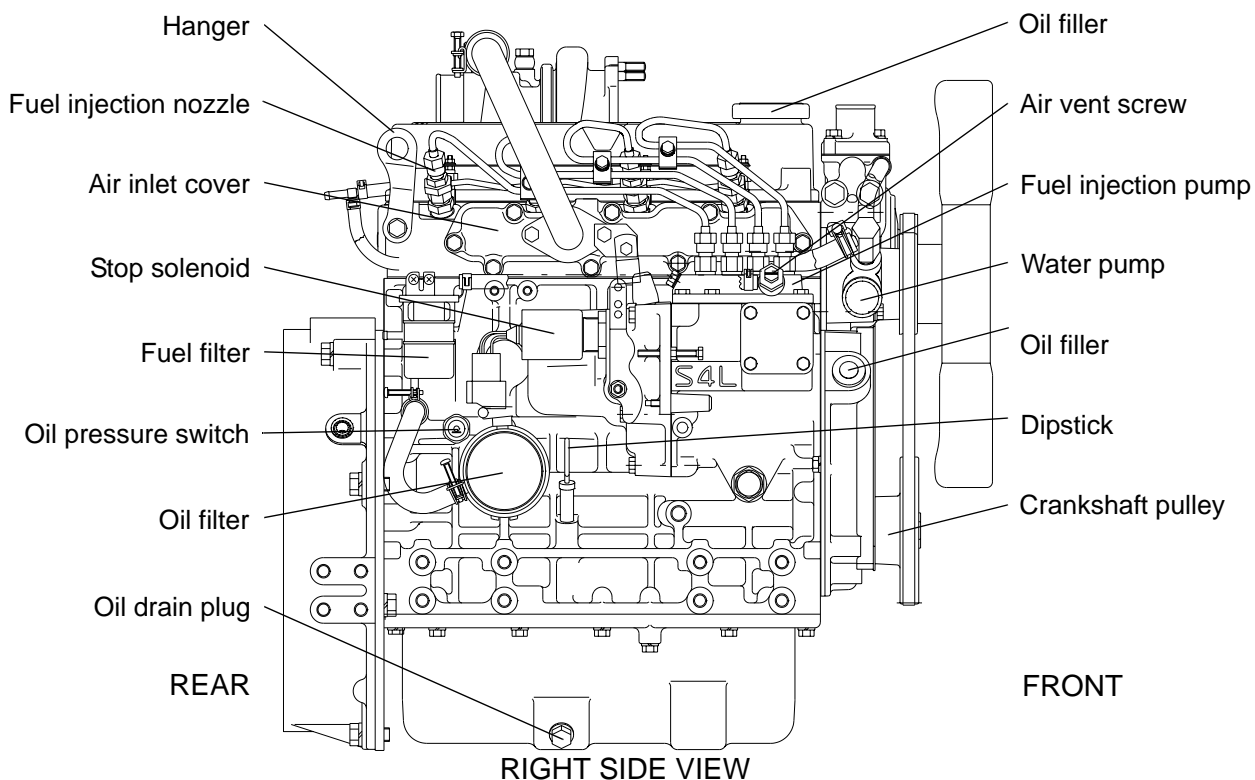


## 5 OPERATION

### 5.1 Pre-start inspection


#### 5.1.1 Walk-around Inspection

Look around for items such as loose bolts, debris build-up, oil, fuel, or coolant leaks, broken or worn parts.

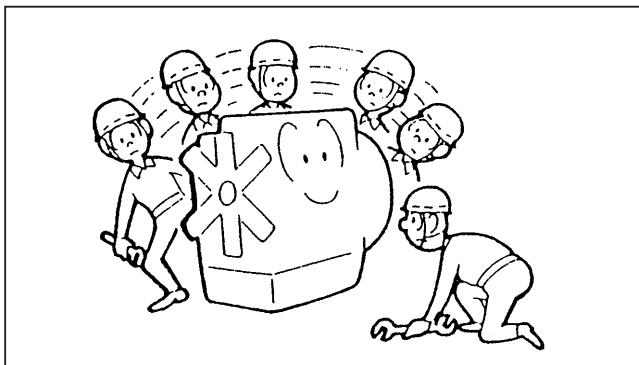

#### 5.1.2 Check engine oil level

Maintain the engine oil level between the MAX and MIN marks on the dipstick. Add oil if necessary (see page 33).

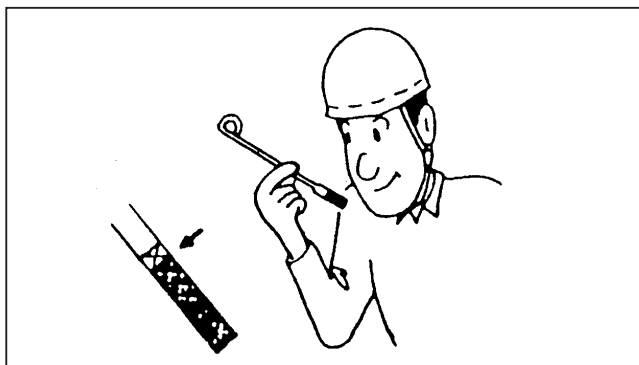


#### NOTE

The engine should be put in the horizontal position to check the oil level. The dipstick should be withdrawn, wiped clean, re-inserted in the oil level guide for 2 seconds, and again withdrawn so that the oil level on the dipstick can be seen.


#### 5.1.3 Check fuel level

Make sure that the fuel level is at the FULL mark in the sight gauge.

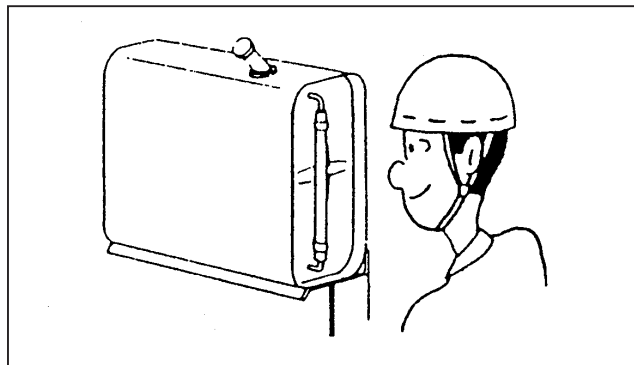

#### 5.1.4 Check the coolant level

Maintain the coolant level to the FULL mark on the reservoir tank (when the engine is cold). Add coolant when necessary.

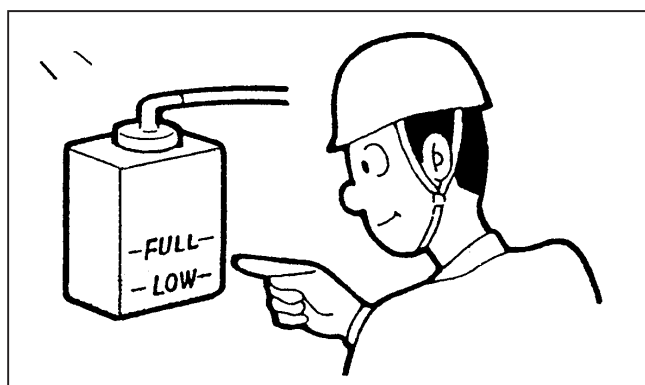

#### NOTE


When adding coolant, maintain the recommended concentration of Long Life Coolant (see page 35). Do not add water. This dilutes Long Life Coolant and adversely affects the freeze protection.

#### CAUTION

Check the coolant level only when the engine is cold.

## 5.2 Starting the engine

The engine can be equipped with or without a glow timer. For starting instructions, please consult the chapter which specially applies to your engine.

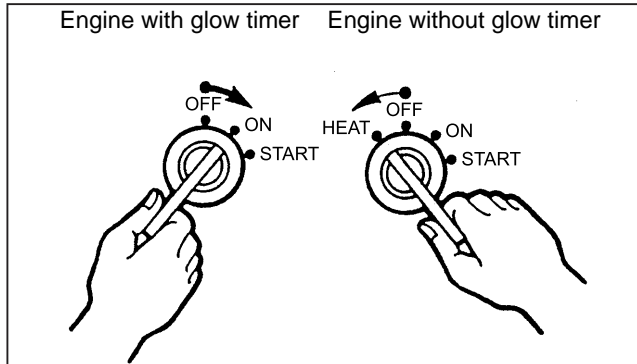


### 5.2.1 Engine with glow timer

1. Move the speed control lever to the HIGH SPEED position.
2. Turn the starter switch key to the ON position and make sure that the oil pressure, coolant temperature, and glow plug indicators are lit. See Table 2 Starting Aid Chart for heating time.


| Glow plug type     | Coolant temperature | Heating time    |
|--------------------|---------------------|-----------------|
| Quick-heating type | Below 5°C (41°F)    | About 3 seconds |
|                    | Above 5°C (41°F)    | About 1 second  |
| Standard type      | Normally            | About 6 seconds |

**Table 2** Starting Aid Chart

3. When the glow plug indicator goes off, turn the key to the START position.

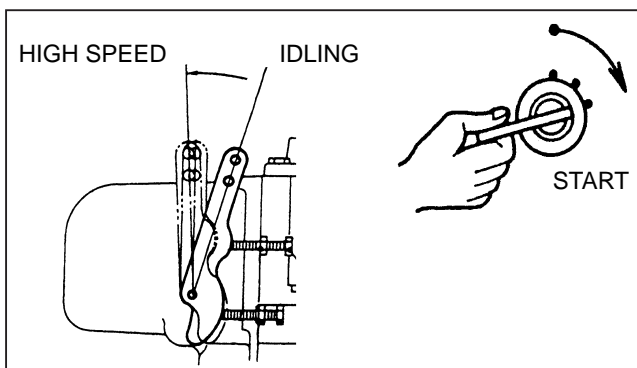

4. Release the key when the engine starts. The key will return to the ON position when released.

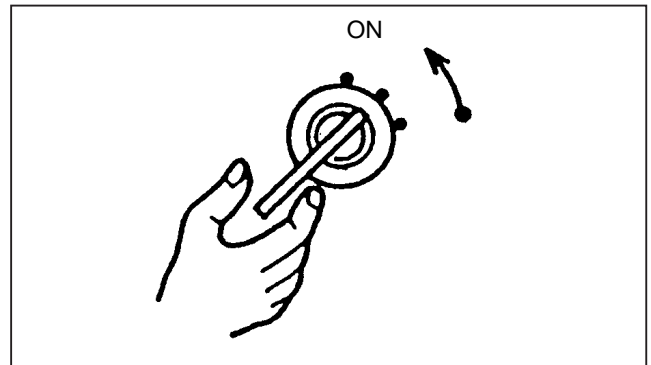

5. Move the speed control lever to the idling position.

### 5.2.2 Engine without glow timer

1. Move the speed control lever to the FULL THROTTLE position.
2. Turn the starter switch key to the HEAT position and continue to hold it there for approximately 6 seconds. Do not use the glow plugs for more than 15 seconds at a time.
3. Turn the key to the START position and release the key when the engine starts. The key will return to the ON position when released.
4. Move the speed control lever to the idling position.

## WARNING


Before starting the engine, make sure that no one is working on or close to the engine. Keep the engine free of foreign material such as debris, oil, tools, and other items which are not part of the engine.

## CAUTION

- After every 10 seconds of engine cranking, allow 30 seconds for the starter to cool down before cranking again.
- To avoid damage to the starter, do not turn the starter switch key to the START position while the engine is running.
- When cranking the engine for starting, do not apply any load to the engine (disengage the clutch if the engine is equipped with a clutch).

### 5.3 Warming up the engine

Allow the engine to leave it idling for 5 to 10 minutes. A proper warm-up is absolutely essential to a maximum service life and performance and it minimalizes the operation costs of the engine.

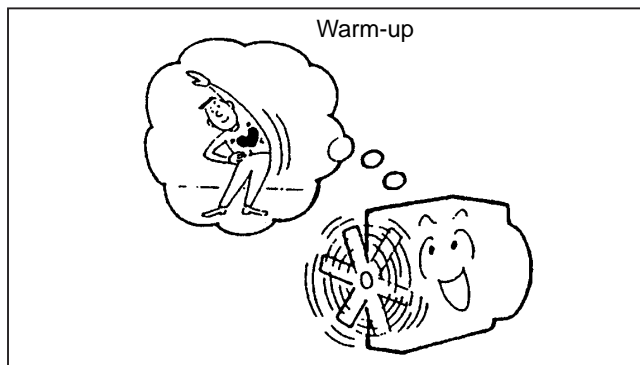

#### **NOTE**

Long periods of warming up the engine are not recommended. They can result in carbon deposits in the combustion chambers and incomplete fuel combustion.

### 5.4 Starting the load

When the engine has been running long enough to warm up, apply the load. During the operation, check that:

1. All alarm indicators are OFF.
2. The engine is free from any abrupt noises and vibrations.
3. Exhaust smoke is normal.

#### **WARNING**


- Stay clear of all rotating and moving objects during the operation.
- At operating temperature, the engine is very hot. Any contact with the engine can cause severe burns.

#### **CAUTION**

- Always keep the engine room well ventilated. Unless it is properly ventilated, the air supply will be inadequate, resulting in lack of air for fuel combustion and a loss of power.
- During the first 50 hours of operation, operate the engine under a lighter load and lower speed than normal. A proper break in contributes to the maximum service life of the engine.
- Avoid overloading. This can cause incomplete combustion, often indicated by black exhaust smoke, high fuel consumption, and carbon deposits in the combustion chambers, affecting the engine's lifespan.
- To avoid damage to the alternator, do not turn OFF the battery switch when the engine is still running.
- To avoid damage to the starter, do not turn the starter switch key to the START position when the engine is still running.

### 5.5 Stopping the engine

#### 5.5.1 Engine with a keystone device

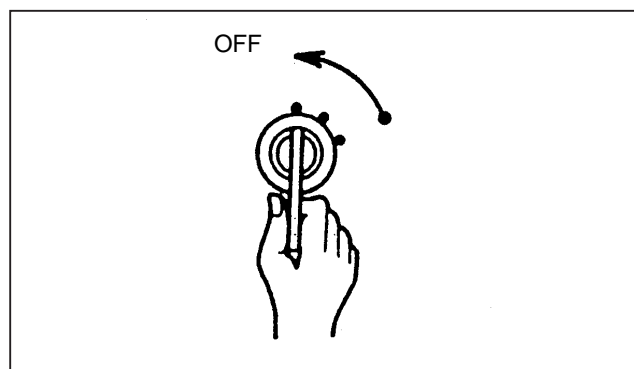

Turn the starter switch key to the OFF position. The engine will take approximately 5 seconds to stop after the key has been turned to the OFF position.



### CAUTION

- Leave the engine idling for 5 minutes. This allows hot areas in the engine to cool down gradually, which extends engine life. While the engine is still running, make a walk-around inspection, and check for oil, fuel, or coolant leaks.
- If the engine stops abruptly, try to find the problem and its source and make the necessary repairs before starting it again. After starting the engine, check to be sure that the engine has no problems.
- Remove the key from the starter switch, because leaving it in the ON position after the engine has stopped, can cause the battery to discharge.

## 6 MAINTENANCE

1. Service the engine in accordance with the "Lubrication and Maintenance Chart." Under extreme, severe, or dusty operating conditions, service the engine more frequently than is specified in the "Lubrication and Maintenance Chart."
2. Perform service on items at multiples of the original requirement. For example, at Every 500 Service Hours, also service those items listed under Every 250 Service Hours, Every 100 Service Hours, Every 50 Service Hours and Every 10 Service Hours [pre-start inspection].
3. For special items marked with an asterisk (\*), rely on the expert knowledge of the service men and the service facilities offered to you at your Mitsubishi dealer.

| Interval  | Item  | Remarks (specifications)                               | Page |
|---|---|--|------|
| Every 10 Service Hours<br>[Pre-Start Inspection]                    | Walk-around inspection  |  | 21   |
|   | Check engine oil level  |  | 21   |
|   | Check fuel level  |  | 21   |
|   | Check coolant level   |  | 21   |
| Every 50 Service Hours  | Drain water and sediment from the fuel tank and water separator |  | 26   |
|   | Check the battery electrolyte level and specific gravity        |  | 26   |
| First 50 Service Hours<br>of New or<br>Reconditioned Engine         | Change engine oil   | See SPECIFICATIONS (page 16)                           | 27   |
|   | Change oil filter   |  | 27   |
|   | Retighten nuts and bolts  |  | *    |
| Every 100 Service<br>Hours  | Clean fuel filter element                                       | After cleaning, prime (page 30)                        | 27   |
|   | Clean radiator fins   |  | 27   |
| Every 250 Service<br>Hours or once a year<br>(whatever comes first) | Change engine oil   | See SPECIFICATIONS (page 16)                           | 27   |
|   | Change oil filter   |  | 27   |
| Every 500 Service<br>Hours  | Check and adjust valve clearance                                | 0.25 mm (0.0098 in.) for both inlet and exhaust valves | *    |
|   | Change fuel filter element                                      | After changing, prime (page 30)                        | 28   |
|   | Check and adjust injection pressure                             | 140 kgf/cm <sup>2</sup> (1 991 psi) [13 729 kPa]       | *    |
|   | Check and adjust fan belt                                       | Deflection: 13 mm (0.5 in.)                            | 28   |
|   | Check glow plugs  |  | *    |
| Every 1000 Service<br>Hours   | Retighten nuts and bolts  |  | *    |
|   | Check starter   |  | 29   |
|   | Check alternator  |  | 29   |
|   | Check turbocharger  |  | *    |
| Every 2 Years   | Change coolant  | See SPECIFICATIONS (page 16)                           | 29   |

**Table 3** Lubrication and maintenance charts



| Interval      | Item                       | Remarks (specifications) | Page |
|---------------|----------------------------|--------------------------|------|
| When Required | Prime fuel system          |                          | 30   |
|               | Clean air cleaner element  |                          | 31   |
|               | Change air cleaner element |                          | 31   |


**Table 3** Lubrication and maintenance charts

## 6.1 Every 50 service hours

### 6.1.1 Drain water and sediment from the fuel tank and water separator

Remove the drain plug and allow any water and sediment to drain. Drain at least 1 or 2 liters (0.3 to 0.5 U.S. gal) of fuel to remove the water and sediment.

It is evident that invisible particles of dirt in sediment which might pass through the filter will damage the finely finished parts of the fuel injection system.

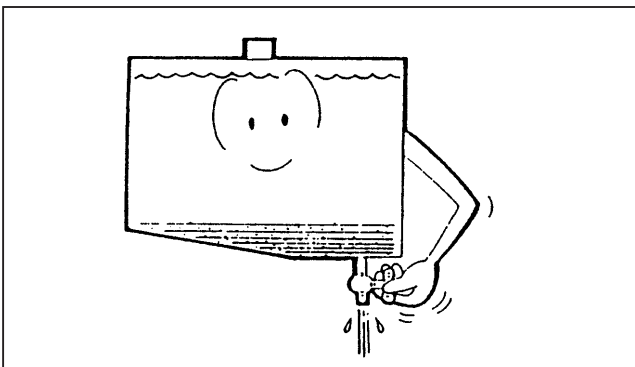

## DANGER

Do not smoke while draining out the water and sediment. Keep flames and sparking devices away from this area. Clean up any spillage before starting the engine.


### 6.1.2 Check the battery electrolyte level and specific gravity

1. Maintain the electrolyte level between UPPER and LOWER marks on the case. If the battery has not got any level marks, maintain the level 10 to 15 mm (0.4 to 0.6 in.) above the cells. Remove the filler caps and add distilled water when necessary.
2. Test the specific gravity of the battery electrolyte with a battery hydrometer. The

following chart of specific gravity reading gives a general idea of the battery condition.

| Specific gravity at 20°C (68°F) | Battery condition                       |
|---------------------------------|---|
| 1.26 to 1.28                    | Fully charged                           |
| 1.22 to 1.26                    | Three-fourths charged (To be recharged) |
| Below 1.22                      | One-fourth charged (To be recharged)    |

**Table 4** Specific gravity reading

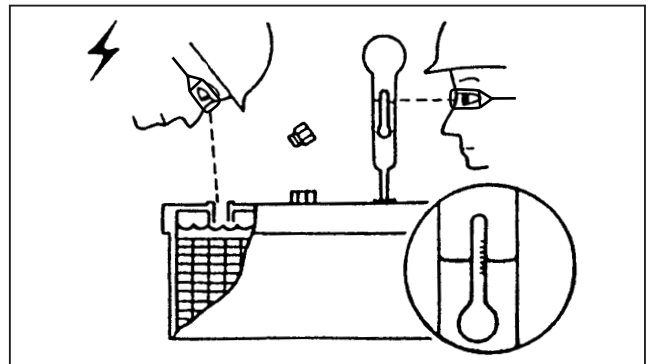



## WARNING

- Battery gives off flammable fumes that are explosive.
- Do not smoke when observing the battery electrolyte level.
- Electrolyte is an acid and can cause personal injury if it comes into contact with the skin or eyes.
- Always wear goggles when working with the battery.

## 6.2 Every 100 service hours

### 6.2.1 Cleaning the fuel filter with cut off valve

1. Turn the valve to the OFF position.
2. Loosen the ring nut and remove the cup.
3. Wash the element in kerosene or diesel fuel.
4. Put the cleaned element in the cup and install the cup, making sure the O-ring is properly fitted into place. Tighten the ring nut.
5. Turn the valve to the ON position and prime the fuel system (see page 30).

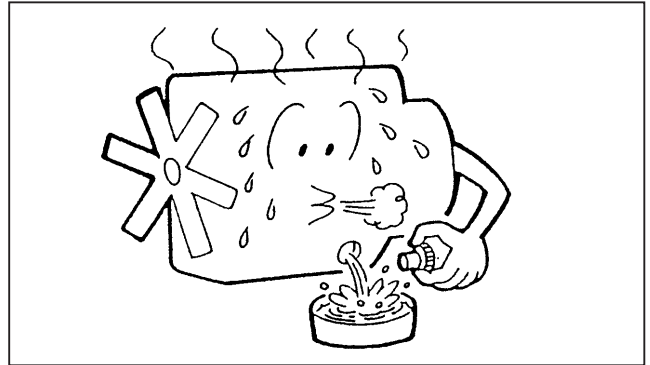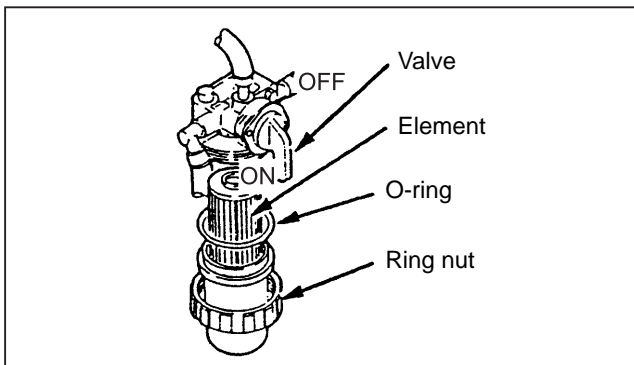


### DANGER

Hot oil and components can cause personal injury. Do not allow hot oil or components to come into contact with the skin.

### 6.2.2 Clean the radiator

Direct the pressurized air to the fins in the opposite direction of the fan's air flow.

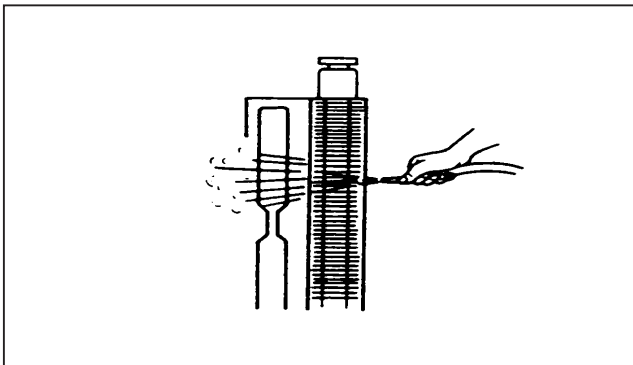

## 6.3 Every 250 service hours or once a year

### 6.3.1 Change engine oil and oil filter; draining oil

To avoid burns, drain the oil after the engine has cooled down to the extent that it can be touched with your bare hands. Allow the oil to drain into a container.


### 6.3.2 Changing the oil filter

1. Remove the used oil filter with a filter wrench.


### NOTE

Check particles collected in the used oil filter. If they are metallic particles, you should consult your Mitsubishi dealer.

2. Make sure that the formerly used packaging is removed from the filter base and clean the base with a clean cloth.

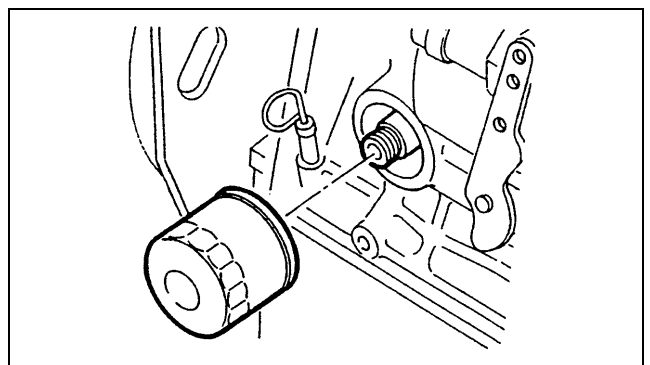

3. Check the new oil filter and make sure that the packing is fitted in the groove.
4. Apply a thin coat of engine oil to the packing of the new filter.
5. Install the new filter by hand until its packing touches the base. Tighten it by 3/4 to 1 turn.

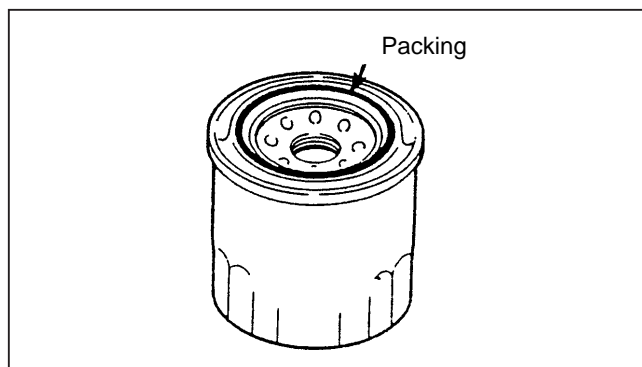

## 6.3.3 Filling with oil

1. Install the drain plug and tighten it to the specified torque.

| Torque   |  |
|--|--|
| $4.5 \pm 0.5 \text{ kgf/m}$<br>$(33 \pm 4 \text{ lbf/ft})$<br>$[44 \pm 5 \text{ N/m}]$ |  |

**Table 5** Specified torque

2. Fill the crankcase with oil.

|                            |                    |
|----------------------------|--------------------|
| Refill capacity            | See SPECIFICATIONS |
| API Service Classification | CF or CF-4         |

**Table 6** Fill crankcase


3. Start the engine, leave it idling for a few minutes, and check for leaks. Re-tighten the filter in case of leakage.
4. Stop the engine and leave it inert for about 30 minutes; then re-check the oil level. Maintain the oil level between the MAX and MIN marks on the dipstick. Add oil only if necessary.

## 6.4 Every 500 service hours

### 6.4.1 Change fuel filter element


#### Fuel filter with cut off valve

1. Turn the valve to the OFF position.
2. Loosen the ring nut and remove the cup.
3. Remove and discard the filter element.
4. Put the new filter element in the cup and install the cup, making sure the O-ring is properly fitted into place. Tighten the ring nut.
5. Turn the valve to the ON position and prime the fuel system (see page 30 for priming).

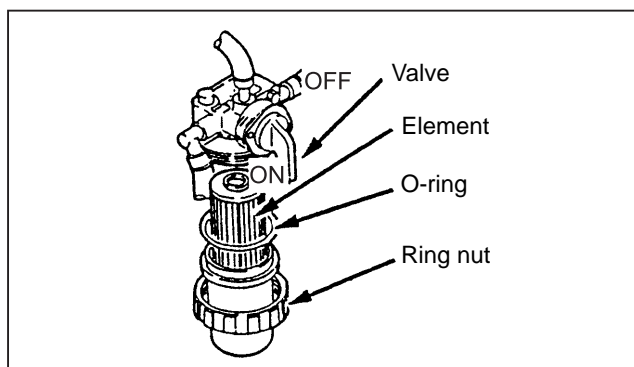

#### Cartridge type fuel filter


1. Change the filter if water and sediment have been collected in the filter.
2. After changing the filter, prime the fuel system (see page 30 for priming).

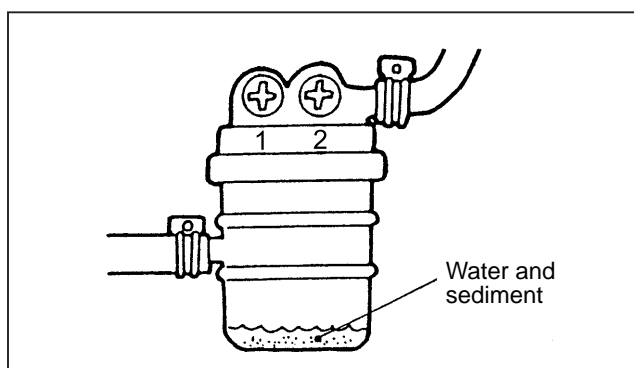

### 6.4.2 Check and adjust the fan belt


#### Checking

Correct adjustment exists when the belt can be pushed inward about 13 mm with 100 N thumb pressure exerted midway between the alternator and crankshaft pulley as shown.

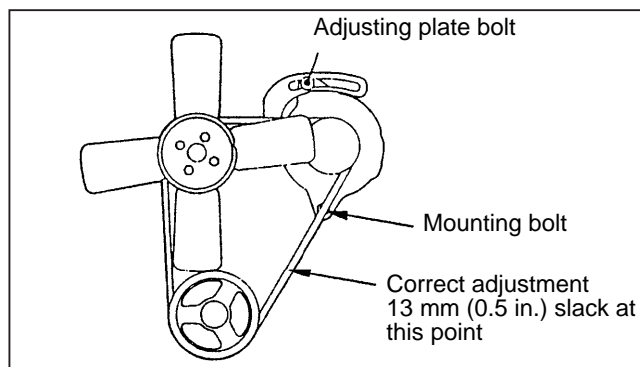

## Adjusting

1. Loosen the adjusting plate bolt and the mounting bolt.
2. Insert a bar between the alternator and the cylinder block to move the alternator to obtain the required belt deflection.
3. Tighten the mounting bolt and the adjusting bolt.

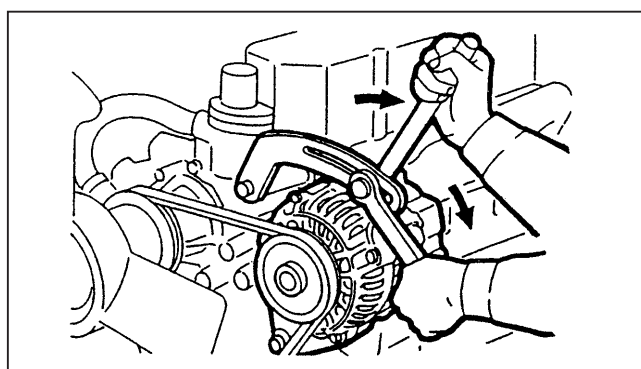

## ⚠ CAUTION


- If the fan belt is too tight, excessive stress is put on to the fan bearings and belt, which might shorten the life of both. If it is too loose, it will slap against the pulleys, causing unnecessary wear and tear to the belt, which could cause possible slipping, to the extent that the engine will overheat.
- Keep the belt free from oil or grease.

## 6.5 Every 1000 service hours

### 6.5.1 Check the starter


1. Check for visual defects.
2. Check to see if the pinion is shifted into mesh with the flywheel ring gear when the starter is

energized. If the pinion does not shift properly, consult your Mitsubishi dealer.

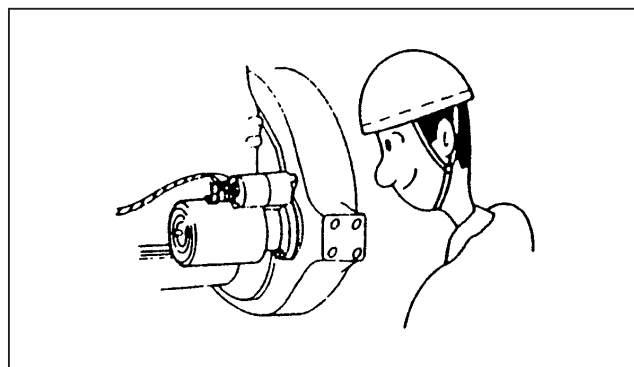

### 6.5.2 Check the alternator

1. Check for visual defects.
2. Remove the belt from the alternator. Turn the pulley by hand to check the alternator for smooth rotation. If the alternator fails to rotate smoothly, consult your Mitsubishi dealer.

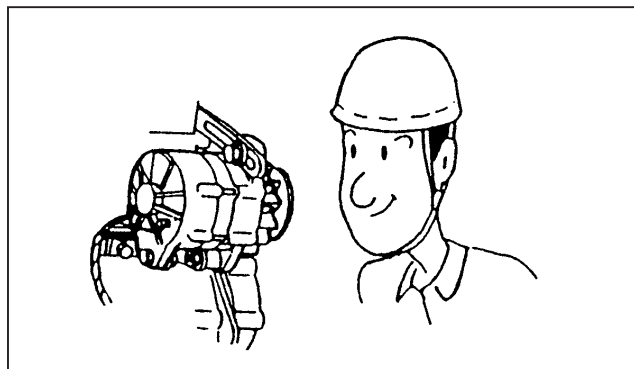


## 6.6 Every 2 years

### 6.6.1 Change coolant

Long Life Coolant (LLC) used in your engine retains its efficiency for 2 years. Be sure to change the coolant every 2 years.

### 6.6.2 Draining

1. Start and operate the engine until the coolant temperature is 70°C to 80°C (158°F to 176°F). Then stop the engine.
2. Remove the filler cap only after the engine has been stopped and the cap is cool enough to remove with your bare hands.
3. Open the radiator drain valve and remove the engine drain plug. Then allow the coolant to drain into the containers.

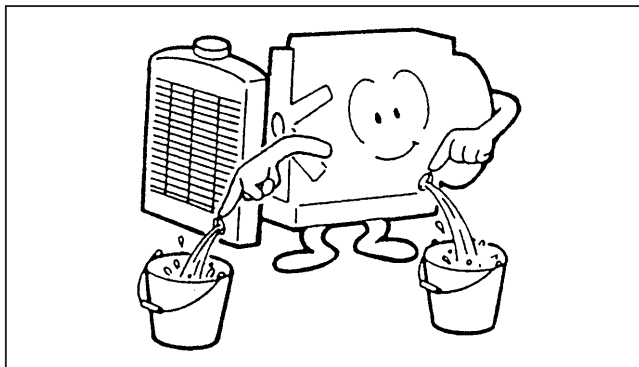

## 6.6.3 Flushing


1. Close the radiator drain valve and install the engine drain plug.
2. Fill the cooling system with a cleaning solution which does not chemically attack rubber or metal surfaces. Start and operate the engine at 800 to 900 rpm and let the engine run for 15 minutes. Stop the engine and drain the cleaning solution.
3. Fill the system with clean water and operate the engine at 800 to 900 rpm for 10 minutes. Continue to flush the system until the draining water is clear.

## 6.6.4 Refilling


1. Tighten the radiator drain valve and the engine drain plug.
2. Pour pure, undiluted LLC into the radiator. The recommended concentration of LLC is illustrated in the chart below:

| Ambient Temperature, °C (°F) | -10 (14) | -20 (-4) | -30 (-22) | -45 (-49) |
|------------------------------|----------|----------|-----------|-----------|
| LLC concentration, %         | 30       | 40       | 50        | 60        |

**Table 7** Recommended LLC Concentrations (reference)

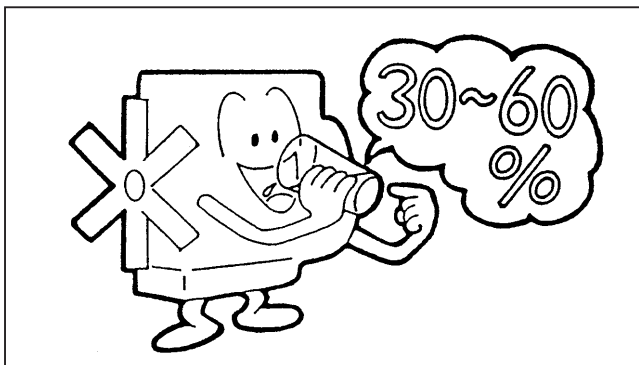

3. Add coolant to the radiator slowly to help avoid air pockets in the system. See COOLANT AND ANTIFREEZE SPECIFICATIONS on page 35.

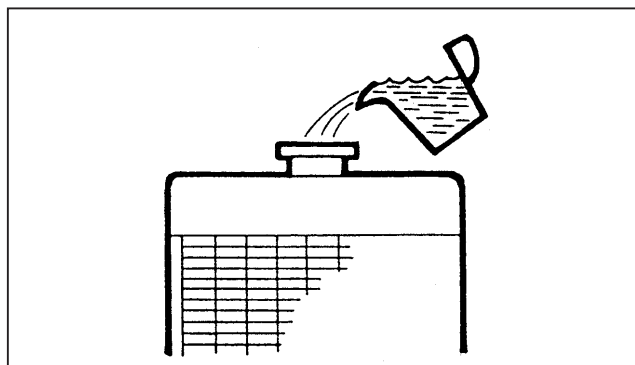

4. Start and operate the engine until the coolant temperature is between 70°C and 80°C (158°F to 176°F). Then stop the engine.
5. Check the coolant level in the reservoir tank and add water if the coolant level is low. Maintain the coolant level to FULL line on the tank when the engine is cold.

## 6.7 When required

### 6.7.1 Prime fuel system

Air in the lines may cause the fuel system to become air bound, resulting in an inability to start the engine or the misfiring of one or more cylinders. Prime the fuel system:

1. After the engine has been fueled for the first time after installation.
2. After the engine has been refueled after running out of fuel.
3. After the fuel filter element has been cleaned or replaced.

### 6.7.2 Procedure

#### Fuel filter with air valve

1. Turn the valve lever to the AIR position and feed the fuel.
2. If the fuel flows free of bubbles through the fuel return pipe, turn the valve lever to the ON position.


#### Fuel filter with air vent screws

1. Loosen the air vent screw (1). Tighten the screw when the fuel flows free of bubbles.

- Loosen the air vent screw (2). Tighten the screw once the fuel flows free of bubbles.

## **NOTE**

The injection pipes and nozzles can be primed by cranking the engine. The fuel system of the engine equipped with an electric fuel pump can be primed by turning the starter switch key to the ON position.

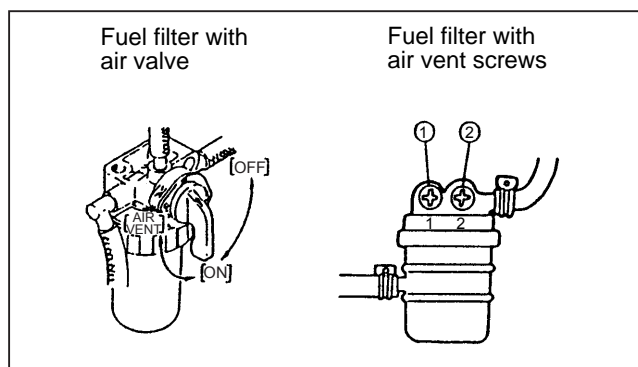

## **CAUTION**

- Never service the air cleaner when the engine is running. Without the air cleaner, dust and dirt can enter the engine and can cause rapid wear of the engine parts resulting in loss of power and high oil consumption.
- Do not clean the element by bumping or tapping it.

## **WARNING**


When using compressed air for cleaning, wear a protective face shield, protective clothing, and protective shoes.

### 6.7.3 Clean/change air cleaner element

Service the air cleaner only when it is necessary, or when the dust indicator indicates RED.

### 6.7.4 Cleaning

- Direct air — 7 kgf/cm<sup>2</sup> (100 psi) [686 kPa] maximum — inside the element along the length of pleats.
- Insert a light inside the clean element and check. Replace the element if rips or tears are found.

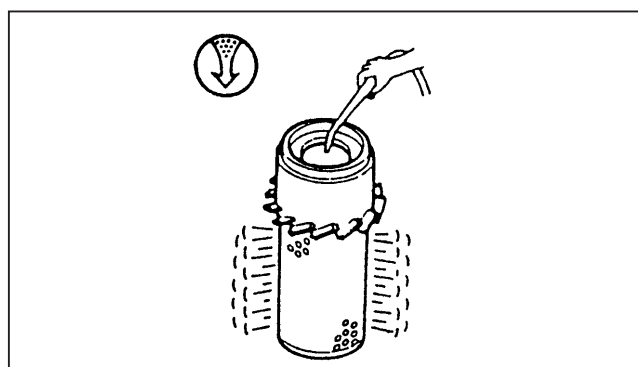

## **NOTE**

Replace the element if it is excessively dirty.

# 7 FUEL SPECIFICATIONS



## 7.1 Recommended types of fuels

The quality of fuel is a very important factor in obtaining satisfactory engine performance, long engine life, and acceptable exhaust emission levels.

This engine is designed to burn fuels marketed to meet ASTM Designation D 975 (grade No. 2-D).

## 7.2 Caring for the diesel fuel tank

Fill the diesel fuel tank at the end of the day, because the incoming fuel will drive out the moisture-laden air and prevent condensation. Before starting the engine after 50 service hours, remove the drain plug and drain off any sediment or water which may have accumulated.

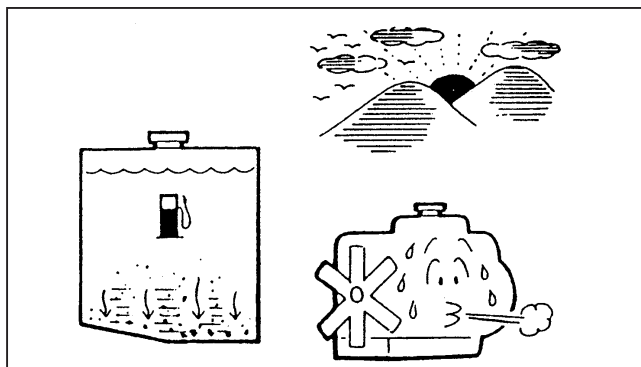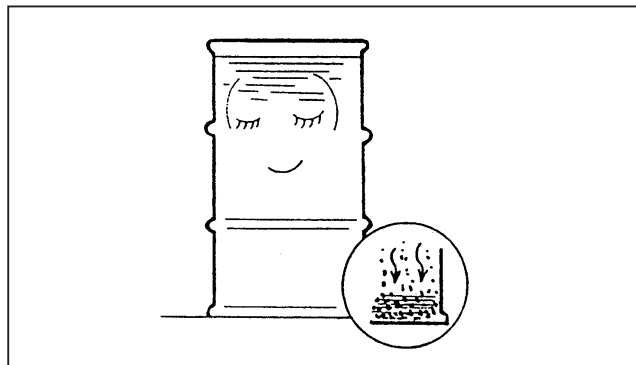

## 7.3 Caring for the fuel supply


It is important to buy clean fuel and keep it clean. Natural settling is an effective method of cleaning fuel. Allow the fuel to stand for at least 10 days in the fuel storage tank after the tank has been filled and before the fuel is transferred to the diesel fuel tank. Be sure to drain all the water and sediment that has settled in the bottom of the tank before the tank is refilled. Occasionally, drain all of the fuel and clean the tank thoroughly.



## 8 LUBRICANT SPECIFICATIONS

### 8.1 Recommended types of engine oils

Use oils that meet the API engine oil classification CF or CF-4 class. Proper oil selection assures cranking ability by maintaining an oil film on the cylinder walls and bearing surfaces in conditions which provide low friction and therefore less cranking effort to achieve cranking speeds necessary for reliable starting. Improper oil selection may result in congealed oil film on the cylinder walls and the bearing surfaces. This can result in high friction loads and more cranking effort, thus standing in the way of achieving sufficient cranking speeds for reliable starting and affecting engine life.

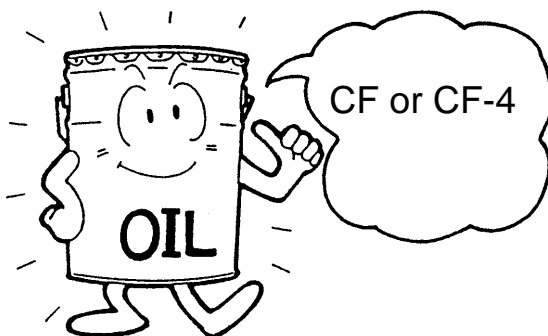

### 8.2 Recommended oil viscosities

There are two important considerations related to satisfactory engine operation under ambient temperature conditions — (1) the ability to crank the engine fast enough to assure starting, and (2) adequate lubrication of internal wearing surfaces during starting and warm-up. These considerations can be adequately met through proper grade selection. Recommended oil viscosities are shown in the chart below:



| Starting temperature, °C (°F) | -30<br>(-22) | -25<br>(-13) | -20<br>(-4) | -15<br>(5) | -10<br>(14) | -5<br>(23) | 0<br>(32) | 10<br>(50) | 20<br>(68) | 30<br>(86) | 40<br>(104) |
|-------------------------------|--------------|--------------|-------------|------------|-------------|------------|-----------|------------|------------|------------|-------------|
| Oil viscosities               |              |              |             |            |             |            |           |            |            |            |             |
|                               |              |              |             |            |             |            |           |            |            |            |             |
|                               |              |              |             |            |             |            |           |            |            |            |             |
|                               |              |              |             |            |             |            |           |            |            |            |             |
|                               |              |              |             |            |             |            |           |            |            |            |             |

**Table 8** Recommended oil viscosities


Mitsubishi recommends the all-season type engine oil of SAE 10W-30.





## CAUTION

Avoid mixing oils with different brands. In most cases, oils with different brands are not compatible and, when mixed, they can seize parts such as piston rings, cylinders, etc. and cause wear to moving parts. It is best to stick with the same brand and one type of oil at successive service intervals.

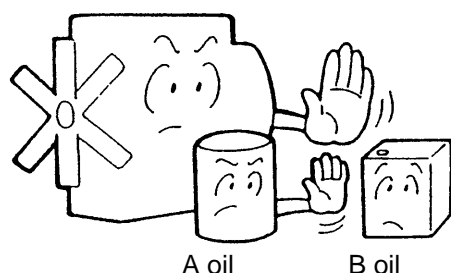

## 8.3 Limiting requirements for engine oils

If a used oil analysis program is conducted in order to determine the condition of the oil, consult the chart below. Change the oil if any of these requirements are not met.



## NOTE

- Oil change intervals depends on the fuel properties. Be sure to use the recommended fuels only.
- The limit of total base number is 1/2 of that of a new oil in case of a perchloric-acid analysis method.

| Property                      | Unit                | Test Method | Limit                         |
|-------------------------------|---------------------|-------------|-------------------------------|
| Viscosity                     | cSt @ 100°C (212°F) | JIS K 2283  | +30% / -15% , max. of new oil |
| Total base number (HCl)       | mgKOH/g             | JIS K 2501  | 2.0, min.                     |
| Total acid number             | mgKOH/g             |             | +3.0, max. of new oil         |
| Water content                 | Vol%                | JIS K 2275  | 0.2, max.                     |
| Flash point                   | °C (°F)             | JIS K 2265  | 180 (356), min.               |
| Pentane insolubles            | Wt%                 | ASTM D 893  | 0.5, max.                     |
| Pentane insolubles coagulated | Wt%                 |             | 3.0, max.                     |

**Table 9** Limiting requirements for engine oils

## 9 COOLANT AND ANTIFREEZE SPECIFICATIONS

### 9.1 Coolant specifications

Water used in the engine cooling system must be soft, or as free from scale forming minerals as possible and it has to meet the requirements shown in the "Coolant Specifications" chart.



### NOTE

Harmful chemical properties and substances contained in water (as coolant) must not exceed the Mitsubishi limits. They are tolerable up to the limits shown in the chart below.

| Item                                 | Chemical symbol               | Unit  | Recommended limit          | Main malign effect |                 |
|--------------------------------------|-------------------------------|-------|----------------------------|--------------------|-----------------|
|                                      |                               |       |                            | Corrosion and rust | Scale formation |
| pH, 25°C (77°F)                      | -                             | -     | 6.5 to 8.5<br>(6.5 to 8.0) | O                  | O               |
| Electrical conductivity, 25°C (77°F) | -                             | μΩ/cm | < 400<br>(< 250)           | O                  | O               |
| Total hardness                       | CaCO <sub>3</sub>             | PPM   | < 100<br>(< 95)            | -                  | O               |
| M alkalinity                         | CaCO <sub>3</sub>             | PPM   | < 150<br>(< 70)            | -                  | O               |
| Chlorine ion                         | Cl <sup>-</sup>               | PPM   | < 100<br>(< 100)           |                    | -               |
| Sulfuric acid ion                    | SO <sub>4</sub> <sup>2-</sup> | PPM   | < 100<br>(< 50)            | O                  | -               |
| Total iron                           | Fe                            | PPM   | < 1.0<br>(< 1.0)           | -                  | O               |
| Silica                               | SiO <sub>2</sub>              | PPM   | < 50<br>(-)                | -                  | O               |
| Residue from evaporation             | -                             | PPM   | < 400<br>(< 250)           | -                  | O               |

**Table 10** Coolant specifications


The values indicated in ( ) are the limits set forth by Mitsubishi. In addition to the items specified above, turbidity is specified to be <15 mg/l.

### 9.2 Recommended types of LLC's (Long Life Coolant)

For Mitsubishi diesel engines, all-season, non-amine type LLC's or equivalents are recommended.

#### 9.2.1 Features of recommended brands

- No amines (methyl amines, ethyl amines, n-propyl amines, etc., all being derivatives of ammonia, NH<sub>3</sub>) are contained.
- Silicate and borate are not contained.
- Close to neutral on the pH scale, and hence, slightly basic (alkaline).
- Balanced additive ingredients; some being substitutes for amines.
- Long life (the coolant with 30% concentration, for example, retains its effectiveness for more than 2 years).

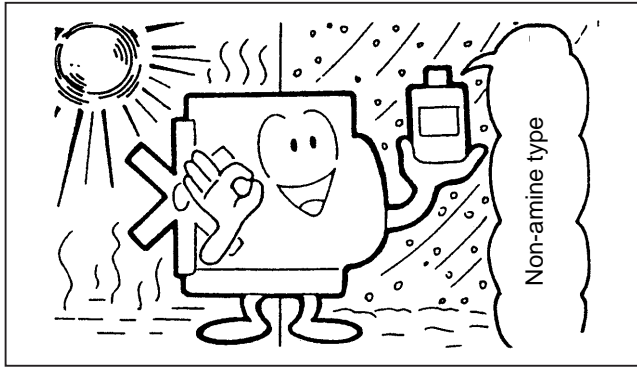

## WARNING

LLC is toxic and can cause personal injury if it comes into contact with the skin or the eyes. If LLC gets in your eyes, wash them with water immediately and see a doctor at once.

### 9.3 How to use non-amine type LLC

1. The engine coolant with any of the recommended additives should be changed every 2 years.



## NOTE

When using any other LLC, refer to the coolant mixture chart shown on the container.




## WARNING

Consult your Mitsubishi dealer for disposal of a used coolant containing LLC.

2. The proper concentration of LLC is from 30% to 60% all year round. Aim at a temperature level which is 5°C (9°F) lower than the expected lowest temperature. LLC of less than 30% concentration does not provide sufficient corrosion protection. Concentrations over 60% adversely affect freeze protection and heat transfer rates. When adding coolant, use LLC of the same concentration.

| Ambient temperature, °C<br>(°F) | -10<br>(14) | -20<br>(-4) | -30<br>(-22) | -45<br>(-49) |
|---------------------------------|-------------|-------------|--------------|--------------|
| LLC concentration, %            | 30          | 40          | 50           | 60           |

**Table 11** Recommended LLC concentrations (reference)

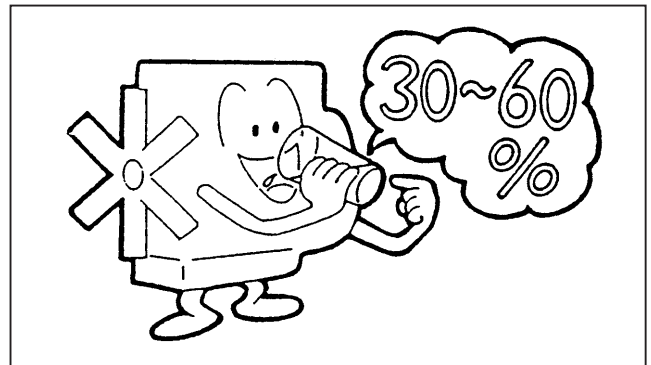

### 9.4 Why LLC?

Today's full-blown trend is toward smaller and more lightweight engines, higher output, lower fuel consumption, and lower exhaust emission levels. Engine application has also expanded. In most applications, the engine coolant is compelled to withstand severe conditions such as continuous high-power operation with a higher coolant temperature and a higher speed of coolant recirculation in the cooling circuit. Many materials involved in the circuit (such as steel, aluminum, copper, solder, and rubber) are also subject to severe servicing. These materials differ in ionizing tendency and this difference promotes cavitation and deterioration through the medium of engine coolant. The ideal of breaking the link between cause and effect to preserve the circuit can be realized by using LLC.

### 9.5 How LLC works

LLC contains several chemicals in such proportions as to produce a chemical reaction that suppresses corrosion of the engine parts in contact with coolant. "Corrosion" is the result of a phenomenon called "ionization."

The power of LLC to defeat the ionic reaction is generally subject to wear and the engine coolant becomes increasingly weak at that time.

Moreover, if its chemicals are not properly proportioned to match the circuit metals which

they are meant to protect, they are used up due to aging and this allows some metals to precipitate into the coolant or to form new compounds which can result in rusty surface deposits. Some chemicals, calculated to inhibit this ionic reaction, might accelerate the reaction of those metals that have already begun to react.

The worse case scenario is that the process of the ionic reaction or corrosion will go on faster than when the coolant is straight water without additives, if there is not a good match between the chemical proportions and the circuit metals.

badly affected in such a condition, brass and solder — the materials used in the cores of the radiator — become particularly victimized. The cause of coolant leakage from and clogging of the coolant circuit in the radiator is usually traceable to such a malfunction of the coolant.

### **9.6 Practical reported cases of circuit trouble for which additive is blamed**

#### **Case 1:**

Amines are generally effective in suppressing the rusting of ferrous metals but are said to be problematic for copper and cupric metals because of copper involvement in pittings reported on Fe metals. The mechanism of Fe-surface pitting may be explained as that of galvanic or local-cell action. Suppose a cluster of copper molecules precipitates and deposits itself on a surface of Fe, a base metal relative to copper. The copper deposit introduces a localized galvanic cell which, by its ionic action, rapidly eats into the Fe surface to result in a pit.

#### **Case 2:**

A silicate (there are several types of silicate) is highly effective in protecting aluminium against rusting. This compound of silicon is unstable in a solution whose pH is 9 or less: it is prone to turn to gel and settle down in the solution. For this reason, the pH is usually specified to be 10 or so. This means that the silicate has to be used in a high-alkalinity coolant. When the silicate is used up, the high alkalinity starts chemically attacking the aluminium.

#### **Example**

The mechanical seal of the water pump may rapidly wear down as the secondary effect of silicate gel in the above context.

#### **Case 3:**

As the additive as a whole deteriorates or when its concentration in the coolant is too low, its anti-corrosion performance falls and consequently the circuit metals begin to corrode. Of those metals

# 10 STORAGE

## 10.1 Storage of the engine in a non-operational condition

### 10.1.1 Preparation

1. Drain the engine oil and put a preservative into the engine (up to the high level on the dipstick).
2. Make a mixture of preservative and fuel oil in a 50-to-50 ratio and put the mixture into the fuel tank.
3. Start and leave the engine idling for 5 to 10 minutes.
4. Stop the engine and spray volatile preservative (VCI) into the opening of the air inlet.
5. Drain the preservative-fuel mixture.
6. Apply a coat of preservative to the exposed machined surfaces of the engine.
7. Cover the air inlet, the exhaust openings, and the breather by taping them.
8. Loosen the fan belt.
9. Tape the starter and the alternator terminals. Cover the starter and alternator with a polyethylene sheet and put a desiccant inside.
10. Disconnect the cables from the battery and charge the battery. Flush the top of the battery with clean water and coat the poles with acid-free vaseline to prevent further corrosion. Keep the battery in a cool, dry place.
11. Cover the engine to protect it against the weather.
4. Adjust the fan belt.
5. Remove the covering and the taping from the various ports.
6. Drain the preservative and fill the engine with the recommended engine oil.
7. Fill the fuel tank and prime the fuel system.
8. Check under and around the engine for items such as loose or missing bolts, oil, fuel, or coolant leaks.
9. Remove the rocker cover and lubricate the valve mechanism.
10. Crank the engine 3 times, 10 seconds each time, at intervals of 1 minute, with the fuel supply shut off.
11. Make sure the engine oil pressure rises properly.
12. Open the fuel supply valve and start the engine.
13. Allow the engine to leave it idling.
14. When the engine has run long enough to warm up, apply the load and bring it to an operating speed.

## 10.2 Storage of the engine in an operational condition

### 10.2.1 Follow steps 1 through 3 mentioned below once a month:

1. Crank the engine 2 times, for 10 seconds each time, with the starter at intervals of 30 seconds, with the fuel supply shut off. Open the fuel supply valve afterwards.
2. Start and operate the engine at 800 rpm under no-load condition for 5 minutes.
3. Increase the engine speed from 1000 to 1200 rpm and operate the engine under no-load condition for 10 minutes.



### NOTE

- Store the engine in a well-ventilated room.
- It is not necessary to drain the coolant if it contains LLC.
- Attach a "DO NOT OPERATE" sign or similar warning tag to the starter switch or any of the controls.
- New engine oil may be used instead of preservative.

### 10.1.2 Service during storage

Charge the battery at least once a month.

### 10.1.3 Remove the engine from storage


1. Remove the covers from the engine.
2. Connect a fully charged battery to the engine.
3. Remove the covers from the starter and the alternator.

## 11 TROUBLESHOOTING

### 11.1 General


#### 11.1.1 Think before you act

Upon noting a defective indication, recall what you did the last time when you came across the same indication. If what you did was correct and successful, do the same again. If the symptom noted is new to you, think of a possible cause in accordance with the troubleshooting procedure which follows.

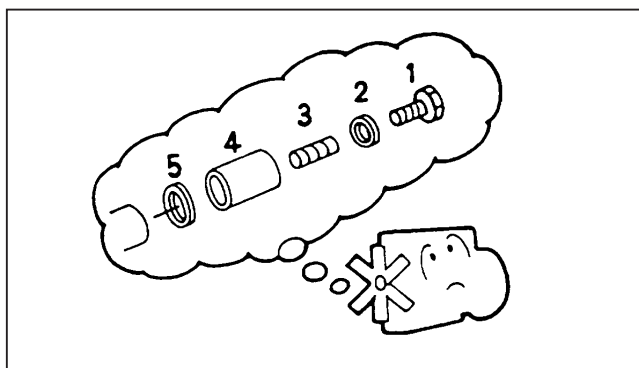

#### 11.1.2 Dust and dirt are often the main causes


“Wear” is usually the result of abrasive particles. When disconnecting or disassembling a part or component, be sure to keep out dust and dirt.

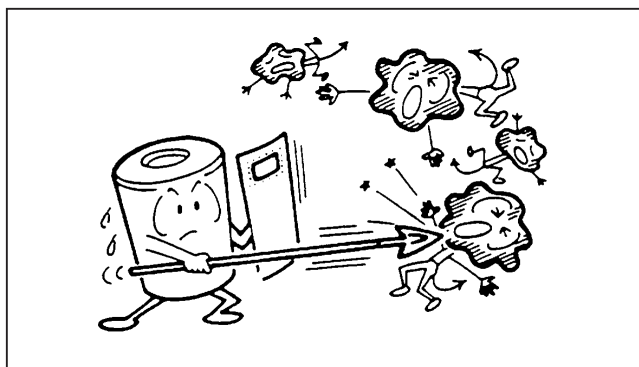

#### 11.1.3 Use original parts


Use only original parts to replace those that have failed or reached their service limits. When

ordering, specify the needed replacement parts by referring to the Parts Catalogue.

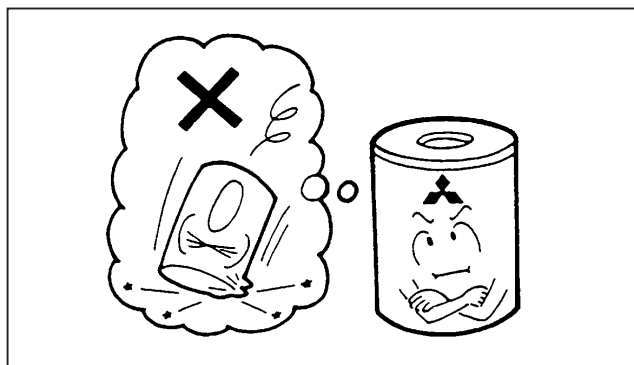

#### 11.1.4 Perform servicing work safely

Use the right kind of hand tools to carry out each working step in repair work. Avoid injury to yourself and damage to the parts by using proper tools. When lifting or carrying a part that is too heavy for one person to handle, get another person's help and, if necessary, use a jack or a hoisting device.

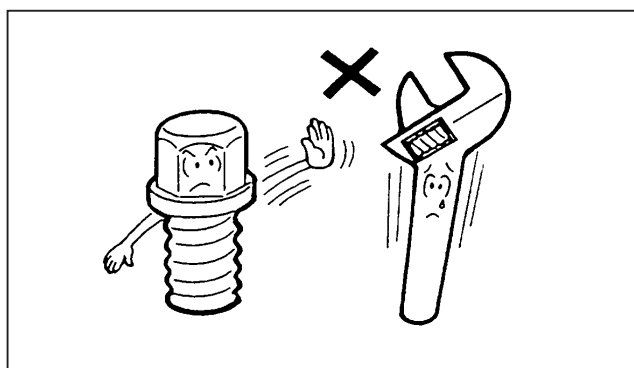
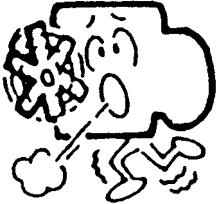


### CAUTION

- Never attempt to break the seals of the governor for maximum speed setting or maximum injection quantity setting.
- The maximum injection quantity of the injection pump has been set on the basis of the output power of each engine verified at the bench test. Never attempt to vary this injection quantity in the field.

## 11.2 Problems

For special servicing jobs on your engine, rely on the expert knowledge of the servicemen and the service facilities provided by your Mitsubishi dealer.

| Problem  | Cause  | Correction                             |
|--|--|--|
| Engine will not start<br> | Fuse off   | Replace                                |
|  | Defective starter switch                               | Repair or replace*                     |
|  | Slow cranking speed                                    | Recharge battery                       |
|  | Wrong viscosity grade of oil                           | Change correct oil                     |
|  | Seized running parts                                   | Repair*                                |
|  | Air in fuel system                                     | Prime                                  |
|  | No fuel in tank  | Refuel                                 |
|  | Bad quality fuel                                       | Change fuel                            |
|  | Clogged fuel filter                                    | Clean or replace                       |
|  | Defective fuel injection pump                          | Repair or replace*                     |
|  | Defective control timer unit                           | Replace*                               |
|  | Clogged air cleaner                                    | Clean or replace                       |
|  | Defective starter or relay                             | Repair or replace*                     |
|  | Open electrical circuit                                | Repair                                 |
| Not enough power<br>    | Wrong viscosity grade of oil                           | Change oil                             |
|  | Clogged air cleaner                                    | Clean or replace                       |
|  | Clogged fuel filter                                    | Clean or replace                       |
|  | Defective fuel injection pump                          | Repair or replace*                     |
|  | Defective fuel injection nozzles                       | Repair or replace*                     |
|  | Wrong injection timing                                 | Adjust*                                |
|  | Bad quality fuel                                       | Change correct fuel                    |
|  | Overheating  | Flush cooling system and replace parts |
|  | Wrong valve clearance                                  | Adjust                                 |
|  | Poor compression (cylinders, piston, rings, etc. worn) | Repair or replace*                     |

**Table 12** Troubleshooting


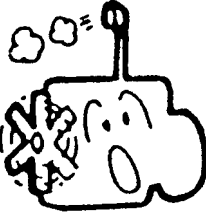
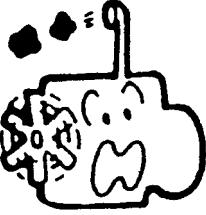

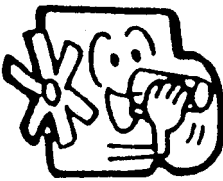
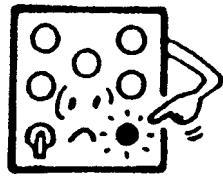
| Problem   | Cause   | Correction               |
|---|---|--------------------------|
| Overheating<br>                    | Not enough coolant in system                          | Add coolant              |
|   | Leaks in cooling system                               | Retighten or repair      |
|   | Loose fan belt  | Adjust                   |
|   | Restriction to air flow through radiator              | Remove restrictions      |
|   | Defective water pump                                  | Replace                  |
|   | Defective thermostat                                  | Replace                  |
|   | Defective fan   | Replace                  |
|   | High LLC concentration                                | Adjust LLC concentration |
| Too much white or blue smoke<br>   | Too much oil in engine                                | Drain to correct level   |
|   | Oil viscosity too low                                 | Change oil               |
|   | Defective thermostat (coolant temperature too low)    | Replace                  |
|   | Defective fuel injection nozzles                      | Repair or replace*       |
|   | Wrong injection timing                                | Adjust*                  |
|   | Wrong fuel cetane number                              | Change fuel              |
|   | Poor compression (cylinders, piston rings, etc. worn) | Repair or replace*       |
| Too much black or gray smoke<br> | Bad quality fuel                                      | Change fuel              |
|   | Defective fuel injection pump                         | Repair or replace*       |
|   | Defective fuel injection nozzles                      | Repair or replace*       |
|   | Wrong injection timing                                | Adjust*                  |
|   | Clogged air cleaner                                   | Clean or replace         |
|   | Wrong valve clearance                                 | Adjust                   |
|   | Poor compression (cylinders, piston rings, etc. worn) | Repair or replace*       |
| Fuel consumption too high<br>    | Bad quality fuel                                      | Change fuel              |
|   | Defective fuel injection pump                         | Repair or replace*       |
|   | Defective fuel injection nozzles                      | Repair or replace*       |
|   | Wrong injection timing                                | Adjust*                  |
|   | Clogged air cleaner                                   | Clean or replace         |
|   | Poor compression (cylinders, piston rings, etc. worn) | Repair or replace*       |

Table 12 Troubleshooting



## TROUBLESHOOTING

| Problem   | Cause                           | Correction             |
|---|---------------------------------|------------------------|
| Oil consumption too high<br> | Too much oil in engine          | Drain to correct level |
|   | Oil viscosity too low           | Change oil             |
|   | Leaks in lubrication system     | Repair or replace      |
|   | Worn cylinders and piston rings | Repair or replace*     |
|   | Worn valve stem seals           | Replace*               |
| Oil pressure too low<br>     | Not enough oil in engine        | Add oil                |
|   | Oil viscosity too low           | Change oil             |
|   | Clogged oil filter              | Replace                |
|   | Defective oil pump              | Repair or replace*     |
|   | Defective relief valve          | Adjust or replace*     |
|   | Defective pressure switch       | Replace*               |

**Table 12** Troubleshooting

Remarks:

1. Consult your Mitsubishi dealer for items marked with an asterisk (\*).
2. Consult your Mitsubishi dealer for any items other than those listed in the table.
3. When communicating with your Mitsubishi dealer, specify the engine model name, the engine serial number, the application, the rating, and service hour meter reading of your engine.



---

To whom it may concern

**EC-declaration of incorporation**  
(Directive 98/37/EC, Annex II, sub B)  
Ban on putting into service

MHI Equipment Europe B.V.  
Damsluisweg 2  
1332 EC Almere  
The Netherlands

herewith declares that:

*the Mitsubishi diesel engine, SL-series type*

is destined to be incorporated in other machines or to be combined with other machines,  
and is not (entirely) in compliance with the Machinery Directive (98/37/EC).

Almere, December 17th 2002

A handwritten signature in black ink, appearing to read "R.A.G.L. Manders", written over a horizontal line.

R.A.G.L. Manders  
General Manager  
Engine Division







## **GENERATOR PARTS LISTS**

## **GENERATOR MODEL G16**

## SALES OFFICES

### **Sales Office United Kingdom Facility details**

Ingersoll-Rand European Sales Ltd  
Swan Lane  
Hindley Green  
Wigan WN2 4EZ  
United Kingdom  
Phone +44 (0) 1942 257 171  
Fax +44 (0) 1942 523 417

### **Structure de l'Organisation en France Coordonnées du Site**

Ingersoll-Rand Portable Power  
Zone du Cène Sourcier  
B.P 62  
LES CLAYES SOUS BOIS Cedex 78236  
FRANCE  
Téléphone +33 1 30 07 68 62  
Fax +33 1 30 07 68 71

### **Organisatorische Bekanntmachung im Deutschland Unternehmensdetails**

Ingersoll-Rand Gmbh  
Gewerbealle 17  
Mulheim D-45478  
Germany  
Telefon +49 208 99 94 400  
Fax +49 208 99 94 111

### **Dirección de la organización en España Dirección**

Ingersoll-Rand Iberia, S.L.  
C/ Tierra de Barros nº 2  
Poligono Industrial de Coslada  
28820 Coslada (Madrid)  
Spain  
Teléfono +34 91 627 74 07  
Fax +34 91 627 74 08

### **Sales Office The Netherlands Facility details**

Ingersoll-Rand Benelux N.V.  
Produktieweg 10  
2382 PB Zoeterwoude-Rijndijk  
The Netherlands  
Phone +31 (0)71 58 23456  
Fax +31 (0)71 58 23400

## **PARTS LIST INDEX**

|   |           |
|---|-----------|
| <b>ENGINE ASSEMBLY .....</b>                              | <b>5</b>  |
| <b>ENGINE DETAILS.....</b>                                | <b>6</b>  |
| <b>ALTERNATOR ASSEMBLY.....</b>                           | <b>7</b>  |
| <b>ALTERNATOR DETAILS .....</b>                           | <b>8</b>  |
| <b>AIR FILTER HEAVY DUTY ASSEMBLY .....</b>               | <b>9</b>  |
| <b>AIR FILTER 080830 DETAILS .....</b>                    | <b>10</b> |
| <b>SUMP DRAIN PUMP ASSEMBLY .....</b>                     | <b>11</b> |
| <b>OUTPUT CABLES ALTERNATOR LSA422/432 ASSEMBLY .....</b> | <b>12</b> |
| <b>RADIATOR MITSU S3/S4 ASSEMBLY .....</b>                | <b>13</b> |
| <b>FUEL PREFILTER KIT ASSEMBLY .....</b>                  | <b>14</b> |
| <b>FUEL TANK M107 ASSEMBLY.....</b>                       | <b>15</b> |
| <b>FUEL FILLER 050110 DETAILS.....</b>                    | <b>16</b> |
| <b>BATTERY ELECTROLYTE .....</b>                          | <b>17</b> |
| <b>ELECTRIC STARTER M107 ISOLATED ASSEMBLY.....</b>       | <b>18</b> |
| <b>EXHAUST SYSTEM M107 ASSEMBLY .....</b>                 | <b>19</b> |
| <b>EXHAUST GUARDS MI S4L2 ASSEMBLY .....</b>              | <b>20</b> |
| <b>FRAME MI S4L2 ASSEMBLY .....</b>                       | <b>21</b> |
| <b>G16 DECALS.....</b>                                    | <b>22</b> |
| <b>SAFETY DECALS ASSEMBLY .....</b>                       | <b>23</b> |
| <b>FRAME SKID M107 ASSEMBLY.....</b>                      | <b>24</b> |
| <b>M107 ENCLOSURE ASSEMBLY .....</b>                      | <b>25</b> |
| <b>EARTH ROD WITH CABLE M100/200 CANOPY ASSEMBLY.....</b> | <b>27</b> |
| <b>CIRCUIT BREAKER ACCESSORIES.....</b>                   | <b>28</b> |
| <b>ANALOGUE INSTRUMENT CONTROL PANEL ASSEMBLY .....</b>   | <b>29</b> |
| <b>HOUSING ANALOGUE CONTROL PANEL ASSEMBLY .....</b>      | <b>30</b> |
| <b>ANALOGUE CONTROL PANEL ASSEMBLY .....</b>              | <b>31</b> |
| <b>TERMINAL CONNECTION BLOCK ASSEMBLY.....</b>            | <b>33</b> |
| <b>CONNECTIONS M107 ASSEMBLY .....</b>                    | <b>34</b> |
| <b>ROAD TRAILER M107 OPTION .....</b>                     | <b>36</b> |
| <i>ROAD TRAILER M107.....</i>                             | <i>36</i> |
| <i>ROAD TRAILER 131440 DETAILS.....</i>                   | <i>37</i> |
| <i>BRAKE GEAR 303280 DETAIL.....</i>                      | <i>39</i> |
| <i>AXLE 303250 DETAIL.....</i>                            | <i>40</i> |
| <i>EARTH ROD WITH CABLE M100/200 CANOPY ASSEMBLY.....</i> | <i>41</i> |

|  |           |
|--|-----------|
| <b>3 WAY FUEL VALVE OPTION.....</b>                            | <b>42</b> |
| <b>SOCKETS TYPE 1B OPTION.....</b>                             | <b>43</b> |
| <i>SOCKETS ASSEMBLY T1BL.....</i>                              | <i>43</i> |
| <i>SOCKETS ASSEMBLY .....</i>                                  | <i>44</i> |
| <b>SOCKETS TYPE 1 OPTION.....</b>                              | <b>45</b> |
| <i>SOCKETS ASSEMBLY T1SBL.....</i>                             | <i>45</i> |
| <i>SOCKETS ASSEMBLY .....</i>                                  | <i>46</i> |
| <b>SOCKETS TYPE 4B OPTION.....</b>                             | <b>47</b> |
| <i>SOCKETS ASSEMBLY T4BL.....</i>                              | <i>47</i> |
| <i>SOCKETS ASSEMBLY .....</i>                                  | <i>48</i> |
| <b>SOCKETS TYPE 4 OPTION.....</b>                              | <b>49</b> |
| <i>SOCKETS ASSEMBLY T4SBL.....</i>                             | <i>49</i> |
| <i>SOCKETS ASSEMBLY .....</i>                                  | <i>50</i> |
| <b>SOCKETS TYPE 5B OPTION.....</b>                             | <b>51</b> |
| <i>SOCKETS ASSEMBLY T5BL.....</i>                              | <i>51</i> |
| <i>SOCKETS ASSEMBLY .....</i>                                  | <i>52</i> |
| <b>SOCKETS TYPE 5 OPTION.....</b>                              | <b>53</b> |
| <i>SOCKETS ASSEMBLY T5SBL.....</i>                             | <i>53</i> |
| <i>SOCKETS ASSEMBLY .....</i>                                  | <i>54</i> |
| <b>SOCKETS TYPE 8B OPTION.....</b>                             | <b>55</b> |
| <i>SOCKETS ASSEMBLY T8BL.....</i>                              | <i>55</i> |
| <i>SOCKETS ASSEMBLY .....</i>                                  | <i>56</i> |
| <b>SOCKETS TYPE 8 OPTION.....</b>                              | <b>57</b> |
| <i>SOCKETS ASSEMBLY T8SBL.....</i>                             | <i>57</i> |
| <i>SOCKETS ASSEMBLY .....</i>                                  | <i>58</i> |
| <b>ELECTRONIC REGULATION OPTION.....</b>                       | <b>59</b> |
| <i>ELECTRONIC REGULATION ASSEMBLY.....</i>                     | <i>59</i> |
| <i>CONTROL PANEL OPTION SPEED POTENTIONMETER ASSEMBLY.....</i> | <i>60</i> |



*A breakdown view exists for this item*




*A supplier spare parts documentation exists for this item.*

*Some items drawing on the breakdown view are not mounted on this genset, so they are not in the part list.*



# ENGINE ASSEMBLY


F01013

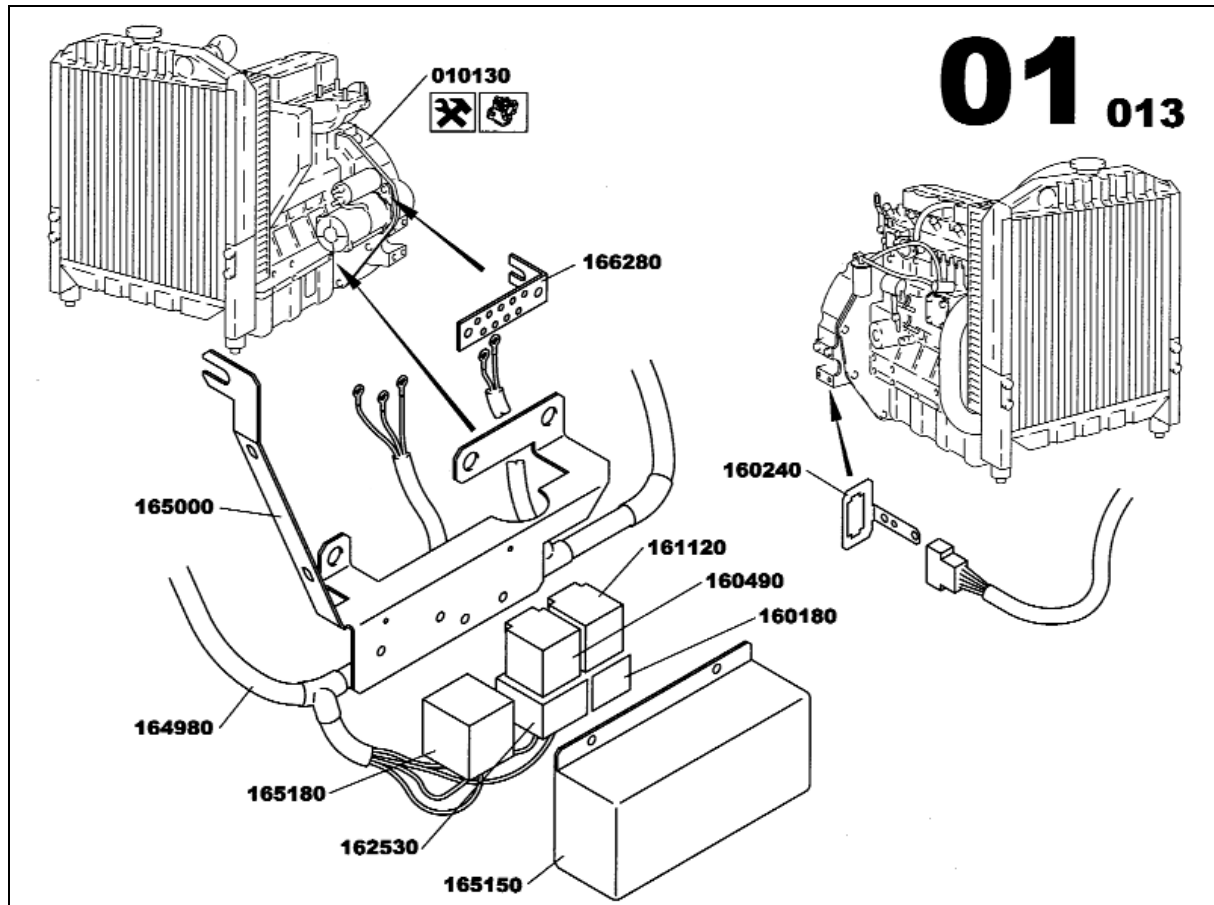

| Item   | Part number | Description                         | Quantity | Units |
|--------|-------------|-------------------------------------|----------|-------|
| 010130 | 85413920    | mitsubishi engine S4L2 SAE 5/7.5    | 1.0      | UN    |
| 164980 | 85413383    | ENGINE WIRING LOOM MITSU-S3L2-S4L2  | 1.0      | UN    |
| 165000 | 85415941    | WIRING BRACKET MI S3L2 S4L2         | 1.0      | UN    |
| 160240 | 85407047    | CONNECTOR SUPPORT BRACKET           | 1.0      | UN    |
| 166280 | 85499408    | COPPER BAR 5x25                     | 1.0      | UN    |
| 165150 | 85416279    | STARTING RELAY PROTECTION PANEL     | 1.0      | UN    |
| 165180 | 85415792    | STARTING RELAY                      | 1.0      | UN    |
| 160490 | 85408888    | RELAY 12V 70A WITH BRACKET          | 1.0      | UN    |
| 161120 | 85408904    | RELAY 12V 15A WITH FUSE AND BRACKET | 1.0      | UN    |
| 162530 | 85413292    | AUTOMOBILE RELAY BASE               | 1.0      | UN    |
| 160180 | 85408912    | AUTOMOBILE RELAY BASE               | 1.0      | UN    |

# ENGINE DETAILS

F30021

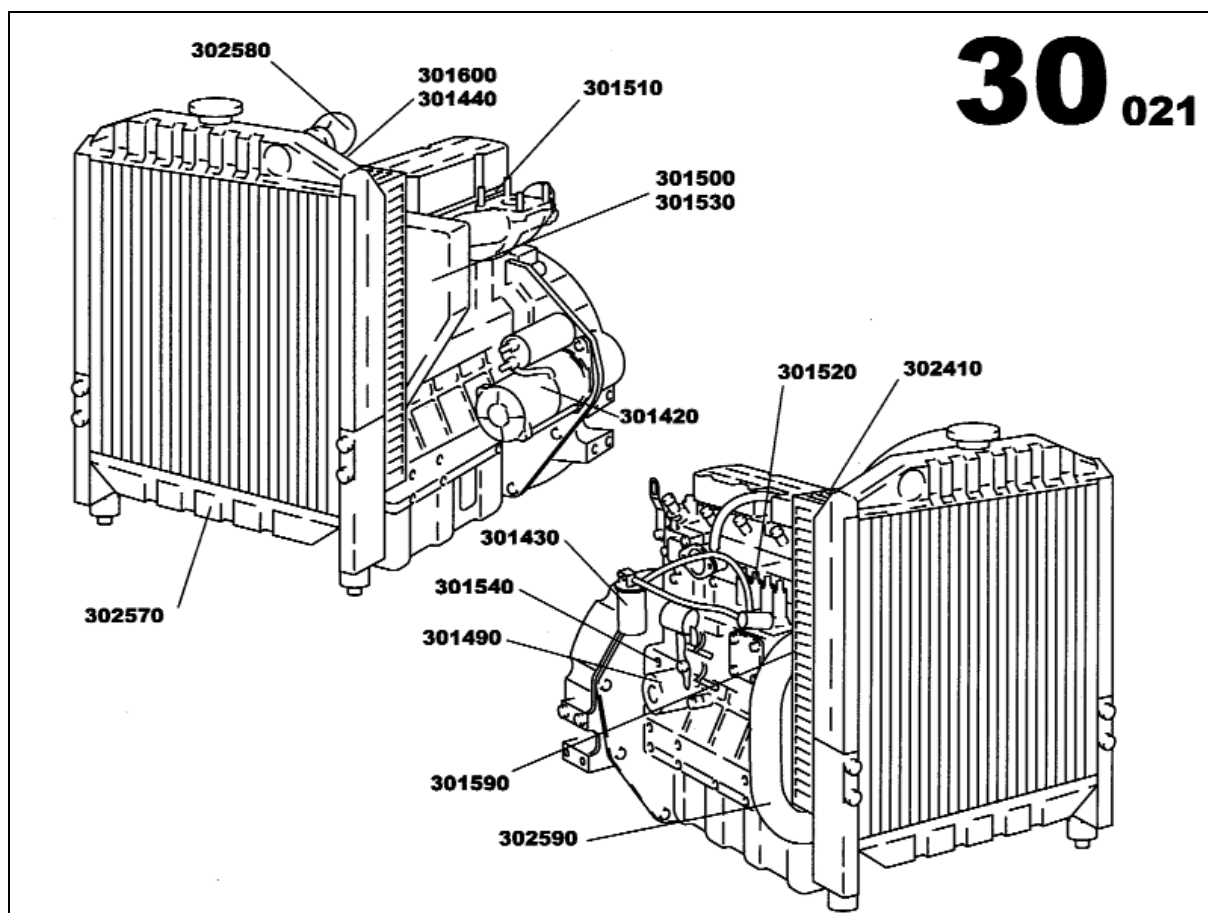


| <i>Item</i> | <i>Part number</i> | <i>Description</i>   | <i>Quantity</i> | <i>Units</i> |
|-------------|--------------------|----------------------|-----------------|--------------|
| 301490      | 85426849           | LUBE OIL FILTER      | 1.0             | UN           |
| 301430      | 85426815           | FUEL FILTER          | 1.0             | UN           |
| 301500      | 85400190           | BELT                 | 1.0             | UN           |
| 301520      | 85400216           | INJECTOR             | 4.0             | UN           |
| 301420      | 85400075           | STARTER              | 1.0             | UN           |
| 301530      | 85400232           | CHARGING ALTERNATOR  | 1.0             | UN           |
| 301590      | 85400299           | WATER PUMP           | 1.0             | UN           |
| 301540      | 85508182           | PRESSURE SWITCH      | 1.0             | UN           |
| 302410      | 85426252           | TEMPERATURE SWITCH   | 1.0             | UN           |
| 301600      | 85400349           | THERMOSTAT SEAL      | 1.0             | UN           |
| 301440      | 85400091           | THERMOSTAT           | 1.0             | UN           |
| 301510      | 85400208           | ROCKER COVER GASKET  | 1.0             | UN           |
| 302570      | 85426054           | RADIATOR             | 1.0             | UN           |
| 302580      | 85425569           | RADIATOR TOP HOSE    | 1.0             | UN           |
| 302590      | 85401321           | RADIATOR BOTTOM HOSE | 1.0             | UN           |

# ALTERNATOR ASSEMBLY

F02003


**02**<sub>003</sub>

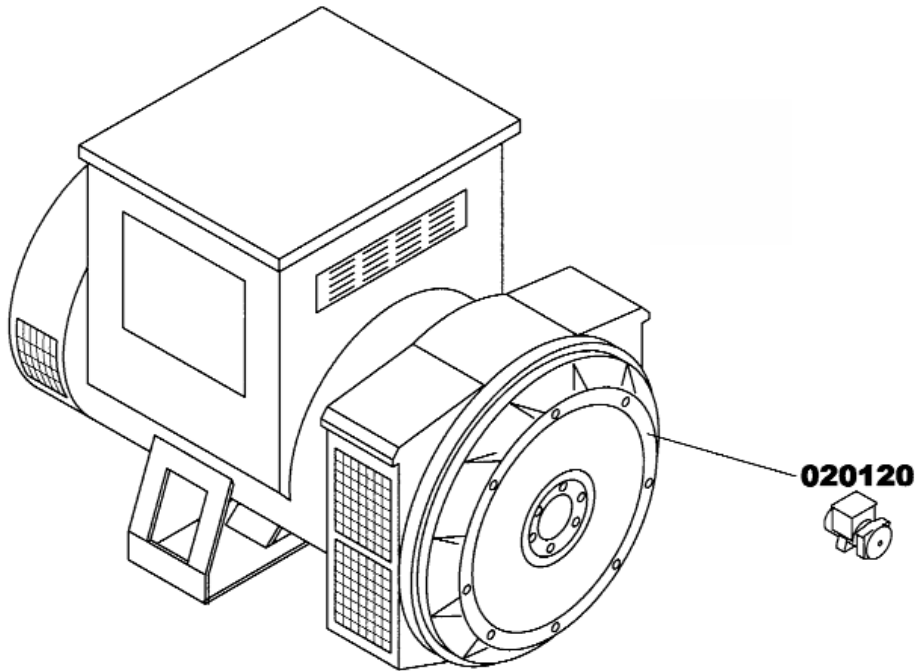

| <i>Item</i> | <i>Part number</i> | <i>Description</i>  | <i>Quantity</i> | <i>Units</i> |
|-------------|--------------------|---------------------|-----------------|--------------|
| 020120      | 85429090           | LS 422S4 ALTERNATOR | 1.0             | UN           |

# ALTERNATOR DETAILS


F30066

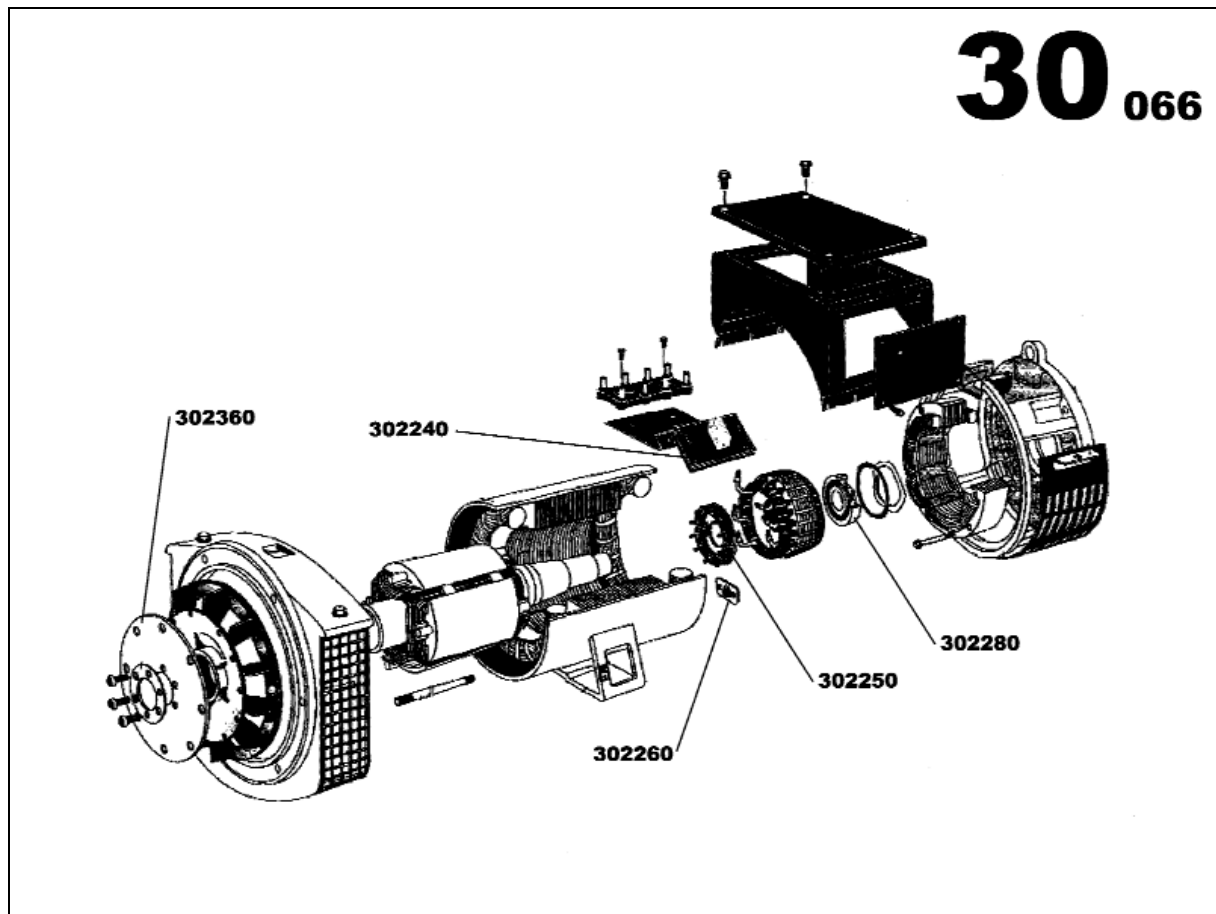

| <i>Item</i> | <i>Part number</i> | <i>Description</i> | <i>Quantity</i> | <i>Units</i> |
|-------------|--------------------|--------------------|-----------------|--------------|
| 302240      | 85402451           | VOLTAGE REGULATOR  | 1.0             | UN           |
| 302280      | 85425882           | BEARING            | 1.0             | UN           |
| 302360      | 85425965           | DRIVE DISC         | 1.0             | UN           |
| 302250      | 85425858           | DIODE BRIDGE       | 1.0             | UN           |
| 302260      | 85425866           | SURGE SUPPRESSOR   | 1.0             | UN           |

# AIR FILTER HEAVY DUTY ASSEMBLY


F08032

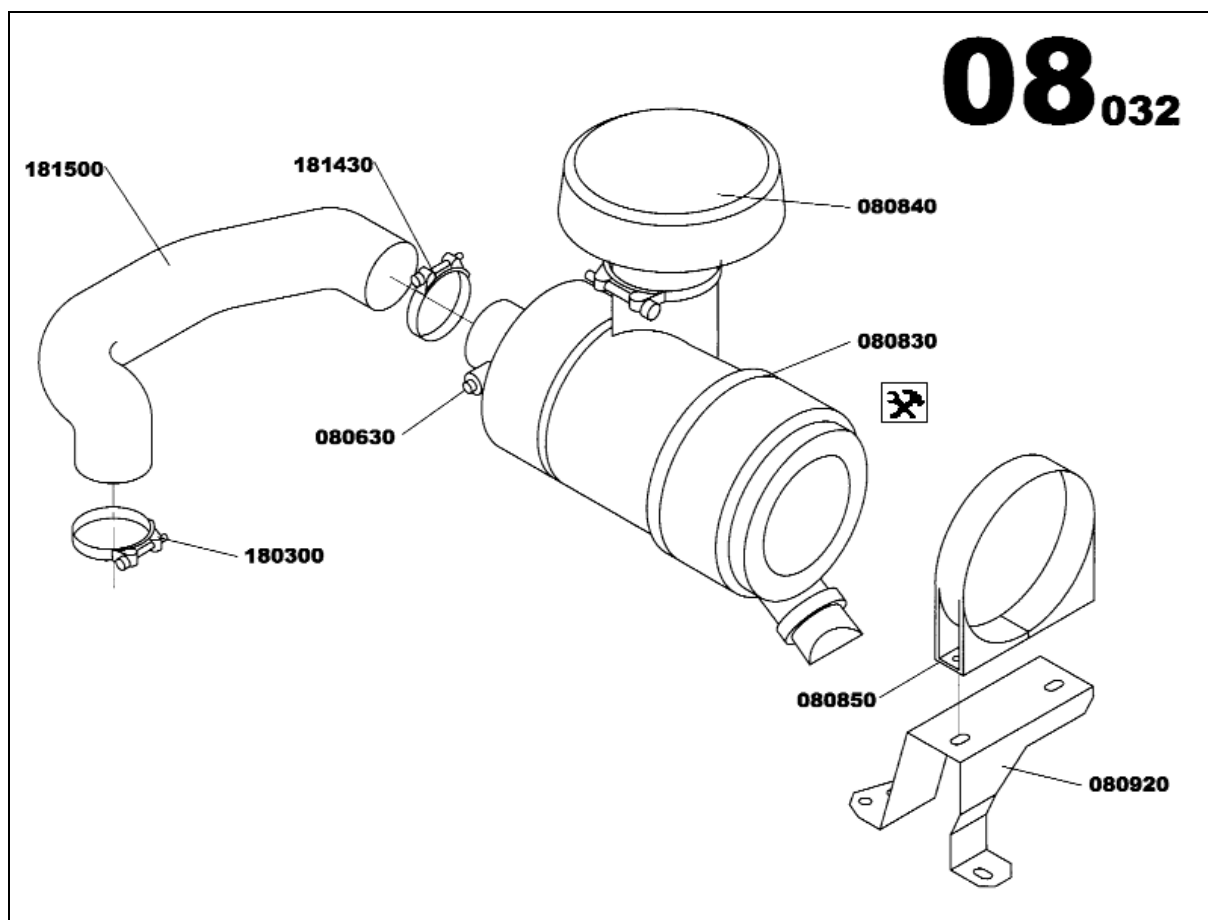

| <i>Item</i> | <i>Part number</i> | <i>Description</i>         | <i>Quantity</i> | <i>Units</i> |
|-------------|--------------------|----------------------------|-----------------|--------------|
| 080630      | 85413581           | AIR RESTRICTION INDICATOR  | 1.0             | UN           |
| 080830      | 85413433           | AIR FILTER HEAVY DUTY      | 1.0             | UN           |
| 080840      | 85412823           | RAIN CAP                   | 1.0             | UN           |
| 080850      | 85412880           | CLAMP D146                 | 1.0             | UN           |
| 080920      | 85425379           | AIR FILTER BRACKET MI S4L2 | 1.0             | UN           |
| 181430      | 85412922           | HOSE CLIP D50/70           | 1.0             | UN           |
| 180300      | 85409399           | HOSE CLIP D60/80           | 1.0             | UN           |
| 181500      | 85429587           | RUBBER HOSE ELBOW D57x50   | 1.0             | UN           |

# AIR FILTER 080830 DETAILS


F30013

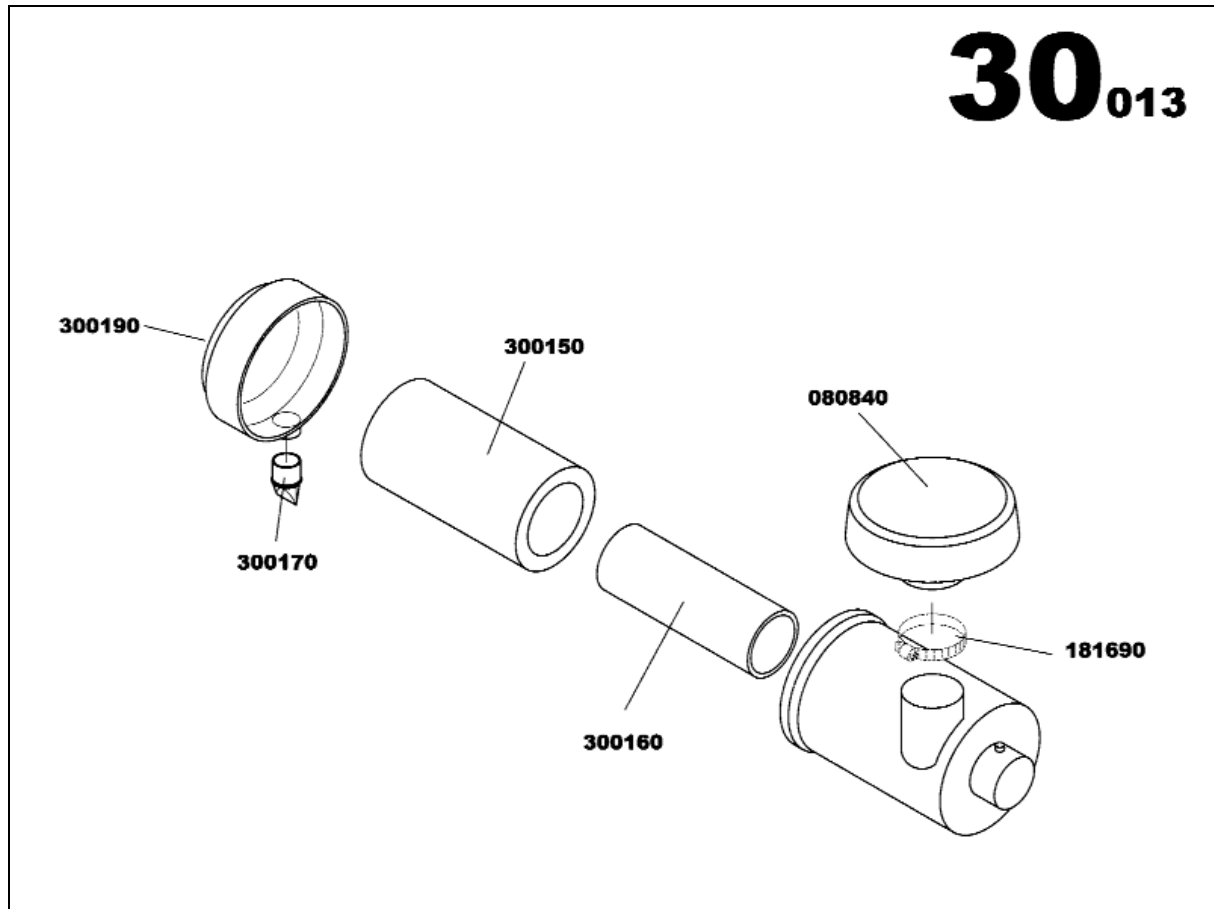

| <i>Item</i> | <i>Part number</i> | <i>Description</i> | <i>Quantity</i> | <i>Units</i> |
|-------------|--------------------|--------------------|-----------------|--------------|
| 300150      | 85400646           | OUTER AIR FILTER   | 1.0             | UN           |
| 300160      | 85400695           | INNER AIR FILTER   | 1.0             | UN           |
| 300170      | 85501252           | VACUATOR VALVE     | 1.0             | UN           |
| 300190      | 85501278           | DUST CUP           | 1.0             | UN           |
| 080840      | 85412823           | RAIN CAP           | 1.0             | UN           |
| 181690      | 85500544           | HOSE CLIP D40/60   | 1.0             | UN           |

# SUMP DRAIN PUMP ASSEMBLY


F18003

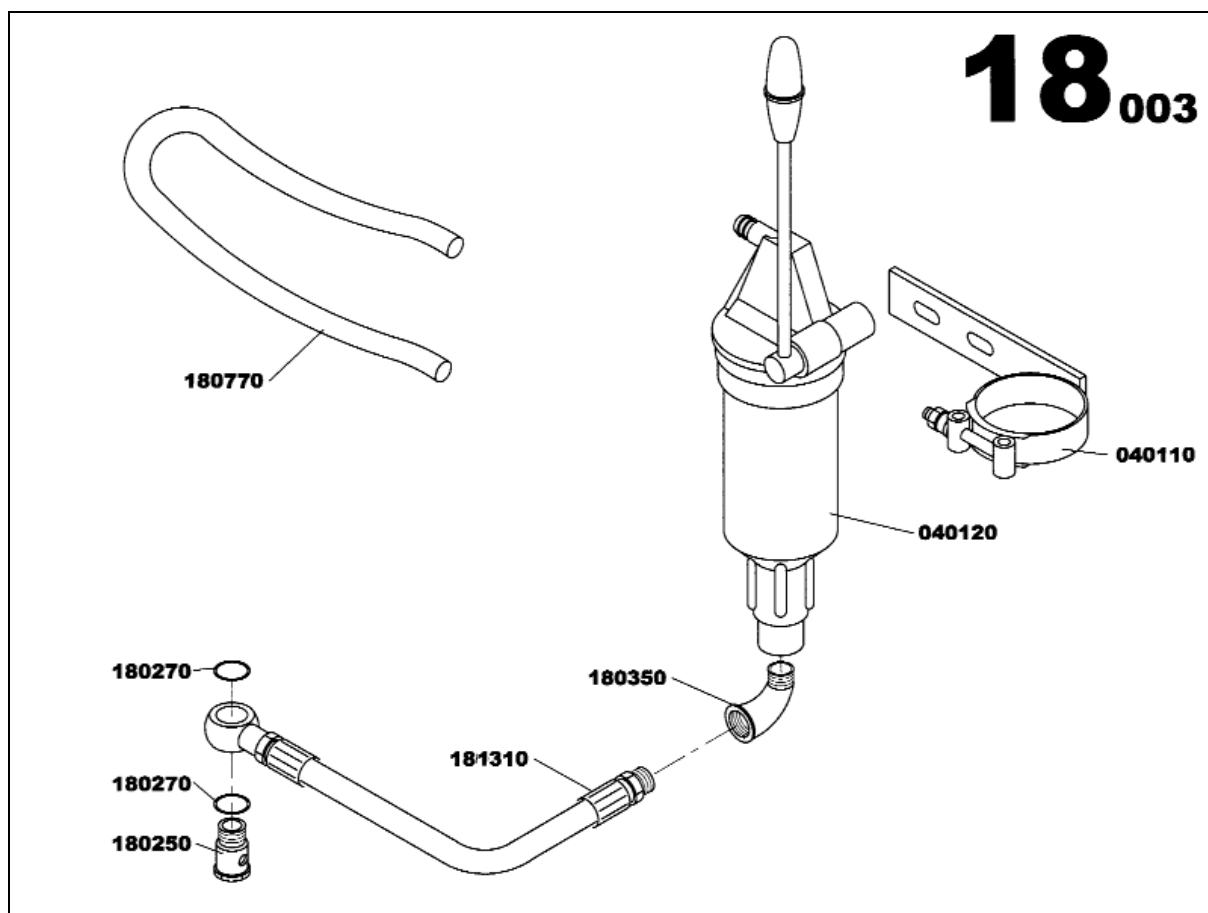

| <i>Item</i> | <i>Part number</i> | <i>Description</i>                | <i>Quantity</i> | <i>Units</i> |
|-------------|--------------------|-----------------------------------|-----------------|--------------|
| 040110      | 85403426           | OIL SUMP PUMP BRACKET             | 1.0             | UN           |
| 040120      | 85403434           | MANUAL PUMP                       | 1.0             | UN           |
| 181310      | 85413474           | HYDRAULIC HOSE L450               | 1.0             | UN           |
| 180250      | 85409282           | BANJO SCREW M14X150 L26           | 1.0             | UN           |
| 180350      | 85409308           | PIPE UNION ELBOW 90° MAL/FEM 3/8G | 1.0             | UN           |
| 180270      | 85409522           | GASKET D14x20 Th1.5               | 2.0             | UN           |
| 180770      | 85416428           | FLEXIBLE HOSE D5.5                | 0.4             | ML           |
| 180770      | 85416428           | FLEXIBLE HOSE D5.5                | 0.5             | ML           |
| 180770      | 85416428           | FLEXIBLE HOSE D5.5                | 1.1             | ML           |

# OUTPUT CABLES ALTERNATOR LSA422/432 ASSEMBLY

## F16104

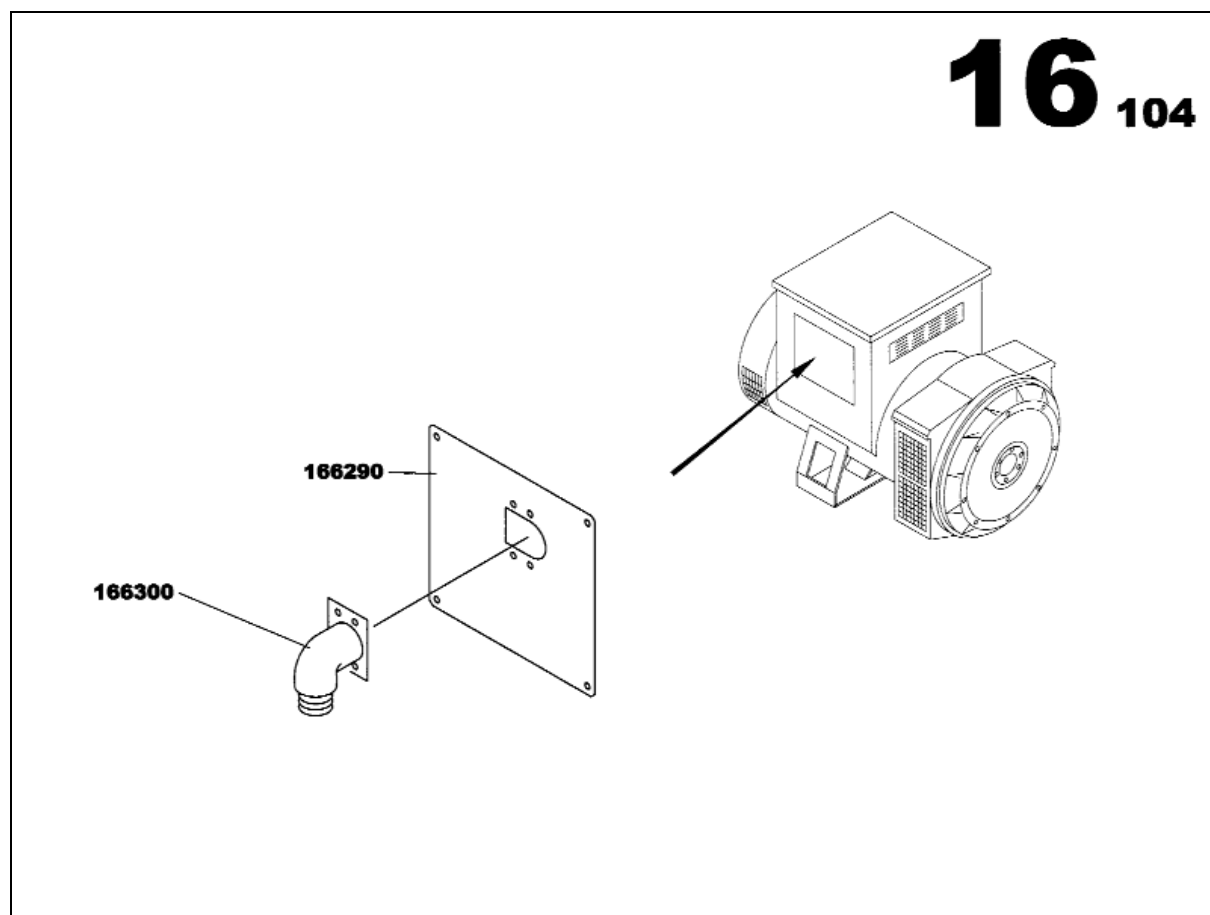


| <i>Item</i> | <i>Part number</i> | <i>Description</i>                     | <i>Quantity</i> | <i>Units</i> |
|-------------|--------------------|--|-----------------|--------------|
| 166290      | 85498939           | CABLE OUTLET PLATE LSA422/432          | 1.0             | UN           |
| 166300      | 85499705           | ELECTRIC PIPE UNION REDUCER ELBOW PG36 | 1.0             | UN           |



# RADIATOR MITSU S3/S4 ASSEMBLY


F03019

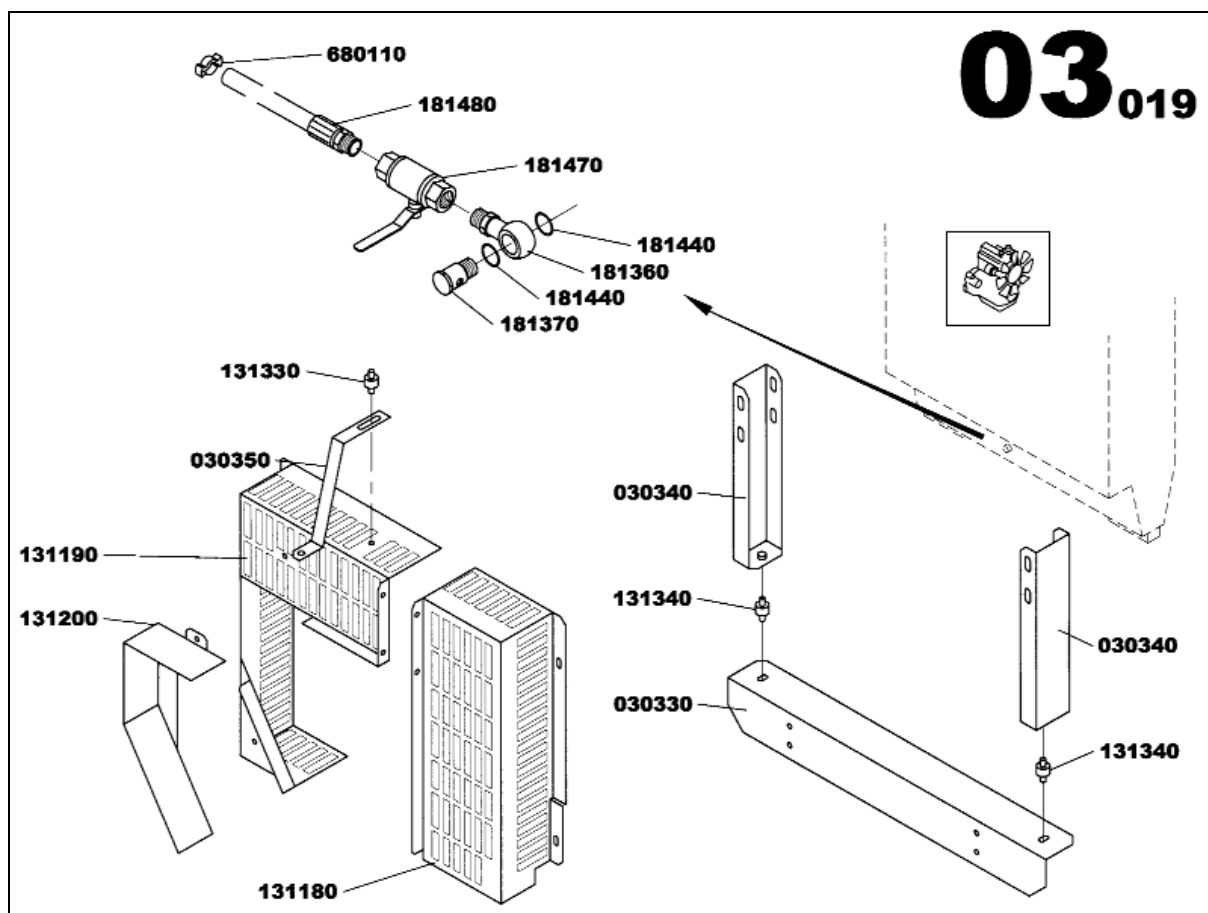

| Item   | Part number | Description                      | Quantity | Units |
|--------|-------------|----------------------------------|----------|-------|
| 030330 | 85416162    | RADIATOR BRACKET MITSU-S3L/S4L2  | 1.0      | UN    |
| 030340 | 85415404    | RADIATOR BRACKET ENGINE MI S3/S4 | 2.0      | UN    |
| 030350 | 85415412    | RADIATOR BRACKET ENGINE MI S3/S4 | 1.0      | UN    |
| 181360 | 85415735    | BANJO CONNECTOR MALE D08         | 1.0      | UN    |
| 181370 | 85416485    | BANJO SCREW M12x125 L24          | 1.0      | UN    |
| 181440 | 85413748    | GASKET D12x18 Th1.5              | 2.0      | UN    |
| 181470 | 85416469    | 2 WAY VALVE                      | 1.0      | UN    |
| 181480 | 85416436    | FLEXIBLE HOSE D8x14              | 0.035    | ML    |
| 680110 | 85412906    | HOSE CLIP                        | 2.0      | UN    |
| 131180 | 85415628    | RADIATOR GUARD MITSU S3/S4       | 1.0      | UN    |
| 131190 | 85415636    | RADIATOR GUARD MITSU S3/S4       | 1.0      | UN    |
| 131200 | 85415644    | RADIATOR GUARD MITSU S3/S4       | 1.0      | UN    |
| 131330 | 85400018    | ANTI-VIBRATION MOUNT D25 h22     | 1.0      | UN    |
| 131340 | 85400026    | ANTI-VIBRATION MOUNT D40 h28     | 2.0      | UN    |

# FUEL PREFILTER KIT ASSEMBLY


F05026

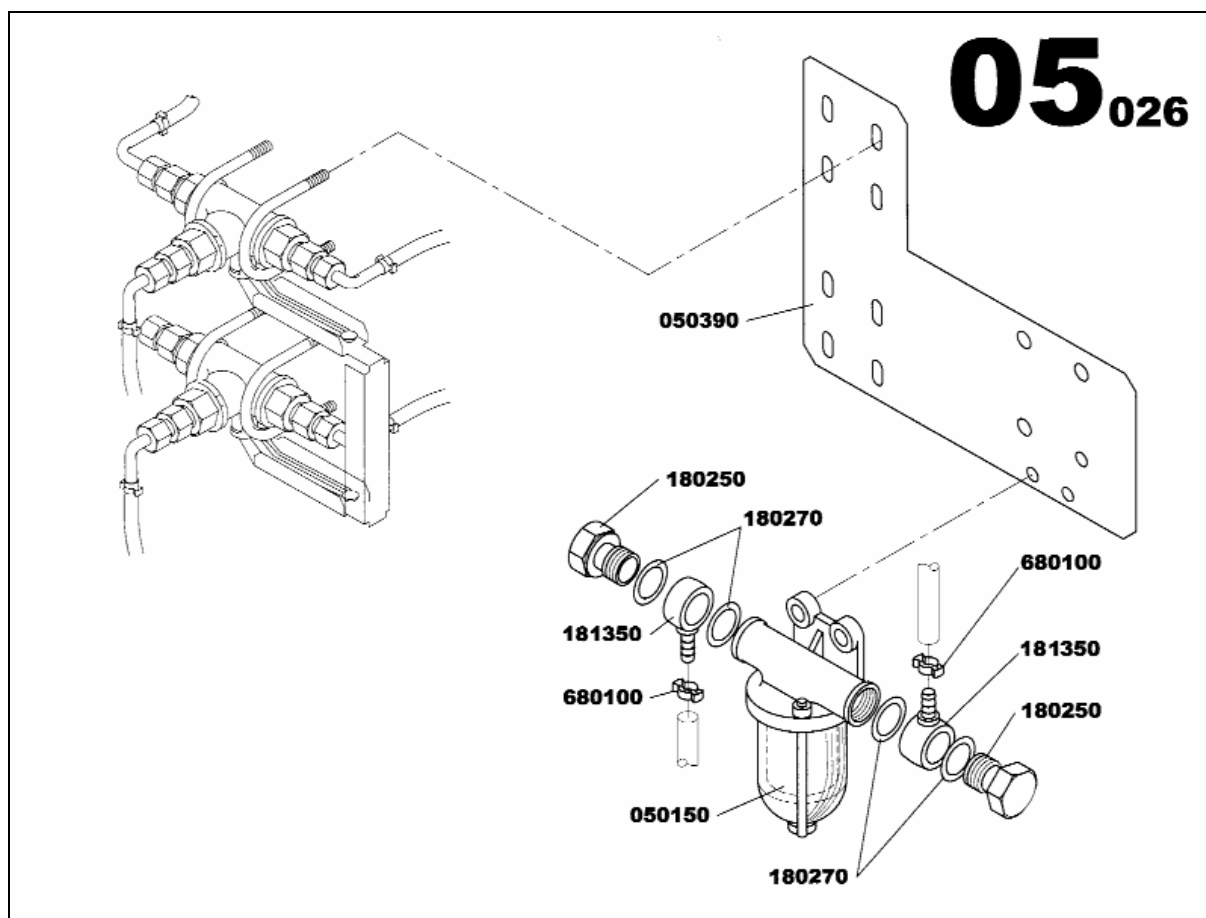

| <i>Item</i> | <i>Part number</i> | <i>Description</i>                              | <i>Quantity</i> | <i>Units</i> |
|-------------|--------------------|---|-----------------|--------------|
| 050150      | 85403525           | FUEL FILTER SEPARATOR                           | 1.0             | UN           |
| 050390      | 85425361           | FUEL FILTER SEPARATOR/ 3 WAY FUEL VALVE BRACKET | 1.0             | UN           |
| 181350      | 85415727           | BANJO CONNECTOR MALE D06                        | 2.0             | UN           |
| 180250      | 85409282           | BANJO SCREW M14X150 L26                         | 2.0             | UN           |
| 180270      | 85409522           | GASKET D14x20 Th1.5                             | 4.0             | UN           |
| 680100      | 85410090           | HOSE CLIP                                       | 2.0             | UN           |


# FUEL TANK M107 ASSEMBLY

F05028

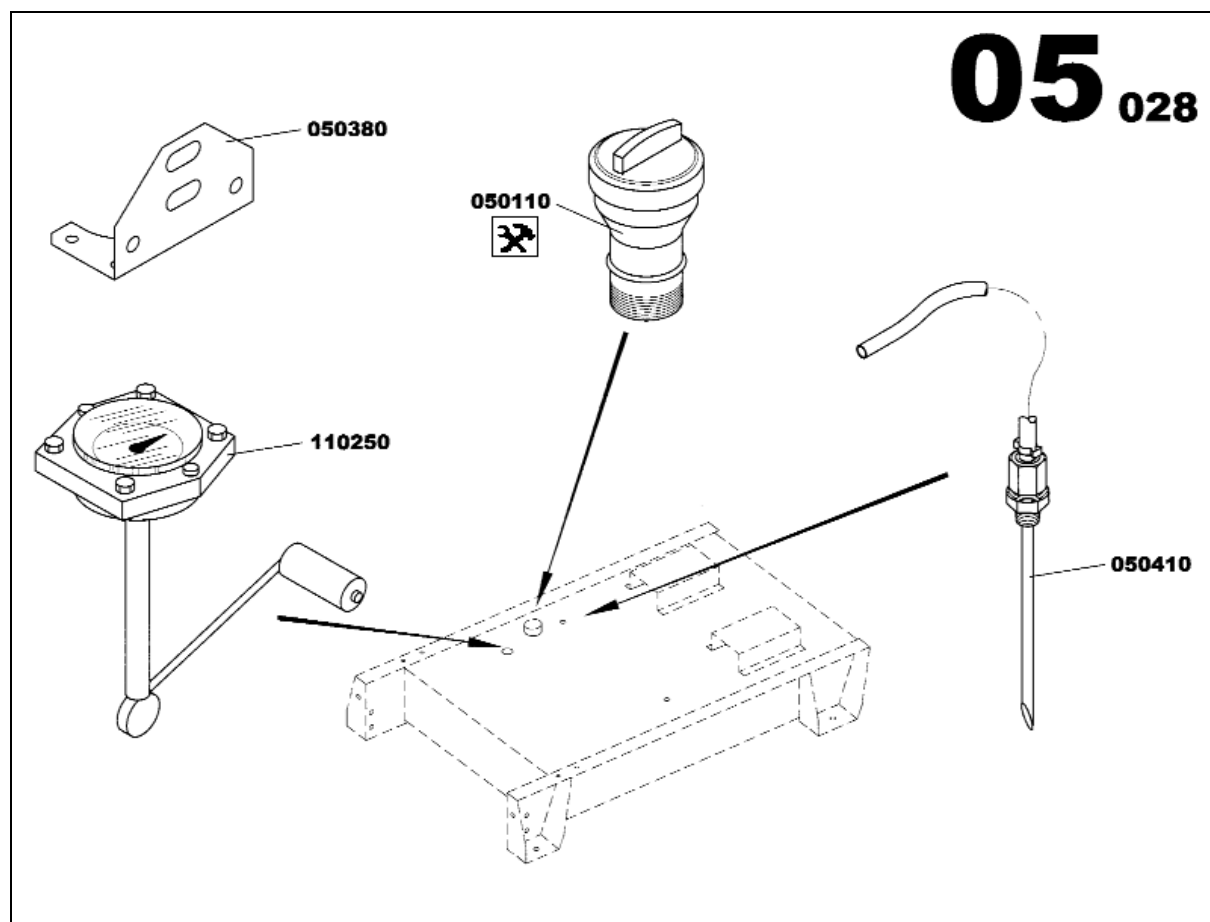

| <i>Item</i> | <i>Part number</i> | <i>Description</i>             | <i>Quantity</i> | <i>Units</i> |
|-------------|--------------------|--------------------------------|-----------------|--------------|
| 050410      | 85412765           | FUEL SUCTION PIPE L215 D6 3/8G | 2.0             | UN           |
| 050380      | 85416147           | ELECTRIC PUMP BRACKET          | 1.0             | UN           |
| 050110      | 85403517           | FUEL FILLER BASE FUEL TANK     | 1.0             | UN           |
| 110250      | 85413714           | BASE TANK FUEL GAUGE           | 1.0             | UN           |


**FUEL FILLER 050110 DETAILS**  
F30019

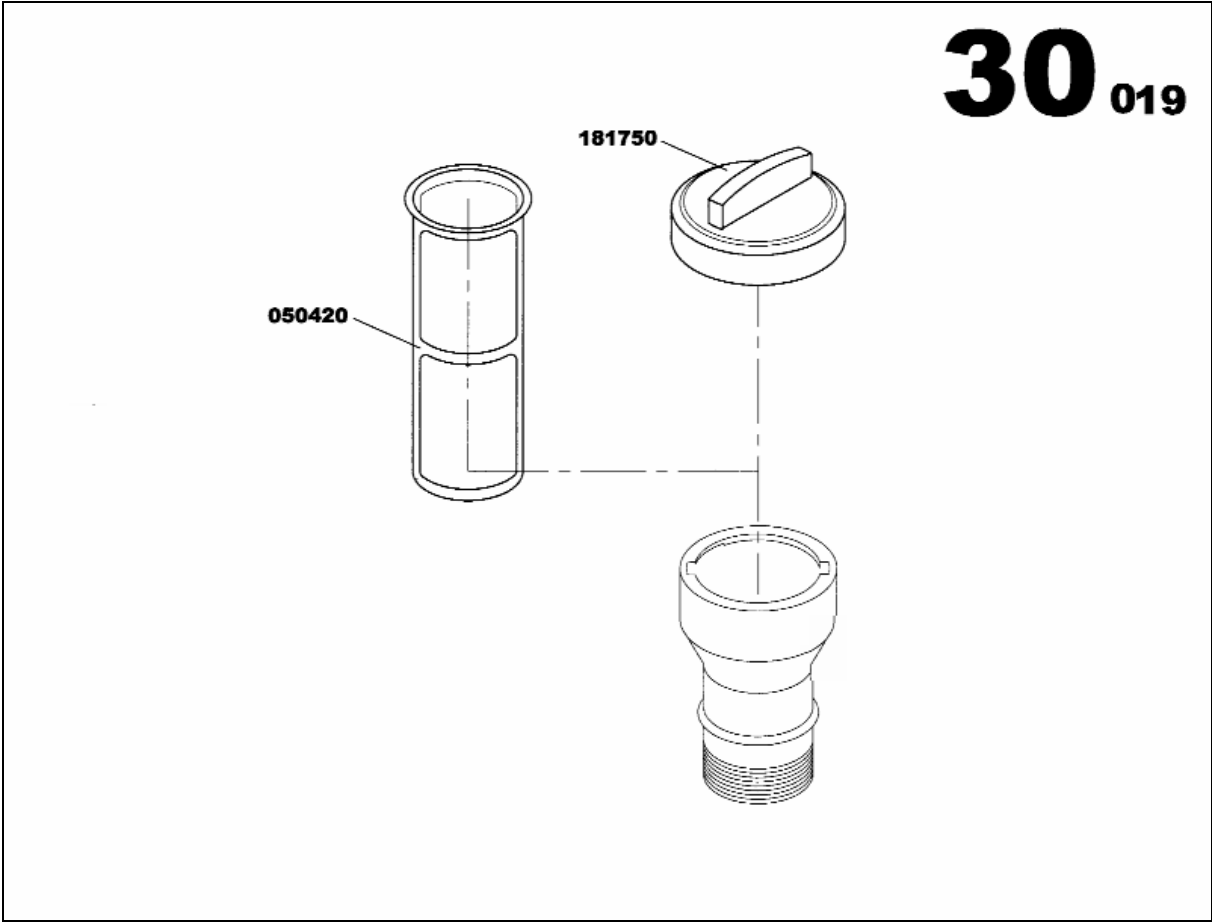

| <i>Item</i> | <i>Part number</i> | <i>Description</i> | <i>Quantity</i> | <i>Units</i> |
|-------------|--------------------|--------------------|-----------------|--------------|
| 181750      | 85503035           | TANK PLUG          | 1.0             | UN           |
| 050420      | 85431120           | FUEL FILTER        | 1.0             | UN           |

# BATTERY ELECTROLYTE


F99002

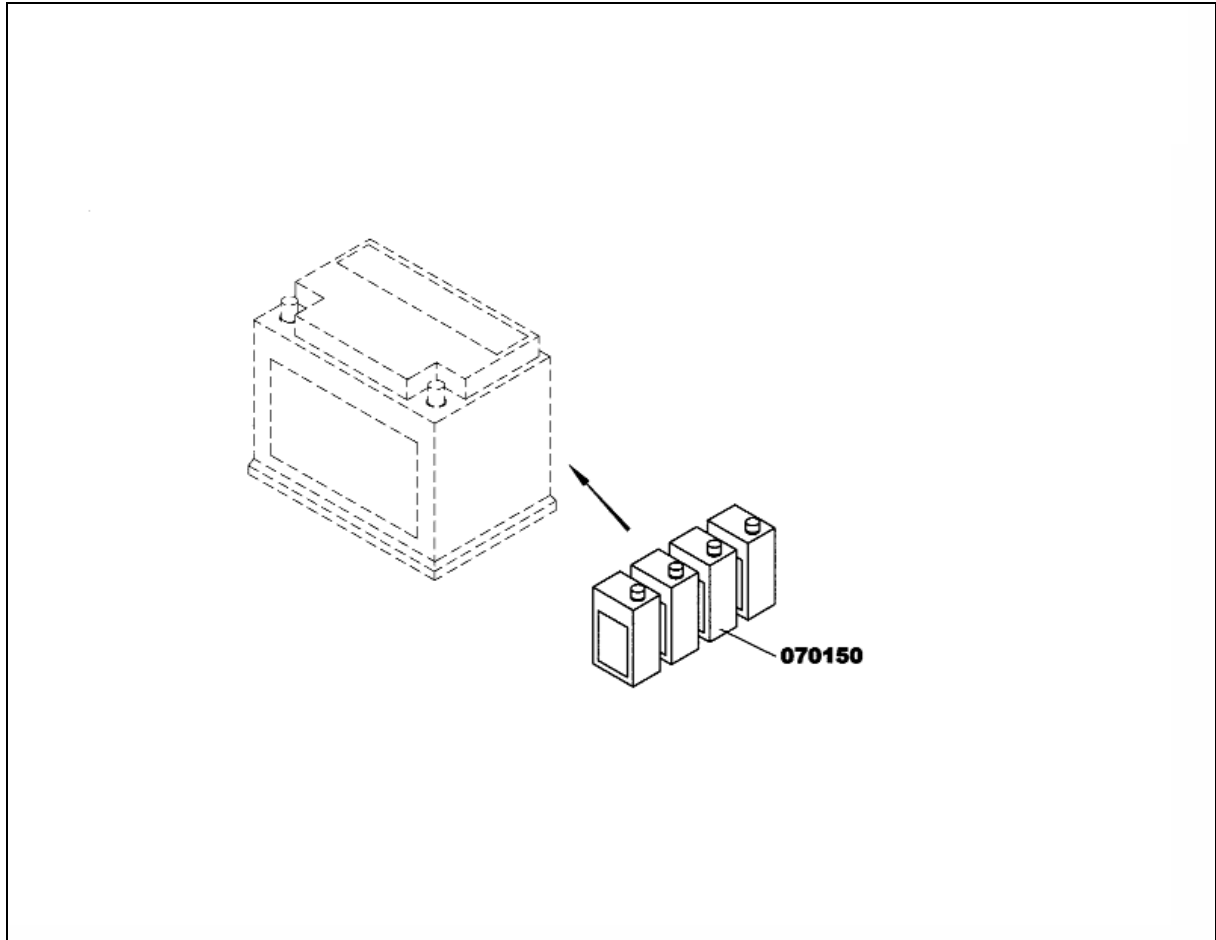

| <i>Item</i> | <i>Part number</i> | <i>Description</i>  | <i>Quantity</i> | <i>Units</i> |
|-------------|--------------------|---------------------|-----------------|--------------|
| 070150      | 85403756           | BATTERY ELECTROLYTE | 1.0             | UN           |

# ELECTRIC STARTER M107 ISOLATED ASSEMBLY


F07019

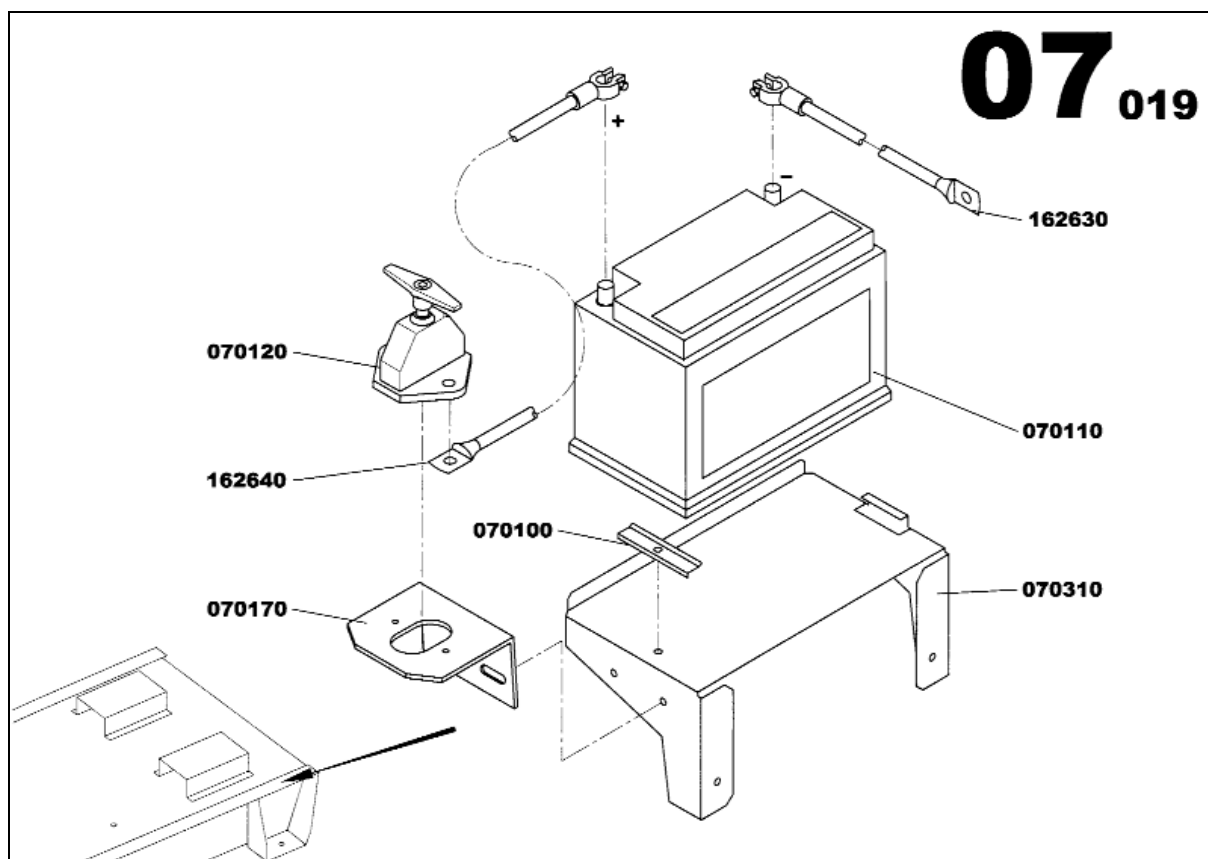

| <i>Item</i> | <i>Part number</i> | <i>Description</i>                | <i>Quantity</i> | <i>Units</i> |
|-------------|--------------------|-----------------------------------|-----------------|--------------|
| 070100      | 85403699           | BATTERY FIXING BRACKET            | 1.0             | UN           |
| 070170      | 85403707           | BATTERY ISOLATOR BRACKET          | 1.0             | UN           |
| 070310      | 85415891           | BATTERY SUPPORT BRACKET M107      | 1.0             | UN           |
| 070110      | 85403715           | STARTING BATTERY 12V 70Ah 400A    | 1.0             | UN           |
| 070120      | 85403723           | BATTERY ISOLATOR SWITCH           | 1.0             | UN           |
| 162630      | 85412625           | BATTERY CABLE(-) 35mm2 L900 BLACK | 1.0             | UN           |
| 162640      | 85412641           | BATTERY CABLE(+) 35mm2 L1200 RED  | 1.0             | UN           |

# EXHAUST SYSTEM M107 ASSEMBLY

F09030

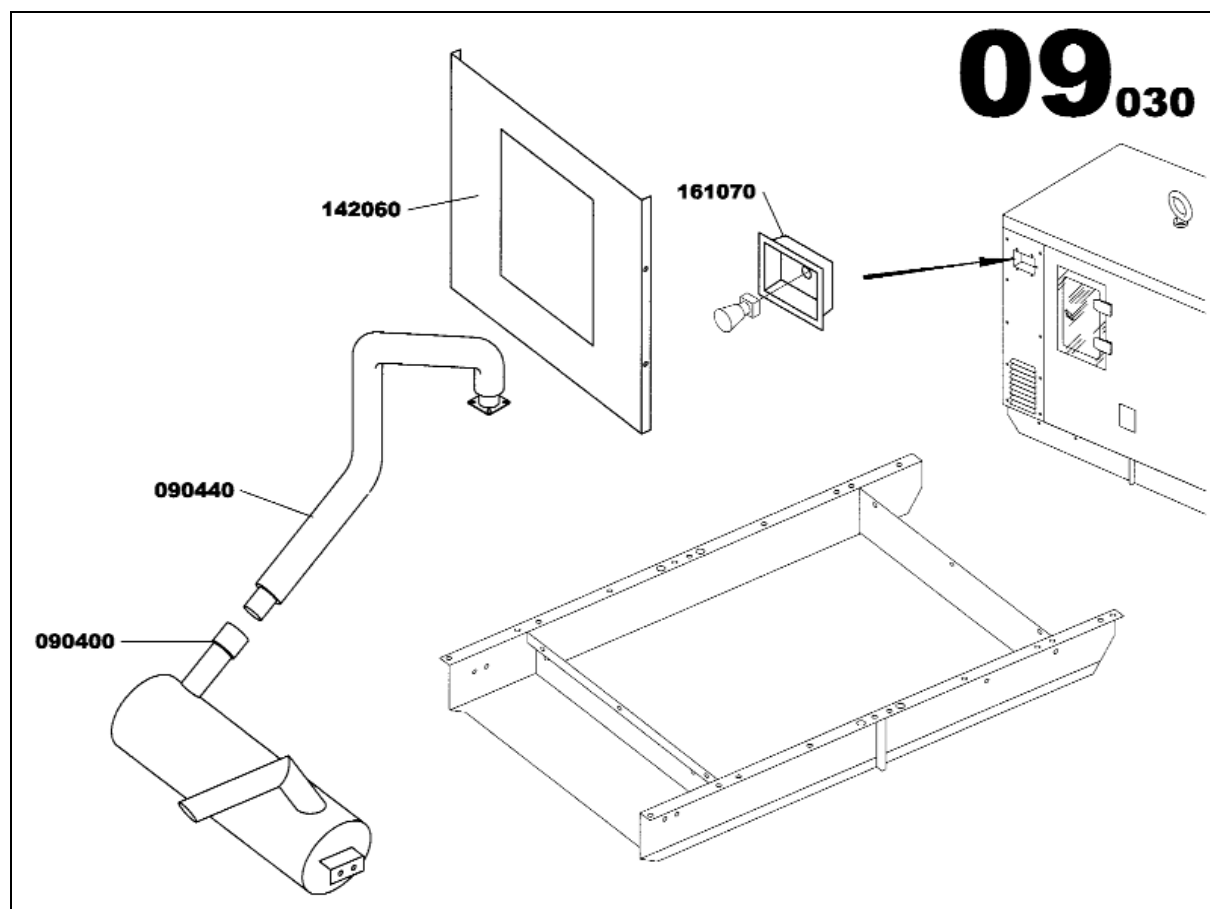


| <i>Item</i> | <i>Part number</i> | <i>Description</i>              | <i>Quantity</i> | <i>Units</i> |
|-------------|--------------------|---------------------------------|-----------------|--------------|
| 090400      | 85415842           | 23dB MUFFLER                    | 1.0             | UN           |
| 090440      | 85413805           | EXHAUST PIPE M106/107 D40 MITSU | 1.0             | UN           |
| 142060      | 85416311           | RADIATOR PANEL M107 MI S4L2     | 1.0             | UN           |
| 161070      | 85407294           | EMERGENCY STOP PANEL            | 1.0             | UN           |

# EXHAUST GUARDS MI S4L2 ASSEMBLY

F09029

**09**<sub>029</sub>

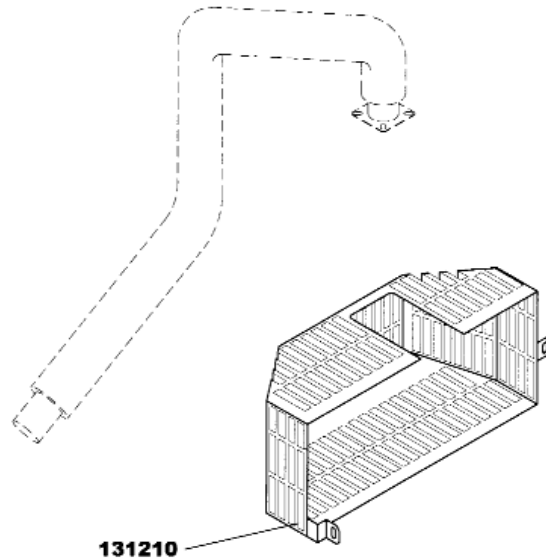


| <i>Item</i> | <i>Part number</i> | <i>Description</i>    | <i>Quantity</i> | <i>Units</i> |
|-------------|--------------------|-----------------------|-----------------|--------------|
| 131210      | 85415602           | EXHAUST GUARD MI S4L2 | 1.0             | UN           |



# FRAME MI S4L2 ASSEMBLY


F13047

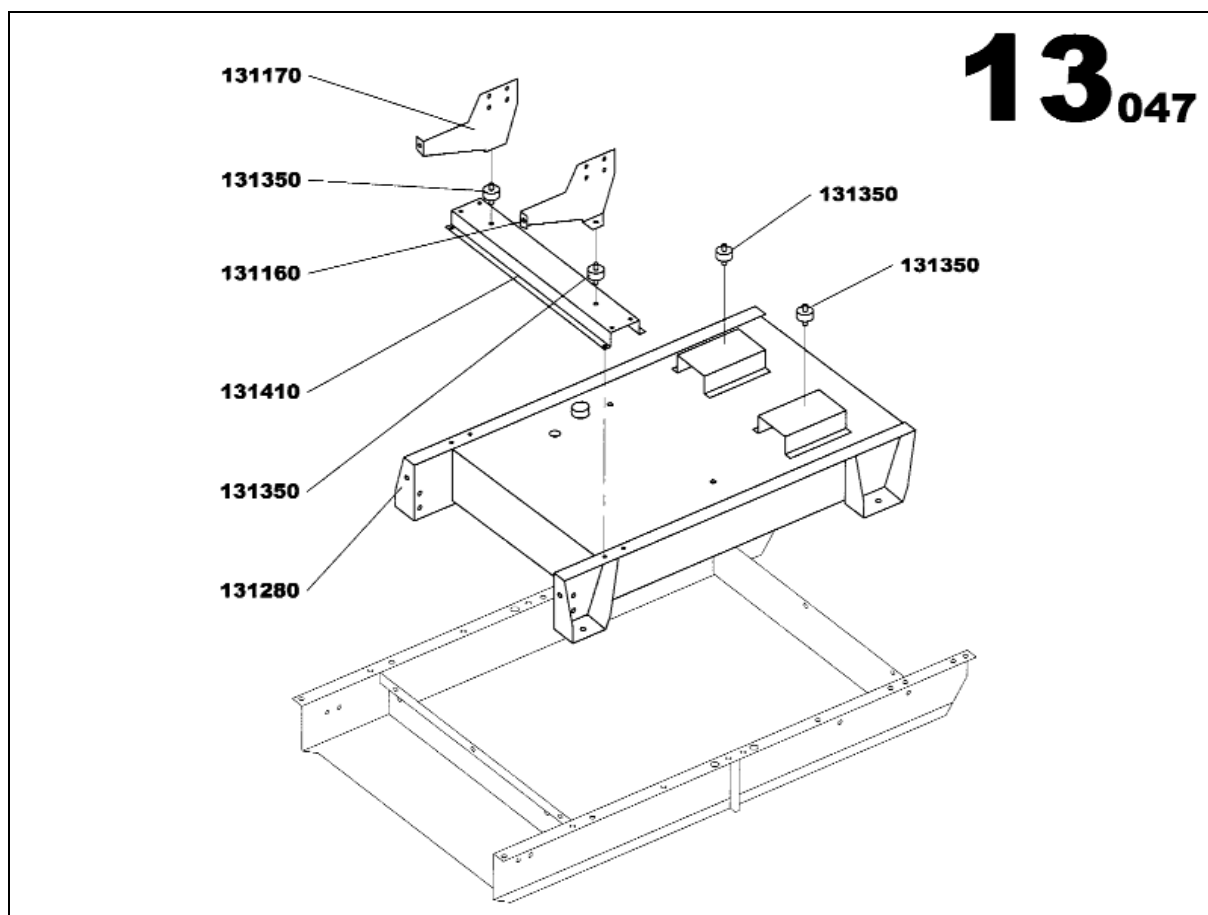

| <i>Item</i> | <i>Part number</i> | <i>Description</i>                        | <i>Quantity</i> | <i>Units</i> |
|-------------|--------------------|---|-----------------|--------------|
| 131160      | 85416055           | ENGINE SUPPORT MI-S3L2/S4L2 LEFT SIDE     | 1.0             | UN           |
| 131170      | 85416063           | ENGINE SUPPORT MI-S3L2/S4L2 RIGHT SIDE    | 1.0             | UN           |
| 131280      | 85412849           | FRAME TANK FOR MITSU S4L2/S4Q2/S4S ENGINE | 1.0             | UN           |
| 131350      | 85415495           | ANTI-VIBRATION MOUNT D60 H35              | 4.0             | UN           |
| 131410      | 85416345           | ALTERNATOR TRAVERSE FRAME TANK            | 1.0             | UN           |


# G16 DECALS

F18032

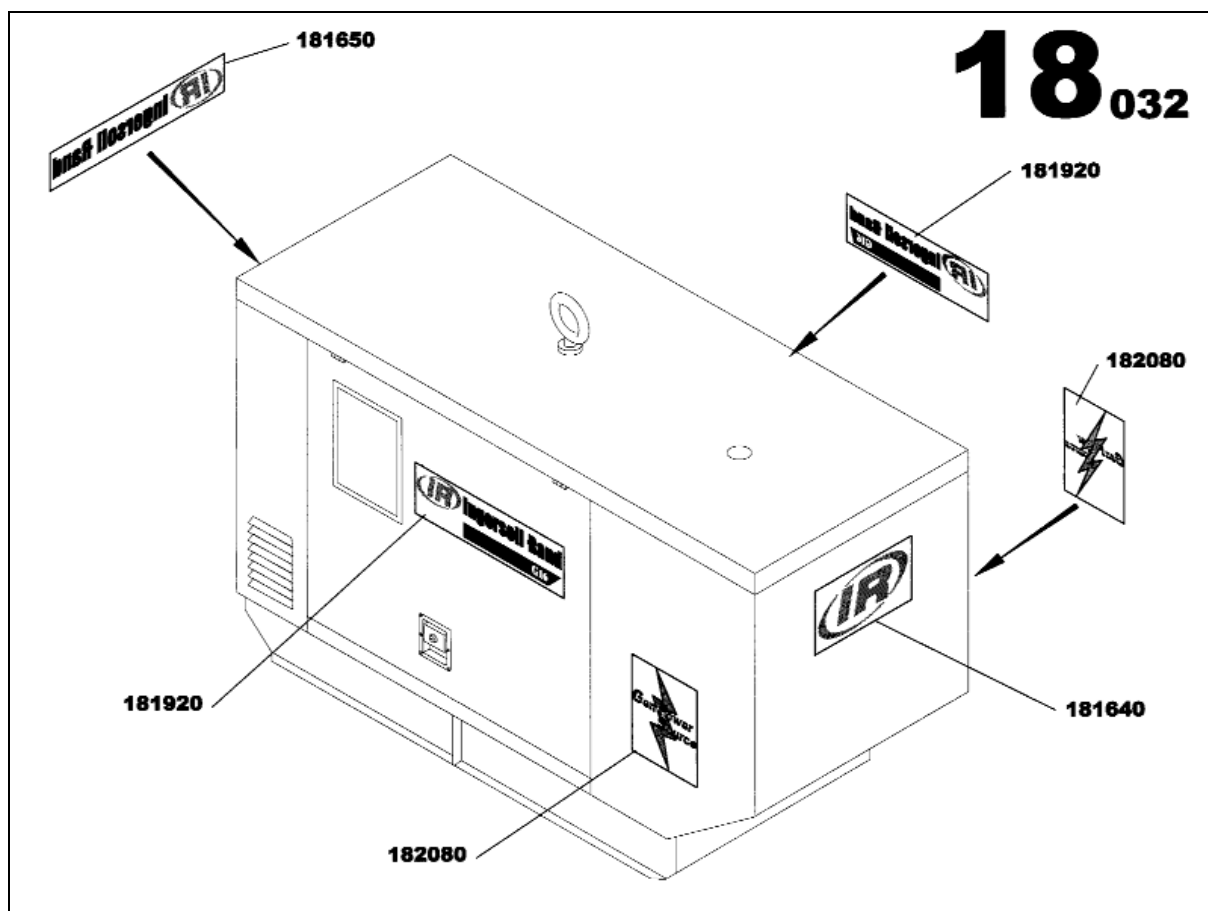

| Item   | Part number | Description                 | Quantity | Units |
|--------|-------------|-----------------------------|----------|-------|
| 181640 | 85500197    | ROUND STICKER D215          | 1.0      | UN    |
| 181650 | 85500221    | RECTANGULAR STICKER 550x110 | 1.0      | UN    |
| 181920 | 85503746    | RECTANGULAR STICKER 680x200 | 2.0      | UN    |
| 182080 | 85503902    | RECTANGULAR STICKER 250x300 | 1.0      | UN    |


**SAFETY DECALS ASSEMBLY**  
F99008

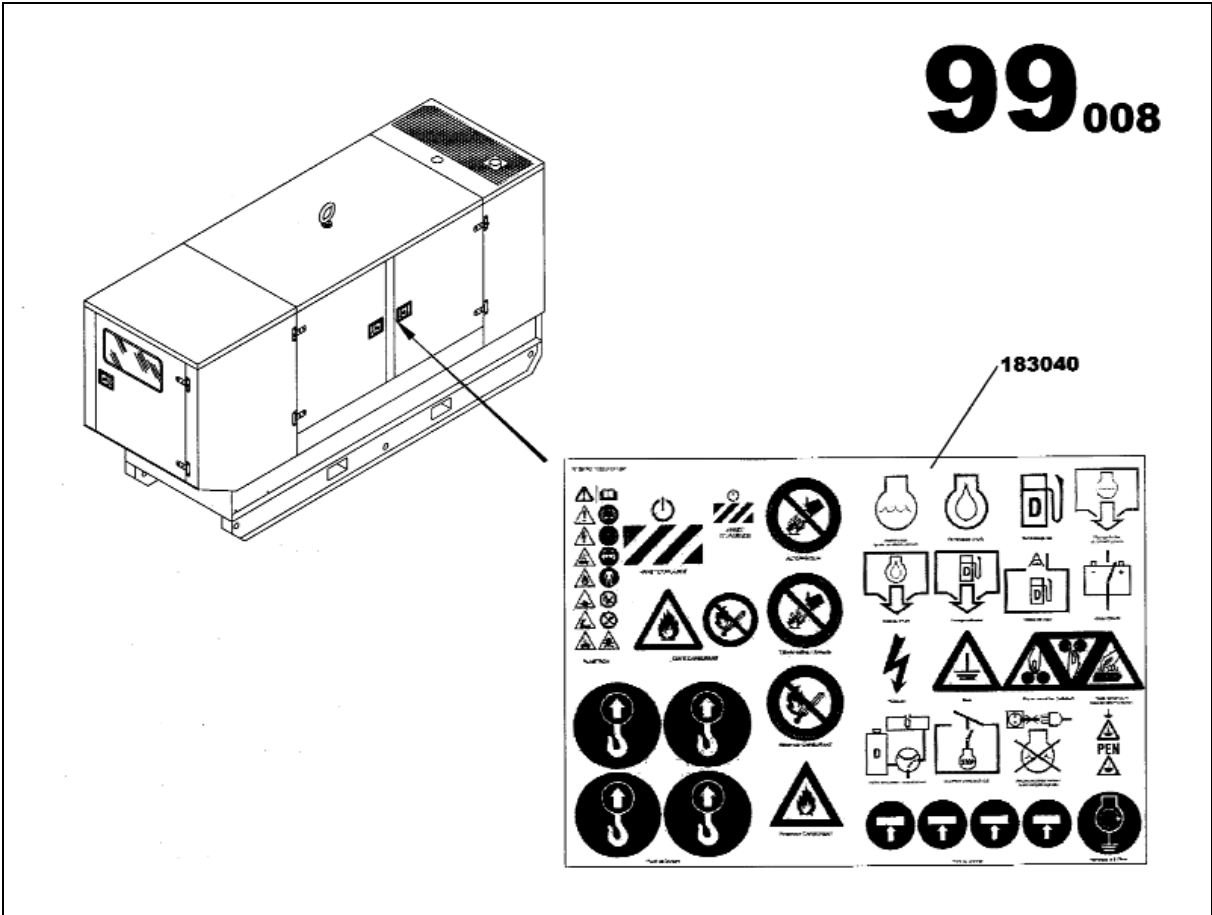

| Item   | Part number | Description  | Quantity | Units |
|--------|-------------|--------------|----------|-------|
| 183040 | 85506467    | SAFETY DECAL | 1.0      | UN    |

# FRAME SKID M107 ASSEMBLY


F13041

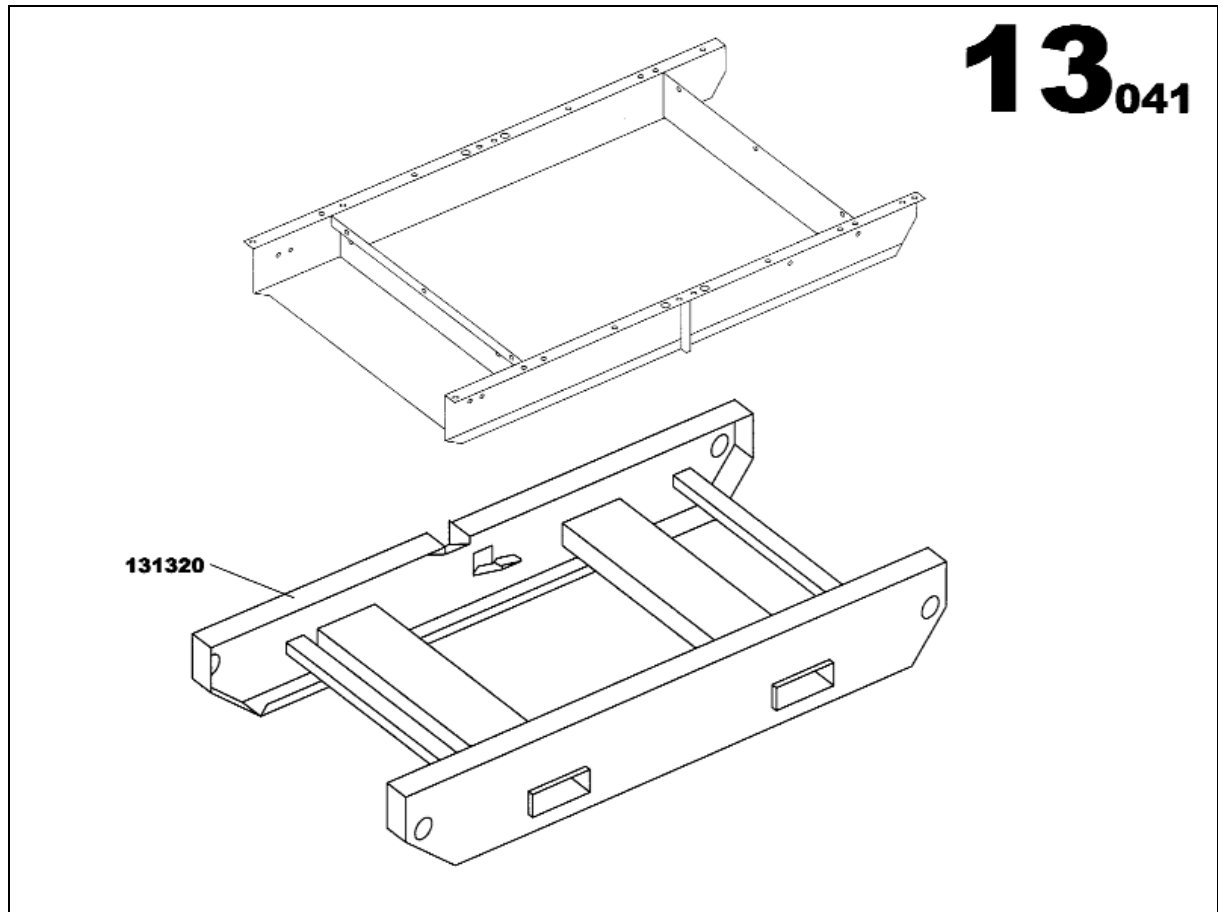

| <i>Item</i> | <i>Part number</i> | <i>Description</i> | <i>Quantity</i> | <i>Units</i> |
|-------------|--------------------|--------------------|-----------------|--------------|
| 131320      | 85412864           | SKID BASE M107     | 1.0             | UN           |

# M107 ENCLOSURE ASSEMBLY


F14016

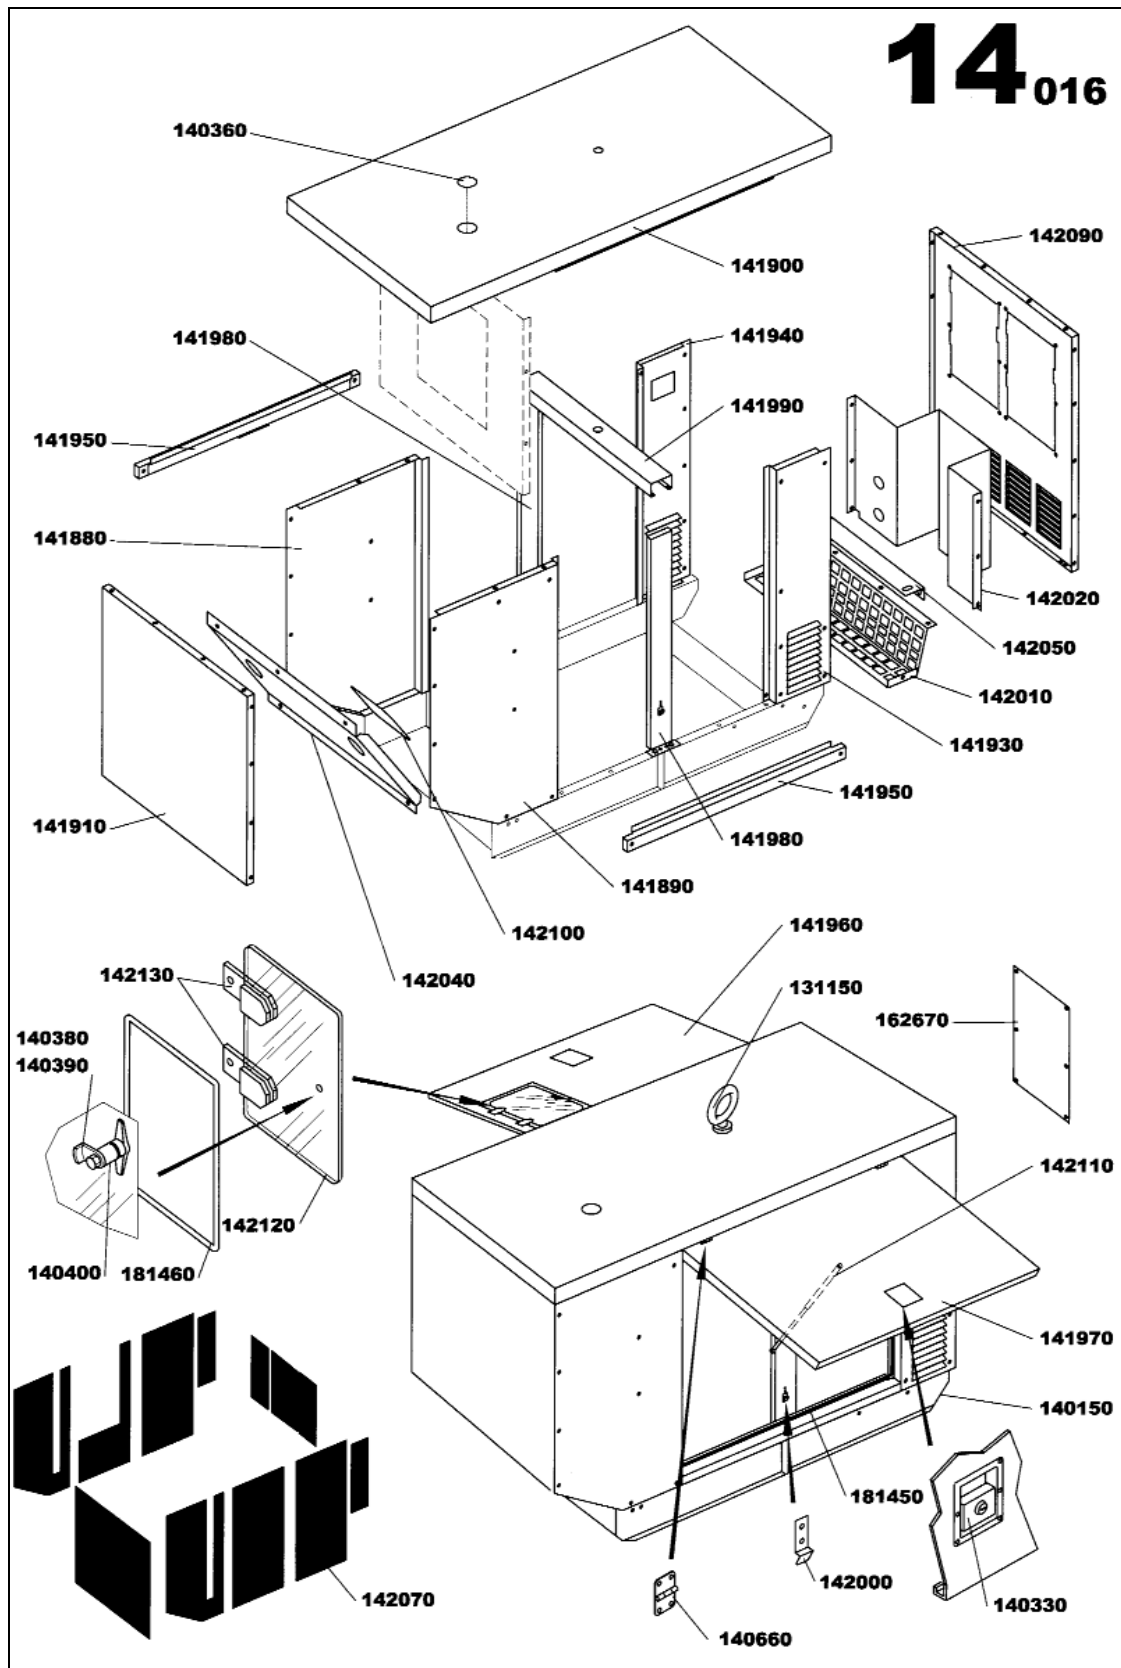

| <i>Item</i> | <i>Part number</i> | <i>Description</i>                 | <i>Quantity</i> | <i>Units</i> |
|-------------|--------------------|------------------------------------|-----------------|--------------|
| 131150      | 85492700           | LIFTING EYE D58 2500daN            | 1.0             | UN           |
| 140150      | 85412856           | M107 FRAME                         | 1.0             | UN           |
| 141880      | 85501401           | M107 CANOPY RIGHT FRONT PANEL      | 1.0             | UN           |
| 141890      | 85501419           | M107 CANOPY LEFT FRONT PANEL       | 1.0             | UN           |
| 141900      | 85416253           | CANOPY TOP M107                    | 1.0             | UN           |
| 141910      | 85415347           | M107 CANOPY FRONT PANEL            | 1.0             | UN           |
| 141930      | 85415339           | M107 CANOPY LEFT REAR PANEL        | 1.0             | UN           |
| 141940      | 85415321           | M107 CANOPY RIGHT REAR PANEL       | 1.0             | UN           |
| 141950      | 85415370           | CANOPY LATERAL PANEL M107          | 2.0             | UN           |
| 141960      | 85415511           | HINGES M 107 RIGHT DOOR            | 1.0             | UN           |
| 141970      | 85415529           | HINGES M 107 LEFT DOOR             | 1.0             | UN           |
| 141980      | 85412484           | SIDE SUPPORT BAIL UPRIGHTS M107    | 2.0             | UN           |
| 141990      | 85412492           | TRANSVERSE BAIL SUPPORT M107       | 1.0             | UN           |
| 142000      | 85413516           | STRIKER PLATE M107 CANOPY DOOR     | 2.0             | UN           |
| 142010      | 85413524           | REAR AIR INTAKE LOUVER M107 CANOPY | 1.0             | UN           |
| 142020      | 85413151           | AIR DEFLECTOR M107 CENTRAL REAR    | 1.0             | UN           |
| 142040      | 85416261           | RADIATOR PANEL M107                | 1.0             | UN           |
| 142050      | 85412617           | CHASSIS FIXING BRACKET M107        | 1.0             | UN           |
| 142070      | 85413888           | SOUNDPROOF PANELS BATCH M107       | 1.0             | UN           |
| 142090      | 85415313           | M107 CANOPY REAR PANEL             | 1.0             | UN           |
| 142100      | 85416295           | M107 CANOPY RADIATOR PANEL         | 1.0             | UN           |
| 140660      | 85406130           | DOOR HINGE h50XL50                 | 4.0             | UN           |
| 140330      | 85406148           | CANOPY DOOR LOCK KEY LOCK          | 2.0             | UN           |
| 140360      | 85406205           | PLUG D100                          | 1.0             | UN           |
| 142110      | 85416477           | GAS FILLED DAMPER 70kg ROD ND10    | 2.0             | UN           |
| 142120      | 85416501           | SECURITY PANE M107                 | 1.0             | UN           |
| 142130      | 85412831           | DOOR HINGE h80XL102                | 2.0             | UN           |
| 140380      | 85406221           | SLAM SHUT DOOR LATCH               | 1.0             | UN           |
| 140390      | 85406239           | SLAM SHUT LATCH HANDLE             | 1.0             | UN           |
| 140400      | 85406247           | SLAM SHUT FASTENER                 | 1.0             | UN           |
| 181450      | 85413722           | LINEAR SEAL Th5                    | 8.3             | ML           |
| 181460      | 85413730           | LINEAR SEAL Th10                   | 1.25            | ML           |
| 162670      | 85429355           | M107 CANOPY REAR PANEL             | 1.0             | UN           |

# EARTH ROD WITH CABLE M100/200 CANOPY ASSEMBLY


F16006

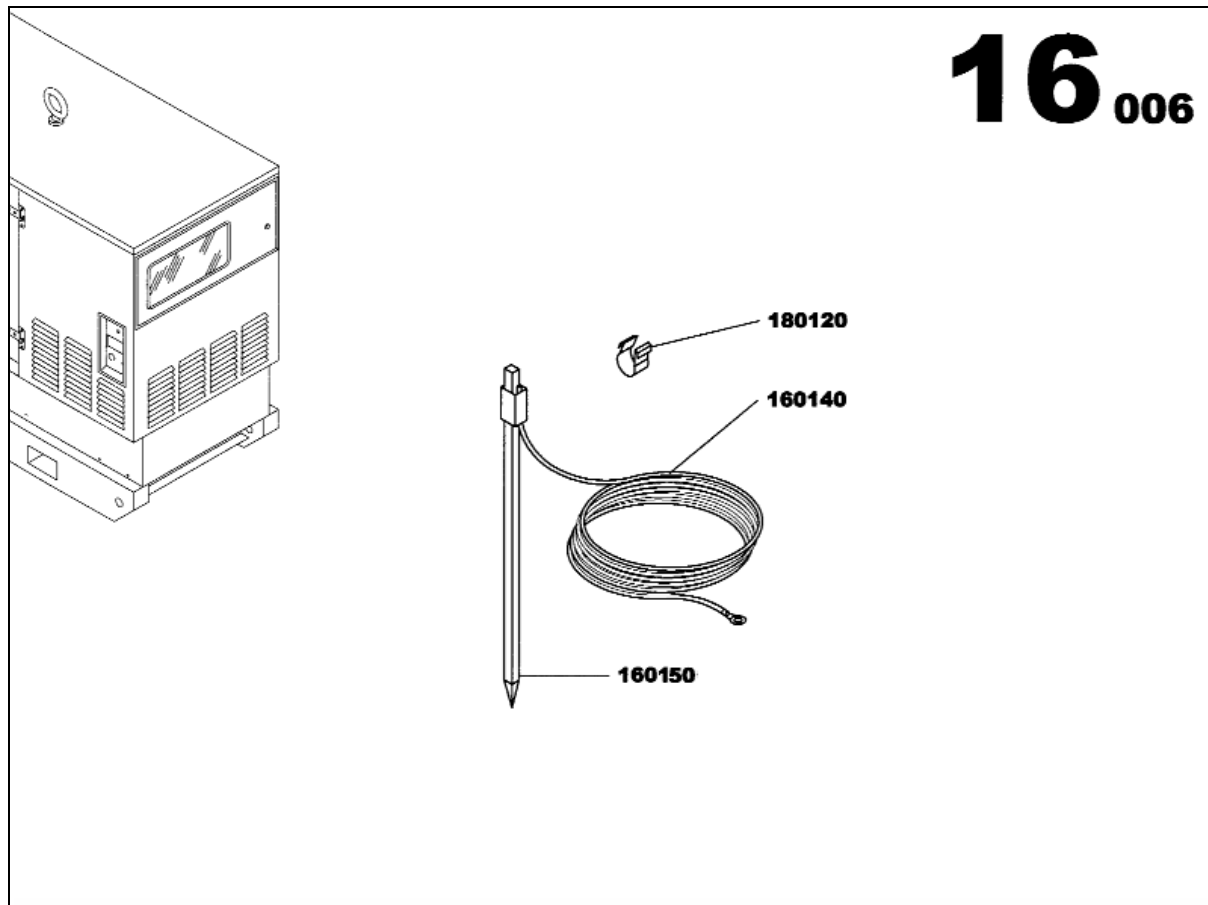

| <i>Item</i> | <i>Part number</i> | <i>Description</i>                            | <i>Quantity</i> | <i>Units</i> |
|-------------|--------------------|---|-----------------|--------------|
| 160140      | 85408227           | NEUTRAL/EARTH SYSTEM CABLE 25mm2 L10000 Gr/Ye | 1.0             | UN           |
| 160150      | 85408334           | EARTH ROD L1000                               | 1.0             | UN           |
| 180120      | 85409191           | CLIP-ON BRACKET                               | 2.0             | UN           |

# CIRCUIT BREAKER ACCESSORIES

F16034

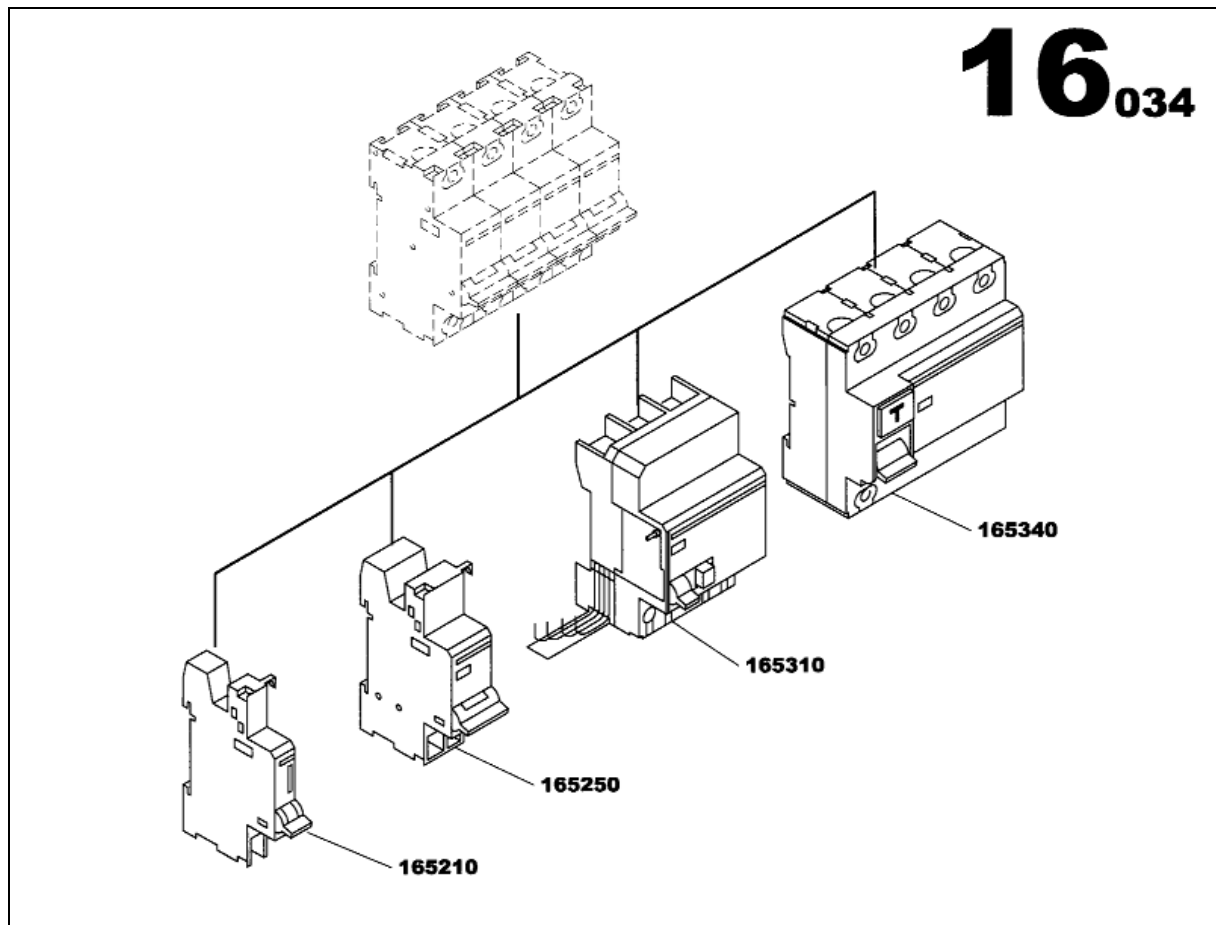


| <i>Item</i> | <i>Part number</i> | <i>Description</i>                 | <i>Quantity</i> | <i>Units</i> |
|-------------|--------------------|------------------------------------|-----------------|--------------|
| 165340      | 85413599           | DIFFERENTIAL SWITCH 4POLE 25A 30mA | 1.0             | UN           |

Part number listed is the only part used in this model.



# ANALOGUE INSTRUMENT CONTROL PANEL ASSEMBLY


F16077

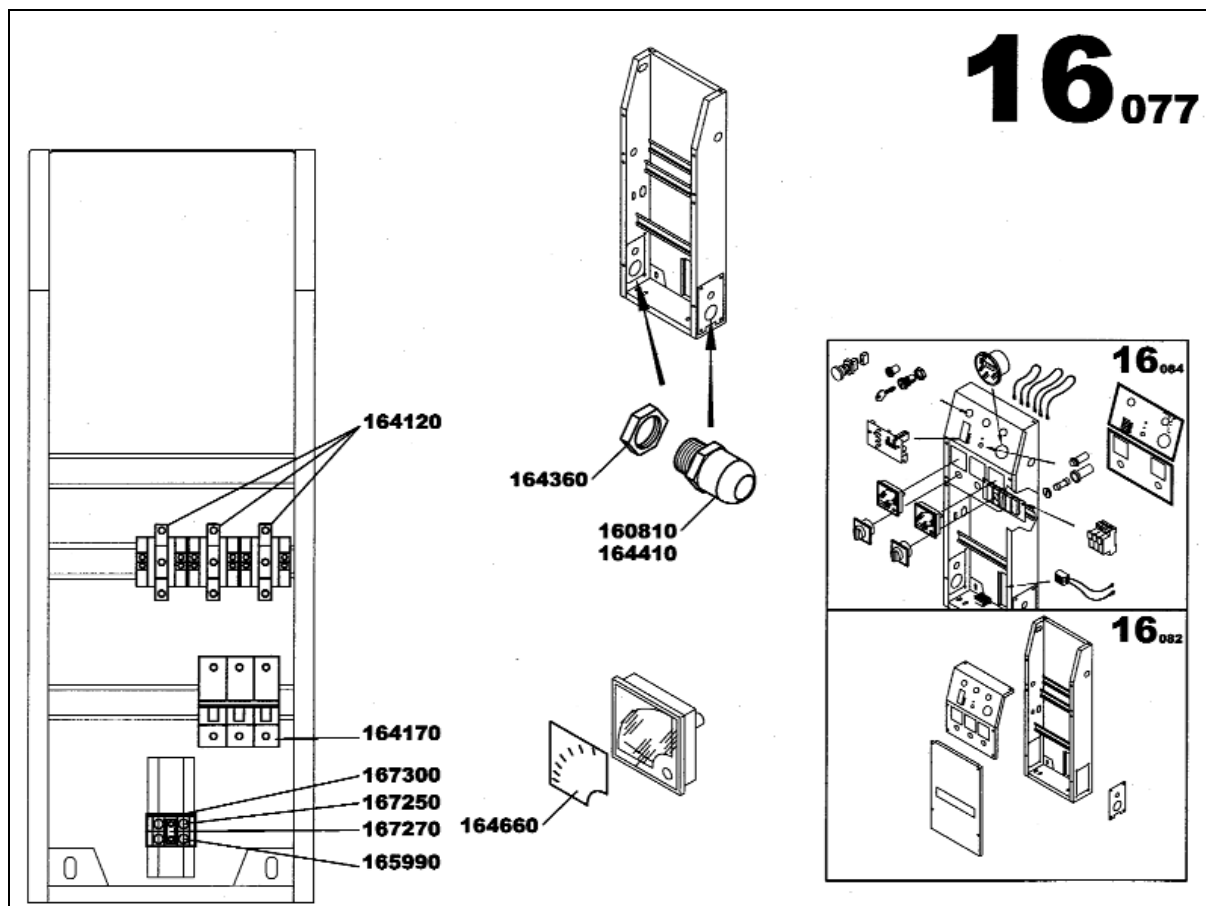

| Item   | Part number | Description                              | Quantity | Units |
|--------|-------------|--|----------|-------|
| 164120 | 85408417    | CURRENT TRANSFORMER 60/5                 | 3.0      | UN    |
| 164170 | 85413185    | MOULDED CASE CIRCUIT BREAKER 4x25A       | 1.0      | UN    |
| 160810 | 85408631    | GLAND NUT PG21                           | 2.0      | UN    |
| 164360 | 85408680    | GLAND NUT PG36                           | 2.0      | UN    |
| 164410 | 85415768    | GLAND NUT REDUCER 36X21                  | 2.0      | UN    |
| 164660 | 85413243    | AMMETER SCALE 30/5A DIN72 90°            | 1.0      | UN    |
| 167300 | 85505675    | PLASTIC COVER TERMINAL BLOCK BLUE        | 1.0      | UN    |
| 165990 | 85426229    | TERMINAL BLOCK 1x16mm <sup>2</sup> Gr/Ye | 1.0      | UN    |
| 167250 | 85505642    | BLUE TERMINAL CONNECTION                 | 1.0      | UN    |
| 167270 | 85505618    | TERMINAL BLOCK                           | 1.0      | UN    |

# HOUSING ANALOGUE CONTROL PANEL ASSEMBLY


F16082

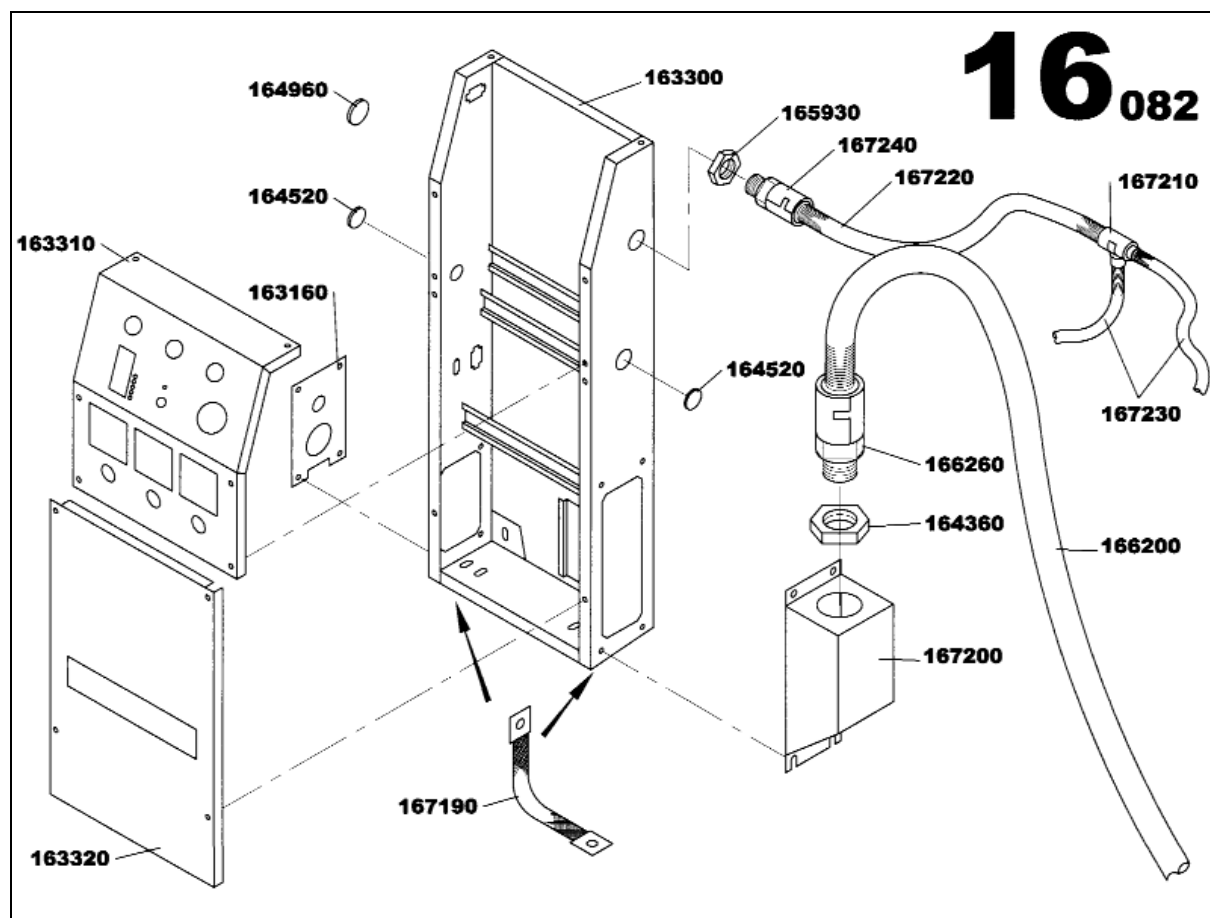

| Item   | Part number | Description                  | Quantity | Units |
|--------|-------------|------------------------------|----------|-------|
| 163160 | 85416121    | GLAND NUT PLATE M50/M150     | 1.0      | UN    |
| 163300 | 85416238    | CHASSIS PANEL BRACKET M150   | 1.0      | UN    |
| 163310 | 85413136    | DASHBOARD HOOD SUPERIOR M150 | 1.0      | UN    |
| 163320 | 85413144    | DASHBOARD HOOD INFERIOR M150 | 1.0      | UN    |
| 167200 | 85505550    | SHAFT ADAPTOR                | 1.0      | UN    |
| 167190 | 85505543    | GROUND WIRES 16mm2           | 2.0      | UN    |
| 164520 | 85415388    | RUBBER GROMMET D22           | 4.0      | UN    |
| 164960 | 85415396    | RUBBER GROMMET D18           | 2.0      | UN    |
| 167210 | 85505568    | TE 16x13x13 ELECTRICAL SHAFT | 1.0      | UN    |
| 167220 | 85505576    | ELECTRICAL SHAFT D16         | 0.44     | ML    |
| 167230 | 85505584    | ELECTRICAL SHAFT D13         | 0.98     | ML    |
| 167240 | 85505592    | ELECTRICAL PIPE UNION PG16   | 1.0      | UN    |
| 165930 | 85408664    | GLAND NUT PG16               | 1.0      | UN    |
| 166260 | 85501575    | PIPE UNION PG36              | 1.0      | UN    |
| 164360 | 85408680    | GLAND NUT PG36               | 1.0      | UN    |
| 166200 | 85499440    | ELECTRICAL SHAFT D36         | 1.0      | UN    |

# ANALOGUE CONTROL PANEL ASSEMBLY


F16084

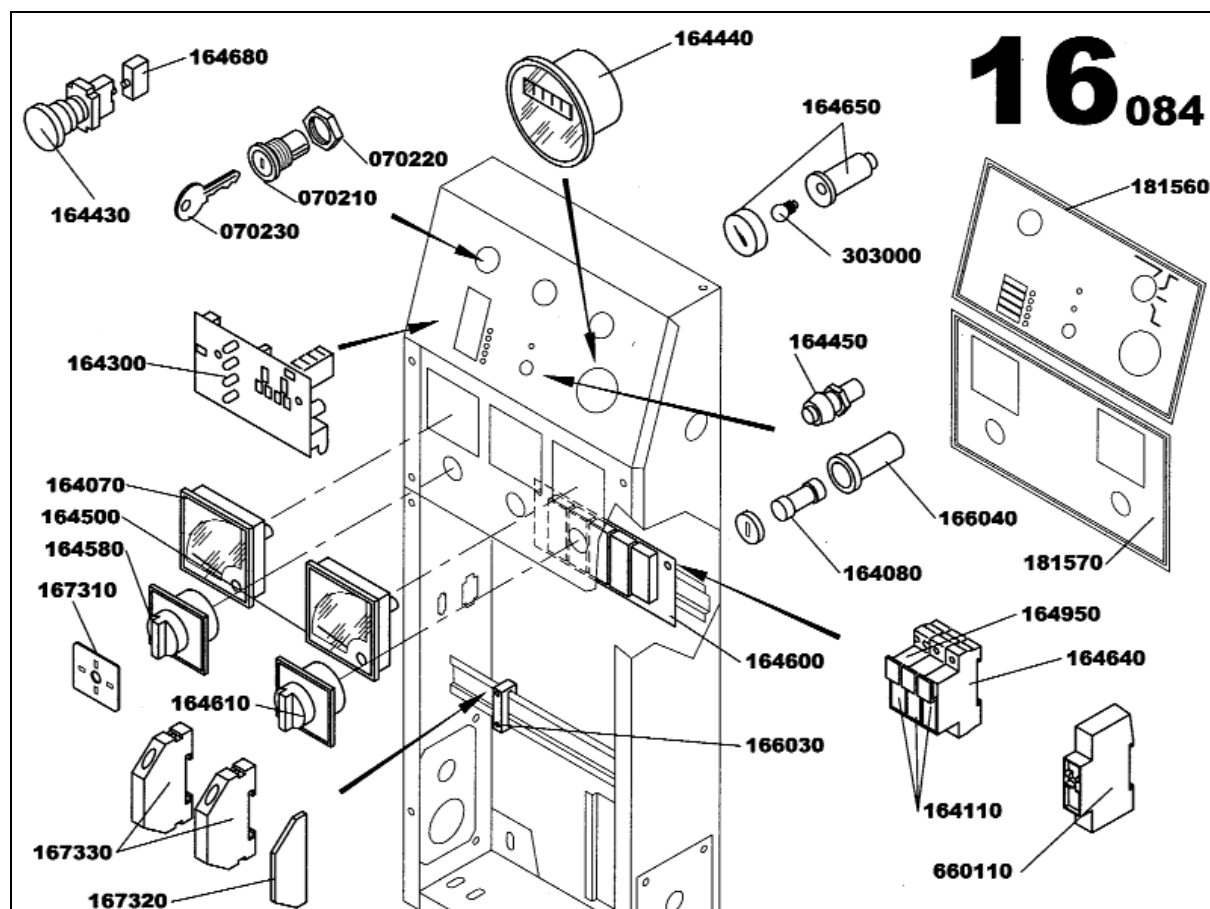

| <i>Item</i> | <i>Part number</i> | <i>Description</i>                | <i>Quantity</i> | <i>Units</i> |
|-------------|--------------------|-----------------------------------|-----------------|--------------|
| 070210      | 85412948           | KEY SWITCH                        | 1.0             | UN           |
| 070220      | 85413268           | SWITCH NUT                        | 1.0             | UN           |
| 070230      | 85412872           | KEY SWITCH                        | 1.0             | UN           |
| 164070      | 85416519           | VOLTMETER 0/500V                  | 1.0             | UN           |
| 164080      | 85413482           | FUSE CYLINDRICAL 5A               | 1.0             | UN           |
| 164110      | 85413490           | FUSE CYLINDRICAL 6A               | 3.0             | UN           |
| 164300      | 85402527           | PGS CARD 12/24V                   | 1.0             | UN           |
| 164430      | 85412591           | EMERGENCY STOP PUSH BUTTON D22    | 1.0             | UN           |
| 164440      | 85412963           | HOUR METER 10/30VDC               | 1.0             | UN           |
| 164450      | 85412609           | PUSH BUTTON D12                   | 1.0             | UN           |
| 164500      | 85402477           | AMMETER WITH NEEDLE 72x72         | 1.0             | UN           |
| 164580      | 85412955           | VOLTMETER SWITCH 7 POSITIONS D22  | 1.0             | UN           |
| 164600      | 85402576           | RD2 CARD 12VCC                    | 1.0             | UN           |
| 164610      | 85412930           | AMMETER SWITCH 4 POSITIONS D22    | 1.0             | UN           |
| 164640      | 85415503           | FUSE HOUSING                      | 1.0             | UN           |
| 164650      | 85416527           | WARNING LIGHT CYLINDRIC D22       | 1.0             | UN           |
| 164680      | 85508638           | AUXILARY CONTACT EMERGENCY STOP   | 2.0             | UN           |
| 181560      | 85505634           | PLASTIC PLATE L260xh140           | 1.0             | UN           |
| 181570      | 85413797           | PLASTIC PLATE L260xh140           | 1.0             | UN           |
| 164950      | 85413508           | CYLINDRICAL FUSE NEUTRAL          | 1.0             | UN           |
| 303000      | 85402519           | LAMP                              | 1.0             | UN           |
| 166040      | 85490472           | FUSE HOUSING                      | 1.0             | UN           |
| 660110      | 85500379           | MOULDED CASE CIRCUIT BREAKER 1x6A | 1.0             | UN           |
| 167310      | 85505659           | VOLTMETER INDICATOR PLATE         | 1.0             | UN           |
| 167320      | 85505683           | PLASTIC COVER TERMINAL BLOCK      | 1.0             | UN           |
| 167330      | 85505691           | TERMINAL CONNECTION               | 2.0             | UN           |
| 166030      | 85408854           | STOP                              | 7.0             | UN           |

# TERMINAL CONNECTION BLOCK ASSEMBLY


F16091

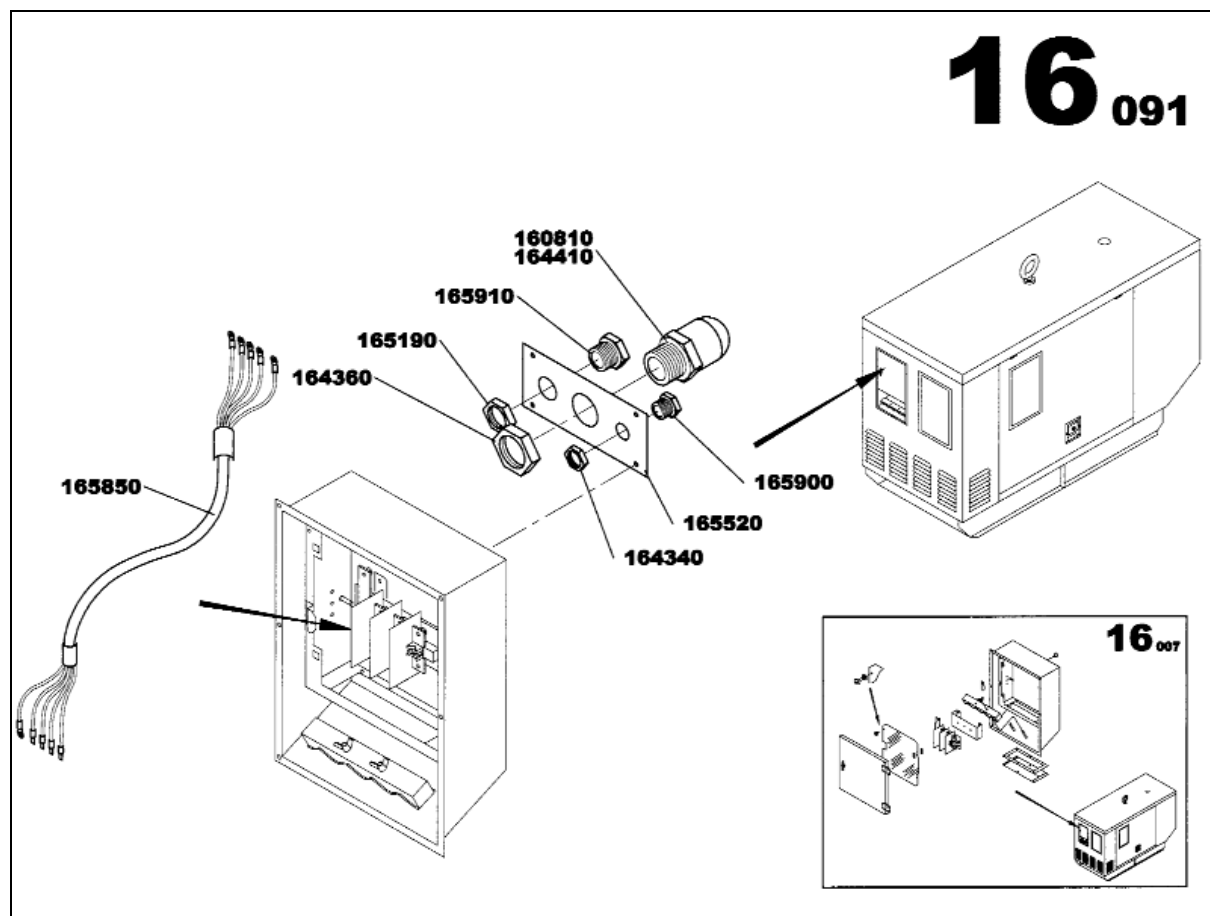

| Item   | Part number | Description                        | Quantity | Units |
|--------|-------------|------------------------------------|----------|-------|
| 165520 | 85416113    | GLAND NUT PLATE M202BL             | 1.0      | UN    |
| 165850 | 85412724    | POWER CABLE SINGLE CORE 4mm2 L1600 | 1.0      | UN    |
| 165900 | 85429413    | ELECTRIC PLUG D11                  | 1.0      | UN    |
| 165910 | 85412583    | PLASTIC PLUG D22PG                 | 1.0      | UN    |
| 160810 | 85408631    | GLAND NUT PG21                     | 1.0      | UN    |
| 164340 | 85413276    | GLAND NUT PG11                     | 1.0      | UN    |
| 165190 | 85413284    | GLAND NUT PG29                     | 1.0      | UN    |
| 164360 | 85408680    | GLAND NUT PG36                     | 1.0      | UN    |
| 164410 | 85415768    | GLAND NUT REDUCER 36X21            | 1.0      | UN    |

# CONNECTIONS M107 ASSEMBLY

F16007

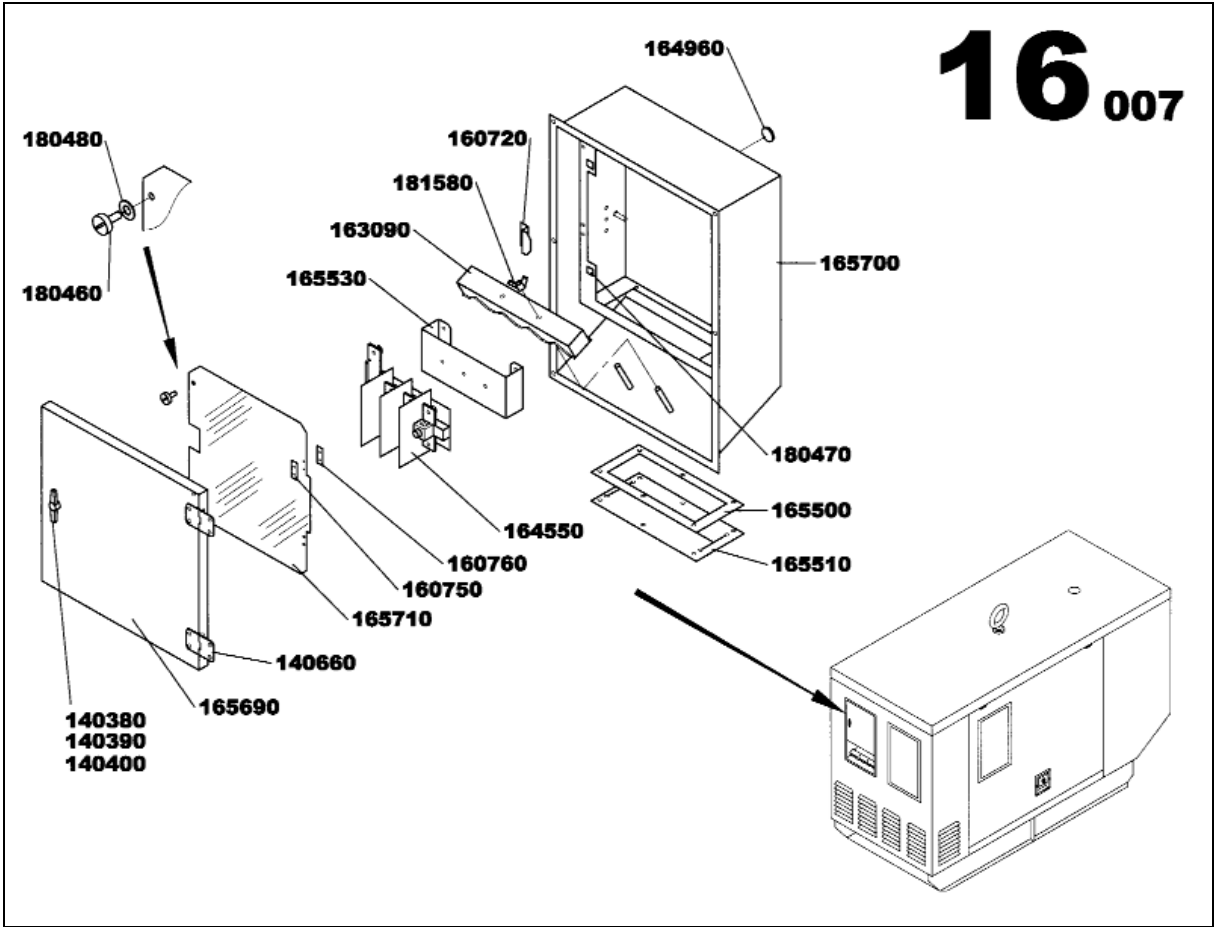


| <i>Item</i> | <i>Part number</i> | <i>Description</i>                            | <i>Quantity</i> | <i>Units</i> |
|-------------|--------------------|---|-----------------|--------------|
| 163090      | 85416030           | CABLE FIXING BRACKET MCPS M202BL              | 1.0             | UN           |
| 165500      | 85415982           | WIRE BIB OUTPUT BRACKET M204BL                | 1.0             | UN           |
| 165510      | 85412534           | CABLE OUTPUT RUBBER SCREEN                    | 1.0             | UN           |
| 165530      | 85415933           | TERMINAL BRACKET M202L                        | 1.0             | UN           |
| 140660      | 85406130           | DOOR HINGE h50XL50                            | 4.0             | UN           |
| 140380      | 85406221           | SLAM SHUT DOOR LATCH                          | 1.0             | UN           |
| 140390      | 85406239           | SLAM SHUT LATCH HANDLE                        | 1.0             | UN           |
| 140400      | 85406247           | SLAM SHUT FASTENER                            | 1.0             | UN           |
| 165690      | 85415537           | TERMINAL CONNECTION DOOR M107L CANOPY         | 1.0             | UN           |
| 160720      | 85407682           | STRIKER PLATE M214BL CANOPY MCPS DOOR         | 1.0             | UN           |
| 160750      | 85407690           | SPACER FOR CB DOOR M214BL                     | 2.0             | UN           |
| 160760      | 85407708           | HINGE FIXING PLATE M214BL                     | 2.0             | UN           |
| 165700      | 85416048           | CONNECTIONS BLOCK BRACKET M107L               | 1.0             | UN           |
| 165710      | 85415545           | TERMINAL CONNECTION PERSPEX DOOR M107L CANOPY | 1.0             | UN           |
| 164550      | 85412559           | POWER CONNECTION BLOCK                        | 1.0             | UN           |
| 180460      | 85409225           | 1/4 TURN SCREW D9                             | 2.0             | UN           |
| 180470      | 85409233           | CAPTIVE NUT FOR 1/4 TURN BOLT                 | 2.0             | UN           |
| 180480      | 85409241           | WASHER FOR 1/4 TURN FASTENER                  | 2.0             | UN           |
| 164960      | 85415396           | RUBBER GROMMET D18                            | 1.0             | UN           |
| 181580      | 85410140           | WING NUT                                      | 2.0             | UN           |

# ROAD TRAILER M107 OPTION

## ROAD TRAILER M107

F13044

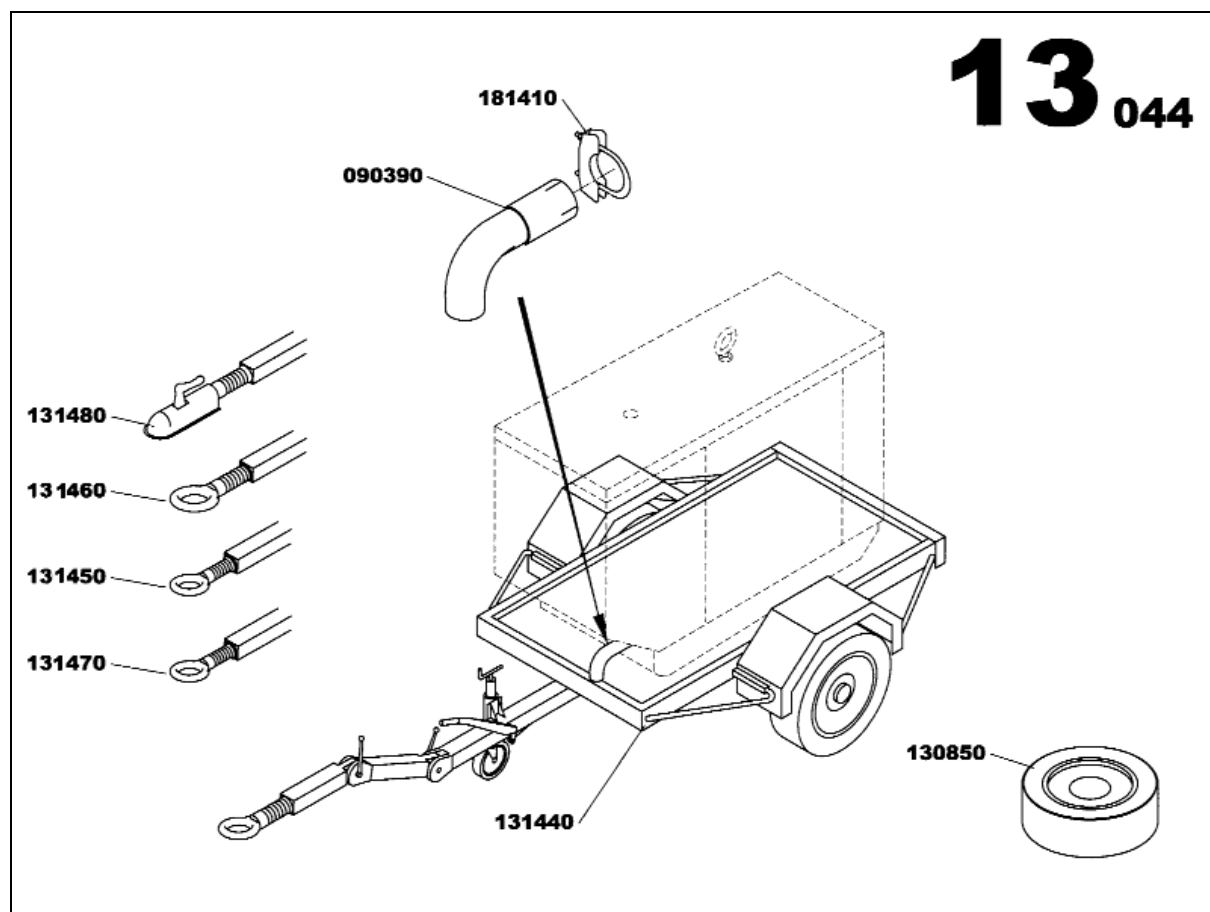


| <i>Item</i> | <i>Part number</i> | <i>Description</i>                    | <i>Quantity</i> | <i>Units</i> |
|-------------|--------------------|---------------------------------------|-----------------|--------------|
| 090390      | 85429199           | MUFFLER EXTENSION D50                 | 1.0             | UN           |
| 181410      | 85429421           | HOSE CLAMP D54                        | 1.0             | UN           |
| 131440      | 85429249           | ROAD TRAILER M107                     | 1.0             | UN           |
| 131480      | 85429280           | TOWING BALL D50                       | 1.0             | UN           |
| 131460      | 85429264           | TOWING EYE 76x42                      | 1.0             | UN           |
| 131450      | 85429256           | TOWING EYE 68x42                      | 1.0             | UN           |
| 131470      | 85429272           | TOWING EYE DIN 40                     | 1.0             | UN           |
| 130850      | 85429322           | SPARE WHEEL KIT FOR ROAD TRAILER M107 | 1.0             | UN           |



# ROAD TRAILER 131440 DETAILS


F30061

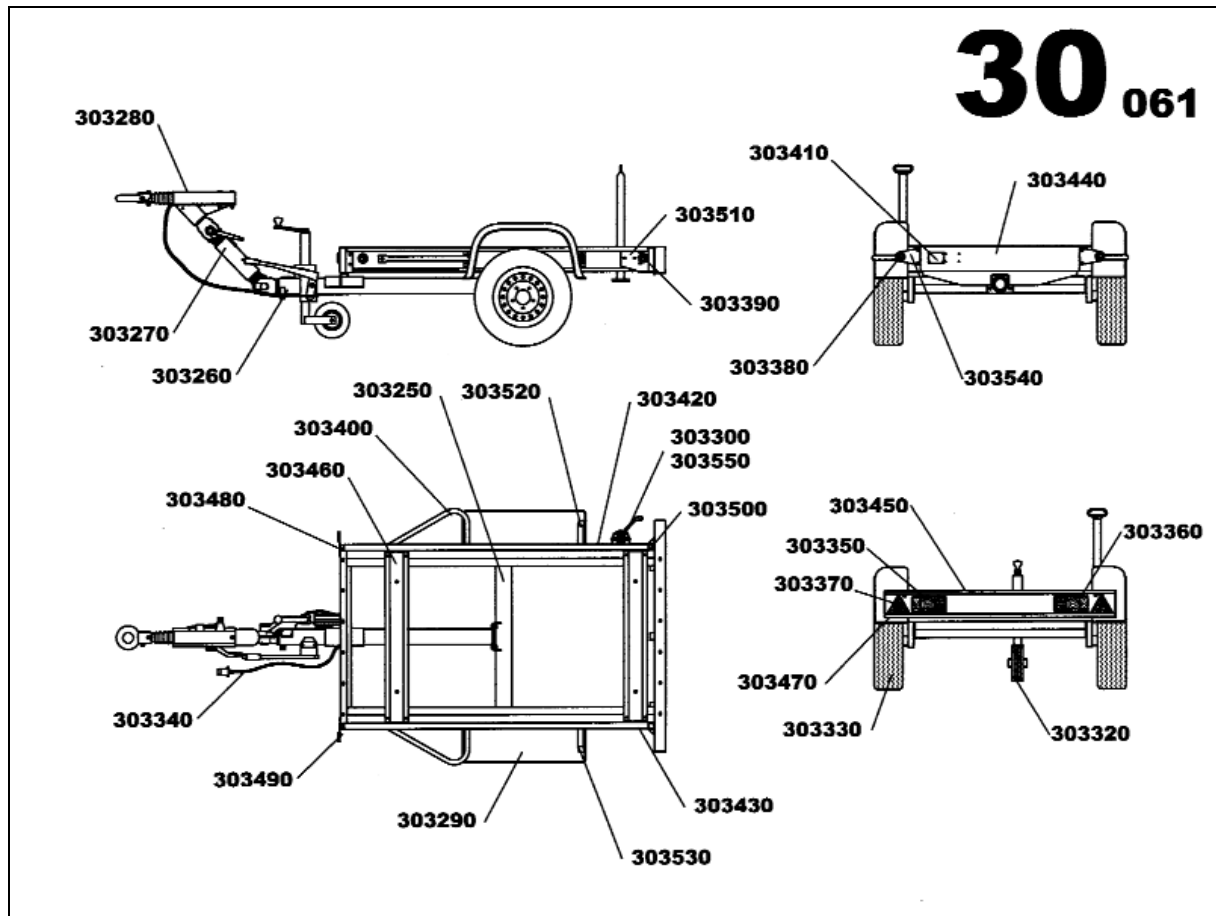

| <i>Item</i> | <i>Part number</i> | <i>Description</i>                | <i>Quantity</i> | <i>Units</i> |
|-------------|--------------------|-----------------------------------|-----------------|--------------|
| 303250      | 85504322           | AXLE                              | 1.0             | UN           |
| 303260      | 85504330           | POLE                              | 1.0             | UN           |
| 303270      | 85504348           | INTERMEDIARY ARMS                 | 1.0             | UN           |
| 303280      | 85504355           | BRAKE GEAR                        | 1.0             | UN           |
| 303290      | 85504363           | GALVANIZED MUDGUARD               | 2.0             | UN           |
| 303300      | 85504371           | HINGE RING                        | 1.0             | UN           |
| 303310      | 85504389           | SLINDING SHORE                    | 1.0             | UN           |
| 303320      | 85504397           | SQUARE JOCKEY WHEEL               | 1.0             | UN           |
| 303330      | 85504405           | COMPLETE WHEEL                    | 2.0             | UN           |
| 303340      | 85504413           | ELECTRIC BEAM                     | 1.0             | UN           |
| 303350      | 85504421           | LEFT REAR LIGHT                   | 1.0             | UN           |
| 303360      | 85504439           | RIGHT REAR LIGHT                  | 1.0             | UN           |
| 303370      | 85504447           | TRIANGULAR REFLECTOR              | 2.0             | UN           |
| 303380      | 85504454           | ROUND STICKY REFLECTOR WHITE      | 2.0             | UN           |
| 303390      | 85504462           | ROUND STICKY REFLECTOR ORANGE     | 4.0             | UN           |
| 303400      | 85504470           | STANDARD GALVANIZED CYCLIST-GUARD | 2.0             | UN           |
| 303410      | 85504488           | ECIM PRODUCER PLATE               | 1.0             | UN           |
| 303420      | 85504496           | RIGHT SPECIAL SIDE MEMBER         | 1.0             | UN           |
| 303430      | 85504504           | LEFT SPECIAL SIDE MEMBER          | 1.0             | UN           |
| 303440      | 85504512           | FRONT CROSS MEMBER                | 1.0             | UN           |
| 303450      | 85504520           | LIGHTS CROSS MEMBER               | 1.0             | UN           |
| 303460      | 85504538           | INTERMEDIARY CROSS MEMBER         | 2.0             | UN           |
| 303470      | 85504546           | TRIANGLE SUPPORT                  | 2.0             | UN           |
| 303480      | 85504553           | RIGHT FRONT BOUNDING              | 1.0             | UN           |
| 303490      | 85504561           | LEFT FRONT BOUNDING               | 1.0             | UN           |
| 303500      | 85504579           | RIGHT REAR BOUNDING               | 1.0             | UN           |
| 303510      | 85504587           | LEFT REAR BOUNDING                | 1.0             | UN           |
| 303520      | 85504595           | RIGHT MUDGUARD FIXATION           | 1.0             | UN           |
| 303530      | 85504603           | LEFT MUDGUARD FIXATION            | 1.0             | UN           |
| 303540      | 85504611           | FIXING CLIP WHITE LITE            | 2.0             | UN           |
| 303550      | 85504629           | STAND FIXATION ON SIDE MEMBER     | 1.0             | UN           |

## BRAKE GEAR 303280 DETAIL


F30069

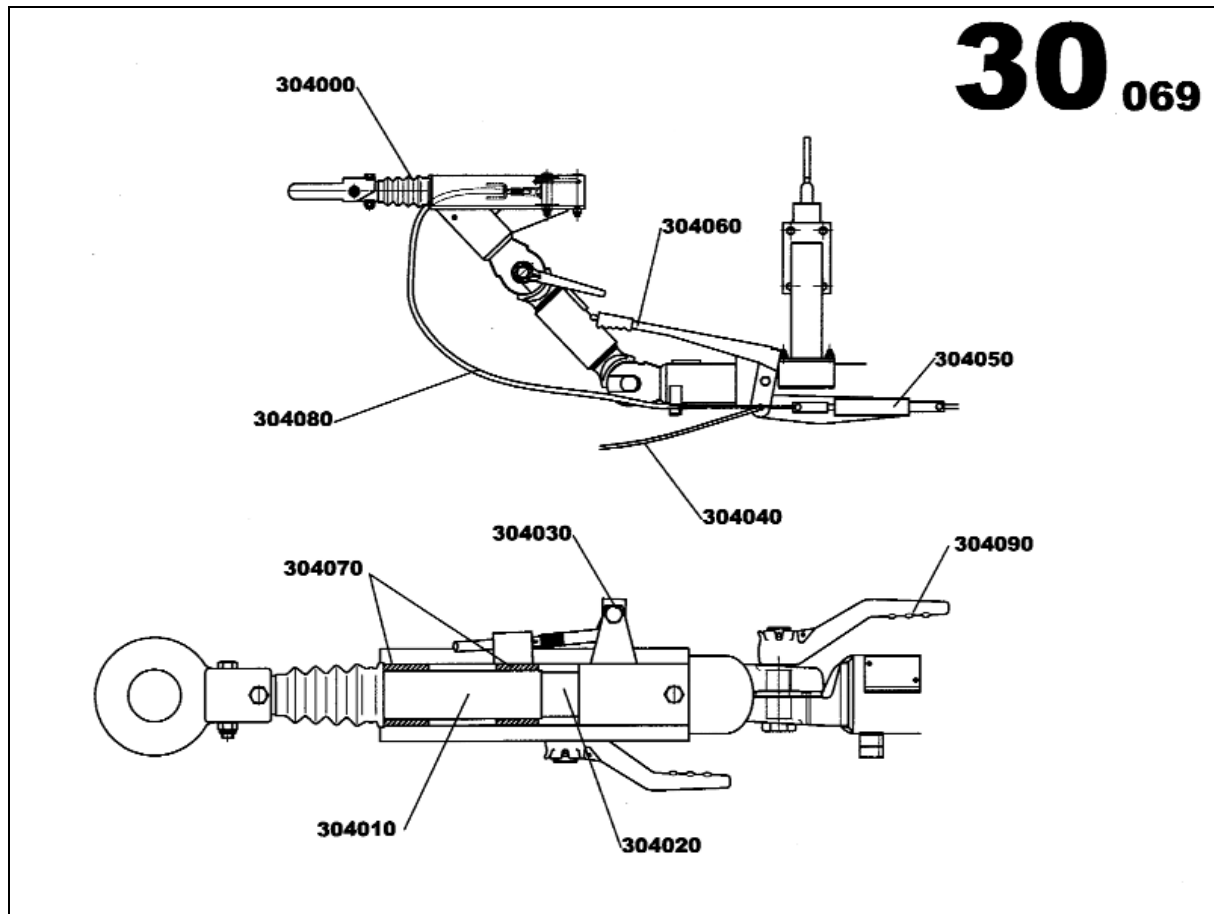

| <i>Item</i> | <i>Part number</i> | <i>Description</i>  | <i>Quantity</i> | <i>Units</i> |
|-------------|--------------------|---------------------|-----------------|--------------|
| 304000      | 85505220           | BELLOW              | 1.0             | UN           |
| 304010      | 85505238           | TRACTION TUBE       | 1.0             | UN           |
| 304020      | 85505246           | SHOCK ABSORBER      | 1.0             | UN           |
| 304030      | 85505253           | CONNECTING ROD      | 1.0             | UN           |
| 304040      | 85505261           | BREAK DOWN CABLE    | 1.0             | UN           |
| 304050      | 85505279           | COMPENSATOR         | 1.0             | UN           |
| 304060      | 85505287           | HANDBRAKE LEVER     | 1.0             | UN           |
| 304070      | 85505295           | FRICTION COLLAR KIT | 1.0             | UN           |
| 304080      | 85505303           | TRANSMISSION CABLE  | 1.0             | UN           |
| 304090      | 85505311           | LEVER AND AXLE      | 1.0             | UN           |


## AXLE 303250 DETAIL

F30072

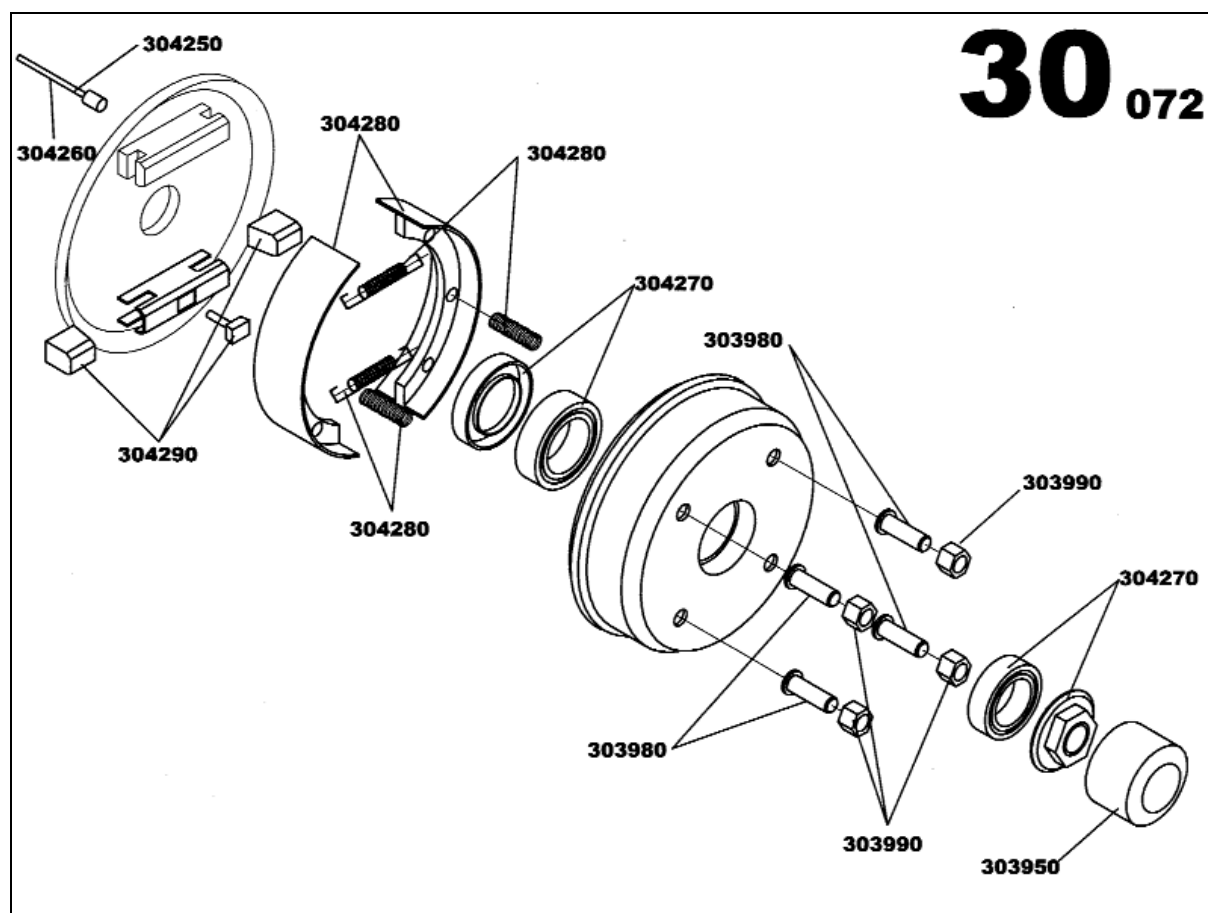

| Item   | Part number | Description           | Quantity | Units |
|--------|-------------|-----------------------|----------|-------|
| 303950 | 85505170    | HUB CAP               | 1.0      | UN    |
| 304270 | 85505501    | BEARING KIT           | 1.0      | UN    |
| 303980 | 85505204    | BOLTS KIT             | 1.0      | UN    |
| 303990 | 85505212    | NUTS KIT              | 1.0      | UN    |
| 304280 | 85505519    | BRAKE KIT             | 1.0      | UN    |
| 304290 | 85505527    | ADJUSTMENT KIT        | 1.0      | UN    |
| 304250 | 85505477    | BRAKE CABLE 1,40m KIT | 1.0      | UN    |
| 304260 | 85505485    | BRAKE CABLE 1,60m KIT | 1.0      | UN    |


**EARTH ROD WITH CABLE M100/200 CANOPY ASSEMBLY**  
**F16006**

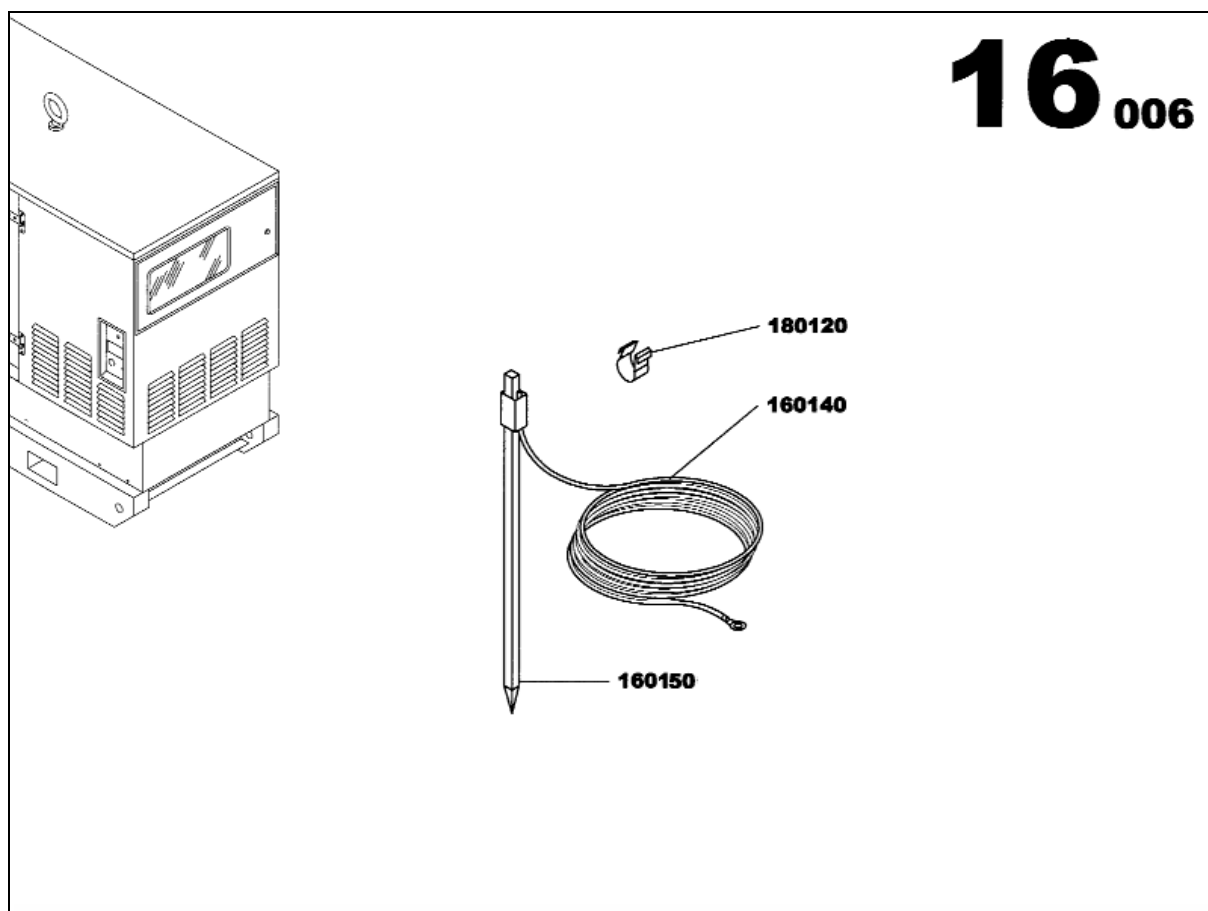

| <i>Item</i> | <i>Part number</i> | <i>Description</i>                            | <i>Quantity</i> | <i>Units</i> |
|-------------|--------------------|---|-----------------|--------------|
| 160140      | 85408227           | NEUTRAL/EARTH SYSTEM CABLE 25mm2 L10000 Gr/Ye | 1.0             | UN           |
| 160150      | 85408334           | EARTH ROD L1000                               | 1.0             | UN           |
| 180120      | 85409191           | CLIP-ON BRACKET                               | 2.0             | UN           |

## 3 WAY FUEL VALVE OPTION

F05030

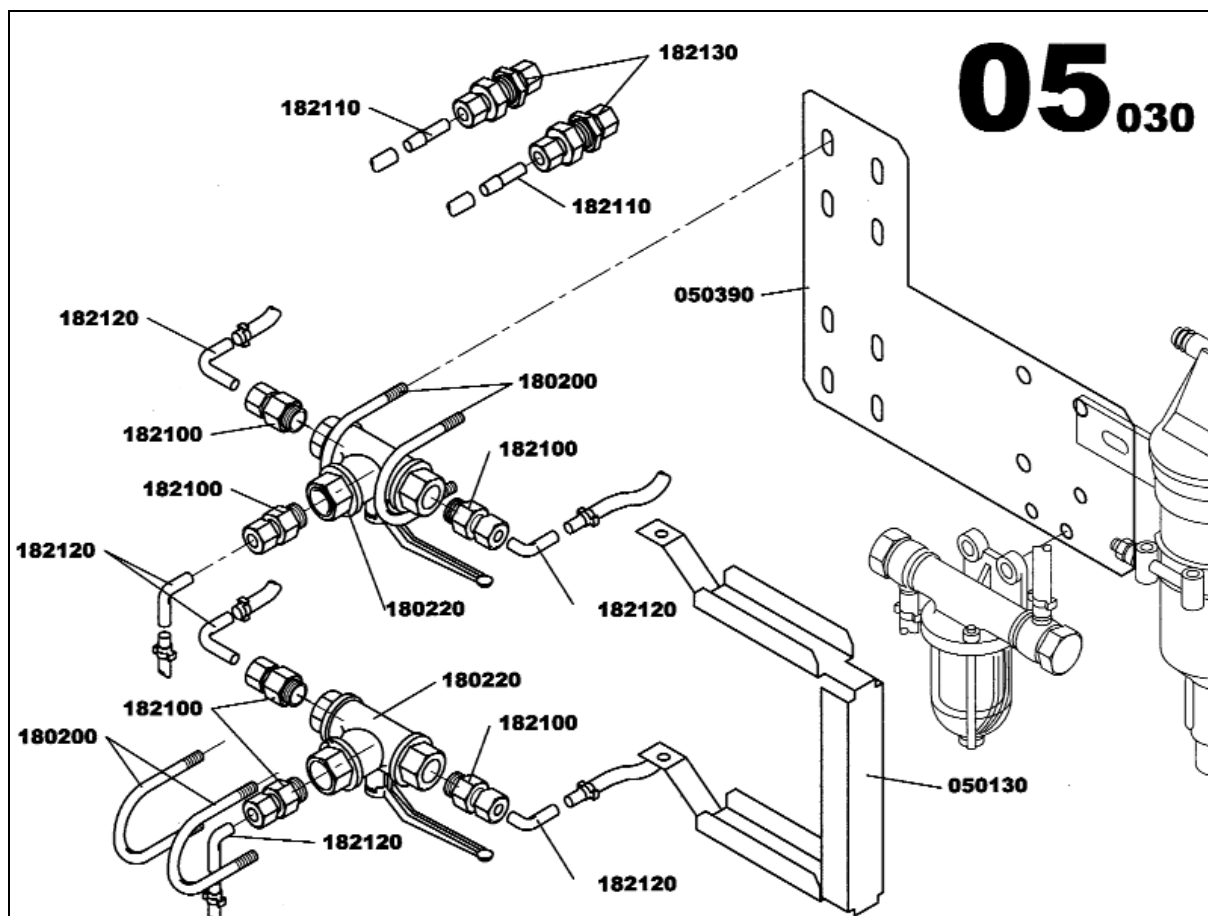


| <i>Item</i> | <i>Part number</i> | <i>Description</i>                              | <i>Quantity</i> | <i>Units</i> |
|-------------|--------------------|---|-----------------|--------------|
| 050390      | 85425361           | FUEL FILTER SEPARATOR/ 3 WAY FUEL VALVE BRACKET | 1.0             | UN           |
| 050130      | 85403491           | 3 WAY FUEL VALVE LEVER 3/8G                     | 1.0             | UN           |
| 182100      | 85430452           | PIPE UNION REDUCER MAL/FEM 3/8NPT D6            | 6.0             | UN           |
| 182110      | 85430460           | PIPE UNION REDUCER MAL/MAL                      | 2.0             | UN           |
| 182120      | 85430478           | PIPE UNION REDUCER ELBOW MAL/MAL D6             | 6.0             | UN           |
| 182130      | 85430486           | PIPE UNION FEM/FEM D6                           | 2.0             | UN           |
| 180200      | 85409464           | HOSE CLAMP D36                                  | 4.0             | UN           |
| 180220      | 85409530           | 3 WAY FUEL VALVE                                | 2.0             | UN           |

# SOCKETS TYPE 1B OPTION


## SOCKETS ASSEMBLY T1BL

F16134

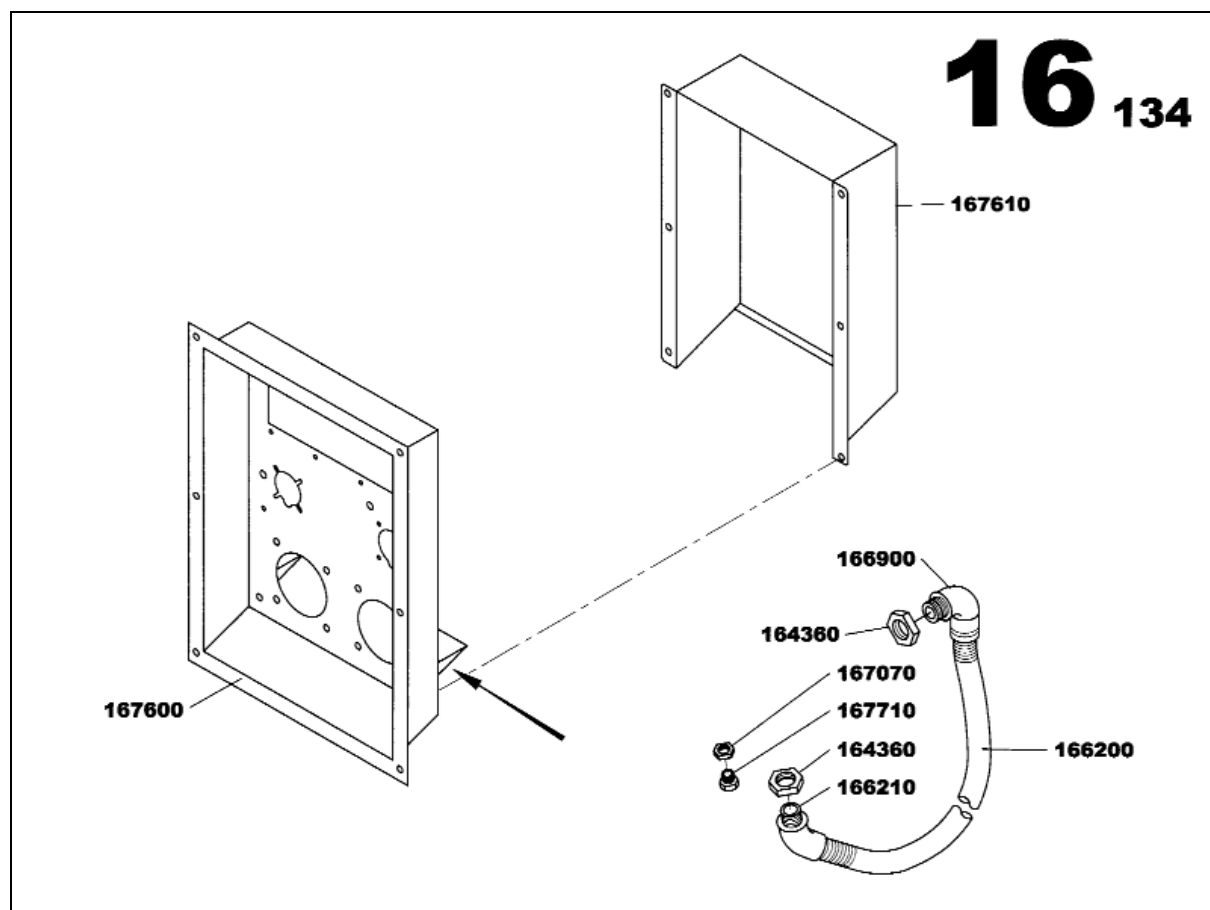

| <i>Item</i> | <i>Part number</i> | <i>Description</i>           | <i>Quantity</i> | <i>Units</i> |
|-------------|--------------------|------------------------------|-----------------|--------------|
| 167600      | 85505840           | SOCKET PANEL M107            | 1.0             | UN           |
| 167610      | 85505857           | ELECTRIC PANEL HOUSING COVER | 1.0             | UN           |
| 166200      | 85499440           | ELECTRICAL SHAFT D36         | 0.8             | ML           |
| 167710      | 85506053           | PLASTIC PLUG D22             | 1.0             | UN           |
| 167070      | 85506061           | GLAND NUT PG09               | 1.0             | UN           |
| 164360      | 85408680           | GLAND NUT PG36               | 2.0             | UN           |
| 166900      | 85499689           | PIPE UNION ELBOW 90° PG36    | 1.0             | UN           |
| 166210      | 85499697           | PIPE UNION ELBOW 45° PG36    | 1.0             | UN           |

# **SOCKETS ASSEMBLY** **F16125**

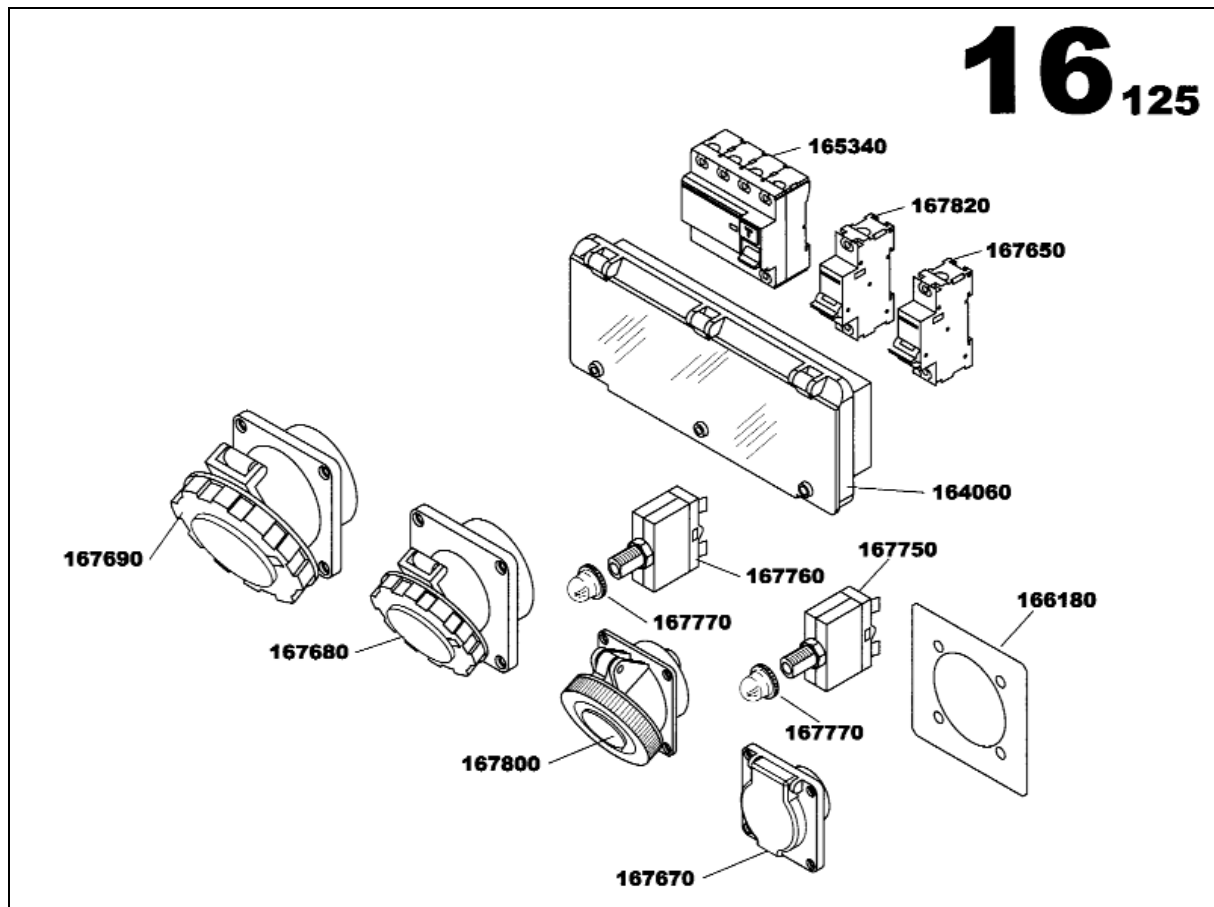


| <i>Item</i> | <i>Part number</i> | <i>Description</i>                       | <i>Quantity</i> | <i>Units</i> |
|-------------|--------------------|--|-----------------|--------------|
| 167750      | 85408748           | COMPACT CIRCUIT BREAKER 1x10A            | 1.0             | UN           |
| 167770      | 85408763           | CIRCUIT BREAKER PROTECTION               | 1.0             | UN           |
| 167760      | 85413169           | COMPACT CIRCUIT BREAKER 1x15A            | 1.0             | UN           |
| 167770      | 85408763           | CIRCUIT BREAKER PROTECTION               | 1.0             | UN           |
| 166180      | 85501542           | SOCKETS ADAPTATION PLATE                 | 2.0             | UN           |
| 167650      | 85506020           | MOULDED CASE CIRCUIT BREAKER 4x32A       | 1.0             | UN           |
| 164060      | 85408284           | CIRCUIT BREAKER SUPPORT PLATE 12 MODULES | 1.0             | UN           |
| 167670      | 85408300           | SOCKET GERMAN 230V 16A 2S+G              | 1.0             | UN           |
| 167680      | 85408318           | EC SOCKET 400V 16A 3S+N+G                | 1.0             | UN           |
| 167690      | 85408326           | EC SOCKET 400V 32A 3S+N+G                | 1.0             | UN           |
| 165340      | 85408771           | DIFFERENTIAL SWITCH L 4P 63A 30mA        | 1.0             | UN           |
| 167800      | 85506103           | SOCKET EC 230V 16A 2S+G                  | 1.0             | UN           |
| 167820      | 85506434           | MOULDED CASE CIRCUIT BREAKER 4x16A       | 1.0             | UN           |



# SOCKETS TYPE 1 OPTION


## SOCKETS ASSEMBLY T1SBL

F16135

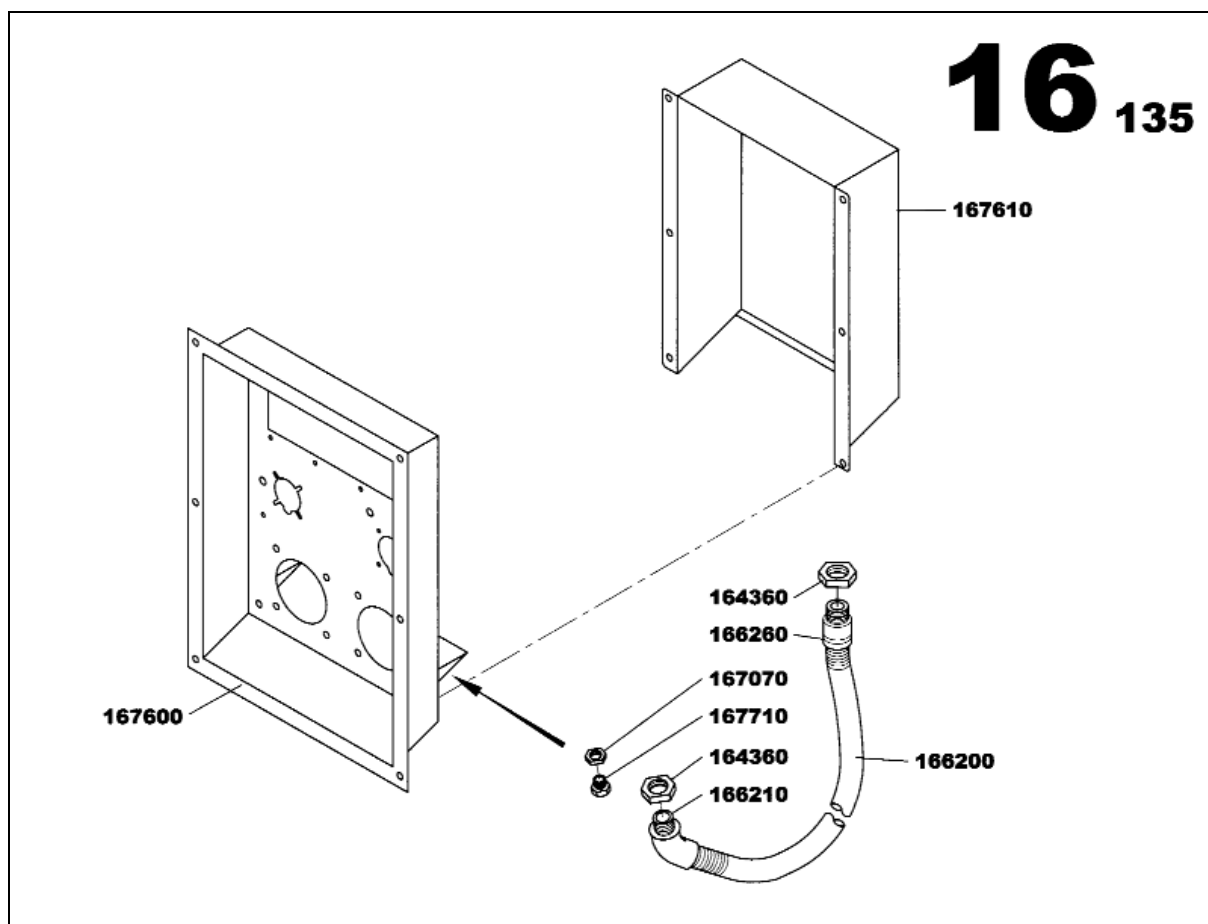

| <i>Item</i> | <i>Part number</i> | <i>Description</i>           | <i>Quantity</i> | <i>Units</i> |
|-------------|--------------------|------------------------------|-----------------|--------------|
| 167600      | 85505840           | SOCKET PANEL M107            | 1.0             | UN           |
| 167610      | 85505857           | ELECTRIC PANEL HOUSING COVER | 1.0             | UN           |
| 166200      | 85499440           | ELECTRICAL SHAFT D36         | 0.8             | ML           |
| 167710      | 85506053           | PLASTIC PLUG D22             | 1.0             | UN           |
| 167070      | 85506061           | GLAND NUT PG09               | 1.0             | UN           |
| 164360      | 85408680           | GLAND NUT PG36               | 2.0             | UN           |
| 166260      | 85501575           | PIPE UNION PG36              | 1.0             | UN           |
| 166210      | 85499697           | PIPE UNION ELBOW 45° PG36    | 1.0             | UN           |

# **SOCKETS ASSEMBLY** **F16125**

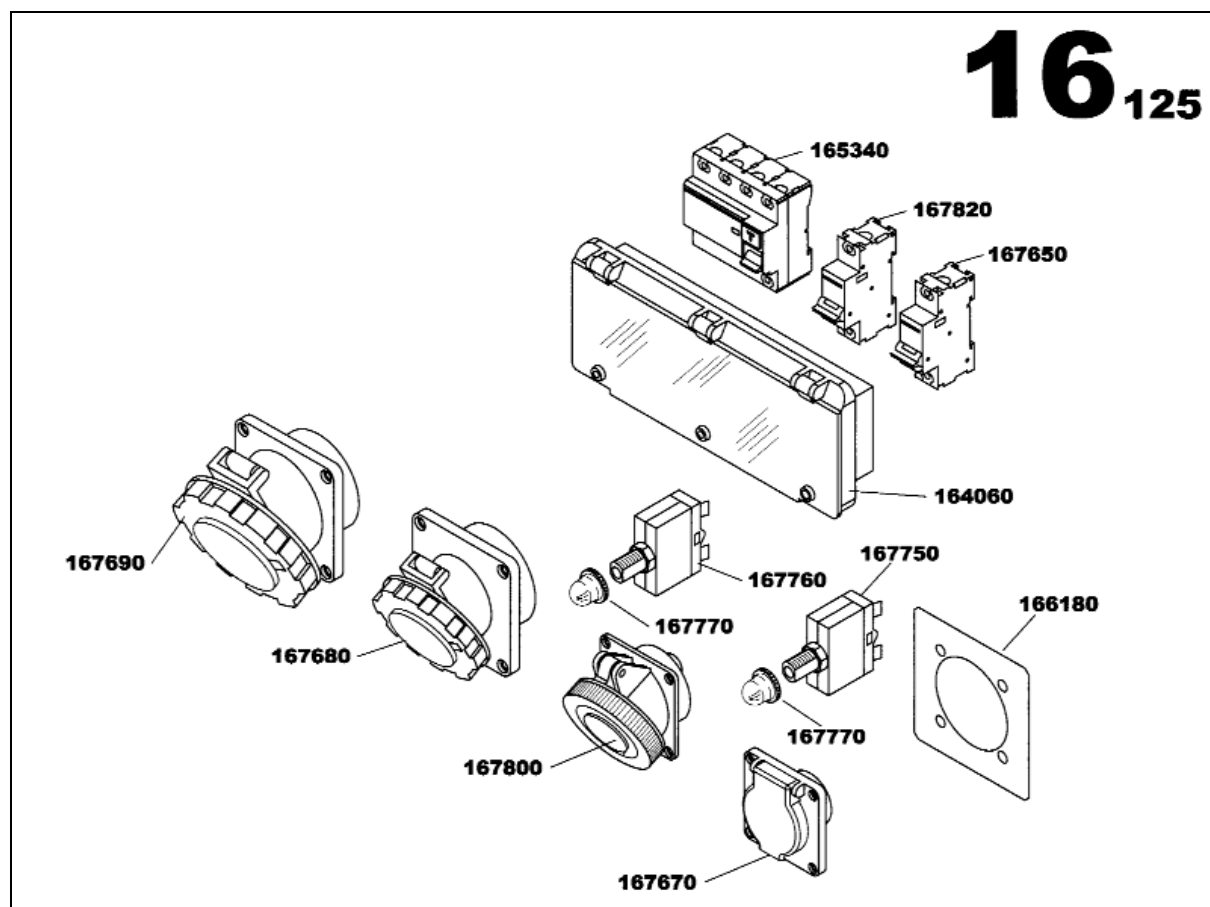


| <i>Item</i> | <i>Part number</i> | <i>Description</i>                       | <i>Quantity</i> | <i>Units</i> |
|-------------|--------------------|--|-----------------|--------------|
| 167750      | 85408748           | COMPACT CIRCUIT BREAKER 1x10A            | 1.0             | UN           |
| 167770      | 85408763           | CIRCUIT BREAKER PROTECTION               | 1.0             | UN           |
| 167760      | 85413169           | COMPACT CIRCUIT BREAKER 1x15A            | 1.0             | UN           |
| 167770      | 85408763           | CIRCUIT BREAKER PROTECTION               | 1.0             | UN           |
| 166180      | 85501542           | SOCKETS ADAPTATION PLATE                 | 2.0             | UN           |
| 167650      | 85506020           | MOULDED CASE CIRCUIT BREAKER 4x32A       | 1.0             | UN           |
| 164060      | 85408284           | CIRCUIT BREAKER SUPPORT PLATE 12 MODULES | 1.0             | UN           |
| 167670      | 85408300           | SOCKET GERMAN 230V 16A 2S+G              | 1.0             | UN           |
| 167680      | 85408318           | EC SOCKET 400V 16A 3S+N+G                | 1.0             | UN           |
| 167690      | 85408326           | EC SOCKET 400V 32A 3S+N+G                | 1.0             | UN           |
| 165340      | 85408771           | DIFFERENTIAL SWITCH L 4P 63A 30mA        | 1.0             | UN           |
| 167800      | 85506103           | SOCKET EC 230V 16A 2S+G                  | 1.0             | UN           |
| 167820      | 85506434           | MOULDED CASE CIRCUIT BREAKER 4x16A       | 1.0             | UN           |

# SOCKETS TYPE 4B OPTION

## SOCKETS ASSEMBLY T4BL

F16139

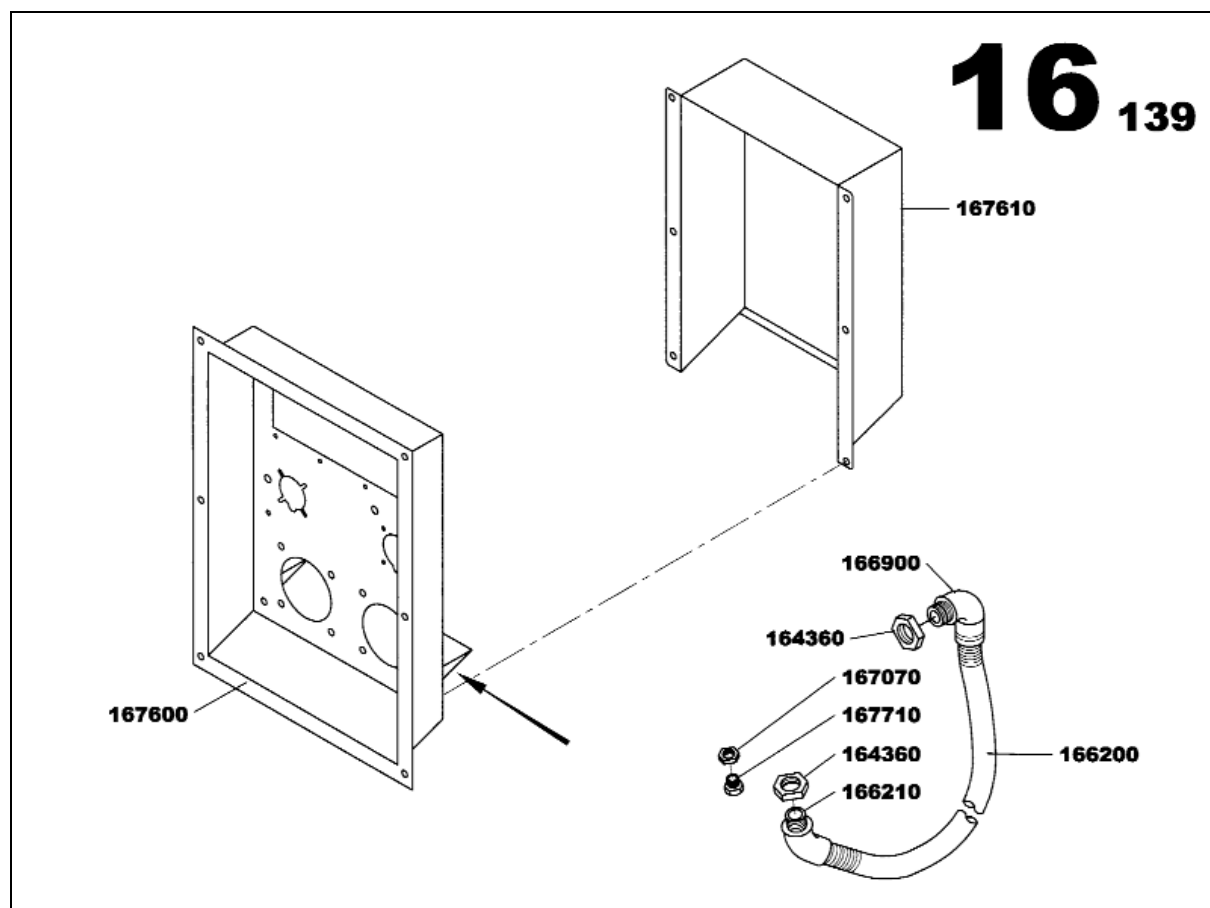


| <i>Item</i> | <i>Part number</i> | <i>Description</i>           | <i>Quantity</i> | <i>Units</i> |
|-------------|--------------------|------------------------------|-----------------|--------------|
| 167600      | 85505840           | SOCKET PANEL M107            | 1.0             | UN           |
| 167610      | 85505857           | ELECTRIC PANEL HOUSING COVER | 1.0             | UN           |
| 166200      | 85499440           | ELECTRICAL SHAFT D36         | 0.8             | ML           |
| 167710      | 85506053           | PLASTIC PLUG D22             | 1.0             | UN           |
| 167070      | 85506061           | GLAND NUT PG09               | 1.0             | UN           |
| 164360      | 85408680           | GLAND NUT PG36               | 2.0             | UN           |
| 166900      | 85499689           | PIPE UNION ELBOW 90° PG36    | 1.0             | UN           |
| 166210      | 85499697           | PIPE UNION ELBOW 45° PG36    | 1.0             | UN           |

## SOCKETS ASSEMBLY

F16131

# 16<sub>131</sub>

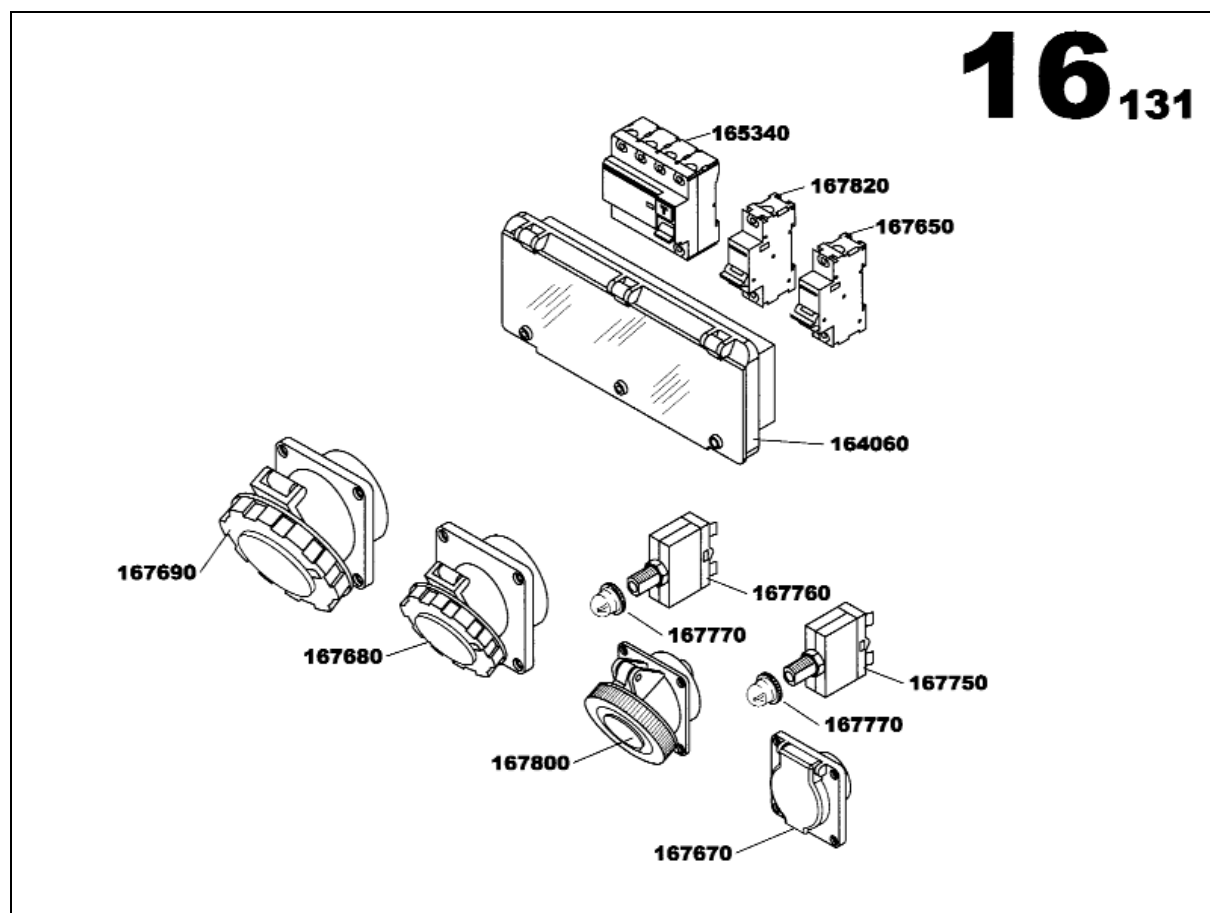


| Item   | Part number | Description                              | Quantity | Units |
|--------|-------------|--|----------|-------|
| 167750 | 85408748    | COMPACT CIRCUIT BREAKER 1x10A            | 1.0      | UN    |
| 167770 | 85408763    | CIRCUIT BREAKER PROTECTION               | 1.0      | UN    |
| 167760 | 85413169    | COMPACT CIRCUIT BREAKER 1x15A            | 1.0      | UN    |
| 167770 | 85408763    | CIRCUIT BREAKER PROTECTION               | 1.0      | UN    |
| 167650 | 85506020    | MOULDED CASE CIRCUIT BREAKER 4x32A       | 1.0      | UN    |
| 164060 | 85408284    | CIRCUIT BREAKER SUPPORT PLATE 12 MODULES | 1.0      | UN    |
| 167670 | 85408300    | SOCKET GERMAN 230V 16A 2S+G              | 1.0      | UN    |
| 167680 | 85408318    | EC SOCKET 400V 16A 3S+N+G                | 1.0      | UN    |
| 167690 | 85408326    | EC SOCKET 400V 32A 3S+N+G                | 1.0      | UN    |
| 165340 | 85408771    | DIFFERENTIAL SWITCH L 4P 63A 30mA        | 1.0      | UN    |
| 167800 | 85506103    | SOCKET EC 230V 16A 2S+G                  | 1.0      | UN    |
| 167820 | 85506434    | MOULDED CASE CIRCUIT BREAKER 4x16A       | 1.0      | UN    |

# SOCKETS TYPE 4 OPTION

## SOCKETS ASSEMBLY T4SBL

F16140

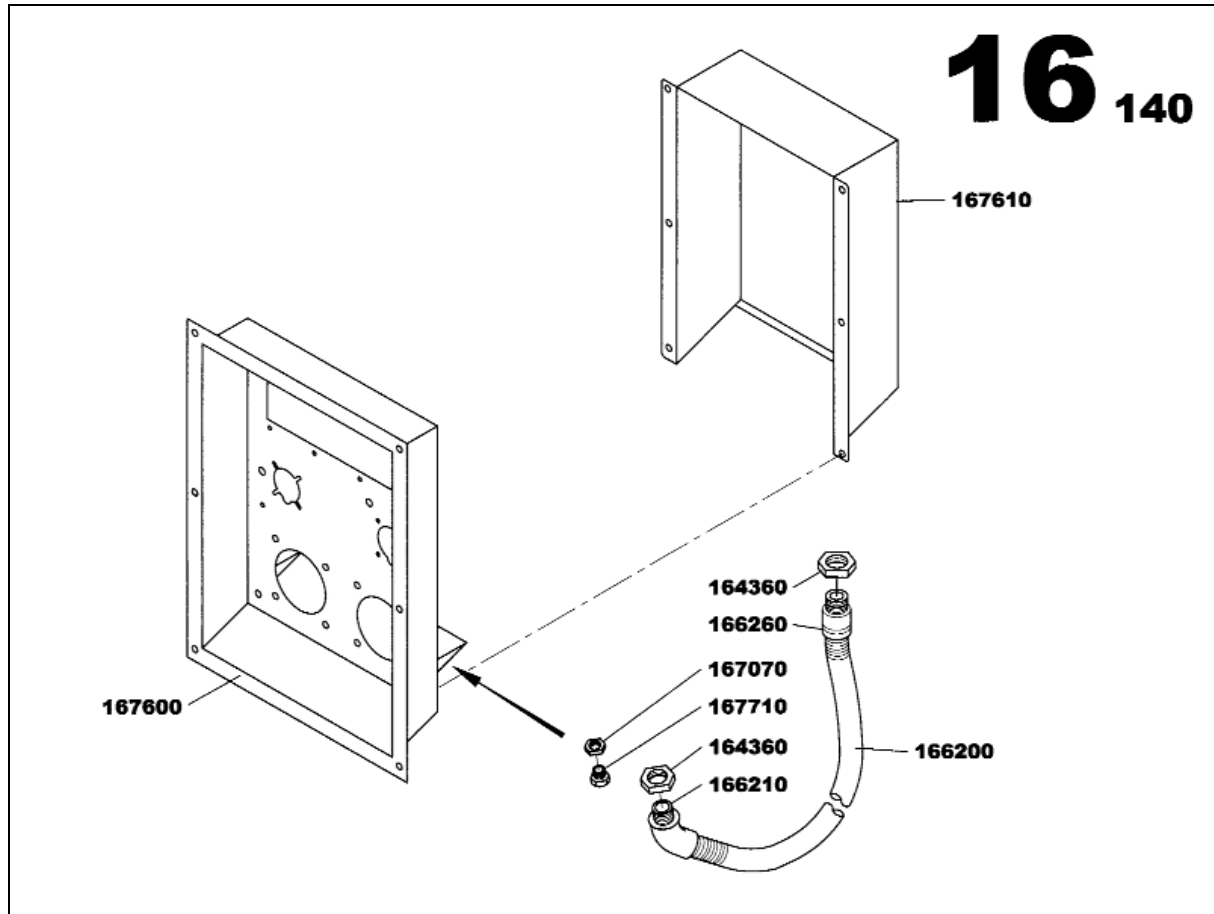


| <i>Item</i> | <i>Part number</i> | <i>Description</i>           | <i>Quantity</i> | <i>Units</i> |
|-------------|--------------------|------------------------------|-----------------|--------------|
| 167600      | 85505840           | SOCKET PANEL M107            | 1.0             | UN           |
| 167610      | 85505857           | ELECTRIC PANEL HOUSING COVER | 1.0             | UN           |
| 166200      | 85499440           | ELECTRICAL SHAFT D36         | 0.8             | ML           |
| 167710      | 85506053           | PLASTIC PLUG D22             | 1.0             | UN           |
| 167070      | 85506061           | GLAND NUT PG09               | 1.0             | UN           |
| 164360      | 85408680           | GLAND NUT PG36               | 2.0             | UN           |
| 166260      | 85501575           | PIPE UNION PG36              | 1.0             | UN           |
| 166210      | 85499697           | PIPE UNION ELBOW 45° PG36    | 1.0             | UN           |

## SOCKETS ASSEMBLY

F16131

**16**<sub>131</sub>

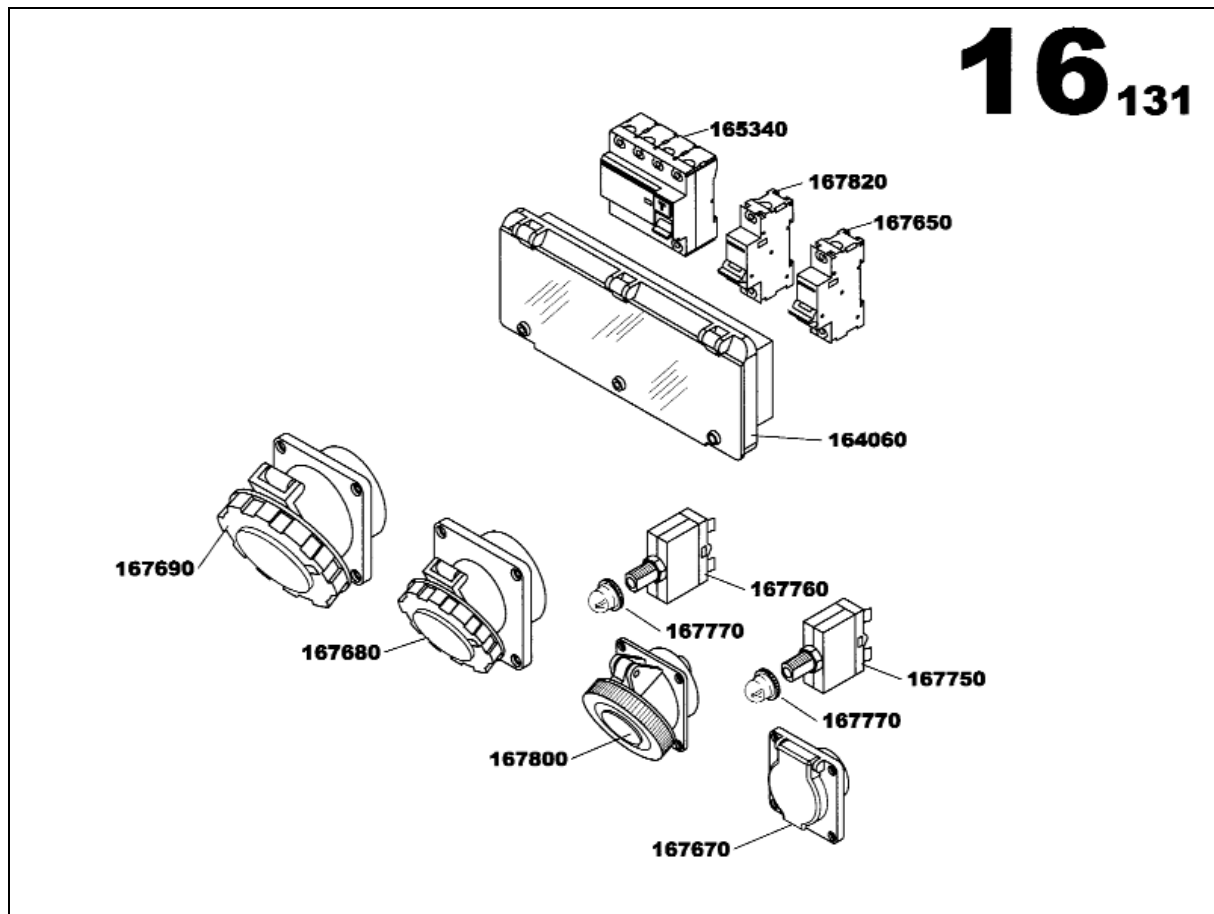


| <i>Item</i> | <i>Part number</i> | <i>Description</i>                       | <i>Quantity</i> | <i>Units</i> |
|-------------|--------------------|--|-----------------|--------------|
| 167750      | 85408748           | COMPACT CIRCUIT BREAKER 1x10A            | 1.0             | UN           |
| 167770      | 85408763           | CIRCUIT BREAKER PROTECTION               | 1.0             | UN           |
| 167760      | 85413169           | COMPACT CIRCUIT BREAKER 1x15A            | 1.0             | UN           |
| 167770      | 85408763           | CIRCUIT BREAKER PROTECTION               | 1.0             | UN           |
| 167650      | 85506020           | MOULDED CASE CIRCUIT BREAKER 4x32A       | 1.0             | UN           |
| 164060      | 85408284           | CIRCUIT BREAKER SUPPORT PLATE 12 MODULES | 1.0             | UN           |
| 167670      | 85408300           | SOCKET GERMAN 230V 16A 2S+G              | 1.0             | UN           |
| 167680      | 85408318           | EC SOCKET 400V 16A 3S+N+G                | 1.0             | UN           |
| 167690      | 85408326           | EC SOCKET 400V 32A 3S+N+G                | 1.0             | UN           |
| 165340      | 85408771           | DIFFERENTIAL SWITCH L 4P 63A 30mA        | 1.0             | UN           |
| 167800      | 85506103           | SOCKET EC 230V 16A 2S+G                  | 1.0             | UN           |
| 167820      | 85506434           | MOULDED CASE CIRCUIT BREAKER 4x16A       | 1.0             | UN           |

# SOCKETS TYPE 5B OPTION

## SOCKETS ASSEMBLY T5BL

F16146

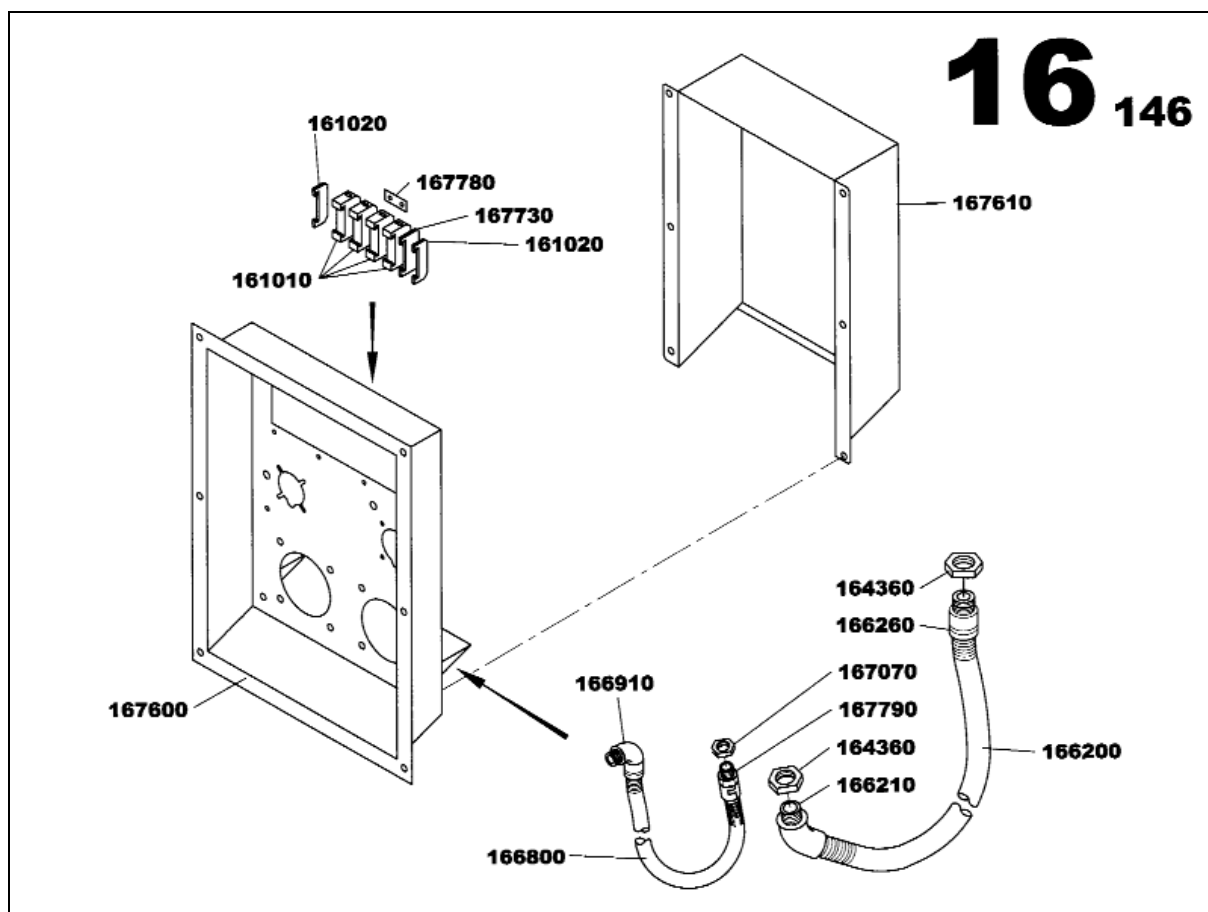


| Item   | Part number | Description                  | Quantity | Units |
|--------|-------------|------------------------------|----------|-------|
| 167600 | 85505840    | SOCKET PANEL M107            | 1.0      | UN    |
| 167610 | 85505857    | ELECTRIC PANEL HOUSING COVER | 1.0      | UN    |
| 166800 | 85499283    | ELECTRICAL SHAFT D10         | 1.5      | ML    |
| 166200 | 85499440    | ELECTRICAL SHAFT D36         | 0.8      | ML    |
| 161010 | 85408375    | TERMINAL BLOCK 1x2.5mm2 GREY | 4.0      | UN    |
| 167070 | 85506061    | GLAND NUT PG09               | 1.0      | UN    |
| 164360 | 85408680    | GLAND NUT PG36               | 2.0      | UN    |
| 161020 | 85408706    | STOP                         | 2.0      | UN    |
| 167730 | 85413466    | PLASTIC COVER TERMINAL BLOCK | 1.0      | UN    |
| 167780 | 85506095    | TERMINAL BLOCK               | 0.4      | UN    |
| 167790 | 85499663    | PIPE UNION PG9               | 1.0      | UN    |
| 166900 | 85499689    | PIPE UNION ELBOW 90° PG36    | 1.0      | UN    |
| 166910 | 85500494    | PIPE UNION ELBOW 90° PG9     | 1.0      | UN    |
| 166210 | 85499697    | PIPE UNION ELBOW 45° PG36    | 1.0      | UN    |

# SOCKETS ASSEMBLY

F16127

**16**<sub>127</sub>

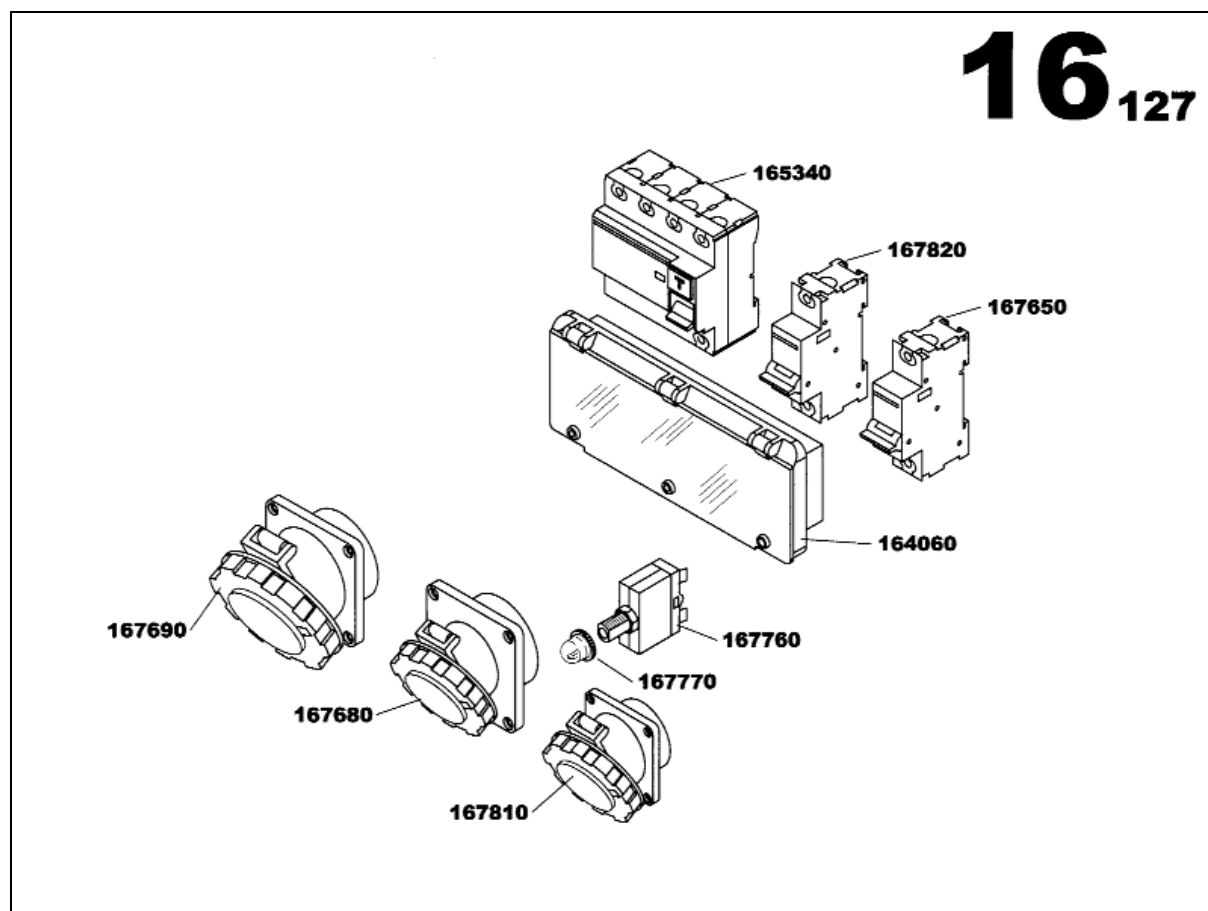


| <i>Item</i> | <i>Part number</i> | <i>Description</i>                       | <i>Quantity</i> | <i>Units</i> |
|-------------|--------------------|--|-----------------|--------------|
| 167760      | 85413169           | COMPACT CIRCUIT BREAKER 1x15A            | 1.0             | UN           |
| 167770      | 85408763           | CIRCUIT BREAKER PROTECTION               | 1.0             | UN           |
| 167650      | 85506020           | MOULDED CASE CIRCUIT BREAKER 4x32A       | 1.0             | UN           |
| 164060      | 85408284           | CIRCUIT BREAKER SUPPORT PLATE 12 MODULES | 1.0             | UN           |
| 167680      | 85408318           | EC SOCKET 400V 16A 3S+N+G                | 1.0             | UN           |
| 167690      | 85408326           | EC SOCKET 400V 32A 3S+N+G                | 1.0             | UN           |
| 165340      | 85408771           | DIFFERENTIAL SWITCH L 4P 63A 30mA        | 1.0             | UN           |
| 167810      | 85506111           | SOCKET EC 110V 16A 2S+G                  | 2.0             | UN           |
| 167820      | 85506434           | MOULDED CASE CIRCUIT BREAKER 4x16A       | 1.0             | UN           |



# SOCKETS TYPE 5 OPTION

## SOCKETS ASSEMBLY T5SBL

F16145

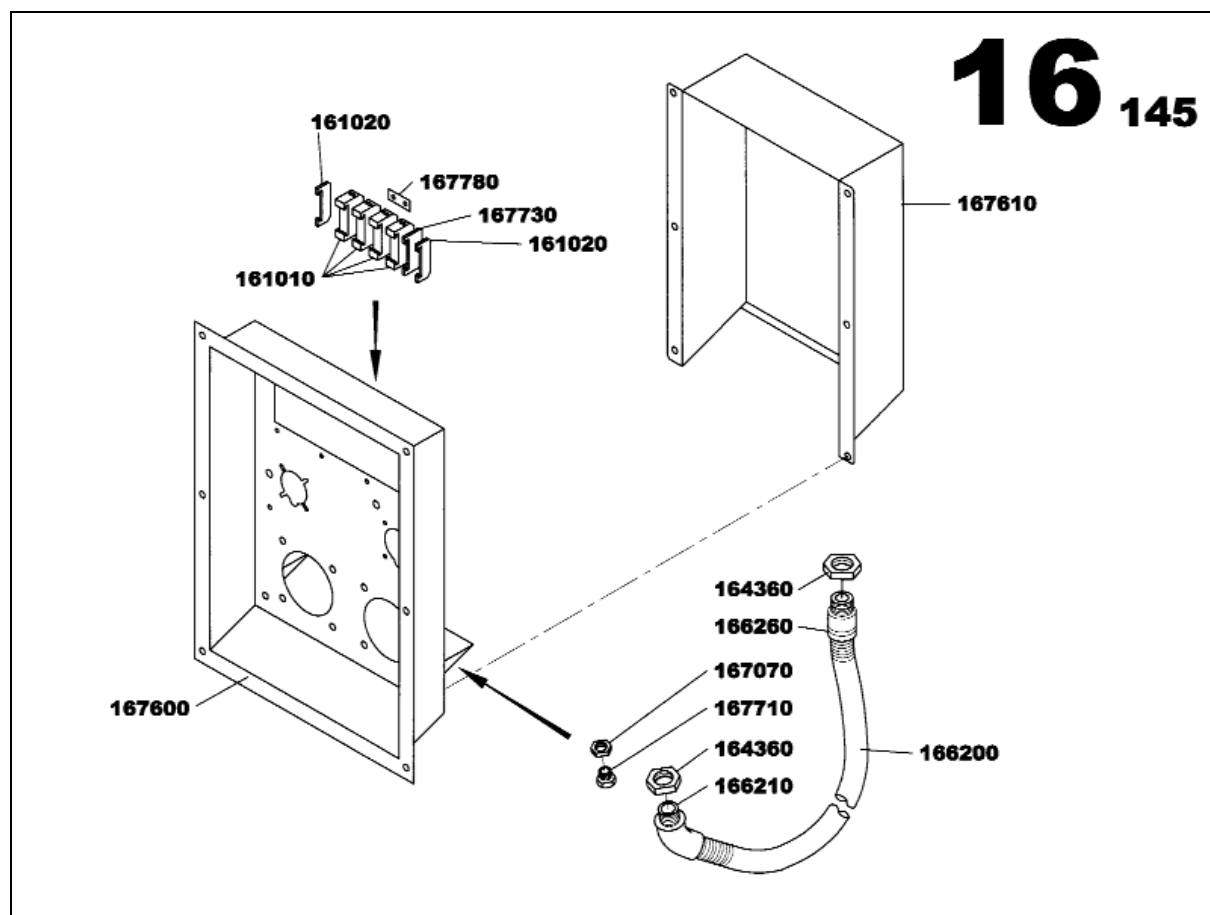


| <i>Item</i> | <i>Part number</i> | <i>Description</i>           | <i>Quantity</i> | <i>Units</i> |
|-------------|--------------------|------------------------------|-----------------|--------------|
| 167600      | 85505840           | SOCKET PANEL M107            | 1.0             | UN           |
| 167610      | 85505857           | ELECTRIC PANEL HOUSING COVER | 1.0             | UN           |
| 166200      | 85499440           | ELECTRICAL SHAFT D36         | 0.8             | ML           |
| 161010      | 85408375           | TERMINAL BLOCK 1x2.5mm2 GREY | 4.0             | UN           |
| 167710      | 85506053           | PLASTIC PLUG D22             | 1.0             | UN           |
| 167070      | 85506061           | GLAND NUT PG09               | 1.0             | UN           |
| 164360      | 85408680           | GLAND NUT PG36               | 2.0             | UN           |
| 161020      | 85408706           | STOP                         | 2.0             | UN           |
| 167730      | 85413466           | PLASTIC COVER TERMINAL BLOCK | 1.0             | UN           |
| 167780      | 85506095           | TERMINAL BLOCK               | 0.4             | UN           |
| 166260      | 85501575           | PIPE UNION PG36              | 1.0             | UN           |
| 166210      | 85499697           | PIPE UNION ELBOW 45° PG36    | 1.0             | UN           |

# SOCKETS ASSEMBLY

F16127

**16**<sub>127</sub>

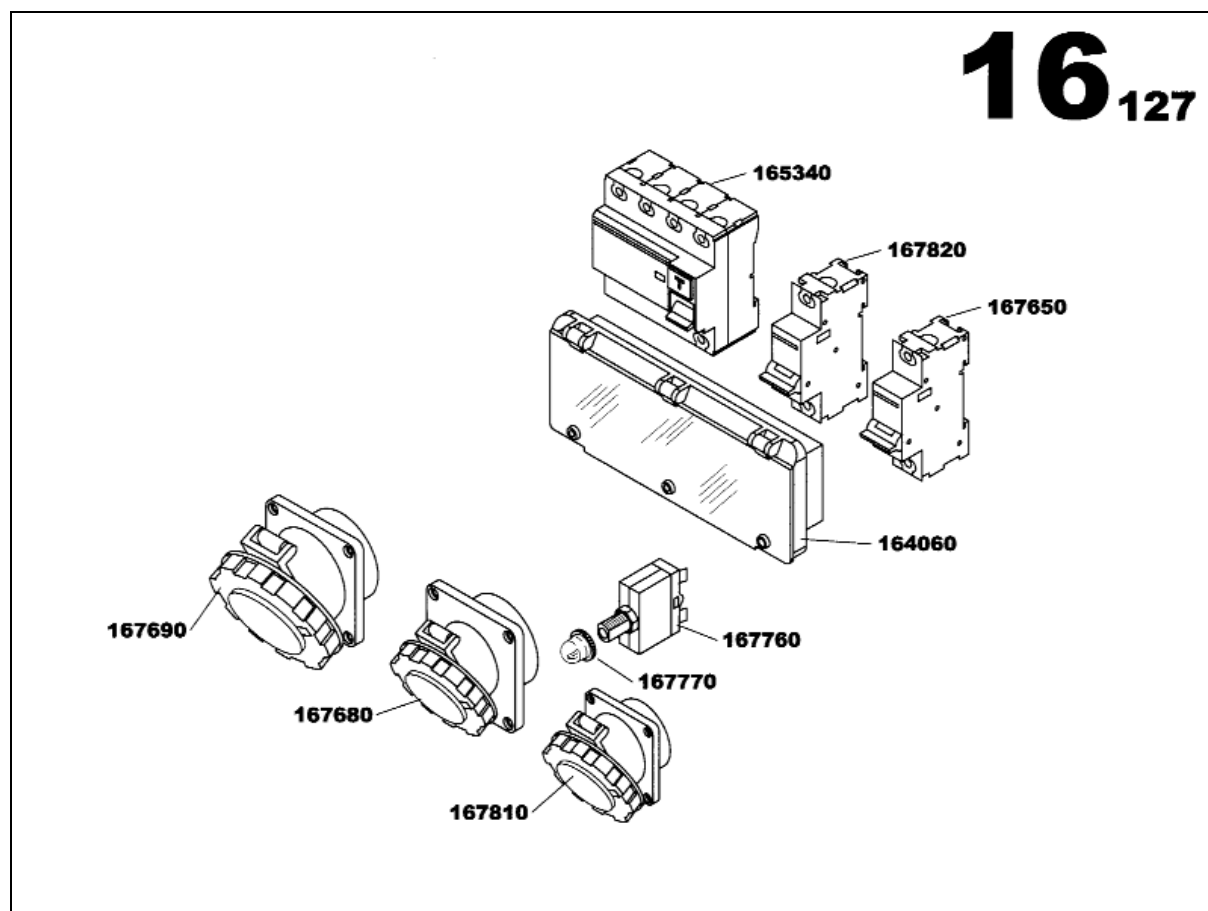


| <i>Item</i> | <i>Part number</i> | <i>Description</i>                       | <i>Quantity</i> | <i>Units</i> |
|-------------|--------------------|--|-----------------|--------------|
| 167760      | 85413169           | COMPACT CIRCUIT BREAKER 1x15A            | 1.0             | UN           |
| 167770      | 85408763           | CIRCUIT BREAKER PROTECTION               | 1.0             | UN           |
| 167650      | 85506020           | MOULDED CASE CIRCUIT BREAKER 4x32A       | 1.0             | UN           |
| 164060      | 85408284           | CIRCUIT BREAKER SUPPORT PLATE 12 MODULES | 1.0             | UN           |
| 167680      | 85408318           | EC SOCKET 400V 16A 3S+N+G                | 1.0             | UN           |
| 167690      | 85408326           | EC SOCKET 400V 32A 3S+N+G                | 1.0             | UN           |
| 165340      | 85408771           | DIFFERENTIAL SWITCH L 4P 63A 30mA        | 1.0             | UN           |
| 167810      | 85506111           | SOCKET EC 110V 16A 2S+G                  | 2.0             | UN           |
| 167820      | 85506434           | MOULDED CASE CIRCUIT BREAKER 4x16A       | 1.0             | UN           |

# SOCKETS TYPE 8B OPTION


## SOCKETS ASSEMBLY T8BL

F16151

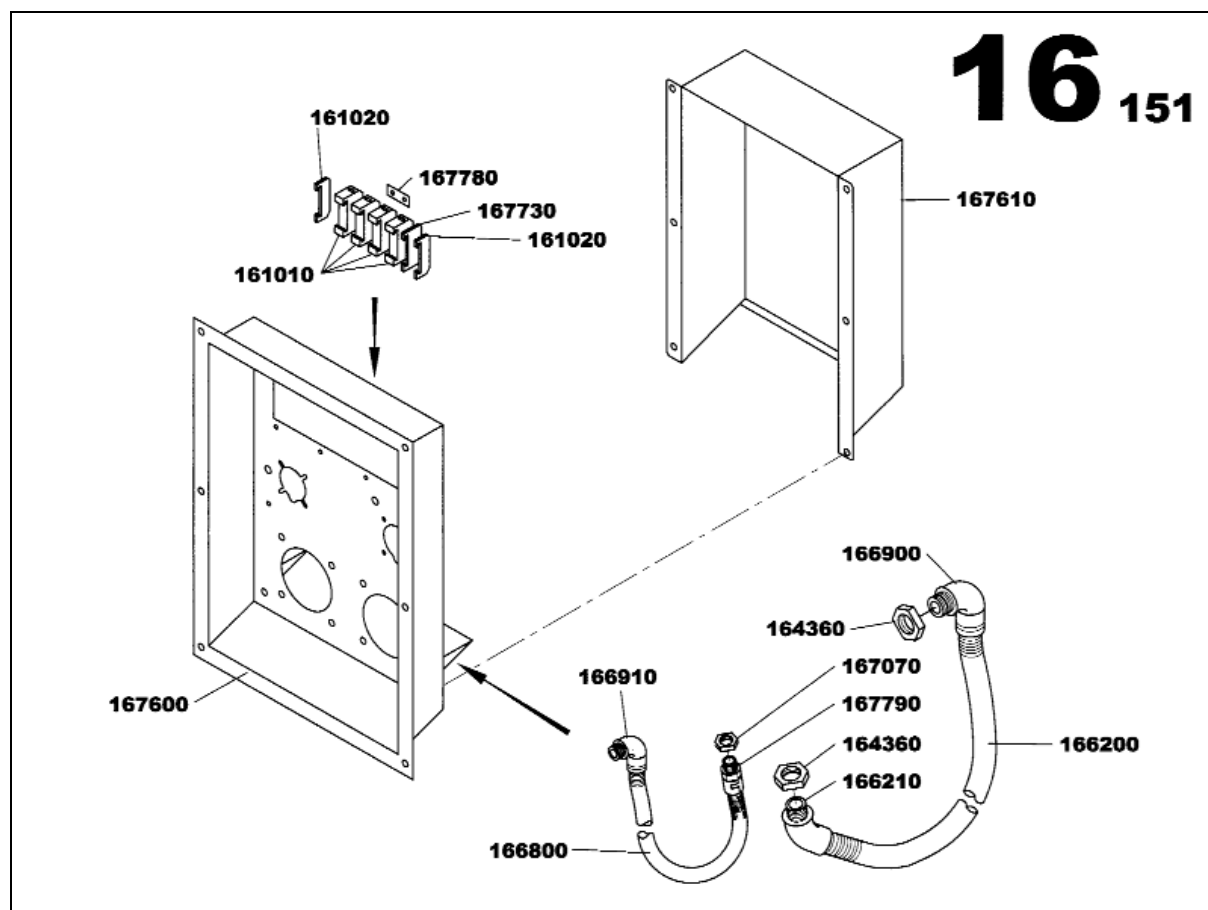

| Item   | Part number | Description                  | Quantity | Units |
|--------|-------------|------------------------------|----------|-------|
| 167600 | 85505840    | SOCKET PANEL M107            | 1.0      | UN    |
| 167610 | 85505857    | ELECTRIC PANEL HOUSING COVER | 1.0      | UN    |
| 166800 | 85499283    | ELECTRICAL SHAFT D10         | 1.5      | ML    |
| 166200 | 85499440    | ELECTRICAL SHAFT D36         | 0.8      | ML    |
| 161010 | 85408375    | TERMINAL BLOCK 1x2.5mm2 GREY | 4.0      | UN    |
| 167070 | 85506061    | GLAND NUT PG09               | 1.0      | UN    |
| 164360 | 85408680    | GLAND NUT PG36               | 2.0      | UN    |
| 161020 | 85408706    | STOP                         | 2.0      | UN    |
| 167730 | 85413466    | PLASTIC COVER TERMINAL BLOCK | 1.0      | UN    |
| 167780 | 85506095    | TERMINAL BLOCK               | 0.4      | UN    |
| 167790 | 85499663    | PIPE UNION PG9               | 1.0      | UN    |
| 166900 | 85499689    | PIPE UNION ELBOW 90° PG36    | 1.0      | UN    |
| 166910 | 85500494    | PIPE UNION ELBOW 90° PG9     | 1.0      | UN    |
| 166210 | 85499697    | PIPE UNION ELBOW 45° PG36    | 1.0      | UN    |

# SOCKETS ASSEMBLY F16129

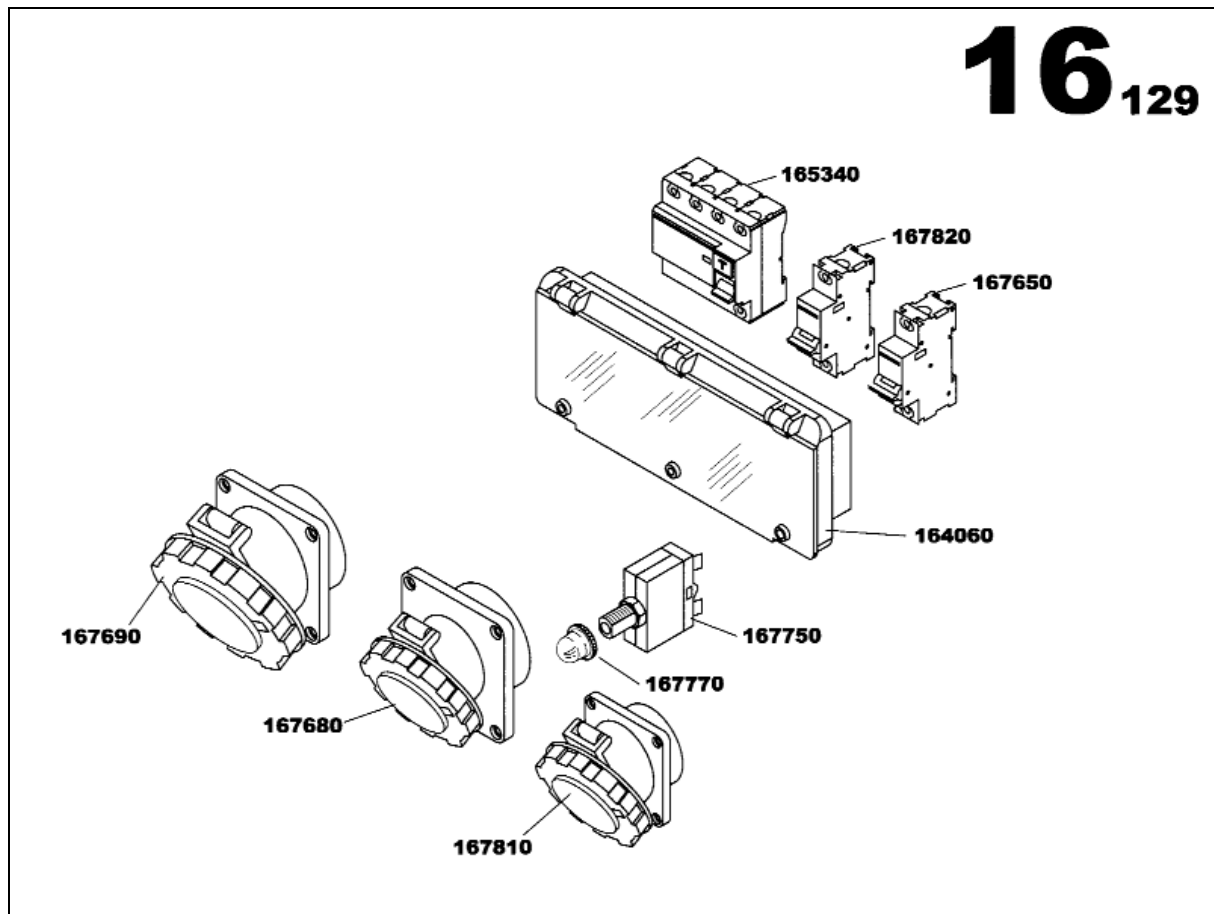


| Item   | Part number | Description                              | Quantity | Units |
|--------|-------------|--|----------|-------|
| 167750 | 85408748    | COMPACT CIRCUIT BREAKER 1x10A            | 1.0      | UN    |
| 167770 | 85408763    | CIRCUIT BREAKER PROTECTION               | 1.0      | UN    |
| 167650 | 85506020    | MOULDED CASE CIRCUIT BREAKER 4x32A       | 1.0      | UN    |
| 164060 | 85408284    | CIRCUIT BREAKER SUPPORT PLATE 12 MODULES | 1.0      | UN    |
| 167680 | 85408318    | EC SOCKET 400V 16A 3S+N+G                | 1.0      | UN    |
| 167690 | 85408326    | EC SOCKET 400V 32A 3S+N+G                | 1.0      | UN    |
| 165340 | 85408771    | DIFFERENTIAL SWITCH L 4P 63A 30mA        | 1.0      | UN    |
| 167810 | 85506111    | SOCKET EC 110V 16A 2S+G                  | 2.0      | UN    |
| 167820 | 85506434    | MOULDED CASE CIRCUIT BREAKER 4x16A       | 1.0      | UN    |

# SOCKETS TYPE 8 OPTION

## SOCKETS ASSEMBLY T8SBL

F16152

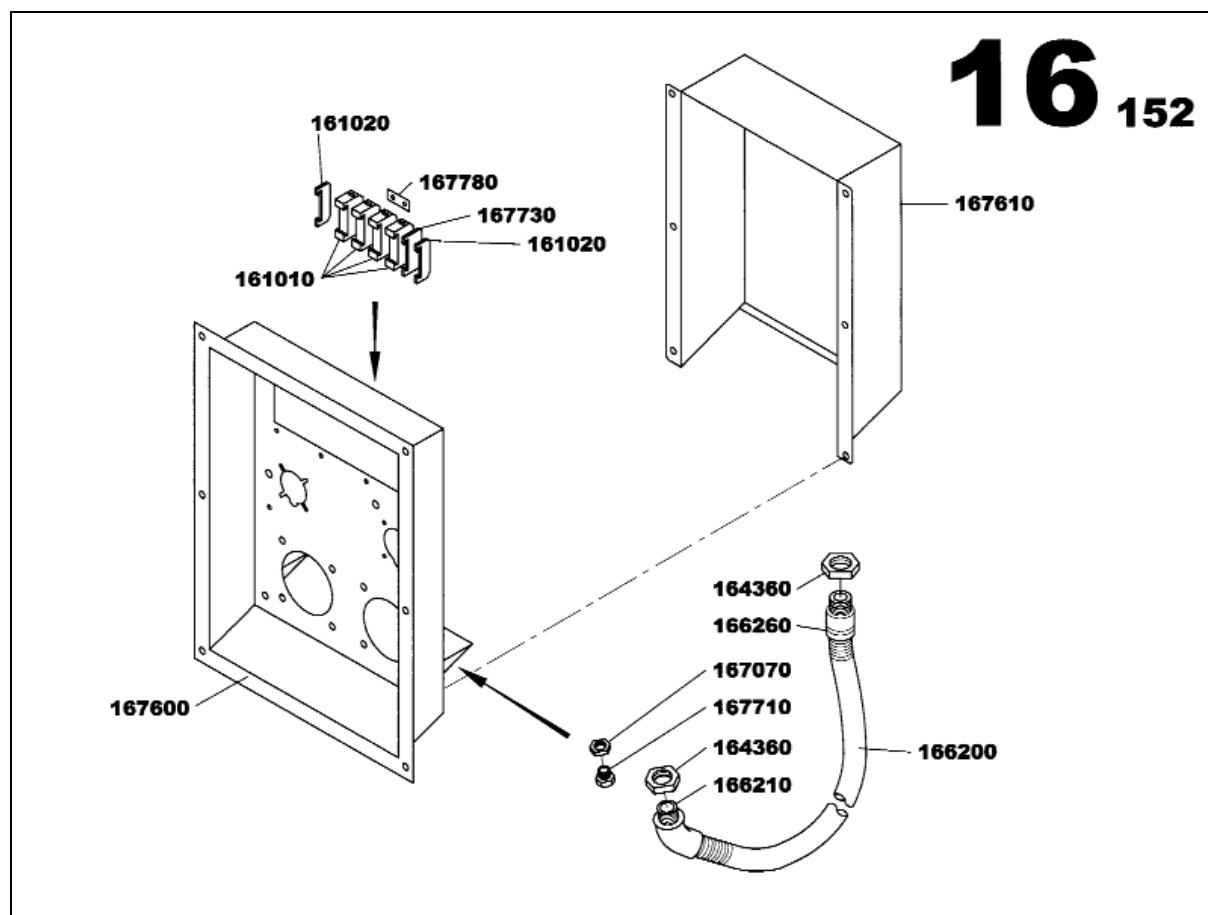


| <i>Item</i> | <i>Part number</i> | <i>Description</i>           | <i>Quantity</i> | <i>Units</i> |
|-------------|--------------------|------------------------------|-----------------|--------------|
| 167600      | 85505840           | SOCKET PANEL M107            | 1.0             | UN           |
| 167610      | 85505857           | ELECTRIC PANEL HOUSING COVER | 1.0             | UN           |
| 166200      | 85499440           | ELECTRICAL SHAFT D36         | 0.8             | ML           |
| 161010      | 85408375           | TERMINAL BLOCK 1x2.5mm2 GREY | 4.0             | UN           |
| 167710      | 85506053           | PLASTIC PLUG D22             | 1.0             | UN           |
| 167070      | 85506061           | GLAND NUT PG09               | 1.0             | UN           |
| 164360      | 85408680           | GLAND NUT PG36               | 2.0             | UN           |
| 161020      | 85408706           | STOP                         | 2.0             | UN           |
| 167730      | 85413466           | PLASTIC COVER TERMINAL BLOCK | 1.0             | UN           |
| 167780      | 85506095           | TERMINAL BLOCK               | 0.4             | UN           |
| 166260      | 85501575           | PIPE UNION PG36              | 1.0             | UN           |
| 166210      | 85499697           | PIPE UNION ELBOW 45° PG36    | 1.0             | UN           |

## SOCKETS ASSEMBLY

F16129

# 16<sub>129</sub>

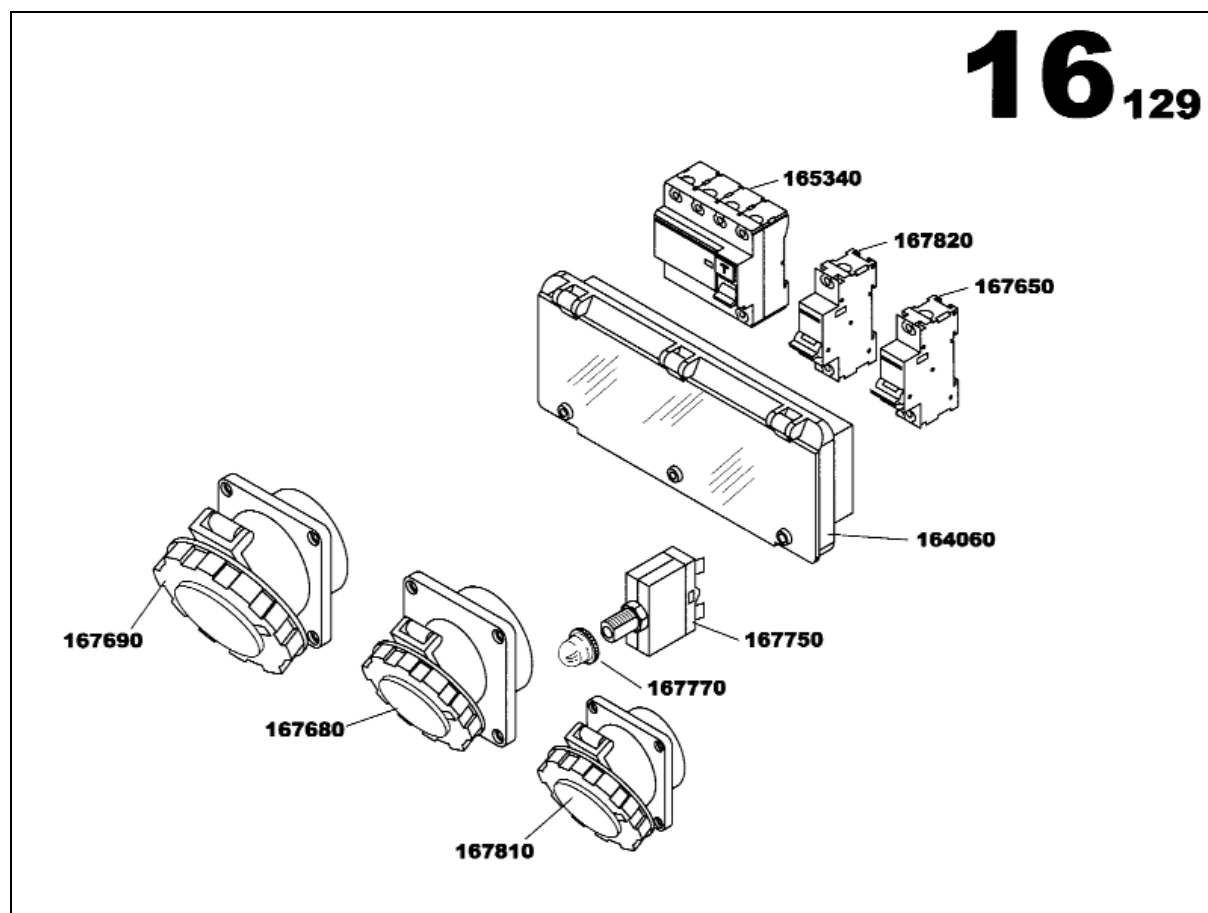


| <i>Item</i> | <i>Part number</i> | <i>Description</i>                       | <i>Quantity</i> | <i>Units</i> |
|-------------|--------------------|--|-----------------|--------------|
| 167750      | 85408748           | COMPACT CIRCUIT BREAKER 1x10A            | 1.0             | UN           |
| 167770      | 85408763           | CIRCUIT BREAKER PROTECTION               | 1.0             | UN           |
| 167650      | 85506020           | MOULDED CASE CIRCUIT BREAKER 4x32A       | 1.0             | UN           |
| 164060      | 85408284           | CIRCUIT BREAKER SUPPORT PLATE 12 MODULES | 1.0             | UN           |
| 167680      | 85408318           | EC SOCKET 400V 16A 3S+N+G                | 1.0             | UN           |
| 167690      | 85408326           | EC SOCKET 400V 32A 3S+N+G                | 1.0             | UN           |
| 165340      | 85408771           | DIFFERENTIAL SWITCH L 4P 63A 30mA        | 1.0             | UN           |
| 167810      | 85506111           | SOCKET EC 110V 16A 2S+G                  | 2.0             | UN           |
| 167820      | 85506434           | MOULDED CASE CIRCUIT BREAKER 4x16A       | 1.0             | UN           |

# ELECTRONIC REGULATION OPTION


## ELECTRONIC REGULATION ASSEMBLY

F06005

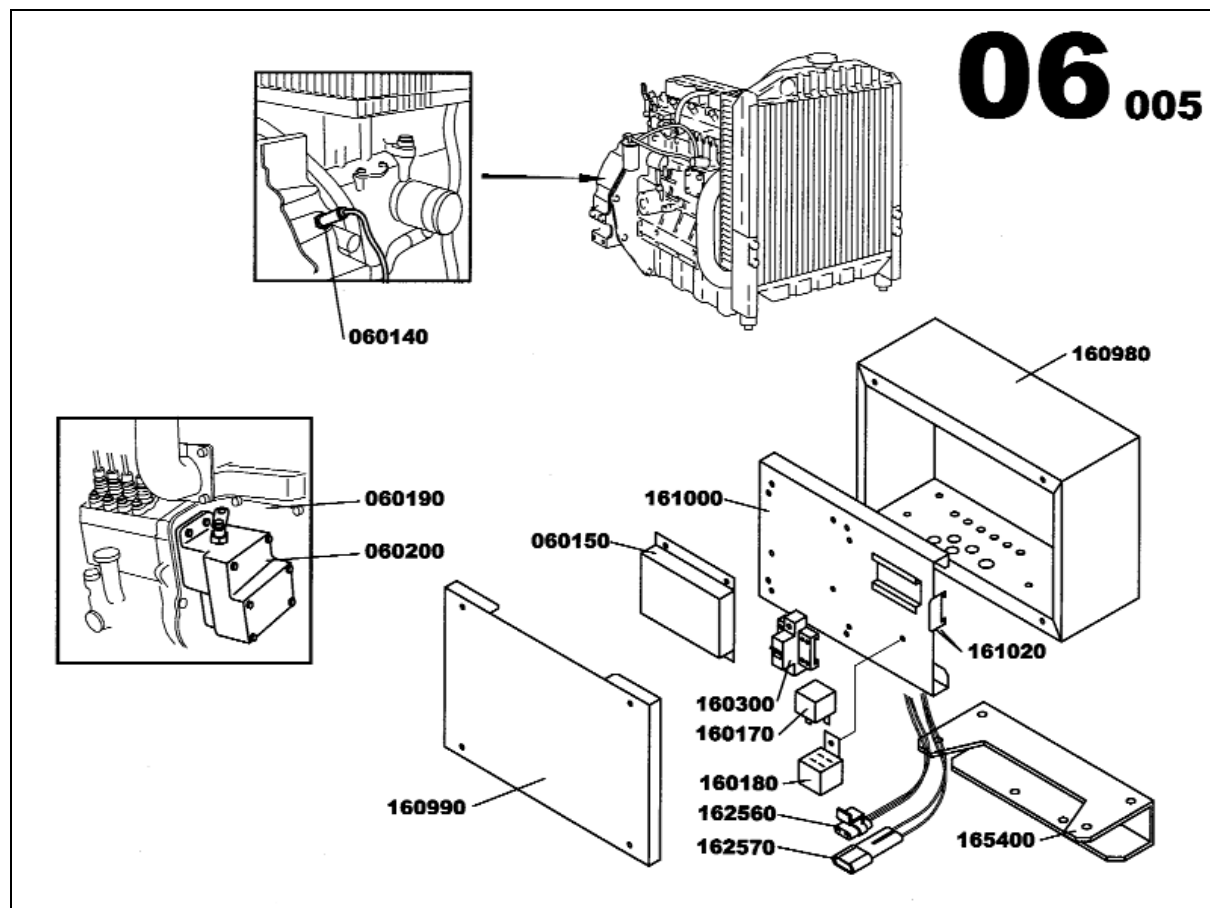

| Item   | Part number | Description                          | Quantity | Units |
|--------|-------------|--------------------------------------|----------|-------|
| 060140 | 85412773    | MAGNETIC SPEED SENSOR L80 5/8UNF     | 1.0      | UN    |
| 060150 | 85415784    | ELECTRONIC GOVERNOR 12/24VCC         | 1.0      | UN    |
| 060190 | 85412427    | ELECTRONIC ACTUATOR                  | 1.0      | UN    |
| 060200 | 85413763    | FITTING KIT S4Q/S4S MITSU PUMP       | 1.0      | UN    |
| 160980 | 85407237    | ELECTRONIC REGULATION HOUSING        | 1.0      | UN    |
| 160990 | 85407245    | HOUSING ELECTRONIC REGULATION        | 1.0      | UN    |
| 161000 | 85407336    | ELECTRONIC REGULATOR BRACKET         | 1.0      | UN    |
| 161020 | 85408706    | STOP                                 | 1.0      | UN    |
| 160170 | 85408896    | RELAY 12V 20/30A                     | 1.0      | UN    |
| 160180 | 85408912    | AUTOMOBILE RELAY BASE                | 1.0      | UN    |
| 160300 | 85408920    | MOULDED CASE CIRCUIT BREAKER 1x16A   | 1.0      | UN    |
| 162560 | 85412989    | 2 POLE CONNECTOR                     | 1.0      | UN    |
| 162570 | 85412997    | 2 POLE CONNECTOR                     | 1.0      | UN    |
| 165400 | 85415925    | ELECTRONIC REGULATOR HOUSING BRACKET | 1.0      | UN    |

# CONTROL PANEL OPTION SPEED POTENTIOMETER ASSEMBLY F16119

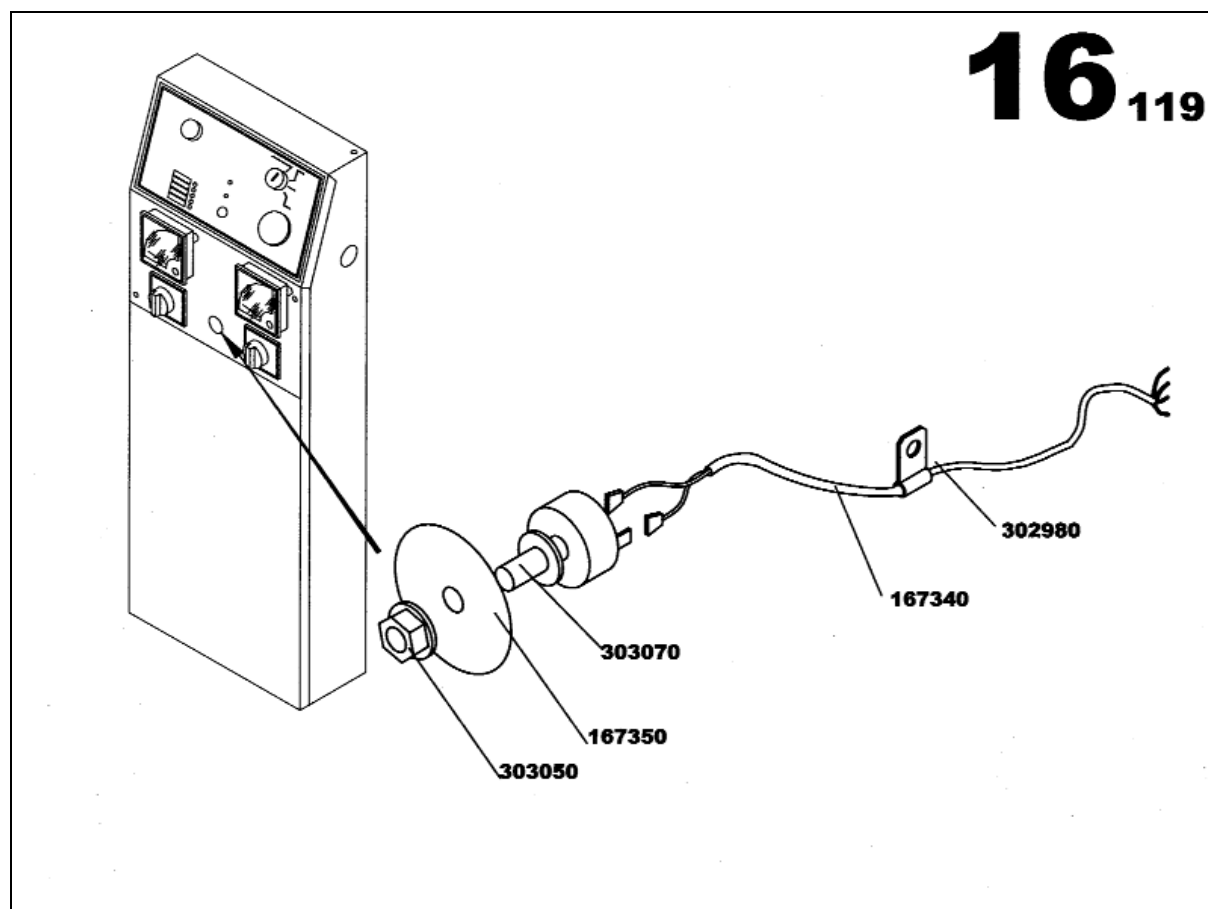

| <i>Item</i> | <i>Part number</i> | <i>Description</i>                   | <i>Quantity</i> | <i>Units</i> |
|-------------|--------------------|--------------------------------------|-----------------|--------------|
| 302980      | 85504207           | CLAMP D4.7                           | 1.0             | UN           |
| 303050      | 85504215           | LOCK AXE SYSTEM                      | 1.0             | UN           |
| 167340      | 85505709           | WIRING LOOM M150 SPEED POTENTIOMETER | 1.0             | UN           |
| 303070      | 85504223           | POTENTIOMETER 4.7kOHMS               | 1.0             | UN           |
| 167350      | 85505717           | STICKER VOLTAGE ADJUST               | 1.0             | UN           |







# Users guide and maintenance manual

## Leroy Somer Alternators LSA 42.2 - 2 & 4 Pole

Réf. constructeur : 3433 GB - 4.33/a  
- 01.01

Réf. GPAO : 33522019901

# LSA 42.2 - 2 & 4 POLE ALTERNATORS

This manual concerns the alternator which you have just purchased.

The latest addition to a whole new generation of alternators, this range benefits from the experience of the leading manufacturer worldwide, using advanced technology and incorporating strict quality control.

## SAFETY MEASURES

Before using your machine for the first time, it is important to read the whole of this installation and maintenance manual.

All necessary operations and interventions on this machine must be performed by a qualified technician.

Our technical support service will be pleased to provide any additional information you may require.

The various operations described in this manual are accompanied by recommendations or symbols to alert the user to potential risks of accidents. It is vital that you understand and take notice of the following warning symbols.

### WARNING

Warning symbol for an operation capable of damaging or destroying the machine or surrounding equipment.



Warning symbol for general danger to personnel.




Warning symbol for electrical danger to personnel.

Note : LEROY-SOMER reserves the right to modify the characteristics of its products at any time in order to incorporate the latest technological developments. The information contained in this document may therefore be changed without notice.

We wish to draw your attention to the contents of this maintenance manual. By following certain important points during installation, use and servicing of your alternator, you can look forward to many years of trouble-free operation.

## WARNING SYMBOLS

A set of self-adhesive stickers depicting the various warning symbols is included with this maintenance manual. They should be positioned as shown in the drawing below once the machine has been fully installed.

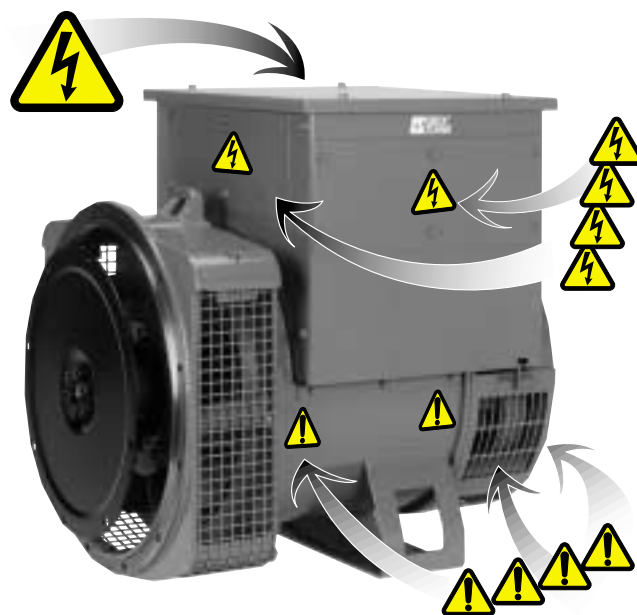

Copyright 2001 : MOTEURS LEROY-SOMER

This document is the property of :  
MOTEURS LEROY-SOMER

It may not be reproduced in any form without prior authorization.

All brands and models have been registered and patents applied for.

# LSA 42.2 - 2 & 4 POLE

## ALTERNATORS

### CONTENTS

#### 1 - RECEIPT

|   |   |
|---|---|
| 1.1 - Standards and safety measures ..... | 4 |
| 1.2 - Checks .....                        | 4 |
| 1.3 - Identification .....                | 4 |
| 1.4 - Storage .....                       | 4 |

#### 2 - TECHNICAL CHARACTERISTICS

|   |   |
|---|---|
| 2.1 - Electrical characteristics .....    | 5 |
| 2.2 - Mechanical characteristics .....    | 5 |
| 2.3 - SHUNT field excitation system ..... | 6 |
| 2.4 - AREP field excitation system .....  | 7 |

#### 3 - INSTALLATION - COMMISSIONING

|   |    |
|---|----|
| 3.1 - Assembly .....                      | 9  |
| 3.2 - Inspection prior to first use ..... | 9  |
| 3.3 - Electrical diagram .....            | 10 |
| 3.4 - Commissioning .....                 | 12 |
| 3.5 - Setting up .....                    | 12 |

#### 4 - SERVICING - MAINTENANCE

|                                     |    |
|-------------------------------------|----|
| 4.1 - Safety measures .....         | 15 |
| 4.2 - Regular maintenance .....     | 15 |
| 4.3 - Fault detection .....         | 15 |
| 4.4 - Mechanical defects .....      | 16 |
| 4.5 - Electrical faults .....       | 16 |
| 4.6 - Dismantling, reassembly ..... | 18 |
| 4.7 - Characteristics table .....   | 20 |

#### 5 - SPARE PARTS

|                                       |    |
|---------------------------------------|----|
| 5.1 - First maintenance parts .....   | 21 |
| 5.2 - Description of bearings .....   | 21 |
| 5.3 - Technical support service ..... | 21 |
| 5.4 - Exploded view, parts list ..... | 22 |

# LSA 42.2 - 2 & 4 POLE ALTERNATORS RECEIPT

## 1 - RECEIPT

### 1.1 - Standards and safety measures

Our alternators comply with most international standards and are compatible with :

- the recommendations of the

**International Electrotechnical Commission**

IEC 34-1, (EN 60034).

- the recommendations of the

**International Standards Organisation ISO 8528.**

- the European Community directive 89/336/EEC on Electromagnetic Compatibility (EMC).

- **the European Community directives 73/23/EEC and 93/68/EEC (Low Voltage Directive).**

They are CE marked with regard to the LVD (Low Voltage Directive) in their role as a machine component. A declaration of incorporation can be supplied on request.

Before using your generator for the first time, read carefully the contents of this installation and maintenance manual, supplied with the machine. All operations performed on the generator should be undertaken by qualified personnel with specialist training in the commissioning, servicing and maintenance of electrical and mechanical machinery. This maintenance manual should be retained for the whole of the machine's life and be handed over with the contractual file. The various operations described in this manual are accompanied by recommendations or symbols to alert the user to potential risks of accidents. It is vital that you understand and take notice of the different warning symbols.

### 1.2 - Inspection

On receipt of your alternator, check that it has not suffered any damage in transit. If there are obvious signs of knocks, contact the transporter (you may be able to claim on their insurance) and after a visual check, turn the machine by hand to detect any malfunction.

### 1.3 - Identification

The alternator is identified by means of a nameplate fixed on the frame.

Make sure that the nameplate on the machine conforms to your order.

The machine name is defined according to various criteria (see below).

Example of description for : **LSA 42.2 S4 J6/4 -**

- LSA : name used in the PARTNER range
- M : Marine / C : Cogeneration / T : Telecommunications.
- 42.2 : machine type
- S4 : model
- J : field excitation system  
(C:AREP / J:SHUNT / E:COMPOUND)
- 6/4 : winding number / number of poles.

#### 1.3.1 - Nameplate

So that you can identify your machine quickly and accurately, we suggest you fill in its specifications on the nameplate below.


### 1.4 - Storage

Prior to commissioning, machines should be stored :

- Away from humidity : in conditions of relative humidity of more than 90%, the machine insulation can drop very rapidly, to just above zero at around 100%; monitor the state of the anti-rust protection on unpainted parts.

For storage over an extended period, the machine can be placed in a sealed enclosure (heatshrunk plastic for example) with dehydrating sachets inside, away from significant and frequent variations in temperature to avoid the risk of condensation during storage.

- If the area is affected by vibration, try to reduce the effect of these vibrations by placing the generator on a damper support (rubber disc or similar) and turn the rotor a fraction of a turn once a fortnight to avoid marking the bearing rings.

| LEROY-SOMER  |   | ALTERNATEURS PARTNER ALTERNATORS                              |    |
|--|---|---|----|
| LSA  |   | Date  |    |
| N°   |   |   | Hz |
| Min <sup>-1</sup> /R.P.M.  |   | Protection  |    |
| Cos φ /P.F.  |   | Cl. ther. / Th. class   |    |
| Régulateur/A.V.R.  |   |   |    |
| Altit. ≤   | m | Masse / Weight  |    |
| Rlt AV/D.E bearing   |   |   |    |
| Rlt AR/N.D.E bearing   |   |   |    |
| Graisse / Grease   |   |   |    |
| Valeurs excit / Excit. values  |   |   |    |
| en charge / full load  |   |   |    |
| à vide / at no load  |   |   |    |
| <b>PUISSANCE / RATING</b><br>Tension Voltage <input type="text"/> <input type="text"/> <input type="text"/> V<br><input type="text"/> <input type="text"/> <input type="text"/> Ph.<br>Connex. <input type="text"/> <input type="text"/> <input type="text"/><br>Continue <input type="text"/> <input type="text"/> <input type="text"/> kVA<br>Continuous <input type="text"/> <input type="text"/> <input type="text"/> kW<br>40°C <input type="text"/> <input type="text"/> <input type="text"/> A<br>Secours <input type="text"/> <input type="text"/> <input type="text"/> kVA<br>Std by <input type="text"/> <input type="text"/> <input type="text"/> kW<br>27°C <input type="text"/> <input type="text"/> <input type="text"/> A |   | Made by Leroy Somer - 1 024 930/b                             |    |
|  LR 0021  |   | Conforme à C.E.I 34-1 (1994). According to I.E.C 34-1 (1994). |    |


# LSA 42.2 - 2 & 4 POLE ALTERNATORS

## TECHNICAL CHARACTERISTICS

## 2 - TECHNICAL CHARACTERISTICS

### 2.1 - Electrical characteristics

The PARTNER LSA 42.2 alternator is a machine without sliprings and revolving field brushes, wound as "2/3 pitch", 12-wire, with class H insulation and a field excitation system available in either "SHUNT" or "AREP" version (see sections 2.3, 2.4). Interference suppression conforms with standard EN 55011, group 1, class B.

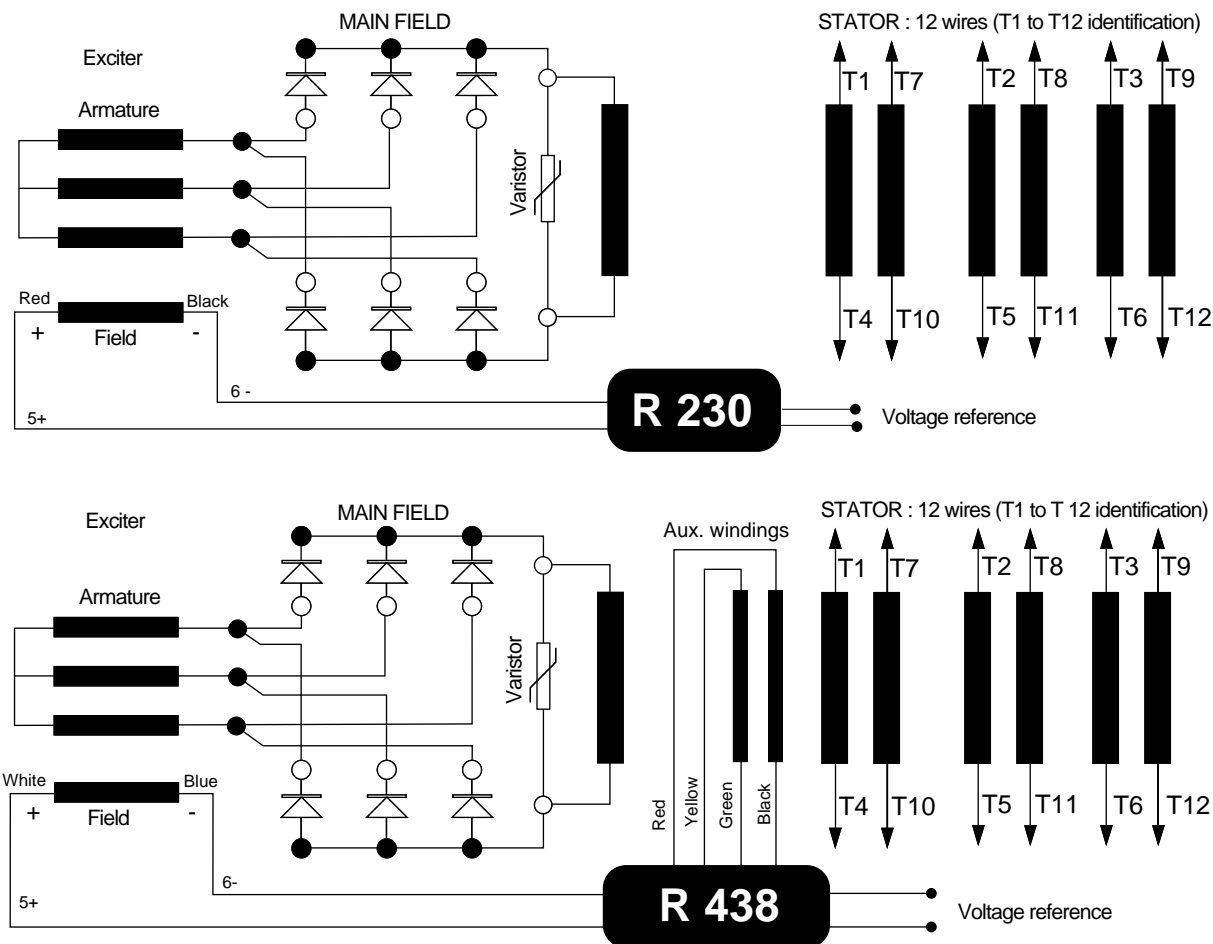

#### 2.1.1 - Options

- Stator temperature detection probes.
- Space heaters.

### 2.2 - Mechanical characteristics

- Steel frame
- End shields in cast iron
- Greasable ball bearings
- Mounting arrangement

MD 35 :

single bearing with standard feet and SAE flanges/coupling discs.

B 34 :

two-bearing with SAE flange and standard cylindrical shaft extension.

- Drip-proof machine, self-cooled

- Degree of protection : IP 23

#### 2.2.1 - Options


- Protection against harsh environments
  - Air inlet filter, air outlet labyrinth seals.
- Alternators fitted with air inlet filters should be derated by 5% (power).  
To prevent excessive temperature rise caused by clogged filters, it is advisable to fit the stator winding with thermal sensors (PTC or PT100).

# LSA 42.2 - 2 & 4 POLE ALTERNATORS

## TECHNICAL CHARACTERISTICS


### 2.3 - SHUNT field excitation system

The alternator with Shunt field excitation is self-excited with a voltage regulator **R 230**. The regulator monitors the exciter excitation current as a function of the alternator output voltage. Very simple in design, the alternator with Shunt excitation has no sustaining short-circuit capability.

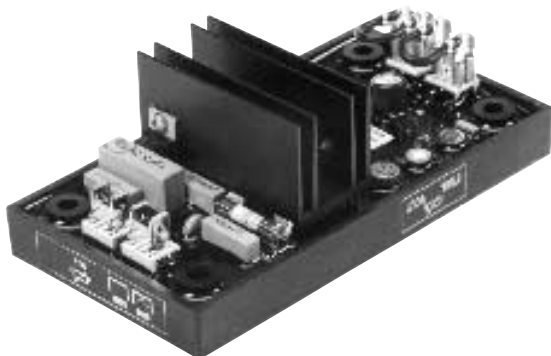

#### 2.3.1 - R 230 AVR


- Voltage regulation: around  $\pm 0,5\%$ .
- Voltage detection range 85 to 139 V (50/60Hz).
- Rapid response time (500 ms) for a transient voltage variation amplitude of  $\pm 20\%$ .
- Voltage setting **P1**.
- Stability setting **P2**.
- Power supply protected by 8 A fuse, slow-acting (tolerates 10 A for 10s).
- Frequency: 50 Hz with strap **ST3** - 60 Hz without strap **ST3**
- Factory set underspeed protection **P3** plombé usine.

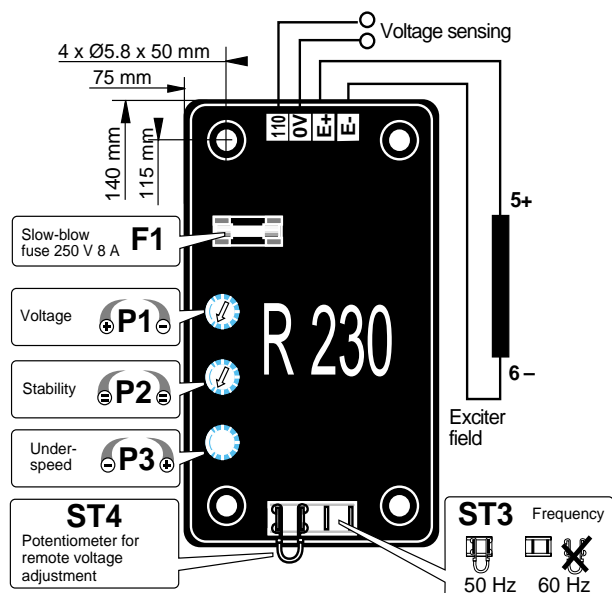

#### 2.3.2 - R230 regulator options

Potentiometer for remote voltage adjustment, 1000  $\Omega$  / 0.5 W min : adjustment range  $\pm 5\%$ .

- Remove strap **ST4**.

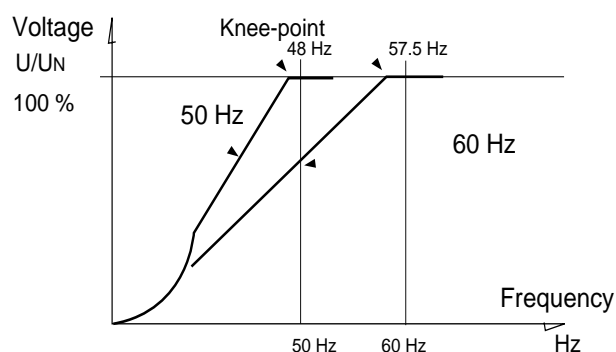

#### 2.3.3 - Working with A.V.R. R448


As an option the 448 A.V.R. can be adapted on shunt alternator in order to get the following functions  
In this case the R 230 A.V.R. is disconnected :

- Parallel operation between alternators with current transformer
- Parallel operation with the mains with current transformer and R 726 module
- 3 phase detection R 731
- LAM function (integrated in the R448).

**This A.V.R. and your modules must be installed outside the terminal box.**

In this case, the R 230 is replaced by R 448.

For adjusting and fault detection refer to the section 4.5 of this notice (the function of R 438 and R 448 are the same, & 2.4).

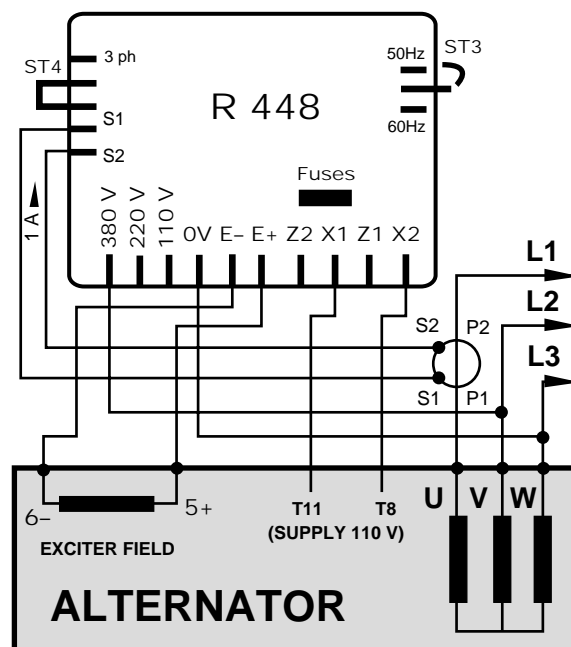




# LSA 42.2 - 2 & 4 POLE ALTERNATORS

## TECHNICAL CHARACTERISTICS

### 2.4 - AREP field excitation system

With AREP excitation, the electronic A.V.R. **R 438** is powered by two auxiliary windings which are independent of the voltage detection circuit. The first winding has a voltage in proportion with the output voltage of the alternateur (Shunt characteristic), the second has a voltage in proportion with the stator current (compound characteristic: Booster effect). The power supply voltage is rectified and filtered before being used by the regulator monitoring transistor. This principle ensures that regulation is not affected by distortions generated by the load.

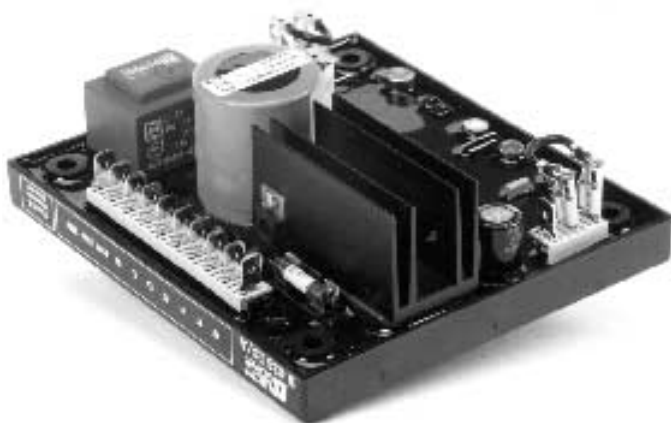


#### 2.4.1 - R 438 regulator

- short-circuit current =  $3 \times I_N$  for 10 seconds
- standard power supply; 2 auxiliary windings
- shunt power supply; max 48V - 50/60 Hz
- rated overload current: 8A - 10s
- electronic protection (overload, short-circuit opening on voltage detection): excitation ceiling current for 10 seconds then return to approx. 1A.

### WARNING

**The alternator must be stopped (or the power switched off) in order to reset the protection.**

- Fusibles :
  - Fuse F1 on input side (X1, X2).
- Voltage detection: 5 VA isolated via transformer
  - 0-110 V terminals = 95 to 140 V
  - 0-220 V terminals = 170 to 260 V
  - 0-380 V terminals = 340 to 520 V
- Voltage regulation  $\pm 0,5 \%$ .
- Rapid or normal response time via strap **ST2**.
- voltage adjustment via potentiometer **P2**  
other voltages via step down transformer
- Current detection: (parallel operation): C.T. 2.5 VA cl1, secondary 1A (Option)
- Quadrature droop adjustment via potentiometer **P1**
- Underspeed protection (U/f) and LAM: frequency threshold adjustable via potentiometer **P4**
- Max. excitation current adjustment via **P5**: 4.5 to 10A
- 50/60 Hz selection via strap **ST3**.

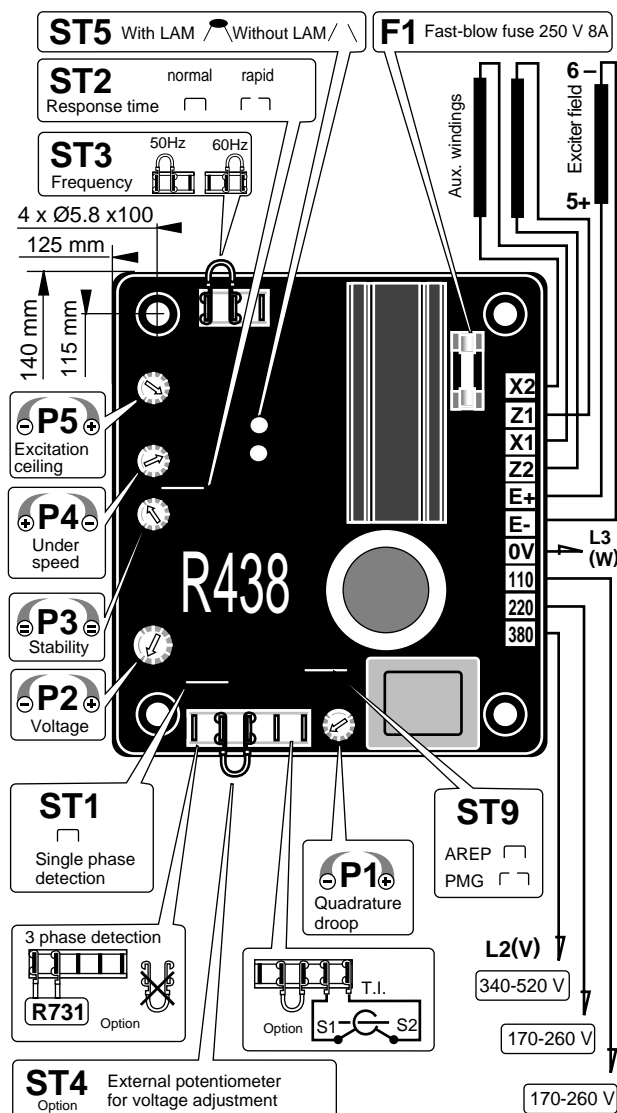

# LSA 42.2 - 2 & 4 POLE ALTERNATORS TECHNICAL CHARACTERISTICS

## 2.4.2 - LAM characteristics

The LAM system is integrated as standard in the R 438 LS regulator.


- Role of the "LAM" (Load Adjustment Module):

On load impact, the rotation speed of the generator set decreases. When it passes below the preset frequency threshold, the "LAM" causes the voltage to drop by approximately 15% and consequently the amount of active load applied is reduced by approximately 25%, until the speed reaches its rated value again.

Hence the "LAM" can be used either to reduce the speed variation (frequency) and its duration for a given applied load, or to increase the applied load possible for one speed variation (turbo-charged engine).

To avoid voltage oscillations, the trip threshold for the "LAM" function should be set approximately 2 Hz below the lowest frequency in steady state.

- LAM: action eliminated by cutting strap ST5

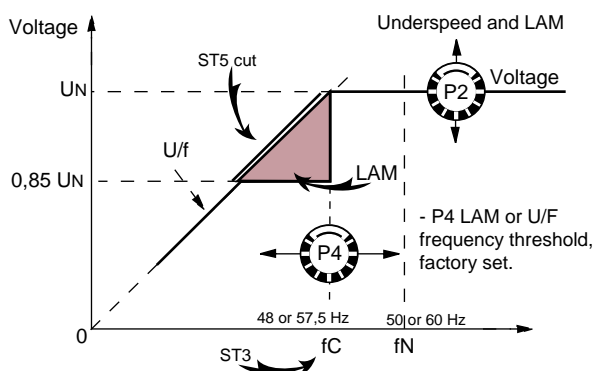

## 2.4.3 - R 438 A.V.R. options

- **Current transformer** for parallel operation


- Remote voltage **adjustment potentiometer**: 470  $\Omega$ , 0.5 W min: adjustment range  $\pm 5\%$  (range limited via internal voltage potentiometer **P2**). Remove ST4 to connect the potentiometer. (A 1 k  $\Omega$  potentiometer can also be used to extend the adjustment range.)

- **R 731 external module**: detection of 3-phase voltage 200 to 500 V, compatible with parallel operation. Cut ST1 to connect the module; set the voltage via the module potentiometer. (The previous version module is not compatible with parallel operation).

- **R 726 module**: 3 functions (external mounting).

• P.F.  $\phi$  regulation (2F) and voltage matching prior to paralleling with the mains (3 F).

• C.T. of ...../1A . 5 VA CL 1 (see schematic included with this manual).

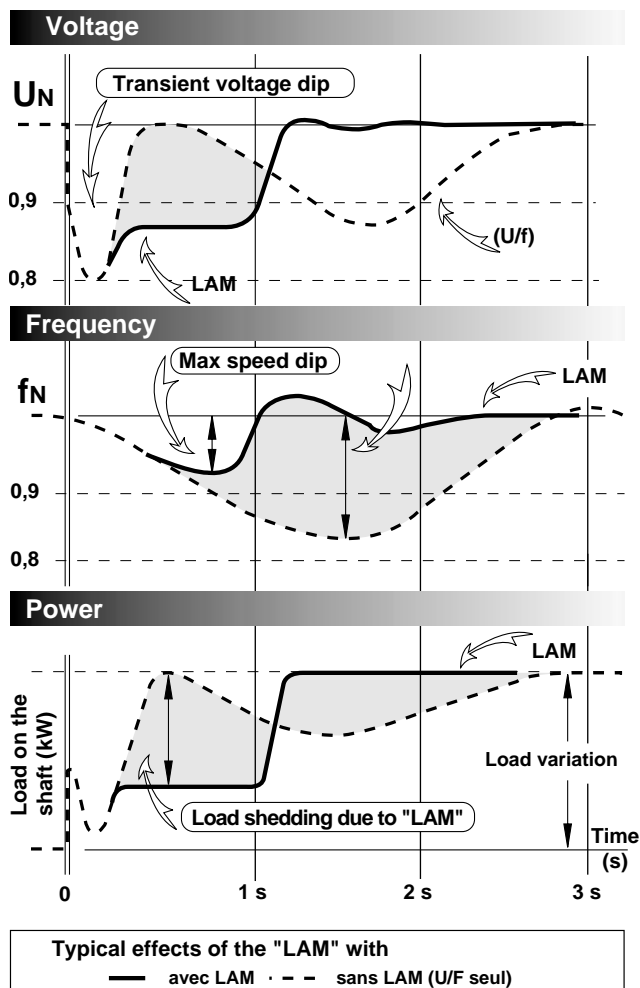

# LSA 42.2 - 2 & 4 POLE ALTERNATORS INSTALLATION

## 3 - INSTALLATION

### 3.1 - Assembly




All mechanical handling operations must be undertaken using approved equipment.

While being handled, the machine should remain horizontal.

#### 3.1.1 - Handling

The generously-sized lifting rings are for handling the alternator alone. They must not be used to lift the genset. Choose a lifting system which respects the positioning of the rings.

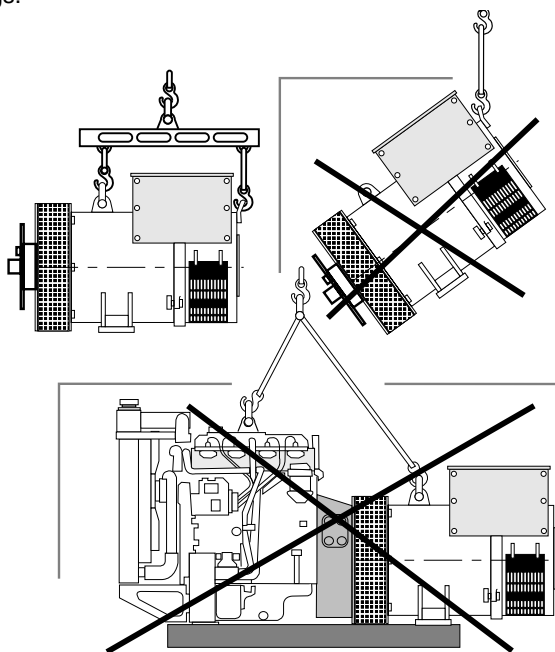

#### 3.1.2 - Coupling

##### 3.1.2.1 - single bearing alternator

Before coupling to the prime mover, check that both are compatible by:

- Undertaking a torsional analysis of the transmission.
- Checking the dimensions of the flywheel and its housing, the flange, coupling discs and offset.

### WARNING

**When coupling the alternator to the prime mover, the holes of the coupling discs should be aligned with the flywheel holes by cranking the engine.**

**Do not use the alternator fan to turn the rotor.**

Tighten the coupling discs screws to the recommended torque (see section 4.6.2.) and check that there is lateral play on the crankshaft.

##### 3.1.2.2 - two-bearing alternator

- Semi-flexible coupling

Careful alignment of the machines by measuring the concentricity and parallelism of the two parts of the coupling is recommended, the difference between the readings should not exceed the specified values (say 0,1 mm).

### WARNING

This alternator has been balanced with a 1/2 key.

#### 3.1.3 - Location

Ensure that the ambient temperature in the room where the alternator is placed cannot exceed 40°C for standard power ratings (for temperatures above 40°C, apply a derating coefficient). Fresh air, free from damp and dust, must be able to circulate freely around the air input louvres on the opposite side from the coupling. It is essential to prevent not only the recycling of hot air from the machine or engine, but also exhaust fumes.

## 3.2 - Inspection prior to first use

### 3.2.1 - Electrical checks



**Under no circumstances should an alternator, new or otherwise, be operated if the isolation is less than 1 megohm for the stator and 100,000 ohms for the other windings.**

There are two possible methods for restoring the above minimum values.

- a) Dry out the machine for 24 hours in a drying oven at a temperature of approximately 110 °C.
- b) Blow hot air into the air input, having made sure that the machine is rotating with the exciter field disconnected.
- c) Run in short-circuit mode (disconnect the AVR)
  - Short-circuit the output phases using connections capable of supporting the rated current (try not to exceed 6 A/mm<sup>2</sup>).
  - Insert a clamp ammeter to monitor the current passing through the short-circuit connections.
  - Connect a 48 Volt battery in series with a rheostat of approximately 10 ohms (50 Watts), to the exciter field terminals, respecting the polarity.
  - Open fully all the alternator orifices.
  - Run the alternator at rated speed. Adjust the exciter field current using the rheostat to obtain the rated output current in the short-circuit connections.

Note: Prolonged standstill: In order to avoid these problems, we recommend the use of space heaters, as well as turning over the machine from time to time. Space heaters are only really effective if they are working continuously while the machine is stopped.

# LSA 42.2 - 2 & 4 POLE ALTERNATORS INSTALLATION

## 3.2.2 - Physical and visual checks

Before starting the machine for the first time, check that:

- the fixing bolts on the feet are tight
- the cooling air is drawn in freely
- the protective louvres and housing are correctly in place
- the standard direction of rotation is clockwise as seen from the shaft end (phase rotation in order 1 - 2 - 3). For anti-clockwise rotation, swap 2 and 3.
- the winding connection corresponds to the site operating voltage (see section § 3.3)

## 3.3 - Terminal connection diagrams

To modify the connection, change the position of the terminal cables. The winding code is specified on the nameplate.



Any intervention on the alternator terminals during reconnection or checks should be performed with the machine stopped.

| Connection codes  |  | L.L voltage  |              |             | Factory connection |  |
|---|--|--------------|--------------|-------------|--------------------|--|
| <div><div>A</div><div>3 phase</div><div></div></div>                    | <b>Winding</b>   | <b>50 Hz</b> | <b>60 Hz</b> | <div></div> |                    |  |
|   | 6  | 190 - 208    | 190 - 240    |             |                    |  |
|   | 7  | 220 - 230    | -            |             |                    |  |
|   | 8  | -            | 190 - 208    |             |                    |  |
|   | R 230 voltage detection :<br>0 => (T8) / 110 V => (T11)<br>R 438 LS voltage detection :<br>0 => (T3) / 220 V => (T2) |              |              | NDE         |                    |  |
| <div><div>D</div><div>3 phase</div><div></div></div>                    | <b>Winding</b>   | <b>50 Hz</b> | <b>60 Hz</b> | <div></div> |                    |  |
|   | 6  | 380 - 415    | 380 - 480    |             |                    |  |
|   | 7  | 440 - 460    | -            |             |                    |  |
|   | 8  | -            | 380 - 416    |             |                    |  |
|   | R 230 voltage detection :<br>0 => (T8) / 110 V => (T11)<br>R 438 LS voltage detection :<br>0 => (T3) / 380 V => (T2) |              |              | NDE         |                    |  |
| <div><div>FF</div><div>1 phase</div><div></div></div>                   | <b>Winding</b>   | <b>50 Hz</b> | <b>60 Hz</b> | <div></div> |                    |  |
|   | 6  | 220 - 240    | 220 - 240    |             |                    |  |
|   | 7  | 250 - 260    | -            |             |                    |  |
|   | 8  | 200          | 220 - 240    |             |                    |  |
|   | R 230 voltage detection :<br>0 => (T1) / 110 V => (T4)<br>R 438 LS voltage detection :<br>0 => (T10) / 220 V => (T1) |              |              | NDE         |                    |  |
| <div><div>F</div><div>1 phase<br/>or<br/>3 phase</div><div></div></div> | <b>Winding</b>   | <b>50 Hz</b> | <b>60 Hz</b> | <div></div> |                    |  |
|   | 6  | 220 - 240    | 220 - 240    |             |                    |  |
|   | 7  | 250 - 260    | -            |             |                    |  |
|   | 8  | 200          | 220 - 240    |             |                    |  |
|   | R 230 voltage detection :<br>0 => (T8) / 110 V => (T11)<br>R 438 LS voltage detection :<br>0 => (T3) / 220 V => (T2) |              |              | NDE         |                    |  |

# LSA 42.2 - 2 & 4 POLE ALTERNATORS INSTALLATION

| Connection codes   |   | L.L voltage        |   |         | Factory connection                         |        |  |  |       |       |   |   |   |     |     |         |    |    |         |     |     |     |     |  |  |  |  |                  |  |         |        |  |  |       |       |   |   |   |     |   |                    |       |         |   |     |   |     |   |
|--|---|--------------------|---|---------|--|--------|--|--|-------|-------|---|---|---|-----|-----|---------|----|----|---------|-----|-----|-----|-----|--|--|--|--|------------------|--|---------|--------|--|--|-------|-------|---|---|---|-----|---|--------------------|-------|---------|---|-----|---|-----|---|
| <b>(B)</b><br>1 phase<br>or<br>3 phase<br>   | <b>Winding</b><br>6<br>7<br>8<br>R 230 voltage detection :<br>0 => (T8) / 110 V => (T11)<br>R 438 LS voltage detection :<br>0 => (T3) / 110 V => (T2) | 50 Hz              | 60 Hz   |         | L → L3(W)<br>L → L2(V)<br>L → L1(U)<br>NDE |        |  |  |       |       |   |   |   |     |     |         |    |    |         |     |     |     |     |  |  |  |  |                  |  |         |        |  |  |       |       |   |   |   |     |   |                    |       |         |   |     |   |     |   |
|  |   | 110 - 120          | 120   |         |  |        |  |  |       |       |   |   |   |     |     |         |    |    |         |     |     |     |     |  |  |  |  |                  |  |         |        |  |  |       |       |   |   |   |     |   |                    |       |         |   |     |   |     |   |
|  |   | 120 - 130          | -   |         |  |        |  |  |       |       |   |   |   |     |     |         |    |    |         |     |     |     |     |  |  |  |  |                  |  |         |        |  |  |       |       |   |   |   |     |   |                    |       |         |   |     |   |     |   |
|  |   | -                  | 110 - 120   |         |  |        |  |  |       |       |   |   |   |     |     |         |    |    |         |     |     |     |     |  |  |  |  |                  |  |         |        |  |  |       |       |   |   |   |     |   |                    |       |         |   |     |   |     |   |
| <b>(G)</b><br>1 PH<br>Connection not recommended<br><br>LM voltage = 1/2 LL voltage  | <b>Winding</b><br>6<br>7<br>8<br>R 230 voltage detection :<br>0 => (T8) / 110 V => (T11)<br>R 438 LS voltage detection :<br>0 => (T3) / 220 V => (T2) | 50 Hz              | 60 Hz   |         | → M<br>→ L<br>→ L<br>NDE                   |        |  |  |       |       |   |   |   |     |     |         |    |    |         |     |     |     |     |  |  |  |  |                  |  |         |        |  |  |       |       |   |   |   |     |   |                    |       |         |   |     |   |     |   |
|  |   | 220 - 240          | 220 - 240   |         |  |        |  |  |       |       |   |   |   |     |     |         |    |    |         |     |     |     |     |  |  |  |  |                  |  |         |        |  |  |       |       |   |   |   |     |   |                    |       |         |   |     |   |     |   |
|  |   | 250 - 260          | -   |         |  |        |  |  |       |       |   |   |   |     |     |         |    |    |         |     |     |     |     |  |  |  |  |                  |  |         |        |  |  |       |       |   |   |   |     |   |                    |       |         |   |     |   |     |   |
|  |   | 200                | 220 - 240   |         |  |        |  |  |       |       |   |   |   |     |     |         |    |    |         |     |     |     |     |  |  |  |  |                  |  |         |        |  |  |       |       |   |   |   |     |   |                    |       |         |   |     |   |     |   |
| <b>SINGLE PHASE 4 LEADS - WINDING DEDICATED type M or M1</b>   |   |                    |   |         |  |        |  |  |       |       |   |   |   |     |     |         |    |    |         |     |     |     |     |  |  |  |  |                  |  |         |        |  |  |       |       |   |   |   |     |   |                    |       |         |   |     |   |     |   |
| <b>SERIES CONNECTION</b><br>   |   |                    | <b>PARALLEL CONNECTION</b><br>                      |         |  |        |  |  |       |       |   |   |   |     |     |         |    |    |         |     |     |     |     |  |  |  |  |                  |  |         |        |  |  |       |       |   |   |   |     |   |                    |       |         |   |     |   |     |   |
| <table border="1"> <thead> <tr> <th colspan="2">Voltage 50/60 Hz</th> <th rowspan="2">Connect</th> <th colspan="3">Output</th> </tr> <tr> <th>L - L</th> <th>L - M</th> <th>L</th> <th>L</th> <th>M</th> </tr> </thead> <tbody> <tr> <td>220</td> <td>110</td> <td rowspan="3">T2 - T3</td> <td rowspan="3">T1</td> <td rowspan="3">T4</td> <td rowspan="3">T2 - T3</td> </tr> <tr> <td>230</td> <td>115</td> </tr> <tr> <td>240</td> <td>120</td> </tr> </tbody> </table> |   |                    | Voltage 50/60 Hz                                    |         | Connect                                    | Output |  |  | L - L | L - M | L | L | M | 220 | 110 | T2 - T3 | T1 | T4 | T2 - T3 | 230 | 115 | 240 | 120 | <table border="1"> <thead> <tr> <th colspan="2">Voltage 50/60 Hz</th> <th rowspan="2">Connect</th> <th colspan="3">Output</th> </tr> <tr> <th>L - L</th> <th>L - M</th> <th>L</th> <th>L</th> <th>M</th> </tr> </thead> <tbody> <tr> <td>110</td> <td>-</td> <td rowspan="3">T1 - T3<br/>T2 - T4</td> <td rowspan="3">T1-T3</td> <td rowspan="3">T2 - T4</td> <td rowspan="3">-</td> </tr> <tr> <td>115</td> <td>-</td> </tr> <tr> <td>120</td> <td>-</td> </tr> </tbody> </table> |  |  |  | Voltage 50/60 Hz |  | Connect | Output |  |  | L - L | L - M | L | L | M | 110 | - | T1 - T3<br>T2 - T4 | T1-T3 | T2 - T4 | - | 115 | - | 120 | - |
| Voltage 50/60 Hz   |   | Connect            | Output  |         |  |        |  |  |       |       |   |   |   |     |     |         |    |    |         |     |     |     |     |  |  |  |  |                  |  |         |        |  |  |       |       |   |   |   |     |   |                    |       |         |   |     |   |     |   |
| L - L  | L - M   |                    | L   | L       | M  |        |  |  |       |       |   |   |   |     |     |         |    |    |         |     |     |     |     |  |  |  |  |                  |  |         |        |  |  |       |       |   |   |   |     |   |                    |       |         |   |     |   |     |   |
| 220  | 110   | T2 - T3            | T1  | T4      | T2 - T3                                    |        |  |  |       |       |   |   |   |     |     |         |    |    |         |     |     |     |     |  |  |  |  |                  |  |         |        |  |  |       |       |   |   |   |     |   |                    |       |         |   |     |   |     |   |
| 230  | 115   |                    |   |         |  |        |  |  |       |       |   |   |   |     |     |         |    |    |         |     |     |     |     |  |  |  |  |                  |  |         |        |  |  |       |       |   |   |   |     |   |                    |       |         |   |     |   |     |   |
| 240  | 120   |                    |   |         |  |        |  |  |       |       |   |   |   |     |     |         |    |    |         |     |     |     |     |  |  |  |  |                  |  |         |        |  |  |       |       |   |   |   |     |   |                    |       |         |   |     |   |     |   |
| Voltage 50/60 Hz   |   | Connect            | Output  |         |  |        |  |  |       |       |   |   |   |     |     |         |    |    |         |     |     |     |     |  |  |  |  |                  |  |         |        |  |  |       |       |   |   |   |     |   |                    |       |         |   |     |   |     |   |
| L - L  | L - M   |                    | L   | L       | M  |        |  |  |       |       |   |   |   |     |     |         |    |    |         |     |     |     |     |  |  |  |  |                  |  |         |        |  |  |       |       |   |   |   |     |   |                    |       |         |   |     |   |     |   |
| 110  | -   | T1 - T3<br>T2 - T4 | T1-T3   | T2 - T4 | -  |        |  |  |       |       |   |   |   |     |     |         |    |    |         |     |     |     |     |  |  |  |  |                  |  |         |        |  |  |       |       |   |   |   |     |   |                    |       |         |   |     |   |     |   |
| 115  | -   |                    |   |         |  |        |  |  |       |       |   |   |   |     |     |         |    |    |         |     |     |     |     |  |  |  |  |                  |  |         |        |  |  |       |       |   |   |   |     |   |                    |       |         |   |     |   |     |   |
| 120  | -   |                    |   |         |  |        |  |  |       |       |   |   |   |     |     |         |    |    |         |     |     |     |     |  |  |  |  |                  |  |         |        |  |  |       |       |   |   |   |     |   |                    |       |         |   |     |   |     |   |
| R 230 voltage detection : 0 => (T1) / 110 V => (T2)  |   |                    | R 230 voltage detection : 0 => (T1) / 110 V => (T2) |         |  |        |  |  |       |       |   |   |   |     |     |         |    |    |         |     |     |     |     |  |  |  |  |                  |  |         |        |  |  |       |       |   |   |   |     |   |                    |       |         |   |     |   |     |   |

## 3.3.1 - Connection diagram for options

| R 791 T interference suppression kit (standard for CE marking) |   | Voltage potentiometer |     |     |       |     |       |     |       |    |    |    |    |    |    |       |    |    |    |    |    |    |       |    |    |    |    |    |    |      |   |   |   |   |   |   |       |   |   |   |   |   |   |  |  |
|--|---|-----------------------|-----|-----|-------|-----|-------|-----|-------|----|----|----|----|----|----|-------|----|----|----|----|----|----|-------|----|----|----|----|----|----|------|---|---|---|---|---|---|-------|---|---|---|---|---|---|--|--|
| Connections  | <table border="1"> <thead> <tr> <th></th> <th>(A)</th> <th>(D)</th> <th>(F)</th> <th>(B)</th> <th>(F/F)</th> <th>(G)</th> </tr> </thead> <tbody> <tr> <td>Black</td> <td>T1</td> <td>T1</td> <td>T1</td> <td>T1</td> <td>T1</td> <td>T2</td> </tr> <tr> <td>Black</td> <td>T2</td> <td>T2</td> <td>T2</td> <td>T2</td> <td>T9</td> <td>T4</td> </tr> <tr> <td>Black</td> <td>T3</td> <td>T3</td> <td>T3</td> <td>T3</td> <td>T3</td> <td>T3</td> </tr> <tr> <td>Blue</td> <td>N</td> <td>N</td> <td>⊥</td> <td>⊥</td> <td>⊥</td> <td>⊥</td> </tr> <tr> <td>White</td> <td>⊥</td> <td>⊥</td> <td>⊥</td> <td>⊥</td> <td>⊥</td> <td>⊥</td> </tr> </tbody> </table> |                       | (A) | (D) | (F)   | (B) | (F/F) | (G) | Black | T1 | T1 | T1 | T1 | T1 | T2 | Black | T2 | T2 | T2 | T2 | T9 | T4 | Black | T3 | T3 | T3 | T3 | T3 | T3 | Blue | N | N | ⊥ | ⊥ | ⊥ | ⊥ | White | ⊥ | ⊥ | ⊥ | ⊥ | ⊥ | ⊥ |  |  |
|  | (A)   | (D)                   | (F) | (B) | (F/F) | (G) |       |     |       |    |    |    |    |    |    |       |    |    |    |    |    |    |       |    |    |    |    |    |    |      |   |   |   |   |   |   |       |   |   |   |   |   |   |  |  |
| Black  | T1  | T1                    | T1  | T1  | T1    | T2  |       |     |       |    |    |    |    |    |    |       |    |    |    |    |    |    |       |    |    |    |    |    |    |      |   |   |   |   |   |   |       |   |   |   |   |   |   |  |  |
| Black  | T2  | T2                    | T2  | T2  | T9    | T4  |       |     |       |    |    |    |    |    |    |       |    |    |    |    |    |    |       |    |    |    |    |    |    |      |   |   |   |   |   |   |       |   |   |   |   |   |   |  |  |
| Black  | T3  | T3                    | T3  | T3  | T3    | T3  |       |     |       |    |    |    |    |    |    |       |    |    |    |    |    |    |       |    |    |    |    |    |    |      |   |   |   |   |   |   |       |   |   |   |   |   |   |  |  |
| Blue   | N   | N                     | ⊥   | ⊥   | ⊥     | ⊥   |       |     |       |    |    |    |    |    |    |       |    |    |    |    |    |    |       |    |    |    |    |    |    |      |   |   |   |   |   |   |       |   |   |   |   |   |   |  |  |
| White  | ⊥   | ⊥                     | ⊥   | ⊥   | ⊥     | ⊥   |       |     |       |    |    |    |    |    |    |       |    |    |    |    |    |    |       |    |    |    |    |    |    |      |   |   |   |   |   |   |       |   |   |   |   |   |   |  |  |

# LSA 42.2 - 2 & 4 POLE ALTERNATORS INSTALLATION


## 3.3.2 - Connection checks



Electrical installations must comply with the current legislation in force in the country of use.

Check that:

- the differential circuit-breaker conforms to legislation on protection of personnel, in force in the country of use, and has been correctly installed on the alternator power output as close as possible to the alternator. (Disconnect the blue wire of the R 791 interference suppression module linking the neutral).
- any protective devices in place have not tripped,
- if there is an external regulator, the connections between the alternator and the cubicle are made in accordance with the connection diagram,
- there is no short-circuit between phase or phase-neutral between the alternator output terminals and the generator set control cabinet (part of the circuit not protected by circuit-breakers or cubicle relays)
- the machine should be connected with the terminal lugs on top of one another as shown in the terminal connection diagrams.

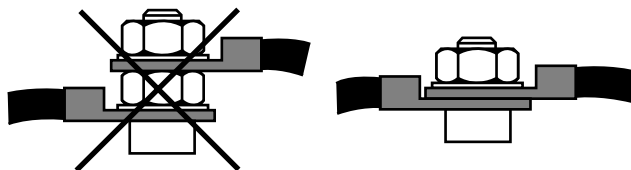

## 3.3.3 - Electrical checks on the A.V.R.

- Check that all connections have been made properly as shown in the attached connection diagram.
- Check that the frequency selection strap "ST3" is on the correct frequency setting.
- Check whether strap ST4 or the remote adjustment potentiometer have been connected.
- Optional operating modes (R 438 LS)
  - Strap ST1: cut to connect the R 731 3-phase detection module.
  - Strap ST2: cut for rapid response time.
  - Strap ST5: cut to suppress the LAM function.

## 3.4 - Commissioning



The machine can only be started up and used if the installation is in accordance with the instructions and advice defined in this manual.

The machine is tested and set at the factory. When first used with no load, make sure that the drive speed is correct and stable (see the nameplate). On application of the load, the

machine should maintain its rated speed and voltage; however, in the event of abnormal operation, the machine setting can be altered (follow the adjustment procedure in section 3.5). If the machine still operates incorrectly, the cause of the malfunction must be located (see section 4.4).


## 3.5 - Setting up



The various adjustments during tests must be made by a qualified engineer. Take care that the drive speed specified on the nameplate is reached before commencing adjustment. After operational testing, replace all access panels or covers.

The A.V.R. is used to make any adjustments to the machine.

### 3.5.1 - R 230 adjustments (Shunt system)

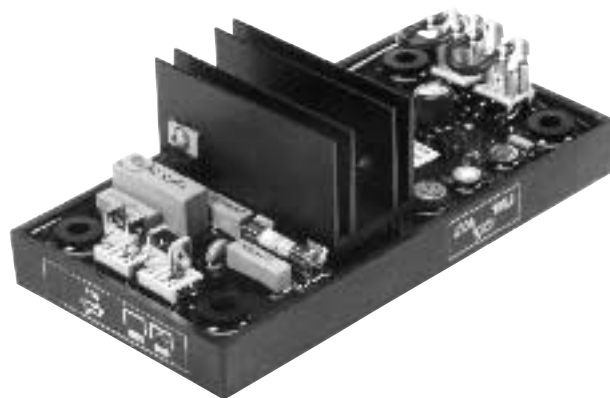

Initial potentiometer settings


- Potentiometer **P1** (AVR voltage adjustment): fully anticlockwise.
  - Remote voltage adjustment potentiometer: middle
- Run the alternator at its rated speed: if the voltage does not increase, the magnetic circuit should be remagnetized (see section 4.5).
- Turn the AVR voltage adjustment potentiometer **P1** slowly until the output voltage rated value is obtained.
  - Adjust the stability using **P2**.
  - Sealed potentiometer **P3** is factory set at 48 Hz for 50 Hz and 57.5 Hz for 60 Hz.

# LSA 42.2 - 2 & 4 POLE ALTERNATORS INSTALLATION

## 3.5.2 - R 438 LS adjustments

### WARNING

Avant toute intervention sur le régulateur, s'assurer que le strap ST9 est fermé en excitation AREP et coupé en excitation PMG.

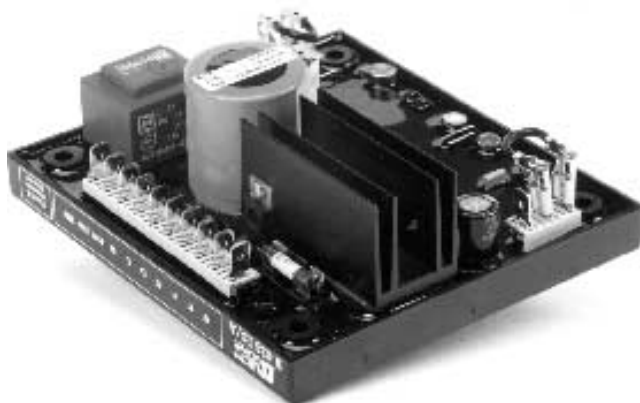

a) Initial potentiometer settings (see table)  
- remote voltage adjustment potentiometer : centre (ST4 strap removed).

| Action  | Factory adjust.  | Pot. |
|---|--|------|
| <b>Voltage</b><br>minimum fully anti-clockwise  | 400V - 50 Hz<br>(Input<br>0 - 380 V)                                       |      |
| <b>Stability</b>  | Not adjusted<br>(middle)   |      |
| <b>Threshold/LAM or U/F</b><br>Underspeed protection<br>and "LAM" trip threshold<br>Maximum frequency fully<br>anti-clockwise | If ST3 = 50 Hz<br>(factory) = 48 Hz<br>If ST3 = 60 Hz<br>(factory) = 58 Hz |      |
| <b>Voltage quadrature droop</b><br>(// operation with C.T.)<br>- 0 quadrature droop fully<br>anti-clockwise.                  | Not set<br>(fully anti-<br>clockwise)                                      |      |
| <b>Excitation ceiling</b><br>Limit of excitation ceiling<br>and short-circuit current,<br>minimum fully anti-clockwise        | 10 A<br>maximum  |      |

b) Install a D.C. analogue voltmeter (needle dial) cal. 50V on terminals E+, E- and an A.C. voltmeter cal. 300 - 500 or 1000V on the alternator output terminals.

c) Make sure that the ST3 strap is positioned on the desired frequency (50 or 60 Hz).

d) Voltage potentiometer P2 at minimum, fully to anti-clockwise.

e) Turn the V/Hz potentiometer P4, fully to clockwise.

f) Stability potentiometer P3 approximately 1/3 of travel anti-clockwise.

g) Start the engine and set its speed to a frequency of 48 Hz for 50 Hz, or 58 for 60 Hz.

h) Adjust the output voltage to the desired value using P2.  
- rated voltage UN for solo operation (eg. 400 V)  
- or UN + 2 to 4% for parallel operation with C.T. (eg. 410V -)  
If the voltage oscillates, use P3 to make adjustments (try both directions) observing the voltage between E+ and E- (approx. 10V D.C.). The best response times are obtained at the limit of the instability. If no stable position can be obtained, try cutting or replacing the ST2 strap (normal /rapid).

i) Check LAM operation : ST5 closed.

j) Turn potentiometer P4 slowly anti-clockwise until there is a significant voltage drop (approx. 15 %).

k) Vary the frequency (speed) of both parts between 48 or 58 Hz according to the operating frequency, and check the change in voltage previously observed (~ 15%).

l) Readjust the speed of the unit to its rated no-load value.

### Adjustments in parallel operation

**Before any intervention on the alternator, make sure that the speed quadrature droop is identical for all engine.**

m) Preset for parallel operation (with C.T. connected to S1, S2 of connector J2)  
- potentiometer P1 (quadrature droop) in centre position  
Apply the rated load (cos  $\varphi$  = 0.8 inductive).  
The voltage should drop by 2 to 3 %. If it increases, swap the 2 incoming wires of the C.T. secondary.

n) The no-load voltages should be identical for all the alternators intended to run in parallel.


- Couple the machines in parallel.  
- By adjusting the **speed**, try to obtain 0 Kw power exchange.  
- By altering the voltage setting P2 or Rhe on one of the machines, try to cancel (or minimise) the **current** circulating between the machines.  
**- From now on, do not touch the voltage settings.**

o) Apply the available load (the setting is only correct if a **reactive** load is available)

- By altering the **speed**, equalize the KW (or divide the rated power of the units proportionally)  
- By altering the quadrature droop potentiometer P1, equalize or divide the **currents**.

# LSA 42.2 - 2 & 4 POLE ALTERNATORS INSTALLATION

## 3.5.3 - Max. excitation adjustment (excitation ceiling)

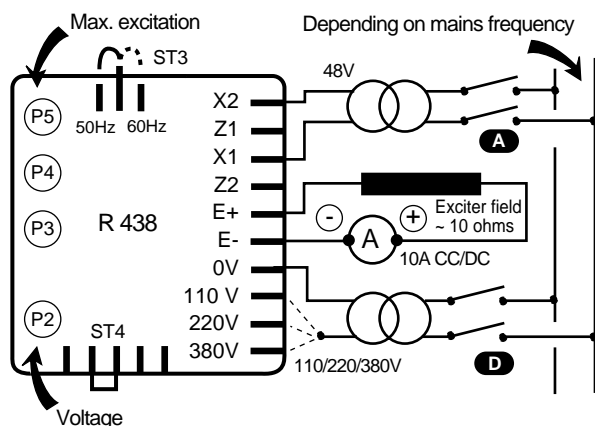

Quadrature droop adjustment of the current limit, potentiometer P5 (fuse rating : 8 A - 10 seconds).

The factory setting corresponds to that of the excitation current required to obtain a 3-phase short-circuit current of approximately  $3 \times I_N$  at 50 Hz for industrial power, unless otherwise specified (\*).

It is possible to reduce the maximum excitation level by a static method which is safer for the alternator and the network. Disconnect power supply wires X1,X2 and Z1,Z2, and the sensing leads (0-110V-220V-380V) on the alternator. Connect the mains power supply (200-240V) as indicated (X1, X2 : 120 V). Install a 10A D.C. ammeter in series with the exciter field. Turn P5 fully C.C.W. , activate the power supply. If there is no output current from the A.V.R., turn potentiometer P2 (voltage) C.W. until the ammeter indicates a stable current. Switch the power supply off, then on again, turn P5 C.W until the required max. current is obtained (no more than 10 A).

### Checking the internal protection :

Open switch (D): the excitation current should increase to its preset ceiling, remain at that level for about 10 seconds and then drop to below 1A.


To reset, switch off the power supply by opening switch (A).

Note: After setting the excitation ceiling as described, adjust the voltage again (see section 3.5.2.)

(\*) : A short-circuit current of  $3 \times I_N$  is a legal requirement in most countries so as to offer selective protection.

## 3.5.4 - Special type of use


### - Field de-energizing

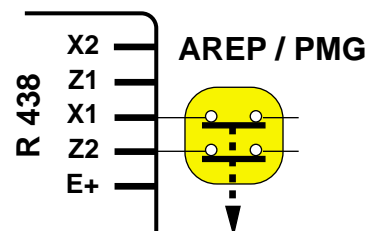

The exciter is switched off by disconnecting the AVR power supply (1 wire on each auxiliary winding) contact rating 10A - 250V A.C.

Connection is identical for resetting the AVR internal protection.

### - Field forcing

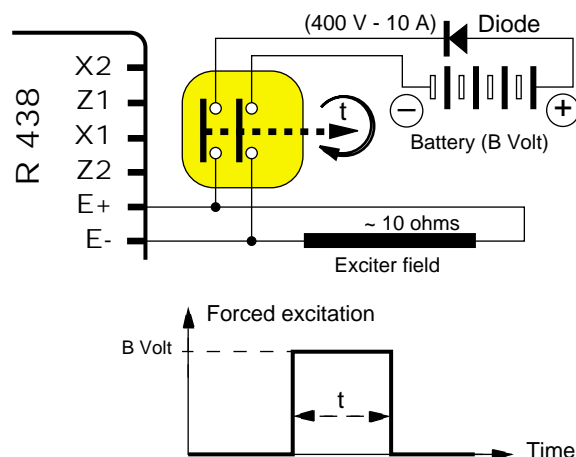

| Applications                      | B volts | Time t   |
|-----------------------------------|---------|----------|
| Guaranteed voltage build up       | 12 (1A) | 1 - 2 s  |
| Parallel operation, de-energized  | 12 (1A) | 1 - 2 s  |
| Parallel operation, at standstill | 24 (2A) | 5 - 10 s |
| Battery starting                  | 48 (4A) | 5 - 10 s |
| Sustained voltage on over load    | 48 (4A) | 5 - 10 s |



# LSA 42.2 - 2 & 4 POLE ALTERNATORS SERVICING - MAINTENANCE

## 4 - SERVICING - MAINTENANCE

### 4.1 - Safety measures



Servicing or troubleshooting must be carried out strictly in accordance with instructions so as to avoid the risk of accidents and to maintain the machine in its original state.



All such operations performed on the alternator should be undertaken by personnel trained in the commissioning, servicing and maintenance of electrical and mechanical components.

Before any intervention on the machine, ensure that it cannot be started by a manual or automatic system and that you have understood the operating principles of the system.

### 4.2 - Regular maintenance

#### 4.2.1 - Checks after start-up

After approximately 20 hours of operation, check that all fixing screws on the machine are still tight, plus the general state of the machine and the various electrical connections in the installation.

#### 4.2.2 - Cooling circuit

It is advisable to check that circulation of air is not reduced by partial blocking of the air intake and outlet grilles : mud, fibre, grease, etc.

#### 4.2.3 - Bearings

The bearings are greased for life: approximate life of the grease (depending on use) = 20,000 hours or 3 years. Monitor the temperature rise in the bearings, which should not exceed 90°C above the ambient temperature. Should this value be exceeded, the machine must be stopped and checks carried out.

#### 4.2.4 - Electrical servicing

Cleaning product for the windings

#### WARNING

**Do not use : trichlorethylene, perchlorethylene, trichloroethane or any alkaline products.**

Certain strictly defined pure volatile degreasing products can be used, such as :

- Normal petrol (without additives) ; inflammable
- Toluene (slightly toxic); inflammable
- Benzene (or benzine, toxic); inflammable
- Cyclohexane (non toxic); inflammable

#### Cleaning of the stator, rotor, exciter and diode bridge

The insulating components and the impregnation system are not at risk of damage from solvents (see the list of authorised products).

Avoid letting the cleaning product run into the slots. Apply the product with a brush, sponging frequently to avoid accumulation in the housing. Dry the winding with a dry cloth. Let any traces evaporate before reassembling the machine.

#### 4.2.5 - Mechanical servicing

#### WARNING

**Cleaning the machine using water or a high-pressure washer is strictly prohibited.**

**Any problems arising from such treatment are not covered by our warranty.**

The machine should be cleaned with a degreasing agent, applied using a brush. Check that the degreasing agent will not affect the paint.

Compressed air should be used to remove any dust.

If filters have been added to the machine after manufacture and do not have thermal protection, the service personnel should clean the air filters periodically and systematically, as often as necessary (every day in very dusty atmospheres).

Cleaning can be performed using water for dry dust or in a bath containing soap or detergent in the case of greasy dust. Petrol or chloroethylene can also be used.

After cleaning the alternator, it is essential to check the winding insulation (see sections 3.2 and 4.8).

### 4.3 - Fault detection

If, when commissioned, the alternator does not work normally, the source of the malfunction must be identified.

To do this, check that :

- the protective devices are fitted correctly
- the connections comply with diagrams in the manuals supplied with the machine
- the speed of the unit is correct (see section 1.3).

Repeat the operations defined in section 3.

# LSA 42.2 - 2 & 4 POLE ALTERNATORS SERVICING - MAINTENANCE

## 4.4 - Défaits mécaniques

|                      | Fault   | Cause   |
|----------------------|---|---|
| Bearing              | Excessive overheating of one or both bearings (bearing temperature 80°C above the ambient temperature) (With or without abnormal bearing noise) | <ul style="list-style-type: none"> <li>- If the bearing has turned blue or if the grease has turned black, change the bearing.</li> <li>- Bearing not fully locked (abnormal play in the bearing cage)</li> <li>- End shields incorrectly aligned</li> </ul>  |
| Abnormal temperature | Excessive overheating of alternator frame (more than 40° C above the ambient temperature)   | <ul style="list-style-type: none"> <li>- Air flow (inlet-outlet) partially clogged or hot air is being recycled from the alternator or engine</li> <li>- Alternator operating at too high a voltage (&gt; 105% of Un on load)</li> <li>- Alternator overloaded</li> </ul>   |
| Vibrations           | Too much vibration  | <ul style="list-style-type: none"> <li>- Misalignment (coupling)</li> <li>- Defective mounting or play in coupling</li> <li>- Rotor balancing fault (Engine - Alternator)</li> </ul>  |
|                      | Excessive vibration and humming noise coming from the machine   | <ul style="list-style-type: none"> <li>- Phase imbalance</li> <li>- Stator short-circuit</li> </ul>   |
| Abnormal noise       | Alternator damaged by a significant impact, followed by humming and vibration   | <ul style="list-style-type: none"> <li>- System short-circuit</li> <li>- Misparalleling</li> </ul> <p>Possible consequences</p> <ul style="list-style-type: none"> <li>- Broken or damaged coupling</li> <li>- Broken or bent shaft end</li> <li>- Shifting and short-circuit of main field</li> <li>- Fan fractured or coming loose on shaft</li> <li>- Irreparable damage to rotating diodes/AVR</li> </ul> |

## 4.5 - Electrical faults

| Fault   | Action   | Effect   | Check/Cause  |
|---|--|--|--|
| No voltage at no load on start-up   | Connect a new battery of 4 to 12 volts to terminals E- and E+, respecting the polarity, for 2 to 3 seconds | The alternator builds up and its voltage is still correct when the battery is removed.               | - Lack of residual magnetism   |
|   |  | The alternator builds up but its voltage does not reach the rated value when the battery is removed. | - Check the connection of the voltage reference to the AVR<br>- Faulty diode<br>- Armature short-circuit   |
|   |  | The alternator builds up but its voltage disappears when the battery is removed.                     | - Faulty AVR<br>- Field windings open circuit (check winding)<br>- Main field winding open circuit (check the resistance)  |
| Voltage too low   | Check the drive speed  | Correct speed  | Check the AVR connections (possible AVR failure)<br>- Field windings short-circuited<br>- Rotating diodes burnt out<br>- Main field winding short-circuited - Check the resistance |
|   |  | Speed too low  | Increase the drive speed<br>(Do not touch the AVR voltage pot. (P2) before running at the correct speed.)  |
| Voltage too high  | Adjust AVR voltage potentiometer   | Adjustment ineffective   | Faulty AVR   |
| Voltage oscillations  | Adjust AVR stability potentiometer   | If no effect : try normal / fast recovery modes (ST2)  | - Check the speed : possibility of cyclic irregularity<br>- Loose connections<br>- Faulty AVR<br>- Speed too low when on load (or LAM set too high)                                |
| Voltage correct at no load and too low when on load (*)   | Run at no load and check the voltage between E+ et E- on the AVR   | Voltage between E+ and E–<br>SHUNT < 6V - AREP < 10V   | - Check the speed (or LAM set too high)  |
|   |  | Voltage between E+ and E–<br>SHUNT > 10V - AREP > 15V  | - Faulty rotating diodes<br>- Short-circuit in the main field. Check the resistance.<br>- Faulty exciter armature. Check the resistance.   |
| (**) <b>Warning</b> : During single-phase operation, check that the sensing wires from the AVR are connected to the correct output terminals. |  |  |  |
| Voltage disappears during operation   | Check the AVR, the surge suppressor, the rotating diodes, and replace any defective components             | The voltage does not return to the rated value.  | - Exciter winding open circuit<br>- Faulty exciter armature<br>- Faulty AVR<br>- Main field open circuit or short-circuited  |
| (**) <b>Warning</b> : The AVR internal protection may cut in (overload lost connection, short circuit).                                       |  |  |  |

# LSA 42.2 - 2 & 4 POLE ALTERNATORS SERVICING - MAINTENANCE

## 4.5.1 - Checking the winding

You can check the winding insulation by performing a high voltage test. In this case, you must disconnect all AVR wires.




### WARNING

Damage caused to the AVR in such conditions is not covered by our warranty.

## 4.5.2 - Checking the diode bridge

Anode  $\bullet$  A  $\rightarrow$  C  $\bullet$  Cathode

A diode in good working order must allow the current to flow from the anode to the cathode.

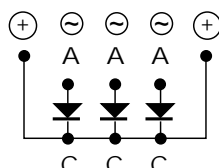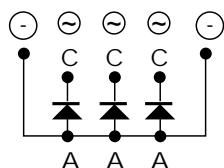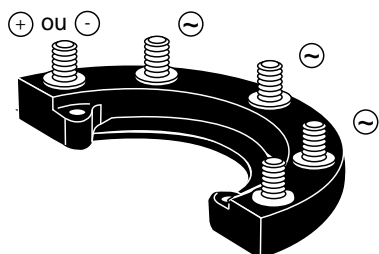

## 4.5.3 - Checking the windings and rotating diodes using separate excitation




During this procedure, make sure that the alternator is disconnected from any external load and inspect the terminal box to check that the connections are fully tightened.

- 1) Stop the unit, disconnect and isolate the AVR wires.
- 2) There are two ways of creating an assembly with separate excitation.

**Assembly A :** Connect a 12 V battery in series with a rheostat of approximately 50 ohms - 300 W and a diode on both field wires (5+) and (6-).

### ASSEMBLY A

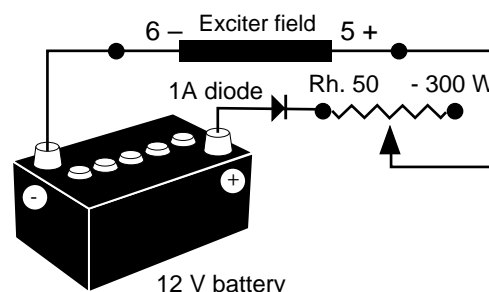

**Assembly B :** Connect a "Variac" variable power supply and a diode bridge on both exciter field wires (5+) and (6-).


Both these systems should have characteristics which are compatible with the machine field excitation power (see the nameplate).

3) Run the unit at its rated speed.

4) Gradually increase the exciter field current by adjusting the rheostat or the variac and measure the output voltages on L1- L2 - L3, checking the excitation voltage and current at no load and on load (see the machine nameplate or ask for the factory test report).

When the output voltage is at its rated value and balanced within 1 % for the rated excitation level, the machine is in good working order. The fault therefore comes from the AVR or its associated wiring (ie. sensing, auxiliary windings).

### ASSEMBLY B

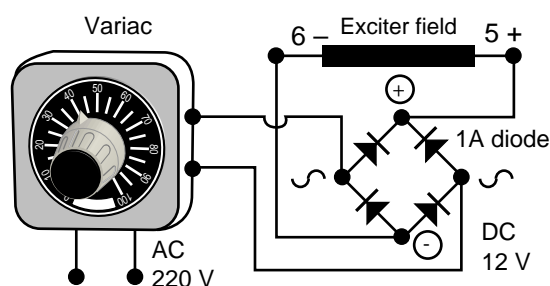


# LSA 42.2 - 2 & 4 POLE ALTERNATORS SERVICING - MAINTENANCE

## 4.6 - Dismantling, reassembly (see sections 5.4.1. & 5.4.2)

During the warranty period, this operation should only be carried out in an approved workshop or in our factory, otherwise the warranty may be invalidated.

### WARNING

Whilst being handled, the machine should remain horizontal (rotor not locked when moved).

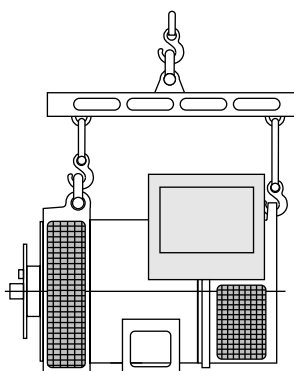

### 4.6.1 - Tools required

Pour le démontage total de la machine, il souhaitable de disposer des outils définis ci-dessous :

- 1 ratchet spanner + extension
- 1 torque wrench
- 1 7 mm flat spanner
- 1 8 mm flat spanner
- 1 10 mm flat spanner
- 1 12 mm flat spanner
- 1 8 mm socket
- 1 10 mm socket
- 1 13 mm socket
- 1 5 mm Allen key (eg. Facom: ET5)
- 1 6 mm Allen key (eg. Facom: ET6)
- 1 TORX T20 bit
- 1 TORX T30 bit
- 1 puller (eg. Facom: U35)
- 1 puller (eg. Facom: U32/350).

### 4.6.2 - Screw tightening torque

| IDENTIFICATION          | screw Ø | Torque N.m |
|-------------------------|---------|------------|
| Field term. block screw | M4      | 4 N.m      |
| Field screw             | M6      | 10 N.m     |
| Diode bridge screw      | M 6     | 5 N.m      |
| Diode nut               | M 5     | 4 N.m      |
| Assembly rod            | M 8     | 20 N.m     |
| Earth screw             | M 6     | 5 N.m      |
| Balancing bolt          | M 5     | 4 N.m      |
| Discs/shaft screw       | M 10    | 66 N.m     |

|               |     |       |
|---------------|-----|-------|
| Lifting screw | M 8 | 4 N.m |
| Grille screw  | M 6 | 5 N.m |
| Cover screw   | M 6 | 5 N.m |

### 4.6.3 - Access to connections and the regulation system

The terminals are accessed by removing the terminal box lid [48].

To access the adjustment potentiometers on the AVR, the side plate should be removed [367].


### 4.6.4 - Accessing, checking and replacing diodes

#### 4.6.4.1 - Dismantling

- Remove the terminal box lid [48].
- Remove the air intake louvre [51].
- Unscrew the fixing clamps on the power output cables, disconnect E+, E- on the exciter and R 791 module.
- Remove the 4 nuts on the tie rods.
- Remove the NDE bracket [36] using an extractor: eg. U.32 - 350 (FACOM).
- Remove the surge suppressor [347].
- Remove the 4 fixing screws from the diode bridges on the armature.
- Disconnect the diodes.
- Check the 6 diodes using either an ohmmeter or a battery lamp (see section 4.5.1).

#### 4.6.4.2 - Reassembly

- Replace the diodes, respecting the polarity (see section 4.5.1).
- Replace the surge suppressor [347].
- Insert a new O ring in the bearing housing.
- Refit the NDE bracket and pass the bundle of wires between the top bars of the flange.
- Replace the fixing clamps on the cables and the R 791 module.
- Refit the air intake louvre [51].
- Replace the terminal box lid [48].

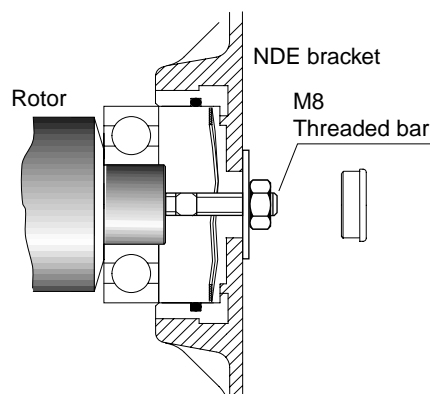

# LSA 42.2 - 2 & 4 POLE ALTERNATORS SERVICING - MAINTENANCE

## 4.6.5 - Replacing the NDE bearing on a single-bearing machine

### 4.6.5.1 - Dismantling

- Dismantle the NDE bracket [36] (see section 4.6.2.1).
- Remove the bearing [70] using a puller.



### 4.6.5.2 - Reassembly

- Heat the inner slipring of a new bearing by induction or in a drying oven at 80 °C (do not use an oil bath) and fit it to the machine.
- Place the preloading wavy washer [79] in the flange and fit a new O ring seal [349].
- Replace the NDE bracket [36] (see section 4.6.2.2).

## 4.6.6 - Replacing the bearings on a two-bearing machine

### 4.6.6.1 - Démontage

- Uncouple the alternator from the prime mover.
- Remove the 8 assembly screws.
- Remove the DE flange [30].
- Remove the NDE bracket (see section 4.6.2.1).
- Remove both bearings [60] and [70] using a puller.

### 4.6.6.2 - Reassembly


- Fit new bearings after heating them by induction or in a drying oven at 80 °C (do not use an oil bath).
- Check that both the preloading wavy washer [79] and new O ring seal have been fitted [349] on the NDE bracket [36].
- Replace the DE flange [30], and tighten the 8 fixing screws.
- Check that the whole machine is correctly assembled and that all screws are fully tightened.

## 4.6.7 - Accessing the main field and stator

### 4.6.7.1 - Dismantling

Follow the procedure for dismantling bearings (see sections 4.6.5.1 and 4.6.5.1.)

- Remove the coupling discs (single-bearing machine) or the DE flange (two-bearing machine) and insert a tube of the corresponding diameter on the shaft end or a support made according the following bellow.

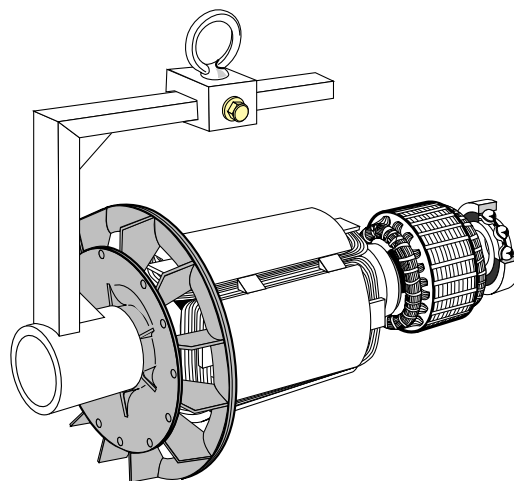


- Rest the rotor on one of its poles, then slide it out. Use the tube as a lever arm to assist dismantling.
- After extraction, be careful with the fan. It is necessary to replace the fan in case of disassembling.

**NOTE:** If intervention is required on the main field (rewinding, replacement of components), the rotor assembly must be rebalanced.

### 4.6.7.2 - Reassembly

- Follow the dismantling procedure in reverse order.
- Take care not to knock the windings when refitting the rotor in the stator.
- If you replace the fan, respect the assembly guide according the following bellow. Use a tube and a screw.

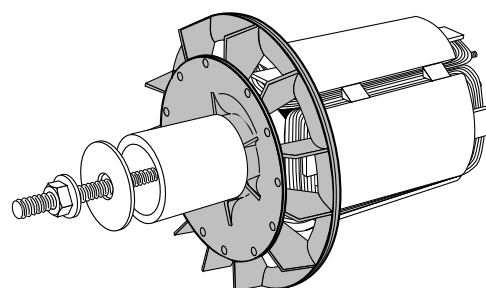

Follow the procedure for reassembling the bearings (see section 4.6.5.2 and 4.6.6.2).



**After final adjustments, the access panels or cover should be refitted.**

# LSA 42.2 - 2 & 4 POLE ALTERNATORS SERVICING - MAINTENANCE

## 4.7 - Electrical characteristics table

Alternator - 2 and 4 pole - 50 Hz/60 Hz - Standard winding n°6 and M or M1 in dedicated single phase (400 V for the excitation values).

The voltage and current values are given for no-load operation and operation at rated load with separate field excitation. All values are given at  $\pm 10\%$  and may be changed without prior notification (for exact values, consult the test report). For 60 Hz machines, the "i exc" values are approximately 5 to 10 % lower.

### 4.7.1 - 3-phase : 2 pole with SHUNT excitation

Resistances at 20 °C ( $\Omega$ )

| LSA 42.2   | VS0* | VS2* | S3*  | S4*  | M5   | M6   | L7   | VL8  |
|------------|------|------|------|------|------|------|------|------|
| L/N stator | 1,01 | 0,76 | 0,61 | 0,4  | 0,22 | 0,22 | 0,16 | 0,1  |
| Rotor      | 2,93 | 3,13 | 3,24 | 3,53 | 4,1  | 4,1  | 4,7  | 5,5  |
| Field      | 23,5 | 23,5 | 23,5 | 23,5 | 23,5 | 23,5 | 23,5 | 23,5 |
| Armature   | 0,79 | 0,79 | 0,79 | 0,79 | 0,79 | 0,79 | 0,79 | 0,79 |

Field excitation current i exc (A) - 400 V - 50 Hz

Symbols : "i exc" : excitation current of the exciter field

| LSA 42.2      | VS0* | VS2* | S3* | S4* | M5   | M6   | L7  | VL8  |
|---------------|------|------|-----|-----|------|------|-----|------|
| No-load       | 0,45 | 0,4  | 0,4 | 0,4 | 0,45 | 0,45 | 0,4 | 0,4  |
| At rated load | 1,6  | 1,7  | 1,7 | 1,7 | 1,55 | 1,85 | 1,7 | 1,65 |

\* Lister type machine

### 4.7.2 - Dedicated single phase : 2 pole with SHUNT excitation

Resistances at 20 °C ( $\Omega$ )

| LSA 42.2   | VS2  | S3    | S4    | M6    | L7    |
|------------|------|-------|-------|-------|-------|
| L/N stator | 0,36 | 0,294 | 0,190 | 0,108 | 0,077 |
| Rotor      | 3,13 | 3,24  | 3,53  | 4,1   | 4,7   |
| Field      | 23,5 | 23,5  | 23,5  | 23,5  | 23,5  |
| Armature   | 0,79 | 0,79  | 0,79  | 0,79  | 0,79  |

Field excitation current i exc (A) - 240 V - 60 Hz

Symbols : "i exc" : excitation current of the exciter field.

| LSA 42.2      | VS2  | S3   | S4   | M6   | L7   |
|---------------|------|------|------|------|------|
| No-load       | 0,26 | 0,25 | 0,27 | 0,28 | 0,26 |
| At rated load | 0,9  | 0,9  | 0,91 | 0,9  | 0,92 |

### 4.7.3 - 3-phase : 4 pole with SHUNT excitation

Resistances at 20 °C ( $\Omega$ )

| LSA 42.2   | VS0* | VS2* | S3*  | S4*  | S5   | M6   | M7   | L9   |
|------------|------|------|------|------|------|------|------|------|
| L/N stator | 1,54 | 0,7  | 0,53 | 0,32 | 0,32 | 0,2  | 0,2  | 0,19 |
| Rotor      | 1,71 | 2,1  | 2,3  | 2,7  | 2,7  | 3,3  | 3,3  | 3,7  |
| Field      | 25,6 | 25,6 | 25,6 | 25,6 | 25,6 | 25,6 | 25,6 | 25,6 |
| Armature   | 0,51 | 0,51 | 0,51 | 0,51 | 0,51 | 0,51 | 0,51 | 0,51 |

Field excitation current i exc (A) - 400 V - 50 Hz :

Symbols : "i exc" : excitation current of the exciter field

| LSA 42.2      | VS0* | VS2* | S3*  | S4* | S5  | M6  | M7  | L9  |
|---------------|------|------|------|-----|-----|-----|-----|-----|
| No-load       | 0,5  | 0,6  | 0,5  | 0,6 | 0,6 | 0,5 | 0,5 | 0,5 |
| At rated load | 1,5  | 1,6  | 1,65 | 1,4 | 1,6 | 1,3 | 1,5 | 1,5 |

\* Lister type machine

### 4.7.4 - 3-phase : 4 pole with AREP excitation

Resistances at 20 °C ( $\Omega$ ) :

| LSA 42.2            | VS2* | S4   | S5   | M6   | M7   | L9   |
|---------------------|------|------|------|------|------|------|
| L/N stator          | 0,76 | 0,34 | 0,34 | 0,22 | 0,22 | 0,2  |
| Rotor               | 2,1  | 2,7  | 2,7  | 3,3  | 3,3  | 3,7  |
| Auxil. wind. X1, X2 | 0,5  | 0,3  | 0,3  | 0,26 | 0,26 | 0,23 |
| Auxil. wind. Z1, Z2 | 0,6  | 0,5  | 0,5  | 0,44 | 0,44 | 0,41 |
| Field               | 6    | 6    | 6    | 6    | 6    | 6    |
| Armature            | 0,5  | 0,51 | 0,51 | 0,51 | 0,51 | 0,51 |

Field excitation current i exc (A) - 400 V - 50 Hz :

Symbols : "i exc" : excitation current of the exciter field

| TYPE 42.2     | VS2* | S4  | S5  | M6  | M7  | L9  |
|---------------|------|-----|-----|-----|-----|-----|
| No-load       | 0,9  | 0,9 | 0,9 | 0,8 | 0,8 | 0,7 |
| At rated load | 2,4  | 2,1 | 2,3 | 2   | 2,3 | 2,3 |

\* Lister type machine

### 4.7.5 - Dedicated single phase : 4 pole with SHUNT excitation

Resistances at 20 °C ( $\Omega$ )

| LSA 42.2   | VS2   | S3    | S5    | M7    | L9    |
|------------|-------|-------|-------|-------|-------|
| L/N stator | 0,330 | 0,248 | 0,147 | 0,072 | 0,063 |
| Rotor      | 2,1   | 2,3   | 2,7   | 3,3   | 3,7   |
| Field      | 25,6  | 25,6  | 25,6  | 25,6  | 25,6  |
| Armature   | 0,51  | 0,51  | 0,51  | 0,51  | 0,51  |

Field excitation current i exc (A) -240 V - 60 Hz

Symbols : "i exc" : excitation current of the exciter field

| LSA 42.2      | VS2  | S3   | S5   | M7   | L9   |
|---------------|------|------|------|------|------|
| No-load       | 0,45 | 0,43 | 0,46 | 0,61 | 0,62 |
| At rated load | 1,21 | 1,21 | 1,1  | 1,05 | 1,17 |

|   |                              |                               |
|---|------------------------------|-------------------------------|
| <b>LEROY-SOMER</b>  | INSTALLATION AND MAINTENANCE | Réf. 3433 GB - 4.33/a - 01.01 |
| <b>LSA 42.2 - 2 &amp; 4 POLE</b><br><b>ALTERNATORS</b><br>SPARE PARTS |                              |                               |

## 5 - SPARE PARTS

### 5.1 - First maintenance parts

Emergency repair kits are available as an option.

They contain the following items :

| No. | Description             | Qty | LSA 42.2 - SHUNT 2 & 4 P | Coding         |
|-----|-------------------------|-----|--------------------------|----------------|
| 198 | Voltage regulator (AVR) | 1   | R 230                    | AEM 110 RE 001 |
| 343 | Diode bridge assembly   | 1   | LSA 411.1.59/60          | ESC 025 MD 008 |
| 347 | Surge suppressor        | 1   | LSA 411.1.17A            | CII 411 EQ 017 |
|     | AVR fuse                | 1   | 250 V - 8 A / slow       |                |
|     |                         |     |                          |                |

| No. | Description             | Qty | LSA 42.2 - AREP 4 P | Coding         |
|-----|-------------------------|-----|---------------------|----------------|
| 198 | Voltage regulator (AVR) | 1   | R 438               | AEM 110 RE 003 |
| 343 | Diode bridge assembly   | 1   | LSA 411.1.59/60     | ESC 025 MD 008 |
| 347 | Surge suppressor        | 1   | LSA 411.1.17A       | CII 411 EQ 017 |
|     | AVR fuse                | 1   | 250 V - 8 A / slow  |                |
|     |                         |     |                     |                |

### 5.2 - Description of bearings

| No. | Description    | Qty | LSA 42.2 - 2 & 4 P | Coding         |
|-----|----------------|-----|--------------------|----------------|
| 60  | D.E. bearing   | 1   | 6309 2RS/C3        | RLT 045 TN 030 |
| 70  | N.D.E. bearing | 1   | 6305 2RS/C3        | RLT 025 TN 030 |

### 5.3 - Technical support service

Our technical support service will be happy to provide any information you require.

**When ordering spare parts, you should indicate the complete machine type, its serial number and the information indicated on the nameplate.**

Address your enquiry to your usual contact or :

#### MOTEURS LEROY-SOMER

Usine de Sillac/Alternators

16015 ANGOULEME CEDEX - FRANCE

Tel. : (33) 05.45.64.45.64

Technical support service :

(33) 05.45.64.43.66 - (33) 05.45.64.43.67

(33) 05.45.64.43.68 - (33) 05.45.64.43.69

fax : (33) 05.45.64.43.24

e. mail : sat.sil@leroy-somer.com

**WARNING**

Part numbers should be identified from the exploded views and their description in the parts list.

Our extensive network of "service stations" can dispatch the necessary parts without delay.


To ensure correct operation and the safety of our machines, we recommend the use of original manufacture spare parts.

In the event of failure to comply with this advice, the manufacturer cannot be held responsible for any damage.

# LSA 42.2 - 2 & 4 POLE ALTERNATORS SPARE PARTS

## 5.4 - Exploded view, parts list

### 5.4.1 - LSA 42.2 single bearing, AREP or SHUNT

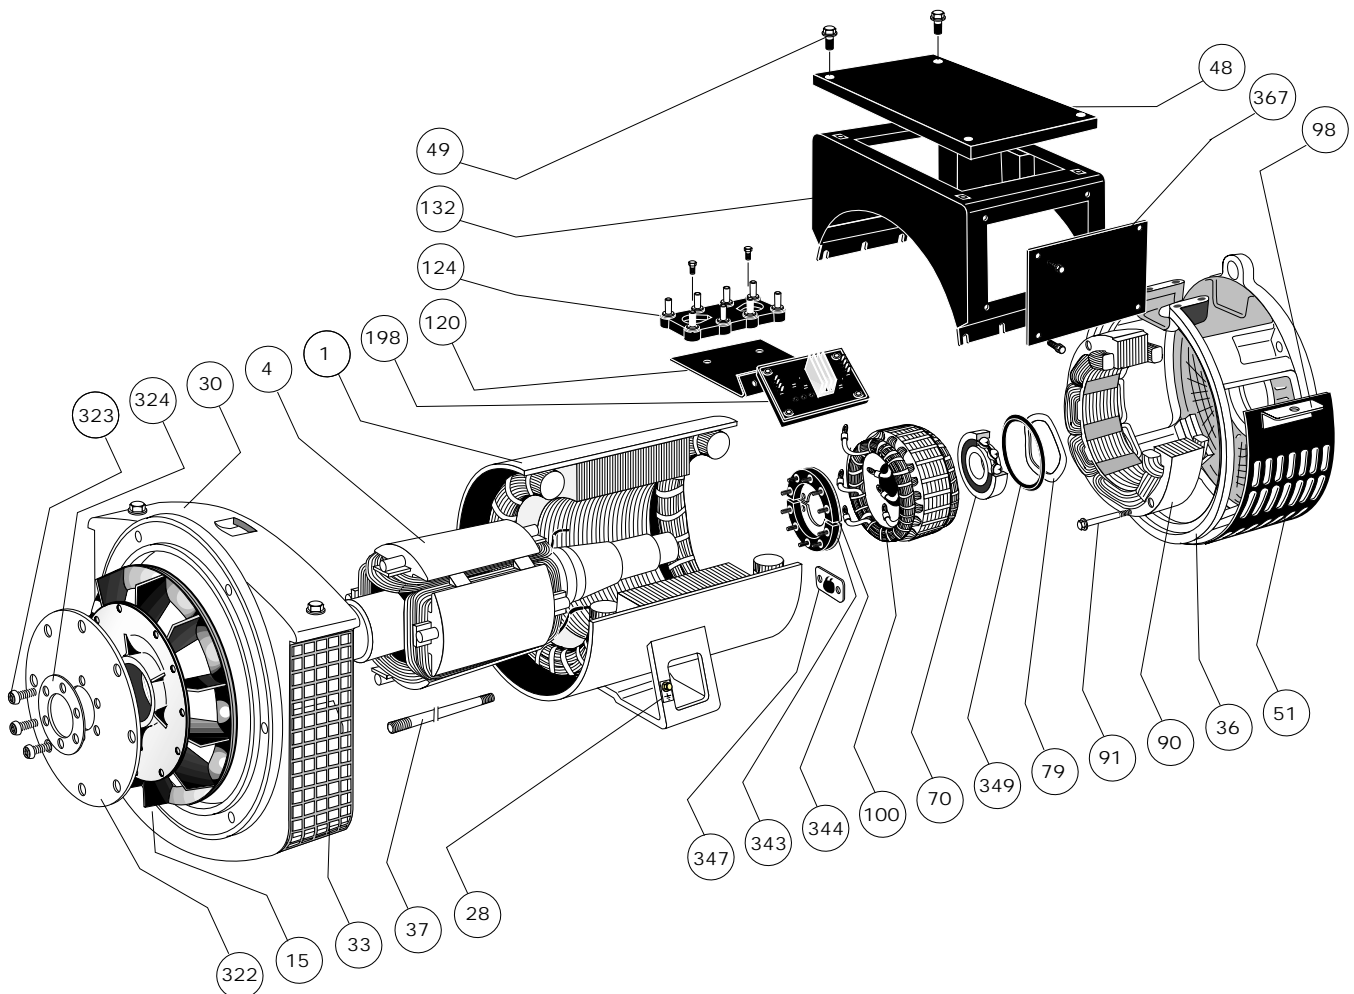


| No. | Nbr. | Description               | No. | Nbr. | Description                   |
|-----|------|---------------------------|-----|------|-------------------------------|
| 1   | 1    | Stator assembly           | 98  | 3    | Corner plate                  |
| 4   | 1    | Rotor assembly            | 100 | 1    | Exciter armature              |
| 15  | 1    | Fan                       | 120 | 1    | Terminal plate support (AREP) |
| 28  | 1    | Earth terminal            | 124 | 1    | Terminal plate                |
| 30  | 1    | DE flange                 | 132 | 1    | Terminal box                  |
| 33  | 1    | Air outlet grille         | 198 | 1    | Regulator (AVR)               |
| 36  | 1    | N.D.E. bracket            | 322 | 1    | Coupling disc                 |
| 37  | 4    | Tie rod                   | 323 | 6    | Fixing screw                  |
| 48  | 1    | Terminal box lid          | 324 | 1    | Clamping washer               |
| 49  | 20   | Terminal box fixing screw | 343 | 1    | Direct diode assembly         |
| 51  | 1    | Air intake grille         | 344 | 1    | Reverse diode assembly        |
| 70  | 1    | NDE bearing               | 347 | 1    | Surge suppressor              |
| 79  | 1    | Preloading wavy washer    | 367 | 2    | Inspection door               |
| 90  | 1    | Wound exciter field       | 349 | 1    | O ring seal                   |
| 91  | 4    | Field fixing screw        |     |      |                               |
|     |      |                           |     |      |                               |
|     |      |                           |     |      |                               |




# LSA 42.2 - 2 & 4 POLE ALTERNATORS SPARE PARTS

## 5.4.2 - LSA 42.2 two-bearing, AREP or SHUNT

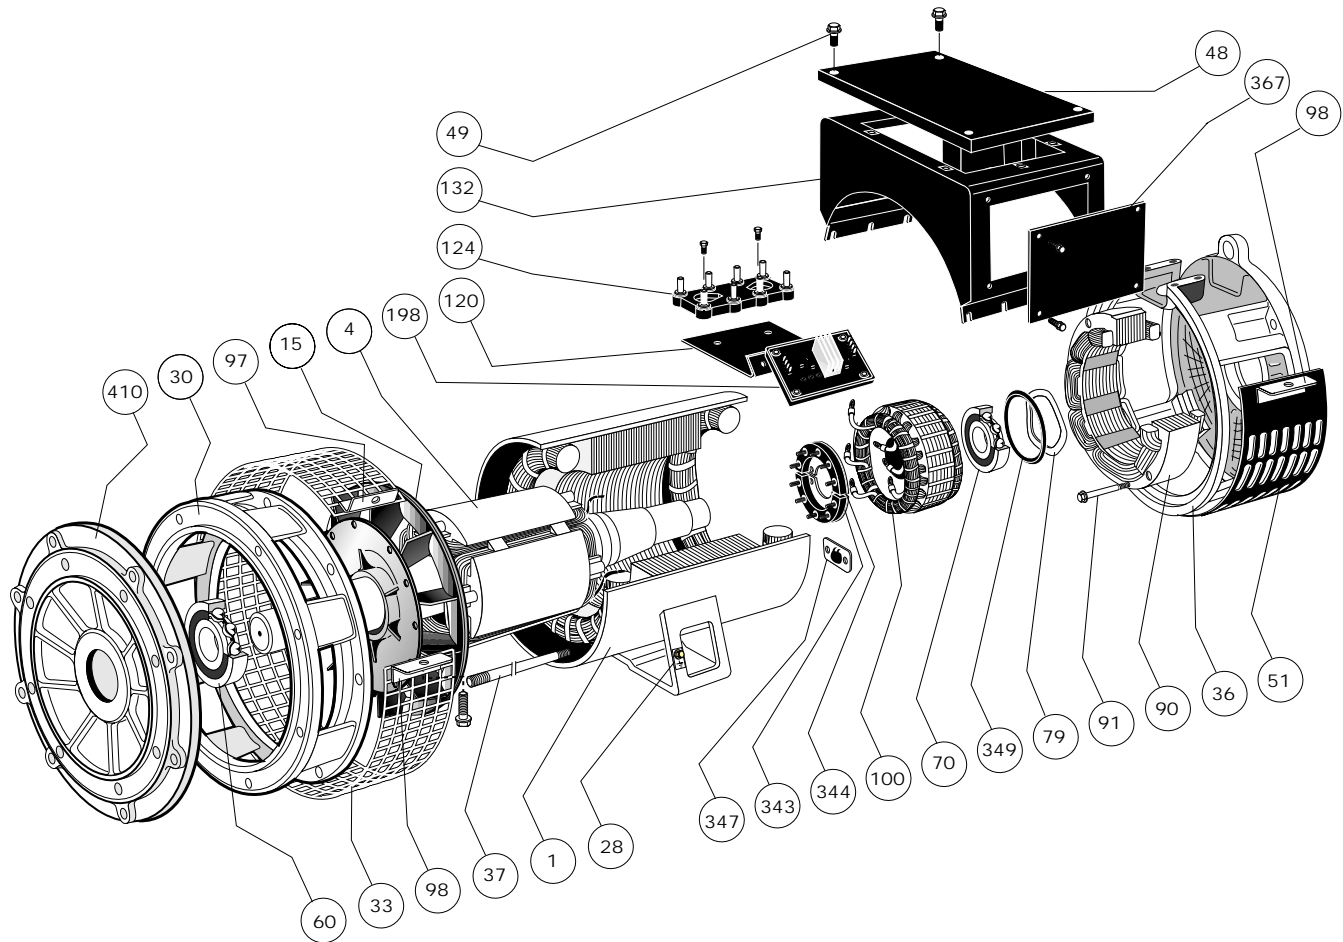

| No. | Nbr. | Description               | No. | Nbr. | Description                   |
|-----|------|---------------------------|-----|------|-------------------------------|
| 1   | 1    | Stator assembly           | 91  | 4    | Field fixing screw            |
| 4   | 1    | Rotor assembly            | 97  | 1    | Corner plate male             |
| 15  | 1    | Fan                       | 98  | 3    | Corner plate                  |
| 28  | 1    | Earth terminal            | 100 | 1    | Exciter armature              |
| 30  | 1    | DE flange                 | 120 | 1    | Terminal plate support (AREP) |
| 33  | 1    | Air outlet grille         | 124 | 1    | Terminal plate                |
| 36  | 1    | N.D.E. bracket            | 132 | 1    | Terminal box                  |
| 37  | 4    | Tie rod                   | 198 | 6    | Regulator (AVR)               |
| 48  | 1    | Terminal box lid          | 343 | 1    | Direct diode assembly         |
| 49  | 20   | Terminal box fixing screw | 344 | 1    | Reverse diode assembly        |
| 51  | 1    | Air intake grille         | 347 | 1    | Surge suppressor              |
| 60  | 1    | DE bearing                | 367 | 2    | Inspection door               |
| 70  | 1    | NDE bearing               | 349 | 1    | O ring seal                   |
| 79  | 1    | Preloading wavy washer    | 410 | 1    | DE flange                     |
| 90  | 4    | Wound exciter field       |     |      |                               |
|     |      |                           |     |      |                               |
|     |      |                           |     |      |                               |



MOTEURS LEROY-SOMER 16015 ANGOULÊME CEDEX - FRANCE

RCS ANGOULÊME N° B 671 820 223  
S.A. au capital de 131 910 700 F

*<http://www.leroy-somer.com>*