



CUMMINS QSC8.3 and QSL9 ENGINE OWNERS MANUAL


**"Portions copyright CUMMINS INC.
REPRODUCED FOR LIMITED LICENSED USE ONLY, WITH PERMISSION FROM CUMMINS INC.
UNLICENSED USE AND/OR REPRODUCTION ARE EXPRESSLY PROHIBITED"**

Utility Equipment
P.O. Box 868 - 501 Sanford Ave
Mocksville, N.C. 27028

Book 22834568 (05/07)



Owners Manual QSC8.3 and QSL9 Engine

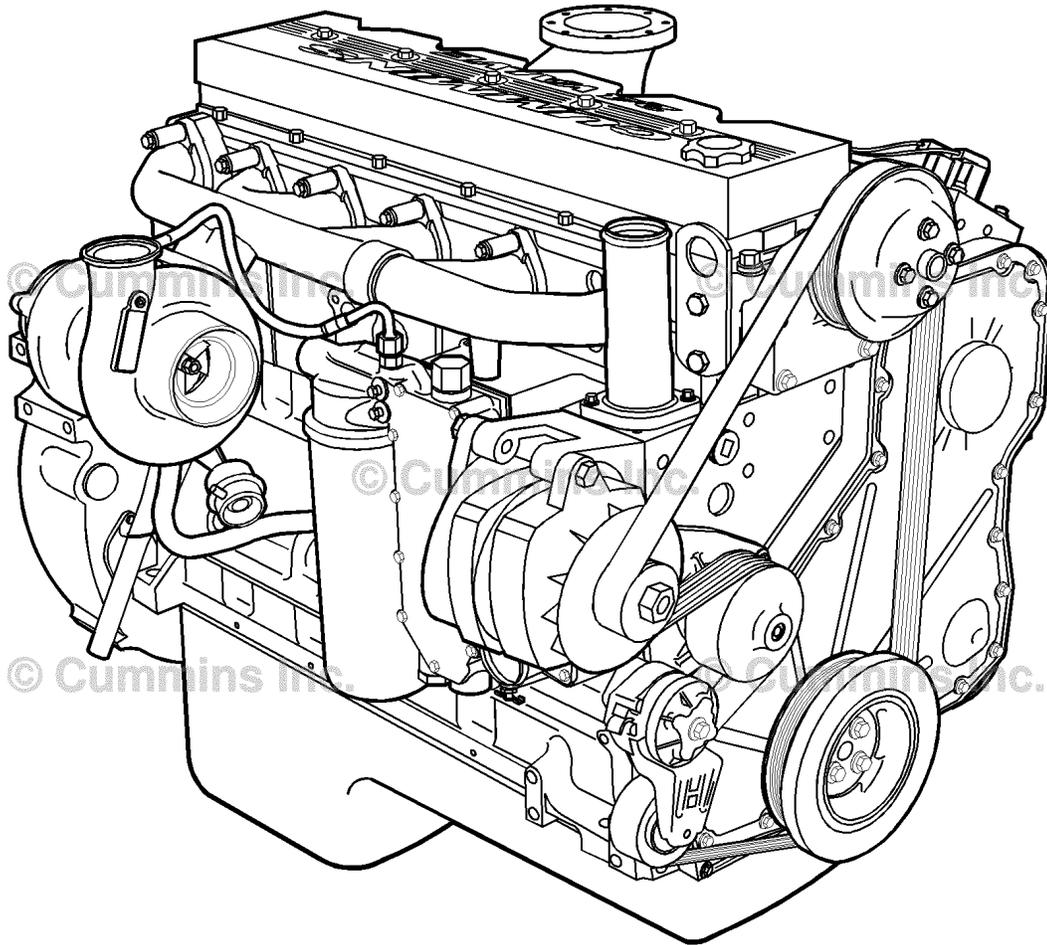

00d00016

Copyright© 2007
Cummins Inc.
All rights reserved

Bulletin 4915536
Printed 02-MAY-2007

Foreword

This manual contains information for the correct operation and maintenance of your Cummins engine.

Read and follow all safety instructions. Refer to the WARNING in the General Safety Instructions in Section i - Introduction.

Keep this manual with the equipment. If the equipment is traded or sold, give the manual to the new owner.

The information, specifications, and recommended maintenance guidelines in this manual are based on information in effect at the time of printing. Cummins Inc. reserves the right to make changes at any time without obligation. If you find differences between your engine and the information in this manual, contact your local Cummins Authorized Repair Location or call 1-800-DIESELS (1-800-343-7357) toll free in the U.S. and Canada.

The latest technology and the highest quality components were used to produce this engine. When replacement parts are needed, we recommend using only genuine Cummins or ReCon® exchange parts.

NOTE: Warranty information is located in Section W. Make sure you are familiar with the warranty or warranties applicable to your engine.

Table of Contents

	Section
Introduction	i
Engine Identification	E
Operating Instructions	1
Maintenance Guidelines	2
Service Literature	L
Maintenance Specifications	V
Warranty	W

Important Reference Numbers

Fill in the part name and number in the blank spaces provided below. This will give you a reference whenever service or maintenance is required.

Name	Number	Number
Engine Model		
Engine Serial Number (ESN)		
Control Parts List (CPL)		
Fuel Pump Part Number		
Electronic Control Module (ECM)		
Electronic Control Module Serial Numbers (ECM)		
Filter Part Numbers:		
• Air Cleaner Element		
• Lubricating Oil		
• Fuel		
• Fuel-Water Separator		
• Coolant		
• Crankcase Ventilation		
• Cummins Particulate Filter		
Governor Control Module (GCM) (if applicable)		
Belt Part Numbers:		
•		
•		
•		
Clutch or Marine Gear (if applicable):		
• Model		
• Serial Number		
• Part Number		
• Oil Type		
• Sea Water Pump		
- Model		
- Part Number		

Section i - Introduction

Section Contents

	Page
Acronyms and Abbreviations	i-5
General Information.....	i-5
General Safety Instructions	i-3
Important Safety Notice.....	i-3
Illustrations	i-2
General Information.....	i-2
Symbols	i-1
General Information.....	i-1

This Page Left Intentionally Blank


Symbols

General Information

The following symbols have been used in this manual to help communicate the intent of the instructions. When one of the symbols appears, it conveys the meaning defined below:

	WARNING - Serious personal injury or extensive property damage can result if the warning instructions are not followed.		PERFORM a mechanical or time MEASUREMENT .
	CAUTION - Minor personal injury can result or a part, an assembly, or the engine can be damaged if the caution instructions are not followed.		LUBRICATE the part or assembly.
	Indicates a REMOVAL or DISASSEMBLY step.		Indicates that a WRENCH or TOOL SIZE will be given.
	Indicates an INSTALLATION or ASSEMBLY step.		TIGHTEN to a specific torque.
	INSPECTION is required.		PERFORM an electrical MEASUREMENT .
	CLEAN the part or assembly.		Refer to another location in this manual or another publication for additional information.
			The component weighs 23 kg [50 lb] or more. To avoid personal injury, use a hoist or get assistance to lift the component.


17800009

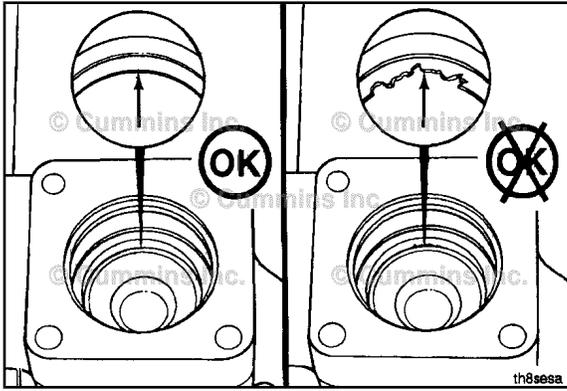

Illustrations

General Information

Some of the illustrations throughout this manual are generic and will **not** look exactly like the engine or parts used in your application. The illustrations can contain symbols to indicate an action required and an acceptable or **not** acceptable condition.

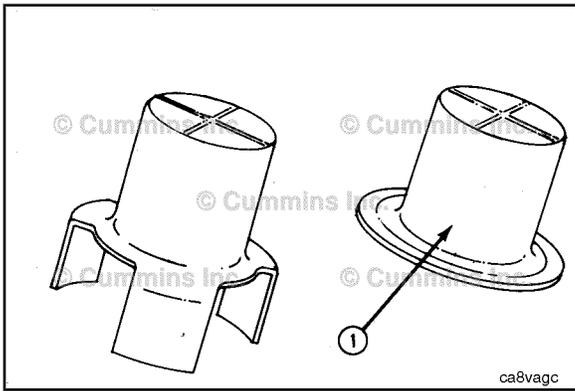

The illustrations are intended to show repair or replacement procedures. The procedure will be the same for all applications, although the illustration can differ.

General Safety Instructions

Important Safety Notice



Improper practices, carelessness, or ignoring the warnings can cause burns, cuts, mutilation, asphyxiation or other personal injury or death.

Read and understand all of the safety precautions and warnings before performing any repair. This list contains the general safety precautions that **must** be followed to provide personal safety. Special safety precautions are included in the procedures when they apply.

- Work in an area surrounding the product that is dry, well lit, ventilated, free from clutter, loose tools, parts, ignition sources and hazardous substances. Be aware of hazardous conditions that can exist.
- **Always** wear protective glasses and protective shoes when working.
- Rotating parts can cause cuts, mutilation or strangulation.
- Do **not** wear loose-fitting or torn clothing. Remove all jewelry when working.
- Disconnect the battery (negative [-] cable first) and discharge any capacitors before beginning any repair work. Disconnect the air starting motor if equipped to prevent accidental engine starting. Put a "Do **Not** Operate" tag in the operator's compartment or on the controls.
- Use **ONLY** the proper engine barring techniques for manually rotating the engine. Do **not** attempt to rotate the crankshaft by pulling or prying on the fan. This practice can cause serious personal injury, property damage, or damage to the fan blade(s) causing premature fan failure.
- If an engine has been operating and the coolant is hot, allow the engine to cool before slowly loosening the filler cap to relieve the pressure from the cooling system.
- **Always** use blocks or proper stands to support the product before performing any service work. Do **not** work on anything that is supported **ONLY** by lifting jacks or a hoist.
- Relieve all pressure in the air, oil, fuel, and cooling systems before any lines, fittings, or related items are removed or disconnected. Be alert for possible pressure when disconnecting any device from a system that utilizes pressure. Do **not** check for pressure leaks with your hand. High pressure oil or fuel can cause personal injury.
- To reduce the possibility of suffocation and frostbite, wear protective clothing and **ONLY** disconnect liquid refrigerant (Freon) lines in a well ventilated area. To protect the environment, liquid refrigerant systems **must** be properly emptied and filled using equipment that prevents the release of refrigerant gas (fluorocarbons) into the atmosphere. Federal law requires capturing and recycling refrigerant.
- To reduce the possibility of personal injury, use a hoist or get assistance when lifting components that weigh 23 kg [50 lb] or more. Make sure all lifting devices such as chains, hooks, or slings are in good condition and are of the correct capacity. Make sure hooks are positioned correctly. **Always** use a spreader bar when necessary. The lifting hooks **must not** be side-loaded.
- Corrosion inhibitor, a component of SCA and lubricating oil, contains alkali. Do **not** get the substance in eyes. Avoid prolonged or repeated contact with skin. Do **not** swallow internally. In case of contact, immediately wash skin with soap and water. In case of contact, immediately flood eyes with large amounts of water for a minimum of 15 minutes. **IMMEDIATELY CALL A PHYSICIAN. KEEP OUT OF REACH OF CHILDREN.**
- Naptha and Methyl Ethyl Ketone (MEK) are flammable materials and **must** be used with caution. Follow the manufacturer's instructions to provide complete safety when using these materials. **KEEP OUT OF REACH OF CHILDREN.**
- To reduce the possibility of burns, be alert for hot parts on products that have just been turned off, exhaust gas flow, and hot fluids in lines, tubes, and compartments.
- **Always** use tools that are in good condition. Make sure you understand how to use the tools before performing any service work. Use **ONLY** genuine Cummins or Cummins ReCon® replacement parts.
- **Always** use the same fastener part number (or equivalent) when replacing fasteners. Do **not** use a fastener of lesser quality if replacements are necessary.
- Do **not** perform any repair when fatigued or after consuming alcohol or drugs that can impair your functioning.
- Some state and federal agencies in the United States of America have determined that used engine oil can be carcinogenic and can cause reproductive toxicity. Avoid inhalation of vapors, ingestion, and prolonged contact with used engine oil.
- Liquefied petroleum gas is heavier than air and can accumulate near the floor, in sumps, and low-lying areas.
- Natural gas is lighter than air and can accumulate under hood and awnings.
- To reduce the possibility of suffocation and frostbite, wear protective clothing and **ONLY** disconnect natural gas and liquefied petroleum gas lines in a well ventilated area.
- Coolant is toxic. If **not** reused, dispose of in accordance with local environmental regulations.
- The catalyst reagent contains urea. Do not get the substance in your eyes. In Case of contact, immediately flood eyes with large amounts of water for a minimum of 15 minutes. Avoid prolonged contact with skin. In case of contact, immediately wash skin with soap and water. Do not swallow internally. In the event the catalyst reagent is ingested, contact a physician immediately.

- The catalyst substrate contains Vanadium Pentoxide. Vanadium Pentoxide has been determined by the State of California to cause cancer. Always wear protective gloves and eye protection when handling the catalyst assembly. Do not get the catalyst material in your eyes. In Case of contact, immediately flood eyes with large amounts of water for a minimum of 15 minutes. Avoid prolonged contact with skin. In case of contact, immediately wash skin with soap and water.
- The Catalyst substrate contains Vanadium Pentoxide. Vanadium Pentoxide has been determined by the State of California to cause cancer. In the event the catalyst is being replaced, dispose of in accordance with local regulations.
- California Proposition 65 Warning - Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

Acronyms and Abbreviations

General Information

The following list contains some of the acronyms and abbreviations used in this manual.

API	American Petroleum Institute
ASTM	American Society of Testing and Materials
BTU	British Thermal Unit
°C	Celsius
CARB	California Air Resources Board
C.I.D.	Cubic Inch Displacement
CNG	Compressed Natural Gas
CPL	Control Parts List
cSt	Centistokes
ECM	Electronic Control Module
EGR	Exhaust Gas Recirculation
EPA	Environmental Protection Agency
°F	Fahrenheit
FMI	Failure Mode Identifier
GVW	Gross Vehicle Weight
LPG	Liquefied Petroleum Gas
Hg	Mercury
hp	Horsepower
H₂O	Water
ICM	Ignition Control Module
km/l	Kilometers per Liter
kPa	Kilopascal
LNG	Liquid Natural Gas
LTA	Low Temperature Aftercooling
MPa	Megapascal
mph	Miles Per Hour
mpq	Miles Per Quart
N•m	Newton-meter
NG	Natural Gas
OEM	Original Equipment Manufacturer
PID	Parameter Identification Descriptions
ppm	Parts Per Million
psi	Pounds Per Square Inch
PTO	Power Takeoff
RGT	Rear Gear Train
rpm	Revolutions Per Minute
SAE	Society of Automotive Engineers
SCA	Supplemental Coolant Additive
STC	Step Timing Control
SID	Subsystem Identification Descriptions
VS	Variable Speed
VSS	Vehicle Speed Sensor

Section E - Engine Identification


Section Contents

	Page
Engine Identification	E-1
Cummins® Engine Nomenclature.....	E-2
ECM Dataplate.....	E-2
Engine Dataplate.....	E-1
Fuel Injection Pump Dataplate.....	E-2

This Page Left Intentionally Blank


Engine Identification

Engine Dataplate

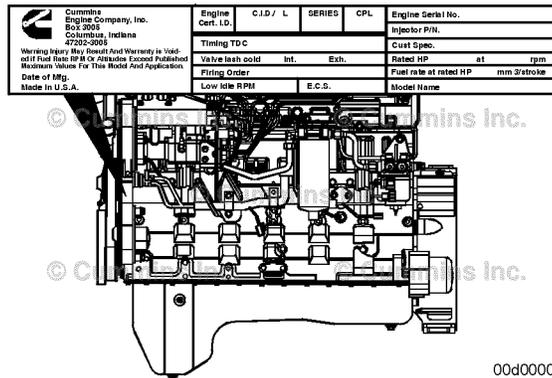

00d00001

The engine dataplate provides important facts about the engine. The engine serial number (ESN) and control parts list (CPL) provide information for service and ordering parts. The engine dataplate **must not** be changed unless approved by Cummins Inc.

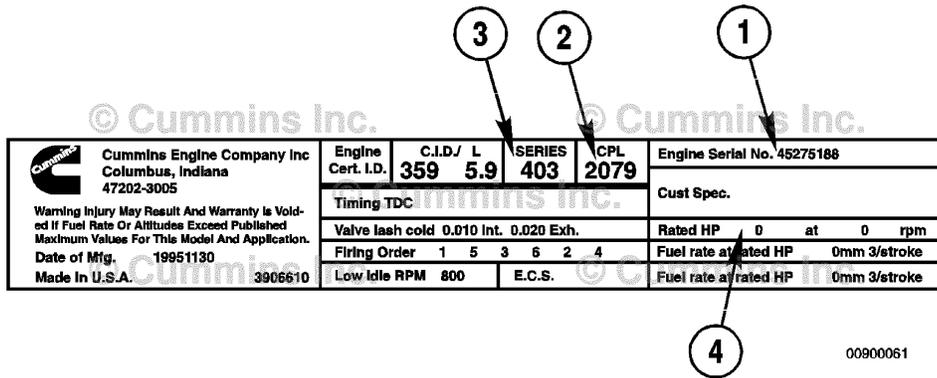


00900061

The dataplate is located on the top side of the gear housing.


Have the following engine data available when communicating with a Cummins Authorized Repair Location:

1. Engine serial number (ESN)
2. Control parts list (CPL)
3. Model
4. Horsepower and rpm rating.

If the engine dataplate (1) is **not** readable, the engine serial number (ESN) (2) can be found on the engine block on top of the lubricating oil cooler housing. Additional engine information is on the electronic control module (ECM) dataplate.

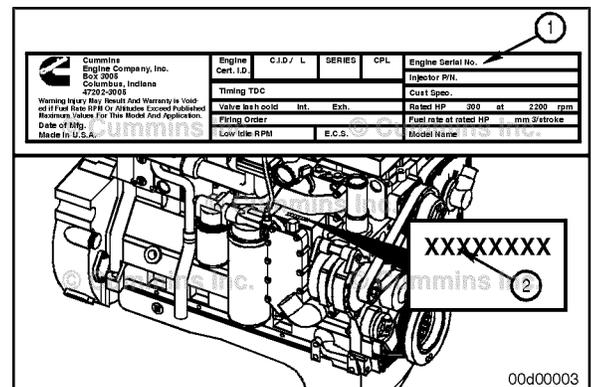


00d00003

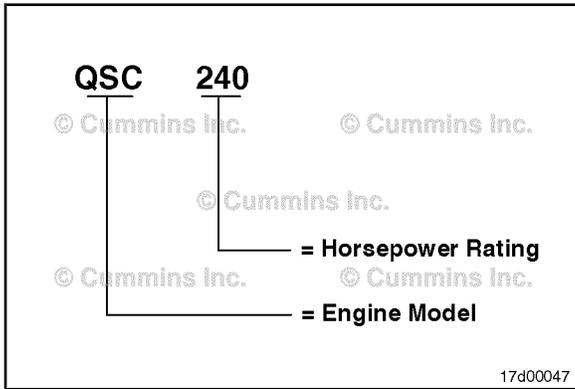

Cummins® Engine Nomenclature


The Cummins® engine nomenclature provides the engine model and horsepower rating.

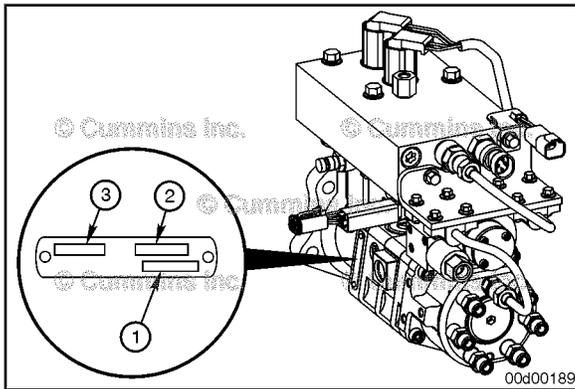

Fuel Injection Pump Dataplate

The Cummins Accumulator Pump System (CAPS) fuel injection pump dataplate is located on the side of the injection pump. The dataplate contains the following information:

1. Cummins part number
2. Pump serial number
3. Factory code.

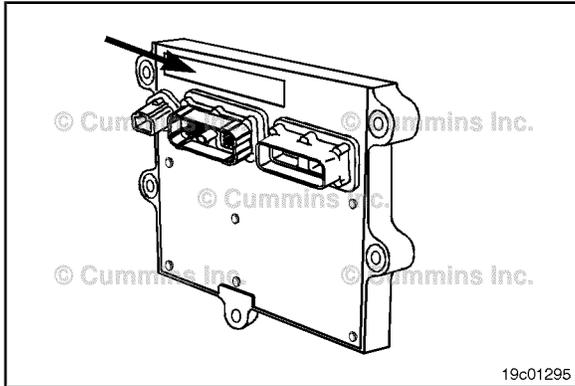

ECM Dataplate

The ECM dataplate is located on the front of the ECM.

The following information is found on the ECM dataplate:

- ECM part number (PN)
- ECM serial number (SN)
- ECM date code (DC)
- Engine serial number (ESN)
- ECM Code (identifies the software in the ECM).

Section 1 - Operating Instructions

Section Contents

	Page
Cold Weather Starting	1-3
General Information.....	1-3
Using Starting Aids.....	1-3
Electromagnetic Interference (EMI)	1-6
General Information.....	1-6
System EMI Radiation Levels.....	1-7
System EMI Susceptibility.....	1-6
Engine Operating Range	1-6
General Information.....	1-6
Engine Shutdown	1-6
General Information.....	1-6
Normal Starting Procedure	1-2
General Information.....	1-2
Operating Instructions - Overview	1-1
General Information.....	1-1
Operating the Engine	1-3
Ambient Temperature.....	1-4
0 to -32°C [32 to -25°F].....	1-4
-32 to -54°C [-25 to -65°F].....	1-4
Cold Weather.....	1-4
Normal.....	1-3
Winterfronts and Shutters.....	1-5
Starting Procedure After Extended Shutdown or Oil Change	1-3
General Information.....	1-3

This Page Left Intentionally Blank

Operating Instructions - Overview

General Information




Correct care of your engine will result in longer life, better performance, and more economical operation.

Follow the daily maintenance checks listed in Maintenance Guidelines (Section 2).


The **new** Cummins engine associated with this manual does **not** require a "break-in" procedure. This section of the manual provides all of the necessary information required for proper engine operation.

Check the oil pressure indicators, temperature indicators, warning lights, and other gauges daily to make sure they are operational.

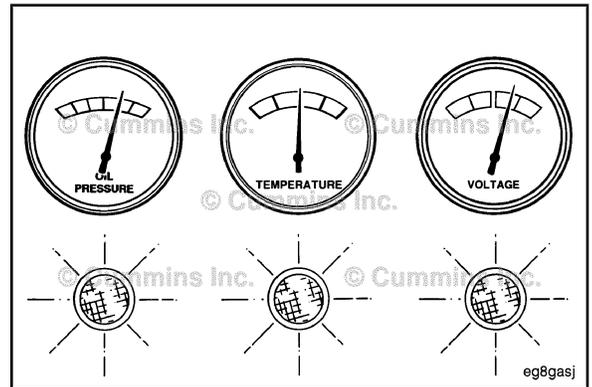


⚠️ WARNING ⚠️

DO NOT OPERATE A DIESEL ENGINE WHERE THERE ARE OR CAN BE COMBUSTIBLE VAPORS. The vapors can be sucked through the air intake system and cause engine acceleration and overspeeding that can result in a fire, an explosion, and extensive property damage. Numerous safety devices are available, such as air intake shutoff devices, to minimize the risk of overspeeding where an engine, due to its application, due to a fuel spill or gas leak. Remember, Cummins has no way of knowing the use you have for your engine. **THE EQUIPMENT OWNER AND OPERATOR ARE RESPONSIBLE FOR SAFE OPERATION IN A HOSTILE ENVIRONMENT. CONSULT YOUR CUMMINS AUTHORIZED REPAIR LOCATION FOR FURTHER INFORMATION.**

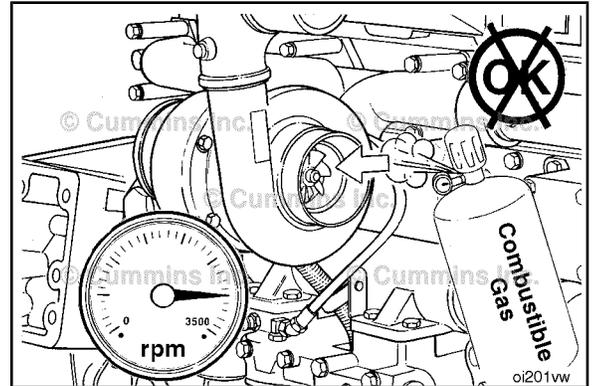


Cummins recommends the installation of an air intake shutoff device or a similar safety device to minimize the risk of overspeeding where an engine, due to the vehicle, vessel or equipment being operated in a combustible environment, such as due to a fuel spill or gas leak.

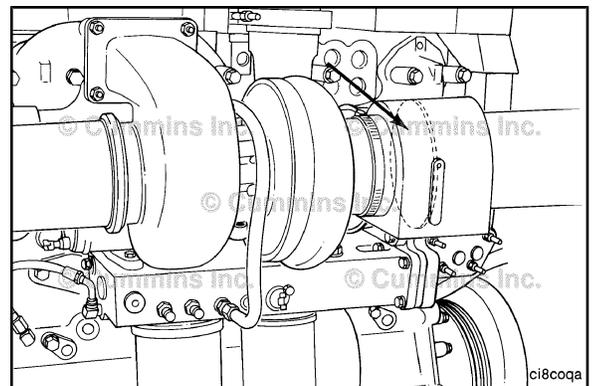

⚠CAUTION⚠


Do not expose the engine to corrosive chemicals. Corrosive chemicals can damage the engine.

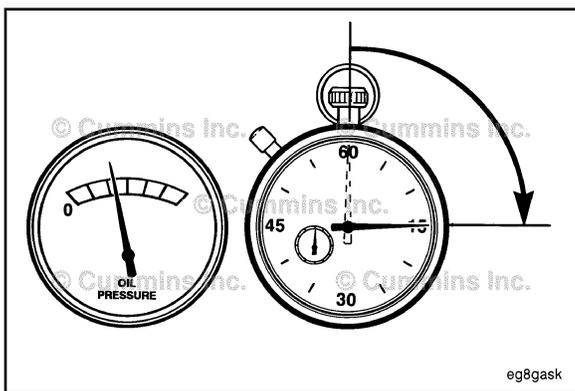


**Normal Starting Procedure
General Information**

⚠CAUTION⚠

The engine must have adequate oil pressure within 15 seconds after starting. If the WARNING lamp indicating low oil pressure has not gone out or there is no oil pressure indicated on a gauge within 15 seconds, shut off the engine immediately to avoid engine damage. The low oil pressure troubleshooting procedure is located in Troubleshooting Symptoms (Section TS).

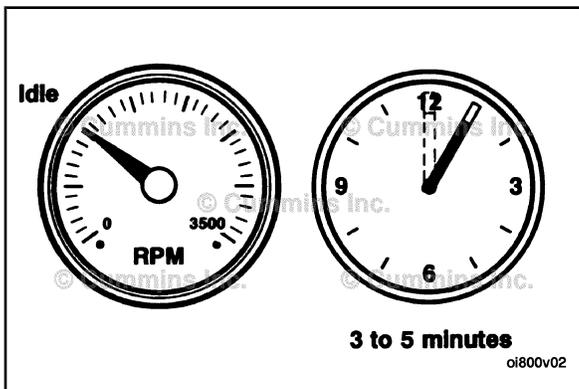

Idle the engine 3 to 5 minutes before operating with a load.

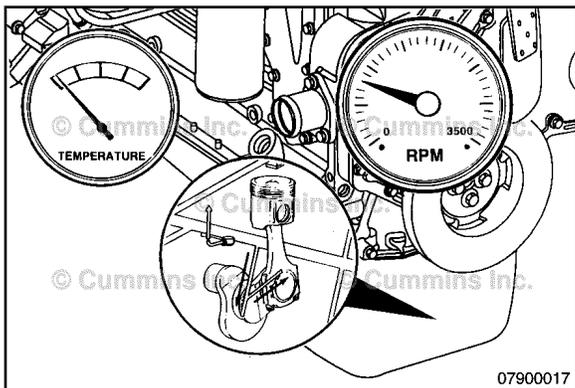


After starting a cold engine, increase the engine speed (rpm) slowly to provide adequate lubrication to the bearings and to allow the oil pressure to stabilize.

⚠CAUTION⚠


Do not operate engine at low idle for long periods with engine coolant temperature below the minimum specification in Maintenance Specifications (Section V). This can result in the following:

- Fuel Dilution of the lubricating oil
- Carbon build up in the cylinder
- Cylinder head valve sticking
- Reduced performance

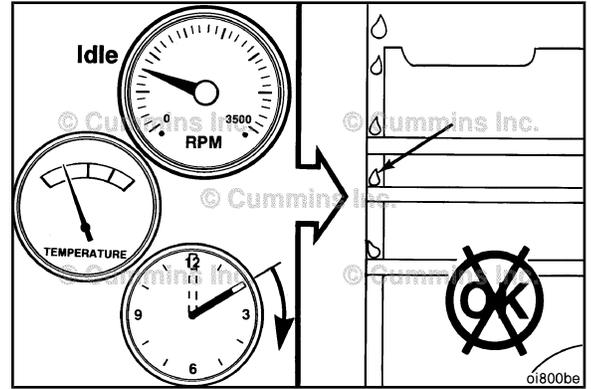

Using Starting Aids

Cold weather starting aids are available for your engine. Contact a local Cummins Authorized Repair Location for more information.

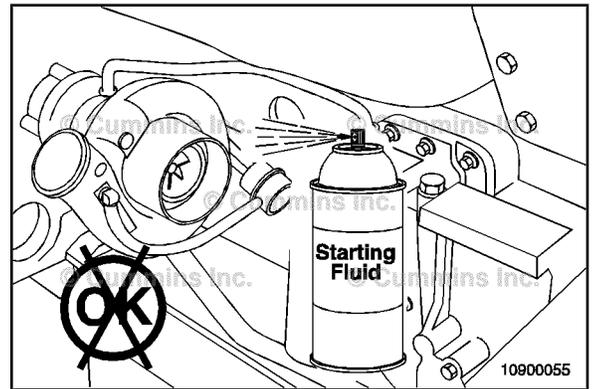

Starting Procedure After Extended Shutdown or Oil Change

General Information


Follow the Normal Starting Procedure in this section. The engine will not start until the minimum cranking oil pressure is detected by the ECM. It can take more cranking time to start the engine after an extended shut down or oil change.


Operating the Engine

Normal


If equipped, monitor the oil pressure and coolant temperature gauges frequently. Refer to Lubricating Oil System specifications and Cooling System specifications, in Maintenance Specifications (Section V) for recommended operating pressures and temperatures. Shut off the engine if any pressure or temperature does **not** meet the specifications.

Continuous operation with engine coolant temperature above or below the engine coolant temperature specifications listed in Maintenance Specifications (Section V) can damage the engine.

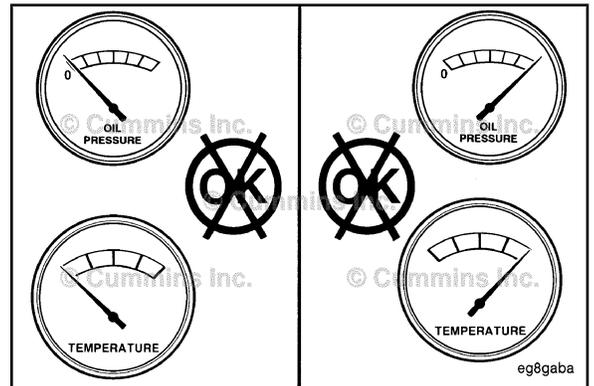

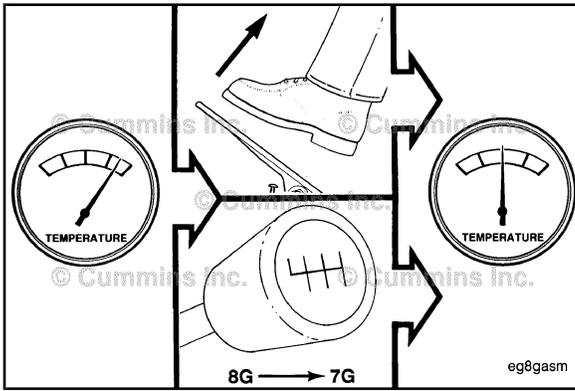

If an overheating condition starts to occur, reduce the power output of the engine by releasing the accelerator pedal or lever or shifting the transmission to a lower gear, or both, until the temperature returns to the normal operating range. If the engine temperature does **not** return to normal, shut off the engine, and refer to Troubleshooting Symptoms (Section TS), or contact a Cummins Authorized Repair Location.

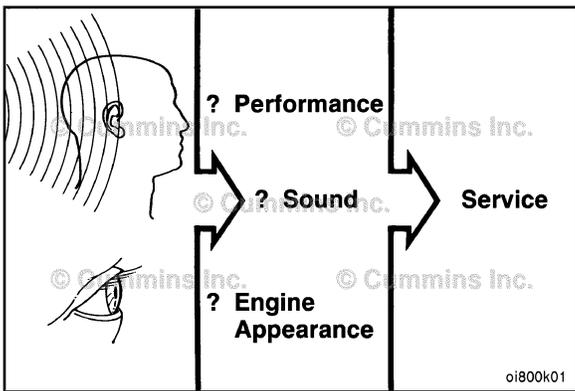

Most failures give an early warning. Look and listen for changes in performance, sound, or engine appearance that can indicate service or engine repair is needed. Some changes to look for are:

- Engine misfires
- Vibration
- Unusual engine noises
- Sudden changes in engine operating temperatures or pressures
- Excessive smoke
- Loss of power
- An increase in oil consumption
- An increase in fuel consumption
- Fuel, oil, or coolant leaks.

Cold Weather

It is possible to operate engines in extremely cold environments if they are properly prepared and maintained. Satisfactory performance of an engine in low ambient temperature conditions requires modification of the engine, surrounding equipment, operating practices and maintenance procedures.

The correct engine coolant lubricating oil and fuels **must** be used for the cold weather range in which the engine is being operated. Below are the recommendations for these critical engine fluids:

Ambient Temperature

0 to -32°C [32 to -25°F]

Use 50-percent ethylene glycol antifreeze and 50-percent water for the engine coolant mixture.

Refer to Maintenance Specifications (Section V) Lubricating Oil recommendations for the correct specifications.

The Diesel fuel **must** have maximum cloud and pour points 6°C [10°F] lower than the ambient temperature in which the engine operates.

-32 to -54°C [-25 to -65°F]

Use 60-percent ethylene glycol antifreeze and 40-percent water for the engine coolant mixture.

Refer to Maintenance Specifications (Section V) Lubricating Oil recommendations for the correct specifications.

The Diesel fuel **must** have maximum cloud and pour points 6°C [10°F] lower than the ambient temperature in which the engine operates.

The following cold weather operating aids are required for cold weather situations:


Cold Weather Operating Aids										
Temperature	Starting Aid	Coolant Heater	Oil Heater	Under-hood Air	Fuel Heater	Battery Heater	Radiator Shutters	Engine Enclosure	Winter Front	Thermatic Fan
50 to 32° F 10 to 0° C										
32 to -10° F 0 to -23° C	↑	↑	↑	↑	↑	↑	↑	↑		Suggested
-10 to -25° F -23 to -32° C	Required	Required	Required	Required	Required	Required	Required	Required	Required	Required
-25 to -65° F -32 to -54° C	↓	↓	↓	↓	↓	↓	↓	↓	↓	↓

* Required dependent upon viscosity/pour point.

oi202vj

Winterfronts and Shutters

Winterfronts and shutters can be used on a vehicle or equipment to reduce air flow through the radiator core into the engine compartment. This can reduce the time required to warm the engine and help maintain the engine coolant temperature. The engine coolant temperature specifications are in the Maintenance Specification (Section V).

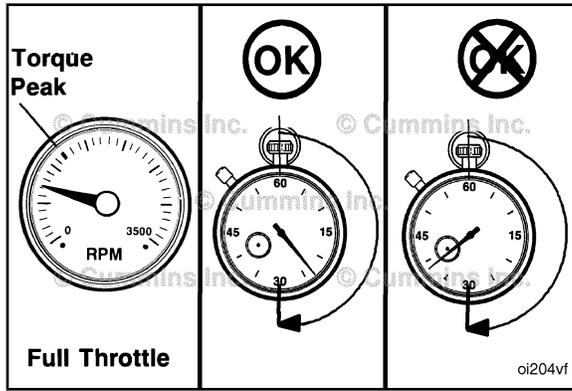

Engine Operating Range General Information


⚠CAUTION⚠

Do not operate the engine at full throttle operation below peak torque rpm (refer to engine dataplate for peak torque rpm) for more than 30 seconds. Operating the engine at full throttle below peak torque will shorten engine life to overhaul, can cause serious engine damage, and is considered engine abuse.

Cummins® engines are designed to operate successfully at full throttle under transient conditions down to peak torque engine speed. This is consistent with recommended operating practices.

⚠CAUTION⚠

Do not operate the engine beyond the maximum engine speed. Operating the engine beyond the maximum engine speed can cause severe engine damage. Use proper operating techniques for the vehicle, vessel, or equipment to prevent engine overspeed. The maximum engine speed specification is listed in Maintenance Specifications (Section V).

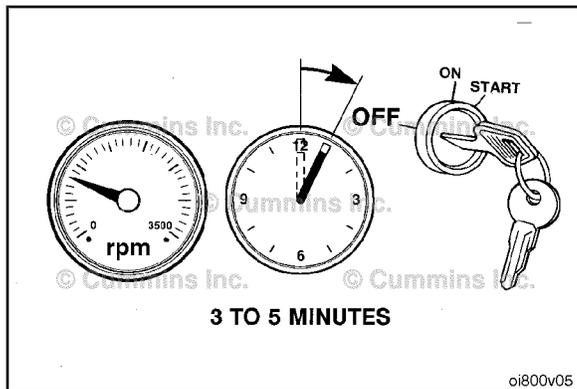

Engine Shutdown General Information

Allow the engine to idle 3 to 5 minutes before shutting it off after a full-load operation. This allows adequate cool down of pistons, cylinders, bearings, and turbocharger components.

Turn the ignition switch to the OFF position. If the engine does **not** shut down, refer to Troubleshooting Symptom (Section TS) in appropriate Operation and Maintenance manual.

Electromagnetic Interference (EMI)

General Information

Some engine applications utilize accessories (CB radios, mobile transmitters, etc.) that generate and use radio frequency energy that, if **not** installed and used properly, can cause electromagnetic interference (EMI) conditions to exist between the accessory and Cummins electronic controlled fuel system. Cummins is **not** liable for any performance problems with either the fuel system or the accessory due to EMI. EMI is **not** considered by Cummins to be an engine failure and therefore is **not** warrantable.

System EMI Susceptibility

Your Cummins product has been designed and tested for minimum sensitivity to incoming electromagnetic energy. Testing has shown that there is no engine performance degradation at relatively high energy levels; however, if very high energy levels are encountered, then some noncritical diagnostic fault code logging can occur. The fuel system EMI susceptibility level will protect your engine from most, if **not** all, electromagnetic energy-emitting devices that meet the Federal Communications Commission legal requirements.

System EMI Radiation Levels

Your Cummins product has been designed to emit minimum electromagnetic energy. Electronic components are required to pass various Cummins and industry EMI specifications. Testing has shown that when the engine is properly installed, it will not interfere with onboard communication equipment or with the vehicle's, equipment's, or vessel's ability to meet any applicable EMI standards and regulated specifications.

If an interference condition is observed, follow the suggestions below to reduce the amount of interference:

1. Locate the receiving antenna as far away from the engine and as high as possible.
2. Locate the receiving antenna as far away as possible from all metal obstructions (e.g., exhaust stacks)
3. Consult a representative of the accessory supplier in your area to:
 - Calibrate accurately the device for proper frequency, power output, and sensitivity (both base and remote site devices **must** be properly calibrated)
 - Obtain antenna reflective energy data measurements to determine the optimum antenna location
 - Obtain optimum antenna type and mounting arrangement for your application
 - Make sure your accessory equipment model is built for maximum filtering to reject incoming electromagnetic noise.

Section 2 - Maintenance Guidelines

Section Contents

	Page
Maintenance Guidelines - Overview	2-1
General Information.....	2-1
Maintenance Record Form	2-4
Maintenance Data.....	2-4
Maintenance Schedule	2-2
General Information.....	2-2
Oil Drain Intervals.....	2-2

This Page Left Intentionally Blank

Maintenance Guidelines - Overview

General Information

Cummins Inc. recommends that the engine be maintained according to the Maintenance Schedule in this section.

If the engine is operating in ambient temperatures below -18°C [0°F] or above 38°C [100°F], perform maintenance at shorter intervals. Shorter maintenance intervals are also required if the engine is operated in a dusty environment or if frequent stops are made. Contact your local Cummins Authorized Repair Location for recommended maintenance intervals.

Some of these maintenance procedures require special tools or must be completed by qualified personnel. Contact your local Cummins Authorized Repair Location for detailed information.

If your engine is equipped with a component or accessory not manufactured by Cummins Inc., refer to the component manufacturer's maintenance recommendations.

Use the chart provided in this section as a convenient way to record maintenance performed.

Maintenance Schedule

General Information

Perform maintenance at whichever interval occurs first. At each scheduled maintenance interval, perform all previous maintenance checks that are due for scheduled maintenance.

Daily or Refueling - Maintenance Check

- Air Intake Piping - check
- Cooling Fan - check
- Crankcase Breather Tube - check
- Air Tanks and Reservoirs - check
- Engine Coolant Level - check
- Fuel-Water Separator - drain
- Engine Lubricating Oil Level - check

Every 250 Hours or 3 Month

- Air Cleaner Restriction - check
- Charge Air Piping - check
- Charge Air Cooler - check
- Fuel Injection Pump Mounting - check
- Air Compressor Mounting - check

Every 500 Hours or 6 Months

- Fuel Filters (Cummins and OEM supplied) - replace
- Cooling System - check
- Coolant Filter - replace
- Lubricating Oil Filter and Oil - replace
- Batteries - check
- Battery Cables and Connections - check

Every 1000 Hours or 1 Year

- Drive Belts - check
- Fan Hub Belt Driven - check
- Cooling Fan Belt Tensioner - check

Every 2000 Hours or 2 Years

- Cooling System - flush
- Vibration Damper, rubber - check
- Vibration Damper, Viscous - check
- Engine Steam Cleaning - clean
- Air Compressor Discharge Lines - clean
- Engine Mounts - check

Every 5000 Hours or 4 Years

- Overhead Set - adjust

Oil Drain Intervals

See the following flowchart to determine the maximum recommended oil change and filter change intervals in kilometers, miles, hours, or months, whichever comes first.

Is the vehicle one of those listed below?

- Truck crane/yard spotter
- Paver/crane/backhoe
- Dozer/scrapper/skidder

If Yes -

Select the correct oil drain interval from Table 1.

If No -

Is the vehicle one of those listed below?

- Tractor/combine/irrigation equipment
- Genset/air compressor/fire pump

If Yes -

Select the correct oil drain interval from Table 2.

If No -

Select the correct oil drain interval from Table 3.

Table 1, Oil Drain Intervals				
Vehicle/Equipment	Kilometers	Miles	Hours	Months
Truck Crane/Yard Spotter	14,500	9000	500	6
Paver/Crane/Skidder	N/A	N/A	500	6
Dozer/Scraper/Skidder	N/A	N/A	500	6

Table 2, Oil Drain Intervals				
Vehicle/Equipment	Kilometers	Miles	Hours	Months
Tractor/Combine/Irrigation Equipment	N/A	N/A	500	6
Genset/Air Compressor/Fire Pump	N/A	N/A	500	6

Table 3, Oil Drain Intervals				
Vehicle/Equipment	Kilometers	Miles	Hours	Months
All Others	14,500	9000	500	6

Section L - Service Literature

Section Contents

	Page
Additional Service Literature	L-1
General Information.....	L-1
Cummins Customized Parts Catalog	L-3
General Information.....	L-3
Ordering the Customized Parts Catalog.....	L-3
Ordering by Telephone.....	L-3
Ordering On-Line.....	L-3
Service Literature Ordering Location	L-2
Contact Information.....	L-2

This Page Left Intentionally Blank

Additional Service Literature

General Information

The following publications can be purchased.

Bulletin Number	Title of Publication
4021416	Troubleshooting and Repair Manual, CM850 Electronic Control System
4021418	Troubleshooting and Repair Manual, ISC, QSC8.3, ISL and QSL9 Engines
3666271	Troubleshooting and Repair Manual, ISC, QSC8.3, ISL Electronic Control System
4021421	Wiring Diagram, ISC and ISL CM850 Electronic Control Module
3666267	ISC Wiring and Fault Code Diagram
3666395	Wiring Diagram, QSC
3666416	Wiring Diagram, ISL
3666478	Wiring Diagram, QSL9
4021428	Operation and Maintenance Manual, ISC and ISL Engines
3379001	Fuel for Cummins Engines
3810340	Cummins Engine Oil Recommendations
3666132	Coolant Requirements and Maintenance
3379000	Air for Your Engines
3387622	Cold Weather Operation

Service Literature Ordering Location Contact Information

Region

United States and Canada

Ordering Location

Cummins Distributors

or

Credit Cards at 1-800-646-5609

or

Order online at www.powerstore.cummins.com

Cummins Distributors or Dealers

All Other Countries

Cummins Customized Parts Catalog

General Information

Cummins is pleased to announce the availability of a parts catalog compiled specifically for you. Unlike the generic versions of parts catalogs that support general high volume parts content; Cummins Customized catalogs contains only the new factory parts that were used to build your engine.

The catalog cover, as well as the content, is customized with you in mind. You can use it in your shop, at your worksite, or as a coffee table book in your RV or boat. The cover contains your name, company name, address, and telephone number. Your name and engine model identification even appears on the catalog spine. Everybody will know that Cummins created a catalog specifically for you.

This new catalog was designed to provide you with the exact information you need to order parts for your engine. This will be valuable for customers that do not have easy access to the Cummins Electronic Parts Catalog or the Cummins Parts Microfilm System.

Additional Features of the Customized Catalog include:

- Engine Configuration Data
- Table of Contents
- Separate Option and Parts Indexes
- Service Kits (when applicable)
- ReCon Part Numbers (when applicable)

Ordering the Customized Parts Catalog

Ordering by Telephone

North American customers can contact their Cummins Distributor or call Gannett Direct Marketing Services at 1-800-646-5609 and order by credit card. Outside North America order on-line or make an International call to Gannett at (+ +)502-454-6660.

Ordering On-Line

The Customized Parts Catalog can be ordered On-Line from the Cummins Powerstore by credit card. Contact the Powerstore at WWW.POWERSTORE.CUMMINS.COM

Contact GDMS or the CUMMINS POWERSTORE for the current price; Freight may be an additional expense.

Information we need to take your Customized Parts Catalog Order. This information drives the cover content of the CPC.

- Customer Name
- Street Address
- Company Name (optional)
- Telephone no.
- Credit Card No.
- Cummins Engine Serial Number (located on the engine data plate)
- Please identify the required media: Printed Catalog, CD-ROM, or PDF File

Unfortunately not all Cummins Engines can be supported by this parts catalog. Engines older than 1984 or newer than 3 months may not have the necessary parts information to compile a catalog. We will contact you if this occurs and explain why we are unable to fill your order.

Customized Parts Catalogs are produced specifically for a single customer. This means they are not returnable for a refund. If we make an error and your catalog is not useable, we will correct that error by sending you a new catalog.

Section V - Maintenance Specifications

Section Contents

	Page
Coolant Recommendations and Specifications	V-8
Cooling System Sealing Additives.....	V-10
Cooling System Soluble Oils.....	V-10
Fully Formulated Coolant/Antifreeze.....	V-8
Cooling System	V-3
Specifications.....	V-3
Cummins/Fleetguard® Filter Specifications	V-4
General Information.....	V-4
Fuel Recommendations and Specifications	V-5
Fuel Recommendations.....	V-5
General Engine	V-1
Specifications.....	V-1
Lubricating Oil Recommendations and Specifications	V-6
Arctic Operation.....	V-7
General Information.....	V-6
New Engine Break-in Oils.....	V-7
Lubricating Oil System	V-2
Specifications.....	V-2

This Page Left Intentionally Blank

General Engine

Specifications

Listed below are the general specifications for this engine.

Horsepower.....	See engine dataplate
Firing Order.....	1-5-3-6-2-4
Crankshaft Rotation (viewed from front of engine).....	Clockwise
Bore and Stroke	
8.3 liters.....	114 mm [4.49 in] x 135 mm [5.32 in]
8.9 liters.....	114 mm [4.49 in] x 144.5 mm [5.69 in]
Dry Weight	
8.3 liters.....	694 kg [1530 lb]
8.9 liters.....	706 kg [1555 lb]
Wet Weight	
8.3 liters.....	723 kg [1595 lb]
8.9 liters.....	738 kg [1625 lb]
Overhead Adjustment	
Intake Valve Adjustment.....	0.305 mm [0.012 in]
Exhaust Valve Adjustment.....	0.559 mm [0.022 in]
Engine Brake Adjustment.....	2.286 mm [0.090 in]

Lubricating Oil System

Specifications

Oil Pressure

At Low Idle (minimum allowable).....	69 kPa [10 psi]
At Rated Speed (minimum allowable).....	207 kPa [30 psi]
Regulated Oil Pressure.....	517 kPa [75 psi]
Lubricating Oil Filter Capacity.....	3.78 liters [4 qt]

Oil Pan Capacity, Low to High (8.3 liter engines)

Standard Oil Pan.....	15.1 to 18.9 liters [16 to 20 qt]
Standard Oil Pan with Cylinder Block Stiffener Plate.....	16.1 to 19.9 liters [17 to 21 qt]

Total System Capacity (Oil Pan and New Oil Filter) (8.3 liter engines)

Standard Oil Pan.....	22.7 liters [24 qt]
Standard Oil Pan with Cylinder Block Stiffener Plate.....	23.7 liters [25 qt]

Oil Pan Capacity, Low to High (8.9 liter engines)

Standard Oil Pan.....	18.9 to 22.7 liters [20 to 24 qt]
Standard Oil Pan with Cylinder Block Stiffener Plate.....	19.9 to 23.7 liters [21 to 25 qt]

Total System Capacity (Oil Pan and New Oil Filter) (8.9 liter engines)

Standard Oil Pan.....	26.5 liters [28 qt]
Standard Oil Pan with Cylinder Block Stiffener Plate.....	27.4 liters [29 qt]

Cooling System

Specifications

Coolant Capacity (engine only).....	11.1 liters [11.7 qt]
Standard Modulating Thermostat Range.....	82 to 93°C [180 to 200°F]
Minimum Recommended Pressure Cap.....	.48 kPa [7 psi]
Minimum Fill Rate (without low-level alarm).....	19 liters/min [5 gpm]
Maximum Deaeration Time.....	.25 minutes
Maximum Top Tank Coolant Temperature With CAPS Fuel System.....	100°C [212°F]
Maximum Top Tank Coolant Temperature With Cummins Common Rail Fuel System.....	107°C [225°F]
Winterfronts - Automotive Only	
Air Passage Area.....	.774 cm ² [120 in ²]

Cummins/Fleetguard® Filter Specifications

General Information

Fleetguard® is a subsidiary of Cummins Inc. Fleetguard® filters are developed through joint testing at Cummins and Fleetguard®. Fleetguard® filters are standard on new Cummins® engines. Cummins Inc. recommends their use.

Fleetguard® products meet all Cummins Source Approval Test standards to provide the quality filtration necessary to achieve the engine's design life. If other brands are substituted, the purchaser should insist on products that the supplier has tested to meet Cummins Inc. high-quality standards.

Cummins Inc. can **not** be responsible for problems caused by non-genuine filters that do **not** meet Cummins performance or durability requirements.

Filter Part Numbers (All Applications Except Marine)

	Water-separating Filter	Fuel Filter	Lubricating Oil Filter
Without CM850			
Cummins Part Number	3944269	N/A	3401544
Fleetguard® Part Number	FS1022	N/A	LF9009
With CM850			
Cummins Part Number	4070801	3959612	3401544
Fleetguard® Part Number	FS1003	FF5488	LF9009

NOTE: LF9009 **must** be used. A venturi type filter **must** be used in order to benefit from the bypass filtration section of the oil filter. Do **not** use LF3000. Engine durability will be reduced by using the wrong lubricating oil filter.

Fuel Recommendations and Specifications

Fuel Recommendations



WARNING

Do not mix gasoline, alcohol, or gasohol with diesel fuel. This mixture can cause an explosion.



CAUTION

Due to the precise tolerances of diesel injection systems, it is extremely important that the fuel be kept clean and free of dirt or water. Dirt or water in the system can cause severe damage to both the fuel pump and the fuel injectors.

Cummins Inc. recommends the use of ASTM number 2D fuel. The use of number 2 diesel fuel will result in optimum engine performance.

At operating temperatures below 0°C [32°F], acceptable performance can be obtained by using blends of number 2D and number 1D.

NOTE: Lighter fuels can reduce fuel economy.

NOTE: Engines equipped with diesel particulate filters require the use of diesel fuel with 30 ppm sulfur maximum. There are no acceptable substitutes.

The viscosity of the fuel **must** be kept above 1.3 cSt at 40°C [104°F] to provide adequate pumping and lubricating characteristics to fuel system components.

The following chart lists acceptable substitute fuels for this engine.

Acceptable Substitute Fuels									
Number 1D Diesel ⁽¹⁾ (2) (3)	Number 2D Diesel ⁽³⁾	Number 1K Kerosene	Jet-A	Jet-A1	JP-5	JP-8	Jet-B	JP-4	CITE
A	OK	Not OK	A	A	A	A	Not OK	Not OK	Not OK
<ul style="list-style-type: none"> An "A" means OK only if fuel lubricity is adequate. This means the BOCLE number is 3100 or greater as measured by ASTM specification D6078, Scuffing Load Ball On Cylinder Evaluator (SLBOCLE). Lubricity can also be measured by ASTM, specification D6079, ISO 12156, High Frequency Reciporating Rig (HFRR) in which the fuel must have a wear scar diameter of 0.45 mm [0.02 in] or less. Any adjustment to compensate for reduced performance with a fuel system using alternate fuel is not warrantable. Winter blend fuels, such as found at commercial fuel-dispensing outlets, are combinations of number 1D and 2D diesel fuels and are acceptable. 									

Additional information for fuel recommendations and specifications can be found in Fuel for Cummins Engines, Bulletin 3379001. See ordering information in the back of this manual.

Lubricating Oil Recommendations and Specifications

General Information

⚠CAUTION⚠

A sulfated ash limit of 1.85 percent has been placed on all engine lubricating oils recommended for use in Cummins engines. Higher ash oils can cause valve and/or piston damage and lead to excessive oil consumption.

The use of quality engine lubricating oils, combined with appropriate oil drain and filter change intervals, is a critical factor in maintaining engine performance and durability.

Cummins Inc. recommends the use of high-quality SAE 15W-40 heavy-duty engine oil, such as Valvoline® Premium Blue®, which meets performance specifications as listed below.

NOTE: In areas where CH-4/SJ or CG-4/SH oils are **not** available, refer to Oil Drain Intervals in Section 2.

Cummins Engineering Standard Classification (CES)	American Petroleum Institute Classification (API)	International Classifications	Comments
	API CD API CE API CG-4/SH	ACEA E-1	OBsolete. DO NOT USE.
CES-20075	API CF-4/SG	ACEA E-2 ACEA E-3 JAMA DH-1	Minimum acceptable oil classification for midrange engines.
CES-20071 CES-20076	API CH-4/SJ API CH-4	Global DHD-1	Acceptable oil classification for midrange engines.
CES-20072 CES-20077	API CH-4	ACEA E-5 Global DHD-1	Similar in performance to CES-20071 but validated under European test standards. Excellent oil for midrange engines.
CES-20078	API CI-4/SK API CI-4		Excellent oil for midrange engines.

A sulfated ash limit of 1.0 mass percent is suggested for optimum valve and piston deposit and oil consumption control. For further details and discussion of engine lubricating oils for Cummins engines, refer to Cummins Engine Oil Recommendations, Bulletin 3810340.



The API service symbols are shown in the accompanying illustration. The upper half of the symbols displays the appropriate oil categories.


The lower half can contain words to describe oil energy-conserving features.

The center section identifies the SAE oil viscosity grade.

As the engine oil becomes contaminated, essential oil additives are depleted. Lubricating oils protect the engine as long as these additives are functioning properly. Progressive contamination of the oil between oil and filter change intervals is normal. The amount of contamination will vary depending on the operation of the engine, kilometers or miles on the oil, fuel consumed, and new oil added.

Extending oil and filter change intervals beyond the recommendations will decrease engine life due to factors such as corrosion, deposits, and wear.

Refer to the oil drain chart in this section to determine which oil drain interval to use for your application.

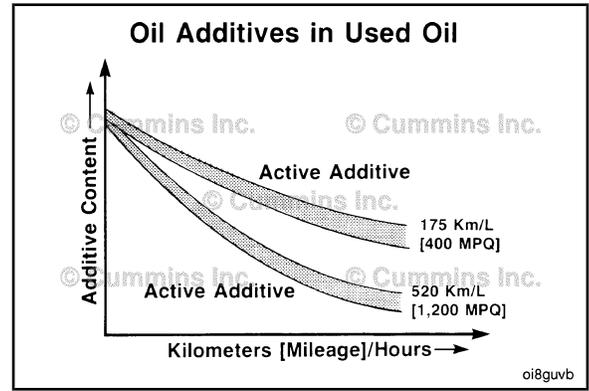

New Engine Break-in Oils

Special "break-in" engine lubricating oils are **not** recommended for new or rebuilt Cummins engines. Use the same type of oil during the break-in as is used in normal operation.

Additional information regarding lubricating oil availability throughout the world is available in the EMA Lubricating Oils Data Book for Heavy-Duty Automotive and Industrial Engines. The data book can be ordered from the Engine Manufacturers Association, Two North LaSalle Street - Suite 2200, Chicago, IL, U.S.A. 60602. The telephone number is (312) 827-8733.

Arctic Operation





The use of a synthetic-base oil does not justify extended oil change intervals. Extended oil change intervals can decrease engine life due to factors such as corrosion, deposits, and wear.

The use of low-viscosity oils, such as 10W or 10W-30, can be used to aid in starting the engine and in providing sufficient oil flow at ambient temperatures below -5°C [23° F]. However, continuous use of low-viscosity oils can decrease engine life due to wear. Refer to the accompanying chart.

If an engine is operated in ambient temperatures consistently below -23°C [-9°F] and there are no provisions to keep the engine warm when it is **not** in operation, use a synthetic CH/SI or CH/SK or higher API classification engine oil with adequate low-temperature properties such as 5W-20 or 5W-30.

The oil supplier is responsible for meeting the performance service specifications represented with its product.

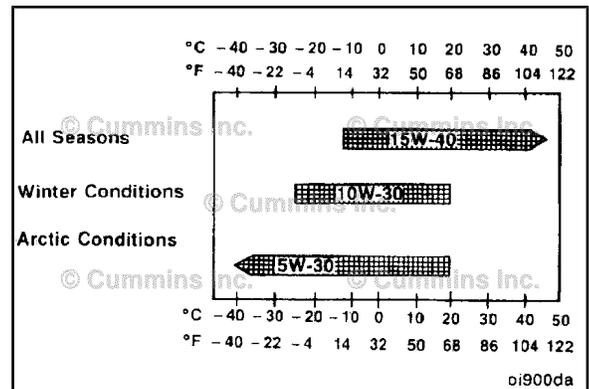

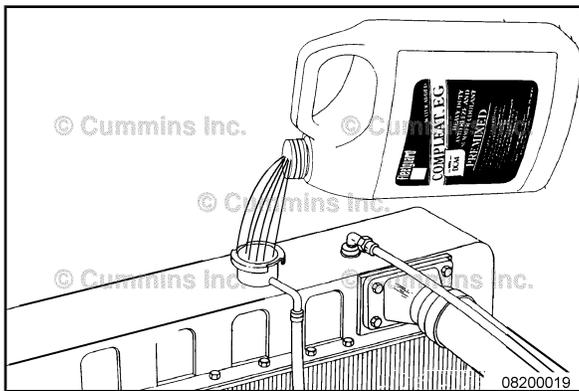

Coolant Recommendations and Specifications

Fully Formulated Coolant/Antifreeze

Use low-silicate antifreeze that meets ASTM4985 (GM6038M specification) criteria.

Fully formulated coolant **must** meet ASTM D-6210/D-6211.

Cummins Inc. recommends using either a 50/50 mixture of good-quality water and fully formulated antifreeze, or fully formulated coolant when filling the cooling system.

Good-quality water is important for cooling system performance. Excessive levels of calcium and magnesium contribute to scaling problems, and excessive levels of chlorides and sulfates cause cooling system corrosion.

Water Quality	
Calcium Magnesium (hardness)	Maximum 170 ppm as (CaCO ₃ + MgCO ₃)
Chloride	40 ppm as (Cl)
Sulfur	100 ppm as (SO ₄)

Cummins Inc. recommends Fleetguard® antifreeze coolants including ES Compleat containing DCA4 Plus, Fleetcool EX containing DCA2 Plus, and ES Optimax Organic Acid Technology (OAT), which meet the requirements of Cummins Engineering Standard 14603. However, Cummins Inc., Chevron Texaco and Shell have agreed that Chevron Texaco, Shell Rotella® and their private label counterpart Extended Life OAT coolants, which do **not** meet the elastomer compatibility section of Cummins Engineering Standard 14603 are acceptable for extended service interval use, assuming the initial coolant fill requirements were met from the vehicles' original equipment manufacturer (OEM).

Mid-Range, Heavy-Duty and High Horsepower engine overhauls, or repairs involving the replacement of the following components, using this Extended Life OAT coolant **must** discard the coolant and replace it with new coolant.

- Rocker lever housing gasket
- Lubricating oil cooler housing gasket
- Cylinder head gasket
- Thermostat housing gasket

If the replacement coolant is Chevron Texaco, Shell Rotella® or their private label counterpart Extended Life OAT coolants, which do **not** meet the elastomer compatibility section of Cummins Engineering Standard 14603, then the coolant **must** be treated by adding 0.24 liters [8 oz] of liquid silicate fluid for every 45.5 liters [12 gal] of total coolant system volume. It is critical to **not** overtreat the coolant with silicate fluid.

To obtain order forms or ask questions relative to ordering the silicate fluid, contact:


Silicate Fluid Order Program
P.O. Box 27388
Houston, TX
77277-7388
Phone: 800-346-9041
Fax: 800-876-5317

For further details and discussion of engine coolant for Cummins engines, refer to Cummins Coolant Requirements and Maintenance, Bulletin 3666132.


Fully formulated antifreeze **must** be mixed with good-quality water at a 50/50 ratio (40- to 60-percent working range). A 50/50 mixture of antifreeze and water gives a -36°C [-33°F] freezing point and a 108°C [226°F] boiling point, which is adequate for locations in North America. The actual lowest freezing point of ethylene glycol antifreeze is at 68 percent. Using higher concentrations of antifreeze will raise the freezing point of the solution and increase the possibility of a silica gel problem.




oi805vn

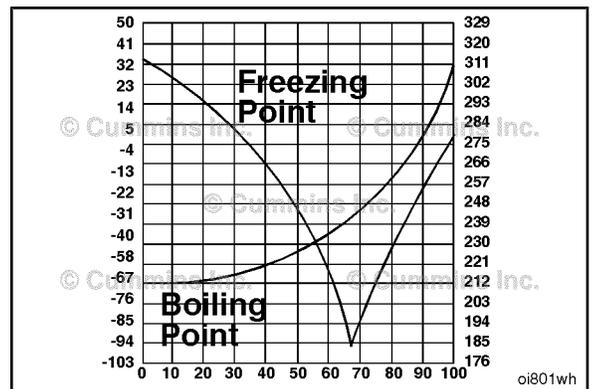


oi801wh

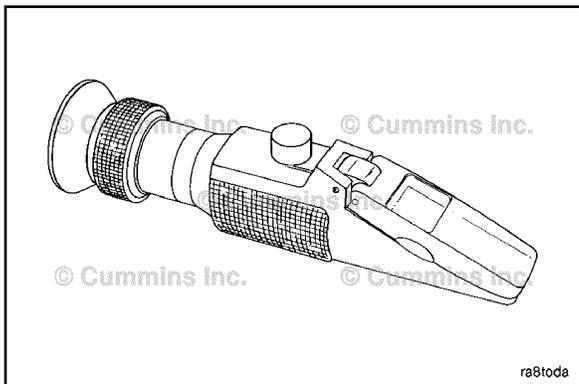

A refractometer **must** be used to measure the freezing point of the coolant **accurately**. Use Fleetguard® refractometer, Part Number CC2800 or CC2806.

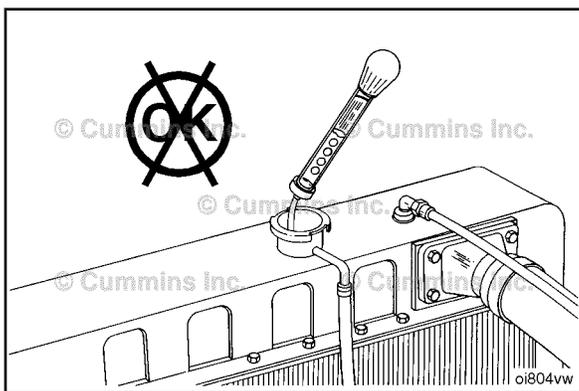


Do **not** use a floating ball hydrometer. Using floating ball hydrometers can give an incorrect reading.

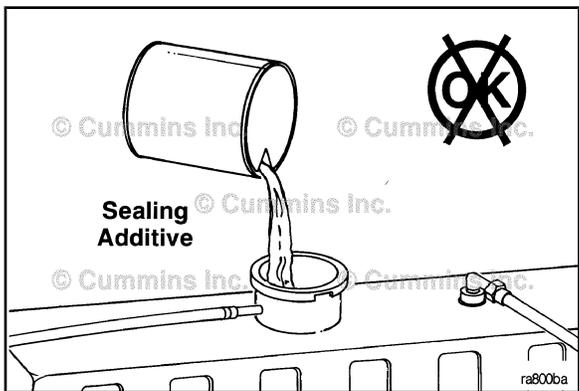

Cooling System Sealing Additives

Do **not** use sealing additives in the cooling system. The use of sealing additives will:

- Build up in coolant low-flow areas
- Plug the radiator and oil cooler
- Possibly damage the water pump seal.

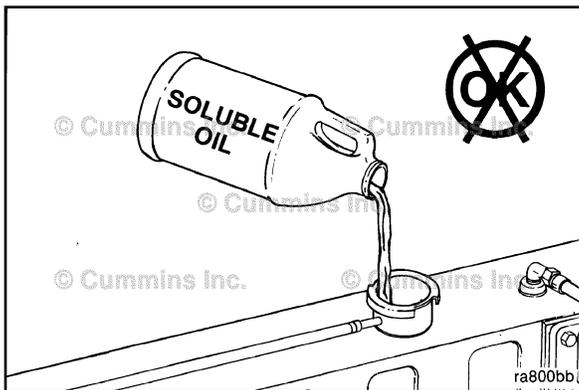

Cooling System Soluble Oils

Do **not** use soluble oils in the cooling system. The use of soluble oils will:

- Corrode brass and copper
- Damage heat transfer surfaces
- Damage seals and hoses.

Section W - Warranty

Section Contents

	Page
California Emission Control System Warranty, Off-Highway	W-10
All Engines International Industrial (Off-Highway)	W-4
All Engines United States and Canada Industrial (Off-Highway)	W-1
QSB5.9/QSC8.3/QSL9/QSM11 Commercial Applications Marine Propulsion Worldwide	W-6

This Page Left Intentionally Blank

All Engines United States and Canada Industrial (Off-Highway)

Coverage

Products Warranted

This warranty applies to new Engines sold by Cummins and delivered to the first user on or after April 1, 1999, that are used in industrial (off-highway) applications in the United States* and Canada, except for Engines used in marine, generator drive and certain defense applications, for which different warranty coverage is provided.

Base Engine Warranty

This warranty covers any failures of the Engine, under normal use and service, which result from a defect in material or factory workmanship (Warrantable Failures).

Coverage begins with the sale of the Engine by Cummins. Coverage continues for two years or 2,000 hours of operation, whichever occurs first, from the date of delivery of the Engine to the first user, or from the date the unit is first leased, rented or loaned, or when the Engine has been operated for 50 hours, whichever occurs first. If the 2,000 hour limit is exceeded during the first year, Coverage continues until the end of the first year.

Extended Major Components Warranty

The Extended Major Components Warranty covers Warrantable Failures of the Engine cylinder block, camshaft, crankshaft and connecting rods (Covered Parts).

Bushing and bearing failures are not covered.

This Coverage begins with the expiration of the Base Engine Warranty and ends three years or 10,000* hours of operation from the date of delivery of the Engine to the first user, or from the date the unit is first leased, rented or loaned, or from when the Engine has been operated for 50 hours, whichever occurs first.

*3,000 hours for A series engines.

Consumer Products

The warranty on Consumer Products in the United States is a LIMITED warranty. **CUMMINS IS NOT RESPONSIBLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.** Any implied warranties applicable to Consumer Products in the United States terminate concurrently with the expiration of the express warranties applicable to the product. In the United States, some states do not allow the exclusion of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the limitations or exclusions herein may not apply to you.

These warranties are made to all Owners in the chain of distribution, and Coverage continues to all subsequent Owners until the end of the periods of Coverage.

Cummins' Responsibilities

During The Base Engine Warranty

Cummins will pay for all parts and labor needed to repair the damage to the Engine resulting from a Warrantable Failure.

Cummins will pay for the lubricating oil, antifreeze, filter elements, and other maintenance items that are not reusable due to the Warrantable Failure.

Cummins will pay reasonable costs for mechanics to travel to and from the equipment site, including meals, mileage and lodging, when the repair is performed at the site of the failure.

Cummins will pay reasonable labor costs for Engine removal and reinstallation when necessary to repair a Warrantable Failure.

During The Extended Major Components Warranty

Cummins will pay for the repair or, at its option, replacement of the defective Covered Part and any Covered Part damaged by a Warrantable Failure of the defective Covered part.

Owner's Responsibilities

During The Base Engine Warranty

Owner is responsible for the cost of lubricating oil, antifreeze, filter elements and other maintenance items provided during warranty repairs unless such items are not reusable due to the Warrantable Failure.

During The Extended Major Components Warranty

Owner is responsible for the cost of all labor needed to repair the Engine, including the labor to remove and reinstall the Engine. When Cummins elects to repair a part instead of replacing it, Owner is not responsible for the labor needed to repair the part.

Owner is responsible for the cost of all parts required for the repair except for the defective Covered Part and any Covered Part damaged by a Warrantable Failure of the defective Covered Part.

Owner is responsible for the cost of lubricating oil, antifreeze, filter elements and other maintenance items replaced during repair of a Warrantable Failure.

During The Base Engine and Extended Major Components Warranties

Owner is responsible for the operation and maintenance of the Engine as specified in the applicable Cummins Operation and Maintenance Manual. Owner is also responsible for providing proof that all recommended maintenance has been performed.

Before the expiration of the applicable warranty, Owner must notify a Cummins distributor, authorized dealer or other repair location approved by Cummins of any Warrantable Failure and make the Engine available for repair by such facility. Locations in the United States and Canada are listed in the Cummins Off Highway Authorized Dealer Directory.

Owner is responsible for communication expenses, meals, lodging and similar costs incurred as a result of a Warrantable Failure.

Owner is responsible for non-Engine repairs, "downtime" expenses, cargo damage, fines, all applicable taxes, all business costs and other losses resulting from a Warrantable Failure.

Limitations

Cummins is not responsible for failures or damage resulting from what Cummins determines to be abuse or neglect, including, but not limited to: operation without adequate coolants or lubricants; overfueling; overspeeding; lack of maintenance of lubricating, cooling or intake systems; improper storage, starting, warm-up, run-in or shutdown practices; unauthorized modifications of the Engine. Cummins is also not responsible for failures caused by incorrect oil or fuel or by water, dirt or other contaminants in the fuel or oil.

For power units and fire pumps (package units), this warranty applies to accessories, except for clutches and filters, supplied by Cummins which bear the name of another company.

Except for power units and fire pumps, this warranty does not apply to accessories which bear the name of another company. Such non-warranted accessories include, but are not limited to: alternators, starters, fans**, air conditioning compressors, clutches, filters, transmissions, torque converters, steering pumps, and non-Cummins fan drives, engine compression brakes and air compressors.

Cummins Compusave units are covered by a separate warranty.

Before a claim for excessive oil consumption will be considered, Owner must submit adequate documentation to show that consumption exceeds Cummins published standards.

Failures of belts and hoses supplied by Cummins are not covered beyond the first 500 hours or one year of operation, whichever occurs first.

Parts used to repair a Warrantable Failure may be new Cummins parts, Cummins-approved rebuilt parts, or repaired parts. Cummins is not responsible for failures resulting from the use of parts not approved by Cummins.

A new Cummins or Cummins-approved rebuilt part used to repair a Warrantable Failure assumes the identity of the part it replaced and is entitled to the remaining coverage hereunder.

CUMMINS DOES NOT COVER WEAR OR WEAROUT OF COVERED PARTS.

CUMMINS IS NOT RESPONSIBLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.

THESE WARRANTIES SET FORTH HEREIN ARE THE SOLE WARRANTIES MADE BY CUMMINS IN REGARD TO THESE ENGINES. CUMMINS MAKES NO OTHER WARRANTIES, EXPRESS OR IMPLIED, OR OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Emission Warranty

Products Warranted

This emission warranty applies to new Engines marketed by Cummins that are used in the United States* in vehicles designed for Industrial off-highway use. This warranty applies to Engines delivered to the ultimate purchaser on or after April 1, 1999 for engines up to 750 horsepower, on or after January 1, 2000 for engines 751 horsepower and over.

Coverage

Cummins warrants to the ultimate purchaser and each subsequent purchaser that the Engine is designed, built and equipped so as to conform at the time of sale by Cummins with all U.S. Federal emission regulations applicable at the time of manufacture and that it is free from defects in workmanship or material which would cause it not to meet these regulations within the longer of the following periods: (A) Five years or 3,000 hours of operation, whichever

occurs first, as measured from the date of delivery of the Engine to the ultimate purchaser, or (B) The Base Engine Warranty.

If the vehicle in which the Engine is installed is registered in the state of California, a separate California Emission Warranty also applies.

Limitations

Failures, other than those resulting from defects in materials, or workmanship, are not covered by this warranty.

Cummins is not responsible for failures or damage resulting from what Cummins determines to be abuse or neglect, including, but not limited to: operation without adequate coolant or lubricants; overfueling; overspeeding; lack of maintenance of lubricating, cooling or intake systems; improper storage, starting, warm-up, run-in or shutdown practices; unauthorized modifications of the Engine. Cummins is also not responsible for failures caused by incorrect fuel or by water, dirt or other contaminants in the fuel.

Cummins is not responsible for non-Engine repairs, "downtime" expenses, cargo damage, fines, all business costs or other losses resulting from a Warrantable Failure.

CUMMINS IS NOT RESPONSIBLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.

* Includes American Samoa, the Commonwealth of Northern Mariana Islands, Guam, Puerto Rico, and the U.S. Virgin Islands.

** Alternators, starters, and fans ARE covered for the duration of the base engine warranty on A series and B3.3 engines.

All Engines International Industrial (Off-Highway)

Coverage

PRODUCTS WARRANTED

This warranty applies to new Engines sold by Cummins and delivered to the first user on or after April 1, 1999, that are used in industrial (off-highway) applications anywhere in the world where Cummins-approved service is available, except the United States* and Canada. Different warranty coverage is provided for Engines used in marine, generator drive and certain defense applications.

BASE ENGINE WARRANTY

This warranty covers any failures of the Engine, under normal use and service, which result from a defect in material or factory workmanship (Warrantable Failure).

Coverage begins with the sale of the Engine by Cummins. Coverage continues for two years or 2,000 hours of operation, whichever occurs first, from the date of delivery of the Engine to the first user, or from the date the unit is first leased, rented or loaned, or when the Engine has been operated for 50 hours, whichever occurs first. If the 2,000 hour limit is exceeded during the first year, coverage continues until the end of the first year.

EXTENDED MAJOR COMPONENTS WARRANTY

The Extended Major Components Warranty covers Warrantable Failures of the Engine cylinder block, camshaft, crankshaft and connecting rods (Covered Parts).

Bushing and bearing failures are not covered.

This coverage begins with the expiration of the Base Engine Warranty and ends three years or 10,000* hours of operation, from the date of delivery of the Engine to the first user, or from the date the unit is first leased, rented or loaned, or when the Engine has been operated for 50 hours, whichever occurs first.

*3,000 hours for A series engines.

These warranties are made to all Owners in the chain of distribution, and Coverage continues to all subsequent Owners until the end of the periods of Coverage.

Cummins' Responsibilities

DURING THE BASE ENGINE WARRANTY

Cummins will pay for all parts and labor needed to repair the damage to the Engine resulting from a Warrantable Failure.

Cummins will pay for the lubricating oil, antifreeze, filter elements, and other maintenance items that are not reusable due to a Warrantable Failure.

Cummins will pay reasonable costs for mechanics to travel to and from the equipment site, including meals, mileage and lodging, when the repair is performed at the site of the failure.

Cummins will pay reasonable labor costs for Engine removal and reinstallation when necessary to repair a Warrantable Failure.

DURING THE EXTENDED MAJOR COMPONENTS WARRANTY

Cummins will pay for the repair or, at its option, replacement of the defective Covered Part and any Covered Part damaged by a Warrantable Failure of the defective Covered part.

Owner's Responsibilities

DURING THE BASE ENGINE WARRANTY

Owner is responsible for the cost of lubricating oil, antifreeze, filter elements and other maintenance items replaced during warranty repairs unless such items are not reusable due to the Warrantable Failure.

DURING THE EXTENDED MAJOR COMPONENTS WARRANTY

Owner is responsible for the cost of all labor needed to repair the Engine, including the labor to remove and reinstall the Engine. When Cummins elects to repair a part instead of replacing it, Owner is not responsible for the labor needed to repair the part.

Owner is responsible for the cost of all parts required for the repair except for the defective Covered Part and any Covered Part damaged by a Warrantable Failure of the defective Covered Part.

Owner is responsible for the cost of lubricating oil, antifreeze, filter elements and other maintenance items replaced during repair of a Warrantable Failure.

DURING THE BASE ENGINE AND EXTENDED MAJOR COMPONENTS WARRANTIES

Owner is responsible for the operation and maintenance of the Engine as specified in the applicable Cummins Operation and Maintenance Manual. Owner is also responsible for providing proof that all recommended maintenance has been performed.

Before the expiration of the applicable warranty, Owner must notify a Cummins distributor, authorized dealer or other repair location approved by Cummins of any Warrantable Failure and make the product available for repair by such facility. Locations are listed in the Cummins International Sales and Service Directory.

Owner is responsible for communication expenses, meals, lodging and similar costs incurred as a result of a Warrantable Failure.

Owner is responsible for non-Engine repairs, "downtime" expenses, cargo damage, fines, all applicable taxes, all business costs and other losses resulting from a Warrantable Failure.

Limitations

Cummins is not responsible for failures or damage resulting from what Cummins determines to be abuse or neglect, including, but not limited to: operation without adequate coolants or lubricants; overfueling; overspeeding; lack of maintenance of lubricating, cooling or intake systems; improper storage, starting, warm-up, run-in or shutdown practices; unauthorized modifications of the Engine. Cummins is also not responsible for failures caused by incorrect oil or fuel or by water, dirt or other contaminants in the fuel or oil.

For power units and fire pumps (package units) the warranty applies to accessories, except for clutches and filters supplied by Cummins which bear the name of another company.

Except for the accessories noted previously, Cummins does not warrant accessories which bear the name of another company. Such non-warranted accessories include, but are not limited to: alternators, starters, fans*, air conditioning compressors, clutches, filters, transmissions, torque converters, steering pumps, non-Cummins fan drives, and air cleaners.

Cummins Compusave units are covered by a separate warranty.

Before a claim for excessive oil consumption will be considered, Owner must submit adequate documentation to show that consumption exceeds Cummins published standards.

Failures of belts and hoses supplied by Cummins are not covered beyond the first 500 hours or one year of operation, whichever occurs first.

Parts used to repair a Warrantable Failure may be new Cummins parts, Cummins-approved rebuilt parts, or repaired parts. Cummins is not responsible for failures resulting from the use of parts not approved by Cummins.

A new Cummins or Cummins-approved rebuilt part used to repair a Warrantable Failure assumes the identity of the part it replaced and is entitled to the remaining coverage hereunder.

For all A Series Applications, including industrial, travel reimbursement for non-transportable equipment will be limited to 4.0 hours, \$0.25/mile and 250 miles maximum. Any costs beyond this limit are the customer's responsibility.

CUMMINS DOES NOT COVER WEAR OR WEAROUT OF COVERED PARTS.

CUMMINS IS NOT RESPONSIBLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.

THESE WARRANTIES SET FORTH HEREIN ARE THE SOLE WARRANTIES MADE BY CUMMINS IN REGARD TO THESE ENGINES. CUMMINS MAKES NO OTHER WARRANTIES, EXPRESS OR IMPLIED, OR OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

In case of consumer sales, in some countries, the Owner has statutory rights which cannot be affected or limited by the terms of this warranty.

Nothing in this warranty excludes or restricts any contractual rights the Owner may have against third parties.

* Alternators, starters, and fans ARE covered for the duration of the base engine warranty on A series and B3.3 engines.

QSB5.9/QSC8.3/QL9/QSM11 Commercial Applications Marine Propulsion Worldwide

Coverage

Engines Included in this Coverage

Marine Propulsion

QSB5.9

QSC8.3

QSL9

QSM11

Products Warranted

This warranty applies to new QSB5.9, QSC8.3, QSL9 and QSM11 Engines sold by Cummins MerCruiser Diesel LLC., herein after "CMD", that are branded as Cummins MerCruiser Diesel products and used in Marine propulsion applications anywhere in the world where CMD approved service is available* and delivered to the first user on or after Jan 1, 2004. This warranty excludes all engines branded and sold as Cummins Marine Diesel products. The 'Product' consists of a new CMD Engine, as well as accessories, which are approved and supplied by CMD and which are either installed by CMD or a CMD authorized distributor. These Products have the following designation:

MARINE PROPULSION

Government Service (GS) Rating

Intended for use in variable load applications where full power is limited to one hour out of every eight hours of operation. Also reduced power must be at or below 200 RPM of the maximum rated RPM. This power rating is only for use in National, State or Local government non-revenue producing applications.

Intermittent Rating

This power rating is intended for intermittent use in variable load applications where full power is limited to two hours out of every eight hours of operation. Also, reduced power operations must be at or below 200 RPM of the maximum rated RPM. This rating is an ISO3046 Fuel Stop Power Rating and is for applications that operate less than 1500 hours per year.

Medium Continuous Rating

This power rating is intended for continuous use in variable load applications where full power is limited to six hours out of every twelve hours of operation. Also, reduced power operations must be at or below 200 RPM of the maximum rated RPM. This rating is an ISO3046 Fuel Stop Power Rating and is for applications that operate less than 3000 hours per year.

Heavy Duty Rating

This power rating is intended for continuous use in variable load applications where full power is limited to eight hours out of every ten hours of operation. Also, reduced power must be at least 200 RPM below the maximum rated RPM. This rating is an ISO3046 Fuel Stop Power Rating and is for applications that operate less than 5,000 hours per year.

Continuous Rating

This power rating is intended for continuous use in applications requiring uninterrupted service at full power. This rating is an ISO3046 Standard Power Rating.

Base Engine Warranty

This warranty covers any failures of the Product, under normal use and service, which result from a defect in CMD material or factory workmanship (Warrantable Failure). Coverage begins with the sale of the Engine by CMD and continues for the Duration stated in the following table. The Duration commences on either the date of delivery of the Product to the first end-user, or the date the unit is first leased, rented or loaned, or when the Product has been operated for 50 hours, whichever occurs first.

Warranty Coverage Periods		
Rating	QSB, QSC, QSL	QSM11
	Note: Coverage ends at which ever occurs first, months or hours of usage.	Note: Coverage ends at which ever occurs first, months or hours of usage.

Warranty Coverage Periods				
Rating	QSB, QSC, QSL		QSM11	
	Months	Hours	Months	Hours
GS	24	1000	24	1000
Intermittent	24	3000	24	3000
Medium Continuous Duty	24	5000	24	6000
Heavy Duty	24	5500	24	8000
Continuous	24	6500	24	9000

Cummins MerCruiser Diesel Responsibilities

During Engine Warranty

CMD will pay for all parts and labor needed to repair the damage to the Product resulting from a Warrantable Failure when performed during normal business hours. All labor costs will be paid in accordance with Cummins published Standard Repair Time guidelines.

When it is necessary for mechanics to make on-site warranty repairs CMD will pay reasonable travel expenses, including meals, mileage and lodging, for mechanics to travel to and from the repair dock.

CMD will pay for the lubricating oil, antifreeze, filter elements, and other maintenance items that are not reusable due to the Warrantable Failure.

CMD will pay for reasonable labor costs for Engine removal and reinstallation when necessary to repair a Warrantable Failure.

Owner Responsibilities

During the Engine Warranty

Owner is responsible for the operation and maintenance of the Product as specified in the applicable CMD Operation and Maintenance Manual. Owner is also responsible for providing proof that all recommended maintenance has been performed. This warranty does not cover normal wear and tear of covered parts.

Before the expiration of the applicable warranty, Owner must notify a CMD service provider, distributor, authorized dealer, or other repair location approved by CMD of any Warrantable Failure and make the Engine available for repair by such facility. Locations in the United States and Canada are listed in the Cummins U.S. and Canada Sales and Service Directory; other locations are listed in the CMD International Sales and Service Directory.

Owner is responsible for the cost of lubricating oil, antifreeze, filter elements, and other maintenance items replaced during warranty repairs unless such items are not reusable due to the Warrantable Failure.

Owner is responsible for communication expenses, meals, lodging, and similar costs incurred as a result of a Warrantable Failure.

Owner is responsible for non-Engine repairs, “downtime” expenses, cargo damage, fines, all applicable taxes, all business costs, and other losses resulting from a Warrantable Failure.

In the event of any Product failure, Owner is responsible for the cost of towing the boat to the repair dock and for all associated docking and harbor charges.

Owner is responsible for maintaining the Engine hourmeter in good working order at all times and to ensure that the hourmeter accurately reflects the total hours of operation of the Product.

Owner is responsible for the costs to investigate complaints, unless the problem is caused by a defect in CMD material or factory workmanship.

Limitations

1. Maintenance Component Limitations

CMD will replace certain maintenance components if they fail within 90 days or less after the base coverage starts. Maintenance components include but are not limited to: sea water pump impellers, zinc plugs, oil filters, fuel filters, air filters, water filters, fuel/water separator filters, expansion tank pressure caps, belts, hoses.

2. Other Component Limitations

CMD does not warrant components that are not supplied by CMD factory.

3. CMD supplied alternators and starters limitation

Warranty coverage is limited to 2 years or 2000 hours, whichever expires first.

Consumer Products

The warranty on Consumer Products in the United States is a limited warranty. CMD IS NOT RESPONSIBLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. Any implied warranties applicable to Consumer Products terminate concurrently with the expiration of the express warranties applicable to the Product. In the United States, some states do not allow the exclusion of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

CMD is not responsible for failures or damage resulting from what CMD determines to be abuse or neglect, including, but not limited to: operation without adequate coolants or lubricants; overfueling; overspeeding; lack of maintenance of cooling, lubricating or intake systems; improper storage, starting, warm-up, run-in or shutdown practices; unauthorized modifications to the engine. CMD is also not responsible for failures caused by incorrect oil or fuel or by water, dirt or other contaminants in the fuel or oil.

CMD is not responsible for failures resulting from:

- 1. Use or application of the Product inconsistent with its rating designation set forth above.
2. Incorrect installation.

Before a claim for excessive oil consumption will be considered, Owner must submit adequate documentation to show that oil consumption exceeds CMD published standards.

CMD is not responsible for failures of maintenance components supplied by CMD beyond 90 days after the coverage duration start date. Maintenance components include, but are not limited to: sea water pump impellers; zinc plugs; oil filters; fuel filters; air filters; water filters; fuel/water separator filters.

Parts used in warranty repairs may be new CMD parts, CMD-approved rebuilt parts, or repaired parts. CMD is not responsible for failures resulting from the use of parts not supplied by CMD.

A new CMD or CMD-approved rebuilt part used to replace a Warranted Part assumes the identity of the Warranted Part it replaced and is entitled to the remaining coverage hereunder.

CMD DOES NOT COVER WEAR OR WEAROUT OF COVERED PARTS.

CMD IS NOT RESPONSIBLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.

THESE WARRANTIES SET FORTH HEREIN ARE THE SOLE WARRANTIES MADE BY CMD IN REGARD TO THESE ENGINES. CMD MAKES NO OTHER WARRANTIES, EXPRESS OR IMPLIED, OR OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

Emission Warranty

Products Warranted

This Emission Warranty applies to new Engines certified to United States EPA 40 CFR 94 sold by CMD that are installed in vessels flagged or registered in the United States**.

Coverage

CMD warrants to the first user and each subsequent purchaser that the Engine is designed, built, and equipped so as to conform at the time of sale by CMD with all U.S. Federal emission regulations applicable at the time of manufacture and that it is free from defects in workmanship or material which would cause it not to meet these regulations within the longer of the following periods: (A) Five years or 5,000 hours of operation, whichever occurs first, The Emissions Warranty starts from the date of delivery of the Engine to the first user, or the date the unit is first leased, rented, or loaned, or when the Engine has been operated for 50 hours, whichever occurs first, or (B) The Base Engine Warranty.

Limitations

The owner may elect to have maintenance, replacement, or repair of the emission control parts performed by a facility other than a CMD distributor, an authorized dealer or a repair location approved by CMD, and may elect to use parts other than new genuine CMD or CMD-approved rebuilt parts and assemblies for such maintenance, replacement or repair; however, the cost of such service or parts and subsequent failures resulting from such service or parts will not be covered under this emission control system warranty.

Failures, except those resulting from a defect in materials, or factory workmanship, are not covered by this WARRANTY.

CMD IS NOT RESPONSIBLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.

In the United States** and Canada, this warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Outside the United States** and Canada, in case of consumer sales, in some countries the Owner has statutory rights which cannot be affected or limited by the terms of this warranty.

Nothing in this warranty excludes or restricts any contractual rights the Owner may have against third parties.

* Locations in the United States and Canada are listed in the Cummins United States and Canada Sales and Service Directory; other locations are listed in the Cummins International Sales and Service Directory.

** United States includes American Samoa, the Commonwealth of Northern Mariana Islands, Guam, Puerto Rico, and the U.S. Virgin Islands.

California Emission Control System Warranty, Off-Highway

Products Warranted

This Emission Control System Warranty applies to off-road diesel engines certified with the California Air Resources Board beginning with the year 1996 for engines up to 750 horsepower, beginning with the year 2000 for 751 horsepower and over, marketed by Cummins, and registered in California for use in industrial off-highway applications.

Your Warranty Rights and Obligations

The California Air Resources Board and Cummins Engine Company, Inc., are pleased to explain the emission control system warranty on your engine. In California, new off-road diesel engines must be designed, built and equipped to meet the State's stringent anti-smog standards. Cummins must warrant the emission control system on your engine for the periods of time listed below provided there has been no abuse, neglect or improper maintenance of your engine.

Your emission control system may include parts such as the fuel injection system and the air induction system. Also included may be hoses, belts, connectors and other emission-related assemblies.

Where a warrantable condition exists, Cummins will repair your off-road diesel engine at no cost to you including diagnosis, parts and labor.

Manufacturer's Warranty Coverage

This warranty coverage is provided for 5 years or 3,000 hours of engine operation, whichever first occurs from the date of delivery of the engine to the first user. If any emission-related part on your engine is defective, the part will be repaired or replaced by Cummins.

Coverage

This emission control system warranty applies only to the following A series, B3.3, B3.9, B4.5^s, B5.9, B6.7^s, QSB3.9-30, QSB4.5-30, QSB5.9-30, QSB5.9-44, C8.3, QSC8.3, and QSL9 emission control parts:

Fuel Pump

Static Timing
Delivery Valve
Injection Control Valve Module

Injectors

Calibration
Needle
Nozzle
Spring

Turbocharger

Compressor Wheel
Turbine Wheel
Turbine Oil Seal
Wastegate Valve

Intake Manifold

Charge Air Cooler
Aftercooler

Exhaust Manifold

Oxidation Catalyst

Electronic Control System

Control Module
Boost Pressure Sensor
Coolant Temperature Sensor
Fuel Pressure Sensor

Owner's Warranty Responsibilities

As the off-road diesel engine owner, you are responsible for the performance of the required maintenance listed in your Cummins Operation and Maintenance Manual. Cummins recommends that you retain all receipts covering maintenance on your off-road diesel engine, but Cummins cannot deny warranty solely for the lack of receipts or for your failure to ensure the performance of all scheduled maintenance.

You are responsible for presenting your off-road diesel engine to a Cummins dealer as soon as a problem exists. The warranty repairs should be completed in a reasonable amount of time, not to exceed 30 days.

As the off-road diesel engine owner, you should also be aware that Cummins may deny you warranty coverage if your off-road diesel engine or a part has failed due to abuse, neglect, improper maintenance or unapproved modifications.

Your engine is designed to operate on diesel fuel only. Use of any other fuel may result in your engine no longer operating in compliance with California's emissions requirements.

If you have any questions regarding your warranty rights and responsibilities, you should contact Cummins Customer Assistance Department at 1-800-343-7357 (1-800-DIESELS) or the California Air Resources Board at 9528 Telstar Avenue, El Monte, CA 91731.

Prior to the expiration of the applicable warranty, Owner must give notice of any warranted emission control failure to a Cummins distributor, authorized dealer or other repair location approved by Cummins and deliver the engine to such facility for repair. Repair locations are listed in Cummins United States and Canada Service Directory.

Owner is responsible for incidental costs such as: communication expenses, meals, lodging incurred by Owner or employees of Owner as a result of a warrantable failure.

Owner is responsible for business costs and losses, "downtime" expenses, and cargo damage resulting from a warrantable failure. CUMMINS IS NOT RESPONSIBLE FOR OTHER INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCIDENTAL OR CONSEQUENTIAL DAMAGES INCLUDE BUT ARE NOT LIMITED TO FINES, THEFT, VANDALISM OR COLLISIONS.

Replacement Parts

Cummins recommends that any service parts used for maintenance, repair or replacement of emission control systems be new, genuine Cummins or Cummins approved rebuilt parts and assemblies, and that the engine be serviced by a Cummins distributor, authorized dealer or the repair location approved by Cummins. The owner may elect to have maintenance, replacement or repair of the emission control parts performed by a facility other than a Cummins distributor, an authorized dealer or a repair location approved by Cummins, and may elect to use parts other than new genuine Cummins or Cummins approved rebuilt parts and assemblies for such maintenance, replacement or repair; however, the cost of such service or parts will not be covered under this emission control system warranty.

Cummins Responsibilities

Repairs and service will be performed by any Cummins distributor, authorized dealer or other repair location approved by Cummins using new, genuine Cummins or Cummins approved rebuilt parts and assemblies. Cummins will repair any of the emission control parts found by Cummins to be defective without charge for parts or labor (including diagnosis which results in determination that there has been a failure of a warranted emission control part).

Emergency Repairs

In the case of an emergency where a Cummins distributor, authorized dealer, or other repair location approved by Cummins is not available, repairs may be performed by any available repair location using any replacement parts. Cummins will reimburse the Owner for expenses (including diagnosis), not to exceed the manufacturer's suggested retail price for all warranted parts replaced and labor charges based on the manufacturer's recommended time allowance for the warranty repair and the geographically appropriate hourly labor rate. A part not being available within 30 days or a repair not being complete within 30 days constitutes an emergency. Replaced parts and paid invoices must be presented at a Cummins authorized repair facility as a condition of reimbursement for emergency repairs not performed by a Cummins distributor, authorized dealer, or other repair location approved by Cummins.

Warranty Limitations

Cummins is not responsible for failures resulting from Owner or operator abuse or neglect, such as: operation without adequate coolant, fuel or lubricants; overfueling; overspeeding; lack of maintenance of lubricating, cooling or air intake systems; improper storage, starting, warm-up, run-in or shutdown practices.

The manufacturer warrants to the ultimate purchaser and each subsequent purchaser that the engine is designed, built, and equipped so as to conform with all applicable regulations adopted by the Air Resources Board, and that it is free from defects in materials and workmanship which cause the failure of a warranted part.

Any warranted part which is not scheduled for replacement as required maintenance, or which is scheduled only for regular inspection to the effect of "repair or replace as necessary" is warranted for the warranty period.

Any warranted part which is scheduled for replacement as required maintenance is warranted for the period of time prior to the first scheduled replacement point for that part.

The owner will not be charged for diagnostic labor which leads to the determination that a warranted part is defective, if the diagnostic work is performed at a warranty station.

The manufacturer is liable for damages to other engine components caused by the failure under warranty of any warranted part.

Cummins is not responsible for failures resulting from improper repair or the use of parts which are not genuine Cummins or Cummins approved parts.

These warranties, together with the express commercial warranties and emission warranty are the sole warranties of Cummins. There are no other warranties, express or implied, or of merchantability or fitness for a particular purpose.

Acronyms and Abbreviations	i-5
General Information.....	i-5
Additional Service Literature	L-1
General Information.....	L-1
California Emission Control System Warranty, Off-Highway	W-10
Cold Weather Starting	1-3
General Information.....	1-3
Using Starting Aids.....	1-3
Coolant Recommendations and Specifications	V-8
Cooling System Sealing Additives.....	V-10
Cooling System Soluble Oils.....	V-10
Fully Formulated Coolant/Antifreeze.....	V-8
Cooling System	V-3
Specifications.....	V-3
Cummins Customized Parts Catalog	L-3
General Information.....	L-3
Ordering the Customized Parts Catalog.....	L-3
Ordering by Telephone.....	L-3
Ordering On-Line.....	L-3
Cummins/Fleetguard® Filter Specifications	V-4
General Information.....	V-4
Electromagnetic Interference (EMI)	1-6
General Information.....	1-6
System EMI Radiation Levels.....	1-7
System EMI Susceptibility.....	1-6
Engine Identification	E-1
Cummins® Engine Nomenclature.....	E-2
ECM Dataplate.....	E-2
Engine Dataplate.....	E-1
Fuel Injection Pump Dataplate.....	E-2
Engine Operating Range	1-6
General Information.....	1-6
Engine Shutdown	1-6
General Information.....	1-6
Fuel Recommendations and Specifications	V-5
Fuel Recommendations.....	V-5
General Engine	V-1
Specifications.....	V-1
General Safety Instructions	i-3
Important Safety Notice.....	i-3
Illustrations	i-2
General Information.....	i-2
Lubricating Oil Recommendations and Specifications	V-6
Arctic Operation.....	V-7
General Information.....	V-6
New Engine Break-in Oils.....	V-7
Lubricating Oil System	V-2
Specifications.....	V-2
Maintenance Guidelines - Overview	2-1
General Information.....	2-1
Maintenance Record Form	2-4
Maintenance Data.....	2-4
Maintenance Schedule	2-2
General Information.....	2-2
Oil Drain Intervals.....	2-2
Normal Starting Procedure	1-2
General Information.....	1-2
All Engines International Industrial (Off-Highway)	W-4
All Engines United States and Canada Industrial (Off-Highway)	W-1
Operating Instructions - Overview	1-1
General Information.....	1-1
Operating the Engine	1-3
Ambient Temperature.....	1-4
0 to -32°C [32 to -25°F].....	1-4
-32 to -54°C [-25 to -65°F].....	1-4
Cold Weather.....	1-4
Normal.....	1-3
Winterfronts and Shutters.....	1-5
QSB5.9/QSC8.3/QSL9/QSM11 Commercial Applications Marine Propulsion Worldwide	W-6
Service Literature Ordering Location	L-2
Contact Information.....	L-2
Starting Procedure After Extended Shutdown or Oil Change	1-3
General Information.....	1-3
Symbols	i-1
General Information.....	i-1

Cummins Inc.

Box 3005

Columbus, Indiana, U.S.A., 47202

Registered Office

Cummins Ltd.

Unit 1-B Uniongate, Ridgeway Trading Estate,

Iver,

Buckinghamshire SL0 9HX,

England

Registration 573951 England

Copyright© 2007

Cummins Inc.

Bulletin 4915536

Printed in U.S.A. 02-MAY-2007