

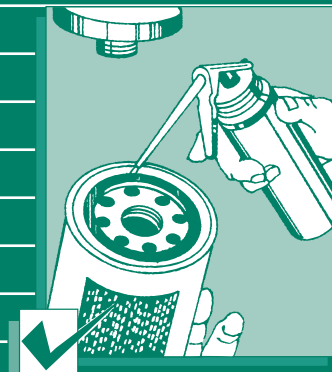
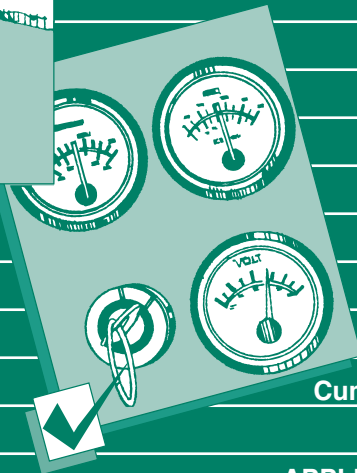


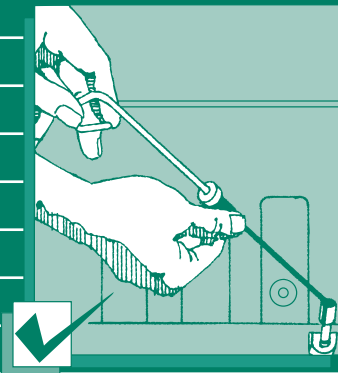

Owners Manual QSF2.8 CM2880 F105

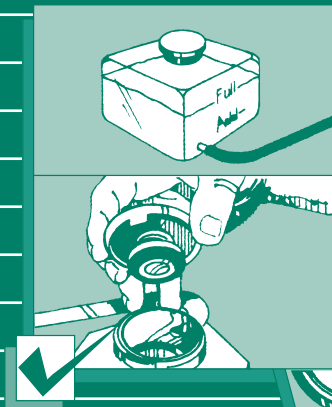


Cummins Customer Assistance Center

1-800-DIESELS™ (1-800-343-7357)

APPLICABLE ONLY IN U.S.A. AND CANADA



Owners Manual QSF2.8 CM2880 F105

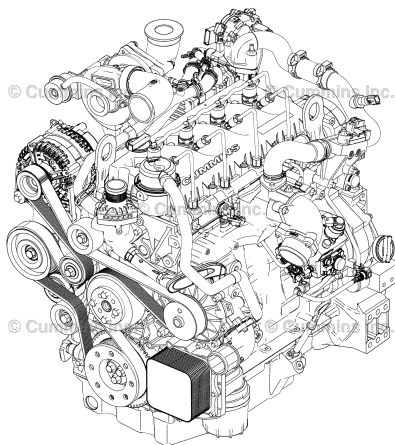

000000

Copyright© 2016
Cummins Inc.
All rights reserved

Bulletin 4358559
Printed 25-FEBRUARY-2016

To buy Cummins Parts and Service Manuals, Training Guides, or Tools go to our website at <https://store.cummins.com>

Foreword

This manual contains information for the correct operation and maintenance of your Cummins® Product.

Read and follow all safety instructions. Refer to the WARNING in the General Safety Instructions in Section i - Introduction.

Keep this manual with the equipment. If the equipment is traded or sold, give the manual to the new owner.

The information, specifications, and recommended maintenance guidelines in this manual are based on information in effect at the time of printing. Cummins Inc. reserves the right to make changes at any time without obligation. If you find differences between your product and the information in this manual, contact your local Cummins Authorized Repair Location or call 1-800-DIESELS (1-800-343-7357) toll free in the U.S. and Canada.

The latest technology and the highest quality components were used to produce this product. When replacement parts are needed, we recommend using only genuine Cummins® or ReCon® exchange parts.

NOTE: Warranty information is located in Section W. Make sure you are familiar with the warranty or warranties applicable to your product.

Table of Contents

	Section	
Introduction	i	
Engine and System Identification	E	
Operating Instructions	1	
Maintenance Guidelines	2	
Service Literature	L	
Maintenance Specifications	V	
Warranty	W	
Back	back	

Important Reference Numbers

Fill in the part name and number in the blank spaces provided below. This will give you a reference whenever service or maintenance is required.

Name	Number	Number
Engine Model		
Engine Serial Number (ESN)		
Control Parts List (CPL)		
Fuel Pump Part Number		
Electronic Control Module (ECM)		
Electronic Control Module Serial Numbers (ECM)		
Filter Part Numbers:		
• Air Cleaner Element		
• Lubricating Oil		
• Fuel		
• Fuel-Water Separator		
• Coolant		
• Crankcase Ventilation		
• Cummins Particulate Filter		
Governor Control Module (GCM) (if applicable)		
Belt Part Numbers:		

To buy Cummins Parts and Service Manuals, Training Guides, or Tools go to our website at <https://store.cummins.com>

•		
•		
•		
Clutch or Marine Gear (if applicable):		
• Model		
• Serial Number		
• Part Number		
• Oil Type		
• Sea Water Pump		
- Model		
- Part Number		

To buy Cummins Parts and Service Manuals, Training Guides, or Tools go to our website at <https://store.cummins.com>

Section i - Introduction

Section Contents

	Page
Acronyms and Abbreviations	i-37
General Information.....	i-37
General Safety Instructions	i-9
Aftertreatment.....	i-22
Best Practices.....	i-9
Common Hazards.....	i-29
Common Substances.....	i-24
Electrical Components.....	i-28
Fuels.....	i-14
Hazardous Substances.....	i-26
Important Safety Notice.....	i-9
Job Safety Assessment.....	i-31
Personal Protective Equipment (PPE).....	i-11
Power Generation Applications.....	i-21
Work Environment.....	i-9
Illustrations	i-8
General Information.....	i-8
Symbols	i-1
General Information.....	i-1

This Page Left Intentionally Blank

Symbols

General Information

The symbols have been used in this manual to help communicate the intent of the instructions. When one of the symbols appears, it conveys the meaning defined below.

NOTE: It is possible to have four symbols for each text and graphic combination.



! WARNING !
**Serious personal injury or extensive property damage
can result if the warning instructions are not followed.**

△CAUTION△

Minor personal injury can result or a part, and assembly, or the engine can be damaged if the caution instructions are not followed.



Indicates a **REMOVAL** or **Dissassembly** step.

Indicates an **INSTALLATION** or **ASSEMBLY** step.



INSPECTION is required.





CLEAN the part or assembly.



PERFORM a mechanical or time **MEASUREMENT**.

LUBRICATE the part or assembly.



Indicates that a **WRENCH** or **TOOL SIZE** will be given.









TIGHTEN to a specific torque.



PERFORM an electrical **MEASUREMENT**.

Refer to another location in this manual or another publication for additional information. 

The component weighs 23kg [50 lbs] or more. To reduce the possibility of personal injury, use a hoist or get assistance to lift the component. 

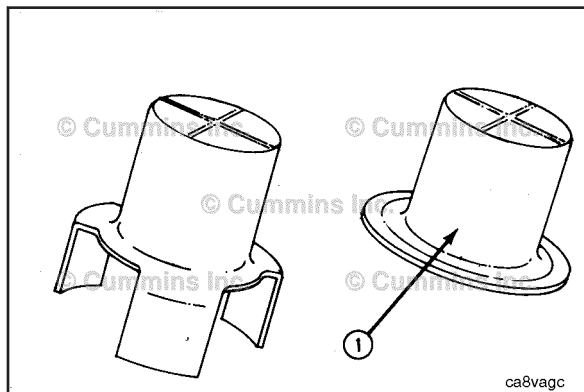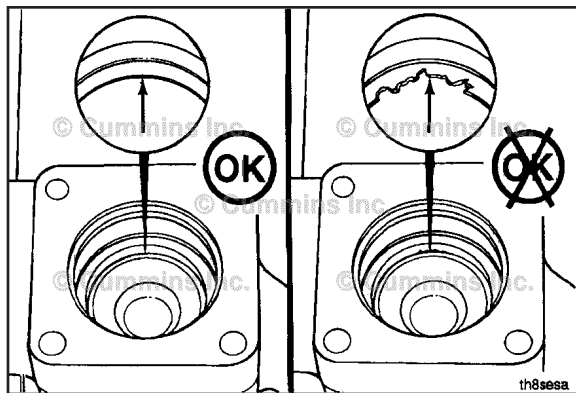

Illustrations

General Information

Some of the illustrations throughout this manual are generic and will **not** look exactly like the engine or parts used in your application. The illustrations can contain symbols to indicate an action required and an acceptable or **not** acceptable condition.

The illustrations are intended to show repair or replacement procedures. The procedure will be the same for all applications, although the illustration can differ.

General Safety Instructions

Important Safety Notice

Read and understand the safety information and precautions before performing any repair or operating equipment. This procedure contains general safety precautions that **must** be followed to provide personal safety. **Always** follow procedures to mitigate safety concerns.

Work Environment

Follow these recommended practices when servicing products.

- **Always** follow on-site safety requirements.
- **Always** follow local training, certification, authorization, and specific customer requirements. Do **not** work on products unless proper training has been completed to allow safe repair completion. Do **not** operate equipment unless proper training has been completed to allow safe operation..
- Work in a well-ventilated area away from ignition sources.
- If adverse weather conditions are present, take appropriate safety precautions when performing work.
- **Always** be aware of hazardous conditions that may exist in the work environment.

Best Practices

Follow these recommended practices when servicing or operating equipment.

- **Always** wear protective glasses and protective shoes.
- Remove rings, watches, long jewelry, or metallic items.
- Do **not** wear loose fitting or torn clothing, jewelry, long hair, etc.. These increase the risk for personal injury.

To buy Cummins Parts and Service Manuals, Training Guides, or Tools go to our website at <https://store.cummins.com>

- Do **not** perform any repairs, or operate equipment, when fatigued or impaired due to drugs or alcohol.
- **Always** use tools that are in good condition.
- Do **not** work on equipment that is running unless otherwise directed by troubleshooting procedures.
- If any work **must** be performed while the unit is running, use extreme caution around hot components, moving parts, etc..
- Exercise caution when working on products that have just been turned off. Hot parts may cause burns or ignite or melt common materials.
- Do **not** bleed the fuel system of a hot engine. Contact with hot manifolds or other components can cause a fire.
- Do **not** attempt to rotate the crankshaft by pulling or prying on the fan. **Only** use proper engine barring techniques.
- Do **not** lift components that weigh 23 kg [50 lb] or more. Use mechanical help or seek assistance.
- Exercise caution when working around rotating parts. Rotating parts can cause cuts, mutilation, or strangulation.
- Exercise caution when working on electrical components. High voltages can cause serious injury or death.
- Relieve system pressure as instructed before removing or disconnecting lines, fittings, or related items.
- **Always** test for pressure leaks as instructed.
- **Always** torque fittings and connections to the required specifications. Over or under tightening can damage threads and create leaks.
- **Always** use the same fastener part number, or equivalent, when replacing fasteners.

Perform the following prior to beginning work on any products.

- Shutdown the equipment unless otherwise directed by troubleshooting procedures.
- **Always** allow the product to cool.

To buy Cummins Parts and Service Manuals, Training Guides, or Tools go to our website at <https://store.cummins.com>

- **Always** ensure the product is properly supported by blocks or stands. Do **not** work on a product supported **only** by lifting jacks or hoists.
- Disconnect the battery unless otherwise directed by troubleshooting procedures.
- Disconnect the starting motor, if equipped, unless otherwise directed by troubleshooting procedures.
- Place a "Do NOT Operate" tag in the operator area or near the product controls.
- Become familiar with the tools required for performing the task at hand and how to use those tools correctly.
- Use only genuine Cummins or Cummins Recon replacement parts as instructed.

Personal Protective Equipment (PPE)

To reduce the possibility of personal injury, personal protective equipment (PPE) should be utilized. Various types of PPE are listed below. Use proper judgment to determine which types of PPE are required for a given task. **Always** meet on-site safety regulations for required PPE. Proper maintenance of safety equipment **must** be practiced. Integrity of safety equipment **must** be checked to ensure equipment functionality is maintained.

Eye Protection

Eye protection **must always** be worn. Wear appropriate eye protection based on the task being completed. Types of eye protection to consider are listed below.

- Safety glasses. Exposure to flying particles or debris, chemicals or caustic liquids, gases or vapors.
- Polarized safety glasses. Working in outdoor or bright lighting environments.
- Over-the-glass safety glasses. Add protection to prescription glasses.
- Safety goggles. Handling caustic liquids or chemicals.
- Shade or arc rated eyewear. Exposure to welding. Use appropriate filter ratings.

To buy Cummins Parts and Service Manuals, Training Guides, or Tools go to our website at <https://store.cummins.com>

Foot Protection

Protective shoes **must always** be worn. Wear appropriate foot protection based on the task being completed. Types of protective footwear to consider are listed below.

- Steel toed shoes. Exposure to falling or rolling objects. Working with or around parts, tools, and equipment.
- Chemical resistant. Exposure to chemicals and other fluids.
- Overshoes and overboots. Add protection to everyday work shoes.
- Foot, toe, and metatarsal guards. Add protection to everyday work shoes.
- Electrical hazard safety toe shoes. Exposure to electrical hazards.
- Leather footwear or shoe protectors. Exposure to welding or arc flash.
- Cold protection. Exposure to cold weather.

Head and Face Protection

Wear appropriate face protection based on the task being completed. Types of head and face protection to consider are listed below.

- Hard hats. Exposure varies. Consider welding, heat, or arc-rated.
- Visors. Exposure varies. Consider welding, heat, or arc-rated.
- Face liners. Exposure to cold weather.
- Face shields. Exposure to liquid splash. Handling caustic liquids or chemicals.

Hand Protection

Wear appropriate type and fit of gloves based on the task being completed. Types of protective gloves to consider are listed below.

- Heat resistant or insulated. Exposure to hot items.
- Flame resistant. Exposure to welding or arc flash.
- Impact resistant. Performing repetitive impact and vibration work. Using pneumatic tools.
- Impervious. Exposure to high pressure fluids.
- Chemical resistant. Exposure to chemicals, fluids, or batteries.
- Cut resistant. Handling sharp objects or tools.
- Cold weather. Exposure to cold weather.

Hearing Protection

When working around operating equipment, appropriately rated hearing protection should be worn. Types of hearing protection to consider are listed below.

- Single use ear plugs.
- Pre-formed ear plugs.
- Ear muffs.

Protective Clothing

Wear appropriate protective clothing based on the task being completed. Types of protective clothing to consider are listed below.

- Flame resistant. Exposure to electrical hazards. Exposure to oil and gas or generator set applications. Performing welding.
- Chemical resistant. Exposure to chemicals.

- High visibility. Exposure to reduced visibility working environments. Working on mining, oil and gas, or sites with large equipment.

Respiratory Protection

Wear appropriate respiratory protection based on the task being completed. Types of respiratory protection to consider are listed below.

- Disposable respirators. Exposure to dust and particles, welding fumes, nuisance odors, nuisance level acid gas.
- Reusable respirators. Exposure to cleaning, machining, welding, sanding, grinding, etc.

Fall Protection

Utilize fall protection if a task is being completed more than 1.2 m [4 ft] above a solid surface. Types of fall protection to consider are listed below.

- Fall harness and lanyard combinations.
- Safety nets.
- Guardrails.

Fuels

Follow these recommended practices when interacting with equipment that uses different fuel types. For information regarding proper handling of various substances, refer to the manufacturer's safety data sheet.

Diesel Fuel

- Protect eyes.
- Protect skin.

- **Always** test for fuel leaks as instructed.
- Do **not** dilute.
- Avoid sparks, arcing switches and equipment, cigarettes, pilot lights, flames, and other sources of ignition.
- Provide extra ventilation to the work area.
- Do **not** troubleshoot or repair fuel leaks while the engine is running.
- If material is spilled, avoid contact and dispersal with runoff, soil, waterways, drains, and sewers. Absorb with sand, clay, or commercial absorbent. Transfer to containers and neutralize the material. Flush spill area with soap and excess water.
- Report spills effecting water source contamination to local authorities immediately.
- Proper disposal is required. Dispose of in accordance with local and environmental regulations.
- **Always** torque fittings and connections to the required specifications. over or under tightening can damage threads and create leaks.

Gasoline

- Protect eyes.
- Protect skin.
- **Always** be alert for the smell of gas.
- **Always** test for fuel leaks as instructed.
- Do **not** dilute.
- Avoid sparks, arcing switches and equipment, cigarettes, pilot lights, flames, and other sources of ignition.

- Vapors accumulate near the floor. Check the work floor, sumps, and low lying areas for ignition sources before servicing equipment..
- Provide extra ventilation to the work area.
- Do **not** troubleshoot or repair fuel leaks while the engine is running.
- If material is spilled, avoid contact and dispersal with runoff, soil, waterways, drains, and sewers. Absorb with sand, clay, or commercial absorbent. Transfer to containers and neutralize the material. Flush spill area with soap and excess water.
- Report spills effecting water source contamination to local authorities immediately.
- Proper disposal is required. Dispose of in accordance with local and environmental regulations.
- **Always** torque fittings and connections to the required specifications. over or under tightening can damage threads and create leaks.

Biodiesel

- Protect eyes.
- Protect skin.
- **Always** test for fuel leaks as instructed.
- Do **not** dilute.
- Avoid sparks, arcing switches and equipment, cigarettes, pilot lights, flames, and other sources of ignition.
- Vapors accumulate near the floor. Check the work floor, sumps, and low lying areas for ignition sources before servicing equipment..
- Provide extra ventilation to the work area.
- Do **not** troubleshoot or repair fuel leaks while the engine is running.

To buy Cummins Parts and Service Manuals, Training Guides, or Tools go to our website at <https://store.cummins.com>

- If material is spilled, avoid contact and dispersal with runoff, soil, waterways, drains, and sewers. Absorb with sand, clay, or commercial absorbent. Transfer to containers and neutralize the material. Flush spill area with soap and excess water.
- Report spills effecting water source contamination to local authorities immediately.
- Proper disposal is required. Dispose of in accordance with local and environmental regulations.
- **Always** torque fittings and connections to the required specifications. over or under tightening can damage threads and create leaks.

Compressed Natural Gas

- Protect eyes.
- Protect skin.
- **Always** be alert for the smell of gas. Compressed natural gas is typically treated with an odor producing chemical for leak detection. Non-refined sources of natural gas (landfill gas, biogas, coal bed gas, wellhead gas, etc.) can **not always** be detected by smell.
- **Always** test for fuel leaks as instructed. Odorant can fade.
- Upon entering a room or approaching a vehicle where the smell of gas is present, immediately shutoff all engines and ignition sources.
- Natural gas ignites when there is a 5% - 15% mixture in the air. Asphyxiation can occur when concentration reaches 21% or more.
- Do **not** start equipment or nearby equipment until a suspected gas leak is corrected and the area is ventilated.
- Avoid sparks, arcing switches and equipment, cigarettes, pilot lights, flames, and other sources of ignition.
- Work in areas that do **not** share common ventilation with areas containing ignition sources.

- Store and service natural gas fueled equipment in large, well-ventilated areas, or outside.
- Provide extra ventilation to the work area.
- Natural gas accumulates near the ceiling. Check the ceiling of the work area for ignition sources before servicing equipment.
- **Only** disconnect gas lines in a well-ventilated area.
- Do **not** troubleshoot or repair gas leaks while the engine is running.
- Natural gas ignition systems produce high voltage during operation. Do **not** touch ignition wiring or components while the engine is operating. If necessary, use **only** insulated tools.
- Natural gas exhaust systems operate at higher temperatures than similar diesel exhaust systems. Do **not** touch exhaust components. Do **not** route lines or hoses which deteriorate from heat exposure near exhaust components or in the flow path of the exhaust.
- **Always** torque fittings and connections to the required specifications. over or under tightening can damage threads and create leaks.

Liquefied Natural Gas

- Protect eyes.
- Protect skin.
- **Always** be alert for the smell of gas. Liquefied natural gas may **not** have an odor. Non-refined sources of natural gas (landfill gas, biogas, coal bed gas, wellhead gas, etc.) can **not always** be detected by smell.
- **Always** test for fuel leaks as instructed. Odorant can fade.
- Upon entering a room or approaching a vehicle where the smell of gas is present, immediately shutoff all engines and ignition sources.

- Natural gas ignites when there is a 5% - 15% mixture in the air. Asphyxiation can occur when concentration reaches 21% or more.
- Do **not** start equipment or nearby equipment until a suspected gas leak is corrected and the area is ventilated.
- Avoid sparks, arcing switches and equipment, cigarettes, pilot lights, flames, and other sources of ignition.
- Work in areas that do **not** share common ventilation with areas containing ignition sources.
- Store and service natural gas fueled equipment in large, well-ventilated areas, or outside.
- Provide extra ventilation to the work area.
- Natural gas accumulates near the ceiling. Check the ceiling of the work area for ignition sources before servicing equipment.
- **Only** disconnect gas lines in a well-ventilated area.
- Do **not** troubleshoot or repair gas leaks while the engine is running.
- Natural gas ignition systems produce high voltage during operation. Do **not** touch ignition wiring or components while the engine is operating. If necessary, use **only** insulated tools.
- Natural gas exhaust systems operate at higher temperatures than similar diesel exhaust systems. Do **not** touch exhaust components. Do **not** route lines or hoses which deteriorate from heat exposure near exhaust components or in the flow path of the exhaust..
- Liquefied natural gas is stored in vehicle tanks at extremely cold temperatures. If there is a liquefied natural gas spill, evacuate the area immediately and do not attempt to make contact with the liquid.
- **Always** torque fittings and connections to the required specifications. over or under tightening can damage threads and create leaks.
- Vapors accumulate near the floor. Check the work floor, sumps, and low lying areas for ignition sources before servicing equipment.

To buy Cummins Parts and Service Manuals, Training Guides, or Tools go to our website at <https://store.cummins.com>

Liquefied Petroleum Gas

- Protect eyes.
- Protect skin.
- **Always** be alert for the smell of gas. Liquefied petroleum gas is typically treated with an odor producing chemical for leak detection.
- **Always** test for fuel leaks as instructed. Odorant can fade.
- Upon entering a room or approaching a vehicle where the smell of gas is present, immediately shutoff all engines and ignition sources.
- Do **not** start equipment or nearby equipment until a suspected gas leak is corrected and the area is ventilated.
- Avoid sparks, arcing switches and equipment, cigarettes, pilot lights, flames, and other sources of ignition.
- Work in areas that do **not** share common ventilation with areas containing ignition sources.
- Store and service natural gas fueled equipment in large, well-ventilated areas, or outside.
- Provide extra ventilation to the work area.
- Liquefied petroleum gas accumulates near the floor. Check the work floor, sumps, and low lying areas for ignition sources before servicing equipment.
- **Only** disconnect gas lines in a well-ventilated area.
- Do **not** troubleshoot or repair gas leaks while the engine is running.
- Liquefied petroleum gas ignition systems produce high voltage during operation. Do **not** touch ignition wiring or components while the engine is operating. If necessary, use **only** insulated tools.

- Liquefied petroleum gas exhaust systems operate at higher temperatures than similar diesel exhaust systems. Do **not** touch exhaust components. Do **not** route lines or hoses which deteriorate from heat exposure near exhaust components or in the flow path of the exhaust..
- Liquefied natural gas is stored in vehicle tanks at extremely cold temperatures. If there is a liquefied natural gas spill, evacuate the area immediately and do not attempt to make contact with the liquid.
- **Always** torque fittings and connections to the required specifications. over or under tightening can damage threads and create leaks.

Power Generation Applications

Follow these recommended practices when interacting with equipment in generator set applications.

Power generation applications produce high voltage during operation. When servicing a generator set, the following safety precautions **must** be taken.

- Remove any debris from the generator set.
- Keep the floor clean and dry throughout servicing
- Service access doors **must** be secured in the "open" position before working on enclosed generator sets.
- Use insulated or non-conducting tools.
- Prevent accidental or remote starting. Disconnect the starting battery cables. Disconnect the negative (-) terminal first.
- Isolate all auxiliary supplies.
- Switch the generator set control panel "off."
- Place a "Do **Not** Operate" tag on the control panel.

- Lock the generator set circuit breaker in the "Open" position.
- Activate the manual "Emergency Stop" device.
- Do **not** step on the generator set when servicing, entering, or leaving the generator room.

Aftertreatment

Follow these recommended practices when interacting with equipment that utilize aftertreatment systems. For information regarding proper handling of various substances, refer to the manufacturer's safety data sheet.

Diesel Exhaust Fluid

- Avoid breathing vapor or mist.
- Protect eyes. In case of contact with eyes, flush with water for a minimum of 15 minutes.
- Protect skin. In case of contact with skin, wash with soap and water.
- Do **not** ingest. If ingested, contact a physician immediately.

Diesel Particulate Filter

- Protect eyes.
- Protect skin.
- Avoid stirring up exhaust particulate dust.
- Avoid inhalation of exhaust particulate dust. Wear a dust mask. If respiratory irritation or discomfort occurs, leave the dusty area. Utilize breathing assistance or oxygen if necessary.
- Elevated concentrations of metals in the form of dust, soot, and contaminants are contained in these filters. Health regulations may exist for the materials found in these filters such as Zinc, Molybdenum, polynuclear aromatic

To buy Cummins Parts and Service Manuals, Training Guides, or Tools go to our website at <https://store.cummins.com>

hydrocarbons. Potentially toxic materials found in these filters are oxides of calcium, zinc, phosphorous, silicon, sulfur, and iron.

- Proper disposal of the exhaust dust and filter are required. Dispose of in accordance with local and environmental regulations.
- Diesel particulate filter maintenance **must** be completed by appropriately trained personnel.

Selective Catalytic Reduction (SCR) Catalyst

- Protect eyes.
- Protect skin.
- Avoid stirring up exhaust catalyst dust.
- Avoid inhalation of exhaust catalyst dust. Wear a dust mask. If respiratory irritation or discomfort occurs, leave the dusty area. Utilize breathing assistance or oxygen if necessary.
- Do **not** cut open exhaust catalyst assemblies.
- Proper disposal of the exhaust catalyst is required. Dispose of in accordance with local and environmental regulations.

Oxidation Catalysts

Types of Oxidation Catalysts may include, but are not limited to the following.

- Diesel Oxidation Catalyst (DOC)
- 3-way Oxidation Catalyst

When working with oxidation catalysts, perform the following.

- Protect eyes.

- Protect skin.
- Avoid stirring up exhaust catalyst dust.
- Avoid inhalation of exhaust catalyst dust. Wear a dust mask. If respiratory irritation or discomfort occurs, leave the dusty area. Utilize breathing assistance or oxygen if necessary.
- Do **not** cut open exhaust catalyst assemblies.

Common Substances

Follow these recommended practices when interacting with the following substances. For information regarding proper handling of various substances, refer to the manufacturer's safety data sheet.

Coolant

- Coolant is also referred to as antifreeze.
- Protect eyes. In case of contact with eyes, flush with water for a minimum of 15 minutes. Receive medical attention immediately.
- Protect skin. In case of contact with skin, wash with soap and water. Remove contaminated clothing. If injection occurs, it is a medical emergency. Receive medical attention immediately.
- Do **not** ingest. If ingested, drink excess water for dilution and seek medical attention.
- Do **not** pour used antifreeze into containers that have been used to store other chemicals or products, such as oil or gasoline, unless they have been thoroughly cleaned.
- If material is spilled, avoid contact and dispersal with runoff, soil, waterways, drains, and sewers. Provide adequate ventilation to the area. Absorb with sand, clay, or commercial absorbent. Transfer to containers and neutralize the material. Flush spill area with soap and excess water.

- Report spills effecting water source contamination to local authorities immediately.
- Proper disposal is required. Dispose of in accordance with local and environmental regulations.

Liquid Nitrogen

- Work in a well-ventilated area.
- Protect eyes. In case of contact with eyes, flush with water for a minimum of 15 minutes. Receive medical attention immediately.
- Protect skin. In case of contact with skin, receive medical attention immediately.
- Wear protective clothing and gloves that insulate.
- Handle items with tongs or wire hooks.
- Avoid prolonged breathing of liquid nitrogen vapors. Utilize breathing assistance or oxygen if necessary.

Lubricating Oil

See Lubricating Oil in the "Hazardous Substances" step.

Refrigerant

- Protect eyes. In case of contact with eyes, flush with water for a minimum of 15 minutes. In case of frostbite, use lukewarm water, not hot. Seek medical attention if irritation continues.
- Protect skin. Wear leather or insulated gloves. In case of contact with skin, wash with soap and water. Seek medical attention if irritation continues.
- Proper disposal is required. Dispose of in accordance with local and environmental regulations.
- **Only** disconnect liquid refrigerant lines in a well-ventilated area. liquid refrigerant systems **must** be properly emptied and filled using equipment that prevents the release of refrigerant gas into the atmosphere. Federal law requires capturing and recycling refrigerant in the United States of America.

To buy Cummins Parts and Service Manuals, Training Guides, or Tools go to our website at <https://store.cummins.com>

Solvents

- Follow the manufacturer's instructions for safe handling practices.
- Follow the manufacturer's recommendations for use.
- Some solvents are flammable and toxic..
- Protect eyes. In case of contact with eyes, follow manufacturer's recommendations.
- Protect skin. In case of contact with skin, follow manufacturer's recommendations.
- Dispose of in accordance with manufacturer's recommendations.

Starting Aids (Starting Fluid)

- Do **not** use starting fluid if the intake air heater option is used.
- Do **not** use volatile cold starting aids in underground mine or tunnel operations. The local United States Bureau of Mines inspector can provide more information and instructions.
- Avoid sparks, arcing switches and equipment, cigarettes, pilot lights, flames, and other sources of ignition.
- Work in a well-ventilated area.
- Avoid inhalation.

Hazardous Substances

Hazardous substances are known to some state and federal agencies to be carcinogenic and cause reproductive harm. Hazardous substances that may be encountered during service events are listed below.

Diesel Engine Exhaust

- Protect eyes. In case of contact with eyes, flush with water for a minimum of 15 minutes.

- Protect skin. In case of contact with skin, wash with soap and water.
- Avoid inhalation.

Lubricating Oil

- Protect eyes. In case of contact with eyes, flush with water for a minimum of 15 minutes.
- Protect skin. In case of contact with skin, wash with soap and water.
- Do **not** ingest. If ingested, contact a physician immediately..
- Proper disposal is required. Dispose of in accordance with local and environmental regulations.
- Do **not** allow water droplets to enter a container of hot oil. A violent reaction can result.

Mercury

- Protect eyes. In case of contact with eyes, flush with water for a minimum of 15 minutes.
- Protect skin. In case of contact with skin, wash with soap and water.
- Do **not** ingest. If ingested, contact a physician immediately.
- Proper disposal is required. Dispose of in accordance with local and environmental regulations.

Vanadium Pentoxide

- Can be found in some selective catalytic reduction (SCR) catalysts.
- Protect eyes. In case of contact with eyes, flush with water for a minimum of 15 minutes.
- Protect skin. In case of contact with skin, wash with soap and water.
- Do **not** ingest. If ingested, contact a physician immediately.
- Avoid inhalation of vapors or airborne particles.

- Proper disposal is required. Dispose of in accordance with local and environmental regulations.

Electrical Components

Follow these recommended practices when interacting with electrical components.

Batteries

- Protect eyes. Wear safety glasses or goggles. In case of battery acid contact with eyes, flush with water for a minimum of 15 minutes. Receive medical attention immediately.
- Protect skin. Wear rubber gloves and a chemical apron. In case of battery acid contact with skin or clothing, rinse with water for several minutes. Avoid spreading the acid. Receive medical attention immediately.
- Do **not** open the battery caps with your face over or near the battery.
- Remove rings, watches, long jewelry, or metallic items when working with or near batteries.
- Ventilate the battery compartment before servicing the battery.
- Work in a well-ventilated area.
- Avoid sparks, arcing switches and equipment, cigarettes, pilot lights, flames, and other sources of ignition.
- Use insulated or non-conducting tools.
- Neutralize static buildup by contacting the nearest ground surface before working on a battery.
- Do **not** lift batteries by the posts.
- Do **not** touch both battery terminals with your bare hands at the same time.
- Disconnect the negative (-) battery cable first.
- Attach the negative (-) battery cable last.

To buy Cummins Parts and Service Manuals, Training Guides, or Tools go to our website at <https://store.cummins.com>

Common Hazards

Follow these recommended practices when interacting with equipment as the following hazards may exist.

High Temperature Area

Be alert for high temperature areas which may cause severe burns. High temperature areas may be encountered in the following situations.

- On products that have just been turned off.
- On or around exhaust related components (turbocharger, aftertreatment systems, etc).
- In exhaust gas flow paths.
- Contacting hot fluid lines, tubes, or compartments.

Recommended Practices:

- Allow components to cool before servicing. Verify the temperature of the component. Utilize an infrared gun, temperature sensor, temperature gauge, or other reliable method to determine component temperature. Take appropriate precautions before starting work.
- Protect eyes.
- Protect skin. Wear insulated gloves.
- Ensure surrounding items do not come in contact with hot components or exhaust. Contact may ignite or melt those materials.

Heavy Objects

Be alert when working with heavy objects.

- Do **not** lift components that weigh 23 kg [50 lb] or more. Use mechanical help or seek assistance.

To buy Cummins Parts and Service Manuals, Training Guides, or Tools go to our website at <https://store.cummins.com>

- Use mechanical help to move items whenever possible. Make sure the load is securely fastened to the equipment.
- Make sure lifting devices, like chains, hooks, slings, etc., are in good condition and are rated for the correct capacity before use.
- Make sure lifting devices are positioned correctly before use.
- Use a spreader bar when necessary.
- If the item can be lifted manually, squat to lift and lower the item. Do **not** bend at the waist.
- Maintain balance when lifting items by keeping feet apart or staggered if possible.
- If the item must be carried, make sure the path is clear when carrying the item to, and placing the item in, the desired location.

Pressurized Areas

Be alert for pressurized areas. Pressurized areas may be encountered in the following situations.

- Air, Oil, Fuel, and Cooling systems.
- When disconnecting or removing lines, fittings, or related items.
- When disconnecting a device from a pressurized system.
- When removing or loosening caps on tanks or pressurized systems.

Injuries that may result when interacting with pressurized areas are listed below.

- High pressure spray can penetrate the skin. Serious injury or death may result.
- Hot fluid spray can cause burns. See "High Temperature Area."

Recommended Practices:

- Protect skin. Wear impervious gloves. If skin penetration from high pressure spray occurs, it is a medical emergency. Receive medical attention immediately.
- Check for pressure leaks as instructed. **Never** check for pressure leaks with your hand.
- Allow product to cool before accessing pressurized areas.
- Relieve system pressure as instructed.
- Slowly loosen fill caps to relieve pressure before servicing.

Job Safety Assessment

Completing a Job Safety Assessment (JSA) prior to performing work helps identify job safety hazards and prevent incidents. Use the guidelines below to assess if a situation is safe or at risk prior to performing designated work. If determined to be at risk, take appropriate precautions to prepare for, or eliminate, the hazard. If the risks are uncontrollable, consult a knowledgeable resource to find a safe practice solution. A knowledgeable resource may include, but is not limited to, one of the following:

- Site supervisor
- Customer
- Work supervisor

Always check with the site where work is being performed to determine if safety assessment documentation is required.

Work Practices

Job Safety Analysis.

- Assess the job to identify safety hazards that may occur during the repair event.

Ascending or Descending

- Maintain 3 points of contact when using steps, ladders, or entering and exiting a unit.

Communication

- When working with others, make sure you understand what each other is doing to safely complete the task.

Eyes On Hands and Work.

- Confirm if you will be able to maintain an unobstructed view of your hands at all times while performing the task.

Eyes On Path

- Watch for hazards in your path to avoid trip or slip hazards. Examples are pits, platform edges, etc.

Line Of Fire

- Position yourself so that you avoid striking against, or being struck by, anything that can swing, fall, or roll.

Pinch Point

- Prevent exposure of all parts of your body to a nip hazard or pinch point.

Rushing

- Take adequate time to safely perform the job. Do **not** rush or take short cuts.

Follow Procedures

- Utilize QuickServe® Online or other standard procedures when available.
- Make sure the procedures are correct and safe.

Ergonomics

Back-Bending and Twisting

To buy Cummins Parts and Service Manuals, Training Guides, or Tools go to our website at <https://store.cummins.com>

- Avoid bending forward more than 45 at your waist.
- Avoid working with your back twisted with loads over 23 kg [50 lb].

Knee

- Avoid bending your knee more than 90.
- Avoid kneeling for more than 4 hours per day.

Lifting and Lowering

- Squat to pick up parts.
- Keep loads close to the body when lifting or carrying.
- Use a team lift or a lifting device if the object is more than 23 kg [50 lb].

Pulling or Pushing

- Pull with your arms.
- Push with your legs.
- Avoid exerting more force than necessary.
- Avoid moving heavy load(s) too quickly.

Tools and Equipment

Selection

- Select the correct tool or equipment to perform the task.

Condition

- Confirm the tool or equipment is free of defects before use.

- Confirm that safety devices are in place before use.

Use

- Use the tool or equipment as directed.
- Follow the manufacturer's instructions.

Personal Protective Equipment (PPE)

Eye, Face, and Head Protection

- Confirm the eye, face, or head protection you plan to use are adequate for performing the task at hand.

Foot Protection

- Confirm the foot protection you plan to use is adequate for performing the task at hand in the current environment.

Fall Protection

- Fall protection should be used if you are working more than 1.2 m [4 ft] above the floor.
- Use fall protection if you have been properly trained to do so. If you are not trained to use fall protection, allow someone who has received proper training to perform the task.

Hand Protection

- Avoid exposing hands to cuts or burns while completing the task.
- Confirm the proper glove type is being used for the task at hand. Examples are cut-resistant, chemical-resistant, electric shock-resistant, electric arc flash, welding, etc.

Hearing Protection

- Hearing protection should be worn when required or recommended.

Body Protection

To buy Cummins Parts and Service Manuals, Training Guides, or Tools go to our website at <https://store.cummins.com>

- Body parts should be protected from work hazards.
- Avoid contact with sharp edges, hot surfaces, etc.

Work Procedures

Training

- Confirm if you have received task and safety training for the job being performed.

Working Alone

- Avoid working alone.
- Avoid working where you are **not** able to be seen or heard by another person.
- If you **must** work alone, notify others of your location and schedule check-in times.

Lockout and Tagout

- Lock out or tag out energy sources before work. Examples are electrical, mechanical, hydraulic, and pneumatic.

Barricades and Warnings

- Mark overhead work areas with barricade tape or signs.
- Mark open floor hazards with barricade tape, signs, or cones.

Confined Space

- Confirm if a confined space entry permit is required.
- If required, confirm the permit is posted, signed, and dated correctly.

Hot Work

- Confirm a functional fire extinguisher is readily available.

- Maintain separation between ignition sources and fuel sources.

Place Wheel Chocks

- Place wheel chocks at either the front or back tire of the unit prior to starting the task.

Spotter

- Use a spotter when moving a customer's unit.
- Confirm the driver can see and hear the spotter when moving.

Housekeeping (The 5 S's - Scrap or Segregate, Set to Order, Spotless, Standardize, and Sustain)

- Remove parts, extension cords, air hoses, and liquids from the work area that may cause trip, slip, or fall hazards.

Acronyms and Abbreviations

General Information

The following list contains some of the acronyms and abbreviations used in this manual.

ANSI	American National Standards Institute
API	American Petroleum Institute
ASTM	American Society of Testing and Materials
ATDC	After Top Dead Center
bhp	Brake Horsepower
BTU	British Thermal Unit
BTDC	Before Top Dead Center
°C	Celsius
CAN	Controller Area Network
CO	Carbon Monoxide
CCA	Cold Cranking Amperes
CARB	California Air Resources Board
CES	Cummins Engineering Standard
C.I.B.	Customer Interface Box
C.I.D.	Cubic Inch Displacement
CNG	Compressed Natural Gas
CPL	Control Parts List

cSt	Centistokes
DEF	Diesel Exhaust Fluid
DOC	Diesel Oxidation Catalyst
DPF	Diesel Particulate Filter
ECM	Engine Control Module
EFC	Electronic Fuel Control
EGR	Exhaust Gas Recirculation
EPA	Environmental Protection Agency
ESN	Engine Serial Number
°F	Fahrenheit
ft-lb	Foot-Pound Force
FMI	Failure Mode Identifier
GVW	Gross Vehicle Weight
Hg	Mercury
hp	Horsepower
H₂O	Water
inHg	Inches of Mercury
in H₂O	Inches of Water
ICM	Ignition Control Module
IEC	International Electrotechnical Commission
JSA	Job Safety Assessment

km/l	Kilometers per Liter
kPa	Kilopascal
LNG	Liquefied Natural Gas
LPG	Liquefied Petroleum Gas
LTA	Low Temperature Aftercooler
MCRS	Modular Common Rail System
MIL	Malfunction Indicator Lamp
MPa	Megapascal
mph	Miles Per Hour
mpq	Miles Per Quart
N•m	Newton-meter
NOx	Nitrogen Oxides
NG	Natural Gas
O2	Oxygen
OAT	Organic Acid Technology
OBD	On-Board Diagnostics
OEM	Original Equipment Manufacturer
OSHA	Occupational Safety and Health Administration
PID	Parameter Identification Descriptions
PPE	Personal Protective Equipment
ppm	Parts Per Million

psi	Pounds Per Square Inch
PTO	Power Takeoff
QSOL	QuickServe® Online
REPTO	Rear Engine Power Takeoff
RGT	Rear Gear Train
rpm	Revolutions Per Minute
SAE	Society of Automotive Engineers
SCA	Supplemental Coolant Additive
SCR	Selective Catalytic Reduction
STC	Step Timing Control
SID	Subsystem Identification Descriptions
TDC	Top Dead Center
TSB	Technical Service Bulletin
ULSD	Ultra Low Sulfur Diesel
VDC	Volts of Direct Current
VG	Variable Geometry Turbocharger
VS	Variable Speed
VSS	Vehicle Speed Sensor

Section E - Engine and System Identification


Section Contents

	Page
Cummins® Product Technology	E-14
General Information.....	E-14
Cummins® Service Engine Model Identification	E-8
General Information.....	E-8
Engine Identification	E-1
Cummins® Engine Nomenclature.....	E-4
Engine Control Module Dataplate.....	E-5
Engine Dataplate.....	E-1
Exhaust System.....	E-7
Fuel Injection Pump Dataplate.....	E-4
Turbocharger Dataplate.....	E-6

This Page Left Intentionally Blank

Engine Identification

Engine Dataplate

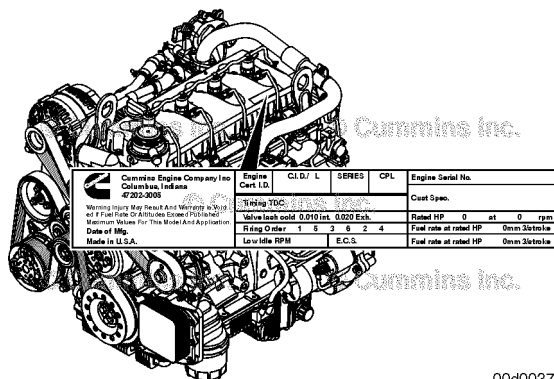

00d00377

Have the following engine data available when communicating with a Cummins® Authorized Repair Location. The information on the dataplate is mandatory when sourcing service parts.

NOTE: The dataplates used on engines may differ in appearance and location of information. The following illustrations show examples of common dataplates used and the information contained on these dataplates.

The engine dataplate shows specific facts about an engine. The dataplate is typically located on the engine rocker lever cover, but may also be located on the side of the gear housing. The engine serial number and control parts list (CPL) provide data for ordering parts and performing service. The engine dataplate **must not** be changed unless approved by Cummins, Inc.

To buy Cummins Parts and Service Manuals, Training Guides, or Tools go to our website at <https://store.cummins.com>

MADE IN CHINA		Model	EPA	FEL	CARB	Firing Order
BY CUMMINS INC.		Engine No.	Nox + NMHC	Nox + NMHC	Idle Speed	
Date of Mfg		Family	PM	PM		
CPL	CID/L	Timing - TDC	Catalyst No.			
Ref No.		ESC	Valve Lash Cold	InT	ExH	WARNING: Injury may result and warranty is voided if fuel rate, rpm or altitudes exceed published maximum values for this model and application.
		FR	Fuel rate at adv. HP/KW	mm ³ /st		
		SO	Advertised KW	at rpm		

1 points to Model
2 points to Engine No.
3 points to Idle Speed
4 points to Ref No.
5 points to CID/L
6 points to Fuel rate at adv. HP/KW
7 points to Advertised KW


00100011


- 1 Engine model information
- 2 Engine serial number
- 3 Engine idle speed

To buy Cummins Parts and Service Manuals, Training Guides, or Tools go to our website at <https://store.cummins.com>

- 4 Control parts list (CPL)
- 5 Date of manufacture
- 6 Valve lash (overhead) setting
- 7 Horsepower and rpm rating.

NOTE: If the engine dataplate (1) is **not** readable, the engine serial number (2) can be found on the cylinder block. This is located below the intake manifold and beside the water pump housing. Additional engine information is available by reading the ECM dataplate.

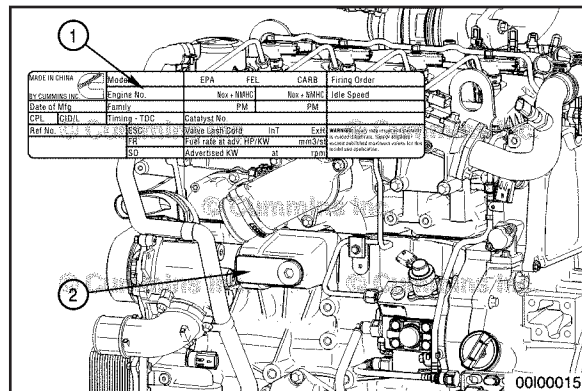


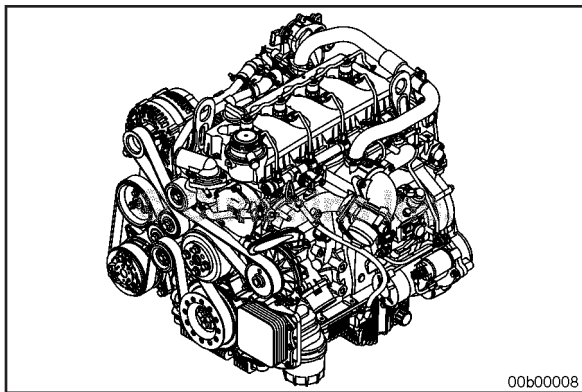

Cummins® Engine Nomenclature

The Cummins Inc. Service Engine Model Nomenclature procedure describes how to use the Cummins® Service Model Name to identify an engine. Refer to Procedure 100-005 in Section E.

The Cummins® Product Technology procedure provides the Cummins® Service Model Name and describes the unique technology used by the engine covered by this manual. Refer to Procedure 100-006 in Section E.

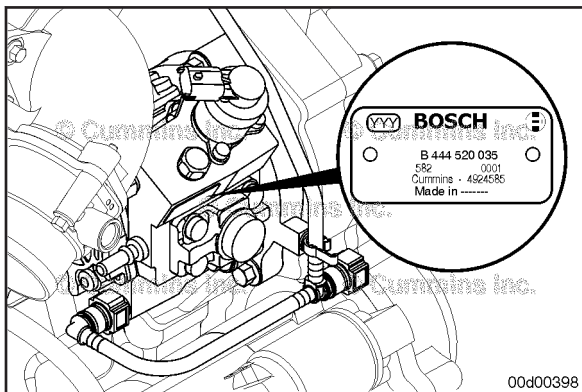

Fuel Injection Pump Dataplate

The Bosch™ fuel injection pump dataplate is located on the fuel pump. The dataplate contains the following information that will assist in servicing or replacement:

- Pump serial number
- Cummins® part number
- Factory code
- Bosch™ part number
- Date code.


Engine Control Module Dataplate


The engine control module (ECM) dataplate shows information about the ECM and how the ECM was programmed. This dataplate is located on the ECM.

The following information is available on the ECM dataplate:

- ECM part number (PN)
- ECM serial number (SN)
- ECM date code (DC)
- Engine serial number (ESN)
- ECM code: Identifies the software in the ECM.

NOTE: Have the ECM code for the engine available when communicating with a Cummins® Authorized Repair Location.

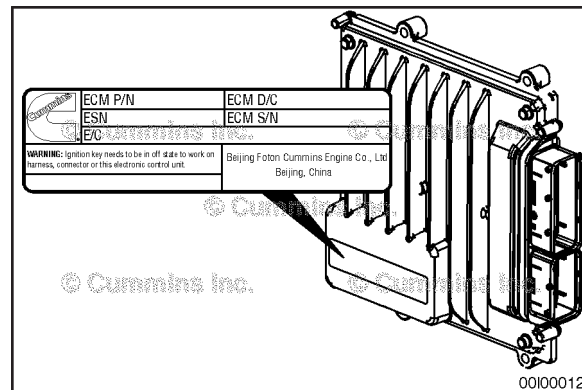

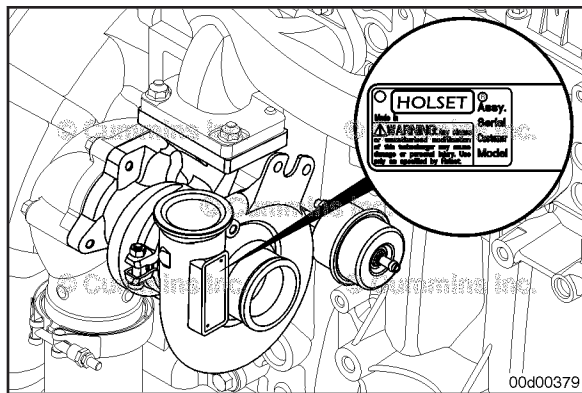

Turbocharger Datasheet

The turbocharger datasheet is located on the turbocharger inlet compressor housing.

The datasheet contains the following information that will assist in servicing or replacement:


- Cummins® assembly part number
- Serial number
- Customer number
- Model number.

Exhaust System

The exhaust aftertreatment assembly consists of a diesel oxidation catalyst (DOC) and an integrated muffler. The DOC has information stamped into the canister. This information is important for service or replacement.

A typical aftertreatment assembly stamping provides the following information:

- 1 Assembly information
- 2 Cummins Emissions Solutions™ assembly part number
- 3 Cummins® part number
- 4 10-digit serial number.

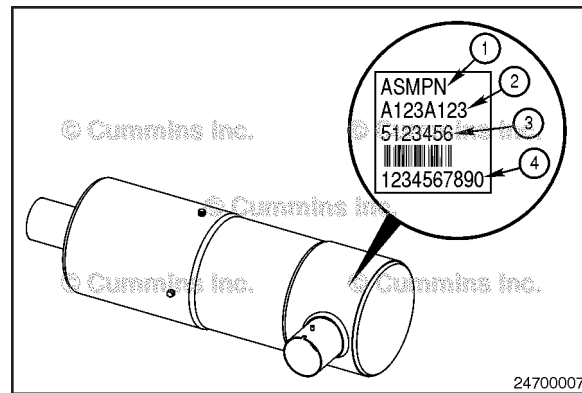

Cummins® Service Engine Model Identification

General Information

The Cummins® Service Engine Model Identification procedure describes:

- The purpose of the Cummins® Service Model Name.
- How to interpret a Cummins® Service Model Name to identify a Cummins® Engine.

This includes 2013 and later products.



QSF2.8 CM2880 F105

Section E - Engine and System Identification

The Cummins® Service Model Name differs from the Cummins® marketing model name. Service model names are more specific and help to match the correct Cummins® service information to the correct engine. Marketing engine model names are more generic and can capture multiple engine variations in the same model name.

Marketing Engine Model Name	Service Model Name
ISX15	ISX15 CM2350 X101

Marketing engine model names (2) can be found on the engine dataplate, Cummins® brochures, and Cummins® promotional literature.

Examples of Cummins® service information and products that use service model names:

- QuickServe™ Online
- INSITE™ electronic service tool
- Owner's Manual
- Operation and Maintenance Manual
- Master Repair Manual
- Service Manual
- Wiring Diagram
- Fault Code Troubleshooting Manual
- Standard Repair Times
- Technical Service Bulletins
- Service Bulletins

To buy Cummins Parts and Service Manuals, Training Guides, or Tools go to our website at <https://store.cummins.com>

Cummins® Service Engine Model Identification

Page E-9

The form is titled "Cummins Service Engine Model Identification" and contains the following fields and sections:


- 1** points to the "MANUFACTURED BY CUMMINS INC." logo.
- 2** points to the "Engine No." field.
- 3** points to the "MODEL" field.
- 4** points to the "Valve lash cold" field.
- 5** points to the "E.C.S." field.

Other fields include: Ref. No., Fuel Rate at Adv. HP, Int. 2, CPL, Idle Speed (rpm), Advertised HP, at rpm, Family, FEL, EPA, CARB, Date of Mfg., Pacing Order, Timing: T.D.C., ELECTRONIC, Catalyst No., NOx/HC, Int. Exhaust, E.C.S., and PM.

WARNING: Injury may result and warranty be voided if fuel rate, rpm or altitude exceed published maximum values for this model and application.

IMPORTANT ENGINE INFORMATION: This engine is exempt from the prohibitions of section 203 (b) (3) & (4) of the Clean Air Act as amended. See exemption label information for exemption no. and effective date.

00070289

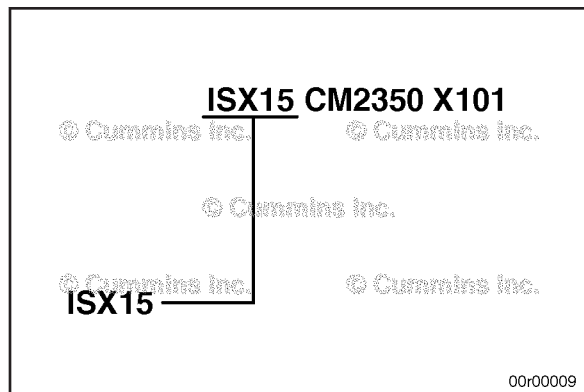

The Cummins® Service Model Name begins with the marketing engine model name.

NOTE: For engines released specifically for the European market, marketing model names may include an “e” between the engine platform designation and the engine liter displacement. Service model names will not display this “e”.


Typically, the first two letters of the marketing model name contain an “IS” or “QS” if the engine is an electronic engine.

“IS” prefix designates and On-Highway automotive engine.



“QS” prefix designates an Off-Highway industrial engine.

NOTE: Not all electronic engines use the “IS” or “QS” prefix. To verify if the engine is an electronic engine, check to see if an electronic control system is listed in the service model name. The control system that is identified as part of the service model name is referenced later in this procedure.

Non-electronic engines do not have an “IS” or “QS” prefix and do not have an electronic control system listed in the service model name.

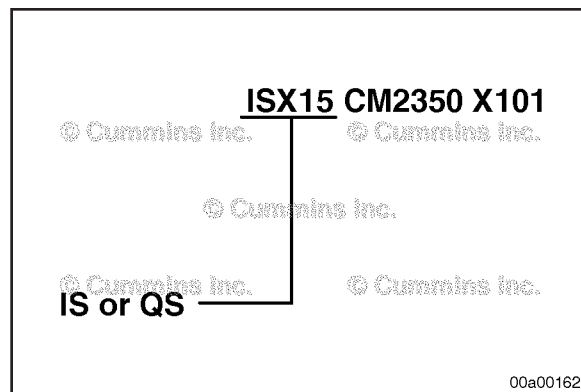

00a00162

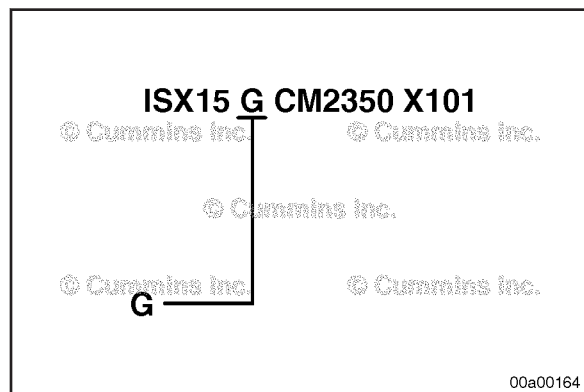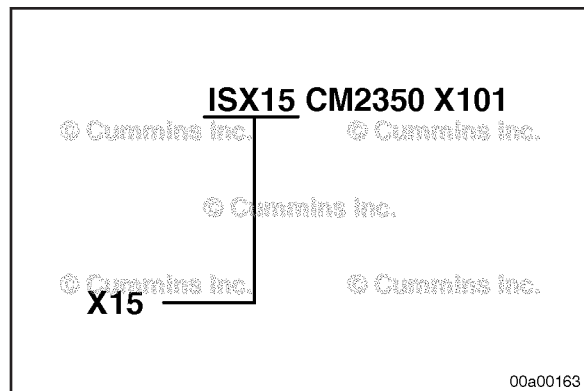

Typically, the third letter is the engine platform/series designation followed by the engine liter displacement. For the example shown in the graphic, the engine is a:

X Series engine

15 Liters in Displacement

NOTE: Some legacy engines will use the cubic inch rather than liter for engine displacement.

If a "G" indicator is located after the liter displacement, the engine is fueled by natural gas.

NOTE: Not all engines fueled by natural gas will have a "G" located after the displacement.

If a "M" is located after the liter displacement, the engine is in a marine application.

NOTE: Not all engines used in a marine application will have "M" located after the displacement.

If a "DF" is located after the liter displacement, the engine is a dual fuel application.

QSF2.8 CM2880 F105
Section E - Engine and System Identification



The engine control system is identified with the letters "CM" followed by the control system model number.

NOTE: Use of a parenthesis () indicates that either engine control module (ECM) has been used on the product. Use of a slash "/" indicates that the product has multiple ECMs.

The identifier after the control system is a letter and number combination to identify variations between products.

The letter is the engine platform designation.

The number increments as new variations of the engine platform/series are released. The first number is 101.

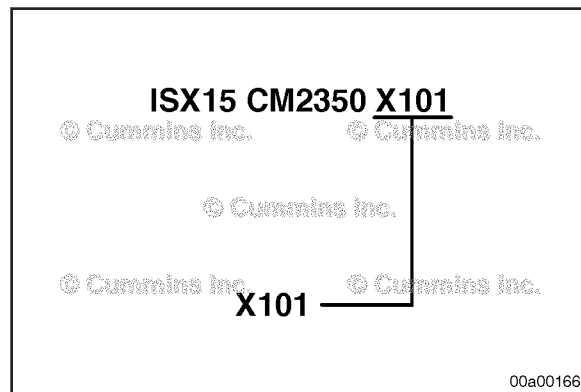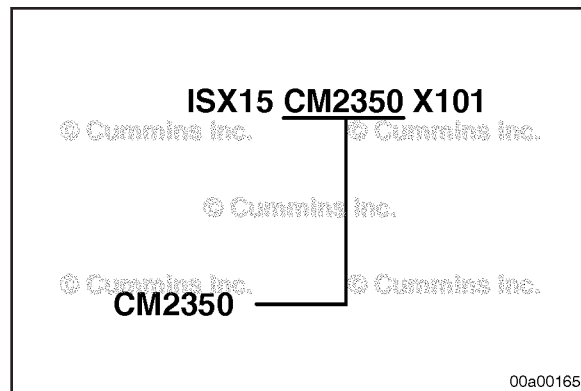

Cummins® Product Technology

General Information

The service model name for this product is **QSF2.8 CM2880 F105**.

This engine is being released to meet the following emission regulations:

United States and Canada

- Tier 4 (EPA Final)

European Union

- Euro Stage III B (Euro)

Korea (South)

- -

This engine has the following agency defined emissions control system (ECS) hardware, which can also be found on the engine dataplate. Use the following procedure for location of the engine dataplate. Refer to Procedure 100-001 in Section E.

- Charge Air Cooler (CAC)
- Direct Diesel Injection (DDI)
- Engine Control Module (ECM)
- Exhaust Gas Recirculation (EGR)
- Oxidation Catalyst (OC)
- Turbocharger (TC).

To buy Cummins Parts and Service Manuals, Training Guides, or Tools go to our website at <https://store.cummins.com>

This engine uses the following product technology:

Engine

- Number of Cylinders - 4
- Engine Configuration - In-line
- Cylinder Block Material - Cast Iron
- Cylinder Head Material - Cast Iron
- Camshaft Location - Cylinder Head
- Accessory Drive Option
- Open Crankcase Ventilation System.

Electronic Control System

- Engine Control Module (ECM): CM2880
- Electrical System Voltage:
 - 12 VDC
 - 24 VDC
- Engine Coolant Temperature Sensor
- Engine Oil Pressure Switch
- Fuel Rail Pressure Sensor
- Fuel Pump Actuator
- Water in Fuel Sensor

- Camshaft Position Sensor
- Crankshaft Position Sensor
- EGR Differential Pressure Sensor
- EGR Orifice Temperature Sensor
- Intake Manifold Pressure/Temperature Sensor
- Turbocharger Compressor Intake Temperature Sensor.

Fuel System

- Diesel
- Bosch™ Common Rail Fuel System.

Air Handling

- Turbocharger (Wastegate)
- Charge Air Cooler (CAC)
- Intake Air Heater.

Exhaust System

- Exhaust Gas Recirculation (EGR)
- Diesel Oxidation Catalyst (DOC).

Market applications that will use this engine include, but are **not** limited to:

Industrial

- Construction

To buy Cummins Parts and Service Manuals, Training Guides, or Tools go to our website at <https://store.cummins.com>

- Power Unit.

Notes

Section 1 - Operating Instructions

Section Contents

	Page
Cold Weather Starting	1-10
General Information.....	1-10
Using Starting Aids.....	1-11
Driving Techniques	1-16
General Information.....	1-16
Electromagnetic Interference (EMI)	1-33
General Information.....	1-33
System EMI Radiation Levels.....	1-34
System EMI Susceptibility.....	1-33
Electronic Controlled Fuel System	1-17
Diagnostic Fault Codes.....	1-23
Engine Protection System.....	1-31
Fault Code Snapshot Data.....	1-32
General Information.....	1-17
INSITE™ Electronic Service Tool Description.....	1-32
INSITE™ Electronic Service Tool Monitor Mode.....	1-33
Engine Operating Range	1-15
General Information.....	1-15
Engine Shutdown	1-17
General Information.....	1-17
Normal Starting Procedure	1-3

Jump Starting.....	1-8
Starting.....	1-3
Operating Instructions - Overview	1-1
General Information.....	1-1
Operating the Engine	1-12
Ambient Temperature.....	1-13
Normal.....	1-12
Winterfronts and Shutters.....	1-14
Starting Procedure After Extended Shutdown or Oil Change	1-11
General Information.....	1-11
Unique Operating Characteristics of an Engine with a Direct Flow™ Air Cleaner	1-35
Clean and Inspect for Reuse.....	1-38
General Information.....	1-35
Maintenance Service.....	1-37

Operating Instructions - Overview



General Information

Correct care of your engine will result in longer life, better performance, and more economical operation.


Follow the daily maintenance checks listed in Maintenance Guidelines (Section 2).


The new Cummins® engine associated with this manual does **not** require a "break-in" procedure. This section of the manual provides all of the necessary information required for proper engine operation.

Check the oil pressure indicators, temperature indicators, warning lights, and other gauges daily to make sure they are operational.



Check the oil pressure, coolant temperatures DEF level, and other engine parameters daily via the OEM front panel to make sure they are operational. Check the panel regularly for any alarm messages. Take appropriate action to rectify the alarm condition or contact your nearest Authorized Cummins® Distributor.

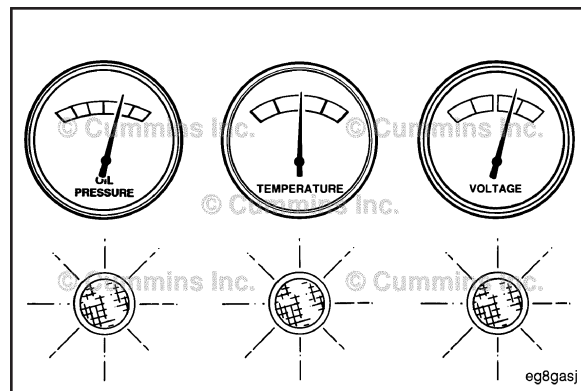

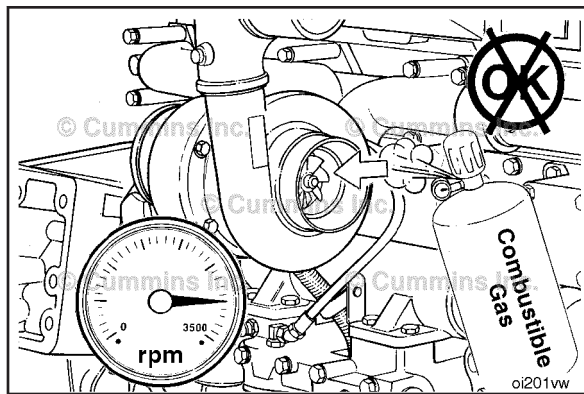

⚠ WARNING ⚠

Do not operate a diesel engine where there are or can BE COMBUSTIBLE vapors. These vapors can be sucked through the air intake system and cause engine acceleration and over speeding that can result in a fire, an explosion, and extensive property damage. Numerous safety devices are available, such as air intake shutoff devices, to minimize the risk of over speeding where an engine, due to its application, is operating in a combustible environment, such as due to a fuel spill or gas leak. Remember, Cummins Inc. has no way of knowing the use you have for your engine. The equipment owner and operator ARE responsible for safe operation in a hostile environment. Consult A Cummins® Authorized Repair Location for further information.

⚠ CAUTION ⚠

Do not expose the engine to corrosive chemicals. Corrosive chemicals can damage the engine.

Cummins recommends the installation of an air intake shutoff device or a similar safety device to minimize the risk of overspeeding when an engine is operating in a combustible environment, such as due to a fuel spill or gas leak.

Normal Starting Procedure

Starting



Disengage the driven unit, or if equipped, put the transmission in neutral.


With the accelerator pedal or lever in the idle position, turn the keyswitch to the ON position.

With the keyswitch in the ON position, the engine indicator lamps will come on momentarily and then go out. The engine indicator lamps include:

- 1 WARNING (or CHECK ENGINE) lamp, amber in color
- 2 STOP (or STOP ENGINE) lamp, red in color

If any of the lamps remain on or begin to flash, reference the following procedure. Refer to Procedure 101-048 in Section 1.

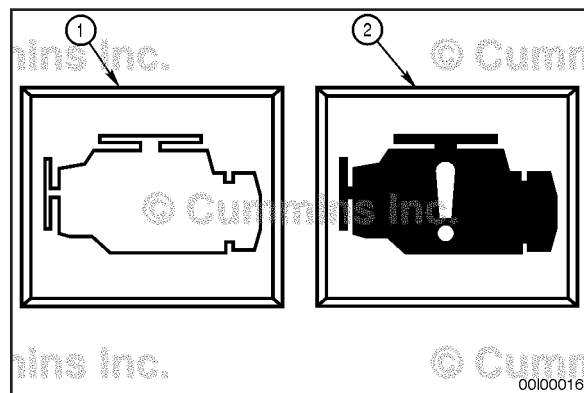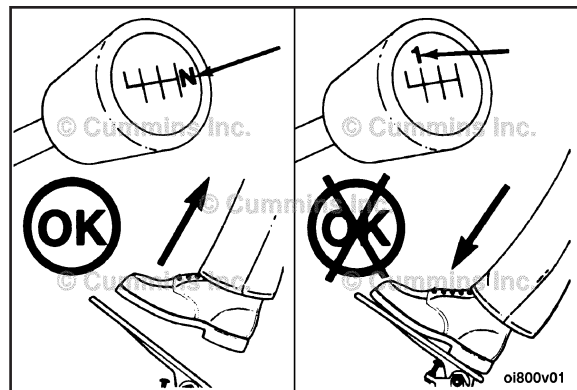

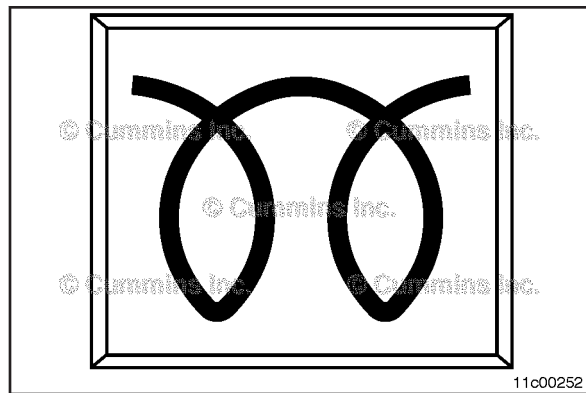

⚠ CAUTION ⚠

Do not engage the starting motor for more than 30 seconds or damage to the starting motor can result. Wait 2 minutes between each attempt to start (electrical starting motors only).

Under cold conditions, the Wait-to-Start lamp (generally a yellow lamp using a symbol similar to the graphic, or the words WAIT TO START) will also illuminate at keyswitch ON, and will stay on for a period of up to 30 seconds.

NOTE: The length of time the Wait-to-Start lamp remains illuminated depends on the ambient temperature. The lower the ambient temperature, the longer the lamp will be illuminated.

Once the Wait-to-Start lamp turns OFF, turn the keyswitch to the starting position to start the engine.

NOTE: Some engines are equipped with an engine starting motor protection feature. If the starting motor is engaged for 30 or more seconds, without the engine starting, the starter will be locked out from operating, allowing for proper cooling of the starting motor. During this time, the WAIT TO START lamp will flash for 2 minutes. Once the lamp discontinues flashing, the starting motor will be allowed to function.



NOTE: Engines equipped with air starting motors require a minimum of 480 kPa [70 psi].


⚠CAUTION⚠

The engine must have adequate oil pressure within 15 seconds after starting. If the **WARNING** lamp indicating low oil pressure has not gone out or there is no oil pressure indicated on a gauge within 15 seconds, shut **OFF** the engine immediately to avoid engine damage.

Idle the engine 3 to 5 minutes before operating with a load.

NOTE: After the engine is started, the voltmeter, if equipped, may show a gauge fluctuation under certain engine temperature conditions (both warm and cold). This cycling operation is caused by the post-heat cycle of the intake manifold heater system. The number of cycles and the length of the cycling operation is controlled by the ECM . The cycling action will cause temporary dimming of the head lamps, interior lamps, and other vehicle electrical accessories.

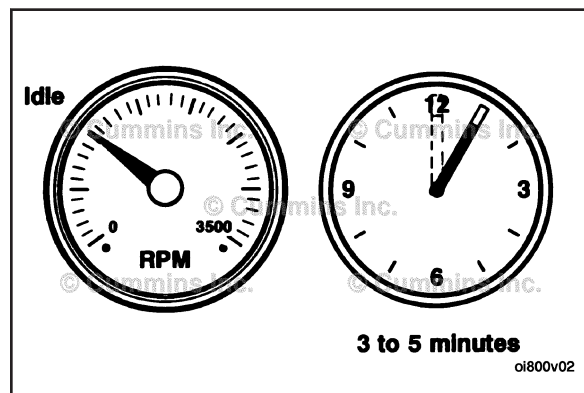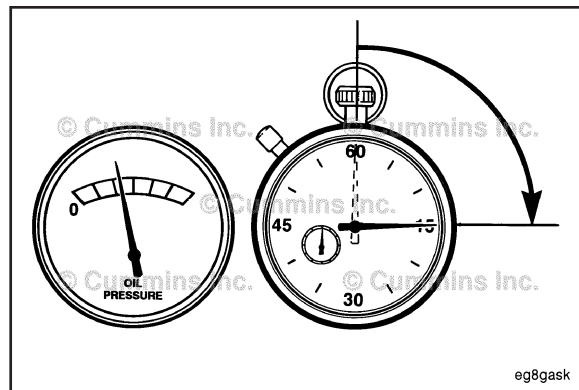

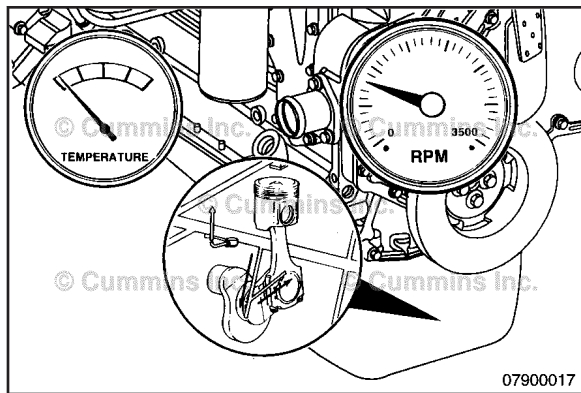

After starting a cold engine, increase the engine speed (rpm) slowly to provide adequate lubrication to the bearings and to allow the oil pressure to stabilize.

Some engines are equipped with a Fast Idle Warm Up feature. When enabled, this feature elevates the idle speed of the engine in cold ambient conditions, in order to shorten the time necessary to warm up the engine. When the idle speed is elevated, the engine noise may change. This is normal. To bring the engine back to low idle speed:

- For vehicles equipped with a manual transmission and clutch switch: Depress the clutch pedal.
- For vehicles equipped with a brake switch: Depress the service brake pedal.
- Depress the accelerator pedal.


For more information on the Fast Idle Warm Up feature, contact a Cummins® Authorized Repair Location.


⚠CAUTION⚠

Do not operate the engine at low idle for long periods with engine coolant temperature below the minimum specification in Maintenance Specifications (Section V).

This can result in the following:

- Fuel dilution of the lubricating oil
- Carbon buildup in the cylinder
- Cylinder head valve sticking
- Reduced performance.

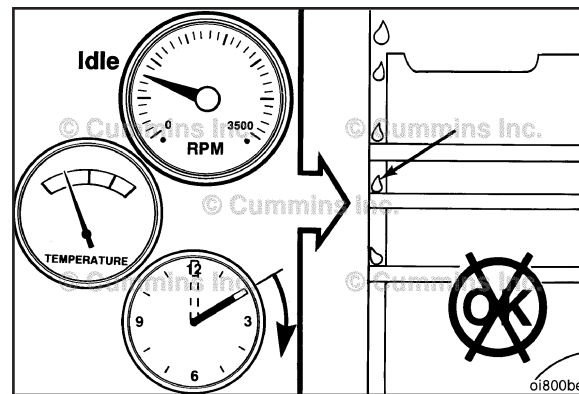

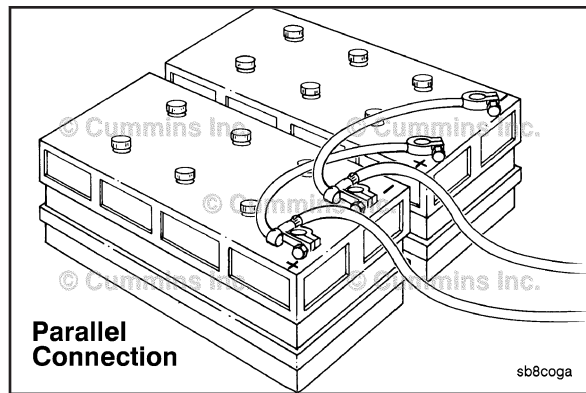

Jump Starting

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

⚠ CAUTION ⚠

When using jumper cables to start the engine, make sure to connect the cables in parallel: Positive (+) to positive (+) and negative (-) to negative (-). When using an external electrical source to start the engine, turn the disconnect switch to the OFF position. Remove the keyswitch before attaching the jumper cables.

⚠ CAUTION ⚠

To reduce the possibility of damage to engine parts, do not connect jumper starting or battery charging cable to any fuel system or electronic component.

This illustration shows a typical parallel connection. This arrangement doubles the cranking amperage.


NOTE: Always reference the relevant original equipment manufacturer (OEM) literature for jump starting procedures. Failure to follow correct procedures can result in damage to the engine control module (ECM) and other electrical equipment.


QSF2.8 CM2880 F105
Section 1 - Operating Instructions

Normal Starting Procedure
Page 1-9

This illustration shows a typical series battery connection. This arrangement, positive (+) to negative (-), doubles the voltage.

NOTE: Always reference the relevant OEM literature for jump starting procedures. Failure to follow correct procedures can result in damage to the ECM and other electrical equipment.

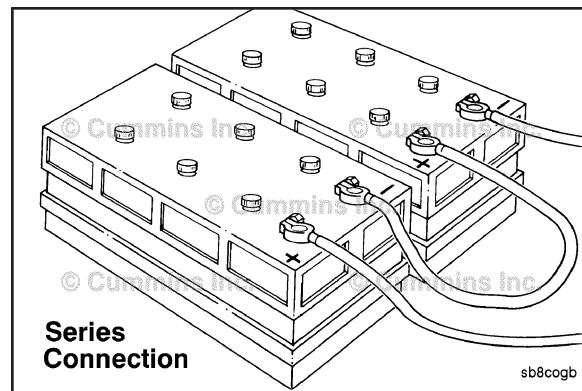

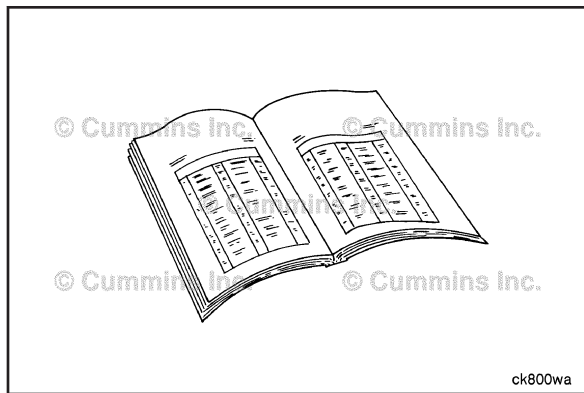

Cold Weather Starting

General Information

Follow the normal starting procedure in this section. If equipped with an intake air heater, the WAIT-TO-START lamp will stay on longer.

See the equipment manufacturer service information for any additional cold weather starting procedures.

Extreme cold conditions can cause oil pressure delays when using 15W-40 viscosity grade engine lubricating oil. For extreme cold conditions, the use of a different engine lubricating oil viscosity is recommended. Reference Procedure 018-003 in Section V in the appropriate Operation and Maintenance Manual.

Using Starting Aids

⚠ WARNING ⚠


Do not use starting fluids with this engine. This engine is equipped with an intake air heater: use of starting fluid can cause an explosion, fire, personal injury, severe damage to the engine, and property damage.


Cold weather starting aids are available for this engine. Contact a Cummins® Authorized Repair Location for more information.

Starting Procedure After Extended Shutdown or Oil Change

General Information

Follow the Normal Starting Procedure in this section. The engine will **not** start until the minimum cranking oil pressure is detected by the ECM. It can take more cranking time to start the engine after an extended shut down or oil change.

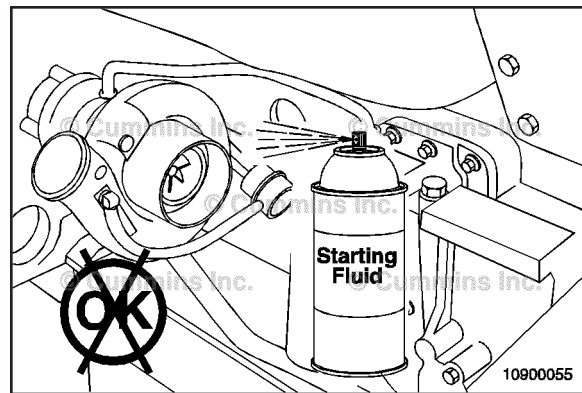

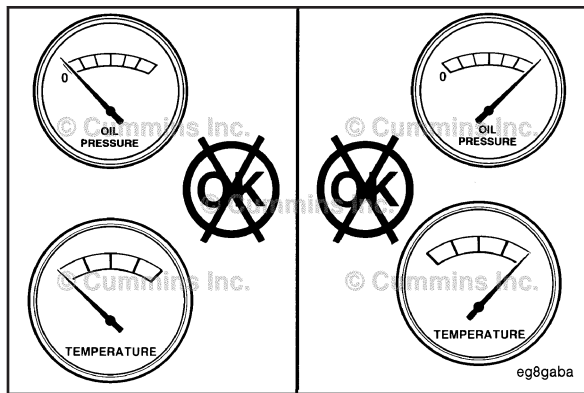


Operating the Engine Normal

If equipped, monitor the oil pressure and coolant temperature gauges frequently. Refer to Lubricating Oil System specifications and Cooling System specifications, in Maintenance Specifications (Section V) for recommended operating pressures and temperatures. Shut off the engine if any pressure or temperature does **not** meet the specifications.

Continuous operation with engine coolant temperature above or below the engine coolant temperature specifications listed in Maintenance Specifications (Section V) can damage the engine.

If an overheating condition starts to occur, reduce the power output of the engine by releasing the accelerator pedal or lever or shifting the transmission to a lower gear, or both, until the temperature returns to the normal operating range. If the engine temperature does **not** return to normal, shut off the engine, and refer to Troubleshooting Symptoms (Section TS), or contact a Cummins® Authorized Repair Location.

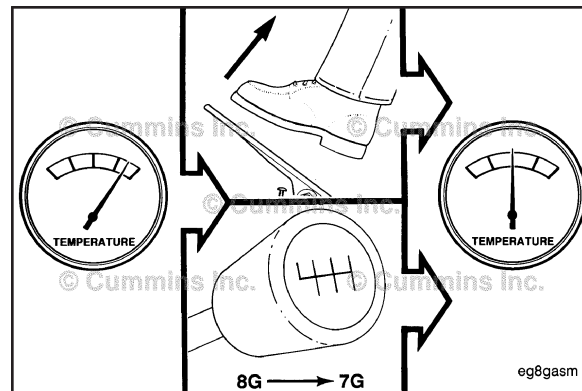

⚠ CAUTION ⚠

Do not idle for extended periods of time. Excessive idle time can cause poor engine performance.

Internal combustion engines **must not** operate at low idle speed for extended periods of time. This operating condition may lead to poor engine performance. The idle shutdown feature, available on most Cummins® engines, can be programmed to shut the engine down after a period of low idle speed operation with no driver activity. A flashing warning lamp will inform the driver of an impending shutdown. If an engine **must** idle for an extended period of time, it should be done at fast idle (1000 rpm or greater). The Power Take-Off (PTO) feature, available on most Cummins® engines, can be programmed to adjust engine speed with the use of OEM switches to pre-programmed set points.

Ambient Temperature

0 to -32°C [32 to -25°F]

Use 50-percent ethylene glycol antifreeze and 50-percent water for the engine coolant mixture.

To buy Cummins Parts and Service Manuals, Training Guides, or Tools go to our website at <https://store.cummins.com>

The Diesel fuel **must** have maximum cloud and pour points 6°C [10°F] lower than the ambient temperature in which the engine operates.

-32 to -54°C [-25 to -65°F]

Use 60-percent ethylene glycol antifreeze and 40-percent water for the engine coolant mixture.

The Diesel fuel **must** have maximum cloud and pour points 6°C [10°F] lower than the ambient temperature in which the engine operates.

The cold weather operating aid is required for cold weather situations.

Winterfronts and Shutters

Winterfronts and shutters can be used on a vehicle or equipment to reduce air flow through the radiator core into the engine compartment. This can reduce the time required to warm the engine and help maintain the engine coolant temperature. The engine coolant temperature specifications are in the Maintenance Specification (Section V).

Engine Operating Range

General Information


⚠CAUTION⚠


Do not operate the engine at full throttle below peak torque rpm (refer to engine dataplate for peak torque rpm) for more than 30 seconds. Operating the engine at full throttle below peak torque will shorten engine life to overhaul, can cause serious engine damage, and is considered engine abuse.

⚠CAUTION⚠

Do not operate the engine beyond the maximum engine speed. Operating the engine beyond the maximum engine speed can cause severe engine damage. Use proper operating techniques for the vehicle, vessel, or equipment to prevent engine overspeed. The maximum engine speed specification is listed in Maintenance Specifications (Section V).


Cummins® engines are designed to operate successfully at full throttle under transient conditions down to peak torque engine speed. This is consistent with recommended operating practices.

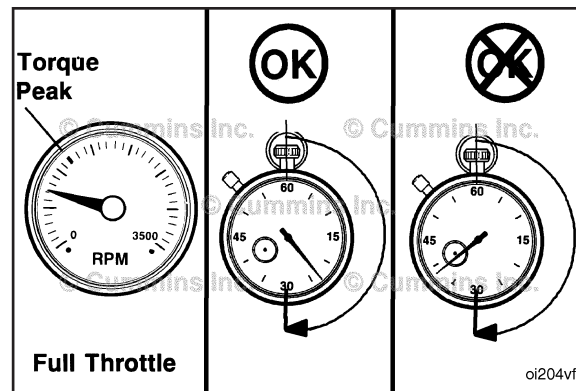

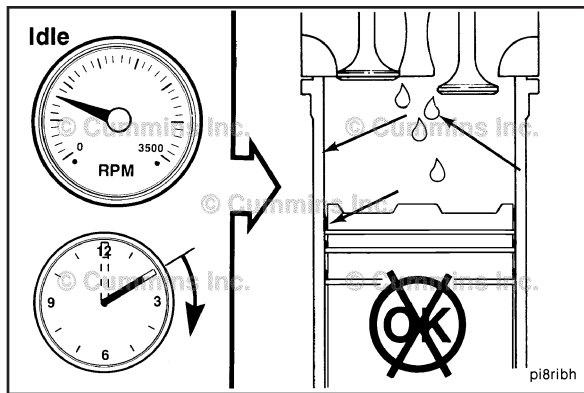

⚠ CAUTION ⚠

Do not idle the engine for excessively long periods. Long periods of idling, more than 10 minutes, can cause poor engine performance.

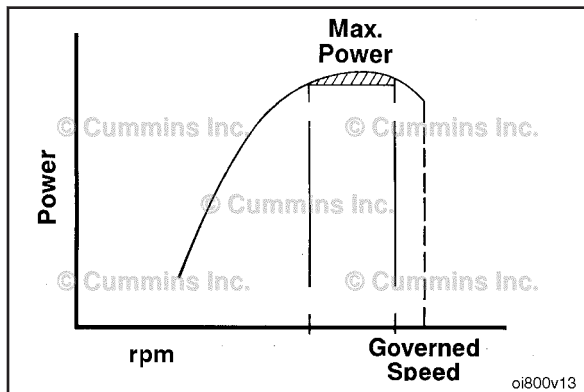

Driving Techniques

General Information

The engine produces maximum power at an rpm less than governed engine speed.

To obtain optimum engine performance on a grade, allow the engine speed to load down to near peak torque before shifting. This will result in an engine operating speed in the maximum power zone after the shift is completed.

Refer to the engine dataplate for peak torque rpm and governed speed rpm.

Engine Shutdown


General Information



Failure to follow the correct shutdown procedure may result in damage to the turbocharger and shorten the turbocharger life.

NOTE: For engines equipped with an electronic control module (ECM) ensure the keyswitch is turned off for a minimum of 100 seconds prior to disconnecting the continuous (unswitched) battery power supply. If the unswitched battery power supply is disconnected in less than 100 seconds after the keyswitch is turned off active fault codes and incorrect ECM information can occur.

Turn the ignition switch to the OFF position. If the engine does **not** shut down, refer to Troubleshooting Symptom (Section TS) in appropriate Operation and Maintenance manual.

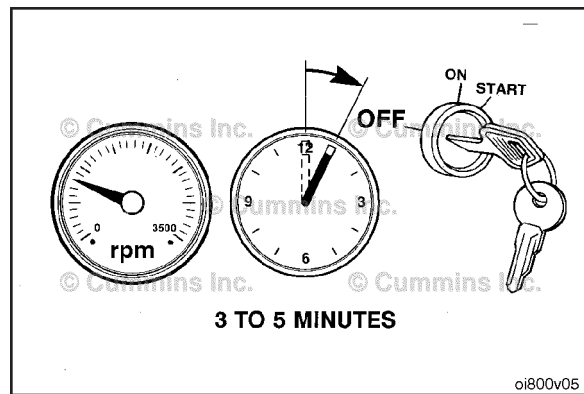

Electronic Controlled Fuel System

General Information

The QSF2.8 CM2880 F105 engine control module (ECM) is an electronically operated fuel control system that also provides many operator and vehicle features.

The base functions of the control system include fueling and timing control, limiting the engine speed operating range between the low and the high idle set points, and reducing exhaust emissions while optimizing engine performance.


The control system uses inputs from the operator and its sensors to determine the fueling and timing required to operate at the desired engine speed and the required emissions level.

Engine Control Module Inputs

The ECM is the control center of the system. It processes all of the inputs and sends commands to the fuel system, vehicle, and engine control devices.

The ECM performs diagnostic tests on **most** of its circuits and will activate a fault code if a problem is detected in one of these circuits. Along with the fault code identifying the problem, a snapshot of engine operating parameters at the time of fault activation is also stored in memory.


Active fault codes will cause a diagnostic lamp to activate as a signal to the operator.

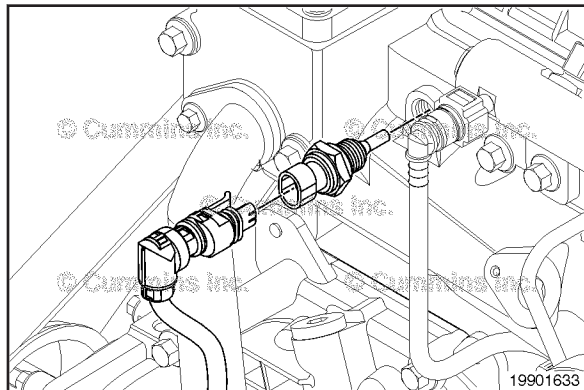


The control system uses a number of sensors to provide information on engine operating parameters. These sensors include:


- Engine coolant temperature sensor

- Intake manifold temperature and pressure sensor

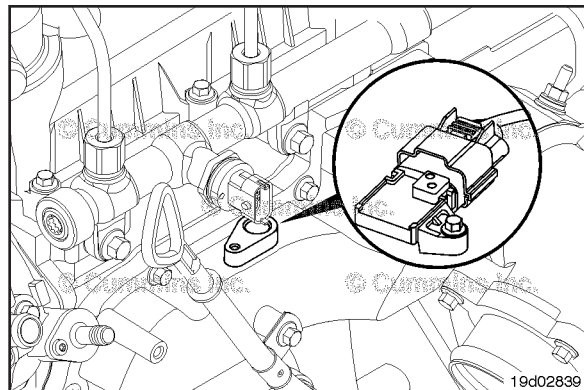


- Engine speed (crankshaft position) sensor
- Camshaft position sensor

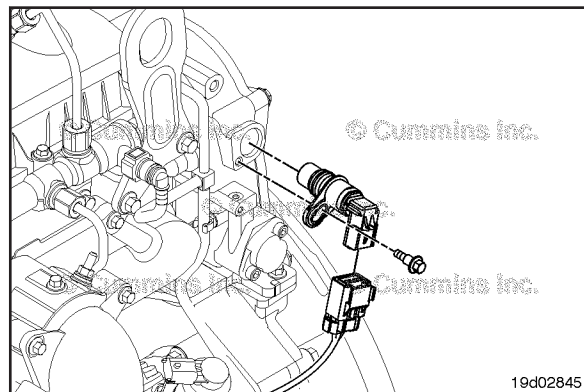

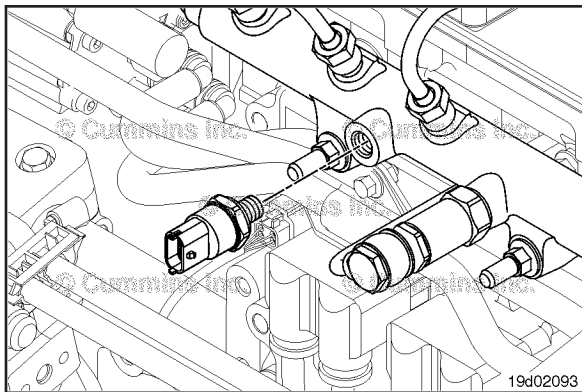


- Fuel rail pressure sensor

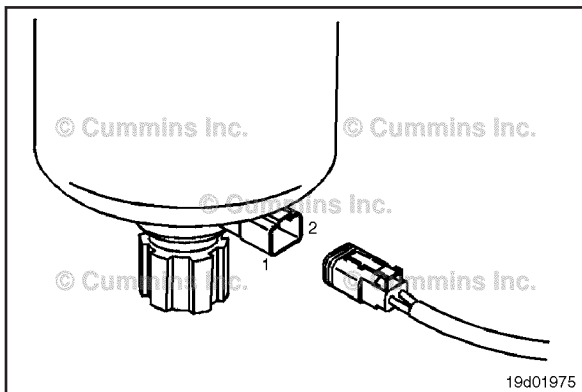

- Water-in-fuel sensor

Electronic fuel control actuator

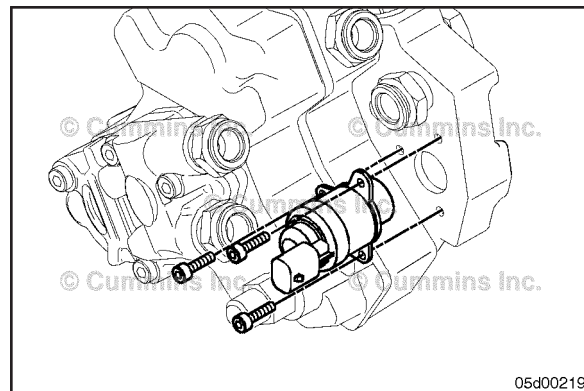

- Accelerator pedal/lever position sensor
- Idle validation switch
- Engine coolant level sensor
- Vehicle speed sensors
- Feature control switches (i.e. cruise control switches)
- Fan control switch
- Air conditioner pressure switch
- Remote accelerator
- Remote Power Take-Off (PTO).

NOTE: These inputs are application dependent. Some applications do **not** use all of these inputs.

Engine Control Module Outputs

The ECM can communicate with service tools and some other vehicle controllers (such as transmissions, ABS, ASR, electronic dash displays, etc) through the SAE J1939 data link or the SAE J1708 data link.


Some vehicles and equipment have SAE J1939 networks on them that link many of the "smart" controllers together. Vehicle control devices can temporarily command engine speed or torque to perform one of their functions (that is, transmission shifting, anti-lock braking, etc).


Diagnostic Fault Codes

The electronic engine control system displays and records certain detectable fault conditions. These malfunctions are displayed as fault codes, which make troubleshooting easier. The fault codes are retained in the ECM.

There are three types of diagnostic codes:

- Engine electronic control system fault codes informing the operator that there is a problem with the control system that requires troubleshooting.
- Engine electronic control system fault codes informing the operator that there is a problem with the control system that requires troubleshooting and indicates that the vehicle may be exceeding emission level limits.
- Information and engine protection fault codes informing the operator that the control system has detected an engine condition outside the normal operating range.

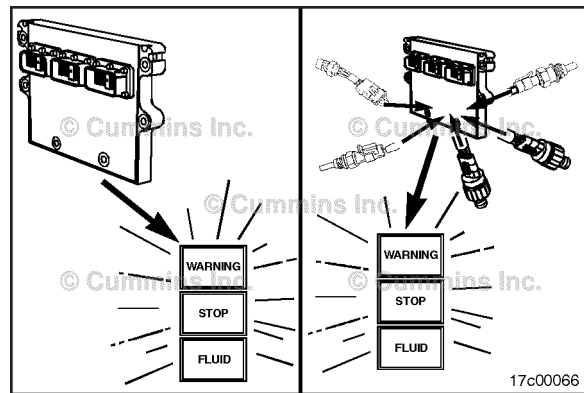

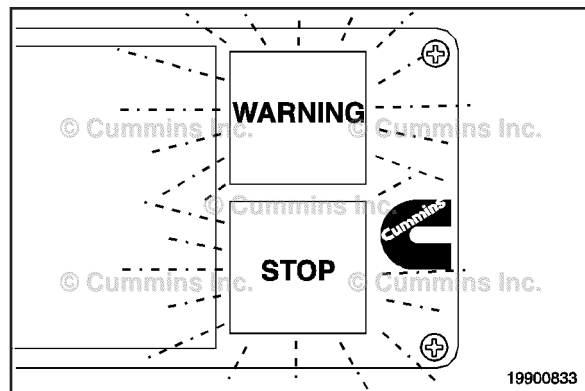

All fault codes recorded will either be active (fault code is presently active on the engine) or inactive (fault code was active at some time, but is **not** presently active).

The "STOP" or "STOP ENGINE" lamp is red and indicates the need to stop the engine as soon as it can be safely done. The engine **must** remain shut down until the engine can be repaired.


When illuminated, the yellow "WARNING" or "CHECK ENGINE" lamp indicates that the engine or exhaust gas treatment system is in need of repair at the first available opportunity.

NOTE: The "WARNING" or "CHECK ENGINE" lamp (yellow lamp) will illuminate if the diesel exhaust fluid (DEF) level is low.

Another function of the WARNING or CHECK ENGINE lamp (yellow lamp) is to flash for 30 seconds at key ON when one of the following occurs:


- Maintenance is required (if the Maintenance Monitor feature is enabled)
- Water-in-fuel is detected.

If the warning light flashes for 30 seconds at key ON and water is drained from the primary water-separating fuel filter, the secondary fuel filter **must** be replaced.

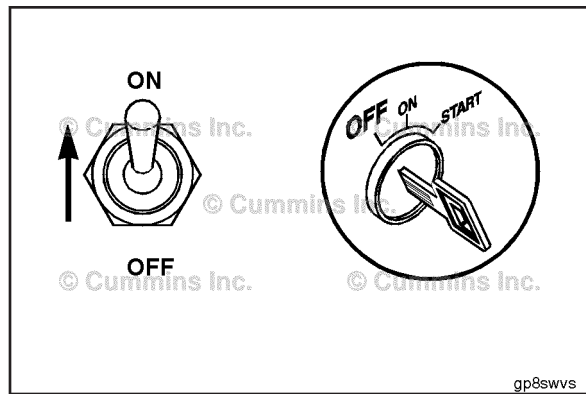

Fault codes can be accessed using the electronic service tool or by fault code flash out.

To check for active engine electronic fuel system and engine protection system fault codes, turn the keyswitch OFF and move the diagnostic switch to the ON position.

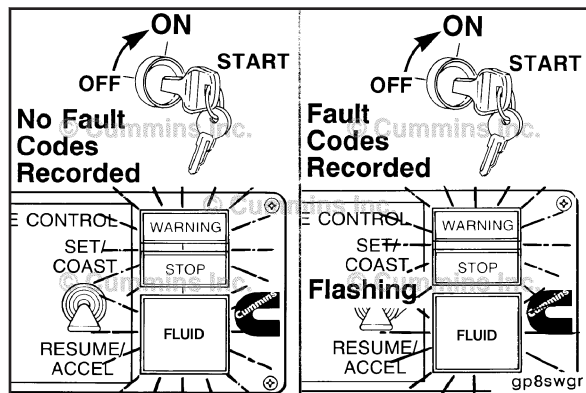

Turn the vehicle keyswitch to the ON position.

If no active fault codes are recorded, both lights will come on and stay on.



If active fault codes are recorded, both lights will come on momentarily, then begin to flash the code numbers of the recorded fault codes.


The fault code flashes in the following sequence:

- A WARNING (amber) light flashes.
- Following a short one or two second pause, the number of the recorded fault code flashes in the STOP (red) lamp.
- There is a one or two second pause between each number.
- After the number finishes flashing in red, an amber light appears again.

The lights flash each fault code out three times before advancing to the next code. To skip to the next fault code, move the Increment/Decrement switch, if equipped, momentarily to the increment (+) position. You can go back to the previous fault code by momentarily moving the Increment/Decrement switch, if equipped, to the decrement (-) position. If **only** one active fault code is recorded, the same fault code will continuously be displayed when either (+) or (-) switch is depressed.

For the explanations and corrective action for the fault codes, reference Section TF of the appropriate fault code troubleshooting manual.

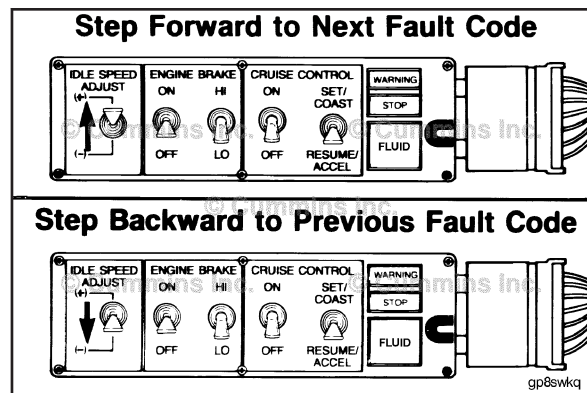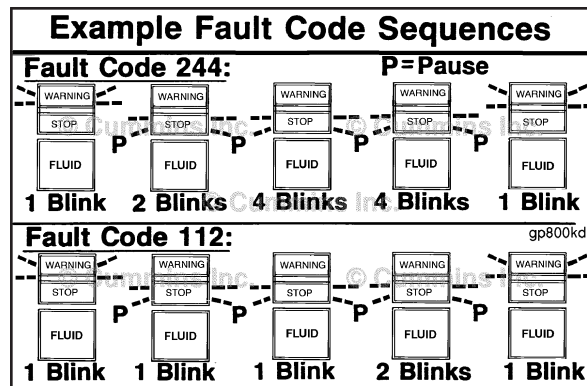


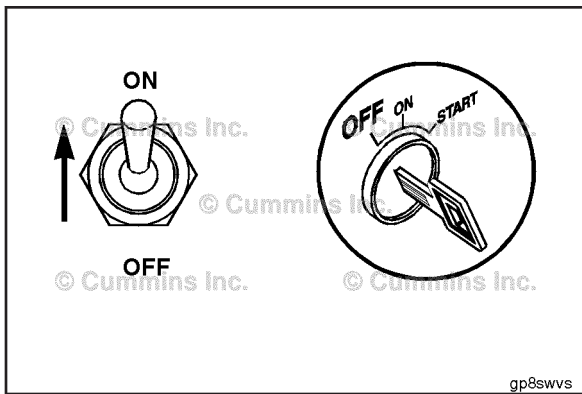

The diagnostic switch **must** remain in the OFF position (shorting plug removed) while the engine is being operated for all fault codes to be logged.

The diagnostic on/off switch circuit signals the system that the operator is requesting to read any active fault code recorded in the ECM.

NOTE: Some OEMs use a shorting plug rather than a switch.

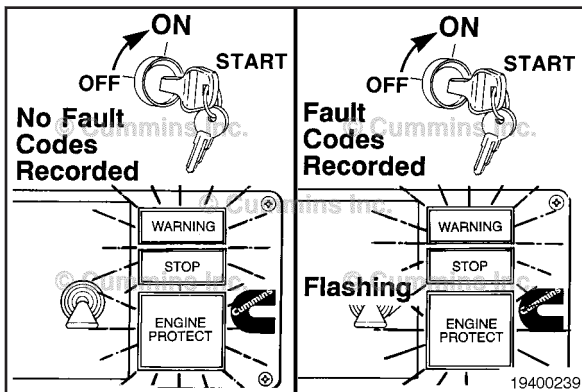



When the ECM receives the signal from the diagnostic ON/OFF switch, the yellow and red warning lights come on and start flashing if any active fault code is recorded in the ECM. If both warning lights remain on and do **not** flash, there are **no** active fault codes present.

NOTE: The equipment **must** be stationary. If road speed is detected, the flashing sequence will **not** occur.

QSF2.8 CM2880 F105
Section 1 - Operating Instructions

Turn the diagnostic switch OFF when the diagnostic system is **not** in use.

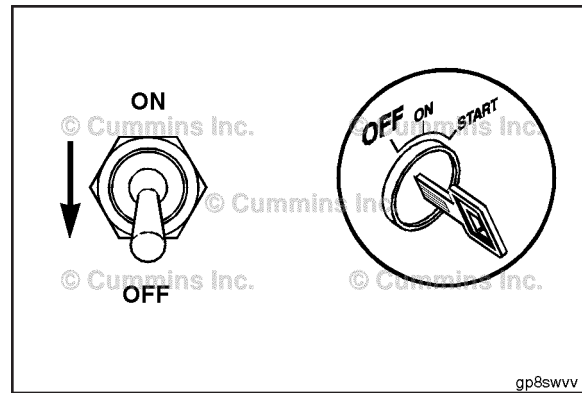

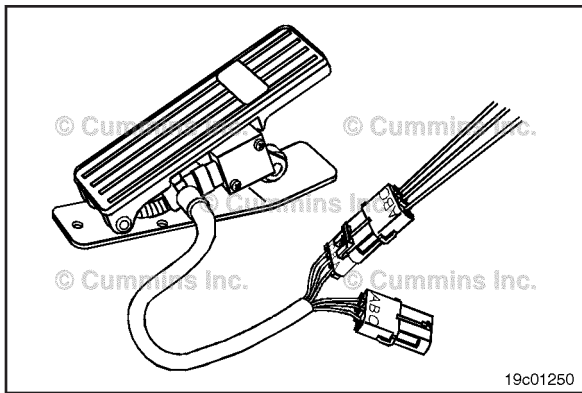

Throttle Activated Diagnostic Switch

The throttle activated diagnostic switch feature is intended to eliminate the need for a dash-mounted diagnostic switch, which is used to activate the fault code flash out on the lamps. The fault code flash out is activated through a simple sequence of throttle movements. When this feature is enabled, the engine is in stop state and the keyswitch is turned ON. Every successive cycle of the throttle leads to the next fault code to be flashed on the lamps, in the same manner as if the increment switch were depressed.

To activate this feature, the engine **must** be stopped and the keyswitch turned to the ON position. Depress the accelerator pedal completely three times. The feature should then be enabled. Transitioning to the next fault code occurs automatically after the first fault code is flashed out twice or if the throttle pedal is cycled.

NOTE: There is an optional, error-sensitive mode for this feature. If any of the throttle-related errors occur, this feature turns on the diagnostic switch automatically when the engine is stopped and the keyswitch is ON. During this mode, **only** the increment switch can be used to flash out the next fault code.


Engine Protection System



⚠CAUTION⚠

When the red STOP lamp is illuminated, the driver/operator must pull to the side of the road, when it is safe to do so, to reduce the possibility of engine damage.

The QSF2.8 CM2880 F105 engines are equipped with an engine protection system. The system monitors critical engine temperatures and pressures, and logs diagnostic faults when an over or under normal condition occurs. If an out-of-range condition exists and engine derate action is to be initiated, the operator is alerted by an in-cab Warning lamp. The STOP lamp blinks or flashes when out-of-range conditions continue to worsen. The driver **must** pull to the side of the road, when it is safe to do so, to reduce the possibility of engine damage.

NOTE: Engine power and speed will gradually be reduced, depending on the level of severity of the observed condition. The engine protection system will **not** shut down the engine unless the engine protection shutdown feature has been enabled.

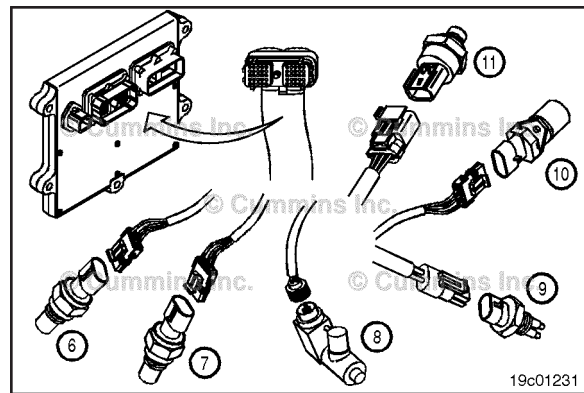

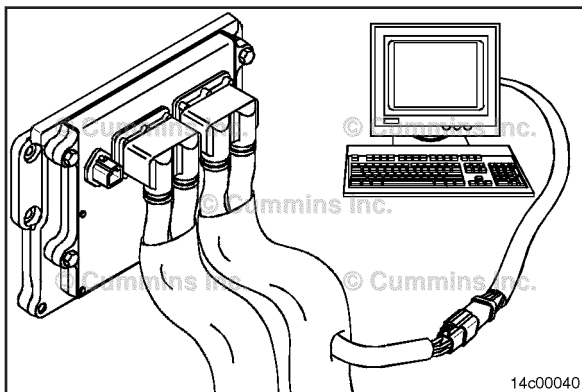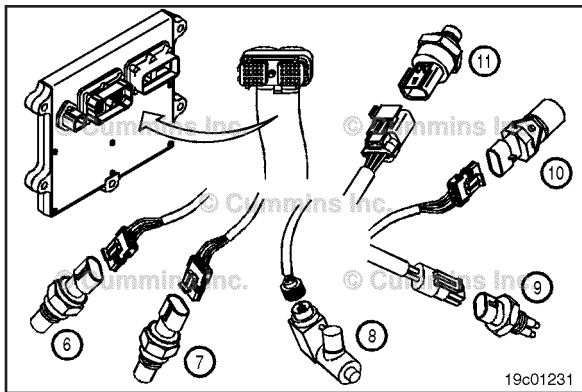

Fault Code Snapshot Data

When a diagnostic fault code is recorded in the ECM, the ECM input and output data is recorded from all sensors and switches. Snapshot data allows the relationships between ECM inputs and outputs to be viewed and used during troubleshooting.

Fault code snapshot data can **only** be viewed using INSITE™ electronic service tool.


INSITE™ Electronic Service Tool Description

INSITE™ electronic service tool is a service tool for the electronic engine control system. Use INSITE™ electronic service tool to:

- Program customer specified information into the ECM (parameter and features)
- Aid in troubleshooting the engine
- Change the engine power or rated speed calibration
- Transfer new or update calibration files to the ECM
- Create and view trip reports, etc.

INSITE™ Electronic Service Tool Monitor Mode

The INSITE™ electronic service tool monitor mode is a useful troubleshooting aid that displays the key ECM inputs and outputs. This feature is used to spot constant or abnormally fluctuating values.

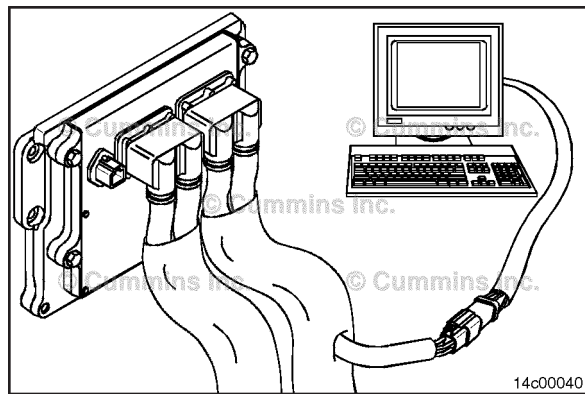

Electromagnetic Interference (EMI)

General Information

Some applications utilize accessories such as (CB radios, mobile transmitters, etc.) if not installed and used correctly the radio frequency energy generated by these accessories can cause electromagnetic interference (EMI) conditions to exist between the accessory and the Cummins electronically controlled systems. Cummins is **not** liable for any performance problems with either the electronically controlled systems or the accessory due to EMI. EMI is **not** considered by Cummins to be a system failure and therefore is **not** warrantable.

System EMI Susceptibility

Your Cummins product has been designed and tested for minimum sensitivity to incoming electromagnetic energy. Testing has shown that there is no performance degradation at relatively high energy levels; however, if very high

energy levels are encountered, then some noncritical diagnostic fault code logging can occur. The electronically controlled systems EMI susceptibility level will protect your systems from most, if **not** all, electromagnetic energy-emitting devices that meet the legal requirements.

System EMI Radiation Levels

Your Cummins product has been designed to emit minimum electromagnetic energy. Electronic components are required to pass various Cummins and industry EMI specifications. Testing has shown that when the systems are properly installed, they will not interfere with onboard communication equipment or with the vehicle's, equipment's, or vessel's ability to meet any applicable EMI standards and regulated specifications.

If an interference condition is observed, follow the suggestions below to reduce the amount of interference:

- 1 Locate the transmitting antenna as far away from the electronically controlled systems and as high as possible.
- 2 Locate the transmitting antenna as far away as possible from all metal obstructions (e.g., exhaust stacks)
- 3 Consult a representative of the accessory supplier in your area to:
 - Accurately calibrate the device for proper frequency, power output, and sensitivity (both base and remote site devices **must** be properly calibrated)
 - Obtain antenna reflective energy data measurements to determine the optimum antenna location
 - Obtain optimum antenna type and mounting arrangement for your application
 - Make sure your accessory equipment model is built for maximum filtering to reject incoming electromagnetic noise.

Unique Operating Characteristics of an Engine with a Direct Flow™ Air Cleaner

General Information

Cummins® industrial engines certified T4i and later, and less than 18L in displacement, use a Cummins® Direct Flow™ air cleaner. Figure 1 shows a typical arrangement of the Direct Flow™ air cleaner, and identifies the major components. See a Cummins® Authorized Repair Location for additional product information and various filter configurations.

Depending on the Cummins® Direct Flow™ model number, there may be some variation between the illustration and the actual air cleaner installed on the engine.

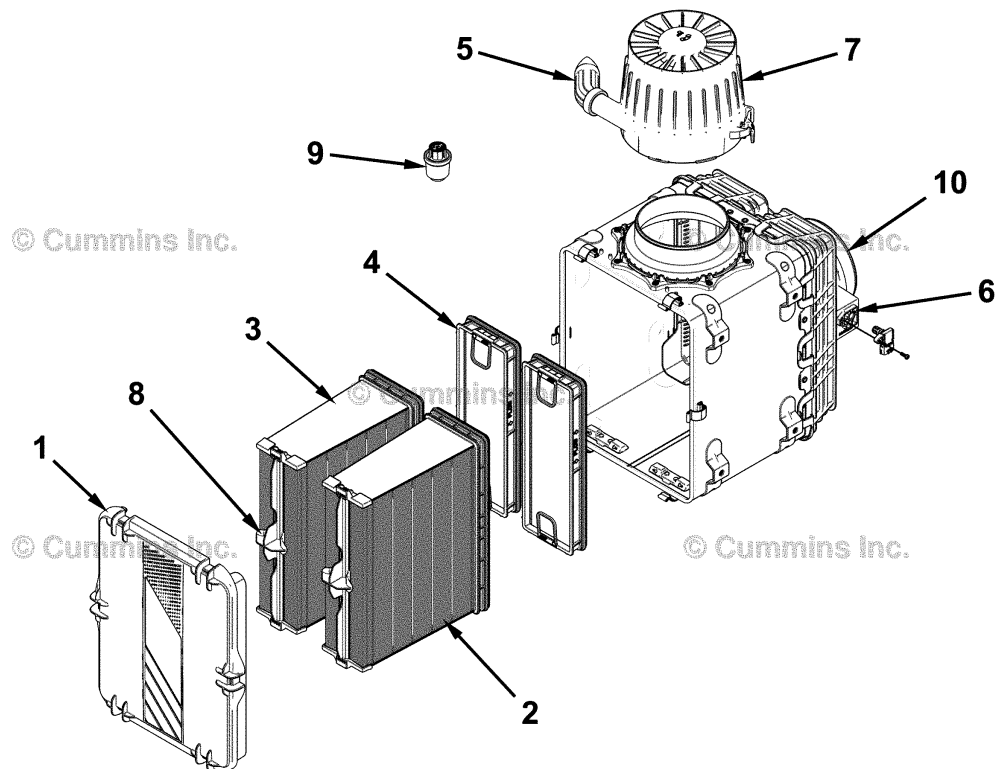


Figure 1, Typical Direct Flow™ Exploded View

To buy Cummins Parts and Service Manuals, Training Guides, or Tools go to our website at <https://store.cummins.com>

00r00180

- 1 Service cover
- 2 Primary element
- 3 Quick reference label
- 4 Secondary filter(s)
- 5 Integrated dust ejector valve
- 6 Sensor location
- 7 Inlet with optional pre-cleaner (aspiration optional)
- 8 Integrated handle to improve serviceability
- 9 Restriction indicator
- 10 Outlet.

Maintenance Service

As contaminant is trapped by the air filter, the restriction, or pressure drop across the air filter increases. The pressure drop will continue to increase until maximum restriction, also known as terminal restriction, is reached. The maximum restriction can be found in the appropriate Operation and Maintenance manual, Section V - Maintenance Specifications.

Restriction across the air filter may be measured in the following ways:

- Mechanical restriction indicator on the air cleaner housing
- Electrical sensor on the air cleaner housing which illuminates a dash lamp when the air filter reaches maximum restriction

- Engine control module (ECM) estimates restriction using the turbocharger compressor intake pressure/temperature sensor and will illuminate a dash lamp when the air filter reaches maximum restriction.

When any of the methods above indicate that the air filter has reached maximum restriction, the air filter **must** be replaced. There is a maximum recommended change interval regardless of restriction values, which can be found in the maintenance schedule. Reference the appropriate Operation and Maintenance manual, Section 2 - Maintenance Schedule.



Do not continue to operate an engine with a terminally restricted air filter. The result can be physical damage to the air filter, collapsed air intake hoses, and/or loose air intake hose clamps.

Visual inspection is **not** an effective method for determining air filter restriction. Do **not** remove an air filter just to perform a visual inspection.

Clean and Inspect for Reuse



Do not clean or inspect air filters before maximum restriction is reached. Daily inspection of air filters risks introducing dust/debris into the air intake system which can cause damage to the engine.

Cleaning of air filters is **not** recommended by Cummins Inc. When an air filter has reached terminal restriction, it should be discarded and a new air filter installed.

Section 2 - Maintenance Guidelines

Section Contents

	Page
Maintenance Guidelines - Overview	2-1
General Information.....	2-1
Maintenance Record Form	2-5
Maintenance Data.....	2-5
Maintenance Schedule	2-2
General Information.....	2-2

This Page Left Intentionally Blank

Maintenance Guidelines - Overview

General Information

Cummins Inc. recommends that the system be maintained according to the Maintenance Schedule in this section.

If the system is operating in ambient temperatures below -18°C [0°F] or above 38°C [100°F], perform maintenance at shorter intervals. Shorter maintenance intervals are also required if the system is operated in a dusty environment or if frequent stops are made. For gas fueled generator sets, shorter maintenance intervals are also required, if operating at loads below 70% for prolonged periods. Contact your local Cummins® Authorized Repair Location for recommended maintenance intervals.

Some of these maintenance procedures require special tools or must be completed by qualified personnel. Contact your local Cummins® Authorized Repair Location for detailed information.

If your system is equipped with a component or accessory not manufactured or supplied by Cummins Inc., refer to the component manufacturer's maintenance recommendations.

OEM supplied equipment and components can impact on the performance and reliability of the engine if they are not correctly maintained.

Use the chart provided in this section as a convenient way to record maintenance performed.

Maintenance Schedule

General Information

Cummins Inc. recommends that the engine be maintained according to the Maintenance Schedule in this section.

NOTE: The maintenance intervals **must** be reduced if the engine is operating in ambient temperatures consistently below -18°C [0°F], dusty environment or frequent start and stop operations. Contact a Cummins® Authorized Repair Location for recommended intervals.

Keep a record of all performed maintenance. Refer to Procedure 102-001 in Section 2.

If engine is equipped with a component or an accessory **not** manufactured by Cummins Inc., refer to the original equipment manufacturer (OEM) service manual and maintenance recommendations.

Perform maintenance at whichever interval occurs first. At each scheduled maintenance interval, perform all previous maintenance checks that are due for scheduled maintenance.

Specific instructions for performing the maintenance checks are listed in the sections below:

Maintenance Procedures at Daily Interval

- Crankcase Breather Tube - Check
- Lubricating Oil Level - Check
- Fuel-Water Separator - Drain
- Fan, Cooling - Check
- Coolant Level - Check
- Air Intake Piping - Check
- Air Cleaner Restriction - Check

To buy Cummins Parts and Service Manuals, Training Guides, or Tools go to our website at <https://store.cummins.com>

- Dust Ejection Valve - Check
- Drive Belts - Check

Maintenance Procedures at 250 Hours or 3 Months

- Lubricating Oil and Filters - Change⁽¹⁾
- Radiator Hoses - Check
- Charge-Air Cooler - Check
- Charge-Air Piping - Check
- Air Intake Piping - Check

Maintenance Procedures at 500 Hours or 6 Months

- Fuel-Water Separator - Change
- Fuel Filter (Cartridge Type) - Change
- Lubricating Oil and Filters - Change⁽¹⁾
- Radiator Pressure Cap - Check
- Engine Coolant Antifreeze - Check
- Batteries - Check
- Battery Cables and Connections - Check

Maintenance Procedures at 1000 Hours or 1 Year

- Fan Hub, Belt Driven - Check
- Cooling Fan Belt Tensioner - Check

To buy Cummins Parts and Service Manuals, Training Guides, or Tools go to our website at <https://store.cummins.com>

Maintenance Procedures at 2000 Hours or 2 Years

- Overhead Set - Adjust
- Cooling System - Flush⁽²⁾
- Air Cleaner Element - Change⁽³⁾

NOTES:

- 1 Oil change interval for engines equipped with an 8.2 liter [8.6 quart] lubricating oil pan capacity is every 500 hours or 6 months. Refer to Procedure 018-003 in Section V for lubricating oil recommendations and specifications.
- 2 **Must** use a heavy-duty year-around antifreeze that meets the chemical composition of American Society of Testing and Materials (ASTM) D6210 standard. Refer to Procedure 018-004 in Section V.
- 3 Air cleaner elements should be replaced when maximum air cleaner restriction is reached. However, even if air cleaner restriction is within specification, air cleaner elements **must** be replaced every two years. Refer to Procedure 018-024 in Section V for correct part number.

Use the following procedure for fuel recommendations and specifications. Refer to Procedure 018-002 in Section V.

Maintenance Record Form

Maintenance Data

Maintenance Record	
Product Serial No.:	Product Model:
Owner's Name:	Equipment Model/Number:

Key to table headings:
A = Date
B = Schedule km [Miles], Hours or Time Interval
C = Actual km [Miles] Hour or Time
D = Maintenance Check Performed
E = Check Performed By
F = Comments

A	B	C	D	E	F

[illegible]

Section L - Service Literature

Section Contents

	Page
Additional Service Literature	L-1
General Information.....	L-1
Cummins Customized Parts Catalog	L-3
General Information.....	L-3
Ordering the Customized Parts Catalog.....	L-3
Service Literature Ordering Location	L-2
Contact Information.....	L-2

This Page Left Intentionally Blank

Additional Service Literature

General Information

The following publications can be purchased:

Bulletin Number	Title of Publication
4358561	QSF2.8 CM2880 F105 Service Manual
4358563	QSF2.8 CM2880 F105 Fault Code Troubleshooting Manual
4358562	QSF2.8 CM2880 F105 Wiring Diagram
4358560	QSF2.8 CM2880 F105 Operation and Maintenance Manual
4358559	QSF2.8 CM2880 F105 Owners Manual
3379000	Air for Your Engine
3379001	Fuel for Cummins® Engines
3379009	Operation of Diesel Engines in Cold Climates
3666132	Cummins® Coolant Requirements and Maintenance
3810340	Cummins® Engine Oil and Oil Analysis Recommendations

To buy Cummins Parts and Service Manuals, Training Guides, or Tools go to our website at <https://store.cummins.com>

Service Literature Ordering Location Contact Information

Region	Ordering Location
United States and Canada	Cummins Distributors or Credit Cards at https://store.cummins.com
All Other Countries	Cummins Distributors or Dealers

To buy Cummins Parts and Service Manuals, Training Guides, or Tools go to our website at <https://store.cummins.com>

Cummins Customized Parts Catalog

General Information

Cummins is pleased to announce the availability of a parts catalog compiled specifically for you. Unlike the generic versions of parts catalogs that support general high volume parts content; Cummins Customized catalogs contain only the new factory parts that were used to build your engine.

The catalog cover, as well as the content, is customized with you in mind. You can use it in your shop, at your worksite, or as a coffee table book in your RV or boat. The cover contains your name, company name, address, and telephone number.

This new catalog was designed to provide you with the exact information you need to order parts for your engine. This will be valuable for customers that do not have easy access to Cummins QuickServe Online.

Additional Features of the Customized Catalog include:

- Engine Configuration Data
- Table of Contents
- Separate Option and Parts Indexes
- Service Kits (when applicable)
- ReCon Part Numbers (when applicable)

Ordering the Customized Parts Catalog

Ordering by Telephone

- North American Distributors, Original Equipment Manufacturers and Cummins Factory personnel order by calling Iron Mountain Fulfillment Services (IMFS) at 1-800-646-5609.

To buy Cummins Parts and Service Manuals, Training Guides, or Tools go to our website at <https://store.cummins.com>

- International Distributors and Original Equipment Manufacturers order the CPC from their regional Cummins Parts Distribution Centers (PDC).
- International PDC orders are called into Iron Mountain at (++) 630-283-2420.
- Retail Credit Card Orders require a 2 step ordering process.

Ordering On-Line

Access the Cummins QSQL store at <https://store.cummins.com>

- Find the Customized Parts Catalog button located on the left of the homepage
- Select format. Your Price is also shown here
- Finalize Shopping Cart and Check Process as described on the website

North America call Iron Mountain Fulfillment Services (IMFS) at 800-646-5609, International customers call (++) 630-283-2420. Provide IMFS the catalog detail as described on the website. This step is required until we have our On Line form available.

Required information needed for your Customized Parts Catalog Order.

- Customer Name
- Street Address
- Company Name (optional)
- Telephone no.
- Credit Card No.
- Cummins Engine Serial Number (located on the engine data plate)

To buy Cummins Parts and Service Manuals, Training Guides, or Tools go to our website at <https://store.cummins.com>

Unfortunately not all Cummins Engines can be supported by Customized Parts Catalogs. Engines older than 1984 or newer than 3 months may not have the necessary parts information to compile a catalog. We will contact you if this occurs and explain why we are unable to fill your order.

Customized Parts Catalogs are produced specifically for a single customer. This means they are not returnable for a refund. If we make an error and your catalog is not useable, we will correct that error by sending you a new catalog.

Notes

This image shows a blank sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

Section V - Maintenance Specifications

Section Contents

	Page
Coolant Recommendations and Specifications	V-15
Cooling System Sealing Additives.....	V-19
Cooling System Soluble Oils.....	V-19
Fully Formulated Coolant/Antifreeze.....	V-15
Cooling System	V-3
Specifications.....	V-3
Cummins®/Fleetguard® Filter Specifications	V-4
General Information.....	V-4
Fuel Recommendations and Specifications	V-6
Fuel Recommendations.....	V-6
General Engine	V-1
Specifications.....	V-1
Lubricating Oil Recommendations and Specifications	V-9
AfterMarket Oil Additive Usage.....	V-14
General Information.....	V-9
New Engine Break-in Oils.....	V-14
Lubricating Oil System	V-2
Specifications.....	V-2

This Page Left Intentionally Blank

General Engine

Specifications

Listed below are the general specifications for the engines covered by this manual.

Bore x Stroke.....	94 mm x 100 mm [3.7 in x 3.94 in]
Horsepower.....	Refer to engine dataplate
Displacement.....	2.8 liters [171 C.I.D]
Firing Order.....	1-3-4-2

Approximate Engine Weight:

Dry Weight, excludes flywheel, alternator, and starter.

Dry Weight, With EGR.....	244 kg [538 lb]
Crankshaft Rotation (viewed from the front of the engine).....	Clockwise

Valve Clearance:

Intake.....	0.25 mm [0.010 in]
Exhaust.....	0.51 mm [0.020 in]

Lubricating Oil System

Specifications

Oil Pressure:

Low Idle (minimum allowed).....	69 kPa [10 psi]
At Rated Speed (nominal).....	331 kPa [48 psi]
Oil-regulating Valve-opening Pressure Range.....	350 to 360 kPa [51 to 52 psi]
Oil Filter Differential Pressure to Open Bypass.....	310 to 379 kPa [45 to 55 psi]
Lubricating Oil Filter Capacity.....	0.436 liters [0.461 qt]

Oil Capacity of Standard Engine:

Pan Only (Aluminum).....	8.2 liters [8.66 qt]
Pan Only (Nylon).....	5 liters [5.28 qt]
High to Low (on dipstick) (Aluminum).....	2 liter [2.11 qt]
High to Low (on dipstick) (Nylon).....	1 liter [1.1 qt]
Maximum Oil Temperature:.....	135°C [275°F]

Cooling System

Specifications

Coolant Capacity.....	5 liters [5.3 qt]
Standard Modulating Thermostat - Range.....	82 to 95°C [180 to 203°F]
Maximum Allowed Water Outlet Temperature.....	107°C [225°F]
Minimum Operating Block Coolant Temperature.....	70°C [158°F]
Minimum Pressure Cap Rating at Sea Level.....	100 kPa [15 psi]

Cummins®/Fleetguard® Filter Specifications

General Information

Cummins Filtration Inc. is a subsidiary of Cummins Inc. Fleetguard® filters are developed through joint testing at Cummins Inc. and Fleetguard Filtration Inc.. Fleetguard® filters are standard on new Cummins® engines. Cummins Inc. recommends their use.

Fleetguard® products meet all Cummins® Source Approval Test standards to provide the quality filtration necessary to achieve the engine's design life. If other brands are substituted, the purchaser should insist on products that the supplier has tested to meet Cummins Inc. high-quality standards.

Cummins Inc. can **not** be responsible for problems caused by nongenuine filters that do **not** meet Cummins Inc. performance or durability requirements.

Filter Part Numbers

Lubricating Oil Filter	
Cummins® Part Number	5253027
Fleetguard® Part Number	LF16240
Fuel Filter	
Cummins® Part Number	3968105 (Cartridge) 3964061 (O-ring)
Fleetguard® Part Number	FS19925

Air Filter (with Temperature/Barometric Air Pressure sensor)	
Size: 127 x 127 x 203 mm [5 x 5 x 8 in]	
Cummins® Part Number	5310323 (Primary Filter)
	5310324 (Secondary Filter)
Fleetguard® Part Number	AF55030 (Primary Filter)
	AF55321 (Secondary Filter)
Size: 178 x 178 x 203 mm [7 x 7 x 8 in]	
Cummins® Part Number	5283826 (Primary Filter)
	5310325 (Secondary Filter)
Fleetguard® Part Number	AF55020 (Primary Filter)
	AF55320 (Secondary Filter)

Fuel Recommendations and Specifications

Fuel Recommendations



Do not mix gasoline, alcohol, or gasohol with diesel fuel. This mixture can cause an explosion.



Due to the precise tolerances of diesel injection systems, it is extremely important that the fuel be kept clean and free of dirt or water. Dirt or water in the system can cause severe damage to both the fuel pump and the fuel injectors.



Lighter fuels can reduce fuel economy or possibly damage fuel system components.



Do not use diesel fuel blended with lubricating oil in engines equipped with an aftertreatment system. Service intervals for aftertreatment systems will be reduced.



Ultra-low sulfur diesel fuel is required for correct operation of the aftertreatment system. If ultra-low sulfur diesel fuel is not used, the aftertreatment system could possibly be damaged.

Cummins Inc. recommends the use of ASTM number 2D fuel. The use of number 2D diesel fuel will result in optimum engine performance.

The engine has been optimized for use with an exhaust aftertreatment to meet the Tier 4 Final/Stage IV off-highway emissions regulations. It **must** operate on ultra-low sulfur diesel (ULSD) with a maximum sulfur content of 15 ppm in the United States and 10 ppm in the European Union. Failure to do so can permanently damage engine and

To buy Cummins Parts and Service Manuals, Training Guides, or Tools go to our website at <https://store.cummins.com>

aftertreatment systems within a short period of time. This damage could cause the engine to become inoperable and affect the warranty coverage on the engine.

Ultra-low sulfur diesel fuel, also defined by ASTM S-15, is defined as diesel fuel **not** exceeding 0.0015 (15 ppm) mass percent sulfur content. There is **no** acceptable substitute.

At operating temperatures below 0°C [32°F], acceptable performance can be obtained by using blends of number 2D and number 1D.

The following chart lists acceptable fuel types for this engine.

Acceptable Fuels - Cummins® Fuel System									
Number 1D Diesel⁽¹⁾ (2)	Number 2D Diesel⁽²⁾	Number 1K Kerosene	Jet-A	Jet-A1	JP-5	JP-8	Jet-B	JP-4	CITE
OK	OK	NOT OK	NOT OK	NOT OK	NOT OK	NOT OK	NOT OK	NOT OK	NOT OK
48-34 ⁽³⁾	40-24 ⁽³⁾	50-35 ⁽³⁾	51-37 ⁽³⁾	51-37 ⁽³⁾	48-36 ⁽³⁾	51-37 ⁽³⁾	57-45 ⁽³⁾	57-45 ⁽³⁾	57-45 ⁽³⁾

- 1 Any adjustment to compensate for reduced performance with a fuel system using alternate fuel is **not** warrantable.
- 2 Winter blend fuels, such as those found at commercial fuel dispensing outlets, are combinations of number 1D and number 2D diesel fuel, and are acceptable.
- 3 BTU Content/Degree API Gravity - Low API gravity fuels have a higher thermal energy content (BTU). As a general rule, there is a 3 to 5 percent decrease in BTU content for every 10 degree increase in API gravity; there is also a 0.7 degree API gravity increase with an increase in fuel temperature. This decrease in energy content equates roughly to the same percentage of power loss. Use of fuels with higher API gravity will cause higher than normal fuel consumption.

NOTE: Cummins Inc. recommends that the cetane number of diesel fuel be a minimum of 45 for engines that are expected to operate at temperatures below 0°C [32°F] and a minimum of 42 for engines that are operated at temperatures above 0°C [32°F].

NOTE: The use of diesel fuel with a lower than recommended cetane number can cause hard starting, instability, and excessive white smoke. To maintain satisfactory operation at low ambient temperatures, it is important to specify diesel fuel of the correct cetane number.

NOTE: Cummins Inc. requires all permissible fuels to have adequate fuel lubricity. This means the BOCLE number is 3100 or greater as measured by ASTM specification D6078, Scuffing Load Ball On Cylinder Evaluator (SLBOCLE). Lubricity can also be measured by ASTM specification D6079, ISO 12156, High Frequency Reciprocating Rig (HFRR), in which the fuel **must** have a wear scar diameter of 0.45 mm [0.02 in] or less.

The original equipment manufacturer (OEM) is required to display readily visible labels on the dashboard (or instrument panel), and near all fuel fill inlets that states "Use Ultra Low-Sulfur Diesel Fuel **Only**" or "Ultra Low-Sulfur Diesel Fuel **Only**".

ULSD / Biodiesel blends up to B20 (20 percent biodiesel) supplied by a BQ9000 certified supplier are acceptable.

For information on alternative fuels, such as biodiesel, and additional information for fuel recommendations and specifications, reference the following service bulletin. Refer to Fuels for Cummins® Engines, Bulletin 3379001.

Lubricating Oil Recommendations and Specifications

General Information



Extending the oil and filter change interval beyond the recommendations will decrease the engine life due to factors such as corrosion, deposits, and wear.



A sulfated ash limit of 1.85 percent has been placed on all engine lubricating oils recommended for use in Cummins engines. Higher ash oils can cause valve and/or piston damage and lead to excessive oil consumption.

The use of quality engine lubricating oils, combined with appropriate oil drain and filter change intervals, is a critical factor in maintaining engine performance and durability. Extending the oil and filter change interval beyond the recommendations will decrease engine life due to factors such as corrosion, deposits, and wear. Reference Procedure 102-002 in Section 2 to determine which oil drain interval to use for the application.

Cummins Inc. recommends the use of high-quality SAE 15W-40 heavy-duty engine oil, such as Valvoline® Premium Blue® (USA) or Valvoline Premium Blue Extra (International).

NOTE: The responsibility is with the owner. If recommendations are ignored, warranty could be affected.

API: American Petroleum Institute

CES: Cummins® Engineering Standard

ACEA - Association des Constructeurs European d' Association

JAMA - Japanese Automobile Manufacturers Association

Table 1: Cummins® Engineering Standards (CES) for Lubricants

Cummins Engineering Standard Classification (CES)	North American Classification	International Classifications	Comments
Obsolete. Do not use.	API CD API CE	ACEA E-1	Obsolete. Do not use.
	API CG-4/SH		
CES-20075 ¹	API CF-4/SJ	ACEA E-2	Minimum acceptable oil classification for MidRange engines, but is not recommended.
		ACEA E-3	
		JAMA DH-1	
CES-20071 ²	API CH-4 4/SJ	ACEA E5	Acceptable oil classification for MidRange engines.
CES-20076 ²			
CES-20077 ²			
CES-20078	API CI-4	ACEA E7	Excellent oil for MidRange engines.
CES-20081	API CJ-4	ACEA E9	Excellent oil for MidRange engines where ultra-low sulfur diesel fuel is used. ³
		JAMA DH-2	

Table Notes

- 1 For MidRange engines, in areas where CH-4/SJ or CG-4/SH oils are **not** available, refer to the oil drain intervals in Section 2. As an alternative, oils meeting CES-20075 can be used, but the oil drain interval and filter change interval **must** be reduced by half.

- 2 Outside North America, where oil meeting CES-20071, CES-20076, or CES20077 might **not** be available, Cummins Inc. primary recommendation is for an oil meeting Global DHD-1, as jointly developed by EMA, ACEA, and JAMA.
- 3 Ultra-low sulfur diesel fuel is defined as diesel fuel **not** exceeding 0.0015 (15 ppm) mass percent sulfur content (ultra-low diesel fuel is also defined by ASTM S-15).


A sulfated ash limit of 1.0 mass percent is suggested for optimum valve and piston deposit and oil consumption control.


For further details and discussion of engine lubricating oils for Cummins engines, refer to Cummins Engine Oil Recommendations, Bulletin 3810340.

The API service symbols are shown in the accompanying illustration. The upper half of the symbols display the appropriate oil categories.

The lower half can contain words to describe oil energy-conserving features.

The center section identifies the SAE oil viscosity grade.

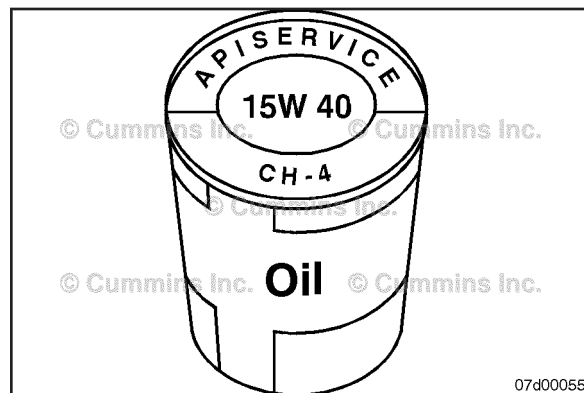

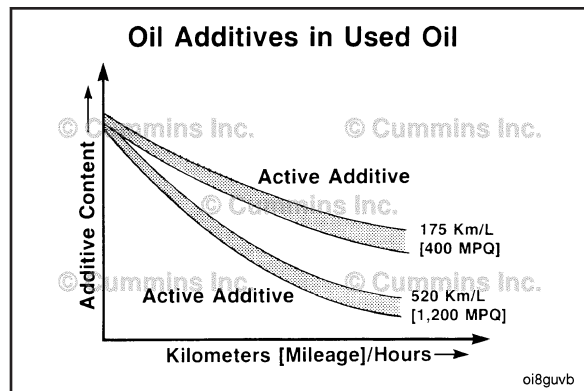

As the engine oil becomes contaminated, essential oil additives are depleted. Lubricating oils protect the engine as long as these additives are functioning properly. Progressive contamination of the oil between oil and filter change intervals is normal. The amount of contamination will vary, depending on the operation of the engine, kilometers or miles on the oil, fuel consumed, and new oil added.


Extending oil and filter change intervals beyond the recommendations will decrease engine life due to factors such as corrosion, deposits, and wear.

Reference the oil drain chart in this section to determine which oil drain interval to use for your application.

The primary Cummins Inc. recommendation is for the use of 15W-40 multigrade lubricating oil for normal operation at ambient temperatures above -15°C [5°F]. The use of multigrade oil reduces deposit formation, improves engine cranking in low temperature conditions, and increases engine durability by maintaining lubrication during high temperature operating conditions. Since multigrade oils have been shown to provide approximately 30 percent lower oil consumption compared with monograde oils, it is important to use multigrade oils to be certain the engine will meet applicable emissions requirements.

Use of "synthetic engine oils" (those made with API group 3 or group 4 base stocks) is permitted, subject to the same performance and viscosity limitations of petroleum (mineral) based engine oils. The same oil change intervals that are applied to petroleum (mineral) based engine oils **must** be applied to synthetic oils.

For further details and discussion of engine lubricating oils for Cummins® engines, refer to the latest revision of Cummins® Engine Oil Recommendations, Bulletin 3810340.

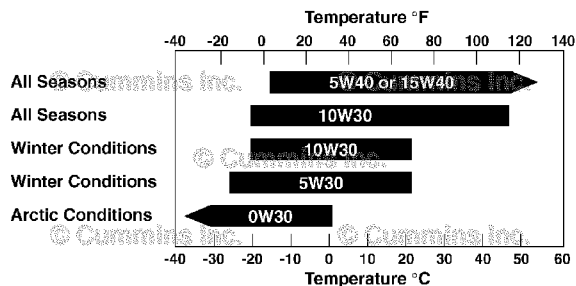

07d00260

While the preferred viscosity grade is 15W-40, lower viscosity multigrade oils can be used in colder climates. See the accompanying chart. Any viscosity grade lower than 15W-40 must still meet CES 20081.

Synthetic engine oils, API Group III and Group IV basestocks, are recommended for use in Cummins® engines operating in ambient temperature conditions consistently below -25°C [-13°F]. Synthetic 0W-30 oils that meet the requirements of API Group III or Group IV basestocks, can be used in operations where the ambient temperature never exceeds 0°C [32°F]. Multiviscosity oils rated 0W-30 do **not** offer the same level of protection against fuel dilution as do higher multigrade oils. Higher cylinder wear can be experienced when using 0W-30 oils in high-load situations.

As these oils have directionally thinner oil films than 15W-40 oils, top-quality Fleetguard® filters **must** be used above 20°C [70°F]. Some oil suppliers might claim better fuel economy for these oils. Cummins Inc. can neither approve nor disapprove any product **not** manufactured by Cummins Inc. These claims are between the customer and the oil supplier. Obtain a commitment from the oil supplier that the oil will give satisfactory performance in Cummins® engines, or do **not** use the oil.

New Engine Break-in Oils

Special “break-in” engine lubricating oils are **not** recommended for new or rebuilt Cummins® engines. Use the same type of oil during the break-in as is used in normal operation.

AfterMarket Oil Additive Usage

Cummins Inc. does **not** recommend the use of aftertreatment oil additives. Present high-quality fully additive engine lubricating oils are very sophisticated, with precise amounts of additives blended into the lubricating oil to meet stringent requirements. These oils meet performance characteristics that conform to the lubricant industry standards. Aftermarket lubricating oil additives are **not** necessary to enhance engine oil performance, and in some cases, can reduce the finished oil's ability to protect the engine.

Coolant Recommendations and Specifications

Fully Formulated Coolant/Antifreeze


Cummins Inc. recommends the use of fully formulated antifreeze/coolant meeting Cummins® Engineering Standards (C.E.S.) 14603. For further details and discussion of coolant for Cummins® engines, refer to Coolant Requirements and Maintenance, Bulletin 3666132.

Typically, antifreeze/coolants meeting ASTM D3306 or ASTM D6210 criteria are acceptable antifreeze/coolants for the engines covered by this manual.

Cummins Inc. recommends using either a 50/50 mixture of water (see water quality table) and fully formulated antifreeze, or fully formulated coolant when filling the cooling system.

Water quality is important for cooling system performance. Excessive levels of calcium and magnesium contribute to scaling problems, and excessive levels of chlorides and sulfates cause cooling system corrosion.

Water Quality	
Calcium Magnesium (hardness)	Maximum 170 ppm as ($\text{CaCO}_3 + \text{MgCO}_3$)
Chloride	Maximum 40 ppm as (Cl)
Sulfur	Maximum 100 ppm as (SO_4)

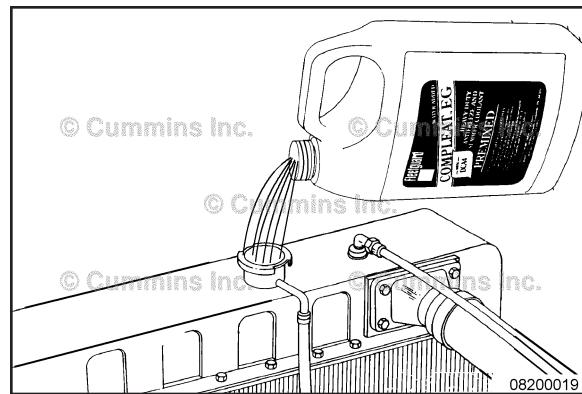

Cummins Inc. recommends using Fleetguard® Compleat™. It is available in both glycol forms (ethylene and propylene).




QSF2.8 CM2880 F105
Section V - Maintenance Specifications


Fully formulated antifreeze **must** be mixed with water (see water quality table) at a 50/50 ratio (40- to 60-percent working range). A 50/50 mixture of antifreeze and water gives a -36°C [-33°F] freezing point and a 108°C [226°F] boiling point, which is adequate for locations in North America. The actual lowest freezing point of ethylene glycol antifreeze is at 68 percent. Using higher concentrations of antifreeze will raise the freezing point of the solution and increase the possibility of a silica gel problem.

Legend


- 1 Freezing Point Temperature Scale
- 2 Boiling Point Temperature Scale

Coolant Recommendations and Specifications
Page V-17

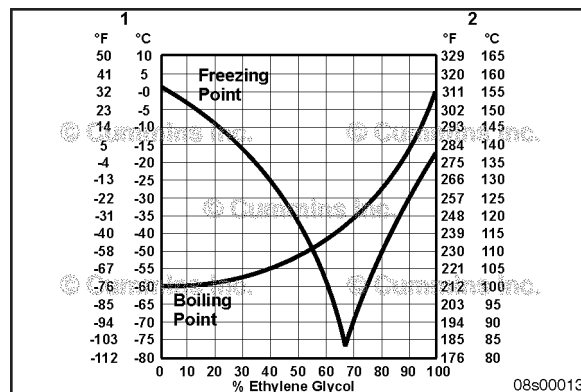

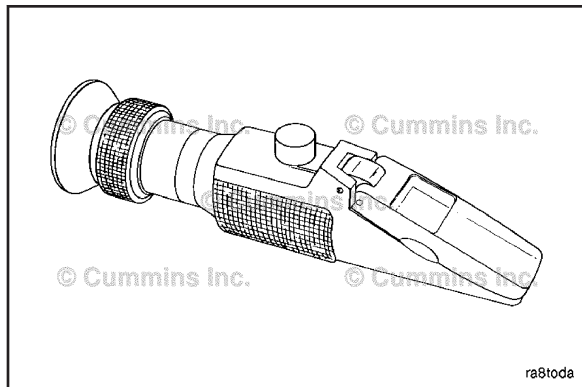

A refractometer **must** be used to measure the freezing point of the coolant **accurately**. Use Fleetguard® refractometer, Part Number CC-2806

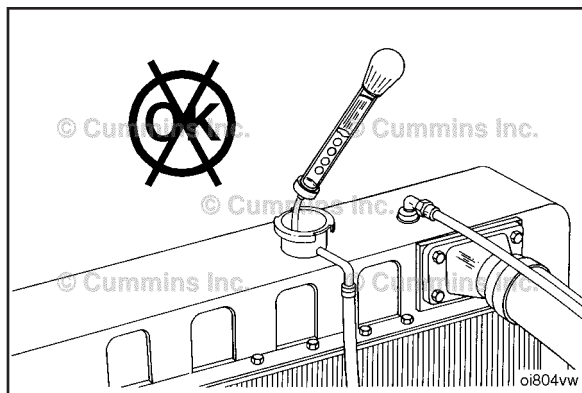


Do **not** use a floating ball hydrometer. The use of floating ball hydrometers can result in incorrect readings.

Cooling System Sealing Additives

Do **not** use sealing additives in the cooling system. The use of sealing additives could possibly:


- Cause buildup in coolant low-flow areas
- Plug the radiator and oil cooler
- Possibly damage the water pump seal.

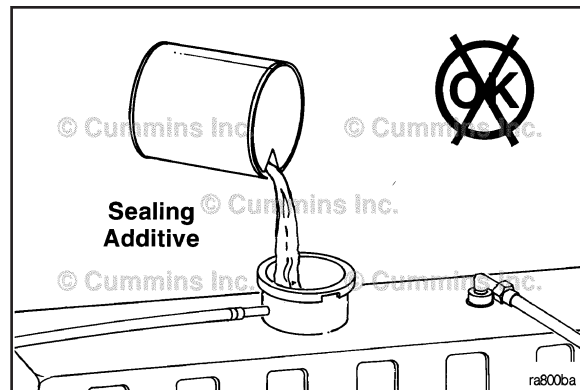

Cooling System Soluble Oils

Do **not** use soluble oils in the cooling system. The use of soluble oils will:

- Corrode brass and copper
- Damage heat transfer surfaces
- Damage seals and hoses.

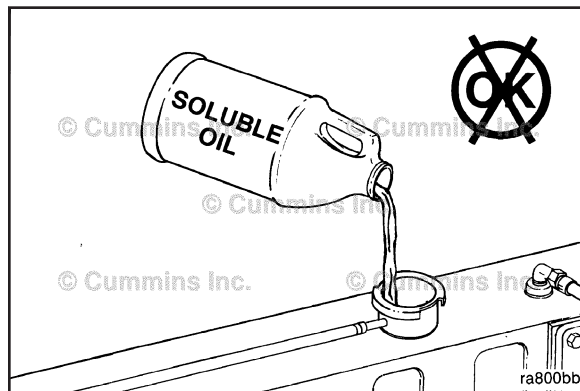

Notes

Section W - Warranty

Section Contents

	Page
All Engines International Industrial (Off-Highway)	W-8
All Engines United States And Canada Industrial (Off-Highway)	W-1
California Emission Control System Warranty	W-18
California Emission Control Warranty Statement, Off-Highway	W-13
.....	W-15

This Page Left Intentionally Blank

All Engines United States And Canada Industrial (Off-Highway) Coverage

Products Warranted

This Warranty applies to new Engines sold by Cummins and delivered to the first user on or after April 1, 1999, that are used in Industrial (Off-Highway) applications in the United States* and Canada, except for Engines used in marine, generator drive, QSK95 T4 locomotive and certain defense applications, for which different Warranty Coverage is provided.

Base Engine Warranty

This Warranty covers any failures of the Engine, under normal use and service, which result from a defect in material or factory workmanship (Warrantable Failures).

Coverage begins with the sale of the Engine by Cummins. Coverage continues for two years or 2,000 hours of operation, whichever occurs first, from the date of delivery of the Engine to the first user, or from the date the unit is first leased, rented or loaned, or when the Engine has been operated for 50 hours, whichever occurs first. If the 2,000 hour limit is exceeded during the first year, Coverage continues until the end of the first year.

Engine aftertreatment components included in the Cummins Critical Parts List (CPL) and marked with a Cummins part number are covered under Base Engine Warranty.

Additional Coverage is outlined in the Emission Warranty section.

Extended Major Components Warranty

The Extended Major Components Warranty covers Warrantable Failures of the Engine cylinder block, camshaft, crankshaft and connecting rods (Covered Parts).

Bushing and bearing failures are not covered.

This Coverage begins with the expiration of the Base Engine Warranty and ends three years or 10,000 (3,000 hours for A Series Engines) hours of operation from the date of delivery of the Engine to the first user, or from the date the unit is first leased, rented or loaned, or from when the Engine has been operated for 50 hours, whichever occurs first.

Consumer Products

The Warranty on Consumer Products in the United States* is a LIMITED Warranty. **CUMMINS IS NOT RESPONSIBLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.** Any implied Warranties applicable to Consumer Products in the United States* terminate concurrently with the expiration of the express Warranties applicable to the product. In the United States*, some states do not allow the exclusion of incidental or consequential damages, or limitations on how long an implied Warranty lasts, so the limitations or exclusions herein may not apply to you.

These Warranties are made to all Owners in the chain of distribution and Coverage continues to all subsequent Owners until the end of the periods of Coverage.

Cummins Responsibilities

During The Base Engine Warranty

Cummins will pay for all parts and labor needed to repair the damage to the Engine resulting from a Warrantable Failure.

Alternators, starters, and fans ARE covered for the duration of the Base Engine Warranty on A Series and B3.3 Engines.

Alternators and starters are covered for the duration of the Base Engine Warranty on QSK23 Engines.

Cummins will pay for the lubricating oil, antifreeze, filter elements and other maintenance items that are not reusable due to the Warrantable Failure.

Cummins will pay reasonable costs for mechanics to travel to and from the equipment site, including meals, mileage and lodging, when the repair is performed at the site of the failure.

Cummins will pay reasonable labor costs for Engine removal and reinstallation when necessary to repair a Warrantable Failure.

During The Extended Major Components Warranty

Cummins will pay for the repair or, at its option, replacement of the defective Covered Part and any Covered Part damaged by a Warrantable Failure of the defective Covered Part.

Owner Responsibilities

During The Base Engine Warranty

Owner is responsible for the cost of lubricating oil, antifreeze, filter elements and other maintenance items provided during Warranty repairs unless such items are not reusable due to the Warrantable Failure.

During The Extended Major Components Warranty

Owner is responsible for the cost of all labor needed to repair the Engine, including the labor to remove and reinstall the Engine. When Cummins elects to repair a part instead of replacing it, Owner is not responsible for the labor needed to repair the part.

Owner is responsible for the cost of all parts required for the repair except for the defective Covered Part and any Covered Part damaged by a Warrantable Failure of the defective Covered Part.

Owner is responsible for the cost of lubricating oil, antifreeze, filter elements and other maintenance items replaced during repair of a Warrantable Failure.

During The Base Engine And Extended Major Components Warranties

Owner is responsible for the operation and maintenance of the Engine as specified in the applicable Cummins Operation and Maintenance Manual. Owner is also responsible for providing proof that all recommended maintenance has been performed.

Before the expiration of the applicable Warranty, Owner must notify a Cummins distributor, authorized dealer or other repair location approved by Cummins of any Warrantable Failure and make the Engine available for repair by such facility. Service locations are listed on the Cummins Worldwide Service Locator at [cummins.com](https://store.cummins.com).

Owner is responsible for communication expenses, meals, lodging and similar costs incurred as a result of a Warrantable Failure.

Owner is responsible for non-Engine repairs, "downtime" expenses, cargo damage, fines, all applicable taxes, all business costs and other losses resulting from a Warrantable Failure.

Limitations

Engines with an emissions certification listed below must be operated using only diesel fuel having no more than the corresponding maximum sulfur content. Failure to use the specified fuel as listed in the Cummins Fuel Bulletin #3379001 Table 1 (Cummins Inc. Required Diesel Fuel Specifications) can damage the Engine and aftertreatment system within a short period of time. This damage could cause the Engine to become inoperable and failures attributable to the use of incorrect fuels will be denied Warranty Coverage. Fuel specifications also need to comply with local fuel regulations (EN590 for Europe and ASTM D975 for North America) for Warranty eligibility.

Maximum sulfur levels by emissions certification level as listed on the Engine's dataplate are:

EPA 2007/2010/2013	max. 15 parts per million
EPA Tier 4 Interim / Final	max. 15 parts per million
EU Stage IIIB 2011	max. 15 parts per million
Euro 4/5	max. 50 parts per million
Euro 6	max. 10 parts per million

Cummins is not responsible for failures or damage resulting from what Cummins determines to be abuse or neglect, including, but not limited to: operation without adequate coolants or lubricants; overfueling; overspeeding; lack of maintenance of lubricating, cooling or intake systems; improper storage, starting, warm-up, run-in or shutdown practices; unauthorized modifications of the Engine. Cummins is also not responsible for failures caused by incorrect oil, fuel or diesel exhaust fluid or by water, dirt or other contaminants in the fuel, oil or diesel exhaust fluid.

For power units and fire pumps (package units), this Warranty applies to accessories, except for clutches and filters, supplied by Cummins which bear the name of another company.

Cummins Compusave units are covered by a separate Warranty.

To buy Cummins Parts and Service Manuals, Training Guides, or Tools go to our website at <https://store.cummins.com>

Before a claim for excessive oil consumption will be considered, Owner must submit adequate documentation to show that consumption exceeds Cummins published standards.

Failures of belts and hoses supplied by Cummins are not covered beyond the first 500 hours or one year of operation, whichever occurs first.

Parts used to repair a Warrantable Failure may be new Cummins parts, Cummins approved rebuilt parts or repaired parts. Cummins is not responsible for failures resulting from the use of parts not approved by Cummins.

A new Cummins or Cummins approved rebuilt part used to repair a Warrantable Failure assumes the identity of the part it replaced and is entitled to the remaining Coverage hereunder.

For all A Series Applications, including Industrial, travel reimbursement for non-transportable equipment will be limited to 4.0 hours, \$0.25/mile and 250 miles maximum. Any costs beyond this limit are the customer's responsibility.

CUMMINS DOES NOT COVER WEAR OR WEAROUT OF COVERED PARTS.

CUMMINS IS NOT RESPONSIBLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.

THESE WARRANTIES SET FORTH HEREIN ARE THE SOLE WARRANTIES MADE BY CUMMINS IN REGARD TO THESE ENGINES. CUMMINS MAKES NO OTHER WARRANTIES, EXPRESS OR IMPLIED, OR OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Emission Warranty

Products Warranted

This Emission Warranty applies to new Engines marketed by Cummins that are used in the United States* and Canada in vehicles designed for Industrial Off-Highway use. This Warranty applies to Engines delivered to the ultimate purchaser on or after April 1, 1999, for Engines up to 750 horsepower and on or after January 1, 2000, for Engines 751 horsepower and over.

Coverage

To buy Cummins Parts and Service Manuals, Training Guides, or Tools go to our website at <https://store.cummins.com>

Cummins warrants to the ultimate purchaser and each subsequent purchaser that the Engine is designed, built and equipped so as to conform at the time of sale by Cummins with all U.S. Federal emission regulations applicable at the time of manufacture and that it is free from defects in workmanship or material which would cause it not to meet these regulations within the longer of the following periods: (A) **Five years or 3,000 hours of operation for industrial applications, five years or 3,500 hours of operation for industrial spark-ignited Engines (GTA855, G855, G5.9C, G8.3-C, GTA8.9E, QSK19G) and five years or 2,500 hours of operation for industrial spark-ignited Engines (GKTA19-GC), whichever occurs first, as measured from the date of delivery of the Engine to the ultimate purchaser, or (B) The Base Engine Warranty.

If the vehicle in which the Engine is installed is registered in the state of California, a separate California Emission Warranty also applies.

Limitations

Engines with an emissions certification listed below must be operated using only diesel fuel having no more than the corresponding maximum sulfur content. Failure to use the specified fuel as listed in the Cummins Fuel Bulletin #3379001 Table 1 (Cummins Inc. Required Diesel Fuel Specifications) can damage the Engine and aftertreatment system within a short period of time. This damage could cause the Engine to become inoperable and failures attributable to the use of incorrect fuels will be denied Warranty Coverage. Fuel specifications also need to comply with local fuel regulations (EN590 for Europe and ASTM D975 for North America) for Warranty eligibility.

Maximum sulfur levels by emissions certification level as listed on the Engine's dataplate are:

EPA 2007/2010/2013	max. 15 parts per million
EPA Tier 4 Interim / Final	max. 15 parts per million
EU Stage IIIB 2011	max. 15 parts per million
Euro 4/5	max. 50 parts per million
Euro 6	max. 10 parts per million

Failures, other than those resulting from defects in materials or workmanship, are not covered by this Warranty.

Cummins is not responsible for failures or damage resulting from what Cummins determines to be abuse or neglect, including, but not limited to: operation without adequate coolant or lubricants; overfueling; overspeeding; lack of maintenance of lubricating, cooling or intake systems; improper storage, starting, warm-up, run-in or shutdown practices; unauthorized modifications of the Engine. Cummins is also not responsible for failures caused by incorrect oil, fuel or diesel exhaust fluid or by water, dirt or other contaminants in the fuel, oil or diesel exhaust fluid.

Cummins is not responsible for non-Engine repairs, "downtime" expenses, cargo damage, fines, all business costs or other losses resulting from a Warrantable Failure.

CUMMINS IS NOT RESPONSIBLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.

* United States includes American Samoa, the Commonwealth of Northern Mariana Islands, Guam, Puerto Rico and the U.S. Virgin Islands.

** Emissions Warranty for BLPG Industrial Off-Highway Engines is 5 years / 3,500 hours.

All Engines International Industrial (Off-Highway) Coverage

Products Warranted

This Warranty applies to new Engines sold by Cummins and delivered to the first user on or after April 1, 1999, that are used in Industrial (Off-Highway) applications anywhere in the world where Cummins approved service is available, except the United States and Canada. Different Warranty Coverage is provided for Engines used in marine, generator drive, QSK95 T4 locomotive and certain defense applications.

Base Engine Warranty

This Warranty covers any failures of the Engine, under normal use and service, which result from a defect in material or factory workmanship (Warrantable Failure).

Coverage begins with the sale of the Engine by Cummins. Coverage continues for two years or 2,000 hours of operation, whichever occurs first, from the date of delivery of the Engine to the first user, or from the date the unit is first leased, rented or loaned, or when the Engine has been operated for 50 hours, whichever occurs first. If the 2,000 hour limit is exceeded during the first year, Coverage continues until the end of the first year.

Engine aftertreatment components included in the Cummins Critical Parts List (CPL) and marked with a Cummins part number are covered under Base Engine Warranty.

Extended Major Components Warranty

The Extended Major Components Warranty covers Warrantable Failures of the Engine cylinder block, camshaft, crankshaft and connecting rods (Covered Parts).

Bushing and bearing failures are not covered.

This Coverage begins with the expiration of the Base Engine Warranty and ends three years or 10,000 hours (3,000 hours for A Series Engines) of operation, from the date of delivery of the Engine to the first user, or from the date the unit is first leased, rented or loaned, or when the Engine has been operated for 50 hours, whichever occurs first.

These Warranties are made to all Owners in the chain of distribution, and Coverage continues to all subsequent Owners until the end of the periods of Coverage.

Cummins Responsibilities

During The Base Engine Warranty

Cummins will pay for all parts and labor needed to repair the damage to the Engine resulting from a Warrantable Failure.

Alternators, starters, and fans ARE covered for the duration of the Base Engine Warranty on A Series and B3.3 Engines.

Alternators and starters are covered for the duration of the Base Engine Warranty on QSK23 Engines.

Cummins will pay for the lubricating oil, antifreeze, filter elements and other maintenance items that are not reusable due to a Warrantable Failure.

Cummins will pay reasonable costs for mechanics to travel to and from the equipment site, including meals, mileage and lodging, when the repair is performed at the site of the failure.

Cummins will pay reasonable labor costs for Engine removal and reinstallation when necessary to repair a Warrantable Failure.

During The Extended Major Components Warranty

Cummins will pay for the repair or, at its option, replacement of the defective Covered Part and any Covered Part damaged by a Warrantable Failure of the defective Covered Part.

Owner Responsibilities

During The Base Engine Warranty

Owner is responsible for the cost of lubricating oil, antifreeze, filter elements and other maintenance items replaced during Warranty repairs unless such items are not reusable due to the Warrantable Failure.

During The Extended Major Components Warranty

Owner is responsible for the cost of all labor needed to repair the Engine, including the labor to remove and reinstall the Engine. When Cummins elects to repair a part instead of replacing it, Owner is not responsible for the labor needed to repair the part.

Owner is responsible for the cost of all parts required for the repair except for the defective Covered Part and any Covered Part damaged by a Warrantable Failure of the defective Covered Part.

Owner is responsible for the cost of lubricating oil, antifreeze, filter elements and other maintenance items replaced during repair of a Warrantable Failure.

During The Base Engine Warranty And Extended Major Components Warranties

Owner is responsible for the operation and maintenance of the Engine as specified in the applicable Cummins Operation and Maintenance Manual. Owner is also responsible for providing proof that all recommended maintenance has been performed.

Before the expiration of the applicable Warranty, Owner must notify a Cummins distributor, authorized dealer or other repair location approved by Cummins of any Warrantable Failure and make the product available for repair by such facility. Service locations are listed in the Cummins Worldwide Service Locator at cummins.com.

Owner is responsible for communication expenses, meals, lodging and similar costs incurred as a result of a Warrantable Failure.

Owner is responsible for non-Engine repairs, "downtime" expenses, cargo damage, fines, all applicable taxes, all business costs and other losses resulting from a Warrantable Failure.

Limitations

Engines with an emissions certification listed below must be operated using only diesel fuel having no more than the corresponding maximum sulfur content. Failure to use the specified fuel as listed in the Cummins Fuel Bulletin #3379001 Table 1 (Cummins Inc. Required Diesel Fuel Specifications) can damage the Engine and aftertreatment system within a short period of time. This damage could cause the Engine to become inoperable and failures attributable to the use of incorrect fuels will be denied Warranty Coverage. Fuel specifications also need to comply with local fuel regulations (EN590 for Europe and ASTM D975 for North America) for Warranty eligibility.

To buy Cummins Parts and Service Manuals, Training Guides, or Tools go to our website at <https://store.cummins.com>

Maximum sulfur levels by emissions certification level as listed on the Engine's dataplate are:

EPA 2007/2010/2013	max. 15 parts per million
EPA Tier 4 Interim / Final	max. 15 parts per million
EU Stage IIIB 2011	max. 15 parts per million
Euro 4/5	max. 50 parts per million
Euro 6	max. 10 parts per million

Cummins is not responsible for failures or damage resulting from what Cummins determines to be abuse or neglect, including, but not limited to: operation without adequate coolants or lubricants; overfueling; overspeeding; lack of maintenance of lubricating, cooling or intake systems; improper storage, starting, warm-up, run-in or shutdown practices; unauthorized modifications of the Engine. Cummins is also not responsible for failures caused by incorrect oil, fuel or diesel exhaust fluid or by water, dirt or other contaminants in the fuel, oil or diesel exhaust fluid.

For power units and fire pumps (package units) the Warranty applies to accessories, except for clutches and filters supplied by Cummins which bear the name of another company.

Cummins Compusave units are covered by a separate Warranty.

Before a claim for excessive oil consumption will be considered, Owner must submit adequate documentation to show that consumption exceeds Cummins published standards.

Failures of belts and hoses supplied by Cummins are not covered beyond the first 500 hours or one year of operation, whichever occurs first.

Parts used to repair a Warrantable Failure may be new Cummins parts, Cummins approved rebuilt parts or repaired parts. Cummins is not responsible for failures resulting from the use of parts not approved by Cummins.

A new Cummins or Cummins approved rebuilt part used to repair a Warrantable Failure assumes the identity of the part it replaced and is entitled to the remaining Coverage hereunder.

For all A Series Applications, including Industrial, travel reimbursement for non-transportable equipment will be limited to 4.0 hours, \$0.25/mile and 250 miles maximum. Any costs beyond this limit are the customer's responsibility.

CUMMINS DOES NOT COVER WEAR OR WEAROUT OF COVERED PARTS.

CUMMINS IS NOT RESPONSIBLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.

THESE WARRANTIES SET FORTH HEREIN ARE THE SOLE WARRANTIES MADE BY CUMMINS IN REGARD TO THESE ENGINES. CUMMINS MAKES NO OTHER WARRANTIES, EXPRESS OR IMPLIED, OR OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

In the case of consumer sales, in some countries, the Owner has statutory rights which cannot be affected or limited by the terms of this Warranty.

Nothing in this Warranty excludes or restricts any contractual rights the Owner may have against third parties.

California Emission Control Warranty Statement, Off-Highway Your Warranty Rights and Obligations

The California Air Resources Board and Cummins Inc., are pleased to explain the emission control system warranty on your 2015 and 2016 model year engine. In California, new heavy-duty off-road diesel engines must be designed, built and equipped to meet the State's stringent anti-smog standards. Cummins Inc. must warrant the emission control system on your engine for the periods of time listed below provided there has been no abuse, neglect or improper maintenance of your engine. Your emission control system may include parts such as the fuel injection system and the air induction system. Also included may be hoses, belts, connectors and other emission-related assemblies.

Where a warrantable condition exists, Cummins Inc. will repair your heavy-duty off-road diesel engine at no cost to you including diagnosis, parts and labor.

Manufacturer's Warranty Coverage

This warranty coverage for 2015 and 2016 model year heavy-duty off-road engines is provided for 5 years or 3,000 hours of engine operation, whichever first occurs from the date of delivery of the engine to the first user. If any emission-related part on your engine is defective, the part will be repaired or replaced by Cummins Inc.

Owner's Warranty Responsibilities

As the engine owner, you are responsible for the performance of the required maintenance listed in your Cummins® Owners and/or Operation and Maintenance Manual. Cummins Inc. recommends that you retain all receipts covering maintenance on your engine, but Cummins Inc. cannot deny warranty solely for the lack of receipts or for your failure to substantiate the performance of all scheduled maintenance.

You are responsible for presenting your engine to a Cummins® dealer as soon as a problem exists. The warranty repairs should be completed in a reasonable amount of time, not to exceed 30 days.

As an engine owner, you should also be aware that Cummins Inc. may deny you warranty coverage if your engine or a part has failed due to abuse, neglect, improper maintenance or unapproved modifications.

If you have any questions regarding your warranty rights and responsibilities, you should contact Cummins® Customer Relation Department at 1-800-343-7357 or the California Air Resources Board at 9528 Telstar Avenue, El Monte, CA 91731.

A warranted part which is scheduled for replacement as required maintenance is warranted up to the first schedule replacement point.

Prior to the expiration of the applicable warranty, Owner must give notice of any warranted emission control failure to a Cummins® distributor, authorized dealer or other repair location approved by Cummins Inc. and deliver the engine to such facility for repair. Repair locations are listed in Cummins® United States and Canada Service Directory.

Owner is responsible for incidental costs such as: communication expenses, meals, lodging incurred by Owner or employees of Owner as a result of a Warrantable Condition.

Owner is responsible for "downtime" expenses, cargo damage, fines, all applicable taxes, all business costs, and other losses resulting from a Warrantable Condition.

Coverage

This emission control system warranty applies only to the following A series, B3.3, B3.9, B4.5s, B5.9, B6.7s, QSB3.9-30, QSB4.5-30, QSB5.9-30, QSB5.9-44, C8.3, QSC8.3, QSF2.8, QSF3.8, and QSL9 emission control parts:

EPA Diesel

Aftertreatment System

Component

Aftertreatment Electrical Connections
Aftertreatment Fuel Drain Valve
Aftertreatment Fuel Injector/Regulator
Aftertreatment Fuel Pressure Sensor
Aftertreatment Fuel Shut-Off Valve
Aftertreatment Injector Manifold
Aftertreatment Inlet and Outlet Modules
Aftertreatment Temperature Interface Module
Aftertreatment Temperature Sensors

Aftertreatment System (cont')

Component

Decomposition Tube

Base Engine System

Component

Camshaft
Camshaft Injector Lobe
Camshaft Valve Lobe
Coolant Temperature Sensor
Crankcase Breather
Engine Oil Pressure Sensor
Engine Speed, Position Sensor, Cam Position Sensor
Exhaust Valve
Static Cam Timing

EGR System

Component

EGR Cooler

EPA Diesel

DEF Dosing Controller (DCU)

DEF Dosing Unit (Pump)

DEF Dosing Valve

Diesel Oxidation Catalyst

Diesel Particulate Filter (except for ash maintenance)

Diesel Particulate Filter Differential Pressure Sensor

NH3 Sensor

NOx Sensors

SCR Catalyst

Air Handling

Component

Barometric Air Pressure Sensor

Exhaust Gas Pressure Sensor

Exhaust Manifold

Grid Heater

Humidity Sensor

Intake Air Throttle Actuator

EGR Differential Pressure Sensor

EGR Mixer/Venturi

EGR Temperature Sensor

EGR Valve

Electronic Control System

Component

Engine Control Module

Wiring Harness Circuits Connected at Both Ends to
Emissions Warrantable Components

Engine Control Module Calibration

Engine Control Module Calibration

EPA Diesel

Intake Manifold

Intake Manifold Air Temperature Sensor

Air Handling (cont')

Component

Intake Manifold Temperature/Pressure Sensor

Turbocharger Actuator

Turbocharger Assembly

Turbocharger Compressor Inlet Air Temperature Sensor

Turbocharger Speed Sensor

Ignition System

Component

Ignition Coils

Ignition Control Module

Fuel System

Component

Fuel Control Valve

Fuel Lines

Fuel Pressure Sensor

Fuel Pump

Fueling/Timing Actuators

Fuel System (cont')

Component

Injector

Secondary Fuel Pressure/Temperature Sensor

California Emission Control System Warranty Replacement Parts

Cummins Inc. recommends that any service parts used for maintenance, repair or replacement of emission control systems be new, genuine Cummins® or Cummins® approved rebuilt parts and assemblies, and that the engine be serviced by a Cummins® distributor, authorized dealer or the repair location approved by Cummins Inc. The owner may elect to have maintenance, replacement or repair of the emission control parts performed by a facility other than a Cummins® distributor, an authorized dealer or a repair location approved by Cummins Inc., and may elect to use parts other than new genuine Cummins® or Cummins® approved rebuilt parts and assemblies for such maintenance, replacement or repair; however, the cost of such service or parts and subsequent failures resulting from such service or parts will not be covered under this emission control system warranty, except for Emergency Repairs as described below.

Cummins Responsibilities

The warranty coverage begins when the engine is delivered to the ultimate purchaser.

Repairs and service will be performed by any Cummins® distributor, authorized dealer or other repair locations approved by Cummins Inc. using new, genuine Cummins® or Cummins® approved rebuilt parts and assemblies. Cummins Inc. will repair any of the emission control parts found by Cummins Inc. to be defective without charge for parts or labor (including diagnosis which results in determination that there has been a failure of a warranted emission control part).

Emergency Repairs

In the case of an emergency where a Cummins® distributor, authorized dealer, or other repair location approved by Cummins Inc. is not available, repairs may be performed by any available repair location or by any individual using any replacement parts. A part not being available within 30 days or a repair not being complete within 30 days constitutes an emergency. Cummins Inc. will reimburse the Owner for expenses (including diagnosis), not to exceed the manufacturer's suggested retail price for all warranted parts replaced and labor charges based on the manufacturer's recommended time allowance for the warranty repair and the geographically appropriate hourly labor

To buy Cummins Parts and Service Manuals, Training Guides, or Tools go to our website at <https://store.cummins.com>

rate. Replaced parts and paid invoices must be presented at a Cummins® authorized repair facility as a condition of reimbursement for emergency repairs not performed by a Cummins® distributor, authorized dealer, or other repair location approved by Cummins Inc.

Warranty Limitations

Cummins Inc. is not responsible for failures or damage resulting from what Cummins Inc. determines to be abuse or neglect, including, but not limited to: operation without adequate coolants or lubricants; overfueling; overspeeding; lack of maintenance of cooling, lubricating or intake systems; improper storage, starting, warm-up, run-in or shutdown practices; unauthorized modifications to the engine. Cummins Inc. is also not responsible for failures caused by incorrect oil, fuel, or coolant or by water, dirt or other contaminants in the fuel or oil or contaminants in the coolant.

Cummins Inc. is not responsible for failures resulting from improper repair or the use of parts which are not genuine Cummins® or Cummins® approved parts.

Cummins Inc. is not responsible for the material and labor costs of emission control parts and assemblies replaced during Scheduled Maintenance of the engine as specified in Cummins® Owners and/or Operation and Maintenance Manuals.

THIS WARRANTY, TOGETHER WITH THE EXPRESS COMMERCIAL WARRANTIES ARE THE SOLE WARRANTIES MADE BY CUMMINS INC. THERE ARE NO OTHER WARRANTIES, EXPRESS OR IMPLIED, OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

Notes

This image shows a blank sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

Acronyms and Abbreviations	i-37
General Information.....	i-37
Additional Service Literature	L-1
General Information.....	L-1
All Engines International Industrial (Off-Highway)	W-8
All Engines United States And Canada Industrial (Off-Highway)	W-1
California Emission Control System Warranty	W-18
California Emission Control Warranty Statement, Off-Highway	W-13
Cold Weather Starting	1-10
General Information.....	1-10
Using Starting Aids.....	1-11
Coolant Recommendations and Specifications	V-15
Cooling System Sealing Additives.....	V-19
Cooling System Soluble Oils.....	V-19
Fully Formulated Coolant/Antifreeze.....	V-15
Cooling System	V-3
Specifications.....	V-3
.....	W-15
Cummins Customized Parts Catalog	L-3
General Information.....	L-3
Ordering the Customized Parts Catalog.....	L-3
Cummins® Product Technology	E-14
General Information.....	E-14
Cummins® Service Engine Model Identification	E-8
General Information.....	E-8
Cummins® Fleetguard® Filter Specifications	V-4
General Information.....	V-4
Driving Techniques	1-16
General Information.....	1-16
Electromagnetic Interference (EMI)	1-33
General Information.....	1-33
System EMI Radiation Levels.....	1-34
System EMI Susceptibility.....	1-33
Electronic Controlled Fuel System	1-17
Diagnostic Fault Codes.....	1-23

Engine Protection System.....	1-31
Fault Code Snapshot Data.....	1-32
General Information.....	1-17
INSITE™ Electronic Service Tool Description.....	1-32
INSITE™ Electronic Service Tool Monitor Mode.....	1-33
Engine Identification	E-1
Cummins® Engine Nomenclature.....	E-4
Engine Control Module Dataplate.....	E-5
Engine Dataplate.....	E-1
Exhaust System.....	E-7
Fuel Injection Pump Dataplate.....	E-4
Turbocharger Dataplate.....	E-6
Engine Operating Range	1-15
General Information.....	1-15
Engine Shutdown	1-17
General Information.....	1-17
Fuel Recommendations and Specifications	V-6
Fuel Recommendations.....	V-6
General Engine	V-1
Specifications.....	V-1
General Safety Instructions	i-9
Aftertreatment.....	i-22
Best Practices.....	i-9
Common Hazards.....	i-29
Common Substances.....	i-24
Electrical Components.....	i-28
Fuels.....	i-14
Hazardous Substances.....	i-26
Important Safety Notice.....	i-9
Job Safety Assessment.....	i-31
Personal Protective Equipment (PPE).....	i-11
Power Generation Applications.....	i-21
Work Environment.....	i-9
Illustrations	i-8
General Information.....	i-8

Index

Page X-2

Lubricating Oil Recommendations and Specifications	V-9
AfterMarket Oil Additive Usage.....	V-14
General Information.....	V-9
New Engine Break-in Oils.....	V-14
Lubricating Oil System	V-2
Specifications.....	V-2
Maintenance Guidelines - Overview	2-1
General Information.....	2-1
Maintenance Record Form	2-5
Maintenance Data.....	2-5
Maintenance Schedule	2-2
General Information.....	2-2
Normal Starting Procedure	1-3
Jump Starting.....	1-8
Starting.....	1-3
Operating Instructions - Overview	1-1
General Information.....	1-1
Operating the Engine	1-12
Ambient Temperature.....	1-13
Normal.....	1-12
Winterfronts and Shutters.....	1-14
Service Literature Ordering Location	L-2
Contact Information.....	L-2
Starting Procedure After Extended Shutdown or Oil Change	1-11
General Information.....	1-11
Symbols	i-1
General Information.....	i-1
Unique Operating Characteristics of an Engine with a Direct Flow™ Air Cleaner	1-35
Clean and Inspect for Reuse.....	1-38
General Information.....	1-35
Maintenance Service.....	1-37

CALIFORNIA
Proposition 65 Warning

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

Cummins Inc.

Box 3005

Columbus, Indiana, U.S.A., 47202

Registered Office

Cummins Ltd.

49 - 51 Gresham Road,

Staines,

Middlesex TW18 2BD,

England

Registration 573951 England

Copyright© 2016

Cummins Inc.

Cummins Customer Assistance Center

1-800-DIESELS™ (1-800-343-7357)

APPLICABLE ONLY IN U.S.A. AND CANADA

Bulletin 4358559

Printed in U.S.A. 25-FEBRUARY-2016

