



Doosan Infracore

## COMPRESSOR TRAINING

Viking Range



## PRODUCT RANGE

- 25/300 - 25 bar (365 psi), 30m<sup>3</sup>/min (1070 cfm)
- 25/330 - 25 bar (365 psi), 33m<sup>3</sup>/min (1170 cfm)



Company Confidential

## SUMMARY

- The compressor can be divided in the following subsystems
  - [ENGINE and AIREND](#)
  - [LUBRICATION & COOLING SYSTEM](#)
  - [SEPARATION SYSTEM](#)
  - [AIR FLOW REGULATION SYSTEM](#)
  - [INSTRUMENT/CONTROL PANEL](#)
  - [ELECTRICAL WIRING](#)
- Troubleshooting



Company Confidential

## ENGINE CAT

- CAT C15
- 6 cylinders
- 15.2L displacement
- Power ratings @ 1800 RPM:
  - 354kW (475hp) – 25/300
  - 403kW (540hp) – 25/330
- Turbocharged and after-cooled
- MEUI mechanically actuated, electronically controlled unit injection
- Tier III certified
- 24 Volt Electrics



Company Confidential

## AIREND


- Casing houses two screw-type rotors mounted on ball and roller bearings.
- Diesel engine drives the male rotor through heavy-duty coupling.
- Mechanical seal used to seal the shaft.
- Gear sets allow to change rotor speed and therefore air output.
- Two different airends used on Viking range:
  - Single stage on 10/370, 10/455
  - Two stages on 25/300, 25/330



Company Confidential

## HR2,5 HIGH PRESSURE AIREND

- 2-stage airend
- Oil pump driven by second stage

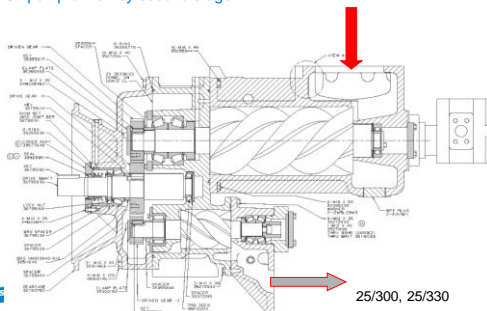

25/300, 25/330

## HR2,5 HIGH PRESSURE AIREND



**DOOSAN** Doosan Infracore  
Portable Power

Company Confidential


## COMPRESSOR OIL SYSTEM

- Functions of the oil system:
  - Lubricating the rotors, airend bearings and mechanical seals
  - Sealing the clearances between the airend rotors
  - Cooling of the airend. Heat is generated during air compression.
- The oil flows due to the air pressure. Only the two-stage airend uses an oil pump.

**DOOSAN** Doosan Infracore  
Portable Power

Company Confidential


## COMPRESSOR OIL CIRCUIT

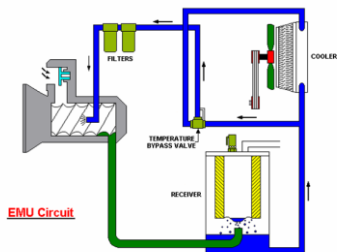

**DOOSAN** Doosan Infracore  
Portable Power

Company Confidential

## COMPRESSOR OIL CIRCUIT

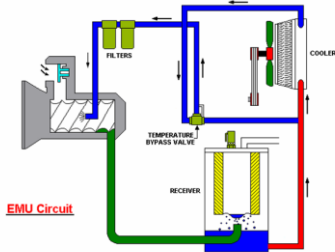

**DOOSAN** Doosan Inhae  
Portable Power

Company Confidential

## SEPARATOR/RECEIVER TANK

- Stores the compressed air and oil.
- Pressure in the tank is forcing the oil through the system.
- An oil level indicator is provided.
- Assists in the oil cooling with fresh air passing around.



**DOOSAN** Doosan Inhae  
Portable Power

Company Confidential

## OIL TEMP. BYPASS VALVE

- Allows to regulate the oil temperature around 85°C.
- Keeping the oil hot enough allows to reduce the water condensation in the compressor.




**Tip:** never remove the thermostat as the oil would flow through the least restriction path and cooling would be impaired!

**DOOSAN** Doosan Inhae  
Portable Power

Company Confidential

## OIL TEMP. BYPASS VALVE

- Cold oil
- Hot oil

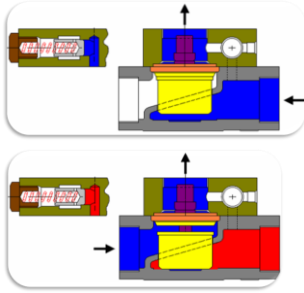

**DOOSAN** Doosan Infracore  
Portable Power

Company Confidential

---

---

---

---


---

---

---

---

## COOLER PACKAGE

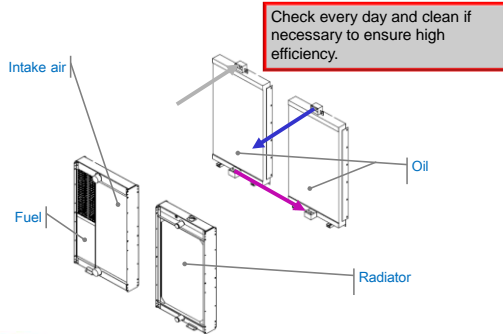

**DOOSAN** Doosan Infracore  
Portable Power

Company Confidential

---

---

---

---

---

---

---

---

## COOLING FAN

- The fan is a pusher type, fresh air flows around the engine.
- Make sure the compressor doors are closed during operation to prevent overheating!



**DOOSAN** Doosan Infracore  
Portable Power

Company Confidential

---

---

---

---

---

---

---

---

## OIL FILTERS

- Provide 10 microns filtration.
- Spring-loaded bypass valve is integrated in filter head.




---

---

---

---

---

---

---

---

## SEPARATION SYSTEM

- Functions of the separation system:
  - Removing the oil contained in the compressed air
- Most of the oil is removed from the air through a specially shaped baffle in the separator tank.
- The remaining oil is removed by the separator element.

---

---

---

---


---

---

---

---

## SEPARATION SCHEMATIC

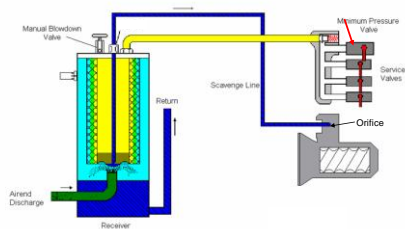


---

---

---

---


---

---

---

---

## SEPARATOR/RECEIVER TANK

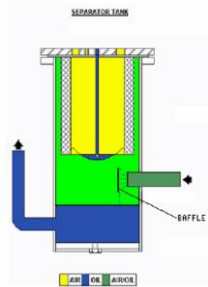

**DOOSAN** Diesel Infrasonic Portable Power

Company Confidential

## SCAVENGE DROP TUBES

- The scavenge tube removes the oil trapped by the separator element.
- It extends up to approximately 6 to 12mm over the element's bottom.



Tip: Always check scavenge tube length when replacing separator element




**DOOSAN** Diesel Infrasonic Portable Power

Company Confidential

## SCAVENGE LINE

- Returns to air inlet.
- Orifice is located in the elbow connector.
- It is designed to scavenge the oil while limiting the loss of air flow.

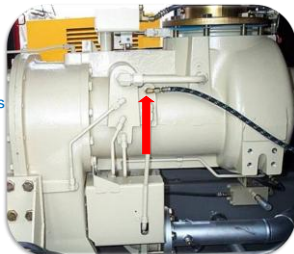

Tip: Look for clogged scavenge lines in case of oil carry over!

**DOOSAN** Diesel Infrasonic Portable Power

Company Confidential

## SAFETY VALVE

- Valve is on the oil side of the element where pressure is maximum when the separator element is blocked.
- Sensor allows to detect if the valve opens



**DOOSAN** Doosan Inhae  
Portable Power

Company Confidential

---

---

---

---

---

---

---

---

## MINIMUM PRESSURE VALVE

- Maintains a min. pressure (~10bar) in the receiver to:
  - keep the oil flowing.
  - limit pressure drop across the separator.
- Continuous operation at min pressure results in oil carry over due to insufficient scavenge flow.



**DOOSAN** Doosan Inhae  
Portable Power

Company Confidential

---

---

---

---

---


---

---

---

## SEPARATOR ELEMENT

Tip: Don't remove the earth staple nor use sealant as this could lead to the separator getting electro statically charged!

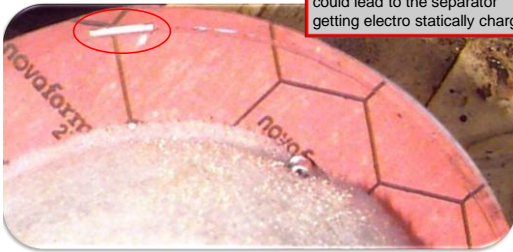

**DOOSAN** Doosan Inhae  
Portable Power

Company Confidential

---

---

---

---

---

---

---

---



## AIR REGULATION SYSTEM

- The air regulation system continuously adjusts the production of compressed air to the consumption by controlling the engine speed and unloader valve.

– 2 stages : 25/300 25/330




Company Confidential

## AIR REGULATION SYSTEM

- The unloader valve is pneumatically controlled through the pressure regulator.
- As engine is electronically controlled, units do not have a pneumatic speed control cylinder.
- Engine speed is controlled by the engine ECM. The Wedge controller monitors regulation system pressure and separator tank pressure, measured by pressure transducers, PT2 and PT1. It then computes an engine speed to maintain discharge pressure. This throttle setting is sent to the engine ECM.




Company Confidential

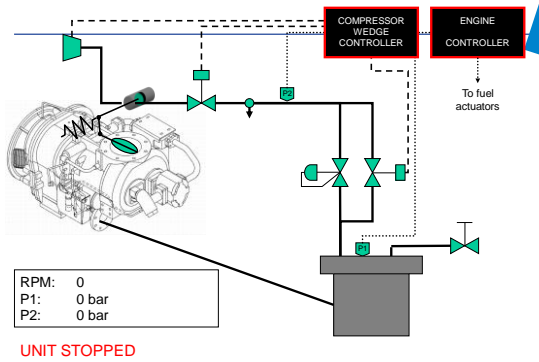

Company Confidential



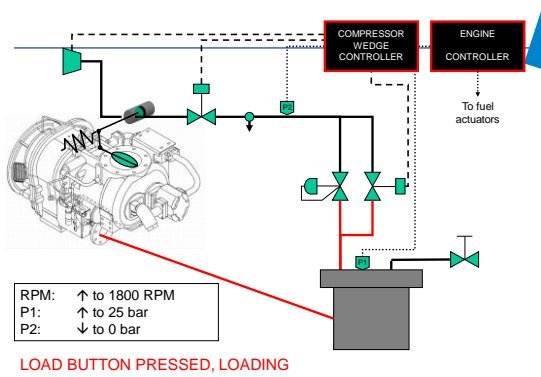

DOOSAN Infracore Portable Power

Company Confidential

---

---

---


---

---

---

---

---

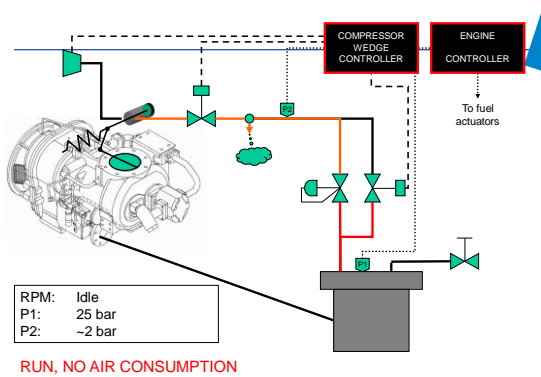

DOOSAN Infracore Portable Power

Company Confidential

---

---

---


---

---

---

---

---

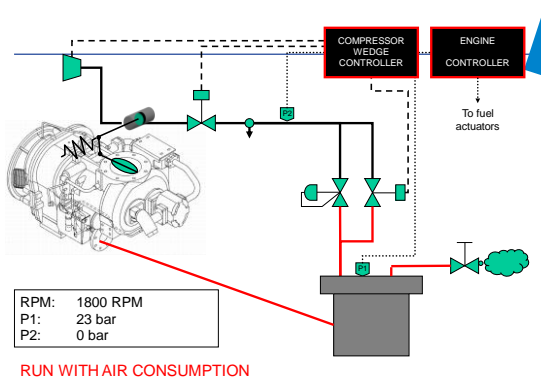

DOOSAN Infracore Portable Power

Company Confidential

---

---

---



---

---

---


---

---

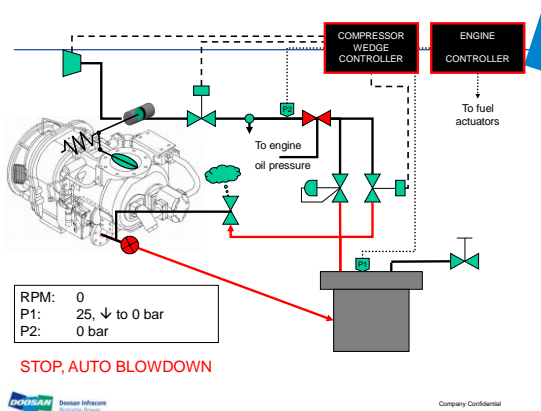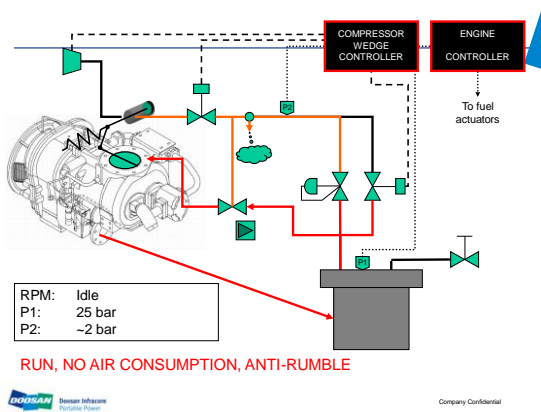


### AUTO BLOWDOWN CIRCUIT (2-stages)

- On 2-stage unloader with the butterfly valve the check valve is located on the discharge. Therefore no pressure can build up during shut down.
- Auto blowdown is done with normally open valve that is kept closed by pilot line during operation.

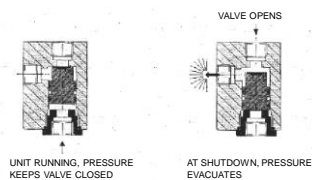

## AUTO BLOWDOWN CIRCUIT (2-stages)

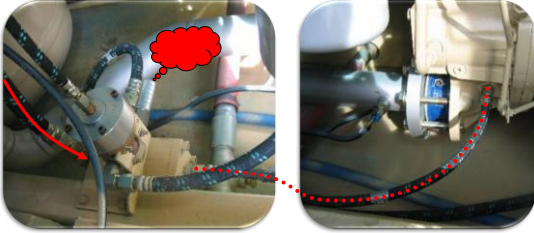

**DOOSAN** Doosan Infracore  
Portable Power

Company Confidential

---

---

---

---

---

---

---

---

## MANUAL BLOWDOWN VALVE

- Can be used as a back-up for the auto blow down valve.
- Must be closed before operation, if not the air regulation system will not work properly.



**DOOSAN** Doosan Infracore  
Portable Power

Company Confidential

---

---

---

---

---

---

---

---

## UNLOADER COMPRESSOR

- Pressurise the unloader valve to close it before starting.
- Stops when glow indicator lights off.



**DOOSAN** Doosan Infracore  
Portable Power

Company Confidential

---

---

---

---

---

---

---

---

## CAPTIVE SOLENOID

- Closed below 1450 RPM.
- Allows to keep the unloader valve closed to reduce load on the engine during start-up.



Company Confidential

---

---

---

---

---

---

---

---

## ORIFICE

- Continuously bleeds air from the regulation circuit.
- If blocked, unloader valve would never be able to open after start up and airend low oil pressure warning would register.
- Size of orifice greatly affects regulation characteristic and should not be adjusted.
- Located near PT2.



Company Confidential

---

---

---

---

---


---

---

---

## WEDGE CONTROLLER

- The WEDGE is located on the rear of the instrument panel.

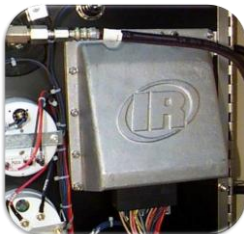

Company Confidential

---

---

---

---

---

---

---

---

## WEDGE CONTROLLER

- WEDGE Controller is the heart of the machine monitor and control system.
- It is an Intel micro-controller based unit with analog and digital inputs and outputs.
- One of the function is to monitor regulator and discharge pressure, and varies engine speed to maintain air pressure at desired set point.



Company Confidential

---

---

---

---

---

---

---

---

## LOAD SOLENOID

- Situated on back of control panel or near unloader valve.



Company Confidential

---

---

---

---

---

---

---

---

## LOAD BUTTON



- The load button is a momentary action switch.
- It operates the load solenoid adjacent to the pressure regulator.
- Prior to being pressed the solenoid allows the air to by-pass the regulator.



Company Confidential

---

---

---

---

---


---

---

---

## REGULATOR VALVE - OPERATION

- Ball valve actuated by tank pressure and held closed by a spring.
- Controlled pressure preset in factory, can be adjusted by means of adjusting screw.

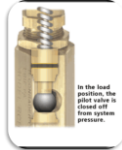

**DOOSAN** Doosan Infracore  
Portable Power

Company Confidential

---

---

---

---

---

---

---

---

## REGULATOR VALVE

- Situated on back of control panel or near unloader valve.
- Red tape is a resistor that allows defrosting in case of low temperature.



**DOOSAN** Doosan Infracore  
Portable Power

Company Confidential

---

---

---

---

---


---

---

---

## UNLOADER VALVE (two stages)

- Butterfly-type valve, normally open.
- Actuated by a piston cylinder, pressure on piston makes the valve close.
- Check valve situated at airtank outlet.

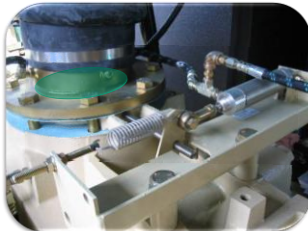

**DOOSAN** Doosan Infracore  
Portable Power

Company Confidential

---

---

---

---

---

---

---

---



## PRESSURE TRANSDUCER, PT1



**DOOSAN** Doosan Inhae  
Portable Power

Company Confidential

---

---

---

---

---

---

---

## PRESSURE TRANSDUCER, PT2



**DOOSAN** Doosan Inhae  
Portable Power

Company Confidential

---

---

---

---


---

---

---

## ELECTRONIC FUEL SYSTEM

- CAT MEUI Injector
- Solenoid controlled by ECM

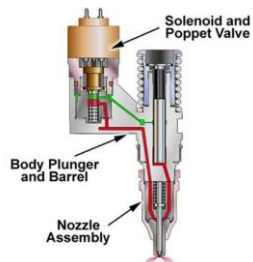

**DOOSAN** Doosan Inhae  
Portable Power

Company Confidential

---

---

---

---


---

---

---

## ANTI RUMBLE VALVE

- Allows some compressed air from the receiver to return to the inlet at idle.
- This prevents a too great vacuum at the inlet and possible rumble.

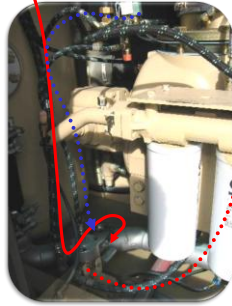

**DOOSAN** Doosan Infracore  
Portable Power

Company Confidential

## INSTRUMENT/CONTROL PANEL


- Interface between user and compressor.
- Provides control, monitoring and diagnostics functions.



**DOOSAN** Doosan Infracore  
Portable Power

Company Confidential


## INSTRUMENT/CONTROL PANEL

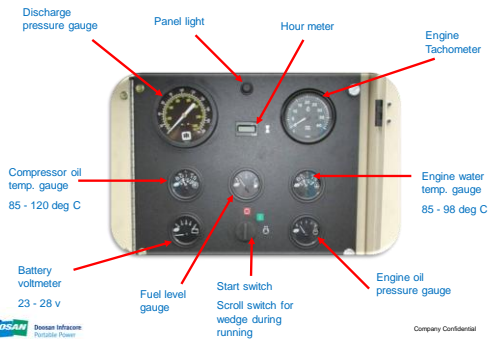

**DOOSAN** Doosan Infracore  
Portable Power

Company Confidential

## INSTRUMENT/CONTROL PANEL

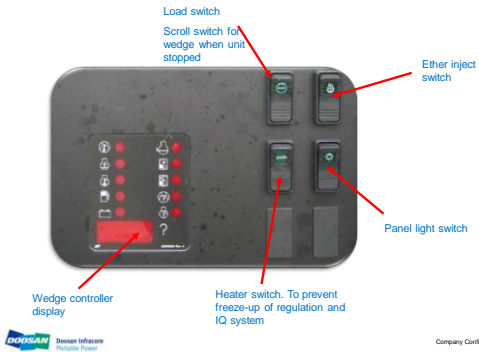


## WEDGE CONTROLLER

- First function of the WEDGE is to scan all analog and digital inputs at a fixed interval. The inputs are scanned every 50 milliseconds. The values are then compared against min. and max. values and an ALERT or SHUTDOWN is issued.
- Second function is to monitor discharge pressure, and varies engine speed to maintain air pressure at desired set point.
- Third function to retrieve diagnostic info from the engine.



## INSTRUMENT/CONTROL PANEL

1. HIGH COMPRESSOR TEMP.  
Indicates shutdown due to high comp. Temp.
2. LOW ENGINE OIL PRESSURE.  
Indicates shutdown due to low oil P.
3. HIGH ENGINE COOLANT TEMP.  
Indicates shutdown due to high water Temp.
4. LOW FUEL LEVEL.  
Indicates shutdown due to low fuel level.
5. LOW BATTERY VOLTS.  
Indicates battery/charging system needs service.

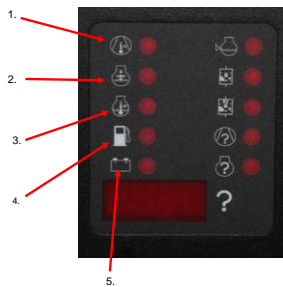

## INSTRUMENT/CONTROL PANEL



**CUMMINS** Diesel Inference  
Portable Power

Company Confidential

1. LOW ENGINE COOLANT LEVEL.  
Alarm indicator lamp. Indicates coolant needs service.
2. RESTRICTED AIR FILTER.  
Alarm indicator. Indicates eng/comp air filter need service.
3. RESTRICTED IQ FILTERS.  
Shutdown indicator (if equipped)
4. COMPRESSOR MALFUNCTION.  
Indicates shutdown due to compressor system fault. Refer to fault code list.
5. ENGINE MALFUNCTION.  
Engine fault. Refer to engine fault codes.
6. FAULT CODE & DIAGNOSTICS DISPLAY.  
Refer to fault code and parameters lists.

## CPRSR MALFUNCTION LIGHT

- 2-digits codes
- Extract of wedge fault code reference v1.7



### ALERT

### SHUTDOWN

	CODE	LIGHT (BLINKS)	Machine ID	CODE	LIGHT (STEADY)	DELAY (sec)	Machine ID
Engine Speed < Min. RPM				1	CPRSR Mal	30	All
Engine Speed > Max. RPM				2	CPRSR Mal	30	All
Engine Crank Time Exceeded				3	CPRSR Mal	0	All
Engine Oil Temperature > 252 deg. F	5	CPRSR Mal	0-5				
Intake Manifold Temperature > 180 deg. F	6	CPRSR Mal	0-7				
Water In Fuel	8	CPRSR Mal	5/6				
Engine Not Responding to Throttle Cmd.	10	CPRSR Mal	All				
Too Many Start Attempts during Autostart				11	CPRSR Mal	0	All

Note: CAN derived data

**CUMMINS** Diesel Inference  
Portable Power

Company Confidential

## ENGINE MALFUNCTION LIGHT

- 3,4-digits codes
- Extract of Cummins engine fault code reference table



Displayed	Code Definition
111	Engine Control Module - Critical Internal Failure
115	Engine Speed/Position Sensor Circuit - Lost Both of Two Signals
122	Intake Manifold Pressure Sensor Circuit - Voltage Above Normal, or Shorted High
123	Intake Manifold Pressure Sensor Circuit - Voltage Below Normal, or Shorted Low
135	Engine Oil Pressure Sensor Circuit - Voltage Above Normal, or Shorted High
141	Engine Oil Pressure Sensor Circuit - Voltage Below Normal, or Shorted Low
143	Engine Oil Pressure Low - Warning
144	Engine Coolant Temperature Sensor Circuit - Voltage Above Normal, or Shorted High
145	Engine Coolant Temperature Sensor Circuit - Voltage Below Normal, or Shorted Low

**CUMMINS** Diesel Inference  
Portable Power

Company Confidential

## DEDICATED LIGHTS

- No code
- Light state table, v1.7

Note: CAN derived data



ALERT			SHUTDOWN		
CODE	Machine ID	Light (BLINKS)	CODE	Machine ID	Light (STEADY)
Low Fuel Level		Fuel Level	0-6	Fuel Level	3
Air Filter Restriction		Solid Filter	All		
Low Battery Voltage		Battery Charging Condition	All		
Engine Oil Pressure < 18 PSI		Low Engine Oil Pressure	All		
Low Coolant Level		Engine Coolant Level	6,1,3,6		
Engine Coolant Temp > + 215 deg. F		High Engine Temp	All		
Engine Coolant Temp > + 220 deg. F				High Engine Temp	10
IQ Filter Restriction				IQ Filter Restriction	3
High Discharge Temp. (RT2 > 247 deg. F)				High Comp. Temp.	3

DEERE

Portable Power

## WEDGE DISPLAY

- Accessed by toggling:
  - "Service Switch" if machine is stopped
  - "Start" key switch if machine is running
- Number appears first and after three seconds parameter will be displayed.

Number	Parameter	Comments
2	RPM	F/W sensor
3	RPM Filtered	
4	Reg system pressure	
5	Sep tank pressure	
6	Discharge temperature	
7	Sep tank temperature	
8	Throttle output	(Hz)
9	Machine type	**
10	Engine coolant temp	from CAN
11	Engine oil temp	from CAN
12	Engine oil pressure	from CAN
13	Intake Manifold temp	from CAN
14	RPM	from CAN
15	Fault code list	Engine code
16	Throttle Position	
17	Boost Pressure	
18	Engine Hours	

\*\* 1 = CU XHP Viking, 2 = CAT EMU LP, 3 = CAT EMU HP, 4 = XHP CAT Viking, 5 = CU EMU LP, 6 = CU EMU HP, 7 = P426 Deere, 8 = Volvo

## WEDGE OPERATION – STARTUP

### Power "ON" at Control Panel:

- 1. Key switch signal (24VDC) supplied to engine controller by WEDGE controller
- 2. Frequency throttle signal ON
- 3. Unloader solenoid valve (L2) is closed (de-energized)
- 4. Start-up compressor is turned on for 10 seconds

### Engine Start-up:

- When the key is switched to the engine crank position:
  - 1. Unloader solenoid valve (L2) is closed (de-energized).
  - 2. Start compressor is turned on.
  - 3. Key switch signal (24VDC) is supplied to engine controller.
  - 4. K1 auxiliary start relay is energized.
  - 5. Run/Start solenoid valve (L1) is opened (energized).

Note: Start compressor remains on, run/start solenoid stays open and unloader solenoid valve stays closed for 10 seconds after the key is released if the engine does not start.

- When the engine speed reaches 600 RPM (engine start declared):

- 1. Engine speed is set to 1500 RPM.
- When the engine speed reaches 1450 RPM:
  - 1. Unloader solenoid valve is opened (energized). (L2)
  - 2. Start compressor is turned off.
  - 3. Run/Start solenoid valve is closed (de-energized). (L2)

- When the separator tank pressure reaches 50 psi:
  - 1. Run/Start solenoid valve is opened (energized). (L2)

- After 5 seconds:

- 1. Engine speed is set to idle (1200 RPM if air end discharge temperature is approximately 150 degrees F or if 4193BCAN is functioning). The engine coolant is 100 degrees F. Otherwise, the engine idle stays at 1500 RPM.

DEERE

Portable Power

Company Confidential

## WEDGE OPERATION – LOADING

### Loading:

- When the "Service Air" switch is pushed:
  - 1. Engine speed is set to 1800 RPM
- When engine speed reaches 1700 RPM:
  - 1. Run/Start solenoid valve is closed (de-energized).
- After 2 seconds and if the regulation system pressure is 4 psi or greater:
  - 1. Compressor pressure control is engaged.
- Operation slightly different for two stage machines with butterfly unloader, see Electronic Service Manual.



Company Confidential

## WEDGE MACHINE ID

### FOR WEDGE CONTROL SYSTEMS with V1.60 or Greater Software

- 1. Determine machine ID.
- 2. Turn power to the "ON" position. Machine must not be operating.
- 3. Toggle the switch until number "19" is reached. Push and hold the data input switch and the number "20" will appear. Continue to hold the switch. After 1 second, the current machine ID will appear in the display. Continue to hold for 9 more seconds and a blinking "--" will appear. Release the switch.
- 5. Toggle the data input switch, the display will show "0". Toggle the data input switch until the proper machine ID appears on the display, then stop the toggle sequence.
- 6. Wait until the controller performs a reset function (approximately 10 seconds). At reset, the controller display first goes blank, then all 10 annunciator LED's light, the 4-digit LED display shows all 8's, the display then shows the installed software version and finally the display goes blank and the engine oil pressure and alternator LED begin flashing. At this point the controller has stored the machine ID selected in step 5.
- 7. Check the setting.



Company Confidential

## WEDGE DISPLAY UNITS


- To determine which units the WEDGE has been configured for:
  - 1. With the machine power off (Key turned OFF)
  - 2. Press and hold the "Service Air" Switch
  - 3. Turn the key switch directly to the crank position.
  - 4. Hold these switch positions until the 4 digit LED display on the WEDGE goes blank.
  - 5. Release "Service Air" switch, release key switch to "ON".
  - 6. Units will be displayed for 2 seconds as:
    - 'PSI' for Deg F, PSI
    - 'Bar' for Deg C, Bars
    - 'H9C' for Deg C, Kg/cm2
    - 'HPA' for Deg C, KPa
- To change the units setting:
  - 1. With the WEDGE showing the current setting, press and release the "Service Air" switch until the desired setting appears on the display.
  - 2. Once it appears, do not release the "Service Air" switch. Hold it in the ON position until the WEDGE restarts. This will select units selection that was displayed.
  - 3. Release the "Service Air" switch. The compressor is ready to start.



Company Confidential


## PDA SERVICE TOOL

- Plugs on connector near wedge controller.
- Features:
  - Extract shut down / alarm history
  - Read controller fault codes
  - Read/capture SAE J1939 engine data
  - Download controller software

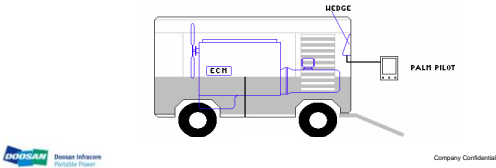

## ELECTRICAL WIRING

- [System Diagram](#)
- [General Machine Wiring Schematic](#)
- [Control Panel Wiring Schematic](#)

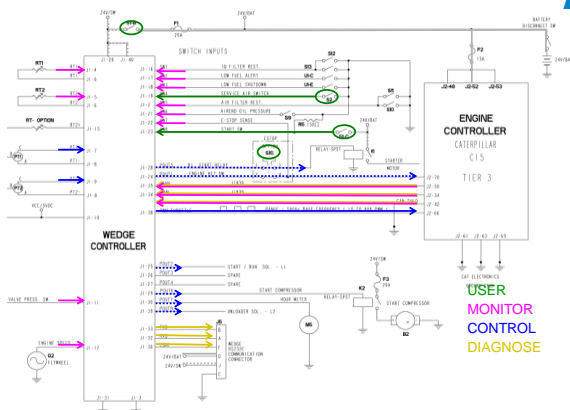

## MACHINE WIRING HARNESS

- Links the wedge controller to:
  - The engine controller
  - The compressor sensors
  - The actuators
  - The control panel
  - But NOT the engine sensors
- The **engine** sensors are link to the **engine** controller via the **engine** harness.



Company Confidential

---

---

---

---


---

---

---

---

## CONNECTOR P1 -WEDGE

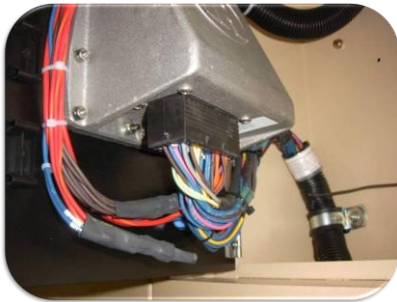

Company Confidential

---

---

---

---

---

---

---

---

## CONNECTOR P2 - ECM



Company Confidential

---

---

---

---

---

---

---

---



### CONNECTOR P4 - CONT. PANEL



Company Confidential

---

---

---

---

---

---

---

---

### CONNECTOR J6 - CAT DATALINK



Company Confidential

---

---

---

---


---

---

---

---

### SOLENOID VALVE L2 - UNLOADER

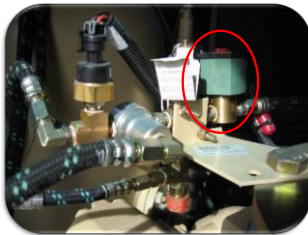

Company Confidential

---

---

---

---

---

---

---

---

### SOLENOID VALVE L1 – START/RUN



**DOOSAN** Doosan Infracore  
Portable Power

Company Confidential

---

---

---

---

---

---

---

---

### RELAY K1 – ENGINE STARTER



**DOOSAN** Doosan Infracore  
Portable Power

Company Confidential

---

---

---

---

---

---

---

---

### RELAY K2 – STARTUP COMPRESSOR

- The WEDGE connects to the startup compressor through relay K2. The startup compressor is activated at engine crank to provide air to close the inlet valve to the airend.
- Troubleshooting:
  - The start compressor activate signal is turned on at engine crank for 10 seconds. At all other times it is off.
  - First ensure the protection fuse is not blown.
  - Then verify the control signal from the WEDGE to the K2 relay is activated at engine crank. This can be measured at P1-29 at the WEDGE or at pin 2 (85) on K2 relay.

**DOOSAN** Doosan Infracore  
Portable Power

Company Confidential

---

---

---

---


---

---

---

---

## RELAY K2 – STARTUP COMP.

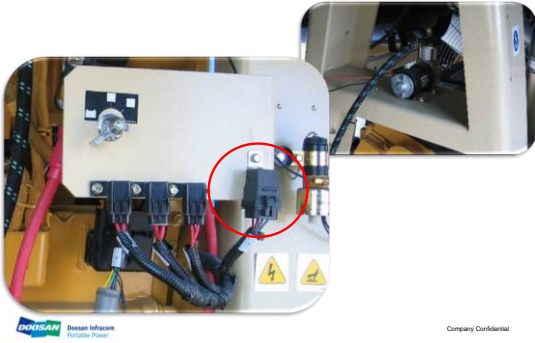

Company Confidential

---

---

---

---


---

---

---

---

## FUSES LOCATION

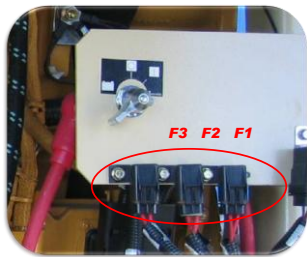

Company Confidential

---

---

---

---


---

---

---

---

## PRESSURE TRANSDUCERS PT1, PT2

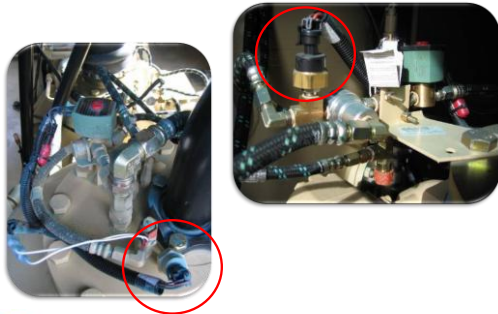

Company Confidential

---

---

---

---


---

---

---

---

### CAN TERMINATORS R4, R6

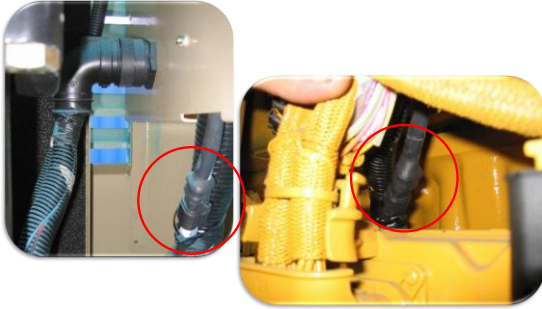

**DOOSAN** Doosan Infracore  
Portable Power

Company Confidential

---

---

---

---

---

---

---

---

### SWITCHES S10, S11 – AIR FILTER RESTRICTION



**DOOSAN** Doosan Infracore  
Portable Power

Company Confidential

---

---

---

---

---

---

---

---

### MAGNETIC SENSOR G2 – ENGINE SPEED



**DOOSAN** Doosan Infracore  
Portable Power

Company Confidential

---

---

---

---

---

---

---

---

### FUEL LEVEL SENDER



**DODDSAN** Diesel Infrasonic Portable Power

Company Confidential

---

---

---

---


---

---

---

---

### TEMP. SENSOR RT1 – SEPARATOR TANK

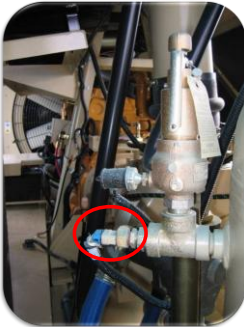

**DODDSAN** Diesel Infrasonic Portable Power

Company Confidential

---

---

---

---

---

---

---

---

### PRESSURE SWITCH S14 – SAFETY VALVE



**DODDSAN** Diesel Infrasonic Portable Power

Company Confidential

---

---

---

---

---

---

---

---

**TEMP. SENSORS RT2, RT3 - DISCHARGE TEMP.**



Company Confidential

---

---

---

---

---

---

---

---



Company Confidential

---

---

---

---

---

---

---

---